



LG

Life's Good

ไทย
ENGLISH

คู่มือการใช้
User Guide

LG-E975


โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาด ลักลอบนำเข้าสินคารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกัน สินค้าอย่างเป็นทางการเพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์ แท้จากทาง LG, หนึ่งในขอความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้ สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรี เพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณ ได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG" โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่าจะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

คู่มือการใช้

- ภาพหน้าจอและภาพประกอบอาจแตกต่างจากที่คุณพบในโทรศัพท์จริง
- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณขึ้นอยู่กับโทรศัพท์ ซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ ข้อมูลทั้งหมดในเอกสารนี้เปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า
- โทรศัพท์รุ่นนี้ไม่เหมาะสำหรับผู้พิการทางสายตาเนื่องจากมีแป้นพิมพ์บนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2013 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ และ Play Store™ เป็นเครื่องหมายการค้าของ Google, Inc.

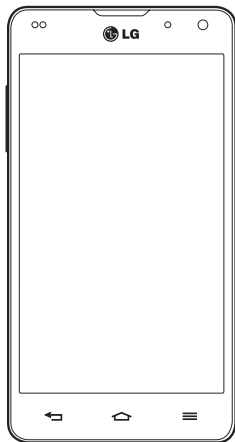

สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ	5
ข้อความประกาศสำคัญ	13
เริ่มทำความรู้จักกับโทรศัพท์ของคุณ ...	19
ภาพรวมโทรศัพท์	19
การใส่การ์ด Micro-USIM	21
การชาร์จโทรศัพท์	22
การล็อคและปลดล็อคหน้าจอ	22
หน้าจอหลักของคุณ	23
เคล็ดลับสำหรับหน้าจอสัมผัส	23
หน้าจอหลัก	24
หน้าจอหลักย่อย	25
การปรับแต่งหน้าจอหลัก	25
การกลับไปที่แอปพลิเคชันที่เพิ่งใช้ล่าสุด	26
การแจ้งเตือน	26
การเปิดพานการแจ้งเตือน	27
ไอคอนสัญลักษณ์บนแถบสถานะ ...	28
แป้นพิมพ์บนหน้าจอ	30
การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง ...	30
การตั้งค่าบัญชี Google	31
การเชื่อมต่อกับเครือข่ายและอุปกรณ์ ...	32
Wi-Fi	32
การเชื่อมต่อกับเครือข่าย Wi-Fi	32
การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi	32
Bluetooth	33
การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์	34
Wi-Fi Direct	36
การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิล USB	36
การโทร	38
การโทรออก	38
การโทรออกโดยใช้รายชื่อ	38
การรับสายและการปฏิเสธสายเรียกเข้า	38
การปรับระดับเสียงสนทนา	39
การใช้สายที่ส่ง	39
การดูบันทึกการโทร	39
ตั้งค่าการโทร	40
รายชื่อ	41
การค้นหารายชื่อ	41
การเพิ่มรายชื่อใหม่	41
รายชื่อที่ใช้บ่อย	41
การสร้างกลุ่ม	42
ข้อความ	43
การส่งข้อความ	43
กล่องเรด	44
การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย	44
อีเมล	45
การจัดการแอคเคาท์อีเมล	45
การทำงานกับโฟลเดอร์แอคเคาท์ ...	45
การเขียนและส่งอีเมล	46

กล้องถ่ายรูป.....	47
ทำความเข้าใจกับช่องมองภาพ.....	47
การใช้การตั้งค่าขั้นสูง	48
การถ่ายภาพตวน	49
เมื่อคุณถ่ายภาพแล้ว	50
จากแกลเลอรีของคุณ.....	51
กล้องวิดีโอ	52
ทำความเข้าใจกับช่องมองภาพ.....	52
การใช้การตั้งค่าขั้นสูง	53
การบันทึกวิดีโออย่างรวดเร็ว.....	54
หลังการบันทึกวิดีโอ	54
การดูวิดีโอที่บันทึกไว้	55
การปรับระดับเสียงขณะดูวิดีโอ	55
ฟังก์ชันพิเศษของ LG	56
ฟังก์ชัน QuickMemo	56
การใช้ตัวเลือก QuickMemo	57
การดู QuickMemo ที่บันทึกไว้	57
ฟังก์ชันโน้ตบุ๊ค.....	58
การจดบันทึก	58
ทำความเข้าใจกับโน้ตบุ๊ค	58
ชั้นวางหนังสือ	58
เพจ-พาแนลคุณสมบัติ	59
การดูโน้ตบุ๊คที่บันทึกไว้.....	59
QuickTranslator.....	60
ฟังก์ชันการประชุม Live	61
ฟังก์ชัน QSlide.....	62
ฟังก์ชันจอคู่	63
โหมดกระจาย	63
จอคู่.....	63
LG SmartWorld.....	64

วิธีการเข้าสู่ LG SmartWorld จาก โทรศัพท์ของคุณ	64
On-Screen Phone	65
ไอคอน On-Screen Phone.....	65
คุณสมบัติ On-Screen Phone	66
วิธีติดตั้ง On-Screen Phone ใน คอมพิวเตอร์	66
มัลติมีเดีย.....	67
คลังภาพ.....	67
การดูรูปภาพ	67
การเล่นวิดีโอ	68
การแก้ไขภาพถ่าย/วิดีโอ	68
การลบรูปภาพ	68
การตั้งค่าเป็นภาพพื้นหลัง	68
วิดีโอ.....	68
การเล่นวิดีโอ	69
แก้ไขวิดีโอ.....	70
Video Wiz	71
เพลง.....	72
การเล่นเพลง	73
เพิ่มไฟล์เพลงในโทรศัพท์ของคุณ	74
ถ่ายโอนเพลงโดยใช้ซิงค์มีเดีย (MTP).....	75
ยูทิลิตี้.....	76
การตั้งเวลาการปลุก	76
การใช้เครื่องคิดเลข	76
การเพิ่มเหตุการณ์ลงในปฏิทิน	76
บันทึกเสียง	77
การบันทึกเสียงหรือเสียงพูด	77
การส่งรายการบันทึกเสียง	77

สารบัญ

จัดการแอปฯ	78	ซอฟต์แวร์คอมพิวเตอร์	
การทำงาน	78	(LG PC Suite)	94
Polaris Office 4	78	อัปเดตซอฟต์แวร์โทรศัพท์.....	97
Backup	79	อัปเดตซอฟต์แวร์โทรศัพท์	97
เกี่ยวกับการสำรองข้อมูลและเรียกคืน		เกี่ยวกับคู่มือผู้ใช้	99
ข้อมูลของสมาร์ตโฟน	79	เกี่ยวกับคู่มือผู้ใช้	99
สำรองข้อมูล	80	เครื่องหมายการค้า.....	99
การตั้งเวลาการสำรอง	80	DivX HD	100
การจัดการและการเรียกคืนไฟล์.....	80	Dolby Mobile	100
Google+	81	อุปกรณ์เสริม	101
ค้นหาด้วยเสียง.....	81	การแก้ปัญหา.....	102
ดาวน์โหลด	81	คำถามที่พบบ่อย	105
เว็บไซต์	82		
อินเทอร์เน็ต	82		
การใช้แถบเครื่องมือเว็บ	82		
การดูเว็บเพจ.....	82		
การเปิดเพจ	83		
การค้นหาเว็บด้วยเสียง	83		
บุคมาร์ก.....	83		
ประวัติ	83		
การใช้เบราว์เซอร์ป๊อปอัป	83		
Chrome.....	84		
การดูเว็บเพจ.....	84		
การเปิดเพจ	84		
การซิงค์กับอุปกรณ์อื่น	84		
ตั้งค่า.....	85		
ตั้งค่าการเชื่อมต่อ.....	85		
อุปกรณ์.....	88		
ส่วนตัว	91		
ระบบ.....	93		

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์มือถือรุ่น LG-E975 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุในหน่วยวัตต์ที่เรียกว่า Specific Absorption Rate (SAR) การทดสอบ SAR ได้กระทำการด้วยการใช้วิธีการที่ไดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ขอจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อของร่างกายที่หนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบ ขณะถือแนบกับหูคือ 0.426 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.398 วัตต์/กก. (10 กรัม)
- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปยึดเข็มขัดหรือที่ใส่โทรศัพท์ เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านี้ไม่ควรเป็นโลหะและ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์



คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- การซ่อมแซมภายในได้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมิประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น ทีวี วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสิ้นสعهือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้

- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซมแก้วที่แตก มีรอยแตก หรือร้าว ความเสียหายของหน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาต หรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลาานโดยไม่มีการระบายอากาศหรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการใช้การ
- หากโทรศัพท์ของคุณเปียกน้ำ ให้ถอดปลั๊กทันทีเพื่อให้เครื่องแห้งสนิท ห้ามทำให้อุปกรณ์แห้งเร็วขึ้นโดยใช้แหล่งความร้อนภายนอก เช่น เตาอบ เตาไมโครเวฟ หรือเครื่องเป่าผม
- ของเหลวในโทรศัพท์ที่เปียกน้ำจะเปลี่ยนสีของฉลากผลิตภัณฑ์ในโทรศัพท์ ความเสียหายของอุปกรณ์ที่เป็นผลมาจากการสัมผัสกับของเหลวจะไม่ได้ครอบคลุมภายใต้การรับประกัน

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์มือถือทุกเครื่องอาจได้รับผลจากคลื่นรบกวนได้ ทำให้มีผลต่อการทำงาน

- ห้ามใช้โทรศัพท์มือถือใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์มือถือบางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น ที่วี วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย
- ใช้โทรศัพท์ของคุณในช่วงอุณหภูมิ 0°C และ 40°C หากเป็นไปได้ การปล่อยให้โทรศัพท์อยู่ในอุณหภูมิเย็นจัดหรือร้อนจัดอาจทำให้เกิดความเสียหาย ทำงานผิดพลาดหรือระเบิดได้

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์มือถือในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้

- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน



เพื่อป้องกันการทำลายความสามารถในการได้ยินที่อาจเกิดขึ้นได้ ห้ามฟังเสียงที่ดังมากเป็นเวลานาน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟัง และชุดหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อกำหนดอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถาดหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์มือถือของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็ก ซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งก่อนที่จะต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรโตรี่ไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการไหลพลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ ตะปู สัมผัสกับแบตเตอรี่ ซึ่งอาจก่อให้เกิดไฟไหม้ได้
- เพื่อความปลอดภัยของคุณ ห้ามถอดแบตเตอรี่ ที่อยู่ในผลิตภัณฑ์

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- อย่าเปลี่ยนแบตเตอรี่ด้วยตัวเอง แบตเตอรี่ อาจได้รับความเสียหาย ซึ่งอาจทำให้เกิด ความร้อน หรือการบาดเจ็บขึ้น ต้องทำการ เปลี่ยนแบตเตอรี่โดยผู้ให้บริการที่ได้รับอนุญาต เท่านั้น ควรนำแบตเตอรี่ไปผ่านกระบวนการรีไซเคิล หรือทิ้งโดยแยกกับขยะในครัวเรือน

คำประกาศรับรอง

ดังนั้น **LG Electronics** ขอประกาศว่าผลิตภัณฑ์ **LG-E975** เป็นไปตามข้อกำหนดที่จำเป็น และข้อกำหนดที่เกี่ยวข้องอื่นๆ ของ Directive **1999/5/EC** คุณสามารถดูสำเนาของคำประกาศรับรองได้ที่ <http://www.lg.com/global/declaration>

ข้อกำหนดและความปลอดภัย

ไปที่ "การตั้งค่าระบบ > เกี่ยวกับโทรศัพท์ > กฎเกณฑ์และความปลอดภัย" เพื่อดูข้อมูลข้อกำหนดและความปลอดภัย

ขอความประกาศสำคัญ


โปรดอ่านข้อความนี้ก่อนที่คุณจะเริ่มใช้งานโทรศัพท์!

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การถอนการติดตั้งแอปพลิเคชัน:

- 1 แตะ  > แتب **แอปฯ** > **ตั้งค่า** > **แอปฯ** จากอุปกรณ์
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
- 3 แตะ **ถอนการติดตั้ง**

2. การยืดอายุแบตเตอรี่


ยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่ของโทรศัพท์:

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, Bluetooth หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- แอปพลิเคชันที่คุณดาวน์โหลดบางแอปพลิเคชันอาจลดกำลังไฟแบตเตอรี่


ขอความประกาศสำคัญ

การตรวจสอบระดับกำลังไฟแบตเตอรี่:

-  > แท็บ แอปฯ > ตั้งค่า > เกี่ยวกับโทรศัพท์ จากระบบ > แบตเตอรี่

สถานะแบตเตอรี่ (กำลังชาร์จหรือกำลังคายประจุ) และระดับแบตเตอรี่ (เปอร์เซ็นต์ที่ชาร์จ) จะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและควบคุมการใช้กำลังไฟแบตเตอรี่:

-  > แท็บ แอปฯ > ตั้งค่า > เกี่ยวกับโทรศัพท์ จากระบบ > แบตเตอรี่ > การใช้แบตเตอรี่

เวลาในการใช้แบตเตอรี่จะปรากฏขึ้นบนหน้าจอ โดยแสดงระยะเวลานับจากที่คุณเชื่อมต่อโทรศัพท์กับแหล่งจ่ายไฟครั้งสุดท้าย หรือหากเชื่อมต่ออยู่ในขณะนี้ จะแสดงระยะเวลานับจากที่โทรศัพท์ใช้พลังงานจากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้กำลังไฟแบตเตอรี่ โดยเรียงลำดับตามปริมาณที่ใช้จากมากไปน้อย

3. ก่อนการติดตั้งแอปพลิเคชันและ OS โอเพ่นซอร์ส



คำเตือน


หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้ นอกจากนี้ โทรศัพท์ของคุณจะไม่ได้ได้รับความคุ้มครองตามการรับประกัน



คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Play Store™ เท่านั้น หากมีการติดตั้งแอปพลิเคชันไม่ถูกต้องในโทรศัพท์ โทรศัพท์อาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรงคุณต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น และข้อมูลและการตั้งค่าที่เกี่ยวข้องทั้งหมดออกจากโทรศัพท์

4. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ของคุณ และ  > แท็บ แอปฯ > ตั้งค่า > ล็อคหน้าจอ จากอุปกรณ์ > เลือกแบบล็อคหน้าจอ > รูปแบบ ซึ่งจะเปิดหน้าจอที่แนะนำคุณสำหรับวิธีการวาดแบบปลดล็อคหน้าจอ คุณจะต้องสร้างแป้นคีย์ PIN เป็นมาตรการความปลอดภัย ในกรณีที่คุณลืมแบบปลดล็อค

ข้อควรระวัง: สร้างบัญชี Google ก่อนทำการตั้งค่าแบบปลดล็อค และจำแป้นคีย์ PIN ที่คุณได้สร้างไว้เมื่อสร้างล็อคแบบ



คำเตือน

ข้อควรระวังเมื่อใช้ล็อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสดังกล่าวเพียง 5 ครั้ง

ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืม รูปแบบ, PIN หรือ รหัสผ่าน การปลดล็อคของคุณ:

< หากคุณลืมแบบของคุณ >

หากคุณล็อกอินบัญชี Google ในโทรศัพท์แต่ป้อนแบบไม่ถูกต้อง 5 ครั้ง ให้กดปุ่ม ลืมแบบ? ที่ด้านล่างของหน้าจอ จากนั้น คุณจะต้องล็อกอินบัญชี Google ของคุณ หรือคุณต้องป้อนแป้นคีย์ PIN ที่คุณได้ป้อนไว้เมื่อสร้างล็อคแบบ

หากคุณไม่ได้สร้างบัญชี Google บนโทรศัพท์ หรือคุณลืมแป้นคีย์ PIN คุณต้องทำการ Hard Reset

< หากคุณลืม PIN หรือรหัสผ่านของคุณ >

หากคุณลืม PIN หรือรหัสผ่านของคุณ คุณจะต้องทำ Hard Reset

ข้อควรระวัง: หากคุณทำ Hard Reset แอปพลิเคชันผู้ใช้และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ

ขอความประกาศสำคัญ

หมายเหตุ: หากคุณยังไม่ได้ล็อกอินบัญชี Google ของคุณและลืมแบบปลดล็อก คุณจะต้องป้อนแป้นคีย์ PIN ของคุณ

5. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณไม่สามารถแก้ไขสู่สภาพเดิมได้ ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่มต้นของโทรศัพท์

- 1 ปิดเครื่อง
- 2 กด **ปุ่มเปิด/ปิด/ล็อก + ปุ่มลดระดับเสียง** ของโทรศัพท์ค้างไว้
- 3 ปล่อย **ปุ่มเปิด/ปิด/ล็อก** เมื่อเห็นโลโก้ LG แสดงขึ้น จากนั้นกด **ปุ่มเปิด/ปิด/ล็อก** ค้างไว้อีกครั้งทันที
- 4 ปล่อยปุ่มทั้งหมดเมื่อหน้าจอ Factory Data Reset ปรากฏขึ้น
- 5 กด **ปุ่มปรับระดับเสียง** เพื่อเลื่อนไปยังตัวเลือกที่ต้องการ แล้วกด **ปุ่มเปิด/ปิด/ล็อก** เพื่อยืนยัน





คำเตือน

หากคุณดำเนินการ Hard Reset แอปพลิเคชันของผู้ใช้, ข้อมูลผู้ใช้ และใบอนุญาต DRM ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset


รีเซ็ตข้อมูลจากโรงงาน - ลบข้อมูลทั้งหมดในโทรศัพท์ ยกเว้นสิ่งต่อไปนี้ ในกรณีที่เกิดความล้มเหลวหรือข้อผิดพลาดกับอุปกรณ์ อุปกรณ์ของคุณอาจสร้างบันทึกข้อผิดพลาดเกี่ยวกับสถานะของอุปกรณ์ ณ เวลาที่เกิดข้อผิดพลาดขึ้น ข้อมูลในบันทึกข้อผิดพลาดอาจรวมถึงข้อมูลเกี่ยวกับชื่อแอปพลิเคชันและการทำงาน, ตำแหน่งและหมายเลขโทรศัพท์มือถือ, สถานะ GPS, การใช้หน่วยความจำและข้อมูลสถานะอุปกรณ์อื่นๆ ที่ไม่ใช่ข้อมูลส่วนตัว ข้อมูลนี้จะถูกจัดเก็บไว้บนโทรศัพท์ของคุณ และสามารถเข้าถึงโดย LG เมื่อมีการส่งโทรศัพท์คืนสู่ LG เพื่อการซ่อมบำรุง ข้อมูลบันทึกข้อผิดพลาดจะถูกใช้โดย LG เพื่อการวินิจฉัย, ซ่อมแซม, และปรับปรุงสินค้าและบริการของ LG เท่านั้น

6. การเปิดและการสลับแอปพลิเคชัน

มีลิตทาสกิงเป็นเรื่องง่ายใน Android คุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกัน โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช้ทรัพยากรโดยไม่จำเป็น

- 1 กด ปุ่มหน้าหลัก  ค้างไว้ รายการแอปพลิเคชันที่ใช้ล่าสุดจะปรากฏขึ้น
 - 2 แตะแอปพลิเคชันที่คุณต้องการใช้งาน ซึ่งจะไม่ใช่การหยุดการรันของแอปพลิเคชันก่อนหน้าในแบ็คกราวด์ของโทรศัพท์ อย่าลืมแตะ ปุ่มย้อนกลับ  เพื่อออกจากแอปพลิเคชันหลังการใช้งาน
- ในการหยุดการทำงานของแอปพลิเคชัน ให้แตะ ตัวจัดการงาน จากรายการแอปพลิเคชันที่ใช้ล่าสุด จากนั้นแตะ หยุด หรือ หยุดทั้งหมด
 - ในการลบแอปพลิเคชันจากรายการแอปพลิเคชันที่ใช้ล่าสุด ให้ลากตัวอย่างแอปพลิเคชันไปทางซ้ายหรือขวา หากต้องการลบแอปพลิเคชันทั้งหมด ให้แตะ ลบทั้งหมด

7. การถ่ายโอนเพลง ภาพถ่าย และวิดีโอโดยใช้ซิงค์มีเดีย (MTP)

- 1 แตะ  > แتب์ แอปฯ > ตั้งค่า > ที่เก็บข้อมูล เพื่อตรวจสอบสื่อบันทึกข้อมูล
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 เลือกวิธีการเชื่อมต่อ USB จะปรากฏขึ้นบนหน้าจอโทรศัพท์ของคุณ เลือกตัวเลือก ซิงค์มีเดีย (MTP)
- 4 เปิดโฟลเดอร์หน่วยความจำบนคอมพิวเตอร์ คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณ และโอนไฟล์จากคอมพิวเตอร์ไปยังโฟลเดอร์หน่วยความจำอุปกรณ์ หรือสลับกัน

ข้อความประกาศสำคัญ

8. ถี้อโทรศัพท์ตั้งขึ้น


ถี้อโทรศัพท์มือถือถี้อแนวตั้งเหมือนกับโทรศัพท์ทั่วไป โทรศัพท์ของคุณมีเสาอากาศภายใน ะมัดระวังอย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่บริเวณด้านหลังเครื่อง เนื่องจากอาจส่งผลต่อประสิทธิภาพการทำงาน เมื่อทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล ให้หลีกเลี่ยงการถี้อบริเวณส่วนล่างของโทรศัพท์ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ การทำดังกล่าวส่งผลกับคุณภาพการโทร

9. เมื่อน้ำจอค้าง

หากน้ำจอค้างหรือโทรศัพท์ไม่ตอบสนองเมื่อคุณพยายามใช้งาน: กดปุ่ม **เปิด/ปิด/ลือค** ค้างไว้เป็นเวลา 10 วินาทีเพื่อปิดโทรศัพท์ของคุณ หากยังไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ภาพรวมโทรศัพท์

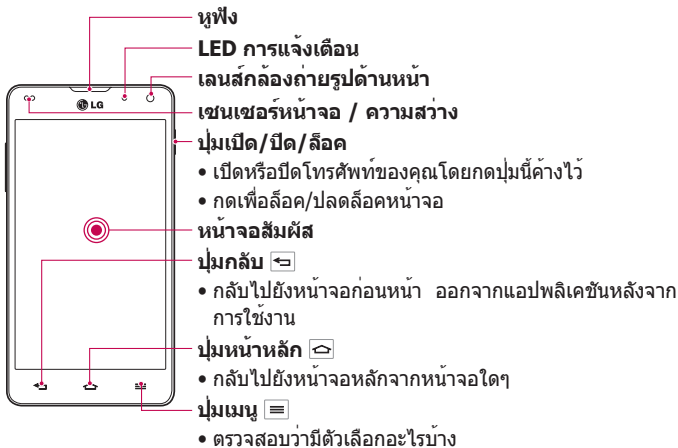

หมายเหตุ: เซนเซอร์หน้าจอ


เมื่อรับสายหรือโทรออก เซนเซอร์หน้าจอจะปิดไฟหน้าจอโดยอัตโนมัติ และล็อคหน้าจอสัมผัสโดยการรับรู้เมื่อโทรศัพท์ที่อยู่ใกล้หู วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้คุณเปิดใช้หน้าจอสัมผัสโดยไม่ตั้งใจขณะโทรศัพท์



คำเตือน

การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ อย่าปิดเซนเซอร์หน้าจอ LCD ด้วยฟิล์มป้องกัน เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



ปุ่มปรับระดับเสียง


- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแทปเล็ต: ควบคุมระดับเสียงต่อเนื่อง

เคล็ดลับ! ฟังก์ชัน QuickMemo

กดปุ่มระดับเสียงขึ้นและระดับเสียงลงค้างไว้หนึ่งวินาทีเพื่อใช้ฟังก์ชัน QuickMemo

ปุ่มเปิด/ปิด/ล็อก

ถาดซิมการ์ด

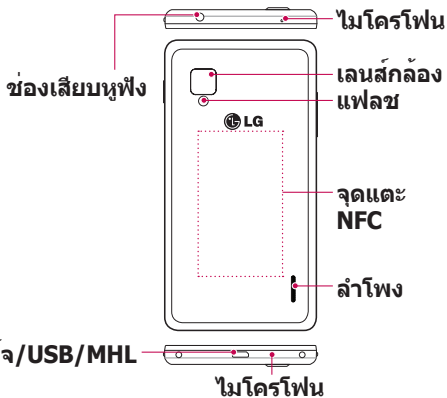

คำเตือน

- ส่วนนี้จะปิดช่องใส่แบตเตอรี่ โปรดอย่าเปิดฝาคอครอบด้านหลัง
- ระวังอย่าให้จุดแตะ NFC บนโทรศัพท์ซึ่งเป็นส่วนหนึ่งของเสาอากาศ NFC เสียหาย


การใส่การ์ด Micro-USIM

ก่อนที่คุณจะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณอาจเลือกใส่การ์ด Micro-USIM

ปุ่มถอดเป็นช่องกลมขนาดเล็กอยู่เหนือฝาถาด การติดตั้งการ์ด Micro-USIM ใหม่:

- 1 ใส่เครื่องมือถอด Micro-USIM ที่มาพร้อมกับโทรศัพท์ (หรือเข็มหมุดเล็กๆ) ในช่องปุ่มถอด และค่อยๆ ดันอย่างต่อเนื่องจนถาดหลุดออกมา
- 2 ถอดถาดออกและวางการ์ด Micro-USIM ไว้ข้างใน โดยให้หน้าสัมผัสหันออกและมุมตัดอยู่ทางขวา การใส่การ์ดในถาดให้พอดีทำได้เพียงแบบเดียว
- 3 ใส่ถาดกลับเข้าไปในช่อง และค่อยๆ ดันกลับเข้าไปในโทรศัพท์


หมายเหตุ: โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง

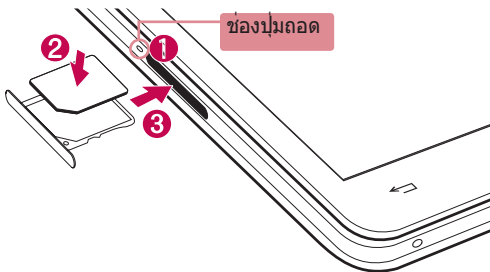

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

การชาร์จโทรศัพท์

ช่องเสียบอุปกรณ์ชาร์จอยู่ทางด้านล่างของโทรศัพท์ เสียบปลายด้านหนึ่งของสายชาร์จเข้ากับโทรศัพท์ และเสียบปลายอีกด้านหนึ่งเข้ากับเต้าเสียบไฟ

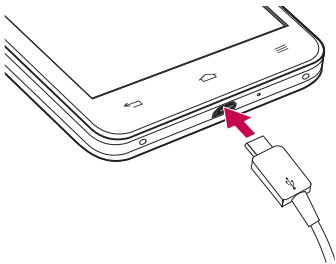

หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่

การล็อคและปลดล็อคหน้าจอ

หากคุณไม่ได้ใช้โทรศัพท์ช่วงหนึ่ง หน้าจอจะปิดและล็อคโดยอัตโนมัติ ซึ่งจะช่วยป้องกันการแตะโดยไม่ตั้งใจและประหยัดพลังงานแบตเตอรี่ ในขณะที่คุณไม่ได้ใช้งานโทรศัพท์ของคุณ ให้กดปุ่ม **เปิด/ปิด/ล็อค** เพื่อล็อคโทรศัพท์ของคุณ

หากมีโปรแกรมกำลังทำงานอยู่เมื่อคุณล็อคหน้าจอของคุณ โปรแกรมเหล่านั้นอาจจะยังคงทำงานอยู่ในโหมดล็อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเช่าใช้เว็บ และการสื่อสารขอมูล)

ในการทำให้โทรศัพท์ของคุณใช้งานได้ ให้กดปุ่ม **เปิด/ปิด/ล็อค** หน้าจอล็อคจะปรากฏขึ้น และและเลื่อนล็อคหน้าจอไปในทิศทางใดๆ เพื่อปลดล็อคหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

หน้าจอลักษณ์ของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธีนำวิถีโทรศัพท์ของคุณ
แตะหรือสัมผัส – การใช้หนึ่งนิ้วแตะเพื่อเลือกรายการ ลิงค์ ข้อตัก และ
ตัวอักษรบนแป้นพิมพ์บนหน้าจอ

แตะค้าง – แตะรายการบนหน้าจอค้างไว้โดยการแตะแล้วไม่ยกนิ้วขึ้นจนกว่า
จะเกิดการดำเนินการขึ้น ตัวอย่างเช่น หากต้องการเปิดตัวเลือกที่มีอยู่ของ
รายชื่อ ให้แตะที่รายชื่อในรายการรายชื่อค้างไว้จนกว่าเมนูลัดจะเปิดขึ้น

ลาก – แตะรายการค้างไว้ชั่วคราวหนึ่ง จากนั้นเลื่อนนิ้วของคุณบนหน้าจอจนกว่า
จะไปถึงตำแหน่งเป้าหมาย คุณสามารถลากรายการบนหน้าจอลักษณ์ของคุณเพื่อ
จัดตำแหน่งใหม่ได้

ปิดหรือเลื่อน – ในการปิดหรือเลื่อน ให้เลื่อนนิ้วของคุณผ่านพื้นผิวของหน้า
จออย่างรวดเร็ว โดยไม่หยุดพักหลังจากที่แตะครั้งแรก (เพื่อไม่ให้กลายเป็นการ

ลากแทน) ตัวอย่างเช่น คุณสามารถเลื่อนหน้าจอขึ้นหรือลงเพื่อเลื่อน
ดูรายการ หรือเรียกดูหน้าจอลักษณ์ต่างๆ ได้ โดยการบิดจากซ้ายไปขวา
(และตรงกันข้าม)

แตะสองครั้ง – แตะสองครั้งเพื่อซูมบนเว็บเพจหรือแผนที่ เช่น แตะสองครั้ง
อย่างรวดเร็วที่ส่วนหนึ่งของเว็บเพจ เพื่อปรับส่วนนั้นให้พอดีกับความกว้างของ
หน้าจอ คุณสามารถแตะสองครั้งเพื่อซูมเข้าและออกได้ในขณะทำการถ่ายภาพ
(โดยใช้กล้อง) และขณะที่ใช้งานแผนที่

กางหุบนิ้วเพื่อซูม – ใช้นิ้วชี้และนิ้วโป้งของคุณในการเลื่อนเข้าหากัน
หรือเลื่อนออกจากกันเพื่อซูมเข้าหรือออกขณะใช้งานบราวเซอร์หรือ
แผนที่ หรือขณะเรียกดูรูปภาพ

หมุนหน้าจอ – จากหลายๆ แอปพลิเคชันและเมนู การวางแนวของหน้าจอ
จะเปลี่ยนแปลงไปตามการวางแนวจริงของตัวเครื่องอุปกรณ์

หน้าจอหลักของคุณ

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ

หน้าจอหลัก

หน้าจอหลักเป็นจุดเริ่มต้นในการใช้งานแอปพลิเคชันและฟังก์ชันต่างๆ และให้คุณเพิ่มรายการ เช่น ข้อความ หรือ Google Widget ของแอปพลิเคชัน ช่วยให้คุณสามารถใช้ข้อมูลและแอปพลิเคชันต่างๆ ได้ทันที เป็นหน้าจอเริ่มต้นและสามารถแก้ไขได้จากทุกเมนูด้วยการแตะ



หน้าจอหลักย่อ


ระบบปฏิบัติการจะมีหน้าจอหลักหลายหน้าจอเพื่อให้มีพื้นที่ว่างสำหรับเพิ่มไอคอน, Widgets และอื่นๆ

เลื่อนนิ้วไปทางด้านซ้ายหรือด้านขวาของหน้าจอหลัก

การปรับแต่งหน้าจอหลัก

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่มแอปพลิเคชัน, Widgets หรือเปลี่ยนพื้นหลัง

การเพิ่มรายการในหน้าจอหลัก:

- 1 แตะค้างไว้บนส่วนที่ว่างของหน้าจอหลัก หรือแตะ  ที่ด้านบนขวา
- 2 ในเมนูโหมดเพิ่ม ให้เลือกรายการที่คุณต้องการเพิ่ม จากนั้นคุณจะได้เห็นรายการที่เพิ่มบนหน้าจอหลัก
- 3 ลากไปยังตำแหน่งที่คุณต้องการแล้วยกนิ้วขึ้น


เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก จากเมนูแอปฯ ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม

การลบรายการจากหน้าจอหลัก:

- หน้าจอหลัก > แตะที่ไอคอนที่ต้องการลบค้างไว้ > ลากไปยัง 


เคล็ดลับ! การใช้โฟลเดอร์

คุณสามารถรวมหลายไอคอนแอปพลิเคชันไว้ในหนึ่งโฟลเดอร์ได้ วางไอคอนแอปพลิเคชันหนึ่งบนอีกไอคอนหนึ่งในหน้าจอหลัก และไอคอนทั้งสองจะรวมกัน

หมายเหตุ:  ไม่สามารถลบปุ่ม แอปฯ ได้

หน้าจอล็อกของคุณ

ในการปรับแต่งไอคอน แอปฯ บนหน้าจอล็อก

- 1 แตะไอคอนแอปพลิเคชันค้างไว้จนถูกปลดล๊อคจากตำแหน่งปัจจุบัน แล้ววางไว้บนหน้าจอ ไอคอนการแก้ไข  จะปรากฏขึ้นที่มุมขวาบนของแอปพลิเคชัน
- 2 แตะไอคอนแอปพลิเคชันอีกครั้งและเลือกการออกแบบและขนาดไอคอนที่ต้องการ
- 3 แตะ ตกลง เพื่อบันทึกการเปลี่ยนแปลง

การกลับไปที่แอปพลิเคชันที่เพิ่งใช้ล่าสุด

- 1 แตะปุ่ม หน้าหลัก ค้างไว้ หน้าจอจะแสดงป๊อปอัพโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
- 2 แตะไอคอนเพื่อเปิดแอปพลิเคชัน หรือแตะปุ่ม ย้อนกลับ เพื่อกลับไปยังหน้าจอก่อนหน้านี้


การแจ้งเตือน

การแจ้งเตือนจะแจ้งให้คุณทราบว่ามีข้อความ เหตุการณ์ปฏิทิน และการตั้งปลุกใหม่ รวมถึงเหตุการณ์ต่อเนื่อง เช่น ในขณะที่คุณใช้สาย

จากพาเนลการแจ้งเตือน คุณสามารถดูสถานะปัจจุบันของโทรศัพท์ และการแจ้งเตือนที่รอดำเนินการได้

เมื่อการแจ้งเตือนมาถึง ไอคอนจะปรากฏขึ้นที่ด้านบนของหน้าจอ ไอคอนสำหรับการแจ้งเตือนที่รอดำเนินการจะปรากฏขึ้นทางด้านซ้าย และไอคอนระบบที่แสดงสิ่งต่างๆ เช่น Wi-Fi หรือระดับแบตเตอรี่อยู่ทางด้านขวา

หมายเหตุ: ตัวเลือกที่ีอาจแตกต่างกัน โดยขึ้นอยู่กับภูมิภาคหรือผู้ให้บริการ

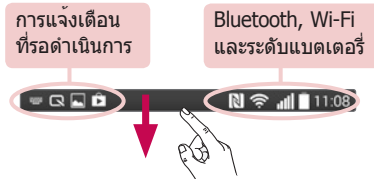

การเปิดพาดูการแจ้งเตือน

ลากนิ้วลงจากแถบสถานะเพื่อเปิดพาดูการแจ้งเตือน

พื้นที่สลับด่วน
 แตะปุ่มสลับด่วนแต่ละปุ่มเพื่อเปิด/ปิด แตะปุ่มค้างไว้เพื่อใช้เมนูตั้งค่าของฟังก์ชันในการดูปุ่มสลับเพิ่มเติม ให้ลากนิ้วไปทางซ้ายหรือขวา และ ☰ เพื่อลบบ เพิ่ม หรือจัดเรียงปุ่มสลับ

QSlide แอปพลิเคชัน
 แตะแอปพลิเคชัน QSlide เพื่อเปิดหน้าต่างเล็กในหน้าจอของคุณ และ ☰ เพื่อลบบ เพิ่ม หรือจัดเรียงแอปฯ QSlide

แตะเพื่อลบบการแจ้งเตือนทั้งหมด

การแจ้งเตือน
 แสดงการแจ้งเตือนปัจจุบัน พร้อมคำอธิบายย่อ และที่การแจ้งเพื่อดู

ในการปิดพาดูการแจ้งเตือน ให้แตะแล้วลากแท็บไปที่ด้านบนของหน้าจอ

หน้าจอหลักของคุณ

ไอคอนสัญลักษณ์บนแถบสถานะ

ไอคอนสัญลักษณ์จะปรากฏบนแถบสถานะที่ด้านบนของหน้าจอเพื่อรายงานสายที่ไม่ได้รับ ข้อความใหม่ เหตุการณ์ในปฏิทิน สถานะอุปกรณ์ และอื่นๆ



ไอคอนที่แสดงที่ด้านบนของหน้าจอจะให้ข้อมูลเกี่ยวกับสถานะของอุปกรณ์ ไอคอนที่แสดงในตารางด้านล่างคือบางส่วนของไอคอนที่พบบ่อย

ไอคอน	รายละเอียด
	ไม่มีการ์ด Micro-USIM
	ไม่มีสัญญาณ
	โหมดเครื่องบิน
	เชื่อมต่อกับเครือข่าย Wi-Fi
	ชุดหูฟังแบบใช้สาย
	กำลังใช้สาย
	พักสาย
	สายไม่ได้รับ
	เปิด Bluetooth
	ค่าเตือนระบบ

ไอคอน	รายละเอียด
	โหมดสั่น
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล
	กำลังรับสัญญาณ GPS
	กำลังรับข้อมูลตำแหน่งจาก GPS
	กำลังซิงค์ข้อมูล
	Gmail ใหม่
	ข้อความ Google Talk ใหม่

	ตั้งปลุก		ข้อความใหม่
	ข้อความเสียงใหม่		กำลังเล่นเพลง
	ปิดเสียงเรียกเข้า		โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสายเคเบิล USB หรือใช้งานการปล่อยสัญญาณผ่าน USB
	เปิด NFC		กำลังใช้งาน Portable Wi-Fi hotspot
	เปิด P2P		กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ Portable hotspot


หมายเหตุ: ตำแหน่งไอคอนในแถบสถานะอาจแตกต่างกันไปโดยขึ้นอยู่กับฟังก์ชันหรือบริการ

หน้าจอหลักของคุณ

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏโดยอัตโนมัติบนหน้าจอเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะเพื่อลดข้อความที่คุณต้องการป้อนข้อความ

การใช้นุ่มกด และ การป้อนข้อความ

 แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ และสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

  แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์

 แตะเพื่อเว้นวรรค

 แตะเพื่อสร้างบรรทัดใหม่

 แตะเพื่อลบตัวอักษรก่อนหน้า


การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง

เมื่อคุณเลือกภาษาฝรั่งเศสหรือสเปนเป็นภาษาที่ใช้ป้อนข้อความ คุณสามารถป้อนตัวอักษรพิเศษของภาษาฝรั่งเศสหรือสเปนได้ (เช่น "á") ตัวอย่างเช่น ในการป้อน "á" ให้แตะปุ่ม "a" ค้างไว้จนกว่าปุ่มชุ่มชื้นจะขยายใหญ่ขึ้นและแสดงตัวอักษรจากภาษาอื่นๆ แล้วเลือกตัวอักษรพิเศษที่คุณต้องการ

การตั้งค่าบัญชี Google

เมื่อคุณเปิดโทรศัพท์เป็นครั้งแรก คุณจะมีโอกาสเปิดการใช้เครือข่าย เพื่อลงชื่อเข้าใช้บัญชี Google และเลือกวิธีการใช้บริการ Google ที่คุณต้องการ

การตั้งค่าบัญชี Google ของคุณ:

- ลงชื่อเข้าใช้บัญชี Google จากหน้าจอตั้งค่าที่แสดง หรือ
- แตะ  > แท็บ แอปฯ > เลือกแอปพลิเคชัน Google เช่น **Gmail** > เลือกใหม่ เพื่อสร้างแอคเคาท์ใหม่

หากคุณมีบัญชี Google ให้แตะ **ที่มีอยู่** ป้อนอีเมลแอดเดรสและรหัสผ่านของคุณ จากนั้นแตะ 

เมื่อคุณตั้งค่าบัญชี Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับบัญชี Google บนเว็บโดยอัตโนมัติ

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ (ซึ่งจะขึ้นอยู่กับวิธีการซิงโครไนซ์ของคุณ)

หลังจากขั้นตอน คุณจะสามารถใช้ Gmail™ และใช้ประโยชน์จากบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

Wi-Fi


ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP) สนุกสนานกับอินเทอร์เน็ตไร้สายโดยใช้ Wi-Fi ที่ไม่มีค่าบริการเพิ่มเติม

การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณจำเป็นต้องเข้าใช้จุดเชื่อมต่อไร้สาย หรือ 'ฮอตสปอต' จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อทำการเชื่อมต่อ
ปิด Wi-Fi เมื่อคุณไม่ได้ใช้ เพื่อยืดอายุแบตเตอรี่

หมายเหตุ: หากคุณอยู่นอกพื้นที่ Wi-Fi หรือตั้งค่า Wi-Fi เป็น **ปิด** อาจมีการคิดค่าใช้จ่ายเพิ่มเติมโดยผู้ให้บริการเครือข่ายโทรศัพท์มือถือสำหรับการใช้งานข้อมูลโทรศัพท์มือถือ

การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi

- 1 แตะ  > แท็บ **แอปฯ** > **ตั้งค่า** > **Wi-Fi** จากแท็บตั้งค่าการเชื่อมต่อ
- 2 ตั้งค่า **Wi-Fi** เป็น **เปิด** เพื่อเปิดและเริ่มต้นสแกนหาเครือข่าย Wi-Fi ที่มีอยู่
- 3 แตะเมนู Wi-Fi อีกครั้งเพื่อดูรายการของเครือข่าย Wi-Fi ที่ใช้งานและที่อยู่ในระยะ
 - เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ
- 4 แตะที่เครือข่ายเพื่อเชื่อมต่อ
 - หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)
- 5 แถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi

Bluetooth


คุณสามารถใช้ Bluetooth เพื่อส่งข้อมูลได้โดยการเรียกใช้แอปพลิเคชันที่เกี่ยวข้องของ ไม่ใช่จากเมนู Bluetooth เหมือนในโทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

หมายเหตุ:

- LG ไม่มีส่วนรับผิดชอบใดๆ สำหรับการสูญหาย การสกัดกัน หรือการนำข้อมูลที่ส่งหรือรับผ่านคุณสมบัตินี้ไปใช้ในทางที่ผิด
- คุณต้องแน่ใจเสมอว่าไดชาร์จและรับข้อมูลจากอุปกรณ์ที่เชื่อถือได้และปลอดภัยในกรณีที่มีสิ่งกีดขวางระหว่างอุปกรณ์ ระยะการทำงานอาจลดลง
- อุปกรณ์บางรุ่น โดยเฉพาะรุ่นที่ยังไม่ผ่านการทดสอบหรืออนุญาตโดย Bluetooth SIG อาจไม่สามารถใช้งานร่วมกันกับอุปกรณ์ของคุณได้

การเปิด Bluetooth และการจับคู่โทรศัพท์ของคุณกับอุปกรณ์ Bluetooth

คุณต้องจับคู่อุปกรณ์ของคุณกับอุปกรณ์อื่นก่อนที่จะเชื่อมต่อกับอุปกรณ์นั้น

- 1 แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **ตั้งค่า Bluetooth** เป็น **เปิด** จากแท็บตั้งค่าการเชื่อมต่อ
 - 2 แตะเมนู **Bluetooth** อีกครั้ง คุณจะเห็นตัวเลือกสำหรับทำให้โทรศัพท์ของคุณมองเห็นได้ และตัวเลือกสำหรับการค้นหาอุปกรณ์ ในตอนนี้ให้แตะ **ค้นหาอุปกรณ์** เพื่อดูอุปกรณ์ในระยะ Bluetooth
 - 3 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยจากรายการ
- เมื่อจับคู่สำเร็จแล้ว อุปกรณ์ของคุณจะเชื่อมต่อกับอุปกรณ์นั้น

หมายเหตุ: อุปกรณ์บางอย่าง โดยเฉพาะชุดหูฟังหรือชุดติดรถยนต์แฮนด์ฟรี อาจมี Bluetooth PIN ที่กำหนดไว้แล้ว เช่น 0000 หากอุปกรณ์เครื่องอื่นมี PIN คุณจะตองป้อน

การเชื่อมต่อกับเครือข่ายและอุปกรณ์


ส่งข้อมูลด้วยคุณสมบัติไร้สาย Bluetooth


- 1 เลือกไฟล์หรือรายการ เช่น รายชื่อ เหตุการณ์ในปฏิทิน หรือไฟล์มีเดียจากแอปพลิเคชันที่เหมาะสมหรือ **ดาวน์โหลด**
- 2 เลือกตัวเลือกการส่งด้วย Bluetooth

หมายเหตุ: วิธีการเลือกตัวเลือกอาจแตกต่างกันตามประเภทข้อมูล

- 3 ค้นหาและจับคู่อุปกรณ์ที่เปิดใช้งาน Bluetooth

รับข้อมูลด้วยคุณสมบัติไร้สาย Bluetooth

- 1 แตะ  > แท็บ **แอปฯ** > **ตั้งค่า** > ตั้ง **Bluetooth** เป็น **เปิด**
- 2 แตะเมนู **Bluetooth** อีกครั้ง และทำเครื่องหมายที่ช่องทำเครื่องหมายที่ด้านบนของหน้าจอเพื่อให้อุปกรณ์อื่นมองเห็นโทรศัพท์ของคุณ

หมายเหตุ: ในการเลือกระยะเวลาที่จะมองเห็นอุปกรณ์ของคุณได้ ให้แตะ  > เวลาที่สามารถมองเห็น

- 3 เลือก **กำหนดค่าอุปกรณ์ให้ตรงกัน** เพื่อยืนยันว่าคุณต้องการรับข้อมูลจากอุปกรณ์


การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์

การปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi Hotspot เป็นคุณสมบัติที่ยอดเยี่ยมในกรณีที่ไม่มีการเชื่อมต่อไร้สายให้ใช้งาน คุณสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับคอมพิวเตอร์เครื่องเดียวผ่านสายเคเบิล USB (การปล่อยสัญญาณผ่าน USB) คุณยังสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับอุปกรณ์มากกว่าหนึ่งเครื่องพร้อมกัน ด้วยการเปลี่ยนโทรศัพท์ของคุณเป็น Portable Wi-Fi Hotspot

ขณะที่โทรศัพท์กำลังแบ่งปันการเชื่อมต่อข้อมูล ไอคอนจะปรากฏขึ้นที่แถบสถานะ และแสดงเป็นการแจ้งเตือนขาออกในแถบการแจ้งเตือน สำหรับข้อมูลล่าสุดเกี่ยวกับการปล่อยสัญญาณและสื่อดาวน์โหลดอื่นที่รวมถึงระบบปฏิบัติการที่รองรับและรายละเอียดอื่น ให้ไปที่

<http://www.android.com/tether>


การเปลี่ยนการตั้งค่า Portable Wi-Fi Hotspot:

- 1 แตะ  > แท็บ แอปฯ > ตั้งค่า > การปล่อยสัญญาณและเครือข่าย > **Wi-Fi hotspot** สลับเป็นเปิดใช้งาน
- 2 ป้อนรหัสผ่านแล้วแตะ **บันทึก**

เคล็ดลับ! หากคอมพิวเตอร์ของคุณใช้งาน Windows 7 หรือระบบปฏิบัติการที่อยู่ในกลุ่ม Linux รุ่นใหม่ๆ (เช่น Ubuntu) โดยปกติแล้วคุณจะไม่จำเป็นต้องเตรียมคอมพิวเตอร์ของคุณสำหรับการปล่อยสัญญาณ แต่ถ้ายกกำลังใช้งาน Windows เวอร์ชันก่อนหน้า หรือระบบปฏิบัติการอื่น คุณอาจจำเป็นต้องเตรียมคอมพิวเตอร์ของคุณเพื่อสร้างการเชื่อมต่อเครือข่ายผ่าน USB สำหรับข้อมูลล่าสุดเกี่ยวกับระบบปฏิบัติการที่สนับสนุนการปล่อยสัญญาณผ่าน USB และวิธีการปรับแต่ง โปรดไปที่ <http://www.android.com/tether>

การเปลี่ยนชื่อหรือรักษาความปลอดภัยของ Portable hotspot

คุณสามารถเปลี่ยนชื่อเครือข่าย Wi-Fi (SSID) ของโทรศัพท์ของคุณ รวมทั้งรักษาความปลอดภัยของเครือข่าย Wi-Fi ได้

- 1 แตะ  > แท็บ แอปฯ > ตั้งค่า > การปล่อยสัญญาณและเครือข่าย > **Wi-Fi hotspot**
- 2 แตะ **ตั้งค่า Wi-Fi hotspot**
 - กลองโต้ตอบ **ตั้งค่า Wi-Fi hotspot** จะเปิดขึ้น
 - คุณสามารถเปลี่ยน **เครือข่าย SSID** (ชื่อ) ที่จะปรากฏให้คอมพิวเตอร์เครื่องอื่นๆ เห็นเมื่อทำการสแกนหาเครือข่าย Wi-Fi
 - นอกจากนี้ยังสามารถแตะเมนู **ระบบป้องกัน** เพื่อกำหนดค่าเครือข่ายด้วยระบบป้องกัน Wi-Fi Protected Access 2 (WPA2) โดยใช้ Pre-Shared Key (PSK)
 - หากคุณแตะที่ตัวเลือกระบบป้องกัน **WPA2 PSK** ฟیلด์รหัสผ่านจะถูกเพิ่มลงในกลองโต้ตอบ **ตั้งค่า Wi-Fi hotspot** ถ้าคุณป้อนรหัสผ่านไว้ คุณจะต้องป้อนรหัสผ่านดังกล่าวเมื่อทำการเชื่อมต่อ hotspot ของโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่น คุณสามารถตั้งค่า **เปิด** ในเมนู **ระบบป้องกัน** เพื่อลบบระบบป้องกันออกจากเครือข่าย Wi-Fi ของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

3 และ บันทึก

ข้อควรระวัง! หากคุณตั้งค่าตัวเลือกระบบป้องกันเป็นเปิด คุณจะไม่สามารถป้องกันการให้บริการออนไลน์โดยไม่ได้รับอนุญาตของบุคคลอื่นและอาจมีค่าใช้จ่ายเพิ่มเติม คุณควรใช้งานตัวเลือกระบบป้องกันเสมอเพื่อหลีกเลี่ยงการใช้โดยไม่ได้รับอนุญาต

Wi-Fi Direct

Wi-Fi Direct สนับสนุนการเชื่อมต่อโดยตรงระหว่างอุปกรณ์ที่เปิดใช้งาน Wi-Fi โดยไม่มีจุดเชื่อมต่อ เนื่องจาก Wi-Fi Direct ใช้พลังงานแบตเตอรี่สูง ขอแนะนำให้คุณสลับปลั๊กโทรศัพท์ของคุณเข้ากับเตาเสียบไฟในขณะที่ใช้คุณสมบัติ Wi-Fi Direct ตรวจสอบเครือข่าย Wi-Fi และ Wi-Fi Directed ของคุณล่วงหน้า และตรวจสอบว่าผู้ใช้เชื่อมต่อกับเครือข่ายเดียวกัน

การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิล USB

เรียนรู้วิธีการเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ด้วยสายเคเบิล USB ในโหมดการเชื่อมต่อ USB ด้วยการเชื่อมต่ออุปกรณ์กับคอมพิวเตอร์ คุณสามารถถ่ายโอนข้อมูลเข้าสู่และออกจากอุปกรณ์ของคุณได้โดยตรง และใช้ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

การถ่ายโอนเพลง รูปภาพ และวิดีโอโดยใช้โหมดที่เก็บข้อมูล USB

- 1 เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ติดตั้งไดรเวอร์แพลตฟอร์ม LG Android บนคอมพิวเตอร์ คุณจะต้องเปลี่ยนการตั้งค่าด้วยตัวเอง เลือก การตั้งค่าระบบ > การเชื่อมต่อ PC > ชนิดการเชื่อมต่อ USB แล้วเลือก ซิงค์มีเดีย (MTP)
- 3 คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์และโอนไฟล์ได้

ซิงโครไนซ์กับ Windows Media Player

ตรวจสอบว่าติดตั้ง Windows Media Player ใน PC ของคุณแล้ว





- 1 ใช้สายเคเบิล USB เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ที่ติดตั้ง Windows Media Player
 - 2 เลือกตัวเลือก **ซิงค์มีเดีย (MTP)** เมื่อเชื่อมต่อแล้ว หน้าต่างป๊อปอัป จะปรากฏขึ้นบนคอมพิวเตอร์
 - 3 เปิด Windows Media Player เพื่อซิงโครไนซ์ไฟล์เพลง
 - 4 แกะไขหรือป้อนชื่อของอุปกรณ์ของคุณในหน้าต่างป๊อปอัป (ถ้าจำเป็น)
 - 5 เลือกและลากไฟล์เพลงที่คุณต้องการไปยังหน้าต่าง Sync List
 - 6 เริ่มต้นการซิงโครไนซ์
- ต้องตรงตามข้อกำหนดต่อไปนี้เพื่อซิงโครไนซ์กับ Windows Media Player


รายการ	ข้อกำหนด
OS	Microsoft Windows XP SP2, Vista หรือสูงกว่า
เวอร์ชัน Window Media Player	Windows Media Player 10 หรือสูงกว่า

- หากเวอร์ชัน Windows Media Player ต่ำกว่า 10 ให้ติดตั้งเวอร์ชัน 10 หรือสูงกว่า

การโทร

การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด ในการลบตัวเลข ให้แตะ 
- 3 แตะ  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะไอคอน **สิ้นสุด** 

เคล็ดลับ! ในการป้อน "+" เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่ 

การโทรออกโดยใช้รายชื่อ

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 เลื่อนดูรายชื่อหรือป้อนอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะ **คนหารายชื่อ**
- 3 ในรายการ ให้แตะรายชื่อสองครั้ง หรือแตะ  ที่คุณต้องการโทรหา

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อมีสายเรียกเข้าในสถานะล็อค ให้ลาก  ไปในทิศทางใดก็ได้เพื่อรับสายเรียกเข้า

ลาก  ไปในทิศทางใดก็ได้เพื่อปฏิเสธสายเรียกเข้า
แตะไอคอน **ปฏิเสธพร้อมส่งข้อความ** ค้างไว้และเลื่อนจากด้านล่าง
หากคุณต้องการส่งข้อความ






เคล็ดลับ! ปฏิเสธพร้อมส่งข้อความ

คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายพร้อมส่งข้อความ ในระหว่างการประชุม

การปรับระดับเสียงสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์

การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ **เมนู** > **เพิ่มการโทร** และหมุนหมายเลข คุณสามารถไปยังรายการหมายเลขที่เพิ่งโทรล่าสุดได้โดยการแตะ  หรือค้นหาขอมูลผู้ติดต่อได้โดยการแตะ  และเลือกรายชื่อที่คุณต้องการโทร
- 2 แตะ  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและพักสายไว้
- 4 แตะหมายเลขที่แสดงเพื่อสลับสาย หรือแตะที่  **รวมการโทร** เพื่อเริ่มต้นการประชุมสาย
- 5 ในการวางสายที่ใช้ ให้แตะ **สิ้นสุด** หรือแตะปุ่ม **หน้าหลัก** และเลื่อนแถบการแจ้งเตือน และเลือกไอคอน **วางสาย** 

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดับบันทึกการโทร

บนหน้าจอหลัก ให้แตะ  และเลือกแท็บ **บันทึกการโทร** 
ดูรายการสายที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด

เคล็ดลับ! แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร

เคล็ดลับ! แตะปุ่ม **เมนู**  แล้วแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 บนหน้าจอหลัก ให้แตะ 
- 2 แตะ 
- 3 แตะ **ตั้งค่าการโทร** และเลือกตัวเลือกที่คุณต้องการปรับ

รายชื่อ




เพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในบัญชี Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

บนหน้าจอหลัก

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะ ค้นหารายชื่อ และป้อนชื่อผู้ติดต่อโดยใช้คีย์บอร์ด


การเพิ่มรายชื่อใหม่

- 1 แตะ  ป้อนหมายเลขของรายชื่อใหม่ แล้วแตะปุ่ม เมนู 
แตะ เพิ่มในรายชื่อ > สร้างรายชื่อใหม่
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะพื้นที่ภาพ
เลือกจาก ถ่ายภาพ หรือ เลือกจากแกลเลอรี
- 3 เลือกประเภทรายชื่อโดยแตะ 
- 4 แตะชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ
- 5 แตะ บันทึก

รายชื่อที่ใช้บ่อย



คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ ไว้ในกลุ่มเพื่อนสนิท

การเพิ่มรายชื่อเป็นเพื่อนสนิท



- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเหลือง

รายชื่อ

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะแท็บ  และเลือกรายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวสีเหลืองทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากรายการโปรดของคุณ

การสร้างกลุ่ม



- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะ **กลุ่ม** และแตะปุ่ม **เมนู**  เลือก **กลุ่มใหม่**
- 3 ป้อนชื่อสำหรับกลุ่มใหม่ คุณสามารถตั้งค่าเสียงเรียกเข้าสำหรับกลุ่มที่สร้างใหม่ได้ด้วย
- 4 แตะ **บันทึก** เพื่อบันทึกกลุ่ม

หมายเหตุ: หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ในรายชื่อ


ข้อความ


โทรศัพท์ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเมนูที่ใช้งานง่ายเพียงเมนูเดียว

การส่งข้อความ


- 1 แตะ  บนหน้าจอหลักและแตะ  เพื่อเปิดข้อความเปล่า
- 2 ป้อนรายชื่อหรือหมายเลขของรายชื่อในฟิลด์ **ไป** ขณะที่คุณป้อนรายชื่อรายชื่อที่ตรงกันจะปรากฏขึ้น คุณสามารถแตะผู้รับที่แนะนำได้ คุณสามารถเพิ่มได้มากกว่าหนึ่งรายชื่อ


หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน

- 3 แตะฟิลด์ **ป้อนข้อความ** และเริ่มต้นเขียนข้อความ
- 4 แตะ  เพื่อเปิดเมนูตัวเลือก เลือกรายการ **ข้อความด่วน, แทรกสโมลล์, ตั้งเวลาการส่ง, เพิ่มชื่อเรื่อง และ ยกเลิก**

เคล็ดลับ! คุณสามารถแตะไอคอน  เพื่อแนบไฟล์ที่ต้องการแนบกับข้อความของคุณ

- 5 แตะที่ **ส่ง** เพื่อส่งข้อความ
- 6 การตอบกลับจะปรากฏบนหน้าจอ ขณะที่คุณดูและส่งข้อความเพิ่มเติม เรดข้อความจะถูกสร้างขึ้น

 **คำเตือน:** การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับภาษาและวิธีการเข้ารหัส SMS

 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

กล่องเรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับบุคคลอื่นสามารถแสดงเรียงตามลำดับเวลาเพื่อให้คุณสามารถดูภาพรวมของการสนทนาได้อย่างสะดวก

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ของคุณจะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าตามความต้องการของคุณ

- แตะไอคอน **ข้อความ** บนหน้าจอหลักของคุณ แตะ  จากนั้นแตะ **ตั้งค่า**

อีเมล

คุณสามารถใช้แอปพลิเคชันอีเมลเพื่ออ่านอีเมลจากบริการต่างๆ เช่น Gmail ได้ แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange

ผู้ให้บริการหรือผู้ดูแลระบบของคุณสามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

การจัดการแอคเคาท์อีเมล

เมื่อเปิดแอปพลิเคชัน **อีเมล** เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้นเพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

หลังจากการตั้งค่าครั้งแรก อีเมลจะแสดงเนื้อหาของกล่องขาเข้าของคุณ ถ้าคุณเพิ่มแอคเคาท์มากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับไปมาระหว่างแอคเคาท์เหล่านั้นได้




การเพิ่มแอคเคาท์อีเมลอื่น:

- แตะ  > แท็บ แอปฯ > **อีเมล** >แตะ  > **ตั้งค่า** > **เพิ่มแอคเคาท์**

การเปลี่ยนการตั้งค่าของแอคเคาท์อีเมล:

- แตะ  > แท็บ แอปฯ > **อีเมล** >แตะ  > **ตั้งค่า** > **การตั้งค่าทั่วไป**

การลบแอคเคาท์อีเมล:

- แตะ  > แท็บ แอปฯ > **อีเมล** >แตะ  > **ตั้งค่า** >แตะ  > **ลบแอคเคาท์** > เลือกแอคเคาท์ที่จะลบ > **ลบ** > เลือก **ใช่**




การทำงานกับโฟลเดอร์แอคเคาท์

แตะ  > แท็บ แอปฯ > **อีเมล** >แตะ  และเลือก **โฟลเดอร์**

แต่ละแอคเคาท์ประกอบด้วยโฟลเดอร์ ภาตเข้า, ภาตออก, ส่งแล้ว และ ร่าง ทั้งนี้คุณอาจมีโฟลเดอร์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอคเคาท์ของคุณสนับสนุน

การเขียนและส่งอีเมล

การเขียนและส่งข้อความ




- 1 ในขณะที่อยู่ในแอปพลิเคชัน **อีเมล** ให้แตะ 
- 2 ป้อนแอดเดรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษรแอดเดรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น ค้นแอดเดรสแต่ละแอดเดรสด้วยเครื่องหมายอัฒภาค
- 3 แตะฟิลด์ Cc/Bcc เพื่อเพิ่ม Cc/Bcc และแตะที่  เพื่อแนบไฟล์หากต้องการ
- 4 ป้อนตัวอักษรในข้อความ
- 5 แตะ 
หากคุณไม่ได้เชื่อมต่อกับเครือข่าย ตัวอย่างเช่น หากคุณกำลังใช้งานในโหมดเครื่องบิน ข้อความที่คุณต้องการส่งจะถูกเก็บในโพลเดอรรถาดออกจนกว่าจะเชื่อมต่อกับเครือข่ายอีกครั้ง หากมีข้อความที่กำลังรอส่งอยู่ ภาดออกจะปรากฏบนหน้าจอ **แอคเคาท์**

เคล็ดลับ! เมื่อได้รับข้อความอีเมลใหม่ในกลุ่มขาเข้าของคุณ คุณจะได้รับแจ้งด้วยเสียงหรือการสั่น แตะที่การแจ้งเตือนอีเมลเพื่อหยุดการแจ้งเตือน

กล้องถ่ายรูป

ในการเปิดแอปพลิเคชันกล้องถ่ายรูป ให้แตะ **กล้องถ่ายรูป**  บนหน้าจอหลัก
ทำความรู้จักกับช่องมองภาพ












- 1 แฟลช – เลือกจาก ปิด , เปิด , อัดโน้มนัด 
- 2 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปด้านหลังและเลนส์กล้องถ่ายรูปด้านหน้า
- 3 โหมดชัตเตอร์ – เลือกจาก ปกติ, ไดนามิกโทน, พาโนรามา, โฟกัสต่อเนื่อง, บิวตี้ชัตเตอร์, Time catch shot, กีฬา หรือ กลางคืน
- 4 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 5 โหมดวิดีโอ – แตะและเลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ
- 6 ปุ่มถ่ายภาพ
- 7 แกลเลอรี – แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูแกลเลอรีและดูภาพถ่ายที่บันทึกไว้ขณะอยู่ในโหมดกล้องถ่ายรูป





หมายเหตุ: โปรดตรวจสอบให้แน่ใจว่าได้ทำความสะอาดเลนส์กล้องถ่ายรูปก่อนถ่ายภาพ

กล้องถ่ายรูป

การใช้การตั้งค่าขั้นสูง

ในช่องมุมมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูง คุณสามารถเปลี่ยนการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อนรายการ หลังจากเลือกตัวเลือกให้แตะปุ่ม ย้อนกลับ


	ในการถ่ายภาพ ให้พูดหนึ่งในคำต่อไปนี้: Cheese (ชีส), Smile (สไมล์), Whisky (วิสกี้), Kimchi (กิมจิ) หรือ LG (แอลจี)
	กำหนดและควบคุมปริมาณแสงแดดที่เข้าในรูป
	แตะเพื่อเลือกโหมดโฟกัส
	เลือกความละเอียดภาพถ่าย ถ้าคุณเลือกความละเอียดสูง ไฟล์จะมีขนาดใหญ่ขึ้น ซึ่งหมายถึงว่าคุณจะสามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง
	ISO กำหนดความไวของเซ็นเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มีดในขณะที่คุณไม่สามารถใช้แฟลชได้
	ปรับปรุงคุณภาพสีในสภาวะแสงที่แตกต่างกัน
	ใช้เอฟเฟกต์งานศิลปะกับรูปภาพของคุณ
	ตั้งเวลาหลังจากกดปุ่มถ่ายภาพ ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้
	เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์
	หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งานฟังก์ชัน GPS หรือเชื่อมต่อกับเครือข่ายเท่านั้น

	เลือกเสียงชัตเตอร์
	ตั้งปุ่มปรับระดับเสียงว่าจะใช้สำหรับจับภาพหรือซุ่ม
	เปิดวิธีใช้เพื่อดูว่าฟังก์ชันนี้ทำงานอย่างไร
	เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป

เคล็ดลับ!

- เมื่อคุณออกจากกล้อง การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง เอฟเฟกต์สี ตัวตั้งเวลา และโหมดภาพ ตรวจสอบค่าเหล่านี้ก่อน ที่คุณจะถ่ายภาพครั้งถัดไป
- เมนูการตั้งค่าจะซ่อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนสีภาพถ่ายหรือองค์ประกอบคุณภาพ คุณจะเห็นภาพตัวอย่างของภาพที่เปลี่ยนแปลงอยู่ด้านหลังเมนูตั้งค่า





การถ่ายภาพด่วน

- 1 เปิดแอปฟลิเคชัน **กล้องถ่ายรูป**
- 2 ถู้อุปกรณ์ที่ในแนวนอน แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 ช่องโฟกัสจะปรากฏขึ้นที่กลางหน้าจอช่องมองภาพ คุณสามารถแตะตำแหน่งใดก็ได้บนหน้าจอเพื่อโฟกัสจุดนั้นนั้น
- 4 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 5 แตะ  เพื่อถ่ายภาพ

กล้องถ่ายรูป

เมื่อคุณถ่ายภาพแล้ว

แตะภาพขนาดย่อที่ด้านล่างของหน้าจอกล้องถ่ายรูปเพื่อดูภาพสุดท้ายที่คุณถ่าย

	แตะเพื่อถ่ายอีกภาพได้ทันที
	แตะเพื่อส่งภาพถ่ายให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	แตะเพื่อลบภาพถ่าย
	แตะเพื่อแบ่งปันภาพถ่ายด้วยฟังก์ชัน SmartShare

เคล็ดลับ! หากคุณมีแอคเคาท์ SNS และตั้งค่าบนโทรศัพท์ของคุณ คุณสามารถแบ่งปันภาพถ่ายของคุณกับชุมชน SNS ได้

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

แตะปุ่มเมนู  **เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด**

ตั้งค่าภาพเป็น – แตะเพื่อใช้ภาพถ่ายเป็น ภาพของรายชื่อที่ติดต่อบนหน้าจอหลัก, ภาพล็อคหน้าจอ หรือ พื้นหลัง

ย้าย – แตะเพื่อย้ายรูปไปยังตำแหน่งอื่น

ตัดลอก – แตะเพื่อตัดลอกภาพถ่ายที่เลือก และบันทึกลงในอัลบั้ม

ตัดลอกไปยังภาคคลิป – แตะเพื่อตัดลอกภาพถ่ายและจัดเก็บในภาคคลิป

แก้ไข – แตะเพื่อแก้ไขชื่อของภาพถ่ายที่เลือก

หมุนซ้าย/ขวา – หมุนไปทางซ้ายหรือขวา

ครีโอล – ครีโอลภาพของคุณ เลื่อนนิ้วของคุณบนหน้าจอเพื่อเลือกพื้นที่ที่จะตัดภาพ

แก้ไข – ดูและแก้ไขรูปภาพ

สไลด์โชว์ – แสดงภาพของคุณในโพลเดอรั่วปัจจุบันทีละภาพ

เพิ่มการระบุตำแหน่ง – การตั้งค่ากล้องถูกตั้งเป็นปิด ไม่มีข้อมูล Geotag, ตำแหน่งรูปภาพ, สามารถเพิ่มข้อมูลตำแหน่งได้

ลบพิกัด – การตั้งค่ากล้องถูกตั้งเป็นเปิดข้อมูล Geotag, ตำแหน่งรูปภาพ, สามารถลบข้อมูลตำแหน่งได้

แสดงบนแผนที่ – การตั้งค่ากล้องถูกตั้งเป็นเปิด Geotag, ข้อมูลตำแหน่งรูปภาพ จะสามารถดูข้อมูลตำแหน่งที่เกี่ยวข้องของบนแผนที่ได้

รายละเอียด – ดูข้อมูลเพิ่มเติมเกี่ยวกับเนื้อหาเหล่านั้น

จากแกลเลอรีของคุณ



แตะ  แกลเลอรี

- ในการดูภาพถ่ายเพิ่มเติม ให้เลื่อนไปทางซ้ายหรือขวา
- ในการซูมเข้าหรือออก ให้แตะหน้าจอสองครั้งหรือวางนิ้วสองนิ้วและเลื่อนออกจากกัน (เลื่อนนิ้วเข้าหากันเพื่อซูมออก)

กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ











- 1 แฟลช – เลือกจาก ปิด , เปิด 
- 2 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 3 โหมดการบันทึก – เลือกจาก ปกติ หรือเอฟเฟกต์ไลฟ์
- 4 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 5 โหมดกล้องถ่ายรูป – แตะและเลื่อนไอคอนนี้ขึ้นเพื่อสลับไปยังโหมดกล้องถ่ายรูป
- 6 เริ่มการบันทึก
- 7 แกลเลอรี – แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเข้าดูแกลเลอรีและวิดีโอของคุณที่บันทึกไว้ขณะอยู่ในโหมดวิดีโอ

เคล็ดลับ!

เมื่อบันทึกวิดีโอ ให้วางนิ้วสองนิ้วบนหน้าจอและเลื่อนเข้าหากันเพื่อใช้ฟังก์ชันซูม



การใช้การตั้งค่าขั้นสูง

ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด



	แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่บันทึก
	กำหนดและควบคุมปริมาณแสงแดดที่เข้าสู่เลนส์ เลื่อนตัวบ่งชี้ความสว่างบนแถบไปทาง "-" เพื่อให้ได้อิโอดีที่มีความสว่างน้อยลง หรือไปทาง "+" เพื่อให้ได้อิโอดีที่มีความสว่างมากขึ้น
	ปรับปรุงคุณภาพสีในสภาวะแสงที่แตกต่างกัน
	เลือกโทนสีเพื่อใช้กับมุมมองใหม่
	เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์ หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งานฟังก์ชัน GPS หรือเชื่อมต่อกับเครือข่ายเท่านั้น
	ตั้งปุ่มปรับระดับเสียงว่าจะใช้สำหรับบันทึกภาพหรือซูม
	เปิดวิธีใช้เพื่อดูว่าฟังก์ชันนี้ทำงานอย่างไร
	เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป

กล้องวิดีโอ

การบันทึกวิดีโออย่างรวดเร็ว





- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป และแตะปุ่ม โหมดวิดีโอ
- 2 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 แตะ  หนึ่งครั้งเพื่อเริ่มบันทึก
- 5 ไฟสีแดงจะปรากฏที่มุมด้านซ้ายบนของช่องมองภาพ พร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 6 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก

เคล็ดลับ!

-  - แตะเพื่อถ่ายภาพขณะบันทึกวิดีโอ
-  - แตะเพื่อหยุดชั่วคราวขณะบันทึกวิดีโอ


หลังการบันทึกวิดีโอ

ในช่องมองภาพ ให้แตะภาพขนาดย่อของวิดีโอที่ด้านล่างของหน้าจอเพื่อดูภาพสุดท้ายที่คุณถ่าย

	แตะเพื่อบันทึกวิดีโออื่นต่อทันที
	แตะเพื่อส่งวิดีโอให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	แตะเพื่อลบวิดีโอ
	แตะเพื่อแบ่งปันวิดีโอด้วยฟังก์ชัน SmartShare

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะ 
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะวิดีโอเพื่อเล่นโดยอัตโนมัติ


การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น ให้ใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายมือของหน้าจอ

ฟังก์ชันพิเศษของ LG

ฟังก์ชัน QuickMemo

ใช้ **QuickMemo** เพื่อสร้างบันทึกได้สะดวกและมีประสิทธิภาพด้วยรูปภาพที่บันทึกไว้หรือบนหน้าจอปัจจุบันของโทรศัพท์

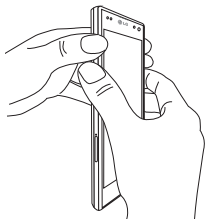


หรือ




หรือ


แตะและเลื่อนแถบสถานะลง
และแตะ 

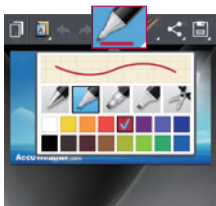

- 1 เข้าสู่หน้าจอฟังก์ชัน QuickMemo โดยการกดปุ่มระดับเสียงขึ้นและลงค้างไว้หนึ่งวินาทีบนหน้าจอที่คุณต้องการถ่ายภาพ

- 2 เลือกตัวเลือกเมนูที่ต้องการจากประเภทปากกา, สี, เครื่องลบ และสร้างบันทึก

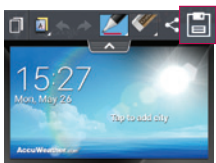








- 3 และ  ในเมนูแก้ไข และเลือก เพื่อจัดเก็บบันทึกพร้อมหน้าจอบริเวณปัจจุบัน

หมายเหตุ: โปรดใช้ปลายนิ้วขณะใช้ฟังก์ชัน QuickMemo อย่าใช้เล็บ

การใช้ตัวเลือก QuickMemo

คุณสามารถใช้ตัวเลือก QuickMenu ได้อย่างง่ายดายในขณะที่ใช้ฟังก์ชัน QuickMemo

	แตะเพื่อเก็บบันทึกปัจจุบันไว้บนหน้าจอ และใช้โทรศัพท์พร้อมๆ กัน
	เลือกว่าจะใช้หน้าจอบริเวณพื้นหลังหรือไม่
	เลิกทำหรือทำซ้ำ
	เลือกประเภทพายุอากาศและสี
	ลบบันทึกที่คุณสร้าง
	แตะเพื่อส่งบันทึกให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	จัดเก็บบันทึกพร้อมกับหน้าจอบริเวณปัจจุบันใน คลังภาพ/โน้ตบุ๊ก

การดู QuickMemo ที่บันทึกไว้


แตะ คลังภาพ/โน้ตบุ๊ก และเลือกอัลบั้ม QuickMemo

ฟังก์ชันพิเศษของ LG

ฟังก์ชันโน้ตบุ๊ก


ด้วยแอปพลิเคชันโน้ตบุ๊ก คุณสามารถจัดการและปรับแต่งข้อมูลได้หลากหลาย โน้ตบุ๊กช่วยให้คุณสร้างบันทึกพิเศษของคุณได้ด้วยการวาดภาพ แผนที่ และสติ๊กเกอร์

การจัดบันทึก


- 1 แตะ  > แตะ แอปฯ > โน้ตบุ๊ก
- 2 แตะ บันทึกใหม่ เพื่อสร้างบันทึกใหม่
- 3 เลือกโหมดที่ต้องการ (ปก, ข้อ, พื้นหลัง, สีกระดาษ) จากนั้นแตะ ตกลง
- 4 สร้างบันทึกแบบเรียงง่ายบนหน้าวาง

ทำความรู้จักกับโน้ตบุ๊ก

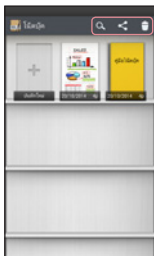


ชั้นวางหนังสือ



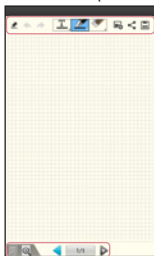









เพจ-พาแนลคุณสมบัติ



ชั้นวางหนังสือ

	ค้นหาหน้าของบันทึก
	แบ่งปันเป็นไฟล์โน้ตบุ๊ก ไฟล์ PDF หรือไฟล์ภาพผ่านอีเมล/Gmail
	ลบโน้ตบุ๊กที่บันทึกไว้จากชั้นวางหนังสือ

เพจ-พาแนลคุณสมบัติ

	เลือกโหมดอ่านอย่างเดียวหรือโหมดแก้ไข
	เล็กลงหรือทำซ้ำ
	แตะปุ่มนี้เพื่อเขียน
	เลือกประเภทปากกา ความหนา ความทึบแสง และสี
	ลบบันทึกที่คุณสร้าง
	แตะเพื่อแนบไฟล์ลงในบันทึก
	แตะเพื่อส่งบันทึกให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	จัดเก็บบันทึกพร้อมหน้าจอบริเวณปัจจุบัน
	เลือกเพื่อล๊อคหรือปลดล๊อคปุ่มด้านหน้า
	แตะปุ่มนี้เพื่อขยายพื้นที่ป้อน

การดูโน้ตบุ๊กที่บันทึกไว้

- บันทึกโน้ตบุ๊กที่จัดเก็บไว้จะอยู่บนชั้นวางหนังสือ
- หากคุณจัดเก็บบันทึกจาก QuickMemo บันทึก QuickMemo จะถูกสร้างขึ้นและบันทึกไว้ในชั้นวางหนังสือโดยอัตโนมัติ

หมายเหตุ: สำหรับข้อมูลเพิ่มเติมจากคู่มือโน้ตบุ๊ก โปรดดูที่ **โน้ตบุ๊ก > คู่มือโน้ตบุ๊ก**

ฟังก์ชันพิเศษของ LG

QuickTranslator

เพียงเล็งกล้องถ่ายรูปของสมาร์ตโฟนไปที่ประโยคต่างประเทศที่คุณต้องการทำความเข้าใจ คุณสามารถรับการแปลแบบเรียลไทม์ได้ทุกที่และทุกเวลา คุณสามารถซื้อพจนานุกรมเพิ่มเติมสำหรับการแปลแบบออฟไลน์ได้จาก Google Play Store



- 1 ภาษาต้นทาง
- 2 ภาษาปลายทาง
- 3 ค่าแปลของคำ
- 4 ค่าแปลของประโยค
- 5 ค่าแปลของวลีค
- 6 ตั้งค่า


- 1 แตะ  > แتب **แอปฯ** > **QuickTranslator**
- 2 แตะ **คำ**, **เส้น** หรือ **ย่อหน้า**
- 3 แตะและเลือกภาษาที่ต้องการ
- 4 ถือโทรศัพท์หันไปทางข้อความที่คุณต้องการแปลค้างไว้สองถึงสามวินาที

หมายเหตุ: มีเพียงพจนานุกรมเดียวเท่านั้นที่ใช้ได้ฟรี จะต้องซื้อพจนานุกรมเพิ่มโปรดเลือกพจนานุกรมที่คุณต้องการติดตั้งเป็นพจนานุกรมเสริมจากรายการด้านล่าง

หมายเหตุ: อัตราการแยกแยะคำอาจแตกต่างกันโดยขึ้นอยู่กับขนาด แบบอักษร สี ความสว่าง และองศาของตัวอักษรที่คุณต้องการแปล

ฟังก์ชันการชม Live

การชม Live ให้คุณชมเข้าหรือชมออกในส่วนของวิดีโอที่กำลังเล่นเพื่อ
ทำให้การสแกนที่ต้องการปรากฏใหญ่ขึ้นหรือเล็กลง

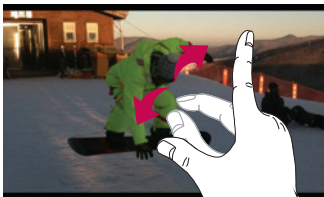

หมายเหตุ:

- ขณะอยู่ในโหมดการเล่นวิดีโอ ให้เลื่อนหน้าจอขึ้นหรือลง จะเป็นการปรับความสว่างหน้าจอ (ด้านซ้าย) ระดับเสียง (ด้านขวา)
- เมื่ออยู่ในโหมดการเล่นวิดีโอ ขณะที่คุณเลื่อนหน้าจอไปทางซ้ายหรือขวา ระดับเสียงจะถูกปรับ

หมายเหตุ: ไม่ต้องกดแรงมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน

ฟังก์ชันพิเศษของ LG

ฟังก์ชัน QSlide

ฟังก์ชัน QSlide จะช่วยให้คุณสามารถใช้ Overlay บนหน้าจอโทรศัพท์ของคุณ สำหรับการดูหลายหน้าต่างได้ง่าย



หรือ



1		แตะเพื่อออกจากฟังก์ชัน QSlide และกลับไปหน้าจอเต็ม
2		แตะเพื่อปรับความโปร่งใส
3		แตะเพื่อสิ้นสุดฟังก์ชัน QSlide
4		แตะเพื่อปรับขนาด

- 1 แตะและเลื่อนแถบสถานะลงด้านล่าง > แตะแอปพลิเคชัน QSlide หรือขณะที่ใช้งานฟังก์ชันที่ได้รับการสนับสนุนโดยฟังก์ชัน QSlide > แตะ ฟังก์ชันจะยังคงแสดงเป็นหน้าต่างขนาดเล็กบนหน้าจอของคุณต่อไป
- 2 คุณสามารถดูโทรออก เรียกดูเว็บ หรือเลือกตัวเลือกโทรศัพท์อื่น คุณยังสามารถใช้และแตะหน้าจอของหน้าต่างเล็กเมื่อแถบโปร่งใสยังไม่เต็ม



หมายเหตุ: ฟังก์ชัน QSlide สามารถสนับสนุนได้สูงสุดสองหน้าต่างพร้อมกัน


เคล็ดลับ!

แตะและเลื่อนพาเนลการแจ้งเตือนลงด้วยนิ้วมือ

แตะ เพื่อจัดการ "ตั้งค่ารวดเร็ว" หรือ "QSlide" ในพาเนลการแจ้งเตือน

ฟังก์ชันจอคู่

คุณสามารถแสดงหน้าจอต่างๆ บนสองหน้าจอที่เชื่อมต่อแบบไร้สายหรือโดยใช้สายเคเบิลได้

- 1 สามารถเรียกใช้โหมดจอคู่ได้โดยการแตะปุ่มหน้าหลัก  ขณะเล่นเนื้อหาบนหน้าจอภายนอก
- 2 คุณสามารถหยุดการเล่นเนื้อหาบนหน้าจอภายนอกได้ด้วยพาเนลการแจ้งเตือน

ข้อสำคัญ

- เชื่อมต่อสมาร์ทโฟนของคุณเข้ากับหน้าจอแบบไร้สาย (Miracast) หรือผ่านสายเคเบิล (สายเคเบิล MHL)
- ไฟล์วิดีโอบางไฟล์อาจไม่ได้รับการสนับสนุนโดยฟังก์ชันจอคู่
- แนะนำให้ใช้สายเคเบิล Shielded LG MHL

โหมดกระจก



จอคู่



ฟังก์ชันพิเศษของ LG



หมายเหตุ:

- มี 3 แอปพลิเคชันที่สนับสนุนจอคู่ - วิดีโอ, มีเดียโฮม (MHL เท่านั้น), Polaris Office 4
- ความละเอียดที่รีซันต่ำในการแสดงผลจอคู่คือ 720p (1280x720)


LG SmartWorld

LG SmartWorld นำเสนอเนื้อหาต่างๆ ที่น่าตื่นเต้น ซึ่งมีทั้งแบบอักษร ธีม เกม แอปพลิเคชัน

วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ

- 1 แตะ  > แตะ **แอปฯ** > แตะไอคอน  เพื่อเข้าถึง **LG SmartWorld**
- 2 แตะ ลงชื่อเข้าใช้ และป้อนข้อมูล ID/PW สำหรับ LG SmartWorld หากคุณยังไม่ได้สมัครสมาชิก ให้แตะรีจิสเตอร์เพื่อรับสถานะสมาชิก LG SmartWorld
- 3 ดาวน์โหลดเนื้อหาที่คุณต้องการ
 - เมื่อคุณใช้เครือข่ายโทรศัพท์มือถือ อาจมีการเรียกเก็บค่าบริการข้อมูลตามแผนข้อมูลที่คุณสมัครใช้กับผู้ให้บริการ
 - LG SmartWorld อาจไม่มีให้บริการในบางประเทศหรือจากผู้ให้บริการบางราย

หมายเหตุ: หากไม่มีไอคอน

- 1 ให้ใช้เว็บเบราว์เซอร์มือถือ เข้าใช้ LG SmartWorld (www.lgworld.com) และเลือกประเทศของคุณ
- 2 ดาวน์โหลดแอปพลิเคชัน LG SmartWorld
- 3 รันและติดตั้งไฟล์ที่ดาวน์โหลด
- 4 เข้าใช้ LG SmartWorld โดยการแตะไอคอน 






ประโยชน์พิเศษเฉพาะใน LG SmartWorld

- 1 ตกแต่งสมาร์ทโฟนตามสไตล์ของคุณ เลือกใช้ธีมหน้าหลัก และธีมคีย์บอร์ดและแบบอักษรที่มีในบน LG SmartWorld (สามารถใช้บริการนี้ได้บนอุปกรณ์บางรุ่นเท่านั้น โปรดตรวจสอบจากเว็บไซต์ LG SmartWorld ว่าสามารถใช้งานได้หรือไม่)
- 2 เพลิดเพลินกับบริการพิเศษของ LG SmartWorld โดยการเข้าร่วมโปรโมชั่นที่มีให้อย่างต่อเนื่อง

On-Screen Phone

On-Screen Phone ให้คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อ Bluetooth คุณยังสามารถควบคุมโทรศัพท์มือถือจากคอมพิวเตอร์โดยใช้เมาส์หรือแป้นพิมพ์

ไอคอน On-Screen Phone

	เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์ หรือยกเลิกการเชื่อมต่อ
	เปลี่ยนแปลงการกำหนดค่า On-Screen Phone
	ออกจากโปรแกรม On-Screen Phone
	ย่อหน้าต่าง On-Screen Phone
	ย่อหน้าต่าง On-Screen Phone

ฟังก์ชันพิเศษของ LG

คุณสมบัติ On-Screen Phone

- การถ่ายโอนและการควบคุมแบบเรียลไทม์: แสดงและควบคุมหน้าจอโทรศัพท์เมื่อเชื่อมต่อกับคอมพิวเตอร์
- การควบคุมเมาส์: ให้คุณควบคุมโทรศัพท์ด้วยการใช้เมาส์คลิกและลากบนหน้าจอคอมพิวเตอร์
- ป้อนข้อความด้วยแป้นพิมพ์: ให้คุณสร้างข้อความหรือบันทึกโดยใช้แป้นพิมพ์คอมพิวเตอร์
- ถ่ายโอนไฟล์ (โทรศัพท์ไปยังคอมพิวเตอร์): ส่งไฟล์จากโทรศัพท์ (เช่น ภาพถ่าย วิดีโอ เพลง และไฟล์ Polaris Office) ไปยังคอมพิวเตอร์โดยเพียงคลิกขวาที่ไฟล์ที่คุณต้องการส่งไปยังคอมพิวเตอร์ และคลิก "บันทึกในคอมพิวเตอร์"
- ถ่ายโอนไฟล์ (คอมพิวเตอร์ไปยังโทรศัพท์): ส่งไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์ เพียงแค่เลือกไฟล์ที่คุณต้องการถ่ายโอน แล้วลากและวางไฟล์ลงในหน้าต่าง On-Screen Phone ไฟล์ที่ส่งจะถูกจัดเก็บในการ์ด SD ภายใน
- การแจ้งเตือนเหตุการณ์แบบเรียลไทม์: ป๊อปอัปข้อความเพื่อแจ้งคุณเมื่อมีสายเรียกเข้าหรือเมื่อมีข้อความตัวอักษร/ มัลติมีเดียมาถึง

วิธีติดตั้ง On-Screen Phone ในคอมพิวเตอร์

- 1 เยี่ยมชมหน้าหลัก LG (www.lg.com) และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ **บริการ > บริการโทรศัพท์มือถือ > เลือกรุ่น (LG-E975) > คลิก OSP (On-Screen Phone)** เพื่อดาวน์โหลด จากนั้น คุณสามารถติดตั้ง On-Screen Phone ลงในคอมพิวเตอร์ของคุณ

มัลติมีเดีย

คลังภาพ

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำภายในเพื่อการเข้าถึงไฟล์มัลติมีเดียทั้งหมดของคุณอย่างง่ายดาย ใช้แอปพลิเคชันนี้เพื่อดูไฟล์มัลติมีเดีย เช่น รูปภาพ และวิดีโอ

1 แตะ แท็บ > แอปฯ > คลังภาพ

เปิดรายการแถบแคตตาล็อกที่จัดเก็บไฟล์มัลติมีเดียของคุณไว้

หมายเหตุ:

- ไม่สนับสนุนรูปแบบไฟล์บางรูปแบบ โดยขึ้นอยู่กับซอฟต์แวร์ที่ติดตั้งบนอุปกรณ์
- บางไฟล์อาจแสดงผลได้ไม่ถูกต้อง ขึ้นอยู่กับลักษณะการเข้ารหัส

การดูรูปภาพ

การเปิดคลังภาพจะเป็นการแสดงโฟลเดอร์ที่มีของคุณ เมื่อแอปพลิเคชันอื่น เช่น อีเมล จัดเก็บรูปภาพ โฟลเดอร์ Download จะถูกสร้างขึ้นโดยอัตโนมัติ เพื่อเก็บรูปภาพ เช่นเดียวกัน การบันทึกภาพหน้าจอจะเป็นการสร้างโฟลเดอร์ Screenshots โดยอัตโนมัติ เลือกโฟลเดอร์เพื่อเปิด

รูปภาพจะถูกแสดงตามวันที่สร้างในโฟลเดอร์ เลือกรูปภาพเพื่อดูแบบเต็มจอ เลื่อนไปทางซ้ายหรือขวาเพื่อดูภาพถัดไปหรือก่อนหน้า



การซูมเข้าและออก

ใช้หนึ่งในวิธีต่อไปนี้เพื่อซูมเข้าภาพ:

- แตะสองครั้งที่ใดก็ได้เพื่อซูมเข้า
- เลื่อนนิ้วทั้งสองออกจากกันในตำแหน่งใดก็ได้เพื่อซูมเข้า เลื่อนนิ้วเข้าหากันเพื่อซูมออก หรือแตะสองครั้งเพื่อย้อนกลับ

มีลดีมีเดีย

การเล่นวิดีโอ

ไฟล์วิดีโอจะแสดงไอคอน  ในภาพตัวอย่าง เลือกวิดีโอที่จะดูและแตะ  แอปพลิเคชัน วิดีโอ จะเปิดขึ้น

การแก้ไขภาพถ่าย/วิดีโอ

ขณะดูภาพถ่าย/วิดีโอ ให้แตะปุ่ม **เมนู**  และใช้ตัวเลือกการแก้ไขขั้นสูง

• **สไลด์โชว์:** เริ่มต้นสไลด์โชว์ด้วยรูปภาพในโฟลเดอร์ปัจจุบัน

การลบรูปภาพ

ใช้หนึ่งในวิธีต่อไปนี้:

- ในโฟลเดอร์ **แตะ**  และเลือกภาพถ่าย/วิดีโอโดยการทำเครื่องหมายถูกจากนั้น **ลบ**
- ขณะดูภาพถ่าย/ภาพวิดีโอ ให้แตะ 


การตั้งค่าเป็นภาพพื้นหลัง

ขณะดูภาพถ่าย ให้แตะปุ่ม **เมนู**  > **ตั้งค่าภาพเป็น** เพื่อตั้งภาพเป็นภาพพื้นหลัง หรือเพื่อกำหนดให้กับรายชื่อ


หมายเหตุ:


- ไม่สนับสนุนรูปแบบไฟล์บางรูปแบบ โดยขึ้นอยู่กับซอฟต์แวร์อุปกรณ์
- หากขนาดไฟล์ใหญ่เกินกว่าหน่วยความจำที่มีอยู่ อาจเกิดข้อผิดพลาดเมื่อคุณเปิดไฟล์นั้น









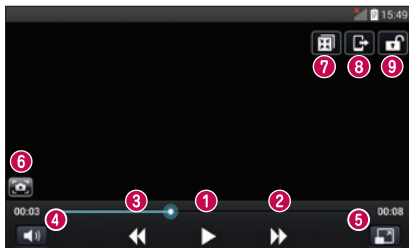



วิดีโอ

โทรศัพท์ของคุณมีเครื่องเล่นวิดีโอภายในตัวที่ให้คุณสามารถเล่นวิดีโอที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นวิดีโอ ให้แตะ  > **แท็บแอปฯ** > **วิดีโอ**

การเล่นวิดีโอ

- 1 แตะ  > แท็บ แอปฯ > วิดีโอ
- 2 เลือกวิดีโอที่คุณต้องการเล่น



1 	แตะเพื่อหยุด / เล่นวิดีโอประวัติ
2 	แตะเพื่อเดินหน้าไป 10 วินาที
3 	แตะเพื่อถอยหลังไป 10 วินาที
4 	แตะเพื่อจัดการระดับเสียงของวิดีโอ
5  /  / 	แตะเพื่อเปลี่ยนอัตราส่วนหน้าจอวิดีโอ
6 	แตะเพื่อถ่ายภาพขณะบันทึกวิดีโอ
7 	แตะเพื่อใช้ QSlide
8 	แตะเพื่อทำ Smart Share
9  / 	แตะเพื่อล็อก/ปลดล็อกหน้าจอวิดีโอ

มีลดีมีเดีย

หากต้องการเปลี่ยนระดับเสียงในขณะที่ดูวิดีโอ ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์
แต่วิดีโอในรายการค้างไว้ ตัวเลือกแบ่งปัน, **ลบ**, **Trim** และรายละเอียดจะปรากฏขึ้น

แก้ไขวิดีโอ

คุณสามารถแก้ไขภาพถ่ายหรือวิดีโอที่จัดเก็บไว้บนโทรศัพท์ได้

หมายเหตุ: เฉพาะภาพถ่ายหรือวิดีโอที่บันทึกด้วยโทรศัพท์เครื่องนี้เท่านั้นที่สนับสนุนฟังก์ชันการแก้ไขวิดีโอ

< หน้าจอรายการโปรเจ็ค >



ช่วยเหลือ

พื้นที่รายการโปรเจ็ค

พื้นที่ปุ่ม



สร้างโปรเจ็ค



ควรเลือกพอร์ตโปรเจ็คเพื่อเล่นในแอปพลิเคชัน เช่น วิดีโอ



เล่นโปรเจ็ค



ลบโปรเจ็ค










แบ่งปันโปรเจ็คกับแอปพลิเคชัน เช่น YouTube

< หน้าจอแก้ไขโปรเจ็ค >



พื้นที่แสดงผล

พื้นที่ช่วงเวลา

	ย้ายไปยังหน้าจอรายการโปรเจ็ค โปรเจ็คที่แก้ไขอยู่ในปัจจุบัน จะถูกบันทึกโดยอัตโนมัติ
	แบ่งคลิปวิดีโอเป็นสองส่วนบนเพลย์เฮด
	เพิ่มเอฟเฟกต์เสียง
	เพิ่มวิดีโอ ภาพ หรือคลิปเสียง
	เลิกทำการดำเนินการ
	ทำซ้ำการดำเนินการ
	เพิ่มข้อความลงในวิดีโอหรือคลิปภาพ

Video Wiz










คุณสามารถสร้างภาพยนตร์ของตัวเองได้ โดยใช้ภาพ/วิดีโอ และเพลงของคุณ

1 แตะ  > แตะ **แอปฯ** > **Video Wiz**

2 หลังจากดูคำแนะนำสั้นๆ เกี่ยวกับขั้นตอนที่ต้องทำตาม ให้แตะ **ตกลง**

มัลติมีเดีย




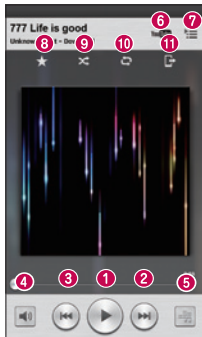
- 3 แตะ  เพื่อเพิ่มภาพหรือวิดีโอลงในภาพยนตร์ของคุณ
- 4 แตะภาพหรือวิดีโอที่ต้องการ จากนั้นแตะ 
 - ในการลบรูปภาพหรือวิดีโอ ให้แตะ  และเลือกไฟล์ที่คุณต้องการ > 
 - ในการจัดเรียง ให้แตะรูปภาพ/วิดีโอค้างไว้ จากนั้นลากไปปล่อยในตำแหน่งที่ต้องการ
- 5 แตะ **เลือกสไลด์** เพื่อเลือกรูปแบบภาพยนตร์ที่ต้องการ
 - เลื่อนดูและเลือกรูปแบบที่ต้องการ ขณะที่คุณเลื่อนดูรูปแบบภาพตัวอย่างจะปรากฏขึ้น
- 6 แตะ **เลือกเพลง** เพื่อเลือกเพลงแบ็คกราวด์
- 7 แตะ  เพื่อเล่นภาพยนตร์ของคุณ
- 8 แตะ  เพื่อแก้ไขคลิปวิดีโอด้วยความ สติ๊กเกอร์ หรือเมจิกสปอต
 - หลังจากแก้ไขวิดีโอแล้ว ให้แตะ 
- 9 แตะ  เพื่อจัดเก็บวิดีโอ
- 10 แตะ  เพื่อดูข้อมูลวิธีใช้เกี่ยวกับการใช้งานคุณสมบัตินี้






เพลง

โทรศัพท์ของคุณมีเครื่องเล่นเพลงในตัวซึ่งให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะ  > แتب **แอป**
> **เพลง**







การเล่นเพลง

- 1 แตะ  > แท็บ แอปฯ > เพลง
- 2 แตะ เพลง
- 3 เลือกเพลงที่คุณต้องการเล่น



1		แตะเพื่อหยุดการเล่นวิดีโอชั่วคราว/เล่นต่อ
2		แตะเพื่อข้ามไปที่แทร็คถัดไปในอัลบั้ม รายการเพลง หรือสลับเปลี่ยน แตะค้างไว้เพื่อไปข้างหน้าโดยเร็ว
3		แตะเพื่อเริ่มเล่นแทร็คปัจจุบันอีกครั้ง หรือข้ามไปยังแทร็คก่อนหน้าในอัลบั้ม รายการเพลง หรือสลับเปลี่ยน แตะค้างไว้เพื่อย้อนกลับ
4		แตะเพื่อแสดงแถบเลื่อนระดับเสียง จากนั้นปรับระดับเสียงที่แถบเลื่อน
5		แตะเพื่อตั้งค่าเอฟเฟกต์เสียง

มัลติมีเดีย

6		แตะเพื่อค้นหาไฟล์ด้วย YouTube
7		แตะเพื่อเปิดรายการเพลงปัจจุบัน
8		แตะเพื่อเพิ่มเพลงในรายการโปรดของคุณ
9		แตะเพื่อเล่นรายการเพลงปัจจุบันในโหมดสลับเปลี่ยน (แทร็คจะเล่นตามลำดับการสุ่ม)
10		แตะเพื่อสลับระหว่างโหมดซ้ำ เล่นเพลงทั้งหมดซ้ำ เล่นเพลงปัจจุบันซ้ำ หรือปิดทำซ้ำ
11		SmartShare

หากต้องการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์
แตะเพลงหนึ่งในรายการเพลงค้างไว้ ตัวเลือก เล่น, เพิ่มในรายการเพลง, แบ่งปัน, ตั้งค่าเป็นเสียงเรียกเข้า, ลบ, รายละเอียด และ ค้นหา จะปรากฏขึ้น

เพิ่มไฟล์เพลงในโทรศัพท์ของคุณ

เริ่มต้นจากการถ่ายโอนไฟล์เพลงไปยังโทรศัพท์ของคุณ:

- ถ่ายโอนเพลงโดยใช้ซิงค์มีเดีย (MTP)
- ดาวน์โหลดจากเว็บไซต์
- ซิงค์โครนซ์โทรศัพท์ของคุณกับคอมพิวเตอร์
- รับไฟล์ผ่าน Bluetooth

ถ่ายโอนเพลงโดยใช้ซิงค์มีเดีย (MTP)

- 1 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 เลือกตัวเลือก **ซิงค์มีเดีย (MTP)** โทรศัพท์ของคุณจะปรากฏเป็นฮาร์ดไดรฟ์ในคอมพิวเตอร์ของคุณ คลิกไดรฟ์เพื่อดู คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโพลเดอร์ไดรฟ์
- 3 เมื่อคุณเสร็จสิ้นการถ่ายโอนไฟล์แล้ว ให้ลากนิ้วลงบนแถบสถานะ และแตะ **เชื่อมต่อ USB** แล้ว > **ซาร์ทเท่านั้น** คุณสามารถถอดปลั๊กอุปกรณ์ของคุณได้อย่างปลอดภัย

หมายเหตุ:



- ไม่สนับสนุนรูปแบบไฟล์บางรูปแบบ โดยขึ้นอยู่กับซอฟต์แวร์อุปกรณ์
- หากขนาดไฟล์ใหญ่เกินกว่าหน่วยความจำที่มีอยู่ อาจเกิดข้อผิดพลาดเมื่อคุณเปิดไฟล์นั้น


หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงได้รับความคุ้มครองตามสนธิสัญญานานาชาติ และกฎหมายลิขสิทธิ์ของแต่ละประเทศ

ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำหรือคัดลอกเพลงในกฎหมายของบางประเทศมีข้อยกเว้นในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเองก่อนดาวน์โหลดหรือคัดลอกไฟล์ ให้ตรวจสอบกฎขอบังคับของประเทศนั้นๆเกี่ยวกับการใช้สื่อต่างๆ



ยูทิลิตี้

การตั้งเวลาการปลุก



- 1 แตะ  > แท็บ แอปฯ > ตั้งปลุก/นาฬิกา > 
- 2 หลังจากที่คุณตั้งค่านาฬิกาปลุก โทรศัพท์ของคุณจะแจ้งให้คุณทราบว่าเหลือเวลาอีกเท่าไรก่อนที่จะทำการปลุกจะทำงาน
- 3 ตั้งค่า **ซ้ำ**, **ระยะเวลาเลื่อน**, **สั่น**, **เสียงปลุก**, **ระดับเสียงปลุก**, **เริ่มใช้แอปฯอัตโนมัติ**, **ลือคปริศนา** และ **บันทึก** แตะ **บันทึก**

หมายเหตุ: ในการเปลี่ยนการตั้งค่าการปลุกในหน้าจอรายการเดือน ให้แตะปุ่ม  และเลือกตั้งค่า

การใช้เครื่องคิดเลข

- 1 แตะ  > แท็บ แอปฯ > **คิดเลข**
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน ให้เลื่อนไปทางซ้ายแล้วเลือก sin, cos, tan, log และอื่นๆ
- 5 ในการตรวจสอบประวัติ ให้แตะ  เลือก ประวัติการคำนวณ

การเพิ่มเหตุการณ์ลงในปฏิทิน





- 1 แตะ  > แท็บ แอปฯ > **ปฏิทิน**
- 2 บนหน้าจอ คุณจะพบกับประเภทมุมมองต่างๆ ของปฏิทิน (วัน สัปดาห์ เดือน นัดหมาย)
- 3 แตะวันที่ซึ่งคุณต้องการเพิ่มเหตุการณ์ และแตะ 
- 4 แตะ **ชื่อเหตุการณ์** แล้วป้อนชื่อเหตุการณ์
- 5 แตะ **ที่ตั้ง** และป้อนตำแหน่ง ตรวจสอบวันที่และป้อนเวลาที่คุณต้องการให้เหตุการณ์เริ่มและเสร็จสิ้น


- 6 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะ **คำอธิบาย** แล้วป้อนรายละเอียด
- 7 หากคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **ซ้ำ** และตั้งค่า **เตือนความจำ** หากจำเป็น
- 8 แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน

บันทึกเสียง


ใช้บันทึกเสียงเพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

การบันทึกเสียงหรือเสียงพูด

- 1 แตะ  > แตะ **แอปฯ** และเลือก **บันทึกเสียง**
- 2 แตะ  เพื่อเริ่มบันทึก
- 3 แตะ  เพื่อจบการบันทึก
- 4 แตะ  เพื่อฟังการบันทึก

หมายเหตุ: แตะ  เพื่อเข้าใช้อัลบั้ม คุณสามารถฟังการบันทึกเสียงที่บันทึกไว้ได้ เวลาการบันทึกที่ใช้อาจแตกต่างจากเวลาการบันทึกจริง

การส่งรายการบันทึกเสียง

- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว คุณสามารถส่งคลิปเสียงได้ โดยแตะ 
- 2 เลือกจาก Bluetooth, ไดรฟ์, อีเมล, Gmail, บันทึก, ข้อความ หรือ SmartShare Beam เมื่อคุณเลือก การบันทึกเสียงจะถูกเพิ่มในข้อความ จากนั้นคุณสามารถเขียนและส่งข้อความได้ตามปกติ

จัดการแอปฯ

คุณสามารถจัดการแอปพลิเคชันได้โดยใช้จัดการแอปฯ คุณสามารถตรวจสอบจำนวนแอปพลิเคชันที่กำลังรันและปิดแอปพลิเคชันที่ต้องการได้ง่ายๆ คุณยังสามารถยกเลิกการติดตั้งแอปพลิเคชันที่คุณติดตั้งในอุปกรณ์ของคุณได้ด้วย

การทำงาน

งานนี้สามารถทำงานเชิงโครโนซ์กับแอคเคาท์ MS Exchange ได้ คุณสามารถสร้าง, แก้ไข และลบงานได้ใน MS Outlook หรือ MS Office Outlook Web Access

ในการเชิงโครโนซ์ MS Exchange

- 1 จากหน้าจอหลัก ให้แตะ  > **ตั้งค่า**
- 2 แตะ **แอคเคาท์และการเชิงคร** > **เพิ่มแอคเคาท์**
- 3 แตะ **Microsoft Exchange** เพื่อสร้างอีเมลแอคเดรสและรหัสผ่าน
- 4 ตรวจสอบให้แน่ใจว่าคุณได้เลือกงานเชิงคร

Polaris Office 4

Polaris Office คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ให้ผู้ดูแลเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่หรือทุกเวลาด้วยมือถือของคุณ

แตะ  > **แท็บ แอปฯ** > **Polaris Office 4**

การดูไฟล์

ผู้ใช่มือถือสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือ เมื่อดูเอกสารโดยใช้ Polaris Office ออบเจกต์และเลย์เอาต์จะเหมือนกับในเอกสารต้นฉบับ

Backup

เกี่ยวกับการสำรองข้อมูลและเรียกคืนข้อมูลของสมาร์ตโฟน

ขอแนะนำให้คุณสร้างและบันทึกไฟล์สำรองไว้ในที่เก็บข้อมูลภายในเป็นระยะ โดยเฉพาะอย่างยิ่งก่อนอัปเดตซอฟต์แวร์ใดๆ การจัดเก็บไฟล์สำรองปัจจุบันไว้ในหน่วยความจำเก็บข้อมูลอาจช่วยให้คุณกู้ข้อมูลสมาร์ตโฟนได้ หากสมาร์ตโฟนของคุณสูญหาย ถูกขโมย หรือเสียหายจากปัญหาที่ไม่คาดคิด แอปพลิเคชันสำรองข้อมูลนี้สนับสนุนระหว่างสมาร์ตโฟน LG, เวอร์ชันซอฟต์แวร์อื่น หรือ OS อื่น ดังนั้น เมื่อคุณซื้อสมาร์ตโฟน LG เครื่องใหม่ คุณสามารถสำรองข้อมูลโทรศัพท์ปัจจุบันไปยังเครื่องใหม่ของคุณได้

หากคุณมีแอปพลิเคชัน **Backup** ที่โหลดไว้ล่วงหน้าไว้บนสมาร์ตโฟนของคุณ คุณสามารถสำรองและเรียกคืนข้อมูลสมาร์ตโฟนของคุณส่วนใหญ่, แอปพลิเคชัน รวมถึงแอปพลิเคชันที่ไม่มีการป้องกันและการตั้งค่า, แอปพลิเคชัน (ที่ดาวน์โหลด), แอปพลิเคชัน (ก่อนติดตั้ง), บุคมาร์ค, ปฏิทิน, ข้อมูลการโทร, รายชื่อ, หมายเหตุเริ่มต้น, ข้อความอักษร และการกำหนดค่าระบบ การใช้แอปพลิเคชันนี้คุณสามารถ:

- สำรองข้อมูลสมาร์ตโฟนด้วยตัวเอง
- กำหนดเวลาสำรองข้อมูลสมาร์ตโฟนอัตโนมัติ
- เรียกคืนข้อมูลสมาร์ตโฟน


หมายเหตุ: โปรดทราบว่าฟังก์ชันสำรองข้อมูลไม่รองรับการสำรองข้อมูลผู้ใช้และข้อมูลมีเดีย (รูปภาพ/วิดีโอ/เพลง) โปรดสำรองไฟล์เหล่านี้โดยใช้ซิงค์มีเดีย (MTP) เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สาย USB และแตะซิงค์มีเดีย (MTP)

คำเตือน

ในการป้องกันการปิดเครื่องที่คาดไม่ถึงระหว่างการสำรองหรือเรียกคืนข้อมูล เนื่องจากแบตเตอรี่ไม่เพียงพอ คุณควรชาร์จแบตเตอรี่ให้เต็มเสมอ

ยูทิลิตี้

สำรองข้อมูล

- 1 แตะ  > แท็บ แอปฯ > **LG แบ็คอัพ** > สำรองข้อมูล
- 2 เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการสำรอง แล้วแตะ ทำต่อ เพื่อสำรองข้อมูล
- 3 แตะที่เก็บข้อมูลภายใน > เริ่ม
- 4 เมื่อไฟล์ที่เลือกทั้งหมดได้รับการสำรองแล้ว คุณสามารถแตะ เสร็จ เพื่อเป็นการเสร็จสิ้นการสำรอง

การตั้งเวลาการสำรอง

คุณสามารถตั้งค่าการสำรองข้อมูลสมาร์ตโฟนได้อัตโนมัติตามการตั้งค่ากำหนดเวลาใด ในการดำเนินการนี้ ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

แตะ  > แท็บแอปฯ > **LG แบ็คอัพ** > สำรองข้อมูลอัตโนมัติ

การจัดการและการเรียกคืนไฟล์

คุณสามารถตั้งค่าการคืนค่าไฟล์ที่สำรองให้เป็นสถานะที่ต้องการได้ ในการเรียกคืนข้อมูลที่อยู่ในหน่วยความจำอุปกรณ์อ่อนนบอร์ด ต้องปิดโหมดที่เก็บข้อมูล

แตะ  > แท็บแอปฯ > **LG Backup** > การคืนค่าข้อมูลกลับและการจัดการไฟล์ > ที่เก็บข้อมูลภายใน

หมายเหตุ:

คุณสามารถกำหนดการลบการสำรองเกาอัตโนมัติและเก็บไว้เฉพาะการสำรองล่าสุดได้ แตะ เมนู จากหน้าจอ **Backup** แล้วเลือก **ค่า > การสำรองตามกำหนดการ > ลบข้อมูลสำรองเกาโดยอัตโนมัติ** เพื่อเลือกจำนวนของการสำรองข้อมูลตามกำหนดเวลาที่ต้องการเก็บไว้

Google+


ใช้แอปพลิเคชันนี้เพื่อเชื่อมต่อกับบุคคลผ่านบริการเครือข่ายสังคมของ Google

- แตะ  > แท็บ แอปฯ > **Google +**

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้ให้บริการเครือข่าย

ค้นหาด้วยเสียง

ใช้แอปพลิเคชันนี้เพื่อค้นหาเว็บเพจด้วยเสียง

- 1 แตะ  > แท็บ แอปฯ > **ค้นหาด้วยเสียง**
- 2 พุดคำหลักหรือวลีเมื่อ **พูดเลย** ปรากฏบนหน้าจอ เลือกคำหลักที่แนะนำ
ค่าใดค่าหนึ่งที่ปรากฏขึ้น

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้ให้บริการเครือข่าย

ดาวน์โหลด

ใช้แอปพลิเคชันนี้เพื่อดูว่ามีไฟล์อะไรบ้างที่ถูกดาวน์โหลดผ่านแอปพลิเคชัน

- แตะ  > แท็บ แอปฯ > **ดาวน์โหลด**

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้ให้บริการเครือข่าย

เว็บไซต์

อินเทอร์เน็ต






ใช้แอปพลิเคชันนี้เพื่อเรียกดูอินเทอร์เน็ต เบราวเซอร์จะนำคุณเข้าสู่โลกที่เต็มไปด้วยสีสันของเกมส เพลง ข่าวสาร กีฬา ความบันเทิงและอื่นๆ อีกมากมายอย่างรวดเร็วที่โทรศัพท์มือถือของคุณโดยตรง ไม่ว่าคุณจะอยู่ที่ใดหรือสนุกกับสิ่งใด

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้ดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

1 แตะ  > แท็บ แอปฯ > อินเทอร์เน็ต

การใช้แถบเครื่องมือเว็บ

แตะค้างไว้ที่แถบเครื่องมือเว็บแล้วเลื่อนขึ้นด้านบนด้วยนิ้วมือเพื่อเปิด

	แตะเพื่อย้อนกลับหนึ่งเพจ
	แตะเพื่อไปข้างหน้าหนึ่งเพจไปยังเพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณแตะปุ่ม ย้อนกลับ ซึ่งจะนำคุณไปยังเพจก่อนหน้า
	แตะเพื่อไปยังโฮมเพจ
	แตะเพื่อเพิ่มหน้าต่างใหม่
	แตะเพื่อเข้าใช้งานบุ๊กมาร์ค

การดูเว็บเพจ

แตะฟิลด์แอดเดรส ป้อนเว็บแอดเดรสแล้วแตะ ไป

การเปิดเพจ

ในการไปยังเพจใหม่ ให้แตะ  → 

ในการไปยังเว็บเพจอื่น ให้แตะ  เลื่อนขึ้นหรือลง และแตะเพจเพื่อเลือก

การค้นหาเว็บด้วยเสียง

แตะฟิลด์แอดเดรส แตะ  พูดคำหลัก แล้วเลือกหนึ่งในคำหลักที่แนะนำที่ปรากฏขึ้น

หมายเหตุ: คุณสมบัตินี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคหรือผู้บริการเครือข่าย

บุ๊กมาร์ก

ในการบุ๊กมาร์กเว็บเพจปัจจุบัน ให้แตะ  > **เพิ่มบุ๊กมาร์ก** > **ตกลง**

ในการเปิดเว็บเพจที่บุ๊กมาร์ก ให้แตะ  แล้วยเลือก

ประวัติ

แตะ  > **ประวัติ** เพื่อเปิดเว็บเพจจากรายการเว็บเพจที่เยี่ยมชมล่าสุด

ในการลบประวัติ ให้แตะเมนู  → **ลบประวัติทั้งหมด**

การใช้เบราว์เซอร์ป๊อปอัป

ใช้คุณสมบัตินี้เพื่อเข้าใช้อินเตอร์เน็ตโดยไม่ต้องปิดแอปพลิเคชันปัจจุบัน

ขณะการดูเนื้อหา เช่น ผู้ติดต่อหรือบันทึกที่มีเว็บแอดเดรส

ให้เลือกเว็บแอดเดรส จากนั้นแตะเบราว์เซอร์ป๊อปอัปเพื่อเปิดเบราว์เซอร์ป๊อปอัป แตะแล้วลากเบราว์เซอร์เพื่อย้ายไปยังตำแหน่งอื่น

ในการดูเบราว์เซอร์แบบเต็มหน้าจอ ให้แตะ 

ในการปิดเบราว์เซอร์ ให้แตะ 

Chrome

ใช้ Chrome ในการค้นหาข้อมูลและเรียกดูเว็บเพจ

1 แตะ  > แท็บ แอปฯ > Chrome

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้บริการเครือข่ายของคุณ

การดูเว็บเพจ

แตะฟิลด์แอดเดรส จากนั้นป้อนเว็บแอดเดรสหรือเกณฑ์การค้นหา



การเปิดเพจ

ในการไปยังเพจใหม่ ให้แตะ  > แท็บใหม่

ในการไปยังเว็บเพจอื่น ให้แตะ  เลื่อนขึ้นหรือลง และแตะเพจเพื่อเลือก

การซิงค์กับอุปกรณ์อื่น

ซิงค์แท็บที่เปิดและบุ๊คมาร์กเพื่อใช้กับ Chrome ในอุปกรณ์อื่นเมื่อคุณล็อกอินด้วยบัญชี Google เดียวกัน

ในการดูแท็บที่เปิดบนอุปกรณ์อื่น ให้แตะ เมนู  > อุปกรณ์อื่นๆ
เลือกเว็บเพจเพื่อเปิดในการดูบุ๊คมาร์ก ให้แตะ 

ตั้งค่า

ส่วนนี้จะแสดงภาพรวมรายการที่คุณสามารถเปลี่ยนแปลงผ่านเมนูการตั้งค่าระบบของโทรศัพท์ได้:

การเข้าถึงเมนูตั้งค่า:

- 1 ในหน้าจอหลัก ให้แตะ  > แท็บ แอปฯ > **ตั้งค่า** หรือ
หรือในหน้าจอหลัก ให้แตะ  > **การตั้งค่าระบบ**
- 2 เลือกประเภทการตั้งค่าและเลือกตัวเลือก

ตั้งค่าการเชื่อมต่อ

ในหน้าจอนี้ คุณจะสามารถจัดการ Wi-Fi และ Bluetooth คุณยังสามารถตั้งค่าเครือข่ายโทรศัพท์มือถือ และสลับไปยังโหมดเครื่องบินได้ด้วย

< **Wi-Fi** >

Wi-Fi – เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

เคล็ดลับ! การดู MAC แอดเดรส

ในการเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยฟิลเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของโทรศัพท์ลงในเราเตอร์

คุณสามารถค้นหา MAC แอดเดรสได้ในยูสเซอร์อินเตอร์เฟซต่อไปนี้: แตะแท็บ

แอปฯ > **ตั้งค่า** > **Wi-Fi** >  > **ขั้นสูง** > **MAC แอดเดรส**

< **Bluetooth** >

เปิดหรือปิดคุณสมบัติ Bluetooth เพื่อใช้ Bluetooth

< **ข้อมูลโมบายล์** >

แสดงการใช้ข้อมูลและตั้งค่าขีดจำกัดการใช้ข้อมูลโทรศัพท์มือถือ

< **โทร** >

กำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

ตั้งค่า

ข้อความเสียง – ให้คุณเลือกบริการข้อความเสียงของผู้ให้บริการ กำหนดเบอร์โทรออก - เปิดและรวบรวมรายการหมายเลขที่สามารถโทรออก จากโทรศัพท์ได้ คุณต้องใส่ PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจาก โทรศัพท์ได้

ป้องกันการโทรด้วยเสียงพูดที่เข้ามา – แสดงป้องกันการโทรด้วยเสียงพูด ที่เข้ามาเมื่อกำลังใช้งานแอปฯ

ปฏิเสธการรับสาย – ให้คุณสามารถตั้งค่าฟังก์ชันปฏิเสธการรับสาย เลือกจาก โหมดปฏิเสธสาย หรือ รายการปฏิเสธ

ปฏิเสธพร้อมส่งข้อความ – เมื่อคุณต้องการปฏิเสธสาย คุณสามารถส่ง ข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่ คุณต้องการปฏิเสธการรับสายในระหว่างการประชุม

ระบบป้องกันขโมยกลับ – ซ่อนชื่อผู้โทรและหมายเลขสำหรับสายเรียกเข้า **การโอนสาย** – เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับ สาย หรือ โอนเมื่อไม่มีสัญญาณ

รับสายอัตโนมัติ – ตั้งค่าเวลาก่อนอุปกรณ์แฮนด์ฟรีที่เชื่อมต่อจะรับสายเรียก เข้าโดยอัตโนมัติ เลือกจาก ปิด, 1 วินาที, 3 วินาที และ 5 วินาที

การสั่นขณะเชื่อมต่อ – สั่นโทรศัพท์เมื่อคู่สนทนาอื่นๆ รับสาย

บันทึกหมายเลขที่ไม่รู้จัก – เพิ่มหมายเลขที่ไม่รู้จักลงในรายชื่อหลังจาก การโทร

ปุ่มเปิด/ปิดวางสาย – ให้คุณเลือกการวางสาย

ป้องกันการโทร – ล็อคสายเรียกเข้า สายโทรออก หรือสายโทรออกต่าง ประเทศ

เวลาโทร – ดูระยะเวลาการโทรทั้งหมด ได้แก่ โทรครั้งล่าสุด ทุกสาย สายที่ โทรออก และสายที่ได้รับ

ตั้งค่าเพิ่มเติม – ให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

ID ผู้โทร: เลือกว่าจะแสดงหมายเลขของคุณเวลาโทรออกหรือไม่

สายเรียกข้อน: หากเปิดใช้สายเรียกข้อนเครื่องจะแจ้งสายเรียกเข้าขณะ กำลังใช้สาย (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

<แบ่งปันและเชื่อมต่อ>

NFC – โทรศัพท์ของคุณสามารถใช้ NFC ได้ NFC (Near Field Communication) คือเทคโนโลยีการเชื่อมต่อไร้สายที่ให้การสื่อสารแบบสองทางระหว่างอุปกรณ์อิเล็กทรอนิกส์ โดยจะทำงานในระยะสองสามเซนติเมตร คุณสามารถแบ่งปันเนื้อหาด้วยแท็ก NFC หรืออุปกรณ์อื่นๆ ที่รองรับ NFC ได้ง่ายๆ เพียงการแตะด้วยอุปกรณ์ของคุณ หากคุณแตะแท็ก NFC กับอุปกรณ์ของคุณ จะแสดงเนื้อหาของแท็กในอุปกรณ์ของคุณ

ในการเปิดหรือปิด NFC: จากหน้าจอหลัก ให้แตะและเลื่อนแถบการแจ้งเตือนด้วยนิ้วของคุณ และเลือกไอคอน NFC เพื่อเปิด

หมายเหตุ: ขณะเปิดใช้งานโหมดเครื่องบินจะสามารถใช้งานแอปพลิเคชัน NFC ได้

การใช้ NFC: ในการใช้ NFC ให้ตรวจสอบให้แน่ใจว่าคุณเปิดอุปกรณ์ของคุณและเปิดใช้งานการตั้งค่า NFC ในกรณีที่ปิดใช้งานเอาไว้

Android Beam – เมื่อเปิดใช้คุณสมบัตินี้ คุณสามารถบีบข้อมูลไปยังอุปกรณ์ที่สามารถใช้ NFC ได้โดยการถืออุปกรณ์ไว้ใกล้ๆ กัน เพียงนำอุปกรณ์เข้าไปใกล้ๆ กัน (หันด้านหลังเข้าหากัน) แล้วแตะหน้าจอของคุณ แอปพลิเคชันจะกำหนดว่ามีอะไรบ้าง

SmartShare Beam – เปิดใช้การรับไฟล์จากโทรศัพท์ของ LG

เซิร์ฟเวอร์มีเดีย– ทำให้สามารถแบ่งปันข้อมูลมีเดียกับอุปกรณ์ใกล้เคียงผ่าน DLNA

Miracast – ด้วย Miracast คุณสามารถคัดลอกหน้าจอโทรศัพท์และเสียงไปยังดอองเกิล LG Miracast หรือทีวีได้

ระบบจัดเก็บข้อมูลไร้สาย – แบ่งปันไฟล์กับคอมพิวเตอร์ผ่าน Wi-Fi

< การปล่อยสัญญาณ & เครือข่าย >

Wi-Fi hotspot – คุณยังสามารถใช้โทรศัพท์เพื่อให้การเชื่อมต่อระบบโมบายล์บรอดแบนด์ได้ด้วย สร้างฮอตสปอตและแบ่งปันการเชื่อมต่อของคุณ โปรดอ่าน "การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์" สำหรับข้อมูลเพิ่มเติม

การปล่อยสัญญาณบลูทูธ – ให้คุณตั้งค่าโทรศัพท์ที่จะแบ่งปันการเชื่อมต่ออินเทอร์เน็ตหรือไม่

ตั้งค่า

ช่วยเหลือ – แตะเพื่อดูข้อความความช่วยเหลือเกี่ยวกับฟังก์ชัน Wi-Fi hotspot และการปล่อยสัญญาณบลูทูธ

โหมดเครื่องบิน – หลังจากสลับไปยังโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

หมายเหตุ: คุณต้องตั้งค่า PIN หรือรหัสผ่านล็อคหน้าจอก่อนที่จะใช้ระบบจัดเก็บข้อมูลรับรองสิทธิ์

เครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล โหมดเครือข่ายและผู้ให้บริการ ข้อจุดเชื่อมต่อ (APN) และอื่นๆ

แอปฯ SMS เริ่มต้น – ให้คุณเปลี่ยนแอปฯ SMS เริ่มต้น

VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

อุปกรณ์

< เสียง >

โปรไฟล์เสียง – เลือกเสียง เฉพาะสั้น หรือเจียบได้

ระดับเสียง – จัดการระดับเสียงของเสียงเรียกเข้าโทรศัพท์ เสียงการแจ้งเตือน การตอบสนองแบบสัมผัสและระบบ เพลง วิดีโอ เกม และมีเดียอื่นๆ

เวลาสงบ – ตั้งค่าเวลาเพื่อปิดเสียงทั้งหมดยกเว้นการปลุกและมีเดีย

เสียงเรียกเข้าโทรศัพท์ – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

สมารทริงโทน – เลือกเพื่อปรับระดับเสียงเรียกเข้าโทรศัพท์อัตโนมัติ เมื่อภายนอกมีเสียงดัง

เสียงพร้อมสั้น - สั้นเมื่อโทรเข้าและมีการแจ้งเตือน

เสียงการแจ้งเตือน – ให้คุณตั้งค่าเสียงการแจ้งเตือนเริ่มต้นของคุณ

การตอบสนองแบบสัมผัสและระบบ – ให้คุณตั้งค่าการตอบสนอง (เสียงและ/หรือการสั่น) ขณะกำลังใช้อุปกรณ์

< หน้าจอ >

ความสว่าง – ปรับความสว่างของหน้าจอ

ใหม่เอาต์หน้าจอ – ตั้งค่าเวลาใหม่เอาต์หน้าจอ

หมุนจออัตโนมัติ – เลือกเพื่อตั้งค่าโทรศัพท์ให้หมุนหน้าจออัตโนมัติตามแนวของโทรศัพท์ (แนวตั้งหรือแนวนอน)

Daydream – แตะสวิตช์ Daydream เพื่อสลับไปมาระหว่างเปิดหรือปิด เมื่อเปิดไว้จะทำให้ภาพฟักหน้าจอปรากฏขึ้นเมื่อโทรศัพท์กำลังพักขณะวางบนแท่นชาร์จและ/หรือกำลังชาร์จ

ชนิดแบบอักษร – เปลี่ยนประเภทของแบบอักษรที่แสดง

ขนาดแบบอักษร – เปลี่ยนขนาดของแบบอักษรที่แสดง

หน้าจออัจฉริยะ – ทำเครื่องหมายเพื่ออนุญาตให้หน้าจอเปิดค้างเมื่อโทรศัพท์ตรวจพบใบหน้าของคุณ

ไฟปุ่มกดด้านหน้า – ตั้งค่าระยะเวลาไฟปุ่มด้านหน้า

แจ้งเรื่องแฟลช – LED การแจ้งเตือนอยู่ด้านซ้ายของกล้องหน้า คุณจะเห็นไฟ LED ขนาดเล็กสว่างเมื่อโทรศัพท์กำลังชาร์จหรือเมื่อคุณได้รับการแจ้งเตือนหากหน้าจอ LCD ปิด คุณสามารถกำหนดการแจ้งเรื่องแฟลชให้

เปิด/ปิดได้ คุณสามารถตั้งค่าตัวเลือกได้หลากหลายจากรายการแจ้งเรื่องแฟลชไอเท็ม

< หน้าจอหลัก >

ตั้งค่า **ธีม**, **พื้นหลัง**, **เอฟเฟกต์หน้าจอ**, **ยอมให้วนลูปหน้าจอหลัก** หรือ **มุมมองแนวตั้งเท่านั้น** เลือกตัวเลือกเพื่อตั้งค่า **การสำรองและคืนค่าหน้าจอหลัก**

< ล็อคหน้าจอ >

เลือกการล็อคหน้าจอ – ตั้งค่าประเภทการล็อคหน้าจอเพื่อให้โทรศัพท์ของคุณปลอดภัย เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ

ตั้งค่า **ไม่มี**, **ลาก**, **ปลดล็อคใบหน้า**, **รูปแบบ**, **PIN** หรือ **รหัสผ่าน**

หากคุณเปิดใช้งานการประเภทการล็อกรูปแบบเมื่อเปิดโทรศัพท์หรือเรียกหน้าจอ คุณจะต้องวาดแบบปลดล็อคเพื่อปลดล็อคหน้าจอ

< Gestures >

ส่ายโทรเข้าที่รออยู่ – พลิกอุปกรณ์เพื่อปิดเสียงสายเรียกเข้า

ตั้งค่า

เลื่อนหรือปิดสัญญาณเตือน – พลิกอุปกรณ์เพื่อเลื่อนหรือปิดสัญญาณเตือน

หยุดวิดีโอชั่วคราว – พลิกอุปกรณ์เพื่อหยุดเล่นวิดีโอชั่วคราว

ช่วยเหลือ – ช่วยเหลือการใช้ฟังก์ชัน Gesture

ปรับแต่งเซนเซอร์การเคลื่อนไหว – ให้คุณปรับปรุงความแม่นยำของการเอียงและความเร็วของเซนเซอร์

< **ที่เก็บข้อมูล** >

ที่เก็บข้อมูลภายใน – ดูการใช้ที่เก็บข้อมูลภายใน

< **แบตเตอรี่** >

ข้อมูลแบตเตอรี่

จะแสดงข้อมูลการชาร์จแบตเตอรี่อยู่บนกราฟิกแบตเตอรี่พร้อมกับเปอร์เซ็นต์ของพลังงานที่เหลือและสถานะ

แตะที่ไอคอนชาร์จแบตเตอรี่เพื่อแสดงหน้าจอการใช้แบตเตอรี่เพื่อดูระดับพลังงานและรายละเอียดการใช้แบตเตอรี่ หน้าที่นี้จะแสดงส่วนประกอบและแอปพลิเคชันที่ก่้างใช้พลังงานแบตเตอรี่มากที่สุด และหนึ่งในรายการเพื่อดูข้อมูลอย่างละเอียด

เปอร์เซ็นต์แบตเตอรี่บนแถบสถานะ – เลือกเพื่อแสดงเปอร์เซ็นต์ระดับแบตเตอรี่บนแถบสถานะด้านข้างไอคอนแบตเตอรี่

ประหยัดพลังงาน

แตะสวิตช์ประหยัดพลังงานเพื่อสลับเปิดหรือปิด แตะประหยัดพลังงานเพื่อเข้าถึงการตั้งค่าต่อไปนี้:

ประหยัดพลังงาน – ตั้งค่าเปอร์เซ็นต์ระดับแบตเตอรี่ที่จะให้เปิดการประหยัดพลังงานโดยอัตโนมัติ

โหมด Eco – ตั้งโหมด Eco เพื่อยืดอายุแบตเตอรี่ ด้วยการปรับแต่งนโยบายการควบคุม CPU แบบไดนามิก

วิธีใช้ – แตะเพื่อดูข้อมูลวิธีใช้เกี่ยวกับเทคนิคการประหยัดพลังงาน

< **แอปฯ** >

ดูและจัดการแอปพลิเคชันของคุณ

< แตะและชำระเงิน >

เมื่อ NFC เปิดอยู่ คุณจะสามารถใช้คุณสมบัติแตะและชำระเงินค่าสินค้าต่างๆ เพียง

แตะโทรศัพท์ของคุณเข้ากับเครื่องอ่านที่จุดชำระเงิน ถ้าอุปกรณ์ของคุณไม่มีแอปฯ เริ่มต้น

คุณสามารถหาแอปฯ การชำระเงินอื่นๆ ได้ใน Google Play

ส่วนตัว

< แอคเคาท์และการซิงค์ >

อนุญาตให้แอปพลิเคชันซิงโครไนซ์ข้อมูลในแบ็คกราวด์ ไม่ว่าคุณจะกำลังใช้งานข้อมูลอยู่หรือไม่ก็ตาม การไม่เลือกการตั้งค่านี้สามารถประหยัดไฟ แบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล

< คลาวด์ >

เพิ่มบัญชีคลาวด์เพื่อใช้บริการคลาวด์ได้รวดเร็วและง่ายดายใน LG แอปพลิเคชัน

< ตำแหน่ง >

เปิดใช้บริการตำแหน่ง โทรศัพท์ของคุณจะหาตำแหน่งโดยประมาณด้วย GPS, Wi-Fi และเครือข่ายโทรศัพท์มือถือ

โหมด – ตั้งโหมดตำแหน่งตั้งแต่ ความเที่ยงตรงสูง, ประหยัดแบตเตอรี่ และ เซนเซอร์อุปกรณ์เท่านั้น

< ระบบป้องกัน >

เข้ารหัสโทรศัพท์ – ให้คุณเข้ารหัสข้อมูลในโทรศัพท์เพื่อความปลอดภัย คุณจะต้องป้อน PIN หรือรหัสผ่านเพื่อถอดรหัสโทรศัพท์ในแต่ละครั้งที่คุณเปิดใช้การเข้ารหัส

ตั้งค่าล็อกซิมการ์ด – ตั้งค่าล็อกการ์ด Micro-USIM หรือเปลี่ยน PIN ของการ์ด Micro-USIM

ป้อนรหัสผ่านแบบมองเห็น – แสดงตัวอักษรสุดท้ายของรหัสผ่านที่ถูกซ่อนเมื่อคุณพิมพ์

ตั้งค่า

โปรแกรมควบคุมอุปกรณ์ – ดูหรือปิดการใช้งานผู้ดูแลอุปกรณ์
แหล่งที่มาที่ไม่รู้จัก – ตั้งค่าเริ่มต้นเพื่อติดตั้งแอปพลิเคชันที่ไม่ได้มาจาก Market

ยืนยันแอปฯ – ไม่อนุญาตหรือเตือนก่อนติดตั้งแอปฯ ที่อาจก่อกวนรายการ
การเข้าถึงการแจ้งเตือน – แสดงการแจ้งเตือน

ประเภทที่จัดเก็บ – แสดงประเภทของอุปกรณ์จัดเก็บข้อมูล

การรับรองสิทธิ์ที่ไว้วางใจได้ – แสดงการรับรองสิทธิ์ CA ที่เชื่อถือได้
ติดตั้งจากที่จัดเก็บข้อมูล – เลือกติดตั้งใบรับรองที่เข้ารหัส
ลบจัดเก็บข้อมูล – ลบใบรับรองทั้งหมด

< ภาษาและการป้อนข้อมูล >

ใช้การตั้งค่า ภาษาและการป้อนข้อมูล เพื่อเลือกภาษาสำหรับข้อความในโทรศัพท์ และเพื่อกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

< แบ็คอัพและรีเซ็ท >

เปลี่ยนการตั้งค่าสำหรับการจัดการการตั้งค่าและข้อมูลของคุณ

สำรองข้อมูลของฉัน – ตั้งค่าเพื่อสำรองข้อมูลการตั้งค่าและแอปพลิเคชันของคุณลงบนเซิร์ฟเวอร์ของ Google

บัญชีข้อมูลสำรอง – ตั้งค่าเพื่อสำรองข้อมูลแอดเดสส์ของคุณ

เรียกคืนอัตโนมัติ – ตั้งค่าให้ทำการเรียกคืนข้อมูลการตั้งค่าและแอปพลิเคชันของคุณ เมื่อมีการติดตั้งแอปพลิเคชันซ้ำบนอุปกรณ์ของคุณ

บริการ LG Backup – สำรองข้อมูลทั้งหมดในอุปกรณ์และเรียกคืนข้อมูลในกรณีที่ข้อมูลสูญหายหรือเปลี่ยนเครื่อง

รีเซ็ตข้อมูลจากโรงงาน – รีเซ็ตการตั้งค่าของคุณกลับไปเป็นค่าเริ่มต้นจากโรงงาน และลบข้อมูลทั้งหมดของคุณ หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

ระบบ

< วันที่และเวลา >

ใช้การตั้งค่า วันที่และเวลา เพื่อตั้งค่าการแสดงวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้เพื่อตั้งค่าเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์มือถือได้

< การช่วยสำหรับการเข้าถึง >

ใช้การตั้งค่า การช่วยสำหรับการเข้าถึง เพื่อกำหนดค่าปลั๊กอินช่วยเหลือสำหรับการเข้าถึงที่คุณติดตั้งในโทรศัพท์

หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติมเพื่อให้สามารถเลือกได้

< การเชื่อมต่อ PC >

เลือกวิธีเชื่อมต่อแบบ USB – ตั้งค่าโหมดที่ต้องการ: **ชาร์จโทรศัพท์, ซิงค์มีเดีย (MTP), การปล่อยสัญญาณ, LG ซอร์ฟแวร์ หรือ ส่งรูปภาพ (PTP)**

ถามเมื่อทำการเชื่อมต่อ – ถามในโหมดเชื่อมต่อ USB เมื่อเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

ช่วยเหลือ – ช่วยเหลือในการเชื่อมต่อ USB

PC Suite – เลือกตัวเลือกนี้เพื่อใช้ LG PC Suite กับการเชื่อมต่อ Wi-Fi โปรดอย่าลืมว่าเครือข่าย Wi-Fi ควรเชื่อมต่อกับ LG PC Suite ด้วยการเชื่อมต่อ Wi-Fi ผ่านตั้งค่าการเชื่อมต่อ

ช่วยเหลือ – ช่วยเหลือเกี่ยวกับ LG ซอร์ฟแวร์

< การพิมพ์ >

ทำให้คุณสามารถพิมพ์เนื้อหาจากบางหน้าจอ (เช่น จากเว็บเพจที่แสดงใน Chrome) ไปยังเครื่องพิมพ์ที่เชื่อมต่ออยู่บนเครือข่าย Wi-Fi เดียวกันกับอุปกรณ์ Android ของคุณ

< เกี่ยวกับโทรศัพท์ >

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์ของคุณ

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ ผ่านสายเคเบิลการสื่อสารข้อมูล USB และ Wi-Fi เมื่อเชื่อมต่อแล้วคุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

ด้วยซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" คุณสามารถ...

- จัดการและเล่นเนื้อหาที่มีเดียของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาที่มีเดียไปยังอุปกรณ์ของคุณ
- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุคมาค์) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ
- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองข้อมูลและเรียกคืนอุปกรณ์ของคุณ
- เล่นเนื้อหาที่มีเดียในคอมพิวเตอร์ของคุณจากอุปกรณ์ของคุณ
- สำรองและสร้างและแก้ไขบันทึกในอุปกรณ์ของคุณ

หมายเหตุ: คุณสามารถใช้เมนู ช่วยเหลือ จากแอปพลิเคชันเพื่อค้นหารายการใช้งานซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" ของคุณได้

การติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" สามารถดาวน์โหลดได้จากเว็บเพจของ LG

- 1 ไปที่ www.lg.com และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ **บริการ > บริการโทรศัพท์มือถือ > โทรศัพท์มือถือ LG > เลือกรุ่น**
หรือ
ไปที่ **บริการ > มือถือ > เลือกรุ่น**
- 3 คลิก **PC SYNC** จาก **คู่มือและการดาวน์โหลด** จากนั้นคลิก **ดาวน์โหลด** เพื่อดาวน์โหลดซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ข้อกำหนดของระบบสำหรับ "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: โปรเซสเซอร์ 1 GHz หรือสูงกว่า

- หน่วยความจำ: 512 MB RAM หรือสูงกว่า
- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 500 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น โดยขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG, Windows Media Player 10 หรือใหม่กว่า

หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

ไดรเวอร์ USB ในตัวของ LG จำเป็นในการเชื่อมต่ออุปกรณ์ LG และคอมพิวเตอร์ และไดรเวอร์จะถูกติดตั้งโดยอัตโนมัติ เมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

การซิงโครไนซ์อุปกรณ์ของคุณกับคอมพิวเตอร์

ข้อมูลจากอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ง่ายๆ ด้วยซอฟต์แวร์ "LG PC Suite" เพื่อความสะดวกของคุณ รายชื่อ กำหนดการ และบุคมาร์คสามารถซิงโครไนซ์ได้

ขั้นตอนจะมีดังต่อไปนี้:

- 1 เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)
- 2 เลือกวิธีเชื่อมต่อแบบ USB จะปรากฏขึ้น แล้วเลือก LG ซอร์ฟแวร์
- 3 หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
- 4 คลิก ข้อมูลส่วนตัว เพื่อเลือก
- 5 ทำเครื่องหมายที่ช่องเนื้อหาเพื่อซิงโครไนซ์ และคลิกที่ปุ่ม ซิงค์

หมายเหตุ: ในการซิงโครไนซ์โทรศัพท์กับคอมพิวเตอร์ คุณต้องติดตั้ง LG PC Suite ลงในคอมพิวเตอร์ โปรดดูหน้าก่อนหน้านี้สำหรับการติดตั้ง LG PC Suite

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

- 1 เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync
- 2 ติดตั้ง "LG PC Suite" ในคอมพิวเตอร์ก่อน เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 บนเมนูบนสุด เลือก โทรศัพท์ > อิมพอร์ต/เอ็กซ์พอร์ตรายชื่อ > **เอ็กซ์พอร์ตไปที่โทรศัพท์ของคุณ**
- 4 หน้าต่างป๊อปอัปเพื่อเลือกประเภทไฟล์และไฟล์ที่จะส่งออกจะปรากฏขึ้น
- 5 บนป๊อปอัป คลิก **เลือกไฟล์** แล้ว Windows Explorer จะปรากฏขึ้น
- 6 เลือกไฟล์รายชื่อที่จะ**เอ็กซ์พอร์ต**ใน Windows Explorer แล้วคลิก **เปิด**
- 7 คลิก **เอ็กซ์พอร์ต**
- 8 ป๊อปอัป **การแมปไฟล์** เพื่อลิงค์รายชื่อในอุปกรณ์ของคุณและข้อมูลรายชื่อใหม่จะปรากฏขึ้น
- 9 หากมีการขัดแย้งระหว่างข้อมูลในรายชื่อ PC และรายชื่ออุปกรณ์ ให้ทำการเลือกหรือแก้ไขที่จำเป็นใน LG PC Suite
- 10 คลิก **ตกลง**

อัปเดตซอฟต์แวร์โทรศัพท์

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือคือ **LG** จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่

<http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษาของคุณ

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่าง

สะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้ได้เมื่อ

LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดต

อย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละ

ขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่าการถอดสายข้อมูล USB ระหว่าง

การอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้น ตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตซอฟต์แวร์ของโทรศัพท์เป็นเวอร์ชันใหม่อย่าง

สะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อโดยใช้สายเคเบิลข้อมูล USB คุณสมบัตินี้

จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

คุณควรตรวจสอบเวอร์ชันของซอฟต์แวร์ในโทรศัพท์มือถือของคุณก่อน: **ตั้งค่า**

> **เกี่ยวกับโทรศัพท์** > **ศูนย์กลางอัปเดต** > **อัปเดตซอฟต์แวร์** > **ตรวจสอบอัปเดตในตอนนี้**

อัปเดตซอฟต์แวร์โทรศัพท์

หมายเหตุ: ข้อมูลส่วนตัวของคุณจากพื้นที่การจัดเก็บภายในโทรศัพท์—รวมถึงข้อมูลเกี่ยวกับบัญชี Google ของคุณและแอคเคาท์อื่นๆ, ข้อมูลระบบหรือแอปพลิเคชันและการตั้งค่าของคุณ, แอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM—อาจสูญหายในกระบวนการอัปเดตซอฟต์แวร์ของโทรศัพท์ ดังนั้น LG ขอแนะนำให้คุณสำรองข้อมูลส่วนตัวก่อนการอัปเดตซอฟต์แวร์ของโทรศัพท์ LG ไม่รับผิดชอบต่อการสูญหายของข้อมูลส่วนตัวใดๆ

หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการเครือข่าย ภูมิภาค และประเทศของคุณ

เกี่ยวกับคู่มือผู้ใช้

เกี่ยวกับคู่มือผู้ใช้

- โปรดอ่านคู่มือนี้โดยละเอียดก่อนการใช้งานอุปกรณ์ เพื่อให้มั่นใจว่าคุณใช้โทรศัพท์ของคุณได้อย่างถูกต้องและปลอดภัย
- ภาพและภาพหน้าจอบางภาพที่มีในคู่มือนี้อาจแตกต่างจากที่แสดงบนโทรศัพท์ของคุณ
- เนื้อหาของคุณอาจแตกต่างจากผลิตภัณฑ์ที่วางจำหน่าย หรือจากซอฟต์แวร์ที่มาจากผู้ให้บริการหรือเครือข่าย เนื้อหานี้อาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า สำหรับเวอร์ชันล่าสุดของคู่มือนี้ โปรดดูที่เว็บไซต์ LG ที่ www.lg.com
- แอปพลิเคชันและฟังก์ชันของโทรศัพท์อาจแตกต่างกันตามประเทศ ภูมิภาค หรือขอมูลจำเพาะของฮาร์ดแวร์ LG ไม่รับผิดชอบต่อปัญหาด้านประสิทธิภาพที่เกิดจากการใช้แอปพลิเคชันที่พัฒนาขึ้นโดยผู้ให้บริการอื่นที่ไม่ใช่ LG
- LG ไม่รับผิดชอบต่อปัญหาด้านประสิทธิภาพหรือการไม่สามารถใช้งานร่วมกันได้ที่เกิดจากการแก้ไขการตั้งค่าริจิสทรี หรือการแก้ไขซอฟต์แวร์ระบบการปฏิบัติการ ความพยายามในการปรับแต่งระบบปฏิบัติการอาจทำให้อุปกรณ์หรือแอปพลิเคชันของอุปกรณ์ทำงานผิดปกติ
- ซอฟต์แวร์, เสียง, ฟันหลัง, ภาพ และมีเดียที่มีมาให้พร้อมอุปกรณ์ได้รับอนุญาตเพื่อการใช้งานที่จำกัด หากคุณจัดเก็บข้อมูลและใช้ข้อมูลเหล่านี้เพื่อการพาณิชย์หรือวัตถุประสงค์อื่น ๆ คุณอาจละเมิดกฎหมายลิขสิทธิ์ ในฐานะผู้ใช้งาน คุณมีส่วนรับผิดชอบอย่างสมบูรณ์สำหรับการใช้มีเดียอย่างผิดกฎหมาย
- อาจมีค่าใช้จ่ายเพิ่มเติมสำหรับบริการข้อมูล เช่น ข้อความ, การอัปโหลดและดาวน์โหลด, ซิงค์อัตโนมัติ หรือการใช้บริการระบุพิกัด เพื่อหลีกเลี่ยงค่าใช้จ่ายเพิ่มเติม ให้เลือกแผนบริการข้อมูลที่เหมาะสมกับความต้องการของคุณ ติดต่อผู้ให้บริการของคุณเพื่อรับรายละเอียดเพิ่มเติม

เครื่องหมายการค้า

- LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Electronics

เกี่ยวกับคู่มือผู้ใช้

- เครื่องหมายการค้าและลิขสิทธิ์อื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ

DivX HD

เกี่ยวกับวิดีโอ DivX: DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ว่าจะสามารถเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ divx.com

เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณ ไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

DivX Certified® สำหรับเล่นวิดีโอ DivX® ไม่เกิน HD 720p รวมถึงเนื้อหาฟรีเมียม

DivX®, DivX Certified® และโลโก้ที่เกี่ยวข้องเป็นเครื่องหมายการค้าของ Rovi Corporation หรือบริษัทในเครือ และใช้ภายใต้ใบอนุญาต

Dolby Mobile DOLBY DIGITAL PLUS

ผลิตภายใต้การอนุญาตของ Dolby Laboratories Dolby และสัญลักษณ์ตัวอักษร D สองตัว เป็นเครื่องหมายการค้าของ Dolby Laboratories

ประกาศ: ซอฟต์แวร์โอเพ่นซอร์ส

ในการขอรหัสซอร์สโค้ดที่เกี่ยวข้องตาม GPL, LGPL, MPL และและใบอนุญาตโอเพ่นซอร์สอื่นๆ โปรดไปที่ <http://opensource.lge.com/>
เงื่อนไขใบอนุญาต การปฏิเสธการรับผิดชอบ และประกาศที่อ้างอิงถึงทั้งหมดสามารถดาวน์โหลดได้พร้อมซอร์สโค้ด

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ของคุณ (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อะแดปเตอร์
สำหรับชาร์จ
แบตเตอรี่



ชุดหูฟัง
สเตอริโอ



คู่มือแนะนำ
อย่างย่อ



สายเคเบิล
ข้อมูล



เครื่องมือถอด
Micro-USIM



ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงบุดโคล เขตธนบุรี

กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-เสาร์, 08:00 - 18:00น.

Call center : 0-2878-5757

หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบเมื่อใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาด Micro-USIM	ไม่ได้ใส่ Micro-USIM การ์ดในโทรศัพท์ หรือใส่ไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ Micro-USIM การตอย่างถูกต้อง
ไม่มีการเชื่อมต่อ กับเครือข่าย/ เครือข่ายขาดหาย	สัญญาณอ่อน หรือคุณอยู่นอกเครือข่าย ชายผู้ให้บริการ	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่ เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับ ผู้ให้บริการเครือข่าย
	ผู้ให้บริการใช้ บริการใหม่	ตรวจสอบว่าการ์ด Micro-USIM ใช้งานมานานกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยน Micro-USIM ของคุณที่สาขาผู้ให้ บริการเครือข่ายใกล้บ้าน โปรดติดต่อติดต่อผู้ให้บริการ
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่ โดยป้อนรหัสใหม่ซ้ำ	หากคุณลืมรหัส โปรดติดต่อผู้ให้ บริการ
	รหัสที่คุณเอนทั้ง สองครั้งไม่ตรงกัน	
ไม่สามารถ ตั้งค่าแอป พลิเคชัน	ผู้ให้บริการไม่สนับสนุน หรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ


ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต
	มีการใส่ Micro-USIM การ์ดใหม่	ตรวจสอบข้อกำหนดใหม่
	ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดแล้วปล่อยเร็วเกินไป	กดปุ่มเปิด/ปิดอย่างน้อยสองวินาที
	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์กำลังชาร์จบนหน้าจอ
ข้อผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่
	อุณหภูมิภายนอกร้อนหรือเย็นเกินไป	ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จไฟที่อุณหภูมิปกติ
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อของอุปกรณ์ชาร์จกับโทรศัพท์
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น
	อุปกรณ์ชาร์จชำรุด	เปลี่ยนอุปกรณ์ชาร์จ
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่อนุญาตให้ใช้ตัวเลข	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบเมนูตั้งค่าและปิดฟังก์ชันดังกล่าว
ไม่สามารถรับ / ส่ง SMS และรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความบางข้อความออกจากโทรศัพท์
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่สนับสนุน
หน้าจอไม่ทำงานเมื่อจันรับสาย	เซนเซอร์หน้าจอมีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์หน้าจอสะอาด
ไม่มีเสียง	โหมดสัน	ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดสันหรือโหมดปิดเสียง
โทรศัพท์ค้างหรือไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ลองใช้งานการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์



คำถามที่พบบ่อย

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

ชนิด ชนิดย่อย	คำถาม	คำตอบ
BT Bluetooth อุปกรณ์	ฟังก์ชันที่ใช้ได้ผ่าน Bluetooth มีอะไรบ้าง?	คุณสามารถเชื่อมต่ออุปกรณ์เสียง Bluetooth เช่น ชุดหูฟังสเตอริโอ/โมโน หรือชุดติดรถยนต์เพื่อแบ่งปันรูปภาพ วิดีโอ รายชื่อ ฯลฯ ผ่านเมนูคลังภาพ/รายชื่อ และเมื่อเชื่อมต่อ FTP เชื่อมต่อกับ อุปกรณ์ที่ใช้งานร่วมกัน คุณสามารถแบ่ง ปันเนื้อหาที่จัดเก็บในมีเดียที่เก็บข้อมูลได้
BT Bluetooth ชุดหูฟัง	หากฉันเชื่อมต่อชุดหูฟัง Bluetooth ของฉัน ฉัน จะสามารถฟังเพลงผ่าน หูฟังแบบใช้สายขนาด 3.5 มม. ของฉันได้หรือไม่	เมื่อมีการเชื่อมต่อชุดหูฟัง Bluetooth ระบบเสียงทั้งหมดจะถูกเล่นผ่านชุดหูฟัง ดังนั้น คุณจะไม่สามารถฟังเพลงผ่านหูฟัง แบบใช้สายของคุณได้
ข้อมูล รายชื่อ สำรองข้อมูล	ฉันจะสามารถสำรอง ข้อมูลรายชื่อได้อย่างไร	ข้อมูลรายชื่อสามารถซิงโครไนซ์ระหว่าง โทรศัพท์ของคุณกับ Gmail™ ได้
ข้อมูล การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะตั้ง ค่าการซิงค์ทางเดียว กับ Gmail	มีเฉพาะการซิงโครไนซ์สองทางให้ใช้งาน
ข้อมูล การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะซิง โครไนซ์ไฟล์เดอริอีเมล ทั้งหมด	ถาดเข้าจะซิงโครไนซ์โดยอัตโนมัติ คุณสามารถดูไฟล์เดอริอื่น ได้โดยการแตะ ปุ่มเมนู  แล้วเลือก ไฟล์เดอริ เพื่อเลือกไฟล์เดอริ


คำถามที่พบบ่อย

ชนิด ชนิดย่อย	คำถาม	คำตอบ
บริการของ Google™ ล็อกอิน Gmail	ฉันต้องล็อกอิน Gmail เมื่อต้องการเข้าถึง Gmail หรือไม่	เมื่อคุณล็อกอิน Gmail แล้ว คุณไม่จำเป็นต้องล็อกอิน Gmail อีก
บริการของ Google™ บัญชี Google	เป็นไปได้หรือไม่ที่จะ ฟیلเตอร์อีเมล	ไม่ได้ ไม่สนับสนุนการฟیلเตอร์อีเมลผ่าน โทรศัพท์
ฟังก์ชันโทรศัพท์ อีเมล	จะเกิดอะไรขึ้นเมื่อฉันใช้ งานแอปพลิเคชันอื่น ขณะเขียนอีเมล	อีเมลของคุณจะถูกบันทึกเป็นร่างโดย อัตโนมัติ
ฟังก์ชันโทรศัพท์ เสียงเรียกเข้า	มีการจำกัดขนาดไฟล์ หรือไม่เมื่อฉันใช้ ไฟล์ .MP3 เป็นเสียงเรียกเข้า	ไม่มีการจำกัดขนาดไฟล์
ฟังก์ชันโทรศัพท์ เวลาข้อความ	โทรศัพท์ของฉันไม่ แสดงเวลาที่ได้รับขอ ความที่เกิน 24 ชั่วโมงได้ ฉันจะเปลี่ยน แปลงส่วนนี้อย่างไร	คุณสามารถดูได้เฉพาะเวลาข้อความ ที่ได้รับในวันเดียวกันเท่านั้น
ฟังก์ชันโทรศัพท์ การนำทาง	เป็นไปได้หรือไม่ที่จะติด ตั้งแอปพลิเคชันการนำ ทางอื่นในโทรศัพท์ ของฉัน	แอปพลิเคชันที่มีอยู่ที่ Android Market™ และใช้งานร่วมกับฮาร์ดแวร์ได้สามารถ ติดตั้งและใช้งานได้
ฟังก์ชันโทรศัพท์ การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะ ซิงโครไนซ์รายชื่อจาก แอคเคาท์อีเมลทั้งหมด ของฉัน	สามารถซิงโครไนซ์ได้เฉพาะรายชื่อของ Gmail และเซิร์ฟเวอร์ MS Exchange (เซิร์ฟเวอร์อีเมลของบริษัท) เท่านั้น

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ รอและหยุดชั่วคราว	เป็นไปได้หรือไม่ที่ จะบันทึกสายข้อด้วยรอ คอยและหยุดพักใน รูปแบบหมายเลข	<p>หากคุณโอนสายข้อด้วยฟังก์ชัน W & P เป็นหมายเลข คุณจะไม่สามารถใช้คุณสมบัตินี้ได้อีก คุณจะต้องบันทึกแต่ละหมายเลขใหม่อีกครั้ง</p> <p>วิธีการบันทึกด้วยรอและหยุดชั่วคราว:</p> <ol style="list-style-type: none"> 1. จากหน้าจอหลัก ให้แตะไอคอน โทรศัพท์  2. กดหมายเลขโทรศัพท์ และแตะ ปุ่มเมนู  3. แตะ การเพิ่มหยุดชั่วคราว 2 วินาที หรือ เพิ่มการรอ
ฟังก์ชันโทรศัพท์ ระบบป้องกัน	ฟังก์ชันระบบป้องกันของ โทรศัพท์มีอะไรบ้าง	คุณสามารถตั้งค่าโทรศัพท์ให้ต้องป้อน แบบปลดล็อคก่อนที่จะเข้าใช้หรือใช้งาน โทรศัพท์ได้

คำถามที่พบบ่อย


ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ ปลดล็อคแบบ	ฉันจะสร้างแบบปลด ล็อคได้อย่างไร	<ol style="list-style-type: none">1. จากหน้าจอหลัก ให้แตะ ปุ่มเมนู ☰2. แตะ การตั้งค่าระบบ > ล็อคหน้าจอ3. แตะ เลือกแบบล็อคหน้าจอ > รูป แบบ ในครั้งแรก จะมีการแสดงบท ช่วยสอนสั้นๆ เกี่ยวกับการสร้างแบบ ปลดล็อค4. ตั้งค่าโดยการวาดแบบของคุณหนึ่ง ครั้ง และอีกครั้งเพื่อยืนยัน <p>ข้อควรระวังเมื่อใช้ล็อคแบบ สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้ง ไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสเพียงห้าครั้งในการป้อน แบบการปลดล็อค PIN หรือรหัสผ่านของ คุณ หากคุณทำการป้อนทั้งหมด 5 ครั้ง แล้ว คุณสามารถลองใหม่ได้อีกครั้งหลัง จากผ่านไป 30 วินาที (หรือหากคุณ ตั้งค่าแป้นคีย์ PIN ไว้แล้ว คุณสามารถ ใช้รหัสแป้นคีย์ PIN เพื่อปลดล็อคแบบได้)</p>

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ แบบปลดล็อค	ฉันควรทำอย่างไรหาก ฉันลืมแบบปลดล็อคและ ไม่ได้สร้างบัญชี Google ในโทรศัพท์	<p>หากคุณลืมแบบของคุณ: หากคุณเลือกอินบัญชี Google ในโทรศัพท์ แต่ป้อนแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้น คุณจะตอลงชื่อเขา ใ้ด้วยบัญชี Google ของคุณเพื่อปลด ล็อคโทรศัพท์ หากคุณไม่ได้สร้างบัญชี Google บนโทรศัพท์ หรือคุณลืมแอคเคาท์ คุณต้องทำการ Hard Reset ขอควรระวัง: หากคุณทำการรีเซ็ตค่าจาก โรงงาน ข้อมูลแอปพลิเคชันผู้ใช้ และขอ มูลผู้ใช้ทั้งหมดจะถูกลบ โปรดอย่าลืมสำ รองข้อมูลสำคัญไว้ก่อนทำการรีเซ็ตค่า จากโรงงาน</p>
ฟังก์ชันโทรศัพท์ หน่วยความจำ	ฉันจะรู้ว่าหน่วยความจำ เต็มไดหรือไม่	ได้ คุณจะได้รับการแจ้งเตือน
ฟังก์ชันโทรศัพท์ การสนับสนุนภาษา	เป็นไปได้หรือไม่ที่จะ เปลี่ยนภาษาของ โทรศัพท์ของฉัน	<p>โทรศัพท์มีความสามารถหลายภาษา การเปลี่ยนภาษา:</p> <ol style="list-style-type: none"> 1. จากหน้าจอหลัก ให้แตะ ปุ่มเมนู  และแตะ การตั้งค่าระบบ 2. แตะ ภาษาและการป้อนข้อมูล > เลือกภาษา 3. แตะภาษาที่ต้องการ
ฟังก์ชันโทรศัพท์ VPN	ฉันจะตั้งค่า VPN ได้ อย่างไร	<p>การกำหนดค่าการเข้าถึง VPN จะ แตกต่างกันสำหรับแต่ละบริษัท ในการกำหนดค่าการเข้าถึง VPN จากโทรศัพท์ของคุณ คุณต้องมีราย ละเอียดจากผู้ดูแลระบบเครือข่ายของ บริษัทของคุณ</p>

คำถามที่พบบ่อย

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ ระยะเวลาหน้าจอ	หน้าจอของฉันปิดหลังจากเพียงแค่ว่า 15 วินาที ฉันจะเปลี่ยนระยะเวลาสำหรับการปิดไฟหน้าจอได้อย่างไร	<ol style="list-style-type: none">1. จากหน้าจอหลัก ให้กด ปุ่มเมนู ☰2. แตะ การตั้งค่าระบบ > หน้าจอ3. ในการตั้งค่าหน้าจอ แตะ โทมเอเดทหน้าจอ4. แตะระยะเวลาหน้าจอไฟหน้าจอที่ต้องการ
ฟังก์ชันโทรศัพท์ Wi-Fi และ เครือข่ายมือถือ	เมื่อใช้ได้ทั้ง Wi-Fi และ เครือข่ายมือถือ โทรศัพท์ของฉันจะใช้บริการใด	เมื่อใช้ข้อมูล โทรศัพท์ของคุณอาจใช้การเชื่อมต่อ Wi-Fi เป็นค่าเริ่มต้น (หากเปิดการเชื่อมต่อ Wi-Fi ในโทรศัพท์) อย่างไรก็ตาม จะไม่มีการแจ้งเตือนเมื่อโทรศัพท์เปลี่ยนจากบริการหนึ่งไปสู่อีกบริการหนึ่ง หากต้องการทราบว่ากำลังใช้การเชื่อมต่อข้อมูลใด ให้ดูไอคอน เครือข่ายมือถือ หรือ Wi-Fi ที่บนสุดของหน้าจอ
ฟังก์ชันโทรศัพท์ หน้าจอหลัก	เป็นไปได้หรือไม่ที่จะลบแอปพลิเคชันออกจากหน้าจอหลัก	ได้ เพียงแตะไอคอนค้างไว้จนกว่าไอคอนถึงขยับปรากฏขึ้นที่บริเวณกลางบนของหน้าจอ จากนั้น ลากไอคอนไปยังถึงขยับโดยไม่ต้องยกนิ้วขึ้น
ฟังก์ชันโทรศัพท์ แอปพลิเคชัน	ฉันดาวน์โหลดแอปพลิเคชันและแอปพลิเคชันนั้นทำให้เกิดข้อผิดพลาดจำนวนมาก ฉันจะลบได้อย่างไร	<ol style="list-style-type: none">1. จากหน้าจอหลัก ให้กด ปุ่มเมนู ☰2. แตะ การตั้งค่าแอปพลิเคชัน > ดาวน์โหลด3. แตะแอปพลิเคชัน แล้วแตะ ถอนการติดตั้ง
ฟังก์ชันโทรศัพท์ อุปกรณ์ชาร์จ	ฉันสามารถชาร์จโทรศัพท์ของฉันโดยใช้สายเคเบิลข้อมูล USB โดยไม่ติดตั้งไดรเวอร์ USB ที่จำเป็นหรือไม่	ได้ โทรศัพท์จะชาร์จไฟจากสายเคเบิล USB ไม่ว่าจะมีการติดตั้งไดรเวอร์ที่จำเป็นหรือไม่

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ การปลุก	ฉันสามารถใช้ไฟล์เพลงของฉันในการปลุกได้หรือไม่	ได้ หลังจากบันทึกไฟล์เพลงเป็นเสียงเรียกเขา คุณจะสามารถนำมาใช้ในการตั้งปลุกได้ 1. แตะที่เพลงในรายการไลบรารีค้างไว้ในเมนูที่เปิดขึ้น ให้แตะ ตั้งค่าเป็นเสียงเรียกเขา 2. ในหน้าจอการตั้งค่านาฬิกาปลุก ให้เลือกเพลงเป็นเสียงเรียกเขา
ฟังก์ชันโทรศัพท์ การปลุก	การปลุกจะส่งเสียงหรือทำงานหรือไม่หากโทรศัพท์ปิดอยู่	ไม่สนับสนุนการทำงานนี้
ฟังก์ชันโทรศัพท์ การปลุก	หากตั้งค่าระดับเสียงดังเรียกเขาของฉันเป็นปิดหรือสั่น ฉันจะได้ยินเสียงปลุกหรือไม่	การปลุกของคุณถูกกำหนดให้ส่งเสียงแม้ในสถานการณ์เหล่านี้
โซลูชันการกู้คืนข้อมูล Hard Reset (รีเซ็ตค่าจากโรงงาน)	ฉันจะทำการรีเซ็ตค่าจากโรงงานได้อย่างไรหากฉันไม่สามารถเขาไปที่เมนูการตั้งค่าของโทรศัพท์ได้	หากโทรศัพท์ของคุณไม่สามารถแก้ไขสู่สภาพเดิมได้ ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่มต้นของโทรศัพท์

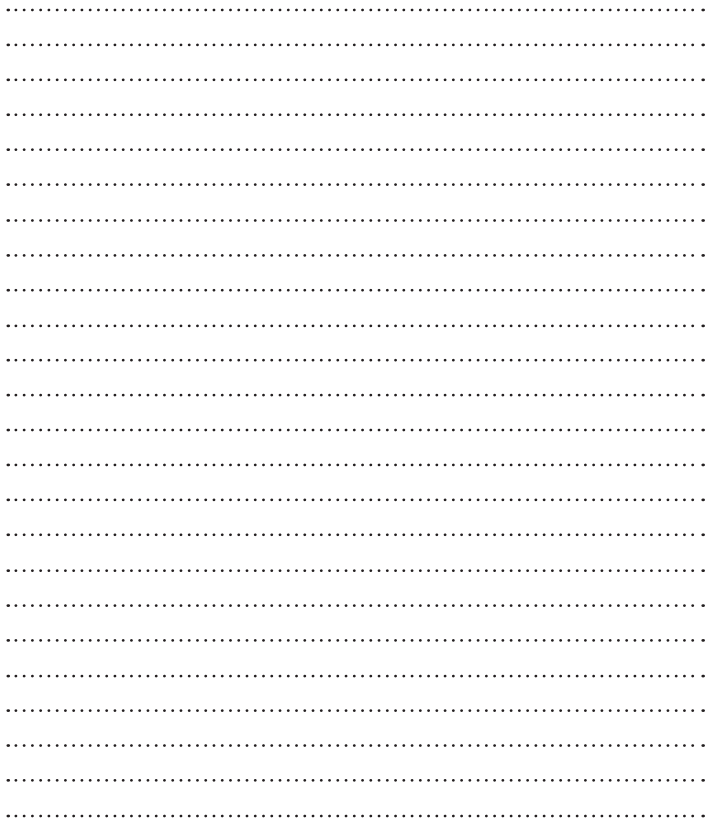

User Guide

- Screen displays and illustrations may differ from those you see on actual phone.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2013 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

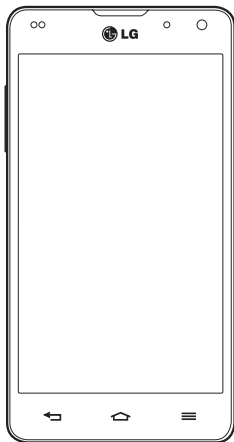


Table of contents

Guidelines for safe and efficient use	5	Calls	36
Important notice	12	Making a call	36
Getting to know your phone	18	Calling your contacts	36
Phone overview	18	Answering and rejecting a call	36
Installing the Micro-USIM card	20	Adjusting the in-call volume.....	37
Charging the phone	21	Making a second call.....	37
Locking and unlocking the screen.....	21	Viewing your call logs	38
Your Home screen	22	Call settings.....	38
Touch Screen tips	22	Contacts	39
Home screen	23	Searching for a contact.....	39
Extended home screen.....	23	Adding a new contact	39
Customizing the Home screen	24	Favorite contacts	39
Returning to recently-used applications...25		Creating a group.....	40
Notifications	25	Messaging	41
Opening the notifications panel.....	26	Sending a message	41
Indicator icons on the Status Bar	26	Threaded box	42
On-screen keyboard	28	Changing your message settings	42
Entering accented letters.....	28	E-mail	43
Google account setup	29	Managing an email account.....	43
Connecting to Networks and Devices	30	Working with account folders.....	43
Wi-Fi	30	Composing and sending email	44
Connecting to Wi-Fi networks	30	Camera	45
Turning Wi-Fi on and connecting to a Wi-Fi network	30	Getting to know the viewfinder	45
Bluetooth.....	31	Using the advanced settings	46
Sharing your phone's data connection ...32		Taking a quick photo	47
Wi-Fi Direct	34	Once you've taken a photo.....	47
PC connections with a USB cable.....	34	From your Gallery	49
		Video camera	50

Getting to know the viewfinder	50
Using the advanced settings	51
Recording a quick video	51
After recording a video	52
Watching your saved videos	52
Adjusting the volume when viewing a video	52
LG Unique Function.....	53
QuickMemo function	53
Using the QuickMemo options	54
Viewing the saved QuickMemo	54
Notebook function	55
Making a note	55
Getting to know the Notebook	55
Bookshelf	55
Pages-Property panels	56
Viewing the saved notebook	56
QuickTranslator	57
Live Zooming function	58
QSlide function	59
Dual Play function.....	59
Mirroring	60
Dual Play.....	60
LG SmartWorld	61
How to Get to LG SmartWorld from Your Phone.....	61
On-Screen Phone	62
On-Screen Phone icons.....	62
On-Screen Phone features	62
How to install On-Screen Phone on your PC.....	63
Multimedia.....	64
Gallery.....	64
Viewing pictures	64
Playing videos	65
Editing photos/videos	65
Deleting images.....	65
Setting as wallpaper	65
Videos	66
Playing a video	66
Video Editor	67
Video Wiz.....	68
Music	70
Playing a song.....	70
Add music files to your phone.....	71
Transfer music using Media sync (MTP).....	72
Utilities	73
Setting your alarm	73
Using your calculator	73
Adding an event to your calendar.....	73
Voice Recorder	74
Recording a sound or voice	74
Sending the voice recording	74
Task Manager.....	75
Tasks.....	75
Polaris Office 4	75
Backup.....	76
About backing up and restoring smart phone data	76
Backup	77
Scheduling backup	77
File restore & management	77

Table of contents

Google+	78	Trademarks	95
Voice Search.....	78	DivX HD	96
Downloads	78	Dolby Mobile.....	96
The Web	79	Accessories.....	97
Internet.....	79	Troubleshooting	98
Using the Web toolbar	79	FAQ	102
Viewing webpages	79		
Opening a page	80		
Searching the web by voice	80		
Bookmarks	80		
History	80		
Using Popup Browser	80		
Chrome	81		
Viewing webpages	81		
Opening a page	81		
Syncing with other devices	81		
Settings	82		
WIRELESS & NETWORKS	82		
DEVICE	85		
PERSONAL.....	88		
SYSTEM.....	89		
PC software (LG PC Suite)	91		
Phone software update	93		
Phone software update	93		
About this user guide	95		
About this user guide.....	95		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-E975 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.426 W/kg (10g) and when worn on the body is 0.398 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Guidelines for safe and efficient use

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
- For your safety, do not remove the battery incorporated in the product.
- Do not replace the battery by yourself. The battery can be damaged, which can cause overheat and injury. The battery must be replaced by the authorized service provider. The battery should be recycled or disposed separately from household waste.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-E975** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

Regulatory and Safety

Go to "**System settings > About phone > Regulatory and Safety**" to get regulatory and safety information

Important notice


Please read this before you start using your phone!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.


2. Optimizing battery life

Extend your battery's life between charges by turning off features that you don't need to having running constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:


- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

To check the battery power level:

- Touch  > **Apps** tab > **Settings** > **About phone** > **Battery**.

The battery status (charging or discharging) and battery level (percentage charged) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- Touch  > **Apps** tab > **Settings** > **About phone** > **Battery** > **Battery use**.

Battery usage time is displayed on the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Before installing an open source application and OS

WARNING


If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, the phone may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

Important notice

4. Using an unlock pattern

Set an unlock pattern to secure your phone. Touch  > **Apps** tab > **Settings** > **Lock screen** > **Select screen lock** > **Pattern**. This opens a screen that will guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure in case you forget your unlock pattern.

Caution: Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.



WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

< If you have forgotten your pattern >

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, press the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

< If you have forgotten your PIN or Password >

If you forget your PIN or Password, you will need to perform a hard reset.

Caution: If you perform a hard reset, all user applications and user data will be deleted.

NOTE: If you have not logged into your Google Account and have forgotten your Unlock Pattern, you will need to enter your Backup PIN.

5. Using the hard reset (Factory reset)

If your phone does not restore to its original condition, use a Hard Reset (Factory Reset) to initialize it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock key + Volume Down key** on the phone.
- 3 Release the **Power/Lock Key** only when the LG logo is displayed, then immediately press and hold the **Power/Lock Key** again.
- 4 Release all keys when the Factory data reset screen is displayed.
- 5 Press the **Volume Key** to scroll to the desired option, then press the **Power/Lock Key** to confirm.



WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.



Factory data reset - Erases all data on the phone, except as follows. In the event of device failure or error, your device may record in an error log information about the device's status at the time of the error event. The information recorded in the error log may include data about application names and usage, cell phone location and number, GPS status, memory usage and other non-personal device status information. This information is stored on your phone, and can only be accessed by LG if the phone is physically returned to LG for repair and service. The error log information is used by LG only to diagnose, repair, and improve LG's products and services.

Important notice


6. Opening and switching applications

Multi-tasking is easy with Android, you can keep more than one application running at the same time. There is no need to quit an application before opening another one. Use and switch between several open applications.

Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

- 1 Press and hold the **Home Key** . A list of recently used applications will be displayed.
 - 2 Tap the application you want to access. This does not stop the previous app running in the background on the phone. Make sure to tap **Back Key**  to exit an app after using it.
- To stop applications, tap **Task Manager** from the recent apps list, then tap Stop or Stop all.
 - To remove an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

7. Transferring music, photos and videos using Media sync (MTP)

- 1 Touch  > **Apps** tab > **Settings** > **Storage** to check out the storage media.
- 2 Connect the phone to your PC using the USB cable.
- 3 **Select USB connection method** will appear on your phone screen, select the **Media sync (MTP)** option.
- 4 Open the memory folder on your PC. You can view the mass storage content on your PC and transfer the files from PC to Device memory folder or vice versa.

8. Hold your phone upright

Hold your cell phone vertically, as you would a regular phone. Your phone has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

When making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

9. When the screen freezes


If the screen freezes or the phone does not respond when you try to operate it:

Press and hold the **Power/Lock** key for 10 seconds to turn your phone off.

If it still does not work, please contact the service center.

Getting to know your phone

Phone overview

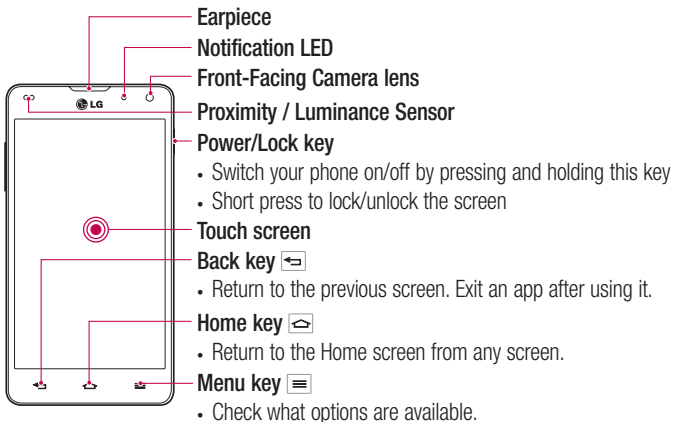


NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.



Volume keys

- **On the Home screen:** Controls ringer volume
- **During a call:** Controls your earpiece volume
- **When playing a track:** Controls volume continuously

TIP! QuickMemo function


Press and hold the Volume Up and Volume Down Keys for one second to use the QuickMemo function.

Power/Lock key

SIM card tray

Earphone Jack

Microphone

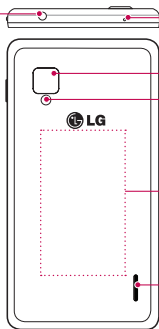

Camera lens Flash

NFC touch point

Speaker

Charger/USB/MHL port

Microphone



WARNING

- This part encloses the battery compartment. Please do not open the back cover.
- Be careful not to damage the NFC touch point on the phone, which is part of the NFC antenna.

Getting to know your phone


Installing the Micro-USIM card

Before you start exploring your new phone, you may choose to insert the Micro-USIM card.

The eject button is a small round aperture just above the tray door. To install a new Micro-USIM card:


- 1 Insert the Micro-USIM ejection tool that comes with the phone (or a thin pin) into the eject button aperture, and push gently but firmly until the tray pops out.
- 2 Remove the tray and place the Micro-USIM card inside it, with the contacts out and the angled corner to the right. There is only one possible way to fit the card snugly into the tray.
- 3 Carefully reposition the tray in the slot and push it gently back into the phone.

NOTE: Make sure the gold contact area on the card is facing downwards.

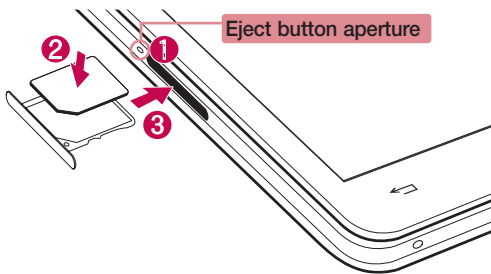

Charging the phone

The charger connector is at the bottom of the phone. Insert one end of the charging cable into the phone and plug the other end into an electrical outlet.

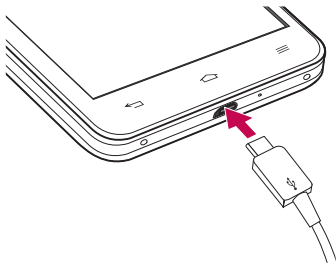


NOTE: The battery must be fully charged initially to improve battery lifetime.

Locking and unlocking the screen

If you do not use the phone for a while, the screen will be automatically turned off and locked. This helps to prevent accidental touches and saves battery power.

When you are not using your phone, press the **Power/Lock key**  to lock your phone.

If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

Your Home screen

Touch Screen tips

Here are some tips on how to navigate on your phone.

Tap or touch – A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold – Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag – Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap – Double-tap to zoom on a webpage or a map. For example, quickly double-tap a section of a webpage to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out after taking a picture (using the Camera), and when using Maps.


Pinch-to-Zoom – Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures.

Rotate the screen – From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

NOTE:

- To select an item, touch the center of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, yet firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home screen

The Home screen is the starting point for many applications and functions, and it allows you to add items like application shortcuts, or Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .



Extended home screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets, and more.

Slide your finger left or right across the Home screen.

Your Home screen

Customizing the Home screen

You can customize your Home screen by adding apps, widgets or changing wallpapers.

To add items on your Home screen:

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you wish to add. You will then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.


TIP! To add an application icon to the Home screen from the Apps menu, touch and hold the application you want to add.

To remove an item from the Home screen:


- **Home screen** > touch and hold the icon you want to remove > drag it to 

TIP! Using folders



You can combine several app icons in a folder. Drop one app icon over another one on a Home screen, and the two icons will be combined.

NOTE:  Apps key cannot be removed.

To customize apps icons on the Home screen

- 1 Touch and hold an application icon until it is unlocked from its current position. Then drop it on the screen.
The editing icon  will appear in the upper right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

Returning to recently-used applications

- 1 Touch and hold the **Home key** . The screen displays a pop-up containing the icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back key**  to return to your previous screen.


Notifications

Notifications alert you to the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as when you are on a call.

From the notifications panel, you can view your phone's current status and pending notifications.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons showing things like Wi-Fi or battery strength on the right.


NOTE: The available options may vary depending on the region or service provider.

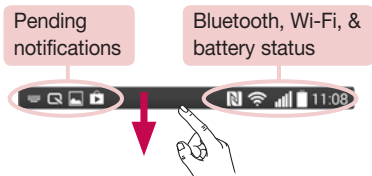



Your Home screen

Opening the notifications panel

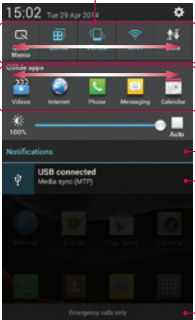Swipe down from the status bar to open the notifications panel.



Quick Toggle Area
Tap each quick toggle key to turn it on/off. Touch and hold the key to access the settings menu of the function. To see more toggle keys, swipe left or right. Tap  to remove, add, or rearrange toggle keys.

QSlide Apps
Tap a QSlide app to open as a small window on your screen. Tap  to remove, add, or rearrange QSlide apps.

Notifications
The current notifications are listed, each with a brief description. Tap a notification to view it.
To close the notifications panel, touch and drag the tab toward the top of the screen.





























Indicator icons on the Status Bar

Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description	Icon	Description
	No Micro-USIM card		Vibrate mode

	No signal		Battery fully charged
	Airplane mode		Battery is charging
	Connected to a Wi-Fi network		Downloading data
	Wired headset		Uploading data
	Call in progress		GPS is acquiring
	Call hold		Receiving location data from GPS
	Missed call		Data is syncing
	Bluetooth is on		New Gmail
	System warning		New Google Talk message
	Alarm is set		New message
	New voicemail		Song is playing
	Ringer is silenced		Phone is connected to PC via USB cable or USB tethering is active
	NFC is on		Portable Wi-Fi hotspot is active
	P2P is on		Both USB tethering and portable hotspot are active

Your Home screen

NOTE: The icons location in the status bar may differ according to the function or service.

On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalize the next letter you type. Double-tap for all caps.

 Tap to switch to the numbers and symbols keyboard.

 Tap to enter a space.

 Tap to create a new line

 Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account setup


When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set-up screen.

OR

- Touch  > **Apps** tab > select a Google application, such as **Gmail** > select **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch .

Once you have set up your Google account on your phone, your phone automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your phone. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi


With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or ‘hotspot’. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them. Turn off Wi-Fi when you’re not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or have set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi**.
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap the Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The status bar displays icons that indicate Wi-Fi status.

Bluetooth


You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones.

NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Touch  > **Apps** tab > **Settings** > set **Bluetooth** to **ON**.
- 2 Tap the **Bluetooth** menu again. You will see the option to make your phone visible and option to search devices Now tap **Search for devices** to view the devices in the bluetooth Range.
- 3 Choose the device you want to pair with from the list.

Once the pairing is successful, your device will connect to the device.

NOTE: Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you will be asked to enter it.

Connecting to Networks and Devices

Send data using the Bluetooth wireless feature


- 1 Select a file or item, such as a contact, calendar event, or media file, from an appropriate application or from **Downloads**.
- 2 Select the option for sending data via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

- 3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth wireless feature

- 1 Touch  > **Apps** tab > **Settings** > set **Bluetooth** to **ON**
- 2 Tap the **Bluetooth** menu again and mark the checkbox at the top of the screen to make your phone visible to other devices.

NOTE: To select the length of time that your device will be visible, touch  > **Visibility timeout**.

- 3 Select **Pair** to confirm that you are willing to receive data from the device.

Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than one device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.


To change Portable Wi-Fi hotspot settings:

- 1 Touch  > **Apps** tab > **Settings** > **Tethering & networks** > **Wi-Fi hotspot** switch to activate.
- 2 Enter a password and tap **Save**.

TIP! If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you will not usually need to prepare your computer for tethering. But, if you are running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 Touch  > **Apps** tab > **Settings** > **Tethering & networks** > **Wi-Fi hotspot**.
- 2 Touch **Set up Wi-Fi hotspot**.
 - The **Set up Wi-Fi hotspot** dialogue box will open.
 - You can change the **Network SSID** (name) that other computers see when scanning for Wi-Fi networks.
 - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Set up Wi-Fi hotspot** dialogue box. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.
- 3 Tap **Save**.

Connecting to Networks and Devices

ATTENTION! If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges may be incurred. To avoid unauthorized usage, you are advised to keep the security option active.

Wi-Fi Direct

Wi-Fi Direct supports a direct connection between Wi-Fi enabled devices without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature. Check your Wi-Fi & Wi-Fi Directed network in advance and make sure the users are connected to the same network.

PC connections with a USB cable

Learn to connect your device to a PC with a USB cable in USB connection modes.

Transferring music, photos and videos using the USB mass storage mode

- 1 Connect your phone to a PC using a USB cable.
- 2 If you haven't installed the LG Android Platform Driver on your PC, you will need to manually change the settings. Choose **System settings > PC connection > USB connection method**, then select **Media sync (MTP)**.
- 3 You can now view the mass storage content on your PC and transfer the files.

Synchronize with Windows Media Player

Ensure that Windows Media Player is installed on your PC.





- 1 Use the USB cable to connect the phone to a PC on which Windows Media Player has been installed.
 - 2 Select the **Media sync (MTP)** option. When connected, a pop-up window will appear on the PC.
 - 3 Open Windows Media Player to synchronize music files.
 - 4 Edit or enter your device's name in the pop-up window (if necessary).
 - 5 Select and drag the music files you want to the sync list.
 - 6 Start synchronization.
- The following requirements must be satisfied to synchronize with Windows Media Player.


Items	Requirement
OS	Microsoft Windows XP SP2, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

- If the Windows Media Player version is lower than 10, install version 10 or higher.



Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search contacts**.
- 3 In the list, touch the contact twice or touch the  you want to call.

Answering and rejecting a call

When you receive a call in Lock state, swipe the  in any direction to Answer the incoming call.

Swipe the  in any direction to Decline an incoming call.

Hold and slide the **Decline with message** icon from the bottom if you want to send a message.






TIP! Decline with message

You can send a message quickly using this function. This is useful if you need to reject a call with message during a meeting.

Adjusting the in-call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

Making a second call

- 1 During your first call, touch **Menu** > **Add call** and dial the number. You can also go to the recently dialed numbers list by touching  or can search contacts by touching  and selecting the contact you want to call.
- 2 Touch  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge calls** to start a conference call.
- 5 To end active calls, touch **End** or touch the **Home** key and slide the notification bar down and select the **End call** icon .


NOTE: You are charged for each call you make.

Calls

Viewing your call logs



On the Home screen, touch  and choose the **Call logs** tab . View a complete list of all dialled, received and missed calls.

TIP! Touch any call log entry to view the date, time and duration of the call.

TIP! Touch the **Menu** key , then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding, as well as other special features offered by your carrier.


- 1 On the Home screen, touch .
- 2 Touch .
- 3 Tap **Call settings** and choose the options that you wish to adjust.

Contacts




Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

On the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search contacts** and enter the contact name using the keyboard.


Adding a new contact

- 1 Touch , enter the new contact's number, then touch the **Menu key** . Touch **Add to Contacts > Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.

Favorite contacts



You can classify frequently called contacts as favorites.

Adding a contact to your favorites



- 1 Touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star will turn yellow color.

Contacts

Removing a contact from your favorites list

- 1 Touch  to open your contacts.
- 2 Touch the , and choose a contact to view its details.
- 3 Touch the yellow color star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

Creating a group



- 1 Touch  to open your contacts.
- 2 Touch **Groups** and touch the **Menu key** . Select **New group**.
- 3 Enter a name for the new group. You can also set a ringtone for the newly created group.
- 4 Touch **Save** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.


Messaging


Your phone combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message


- 1 Touch  on the Home screen and touch  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts will appear. You can touch a suggested recipient. You can add more than one contact.


NOTE: You will be charged for a text message for every person to whom you send the message.

- 3 Touch the **Enter message** field and begin composing your message.
- 4 Touch  to open the Options menu. Choose from **Quick message**, **Insert smiley**, **Schedule sending**, **Add subject**, and **Discard**.

TIP! You can touch the  icon to attach the file you want to share to your message.

- 5 Touch **Send** to send your message.
- 6 Responses will appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country, depending on the language and how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.


Messaging

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Changing your message settings

Your phone message settings are pre-defined, so you can send messages immediately. You can change the settings according to your preferences.

- Touch the **Messaging** icon on the Home screen, touch  and then tap **Settings**.

E-mail

You can use the E-mail application to read emails from services like Gmail. The E-mail application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide you with the account settings you need.

Managing an email account

The first time you open the **E-mail** application, a set-up wizard opens to help you to set up an email account.

After the initial set-up, E-mail displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To add another email account:

- Touch  > **Apps** tab > **E-mail** > tap  > **Settings** > **Add account**.

To change an email account's settings:

- Touch  > **Apps** tab > **E-mail** > tap  > **Settings** > **General settings**.

To delete an email account:

- Touch  > **Apps** tab > **E-mail** > tap  > **Settings** > tap 
 - > **Remove account** > Select the account to delete > **Remove** > select **Yes**.




Working with account folders

Touch  > **Apps** tab > **E-mail**, tap  and select **Folders**.

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message

- 1 While in the **E-mail** application, touch the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts. Separate multiple addresses using semicolons.
- 3 Touch the Cc/Bcc field to add a Cc/Bcc and Touch  to attach files, if required.
- 4 Enter the text of the message.
- 5 Touch .

If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send will be stored in your Outbox folder until you connect to a network again. If it contains any pending messages, the Outbox will be displayed on the **Accounts** screen.




TIP! When a new email arrives in your Inbox, you will be notified by a sound or vibration.

Camera

To open the Camera application, Touch  > **Apps** tab > .

Getting to know the viewfinder
















- 1 Flash** – Choose from **Off** , **On** , **Auto** .
- 2 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 Shot mode** – Choose from **Normal**, **Dynamic tone**, **Panorama**, **Continuous shot**, **Beauty shot**, **Time catch shot**, **Sports** or **Night**.
- 4 Settings** – Tap this icon to open the settings menu.
- 5 Video mode** – Tap and slide down this icon to switch to video mode.
- 6 Capture button**
- 7 Gallery** – Tap to view the last photo you captured. This enables you to access your gallery and view saved photos while in camera mode.

NOTE: Please ensure the camera lens is clean before taking pictures.

Using the advanced settings


In the viewfinder, tap  to open the advanced options. You can change the camera settings by scrolling through the list. After selecting the option, tap the **Back** key.

	To take a photo, say one of the following words: Cheese, Smile, Whiskey, Kimchi or LG.
	Defines and controls the amount of sunlight entering the photo.
	Tap to select the focus mode.
	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Applies artistic effects to your pictures.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your phone's location-based services. NOTE: This function is available when the GPS function is active or connected network.
	Selects a shutter sound.
	Set the Volume Key whether to use for the capture or zoom.
	Opens the help guide to know how a function operates.
	Restores all camera default settings.

TIP!

- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 A focus box will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Touch  to capture the photo.

Once you've taken a photo


Tap the image thumbnail at the bottom of the Camera screen to view the last photo you took.

	Tap to take another photo immediately.
	Tap to send your photo to others or share it via social network services.
	Tap to delete the photo.
	Tap to share photo using the SmartShare function.

Camera

TIP! If you have an SNS account and set it up on your phone, you can share your photo with your SNS community.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Touch the Menu key  to open all advanced options.

Set image as – Touch to use the photo as a **Contact photo, Home screen Wallpaper, Lock screen wallpaper** or **Wallpaper**.

Move – Touch to move the photo to another place.

Copy – Touch to copy the selected photo and save it to another album.

Copy to Clip Tray – Tap to copy the photo and store in the Clip Tray.

Rename – Touch to edit the name of the selected photo.

Rotate left/right – To rotate left or right.

Crop – Crop your photo. Move your finger across the screen to select the area to be cropped.

Edit – View and edit the photo.

Slideshow – Automatically shows you the images in the current folder one after the other.

Add location – Camera setup is set to off, the Geotagging, picture location information is missing, the location information may be added.

Remove location – Camera setup is set to on Geotagging, photographs of the location information, the location information can be deleted.

Show on map – Camera setup is set to on Geotagging, picture position information, the corresponding location on the map can be viewed.

Details – Find out more information about the contents.

From your Gallery



Tap  **Gallery**.

- To view more photos, scroll left or right.
- To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer (move your fingers closer together to zoom out)).

Video camera

Getting to know the viewfinder











- 1 **Flash** – Choose from **Off** , **On** .
- 2 **Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 **Recording mode** – Choose from **Normal** or **Live effect**.
- 4 **Settings** – Tap this icon to open the settings menu.
- 5 **Camera mode** – Tap and slide up this icon to switch to camera mode.
- 6 **Start recording**
- 7 **Gallery** – Tap to view the last video you recorded. This enables you to access your gallery and view your saved videos while in video mode.

TIP!



When recording a video, place two fingers on the screen and pinch to use the Zoom function.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

	Tap to set the size (in pixels) of the video you are recording.
	Defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar towards “-” for a lower brightness video or towards “+” for a higher brightness video.
	Improves color quality in various lighting conditions.
	Choose a colour tone to use for your new view.
	Activate this to use your phone's location-based services. NOTE: This function is available when the GPS function is active or connected network.
	Set the Volume Key whether to use for the record or zoom.
	Opens the help guide to know how a function operates.
	Restores all camera default settings.

Recording a quick video

- 1 Open the **Camera** application and touch the **Video mode** button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you wish to capture in your video.
- 4 Touch  once to start recording.
- 5 A red light will appear at the top left corner of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

Video camera

TIP!



– Tap to capture an image during recording a video.



– Tap to pause recording a video.

After recording a video

In the viewfinder, tap the video thumbnail at the bottom of the screen to view the last video you took.



Tap to record another video immediately.



Tap to send your video to others or share it via social network services.




Tap to delete the video.



Tap to share video using the **SmartShare** function.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Watching your saved videos

- 1 In the viewfinder, tap .
- 2 Your Gallery will appear on the screen.
- 3 Tap a video to play it automatically.


Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.

LG Unique Function

QuickMemo function

Use the **QuickMemo function** to practically and efficiently create memos during a call, with a saved picture or on the current phone screen.

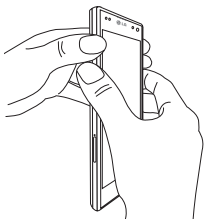


OR



OR

Touch and slide the status bar downward and touch .

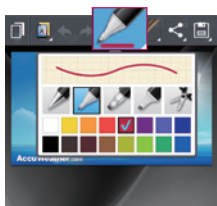


- 1 Enter the QuickMemo function screen by pressing both the Volume up and down keys for one second on the screen you want to capture.

- 2 Select the desired menu option from **Pen type**, **Color**, **Eraser**, and create a memo.

LG Unique Function










- 3 Touch  in the Edit menu and select it to save the memo with the current screen.

NOTE: Please use a fingertip while using the QuickMemo function. Do not use your fingernail.

Using the QuickMemo options

You can easily use the QuickMenu options when using the QuickMemo function.

	Touch to keep the current memo on the screen and use the phone simultaneously.
	Selects whether to use the background screen or not.
	Undo or Redo.
	Selects the pen type and the colour.
	Erases the memo that you created.
	Touch to send your memo to others or share it via social network services.
	Saves the memo with the current screen in the Gallery/Notebook .

Viewing the saved QuickMemo

Touch **Gallery/Notebook** and select the QuickMemo album.

Notebook function

With the Notebook application, you can manage and personalize a wide variety of information. Notebook allows you to create your own special notes with drawings, images, maps and stickers.

Making a note


- 1 Touch  > **Apps** tab > **Notebook**.
- 2 Touch **New note** to create a new note.
- 3 Select the desired mode (**Cover**, **Title**, **Paper**, **Paper color**) and then tap on **OK**.
- 4 Create a simple note on an empty page.

Getting to know the Notebook




Bookshelf

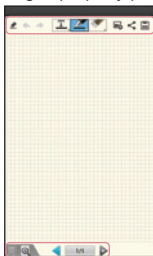

Pages-property panels













Bookshelf

	Search for pages of notes.
	Share as Notebook file, a PDF file or Image file via E-mail/Gmail.
	Delete the saved notebook from the Bookshelf.

LG Unique Function

Pages-Property panels

	Select the Read-only or edit mode.
	Undo or Redo.
	Tap this button to write.
	Select the Pen type, Thickness, Opacity and Color.
	Erase the memo that you created.
	Touch to attach files to the note.
	Touch to send your note to others or share it via social network services.
	Save the note with the current screen.
	Select to lock or unlock the Front key.
	Tap this button to enlarge the input area.

Viewing the saved notebook


- Saved Notebook memos are on the Bookshelf.
- If you save memos from QuickMemo, a QuickMemo note will be created and saved on the Bookshelf automatically.

NOTE: For more information of the Notebook guide, please see **Notebook > Notebook guide**.


QuickTranslator

Simply aim the camera of your smart phone at the foreign sentence you want to understand. You can get the real-time translation anywhere and anytime.

You can buy additional dictionaries for offline translation from the Google Play Store.

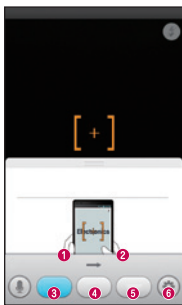

- 1 Home language.
- 2 Destination language
- 3 Translation of word.
- 4 Translation of sentence.
- 5 Translation of block.
- 6 Settings.

- 1 Touch  > **Apps** tab > **QuickTranslator**.
- 2 Touch **Word**, **Line** or **Block**.
- 3 Touch and select the desired language.
- 4 Hold the phone toward the subject you want to translate for a few seconds.

NOTE: Only one dictionary is provided free of charge. Additional dictionaries must be purchased. Please select from the list below the dictionary you would like to install as your complimentary dictionary.

NOTE: There may be a difference in the rate of recognition depending on the size, font, color, brightness and angle of the letters that need to be translated.

LG Unique Function

Live Zooming function

Live Zooming allows you to zoom in or zoom out on a portion of a video that is being played to make the desired scan appear larger or smaller.




NOTE:

- When in video playback mode, slide the screen up or down, the screen brightness (Left side), the Volume (Right side) will be adjusted.
- When in video playback mode, when you slide the screen left or right, the playback position will be adjusted.

NOTE: Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

QSlide function

The **QSlide function** enables an overlay on your phone's display for easy multi-window viewing.

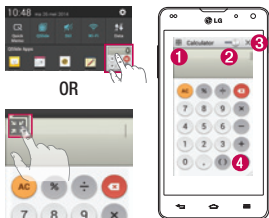

1		Touch to exit the QSlide function and return to full window.
2		Tap to adjust transparency.
3		Tap to end the QSlide function.
4		Tap to adjust the size.

- 1 Touch and slide the status bar downward > touch QSlide apps or when using a function supported by the QSlide function > touch . The function will be continuously displayed as a small window on your screen.
- 2 You can make a call, browse the Web, or choose other phone options. You can also use and tap the screen of the small windows when the transparency bar is not full .

NOTE: The QSlide function can support up to two windows at the same time.

TIP!

Touch and slide the notification panel down with your finger.

Touch to manage the "Quick settings" or "QSlide" in the notification panel.

Dual Play function

You can display different screens on the two displays connected wirelessly or by cable.

- 1 Dual play mode is executed by tapping the Home key when playing content on the external display.

LG Unique Function

- 2 You can stop playing the content on the external display using the notification panel.

NOTE:

- Connect your smart phone to a display wirelessly (Miracast) or by cable (MHL cable).
- Some video files may not be supported by the dual play function.
- The Shielded LG MHL cable is recommended.

Mirroring



Dual Play





NOTE:

- Dual Play is supported by 3 applications - Videos, Media Home (MHL only), Polarix Office 4.
- The minimum TV resolution required for dual play is 720p (1280x720)


LG SmartWorld

LG SmartWorld offers an assortment of exciting content - fonts, themes, games and applications.

How to Get to LG SmartWorld from Your Phone

- 1 Touch  > **Apps** tab > tap the  icon to access **LG SmartWorld**.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not signed up yet, tap Register to receive your LG SmartWorld membership.
- 3 Download the content you want.
 - When you use Cellular network, data fee could be charged by data plan that you signed- up with carrier.
 - LG Smartworld may not be available from all carriers or in all countries.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.






Special benefit only LG SmartWorld

- 1 Decorate your own style on your Smartphone, Use Home Theme & keyboard Theme & Font that provided on LG SmartWorld (However this service is available to specific device. please check in LG SmartWorld website whether it is feasible or not whether it is feasible or not)
- 2 Enjoy LG SmartWorld's special service by joining promotion that consistently provided

On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Wi-Fi connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

	Connects your mobile phone to your PC, or disconnects it.
	Changes the On-Screen Phone preferences.
	Exits the On-Screen Phone programme.
	Maximises the On-Screen Phone window.
	Minimize the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and POLARIS Viewer 5 files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.

- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

How to install On-Screen Phone on your PC

- 1 Visit LG Home (www.lg.com) and select a country of your choice.
- 2 Go to **Support** > **Mobile Phone Support** > Select the Model (LG-E975) > ClickOSP (On-Screen Phone) to download. You can install the On-Screen Phone on your PC.

Multimedia

Gallery

You can store multimedia files in internal memory for easy access to all your multimedia files. Use this application to view multimedia files like pictures and videos.

1 Touch  > **Apps** tab > **Gallery**.

You can manage and share all your image and video files with Gallery.

NOTE:

- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.

Viewing pictures

Launching Gallery displays your available folders. When another application, such as Email, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Select a folder to open it.

Pictures are displayed by creation date in a folder. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Zooming in and out

Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place to zoom in. Pinch to zoom out, or double-tap to return.

Playing videos

Video files show the  icon in the preview. Select a video to watch it and tap . The **Videos** application will launch.

Editing photos/videos

When viewing an photo/video, tap the **Menu** key  and use the advanced editing options.


- **Slideshow**: start a slideshow with the images in the current folder.

Deleting images

Use one of the following methods:

- In a folder, tap  and select photos/videos by ticking, and then tap on **Delete**.
- When viewing a photo/Video, tap .

Setting as wallpaper

When viewing a photo, touch the **Menu** key  > **Set image as** to set the image as wallpaper or to assign it to a contact.

NOTE:


- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.







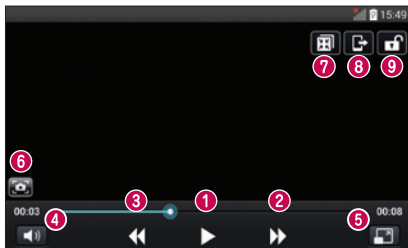


Videos

Your phone has a built-in video player that lets you play all of your favorite videos. To access the video player, touch  > **Apps** tab > **Videos**.

Playing a video

- 1 Touch  > **Apps** tab > **Videos**.
- 2 Select the video you want to play.



1		Touch to pause/resume video playback.
2		Touch to go 10 seconds forward.
3		Touch to go 10 seconds backward.
4		Touch to manage the video volume.
5		Touch to change the ratio of the video screen.
6		Tap to capture image during playing a video.
7		Touch to use QSlide.
8		Touch to Smart Share
9		Touch to lock/unlock a video screen.

To change the volume while watching a video, press the up and down volume keys on the left-hand side of the phone.

Touch and hold a video in the list. The **Share**, **Delete**, **Trim** and **Details** options will be displayed.


Video Editor

You can edit the photos or videos stored on the phone.

NOTE: Video Editing function is supported only for photos or videos which recorded with this phone.


< Project list screen >



	Create project
	Projects should be exported to play in applications such as videos
	Play project
	Delete project
	Share project with application such as YouTube

Multimedia

< Project edit screen >

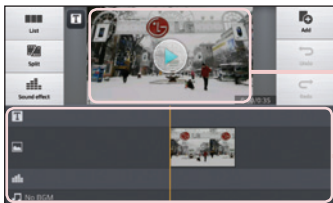

Viewer area

Timeline area



Move to project list screen. Currently edited project is save automatically



Split video clip into two portions over the playhead



Add sound effect



Add video, image or audio clip



Undo an action



Redo an action




Add text to video or image clip

Video Wiz

You can make your own movie using your images/video and music.

- 1 Touch  > **Apps** tab > **Video Wiz**.
- 2 After seeing the brief introduction on the steps to follow, tap **OK**.

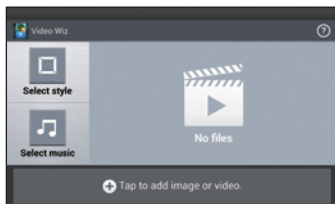

- 3 Tap to add images or video to your movie.
- 4 Tap the desired images or videos, then tap .

 - To remove images or videos, tap and select the desired files > .
 - To rearrange them, touch and hold an image/video, and drag and drop it to the desired position.


- 5 Tap **Select style** to select the desired movie style.
 - Scroll through and select the style you want. As you scroll through the styles, a preview will be displayed.
- 6 Tap **Select music** to set the background music.
- 7 Tap to play your movie.
- 8 Tap to edit the video clip using Text, Sticker or Magic Spot.
 - After editing the video, tap .
- 9 Tap to save the video.
- 10 Tap to view the help information on using this feature.


Multimedia





Music



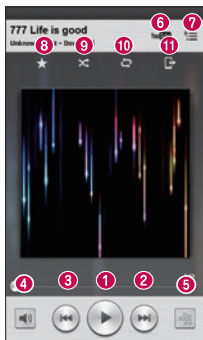




Your phone has a built-in music player that lets you play all your favorite tracks. To access the music player, touch  > **Apps** tab > **Music**.

Playing a song

- 1 Touch  > **Apps** tab > **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.



1		Tap to pause/ resume playback.
2		Tap to skip to the next track in the album, playlist, or shuffle. Touch and hold to fast forward.
3		Tap to restart the current track or skip to the previous track in the album, playlist, or shuffle. Touch and hold to rewind.
4		Tap to display the Volume slider bar, then adjust the playback volume on the slider bar.

5		Touch to set Sound Effects.
6		Tap to find the files with YouTube.
7		Tap to open the current playlist.
8		Tap to add the song to your favourites.
9		Tap to play the current playlist in shuffle mode (tracks are played in random order).
10		Tap to toggle through the repeat modes to repeat all songs, repeat current song, or repeat off.
11		SmartShare.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. The **Play**, **Add to playlist**, **Share**, **Set as ringtone**, **Delete**, **Details** and **Search** options will be displayed.

Add music files to your phone

Start by transferring music files to your phone:

- Transfer music using Media sync (MTP).
- Download from the wireless Web.
- Synchronize your phone to a computer.
- Receive files via Bluetooth.

Multimedia

Transfer music using Media sync (MTP)

- 1 Connect the phone to your PC using the USB cable.
- 2 Select the **Media sync (MTP)** option. Your phone will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.
- 3 When you're finished transferring files, swipe down on the Status Bar and touch **USB connected > Charge only**. You may now safely unplug your device.

NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.


NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.



In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Setting your alarm



- 1 Touch  > **Apps** tab > **Alarm/Clock** > .
- 2 After you set the alarm, your phone lets you know how much time is left before the alarm will go off.
- 3 Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**. Touch **Save**.

NOTE: To change alarm settings in the alarm list screen, touch  and select **Settings**.

Using your calculator

- 1 Touch  > **Apps** tab > **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want to perform (+, -, x or ÷) followed by =.
- 4 For more complex calculations, slide the left then choose sin, cos, tan, log etc.
- 5 To check the history, touch , select calculation history.

Adding an event to your calendar

- 1 Touch  > **Apps** tab > **Calendar**.
- 2 On the screen, you can find the different view types for the Calendar (Day, Week, Month, Agenda).
- 3 Tap on the date for which you wish to add an event and touch .
- 4 Touch **Event name** and enter the event name.
- 5 Touch **Location** and enter the location. Check the date and enter the time you wish your event to start and finish.
- 6 If you wish to add a note to your event, touch **Description** and enter the details.





Utilities


- 7 If you wish to repeat the alarm, set **REPEAT** and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.

Voice Recorder


Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 Touch  > the **Apps** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

NOTE: Touch  to access your album. You can listen to the saved recording. The available recording time may differ from actual recording time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching .
- 2 Choose from **Bluetooth**, **Drive**, **E-mail**, **Gmail**, **Memo**, **Messaging** or **SmartShare Beam**. When you select, the voice recording is added to the message. You may then write and send the message as you usually would.

Task Manager

You can manage your applications using Task Manager. You can easily check the number of applications that are currently running and shut down certain applications.

Tasks

This task can be synchronized with MS Exchange account. You can create task, revise it and delete it in MS outlook or MS Office Outlook Web Access.

To Synchronize MS Exchange

- 1 From the Home Screen, Touch  > **Settings**.
- 2 Touch **Accounts & sync** > **Add account**.
- 3 Touch **Microsoft Exchange** to create Email address and Password.
- 4 Make sure if you checkmark Sync task.

Polaris Office 4

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere or anytime, using their mobile devices.

Touch  > **Apps** tab > **Polaris Office 4**.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in the original documents.

Backup

About backing up and restoring smart phone data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue.

This Backup application is supported between LG smart phones, other S/W versions or OSs. As a result so, when you buy the new LG smart phone, you can backup the current Your phone data to your new phone.

If you have preloaded **Backup** application on your smart phone, you can backup and restore most of your smart phone data, **Applications** including unprotected applications, their settings, **Applications (Downloaded)**, **Applications (Pre-installed)**, **Bookmarks**, **Calendar**, **Call log**, **Contacts**, **Home screen**, **Messages** and **System settings** using this application You may:


- Perform a manual backup of your smart phone data.
- Schedule automatic backups of your smart phone data.
- Restore your smart phone data.

NOTE: Please note that the Backup function does not support the backup of User data & Media data (Picture/Video/Music). Please backup those files using the Media sync (MTP). Connect your phone to your computer using a USB cable and touch Media sync (MTP).

WARNING

To protect against unexpected shutoff during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

Backup

- 1 Touch  > **Apps** tab > **LG Backup** > **Backup**.
- 2 Select the check box next to the item you want to backup and tap **Next** to backup.
- 3 Touch **Internal Storage** > **Start**.
- 4 When all selected files have been backed up, you can touch **Done** to finish the back up.

Scheduling backup

You can also program automatic backups for the data on your smart phone according to your schedule setting. To do this, complete the following steps:

Touch  > **Apps** tab > **LG Backup** > **Schedule backup**.

File restore & management

You can set to Backup file restore to desired status.

To restore data that is in your on-board device memory, mass storage mode must be turned off.

Touch  > **Apps** tab > **LG Backup** > **File restore & management** > **Internal Storage**.

NOTE:

- All files that are stored on your smart phone are deleted before the backup file is restored.
- Please note that your phone data will be overwritten with the content of your backup.
- You can set Enable encryption to encrypt your backup files for extra protection.

Utilities

Google+


Use this application to stay connected with people via Google's social network service.

- Touch  > **Apps** tab > **Google +**.

NOTE: This application may not be available depending on the region or service provider.

Voice Search

Use this application to search webpages using voice.

- 1 Touch  > **Apps** tab > **Voice Search**.
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded through the applications.

- Touch  > **Apps** tab > **Downloads**.

NOTE: This application may not be available depending on the region or service provider.

The Web

Internet






Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your mobile phone wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

1 Touch  > **Apps** tab > **Internet**.

Using the Web toolbar

Touch and hold the Web toolbar and slide it upwards with your finger to open.

	Touch to go back one page.
	Touch to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you touch the Back key, which takes you to the previous page.
	Touch to go to the Home page.
	Touch to add a new window.
	Touch to access bookmarks.

Viewing webpages

Tap the address field, enter the web address and tap **Go**.

The Web

Opening a page

To go to new page, tap  → 

To go to another webpage, tap , scroll up or down, and tap the page to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword, and then select one of the suggested keywords that appear.


NOTE: This feature may not be available depending on the region or service provider.

Bookmarks

To bookmark the current webpage, touch  > **Add to bookmarks** > **OK**.

To open a bookmarked webpage, tap  and select one.

History

Tap  > **History** to open a webpage from the list of recently-visited webpages. To clear the history, tap Menu  → **Clear all history**.

Using Popup Browser

Use this feature to access the Internet without closing the current application.

While viewing content, such as contacts or notes that include web addresses, select a web address, and then tap Popup Browser to open the pop-up browser. Tap and drag the browser to move it to another location.

To view the browser in full screen, tap .

To close the browser, tap .

Chrome

Use Chrome to search for information and browse webpages.

1 Touch  > **Apps** tab > **Chrome**.


NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

Tap the Address field, and then enter a web address or search criteria.

Opening a page

To go to a new page, tap  > **New tab**.

To go to another webpage, tap , scroll up or down and tap the page to select it.

Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.

To view open tabs on other devices, tap  > **Other devices**.

Select a webpage to open.

To view bookmarks, tap .

Settings

This section provides an overview of items you can change using your phone's System settings menus.

To access the Settings menu:

- 1 On the Home screen, touch  > **Apps** tab > **Settings**.
or
On the Home screen, touch  > **System settings**.
- 2 Select a setting category and select an option.

WIRELESS & NETWORKS


Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

< **Wi-Fi** >

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your phone in the router.

You can find the MAC address in the following user interface: touch **Apps** tab > **Settings** > **Wi-Fi** >  > **Advanced Wi-Fi** > **MAC address**.

< **Bluetooth** >

Turn the Bluetooth wireless feature on or off to use Bluetooth.

< **Mobile data** >

Displays the data usage and set mobile data usage limit.

< **Call** >

Configure phone call settings such as call forwarding and other special features offered by your carrier.

Voicemail – Allows you to select your carrier's voicemail service.

Fixed dialing numbers – Turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Incoming voice call pop-up – Display incoming voice call pop-up when an app is in use.

Call reject – Allows you to set the call reject function. Choose from **Call reject mode** or **Rejection list**.

Decline with message – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Privacy keeper – Hides the caller name and number for an incoming call.

Call forwarding – Choose whether to divert all calls when the line is busy, when there is no answer or when you have no signal.

Auto answer – Set the time before a connected hands-free device automatically answers an incoming call. Choose from Disable, 1 second, 3 seconds, and 5 seconds.

Connection vibration – Vibrates your phone when the other party answers the call.

Save unknown numbers – Add unknown numbers to contacts after a call.

Power key ends call – Allows you to select your end call.

Call barring – Lock incoming, outgoing or international calls.

Call duration – View the duration of calls including Last call, All calls, Dialed calls and Received calls.

Additional settings – Allows you to change the following settings:

Caller ID: Choose whether to display your number in an outgoing call.

Call waiting: If call waiting is activated, the handset will notify you of an incoming call while you are on a call (depending on your network provider).

<Share & Connect>

NFC – Your phone is an NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your

Settings

content with an NFC tag or another NFC support device by simply touching it with your device. If you touch an NFC tag with your device, it will display the tag content on your device.

To switch NFC on or off: From the Home screen, touch and slide the notification panel down with your finger, then select the NFC icon to turn it on.

NOTE: When airplane mode is activated, the NFC application can be used.

Using NFC: To use NFC, make sure your device is switched on, and activate NFC if disabled.

Android Beam – When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

Just bring the device together (typically back to back) and then touch your screen. The app determines what gets beamed.

SmartShare Beam – Enable to receive files from LG phones.

Media server – Share media content on your phone with nearby device via DLNA.

Miracast – With Miracast, you can wirelessly mirror your phone screen and sound onto a Miracast dongle or TV

Wireless storage – Share files with computer via Wi-Fi.

< Tethering & networks >

Wi-Fi hotspot – You can also use your phone to provide a mobile broadband connection. Create a hotspot and share your connection. Please read "**Sharing your phone's data connection**" for more information.

Bluetooth tethering – Allows you to set your phone whether you are sharing the Internet connection or not.

Help – Tap to view help information on the Wi-Fi hotspot and Bluetooth tethering functions.

Airplane mode – After switching to Airplane mode, all wireless connections are disabled.

NOTE: You must set a lock screen PIN or password before you can use credential storage.

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) etc.

Default SMS app – Allows you to set the default SMS app.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

DEVICE

< Sound >

Sound profile – Choose the Sound, either Vibrate only or Silent.

Volumes – Manage the volume of Phone ringtone, Notification sound, Touch feedback & system, Music, video, games and other media.

Quiet time – Set times to turn off all sounds except alarm and media.

Phone ringtone – Allows you to set your default incoming call ringtone.

Smart ringtone – Allows you to set increase phone ringtone volume automatically in noisy environments.

Ringtone with vibration – Vibration feedback for calls and notifications.

Notification sound – Allows you to set your default notification ringtone.

Touch feedback & system – Allows you to set the feedback (tones and/or vibration) while using your device.

< Display >

Brightness – Adjust the screen brightness.

Screen timeout – Set the time for screen timeout.

Auto-rotate screen – Checkmark to set the phone to automatically rotate the screen based on the phone orientation (portrait or landscape).

Settings

Daydream – Tap the Daydream switch to toggle it On or Off. On allows the set screensaver to be displayed when the phone is sleeping while docked and/or charging.

Font type – Change the type of display font.

Font size – Change the size of the display font.

Smart Screen – Checkmark to allow the screen to stay on when phone detects your face.

Front touch key light – Set the front key light duration.

Notification flash – The Notification LED is located to the left of the front camera. You can see the small LED light on when the phone is charging or when you receive a notification if LCD screen turns off. You can configure the **Notification flash** to turn on/off. You can set the various options from the list of notification flash items.

< Home screen >

Set the **Theme**, **Wallpaper**, **Screen swipe effect**, **Allow Home screen looping** or **Portrait view only**. Select the option to set **Home backup & restore**.

< Lock screen >

Select screen lock – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. Set **None**, **Swipe**, **Face Unlock**, **Pattern**, **PIN** or **Password**.

If you have enabled a Pattern lock type when you turn on your phone or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

< Gestures >

Silence incoming calls – Flip the device to mute incoming calls.

Snooze or stop alarm – Flip the device to snooze or stop alarm.

Pause video – Flip the device to pause playing video.

Help – Help for gesture functions.

Motion sensor calibration – Allows you to improve the accuracy of the tilt and speed of the sensor.

< Storage >

INTERNAL STORAGE – View the internal storage usage.

< Battery >

BATTERY INFORMATION

The Battery charge information is displayed on a battery graphic along with the percentage of the remaining charge and its status.

Touch the Battery charge icon to display the Battery use screen to see battery usage level and battery use details. It displays which components and applications are using the most battery power. Tap one of the entries to see more detailed information.

Battery percentage on status bar – Checkmark to display the battery level percentage on the Status Bar next to the battery icon.

BATTERY SAVER

Tap the Battery saver switch to toggle it On or Off. Tap Battery saver to access the following settings:

Battery saver – Sets the battery charge percent level that will automatically turn on Battery saver.

Eco mode – Set the Eco mode to extend battery life by dynamically optimizing the CPU control policy.

Help – Tap to view help information on the battery saver tips.

< Apps >

View and manage your applications.

<Tap & pay>

When NFC is turned on, you can use the tap & pay feature to pay for items just by touching your phone to a reader at a register. If your device doesn't have a default app, you can browse Google Play for other payment apps.

PERSONAL

< Accounts & sync >

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lower (but not eliminate) data usage.

< Cloud >

Add a cloud account to quickly and easily use cloud service on LG apps.

< Location >

Turn on location service, your phone determines your approximate location using GPS, Wi-Fi and mobile networks.

Mode – Set the location mode from **High accuracy**, **Battery saving** and **Device sensors only**.

< Security >

Encrypt phone – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

Set up SIM card lock – Set up Micro-USIM card lock or change the Micro-USIM card PIN.

Password typing visible – Show the last character of the hidden password as you type.

Phone administrators – View or deactivate phone administrators.

Unknown sources – Default setting to install non-market applications.

Verify apps – Disallow or warn before installation of apps that may cause harm.

Notification access – Display the notifications.

Storage type – Display the storage type.

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates.

Clear credentials – Remove all certificates.

< Language & input >

Use the Language & input settings to select the language for the text on your phone and to configure the on-screen keyboard, including words you've added to its dictionary.

< Backup & reset >

Change the settings for managing your settings and data.

Backup my data – Set to backup your settings and application data to the Google server.

Backup account – Set to backup your account.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

LG Backup service – Backs up all information on the device and restores it in the event of data loss or replacement.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the phone this way, you are prompted to re-enter the same information as when you first started Android.

SYSTEM

< Date & time >

Use **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become selectable.

Settings

< PC connection >

Select USB connection method – Set the desired mode: **Charge only**, **Media sync (MTP)**, **Tethering**, **LG software** or **Send images (PTP)**.

Ask upon connection – Ask in USB connection mode when connecting to a computer.

Help – Help for USB connection.

PC Suite – Checkmark this to use LG PC Suite with your Wi-Fi connection.

Please note that Wi-Fi network should be connected to LG PC Suite via a Wi-Fi connection through WIRELESS & NETWORKS.

Help – Help for LG software.

<Printing>

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

< About phone >

View legal information and check your phone status and software version.

PC software (LG PC Suite)

"LG PC Suite" PC software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, movie, picture) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device data.
- Play multimedia contents of your PC from your device.
- Backup and create and edit the memos in your device

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.

Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > MOBILE SUPPORT > LG Mobile Phones > Select the Model**
or
Go to **Support > Mobile > Select the Model.**
- 3 Click **PC SYNC** from **MANUALS & DOWNLOAD** and click **DOWNLOAD** to download "LG PC Suite" PC software.

System Requirements for "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

PC software (LG PC Suite)

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and is installed automatically when you install "LG PC Suite" PC software application.

Synchronizing your Device to a PC

Data from your device and PC can be synchronized easily with "LG PC Suite" PC software for your convenience. Contacts, schedules and bookmarks can be synchronized.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 The **Select USB connection method** will appear, then select **LG software**.
- 3 After connection, run the program and select the device section from the category on the left side of the screen.
- 4 Click **Personal information** to select.
- 5 Select the checkbox of contents to synchronize and click the **Sync** button.

NOTE: To synchronize your phone with your PC, you need to install LG PC Suite onto your PC. Please refer to previous pages to install LG PC Suite.

Moving contacts from your Old Device to your New Device

- 1 Export your contacts as a CSV file from your old device to your PC using a PC sync program.
- 2 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 3 On the top menu, select **Phone > Import/Export contacts > Export to your phone**.
- 4 A popup window to select the file type and a file to **export** will appear.
- 5 On the popup, click the **Select a file** and Windows Explorer will appear.
- 6 Select the contacts file to **export** in Windows Explorer and click the **Open**.
- 7 Click **Export**.
- 8 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 9 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 10 Click **OK**.

Phone software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service center. This feature will only be available if and when LG makes a newer firmware version available for your device. Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device. You should first check the software version on your mobile phone: **Settings > About phone > Update Center > Software update > Check now for update.**

Phone software update

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature depends on your network service provider, region and country.

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product, or from software supplied by service providers or carriers, This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your phone's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully are entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan to is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.

About this user guide



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content. DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

Accessories

These accessories are available for use with the your phone. **(Items described below may be optional.)**

Travel adaptor



Stereo headset



Quick Start Guide



Data cable



**Micro-USIM
ejection tool**



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
Micro-USIM error	There is no Micro-USIM card in the phone or it is inserted incorrectly.	Make sure that the Micro-USIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the Micro-USIM card is more than 6~12 months old. If so, change your Micro-USIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	

Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorized.
	New Micro-USIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.

Troubleshooting


Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & photos	Memory full	Delete some messages from your phone.
Files do not open	Unsupported file format	Check the supported file formats.



Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update via the website.


FAQ


Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.


Category Sub- Category	Question	Answer
BT Bluetooth Devices	What are the functions available via Bluetooth?	You can connect a Bluetooth audio device such as a Stereo/Mono headset or Car Kit to share pictures, videos, contacts, etc. via Gallery/Contacts menu. Also, when the FTP server is connected to a compatible device, you can share content stored on the storage media.
BT Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5 mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
Data Contacts Backup	How can I backup Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data Synchronization	Is it possible to set up one-way sync with Gmail?	Only two-way synchronization is available.


Category Sub- Category	Question	Answer
Data Synchronization	Is it possible to synchronize all email folders?	The Inbox is automatically synchronized. You can view other folders by Touching the Menu Key  and select Folders to choose a folder.
Google™ Service Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you have logged into Gmail, you will not need to log into Gmail again.
Google™ Service Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
Phone Function Ringtone	Is there a file size limitation for when I want to use an. MP3 file as a ring tone?	There is no file size limitation.
Phone Function Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I change this?	You will only be able to see the times for messages received the same day.
Phone Function Navigation	Is it possible to install another navigation application on my phone?	Any application that is available at Android Market™ and is compatible with the hardware can be installed and used.

Category Sub- Category	Question	Answer
Phone Function Synchronisation	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (company email server) contacts can be synchronized.
Phone Function Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	If you transferred a contact with the W & P functions saved into the number, you will not be able to use those features. You will need to re-save each number. How to save with Wait and Pause: <ol style="list-style-type: none"> 1. From the Home screen, touch the Phone icon . 2. Dial the number, then touch the Menu Key . 3. Touch Add 2-sec pause or Add wait.
Phone Function Security	What are the phone's security functions?	You are able to set the phone to require that an Unlock Pattern be entered before the phone can be accessed or used.

Category Sub- Category	Question	Answer
Phone Function Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key . 2. Touch System settings > Lock screen. 3. Touch Select screen lock > Pattern. The first time you do this, a short tutorial about creating an Unlock Pattern will appear. 4. Set up by drawing your pattern once, and once again for confirmation. <p>Precautions to take when using the pattern lock.</p> <p>It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern five times. You have five chances to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds. (Or, if you preset the backup PIN, you can use the backup PIN code to unlock the pattern.)</p>

Category Sub- Category	Question	Answer
Phone Function Unlock Pattern	What should I do if I forget the unlock pattern and I didn't create my Google account on the phone?	If you have forgotten your pattern: If you logged into your Google account on the phone but failed to enter the correct pattern 5 times, touch the forgot pattern button. You are then required to log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you have forgotten it, you will have to perform a hard reset. Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a factory reset.
Phone Function Memory	Will I know when my memory is full?	Yes, you will receive a notification.
Phone Function Language Support	Is it possible to change my phone's language?	The phone has multilingual capabilities. To change the language: <ol style="list-style-type: none">1. From the Home screen, touch the Menu Key  and touch System settings.2. Touch Language & input > Select language.3. Touch the desired language.

Category Sub- Category	Question	Answer
Phone Function VPN	How do I set up a VPN?	VPN access configuration is different for each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.
Phone Function Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home screen, press the Menu Key . 2. Touch System settings > Display. 3. Under Display settings, touch Screen timeout. 4. Touch the preferred screen backlight timeout time.
Phone Function Wi-Fi & mobile network	When Wi-Fi and mobile network are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, view the mobile network or Wi-Fi icon at the top of your screen.</p>
Phone Function Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the dustbin icon appears at the top and center of the screen. Then, without lifting your finger, drag the icon to the trash can.

Category Sub- Category	Question	Answer
Phone Function Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none">1. From the Home screen, press the Menu Key .2. Touch App settings > DOWNLOADED.3. Touch the application, then touch Uninstall.
Phone Function Charger	Is it possible to charge my phone using a USB data cable without installing the necessary USB driver?	Yes, the phone will be charged by the USB cable regardless of whether the necessary drivers are installed or not.
Phone Function Alarm	Can I use music files for my alarm?	Yes. After saving a music file as a ringtone, you can use it as your alarm. <ol style="list-style-type: none">1. Touch and hold a song in a library list. In the menu that opens, touch Set as ringtone.2. In the alarm clock setting screen, select the song as a ringtone.
Phone Function Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function Alarm	If my ringer volume is set to Off or Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.

Category Sub- Category	Question	Answer
Recovery Solution Hard Reset (Factory Reset)	How can I perform a factory reset if I can't access the phone's setting menu?	If your phone does not restore to its original condition, use a hard reset (factory reset) to initialize it.

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.; Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sat, 08:00 - 18:00

Call center : 0-2878-5757

LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี
1-800-545454
กรุงเทพและปริมณฑล
0-2878-5757

เว็บไซต์และอีเมลล์ :

<http://www.lg.com/th> และ support.lgeth@lge.com

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง
เพื่อความสะดวกในการติดต่อ
กับศูนย์บริการของแอลจีทั่วประเทศ



CE0168ⓘ