



LG

Life's Good

TIẾNG VIỆT
ENGLISH

Hướng dẫn sử dụng

User Guide


LG G *Tablet 7.0*

LG-V400



Hướng dẫn sử dụng

- Hiện thị màn hình và hình minh họa trên hướng dẫn sử dụng này có thể khác với hình bạn thấy trên thiết bị thực.
- Một số nội dung trong hướng dẫn này có thể không áp dụng cho máy tính bảng của bạn, tùy theo phần mềm hoặc nhà cung cấp dịch vụ của bạn. Tất cả các thông tin trong tài liệu này có thể thay đổi mà không cần thông báo.
- Thiết bị này không phù hợp với người khiếm thị do có bàn phím trên màn hình cảm ứng.
- Bản quyền ©2015 LG Electronics, Inc. Bảo lưu mọi quyền. LG và logo LG là thương hiệu đã đăng ký của Tập đoàn LG và các tổ chức có liên quan của tập đoàn. Tất cả thương hiệu khác là tài sản của các chủ sở hữu tương ứng.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ và Google Play™ là các thương hiệu của Google, Inc.

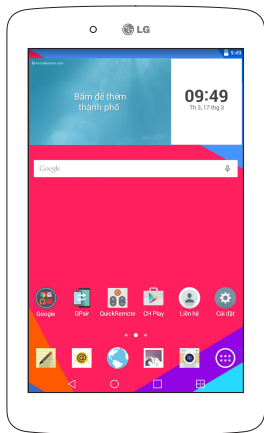

Mục lục

Thông tin về hướng dẫn sử dụng này 5

Thông tin về hướng dẫn sử dụng này 5

Thương hiệu 6

DivX HD 6

Hướng dẫn sử dụng an toàn và hiệu quả8

Thông báo quan trọng 16

Tìm hiểu thiết bị..... 20

Tổng quan máy tính bảng.....20

Sạc máy.....22

Tối ưu Tuổi thọ của pin23

Để kéo dài tuổi thọ của pin23

Để xem mức sạc pin24

Để theo dõi và kiểm soát sử dụng pin.....24

Lắp thẻ microSD24

Tháo thẻ microSD.....25

Định dạng thẻ microSD26

Khóa và mở khóa màn hình.....26

Bật màn hình sử dụng tính năng Bật màn hình.....27

Mở khóa màn hình bằng tính năng Knock Code.....27

Màn hình chủ 29

Mẹo cho màn hình cảm ứng.....29

Nhấn hoặc chạm vào..... 29

Chạm vào và giữ..... 29

Kéo..... 29

Vuốt mạnh hoặc trượt..... 30

Chạm đúp..... 30

Kẹp vào để thu phóng.....30

Xoay màn hình30

Màn hình chủ30

Tùy chỉnh màn hình Chủ.....32

Mở, chuyển đổi và dùng ứng dụng32

Sử dụng Cửa sổ đôi33

Tùy chỉnh biểu tượng ứng dụng trên

Màn hình chủ34

Truy cập nhanh.....35

Thông báo.....35

Truy cập thông báo.....36

Cài đặt nhanh trên Ô thông báo.....36

Để sắp xếp lại các tùy chọn Cài đặt Nhanh trên Ô thông báo37

Ứng dụng QSlide trên Ô thông báo.....37

Sử dụng các ứng dụng QSlide37

Biểu tượng chỉ báo trên Thanh Trạng thái.37

Nhiều Người dùng39

QSlide.....40

Chụp ảnh màn hình42

Sử dụng QuickMemo+ để chụp ảnh màn hình.....42

Sử dụng Chụp thêm để chụp ảnh màn hình.....43

Phương thức nhập văn bản43

Nhập từ được gợi ý bằng điều khiển thao tác44

Nhập các ký tự đặc biệt44

Thiết lập tài khoản Google 45

| | | | |
|---|-----------|---|-----------|
| Kết nối với Mạng và Thiết bị | 46 | Làm việc với thư mục tài khoản | 58 |
| Wi-Fi..... | 46 | Soạn và gửi email | 58 |
| Kết nối với mạng Wi-Fi..... | 46 | Nhận e-mail | 58 |
| Bật Wi-Fi và kết nối với mạng Wi-Fi..... | 46 | Giải trí | 59 |
| Bluetooth | 47 | Máy Ảnh | 59 |
| Bật Bluetooth và ghép đôi máy tính bảng của bạn với một thiết bị Bluetooth..... | 47 | Làm quen với kính ngắm | 59 |
| Gửi dữ liệu bằng tính năng Bluetooth..... | 48 | Sử dụng các cài đặt nâng cao..... | 60 |
| Nhận dữ liệu bằng tính năng Bluetooth..... | 48 | Chụp Ảnh | 60 |
| SmartShare..... | 49 | Để phóng to hoặc thu nhỏ..... | 60 |
| Sử dụng nội dung qua nhiều thiết bị..... | 49 | Chụp ảnh bằng cử chỉ tay | 61 |
| Phát/Gửi..... | 49 | Khi bạn đã chụp ảnh | 61 |
| Tận hưởng nội dung từ các thiết bị lân cận | 49 | Xem ảnh đã lưu..... | 62 |
| Kết nối thiết bị..... | 49 | Quay video | 63 |
| Tìm kiếm các thiết bị khác..... | 50 | Xem các video đã lưu | 63 |
| Sử dụng nội dung từ Mây..... | 50 | Thư viện..... | 64 |
| Sử dụng Mây | 50 | Xem hình ảnh..... | 64 |
| QPair..... | 50 | Phát video | 65 |
| Kết nối máy tính bằng cáp USB..... | 53 | Xóa ảnh và video..... | 65 |
| Chuyển nhạc, ảnh và video bằng chế độ Thiết bị đa phương tiện (MTP)..... | 53 | Đặt làm hình nền | 65 |
| Đồng bộ hóa với Windows Media Player ... | 53 | Trình chiếu | 65 |
| Kết nối với máy tính bằng cáp USB đối với người dùng Mac OS X | 54 | Video | 66 |
| Liên hệ | 55 | Phát video | 66 |
| Tìm kiếm liên hệ | 55 | Nhạc | 67 |
| Thêm liên hệ mới..... | 55 | Chuyển nhạc bằng chế độ Thiết bị phương tiện (MTP)..... | 68 |
| Liên hệ ưa thích | 55 | Phát bài hát..... | 68 |
| Tạo nhóm | 56 | Công cụ | 71 |
| Email | 57 | QuickMemo+ | 71 |
| Quản lý tài khoản email..... | 57 | QuickRemote | 73 |
| | | Đồng hồ..... | 74 |
| | | Máy Tính..... | 75 |
| | | Lịch | 75 |

| | | | |
|---|-----------|---------------------------------------|------------|
| Tác vụ | 76 | Khôi phục dữ liệu máy tính bảng | 100 |
| Quản lý tài liệu | 77 | Cập nhật phần mềm máy tính | |
| Ghi âm..... | 78 | bảng..... | 101 |
| POLARIS Office 5 | 79 | Cập nhật phần mềm máy tính bảng.. | 101 |
| Google+..... | 80 | Cập nhật phần mềm máy tính bảng | |
| LG SmartWorld..... | 80 | LG qua môi trường không dây (OTA) . | 101 |
| Trang Web | 82 | Phụ kiện..... | 103 |
| Internet..... | 82 | Sửa lỗi | 104 |
| Mở một trang | 82 | | |
| Đấu trang..... | 83 | | |
| Lịch sử..... | 83 | | |
| Sử dụng chế độ đọc | 83 | | |
| Sử dụng QSlide..... | 83 | | |
| Tải xuống tệp..... | 83 | | |
| Chrome | 83 | | |
| Xem trang web..... | 84 | | |
| Mở một trang | 84 | | |
| Tìm kiếm web bằng giọng nói..... | 84 | | |
| Đồng bộ hóa với thiết bị khác | 84 | | |
| Thêm và xem các dấu trang..... | 85 | | |
| Menu Tùy chọn Chrome | 85 | | |
| Cài đặt | 86 | | |
| Truy cập menu Cài đặt..... | 86 | | |
| CÁC MẠNG KHÔNG DÂY | 86 | | |
| THIẾT BỊ | 88 | | |
| CÁ NHÂN | 93 | | |
| HỆ THỐNG..... | 95 | | |
| LG Backup..... | 99 | | |
| Thông tin về sao lưu và khôi phục dữ | | | |
| liệu..... | 99 | | |
| Sao lưu dữ liệu máy tính bảng | 99 | | |

Thông tin về hướng dẫn sử dụng này

Thông tin về hướng dẫn sử dụng này

- Trước khi sử dụng thiết bị, vui lòng đọc kỹ sách hướng dẫn này. Điều này sẽ đảm bảo bạn sử dụng thiết bị an toàn và đúng cách.
- Một số hình ảnh và hình chụp màn hình trong hướng dẫn này có thể khác với máy tính bảng.
- Nội dung của bạn có thể khác với sản phẩm cuối, hoặc khác với phần mềm mà nhà cung cấp dịch vụ hoặc nhà khai thác mạng cung cấp. Nội dung này có thể thay đổi mà không cần thông báo trước. Để có phiên bản mới nhất của sách hướng dẫn này, vui lòng truy cập trang web của LG tại địa chỉ www.lg.com.
- Các ứng dụng thiết bị của bạn và chức năng có thể khác biệt theo quốc gia, khu vực hoặc thông số kỹ thuật phần cứng. LG không chịu trách nhiệm đối với bất kỳ sự cố hoạt động nào bắt nguồn từ việc sử dụng các ứng dụng do những nhà cung cấp không phải LG phát triển.
- LG không chịu trách nhiệm đối với sự cố hoạt động hoặc tính tương thích bất nguồn từ đăng ký bị chỉnh sửa, cài đặt bị chỉnh sửa hoặc phần mềm hệ điều hành bị sửa đổi. Mọi cố gắng tùy chỉnh hệ điều hành của bạn có thể khiến thiết bị hoặc các ứng dụng của thiết bị không hoạt động như bình thường.
- Phần mềm, âm thanh, hình nền, hình ảnh và nội dung đa phương tiện khác cung cấp kèm thiết bị của bạn được cấp phép sử dụng hạn chế. Nếu bạn trích xuất hoặc sử dụng các tài liệu này cho mục đích thương mại hoặc mục đích khác, bạn có thể vi phạm luật bản quyền. Là người dùng, bạn hoàn toàn chịu trách nhiệm đối với việc sử dụng phi pháp nội dung đa phương tiện.
- Bạn có thể phải trả thêm phí cho các dịch vụ dữ liệu, chẳng hạn như nhắn tin, tải lên và tải xuống, tự động đồng bộ hóa hoặc sử dụng dịch vụ vị trí. Để tránh mất thêm phí, chọn gói dữ liệu phù hợp với nhu cầu của bạn. Liên hệ với nhà cung cấp dịch vụ của bạn để biết thêm chi tiết.

Thương hiệu

- LG và logo LG là thương hiệu đã đăng ký của LG Electronics.
- Tất cả thương hiệu và bản quyền khác là tài sản của các chủ sở hữu tương ứng.



GIỚI THIỆU DIVX VIDEO: DivX® là định dạng video kỹ thuật số được sáng tạo bởi DivX, LLC, một công ty con của Tập đoàn Rovi. Đây là thiết bị DivX Certified® chính thức đã vượt qua bài kiểm tra nghiêm ngặt nhằm xác minh có thể phát video DivX. Truy cập divx.com để biết thêm thông tin và công cụ phần mềm để chuyển đổi các tệp của bạn sang video DivX.

GIỚI THIỆU DIVX VIDEO THEO YÊU CẦU: Thiết bị DivX Certified® này phải được đăng ký để phát các phim DivX Video theo yêu cầu (VOD) đã mua. Để lấy mã đăng ký, tìm mục DivX VOD trong menu thiết lập thiết bị. Truy cập vod.divx.com để biết thêm thông tin về cách hoàn tất đăng ký.

DivX Certified® để phát video DivX® với chất lượng HD 720P, bao gồm cả nội dung phải trả phí.

DivX®, DivX Certified® và các logo liên kết là thương hiệu của Tập đoàn Rovi hoặc các công ty con của Tập đoàn và được sử dụng theo giấy phép.

Thông tin của thông báo phần mềm nguồn mở

Để nhận mã nguồn theo GPL, LGPL, MPL và các giấy phép nguồn mở khác, được bao gồm trong sản phẩm này, vui lòng truy cập <http://opensource.lge.com>.

Ngoài mã nguồn, tất cả các điều khoản cấp phép, tuyên bố từ chối trách nhiệm và thông báo bản quyền được tham chiếu đều có sẵn để tải xuống.

LG Electronics cũng sẽ cung cấp mã nguồn mở cho bạn trong CD-ROM có mất phí để chi trả cho chi phí phát hành đó (ví dụ như chi phí đĩa, vận chuyển và xử lý) khi nhận được yêu cầu qua email đến opensource@lge.com. Ưu đãi này có thời hạn ba (3) năm kể từ ngày bạn mua sản phẩm.

Hướng dẫn sử dụng an toàn và hiệu quả

Vui lòng đọc các hướng dẫn đơn giản này. Không tuân theo các hướng dẫn này có thể gặp nguy hiểm hoặc vi phạm pháp luật.

Nếu xảy ra lỗi, công cụ phần mềm được tích hợp vào thiết bị của bạn sẽ thu thập nhật ký lỗi. Công cụ này chỉ thu thập dữ liệu cụ thể về lỗi, như cường độ tín hiệu và các ứng dụng được tải. Nhật ký lỗi chỉ được sử dụng để giúp xác định nguyên nhân gây ra lỗi. Những nhật ký này được mã hóa và chỉ trung tâm Sửa chữa được ủy quyền của LG mới có thể truy cập nếu bạn cần trả lại thiết bị để sửa chữa.

Tiếp xúc với năng lượng của sóng vô tuyến

Thông tin về tiếp xúc với sóng radio và Mức Hấp thụ Riêng (SAR).

Kiểu thiết bị máy tính bảng LG-V400 này đã được thiết kế tuân theo yêu cầu hiện hành về an toàn khi tiếp xúc với sóng radio. Yêu cầu này được dựa trên các nguyên tắc khoa học bao gồm các giới hạn an toàn được đề ra để đảm bảo an toàn cho tất cả mọi người, bất kể tuổi tác và sức khỏe.

- Các nguyên tắc tiếp xúc với sóng vô tuyến sử dụng một đơn vị đo có tên là Mức Hấp thụ Riêng (SAR). Các thử nghiệm về SAR được thực hiện sử dụng phương pháp được tiêu chuẩn hoá với thiết bị truyền tín hiệu ở mức năng lượng được xác nhận cao nhất trong tất cả các dải tần được sử dụng.
- Có thể có sự khác biệt giữa các mức SAR của các kiểu thiết bị LG khác nhau, nhưng tất cả chúng đều được thiết kế để thoả mãn các nguyên tắc thích hợp đối với tiếp xúc với sóng vô tuyến.
- Giới hạn SAR được khuyến nghị bởi Ủy ban Quốc tế về Bảo vệ Phóng xạ Không Ion hóa (ICNIRP) là 2 W/kg tính trung bình trên 10 g mô.
- Giá trị SAR cao nhất cho kiểu máy này khi đeo trên người, như được mô tả trong phần này, là 0,346 W/kg.

- Thiết bị này đáp ứng các tiêu chuẩn tiếp xúc RF khi cầm ở vị trí thông thường gần tai hoặc cách xa cơ thể ít nhất 0,00 cm. Khi sử dụng túi đeo, đai đeo hoặc ngăn chứa để mang máy bên mình, bạn cần đảm bảo nó không chứa kim loại và cách xa cơ thể ít nhất 0,00 cm.

Để truyền các tệp dữ liệu, thiết bị này cần được kết nối với mạng một cách ổn định. Trong một số trường hợp, việc truyền các tệp dữ liệu có thể bị chậm trễ cho đến khi có được kết nối tốt. Đảm bảo các hướng dẫn riêng về khoảng cách nêu trên được tuân thủ cho đến khi việc truyền dữ liệu hoàn tất.

Bảo dưỡng và chăm sóc sản phẩm

CẢNH BÁO

Thông báo thay Pin

- Để an toàn cho bạn, không tháo pin lắp trong sản phẩm. Nếu bạn cần thay pin, hãy mang điện thoại đến trung tâm dịch vụ hoặc đại lý được ủy quyền của LG Electronics để được hỗ trợ.
- Pin Li-Ion là bộ phận nguy hiểm có thể gây thương tích.
- Việc thay pin bởi chuyên gia không đủ trình độ có thể gây hư hại thiết bị.

CẢNH BÁO

Chỉ sử dụng pin, bộ sạc và những phụ kiện được chấp thuận cho sử dụng cùng với kiểu thiết bị cụ thể này. Việc sử dụng bất cứ loại nào khác có thể làm mất hiệu lực bất cứ sự chấp thuận hoặc bảo hành nào áp dụng cho thiết bị này và có thể gây nguy hiểm.

- Không được tháo rời các bộ phận của điện thoại. Mang đến một chuyên gia kỹ thuật dịch vụ đủ khả năng khi cần sửa chữa.
- Sửa chữa theo bảo hành, theo lựa chọn của LG, có thể bao gồm các bộ phận hoặc bảng mạch thay thế hoặc là mới hoặc được sửa lại, miễn là chúng có chức năng tương đương với bộ phận được thay thế.
- Để cách xa các thiết bị điện như là tivi, radio và máy tính cá nhân.
- Nền để điện thoại tránh xa những chỗ nóng như là lò sưởi hoặc bếp.
- Không đánh rơi.
- Không để thiết bị này chịu rung hoặc va đập cơ học.
- Hãy tắt thiết bị ở bất kỳ nơi nào được yêu cầu bởi các quy định đặc biệt. Ví dụ: không sử dụng thiết bị của bạn trong bệnh viện, nếu không nó có thể ảnh hưởng đến thiết bị y tế nhạy cảm.
- Không sử dụng thiết bị khi tay còn ướt và điện thoại đang được sạc pin. Nó có thể gây ra điện giật hoặc làm hỏng nặng thiết bị của bạn.
- Không sạc thiết bị gần vật liệu dễ cháy vì thiết bị có thể trở nên nóng và gây ra hỏa hoạn.
- Sử dụng vải khô để lau chùi bên ngoài của thiết bị (không sử dụng dung môi như là benzen, chất pha loãng hoặc rượu).
- Không sạc máy tính bảng khi đặt trên các vật dụng mềm.
- Nên sạc thiết bị ở những nơi thông gió tốt.
- Không để thiết bị này chịu khói hoặc bụi quá mức.
- Không để thiết bị cạnh thẻ tín dụng hoặc vé tàu, xe; nó có thể ảnh hưởng tới thông tin trên các dải từ.
- Không gõ lên màn hình bằng các vật cứng vì nó có thể làm hư hại máy tính bảng.
- Không để thiết bị tiếp xúc với chất lỏng, hơi ẩm.
- Sử dụng các phụ kiện như tai nghe một cách cẩn thận.

- Không sử dụng, chạm hoặc cố gắng tháo máy hoặc sửa chữa màn hình thủy tinh bị vỡ, mẻ hoặc nứt. Hư hỏng màn hình thủy tinh do lạm dụng hoặc sử dụng không đúng không được bảo hành theo chương trình bảo hành.
- Máy tính bảng của bạn là thiết bị điện tử có thể tạo nhiệt trong quá trình hoạt động bình thường. Tiếp xúc lâu và trực tiếp với da khi không có thông gió hợp lý có thể gây khó chịu hoặc cháy nhỏ. Vì vậy, hãy sử dụng cẩn thận khi cầm thiết bị hoặc ngay sau khi sử dụng.
- Nếu máy bị ướt, rút nó ngay lập tức để hong khô hoàn toàn. Không cố gắng tăng tốc quá trình hong khô bằng nguồn nhiệt bên ngoài, như lò, lò vi sóng hay máy sấy.
- Chất lỏng trong thiết bị bị ướt sẽ làm thay đổi màu sắc của nhãn sản phẩm bên trong thiết bị. Hư hỏng thiết bị do tiếp xúc với chất lỏng sẽ không được bảo hành.
- Sử dụng máy tính bảng ở nhiệt độ từ 0 °C đến 40 °C nếu có thể. Để thiết bị tiếp xúc với nhiệt độ quá thấp hoặc quá cao có thể làm hư hỏng, hoạt động sai chức năng hoặc thậm chí nổ.

Hoạt động của thiết bị có hiệu quả

Các thiết bị điện tử

Tất cả thiết bị máy tính bảng có thể bị nhiễu làm ảnh tới hoạt động của thiết bị.

- Không sử dụng thiết bị máy tính bảng của bạn gần thiết bị y tế nếu không được phép. Tránh đặt máy tính bảng gần máy điều hoà nhịp tim, như trong túi ngực của bạn.
- Một số thiết bị trợ thính có thể bị gây nhiễu bởi thiết bị máy tính bảng.
- Nhiễu nhỏ hơn có thể ảnh hưởng tới tivi, đài, máy tính, v.v.

An toàn Giao thông

Kiểm tra luật và qui định về sử dụng thiết bị máy tính bảng ở những vùng mà bạn lái xe.

- Không sử dụng thiết bị cầm tay khi lái xe.
- Tập trung hoàn toàn vào việc lái xe.
- Năng lượng RF có thể ảnh hưởng tới một số hệ thống điện trên xe của bạn như là dàn âm thanh và thiết bị an toàn.
- Khi xe bạn được trang bị túi khí, không làm cản trở bằng các vật lắp đặt cố định hoặc thiết bị không dây cầm tay hoặc được. Nó có thể làm túi khí không hoạt động hoặc gây ra chấn thương nguy hiểm trọng do hoạt động không đúng.
- Nếu bạn nghe nhạc trong khi ở ngoài, xin nhớ đặt âm lượng ở mức vừa phải để có thể nhận biết được những tiếng động xung quanh. Điều này đặc biệt quan trọng khi gần đường.

Tránh làm hư tai bạn

LƯU Ý: Áp suất âm thanh quá mạnh từ tai nghe trong máy tính bảng và tai nghe thường có thể gây tổn thương thính giác.



Để tránh làm hỏng thính giác, không nghe điện thoại ở mức âm lượng cao trong thời gian dài.

- Khả năng nghe của bạn có thể bị ảnh hưởng nếu nghe quá to trong thời gian dài. Vì vậy, chúng tôi khuyên bạn không nên bật hoặc tắt máy tính bảng khi gần tai. Chúng tôi cũng khuyên bạn nên đặt âm lượng nhạc và cuộc gọi ở mức vừa phải.
- Khi sử dụng tai nghe, giảm âm lượng nếu bạn không nghe thấy người khác nói gần bạn, hoặc nếu người ngồi cạnh bạn có thể nghe thấy những gì bạn đang nghe.

Bộ phận làm bằng thủy tinh

Một số bộ phận của thiết bị máy tính bảng được làm bằng thủy tinh. Loại thủy tinh này có thể vỡ nếu máy bị rơi trên bề mặt cứng hoặc khi va chạm mạnh. Nếu thủy tinh vỡ, không được chạm hoặc tháo máy. Dùng sử dụng thiết bị cho đến khi nhà cung cấp dịch vụ được ủy quyền thay thế thủy tinh đó.

Khu vực phá nổ

Không sử dụng máy tính bảng nơi đang có bắn phá bằng thuốc nổ. Tôn trọng các giới hạn và tuân theo các qui định hoặc nguyên tắc.

Môi trường có khả năng dễ nổ

- Không sử dụng máy tính bảng ở điểm tiếp nhiên liệu.
- Không sử dụng gần nơi chứa nhiên liệu hoặc hóa chất.
- Không vận chuyển hoặc chứa khí, chất lỏng dễ cháy, hoặc chất nổ trong khoang xe có thiết bị máy tính bảng hoặc các thiết bị phụ trợ của bạn.

Trên máy bay

Các thiết bị không dây có thể gây nhiễu trong máy bay.

- Tắt máy tính bảng của bạn trước khi lên máy bay.
- Không sử dụng điện thoại trên đất nếu không được phép.

Trẻ em


Để thiết bị ở một nơi an toàn ngoài tầm với của trẻ em. Điện thoại bao gồm các phần nhỏ nếu bị rời ra có thể gây nguy cơ ngạt thở. Thiết bị này cũng chứa pin trong có thể nguy hiểm nếu thiết bị không được sử dụng và bảo quản thích hợp.

Thông tin và chăm sóc pin

- Bạn không cần xả hết pin hoàn toàn trước khi sạc lại. Không giống các hệ thống pin khác, không có tác động bộ nhớ có thể làm tổn hại tới hoạt động của pin.
- Chỉ sử dụng pin và bộ sạc của LG. Bộ sạc của LG được thiết kế để có tuổi thọ tối đa cho pin.
- Không tháo rời hoặc đoản mạch pin.
- Sạc pin nếu nó đã được sử dụng trong một thời gian dài để làm tăng tối đa khả năng sử dụng.
- Không để bộ sạc pin tiếp xúc trực tiếp với ánh sáng mặt trời hoặc sử dụng nó ở nơi có độ ẩm cao như là buồng tắm.
Không để pin ở nơi nóng hoặc lạnh, vì những điều kiện này có thể làm giảm hiệu quả hoạt động của pin.
- Có thể xảy ra hiện tượng nổ nếu lắp không đúng loại pin.
- Vứt bỏ pin đã sử dụng theo hướng dẫn của nhà sản xuất. Vui lòng tái chế khi có thể. Không vứt bỏ như rác sinh hoạt thông thường.
- Nếu bạn cần thay pin, hãy mang điện thoại đến trung tâm dịch vụ hoặc đại lý được ủy quyền của LG Electronics để được hỗ trợ.
- Luôn rút bộ sạc ra khỏi ổ điện sau khi pin đã sạc đầy để tiết kiệm lượng điện tiêu thụ không cần thiết của bộ sạc.
- Tuổi thọ thực của pin phụ thuộc vào chế độ mạng, cài đặt sản phẩm, kiểu sử dụng, pin và điều kiện của môi trường.
- Không để những vật sắc cạnh như răng hoặc móng động vật tiếp xúc với pin. Làm như vậy có thể gây hỏa hoạn.

Cách cập nhật máy tính bảng của bạn

Truy cập các bản phát hành phần mềm cơ sở mới nhất, các chức năng và cải tiến phần mềm mới.

- Cập nhật máy tính bảng mà không cần máy tính: Chọn **Trung tâm cập nhật**  > **Cập nhật Phần mềm** > **Kiểm tra ngay để cập nhật**.
- Cập nhật máy tính bảng của bạn bằng cách kết nối điện thoại với Máy tính.

Để biết thêm thông tin về sử dụng chức năng này, vui lòng truy cập <http://www.lg.com/common/index.jsp> chọn quốc gia và ngôn ngữ.

TUYÊN BỐ HỢP CHUẨN

Thông qua tài liệu này, **LG Electronics** tuyên bố sản phẩm **LG-V400** này tuân thủ các yêu cầu cần thiết và các quy định có liên quan khác của Chỉ thị **1999/5/EC**. Bạn có thể tìm thấy bản sao của tuyên bố hợp chuẩn này tại <http://www.lg.com/global/declaration>

Thông báo quan trọng




Vui lòng đọc điều này trước khi bắt đầu sử dụng máy tính bảng!

Vui lòng kiểm tra xem liệu có trục trặc nào không với máy tính bảng như mô tả trong phần này trước khi đưa máy tính bảng đi sửa hoặc gọi đại diện dịch vụ.

1. Bộ nhớ máy tính bảng

Bạn cần phải kiểm tra bộ nhớ máy tính bảng và xóa một số dữ liệu, chẳng hạn như các ứng dụng, để giải phóng bộ nhớ.

Để gỡ cài đặt ứng dụng:

- 1 Nhấn vào tab  >  > **Ứng dụng** > **Cài đặt**  > **Ứng dụng**.
- 2 Khi tất cả các ứng dụng xuất hiện, chọn ứng dụng mà bạn muốn gỡ cài đặt.
- 3 Nhấn **Gỡ cài đặt** và **OK** để xác nhận.

2. Trước khi cài đặt ứng dụng nguồn mở và hệ điều hành (OS)




CẢNH BÁO

Nếu bạn cài đặt và dùng Hệ điều hành khác với hệ điều hành cho nhà sản xuất cung cấp thì có thể khiến cho máy tính bảng bị trục trặc. Ngoài ra, máy tính bảng sẽ không còn được bảo hành nữa.

CẢNH BÁO

Để bảo vệ máy tính bảng và dữ liệu cá nhân của mình, chỉ tải xuống các ứng dụng từ những nguồn tin cậy, chẳng hạn như Play Store. Nếu có ứng dụng bị cài đặt sai trên máy tính bảng thì máy có thể hoạt động không bình thường hoặc có thể xuất hiện lỗi nghiêm trọng. Bạn phải gỡ cài đặt các ứng dụng này và mọi dữ liệu và cài đặt liên kết ra khỏi máy tính bảng.

3. Sử dụng Khóa màn hình

Cài đặt khóa màn hình để bảo vệ máy tính bảng của bạn. Nhấn vào tab  > 
> **Ứng dụng** > **Cài đặt**  > **Hiển thị** > **Khóa màn hình** > **Chọn khóa màn hình** và chọn khóa màn hình mong muốn từ **Không có**, **Gạt**, **Knock Code**, **Kiểu mẫu**, **PIN** và **Mật khẩu**. Bạn có thể tạo PIN Dự phòng để đảm bảo an toàn trong trường hợp bạn quên khóa màn hình.

Cảnh báo: Tạo hoặc đăng nhập vào tài khoản Google trước khi cài đặt khóa màn hình và ghi nhớ PIN Dự phòng bạn đã tạo khi tạo khóa màn hình.

CẢNH BÁO

Cẩn trọng khi sử dụng khóa màn hình.

Bạn cần nhớ khóa màn hình bạn đã đặt. Bạn sẽ không thể truy cập máy tính bảng nếu bạn sử dụng khóa màn hình sai 5 lần. Bạn có 5 cơ hội để nhập hình mở khóa, PIN hoặc mật khẩu. Nếu bạn đã dùng cả 5 cơ hội, bạn có thể thử lại sau 30 giây.

Khi bạn không thể nhớ Hình, PIN hoặc Mật khẩu:

< Nếu bạn đã quên hình >

Nếu bạn đăng nhập vào tài khoản Google trên máy tính bảng nhưng không thể nhập hình đúng 5 lần, nhấn vào nút **Quên kiểu?** ở cuối màn hình. Sau đó, bạn sẽ được yêu cầu đăng nhập bằng Tài khoản Google của mình hoặc bạn phải nhập PIN Dự phòng mà bạn đã nhập khi tạo Hình khóa máy.

Nếu bạn chưa tạo tài khoản Google trên máy tính bảng hoặc bạn quên PIN Dự phòng, bạn phải thực hiện xác lập cứng.

< Nếu bạn quên PIN hoặc Mật khẩu >

Nếu bạn quên PIN hoặc Mật khẩu, bạn cần thực hiện xác lập cứng.







Cảnh báo: Nếu bạn thực hiện xác lập cứng, tất cả ứng dụng và dữ liệu người dùng sẽ bị xóa.

LƯU Ý: Nếu bạn chưa đăng nhập vào Tài khoản Google của mình và quên Hình, bạn cần nhập PIN Dự phòng.

4. Sử dụng Xác lập Cứng (Xác lập Cài đặt Gốc)

Nếu máy tính bảng không khôi phục điều kiện gốc, hãy dùng Xác lập Cứng (Xác lập Cài đặt Gốc) để khởi chạy nó.


- 1** Tắt máy tính bảng.
- 2** Trước tiên, nhấn và giữ **Phím Giảm âm lượng** || sau đó nhấn và giữ **Phím Nguồn/Khóa** || ở bên phải máy tính bảng cho đến khi logo LG được hiển thị.
- 3** Chỉ nhả tất cả các phím khi logo LG được hiển thị.
- 4** Ngay lập tức nhấn và giữ đồng thời **Phím Nguồn/Khóa** || + **Phím Giảm âm lượng** ||.

- 5 Nhả tất cả các phím khi màn hình Xác lập cứng về cài đặt gốc hiển thị.
- 6 Nhấn một trong hai **Phím Âm lượng**   để di chuyển con trỏ đến **Có**, sau đó nhấn **Phím Nguồn/Khóa**  để tiếp tục.
- 7 Nhấn một trong hai **Phím Âm lượng**   để di chuyển con trỏ đến **Có**, sau đó nhấn **Phím Nguồn/Khóa**  để xác nhận.
- 8 Thiết bị của bạn sẽ thực hiện xác lập cứng.

CẢNH BÁO


Nếu bạn thực hiện Xác lập cứng, tất cả ứng dụng người dùng, dữ liệu người dùng và giấy phép DRM sẽ bị xóa. Hãy nhớ sao lưu mọi dữ liệu quan trọng trước khi thực hiện Xác lập cứng.

5. Khi màn hình không hoạt động

Nếu màn hình không hoạt động hoặc máy tính bảng không phản hồi khi bạn cố gắng sử dụng: Nhấn và giữ **Phím Nguồn/Khóa**  trong hơn 8 giây cho đến khi logo LG được hiển thị để khởi động lại máy tính bảng của bạn. Nếu máy tính bảng vẫn không hoạt động, hãy liên hệ với trung tâm dịch vụ.

Tìm hiểu thiết bị

Tổng quan máy tính bảng

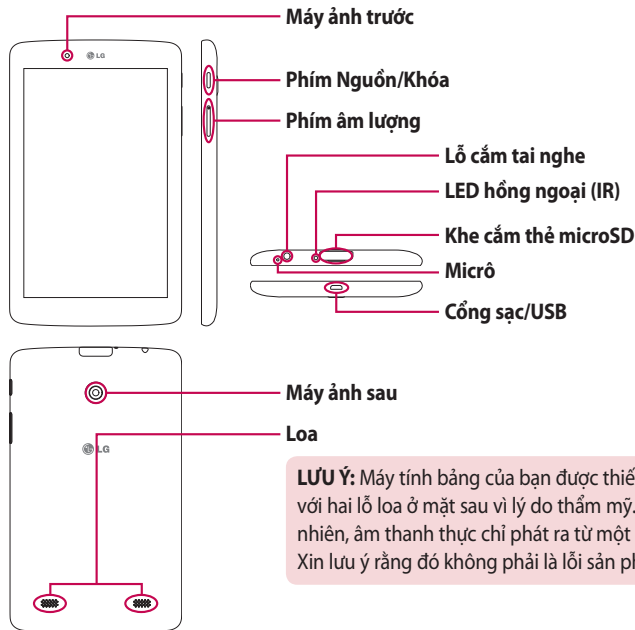



LƯU Ý: Đảm bảo micro không bị chặn khi ghi đoạn video hoặc đoạn nhạc.

| | |
|----------------------------|--|
| Máy ảnh trước | Sử dụng để chụp ảnh và ghi video bản thân. Bạn cũng có thể dùng nó để chat qua video. Giữ sạch ống kính để có hiệu quả tối ưu. |
| Phím Nguồn/Khóa | Nhấn khóa/mở khóa màn hình. Nhấn và giữ để bật/tắt máy tính bảng, khởi động lại nó, kích hoạt/bỏ kích hoạt chế độ trên máy bay và thay đổi cài đặt âm thanh. |
| Phím âm lượng | Cho phép bạn chỉnh âm lượng đa phương tiện. Nhấn và giữ cả hai phím cùng lúc để truy cập tính năng QuickMemo+. |
| Lỗ cắm tai nghe | Cho phép bạn cắm tai nghe tùy chọn để hội thoại tiện lợi, rảnh tay. Bạn cũng có thể cắm tai nghe để nghe nhạc. |
| LED hồng ngoại (IR) | Được sử dụng như là cảm biến cho ứng dụng QuickRemote. |
| Khe cắm thẻ microSD | Cắm thẻ microSD vào để lưu các tệp như nhạc, video và ảnh. |
| Micrô | Ghi giọng nói của bạn và cho phép sử dụng cho các chức năng ra lệnh bằng giọng nói. |
| Cổng sạc/USB | Cho phép bạn kết nối máy tính bảng và cáp USB để dùng với bộ sạc, PC hoặc các phụ kiện tương thích khác. |
| Máy ảnh sau | Dùng để chụp ảnh và ghi video. Giữ sạch ống kính để có hiệu quả tối ưu. |
| Loa | Dùng để nghe âm thanh từ chức năng được chọn (ví dụ: âm nhạc, video, clip âm thanh, v.v...). |

CẢNH BÁO

Đặt vật nặng lên máy tính bảng hoặc ngồi lên nó có thể gây hỏng LCD và các chức năng cảm biến màn hình.

MẸO!

- Nhấn **Phím Menu**  mỗi khi bạn mở một ứng dụng để kiểm tra các tùy chọn hiện có.
- Nếu thiết bị bị khóa và không hoạt động, nhấn và giữ **Phím Nguồn/Khóa**  trong hơn 8 giây cho đến khi logo LG được hiển thị để khởi động lại máy tính bảng của bạn.


Sạc máy

Củ sạc USB, có trong máy tính bảng, được dùng để sạc pin. Trước khi dùng máy lần đầu, phải đảm bảo pin được sạc đầy.

LƯU Ý: Máy của bạn có pin sạc trong. Để an toàn cho bạn, không tháo pin lắp trong sản phẩm.

Cảnh báo! Nếu màn hình cảm ứng không hoạt động khi máy đang sạc pin, có thể là do nguồn điện không ổn định. Nếu điều này xảy ra, hãy ngắt kết nối cáp USB khỏi thiết bị hoặc rút bộ sạc USB khỏi ổ cắm tường.

- 1 Kết nối củ sạc USB và cáp USB.
- 2 Cắm cáp USB (như hình bên dưới) vào cổng Sạc/USB của máy.
- 3 Cắm sạc vào ổ điện.

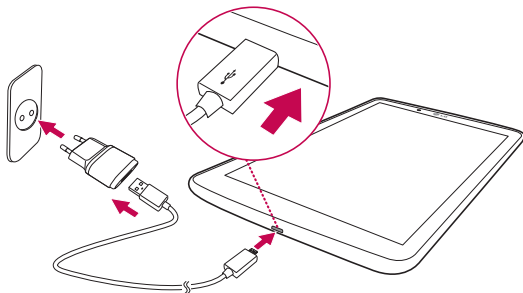

LƯU Ý: Pin phải được sạc đầy lần đầu tiên để nâng cao tuổi thọ pin.

Tối ưu Tuổi thọ của pin



Bạn có thể kéo dài tuổi thọ của pin giữa các lần sạc bằng cách tắt các tính năng bạn không cần chạy dưới nền. Bạn cũng có thể theo dõi cách thức ứng dụng và tài nguyên hệ thống tiêu thụ pin.

Để kéo dài tuổi thọ của pin



- Tắt truyền radio mà bạn không dùng, như Wi-Fi, Bluetooth hoặc GPS.
- Hạ độ sáng màn hình xuống và đặt thời gian tắt màn hình ngắn hơn.

- Tắt tự động đồng bộ hóa Gmail™, Lịch, Danh bạ và các ứng dụng khác.
- Một số ứng dụng mà bạn đã tải xuống có thể khiến điện năng pin của bạn sẽ bị giảm.
- Khi dùng các ứng dụng tải xuống, kiểm tra mức pin đã sạc.

Để xem mức sạc pin

- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Giới thiệu về máy tính bảng** > **Pin**.
- 2 Trạng thái pin (đang sạc hoặc ngắt sạc) và mức hiển thị ở menu phía trên màn hình.


Để theo dõi và kiểm soát sử dụng pin

- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Giới thiệu về máy tính bảng** > **Pin** > **Cách sử dụng pin**.
- 2 Màn hình hiển thị thời gian sử dụng pin và liệt kê các ứng dụng hoặc dịch vụ dùng điện năng của pin từ lượng lớn nhất tới nhỏ nhất.


Lắp thẻ microSD

Thiết bị của bạn hỗ trợ sử dụng các thẻ nhớ microSD có dung lượng tối đa 32 GB. Nội dung đa phương tiện có thể được lưu vào thẻ microSD.

- 1 Đặt móng tay vào chốt và nhẹ nhàng kéo nắp khe cắm thẻ nhớ ra để tháo.



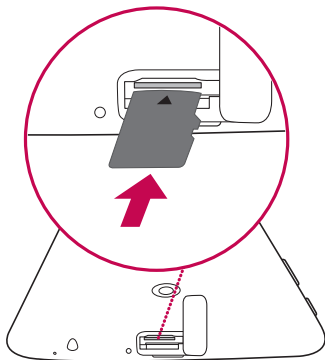

- 2 Lắp thẻ nhớ vào khe cắm với mặt tiếp xúc hướng về phía màn hình. Ấn cẩn thận nắp khe cắm thẻ nhớ vào máy tính bảng để đóng lại.



Tháo thẻ microSD



Để tháo thẻ microSD an toàn ra khỏi máy, đầu tiên bạn cần phải bỏ nó ra khỏi khay.

- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Bộ nhớ** > **Tháo thẻ SD**.
- 2 Mở khay thẻ microSD và ấn thẻ vào để nhả ra.
- 3 Kéo nhẹ thẻ microSD ra khỏi khe cắm.

Cảnh báo! Không tháo thẻ microSD mà chưa ngắt kết nối trước. Nếu không, nó có thể làm hỏng thẻ microSD cũng như máy của bạn còn dữ liệu lưu trên thẻ microSD có thể bị sai lệch.


Định dạng thẻ microSD

Cảnh báo! Tất cả các tệp được lưu trữ trên thẻ microSD sẽ bị xóa khi bạn định dạng thẻ.


- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Bộ nhớ**.
- 2 Nhấn **Xóa thẻ SD** (hai lần).
- 3 Nếu bạn đặt một hình mở khóa, hãy nhập hình mở khóa và nhấn **Xóa tất cả**. Thẻ nhớ sau đó sẽ được định dạng và sẵn sàng sử dụng.

LƯU Ý: Nếu có nội dung trên thẻ microSD, cấu trúc thư mục có thể khác sau khi định dạng do tất cả các tệp sẽ bị xóa.

Khóa và mở khóa màn hình


Nếu bạn không dùng máy tính bảng trong một khoảng thời gian, màn hình sẽ tự động tắt và khóa. Điều này giúp tránh vô tình chạm phải nút và tiết kiệm pin. Khi bạn không dùng máy, nhấn **phím Nguồn/Khóa**  để khóa máy tính bảng.

Nếu có bất kỳ chương trình nào đang chạy khi bạn khóa màn hình, chúng có thể vẫn chạy trong chế độ Khóa. Có khuyến nghị là bạn nên thoát mọi chương trình trước khi chạy chế độ Khóa để tránh bị tính phí không cần thiết (ví dụ như truy cập web, truyền dữ liệu).

Để đánh thức máy tính bảng, nhấn **Phím Nguồn/Khóa** . Màn hình Khóa xuất hiện. Chạm và trượt màn hình Khóa theo bất kỳ hướng nào để mở khóa màn hình Chủ. Màn hình cuối mà bạn đã xem sẽ mở ra.

Bật màn hình sử dụng tính năng Bật màn hình

Tính năng KnockON cho phép bạn chạm đúp trên màn hình để dễ dàng bật hoặc tắt màn hình.

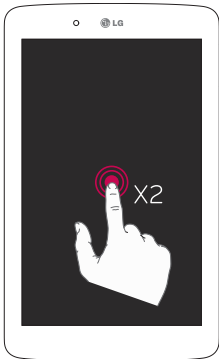



- Chạm đúp thật nhanh vào giữa màn hình để bật màn hình.
- Chạm đúp thật nhanh vào Thanh Trạng Thái, một khu vực trống trên Màn hình chủ, hoặc màn hình Khóa để tắt màn hình.

Mở khóa màn hình bằng tính năng Knock Code

Tính năng Knock Code cho phép bạn tạo mã mở khóa riêng bằng cách kết hợp các lần gõ (hoặc nhấn) trên màn hình.

- Khi màn hình tắt, nhấn theo cùng thứ tự bạn đã thiết lập ở bất kỳ đâu trên màn hình. Màn hình chủ sẽ được truy cập trực tiếp.

Để kích hoạt tính năng Knock Code

- 1 Từ màn hình chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Hiển thị** > **Khóa màn hình** > **Chọn khóa màn hình** > **Knock Code**.
- 2 Thao tác này sẽ mở ra một màn hình hướng dẫn bạn qua toàn bộ cách chọn trình tự mở khóa. Bạn phải tạo PIN dự phòng để đảm bảo an toàn trong trường hợp bạn quên trình tự mở khóa.

LƯU Ý: KnockON bị tắt khi Knock Code được sử dụng.

Màn hình chủ

Mẹo cho màn hình cảm ứng

Sau đây là một số mẹo về cách điều hướng trên máy tính bảng.

LƯU Ý:

- Để chọn một mục, hãy chạm vào điểm giữa của biểu tượng.
- Không nhấn quá mạnh; màn hình cảm ứng đủ nhạy cảm để nhận biết được một lần chạm nhẹ nhưng dứt khoát.
- Sử dụng đầu ngón tay để chạm vào tùy chọn bạn muốn. Hãy cẩn thận không chạm vào bất kỳ phím nào khác.

Nhấn hoặc chạm vào

Nhấn một ngón tay chọn các mục, đường liên kết, lối tắt và chữ cái trên bàn phím trên màn hình.

Chạm vào và giữ

Chạm vào và giữ một mục trên màn hình bằng cách chạm vào nó và không nhấc ngón tay lên cho tới khi có hành động xảy ra. Ví dụ, để mở tùy chọn có sẵn của liên hệ, chạm và giữ liên hệ trong Danh bạ cho đến khi menu ngữ cảnh mở ra.

Kéo

Chạm vào và giữ một mục trong giây lát rồi không nhấc ngón tay lên mà di ngón trên màn hình cho tới khi bạn tới vị trí đích. Bạn có thể kéo các mục trên màn hình Chủ để đặt lại chúng.

Vuốt mạnh hoặc trượt

Để vuốt mạnh hoặc trượt, di ngón tay thật nhanh qua bề mặt màn hình mà không dừng lại khi bạn chạm nó lần đầu (do bạn không kéo mục nào thay thế). Ví dụ: bạn có thể trượt màn hình lên hoặc xuống để cuộn qua một danh sách, hoặc duyệt qua các Màn hình chủ khác nhau bằng cách trượt từ trái sang phải (và ngược lại).

Chạm đúp

Nhấn đúp để phóng đại trang web hoặc bản đồ. Ví dụ: chạm đúp nhanh một mục của trang web để điều chỉnh mục đó cho vừa với độ rộng của màn hình. Bạn cũng có thể chạm hai lần để phóng to và thu nhỏ khi xem ảnh và khi sử dụng Bản đồ. Chạm đúp một từ để tô sáng nó. Chạm đúp cũng có thể kích hoạt tính năng KnockON để bật hoặc tắt màn hình cảm ứng.

Kẹp vào để thu phóng

Sử dụng ngón tay chỏ và ngón tay cái để kẹp và dàn chuyển động để phóng to hoặc thu nhỏ khi dùng trình duyệt hoặc Bản đồ, hoặc khi duyệt ảnh.


Xoay màn hình

Từ nhiều ứng dụng và trình đơn, định hướng màn hình điều chỉnh theo hướng vật lý của máy.

Màn hình chủ

Chỉ cần vuốt ngón tay sang trái hoặc phải để xem các ngăn. Bạn có thể tùy chỉnh từng ngăn với ứng dụng, tài xuống, widget và hình nền.

Các phím nhanh có ở phần cuối của màn hình Chủ và cung cấp cho bạn truy cập đơn giản, một chạm vào các chức năng hay dùng nhất.

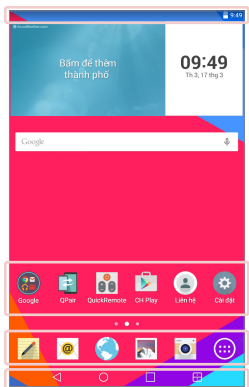

Thanh trạng thái – Hiển thị thông tin trạng thái thiết bị, bao gồm thời gian, cường độ tín hiệu, trạng thái pin và các biểu tượng thông báo.

Các biểu tượng ứng dụng – Nhấn vào biểu tượng (ứng dụng, widget, thư mục,...) để mở và dùng nó.

Các phím nhanh – Cung cấp truy cập một chạm, đơn giản vào các chức năng hay được dùng nhiều nhất.

Phím cửa sổ đôi – Nhấn để thay đổi chế độ cửa sổ đôi. Phím cửa sổ đôi cho phép bạn quản lý hai ứng dụng khác nhau cùng lúc bằng cách chia màn hình thành hai phần.

Phím Ứng dụng gần đây – Nhấn để hiển thị các ứng dụng được dùng gần đây. Bạn cũng có thể chạm và giữ phím này để hiển thị tùy chọn Menu trong ứng dụng.

Phím Home – Quay lại màn hình Chủ (hoặc quay lại trang nền Màn hình chủ từ bất kỳ trang nền mở rộng Màn hình chủ nào). Chạm và giữ phím Home để truy cập Google Hiện hành.

Phím trở về – Trở lại màn hình trước đó. Và đóng các mục thả xuống như trình đơn, hộp thoại và bàn phím trên màn hình. Chạm và giữ phím trở về để truy cập Cửa sổ đôi.


Tùy chỉnh màn hình Chủ

Bạn có thể tùy chỉnh màn hình Chủ bằng cách thêm ứng dụng, tài xuống, widget hoặc hình nền. Để thuận tiện hơn khi dùng máy tính bảng, hãy thêm các ứng dụng và widget ưa thích vào màn hình Chủ.

Để thêm các mục trên màn hình Chủ:

- 1 Bấm và giữ phần còn trống trên màn hình Chủ.
- 2 Nhấn vào tab **Ứng dụng** hoặc **Widgets**.
- 3 Kéo mục mong muốn vào vị trí định đặt và nhấn ngón tay của bạn lên.


Để xóa một mục khỏi màn hình Chủ:

Chạm vào và giữ biểu tượng bạn muốn bỏ đi, kéo nó vào , và nhấn ngón tay lên.

MẸO! Để thêm biểu tượng ứng dụng vào Màn hình chủ từ màn hình Ứng dụng, chạm và giữ ứng dụng bạn muốn thêm và kéo nó vào vị trí mong muốn.



MẸO! Bạn có thể thêm một vài biểu tượng ứng dụng trong một thư mục. Thả một biểu tượng ứng dụng qua biểu tượng khác trên màn hình Chủ và một thư mục sẽ được tạo ra.



Mở, chuyển đổi và dừng ứng dụng


Nhấn  để hiển thị các ứng dụng được dùng gần đây. Bạn có thể chạy nhiều ứng dụng cùng lúc và chuyển đổi giữa một số ứng dụng đang mở. Bạn cũng có thể dừng chạy ứng dụng theo cách thủ công.





Sử dụng Cửa sổ đôi

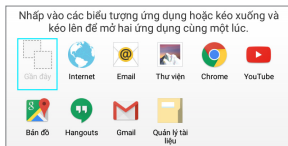Tính năng Cửa sổ đôi chia màn hình để cho phép thực hiện đa nhiệm, tương tác kéo và thả, tự động liên kết và ứng dụng được sử dụng gần đây.



- 1 Chạm  để chia màn hình hoặc chạm và giữ  cho đến khi danh sách ứng dụng được hiển thị.



- 2 Chạm hoặc kéo biểu tượng ứng dụng đến khoảng trống mong muốn.
- 3 Nhấn  để hiển thị các tùy chọn sau. Bạn cũng có thể kéo các tab để thay đổi kích thước của cửa sổ.

| | |
|--|-------------------------------|
|  | Chuyển đổi giữa hai màn hình. |
|  | Thay đổi danh sách ứng dụng. |
|  | Chế độ xem toàn màn hình. |
|  | Đóng ứng dụng. |

Đề tắt tính năng Cửa sổ đôi



- 1 Nhấn  > **Ứng dụng**  > **Cài đặt**  > **Hai cửa sổ**.
- 2 Nhấn vào công tắc cửa sổ đôi để chuyển thành **TẮT**.

MẸO! Bạn có thể khởi chạy hai ứng dụng **Internet** cùng lúc.

Tùy chỉnh biểu tượng ứng dụng trên Màn hình chủ


Bạn có thể tùy chỉnh từng biểu tượng ứng dụng với ảnh từ Thư viện của bạn.

- 1 Chạm và giữ một biểu tượng ứng dụng cho đến khi biểu tượng được mở khóa từ vị trí hiện tại. Sau đó thả biểu tượng vào màn hình. Biểu tượng chỉnh sửa sẽ xuất hiện ở góc trên bên phải của ứng dụng.
- 2 Chạm vào biểu tượng ứng dụng mong muốn rồi chạm **Thêm mới** rồi điều chỉnh kích thước biểu tượng và chọn hình ảnh từ Thư viện.

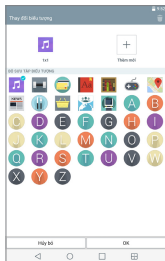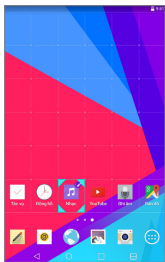


Để xem các ô khác trên Màn hình chủ

- Gạt (hoặc vuốt) ngón tay sang trái hoặc phải trên Màn hình chủ.
- Kẹp các ngón tay trên Màn hình chủ để hiển thị chế độ xem ô thu nhỏ, sau đó nhấn vào ô trên Màn hình chủ mà bạn muốn xem.

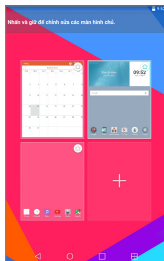

Truy cập nhanh

Để xem các mục truy cập nhanh, chạm vào vị trí bất kỳ trong khu vực phím mặt trước và kéo lên. Có các tùy chọn sau: Google Hiện hành.

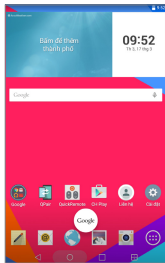

Thông báo

Thông báo cảnh báo cho bạn về tin nhắn mới đến, sự kiện lịch, báo thức cũng như sự kiện sắp diễn ra, chẳng hạn như tải xuống.

Từ Ô Thông báo, bạn có thể xem trạng thái hiện tại của máy tính bảng và thông báo đang chờ. Khi có thông báo, biểu tượng thông báo sẽ xuất hiện ở trên cùng của màn hình. Các biểu tượng cho thông báo đang chờ ở bên trái, các biểu tượng hệ thống hiển thị các nội dung như Wi-Fi hoặc mức pin ở bên phải.

Thông báo đang chờ



Thông báo hệ thống




Truy cập thông báo

Gạt Thanh trạng thái xuống để mở Ô thông báo và truy cập thông báo. Để đóng Ô Thông Báo, vuốt mạnh thanh ở cuối màn hình lên trên.



Thanh cài đặt nhanh – Vuốt sang phải hoặc trái để cuộn qua danh sách. Nhấn vào một biểu tượng để kích hoạt/hủy kích hoạt tính năng.

ỨNG DỤNG QSLIDE – Nhấn vào ứng dụng QSlide để mở dưới dạng cửa sổ nhỏ trên màn hình của bạn. Nhấn  để xóa, thêm hoặc sắp xếp lại các ứng dụng QSlide.

Trượt sang trái và phải để điều chỉnh độ sáng của màn hình và âm lượng.

Nút XÓA – Nhấn vào đây để xóa danh sách thông báo dựa trên sự kiện của bạn.



Nhấn vào một thông báo để mở.

Cài đặt nhanh trên Ô thông báo

Sử dụng Cài đặt nhanh để dễ dàng chuyển qua lại giữa các cài đặt chức năng như Wi-Fi. Cài đặt Nhanh được đặt phía trên của Ô Thông Báo.

LƯU Ý: Chạm và giữ một biểu tượng trong Thanh Cài đặt Nhanh để xem trình đơn cài đặt của chức năng.

Để sắp xếp lại các tùy chọn Cài đặt Nhanh trên Ô thông báo

Mở Ô thông báo, trượt Cài đặt nhanh sang bên trái và nhấn . Để sắp xếp lại các mục, kéo  đến vị trí mong muốn. Để thêm các biểu tượng khác, chọn các chức năng mong muốn.

Ứng dụng QSlide trên Ô thông báo

Các ứng dụng QSlide hiển thị trong thanh trên Ô thông báo bên dưới thanh Cài đặt Nhanh. Những biểu tượng này cung cấp cách thức nhanh, tiện lợi để đa tác vụ trong cùng một màn hình (tương tự với hình trong hình trên TV). QSlide hiển thị cửa sổ ứng dụng nhỏ trên màn hình có thể dời đi, định lại cỡ hoặc khiến cho trong suốt.




LƯU Ý: Bạn có thể xóa thanh ứng dụng QSlide bằng cách nhấn vào biểu tượng QSlide trong thanh Cài đặt nhanh.

Sử dụng các ứng dụng QSlide

Nhấn bất kỳ ứng dụng QSlide nào trong thanh này để kích hoạt nó. Khi đã kích hoạt, tính năng QSlide mở ứng dụng trong cửa sổ ở cận cảnh, cho phép bạn truy cập các ứng dụng khác trong nền. Bạn có thể mở hai cửa sổ QSlide cùng lúc.

Biểu tượng chỉ báo trên Thanh Trạng thái

Các biểu tượng liệt kê trong bảng dưới đây nằm trong số các biểu tượng phổ biến nhất.

| Biểu tượng | Mô tả |
|---|----------------------------|
|  | Chế độ trên máy bay |
|  | Kết nối vào mạng Wi-Fi |
|  | Đã kết nối tai nghe có dây |

| | |
|---|---|
|  | Bluetooth bật |
|  | Cảnh báo hệ thống |
|  | Đang bật chế độ rung |
|  | Chế độ im lặng đang bật |
|  | Đã sạc đầy |
|  | Đang sạc |
|  | Chia sẻ nội dung đang bật |
|  | Đang tải dữ liệu xuống |
|  | Đang tải dữ liệu lên |
|  | Báo thức đã được đặt |
|  | GPS bật |
|  | Đang đồng bộ dữ liệu |
|  | Thư Gmail mới |
|  | Thông báo Hangouts mới |
|  | Một bài hát hiện đang phát |
|  | Máy tính bảng được kết nối với PC qua cáp USB |
|  | Chế độ tiết kiệm pin đang bật |

Nhiều Người dùng

Chỉ có thể tạo một ID chủ sở hữu máy tính bảng nhưng có thể thêm nhiều ID người dùng để những người khác có thể đăng nhập và sử dụng máy tính bảng một cách độc lập. Mỗi người dùng có thể cấu hình các cài đặt máy tính bảng của mình, sử dụng dung lượng lưu trữ của mình và đặt các đặc quyền cập nhật ứng dụng của mình.



Đặc quyền của chủ sở hữu máy tính bảng

- Chỉ ID chủ sở hữu máy tính bảng mới có thể thêm một ID đăng nhập người dùng mới và xóa các ID người dùng.


Hạn chế nhiều người dùng máy tính bảng

- Tất cả người dùng chia sẻ chung pin, bộ nhớ trong và sử dụng dữ liệu với nhau.
- Các cài đặt ngôn ngữ do một người dùng đặt áp dụng cho tất cả người dùng khác.
- Mỗi người dùng có thể cấu hình và chỉ sử dụng nội dung và dữ liệu của mình (ví dụ: cài đặt Màn hình chủ, cài đặt Âm thanh, v.v...).
- Bất kỳ người dùng nào cũng có thể chấp nhận cho phép ứng dụng được cập nhật thay cho tất cả người dùng khác.
- Các tin nhắn và sự kiện được lên lịch sẽ được gửi để thông báo cho mỗi ID người dùng được chỉ định.
- Sau khi một người dùng bắt đầu in một tài liệu bằng In Di động, công việc in sẽ tiếp tục ngay cả khi ID người dùng bị thay đổi.
- Truyền dữ liệu, tải xuống, phát đa phương tiện và các dịch vụ giao tiếp sẽ dùng nếu ID người dùng bị thay đổi. Tuy nhiên, việc truyền dữ liệu qua Cửa hàng Play có thể vẫn tiếp tục ngay cả khi ID người dùng đã thay đổi.

Để thêm một người dùng mới vào máy tính bảng của bạn


- 1 Từ Màn hình chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Người dùng** > **Thêm mạng người dùng**.
- 2 Chọn loại người dùng mà bạn muốn thêm.
 - **Người dùng:** Người dùng có ứng dụng và nội dung riêng.
 - **Người dùng bị hạn chế:** Bạn có thể giới hạn truy cập vào ứng dụng và nội dung từ tài khoản của bạn.
- 3 Thuật sĩ thiết lập mở để giúp bạn thêm người dùng mới. Chạm **Thiết lập ngay bây giờ**.
 - Sau khi tạo người dùng mới, người đó sẽ cần hoàn thành quá trình thiết lập khi họ đăng nhập lần đầu tiên.

Để chuyển đổi người dùng

- 1 Kéo thanh Trạng thái ở trên cùng màn hình xuống.
- 2 Chạm vào biểu tượng người dùng  để hiển thị bảng chuyển đổi người dùng.
- 3 Chạm vào một trong các biểu tượng người dùng trên màn hình. Chọn từ tên chủ sở hữu hoặc bất kỳ tên người dùng nào khác mà bạn đã tạo.


QSlide


Chức năng QSlide cho phép cửa sổ phủ ảnh lên màn hình của máy tính bảng để dễ dàng thực hiện đa tác vụ. Các cửa sổ QSlide có thể được mở từ thanh **ỨNG DỤNG QSLIDE** trên ô Thông báo hoặc trực tiếp từ các ứng dụng hỗ trợ chức năng QSlide.

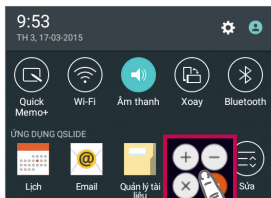

Mở Ô Thông Báo và nhấn ứng dụng mong muốn từ phần các **ỨNG DỤNG QSLIDE**.


HOẶC

Khi mở ứng dụng hỗ trợ QSlide, nhấn . Chức năng này sẽ hiển thị liên tục như một cửa sổ nhỏ trên màn hình.

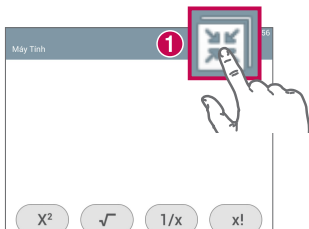

Sử dụng QSlide

Chức năng QSlide sẽ mở ứng dụng được liên kết trong cửa sổ ở cạnh cạnh, cho phép bạn truy cập các ứng dụng khác trong nền. Chức năng này được hiển thị liên tục trên màn hình cho đến khi bạn đóng lại.

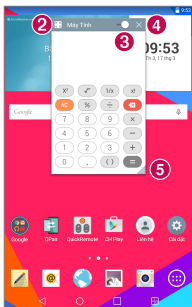

| | | |
|---|--|---|
| 1 | | Nhấn để chạy QSlide. |
| 2 | | Nhấn để thoát QSlide và quay lại cửa sổ đầy đủ. |
| 3 | | Nhấn để điều chỉnh mức trong suốt. |
| 4 | | Nhấn để thoát QSlide. |
| 5 | | Nhấn để điều chỉnh kích thước. |

LƯU Ý: Chức năng QSlide có thể hỗ trợ tới hai cửa sổ cùng lúc. QSlide chỉ hỗ trợ các ứng dụng sau: Video, Internet, Lịch, Email, Quản lý Tài liệu và Máy tính.

Chụp ảnh màn hình

Nhấn và giữ **Phím Giảm âm lượng** và **Phím Nguồn/Khóa** cùng lúc trong 2 giây để chụp ảnh màn hình của màn hình hiện tại.

Để xem ảnh đã chụp, đi tới thư mục **Ứng dụng** > **Thư viện** > **Screenshots**.

Sử dụng QuickMemo+ để chụp ảnh màn hình


Trên màn hình mà bạn muốn chụp, kéo Thanh trạng thái xuống và chọn **QuickMemo+** .

HOẶC

Nhấn và giữ các **Phím Âm lượng** cùng lúc.


Sử dụng Chụp thêm để chụp ảnh màn hình

Tính năng này cho phép bạn chụp vị trí màn hình trong trình duyệt Internet mặc định.

- 1 Mở ứng dụng **Internet** và điều hướng đến trang mà bạn muốn chụp ảnh màn hình.
- 2 Nhấn **Phím Menu**  > **Chụp ảnh nâng cao**.
- 3 Điều chỉnh hộp màu xanh thành kích thước mong muốn, sau đó nhấn **Lưu**. Khu vực lựa chọn được lưu vào thư mục **Capture plus** trong Thư viện.

Phương thức nhập văn bản

Bàn phím ảo tự động hiển thị trên màn hình khi bạn cần nhập văn bản. Để hiển thị bàn phím ảo theo cách thủ công, chỉ cần nhấn vào trường văn bản nơi bạn muốn nhập văn bản.

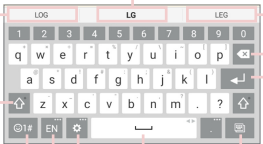

The diagram shows a virtual keyboard with several callout boxes explaining its functions:

- Gợi ý từ** (Word suggestions): Located at the top left and top right of the keyboard.
- Hiển thị từ bạn đã nhập.** (Show words you've entered): Located at the top center of the keyboard.
- Chạm một lần để viết hoa chữ cái tiếp theo bạn nhập. Chạm hai lần để viết hoa tất cả.** (Tap once to capitalize the next letter you enter. Tap twice to capitalize all): Located on the left side of the keyboard.
- Chạm chuyển sang bàn phím số và ký hiệu.** (Tap to switch to the numeric and symbol keyboard): Located on the bottom left of the keyboard.
- Chạm để chọn ngôn ngữ bàn phím.** (Tap to select the keyboard language): Located on the bottom left of the keyboard.
- Chạm để xóa ký tự đứng trước.** (Tap to delete the character before): Located on the right side of the keyboard.
- Chạm để tạo một dòng mới trong trường tin nhắn.** (Tap to create a new line in the message field): Located on the right side of the keyboard.
- Chạm để chọn một trong các loại bàn phím mong muốn.** (Tap to select one of the keyboard types you want): Located on the bottom right of the keyboard.
- Nhấn để nhập dấu cách.** (Tap to enter a space): Located on the bottom right of the keyboard.
- Chạm để truy cập cài đặt bàn phím LG. Chạm và giữ để truy cập khay phương tiện.** (Tap to access LG keyboard settings. Tap and hold to access the tray): Located on the bottom right of the keyboard.

Nhập từ được gợi ý bằng điều khiển thao tác


Nhập văn bản trên bàn phím và các gợi ý từ có liên quan sẽ xuất hiện. Nhấn hoặc vuốt lên ở phía bên trái của bàn phím để chọn gợi ý bên trái. Nhấn hoặc vuốt lên ở phía bên phải của bàn phím để chọn gợi ý bên phải.

Chia bàn phím bằng thao tác


Tính năng chia đôi bàn phím cho phép bạn sử dụng cả hai tay để nhập. Mỗi nửa bàn phím sẽ thu về bên trái và phải của màn hình.

Để thay đổi chiều cao bàn phím

Điều chỉnh chiều cao của bàn phím để hiển thị thêm màn hình và để điều khiển bàn phím dễ dàng hơn.

- Nhấn  > **Chiều cao và cách bố trí bàn phím** > **Chiều cao bàn phím khi quay dọc** > Nhấn và kéo biểu tượng  để điều chỉnh chiều cao bàn phím.

Để thay đổi các phím ở hàng dưới cùng

- Nhấn  > **Chiều cao và cách bố trí bàn phím** > **Bố trí bàn phím QWERTY** > Nhấn và kéo để thêm hoặc xóa phím hoặc thay đổi thứ tự.

LƯU Ý: Chỉ có thể tùy chỉnh các bàn phím QWERTY, QWERTZ, AZERTY. Chức năng này không hỗ trợ một số ngôn ngữ.

Nhập các ký tự đặc biệt

Bàn phím màn hình cho phép bạn nhập các ký tự đặc biệt (ví dụ, "á").

Ví dụ, chạm và giữ phím mong muốn (ví dụ, phím "a"). Sau khi ký tự mong muốn xuất hiện, trượt ngón tay qua nó và nhấc nó lên để nhập.

LƯU Ý: Một biểu tượng ở góc phải trên cùng của phím cho biết các ký tự bổ sung sẵn có.

Thiết lập tài khoản Google

Khi bạn bật máy lần đầu, bạn có cơ hội kích hoạt mạng, đăng nhập vào tài khoản Google và chọn cách mình muốn dùng một số dịch vụ Google.

Để thiết lập tài khoản Google

- Đăng nhập Tài khoản Google từ màn hình thiết lập được nhắc.

HOẶC

- Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Cài đặt**  > **Tài khoản & đồng bộ hóa** > **Thêm tài khoản** > **Google**.

Nếu bạn đã có tài khoản Google, hãy nhập địa chỉ email và nhấn **TIẾP THEO**. Nếu không, chạm vào **HOẶC TẠO TÀI KHOẢN MỚI** và nhập thông tin cần thiết để tạo Tài khoản Google mới.

Sau khi bạn đã thiết lập tài khoản Google trên máy tính bảng thì máy sẽ tự động đồng bộ hóa với tài khoản Google của bạn trên Web.

Danh bạ, tin nhắn Gmail, sự kiện trong Lịch và các thông tin khác từ những ứng dụng và dịch vụ này trên Web đều được đồng bộ hóa với máy tính bảng của bạn. (Điều này tùy thuộc vào cài đặt đồng bộ hóa của bạn).

Sau khi đăng nhập, bạn có thể dùng Gmail™ và có lợi thế của các dịch vụ Google trên máy tính bảng của mình.

Kết nối với Mạng và Thiết bị



Wi-Fi

Với Wi-Fi, bạn có thể sử dụng truy cập Internet tốc độ cao trong vùng phủ sóng của điểm truy cập (AP) không dây. Tận hưởng Internet không dây với Wi-Fi mà không phải trả thêm phí.

Kết nối với mạng Wi-Fi

Để dùng Wi-Fi trên máy tính bảng, bạn cần truy cập điểm truy cập không dây hoặc 'điểm phát sóng'. Một số điểm truy cập mở và bạn chỉ cần kết nối vào mạng. Các nội dung khác được ẩn hoặc sử dụng các tính năng bảo mật; bạn phải lập cấu hình máy tính bảng để có thể kết nối với chúng. Tắt Wi-Fi khi không sử dụng để kéo dài tuổi thọ của pin.

Bật Wi-Fi và kết nối với mạng Wi-Fi

- 1 Từ Màn hình chủ, nhấn vào tab **Ứng dụng**  > **Ứng dụng** > **Cài đặt**  > **Wi-Fi**.
- 2 Nhấn để bật Wi-Fi và bắt đầu dò mạng Wi-Fi có sẵn.
- 3 Nhấn **Tìm kiếm** để xem danh sách các mạng Wi-Fi đang hoạt động và trong phạm vi phủ sóng.
 - Các mạng an toàn có biểu tượng chiếc khóa.
- 4 Chạm vào một mạng để kết nối.
 - Nếu mạng được bảo mật, bạn được nhắc nhập mật khẩu hoặc thông tin đăng nhập khác. (Hỏi quản trị mạng để biết thông tin)
- 5 Thanh Trạng thái hiển thị các biểu tượng cho biết trạng thái Wi-Fi.

Bluetooth




Bạn có thể sử dụng Bluetooth để gửi dữ liệu bằng cách chạy ứng dụng tương ứng, nhưng không phải từ menu Bluetooth như trên hầu hết các điện thoại di động và máy tính bảng khác.


LƯU Ý:

- LG không chịu trách nhiệm cho việc mất mát, chặn hoặc sử dụng không đúng dữ liệu được gửi hoặc nhận qua tính năng không dây Bluetooth.
- Luôn đảm bảo rằng bạn chia sẻ và nhận dữ liệu với các thiết bị được tin cậy và bảo vệ phù hợp. Nếu có vật cản giữa các thiết bị, khoảng cách hoạt động có thể bị giảm.
- Một số thiết bị, đặc biệt là những thiết bị chưa được Bluetooth SIG kiểm tra hay chấp thuận, có thể không tương thích với thiết bị của bạn.

Bật Bluetooth và ghép đôi máy tính bảng của bạn với một thiết bị Bluetooth

Bạn phải ghép nối thiết bị của mình với thiết bị khác trước khi kết nối với thiết bị đó.

- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Cài đặt**  > **Bluetooth**.
- 2 Nhấn vào công tắc Bluetooth  để bật.
- 3 Nhấn vào hộp kiểm bên cạnh tên máy tính bảng của bạn để các thiết bị Bluetooth khác có thể nhìn thấy máy tính bảng của bạn.

LƯU Ý: Để chọn thời lượng thiết bị của bạn sẽ hiển thị, nhấn **Khóa Menu**  > **Hết thời gian nhìn thấy được**.


- 4 Một danh sách thiết bị khả dụng sẽ được hiển thị. Nhấn thiết bị bạn muốn ghép đôi từ danh sách.

LƯU Ý: Tùy thuộc vào loại thiết bị mà bạn có thể phải nhập mã khớp, xác nhận mã khớp hoặc thiết bị có thể tự động ghép nối.

- 5 Sau khi ghép đôi thành công, máy tính bảng của bạn sẽ kết nối với thiết bị kia.

LƯU Ý: Máy tính bảng của bạn không hỗ trợ Cấu hình Rảnh tay. Do vậy, sử dụng các tính năng gọi với những phụ kiện như tai nghe Bluetooth hoặc các thiết bị chấp nhận Bluetooth có thể không sẵn sàng cho thiết bị này.

Gửi dữ liệu bằng tính năng Bluetooth

- 1 Mở mục này và nhấn .

HOẶC

Chạm và giữ mục này rồi chọn **Chia sẻ**.

HOẶC

Mở mục này và nhấn **Khóa Menu**  > **Chia sẻ**.

- 2 Nhấn **Bluetooth** để chia sẻ qua Bluetooth.

LƯU Ý: Phương pháp chọn tùy chọn có thể thay đổi theo loại dữ liệu.

- 3 Tìm kiếm và ghép nối với thiết bị hỗ trợ Bluetooth.



Nhận dữ liệu bằng tính năng Bluetooth

- 1 Tham khảo hướng dẫn sử dụng của thiết bị Bluetooth để gửi tệp đến máy tính bảng của bạn. Cả hai thiết bị phải được ghép nối và Bluetooth phải đang bật.
- 2 Ghép đôi các thiết bị và nhấn **Chấp nhận** khi bạn nhận được Đề nghị cho phép Bluetooth để chấp nhận (các) tệp.

SmartShare

Bạn có thể dễ dàng sử dụng tính năng SmartShare trong các ứng dụng Thư viện, Nhạc và các ứng dụng khác.

Sử dụng nội dung qua nhiều thiết bị

Bạn có thể chia sẻ nội dung trên máy tính bảng của bạn với nhiều thiết bị. Chạm  hoặc chạm  > **SmartShare Beam** để chia sẻ nội dung trong các ứng dụng Thư viện, Nhạc, POLARIS Office 5.

Phát/Gửi

Play – Bạn có thể phát nội dung qua TV, loa Bluetooth hoặc v.v.

Beam – Bạn có thể gửi nội dung đến thiết bị Bluetooth và SmartShare Beam được hỗ trợ.

- **SmartShare Beam** – Tính năng này cho phép truyền nội dung nhanh chóng qua Wi-Fi Direct.



Tận hưởng nội dung từ các thiết bị lân cận

Bạn có thể tận hưởng nội dung từ các thiết bị lân cận (chẳng hạn như PC, NAS, Mobile) trong ứng dụng Thư viện, Nhạc.

Kết nối thiết bị

Kết nối thiết bị của bạn và các thiết bị khác được hỗ trợ DLNA trong cùng mạng Wi-Fi.

Tìm kiếm các thiết bị khác

Nhấn **Các thiết bị lân cận**, sau đó bạn có thể nhìn thấy các thiết bị được hỗ trợ DLNA.

Kết nối thiết bị để xem nội dung.

Sử dụng nội dung từ Mây

Bạn có thể sử dụng nội dung từ mây (ví dụ: Dropbox) trong ứng dụng Thư viện, Nhạc.

Sử dụng Mây

LƯU Ý: Các tính năng được hỗ trợ có thể khác nhau tùy theo mây. Truy lục dữ liệu có thể mất chút thời gian tùy theo mây.

- 1 Chọn **Mây** trong ứng dụng Thư viện, Nhạc.
- 2 Chọn mây bạn muốn sử dụng và đăng nhập.
- 3 Bạn có thể sử dụng nội dung của mây sau khi đăng nhập.
- 4 Đặt cài đặt mây để chọn ứng dụng để sử dụng mây.

QPair

Bằng cách kết nối với máy tính bảng và điện thoại di động của bạn qua QPair, bạn có thể đồng bộ hóa các cuộc gọi đến, tin nhắn và thông báo mạng xã hội giữa máy tính bảng và điện thoại di động.



- 1 Trước tiên, chạy **QPair**  và nhấn **Cài đặt ban đầu** > **Bắt đầu** trên máy tính bảng, sau đó chạy các bước tương tự trên điện thoại của bạn.

MẸO! QPair có thể không được cài đặt trước trên điện thoại. Vào Google Play Store và tìm kiếm QPair rồi cài đặt nó.

LƯU Ý:

- QPair làm việc với các điện thoại chạy Android 4,1 trở lên. Một số tính năng có thể bị hạn chế tùy thuộc vào kiểu điện thoại của bạn.
 - Vì QPair sử dụng chức năng Bluetooth nên ứng dụng có thể không hoạt động bình thường nếu bạn thay đổi cài đặt Bluetooth trong khi đang sử dụng QPair.
- 2 Kết nối Bluetooth sẽ được tự động bật.

Các tính năng QPair

Thông báo cuộc gọi – Gửi thông báo tới máy tính bảng khi điện thoại nhận cuộc gọi. Thông báo này hiển thị số người gọi và cho phép bạn từ chối cuộc gọi. Bạn cũng có thể thay đổi cài đặt cuộc gọi, chẳng hạn như nhạc chuông, âm lượng nhạc chuông, nhạc chuông kèm rung hoặc gửi tin nhắn từ chối khi có cuộc gọi.

LƯU Ý: Bạn chỉ có thể nhận cuộc gọi được công nghệ Bluetooth hỗ trợ. Không thể thực hiện quay số cuộc gọi từ máy tính bảng bằng tính năng QPair.

Tin nhắn thông báo – Gửi thông báo tới máy tính bảng khi điện thoại nhận tin nhắn. Bạn cũng có thể thay đổi cài đặt tin nhắn, chẳng hạn như tin nhắn bật lên, xem trước tin nhắn, âm thông báo và rung thông báo.

Thông báo SNS – Hiển thị thông báo mạng xã hội trên Thanh trạng thái của máy tính bảng khi điện thoại của bạn nhận được thông báo.

LƯU Ý: Để bật tính năng này, bật tùy chọn **Thông báo mạng xã hội QPair** trên điện thoại của bạn (**Cài đặt > Khả năng truy cập > Thông báo mạng xã hội QPair**). Tùy chọn này cho phép bạn nhận được thông báo mạng xã hội trên máy tính bảng của mình.

QuickMemo+ Chuyên – Lưu QuickMemo+ hiện tại trong Thư viện của máy tính bảng, sau đó đồng bộ hóa Thư viện của máy tính bảng với Thư viện trên điện thoại của bạn.

Internet qua điện thoại – Tự động kết nối máy tính bảng của bạn với kết nối Internet qua điện thoại di động (là điểm phát sóng Wi-Fi). Sử dụng tính năng này có thể làm phát sinh cước dữ liệu. Để lưu sử dụng dữ liệu trên điện thoại, điện thoại sẽ tự động kết nối với bất kỳ điểm phát sóng Wi-Fi tin cậy nào trong phạm vi.

Kết nối máy tính bằng cáp USB

Bạn có thể kết nối máy tính bảng với PC để sạc, truyền mục từ máy tính bảng đến PC và ngược lại.

Chuyển nhạc, ảnh và video bằng chế độ Thiết bị đa phương tiện (MTP)

- 1 Kết nối máy tính bảng của bạn với PC dùng cáp USB.
- 2 Nếu bạn chưa cài Trình điều khiển LG Android Platform trên máy tính, bạn cần thay đổi cài đặt theo cách thủ công. Để thay đổi cài đặt, hãy trượt Thanh trạng thái xuống dưới và chạm vào chế độ kết nối USB hiện hành > **Thiết bị đa phương tiện (MTP)**.
- 3 Bây giờ, bạn có thể xem nội dung trong Thiết bị đa phương tiện trên máy tính và chuyển tệp.

LƯU Ý: Nếu bạn muốn thay đổi cài đặt kết nối PC, hãy trượt Thanh trạng thái xuống dưới và chọn tùy chọn chế độ kết nối USB. Cài đặt này chỉ hiển thị trên Thanh trạng thái khi bạn kết nối cáp USB với máy tính bảng.

Đồng bộ hóa với Windows Media Player

Đảm bảo Windows Media Player đã cài đặt trên máy tính của bạn.

- 1 Sử dụng cáp USB để kết nối máy tính bảng với máy tính đã cài đặt Windows Media Player.
- 2 Chọn tùy chọn **Thiết bị đa phương tiện (MTP)**.
- 3 Khi đã kết nối, một cửa sổ bật lên sẽ xuất hiện trên máy tính. Chọn tùy chọn Windows Media Player để đồng bộ hóa các tệp nhạc.
- 4 Sửa hoặc nhập tên của thiết bị trong cửa sổ bật lên (nếu cần thiết).
- 5 Chọn và kéo tệp nhạc vào danh sách đồng bộ hóa.
- 6 Bắt đầu đồng bộ hóa.

- Cần đáp ứng các yêu cầu sau để đồng bộ hóa với Windows Media Player.

| Các mục | Yêu cầu |
|-------------------------------|--|
| Hệ điều hành | Microsoft Windows XP SP2, Vista hoặc cao hơn |
| Phiên bản Window Media Player | Windows Media Player 10 trở lên |

- Nếu phiên bản Windows Media Player thấp hơn 10, cài đặt phiên bản 10 hoặc mới hơn.

Kết nối với máy tính bằng cáp USB đối với người dùng Mac OS X


Bạn có thể chuyển nội dung đa phương tiện sang máy tính Mac OS X từ máy tính bảng và ngược lại bằng cách thiết lập chương trình Android File Transfer.

- 1 Tải xuống và cài đặt chương trình Android File Transfer từ trang web android.com dành cho Người dùng Mac (<http://www.android.com/filetransfer/>).
- 2 Kết nối máy tính bảng với máy tính và bấm đúp vào ứng dụng AFT (chương trình Android File Transfer) để khởi động ứng dụng.
- 3 Bạn có thể xem nội dung đa phương tiện, kéo và thả tệp đa phương tiện đến và từ máy tính bảng (hoặc máy tính).





Liên hệ

Bạn có thể thêm các danh bạ trên máy tính bảng và đồng bộ hóa với danh bạ trong Tài khoản Google của mình hoặc các tài khoản khác có hỗ trợ đồng bộ hóa danh bạ.

Tìm kiếm liên hệ

- 1 Từ Màn hình chủ, nhấn **Liên hệ**  để mở danh sách liên hệ của bạn.
- 2 Nhấn vào ô **Tìm liên hệ** và nhập tên liên hệ. Bạn cũng có thể nhấn một chữ cái dọc cạnh bên trái của màn hình để truy cập các tên bắt đầu bằng chữ cái được chọn.



Thêm liên hệ mới

- 1 Từ Màn hình chủ, nhấn **Liên hệ** .
- 2 Nhấn **Liên hệ mới** . Chọn tài khoản mong muốn (nếu áp dụng).
- 3 Nếu bạn muốn thêm ảnh vào liên hệ mới, chạm . Chọn từ **Chụp ảnh** để chụp một bức ảnh dùng máy quay hoặc **Chọn từ thư viện**. Sau đó duyệt tìm một hình ảnh và chọn hình ảnh đó.
- 4 Nhấn  để nhập thông tin tên cụ thể hơn.
- 5 Nhập chi tiết về liên hệ của bạn.
- 6 Chạm **Lưu**.


Liên hệ ưa thích

Bạn có thể phân loại các liên hệ được gọi thường xuyên làm liên hệ ưa thích.



Để thêm liên hệ vào danh sách ưa thích

- 1 Từ màn hình Chủ, nhấn **Liên hệ**  để mở các liên hệ.
- 2 Bấm vào một liên hệ để xem chi tiết.
- 3 Nhấn ngôi sao  vào bên phải tên liên hệ. Ngôi sao này sẽ chuyển sang màu vàng và liên hệ sẽ được thêm vào mục ưa thích của bạn.

Để xoá liên hệ từ danh sách ưa thích

- 1 Từ màn hình Chủ, nhấn **Liên hệ**  để mở các liên hệ.
- 2 Nhấn thẻ **Ưa Thích** để xem các liên hệ ưa thích.
- 3 Bấm vào một liên hệ để xem chi tiết.
- 4 Nhấn ngôi sao màu vàng phía bên phải tên liên hệ. Ngôi sao chuyển sang màu xám và liên hệ được xoá khỏi danh sách ưa thích của bạn.

Tạo nhóm


- 1 Từ màn hình Chủ, nhấn **Liên hệ**  để mở các liên hệ.
- 2 Chạm vào tab **Nhóm**, sau đó chạm .
- 3 Nhập tên cho nhóm mới.
 - Nhấn **Thêm thành viên** để thêm mục nhập liên hệ vào nhóm mới của bạn.
 - Nhấn vào trường **TÀI KHOẢN** để thay đổi (các) tài khoản mà bạn muốn lưu nhóm mới.
- 4 Chạm **Lưu** để lưu nhóm.

LƯU Ý: Nếu bạn xoá nhóm, các liên hệ được chỉ định vào nhóm đó sẽ không bị mất. Chúng vẫn còn trong danh bạ.

Email

Bạn có thể sử dụng ứng dụng Email để đọc email từ các dịch vụ như Yahoo!, MSN và AOL. Ứng dụng Email hỗ trợ các loại tài khoản sau: POP3, IMAP và Exchange. Nhà cung cấp dịch vụ hoặc quản trị viên hệ thống của bạn có thể cung cấp các cài đặt tài khoản bạn cần.

Quản lý tài khoản email

Nhấn **Email**  trên Màn hình chủ. Lần đầu bạn mở ứng dụng Email, một trình hướng dẫn cài đặt mở ra để giúp bạn thiết lập tài khoản email.

Sau khi thiết lập từ đầu, nội dung của hộp thư đến được hiển thị. Nếu bạn đã thêm nhiều hơn một tài khoản, bạn có thể chuyển giữa các tài khoản.


Để thêm tài khoản email khác:

- Mở ứng dụng **Email** và nhấn **Phím Menu**  > **Cài đặt** > **Thêm tài khoản**.



Để chuyển đổi giữa các tài khoản:

Nếu bạn đã thêm nhiều hơn một tài khoản, bạn có thể dễ dàng chuyển giữa chúng. Từ bất kỳ thư mục e-mail nào, nhấn tài khoản hiện tại (ở phía trên màn hình) rồi nhấn tài khoản bạn muốn truy cập.

Để thay đổi cài đặt chung của email:

Mở ứng dụng **Email** và nhấn **Phím Menu**  > **Cài đặt** > **Cài đặt chung** để cấu hình cài đặt áp dụng cho tất cả các tài khoản của bạn. Nhấn một tài khoản để cấu hình các cài đặt chỉ áp dụng cho tài khoản đó.

Để xóa tài khoản email:




- Mở ứng dụng **Email** và nhấn **Phím Menu**  > **Cài đặt** > **Phím Menu**  > **Xóa tài khoản** > chạm vào tài khoản mà bạn muốn xóa > **Gỡ bỏ** > **Có**.

Làm việc với thư mục tài khoản

Mở ứng dụng **Email** và nhấn **Phím Menu**  và chọn **Thư mục**.

Mỗi tài khoản đều có thư mục Hộp thư đến, Hộp thư đi, Đã gửi và Nháp. Tùy thuộc vào các tính năng do nhà cung cấp dịch vụ của tài khoản hỗ trợ, bạn có thể có các thư mục bổ sung.

Soạn và gửi email

- 1 Khi trong ứng dụng **Email**, nhấn **Soạn** .
- 2 Nhập địa chỉ của người nhận thư. Khi bạn nhập văn bản, các địa chỉ trùng khớp sẽ được gợi ý từ Danh bạ. Phân tách nhiều địa chỉ bằng dấu chấm phẩy.
- 3 Nhấn **Đính kèm**  để đính kèm tệp, nếu cần.
- 4 Nhập chủ đề và tin nhắn.
- 5 Nhấn **Gửi**  để gửi tin nhắn.

Nếu bạn không kết nối với mạng, ví dụ, nếu bạn đang làm việc trong chế độ trên máy bay, tin nhắn mà bạn gửi đi sẽ được lưu trong Hộp thư đi cho tới khi bạn kết nối mạng một lần nữa. Nếu hộp thư có chứa thư đang chờ xử lý, Hộp thư đi sẽ được hiển thị trên màn hình Tài khoản.

Nhận e-mail

Khi có một e-mail mới trong Hộp thư đến của bạn, bạn sẽ được thông báo bởi một âm thanh hoặc rung (tùy vào các cài đặt âm thanh và rung của bạn) và biểu tượng thông báo xuất hiện trên Thanh trạng thái.

Giải trí

Máy Ảnh

Để mở ứng dụng Máy ảnh, chạm **Máy Ảnh**  trên Màn hình chủ.

Làm quen với kính ngắm








- 1 Chế độ xem gọn** – Chạm để hiển thị hoặc ẩn các menu trên kính ngắm.
- 2 Chuyển đổi máy ảnh** – Chuyển đổi giữa máy ảnh sau và máy ảnh trước. Bạn cũng có thể chuyển đổi máy ảnh bằng cách trượt màn hình.
- 3 Cài đặt** – Chạm biểu tượng này để mở menu cài đặt.
- 4 Thư viện** – Chạm để xem ảnh cuối mà bạn đã chụp. Điều này cho phép bạn truy cập Thư viện và xem các ảnh đã lưu trong chế độ máy quay.
- 5 Chế độ video** – Nhấn để bắt đầu quay video.
- 6 Chụp** – Chụp ảnh.
- 7 Thoát** – Chạm để thoát máy ảnh.

LƯU Ý: Xin đảm bảo ống kính máy ảnh được sạch sẽ trước khi chụp ảnh.


Sử dụng các cài đặt nâng cao

Trong kính ngắm, chạm  để mở tất cả các tùy chọn nâng cao.

| | |
|--|--|
|  | Chọn độ phân giải của ảnh. Nếu bạn chọn độ phân giải cao, kích thước tệp sẽ tăng lên, có nghĩa là bạn sẽ lưu được ít ảnh hơn trong bộ nhớ. MẸO! Màn hình sẽ được phóng to nếu bạn đặt chế độ ghi thành HD . |
|  | Chụp ảnh bằng khẩu lệnh. |
|  | Đặt thời gian chờ sau khi nhấn nút chụp. Cài đặt này lý tưởng khi bạn muốn có mặt của mình trong ảnh. |
|  | Hiển thị các đường lưới trên màn hình để giúp bạn căn chỉnh ảnh. |
|  | Mở hướng dẫn trợ giúp để biết chức năng hoạt động như thế nào. |

MẸO! Khi bạn thoát máy ảnh, một số cài đặt sẽ trở về cài đặt mặc định, chẳng hạn như bộ hẹn giờ. Kiểm tra các cài đặt này trước khi chụp ảnh tiếp.

Chụp Ảnh


- 1 Mở ứng dụng **Máy ảnh**.
- 2 Hướng ống kính về phía đối tượng bạn muốn chụp ảnh.
- 3 Chạm  hoặc vị trí bất kỳ trên màn hình để chụp ảnh.

Để phóng to hoặc thu nhỏ

Khi chụp ảnh hoặc quay video, đặt hai ngón tay ở vị trí bất kỳ trên màn hình và di chuyển để phóng to. Để thu nhỏ lại, chạm lại.

Chụp ảnh bằng cử chỉ tay

Tính năng Chụp ảnh bằng cử chỉ tay cho phép bạn chụp ảnh bằng cử chỉ tay với máy ảnh trước. Để chụp ảnh, bạn hãy giơ tay lên với lòng bàn tay xòe mở cho đến khi máy ảnh trước phát hiện ra và xuất hiện một ô trên màn hình. Sau đó, nắm tay lại và bộ hẹn giờ sẽ khởi động, cho phép bạn có thời gian để tạo dáng.

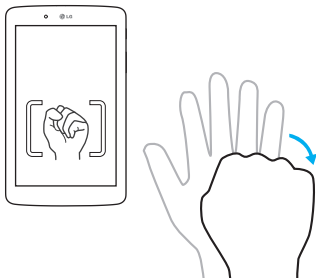

Khi bạn đã chụp ảnh

- 1 Nhấn vào xem trước ảnh bằng nút chụp để xem ảnh cuối cùng bạn đã chụp.
- 2 Nhấn **Thư viện** hoặc **Ảnh**, sau đó nhấn **OK**.



Chạm để chỉnh sửa ảnh.



Chạm để chụp ngay ảnh khác.



Chạm để gửi ghi nhớ của bạn cho người khác hoặc chia sẻ qua dịch vụ mạng xã hội.



Chạm để xóa ảnh.



Chạm để truy cập các tùy chọn khác.



Chạm để thêm ảnh vào mục ưa thích của bạn.

MẸO! Nếu bạn có tài khoản mạng xã hội và thiết lập nó trên máy tính bảng, bạn có thể chia sẻ ảnh của mình với cộng đồng mạng xã hội.

Chạm vào biểu tượng **Menu**  để mở các tùy chọn sau.

SmartShare – Chạm để chia sẻ ảnh bằng chức năng SmartShare.

Đặt hình làm – Chạm để sử dụng ảnh làm **Hình nền màn hình chính, Ảnh của liên hệ, Hình nền Khóa màn hình** hoặc **Hình nền**.

Dời – Chạm để di chuyển ảnh sang album khác.

Sao chép – Chạm để sao chép ảnh được chọn và lưu vào album khác.

Sao chép đến trang lưu Clip – Chạm để sao chép ảnh và lưu trữ trong Khay phương tiện.

Trình chiếu – Tự động hiển thị lần lượt các hình ảnh trong thư mục hiện tại.

Xoay Trái/Phải – Chạm để xoay ảnh sang trái hoặc sang phải.

Cắt – Cắt ảnh. Di chuyển ngón tay qua màn hình để chọn vùng cần cắt.

Thêm vị trí – Để thêm thông tin về vị trí.



Đổi tên – Chạm để chỉnh sửa tên của ảnh đã chọn.

In – Cho phép bạn in ảnh.

Chi tiết – Hiển thị thêm thông tin về ảnh.

Xem ảnh đã lưu

Bạn có thể truy cập các ảnh đã lưu khi ở chế độ máy ảnh. Chỉ cần nhấn vào xem trước ảnh cạnh nút chụp và Thư viện của bạn sẽ được hiển thị.

1 Chọn ứng dụng sử dụng để xem và/hoặc chỉnh sửa ảnh của bạn. Nhấn **Thư viện**  hoặc **Ảnh** .

2 Nhấn **OK**.

- Để xem các ảnh khác, cuộn sang trái hoặc sang phải.
- Để phóng to hoặc thu nhỏ, chạm đúp vào màn hình hoặc đặt hai ngón tay và di chuyển hai ngón tay cách xa nhau (di chuyển các ngón tay của bạn gần nhau hơn để thu nhỏ).

Quay video

1 Mở ứng dụng **Máy Ảnh**.



2 Hướng ống kính về phía đối tượng mà bạn muốn quay video.

3 Chạm vào biểu tượng Chế độ video  để bắt đầu quay.

4 Một bộ hẹn giờ hiển thị chiều dài video sẽ hiện ra.

5 Chạm  trên màn hình để dừng quay.

MẸO!

- Nhấn  để tạm dừng quay.
- Nhấn  để chụp ảnh màn hình khi quay video.

Xem các video đã lưu

Truy cập các video đã lưu của bạn từ chế độ máy quay video bằng cách nhấn xem trước ảnh cạnh nút chụp.

1 Trong kính ngắm, nhấn xem trước hình ảnh cạnh nút chụp.

2 **Thư viện** của bạn sẽ xuất hiện trên màn hình hiển thị video được quay gần đây nhất. Trượt về bên trái để cuộn sang các video khác của bạn.

3 Nhấn biểu tượng Phát  trên video để tự động phát.

LƯU Ý: Bạn có thể xem video của mình trong ứng dụng Thư viện và Ảnh.

LƯU Ý: Không nhấn quá mạnh; màn hình cảm ứng đủ nhạy cảm để nhận biết được một lần chạm nhẹ nhưng dứt khoát.

Thư viện

Bạn có thể lưu nhiều tệp đa phương tiện vào bộ nhớ trong để bạn có thể truy cập dễ dàng tất cả các tệp đa phương tiện. Sử dụng ứng dụng này để xem các tệp đa phương tiện như hình ảnh và video.


Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Thư viện** .

Bạn có thể quản lý và chia sẻ tất cả tệp hình ảnh và video với Thư viện.

LƯU Ý:





- Một số định dạng tệp không được hỗ trợ, tùy thuộc vào phần mềm được cài đặt trên thiết bị.
- Một số tệp không thể phát đúng cách, tùy thuộc vào cách mã hóa các tệp đó.
- Nếu kích thước tệp vượt quá bộ nhớ hiện có, lỗi có thể xảy ra khi bạn mở tệp.

Xem hình ảnh

Khởi chạy ứng dụng **Thư viện**  hiển thị các thư mục khả dụng của bạn. Khi một ứng dụng khác, chẳng hạn như Email, lưu hình ảnh, thư mục Tải xuống sẽ được tạo tự động để chứa hình ảnh đó. Tương tự, khi chụp ảnh chụp màn hình cũng sẽ tự động tạo thư mục Screenshots (Ảnh chụp màn hình). Nhấn một thư mục để mở nó.

Hình ảnh được hiển thị theo thứ tự theo ngày tạo. Chọn một hình ảnh để xem toàn màn hình. Cuộn sang trái hoặc sang phải để xem hình ảnh tiếp theo hoặc hình ảnh trước.

Phát video



Mở ứng dụng **Thư viện**  và chọn album. Biểu tượng Phát  được hiển thị trên các tệp video. Nhấn một hình ảnh để chọn. Chọn ứng dụng để phát ảnh (nhấn ứng dụng **Ảnh**  hoặc ứng dụng **Video** ), sau đó nhấn **OK** và video bắt đầu phát lại.

LƯU Ý:

- Khi sử dụng ứng dụng Videos để phát video, trượt cạnh trái của màn hình lên và xuống để điều chỉnh độ sáng màn hình. Trượt cạnh bên phải màn hình lên và xuống để điều chỉnh âm lượng.
- Khi sử dụng ứng dụng Video để phát video, trượt màn hình sang trái hoặc phải để tua lại hoặc tua đi.

Xóa ảnh và video

Sử dụng một trong các phương pháp sau:

- Trong thư mục, nhấn  và chọn ảnh và video mà bạn muốn xóa, sau đó nhấn **Xóa**, **Có** để xác nhận.
- Khi xem ảnh hoặc video, nhấn , sau đó nhấn **Có** để xác nhận.


Đặt làm hình nền

Khi xem ảnh, nhấn vào biểu tượng **Menu**  > **Đặt hình làm** và chọn **Hình nền màn hình chính**, **Hình nền Khóa màn hình** hoặc **Hình nền**.

Trình chiếu

Bạn có thể xem các ảnh chụp của mình trong một trình chiếu slide theo album hoặc bằng cách chọn tất cả ảnh chụp của bạn. Từ Màn hình chủ, nhấn **Thư viện**






- Nhấn vào album có ảnh mà bạn muốn xem, sau đó nhấn vào biểu tượng **Menu**  > **Trình chiếu** > chọn hình ảnh mà bạn muốn xem > **Tiếp theo** > xác minh cài đặt trình chiếu > **Bắt đầu**.


Chạm vào giữa màn hình để dừng phát trình chiếu.




Video





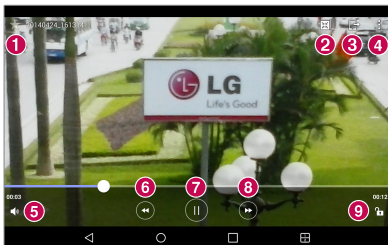

Thư viện của bạn có trình phát video được tích hợp cho phép bạn phát tất cả các video ưa thích của mình.

Phát video


- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Thư viện**  > **Video** .
- 2 Chọn video mà bạn muốn phát.



- | | |
|--|--|
| 1  | Chạm để thêm video vào mục ưa thích của bạn. |
| 2  | Chạm vào truy cập QSlide và hiển thị video trong cửa sổ nhỏ. |
| 3  | Chạm để chia sẻ video qua chức năng SmartShare. |



| | | |
|---|---|---|
| 4 |  | Chạm để truy cập các tùy chọn khác. |
| 5 |  | Chạm để quản lý âm lượng video. |
| 6 |  | Chạm và giữ để quay lại với khoảng gia tăng 3 giây. Nhấn một lần để quay lại 10 giây. |
| 7 |  | Chạm để tạm dừng phát lại video. |
| 8 |  | Chạm và giữ để di chuyển nhanh về phía trước với khoảng gia tăng 3 giây. Nhấn một lần để di chuyển nhanh về phía trước 10 giây. |
| 9 |  | Chạm để khóa/mở khóa màn hình video. |

Để thay đổi âm lượng khi xem video, nhấn các Phím Âm Lượng ở cạnh phải của máy tính bảng.

Chạm **Thư viện** >  (ở góc trên bên trái của thanh tiêu đề) > **Video**, sau đó chạm và giữ một video trong danh sách để truy cập các tùy chọn sau: **Chia sẻ**, **Xóa**, **Rút ngắn**, **Đổi tên** và **Chi tiết**.

MẸO! Trong khi đang xem một video, trượt lên và xuống dọc cạnh bên trái của màn hình để điều chỉnh độ sáng của màn hình. Trượt lên và xuống dọc cạnh bên phải của màn hình để điều chỉnh âm lượng.



Nhạc


Máy tính bảng của bạn có máy phát nhạc cho phép chơi mọi bài hát ưa thích của bạn. Để truy cập máy phát nhạc, từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Nhạc** .









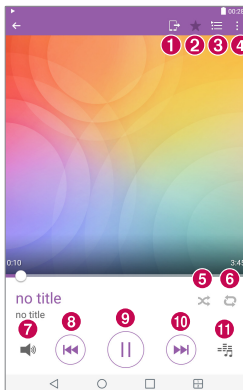


Chuyển nhạc bằng chế độ Thiết bị phương tiện (MTP)

- 1 Kết nối máy tính bằng dây cáp USB.
- 2 Chọn tùy chọn **Thiết bị phương tiện (MTP)**. Máy tính bằng sẽ xuất hiện làm ổ cứng khác trên máy tính của bạn. Bấm vào ổ này để xem. Sao chép các tệp từ PC sang thư mục ổ lưu trữ.

Phát bài hát

- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Nhạc** .
- 2 Chạm vào thẻ **Bài hát**.
- 3 Chọn bài hát mà bạn muốn phát.



| | | |
|----|---|---|
| 1 |  | Chạm để chia sẻ nhạc của bạn qua chức năng SmartShare. |
| 2 |  | Chạm để đặt bài hát hiện tại là ưa thích. |
| 3 |  | Chạm để xem danh sách phát Phát bây giờ. |
| 4 |  | Chạm để truy cập các tùy chọn khác. |
| 5 |  | Chạm để đặt chế độ trộn bài. |
| 6 |  | Chạm để đặt chế độ lặp lại. |
| 7 |  | Chạm để kiểm soát âm lượng cho nhạc. |
| 8 |  | Chạm để quay lại phần đầu của bài hát. Chạm hai lần để trở về bài hát trước. Chạm và giữ để tua lại 3 giây. |
| 9 |  | Chạm để tạm dừng phát lại. |
| 10 |  | Chạm để chuyển đến bài hát tiếp theo trong album hoặc trong danh sách nhạc. Chạm và giữ để tua đi 3 giây. |
| 11 |  | Chạm vào để đặt hiệu ứng âm thanh. |

Để thay đổi âm lượng khi nghe nhạc, nhấn các Phím Âm Lượng ở cạnh phải của máy tính bảng.

Chạm và giữ bất kỳ bài hát nào trong danh sách để truy cập các tùy chọn sau:

Phát, Thêm vào danh sách nhạc, Xóa, Chia sẻ, Chi tiết và Tìm kiếm.




LƯU Ý:

- Một số định dạng tệp không được hỗ trợ, tùy thuộc vào phần mềm thiết bị.
- Nếu kích thước tệp vượt quá bộ nhớ hiện có, lỗi có thể xảy ra khi bạn mở tệp.
- Bản quyền của các tệp nhạc được bảo hộ theo các công ước quốc tế và luật bản quyền của các quốc gia. Do đó, có thể cần xin phép hoặc mua giấy phép để sao chép nhạc. Luật quốc gia của một số nước cấm sao chép tài liệu được bảo hộ bởi bản quyền cho mục đích cá nhân. Trước khi tải xuống hoặc sao chép tệp, vui lòng kiểm tra luật quốc gia của quốc gia liên quan về việc sử dụng tài liệu như vậy.

QuickMemo+







Tính năng QuickMemo+ cho phép bạn tạo các ghi nhớ và chụp ảnh màn hình. Chụp ảnh màn hình, vẽ trên ảnh và chia sẻ chúng với gia đình và bạn bè với chức năng QuickMemo+.





Tạo ghi nhớ

- 1 Từ Màn hình chủ, nhấn **QuickMemo+** , sau đó nhấn  để tạo ghi nhớ mới.
- 2 Bạn có thể chỉnh sửa văn bản bằng cách nhập trực tiếp từ hoặc chọn loại bút và màu mà bạn muốn sử dụng và nhập văn bản bằng chữ viết tay.
- 3 Thêm lời nhắc bằng cách chạm  để đặt thông báo lời nhắc cho sự kiện.
- 4 Thêm thông tin thời tiết và vị trí vào ghi nhớ của bạn nếu mạng dữ liệu khả dụng.


Sử dụng các tùy chọn của QuickMemo+

Có các tùy chọn sau trong thanh công cụ QuickMemo+ ở phía trên màn hình.

| | |
|---|---|
|  | Chạm để mở ghi nhớ trong QSlide. |
|  | Cho phép bạn hoàn tác và làm lại các hành động trước đây. |
|  | Cho phép bạn chỉnh sửa văn bản, màu và căn chỉnh văn bản. |
|  | Cho phép bạn nhập văn bản bằng chữ viết tay. Bạn có thể chọn loại bút để sử dụng và độ dày, độ mờ và màu của bút. |
|  | Xóa các chỉnh sửa mà bạn đã thực hiện đối với ghi nhớ. |
|  | Lưu ghi nhớ trong QuickMemo+. |

| | |
|---|--|
|  | Chạm để truy cập các tùy chọn khác. |
|  | Cho phép bạn đặt thông báo lời nhắc cho một sự kiện. |
|  | Cho phép bạn chèn thông tin thời tiết vào ghi nhớ. |
|  | Cho phép bạn thêm thông tin vị trí bằng GPS. |



Chụp ảnh màn hình cho QuickMemo của bạn


1 Để truy cập tính năng QuickMemo+, trượt Thanh trạng thái xuống dưới và chạm .

HOẶC

Nhấn các **Phím Âm lượng** cùng lúc trong một giây.

2 Chọn tùy chọn menu mong muốn từ thanh công cụ và tạo ghi nhớ.

3 Nhấn  để lưu ghi nhớ. Để thoát QuickMemo+ bất kỳ lúc nào, nhấn **Phím Quay lại** .

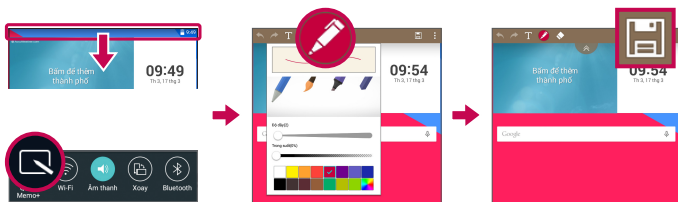

LƯU Ý: Vui lòng sử dụng đầu ngón tay khi sử dụng QuickMemo+. Không sử dụng móng tay.

QuickRemote


QuickRemote biến máy tính bảng của bạn thành Điều khiển từ xa vạn năng cho TV tại nhà, Blu-ray hoặc DVD.

LƯU Ý: QuickRemote có thể không có sẵn đối với một số thiết bị và khu vực.


Để mở và cấu hình QuickRemote

1 Từ Màn hình chủ, nhấn vào tab **Ứng dụng**  > **Ứng dụng** > **QuickRemote**



Bạn cũng có thể thực hiện cài đặt ban đầu cho QuickRemote của mình từ Bảng Thông báo. Trượt Thanh trạng thái xuống dưới, nhấn vào biểu tượng **QuickRemote** , sau đó nhấn **THÊM ĐIỀU KHIỂN TỪ XA**.


2 Chạm vào  **Phòng khách** để chọn kiểu phòng và chạm  để thêm thiết bị.

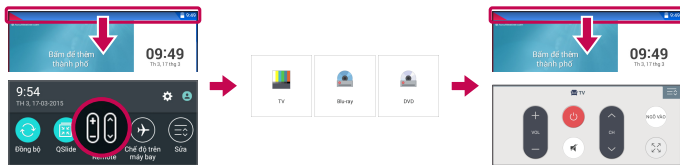

3 Chọn loại và nhãn hiệu thiết bị rồi làm theo hướng dẫn trên màn hình để cấu hình (các) thiết bị.


LƯU Ý: QuickRemote hoạt động tương tự như hồng ngoại (IR) điều khiển từ xa thông thường trong khu vực hoặc nước bạn. Cần cẩn trọng không được che cảm biến hồng ngoại ở phía trên máy tính bảng khi dùng chức năng QuickRemote. Chức năng này có thể không được hỗ trợ tùy thuộc vào kiểu máy, nhà sản xuất hoặc đại lý dịch vụ.

Sử dụng QuickRemote

- 1 Mở **QuickRemote**  và chọn phòng mà bạn cấu hình điều khiển từ xa.
- 2 Chọn điều khiển mà bạn muốn bằng cách nhấn vào loại/tên của điều khiển trên thanh QuickRemote dọc theo bên trái của màn hình.
- 3 Nhấn các nút trên điều khiển đã hiển thị.

LƯU Ý: Khi thêm điều khiển từ xa của TV, QuickRemote có thể sử dụng nút **ĐẦU VÀO** để cấu hình điều khiển từ xa phù hợp. Khi cấu hình nút **ĐẦU VÀO**, nguồn vào của TV có thể bị thay đổi. Để đặt lại nguồn vào của TV, nhấn nút **ĐẦU VÀO** trên QuickRemote vài lần (tùy thuộc số thiết bị đã kết nối trên TV).




Các tùy chọn QuickRemote


Để truy cập menu tùy chọn QuickRemote, nhấn biểu tượng **Menu**  để chọn tùy chọn mong muốn.

LƯU Ý: Khi phát nhạc trên nền, nhấn bất kỳ nút QuickRemote nào sẽ làm tắt tiếng trong một giây.

Đồng hồ



Đặt báo thức

- 1 Từ Màn hình chủ, nhấn vào tab **Ứng dụng**  > **Ứng dụng** > **Đồng hồ**  > .
- 2 Đặt thời gian báo thức mong muốn.
- 3 Đặt **Lặp lại**, **Thời gian tạm dừng**, **Rung khi âm thanh báo thức**, **Chuông báo thức**, **Âm lượng báo thức**, **Bộ khởi động ứng dụng tự động**, **Khóa bằng cách di chuyển giữa các ô** và **Ghi nhớ**.
- 4 Chạm **Lưu**.



LƯU Ý: Để thay đổi cài đặt báo thức trong màn hình danh sách báo thức, chạm vào biểu tượng **Menu**  và chọn **Cài đặt**.

Máy Tính

Sử dụng máy tính

- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Máy Tính** .
- 2 Chạm các phím số để nhập số.
- 3 Đối với các phép tính đơn giản, nhấn chức năng bạn muốn thực hiện ($+$, $-$, \times hoặc \div) tiếp sau là $=$.




LƯU Ý:

- Để tính toán phức tạp hơn, chạm vào biểu tượng **Menu** , chọn **Máy tính bỏ túi**, sau đó chọn chức năng mong muốn.
- Để xem lịch sử phép toán, nhấn vào biểu tượng **Menu**  > **Lịch sử tính toán**.

Lịch

Các sự kiện từ mỗi tài khoản mà bạn thêm vào máy tính bảng và cấu hình để đồng bộ hóa lịch được hiển thị trong Lịch của bạn.


Thêm một sự kiện vào lịch

- 1 Từ màn hình Chủ, chạm **Ứng dụng**  > thẻ **Ứng dụng** > **Lịch** .
- 2 Nhấn vào menu ở góc trên cùng bên trái để thay đổi chế độ xem lịch (Ngày, Tuần, Tháng, Năm, Lịch trình).
- 3 Nhấn vào ngày mà bạn muốn thêm sự kiện và nhấn .

- 4 Chạm trường **Tên sự kiện** và nhập tên sự kiện.
- 5 Chạm trường **Vị trí** và nhập vị trí. Chọn ngày và nhập thời gian bạn muốn bắt đầu và kết thúc sự kiện.
- 6 Nếu bạn muốn thêm ghi chú vào sự kiện, chạm trường **Mô tả** và nhập chi tiết.
- 7 Nếu bạn muốn lặp lại báo thức, đặt **LẶP LẠI** và đặt **LỜI NHẮC**, nếu cần.
- 8 Chạm **Lưu** để lưu sự kiện trên lịch.




LƯU Ý: Chạm và giữ một điểm trên lịch để nhanh chóng lưu một sự kiện lịch vào ngày hôm đó. Chỉ cần nhập tên và thời gian của sự kiện, sau đó nhấn **Lưu**. Bạn có thể nhấn **Chi tiết** và nhập thêm thông tin hoặc cập nhật thêm thông tin cho sự kiện sau.

Để thay đổi chế độ xem lịch của bạn

Bất kể bạn đang ở đâu trong ứng dụng Lịch, bạn có thể dễ dàng chuyển đổi giữa các chế độ xem lịch. Chỉ cần nhấn  ở góc trên cùng bên trái của thanh tiêu đề hoặc ở phía bên trái của màn hình, trượt ngón tay từ trái sang phải để hiển thị menu các chế độ xem lịch. Nhấn **Ngày**, **Tuần**, **Tháng**, **Năm** hoặc **Lịch trình**.

Tác vụ

Ứng dụng Tác vụ có thể được đồng bộ với tài khoản MS Exchange của bạn. Bạn có thể tạo và quản lý các tác vụ của mình bằng máy tính bảng của bạn hoặc từ MS Outlook hoặc MS Office Outlook Web Access.

- 1 Từ Màn hình chủ, nhấn **Ứng dụng**  > **Tác vụ** .
- 2 Nhấn vào biểu tượng **Thêm** tác vụ  (ở góc trên bên phải của màn hình).
- 3 Nhập **Chủ đề**, **NGÀY BẮT ĐẦU**, **THỜI HẠN**, **MÔ TẢ**, **LẶP LẠI** và **LỜI NHẮC** nếu cần.
- 4 Chạm **Lưu**.

Quản lý tài liệu

Ứng dụng Quản lý tài liệu cho phép bạn quản lý các tệp trong bộ nhớ trong/ngoài.








Quản lý tài liệu giúp dễ dàng xem và thay đổi tệp của bạn. Chỉ cần nhấn vào loại tệp (Tất cả tệp, tệp Nhạc, tệp Ảnh, tệp Video, tệp Tài liệu hoặc tệp Mây), sau đó nhấn vào thư mục cần thiết để tìm tệp của bạn.

Để mở ứng dụng Quản lý tài liệu

- Từ Màn hình chủ, nhấn tab **Ứng dụng**  > **Ứng dụng** > **Quản lý tài liệu** .

Các tùy chọn Quản lý tài liệu

Mở ứng dụng **Quản lý tài liệu** > **Tất cả tệp** > **Bộ nhớ Trong** để truy cập vào các tùy chọn sau (ở đầu màn hình):


| | |
|--|---|
|  | Cho phép bạn mở Quản lý tài liệu trong cửa sổ QSlide. |
|  | Cho phép bạn tìm kiếm tệp hoặc thông tin. |
|  | Cho phép bạn tạo thư mục mới. |
|  | Cho phép bạn chuyển tệp và thư mục sang vị trí mới. |
|  | Cho phép bạn sao chép tệp và thư mục sang vị trí mới. |
|  | Cho phép bạn xóa tệp và thư mục. |
|  | Cho phép bạn truy cập các tùy chọn khác. |

Ghi âm

Sử dụng máy ghi âm để ghi lại các ghi nhớ thoại hoặc các tệp âm thanh khác.

Ghi âm thanh hoặc giọng nói

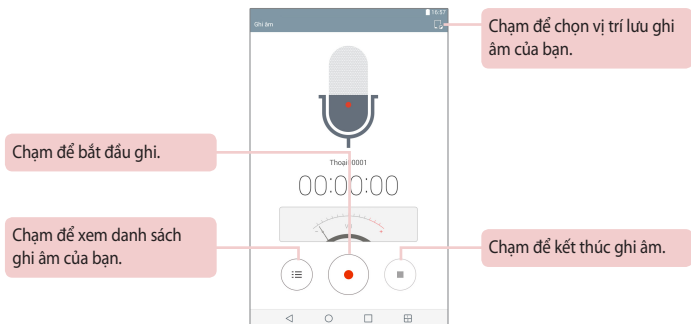

- Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Ghi âm** .



LƯU Ý: Thời gian ghi hiện tại có thể khác so với thời gian ghi thực tế.

Quản lý ghi nhớ thoại của bạn



Từ màn hình danh sách Máy ghi âm:

- Nhấn vào biểu tượng **Chia sẻ**  để chia sẻ ghi nhớ thoại bằng các lựa chọn có sẵn.
- Nhấn vào biểu tượng **Xóa**  để chọn ghi nhớ thoại mà bạn muốn xóa.
- Chạm và giữ ghi nhớ thoại để mở ghi nhớ ngữ cảnh để chọn **Chia sẻ**, **Xóa**, **Đổi tên**, **Rút ngắn** hoặc **Chi tiết**.



POLARIS Office 5

POLARIS Office 5 là giải pháp văn phòng di động chuyên nghiệp cho phép người dùng xem nhiều kiểu tài liệu văn phòng một cách thuận tiện, bao gồm các tệp Word, Excel và PowerPoint, bất kỳ ở đâu và lúc nào, khi dùng các thiết bị di động.

Để tạo tài liệu mới


- 1 Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **POLARIS Office 5** .
- 2 Đăng ký địa chỉ email trên trang Đăng ký.

LƯU Ý: Bạn có thể nhấn **Bỏ qua** để bỏ qua thông tin đăng ký.

- 3 Nhấn  để bắt đầu tài liệu mới.
- 4 Nhấn kiểu tài liệu từ danh sách thả xuống, sau đó chọn một mẫu.
- 5 Nhập nội dung trong tài liệu bằng cách dùng các công cụ ở phía trên màn hình và bàn phím ảo.
- 6 Khi bạn hoàn thành công việc trên tài liệu, nhấn  (ở góc trên bên trái của màn hình), sau đó nhấn **Lưu** (hoặc **Lưu làm** để nhập tên tài liệu mới) để lưu.
- 7 Nhập tên tài liệu và chạm **Lưu**.

Để xem và sửa tài liệu trên thiết bị của bạn

Bây giờ bạn có thể xem dễ dàng và sửa nhiều kiểu tệp, bao gồm các tài liệu Microsoft Office và Adobe PDF, ngay trên các thiết bị di động.

- 1 Mở **POLARIS Office 5** và tìm kiếm tài liệu.
- 2 Chạm vào tài liệu mà bạn muốn xem hoặc chỉnh sửa.
Khi xem tài liệu bằng POLARIS Office 5, các đối tượng và bố cục vẫn giữ nguyên như tài liệu gốc.
- 3 Để chỉnh sửa tài liệu, nhấn .

Google+

Sử dụng ứng dụng Google+ để giữ kết nối với mọi người thông qua dịch vụ mạng xã hội của Google.




Từ Màn hình chủ, nhấn vào tab **Ứng dụng**  > **Ứng dụng** > **Google**  > **Google+** .

LƯU Ý: Ứng dụng có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.


LG SmartWorld

LG SmartWorld cung cấp tập hợp nội dung thú vị – phòng chữ, chủ đề, trò chơi, ứng dụng.

Cách tải LG SmartWorld từ máy tính bảng của bạn

- 1 Chạm  > **Ứng dụng**  > tab **Ứng dụng** > chạm vào biểu tượng  để truy cập LG SmartWorld.
 - 2 Chọn quốc gia của bạn và đăng nhập.
 - 3 Tải xuống nội dung bạn muốn.
- Khi bạn sử dụng mạng di động, bạn có thể phải trả phí dữ liệu tùy thuộc vào gói cước dữ liệu mà bạn đã đăng ký với nhà khai thác mạng.
 - LG SmartWorld có thể không khả dụng cho tất cả các nhà khai thác mạng hoặc quốc gia.

LƯU Ý: Nếu không có biểu tượng thì sao?

- 1** Sử dụng trình duyệt Web di động, truy cập LG SmartWorld (www.lgworld.com) và chọn quốc gia của bạn.
- 2** Tải xuống Ứng dụng LG SmartWorld.
- 3** Chạy và cài đặt tệp đã tải xuống.
- 4** Truy cập LG SmartWorld bằng cách nhấn vào biểu tượng .

Lợi ích đặc biệt chỉ có ở LG SmartWorld









- 1** Tô điểm phong cách của bạn trên điện thoại thông minh bằng cách cá nhân hóa điện thoại với chủ đề Màn hình chủ, chủ đề bàn phím và phông chữ được cung cấp trên LG SmartWorld. (Tuy nhiên, dịch vụ này chỉ khả dụng với các thiết bị cụ thể. Hãy truy cập trang web LG SmartWorld để kiểm tra tính khả dụng).
- 2** Trải nghiệm dịch vụ đặc biệt của LG SmartWorld bằng cách tham gia các chương trình khuyến mãi được tung ra thường xuyên.

Trang Web


Internet

Sử dụng ứng dụng này để duyệt Internet. Trình duyệt mang đến cho bạn một thế giới trò chơi, nhạc, tin tức, thể thao, giải trí nhanh, nhiều màu sắc và còn nhiều hơn nữa, ngay trên máy tính bảng của bạn bất kể bạn ở đâu và nội dung bạn thường thức.

Từ Màn hình chủ, nhấn vào tab **Ứng dụng**  > **Ứng dụng** > **Internet** .

| | |
|--|--|
|  | Nhấn để chạy QSlide. |
|  | Nhấn để quay lại một trang. |
|  | Nhấn để đi tới một trang, tới trang bạn đã kết nối sau trang hiện tại. Điều này ngược lại với những gì xảy ra khi bạn chạm vào Phím Trở về  , đưa bạn tới trang trước đó. |
|  | Nhấn làm mới hoặc dùng trang hiện tại. |
|  | Nhấn để vào Trang chủ. |
|  | Nhấn để truy cập chỉ mục. |
|  | Chạm để truy cập các tùy chọn khác. |



Mở một trang

- Để mở một trang mới, nhấn  ở đầu trình duyệt.
- Để đi tới trang web khác, nhấn vào tab ở đầu màn hình để xem trang.

Dấu trang

Để mở một trang web đã đánh dấu, nhấn  trên thanh công cụ trình duyệt và chọn một trang.

Lịch sử

Nhấn  trên thanh công cụ trình duyệt và chọn tab **Lịch sử** để mở trang web từ danh sách các trang web được truy cập gần đây. Để xóa lịch sử, nhấn  để xóa toàn bộ lịch sử.

Sử dụng chế độ đọc



Máy tính bảng của bạn hiển thị trang web được đơn giản hóa để dễ đọc hơn.

Dễ dàng xem tin tức hoặc bài đăng trên blog và các trang bài viết khác mà không bị gián đoạn – với chế độ đọc, bạn có thể đọc trang mà không bị rối mắt.

Nhấn  trên thanh công cụ trình duyệt.

Sử dụng QSlide

Sử dụng tính năng này để truy cập Internet mà không cần đóng ứng dụng hiện hành.

Trong khi xem nội dung trên trình duyệt, nhấn . Bạn có thể duyệt các thông tin khác trên máy tính bảng. Để xem trình duyệt toàn màn hình, chạm .

Tải xuống tệp

Sử dụng ứng dụng Tải xuống để xem những tệp nào đã được tải xuống.

Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Tải xuống** .


Chrome

Sử dụng Chrome để tìm kiếm thông tin và duyệt trang web.


Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Chrome** .

LƯU Ý: Ứng dụng có thể không khả dụng, tùy thuộc vào khu vực và nhà cung cấp dịch vụ.


Xem trang web

Nhấn vào trường địa chỉ (ở đầu màn hình), nhập địa chỉ web hoặc tiêu chí tìm kiếm và nhấn  trên bàn phím.

Mở một trang

- Để đi tới một trang mới, nhấn  ở đầu trình duyệt.
- Để đi tới một trang web khác, nhấn vào tab ở đầu màn hình để chọn trang.


Tìm kiếm web bằng giọng nói

Chạm trường địa chỉ, chạm , nói từ khóa và chọn một trong các từ khóa gợi ý xuất hiện.

LƯU Ý: Tính năng này có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.


Đồng bộ hóa với thiết bị khác

Đồng bộ hóa sẽ mở các tab và chỉ mục để sử dụng với Chrome trên thiết bị khác khi bạn đăng nhập với cùng một tài khoản Google.

Để xem các tab đang mở trên các thiết bị khác, nhấn vào biểu tượng **Menu**  > **Tab gần đây**. Bạn phải đăng nhập vào cùng tài khoản Google trên mọi thiết bị. Chọn một trang web để mở.

Thêm và xem các dấu trang

Để thêm dấu trang, nhấn  trong thanh URL.

Để mở một trang web đã đánh dấu, nhấn vào biểu tượng **Menu**  > **Dấu trang** và chọn trang mong muốn.

Menu Tùy chọn Chrome

Nhấn vào biểu tượng **Menu**  để truy cập các tùy chọn sau.

- **Tab mới** – Nhấn để mở một tab trang web mới.
- **Tab ẩn danh mới** – Nhấn để mở một thẻ dấu tên mới.
- **Dấu trang** – Hiển thị trang web đã đánh dấu của bạn.
- **Tab gần đây** – Hiển thị trang web đang mở của bạn trên các thiết bị khác.
- **Lịch sử** – Hiển thị dữ liệu duyệt web của bạn (trang web mà bạn đã truy cập).
- **Chia sẻ...** – Cho phép bạn chia sẻ trang web.
- **In...** – Nhấn để in trang web. Chọn để tự động tìm máy in trên mạng của bạn hoặc nhập thủ công một máy in để sử dụng.
- **Tìm trong trang** – Cho phép bạn tìm kiếm văn bản trên trang web hiện tại.
- **Thêm vào màn hình chính** – Cho phép bạn thêm lối tắt đến trang hiện tại trên Màn hình chủ của bạn.
- **Yêu cầu trang web c...** – Đánh dấu chọn để truy cập trang màn hình nền khi bạn xem trang web trên máy tính bảng.
- **Cài đặt** – Cho phép bạn thay đổi cài đặt dành riêng cho ứng dụng Chrome.
- **Trợ giúp và phản hồi** – Hiển thị thông tin về cách sử dụng ứng dụng Chrome trên máy tính bảng và cho phép bạn cung cấp phản hồi cho nhà phát triển Chrome.

Cài đặt

Truy cập menu Cài đặt

1 Từ màn hình Chủ, nhấn **Ứng dụng**  > thẻ **Ứng dụng** > **Cài đặt** .

HOẶC

Từ Màn hình chủ, chạm và giữ **Phím ứng dụng gần đây**  > **Cài đặt hệ thống**.

2 Chọn một mục cài đặt và đặt tùy chọn mong muốn.


CÁC MẠNG KHÔNG DÂY

Wi-Fi

Wi-Fi – Bật Wi-Fi để kết nối với mạng Wi-Fi có sẵn.

Danh sách tất cả các mạng Wi-Fi khả dụng sẽ được hiển thị. Nhấn một mạng để kết nối với nó.

LƯU Ý: Nhấn **Tìm kiếm** để dò các mạng Wi-Fi khả dụng.

Nhấn vào biểu tượng **Menu**  trong menu Wi-Fi để truy cập các tùy chọn sau.

Thêm mạng Wi-Fi – Cho phép bạn nhập thủ công một mạng Wi-Fi mới.




Mạng Wi-Fi đã được lưu – Cho phép bạn quên mạng Wi-Fi đã lưu.

Wi-Fi nâng cao – Truy cập cài đặt Wi-Fi nâng cao.

Hướng dẫn tương tác – Hiển thị một số hướng dẫn hữu ích cho chức năng Wi-Fi.


MẸO! Cách lấy địa chỉ MAC

Để thiết lập kết nối trong một số mạng không dây với bộ lọc MAC, bạn có thể cần phải nhập địa chỉ MAC của máy tính bảng của bạn trong bộ định tuyến.

Bạn có thể tìm địa chỉ MAC trong giao diện người dùng sau đây: Từ màn hình Chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Wi-Fi** > biểu tượng **Menu**  > **Wi-Fi nâng cao** > **địa chỉ MAC**.

Bluetooth

Bật hoặc tắt tính năng Bluetooth không dây để sử dụng Bluetooth. Bật Bluetooth cho phép bạn ghép đôi và kết nối với các thiết bị Bluetooth khác.

Nhấn vào biểu tượng **Menu**  trong menu Bluetooth để truy cập các tùy chọn sau.

Chỉnh sửa tên máy tính bảng – Thay đổi tên máy tính bảng để dễ dàng xác định khi ghép đôi và kết nối. Nhập tên máy tính bảng mới, sau đó nhấn **Lưu**.

Hết thời gian nhìn thấy được – Đặt khoảng thời gian các thiết bị Bluetooth khác có thể nhìn thấy máy tính bảng của bạn để ghép đôi và kết nối. Chọn từ **2 phút**, **5 phút**, **1 giờ** và **Không bao giờ hết thời gian chờ**.

Hiển thị các tệp tin đã nhận – Hiển thị một danh sách các tệp đã nhận qua Bluetooth của bạn.

Hướng dẫn tương tác – Hiển thị một số hướng dẫn hữu ích về các tính năng Bluetooth.

Sử dụng dữ liệu

Hiển thị mức sử dụng dữ liệu trong khoảng thời gian đã chọn. Nhấn vào ứng dụng từ danh sách để xem mức sử dụng dữ liệu của ứng dụng.

Hơn nữa ...

Cho phép bạn đặt cài đặt mạng và không dây bổ sung.

Chế độ trên máy bay – Cho phép bạn đặt Chế độ trên máy bay. Việc kích hoạt chế độ Trên máy bay vô hiệu toàn bộ các kết nối không dây.

Miracast – Cho phép bạn phản chiếu không dây âm thanh và màn hình máy tính bảng lên dongle Miracast hoặc TV.

SmartShare Beam – Cho phép bạn nhận nội dung đa phương tiện qua SmartShare Beam từ điện thoại hoặc máy tính bảng LG.

LG PC Suite – Cho phép kết nối Wi-Fi để truyền âm nhạc và hình ảnh giữa máy tính và máy tính bảng.

Máy chủ phương tiện truyền thông – Cho phép chia sẻ nội dung phương tiện với các thiết bị ở gần thông qua DLNA.

VPN – Hiển thị danh sách Mạng Riêng Ảo (VPN) bạn đã đặt cấu hình trước đó. Cho phép bạn thêm các loại VPN khác nhau.

LƯU Ý: Bạn phải đặt PIN, Mật khẩu hoặc Hình của màn hình khóa trước khi có thể sử dụng bộ nhớ thông tin xác thực.

THIẾT BỊ

Âm thanh

Cấu hình âm thanh – Cho phép bạn đặt cấu hình âm thanh thành **Âm thanh**, **Chỉ rung** hoặc **Không làm phiền**.

Âm lượng – Quản lý âm lượng cho **Âm thanh thông báo**, **Hệ thống & phản hồi chạm** và **Nhạc, video, trò chơi và các phương tiện khác**.

Độ mạnh rung – Cho phép đặt cường độ rung cho các cuộc gọi, thông báo và phản hồi cảm ứng.

Âm thanh thông báo – Cho phép bạn đặt nhạc chuông thông báo mặc định.

Không làm phiền – Cho phép bạn đặt lịch để không bị gián đoạn bởi thông báo. Bạn có thể đặt để cho phép một số tính năng làm gián đoạn khi Chỉ ưu tiên được đặt.

Khóa màn hình – Cho phép bạn chọn nếu bạn muốn hiển thị hoặc ẩn thông báo trên màn hình khóa.

Ứng dụng – Cho phép bạn ngăn ứng dụng hiện thông báo hoặc đặt ứng dụng để hiện thông báo ưu tiên khi Không làm phiền được đặt thành Chỉ ưu tiên.

Âm chạm – Cho phép bạn đặt máy tính bảng phát tiếng khi bạn nhấn nút, biểu tượng và các mục trên màn hình khác phản ứng với sự chạm của bạn.

Âm thanh khóa màn hình – Cho phép bạn đặt máy tính bảng phát tiếng khi bạn khóa và mở khóa màn hình.

Rung khi nhấp vào – Cho phép bạn đặt phản hồi rung khi chạm vào màn hình máy tính bảng.

Hiển thị

Màn hình chủ

Chủ đề – Đặt chủ đề màn hình cho thiết bị của bạn.

Hình nền – Đặt hình nền để dùng trên Màn hình chủ.

Hiệu ứng màn hình – Đặt hiệu ứng khi bạn vuốt để thay đổi màn hình.

Cho phép xoay tròn Màn hình chủ – Chọn để đặt màn hình Chủ để cuộn liên tục, loại bỏ nhu cầu cuộn ngược khi bạn tìm ở cuối.



Sao lưu & khôi phục trang chủ – Chọn để sao lưu và khôi phục cấu hình ứng dụng/widget và chủ đề.

Trợ giúp – Hiển thị thông tin về Màn hình chủ.

Khóa màn hình

Chọn khóa màn hình – Đặt loại màn hình khóa để bảo vệ máy tính bảng của bạn.

LƯU Ý: Sau khi nâng cấp lên Lollipop OS, khóa màn hình có thể không khả dụng ngoại trừ Hình mở khóa, PIN và Mật khẩu.

Trong trường hợp này, đi tới **Ứng dụng**  > **Cài đặt**  > **Bảo mật** > **Xóa thông tin xác thực** để xóa các chứng nhận bảo mật rồi thiết lập khóa màn hình.

Cẩn thận khi bạn xóa thông tin đăng nhập vì tất cả chứng nhận bảo mật mà bạn đã cài đặt sẽ bị xóa.

Smart Lock – Đặt để luôn mở khóa máy tính bảng khi bạn có một thiết bị Bluetooth đáng tin cậy kết nối với máy tính bảng, khi máy tính bảng đang ở một vị trí quen thuộc như nhà hoặc cơ quan của bạn hoặc khi máy tính bảng nhận ra khuôn mặt bạn.

Hiệu ứng màn hình – Đặt các tùy chọn hiệu ứng vuốt màn hình.

Hình nền – Đặt hình nền cho Màn hình khóa. Chọn từ **Thư viện** hoặc **Bộ sưu tập hình nền**.

Phím tắt – Cho phép bạn thay đổi lối tắt trên Màn hình khóa bằng cách gạt.

Thông tin chủ sở hữu – Cho phép bạn nhập thông tin liên hệ để hiển thị trên Màn hình khóa trong trường hợp bạn bị mất máy tính bảng.

Bộ định thời khóa màn hình – Đặt thời gian trước khi màn hình tự động khóa sau khi màn hình hết thời gian chờ.


Nút nguồn khóa ngay lập tức – Đánh dấu để ngay lập tức khóa màn hình khi nhấn phím Nguồn/Khóa. Cài đặt này sẽ ghi đè cài đặt Bộ hẹn giờ khóa bảo mật.

Độ sáng – Điều chỉnh độ sáng màn hình. Chạm **Mức sáng ban đêm** để tự động đặt độ sáng thành 0% trong thời gian từ 12:00 sa - 6:00 sa.

Thời gian chờ màn hình – Đặt khoảng thời gian chờ trước khi màn hình tự động tắt.

Hiệu ứng tắt màn hình – Đặt hiệu ứng màn hình tắt được sử dụng khi tắt màn hình.

Tự động xoay màn hình – Đặt để chuyển hướng tự động khi bạn xoay máy tính bảng.

Mơ tưởng – Nhấn nút Daydream  để Bật hoặc Tắt chức năng này. Bật cho phép lưu màn hình khi nghỉ đã đặt được hiển thị khi máy tính bảng đang ngủ trong khi được cắm vào dock và/hoặc đang sạc. Chọn từ **Đồng hồ** và **Google Photos**.

LƯU Ý: Quá trình sạc có thể chậm trong khi trình bảo vệ màn hình đang bật.

Kiểu chữ – Thay đổi kiểu phong chữ hiển thị.

Cỡ chữ – Thay đổi kích thước của phong chữ hiển thị.

Màn hình thông minh – Luôn bật màn hình khi thiết bị phát hiện mắt bạn đang nhìn vào màn hình.

Các phím chạm màn hình chính – Cho phép bạn đặt nút Home cảm ứng nào được hiển thị và vị trí của chúng trên thanh. Bạn cũng có thể chọn màu và nền.

Hiệu chỉnh cảm biến chuyển động – Cho phép bạn cải thiện độ chính xác về độ nghiêng và tốc độ của cảm biến.

Bộ nhớ

BỘ NHỚ TRONG – Hiển thị tổng dung lượng trong bộ nhớ thiết bị và liệt kê các kiểu dữ liệu đang dùng bộ nhớ.

THẺ SD – Hiển thị tổng dung lượng bộ nhớ trên thẻ microSD.

Lắp/Tháo thẻ SD – Lắp và tháo thẻ microSD ra khỏi máy tính bảng sao cho bạn có thể truy cập dữ liệu lưu trên đó, định dạng thẻ hoặc gỡ thẻ ra một cách an toàn. Cài đặt này sẽ mờ nếu không có thẻ microSD được cài đặt, nếu bạn đã tháo nó ra rồi, hoặc nếu bạn đã lắp thẻ microSD vào máy tính.


Xóa thẻ SD – Xóa vĩnh viễn mọi thứ trên thẻ microSD và chuẩn bị thẻ để sử dụng với máy tính bảng của bạn.

Pin

THÔNG TIN VỀ PIN – Xem lượng điện năng của pin được dùng cho các hoạt động của thiết bị. Mức pin hiển thị theo tỷ lệ phần trăm. Thời gian sử dụng còn lại cũng được hiển thị.

Cách sử dụng pin – Hiển thị mức sử dụng pin.

Tỷ lệ pin hiện trên thanh trạng thái – Hiển thị phần trăm pin trên thanh trạng thái.

Tiết kiệm Pin – Quản lý pin đối với các mục tiết kiệm pin. Chạm vào nút  để bật tính năng này. Nhấn **Tiết kiệm Pin** cho các tùy chọn sau.

- **BẬT CHẾ ĐỘ TIẾT KIỆM ĐIỆN:** Đặt mức pin mà bạn muốn Tiết kiệm pin sẽ bật. Chọn từ Ngay lập tức, 5% Pin và 15% Pin.

Trợ giúp – Chạm để truy cập một số mẹo cho Tiết kiệm pin.

Smart cleaning

Bạn có thể quản lý các ứng dụng không sử dụng, tệp đã lưu hoặc tệp internet tạm thời.

Ứng dụng

Hiển thị danh sách ứng dụng như đang chạy hiện tại hoặc đã tải xuống.

Gạt sang trái và phải để xem một trong ba tab nằm ở phía trên màn hình để xem thông tin chi tiết về **ĐÃ TẢI**, **TRÊN THẺ SD**, **ĐANG CHẠY** và **TẮT CẢ** ứng dụng.

Nhấn vào một mục nhập để xem thông tin chi tiết, nhấn **Bắt buộc dừng** (hoặc **Dừng**), sau đó **OK** để dừng chạy ứng dụng.

Hai cửa sổ

Chia khung hình – Cho phép thiết bị tự động mở Cửa sổ đôi khi bạn nhấn vào liên kết trên màn hình đầy đủ hoặc nhấn vào tệp đính kèm email (chỉ hình ảnh).

Trợ giúp – Hiển thị thông tin trợ giúp về cách sử dụng tính năng Cửa sổ đôi.

CÁ NHÂN

Mây

Nhấn **Thêm tài khoản** để thêm tài khoản đám mây. Bạn truy cập tài khoản đám mây từ menu này. Nhấn biểu tượng **Menu**  để tải lên tệp.

Người dùng

Menu này hiển thị người dùng hiện tại mà bạn đã tạo.

Thêm người sử dụng khi máy tính bảng bị khóa – Cho phép bạn thêm một người dùng mới khi máy tính bảng của bạn đã khóa.

Thêm mạng người dùng – Cho phép bạn thêm tài khoản mới cho máy tính bảng và sử dụng tính năng Nhiều người dùng.

Vị trí

C.độ

- **Độ chính xác cao (GPS và các mạng)** – Sử dụng các mạng GPS và Wi-Fi để dự đoán vị trí.
- **Tiết kiệm pin (Chỉ có các mạng)** – Sử dụng mạng Wi-Fi để dự đoán vị trí.
- **Chỉ có các bộ cảm biến thiết bị (Chỉ GPS)** – Sử dụng GPS để tìm chính xác vị trí của bạn.

YÊU CẦU ĐỊNH VỊ GẮN ĐÂY – Hiển thị các ứng dụng gần đây có yêu cầu thông tin vị trí của bạn.

Máy Ảnh – Cho phép thiết bị gắn thẻ ảnh và video với vị trí của chúng.

Dải tần – Cho phép bạn điều chỉnh tần số để ngăn chặn hiện tượng nháy cho màn hình xem trước máy ảnh.

Báo cáo vị trí của Google – Cho phép bạn xem cài đặt vị trí Google của mình.

Bảo Mật

Mã hóa bảng vẽ – Cho phép bạn mã hóa dữ liệu trên máy tính bảng để bảo mật. Bạn sẽ được yêu cầu nhập PIN hoặc mật khẩu để giải mã máy tính bảng mỗi lần bật nguồn.

Mã hóa bộ nhớ thẻ SD – Cho phép bạn mã hóa dữ liệu trên MicroSD để bảo mật.

Việc gỡ mật khẩu có thể bị nhìn thấy – Hiện thị ký tự cuối cùng của mật khẩu ẩn khi bạn nhập.

Quản trị viên thiết bị – Xem hoặc hủy kích hoạt quản trị viên máy tính bảng.

Nguồn không xác định – Cho phép cài đặt ứng dụng không phải từ Play Store.

Xác nhận các ứng dụng – Không cho phép hoặc cảnh báo trước khi cài đặt các ứng dụng có thể gây hại.

Loại bộ nhớ – Hiện thị loại bộ nhớ cho chứng nhận.

Tính năng ủy nhiệm được tin cậy – Hiện thị chứng nhận CA đáng tin cậy.

Cài đặt từ bộ lưu trữ – Chọn để cài đặt chứng chỉ đã mã hóa.

Xóa thông tin xác thực – Xóa tất cả các chứng chỉ.

Trust agents – Xem hoặc hủy kích hoạt tác nhân tin cậy.

Ghim màn hình – Tính năng này cho phép bạn khóa thiết bị để người dùng hiện tại chỉ có thể truy cập vào ứng dụng đã ghim. Tính năng này hữu ích cho người dùng có trẻ nhỏ.

Các ứng dụng với quyền truy cập việc sử dụng – Cho phép xem thông tin về mức sử dụng ứng dụng.

Tài khoản & đồng bộ hóa

Cho phép các ứng dụng đồng bộ hóa dữ liệu trong nền, cho dù bạn có đang làm việc tích cực với dữ liệu đó hay không. Bỏ kích hoạt **Tự động đồng bộ dữ liệu** có thể tiết kiệm năng lượng pin và giảm mức sử dụng dữ liệu (nhưng không loại trừ được).

Ngôn ngữ & đầu vào

Sử dụng cài đặt Ngôn ngữ & đầu vào để chọn ngôn ngữ cho văn bản trên máy tính bảng và để cài cấu hình bàn phím ảo, bao gồm các từ bạn đã thêm vào từ điển.

Sao lưu & thiết lập lại

Sao lưu dữ liệu của tôi – Đặt để sao lưu cài đặt và dữ liệu ứng dụng của bạn vào máy chủ Google.

Tài khoản dự phòng – Thiết lập tài khoản mà bạn muốn sao lưu dữ liệu tới đó.

Khôi phục tự động – Đặt để khôi phục cài đặt và dữ liệu ứng dụng của bạn khi ứng dụng được cài đặt lại vào thiết bị của bạn.

Dịch Vụ LG Backup – Sao lưu tất cả thông tin trên thiết bị và khôi phục trong trường hợp mất dữ liệu hoặc thay thiết bị. Tham khảo trang 99 để biết thêm thông tin.

Xác lập lại dữ liệu gốc – Xác lập lại cài đặt của bạn về giá trị mặc định ban đầu và xóa tất cả dữ liệu của bạn. Nếu bạn xác lập lại máy tính bảng bằng cách này, bạn được nhắc nhập lại cùng thông tin như khi bạn khởi động Android lần đầu.

HỆ THỐNG

Phím tắt

Cho phép bạn bật và tắt các Phím tắt.


Ngày & Giờ

Sử dụng cài đặt Ngày & giờ để cách hiển thị ngày. Bạn cũng có thể sử dụng các cài đặt này để đặt giờ và múi giờ riêng thay vì lấy giờ hiện tại từ mạng di động.

Khả năng truy cập


Sử dụng cài đặt Khả năng truy cập để đặt cấu hình plug-in truy cập bất kỳ mà bạn đã cài đặt trên máy tính bảng.

LƯU Ý: Yêu cầu các plug-in bổ sung chuyển sang dạng có thể chọn được.

TalkBack – Cho phép bạn thiết lập chức năng Talkback trợ giúp những người khiếm thị bằng cách cung cấp phản hồi bằng lời. Nhấn vào nút TalkBack  ở góc trên cùng bên phải của màn hình để bật. Nhấn **Cài đặt** ở bên dưới màn hình để chỉnh cài đặt TalkBack.

Cỡ chữ – Chọn để tăng cỡ chữ.

Đảo màu – Chọn để đảo màu của màn hình và nội dung.

Điều chỉnh màu sắc – Đặt để xem màn hình với độ tương phản màu cao hơn. Nhấn nút  để bật. Sau đó nhấn vào màn hình và kéo qua màn hình theo bất kỳ hướng nào cho đến khi bạn thấy độ tương phản màu mà bạn muốn sử dụng.

Zoom bằng cảm ứng – Cho phép bạn phóng to và thu nhỏ bằng cách nhấn ba lần vào màn hình.

Rèm màn hình – Làm mờ đèn nền của màn hình.


Đường dẫn tắt có thể truy cập được – Kích hoạt tính năng này để cho phép bạn nhanh chóng bật tính năng trợ năng trong hai bước.

Dữ liệu ra của tiện ích đọc văn bản – Đặt công cụ văn bản sang giọng nói được ưa thích và cài đặt tốc độ giọng nói. Đồng thời phát đoạn mẫu ngắn tổng hợp lời nói. Trạng thái ngôn ngữ mặc định cũng được hiển thị.

Loại âm thanh – Đặt loại âm thanh. Chọn **Mono** hoặc **Stereo**.

Cân bằng âm thanh – Đặt tuyến âm thanh. Di chuyển thanh trượt trên thanh trượt để đặt.




Tắt tất cả các loại âm thanh – Tắt tất cả âm thanh.

Chú thích – Cho phép tùy chỉnh các cài đặt chú thích cho người bị suy giảm thính lực. Chạm vào nút  để bật tính năng này. Đặt tùy chọn ngôn ngữ, kích cỡ văn bản và kiểu chú thích như mong muốn.

Thời gian phản hồi cảm ứng – Đặt thời gian chạm và thời gian phản hồi. Chọn từ **Ngắn**, **Trung Bình** và **Dài**.

Touch assistant – Hiển thị bảng thao tác chạm giúp dễ dàng truy cập các thao tác thông thường.

Thời gian chờ màn hình – Đặt lượng thời gian trước khi màn hình tắt.

Các khu vực điều khiển cảm ứng – Nhấn chuyển  để bật tính năng này. Cho phép bạn giới hạn điều khiển chạm đối với các vùng đã chọn của màn hình. Nhấn **Phím Giảm âm lượng**  và **Phím Home**  cùng lúc để kích hoạt và hủy kích hoạt tính năng.

Tự động xoay màn hình – Chọn để cho thiết bị xoay màn hình dựa trên hướng của nó (dọc hoặc ngang).

Xác nhận mật khẩu bằng giọng nói – Đánh dấu chọn để xác nhận bằng lời khi nhập mật khẩu.

Phím tắt cài đặt khả năng truy cập – Đặt truy cập nhanh, dễ dàng vào các tính năng được chọn khi bạn nhấn ba lần phím Home.

Nhập bằng chạm một lần – Mỗi lần chạm ngón tay sẽ nhập một chữ cái/ký tự lên bàn phím LG.

Chuyển đổi truy cập – Cho phép bạn tương tác với thiết bị bằng cách sử dụng một hoặc nhiều công tắc hoạt động như các phím của bàn phím. Menu này có thể hữu ích đối với người dùng bị giới hạn về di động khiến họ không thể họ tương tác trực tiếp với thiết bị của mình.

Quick Cover

Kích hoạt menu này để tự động bật hoặc tắt màn hình khi sử dụng Quick Cover.

In

Cho phép bạn in nội dung của các màn hình nhất định (chẳng hạn như các trang web được hiển thị trong Chrome) ra một máy in được kết nối với cùng mạng Wi-Fi như thiết bị của bạn Android của bạn.

Giới thiệu về máy tính bảng

Trình đơn này cho phép bạn quản lý các bản cập nhật phần mềm của mình và xem các thông tin khác nhau liên quan tới máy tính bảng của bạn.

Tên máy tính bảng – Cho phép bạn đặt tên máy tính bảng.

Trung tâm cập nhật – Cho phép bạn kiểm tra các cập nhật ứng dụng và phần mềm.

Pin – Cho phép bạn xem trạng thái pin, mức pin và thông tin sử dụng pin.

Thông tin phần cứng – Cho phép bạn xem số kiểu máy, địa chỉ IP, thời gian mở màn hình, CSN, địa chỉ Wi-Fi MAC và địa chỉ Bluetooth.

Thông tin phần mềm – Cho phép bạn xem phiên bản Android, phiên bản kernel, mã build và phiên bản phần mềm.

Thông tin pháp lý – Cho phép bạn xem tài liệu pháp lý cho phần mềm LG, giấy phép nguồn mở và thông tin pháp lý của Google.

Thông tin về sao lưu và khôi phục dữ liệu

Bạn nên thường xuyên tạo và lưu tệp sao lưu trên bộ nhớ trong, đặc biệt trước khi cập nhật bất kỳ phần mềm nào. Việc duy trì tệp sao lưu hiện tại trong bộ nhớ có thể cho phép bạn khôi phục dữ liệu thiết bị nếu thiết bị của bạn bị thất lạc, mất cắp hoặc hư hại do vấn đề không lường trước được.



Ứng dụng sao lưu này của LG được hỗ trợ từ các điện thoại thông minh cho tới các máy tính bảng của LG, các phiên bản phần mềm hoặc hệ điều hành khác. Kết quả là, khi bạn mua các điện thoại thông minh và các máy tính bảng của LG, bạn có thể sao lưu dữ liệu thiết bị hiện tại vào thiết bị mới.

Nếu bạn có ứng dụng Sao lưu tải trước trên các điện thoại thông minh và máy tính bảng, bạn có thể sao lưu và khôi phục phần lớn dữ liệu, bao gồm các ứng dụng đã tải xuống và cài đặt trước, bookmark, mục nhập lịch, danh bạ, cài đặt màn hình, và cài đặt hệ thống. Bạn còn có thể:

- Thực hiện Sao lưu thủ công thiết bị của mình.
- Khôi phục dữ liệu thiết bị của bạn.

Cảnh báo! Để bảo vệ trước tình trạng tắt đột ngột trong quá trình sao lưu hoặc khôi phục, do không đủ năng lượng pin, bạn cần luôn sạc đầy pin.



Sao lưu dữ liệu máy tính bảng

- 1 Từ Màn hình chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Sao lưu & thiết lập lại** > **Dịch Vụ LG Backup** > **Sao lưu**.
- 2 Trên màn hình Vị trí sao lưu, chạm **Bộ nhớ Trong** hoặc **Thẻ SD**, sau đó nhấn **Tiếp theo**.
- 3 Chọn hộp kiểm cho mục mà bạn muốn sao lưu và chọn **Tiếp theo**.

- 4 Đọc thông tin được hiển thị trên màn hình, sau đó nhấn **Bắt đầu**.
- 5 Khi mọi tệp đã chọn được sao lưu, bạn sẽ nhìn thấy thông điệp **Sao lưu đã hoàn tất**.

Khôi phục dữ liệu máy tính bảng


LƯU Ý: Mọi tệp lưu trong máy tính bảng đều bị xóa trước khi tệp sao lưu được khôi phục. Đảm bảo sao chép tệp sao lưu sang vị trí khác.

- 1 Từ Màn hình chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Sao lưu & thiết lập lại** > **Dịch Vụ LG Backup** > **Khôi phục & quản lý tệp tin**.
- 2 Trên màn hình Khôi phục, chọn tệp sao lưu có chứa dữ liệu mà bạn muốn khôi phục.
- 3 Chọn hộp kiểm cạnh mục bạn muốn khôi phục và chọn **Tiếp theo** để khôi phục nó vào máy tính bảng của bạn.

LƯU Ý: Vui lòng lưu ý rằng dữ liệu máy tính bảng của bạn sẽ bị ghi đè với nội dung sao lưu.

- 4 Nếu tệp sao lưu được mã hóa, nhập mật khẩu mà bạn tạo để mã hóa.
- 5 Khi mọi tệp chọn lọc được khôi phục, máy tính bảng sẽ tự động khởi động.

LƯU Ý: Bạn có thể đặt tùy chọn **Khóa các tệp tin sao lưu** khi tạo sao lưu để mã hóa tệp sao lưu nhằm bảo vệ thêm.

Trên màn hình chính của Sao lưu LG, chạm vào **Phím Menu**  > **Đặt mật khẩu** và nhập mật khẩu và gợi ý trong trường hợp bạn quên mật khẩu. Khi bạn đã thiết lập mật khẩu, bạn cần phải nhập mật khẩu cho mỗi lần bạn muốn sao lưu/khôi phục.

Cập nhật phần mềm máy tính bảng

Cập nhật phần mềm máy tính bảng



Tính năng này cho phép bạn cập nhật phần mềm cơ sở của điện thoại lên phiên bản mới nhất một cách thuận tiện từ Internet mà không cần đến trung tâm bảo hành. Để biết thêm thông tin về cách sử dụng chức năng này, vui lòng truy cập: <http://www.lg.com>

Vì cập nhật phần mềm dành cho máy tính bảng yêu cầu sự chú ý hoàn toàn của người dùng về thời gian của quá trình cập nhật, vui lòng đảm bảo kiểm tra các hướng dẫn và chú ý xuất hiện tại mỗi bước trước khi tiếp tục. Chú ý rằng việc tháo rời cáp USB hoặc pin trong quá trình nâng cấp có thể làm hư hỏng máy tính bảng của bạn.

Cập nhật phần mềm máy tính bảng LG qua môi trường không dây (OTA)

Tính năng này cho phép bạn cập nhật phần mềm cơ sở của máy tính bảng lên phiên bản mới hơn một cách tiện lợi qua OTA mà không cần kết nối cáp dữ liệu USB. Tính năng này chỉ có nếu và khi LG tạo ra phiên bản phần mềm cơ sở mới hơn cho thiết bị của bạn. Trước tiên, bạn có thể kiểm tra phiên bản phần mềm trên máy tính bảng của mình:

Từ Màn hình chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Giới thiệu về máy tính bảng** > **Thông tin phần mềm**.

Để thực hiện cập nhật phần mềm máy tính bảng, từ Màn hình chủ, nhấn **Ứng dụng**  > **Cài đặt**  > **Giới thiệu về máy tính bảng** > **Trung tâm cập nhật** > **Cập nhật Phần mềm** > **Kiểm tra ngay để cập nhật**.


LƯU Ý: LG bảo lưu quyền tạo ra bản cập nhật phần mềm cơ sở cho các kiểu máy được lựa chọn của riêng hãng và không đảm bảo tính sẵn có của phiên bản phần mềm cơ sở mới hơn cho tất cả kiểu máy tính bảng.

LƯU Ý: Dữ liệu cá nhân của bạn—bao gồm thông tin về tài khoản Google và các tài khoản khác, dữ liệu và cài đặt hệ thống/ứng dụng của bạn, các ứng dụng đã tải xuống và giấy phép DRM của bạn—có thể bị mất trong quá trình cập nhật phần mềm thiết bị của bạn. Do đó, LG khuyên bạn nên sao lưu dữ liệu cá nhân trước khi cập nhật phần mềm máy tính bảng của bạn. LG không chịu trách nhiệm về việc mất mát dữ liệu cá nhân.


Phụ kiện

Các phụ kiện này có sẵn để sử dụng với máy tính bảng của bạn. (Các mục được mô tả bên dưới có thể là tùy chọn.)

Bộ sạc du lịch



Cáp USB



Hướng dẫn bắt đầu nhanh



LƯU Ý:


- Luôn sử dụng các phụ kiện chính hiệu của LG. Nếu không, bạn có thể không được bảo hành.
- Phụ kiện có thể khác nhau tùy từng khu vực.

Sửa lỗi

Chương này liệt kê một số vấn đề mà bạn có thể gặp phải khi sử dụng máy tính bảng của mình. Một số vấn đề buộc bạn phải gọi cho nhà cung cấp dịch vụ nhưng hầu hết các vấn đề đều đơn giản để bạn có thể tự sửa chữa.

| Tin nhắn | Nguyên nhân | Biện pháp khắc phục |
|--------------------------------|--|--|
| Không thể cài đặt ứng dụng nào | Không được nhà cung cấp dịch vụ hỗ trợ hoặc yêu cầu đăng ký. | Liên hệ với nhà cung cấp dịch vụ. |
| Lỗi sạc pin | Pin chưa được sạc. | Sạc pin. |
| | Nhiệt độ bên ngoài quá nóng hoặc quá lạnh. | Đảm bảo máy tính bảng đang sạc ở nhiệt độ bình thường. |
| | Vấn đề về tiếp xúc | Kiểm tra bộ sạc và kết nối của bộ sạc với máy tính bảng. |
| | Không có điện áp | Cắm bộ sạc vào ổ cắm khác. |
| | Lỗi bộ sạc | Thay thế bộ sạc. |
| | Bộ sạc không đúng | Chỉ sử dụng phụ kiện LG chính hãng. |
| Không thể nhận/gửi ảnh | Bộ nhớ đầy | Xóa một số ảnh ra khỏi máy tính bảng. |

| Tin nhắn | Nguyên nhân | Biện pháp khắc phục |
|-------------------|---------------------------------|--|
| Tệp không mở | Định dạng tệp không được hỗ trợ | Kiểm tra định dạng tệp được hỗ trợ. |
| Không có âm thanh | Chế độ rung | Kiểm tra tình trạng cài đặt trong menu âm thanh để đảm bảo bạn không ở chế độ rung hoặc im lặng. |

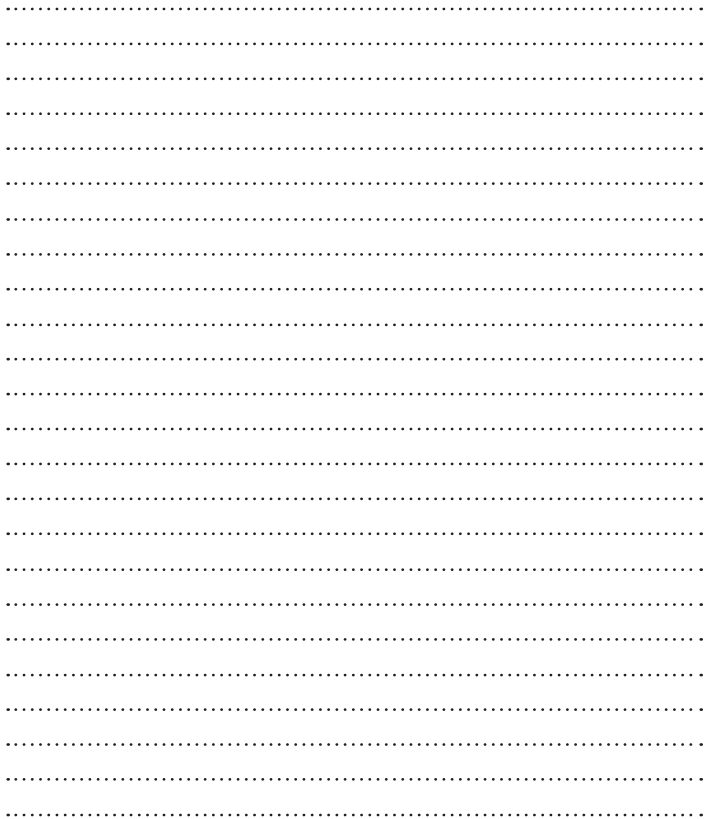



ENGLISH

User Guide

- Screen displays and illustrations may differ from those you see on actual device.
- Some of the contents of this guide may not apply to your device, depending on the software and your service provider. All information in this document is subject to change without notice.
- This device is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Google Play™ are trademarks of Google, Inc.

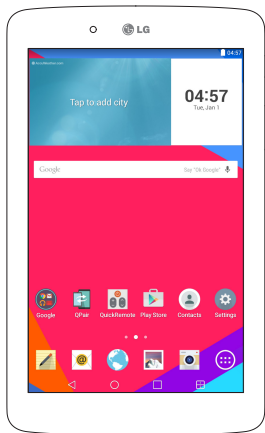


Table of contents

| | | | |
|---|-----------|---|-----------|
| About this user guide | 5 | Pinch-to-Zoom | 30 |
| About this user guide | 5 | Rotate the screen..... | 30 |
| Trademarks..... | 5 | Home screen | 30 |
| DivX HD | 6 | Customizing the Home screen..... | 32 |
| Guidelines for safe and efficient use | 7 | Opening, switching, and stopping apps | 32 |
| Important notice | 16 | Using Dual window | 33 |
| Getting to know your device | 20 | Customizing app icons on the Home screen..... | 34 |
| Tablet Overview..... | 20 | Quick access | 35 |
| Charging your tablet | 22 | Notifications | 35 |
| Optimizing Battery Life | 23 | Accessing notifications..... | 36 |
| To extend the life of your battery | 23 | Quick Settings on the Notifications Panel..... | 36 |
| To view the battery charge level..... | 24 | To rearrange Quick Setting options on the Notification Panel..... | 37 |
| To monitor and control what uses the battery..... | 24 | QSlide apps on the Notifications Panel..... | 37 |
| Inserting a microSD card | 24 | Using the QSlide apps..... | 37 |
| Removing the microSD card | 25 | Notification icons on the Status Bar..... | 37 |
| Formatting the microSD card | 26 | Multiple Users | 39 |
| Locking and unlocking the screen | 26 | QSlide | 40 |
| Turning the screen on using the KnockON feature | 27 | Capturing a Screenshot | 42 |
| Unlocking your screen using the Knock Code feature..... | 27 | Using QuickMemo+ to capture a screenshot | 42 |
| Your Home screen | 29 | Using Capture plus to capture a screenshot of the browser..... | 42 |
| Touch screen tips | 29 | Text Input Methods | 43 |
| Tap or touch..... | 29 | Enter suggested word using gesture control..... | 43 |
| Touch and hold..... | 29 | Entering special characters..... | 44 |
| Drag..... | 29 | | |
| Swipe or slide..... | 30 | | |
| Double-tap..... | 30 | | |

| | | | |
|--|-----------|---|-----------|
| Google account setup | 45 | Contacts | 55 |
| Connecting to Networks and Devices | 46 | Searching for a contact..... | 55 |
| Wi-Fi | 46 | Adding a new contact..... | 55 |
| Connecting to Wi-Fi networks..... | 46 | Favorite Contacts..... | 55 |
| Turning Wi-Fi on and connecting to a Wi-Fi network..... | 46 | Creating a group..... | 56 |
| Bluetooth | 47 | Email | 57 |
| Turning on Bluetooth and pairing up your tablet with a Bluetooth device.... | 47 | Managing an email account..... | 57 |
| Send data using the Bluetooth feature..... | 48 | Working with account folders..... | 58 |
| Receive data using the Bluetooth feature..... | 48 | Composing and sending email..... | 58 |
| SmartShare | 49 | Receiving emails..... | 58 |
| Enjoying the content via a variety of devices..... | 49 | Entertainment | 59 |
| Playing/Sending..... | 49 | Camera | 59 |
| Enjoying the content from Nearby devices | 49 | Getting to know the viewfinder..... | 59 |
| Connecting devices..... | 49 | Using the advanced settings..... | 60 |
| Searching other devices..... | 50 | Taking a photo..... | 60 |
| Using the content from the Cloud | 50 | To zoom in or out..... | 60 |
| Using the Cloud..... | 50 | Gesture shot..... | 61 |
| QPair | 50 | Once you've taken a photo..... | 61 |
| PC connections with a USB cable | 53 | Viewing your saved photos..... | 62 |
| Transferring music, photos and videos using the Media device (MTP) mode..... | 53 | Recording a video..... | 63 |
| Synchronize with Windows Media Player..... | 53 | Watching your saved videos..... | 63 |
| PC connections with a USB cable for Mac OS X users..... | 54 | Gallery | 64 |
| | | Viewing pictures..... | 64 |
| | | Playing videos..... | 65 |
| | | Deleting images and videos..... | 65 |
| | | Setting as wallpaper..... | 65 |
| | | Slideshow | 65 |
| | | Video | 66 |
| | | Playing a video..... | 66 |
| | | Music | 67 |
| | | Transfer music using Media device (MTP) mode..... | 67 |

| | | | |
|------------------------------------|-----------|-------------------------------------|------------|
| Playing a song..... | 68 | Settings | 85 |
| Tools | 70 | Access the Settings menu | 85 |
| QuickMemo+..... | 70 | WIRELESS NETWORKS..... | 85 |
| QuickRemote | 72 | DEVICE | 87 |
| Clock | 73 | PERSONAL..... | 92 |
| Calculator | 74 | SYSTEM..... | 94 |
| Calendar | 74 | LG Backup | 98 |
| Tasks..... | 75 | About backing up and restoring | |
| File Manager | 76 | device data | 98 |
| Voice Recorder..... | 77 | Backup your tablet data..... | 99 |
| POLARIS Office 5 | 78 | Restoring tablet data | 99 |
| Google+..... | 79 | Tablet software update | 101 |
| LG SmartWorld | 79 | Tablet software update | 101 |
| The Web | 81 | LG tablet software update via | |
| Internet | 81 | Over-the-Air (OTA)..... | 101 |
| Opening a page | 81 | Accessories | 103 |
| Bookmarks..... | 82 | Troubleshooting | 104 |
| History..... | 82 | | |
| Using Reader mode..... | 82 | | |
| Using QSlide..... | 82 | | |
| Download files | 82 | | |
| Chrome | 82 | | |
| Viewing web pages | 83 | | |
| Opening a page | 83 | | |
| Searching the web by voice..... | 83 | | |
| Syncing with other devices..... | 83 | | |
| Adding and viewing bookmarks | 84 | | |
| Chrome Options menu | 84 | | |

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your device safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your tablet.
- Your content may differ from the final product, or from software supplied by service providers or carriers. This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your device's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan that is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This tablet device model LG-V400 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the device transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG device models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.

- The highest SAR value for this device when worn on the body, as described in this user guide, is 0.346 W/kg.
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 0.00 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 0.00 cm away from your body.

In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by non-qualified professional can cause damage to your device.

WARNING

Only use batteries, chargers and accessories approved for use with this particular device model. The use of any other types may invalidate any approval or warranty applying to the device and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the device in any area where you are required to by special regulations. For example, do not use your device in hospitals as it may affect sensitive medical equipment.
- Do not handle the device with wet hands while it is being charged. It may cause an electric shock and can seriously damage your device.
- Do not charge a device near flammable material as the device can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the tablet when it is on soft furnishings.
- The device should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

- Do not keep the device next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the tablet.
- Do not expose the device to liquid or moisture.
- Use accessories like earphones cautiously.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your tablet is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your device during or immediately after operation.
- If your device gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet device, changes the color of the product label inside your device. Damage to your device as a result of exposure to liquid is not covered under your warranty.
- Use your tablet in temperatures between 0 °C and 40 °C, if possible. Exposing your device to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Efficient device operation

Electronics devices

All tablet device may receive interference, which could affect performance.

- Do not use your tablet device near medical equipment without requesting permission. Avoid placing the tablet over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by tablet device.
- Minor interference may affect TVs, radios, PCs etc.

Road safety

Check the laws and regulations on the use of tablet device in the area when you drive.

- Do not use a hand-held device while driving.
- Give full attention to driving.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.



To prevent possible hearing damage, do not listen at high volume levels for long periods

- Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the tablet close to your ear. We also recommend that music volumes are set to a reasonable level.
- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

Glass Parts

Some parts of your tablet device are made of glass. This glass could break if your device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the tablet where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your tablet at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your tablet device or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your tablet off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the device in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached. This device also contains an internal battery that can be hazardous if the device is not used or maintained properly.


Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.

- Do not disassemble or short-circuit the battery.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
Do not leave the device in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the tablet is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

How to update your tablet

Access to latest firmware releases, new software functions and improvements.

- Update your tablet without a PC: Select **Update Center**  > **Software Update** > **Check now for update**.
- Update your tablet by connecting it to your PC.

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> and select the country and language.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-V400** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

Important notice




Please read this before you start using your tablet!

Please check to see whether any problems you encountered with your tablet are described in this section before taking the tablet in for service or calling a service representative.

1. Tablet Memory

You need to check your tablet memory and delete some data, such as applications, to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab > **Settings**  > **Apps**.
- 2 Once all of the applications appear, select the application you want to uninstall.
- 3 Tap **Uninstall** and **OK** to confirm.

2. Before installing an open source application and operating system (OS)




WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your tablet to malfunction. In addition, your tablet will no longer be covered by the warranty.

WARNING

To protect your tablet and personal data, only download applications from trusted sources, such as Play Store. If there are improperly installed applications on your tablet, the tablet may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the tablet.

3. Using a Screen Lock

Set an screen lock to secure your tablet. Tap  >  > **Apps** tab > **Settings**  > **Display** > **Lock screen** > **Select screen lock** and select a desired screen lock from **Swipe**, **Knock Code**, **Pattern**, **PIN** and **Password**. You can create a Backup PIN as a safety measure in case you forget your screen lock.

Caution: Create or sign into a Google account before setting a screen lock and remember the Backup PIN you created when creating your screen lock.

WARNING

Precautions to take when using a screen lock.

It is very important to remember the screen lock you set. You will not be able to access your tablet if you use an incorrect screen lock 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your Pattern, PIN or Password:

< If you have forgotten your pattern >

If you logged in to your Google account on the tablet but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock.

If you have not created a Google account on the tablet or you forgot the Backup PIN, you have to perform a hard reset.

< If you have forgotten your PIN or Password >





If you forget your PIN or Password, you will need to perform a hard reset.







Caution: If you perform a hard reset, all user applications and user data will be deleted.

NOTE: If you have not logged into your Google Account and have forgotten your Pattern, you will need to enter your Backup PIN.

4. Using the Hard Reset (Factory Reset)

If your tablet does not restore to its original condition, use a Hard Reset (Factory Reset) to initialize it.


- 1 Turn the tablet off.
- 2 Press and hold the **Volume Down Key**  first, then press and hold the **Power/Lock Key**  on the right side of the tablet until the LG logo is displayed.
- 3 Release all of the keys when the LG logo is displayed.
- 4 Immediately press and hold the **Power/Lock Key**  + **Volume Down Key**  at the same time.

- 5 Release all keys when the Factory hard reset screen is displayed.
- 6 Press either of the **Volume Keys**   to move the cursor to **Yes**, then press the **Power/Lock Key**  to continue.
- 7 Press either of the **Volume Keys**   to move the cursor to **Yes** once again, then press the **Power/Lock Key**  to confirm.
- 8 Your device will perform a hard reset.

WARNING


If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

5. When the screen freezes

If the screen freezes or the tablet does not respond when you try to operate it: Press and hold the **Power/Lock Key**  for over 8 seconds until the LG logo is displayed to restart your tablet. If it still does not work, please contact the service center.

Getting to know your device

Tablet Overview

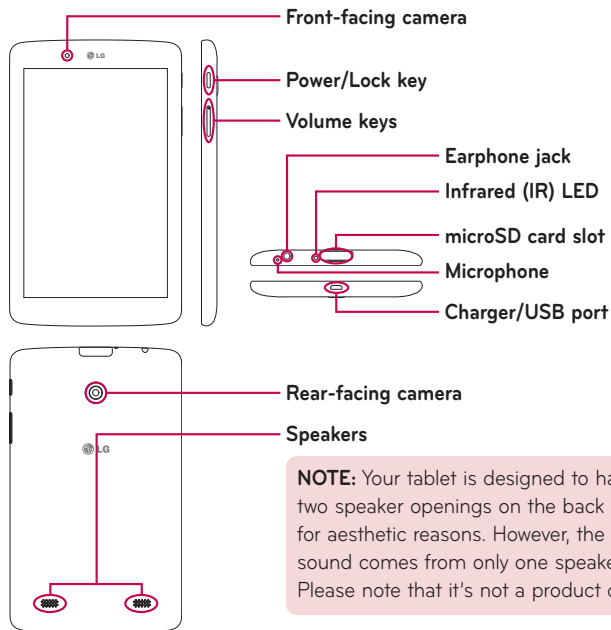

NOTE: Your tablet is designed to have two speaker openings on the back side for aesthetic reasons. However, the actual sound comes from only one speaker. Please note that it's not a product defect.



NOTE: Make sure that the microphone is not blocked when recording a video or audio clip.

| | |
|----------------------------|--|
| Front-facing camera | Use to take pictures and record videos of yourself. You can also use this for video chatting. Keep it clean for optimal performance. |
| Power/Lock key | Press to lock/unlock the screen. Press and hold to turn the tablet on/off, restart it, activate/deactivate airplane mode, and change the sound settings. |
| Volume keys | Allow you to adjust the media volumes. Press and hold both keys at the same time to access the QuickMemo+ feature. |
| Earphone jack | Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music. |
| Infrared (IR) LED | Used as a sensor for the QuickRemote app. |
| microSD card slot | Insert a microSD Card for storing files such as music, videos and photos. |
| Microphone | Records your voice and allows use for voice-activated functions. |
| Charger/USB port | Allows you to connect the tablet and the USB cable for use with the charger adapter, your PC, or other compatible accessories. |
| Rear-facing camera | Use to take photos and record videos. Keep it clean for optimal performance. |
| Speakers | Use to listen to the audio from the selected function (e.g., music, videos, sound clips, etc.). |

WARNING

Placing a heavy object on the tablet or sitting on it can damage the LCD and touch screen functions.

TIP!

- Tap the **Menu** icon  whenever you open an application to check what options are available.
- If the device is locked and does not work, press and hold the **Power/Lock Key**  for over 8 seconds until LG logo is displayed to restart your tablet.


Charging your tablet

A USB adapter, which is included with your tablet, is used to charge the battery. Before using your tablet for the first time, make sure the battery is fully charged.

NOTE: Your device has an internal rechargeable battery. For your safety, do not remove the battery incorporated in the product.

Warning! If the touch screen does not function while the tablet's in the process of charging, this may be due to an unstable power supply. If this occurs, disconnect the USB cable from the device or unplug the USB adapter from the power outlet.

- 1 Connect the USB adapter and USB cable.
- 2 Plug the USB cable (as shown below) into the tablet's Charger/USB port.
- 3 Plug the charger into an electrical socket.

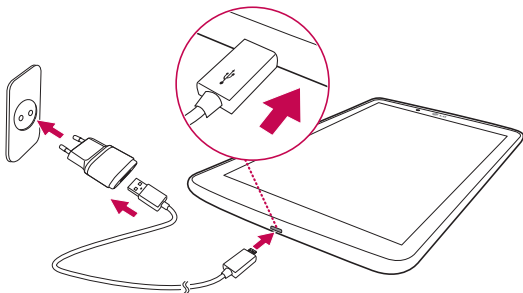

NOTE: The battery must be fully charged initially to improve battery lifetime.

Optimizing Battery Life



You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery



- Turn off radio communications that you aren't using, such as Wi-Fi, Bluetooth, or GPS.
- Lower screen brightness and set a shorter screen timeout.

- Turn off automatic syncing for Gmail™, Calendar, Contacts, and other applications.
- Some applications you have downloaded may cause your battery power to be reduced.
- While using downloaded applications, check the battery charged level.

To view the battery charge level

- 1 From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Battery**.
- 2 The battery status (charging or discharging) and level are displayed on the top menu of the screen.

To monitor and control what uses the battery

- 1 From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Battery** > **Battery usage**.
- 2 The screen displays battery usage time and also lists applications or services using battery power from greatest amount to least.


Inserting a microSD card

Your device supports the use of microSD memory cards of up to 32 GB capacity. Multimedia contents can be saved in the microSD card.

- 1 Place your fingernail in the cutout and gently pull the memory card slot cover to remove it.



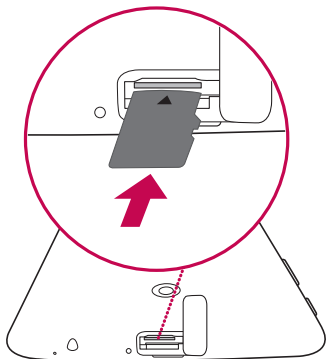

- 2 Insert the memory card into the slot with the contacts facing towards the screen. Carefully push the memory card slot cover into the tablet to close it.



Removing the microSD card



To safely remove the microSD card from your tablet, first you need to unmount it.

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Storage** > **Unmount SD card**.
- 2 Open the microSD card tray and push the card in to release it.
- 3 Gently pull the microSD card from the slot.

Warning! Do not remove the microSD card without unmounting it first. Otherwise, it may damage the microSD card as well as your tablet, and the data stored on the microSD card may be corrupted.


Formatting the microSD card

Warning! All files stored on your microSD card are deleted when you format the card.


- 1 From the Home screen, tap **Apps**  > **Settings**  > **Storage**.
- 2 Tap **Erase SD card** (twice).
- 3 If you set an unlock pattern, enter it and tap **Erase everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your microSD card, the folder structure may be different after formatting since all the files will have been deleted.

Locking and unlocking the screen


If you do not use the tablet for a while, the screen will be automatically turned off and locked. This helps to prevent accidental touches and saves battery power. When you are not using the your tablet, press the **Power/Lock Key**  to lock your tablet.

If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. web access, data communications).

To wake up your tablet, press the **Power/Lock Key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

Turning the screen on using the KnockON feature

The KnockON feature allows you to double-tap the screen to easily turn the screen on or off.

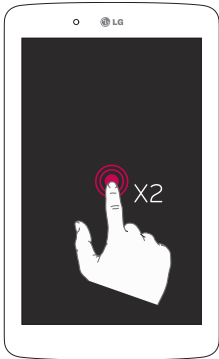



- Quickly double-tap the center of the screen to turn the screen on.
- Quickly double-tap the Status Bar, an empty area on the Home screen, or the Lock screen to turn the screen off.

Unlocking your screen using the Knock Code feature

The Knock Code feature allows you to create your own unlock code using a combination of knocks (or taps) on the screen.

- While the screen is off, tap the same sequence you established anywhere on the screen. The Home screen will be accessed directly.

To activate Knock Code feature

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Display** > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 This opens a screen that will guide you through how to select the unlock sequence. You have to create a backup PIN as a safety measure in case you forget your unlock sequence.

NOTE: KnockON is disabled when Knock Code is in use.

Your Home screen

Touch screen tips

Here are some tips on how to navigate on your tablet.

NOTE:

- To select an item, touch the center of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, yet firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Tap or touch

A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold

Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screen canvases by swiping from left to right (and vice versa).

Double-tap

Double-tap to zoom on a webpage or a map. For example, quickly double-tap a section of a webpage to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when viewing a picture and when using Maps. Double-tap a word to highlight it. Double-tap can also activate the KnockON feature to turn the touchscreen on or off.

Pinch-to-Zoom

Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser, Maps, or when browsing pictures.


Rotate the screen

From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

Home screen

Simply swipe your finger to the left or right to view the panels. You can customize each panel with apps, downloads, widgets and wallpapers.

The Quick Keys are available at the bottom part of the Home screen and provide easy, one-touch access to the functions you use the most.

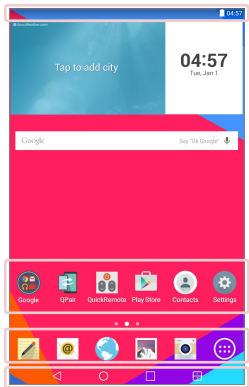

Status Bar – Shows device status information, including the time, Wi-Fi signal strength, battery status, and notification icons.

Application icons – Tap an icon (application, widget, folder, etc.) to open and use it.

Quick Keys – Provide easy, one-touch access to the functions used most often.

Dual window Key – Tap to change to dual window mode. It allows you to manage two different apps at the same time by splitting the screen in two.

Recent Apps Key – Tap to display recently used applications. You can also touch and hold it to display the Menu options in applications.

Home Key – Returns to the Home screen (or returns to your default Home screen canvas from any of the Home screen extension canvases). Touch and hold it to access Google Now.

Back Key – Returns to the previous screen. Also closes pop-up items such as menus, dialog boxes, and the on-screen keyboard. Touch and hold it to access Dual window.


Customizing the Home screen

You can customize your Home screen by adding apps, downloads, widgets or wallpapers. For more convenience using your tablet, add your favorite apps and widgets to the Home screen.

To add items on your Home screen:

- 1 Touch and hold the empty part of the Home screen.
- 2 Tap the **Apps** or **Widgets** tab.
- 3 Drag the desired item to the desired location and lift your finger.


To remove an item from the Home screen:

Touch and hold the icon you want to remove, drag it to , and lift your finger.

TIP! To add an application icon to the Home screen from the Apps screen, touch and hold the application you want to add and drag it to the desired location.



TIP! You can add several app icons in a folder. Drop one app icon over another one on a Home screen, and a folder will be created.



Opening, switching, and stopping apps


Tap  to display recently used applications. You can keep multiple apps running at the same time, and switch between several open apps. You can also manually stop apps from running.


Using Dual window

The Dual window feature splits the screen to enable multi-tasking, drag and drop interaction, auto-linking and recently used apps.

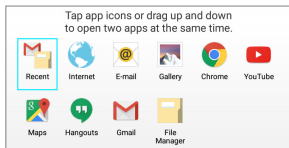


- 1 Touch  to split the screen or touch and hold the  until the app list is displayed.



- 2 Touch or drag an app icon to the desired space.
- 3 Tap  to display the following options. You can also drag the tabs to change the size of the windows.

| | |
|--|-----------------------|
|  | Switch two screens. |
|  | Change the apps list. |
|  | Full screen view. |
|  | Close the apps. |


To disable the Dual window feature



- 1 Tap  > **Apps**  > **Settings**  > **Dual window**.
- 2 Tap the Dual window switch to toggle it to **OFF**.

TIP! You can launch two **Internet** apps at the same time.

Customizing app icons on the Home screen

You can customize each application icon with images from your Gallery.

- 1 Touch and hold an application icon until it's unlocked from its current position. Then drop it on the screen. The editing  icon will appear in the upper right corner of the application.
- 2 Tap the application icon again and select the desired icon design and tap **OK**. Or tap **Add new** and adjust the icon size and select an image from your Gallery.

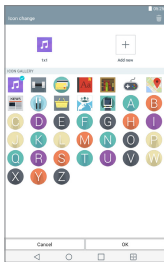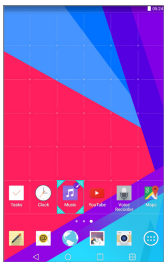


To view other Home screen panels

- Swipe (or flick) your finger left or right across the Home screen.
- Pinch in on the Home screen to display the mini panel view, then tap the Home screen panel you want to view.



Quick access


To view the quick access items, touch anywhere in the front key area and drag up. The following options are available: Google Now.

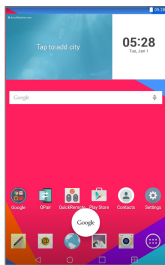

Notifications

Notifications alert you to the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as downloads.

From the Notifications Panel, you can view your tablet's current status and pending notifications. When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons showing things like Wi-Fi or battery strength on the right.

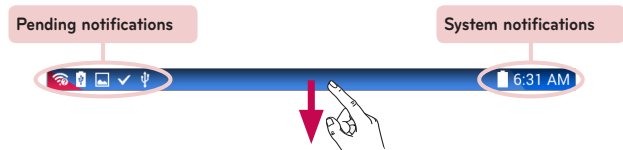


Accessing notifications

Swipe the Status Bar down to open the Notifications Panel and access notifications. To close the Notifications Panel, swipe the bar that is at the bottom of the screen upwards.



Quick Settings Bar – Swipe to the right or left to scroll through the list. Tap an icon to activate/deactivate the feature.

QSlide Apps – Tap a QSlide app to open as a small window on your screen. Tap  to remove, add, or rearrange QSlide apps.

Slide to the left and right to adjust the screen brightness and volume.

Clear Button – Tap here to clear your list of event-based notifications.



Tap a notification to open it.

Quick Settings on the Notifications Panel

Use the Quick Settings to easily toggle function settings like Wi-Fi. The Quick Settings are located at the top of the Notifications Panel.

NOTE: Touch and hold an icon in the Quick Settings Bar to view the function's settings menu.

To rearrange Quick Setting options on the Notification Panel

Open the Notifications Panel, swipe the Quick Settings to the left, and tap . To rearrange items, drag  to the desired location. To add more icons, checkmark the desired functions.

QSlide apps on the Notifications Panel

QSlide apps are displayed in a bar on the Notifications Panel below the Quick Settings Bar. These icons provide a quick, convenient way to multi-task on the same screen (similar to picture-in-picture on a TV). QSlide displays a small application window on the screen that can be moved, resized, or made transparent.



NOTE: You can remove the QSlide apps bar by tapping the QSlide icon in the Quick Settings bar.


















Using the QSlide apps

Tap any of the QSlide apps in the bar to activate it. When activated, the QSlide feature opens the application in a window in the foreground, allowing you to access other applications in the background. You can open up to two QSlide windows at a time.

Notification icons on the Status Bar

The icons listed in the table below are some of the most common ones.

| Icon | Description |
|--|------------------------------|
|  | Airplane mode |
|  | Connected to a Wi-Fi network |
|  | Wired headset connected |

| | |
|--|---|
|  | Bluetooth is on |
|  | System warning |
|  | Vibrate mode is on |
|  | Silent mode is on |
|  | Battery fully charged |
|  | Battery is charging |
|  | Content sharing is on |
|  | Downloading data |
|  | Uploading data |
|  | An alarm is set |
|  | GPS is on |
|  | Data is syncing |
|  | New Gmail message |
|  | New Hangouts message |
|  | A song is currently playing |
|  | Tablet is connected to PC via USB cable |
|  | Battery saver mode is on |

Multiple Users

Only one tablet owner ID can be created, but multiple user IDs can be added so that others can log in and use the tablet independently. Each user can configure their own tablet settings, use their own storage space, and have their own app update privileges.



Tablet owner privileges

- Only the tablet owner ID can add a new user log in ID and remove user IDs.


Multiple tablet user limitations

- All users share the same battery, internal memory, and data usage with all of the other users.
- The language settings set by one user apply to all of the other users.
- Each user can configure and use only their own content and data (e.g., Home screen settings, Sound settings, etc.).
- Any user can accept updated app permissions on the behalf of all of the other users.
- Messages and scheduled calendar events will be sent to notify the specified user ID only.
- Once a user starts printing a document using Mobile Print, the print job will continue even if the user ID is changed.
- Data transfer, download, multimedia play, and communication services will stop if the user ID is changed. However, the data transfer through Play Store can be continued even if the user ID is changed.

To add a new user on your tablet


- 1 From the Home screen, tap **Apps**  > **Settings**  > **Users** > **Add user**.
- 2 Select the type of user you want to add.
 - **User:** Users have their own apps and content.
 - **Restricted user:** You can restrict access to apps and content from your account.
- 3 The setup wizard opens to help you add a new user. Touch **Set up now**.
 - After creating a new user, that person needs to go through the setup process upon their first login.

To switch users

- 1 Pull down the Status bar at the top of the screen.
- 2 Touch the user icon  to show user switching panel.
- 3 Touch one of the user icons on the screen. Choose from the owner name or any other user names you created.


QSlide


The QSlide function enables an overlay window on your tablet's display for easy multi-tasking. QSlide windows can be opened from the **QSlide apps** bar on the Notifications panel, or directly from the applications that support the QSlide function.

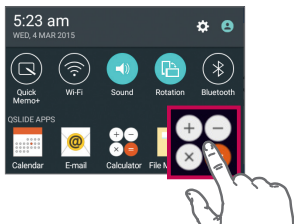

Open the Notifications Panel and tap the desired app from the **QSlide apps** section.


OR



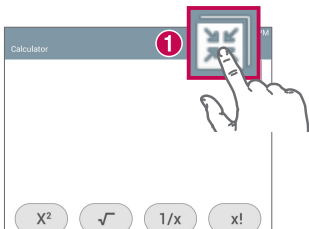


While using an application that supports QSlide, tap . The function will be displayed continuously as a small window on your screen.

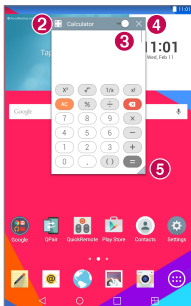

Using QSlide

The QSlide function opens the associated app in a window in the foreground, allowing you to access other apps in the background. It's displayed continuously on the screen until you close it.





| | |
|---|---|
|  | 1 Tap to run QSlide. |
|  | 2 Tap to exit QSlide and return to full window. |
|  | 3 Tap to adjust the transparency. |
|  | 4 Tap to close QSlide. |
|  | 5 Tap to adjust the size. |


NOTE: The QSlide function can support up to two windows at the same time. QSlide only supports the following applications: Video, Internet, Calendar, Email, File Manager, and Calculator.

Capturing a Screenshot

Press and hold the **Volume Down Key**  and **Power/Lock Key**  at the same time for 2 seconds to capture a screenshot of the current screen.

To view the captured image, go to **Apps**  > **Gallery**  > **Screenshots** folder.

Using QuickMemo+ to capture a screenshot


On the screen you want to capture, drag the Status Bar downward and select **QuickMemo+** .

OR

Press and hold both **Volume Keys**   at the same time.


Using Capture plus to capture a screenshot of the browser

This feature allows you to capture a portion of the screen in the default Internet browser.

- 1 Open the **Internet** app and navigate to the page you want to capture a screen shot of.
- 2 Tap the **Menu** icon  > **Capture plus**.
- 3 Adjust the blue box to the desired size, and then tap **Save**. The selected area is saved to the **Capture plus** folder in the Gallery.

Text Input Methods

The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the on-screen keyboard, simply tap a text field where you want to enter text.

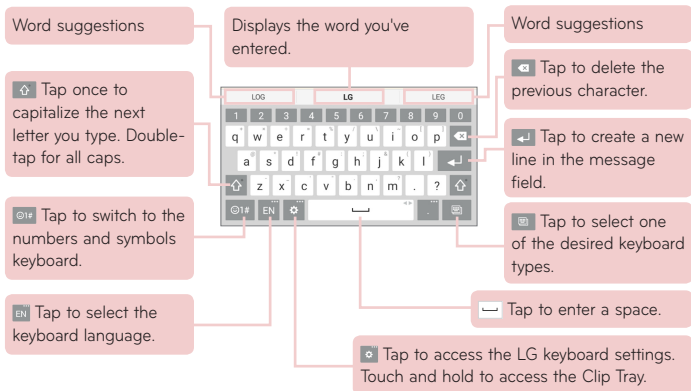

Enter suggested word using gesture control



Enter text on the keyboard and the related word suggestions appear. Tap or flick upward on the left side of the keyboard to select the left-side suggestion. Tap or flick upward on the right side of the keyboard to select the right-side suggestion.

Split keyboard using gesture


The split keyboard feature allows you to use both hands to type. Each half of the keyboard withdraws to the left and right of the screen.

To change the keyboard height

Adjust height of keyboard to show more of the screen and to control keyboard more easily.

- Tap  > **Keyboard height and layout** > **Keyboard height in portrait** > Tap and drag the icon  to adjust the keyboard height.

To change the bottom row keys

- Tap  > **Keyboard height and layout** > **QWERTY keyboard layout** > Tap and drag to add or delete keys or change the order.

NOTE: Only QWERTY, QWERTZ, AZERTY keyboards can be customized. This function dose not support some languages.

Entering special characters

The on-screen keyboard allows you to enter special characters (e.g. "á").

For example, touch and hold the desired key (for example, the "a" key). After the desired character appears, slide your finger over it and lift it off to enter it.

NOTE: A symbol at the top right corner of a key indicates that additional characters are available.

Google account setup

When you first turn on your tablet, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

To set up your Google account

- Sign into a Google Account from the prompted setup screen.

OR

- From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Accounts & sync** > **Add account** > **Google**.

If you already have a Google account, enter your email address and tap **NEXT**. Otherwise, touch **OR CREATE A NEW ACCOUNT** and enter the necessary information to create a new Google Account.

Once you have set up your Google account on your tablet, your tablet automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your tablet. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your tablet.

Connecting to Networks and Devices




Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your tablet, you need to access a wireless access point or 'hotspot'. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your tablet to be able to connect to them. Turn off Wi-Fi when you're not using it to extend the life of your battery.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Wi-Fi**.
- 2 Tap  to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 3 Tap **Search** to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The Status Bar displays icons that indicate your Wi-Fi status.

Bluetooth




You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones and tablets.


NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your tablet with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Bluetooth**.
- 2 Tap the Bluetooth switch  to turn it on.
- 3 Tap the check box next to your tablet's name to make your tablet visible to other Bluetooth devices.

NOTE: To select the length of time that your device will be visible, tap the **Menu** icon  > **Visibility timeout**.

- 4 A list of available devices will be displayed. Tap the device you want to pair with from the list.

NOTE: Depending on the type of device, you may have to enter matching codes, confirm matching codes, or the devices may automatically pair.

5 Once pairing is successful, your tablet will connect to the other device.

NOTE: Your tablet doesn't support Handsfree Profile. Therefore, the use of call features with some of accessories, such as Bluetooth headsets or Bluetooth-enabled devices, may not be available for this device.

Send data using the Bluetooth feature

1 Open the item and tap .

OR

Touch and hold the item and select **Share**.

OR

Open the item and tap the **Menu** icon  > **Share**.

2 Tap **Bluetooth** to share via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth feature



1 Refer to the Bluetooth device's user guide to send a file to your tablet. Both devices must be paired and Bluetooth must be on.

2 Pair the devices and tap **Accept** when you receive a Bluetooth Authorization Request to accept the file(s).

SmartShare

You can use the SmartShare feature easily in the Gallery, Music apps, and others.

Enjoying the content via a variety of devices

You can share your tablet's content with a variety of devices. Tap  or tap 
> **SmartShare Beam** to share the content in the **Gallery, Music, POLARIS Office 5** apps.

Playing/Sending

Play – You can play the content via a TV, a Bluetooth speaker or etc.

Beam – You can send the content to the device of Bluetooth and SmartShare Beam supported.

- **SmartShare Beam** – This allows to transfer the content feature fast via Wi-Fi Direct.



Enjoying the content from Nearby devices

You can enjoy the content from nearby devices (i.e. PC, NAS, Mobile) in the Gallery and Music apps.

Connecting devices

Connect your device and other devices supported by DLNA in the same Wi-Fi network.

Searching other devices

Tap **Nearby devices**, then you can see the DLNA-supported devices. Connect to the device to view the content.

Using the content from the Cloud

You can use the content from the cloud (i.e., Dropbox) in the Gallery and Music apps.

Using the Cloud


NOTE: The supported features may vary depending on the cloud. Retrieving data may take some time depending on the cloud.

- 1 Select **Cloud** in the Gallery and Music apps.
- 2 Select the cloud what you want to use and log in.
- 3 You can use the content of the cloud after logging in.
- 4 Set the cloud settings to select the app to use the cloud.

QPair

By connecting your tablet and mobile phone via QPair, you can sync incoming calls, messages, and social networking notifications between your tablet and mobile phone.



- 1 Run **QPair**  and tap **Get started** > **Start** on your tablet first and then run the same steps on your phone.

TIP! QPair may not be pre-installed on the phone. Go to the Google Play Store and search for QPair and install it.

NOTE:

- QPair works with phones running Android 4.1 or later. Some features may be limited depending on your phone model.
- Since QPair uses the Bluetooth function, it may not work normally if you change the Bluetooth settings while QPair is in use.

- 2 Bluetooth connection will be turned on automatically.

QPair features

Call notifications – Sends the tablet a notification when the phone receives a call. The notification displays the caller's number and allows you to answer and decline the call. You can also change call settings, such as a ringtone, ringtone volume, ringtone with vibration, or send a decline message when you get a call.

NOTE: You can only receive a call supported by Bluetooth technology. Dialing a call from the tablet using the QPair feature is not possible.

Message notifications – Sends the tablet a notification when the phone receives a message. You can also change message settings, such as message pop-up, message preview, notification sound, and notification vibration.

Social network notifications – Displays a social networking notification on your tablet's Status Bar when it arrives on your phone.

NOTE: To enable this feature, turn the **QPair social network notifications** option on your phone (**Settings > Accessibility > QPair social network notifications**). This option allows you to be notified of social networking notifications on your tablet.

QuickMemo+ transfer – Saves your current QuickMemo+ in the tablet's Gallery, and then syncs the tablet's Gallery with the Gallery on your phone.

Internet via phone – Automatically connects your tablet to the Internet through your mobile phone (as a Wi-Fi hotspot). Using this feature may incur data charges. To save data usage on the phone, the phone automatically connects to any trusted Wi-Fi hotspots within range.

PC connections with a USB cable

You can connect your tablet to your PC to charge it, transfer items to the PC from the tablet and vice versa.

Transferring music, photos and videos using the Media device (MTP) mode

- 1 Connect your tablet to a PC using a USB cable.
- 2 If you haven't installed the LG Android Platform Driver on your PC, you will need to manually change the settings. To change the settings, slide the Status Bar down and tap the current USB connection mode > **Media device (MTP)**.
- 3 You can now view the Media device content on your PC and transfer the files.

NOTE: If you want to change the PC connection settings, slide the Status Bar down and select the USB connection mode option. This setting is visible on the Status Bar only when you connect a USB cable to your tablet.

Synchronize with Windows Media Player

Ensure that Windows Media Player is installed on your PC.

- 1 Use the USB cable to connect the tablet to a PC on which Windows Media Player has been installed.
- 2 Select the **Media device (MTP)** option.
- 3 When connected, a pop-up window will appear on the PC. Select the Windows Media Player option to synchronize music files.
- 4 Edit or enter your device's name in the pop-up window (if necessary).
- 5 Select and drag music files to the sync list.

6 Start synchronization.

- The following requirements must be satisfied to synchronize with Windows Media Player.

| Items | Requirement |
|-----------------------------|---|
| OS | Microsoft Windows XP SP2, Vista or higher |
| Window Media Player version | Windows Media Player 10 or higher |

- If the Windows Media Player version is older than 10, install version 10 or newer.

PC connections with a USB cable for Mac OS X users


You can transfer media contents to your Mac OS X PC from the tablet and vice versa by setting up the Android File Transfer program.

- 1 Download and install the Android File Transfer program from android.com website for Mac Users (<http://www.android.com/filetransfer/>).
- 2 Connect your tablet to your computer, and double click the AFT (Android File Transfer program) application to start it up.
- 3 You can view the media contents, drag and drop the media file to and from the tablet (or PC).





Contacts

You can add contacts on your tablet and synchronize them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 From the Home screen, tap **Contacts**  to open your contact list.
- 2 Tap the **Search contacts** box and enter the contact's name. You can also tap a letter along the left side of the screen to access names starting with the chosen letter.


Adding a new contact


- 1 From the Home screen, tap **Contacts** .
- 2 Tap **New contact** . Select the desired account (if applicable).
- 3 If you want to add a picture to the new contact, tap . Choose from **Take photo** to take a picture using the camera or **Select from Gallery**. Then browse for an image and select it.
- 4 Tap  to enter more specific name information.
- 5 Enter the details about your contact.
- 6 Tap **Save**.

Favorite Contacts

You can classify frequently called contacts as favorites.

To add a contact to your favorites

- 1 From the Home screen, tap **Contacts**  to open your contacts.
- 2 Tap a contact to view its details.

3 Tap the star  to the right of the contact's name. The star turns gold and the contact is added to your favorites.

To remove a contact from your favorites list

1 From the Home screen, tap **Contacts**  to open your contacts.

2 Tap the **Favorites** tab to view your favorite contacts.

3 Tap a contact to view its details.

4 Tap the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

Creating a group

1 From the Home screen, tap **Contacts**  to open your contacts.

2 Touch the **Groups** tab, then touch .

3 Enter a name for the new group.

- Tap **Add members** to add contact entries to your new group.
- Tap the **ACCOUNT** field to change the account(s) you want to save the new group to.

4 Touch **Save** to save the group.


NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

Email


You can use the Email application to read emails from services like Yahoo!, MSN, and AOL. The Email application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide you with the account settings you need.

Managing an email account

Tap the **Email**  on the Home screen. The first time you open the Email application, a set-up wizard opens to help you to set up an email account. After the initial setup, the contents of your inbox are displayed. If you have added more than one account, you can switch among accounts.


To add another email account:

- Open the **Email** application and tap the **Menu** icon  > **Settings** > **Add account**.



To switch between accounts:

If you've added more than one account, you can easily switch between them. From any email folder, tap the current account (at the top of the screen), then tap the account you want to access.


To change an email general settings:

Open the **Email** application and tap the **Menu** icon  > **Settings** > **General settings** to configure settings that apply to all of your accounts. Tap an individual account to configure settings only for that particular account.




To delete an email account:

- Open the **Email** application and tap the **Menu** icon  > **Settings** > **Menu** icon  > **Remove account** > touch an account you want to delete > **Remove** > **Yes**.

Working with account folders

Open the **Email** application and tap the **Menu** icon  and select **Folders**. Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

- 1 While in the **Email** application, tap **Compose** .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts. Separate multiple addresses using semicolons.
- 3 Tap **Attach**  to attach files, if required.
- 4 Enter the subject and your message.
- 5 Tap **Send**  to send the message.

If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send will be stored in your Outbox folder until you connect to a network again. If it contains any pending messages, the Outbox will be displayed on the Accounts screen.

Receiving emails

When a new email arrives in your Inbox, you'll be notified by a sound or vibration (depending on your sound and vibration settings) and its notification icon appears on the Status Bar.

Entertainment

Camera

To open the Camera application, tap **Camera**  on the Home screen.


Getting to know the viewfinder



- 1 Clean view** – Touch to show or hide menus on the view finder.
- 2 Swap camera** – Switch between the back-facing camera lens and the front-facing camera lens. You can also switch the camera by swiping the screen.
- 3 Settings** – Touch this icon to open the settings menu.
- 4 Gallery** – Touch to view the last photo you captured. This enables you to access your Gallery and view saved photos while in camera mode.
- 5 Video mode** – Tap to start recording a video.
- 6 Capture** – Takes a picture.
- 7 Exit** – Touch to exit the camera.

NOTE: Please ensure the camera lens is clean before taking pictures.

Using the advanced settings

In the viewfinder, tap  to open the advanced options.



Selects photo resolution. If you choose a high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.

TIP! The screen is zoomed in if you set recording mode to **HD**.



Take photos by voice command.



Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.




Displays grid lines on the screen to help you align your photos.



Opens the help guide to know how a function operates.

TIP! When you exit the camera, some settings return to their defaults, such as timer. Check these before you take your next photo.

Taking a photo


- 1 Open the **Camera** application.
- 2 Point the lens towards the subject you want to photograph.
- 3 Touch  or anywhere on the screen to capture the photo.

To zoom in or out

When taking a picture or recording a video, place two fingers anywhere on the screen and spread them apart to zoom in. To zoom back out, pinch them together.

Gesture shot

The Gesture shot feature allows you to take a picture with a hand gesture using the front camera. To take photo, raise your hand, with an open palm, until the front camera detects it and a box appears on the screen. Then close your hand into a fist and a timer will start, allowing you time to get ready.

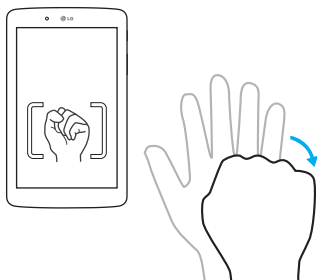

Once you've taken a photo

- 1 Tap the image preview by the gallery button to view the last photo you captured.
- 2 Tap **Gallery** or **Photos**, then tap **OK**.



Touch to edit the photo.



Touch to take another photo immediately.



Touch to send your memo to others or share it via social networking services.



Touch to delete the photo.



Touch to access more options.



Touch to add the picture to your favorites.

TIP! If you have a social networking account and set it up on your tablet, you can share your photo with your social networking community.

Touch the **Menu** icon  to open the following options.

SmartShare – Touch to share your photo using the SmartShare function.

Set image as – Touch to use the photo as a **Home screen wallpaper**, **Contact photo**, **Lock screen wallpaper** or **Wallpaper**.

Move – Touch to move the photo to another album.

Copy – Touch to copy the selected photo and save it to another album.

Copy to Clip Tray – Touch to copy the photo and store in the Clip Tray.

Slideshow – Automatically shows you the images in the current folder one after the other.

Rotate left/right – Touch to rotate the picture to the left or right.

Crop – Crop your photo. Move your finger across the screen to select the area to be cropped.

Add location – To add the location information.



Rename – Touch to edit the name of the selected photo.

Print – Allows you to print the picture.



Details – Displays more information about the picture.

Viewing your saved photos



You can access your saved photos when in camera mode. Just tap the image preview by the gallery button and your Gallery will be displayed.

- 1 Choose the app to use to view and/or edit your photos. Tap **Gallery**  or **Photos** .
- 2 Tap **OK**.
 - To view more photos, scroll left or right.
 - To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer together to zoom out).

Recording a video


- 1 Open the **Camera** application.
- 2 Point the lens towards the subject you wish to capture in your video.
- 3 Touch the Video mode icon  to start recording.
- 4 A timer showing the length of the video will appear.
- 5 Touch  on the screen to stop recording.

TIP!

- Tap  to pause the recording.
- Tap  to take a screen shot while recording a video.

Watching your saved videos

Access your saved videos from video camera mode by tapping the image preview by the gallery button.

- 1 In the viewfinder, tap the image preview by the gallery button.
- 2 Your **Gallery** will appear on the screen with your most recent recorded video displayed. Swipe to the left to scroll to your other videos.
- 3 Tap the Play icon  on a video to play it automatically.

NOTE: You can view your videos in the Gallery and Photos apps.

NOTE: Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

Gallery

You can store multimedia files in internal memory for easy access to all your multimedia files. Use this application to view multimedia files like pictures and videos.


From the Home screen, tap **Apps**  > **Apps** tab > **Gallery** .

You can manage and share all your image and video files with the Gallery.

NOTE:





- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.
- If the file size exceeds the available memory, an error can occur when you open files.

Viewing pictures

Launching the **Gallery** app  displays your available folders. When another application, such as Email, saves a picture, the Downloads folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Tap a folder to open it.

Pictures are displayed in order by creation date. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Playing videos



Open the **Gallery** app  and select an album. The Play icon  is displayed on video files. Tap an image to select it. Select the app to play it (tap the **Photos** app  or the **Video** app ) , then tap **OK** and the video begins playback.

NOTE:

- When using the Videos app to play a video, slide the left side of the screen up and down to adjust the screen brightness. Slide the right side of the screen up and down to adjust the volume.
- When using the Videos app to play a video, slide the screen left or right to rewind or fast-forward.

Deleting images and videos

Use one of the following methods:


- In a folder, tap  and select the photos and videos you want to delete, then tap **Delete**, the **Yes** to confirm.
- When viewing a photo or video, tap , then tap **Yes** to confirm.

Setting as wallpaper

When viewing a photo, touch the **Menu** icon  > **Set image as** and select **Home screen wallpaper**, **Lock screen wallpaper** or **Wallpaper**.

Slideshow

You can view your photos in a slideshow by album or by selecting all of your photos. From the Home screen, tap **Gallery** .




- Tap the album with the photos you want to view, then tap the **Menu** icon  > **Slideshow** > choose the images you want to view > **Next** > verify the slideshow settings > **Start**.


Tap the center of the screen to stop playing the slideshow.





Video



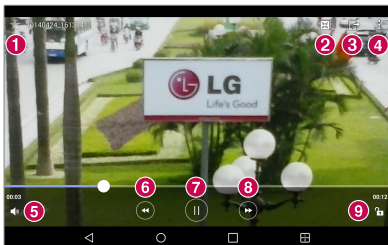


Your Gallery has an integrated video player that lets you play all of your favorite videos.

Playing a video


- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Gallery**  > **Video** .
- 2 Select the video you want to play.



| | |
|---|--|
| 1  | Touch to add the video to your favorites. |
| 2  | Touch access QSlide and display the video in small window. |
| 3  | Touch to share your video via the SmartShare function. |
| 4  | Touch to access more options. |

| | | |
|----------|---|---|
| 5 |  | Touch to manage the video volume. |
| 6 |  | Touch and hold to rewind in 3 second increments. Tap once to rewind 10 seconds. |
| 7 |  | Touch to pause video playback. |
| 8 |  | Touch and hold to fast-forward in 3 second increments. Tap once to fast-forward 10 seconds. |
| 9 |  | Touch to lock/unlock a video screen. |



To change the volume while watching a video, press the Volume Keys on the right side of the tablet.

Tap **Gallery** >  (in the upper left corner of the title bar) > **Videos**, then touch and hold a video in the list to access the following options:

Share, Delete, Trim, Rename and **Details**.

TIP! While watching a video, slide up and down along the left side of the screen to adjust the screen brightness. Slide up and down along the right side of the screen to adjust the volume.



Music


Your tablet has a music player that lets you play all your favorite tracks. To access the music player, from the Home screen, tap **Apps**  > **Apps** tab > **Music** .







Transfer music using Media device (MTP) mode

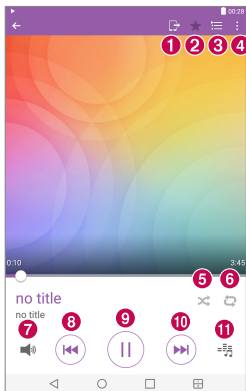




- 1 Connect the tablet to your PC using the USB cable.
- 2 Select the **Media device (MTP)** option. Your tablet will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.

Playing a song

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Music** .
- 2 Touch the **Songs** tab.
- 3 Select the song you want to play.



| | |
|---|--|
|  | Touch to share your music via the SmartShare function. |
|  | Touch to set the current song as a favorite. |
|  | Touch to see the Now playing playlist. |
|  | Touch to access more options. |
|  | Touch to set shuffle mode. |
|  | Touch to set repeat mode. |

| | |
|--|--|
|  | Touch to manage the music volume. |
|  | Touch to go back to the beginning of the song. Touch twice to return to the previous song. Touch and hold to rewind 3 seconds. |
|  | Touch to pause playback. |
|  | Touch to skip to the next track on the album or in the playlist. Touch and hold to fast-forward 3 seconds. |
|  | Touch to set the audio effect. |

To change the volume while listening to music, press the Volume Keys on the right side of the tablet.

Touch and hold any song in the list to access the following options:

Play, Add to playlist, Delete, Share, Details and **Search**.

NOTE:




- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.
- Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Tools

QuickMemo+






The QuickMemo+ feature allows you to create memos and capture screen shots. Capture screens, draw on them, and share them with family and friends with QuickMemo+.






Creating a memo

- 1 From the Home screen, tap **QuickMemo+** , then tap  to create a new memo.
- 2 You can edit texts by typing words directly or select the pen type and color you want to use and enter text by handwriting.
- 3 Add a reminder by touching  to set the reminder notification for the event.
- 4 Add weather and location information to your memo if a data network is available.


Using the QuickMemo+ options

The following options are available in the QuickMemo+ toolbar at the top of the screen.

| | |
|---|--|
|  | Touch to open the memo in QSlide. |
|  | Allows you to undo and redo previous actions. |
|  | Allows you to edit the text, its color and its alignment. |
|  | Allows you to enter text by handwriting. You can select the type of pen to use and its thickness, transparency, and color. |
|  | Erases edits you've made to the memo. |

| | |
|---|---|
|  | Saves the memo in QuickMemo+. |
|  | Touch to access more options. |
|  | Allows you to set a reminder notification for an event. |
|  | Allows you to insert weather information into the memo. |
|  | Allows you to add location information using GPS. |



Capturing a screen shot for your QuickMemo


1 To access the QuickMemo+ feature, slide the Status Bar downwards and touch .

OR

Press both of the **Volume Keys** at the same time for one second.

2 Select the desired menu option from the toolbar and create a memo.

3 Tap  to save the memo. To exit QuickMemo+ at any time, tap the **Back Key** .

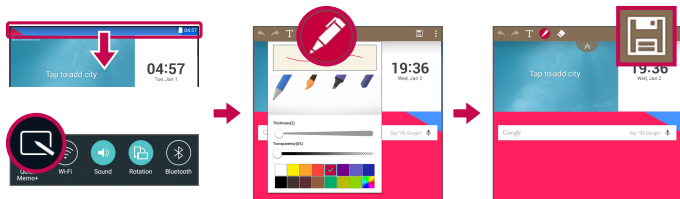






NOTE: Please use a fingertip while using the QuickMemo+. Do not use your fingernail.


QuickRemote

QuickRemote turns your tablet into a Universal Remote for your home TV, Blu-ray or DVD.

NOTE: QuickRemote may not be available for some devices and areas.

To open and configure QuickRemote


- 1 From the Home screen, tap the **Apps**  > **Apps** tab > **QuickRemote** . You can also perform the initial set up of your QuickRemote from the Notifications Panel. Swipe the Status Bar downward, tap the **QuickRemote** icon , then tap **ADD REMOTE**.
- 2 Touch  to select a room type and touch  to add the device.

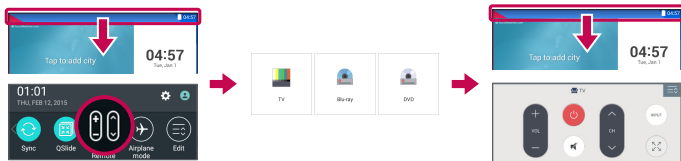

- 3 Select the type and brand of device, then follow the on-screen instructions to configure the device(s).


NOTE: The QuickRemote operates the same way as an ordinary infrared (IR) remote control in your region or country. Be careful not to cover the infrared sensor at the top of the tablet when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

Using QuickRemote

- 1 Open **QuickRemote**  and choose the room where you configured the remote.
- 2 Select the remote you want by tapping its type/name on the QuickRemote bar along the left side of the screen.
- 3 Tap the buttons on the displayed remote.

NOTE: When adding the TV remote control, QuickRemote can use the INPUT button to configure appropriate remote control. When configuring the INPUT button, the TV input source can be changed. To reset the TV input source, tap the INPUT button on QuickRemote several times (depending on the number of devices connected to the TV).




QuickRemote options


To access the QuickRemote options menu, tap the **Menu** icon  to select the desired option.

NOTE: While playing music in the background, pressing any QuickRemote button will mute the sound for a second.

Clock



Setting your alarm

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Clock**  > .
- 2 Set the desired alarm time.
- 3 Set **Repeat**, **Snooze duration**, **Alarm with vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**.
- 4 Touch **Save**.



NOTE: To change alarm settings in the alarm list screen, touch the **Menu** icon  and select **Settings**.

Calculator

Using your calculator

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Calculator** .
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want to perform ($+$, $-$, \times or \div) followed by $=$.




NOTE:

- For more complex calculations, touch the **Menu** icon , select **Scientific calculator**, then choose the desired function.
- To view the calculation history, tap **Menu** icon  > **Calculation history**.

Calendar

Events from each account you've added to your tablet and configured to synchronize calendars is displayed in your Calendar.


Adding an event to your calendar

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Calendar** .
- 2 Tap the menu at the top left corner to change the calendar view (Day, Week, Month, Year, Agenda).
- 3 Tap the date you wish to add an event to and tap .
- 4 Touch the **Event name** field and enter the event name.

- 5 Touch the **Location** field and enter the location. Check the date and enter the time you wish your event to start and finish.
- 6 If you wish to add a note to your event, touch the **Description** field and enter the details.
- 7 If you wish to repeat the alarm, set **REPEAT** and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.




NOTE: Touch and hold a spot on the calendar to quickly save a calendar event on that date. Simply enter the event name and time, then tap **Save**. You can tap **Details** and enter more information, or update the event with additional details later.

To change your calendar view

No matter where you're in the Calendar app, you can easily switch calendar views. Simply tap  in the upper left corner of the title bar, or on the left side of the screen swipe your finger from left to right to display a menu of calendar views. Tap **Day**, **Week**, **Month**, **Year**, or **Agenda**.

Tasks

The Tasks app can be synchronized with your MS Exchange account. You can create and manage your tasks using your tablet or from MS Outlook or MS Office Outlook Web Access.

- 1 From the Home screen, tap **Apps**  > **Tasks** .
- 2 Tap the **Add** task icon  (in the upper-right corner of the screen).
- 3 Enter the **Subject**, **START DATE**, **DUE DATE**, **DESCRIPTION**, **REPEAT** and **REMINDER** as necessary.
- 4 Tap **Save**.

File Manager

The File Manager application allows you to manage files in your internal/external storage.







File Manager makes it easy to view and manage your files. Simply tap a file type (All files, Music files, Image files, Video files, Document files, or Cloud files), then tap on the necessary folders to find your files.

To open the File Manager application

- From the Home screen, tap **Apps**  > **Apps** tab > **File Manager** .

File Manager Options

Open the **File Manager** app > **All files** > **Internal storage** to access to the following options (at the top of the screen):


| | |
|--|---|
|  | Allows you to open File Manager in a QSlide window. |
|  | Allows you to search for your files or information. |
|  | Allows you to create a new folder. |
|  | Allows you to move files and folders to another location. |
|  | Allows you to copy files and folders to another location. |
|  | Allows you to delete files and folders. |
|  | Allows you to access more options. |

Voice Recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

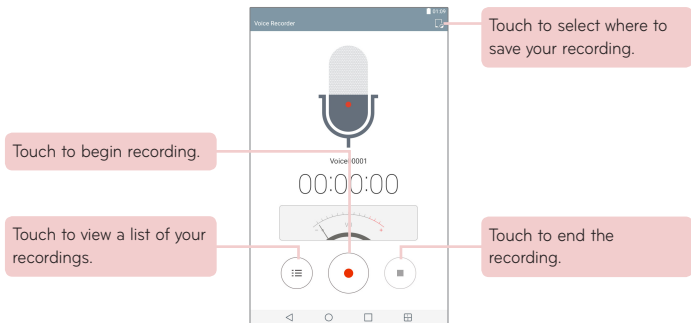

- From the Home screen, tap **Apps**  > **Apps** tab > **Voice Recorder** .



NOTE: The available recording time may differ from actual recording time.

Managing your Voice memos



From the Voice Recorder list screen:

- Tap the **Share** icon  to share the voice memo using the available choices.
- Tap the **Delete** icon  to select the voice memo(s) you want to delete.
- Touch and hold a voice memo to open a context menu to select **Share**, **Delete**, **Rename**, **Trim**, or **Details**.



POLARIS Office 5

POLARIS Office 5 is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere or anytime, using their mobile devices.

To create a new document


- 1 From the Home screen, tap **Apps**  > **Apps** tab > **POLARIS Office 5** .
- 2 Register your email address on the Registration page.

NOTE: You can tap **Skip** to ignore the registration information.

- 3 Tap  to start a new document.
- 4 Tap a document type from the drop-down list, then choose a template.
- 5 Enter contents in the document using the tools at the top of the screen and the on-screen keyboard.
- 6 When you're done working on the document, tap  (in the top left corner of the screen), then tap **Save** (or **Save as** to enter a new document name) to save.
- 7 Enter the document name and touch **Save**.

To view and edit a document on your device

You can now easily view and edit a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices.

- 1 Open **POLARIS Office 5** and search for a document.
- 2 Touch the document that you want to view or edit.
When viewing documents using POLARIS Office 5, the objects and layout remain the same as in the original documents.
- 3 To edit the document, tap .

Google+

Use the Google+ app to stay connected with people via Google's social network service.




From the Home screen, tap **Apps**  > **Apps** tab > **Google**  > **Google+** .

NOTE: This application may not be available depending on the region or service provider.


LG SmartWorld

LG SmartWorld offers an assortment of exciting content – fonts, themes, games, applications.

How to Get to LG SmartWorld from Your Tablet

- 1 Tap  > **Apps**  > **Apps** tab > tap the  icon to access LG SmartWorld.
 - 2 Select your country and sign in.
 - 3 Download the content you want.
- When you use your mobile network, data fees can be charged depending on your data plan that you signed-up with your carrier.
 - LG SmartWorld may not be available for all carriers or in all countries.

NOTE: What if there is no  icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

Special benefit only in LG SmartWorld









- 1 Decorate your own style on your tablet by personalizing it with Home themes, keyboard themes, and fonts provided on LG SmartWorld. (However, this service is available only to specific devices. Please check the LG SmartWorld website to check availability).
- 2 Enjoy LG SmartWorld's special service by joining promotions that are consistently provided.

The Web


Internet

Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your tablet wherever you are and whatever you enjoy.

From the Home screen, tap **Apps**  > **Apps** tab > **Internet** .

| | |
|--|---|
|  | Tap to run QSlide. |
|  | Tap to go back one page. |
|  | Tap to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you touch the Back Key  , which takes you to the previous page. |
|  | Tap to refresh or stop the current page. |
|  | Tap to go to the Home page. |
|  | Tap to access your bookmarks. |
|  | Touch to access more options. |



Opening a page

- To open a new page, tap  at the top of the browser.
- To go to another web page, tap a tab at the top of the screen to view the page.

Bookmarks

To open a bookmarked web page, tap  on the browser toolbar and select one.

History

Tap  on the browser toolbar and select the **History** tab to open a web page from the list of recently-visited web pages. To clear the history, tap  to clear all history.

Using Reader mode



Your tablet can display simplified web pages for easier reading.

View news or blog posts and other article pages easily with no distractions – with Reader mode, you can read a clutter-free page.

Tap  on the URL web address bar to activate Reader mode.

Using QSlide

Use this feature to access the Internet without closing the current application.

While viewing content on the browser, tap . You can then browse other information on your tablet. To view the browser in full screen, tap .

Download files

Use the Downloads app to see what files have been downloaded.

From the Home screen, tap **Apps**  > **Apps** tab > **Downloads** .


Chrome

Use Chrome to search for information and browse web pages.


From the Home screen, tap **Apps**  > **Apps** tab > **Chrome** .

NOTE: This application may not be available, depending on your region and service provider.


Viewing web pages

Tap the address field (at the top of the screen), enter a web address or search criteria, and tap  on the keyboard.

Opening a page

- To go to a new page, tap  at the top of the browser.
- To go to another web page, tap the a tab at the top of the screen to select the page.


Searching the web by voice

Tap the address field, tap , speak a keyword and select one of the suggested keywords that appear.

NOTE: This feature may not be available depending on the region or service provider.


Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.


To view open tabs on other devices, tap the **Menu** icon  > **Recent tabs**. You must be signed in to the same Google account on all devices. Select a web page to open.

Adding and viewing bookmarks

To add bookmarks, tap  in the URL bar.

To open a bookmarked web page, tap the **Menu** icon  > **Bookmarks** and select the desired page.

Chrome Options menu

Tap the **Menu** icon  to access the following options.


- **New tab** – Tap to open a new web page tab.
- **New incognito tab** – Tap to open a new incognito tab.
- **Bookmarks** – Displays your bookmarked web pages.
- **Recent tabs** – Displays your open web pages on other devices.
- **History** – Displays your browsing data (web pages you've visited).
- **Share...** – Allows you to share the web page.
- **Print...** – Tap to print the web page. Choose to automatically find a printer on your network, or manually enter one to use.
- **Find in page** – Allows you to search for text on the current web page.
- **Add to homescreen** – Allows you to add a shortcut to the current page on your Home screen.
- **Request desktop site** – Checkmark to access the desktop site when you view web pages on your tablet.
- **Settings** – Allows you to change the settings specific to the Chrome app.
- **Help & feedback** – Displays information about using the Chrome app on your tablet and allows you to provide feedback to Chrome developers.

Settings

Access the Settings menu

1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings** .

OR

From the Home screen, touch and hold the **Recent Apps Key**  > **System settings**.

2 Select a setting category and set the desired option.

WIRELESS NETWORKS

Wi-Fi

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

A list of all available Wi-Fi networks will be displayed. Tap one to connect to it.

NOTE: Tap **Search** to scan for available Wi-Fi networks.

Tap the **Menu** icon  in the Wi-Fi menu to access the following options.

Add Wi-Fi – Allows you to manually enter a new Wi-Fi network.




Saved Wi-Fi – Allows you to forget saved Wi-Fi network.

Advanced Wi-Fi – Accesses the advanced Wi-Fi settings.

Interactive tutorial – Displays some useful tutorials for the Wi-Fi function.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your tablet in the router.

You can find the MAC address in the following user interface: From the Home screen, tap **Apps**  > **Settings**  > **Wi-Fi** > **Menu icon**  > **Advanced Wi-Fi** > **MAC address**.

Bluetooth

Turn the Bluetooth wireless feature on or off to use Bluetooth. Turning Bluetooth on allows you to pair and connect to other Bluetooth devices.

Tap the **Menu icon**  in the Bluetooth menu to access the following options.

Edit tablet name – Changes your tablet name for easy identification when pairing and connecting. Enter your new tablet name, then tap **Save**.

Visibility timeout – Sets the amount of time other Bluetooth devices can see your tablet for pairing and connection. Choose from **2 min**, **5 min**, **1 h**, and **Never time out**.

Show received files – Displays a list of your Bluetooth received files.

Interactive tutorial – Displays some useful tutorials about Bluetooth features.

Data usage

Displays the data usage during the chosen periods of time. Tap an app from the list to view the app's data usage.

More...

Allows you to set additional wireless and networks settings.

Airplane mode – Allows you to set Airplane mode. Activating Airplane mode disables all wireless connections.

Miracast – Allows you to wirelessly mirror your tablet screen and sound onto a Miracast dongle or TV.

SmartShare Beam – Allows you to receive multimedia content via SmartShare Beam from LG phones or tablets.

LG PC Suite – Allows Wi-Fi connection to transfer music and images between a computer and the tablet.

Media server – Allows to share media contents with nearby devices via DLNA.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

NOTE: You must set a lock screen PIN, Password or Pattern before you can use credential storage.

DEVICE

Sound

Sound profile – Allows you to set the sound profile to **Sound, Vibrate only** or **Do not disturb**.

Volume – Manage the volume for **Notifications sound, Touch feedback & system**, and **Music, video, games & other media**.

Vibration strength – Allows you to set the vibrate strength for calls, notifications, and touch feedback.

Notification sound – Allows you to set your default notification ringtone.

Do not disturb – Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.

Lock screen – Allows you to choose if you want to show or hide notifications on the lock screen.

Apps – Allows you to prevent apps from displaying notifications or set apps to show notifications with priority when Do not disturb is set to Priority only.

Touch sound – Allows you to set your tablet to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sound – Allows you to set your tablet to play a sound when locking and unlocking the screen.

Vibrate on tap – Allows you to set the vibration feedback when the tablet screen is touched.

Display

Home screen

Theme – Sets the screen theme for your device.

Wallpaper – Sets the wallpaper to use on your Home screen.

Screen swipe effect – Sets the effect when you swipe to change screens.

Allow Home screen looping – Checkmark to set the Home screens to scroll continuously, eliminating the need to scroll back in the opposite direction when you reach one end.



Home backup & restore – Allows you to backup and restore app and widget configurations and themes.

Help – Displays information about the Home screen.

Lock screen

Select screen lock – Set a screen lock type to secure your tablet.

NOTE: After upgrading to Lollipop OS, your screen lock may not be available except for Pattern, PIN and Password.

In this case, go to **Apps**  > **Settings**  > **Security** > **Clear credentials** to delete the security certificates, and then, set up a screen lock.

Be careful when you clear credentials because all the security certificates you have installed will be deleted.

Smart Lock – Sets to keep your tablet unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognizes your face.

Screen swipe effect – Sets the screen swipe effect options.

Wallpaper – Sets your Lock screen wallpaper. Select it from **Gallery** or **Wallpaper gallery**.

Shortcuts – Allows you to change the shortcuts on the Swipe Lock screen.

Owner info – Allows you to enter contact info to be displayed on the Lock screen in case the tablet is lost.

Lock timer – Sets the amount of time before the screen automatically locks after the screen has timed-out.


Power button instantly locks – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the Security lock timer setting.

Brightness – Adjust the screen brightness. Touch **Night brightness** to set the brightness to 0% automatically between the hours of 12:00 am - 6:00 am.

Screen timeout – Set the time delay before the screen automatically turns off.

Screen-off effect – Sets the screen-off effect used when the screen turns off.

Auto-rotate screen – Set to switch orientation automatically when you rotate the tablet.

Daydream – Tap the Daydream switch  to toggle it On or Off. On allows the set screen saver to be displayed when the tablet is sleeping while docked and/or charging. Choose from **Clock** and **Google Photos**.

NOTE: Charging might be slow while the screen saver is on.

Font type – Change the type of display font.

Font size – Change the size of the display font.

Smart screen – Keeps the screen on when the device detects your eyes looking at the screen.

Home touch buttons – Allows you to set which Home touch buttons are displayed and their position on the bar. You can also select the color and the background.

Motion sensor calibration – Allows you to improve the accuracy of the tilt and speed of the sensor.

Storage

INTERNAL STORAGE – Displays the total amount of space in the device's memory and lists what type of data is using up space.

SD CARD – Displays the total amount of memory space on the microSD card.

Mount/Unmount SD card – Mounts and unmounts the microSD card from your tablet so that you can access the data stored in it, format the card, or safely remove it. This setting is dimmed if there's no microSD card installed, if you've already unmounted it, or if you've mounted the microSD card on your computer.


Erase SD card – Permanently erases everything on the microSD card and prepares it for use with your tablet.

Battery

BATTERY INFORMATION – See how much battery power is used for device activities. The battery level displays in a percentage. The remaining time of use is also displayed.

Battery usage – Displays battery usage.

Battery percentage on status bar – Displays the battery percentage on the Status Bar.

Battery saver – Manage the battery for the power saving items. Tap the switch  to turn this feature on. Tap **Battery saver** for the following options.

- **TURN BATTERY SAVER ON:** Set the battery level at which you want Battery saver to turn on. Choose from Immediately, 5% battery and 15% battery.

Help – Touch to access some tips for Power saver.

Smart cleaning

You can manage the unused apps, saved files or temporary internet files.

Apps

Display the list of applications such as currently running or downloaded.

Swipe left and right to view one of the three tabs across the top of the screen to view detailed information for **DOWNLOADED, ON SD CARD, RUNNING**, and **ALL** applications.

Tap an entry to view more information, tap **Force stop** (or **Stop**), then **OK** to stop it from running.


Dual window

Split view – Allows the device to automatically open Dual window when you tap a link on the full screen or tap an e-mail attachment (images only).

Help – Displays help information about using the Dual window feature.

PERSONAL

Cloud

Tap **Add account** to add a cloud account. You access your cloud accounts from this menu. Tap the **Menu** icon  to upload files.

Users

This menu displays the current users you've created.

Add users when tablet locked – Allows you to add a new user when your tablet is locked.

Add user – Allows you to add new account for the tablet and use the Multi-user feature.

Location

Mode

- **High accuracy** – Use GPS and Wi-Fi networks to estimate location.
- **Battery saving** – Use Wi-Fi networks to estimate location.
- **Device sensors only** – Use GPS to pinpoint your location.

RECENT LOCATION REQUESTS – Displays apps that have recently requested your location information.

Camera – Allows the device to tag photos and videos with their locations.

Anti-flicker – Allows you to adjust the frequency to prevent the camera preview screen from flickering.

Google Location Reporting – Allows you to view your Google location settings.

Security

Encrypt tablet – Allows you to encrypt data on the tablet for security. You will be required to enter a PIN or password to decrypt your tablet each time you power it on.

Encrypt SD card storage – Allows you to encrypt data on the MicroSD for security.

Password typing visible – Shows the last character of the hidden password as you type.

Tablet administrators – View or deactivate tablet administrators.

Unknown sources – Allows installation of apps from non-Play Store applications.

Verify apps – Disallow or warn before installation of apps that may cause harm.

Storage type – Displays the storage type for certificates.

Trusted credentials – Displays trusted CA certificates.

Install from storage – Choose to install encrypted certificates.

Clear credentials – Remove all certificates.

Trust agents – View or deactivate Trust agents.

Screen pin – This feature allows you to lock your device so that the current user can only access the pinned app. This is useful for users with children.

App usage access – Allows to view usage info of apps.

Accounts & sync

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deactivating **Auto-sync data** can save battery power and lower (but not eliminate) data usage.

Language & input

Use the Language & input settings to select the language for the text on your tablet and to configure the on-screen keyboard, including words you've added to its dictionary.

Backup & reset

Back up my data – Set to backup your settings and application data to the Google server.

Backup account – Set the account to which you want to backup data to.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

LG Backup service – Backs up all information on the device and restores it in the event of data loss or replacement. Refer to page 98 for more information.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the tablet this way, you are prompted to re-enter the same information as when you first started Android.

SYSTEM

Shortcut Key

Allows you to turn the Shortcut keys on and off.


Date & time

Use Date & time settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

Accessibility


Use the Accessibility settings to configure accessibility plug-ins you have installed on your tablet.

NOTE: Requires additional plug-ins to become selectable.

TalkBack – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback. Tap the TalkBack switch  at the top right corner of the screen to turn it on. Tap **Settings** at the bottom of the screen to adjust the TalkBack settings.

Font size – Checkmark to increase the size of the text.

Invert colors – Checkmark to invert the colors of the screen and content.

Color adjustment – Sets to view the screen with greater color contrast. Tap the switch  to turn it on. Then tap the screen and drag across the screen in any direction until you see the color contrast you want to use.

Touch zoom – Allows you to zoom in and out by triple-tapping the screen.

Screen shade – Dims the screen's backlight.


Accessibility shortcut – Activate this feature to allow you to quickly enable accessibility features in two steps.

Text-to-speech output – Sets the text-to-speech preferred engine and speech rate setting. Also plays a short demonstration of speech synthesis. The default language status is also displayed.

Audio type – Sets the audio type. Choose **Mono** or **Stereo**.

Sound balance – Sets the audio route. Move the slider on the slide bar to set it.




Turn off all sounds – Turns off all sounds.

Captions – Allows to customize caption settings for those with hearing impairments. Tap the switch  to turn this feature on. Set the language, text size, and caption style options as desired.

Touch feedback time – Sets the touch and feedback time. Choose from **Short**, **Medium**, and **Long**.

Touch assistant – Show a touch board with easy access to common actions.

Screen timeout – Sets the amount of time before the screen turns off.

Touch control areas – Tap the switch  to turn this feature on. Allows you to limit the touch control to selected areas of the screen. Press the **Volume Down Key**  and **Home Key**  at the same time to activate and deactivate the feature.

Auto-rotate screen – Checkmark to allow the device to rotate the screen depending on the device orientation (portrait or landscape).

Password voice confirmation – Checkmark to have verbal confirmation when inputting passwords.

Accessibility settings shortcut – Sets quick and easy access to selected features when you triple-tap the Home Key.

One-touch input – Each finger touch enters a letter/character on the LG keyboard.

Switch Access – Allows you to interact with your device using one or more switches that work like keyboard keys. This menu can be helpful for users with mobility limitations that prevent them from interacting directly with the your device.

Quick Cover

Activate this menu to turn the screen on or off automatically when using the Quick Cover.

Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

About tablet

This menu allows you to manage your software updates and view various information relating to your tablet.

Tablet name – Allows you to set your tablet name.

Update Center – Allows you to check for app and software updates.

Battery – Allows you to view battery status, battery level, and battery use information.

Hardware info – Allows you to view the model number, IP address, up time, CSN, Wi-Fi MAC address and Bluetooth address.

Software info – Allows you to view Android version, kernel version, build number, and software version.

Legal info – Allows you to view legal documents for LG software, open source licenses and Google legal information.

About backing up and restoring device data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover device data if your device is lost, stolen, or corrupted by an unforeseen issue.



This LG Backup application is supported between LG smartphones and tablets, other software or operating system versions. As a result, when you buy the new LG smartphones and tablets, you can backup the current device data to your new device.

If you have the LG Backup application preloaded on your smartphones and tablets, you can backup and restore most of your data, including downloaded and pre-installed applications, bookmarks, calendar entries, contacts, home screen settings, and system settings. You may also:

- Perform a manual backup of your device.
- Restore your device data.



Warning! To protect against an unexpected power off during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

Backup your tablet data

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Backup & reset** > **LG Backup Service** > **Backup**.
- 2 On the Backup Location screen, touch **Internal storage** or **SD card**, then tap **Next**.
- 3 Select the check box for the items you want to backup and select **Next**.
- 4 Read the information presented on the screen, then tap **Start**.
- 5 When all selected files have been backed up, you will see the message **Back up completed**.

Restoring tablet data

NOTE: All files that are stored on your tablet are deleted before the backup file is restored. Make sure to copy the backup file to another location.


- 1 From the Home screen, tap **Apps**  > **Settings**  > **Backup & reset** > **LG Backup Service** > **File restore & management**.
- 2 On the Restore screen, select a backup file that contains the data you wish to restore.
- 3 Select the check box next to the item you wish to restore and select **Next** to restore it to your tablet.

NOTE: Please note that your tablet data will be overwritten with the content of your backup.

- 4 If the backup file is encrypted, type the password that you created to encrypt it.

- 5 When all selected files have been restored, the tablet will automatically be restart.

NOTE: You can set the **Lock backup files** option when creating a backup to encrypt your backup files for extra protection.

On the LG Backup main screen, touch the **Menu** icon  > **Set password** and enter a password and hint in case you forgot your password. Once you have set up a password, you need to enter it every time you want to do backup/restore.

Tablet software update

Tablet software update



This feature allows you to update the firmware of your tablet to the latest version conveniently from the internet without the need to visit a service center. For more information on how to use this function, please visit: <http://www.lg.com>

As the tablet firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable or battery during the upgrade may seriously damage your tablet.

LG tablet software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your tablet to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device. First, you can check the software version on your tablet:

From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Software info**.

To perform the tablet software update, from the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Update Center** > **Software Update** > **Check now for update**.


NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all tablet models.

NOTE: Your personal data—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence —might be lost in the process of updating your device's software. Therefore, LG recommends that you back up your personal data before updating your tablet's software. LG does not take responsibility for any loss of personal data.


Accessories

These accessories are available for use with the your tablet. **(Items described below may be optional.)**

Travel adaptor



USB cable



Quick Start Guide



NOTE:

- Always use genuine LG accessories. Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter when using your tablet. Some problems require you to call your service provider, but most are easy to fix yourself.

| Message | Possible causes | Possible corrective measures |
|-------------------------------------|---|---|
| No applications can be set | Not supported by service provider or registration required. | Contact your service provider. |
| Charging error | Battery is not charged. | Charge battery. |
| | Outside temperature is too hot or cold. | Make sure tablet is charging at a normal temperature. |
| | Contact problem | Check the charger and its connection to the tablet. |
| | No voltage | Plug the charger into a different socket. |
| | Charger defective | Replace the charger. |
| | Wrong charger | Use only original LG accessories. |
| Impossible to receive / send photos | Memory full | Delete some images from your tablet. |
| Files do not open | Unsupported file format | Check the supported file formats. |
| No sound | Vibration mode | Check the settings status in the sound menu to make sure you are not in vibration or silent mode. |



CE0168!