



LG

Life's Good

TIẾNG VIỆT
ENGLISH

Hướng dẫn sử dụng

User Guide

LG-P880

MFL67864826 (1.0)

www.lg.com



TIẾNG VIỆT

LG-P880 Hướng dẫn sử dụng

Tài liệu hướng dẫn này giúp bạn bắt đầu sử dụng điện thoại.

- Một số nội dung trong sách hướng dẫn này có thể không áp dụng cho điện thoại của bạn, tùy theo phần mềm hoặc nhà cung cấp dịch vụ của bạn.
- Điện thoại di động này không phù hợp với những người khiếm thị do bàn phím cảm ứng.
- Bản quyền ©2013 LG Electronics, Inc. Giữ toàn quyền. LG và logo LG là thương hiệu đã đăng ký của Tập đoàn LG và các tổ chức có liên quan của tập đoàn. Tất cả thương hiệu khác là tài sản của các chủ sở hữu tương ứng.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ và Play Store™ là các thương hiệu của Google, Inc.



Nội dung

Hướng dẫn sử dụng an toàn và hiệu quả	4	Cuộc gọi.....	33
Làm quen với điện thoại của bạn	9	Thực hiện cuộc gọi.....	33
Các bộ phận của thiết bị.....	15	Gọi từ danh bạ.....	33
Chức năng QuickMemo	17	Trả lời và từ chối cuộc gọi.....	33
Lắp thẻ SIM và pin.....	19	Điều chỉnh âm lượng cuộc gọi	33
Sạc điện thoại	20	Thực hiện cuộc gọi thứ hai	33
Sử dụng thẻ nhớ.....	20	Xem nhật ký cuộc gọi	34
Khóa và mở khóa màn hình.....	21	Cài đặt cuộc gọi	34
Bảo vệ màn hình khóa của bạn.....	22	Liên hệ	35
Màn hình chủ.....	23	Tìm kiếm liên hệ.....	35
Mẹo cho màn hình cảm ứng	23	Thêm liên hệ mới.....	35
Màn hình chủ.....	23	Liên hệ ưa thích.....	35
Tùy chỉnh màn hình chủ	23	Di chuyển danh bạ từ thiết bị cũ sang thiết bị mới	35
Quay lại các ứng dụng sử dụng gần đây ..	24	Tin nhắn.....	37
Ngăn thông báo.....	24	Gửi tin nhắn	37
Xem thanh trạng thái.....	24	Hộp chuỗi	37
Bàn phím ảo	26	Thay đổi cài đặt tin nhắn	37
Nhập chữ có dấu	26	Email	38
Thiết lập tài khoản Google	27	Quản lý tài khoản email	38
Kết nối với Mạng và Thiết bị	28	Làm việc với thư mục tài khoản.....	38
Wi-Fi.....	28	Soạn và gửi email	38
Kết nối với mạng Wi-Fi.....	28	Máy Ảnh	39
Bluetooth.....	28	Làm quen với kính ngắm.....	39
Chia sẻ kết nối dữ liệu của điện thoại	29	Sử dụng các cài đặt nâng cao	40
Để đổi tên hoặc đảm bảo an toàn cho điểm phát sóng di động	30	Chụp nhanh ảnh	41
Sử dụng SmartShare	31	Khi bạn đã chụp ảnh	41
		Xem ảnh đã lưu	42

Máy quay video	43	Sao lưu dữ liệu điện thoại thông minh....	52
Làm quen với kính ngắm.....	43	Lên lịch sao lưu tự động.....	52
Sử dụng các cài đặt nâng cao	44	Khôi phục dữ liệu điện thoại thông minh.....	52
Quay video nhanh.....	44	Google+	53
Sau khi quay video.....	44	T.kiểm bằng giọng nói.....	53
Xem các video đã lưu.....	45	Tải xuống.....	53
Điều chỉnh âm lượng trong khi xem video	45	Trình duyệt	54
Đa phương tiện	46	Internet	54
Trình phát video.....	46	Sử dụng thanh công cụ web.....	54
Phát video	46	Sử dụng tùy chọn.....	54
Thư viện	46	Chrome	54
Nhạc.....	46	Cài đặt	56
Truyền nhạc bằng Đồng bộ đa phương tiện (MTP).....	47	Không dây & Mạng	56
Phát bài hát.....	47	Thiết bị	57
Đài FM.....	48	Cá nhân.....	59
Dò kênh.....	48	Hệ thống.....	60
LG SmartWorld	49	Cập nhật phần mềm điện thoại	61
Cách tải LG SmartWorld từ điện thoại	49	DivX HD.....	62
Cách sử dụng LG SmartWorld.....	49	LG On-Screen Phone	63
Tiện ích	50	Biểu tượng On-Screen Phone	63
Đặt báo thức.....	50	Tính năng On-Screen Phone	63
Sử dụng máy tính.....	50	Cách cài đặt On-Screen Phone trên máy tính	63
Thêm một sự kiện vào lịch	50	Phụ kiện	64
Ghi âm	50	Sửa lỗi	65
Trình quản lý Tác vụ.....	51		
Polaris Office 4.....	51		
Sao lưu.....	51		

Hướng dẫn sử dụng an toàn và hiệu quả

Vui lòng đọc các hướng dẫn đơn giản này. Không tuân theo các hướng dẫn này có thể gặp nguy hiểm hoặc vi phạm pháp luật.

Tiếp xúc với năng lượng của sóng vô tuyến

Thông tin về tiếp xúc với sóng vô tuyến và Mức Hấp thụ Riêng (SAR).

Kiểu điện thoại di động LG-P880 này đã được thiết kế tuân theo yêu cầu hiện hành về an toàn khi tiếp xúc với sóng vô tuyến. Yêu cầu này được dựa trên các nguyên tắc khoa học bao gồm các giới hạn an toàn được đề ra để đảm bảo an toàn cho tất cả mọi người, bất kể tuổi tác và sức khỏe.

- Các nguyên tắc về tiếp xúc với sóng vô tuyến sử dụng một đơn vị đo được biết đến như là Mức Hấp thụ Riêng, hay SAR. Các thử nghiệm về SAR được thực hiện sử dụng phương pháp được tiêu chuẩn hoá với điện thoại truyền tin hiệu ở mức năng lượng được xác nhận cao nhất trong tất cả các dải tần được sử dụng.
- Có thể có sự khác biệt giữa các mức SAR của các kiểu điện thoại LG khác nhau, nhưng tất cả chúng đều được thiết kế để thoả mãn các nguyên tắc thích hợp đối với tiếp xúc với sóng vô tuyến.

- Giới hạn SAR được khuyến nghị bởi Ủy ban Quốc tế về Bảo vệ Phóng xạ Không Ion hóa (ICNIRP) là 2 W/kg tính trung bình trên 10g mô.
- Giá trị SAR cao nhất của kiểu điện thoại này được thử nghiệm để sử dụng nghe trực tiếp bằng tai là 0,618 W/kg (10g) và khi đeo trên người là 0,594 W/Kg (10g).
- Thiết bị này đáp ứng các tiêu chuẩn tiếp xúc RF khi cầm ở vị trí thông thường gần tai hoặc cách xa cơ thể ít nhất 1,5 cm. Khi sử dụng túi đeo, đai đeo hoặc ngăn chứa để mang điện thoại bên mình, bạn cần đảm bảo các thiết bị này không chứa kim loại và cách xa cơ thể ít nhất 1,5 cm. Để truyền các tệp dữ liệu hoặc tin nhắn, thiết bị này cần được kết nối với mạng một cách ổn định. Trong một số trường hợp, việc truyền các tin nhắn hoặc tệp dữ liệu có thể bị chậm trễ cho đến khi có được kết nối tốt. Đảm bảo các hướng dẫn riêng về khoảng cách nêu trên được tuân thủ cho đến khi việc truyền dữ liệu hoàn tất.

Bảo dưỡng và chăm sóc sản phẩm

CẢNH BÁO

Chỉ sử dụng pin, bộ sạc và những phụ kiện được chấp thuận cho sử dụng cùng với kiểu điện thoại cụ thể này. Việc sử dụng bất cứ loại nào khác có thể làm mất hiệu lực bất cứ sự chấp thuận hoặc bảo hành nào áp dụng cho điện thoại này và có thể gây nguy hiểm.

- Không được tháo rời các bộ phận của điện thoại. Mang đến một chuyên gia kỹ thuật dịch vụ đủ khả năng khi cần sửa chữa.
- Sửa chữa theo bảo hành, theo lựa chọn của LG, có thể bao gồm các bộ phận hoặc bảng mạch thay thế hoặc là mới hoặc được sửa lại, miễn là chúng có chức năng tương đương với bộ phận được thay thế.
- Để cách xa các thiết bị điện tử như là tivi, radio và máy tính cá nhân.
- Nên để điện thoại tránh xa những chỗ nóng như là lò sưởi hoặc bếp.
- Không đánh rơi.
- Không để thiết bị này chịu rung hoặc va đập cơ học.
- Hãy tắt điện thoại ở bất kỳ nơi nào được yêu cầu bởi các quy định đặc biệt. Ví dụ: không sử dụng điện thoại trong bệnh viện, nếu không nó có thể ảnh hưởng đến thiết bị y tế nhạy cảm.
- Không sử dụng điện thoại khi tay còn ướt và điện thoại đang được sạc pin. Nó có thể gây ra điện giật hoặc làm hỏng nặng điện thoại của bạn.
- Không sạc điện thoại gần vật liệu dễ cháy vì điện thoại có thể trở nên nóng và gây ra hỏa hoạn.
- Sử dụng vải khô để lau chùi bên ngoài của thiết bị (không sử dụng dung môi như là benzen, chất pha loãng hoặc rượu).
- Không sạc điện thoại khi đặt trên các vật dụng mềm.
- Nên sạc điện thoại ở những nơi thông gió.
- Không để thiết bị này chịu khói hoặc bụi quá mức.
- Không để điện thoại cạnh thẻ tín dụng hoặc vé tàu, xe; nó có thể ảnh hưởng tới thông tin trên các dải từ.
- Không nhấn lên màn hình bằng các vật cứng vì nó có thể làm hư hại điện thoại.
- Không để điện thoại tiếp xúc với chất lỏng hoặc hơi ẩm.
- Sử dụng các phụ kiện như tai nghe một cách cẩn thận. Không chạm vào anten một cách không cần thiết.
- Không sử dụng, chạm hoặc cố gắng tháo máy hoặc sửa chữa màn hình thủy tinh bị vỡ, mẻ hoặc nứt. Hư hỏng màn hình thủy tinh do lạm dụng hoặc

Hướng dẫn sử dụng an toàn và hiệu quả

sử dụng không đúng không được bảo hành theo chương trình bảo hành.

- Điện thoại của bạn là thiết bị điện tử có thể tạo nhiệt trong quá trình hoạt động bình thường. Tiếp xúc lâu và trực tiếp với da khi không có thông gió hợp lý có thể gây khó chịu hoặc cháy nhỏ. Vì vậy, hãy sử dụng cẩn thận khi cầm điện thoại hoặc ngay sau khi sử dụng.

Sử dụng điện thoại hiệu quả

Các thiết bị điện tử

Tất cả điện thoại di động có thể bị nhiễu làm ảnh tới hoạt động của điện thoại.

- Không sử dụng điện thoại di động của bạn gần thiết bị y tế nếu không được phép. Tránh đặt điện thoại gần máy điều hoà nhịp tim, như trong túi ngực của bạn.
- Một số thiết bị trợ thính có thể bị gây nhiễu bởi điện thoại di động.
- Nhiều nhỏ hơn có thể ảnh hưởng tới tivi, đài, máy tính, v.v.

An toàn Giao thông

Kiểm tra luật và qui định về sử dụng điện thoại di động ở những vùng mà bạn lái xe.

- Không sử dụng điện thoại cầm tay khi lái xe.
- Tập trung hoàn toàn vào việc lái xe.

- Rời khỏi đường và đỗ xe lại trước khi thực hiện hoặc trả lời một cuộc gọi nếu điều kiện lái xe yêu cầu như vậy.
- Năng lượng RF có thể ảnh hưởng tới một số hệ thống điện trên xe của bạn như là dàn âm thanh và thiết bị an toàn.
- Khi xe bạn được trang bị túi khí, không làm cản trở bằng các vật lắp đặt cố định hoặc thiết bị không dây cầm tay hoặc được. Nó có thể làm túi khí không hoạt động hoặc gây ra chấn thương nguy hiểm trọng do hoạt động không đúng.
- Nếu bạn nghe nhạc trong khi ở ngoài, xin nhớ đặt âm lượng ở mức vừa phải để có thể nhận biết được những tiếng động xung quanh. Điều này đặc biệt quan trọng khi gần đường.

Tránh làm hư tai bạn



Để tránh khả năng làm hư thính giác, đừng nghe ở mức âm lượng cao trong khoảng thời gian dài

Khả năng nghe của bạn có thể bị ảnh hưởng nếu nghe quá to trong thời gian dài. Do vậy, chúng tôi khuyên bạn không bật hoặc tắt điện thoại cầm tay khi gần tai nghe. Chúng tôi cũng khuyên bạn nên đặt âm lượng nhạc và cuộc gọi ở mức vừa phải.

- Khi sử dụng tai nghe, giảm âm lượng nếu bạn không nghe thấy người khác nói gần bạn, hoặc nếu người ngồi cạnh bạn có thể nghe thấy những gì bạn đang nghe.

LƯU Ý: Áp suất âm thanh quá mạnh từ tai nghe trong điện thoại và tai nghe thường có thể làm hư thính giác

Bộ phận làm bằng thủy tinh

Một số bộ phận của điện thoại di động được làm bằng thủy tinh. Loại thủy tinh này có thể vỡ nếu điện thoại bị rơi trên bề mặt cứng hoặc khi va chạm mạnh. Nếu thủy tinh vỡ, không được chạm hoặc tháo máy. Dừng sử dụng điện thoại di động cho đến khi nhà cung cấp dịch vụ được ủy quyền thay thế thủy tinh đó.

Khu vực phá nổ

Không sử dụng điện thoại nơi có bắn phá bằng thuốc nổ. Tôn trọng các giới hạn và tuân theo các qui định hoặc nguyên tắc.

Môi trường có khả năng dễ nổ

- Không sử dụng điện thoại ở điểm tiếp nhiên liệu.
- Không sử dụng gần nơi chứa nhiên liệu hoặc hóa chất.
- Không vận chuyển hoặc chứa khí, chất lỏng dễ cháy, hoặc chất nổ trong khoang xe có điện thoại hoặc các thiết

bị phụ trợ của bạn.

Trên máy bay

Các thiết bị không dây có thể gây nhiễu trong máy bay.

- Tắt điện thoại di động của bạn trước khi lên máy bay.
- Không sử dụng điện thoại trên đất nếu không được phép.

Trẻ em

Để điện thoại ở một nơi an toàn ngoài tầm với của trẻ em. Điện thoại bao gồm các phần nhỏ nếu bị rời ra có thể gây nguy cơ ngạt thở.

Cuộc gọi khẩn cấp

Cuộc gọi khẩn cấp có thể không thực hiện được trong tất cả các mạng di động. Do vậy, bạn đừng bao giờ chỉ dựa vào điện thoại di động của bạn để thực hiện các cuộc gọi khẩn cấp. Kiểm tra với nhà cung cấp dịch vụ địa phương của bạn.

Thông tin và chăm sóc pin

- Bạn không cần xả hết pin hoàn toàn trước khi sạc. Không giống các hệ thống pin khác, không có tác động bộ nhớ có thể làm tổn hại tới hoạt động của pin.
- Chỉ sử dụng pin và bộ sạc của LG. Bộ sạc của LG được thiết kế để có tuổi thọ tối đa cho pin.

Hướng dẫn sử dụng an toàn và hiệu quả

- Không tháo rời hoặc đoản mạch pin.
- Giữ sạch các điểm tiếp xúc kim loại của pin.
- Thay pin khi nó không còn hoạt động ở mức có thể chấp nhận được. Bộ pin có thể được sạc hàng trăm lần trước khi cần thay thế.
- Sạc pin nếu nó đã được sử dụng trong một thời gian dài để làm tăng tối đa khả năng sử dụng.
- Không để bộ sạc pin tiếp xúc trực tiếp với ánh sáng mặt trời hoặc sử dụng nó ở nơi có độ ẩm cao như là buồng tắm.
- Không để pin ở nơi nóng hoặc lạnh, vì những điều kiện này có thể làm giảm hiệu quả hoạt động của pin.
- Có thể xảy ra hiện tượng nổ nếu lắp không đúng loại pin.
- Vứt bỏ pin đã sử dụng theo hướng dẫn của nhà sản xuất. Vui lòng tái chế khi có thể. Không vứt bỏ như rác sinh hoạt thông thường.
- Nếu bạn cần thay pin, hãy mang điện thoại đến trung tâm dịch vụ hoặc đại lý được ủy quyền của LG Electronics để được hỗ trợ.
- Luôn rút bộ sạc ra khỏi ổ điện sau khi pin đã sạc đầy để tiết kiệm lượng điện tiêu thụ không cần thiết của bộ sạc.
- Tuổi thọ thực của pin phụ thuộc vào chế độ mạng, cài đặt sản phẩm, kiểu sử

- dụng, pin và điều kiện của môi trường.
- Không để những vật sắc cạnh như răng hoặc móng động vật tiếp xúc với pin. Làm như vậy có thể gây hỏa hoạn.

TUYÊN BỐ HỢP CHUẨN

Thông qua tài liệu này, LG Electronics tuyên bố LG-P880 tuân thủ các yêu cầu thiết yếu và các quy định có liên quan khác của Chỉ thị 1999/5/EC. Bạn có thể tìm thấy bản sao của Tuyên bố Hợp chuẩn này tại <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

Nhiệt độ môi trường

Tối đa: +50°C (xà), +45°C (sạc)

Tối thiểu: -10°C

Lưu ý: Phần mềm nguồn mở

Để nhận mã nguồn tương ứng theo giấy phép nguồn mở GPL, LGPL, MPL và các giấy phép khác, vui lòng truy cập <http://opensource.lge.com/>

Tất cả điều khoản giấy phép, tuyên bố từ chối trách nhiệm và thông báo liên quan đều có sẵn để tải xuống kèm mã nguồn.

Liên hệ với văn phòng để biết sự tuân thủ của sản phẩm này:

LG Electronics Inc.

EU Representative, Krijgsman 1,

1186 DM Amstelveen, The Netherlands

Làm quen với điện thoại của bạn


Trước khi bắt đầu sử dụng điện thoại, hãy đọc hướng dẫn này!

Hãy kiểm tra xem các vấn đề bạn gặp phải với điện thoại có được mô tả trong phần này không trước khi mang điện thoại đi bảo hành hoặc gọi điện cho đại diện bán hàng.

1. Bộ nhớ điện thoại

Khi còn dưới 10% dung lượng bộ nhớ, điện thoại không thể nhận tin nhắn mới. Bạn cần kiểm tra bộ nhớ điện thoại và xóa một số dữ liệu, như ứng dụng hoặc tin nhắn, để giải phóng bộ nhớ.

Để gỡ cài đặt ứng dụng:

- 1 Nhấn  > tab **Ứng dụng** > **Cài đặt** > **Ứng dụng** từ mục THIẾT BỊ.
- 2 Khi tất cả ứng dụng xuất hiện, cuộn tới và chọn ứng dụng bạn muốn gỡ cài đặt.
- 3 Nhấn **Gỡ cài đặt**.

2. Tối ưu hóa tuổi thọ pin

Kéo dài thời lượng pin giữa các lần sạc bằng cách tắt các tính năng bạn không cần chạy liên tục dưới nền. Bạn có thể theo dõi cách thức ứng dụng và tài nguyên hệ thống tiêu thụ pin.


Kéo dài thời lượng pin điện thoại của bạn:

- Tắt các giao tiếp vô tuyến nếu bạn không sử dụng. Nếu bạn không sử

dụng Wi-Fi, Bluetooth hoặc GPS, hãy tắt chúng.


- Giảm độ sáng màn hình và đặt thời gian khóa màn hình ngắn hơn.
- Tắt tự động đồng bộ hóa cho Gmail, Lịch, Danh bạ và các ứng dụng khác.
- Một số ứng dụng bạn đã tải xuống có thể làm giảm mức pin.

Để kiểm tra mức pin:

- Chạm  > tab **Ứng dụng** > **Cài đặt** > **Giới thiệu về điện thoại** từ **HỆ THỐNG** > **Pin**.

Tình trạng của pin (đang sạc hoặc không sạc) và mức pin (phần trăm đã sạc) được hiển thị ở trên cùng của màn hình.

Để theo dõi và kiểm soát mức pin được sử dụng:

- Chạm  > tab **Ứng dụng** > **Cài đặt** > **Giới thiệu về điện thoại** từ **HỆ THỐNG** > **Pin** > **Sử dụng pin**.

Thời gian sử dụng pin được hiển thị ở trên cùng của màn hình. Đây là thời gian kể từ lần cuối bạn kết nối điện thoại với nguồn điện, hoặc nếu đang được nối với nguồn, đó là thời gian điện thoại được chạy lần cuối trên nguồn pin. Màn hình hiển thị các ứng dụng hoặc dịch vụ sử dụng nguồn điện từ pin từ mức cao nhất đến thấp nhất.

Làm quen với điện thoại của bạn

3. Sử dụng thư mục

Bạn có thể kết hợp nhiều biểu tượng ứng dụng trong một thư mục. Thả một biểu tượng ứng dụng lên trên biểu tượng khác trên màn hình chủ và hai biểu tượng sẽ được kết hợp.

4. Trước khi cài đặt ứng dụng nguồn mở và hệ điều hành

CẢNH BÁO

Nếu bạn cài đặt và sử dụng hệ điều hành không phải do nhà sản xuất cung cấp, điện thoại của bạn có thể sẽ bị trục trặc. Ngoài ra, điện thoại của bạn sẽ không được bảo hành nữa.

CẢNH BÁO

Để bảo vệ điện thoại và dữ liệu cá nhân của bạn, chỉ tải xuống các ứng dụng từ nguồn tin cậy như Play Store™. Nếu có các ứng dụng được cài đặt không đúng cách trên điện thoại của bạn, điện thoại có thể không hoạt động bình thường hoặc có thể xảy ra lỗi nghiêm trọng. Bạn phải gỡ cài đặt các ứng dụng đó cùng tất cả dữ liệu và cài đặt liên quan khỏi điện thoại.

5. Sử dụng hình mở khóa

Đặt hình mở khóa để đảm bảo an toàn cho điện thoại của bạn. Thao tác này mở ra một màn hình để hướng dẫn bạn vẽ hình mở khóa. Bạn đã tạo một PIN Dự phòng để đảm bảo an toàn trong trường hợp bạn quên hình khóa máy.

Cảnh báo: Tạo một tài khoản Google trước khi đặt hình mở khóa và ghi nhớ PIN Dự phòng bạn đã tạo khi tạo Hình khóa máy.

CẢNH BÁO

Cẩn trọng khi sử dụng khóa máy bằng hình.

Bạn cần nhớ hình mở khóa bạn đã đặt. Bạn không thể truy cập điện thoại nếu bạn sử dụng hình mở khóa sai 5 lần. Bạn có 5 cơ hội để nhập Hình mở khóa, PIN hoặc mật khẩu. Nếu bạn đã sử dụng hết 5 cơ hội, bạn có thể thử lại sau 30 giây.

Khi bạn không thể nhớ Hình mở khóa, PIN hoặc Mật khẩu:

<Nếu bạn đã quên hình>

Nếu bạn đã đăng nhập tài khoản Google của mình trên điện thoại nhưng nhập sai hình 5 lần, nhấn vào nút Quên hình nằm ở cuối màn hình. Sau đó, bạn sẽ được yêu cầu đăng nhập bằng Tài khoản Google của mình hoặc bạn phải nhập PIN Dự phòng mà bạn đã nhập khi tạo Hình khóa máy.

Nếu bạn chưa tạo tài khoản Google trên điện thoại hoặc bạn quên PIN Dự phòng, bạn cần thực hiện xác lập cứng.

<Nếu bạn quên PIN hoặc Mật khẩu>

Nếu bạn quên PIN hoặc Mật khẩu, bạn cần thực hiện xác lập cứng.

Caution: Nếu bạn thực hiện xác lập cứng, tất cả ứng dụng và dữ liệu người dùng sẽ bị xóa.

Lưu ý: Nếu bạn chưa đăng nhập Tài khoản Google và bạn quên Hình mở khóa, bạn cần nhập PIN Dự phòng.

6. Sử dụng xác lập cứng (Xác lập cài đặt gốc)

Nếu điện thoại của bạn không khôi phục về điều kiện ban đầu, sử dụng Xác lập Cứng (Xác lập Cài đặt gốc) để khởi động điện thoại.

- 1 Tắt nguồn.
- 2 Nhấn và giữ **phím Nguồn/Khóa + phím Giảm Âm lượng**.
- 3 Khi Biểu trưng LG xuất hiện trên màn hình, nhả tất cả các Phím.
- 4 Sau vài giây, bạn có thể chọn chức năng xác lập cài đặt gốc trong tiện ích khôi phục hệ thống Android.
- 5 Cuộn qua danh sách bằng các phím Âm lượng và chọn bằng **phím Nguồn/Khóa**.

CẢNH BÁO

Nếu bạn thực hiện Xác lập cứng, tất cả ứng dụng người dùng, dữ liệu người dùng và giấy phép DRM sẽ bị xóa. Hãy nhớ sao lưu mọi dữ liệu quan trọng trước khi thực hiện Xác lập cứng.


7. Mở và chuyển đổi ứng dụng

Thực hiện đa nhiệm với Android thật dễ dàng vì bạn có thể chạy đồng thời nhiều ứng dụng cùng lúc. Không cần thoát ứng dụng trước khi mở ứng dụng khác. Sử dụng và chuyển đổi giữa các ứng dụng đang mở. Android quản lý từng ứng dụng, dừng và khởi động chúng khi cần để đảm bảo các ứng dụng không hoạt động không sử dụng tài nguyên khi không cần thiết.

Để quay lại xem danh sách các ứng dụng sử dụng gần đây:

Chỉ cần nhấn và giữ phím **Màn hình chủ**.

Để dừng ứng dụng:

- 1 Nhấn  > tab **Ứng dụng** > **Cài đặt > Ứng dụng** > **Đang chạy** từ **THIẾT BỊ**
- 2 Cuộn và nhấn vào ứng dụng mong muốn và nhấn **Dừng** để dừng ứng dụng.

Làm quen với điện thoại của bạn

8. Cài đặt phần mềm PC (LG PC Suite)

Ứng dụng PC "LG PC Suite" là một chương trình giúp bạn kết nối thiết bị với PC thông qua cáp truyền dữ liệu USB và Wi-Fi. Khi đã được kết nối, bạn có thể sử dụng các chức năng của thiết bị trên máy tính.

Với ứng dụng PC "LG PC Suite", bạn có thể...

- Quản lý và phát các nội dung đa phương tiện (nhạc, phim, ảnh) trên máy tính.
- Gửi nội dung đa phương tiện tới thiết bị của bạn.
- Đồng bộ hóa dữ liệu (lich biểu, danh bạ, chỉ mục) trong thiết bị và máy tính.
- Sao lưu các ứng dụng trong thiết bị của bạn.
- Cập nhật phần mềm trong thiết bị của bạn.
- Sao lưu và khôi phục thiết bị.
- Phát nội dung đa phương tiện của máy tính từ thiết bị khác.

LƯU Ý: Bạn có thể sử dụng menu Trợ giúp từ ứng dụng để tìm hiểu cách sử dụng ứng dụng PC "LG PC Suite".

Cài đặt ứng dụng PC "LG PC Suite"

Bạn có thể tải xuống ứng dụng PC "LG PC Suite" từ trang web của LG.

- 1 Truy cập www.lg.com và chọn quốc gia của bạn.
- 2 Đi tới **Hỗ trợ** > **Hỗ trợ Điện thoại Di động** > Chọn Kiểu điện thoại (LG-P880).
- 3 Bấm **PC Sync** từ **Tải xuống** và bấm **Tải xuống PC Sync cho WINDOW** để tải xuống phần mềm PC "LG PC Suite".

Yêu cầu hệ thống cho phần mềm PC "LG PC Suite"

- Hệ điều hành: Windows XP 32 bit (Gói dịch vụ 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: Bộ xử lý 1 GHz hoặc cao hơn
- Bộ nhớ: RAM 512 MB hoặc cao hơn
- Cạc đồ họa: Độ phân giải 1024 x 768, 32 bit màu hoặc cao hơn
- HDD: Dung lượng ổ cứng trống 100 MB hoặc cao hơn (Có thể cần nhiều dung lượng trống hơn tùy thuộc vào lượng dữ liệu được lưu trữ).
- Phần mềm yêu cầu: Các trình điều khiển tích hợp của LG, Windows Media Player 10 hoặc cao hơn

LƯU Ý: Trình điều khiển USB Tích hợp của LG

Yêu cầu trình điều khiển USB tích hợp của LG để kết nối thiết bị LG và máy tính. Trình điều khiển này được cài tự động khi bạn cài đặt phần mềm PC "LG PC Suite".

9. Đồng bộ hóa điện thoại với máy tính

Để tiện lợi cho bạn, dữ liệu từ thiết bị và máy tính có thể được đồng bộ hóa dễ dàng với ứng dụng PC "LG PC Suite". Có thể đồng bộ hóa danh bạ, lịch biểu và chỉ mục.


Quy trình như sau:

- 1 Kết nối thiết bị của bạn với máy tính. (Sử dụng cáp USB hoặc kết nối Wi-Fi).
- 2 Sau khi kết nối, chạy chương trình và chọn mục thiết bị từ danh mục nằm ở bên trái của màn hình.
- 3 Bấm [Thông tin cá nhân] để chọn.
- 4 Chọn hộp kiểm của nội dung muốn đồng bộ hóa và bấm nút **Đồng bộ**.

10. Đồng bộ hóa điện thoại với máy tính qua USB


LƯU Ý: Để đồng bộ hóa điện thoại với máy tính bằng cáp USB, bạn cần cài đặt LG PC Suite trên máy tính.
Vui lòng tham khảo các trang trước để cài đặt LG PC Suite.

- 1 Nhấn  > tab **Ứng dụng** > **Cài đặt** > **Bộ nhớ** từ THIẾT BỊ để kiểm tra phương tiện lưu trữ. (Nếu bạn muốn truyền tệp từ hoặc tới thẻ nhớ, hãy lắp thẻ nhớ vào điện thoại).
- 2 Kết nối điện thoại với PC bằng cáp USB.
- 3 Danh sách chế độ kết nối USB sẽ xuất hiện và chọn tùy chọn **Đồng bộ đa phương tiện (MTP)**.
- 4 Mở thư mục bộ nhớ có thể tháo rời trên PC. Bạn có thể xem nội dung trên bộ lưu trữ thứ cấp trên PC và chuyển tệp.
- 5 Sao chép các tệp từ PC sang thư mục ổ lưu trữ.
- 6 Chọn tùy chọn **Chỉ sạc** để ngắt kết nối điện thoại.

MEO! Để sử dụng lại thẻ microSD trên điện thoại, bạn cần mở ngăn thông báo và nhấn  > **Chỉ sạc Pin**.

Làm quen với điện thoại của bạn

Để ngắt điện thoại khỏi máy tính:

Mở ngăn thông báo và nhấn  > **Chỉ sạc**

Pin để ngắt kết nối điện thoại khỏi máy tính một cách an toàn.

11. Giữ thẳng điện thoại

Giữ thẳng điện thoại di động như với điện thoại thông thường. LG-P880 có anten trong. Cần thận để không làm xước hoặc làm hư hỏng bộ phận sau vì sẽ ảnh hưởng đến hiệu suất.

Khi thực hiện/nhận cuộc gọi hoặc gửi/nhận dữ liệu, tránh cầm vào phần dưới của điện thoại vì đó là nơi đặt anten. Làm như vậy có thể ảnh hưởng đến chất lượng cuộc gọi.

12. Khi màn hình không hoạt động

Nếu màn hình không hoạt động hoặc điện thoại không phản hồi khi bạn cố gắng sử dụng:


Tháo rời lắp lại pin, sau đó bật điện thoại.

HOẶC

Nhấn và giữ phím **Nguồn/Khóa** trong 10 giây để tắt.

Nếu điện thoại vẫn không hoạt động, hãy liên hệ với trung tâm dịch vụ.

Các bộ phận của thiết bị

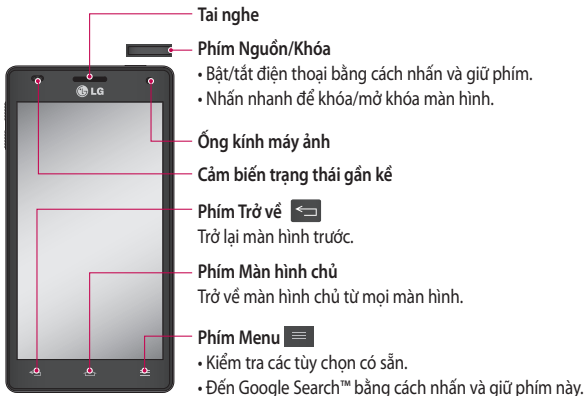

LƯU Ý: Cảm biến trạng thái gần kề

Khi nhận và thực hiện cuộc gọi, cảm biến trạng thái gần kề tự động tắt đèn nền và khóa màn hình cảm ứng bằng cách cảm biến khi điện thoại ở gần tai. Cơ chế này giúp kéo dài thời lượng pin và tránh cho màn hình cảm ứng vô tình kích hoạt khi đang gọi.

CẢNH BÁO

Đặt một vật nặng lên điện thoại hoặc ngồi lên điện thoại có thể làm hỏng màn hình LCD và các chức năng của màn hình cảm ứng. Không che cảm biến trạng thái gần kề LCD bằng phim bảo vệ. Điều này có thể làm bộ cảm biến hoạt động sai.

Làm quen với điện thoại của bạn



Phím âm lượng

- Trên màn hình chủ: Điều khiển âm lượng chuông.
- Trong khi gọi: Điều khiển âm lượng tai nghe.
- Trong khi phát bài hát: Điều khiển âm lượng liên tục.


Thủ thuật! Nhấn và giữ các phím Tăng âm lượng và Giảm âm lượng trong một giây để sử dụng chức năng Ghi nhớ nhanh.

Phím Nguồn/Khóa

Lỗ cắm tai nghe


Cổng sạc/Cổng USB/Cổng MHL

Micrô

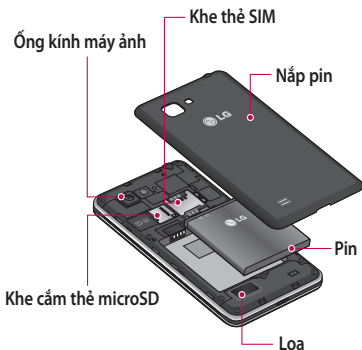


Chức năng QuickMemo

Sử dụng Chức năng QuickMemo để tạo ghi nhớ một cách thiết thực và hiệu quả trong khi gọi kèm hình ảnh đã lưu hoặc trên màn hình điện thoại hiện hành.

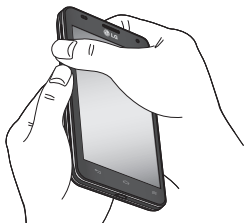


HOẶC

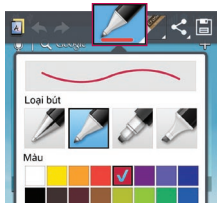


- 1 Vào màn hình Chức năng QuickMemo bằng cách nhấn cả hai phím Tăng âm lượng và Giảm âm lượng trong một giây trên màn hình bạn muốn chụp.


HOẶC

Chạm và trượt thanh trạng thái xuống dưới và chạm .

- 2 Chọn tùy chọn menu mong muốn từ Loại bút, Màu, Tẩy và tạo ghi nhớ.

Làm quen với điện thoại của bạn

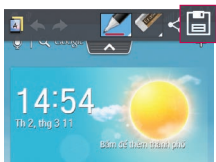







- 3 Chạm  trong menu Sửa và chọn tùy chọn này để lưu ghi nhớ kèm màn hình hiện hành.

LƯU Ý: Hãy sử dụng ngón tay trong khi sử dụng chức năng Ghi nhớ nhanh. Không sử dụng móng tay.

Sử dụng các tùy chọn Ghi nhớ

Bạn có thể sử dụng dễ dàng các tùy chọn QuickMenu khi sử dụng chức năng QuickMemo.

	Chọn sử dụng hoặc không sử dụng màn hình nền.
	Hoàn tác và Làm lại.
	Chọn loại bút và màu sắc.
	Xóa ghi nhớ mà bạn đã tạo.
	Chạm để gửi ghi nhớ của bạn cho người khác hoặc chia sẻ qua dịch vụ mạng xã hội.
	Lưu ghi nhớ kèm màn hình hiện hành vào Thư viện .

Xem Ghi nhớ nhanh đã lưu

Chạm **Thư viện** và chọn album QuickMemo.


Lắp thẻ SIM và pin

Trước khi bạn có thể bắt đầu khám phá điện thoại mới, bạn sẽ cần thiết lập điện thoại. Để lắp thẻ SIM và pin:


- 1 Để tháo nắp pin, cầm chặt điện thoại trong tay. Nâng nắp pin lên bằng ngón cái của tay còn lại như minh họa trong hình.



- 2 Trượt thẻ SIM vào khe thẻ SIM. Đảm bảo vùng tiếp xúc màu vàng trên thẻ quay xuống dưới.

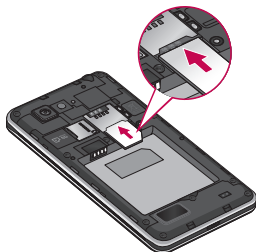

- 3 Lắp pin vào vị trí bằng cách căn cho các điểm tiếp xúc màu vàng trên điện thoại và pin (1) thẳng hàng và nhấn xuống sao cho pin khớp vào vị trí (2).

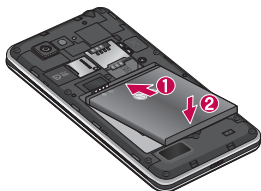

Làm quen với điện thoại của bạn

- 4 Căn nắp pin cho thẳng với ngăn chứa pin (1) và nhấn xuống sao cho nắp khớp vào vị trí (2).



Sạc điện thoại

Giắc cắm sạc nằm dưới đáy điện thoại. Lắp bộ sạc và cắm vào ổ cắm điện.



LƯU Ý

- Pin phải được sạc đầy lần đầu tiên để nâng cao tuổi thọ pin.
- Không mở nắp pin trong khi sạc điện thoại.


Sử dụng thẻ nhớ

Lắp thẻ nhớ:

Lắp thẻ nhớ vào khe cắm. Đảm bảo vùng tiếp xúc màu vàng quay xuống dưới.

Để tháo thẻ nhớ an toàn:

Nhấn  > tab **Ứng dụng** > **Cài đặt** > **Bộ nhớ từ THIẾT BỊ** > **Tháo thẻ SD** > **OK**.

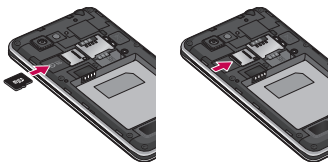

LƯU Ý: LG-P880 hỗ trợ thẻ nhớ có dung lượng lên tới 64 GB.


CẢNH BÁO

Không lắp hoặc tháo thẻ nhớ khi điện thoại bật. Làm như vậy có thể làm hỏng thẻ nhớ và điện thoại của bạn, đồng thời dữ liệu lưu trên thẻ nhớ cũng có thể bị hỏng.

Để định dạng thẻ nhớ:

Thẻ nhớ có thể đã được định dạng. Nếu thẻ nhớ chưa được định dạng, bạn phải định dạng thẻ nhớ trước khi bạn có thể sử dụng.


LƯU Ý: Tất cả tệp trên thẻ nhớ đều bị xóa khi định dạng thẻ.

- 1 Trên màn hình chủ, nhấn  > tab **Ứng dụng** để mở menu.
- 2 Cuộn và nhấn **Cài đặt** > **Bộ nhớ**.
- 3 Nhấn **Tháo thẻ SD** và nhấn **OK** để xác nhận.
- 4 Nhấn **Xóa thẻ SD** > **Xóa thẻ SD** > **Xoá tất cả**, sau đó xác nhận lựa chọn của bạn.
- 5 Nếu bạn đã đặt khóa hình, nhập khóa hình rồi chọn **Xoá tất cả**.


LƯU Ý: Nếu đã có nội dung trong thẻ nhớ, cấu trúc thư mục có thể sẽ khác sau khi định dạng vì tất cả các tệp sẽ bị xóa.

Khóa và mở khóa màn hình

Nếu bạn không sử dụng điện thoại một lúc, màn hình tự động tắt và khóa. Điều này giúp tránh vô tình nhấn phải nút và tiết kiệm pin.

Khi bạn không sử dụng LG-P880, nhấn **phím Nguồn/Khóa**  để khóa điện thoại.

Nếu có bất kỳ chương trình nào đang chạy khi bạn đặt màn hình khóa, chúng có thể vẫn chạy trong chế độ Khóa. Bạn nên thoát tất cả chương trình trước khi vào chế độ Khóa để tránh cước phí không cần thiết (ví dụ: cuộc gọi điện thoại, truy cập web và truyền dữ liệu).


Để đánh thức điện thoại, nhấn **phím Nguồn/Khóa** . Màn hình khóa xuất hiện. Nhấn và trượt màn hình khóa theo bất kỳ hướng nào để mở khóa màn hình chủ. Màn hình cuối mà bạn đã xem sẽ mở ra.

Làm quen với điện thoại của bạn

Bảo vệ màn hình khóa của bạn

Bạn có thể khóa màn hình để chỉ bạn có thể mở khóa và truy cập điện thoại.

Để đặt Hình mở khóa, PIN hoặc Mật khẩu lần đầu:

- Nhấn  > tab **Ứng dụng** > **Cài đặt** > **Khóa màn hình** > **Chọn khóa màn hình** > **Không có, Gạt, Mở khóa bằng công nghệ nhận diện Khuôn mặt, Kiểu mẫu PIN hoặc Mật khẩu**

LƯU Ý:

Cẩn trọng khi sử dụng khóa máy bằng hình.

Bạn cần nhớ hình mở khóa bạn đã đặt. Bạn không thể truy cập điện thoại nếu bạn sử dụng hình mở khóa sai 5 lần. Bạn có 5 cơ hội để nhập Hình mở khóa, PIN hoặc mật khẩu. Nếu bạn đã sử dụng hết 5 cơ hội, bạn có thể thử lại sau 30 giây.

Khi bạn không thể nhớ lại được hình mở khóa:

Nếu bạn đã đăng nhập vào tài khoản Google của mình trên điện thoại nhưng nhập sai hình 5 lần, nhấn vào nút **Quên hình**. Bạn sẽ được yêu cầu đăng nhập bằng tài khoản Google để mở khóa điện thoại.

Nếu bạn chưa tạo tài khoản Google trên điện thoại hoặc bạn quên tài khoản, bạn cần khôi phục lại cài đặt gốc.

Màn hình chủ

Mẹo cho màn hình cảm ứng

Sau đây là một số mẹo về cách điều hướng điện thoại của bạn.

Nhấn – Để chọn menu/tùy chọn hoặc mở ứng dụng, hãy nhấn nút.

Nhấn và giữ – để mở menu tùy chọn hoặc chọn đối tượng bạn muốn di chuyển, nhấn và giữ đối tượng.

Kéo – để cuộn qua danh sách hoặc di chuyển chậm, kéo qua màn hình cảm ứng.

Kéo nhanh – để cuộn qua danh sách hoặc di chuyển nhanh, kéo nhanh qua màn hình cảm ứng (kéo nhanh và nhả).

LƯU Ý:


- Để chọn một mục, hãy nhấn vào điểm giữa của biểu tượng.
- Không nhấn quá mạnh; màn hình cảm ứng đủ nhạy cảm để nhận biết được một lần nhấn nhẹ dứt khoát.
- Sử dụng đầu ngón tay để nhấn vào tùy chọn bạn muốn. Hãy cẩn thận không nhấn bất kỳ phím nào khác.


Màn hình chủ


Chỉ cần trượt ngón tay sang trái hoặc phải để xem các ngăn. Bạn có thể tùy chỉnh từng ngăn với Ứng dụng, Tài xuống, Widget và hình nền.


LƯU Ý: Một số hình ảnh màn hình có thể khác tùy theo nhà cung cấp điện thoại của bạn.

Trên màn hình chủ, bạn có thể thấy các biểu tượng menu ở cuối màn hình. Các biểu tượng menu cung cấp cho bạn khả năng truy cập một chạm dễ dàng vào các chức năng hay dùng nhất.

 Nhấn biểu tượng **Điện thoại** để mở bàn phím quay số cảm ứng để thực hiện cuộc gọi.

 Nhấn biểu tượng **Liên hệ** để mở danh bạ.

 Nhấn biểu tượng **Tin nhắn** để truy cập menu nhắn tin. Đây là nơi bạn có thể soạn tin nhắn mới.

 Nhấn biểu tượng **Ứng dụng** ở cuối màn hình. Sau đó, bạn có thể xem tất cả ứng dụng đã cài đặt. Để mở ứng dụng, chỉ cần nhấn biểu tượng trong danh sách ứng dụng.

Tùy chỉnh màn hình chủ


Bạn có thể tùy chỉnh màn hình chủ bằng cách thêm Ứng dụng, Tài xuống, Widget hoặc Hình nền. Để thuận tiện hơn khi sử dụng điện thoại, hãy thêm các ứng dụng và widget ưa thích của bạn vào màn hình chủ.

Màn hình chủ

Để thêm các mục trên màn hình chủ:

- 1 Nhấn và giữ phần còn trống trên màn hình chủ.
Hoặc nhấn **+** nằm ở trên cùng bên phải.
- 2 Trong menu Chế độ thêm menu, chọn các mục bạn muốn thêm. Bạn sẽ nhìn thấy các mục đã thêm trên màn hình chủ.
- 3 Kéo nó đến vị trí bạn muốn và nhấc ngón tay.

Để xóa một mục khỏi màn hình chủ:

- **Màn hình chủ** > nhấn và giữ biểu tượng bạn muốn xóa > kéo nó đến 

MẸO! Để thêm một biểu tượng ứng dụng vào màn hình chủ từ menu Ứng dụng, nhấn và giữ ứng dụng bạn muốn thêm.

Quay lại các ứng dụng sử dụng gần đây



- 1 Nhấn và giữ phím **Màn hình chủ**. Màn hình hiển thị một cửa sổ bật lên cùng với biểu tượng của các ứng dụng bạn sử dụng gần đây.
- 2 Nhấn vào một biểu tượng để mở ứng dụng. Hoặc, nhấn phím **Quay lại** để quay lại ứng dụng hiện tại.

Ngăn thông báo

Ngăn thông báo chạy ngang qua phần đầu của màn hình.



Bấm và trượt ngăn thông báo xuống bằng ngón tay.

Nhấn  >  để quản lý Thông báo. Tại đây, bạn có thể kiểm tra và quản lý cấu hình Âm thanh, Wi-Fi, Bluetooth, NFC, Tài khoản & đồng bộ, Chế độ trên máy bay, Tự động xoay màn hình, Dữ liệu được bật, GPS hoặc Điểm phát sóng Wi-Fi di động.











Xem thanh trạng thái

Thanh trạng thái sử dụng các biểu tượng khác nhau để hiển thị thông tin của điện thoại như cường độ tín hiệu, tin nhắn mới, tuổi thọ pin, Bluetooth đang bật và kết nối dữ liệu.







Dưới đây là bảng giải thích ý nghĩa của các biểu tượng bạn sẽ nhìn thấy trên thanh trạng thái.

Biểu tượng	Mô tả
	Không có thẻ SIM
	Không có tín hiệu
	Chế độ trên máy bay
	Kết nối vào mạng Wi-Fi
	Tai nghe có dây
	Cuộc gọi đang tiến hành
	Chờ cuộc gọi
	Loa
	Micrô điện thoại tắt tiếng
	Cuộc gọi nhớ
	Bluetooth bật
	Cảnh báo hệ thống
	Báo thức đã đặt
	Thư thoại mới

Biểu tượng	Mô tả
	Chuông báo tắt
	NFC đang bật
	Chế độ rung
	Đã sạc đầy
	Đang sạc
	Điện thoại được kết nối với máy tính qua cáp USB
	Đang tải dữ liệu xuống
	Đang tải dữ liệu lên
	GPS đang dò tìm
	Đang nhận dữ liệu vị trí từ GPS
	Đang đồng bộ dữ liệu
	Gmail mới
	Tin nhắn Google talk mới
	Tin nhắn mới
	Bài hát đang phát

Màn hình chủ

Biểu tượng	Mô tả
	Đài FM đã bật dưới nền
	USB tethering đang bật
	Điểm phát sóng Wi-Fi di động đang bật
	Cả USB tethering và điểm phát sóng di động đều đang bật


Nhập chữ có dấu


Khi bạn chọn tiếng Pháp hoặc tiếng Tây Ban Nha làm ngôn ngữ nhập văn bản, bạn có thể nhập các ký tự đặc biệt của tiếng Pháp hoặc tiếng Tây Ban Nha (ví dụ: "á"). Ví dụ: để nhập "á", nhấn và giữ phím "a" cho tới khi phím phóng to lớn hơn và hiển thị các ký tự của những ngôn ngữ khác. Sau đó chọn ký tự đặc biệt mà bạn muốn.

Bàn phím ảo


Bạn cũng có thể nhập văn bản bằng bàn phím ảo. Bàn phím ảo tự động hiển thị trên màn hình khi bạn cần nhập văn bản. Để hiển thị bàn phím theo cách thủ công, chỉ cần bấm vào trường văn bản nơi bạn muốn nhập văn bản.


Sử dụng bàn phím & nhập văn bản

 Nhấn một lần để viết hoa chữ cái tiếp theo bạn nhập. Nhấn hai lần để viết hoa tất cả.

 Nhấn chuyển sang bàn phím số và ký hiệu. Bạn cũng có thể nhấn và giữ tab này để xem menu Cài đặt.

 Nhấn để nhập dấu cách.

 Nhấn để tạo một dòng mới trong trường tin nhắn.

 Nhấn để xóa ký tự đứng trước.


Thiết lập tài khoản Google


Khi bạn bật điện thoại lần đầu, bạn có cơ hội kích hoạt mạng, để đăng nhập vào Tài khoản Google của bạn và xem cách bạn muốn sử dụng một số dịch vụ Google.

Để thiết lập tài khoản Google:

- Đăng nhập Tài khoản Google từ màn hình thiết lập được nhắc.

HOẶC

- Nhấn  > tab **Ứng dụng** > chọn một ứng dụng Google, như **Gmail** > chọn **Tạo mới** để tạo tài khoản mới.

Nếu bạn đã có tài khoản Google, nhấn **Hiện có**, nhập địa chỉ email và mật khẩu của bạn, sau đó nhấn .

Khi bạn đã thiết lập tài khoản Google trên điện thoại, điện thoại sẽ tự động đồng bộ hóa với tài khoản Google của bạn trên web.

Danh bạ, thư Gmail, sự kiện Lịch và những thông tin khác từ các ứng dụng và dịch vụ trên web này sẽ được đồng bộ hóa với điện thoại của bạn. (Điều này tùy thuộc vào cài đặt đồng bộ hóa.)

Sau khi đăng nhập, bạn có thể sử dụng Gmail™ và tận dụng các dịch vụ của Google trên điện thoại.

Kết nối với Mạng và Thiết bị

Wi-Fi

Với Wi-Fi, bạn có thể sử dụng truy cập Internet tốc độ cao trong vùng phủ sóng của điểm truy cập (AP) không dây. Tận hưởng Internet không dây với Wi-Fi mà không phải trả thêm phí.


Kết nối với mạng Wi-Fi

Để sử dụng Wi-Fi trên điện thoại, bạn cần truy cập điểm truy cập không dây hoặc "điểm phát sóng". Một số điểm truy cập mở và bạn chỉ cần kết nối vào mạng. Một số điểm truy cập khác được ẩn hoặc sử dụng các tính năng bảo mật, bạn phải cài cấu hình điện thoại sao cho có thể kết nối với chúng.

Tắt Wi-Fi khi không sử dụng để kéo dài tuổi thọ của pin.

LƯU Ý: Nếu bạn nằm ngoài vùng Wi-Fi hoặc đặt Wi-Fi là **TẮT**, nhà điều hành mạng di động có thể tính thêm phí cho việc sử dụng dữ liệu di động.

Bật Wi-Fi và kết nối với mạng Wi-Fi

- 1 Nhấn  > tab **Ứng dụng** > **Cài đặt** > **Wi-Fi** từ **KHÔNG DÂY & MẠNG**
- 2 Đặt **Wi-Fi** thành **BẬT** để bật và bắt đầu dò mạng Wi-Fi có sẵn.
- 3 Nhấn lại vào menu Wi-Fi để xem danh sách các mạng Wi-Fi hoạt động và trong phạm vi.

- Các mạng an toàn có biểu tượng chiếc khóa.

- 4 Nhấn vào một mạng để kết nối.
- Nếu mạng được bảo mật, bạn được nhắc nhập mật khẩu hoặc thông tin đăng nhập khác. (Hỏi quản trị mạng để biết thông tin).
- 5 Sau khi kết nối với mạng Wi-Fi, thanh trạng thái sẽ hiển thị biểu tượng cho biết trạng thái Wi-Fi.

Bluetooth

Bạn có thể sử dụng Bluetooth để gửi dữ liệu bằng cách chạy các ứng dụng tương ứng như trên hầu hết các điện thoại di động khác.


MẸO!

Với LG-P880, bạn có thể tận hưởng Bluetooth tốc độ cao.

Nếu thiết bị bạn muốn chia sẻ tệp cũng hỗ trợ Bluetooth tốc độ cao, các tệp sẽ tự động được truyền qua mạng tốc độ cao. Để sử dụng truyền dữ liệu Bluetooth tốc độ cao, vui lòng đảm bảo rằng Wi-Fi đang **TẮT** trên thiết bị của bạn trước khi sử dụng. Cài đặt cho Bluetooth tốc độ cao có thể khác nhau tùy theo thiết bị. Vui lòng kiểm tra cài đặt của thiết bị với nhà cung cấp dịch vụ của thiết bị.


Bật Bluetooth và ghép nối điện thoại của bạn với thiết bị Bluetooth

Bạn phải ghép nối thiết bị của mình với thiết bị khác trước khi kết nối với thiết bị đó.

- 1 Nhấn  > tab **Ứng dụng** > **Cài đặt** > Đặt **Bluetooth** thành **BẬT** từ **KHÔNG DÂY & MẠNG**
- 2 Nhấn lại vào menu **Bluetooth**. Điện thoại của bạn sẽ dò và hiển thị ID của tất cả thiết bị Bluetooth sẵn có trong phạm vi. Nếu thiết bị bạn muốn ghép nối cùng không có trong danh sách, đảm bảo thiết bị đích được đặt là có thể tìm thấy, sau đó nhấn lại **Tim kiếm thiết bị**.
- 3 Chọn thiết bị bạn muốn ghép nối với từ danh sách.

Khi ghép nối thành công, thiết bị của bạn sẽ kết nối với thiết bị kia.

Gửi ảnh qua Bluetooth

- 1 Chọn **Ảnh** >  > **Bluetooth**
- 2 Kiểm tra xem **Bluetooth** có đang **BẬT** hay không, sau đó chọn **Tim kiếm thiết bị**.
- 3 Chọn thiết bị bạn muốn gửi dữ liệu tới từ danh sách.

Chia sẻ kết nối dữ liệu của điện thoại


Truy cập Internet qua USB và điểm phát sóng Wi-Fi di động là những tính năng tuyệt vời khi không có kết nối không dây. Bạn có thể chia sẻ kết nối dữ liệu di động của điện thoại với một máy tính qua cáp USB: USB tethering. Bạn cũng có thể chia sẻ kết nối dữ liệu của điện thoại với hơn một thiết bị một lúc, bằng cách đưa điện thoại của bạn vào điểm phát sóng Wi-Fi di động.

Khi điện thoại của bạn đang chia sẻ kết nối dữ liệu, một biểu tượng sẽ xuất hiện trong thanh trạng thái và dưới dạng một thông báo tiến trình trong ngăn thông báo.

Để có thông tin mới nhất về điểm truy cập Internet và điểm phát sóng di động, bao gồm cả hệ điều hành được hỗ trợ và các chi tiết khác, truy cập <http://www.android.com/tether>.

Kết nối với Mạng và Thiết bị

Để thay đổi cài đặt điểm phát sóng Wi-Fi di động:


- Nhấn  > tab **Ứng dụng** > **Cài đặt** > **Hơn nữa** từ **KHÔNG DÂY & MẠNG** > **Điểm phát Wi-Fi di động** > Chọn các tùy chọn bạn muốn điều chỉnh

MẸO!

Nếu máy tính của bạn đang chạy Windows 7 hoặc một phiên bản gần đây mang hơi hướng của Linux (chẳng hạn như Ubuntu), thông thường bạn sẽ không cần phải chuẩn bị máy tính để chia sẻ kết nối. Nhưng nếu bạn đang chạy các phiên bản Windows cũ hơn hoặc một hệ điều hành khác, bạn có thể cần chuẩn bị máy tính để thiết lập kết nối mạng qua USB. Để biết thông tin cập nhật nhất về các hệ điều hành hỗ trợ truy cập Internet qua USB và cách cài cấu hình chúng, truy cập <http://www.android.com/tether>.

Để đổi tên hoặc đảm bảo an toàn cho điểm phát sóng di động

Bạn có thể thay đổi tên của mạng Wi-Fi (SSID) của điện thoại và đảm bảo an toàn cho mạng Wi-Fi.

- Trên màn hình chủ, nhấn  > tab **Ứng dụng** > **Cài đặt**
- Nhấn **Hơn nữa** từ **KHÔNG DÂY & MẠNG** và chọn **Điểm phát Wi-Fi di động**.
- Đảm bảo **Điểm phát Wi-Fi di động** được chọn.

4 Nhấn Cấu hình điểm phát Wi-Fi.

- Hộp thoại **Cấu hình điểm phát Wi-Fi** sẽ mở ra.
- Bạn có thể thay đổi SSID (tên) của mạng mà các máy tính khác nhìn thấy khi quét tìm mạng Wi-Fi.
- Bạn cũng có thể nhấn menu **Bảo Mật** để định cấu hình mạng với bảo mật Wi-Fi Protected Access 2 (WPA2) bằng khóa dùng chung trước (PSK).
- Nếu bạn nhấn tùy chọn bảo mật **WPA2 PSK**, một trường mật khẩu sẽ được thêm vào hộp thoại **Cấu hình điểm phát Wi-Fi**. Nếu bạn nhập mật khẩu, bạn cần nhập mật khẩu đó khi bạn kết nối với điểm phát sóng của điện thoại bằng máy tính hoặc thiết bị khác. Bạn có thể đặt **Mở** trong menu **Bảo Mật** để xóa bảo mật khỏi mạng Wi-Fi.

5 Nhấn Lưu.

CHÚ Ý!


Nếu bạn đặt tùy chọn bảo mật là **Mở**, bạn không thể ngăn việc sử dụng trái phép các dịch vụ trực tuyến của những người khác và bạn có thể phải trả thêm phí. Để tránh việc sử dụng trái phép, bạn nên giữ tùy chọn bảo mật hoạt động.

Sử dụng SmartShare

SmartShare sử dụng công nghệ DLNA (Digital Living Network Alliance) để chia sẻ nội dung số qua mạng Wi-Fi.

Cả hai thiết bị phải có chứng nhận DLNA để hỗ trợ tính năng này.

Để bật SmartShare và cho phép chia sẻ nội dung

- 1 Nhấn  > tab **Ứng dụng** > **SmartShare**
- 2 Nhấn  và chọn **Cài đặt**.
- 3 Nhấn hộp kiểm Có thể phát hiện để tắt.
 - Nhấn **Luôn chấp nhận yêu cầu** để bật nếu bạn muốn tự động chấp nhận các yêu cầu chia sẻ từ các thiết bị khác.
 - Nhấn **Nhận các tập tin để bật** nếu bạn muốn tự động cho phép tải các tệp vào điện thoại của mình từ các điện thoại khác.
- 4 Trong phần Chia sẻ nội dung, nhấn để chọn loại nội dung bạn muốn chia sẻ. Chọn từ **Hình ảnh**, **Video** và **Nhạc**.
- 5 **SmartShare** hiện đã bật và sẵn sàng để chia sẻ nội dung.

Để chia sẻ nội dung từ thư viện nội dung từ xa với các thiết bị khác


Để thiết bị hiển thị (ví dụ: TV) phát nội dung đa phương tiện từ thư viện nội dung từ xa (ví dụ: PC).

LƯU Ý: Đảm bảo rằng chức năng DLNA của thiết bị được cài cấu hình chính xác (ví dụ: TV và PC).

- 1 Nhấn nút ở bên phải trên cùng để hoặc chọn thiết bị từ danh sách thiết bị hiển thị.
- 2 Nhấn nút ở bên trái trên cùng và chọn thiết bị trong thư viện nội dung từ xa.
- 3 Bạn có thể duyệt thư viện nội dung.
- 4 Nhấn vào hình thu nhỏ nội dung hoặc nhấn phím **Menu** và chọn nút **Phát**.

Để chia sẻ nội dung từ điện thoại của bạn với thiết bị hiển thị (ví dụ: TV)

LƯU Ý: Đảm bảo rằng thiết bị hiển thị của bạn được cài cấu hình chính xác.


- 1 Trong khi duyệt hình ảnh hoặc video bằng ứng dụng **Thư viện**, nhấn  để chọn tệp. Sau đó, bạn sẽ có thể chọn nhiều tệp để chia sẻ.
- 2 Nhấn **Chia sẻ** trên menu và chọn **SmartShare**.
- 3 **SmartShare** tự động chạy cùng với các tệp đã chọn.
- 4 Chọn thiết bị từ danh sách thiết bị hiển thị để phát các tệp.

LƯU Ý: Làm theo các bước tương tự để sử dụng Trình nghe nhạc, Máy ảnh và Trình phát video để chia sẻ nội dung.

Kết nối với Mạng và Thiết bị

Lưu ý: Kiểm tra xem thiết bị của bạn đã kết nối với mạng gia đình bằng kết nối Wi-Fi để sử dụng ứng dụng này hay chưa. Một số thiết bị hỗ trợ DLNA (như TV) chỉ hỗ trợ tính năng DMP của DLNA sẽ không xuất hiện trong danh sách thiết bị hiển thị. Thiết bị của bạn có thể không phát một số nội dung.


Để tải xuống nội dung từ thư viện nội dung từ xa

- 1 Nhấn  > tab **Ứng dụng** > **SmartShare**
- 2 Nhấn nút ở bên trái trên cùng và chọn thiết bị trong thư viện nội dung từ xa.
- 3 Bạn có thể duyệt thư viện nội dung.
- 4 Nhấn và giữ hình thu nhỏ nội dung rồi nhấn **phím menu Tải xuống**.

Lưu ý: Một số loại nội dung không được hỗ trợ.

Để tải lên nội dung từ điện thoại của tôi lên thư viện nội dung từ xa

LƯU Ý: Đảm bảo rằng thẻ SD đã được lắp đúng cách và menu cài đặt Nhận tệp đã được chọn.





- 1 Nhấn  > tab **Ứng dụng** > **SmartShare**
- 2 Nhấn vào nút trên cùng bên trái và chọn **Điện thoại của tôi**.
- 3 Bạn có thể duyệt thư viện nội dung.
- 4 Nhấn và giữ một hình thu nhỏ nội dung rồi nhấn phím menu **Tải lên**.


- 5 Chọn một thiết bị trong thư viện nội dung từ xa sẽ được tải lên.

Lưu ý: Một số thiết bị hỗ trợ DLNA không hỗ trợ chức năng tải lên DMS và sẽ không được tải lên. Một số loại nội dung không được hỗ trợ.


Cuộc gọi

Thực hiện cuộc gọi


- 1 Nhấn  để mở bàn phím.
- 2 Nhập số điện thoại sử dụng bàn phím. Để xóa một chữ số, nhấn .
- 3 Bấm  để thực hiện cuộc gọi.
- 4 Để kết thúc cuộc gọi, nhấn biểu tượng **Kết Thúc** .

MẸO! Để nhập "+" để thực hiện cuộc gọi quốc tế, nhấn và giữ .

Gọi từ danh bạ

- 1 Nhấn  để mở danh bạ.
- 2 Cuộn qua danh sách liên hệ hoặc nhập các chữ cái đầu tiên của số liên lạc bạn muốn gọi bằng cách nhấn **Tìm liên hệ**.
- 3 Trong danh sách, nhấn số liên lạc bạn muốn gọi.

Trả lời và từ chối cuộc gọi

Khi bạn nhận được một cuộc gọi ở trạng thái Khóa, giữ và trượt  để Trả lời cuộc gọi đến.

Giữ và trượt  để Từ chối cuộc gọi đến.

Giữ và trượt biểu tượng **T.nhấn nhanh** từ phía dưới cùng nếu bạn muốn gửi tin nhắn này.





MẸO! Từ chối tin nhắn

Bạn có thể gửi tin nhắn nhanh bằng chức năng này. Chức năng này rất hữu ích nếu bạn cần từ chối một cuộc gọi bằng tin nhắn trong khi đang họp.

Điều chỉnh âm lượng cuộc gọi

Để điều chỉnh âm lượng trong khi gọi, sử dụng phím tăng và giảm âm lượng ở cạnh bên trái của điện thoại.

Thực hiện cuộc gọi thứ hai


- 1 Trong cuộc gọi đầu tiên, nhấn **Menu** > **Thêm cuộc gọi** và quay số. Đồng thời, bạn có thể đi tới danh sách số đã gọi gần đây bằng cách nhấn  hoặc có thể tìm kiếm liên hệ bằng cách nhấn  và chọn số bạn muốn gọi.
- 2 Nhấn  để thực hiện cuộc gọi.
- 3 Cả hai cuộc gọi sẽ được hiển thị trên màn hình gọi. Cuộc gọi đầu của bạn sẽ bị khóa và chuyển sang chế độ chờ.
- 4 Nhấn vào số được hiển thị để chuyển đổi giữa hai cuộc gọi. Hoặc nhấn  **Kết hợp cuộc gọi** để thực hiện cuộc gọi hội nghị.
- 5 Để kết thúc cuộc gọi hiện tại, nhấn **Kết Thúc** hoặc nhấn phím Màn hình chủ và trượt thanh thông báo xuống rồi chọn biểu tượng **Kết thúc cuộc gọi** .

Cuộc gọi

LƯU Ý: Bạn sẽ bị tính cước cho mỗi cuộc gọi bạn thực hiện.

Xem nhật ký cuộc gọi

Trên màn hình chủ, nhấn  và chọn tab

Nhật ký cuộc gọi .


Xem danh sách đầy đủ tất cả các cuộc gọi đã gọi, đã nhận và bị nhỡ.

MẸO! Bấm bất kỳ mục nhập nhật ký cuộc gọi nào để xem ngày giờ và thời lượng cuộc gọi.

MẸO! Nhấn phím **Menu**, sau đó nhấn **Xóa tất cả** để xóa tất cả các mục đã ghi.

Cài đặt cuộc gọi

Bạn có thể cấu hình cài đặt cuộc gọi trên điện thoại, như chuyển tiếp cuộc gọi và các tính năng đặc biệt khác do nhà cung cấp dịch vụ cung cấp.


- 1 Trên màn hình chủ, nhấn .
- 2 Nhấn menu.
- 3 Nhấn **Cài đặt cuộc gọi** và chọn tùy chọn mà bạn muốn điều chỉnh.

Liên hệ



Thêm số liên lạc vào điện thoại và đồng bộ hóa chúng với danh bạ trong tài khoản Google hoặc tài khoản khác có hỗ trợ đồng bộ danh bạ.

Tìm kiếm liên hệ

Trên màn hình chủ

- 1 Nhấn  để mở danh bạ.
- 2 Nhấn **Tìm liên hệ** và nhập tên liên hệ bằng bàn phím.


Thêm liên hệ mới

- 1 Nhấn , nhập số của liên hệ mới, sau đó nhấn phím **Menu**. Nhấn **Thêm vào Liên Hệ** > **Tạo liên hệ mới**.
- 2 Nếu bạn muốn thêm ảnh vào liên hệ mới, nhấn vào vùng ảnh. Chọn từ **Chụp ảnh** hoặc **Chọn từ thư viện**.
- 3 Chọn loại liên hệ bằng cách nhấn .
- 4 Nhấn danh mục thông tin liên hệ và nhập thông tin về liên hệ của bạn.
- 5 Nhấn **Lưu**.



Liên hệ ưa thích

Bạn có thể phân loại các liên hệ được gọi thường xuyên làm liên hệ ưa thích.

Thêm liên hệ vào liên hệ ưa thích

- 1 Nhấn  để mở danh bạ.
- 2 Nhấn vào liên hệ để xem chi tiết.
- 3 Nhấn vào ngôi sao phía bên phải của tên liên hệ. Ngôi sao sẽ chuyển sang nhiều màu.

Xóa liên hệ khỏi danh sách ưa thích

- 1 Nhấn  để mở danh bạ.
- 2 Nhấn tab , chọn **Ưu Thích** nằm ở trên cùng của danh sách và chọn một liên hệ để xem chi tiết.
- 3 Nhấn vào ngôi sao nhiều màu phía bên phải của tên liên hệ. Ngôi sao chuyển sang màu xám và liên hệ được xóa khỏi danh sách ưa thích của bạn.

Di chuyển danh bạ từ thiết bị cũ sang thiết bị mới

Xuất danh bạ dưới dạng tệp CSV từ thiết bị cũ sang máy tính bằng chương trình đồng bộ hóa của máy tính.

- 1 Cài đặt "LG PC Suite" trên máy tính trước. Chạy chương trình và kết nối điện thoại di động Android với PC bằng cáp USB.
- 2 Trong menu trên cùng, chọn **Thiết bị** > **Nhập vào thiết bị** > **Nhập liên hệ**.



Liên hệ

- 3 Một cửa sổ bật lên để chọn loại tệp và một tệp để nhập sẽ xuất hiện.
- 4 Trong cửa sổ bật lên, bấm vào **Chọn tệp** và Windows Explorer sẽ xuất hiện.
- 5 Chọn tệp liên hệ muốn nhập trong Windows Explorer và bấm **Mở**.
- 6 Bấm **OK**.
- 7 Cửa sổ hiện lên trường chỉ dẫn để liên kết các liên hệ trong thiết bị của bạn và dữ liệu liên hệ mới sẽ xuất hiện.
- 8 Nếu có xung đột giữa dữ liệu trong danh bạ máy tính của bạn và danh bạ trong thiết bị, hãy thực hiện những lựa chọn hoặc sửa đổi cần thiết trong LG PC Suite.
- 9 Bấm **OK**.


Tin nhắn

Điện thoại LG-P880 kết hợp SMS và MMS vào trong một menu để sử dụng và trực quan.

Gửi tin nhắn

- 1 Nhấn  trên màn hình chủ, và nhấn  để mở tin nhắn trống.
- 2 Nhập tên liên hệ hoặc số điện thoại vào trường **Tới**. Khi bạn nhập tên liên hệ, các liên hệ phù hợp sẽ xuất hiện. Bạn có thể nhấn vào người nhận được đề xuất. Bạn có thể thêm nhiều liên hệ.

LƯU Ý: Bạn sẽ bị tính phí trên mỗi tin nhắn văn bản cho mỗi người bạn gửi tin nhắn đến.

- 3 Nhấn vào trường **Viết tin nhắn** và bắt đầu soạn tin nhắn.
- 4 Chạm  để mở menu Tùy chọn. Chọn trong số **Thêm chủ đề**, **Tin nhắn nhanh**, **Chèn mặt cười** và **Hủy**.
- 5 Nhấn **Gửi** để gửi tin nhắn.
- 6 Màn hình tin nhắn mở ra, kèm tin nhắn sau Tên/Số người nhận. Trả lời xuất hiện trên màn hình. Khi bạn xem và gửi tin nhắn bổ sung, chuỗi tin nhắn được tạo.

⚠ CẢNH BÁO: Giới hạn 160 ký tự có thể thay đổi theo quốc gia tùy vào ngôn ngữ và cách thức mã hóa SMS.

⚠ CẢNH BÁO: Nếu bạn thêm một hình, video hoặc tệp âm thanh vào tin nhắn SMS thì tin nhắn này sẽ tự động được chuyển đổi thành tin nhắn MMS và bạn sẽ bị tính phí tương ứng.

Hộp chuỗi

Tin nhắn (SMS, MMS) trao đổi với bên khác có thể được hiển thị theo trình tự thời gian để bạn có thể xem tổng quan cuộc hội thoại thuận tiện.

Thay đổi cài đặt tin nhắn

Cài đặt tin nhắn của LG-P880 được xác định sẵn để bạn có thể gửi tin nhắn ngay lập tức. Bạn có thể thay đổi cài đặt dựa theo sở thích.

Email



Bạn có thể sử dụng ứng dụng Email để đọc email từ các dịch vụ khác Gmail. Ứng dụng Email hỗ trợ các loại tài khoản sau: POP3, IMAP và Exchange.

Nhà cung cấp dịch vụ hoặc quản trị viên hệ thống của bạn có thể cung cấp các cài đặt tài khoản bạn cần.

Quản lý tài khoản email



Lần đầu bạn mở ứng dụng **Email**, một trình hướng dẫn cài đặt mở ra để giúp bạn thiết lập tài khoản email.

Để thêm tài khoản email khác:



- Nhấn  > tab **Ứng dụng** > **Email** > trong màn hình tài khoản, nhấn  > **Thêm tài khoản**

Sau khi thiết lập ban đầu, Email sẽ hiển thị nội dung của hộp thư đến. Nếu bạn đã thêm nhiều hơn một tài khoản, bạn có thể chuyển giữa các tài khoản.

Để thay đổi cài đặt của tài khoản email:

- Nhấn  > tab **Ứng dụng** > **Email** > trong màn hình tài khoản, nhấn  > **Toàn bộ cài đặt**

Để xóa tài khoản email:



- Nhấn  > tab **Ứng dụng** > **Email** > trong màn hình tài khoản, nhấn  > **Xóa tài khoản** > nhấn vào tài khoản bạn muốn xóa > **Xóa**

Làm việc với thư mục tài khoản

Mỗi tài khoản đều có thư mục Hộp thư đến, Hộp thư đi, Thư đã gửi và Nháp. Tùy thuộc vào các tính năng do nhà cung cấp dịch vụ của tài khoản hỗ trợ, bạn có thể có các thư mục bổ sung.

Soạn và gửi email

Để soạn và gửi thư

- Khi đang trong ứng dụng **Email**, nhấn .
- Nhập địa chỉ của người nhận thư. Khi bạn nhập văn bản, địa chỉ phù hợp được đề xuất từ Danh bạ. Phân tách nhiều địa chỉ bằng dấu chấm phẩy.
- Thêm Cc/Bcc và thêm tệp đính kèm nếu cần.
- Nhập nội dung của thư.
- Nhấn .

Nếu bạn chưa kết nối với mạng, ví dụ: nếu bạn đang làm việc trong chế độ trên máy bay, thư bạn gửi được lưu trong thư mục Hộp thư đi cho đến khi bạn kết nối lại với mạng. Nếu hộp thư có chứa thư đang chờ xử lý, Hộp thư đi được hiển thị trên màn hình Tài khoản.

MEO! Khi có email mới đến hộp thư đến, bạn sẽ nhận được thông báo bằng âm thanh hoặc rung. Nhấn vào thông báo email để dừng thông báo.

Máy Ảnh

Để mở ứng dụng Máy ảnh, nhấn **Máy Ảnh**  trên Màn hình chủ.

Làm quen với kính ngắm




- 1 Chuyển camera** – Chuyển đổi giữa máy ảnh sau và máy ảnh trước.
- 2 Chụp khi nói Cheese** – Để chụp ảnh, nói một trong các từ sau: Cheese, Smile, Whisky, Kimchi hoặc LG.
- 3 Thời gian chụp hình** – Nhấn biểu tượng này để chụp khoảnh khắc bị lỡ trước khi nhấn nút chụp.
- 4 Chế độ chụp** – Chọn từ Bình thường, HDR, Panorama hoặc Chụp liên tiếp.
- 5 Cài đặt** – Chạm biểu tượng này để mở menu cài đặt. Xem *Sử dụng cài đặt nâng cao*.
- 6 Chế độ video** – Chạm biểu tượng này để chuyển sang chế độ video.
- 7 Chụp ảnh**
- 8 Thư viện** – Nhấn để xem ảnh cuối mà bạn đã chụp. Tiện ích này cho phép bạn truy cập vào thư viện và xem các ảnh đã lưu khi đang ở chế độ máy ảnh.






LƯU Ý: Xin đảm bảo ống kính máy ảnh được sạch sẽ trước khi chụp ảnh.

Máy Ảnh




Sử dụng các cài đặt nâng cao

Trong kính ngắm, nhấn  để mở tất cả các tùy chọn nâng cao. Bạn có thể thay đổi cài đặt máy ảnh bằng cách cuộn qua danh sách. Sau khi chọn tùy chọn, nhấn phím Quay lại.

	Chạm nếu bạn muốn thay đổi menu kính ngắm.
	Cho phép bạn bật flash khi chụp ảnh trong điều kiện tối.
	Phóng to hoặc thu nhỏ.
	Xác định và điều khiển lượng ánh sáng vào ảnh.
	Tập trung vào một điểm cụ thể.
	Chọn độ phân giải của ảnh. Nếu bạn chọn độ phân giải cao, kích thước tệp sẽ tăng lên, có nghĩa là bạn sẽ lưu được ít ảnh hơn trong bộ nhớ.
	Tìm cài đặt màu sắc và ánh sáng thích hợp cho môi trường hiện tại.
	Xếp hạng ISO xác định độ nhạy của bộ cảm biến ánh sáng của máy ảnh. Xếp hạng ISO càng cao thì máy ảnh càng nhạy. Điều này rất hữu ích trong các điều kiện tối khi không thể sử dụng đèn chớp.

	Cải thiện chất lượng màu sắc trong các điều kiện ánh sáng khác nhau.
	Áp dụng các hiệu ứng nghệ thuật vào hình ảnh.
	Chọn bộ nhớ để lưu ảnh.
	Đặt thời gian chờ sau khi nhấn nút chụp. Cài đặt này lý tưởng khi bạn muốn có mặt của mình trong ảnh.
	Kích hoạt chức năng này để sử dụng các dịch vụ vị trí của điện thoại. Chụp ảnh ở bất cứ đâu và gắn địa điểm cho ảnh. Nếu bạn tải các ảnh được gắn thẻ lên một blog có hỗ trợ gắn thẻ địa lý thì bạn có thể nhìn thấy ảnh đó được hiển thị trên bản đồ.

LƯU Ý: Chức năng này chỉ khả dụng khi chức năng GPS bật.

	Chọn âm chụp.
	Tự động hiển thị hình ảnh bạn vừa chụp.
	Khôi phục tất cả các cài đặt của máy ảnh.




Chạm vào đây bất cứ khi nào bạn muốn biết cách thức hoạt động của một chức năng. Biểu tượng này cung cấp cho bạn hướng dẫn nhanh.

MẸO!


- Khi bạn thoát khỏi máy ảnh, một số cài đặt sẽ trở về giá trị mặc định, chẳng hạn như cân bằng trắng, hiệu ứng màu, hẹn giờ và chế độ cảnh. Kiểm tra các cài đặt này trước khi chụp ảnh tiếp.
- Menu cài đặt sẽ chồng lên kính ngắm, vì vậy khi bạn thay đổi các thành phần màu hoặc chất lượng ảnh, bạn sẽ có thể thấy hình xem trước của hình được thay đổi đăng sau menu Cài đặt.

Chụp nhanh ảnh

- 1 Mở ứng dụng **Máy Ảnh**.
- 2 Giữ điện thoại nằm ngang, hướng ống kính về phía đối tượng bạn muốn chụp ảnh.
- 3 Hộp tiêu điểm sẽ hiển thị ở tâm của màn hình kính ngắm. Bạn cũng có thể nhấn vào bất kỳ đâu trên màn hình để tập trung vào điểm đó.
- 4 Khi hộp tiêu điểm chuyển sang màu xanh thì máy ảnh đã điều chỉnh được tiêu điểm của đối tượng.
- 5 Chạm  để chụp ảnh.

Khi bạn đã chụp ảnh

Ảnh đã chụp sẽ xuất hiện trên màn hình nếu chức năng Tự động xem lại được đặt thành Bật (tham khảo Sử dụng cài đặt nâng cao).

Chạm  để xem ảnh cuối mà bạn đã chụp.



Chạm để chia sẻ ảnh bằng chức năng SmartShare.



Bấm để chụp ngay ảnh khác.



Chạm để gửi ảnh của bạn cho người khác hoặc chia sẻ qua dịch vụ mạng xã hội.



Chạm để xóa ảnh.

MẸO! Nếu bạn có tài khoản SNS và đã thiết lập tài khoản này trên điện thoại, bạn có thể chia sẻ ảnh với cộng đồng SNS.

LƯU Ý: Bạn có thể phải trả thêm phí khi tải về tin nhắn MMS trong khi chuyển vùng.

Chạm phím Menu  để mở tất cả các tùy chọn nâng cao.

Đặt hình làm – Chạm để sử dụng ảnh làm **Ảnh của liên hệ**, **Hình nền màn hình chính** hoặc **Hình nền Khóa màn hình**.

Dời – Chạm để di chuyển ảnh đến vị trí khác.

Máy Ảnh

Sao chép – Chạm để sao chép ảnh được chọn và lưu vào album khác.

Đổi tên – Chạm để chỉnh sửa tên của ảnh đã chọn.

Xoay Trái/Phải – Để xoay trái hoặc phải.


Cắt – Cắt ảnh. Di chuyển ngón tay qua màn hình để chọn vùng cần cắt.

Sửa – Xem và sửa ảnh.

Trình chiếu – Tự động hiển thị lần lượt các hình ảnh trong thư mục hiện tại.

Chi tiết – Tìm hiểu thêm thông tin về nội dung.


Xem ảnh đã lưu

Bạn có thể truy cập các ảnh đã lưu khi ở chế độ máy ảnh. Chỉ cần nhấn biểu tượng Thư viện  và Thư viện của bạn sẽ hiển thị.

- Để xem các ảnh khác, cuộn sang trái hoặc sang phải.
- Để phóng to hoặc thu nhỏ, nhấn đúp vào màn hình hoặc đặt hai ngón tay và di chuyển hai ngón tay cách xa nhau (di chuyển các ngón tay của bạn gần nhau hơn để thu nhỏ).

Máy quay video

Làm quen với kính ngắm

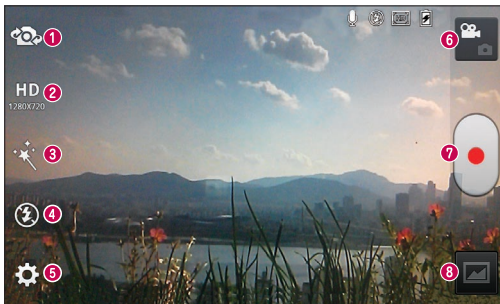


- 1 Chuyển camera** – Chuyển đổi giữa máy ảnh sau và máy ảnh trước.
- 2 Kích thước video** – Chạm để đặt kích thước (bằng pixel) của video bạn ghi.
- 3 Hiệu ứng trực tiếp** – Hiệu ứng trực tiếp cung cấp nhiều hiệu ứng hình ảnh khác nhau khi quay video.
- 4 Flash** – Cho phép bạn bật flash khi quay video trong điều kiện tối.
- 5 Cài đặt** – Chạm biểu tượng này để mở menu cài đặt.
- 6 Chế độ máy ảnh** – Chạm biểu tượng này để chuyển sang chế độ máy ảnh.
- 7 Bắt đầu quay**
- 8 Thư viện** – Nhấn để xem video cuối mà bạn đã quay. Tiện ích này cho phép bạn truy cập thư viện và xem các video đã lưu khi đang ở chế độ video.

MẸO!

Khi quay video, đặt hai ngón tay trên màn hình và kẹp vào để sử dụng chức năng Thu phóng.

Máy quay video

Sử dụng các cài đặt nâng cao



Sử dụng kính ngắm, chạm  để mở tất cả các tùy chọn nâng cao.

	Chạm nếu bạn muốn thay đổi menu kính ngắm.
	Phóng to hoặc thu nhỏ.
	Xác định và điều khiển lượng ánh sáng vào video.
	Cài thiện chất lượng màu sắc trong các điều kiện ánh sáng khác nhau.
	Chọn một tông màu để sử dụng cho giao diện mới của bạn.
	Kích hoạt chức năng này để sử dụng các dịch vụ vị trí của điện thoại.
	Chọn Tắt để quay video không có tiếng.
	Tự động xem lại sẽ tự động hiển thị cho bạn video bạn vừa quay.
	Chọn bộ nhớ để lưu hình video.
	Khôi phục tất cả cài đặt mặc định của máy quay video.




Chạm vào đây nếu bạn muốn biết cách thức hoạt động của chức năng này. Biểu tượng này cung cấp cho bạn hướng dẫn nhanh.

Quay video nhanh

- 1 Mở ứng dụng **Máy Ảnh** và chạm vào nút **Chế độ video**.
- 2 Kính ngắm của máy quay video sẽ xuất hiện trên màn hình.
- 3 Cầm điện thoại, hướng ống kính về phía đối tượng bạn muốn quay video.
- 4 Chạm  một lần để bắt đầu ghi hình.
- 5 Đèn đỏ xuất hiện ở góc trên cùng bên trái của kính ngắm cùng với bộ đếm giờ cho biết thời lượng của video.
- 6 Chạm  trên màn hình để dừng quay.

Sau khi quay video

Một hình ảnh tĩnh thể hiện video của bạn sẽ xuất hiện trên màn hình nếu Tự động xem lại được Bật.

Nhấn  để xem video cuối cùng bạn vừa quay.



Chạm để chia sẻ video bằng chức năng **SmartShare**.



Chạm để quay video khác ngay lập tức.




Chạm để gửi video của bạn cho người khác hoặc chia sẻ qua dịch vụ mạng xã hội.



Chạm để xóa ảnh.

LƯU Ý: Bạn có thể phải trả thêm phí khi tải về tin nhắn MMS trong khi chuyển vùng.

Xem các video đã lưu

- 1 Trong kính ngắm, nhấn .
- 2 Thư viện của bạn sẽ xuất hiện trên màn hình.
- 3 Nhấn video để tự động phát.


Điều chỉnh âm lượng trong khi xem video

Để điều chỉnh âm lượng video trong khi phát, hãy sử dụng các phím âm lượng ở bên trái của điện thoại.


Đa phương tiện

Bạn có thể lưu nhiều tệp đa phương tiện vào thẻ nhớ để bạn có thể truy cập dễ dàng tất cả các tệp đa phương tiện.




Trình phát video

LG-P880 của bạn có một trình phát video tích hợp cho phép bạn phát tất cả các video ưa thích của mình. Để truy cập trình phát video, Nhấn  > tab **Ứng dụng** > **Xem Video**.

Phát video

- 1 Trên màn hình chủ, nhấn  > tab **Ứng dụng** > **Xem Video**.
- 2 Chọn video mà bạn muốn phát.


	Nhấn để tạm dừng phát lại một video.
	Nhấn để tiếp tục phát lại một video.
	Nhấn để tua đi 10 giây.
	Nhấn để tua lại 10 giây.
	Nhấn để quản lý âm lượng video.
	Nhấn để đặt hiệu ứng âm thanh Dolby khi kết nối với lỗ cắm tai nghe.
	Nhấn vào biểu tượng Điều khiển tốc độ và kéo thanh tiến trình để điều chỉnh tốc độ phát lại.

	Nhấn vào biểu tượng Khung xem trước và kéo bộ xử lý của thanh tìm kiếm để khám phá nội dung bằng màn hình xem trước.
	Nhấn để khóa màn hình video.
	Nhấn vào biểu tượng danh sách trực tiếp để xem danh sách các video.


Để thay đổi âm lượng trong khi xem video, nhấn phím tăng và giảm âm lượng ở cạnh bên trái của điện thoại.

Nhấn và giữ bất kỳ bài hát nào trong danh sách. **Xoá** và **Chi tiết** sẽ được hiển thị dưới dạng tùy chọn.

Thư viện

Nhấn  > tab **Ứng dụng** > **Thư viện**. Mở danh sách các thanh danh mục lưu trữ tất cả các tệp đa phương tiện của bạn.


Nhạc





LG-P880 của bạn có một trình nghe nhạc tích hợp cho phép bạn phát tất cả các bản nhạc ưa thích của mình. Để truy cập trình nghe nhạc, Nhấn  > tab **Ứng dụng** > **Nhạc**.




Truyền nhạc bằng Đồng bộ đa phương tiện (MTP)

- 1 Kết nối điện thoại LG-P880 tới máy tính bằng cáp USB.
- 2 Nếu bạn chưa cài Trình điều khiển LG Android Platform trên máy tính, bạn cần thay đổi các cài đặt này theo cách thủ công. Chọn **Cài đặt** > **Kết nối PC** > **Loại kết nối USB**, rồi chọn **Đồng bộ đa phương tiện (MTP)**.
- 3 Bạn có thể xem nội dung trên bộ lưu trữ thứ cấp trên PC và chuyển tệp.

Phát bài hát

- 1 Trên Màn hình chủ, nhấn  > tab **Ứng dụng** > **Nhạc**.
- 2 Nhấn **Bài hát**.
- 3 Chọn bài hát mà bạn muốn phát.

	Chạm để tìm tệp với YouTube
	Chạm để chia sẻ nhạc qua chức năng SmartShare.
	Chạm để đặt chế độ trộn bài
	Chạm để đặt chế độ lặp lại
	Chạm để kiểm soát âm lượng cho nhạc
	Chạm để tạm dừng phát lại
	Chạm để tiếp tục phát lại

	Chạm để chuyển đến bài hát tiếp theo trong album hoặc trong danh sách nhạc
	Chạm để quay lại phần đầu của bài hát. Chạm hai lần để trở về bài hát trước
	Chạm để đặt bài hát ưa thích
	Chạm để xem danh sách nhạc hiện tại
	Chạm để đặt hiệu ứng âm thanh Dolby khi kết nối với loa cắm tai nghe

Để thay đổi âm lượng trong khi nghe nhạc, nhấn phím âm lượng tăng và giảm ở cạnh bên trái của điện thoại. Nhấn và giữ bất kỳ bài hát nào trong danh sách. Các tùy chọn **Phát**, **Thêm vào danh sách nhạc**, **Chia sẻ**, **Đặt làm nhạc chuông**, **Xóa**, **Chi tiết** và **Tim kiếm** sẽ được hiển thị.

LƯU Ý: Bản quyền của các tệp nhạc được bảo hộ theo các công ước quốc tế và luật bản quyền của các quốc gia.

Do đó, có thể cần xin phép hoặc mua giấy phép để sao chép nhạc.

Luật quốc gia của một số nước cấm sao chép tài liệu được bảo hộ bởi bản quyền cho mục đích cá nhân. Trước khi tải xuống hoặc sao chép tệp, vui lòng kiểm tra luật quốc gia của quốc gia liên quan về việc sử dụng tài liệu như vậy.

Đa phương tiện

Đài FM



LG-P880 có Đài FM tích hợp để bạn có thể dò những kênh ưa thích của mình và nghe trên đường.

LƯU Ý: Bạn cần sử dụng tai nghe để nghe đài. Cắm tai nghe vào lỗ cắm tai nghe.

Dò kênh

Bạn có thể dò kênh radio cho điện thoại bằng cách tìm kiếm thủ công hoặc tự động. Sau đó, các kênh này được lưu theo những số kênh cụ thể để bạn không phải tìm lại lần nữa.

Dò kênh tự động

- 1 Trên màn hình chủ, nhấn  > tab **Ứng dụng** > **Đài FM**.
- 2 Nhấn  rồi chọn **Dò**.
- 3 Trong khi quét tự động, nhấn **Hủy bỏ** nếu bạn muốn dừng quét. Chỉ các kênh đã quét sẽ được lưu trước khi bạn dừng quét.


LƯU Ý: Bạn cũng có thể dò đài theo cách thủ công bằng bánh xe được hiển thị.


MẸO! Để cải thiện chất lượng thu sóng đài, hãy kéo dài dây tai nghe vì dây này có chức năng như một anten. Nếu bạn kết nối tai nghe không dành riêng để nhận sóng thì khả năng nhận sóng có thể kém.


LG SmartWorld

LG SmartWorld cung cấp tập hợp nội dung thú vị - trò chơi, ứng dụng, hình nền và nhạc chuông - mang lại cho người dùng điện thoại LG cơ hội tận hưởng trải nghiệm "Cuộc sống di động" phong phú hơn.

Cách tải LG SmartWorld từ điện thoại

- 1 Nhấn vào biểu tượng  để truy cập LG SmartWorld.
- 2 Nhấn Đăng nhập và nhập tên đăng nhập/mật khẩu cho LG SmartWorld. Nếu bạn chưa đăng ký, nhấn Đăng ký và trở thành một thành viên LG SmartWorld.
- 3 Tải xuống nội dung bạn muốn.

LƯU Ý: Nếu không có biểu tượng  thì sao?

- 1 Sử dụng trình duyệt Web di động, truy cập LG SmartWorld (www.lgworld.com) và chọn quốc gia của bạn.
- 2 Tải xuống ứng dụng LG SmartWorld.
- 3 Thi hành và cài đặt tệp đã tải xuống.
- 4 Truy cập LG SmartWorld bằng cách nhấn biểu tượng .

Cách sử dụng LG SmartWorld

- Tham gia vào các chương trình khuyến mãi hàng tháng của LG SmartWorld.
- Thử các nút "Menu" dễ dàng để nhanh chóng tìm thấy thứ bạn đang tìm kiếm.

Mục – Tìm nội dung theo thể loại (ví dụ: Giáo dục, Giải trí, Trò chơi, v.v.).

Tìm kiếm – Tìm kiếm nội dung.

Các ứng dụng cho bạn – Nội dung được đề xuất dựa trên các lựa chọn trước đây của bạn.

Ứng dụng – Danh sách nội dung đã tải xuống/cần cập nhật.

Cài đặt – Đặt cấu hình và Hiển thị.



Đăng nhập – Đặt ID và mật khẩu.

- Thử cả các chức năng hữu ích khác. (Màn hình chi tiết nội dung)



LƯU Ý: LG SmartWorld có thể không khả dụng tại tất cả nhà khai thác mạng hoặc quốc gia.

Tiện ích



Đặt báo thức

- 1 Nhấn  > tab **Ứng dụng** > **Báo thức** > 
- 2 Sau khi bạn đặt thời gian, LG-P880 sẽ cho bạn biết bao lâu nữa báo thức kêu.
- 3 Đặt **Lặp lại**, **Thời gian tạm dừng**, **Rung**, **Chuông báo thức**, **Âm lượng báo thức**, **Bộ khởi động ứng dụng tự động**, **Khóa bằng cách di chuyển giữa các ô** và **Ghi nhớ**. Chạm **Lưu**.

Sử dụng máy tính

- 1 Nhấn  > tab **Ứng dụng** > **Máy Tính**
- 2 Nhấn các phím số để nhập số.
- 3 Đối với các phép tính đơn giản, nhấn chức năng bạn muốn (+, -, x hoặc ÷) sau đó nhấn =.
- 4 Đối với các phép tính phức tạp hơn, nhấn , chọn **Bảng nâng cao**, sau đó chọn sin, cos, tan, log và các chức năng khác.

Thêm một sự kiện vào lịch





- 1 Nhấn  > tab **Ứng dụng** > **Lịch**
- 2 Ở giữa màn hình, bạn có thể thấy các loại chế độ xem khác nhau của Lịch (Ngày, Tuần, Công việc).
- 3 Nhấn vào ngày bạn muốn thêm sự kiện và nhấn 
- 4 Nhấn **Tên sự kiện** sau đó nhập tên sự kiện.


- 5 Nhấn **Vị trí** và nhập vị trí. Chọn ngày và nhập thời gian bạn muốn bắt đầu và kết thúc sự kiện.
- 6 Nếu bạn muốn thêm ghi chú cho sự kiện, nhấn **Mô tả** và nhập chi tiết.
- 7 Nếu bạn muốn lặp lại báo thức, đặt **LẶP LẠI** và đặt **LỖI NHẮC** nếu cần.
- 8 Nhấn **Lưu** để lưu sự kiện trên lịch.

Ghi âm


Sử dụng máy ghi âm để ghi lại các ghi nhớ thoại hoặc các tệp âm thanh khác.

Ghi âm thanh hoặc giọng nói

- 1 Chạm  > tab **Ứng dụng** và chọn **Ghi âm**.
- 2 Bấm  để bắt đầu ghi âm.
- 3 Bấm  để kết thúc ghi âm.
- 4 Bấm  để nghe bản ghi âm.

LƯU Ý: Chạm  để truy cập album của bạn. Bạn có thể nghe bản ghi âm đã lưu. Thời gian ghi sẵn có thể khác so với thời gian ghi thực tế.

Gửi bản ghi âm thoại

- 1 Khi bạn đã kết thúc ghi âm, bạn có thể gửi clip âm thanh bằng cách chạm .
- 2 Chọn từ **Bluetooth**, **Email**, **Gmail**, **Ghi nhớ** hoặc **Tin nhắn**. Khi bạn chọn Bluetooth, Email, Gmail, Ghi nhớ hoặc Tin nhắn, bản ghi âm sẽ được thêm


vào thư/tin nhắn. Sau đó, bạn có thể soạn và gửi thư/tin nhắn như bình thường.

Trình quản lý Tác vụ

Bạn có thể quản lý các ứng dụng bằng Trình quản lý Ứng dụng. Bạn có thể kiểm tra dễ dàng số lượng ứng dụng đang chạy và tắt một số ứng dụng nhất định. Bạn cũng có thể gỡ cài đặt ứng dụng bạn đã cài đặt trên thiết bị.

Polaris Office 4

Polaris Office là một giải pháp văn phòng di động chuyên nghiệp cho phép người dùng xem nhiều loại tài liệu văn phòng một cách tiện lợi, bao gồm các tệp Word, Excel và PowerPoint, mọi nơi, mọi lúc bằng các thiết bị di động của họ.

Nhấn  > tab **Ứng dụng** > **Polaris Office 4**.

Xem tệp

Người dùng di động giờ đây có thể xem dễ dàng nhiều loại tệp khác nhau, bao gồm các tài liệu Microsoft Office và Adobe PDF ngay trên thiết bị di động của họ. Khi xem tài liệu bằng Polaris Office, các đối tượng và bố cục vẫn giữ nguyên như tài liệu gốc.

Sao lưu

Thông tin về sao lưu và khôi phục dữ liệu điện thoại thông minh

Bạn nên thường xuyên tạo và lưu tệp sao lưu trên thẻ lưu trữ, đặc biệt trước khi bạn cập nhật phần mềm. Duy trì tệp sao lưu trên Bộ nhớ lưu trữ có thể cho phép bạn khôi phục dữ liệu điện thoại thông minh nếu điện thoại bị mất, bị lấy trộm, bị hỏng do sự cố không lường trước.

Ứng dụng Sao lưu này hỗ trợ giữa các điện thoại thông minh LG, phiên bản phần mềm hoặc hệ điều hành khác. Vì vậy, khi bạn mua điện thoại thông minh LG mới, bạn có thể sao lưu dữ liệu của điện thoại thông minh LG-P880 hiện tại trên điện thoại mới.

Nếu bạn tải sẵn ứng dụng Sao lưu & Khôi phục trên điện thoại thông minh, bạn có thể sao lưu và khôi phục phần lớn dữ liệu trên điện thoại thông minh, **Ứng dụng** bao gồm các ứng dụng không được bảo vệ, các cài đặt của chúng, **Cài đặt hệ thống**, **Cài ứng dụng (Cài sẵn)**, **Danh bạ**, **Lịch**, **Màn hình chính**, **Nhật ký cuộc gọi**, **Tin nhắn văn bản**, **Địa chỉ**, **Ứng dụng (Đã tải về)** sử dụng ứng dụng này.

- Để sao lưu thủ công dữ liệu điện thoại thông minh của bạn.
- Để sao lưu tự động dữ liệu điện thoại thông minh của bạn.

Tiện ích


- Để khôi phục dữ liệu điện thoại thông minh.

Sao lưu dữ liệu điện thoại thông minh

- 1 Lắp thẻ nhớ vào khe và kiểm tra trạng thái lưu trữ.
- 2 Nhấn tab **Ứng dụng** , sau đó chọn **Sao lưu > Sao lưu > Thẻ nhớ** hoặc **Bộ nhớ trong**.
- 3 Chạm **Thêm mới** để nhập tên của tệp sao lưu và chọn **Tiếp tục**.
- 4 Chọn ô chọn bên cạnh mục bạn muốn sao lưu, sau đó chọn **Tiếp tục** để sao lưu.
- 5 Khi tất cả các tệp đã chọn được sao lưu, bạn sẽ thấy thông báo **'Xong'** và chọn **Tiếp tục** để kết thúc sao lưu dữ liệu.

Lên lịch sao lưu tự động

Bạn cũng có thể bật sao lưu tự động dữ liệu trên điện thoại thông minh theo cài đặt lịch. Để bật sao lưu tự động, hãy hoàn tất các bước sau:


- 1 Lắp thẻ nhớ vào khe và kiểm tra trạng thái lưu trữ.
- 2 Nhấn tab **Ứng dụng** , sau đó chọn **Sao lưu > Lịch trình**.
- 3 Trên màn hình **Vị trí bản sao dự phòng đã đặt lịch**, nhấn **Thẻ nhớ** hoặc **Bộ nhớ trong**.

- 4 Từ danh sách, chọn tần suất bạn muốn sao lưu dữ liệu và cài đặt thiết bị và chọn **Tiếp tục**.
- 5 Chọn ô chọn bên cạnh dữ liệu bạn muốn sao lưu, sau đó chọn **Tiếp tục** để kết thúc đặt lịch.

Khôi phục dữ liệu điện thoại thông minh

Để khôi phục dữ liệu trong bộ nhớ trong của thiết bị, bạn phải tắt chế độ Bộ lưu trữ thứ cấp.

LƯU Ý: Tất cả các tệp được lưu trên điện thoại thông minh được xóa trước khi tệp sao lưu được khôi phục.


- 1 Lắp thẻ nhớ vào khe và kiểm tra trạng thái lưu trữ.
- 2 Nhấn tab **Ứng dụng** , sau đó chọn **Sao lưu > Phục hồi > Thẻ nhớ** hoặc **Bộ nhớ trong**.
- 3 Trên màn hình **Phục hồi**, chọn tệp sao lưu có chứa dữ liệu bạn muốn khôi phục.
- 4 Chọn ô chọn bên cạnh mục bạn muốn khôi phục, sau đó chọn **Tiếp tục** để sao lưu.

LƯU Ý: Xin lưu ý rằng dữ liệu điện thoại của bạn sẽ bị ghi đè bằng nội dung sao lưu.


- 5 Nếu tệp sao lưu bị mã hóa, nhập mật khẩu bạn đặt để mã hóa.
- 6 Khi tắt cả các tệp đã chọn được khôi phục, bạn sẽ thấy thông báo 'Xong' và chọn **Vâng** để khởi động lại điện thoại.

LƯU Ý:

- Trong chế độ Bộ lưu trữ thứ cấp, Ứng dụng Sao lưu này không hoạt động. Chọn tùy chọn Chỉ sạc khi kết nối cáp USB.
- Bạn có thể đặt Mật mã hóa để mã hóa tệp sao lưu nhằm bảo vệ thêm.

Nhấn **Menu**  từ màn hình **Sao lưu**, chọn **Cài đặt** > **Bảo mật** và chọn hộp kiểm. Sau khi bật mã hóa, để khôi phục dữ liệu sắp xếp đã đồng bộ hóa, bạn phải có mật khẩu kích hoạt.

LƯU Ý:

Bạn cũng có thể bật chức năng tự động xóa các tệp sao lưu cũ và chỉ giữ lại tệp sao lưu mới nhất. Nhấn **Menu**  từ màn hình **Sao lưu**, chọn **Cài đặt** > **Sao lưu đã đặt lịch** > **Tự động xóa các sao lưu cũ** để chọn số lượng tệp sao lưu đã lên lịch cần giữ lại.

Google+


Sử dụng ứng dụng này để giữ kết nối với mọi người thông qua dịch vụ mạng xã hội của Google.

- Chạm  > tab **Ứng dụng** > **Google +**.

LƯU Ý: Ứng dụng có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.

T.kiểm bằng giọng nói

Sử dụng ứng dụng này để tìm kiếm các trang web bằng giọng nói.

- 1 Chạm  > tab **Ứng dụng** > **T.kiểm bằng giọng nói**.
- 2 Nói từ khóa hoặc cụm từ khi từ **Nói ngay bây giờ** xuất hiện trên màn hình. Chọn một trong các từ khóa gợi ý xuất hiện.

LƯU Ý: Ứng dụng có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.

Tải xuống

Sử dụng ứng dụng này để xem tệp nào đã được tải xuống thông qua ứng dụng.

- Chạm  > tab **Ứng dụng** > **Tải xuống**.

LƯU Ý: Ứng dụng có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.






Trình duyệt

Internet

Trình duyệt cung cấp cho bạn một thế giới thân thiện, đa sắc màu về các trò chơi, nhạc, tin tức, thể thao, giải trí và nhiều hơn nữa, ngay trên điện thoại di động của bạn. Dù bạn ở đâu và bạn thích bất cứ thứ gì.

LƯU Ý: Bạn có thể phải trả thêm phí khi kết nối tới các dịch vụ này và tải xuống nội dung. Kiểm tra phí dữ liệu với nhà cung cấp dịch vụ mạng.

Sử dụng thanh công cụ web

-  Nhấn để quay lại một trang.
-  Nhấn để đi tới một trang tới trang bạn đã kết nối sau trang hiện tại. Điều này ngược lại với những gì diễn ra khi bạn nhấn phím **Quay lại**, sẽ đưa bạn trở lại một trang.
-  Chạm để vào Trang chủ.
-  Nhấn để thêm cửa sổ mới.
-  Nhấn để truy cập chỉ mục.

Sử dụng tùy chọn

Bấm  để xem các tùy chọn.

Làm mới – Cập nhật trang web hiện tại.

Lưu vào Dấu trang – Thêm trang web hiện tại làm chỉ mục.

Tới trang chủ – Cho phép bạn vào trang chủ.

Chia sẻ trang – Cho phép bạn chia sẻ trang web với những người khác.

Tìm kiếm trên trang – Cho phép bạn tìm chữ cái hoặc từ trên trang web hiện tại.

Xem màn hình – Cho phép bạn xem trang web dưới dạng màn hình nền.

Lưu để đọc ngoại tuyến – Lưu trang hiện tại để đọc trong khi ngoại tuyến.

Cài đặt – Hiển thị cài đặt trình duyệt.

Thoát – Thoát khỏi danh sách menu.

Chrome

Sử dụng Chrome để tìm kiếm thông tin và duyệt trang web.


1 Chạm  > tab **Ứng dụng** > **Chrome**.


LƯU Ý: Ứng dụng có thể không khả dụng, tùy thuộc vào khu vực và nhà cung cấp dịch vụ.

Xem trang web


Nhấn trường Địa chỉ, sau đó nhập địa chỉ web hoặc tiêu chí tìm kiếm.

Mở một trang

Để vào một trang mới, nhấn  → + **Tab mới**.


Để vào trang web khác, nhấn , cuộn lên hoặc xuống và nhấn vào trang để chọn trang đó.

Tìm kiếm web bằng giọng nói


Nhấn trường địa chỉ, nhấn , nói từ khóa và chọn một trong các từ khóa gợi ý xuất hiện.

Đồng bộ hóa với thiết bị khác


Đồng bộ hóa sẽ mở các tab và chỉ mục để sử dụng với Chrome trên thiết bị khác khi bạn đăng nhập với cùng một tài khoản Google.

Để xem các tab mở trên thiết bị khác, nhấn **Menu**  → **Thiết bị khác**.

Chọn một trang web để mở.

Để xem chỉ mục, nhấn .

Cài đặt

Trên màn hình chủ, nhấn  > tab **Ứng dụng** > **Cài đặt**.

Không dây & Mạng


Tại đây, bạn có thể quản lý Wi-Fi và Bluetooth. Bạn cũng có thể thiết lập mạng di động và chuyển sang chế độ trên máy bay.

< **Wi-Fi** >

Wi-Fi – Bật Wi-Fi để kết nối với mạng Wi-Fi có sẵn.

MẸO! Cách lấy địa chỉ MAC

Để thiết lập kết nối trong một số mạng không dây có bộ lọc MAC, bạn có thể cần phải nhập địa chỉ MAC của điện thoại LG-P880 vào thiết bị định tuyến.

Bạn có thể tìm thấy địa chỉ MAC trong giao diện người dùng sau: Nhấn tab **Ứng dụng** > **Cài đặt** > **Wi-Fi** >  > **Nâng cao** > **Địa chỉ MAC**.

< **Bluetooth** >

Bật Bluetooth để kết nối với thiết bị Bluetooth.

< **Dữ liệu di động** >

Hiển thị sử dụng dữ liệu và đặt giới hạn dữ liệu di động.

< **Gọi** >

Cài cấu hình cài đặt cuộc gọi trên điện thoại, như chuyển tiếp cuộc gọi và các tính năng đặc biệt khác mà nhà khai thác

mạng cung cấp.

Quay số cố định – Bật và soạn danh sách các số có thể được gọi đi từ điện thoại của bạn. Bạn sẽ cần mã PIN2, mã này có sẵn từ nhà điều hành của bạn. Chỉ những số trong danh sách quay số cố định mới có thể được gọi đi từ điện thoại của bạn.

Lưu các số chưa biết – Thêm số chưa biết vào danh bạ sau cuộc gọi.

Thu Thoại – Cho phép bạn chọn dịch vụ thư thoại của nhà khai thác mạng.

Từ chối cuộc gọi – Cho phép bạn đặt chức năng từ chối cuộc gọi. Chọn từ **Chế độ từ chối cuộc gọi** hoặc **Danh sách từ chối**.

Từ chối tin nhắn – Khi bạn muốn từ chối một cuộc gọi, bạn có thể gửi một tin nhắn nhanh bằng chức năng này. Chức năng này rất hữu ích nếu bạn cần từ chối một cuộc gọi trong khi đang họp.

Nút nguồn k.thúc cuộc gọi – Cho phép bạn chọn cuộc gọi kết thúc.

Chuyển cuộc gọi – Chọn xem có chuyển hướng tất cả cuộc gọi khi điện thoại bạn, khi không trả lời hoặc khi bạn bị mất tín hiệu không.

Chặn cuộc gọi – Khóa cuộc gọi đến, cuộc gọi đi hoặc cuộc gọi quốc tế.

Thời lượng cuộc gọi – Xem thời lượng của các cuộc gọi bao gồm Cuộc gọi mới nhất, Tất cả cuộc gọi, Cuộc gọi đi và Cuộc gọi đã nhận.

Cài đặt bổ sung – Cho phép bạn thay đổi các cài đặt sau:

ID người gọi: Chọn hiển thị số của bạn khi gọi đi.

Cuộc gọi chờ: Nếu cuộc gọi chờ được kích hoạt, điện thoại sẽ thông báo cho bạn về cuộc gọi đến khi bạn đang đàm thoại (tùy thuộc vào nhà cung cấp dịch vụ mạng).

< Hơn nữa >

Chế độ trên máy bay – Sau khi chuyển sang chế độ trên máy bay, tất cả các kết nối không dây sẽ bị tắt.

Điểm phát Wi-Fi di động – Bạn có thể cấu hình cài đặt điểm phát sóng Wi-Fi di động.

NFC – LG-P880 là điện thoại di động hỗ trợ NFC. NFC (Giao tiếp trường gần) là công nghệ kết nối không dây để cho phép giao tiếp hai chiều giữa các thiết bị điện tử.

Công nghệ này hoạt động trong khoảng cách vài cm. Bạn có thể chia sẻ nội dung với thẻ NFC hoặc thiết bị khác chỉ với một lần chạm đơn giản vào thiết bị. Nếu bạn chạm vào thẻ NFC với thiết bị, nó sẽ hiển thị nội dung thẻ trên thiết bị của bạn.

LƯU Ý: Cần thận để không làm xước hoặc làm hỏng phần bên trong của nắp pin vì đây là anten NFC.

Để bật hoặc tắt NFC: Từ màn hình chủ, dùng ngón tay để nhấn và trượt ngang

thông báo xuống, sau đó chọn biểu tượng NFC để bật chức năng này.

LƯU Ý: Khi chế độ Trên máy bay được kích hoạt, bạn có thể sử dụng ứng dụng NFC.

Sử dụng NFC: Để sử dụng NFC, đảm bảo thiết bị của bạn đã bật và kích hoạt cài đặt NFC, nếu cài đặt này đang tắt.

Android Beam – Khi bật tính năng này, bạn có thể phát nội dung ứng dụng sang thiết bị có chức năng NFC khác bằng cách đưa hai thiết bị lại gần nhau.

Chỉ cần đưa thiết bị lại gần nhau (thường là chạm lưng) sau đó chạm vào màn hình. Ứng dụng quyết định nội dung nào sẽ được phát.

VPN – Hiển thị danh sách Mạng Riêng Ảo (VPN) bạn đã đặt cấu hình trước đó. Cho phép bạn thêm các loại VPN khác nhau.

Mạng di động – Đặt tùy chọn cho chuyển vùng dữ liệu, chế độ mạng & nhà điều hành mạng, tên điểm truy cập (APN), v.v.

LƯU Ý: Bạn phải đặt PIN hoặc mật khẩu khóa màn hình trước khi bạn có thể sử dụng bộ nhớ thông tin xác thực.

Thiết bị

< Âm thanh >

Cấu hình âm thanh – Chọn Âm thanh, Chỉ rung hoặc Im lặng.

Cài đặt

Các mức âm lượng – Quản lý âm lượng của Nhạc chuông điện thoại, Âm thanh thông báo, Hệ thống & phản hồi khi chạm, Nhạc, video, trò chơi và nội dung đa phương tiện khác.

Thời gian tắt âm báo có email – Đặt thời gian tắt tất cả âm thanh ngoại trừ báo thức và nội dung đa phương tiện.

Phát chuông cùng với rung – Rung cho cuộc gọi và thông báo.

Nhạc chuông điện thoại – Cho phép bạn đặt nhạc chuông mặc định cho cuộc gọi đến.

Âm thanh thông báo – Cho phép bạn đặt nhạc chuông thông báo mặc định.

Các âm chạm b.phím q.số – Cho phép bạn đặt điện thoại phát âm báo khi sử dụng bàn phím quay số để quay số.

Các âm thanh chạm – Cho phép bạn đặt điện thoại phát tiếng khi bạn chạm nút, biểu tượng và các mục trên màn hình khác phản ứng với sự chạm của bạn.

Âm thanh khóa màn hình – Cho phép bạn đặt điện thoại phát tiếng khi bạn khóa và mở khóa màn hình.

Rung khi chạm vào – Cho phép bạn đặt phản hồi rung khi chạm vào màn hình điện thoại.

< **Hiển thị** >

Độ sáng – Điều chỉnh độ sáng màn hình.

Thời gian chờ màn hình – Đặt thời gian chờ màn hình.

Tự động xoay màn hình – Đặt để chuyển hướng tự động khi bạn xoay điện thoại.

Kiểu chữ – Thay đổi kiểu hiển thị.

Cỡ Chữ – Thay đổi kích thước của phông chữ hiển thị.

Đèn sáng phím ở phía trước – Đặt thời gian LED của phím mặt trước.

Hiệu chỉnh cảm biến chuyển động – Cải thiện độ chính xác về độ nghiêng và tốc độ của cảm biến.

< **Màn hình chủ** >

Đặt **Chủ đề**, **Ảnh động**, **Hiệu ứng màn hình**, **Hình Nền** hoặc **Chỉ xem đọc**. Chọn tùy chọn để đặt **Cuộn tròn các màn hình** và **Sao lưu & khôi phục trang chủ**.

< **Khóa màn hình** >

Chọn khóa màn hình – Đặt loại màn hình khóa để bảo vệ điện thoại của bạn. Mở hàng loạt các màn hình để hướng dẫn bạn vẽ hình mở khóa. Đặt **Không có**, **Gạt**, **Mở khóa bằng công nghệ nhận diện Khuôn mặt**, **Kiểu mẫu**, **PIN** hoặc **Mật khẩu**.

Nếu bạn đã bật loại Khóa máy bằng hình thì khi bạn bật điện thoại hoặc đánh thức màn hình, bạn được yêu cầu vẽ hình mở khóa để mở khóa màn hình.

Hình nền – Chọn hình nền cho màn hình khóa từ Thư viện hoặc Thư viện hình nền.

Đồng hồ & Phím tắt – Tùy chỉnh đồng hồ và phím tắt trên màn hình khóa.

Thông tin chủ sở hữu – Hiển thị thông tin chủ sở hữu trên màn hình khóa.

Bộ định thời khóa màn hình – Đặt thời gian khóa sau khi màn hình hết thời gian chờ.

Nút nguồn khóa ngay lập tức – Đặt khóa màn hình khi nhấn nút nguồn.

Rung khi chạm vào – Cho phép bạn đặt phản hồi rung khi chạm vào màn hình điện thoại.

< **Cử chỉ** >

Di chuyển các mục ở màn hình chủ

– Nhấn và giữ một mục và nghiêng thiết bị để di chuyển mục đó trong phạm vi màn hình chủ hoặc ứng dụng.

Độ nhạy nghiêng – Kiểm tra và điều chỉnh độ nhạy của bộ cảm biến xoay cho màn hình chủ và các ứng dụng.

Cuộc gọi đến im lặng – Lật thiết bị để tắt tiếng cuộc gọi đến.

Báo lại hoặc tắt chuông báo – Lật thiết bị để báo lại hoặc tắt chuông báo.

Tạm dừng video – Lật thiết bị để tạm dừng phát video.

Trợ giúp – Trợ giúp cho các chức năng thao tác.

< **Bộ nhớ** >

BỘ NHỚ TRONG – Xem dữ liệu sử dụng bộ nhớ trong.

THẺ SD – Kiểm tra tổng dung lượng trống trên thẻ SD. Nhấn Tháo thẻ nhớ SD để tháo an toàn. Xóa thẻ SD nếu bạn muốn xóa tất cả dữ liệu khỏi thẻ SD.

< **Tiết kiệm Pin** >

Tại đây, bạn có thể quản lý pin và kiểm tra các mục tiết kiệm pin. Ngoài ra, bạn có thể kiểm tra việc sử dụng pin.

< **Ứng dụng** >

Bạn có thể xem và quản lý các ứng dụng.

Cá nhân

< **Tài khoản & đồng bộ hóa** >

Cho phép các ứng dụng đồng bộ hóa dữ liệu trong nền, cho dù bạn có đang làm việc tích cực với dữ liệu đó hay không. Bỏ chọn cài đặt này có thể tiết kiệm pin và giảm (nhưng không loại bỏ) sử dụng dữ liệu.

< **Truy cập vị trí** >

Truy cập vào vị trí của tôi – Nếu bạn chọn dịch vụ vị trí của Google, điện thoại của bạn xác định vị trí gần đúng của bạn bằng mạng Wi-Fi và mạng di động. Khi bạn chọn tùy chọn này, điện thoại sẽ hỏi xem bạn có đồng ý cho phép Google sử dụng vị trí của bạn khi cung cấp các dịch vụ này hay không.

Cài đặt

Các vệ tinh GPS – Nếu bạn chọn vệ tinh GPS, điện thoại sẽ xác định vị trí của bạn chính xác ở mức đường phố.

Định vị qua mạng di động và qua kết nối Wi-Fi – Cho phép các ứng dụng sử dụng dữ liệu từ các nguồn như Wi-Fi và mạng di động để xác định vị trí gần đúng của bạn.

< **Bảo Mật** >

Thiết lập khóa thẻ SIM – Thiết lập khóa thẻ SIM hoặc thay đổi PIN của SIM.

Việc gõ mật khẩu có thể bị nhìn thấy – Hiện thị mật khẩu khi bạn nhập.

Quản trị viên thiết bị – Xem hoặc hủy kích hoạt quản trị viên thiết bị.

Nguồn không xác định – Cài đặt mặc định để cài đặt các ứng dụng phi thương mại.

Tính năng ủy nhiệm được tin cậy – Hiện thị chứng nhận CA đáng tin cậy.

Cài đặt từ bộ lưu trữ – Chọn để cài đặt các chứng chỉ mã hóa từ thẻ SD của bạn.

Xóa thông tin xác thực – Xóa tất cả các chứng chỉ.

< **Ngôn ngữ & đầu vào** >

Sử dụng cài đặt Ngôn ngữ & thông tin nhập để chọn ngôn ngữ cho văn bản trên điện thoại và để cấu hình bàn phím ảo, bao gồm các từ bạn đã thêm vào từ điển.

< **Sao lưu & thiết lập lại** >

Thay đổi cài đặt để quản lý cài đặt và dữ liệu của bạn.

Sao lưu dữ liệu của tôi – Đặt để sao lưu cài đặt và dữ liệu ứng dụng của bạn vào máy chủ Google.

Tài khoản dự phòng – Đặt để sao lưu tài khoản của bạn.

Khôi phục tự động – Đặt để khôi phục cài đặt và dữ liệu ứng dụng của bạn khi ứng dụng được cài đặt lại vào thiết bị của bạn.

Xác lập lại dữ liệu gốc – Xác lập lại cài đặt của bạn về giá trị mặc định ban đầu và xóa tất cả dữ liệu của bạn. Nếu bạn xác lập lại điện thoại bằng cách này, bạn được nhắc nhập lại cùng thông tin như khi bạn khởi động Android lần đầu.

Hệ thống

< **Ngày & Giờ** >

Sử dụng cài đặt **Ngày & Giờ** để cách hiển thị ngày. Bạn cũng có thể sử dụng các cài đặt này để đặt giờ và múi giờ riêng thay vì lấy giờ hiện tại từ mạng di động.

< **Truy cập** >

Sử dụng cài đặt **Truy cập** để cấu hình plug-in truy cập mà bạn đã cài đặt trên điện thoại.

LƯU Ý: Yêu cầu plug-in bổ sung.

< **Kết nối PC** >

Loại kết nối USB – Bạn có thể đặt chế độ mong muốn (**Chỉ sạc Pin**, **Đồng bộ đĩa phương tiện (MTP)**, **Điểm truy cập**

Internet qua dây USB, Phần mềm LG hoặc Máy Ảnh (PTP).

Đề nghị kết nối – Hài chế độ kết nối USB khi kết nối với máy tính.

Trợ giúp – Trợ giúp dành cho kết nối.

Thiết lập trên màn hình điện thoại – Hiển thị màn hình và điều khiển điện thoại từ máy tính được thực hiện qua kết nối USB, Bluetooth hoặc Wi-Fi.

PC Suite kết nối Wi-Fi – Chọn tùy chọn này để sử dụng **LG PC Suite** với kết nối Wi-Fi.

< **Giới thiệu về điện thoại** >

Xem thông tin pháp lý và kiểm tra trạng thái của điện thoại cũng như phiên bản phần mềm.

Cập nhật phần mềm điện thoại

Cập nhật phần mềm điện thoại di động LG từ Internet

Để biết thêm thông tin về sử dụng chức năng này, vui lòng truy cập <http://update.lgmobile.com> hoặc <http://www.lg.com/common/index.jsp> → chọn quốc gia và ngôn ngữ.

Tính năng này cho phép bạn cập nhật phần mềm cơ sở của điện thoại lên phiên bản mới hơn một cách thuận tiện từ Internet mà không cần đến trung tâm bảo hành. Tính năng này sẽ chỉ có nếu và khi LG tạo ra phiên bản phần mềm cơ sở mới

hơn cho thiết bị của bạn.

Vì cập nhật phần mềm cơ sở dành cho điện thoại di động yêu cầu sự chú ý hoàn toàn của người dùng về thời gian của quá trình cập nhật, vui lòng đảm bảo bạn đã kiểm tra các hướng dẫn và chú ý xuất hiện tại mỗi bước trước khi tiếp tục. Chú ý rằng việc tháo rời cáp dữ liệu USB hoặc pin trong quá trình nâng cấp có thể làm hư hỏng điện thoại di động của bạn.

LƯU Ý: LG bảo lưu quyền tạo ra bản cập nhật phần mềm cơ sở cho các kiểu được lựa chọn của riêng hãng và không đảm bảo tính sẵn có của phiên bản phần mềm cơ sở mới hơn cho tất cả kiểu điện thoại.

Cập nhật Phần mềm Điện thoại Di động LG qua Môi trường không dây (Over-the-Air - OTA)

Tính năng này cho phép bạn cập nhật phần mềm của điện thoại lên phiên bản mới hơn một cách tiện lợi qua OTA mà không cần kết nối với cáp dữ liệu USB. Tính năng này sẽ chỉ có nếu và khi LG tạo ra phiên bản phần mềm cơ sở mới hơn cho thiết bị của bạn.

Trước tiên, bạn có thể kiểm tra phiên bản phần mềm trên điện thoại di động: **Cài đặt > Giới thiệu về điện thoại > Cập nhật phần mềm > Kiểm tra ngay để cập nhật.** Bạn cũng có thể trì hoãn cập nhật trong

Cài đặt

1 giờ, 4 giờ, 8 giờ hoặc một ngày. Trong trường hợp này, ứng dụng sẽ thông báo để bạn cập nhật khi đến giờ. Bạn cũng có thể sắp xếp lại cập nhật theo cách thủ công.

LƯU Ý: Dữ liệu cá nhân của bạn từ bộ nhớ trong của điện thoại—bao gồm cả thông tin về tài khoản Google và bất kỳ tài khoản nào khác của bạn, dữ liệu và cài đặt hệ thống/ ứng dụng, mọi ứng dụng đã tải xuống và giấy phép DRM—có thể bị mất trong quá trình cập nhật phần mềm của điện thoại. Do đó, LG khuyên bạn sao lưu dữ liệu cá nhân của mình trước khi cập nhật phần mềm điện thoại. LG không chịu trách nhiệm về việc mất mát dữ liệu cá nhân.

LƯU Ý: Tính năng này phụ thuộc vào nhà cung cấp dịch vụ mạng, vùng và quốc gia của bạn.

DivX HD

GIỚI THIỆU VỀ VIDEO DIVX: DivX® là một định dạng video kỹ thuật số do DivX, LLC, một công ty con của Tập đoàn Rovi, chế tạo. Đây là thiết bị DivX Certified® chính thức phát video DivX. Truy cập divx.com để biết thêm thông tin và công cụ phần mềm để chuyển đổi các tệp của bạn sang video DivX.

GIỚI THIỆU VỀ DIVX VIDEO-ON-DEMAND:

Thiết bị DivX Certified® này phải được đăng ký để phát các phim DivX Video-on-Demand (VOD) đã mua. Để lấy mã đăng ký, tìm mục DivX VOD trong menu thiết lập thiết bị. Truy cập vod.divx.com để biết thêm thông tin về cách hoàn tất đăng ký.






DivX Certified® để phát video DivX® với chất lượng HD 720P, bao gồm cả nội dung phải trả phí

DivX®, DivX Certified® và các logo liên kết là thương hiệu của Tập đoàn Rovi hoặc các công ty con của Tập đoàn và được sử dụng theo giấy phép.

LG On-Screen Phone

On-Screen Phone cho phép bạn xem màn hình điện thoại di động từ máy tính thông qua kết nối USB hoặc Bluetooth. Bạn cũng có thể dùng chuột hoặc bàn phím để điều khiển điện thoại di động từ máy tính.

Biểu tượng On-Screen Phone

-  Kết nối điện thoại di động với máy tính hoặc ngắt kết nối.
-  Khởi chạy LG Home Panorama hoặc thay đổi các tùy chọn On-Screen Phone.
-  Thoát chương trình On-Screen Phone.
-  Thu nhỏ cửa sổ On-Screen Phone.
-  Thu nhỏ cửa sổ On-Screen Phone.

Tính năng On-Screen Phone

- Truyền và điều khiển thời gian thực: hiển thị và điều khiển màn hình điện thoại di động khi đã kết nối với máy tính.
- Điều khiển chuột: cho phép bạn điều khiển điện thoại di động của mình bằng cách sử dụng chuột để bấm và kéo trên màn hình máy tính.
- Nhập văn bản bằng bàn phím: cho phép bạn soạn tin nhắn văn bản hoặc ghi chú bằng bàn phím máy tính.
- Truyền tệp (điện thoại di động sang máy tính): gửi tệp từ điện thoại di động (ví dụ: ảnh, video, nhạc và tệp Polaris Office) sang máy tính. Chỉ cần nhấp

chuột phải và tệp bạn muốn gửi đến PC và nhấp "Lưu vào PC".

- Truyền tệp (máy tính sang điện thoại di động): gửi tệp từ máy tính sang điện thoại di động. Chỉ cần chọn các tệp bạn muốn truyền, kéo và thả tệp vào cửa sổ On-Screen Phone. Các tệp gửi đi được lưu trong thẻ SD trong.
- Thông báo sự kiện thời gian thực: nhấp để thông báo cho bạn cuộc gọi đến hoặc tin nhắn văn bản/đa phương tiện.

Cách cài đặt On-Screen Phone trên máy tính

- 1 Truy cập LG Home (www.lg.com) và chọn quốc gia của bạn.
- 2 Tới Hỗ trợ > Hỗ trợ Điện thoại Di động > Chọn kiểu (LG-P880) > Bấm OSP (On-Screen Phone) để tải xuống. Bạn có thể cài đặt On-Screen Phone trên máy tính.

Phụ kiện

Các phụ kiện này có sẵn để sử dụng với LG-P880. (Các mục được mô tả bên dưới có thể là tùy chọn).

Bộ sạc du lịch



Pin



Tai nghe stereo



Cáp dữ liệu

Kết nối LG-P880 và máy tính.



Hướng dẫn sử dụng

Tìm hiểu thêm về LG-P880.



LG Tag+



LƯU Ý:

- Luôn sử dụng các phụ kiện chính hiệu của LG.
- Nếu không, bạn có thể không được bảo hành.
- Phụ kiện có thể khác nhau tùy từng khu vực.

Sửa lỗi

Chương này liệt kê một số vấn đề mà bạn có thể gặp phải trong khi sử dụng điện thoại của mình. Một số vấn đề buộc bạn phải gọi cho nhà cung cấp dịch vụ nhưng hầu hết các vấn đề đều đơn giản để bạn có thể tự sửa chữa.

Tin nhắn	Nguyên nhân	Biện pháp khắc phục
Lỗi SIM	Không có thẻ SIM trong điện thoại hoặc lắp thẻ không đúng.	Đảm bảo rằng thẻ SIM được lắp đúng.
Không có kết nối mạng/ Mất mạng	Tín hiệu yếu hoặc bạn nằm ngoài vùng phủ sóng của mạng.	Di chuyển tới cửa sổ hoặc vào một khu vực thoáng. Kiểm tra bản đồ phủ sóng của nhà điều hành mạng.
	Nhà điều hành áp dụng các dịch vụ mới.	Kiểm tra xem thẻ SIM đã được sử dụng hơn 6~12 tháng hay chưa. Nếu đã qua thời gian này, thay đổi SIM của bạn tại chi nhánh gần nhất của nhà cung cấp dịch vụ mạng. Liên hệ với nhà cung cấp dịch vụ của bạn.
Các mã không khớp	Để thay đổi mã bảo mật, bạn sẽ cần phải xác nhận mã mới bằng cách nhập lại mã đó.	Nếu bạn quên mã này, hãy liên hệ với nhà cung cấp dịch vụ.
	Hai mã mà bạn đã nhập không khớp với nhau.	
Không thể đặt bất kỳ ứng dụng nào	Không được nhà cung cấp dịch vụ hỗ trợ hoặc yêu cầu đăng ký.	Liên hệ với nhà cung cấp dịch vụ.
Không thể gọi	Lỗi quay số	Mạng mới không được phép.
	Lắp thẻ SIM mới.	Kiểm tra các hạn chế mới.
	Đã đạt đến giới hạn cước phí trả trước.	Liên hệ nhà cung cấp dịch vụ hoặc xác lập lại giới hạn bằng PIN2.

Sửa lỗi

Tin nhắn	Nguyên nhân	Biện pháp khắc phục
Không thể bật điện thoại	Phím On/Off được nhấn quá nhanh.	Nhấn phím On/Off trong ít nhất hai giây.
	Pin chưa được sạc.	Sạc pin. Kiểm tra chỉ báo sạc trên màn hình.
	Điểm tiếp xúc của pin bị bẩn.	Vệ sinh điểm tiếp xúc của pin.
Lỗi sạc pin	Pin chưa được sạc.	Sạc pin.
	Nhiệt độ bên ngoài quá nóng hoặc quá lạnh.	Đảm bảo điện thoại đang sạc ở nhiệt độ bình thường.
	Vấn đề về tiếp xúc	Kiểm tra bộ sạc và kết nối với điện thoại. Kiểm tra điểm tiếp xúc của pin và lau sạch chúng nếu cần.
	Không có điện áp	Cắm bộ sạc vào ổ cắm khác.
	Lỗi bộ sạc	Thay thế bộ sạc.
	Bộ sạc không đúng	Chỉ sử dụng các phụ kiện LG gốc.
	Lỗi pin	Thay pin.
Số không được phép	Chức năng số quay cố định đang bật.	Kiểm tra menu Cài đặt và tắt chức năng.
Không thể nhận / gửi SMS & ảnh	Bộ nhớ đầy	Xóa một số tin nhắn khỏi điện thoại.
Không mở được tệp	Định dạng tệp không được hỗ trợ	Kiểm tra định dạng tệp có thể được hỗ trợ.
Thẻ SD không hoạt động	Chỉ hỗ trợ hệ thống tệp FAT16, FAT32	Kiểm tra hệ thống tệp của thẻ SD qua đầu đọc thẻ hoặc định dạng thẻ SD sử dụng điện thoại.
Màn hình không bật khi tôi nhận cuộc gọi.	Sự cố với cảm biến tình trạng gần kề	Nếu bạn sử dụng băng dính hay hộp bảo vệ, hãy kiểm tra xem liệu phần băng dính hay hộp đó có che khu vực xung quanh cảm biến không. Đảm bảo khu vực xung quanh cảm biến được sạch sẽ.

Tin nhắn	Nguyên nhân	Biện pháp khắc phục
Không có âm thanh	Chế độ rung	Kiểm tra tình trạng cài đặt của menu âm thanh để đảm bảo bạn không ở chế độ rung hoặc im lặng.
Treo hoặc không hoạt động	Sự cố phần mềm không ổn định	Tháo pin rồi lắp lại pin và bật điện thoại.
		Thử thực hiện cập nhật phần mềm qua trang web.

Chương trình xác nhận thời hạn Bảo hành điện thoại di động của LG

Kính gửi quý khách hàng,

Để bảo vệ quý khách hàng tránh mua phải những sản phẩm hàng nhái hoặc hàng xách tay trên thị trường và đảm bảo quý khách hàng nhận được dịch vụ bảo hành chính hãng đối với sản phẩm LG Việt Nam, cũng như tạo sự thuận tiện cho quý khách, chúng tôi thực hiện chương trình **xác nhận thời hạn bảo hành đối với sản phẩm điện thoại di động LG.**

Sau khi quý khách mua sản phẩm và sử dụng máy liên tục (khoảng 4 giờ) với cùng một thẻ SIM, tin nhắn chứa số IMEI sẽ được gửi tự động từ điện thoại của quý khách đến hệ thống của LG. Hệ thống sẽ xác thực sản phẩm chính hãng thông qua số IMEI, và gửi lại quý khách một tin nhắn xác nhận thời hạn bảo hành của sản phẩm với nội dung như sau:

“Chào mừng quý khách đến với dịch vụ bảo hành thông minh của LG. Thời hạn bảo hành của máy ‘Số IMEI’ tu ngày ‘Thời điểm kích hoạt dịch vụ bảo hành’ đến ngày ‘Thời điểm hết hạn bảo hành’”

Thời điểm quý khách bắt đầu sử dụng máy chính là thời điểm kích hoạt dịch vụ bảo hành.

Khách hàng chịu phí chỉ một tin nhắn nhằm mục đích xác thực này, nhưng đổi lại, sản phẩm của quý khách sẽ được cộng thêm một tháng bảo hành (thời hạn bảo hành 13 tháng kể từ ngày kích hoạt dịch vụ bảo hành). Đối với phụ kiện, chỉ áp dụng thời hạn bảo hành 6 tháng kể từ ngày kích hoạt dịch vụ bảo hành. Khi áp dụng chương trình này, không cần phiếu bảo hành, quý khách vẫn nhận được dịch vụ bảo hành chính hãng đối với sản phẩm điện thoại di động LG trong thời gian bảo hành.

QUY CHẾ BẢO HÀNH

1. Các sản phẩm điện tử do Công ty điện tử LG Việt Nam sản xuất và cung cấp được bảo hành tại các Trung tâm bảo hành của Công ty.
2. Các trường hợp sau đây sẽ bị từ chối bảo hành hoặc sẽ được sửa chữa có tính phí:
 - a. Không sử dụng theo đúng chỉ dẫn trong sách hướng dẫn kèm theo máy.
 - b. Hư hỏng do các điều kiện khách quan (tai nạn, thiên tai, bị rơi, va chạm, để máy nơi ẩm ướt, nước vào, bụi bặm, nhiệt độ cao...)
 - c. Tem niêm phong trên máy, phụ kiện bị bong, rách hoặc mất. Khách hàng tự ý can thiệp vào bên trong máy, nạp sai phần mềm. Máy phụ kiện bị sửa chữa, sử dụng phụ kiện không đúng chủng loại của công ty LG.
 - d. Máy, phụ kiện bị xước, nứt, vỡ, có mùi lạ, có vết mốc, rỉ, cháy nổ, máy hoặc thẻ SIM đang trong tình trạng bị khóa mã bảo vệ.
 - e. Máy hết thời gian bảo hành.

3. Quy chế bảo hành chỉ được áp dụng tại Việt Nam.

Thời gian bảo hành:

Sản phẩm của công ty LG Việt Nam được bảo hành:

Thần máy: 12 tháng kể từ ngày mua hoặc 15 tháng kể từ ngày sản xuất

Pin và sạc: 06 tháng kể từ ngày mua hoặc 09 tháng kể từ ngày sản xuất

Mọi thắc mắc và yêu cầu tư vấn, xin Quý khách vui lòng liên hệ:

PHÒNG DỊCH VỤ

1800 1503

hoặc

04. 62 690 640

Để biết thông tin chi tiết về sản phẩm và quy chế bảo hành

Quý khách có thể truy cập Website: www.lge.com/vn



LG-P880 User Guide

This guide helps you to get started using your phone.

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2013 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Play Store™ are trademarks of Google, Inc.



Contents

Guidelines for safe and efficient use	4	Calls	35
Getting to know your phone	10	Making a call.....	35
Device components.....	17	Calling your contacts.....	35
QuickMemo function.....	19	Answering and rejecting a call	35
Installing the SIM card and battery.....	21	Adjusting call volume	35
Charging your phone.....	22	Making a second call	35
Using the memory card.....	22	Viewing your call logs.....	36
Locking and unlocking the screen.....	23	Call settings	36
Secure your lock screen	24	Contacts	37
Your Home screen	25	Searching for a contact	37
Touch screen tips.....	25	Adding a new contact.....	37
Home.....	25	Favourite contacts.....	37
Customising the Home screen	26	Moving contacts from your Old Device to your New Device.....	38
Returning to recently-used applications.....	26	Messaging	39
Notification drawer.....	26	Sending a message	39
Viewing the status bar.....	27	Threaded box	39
Onscreen keyboard.....	28	Changing your message settings	39
Entering accented letters.....	28	E-mail	40
Google account set up	29	Managing an email account.....	40
Connecting to Networks and Devices	30	Working with account folders.....	40
Wi-Fi.....	30	Composing and sending email	40
Connecting to Wi-Fi networks	30	Camera	42
Bluetooth.....	30	Getting to know the viewfinder	42
Sharing your phone's data connection.....	31	Using the advanced settings	43
To rename or secure your portable hotspot.....	32	Taking a quick photo	44
Using SmartShare	33	Once you've taken a photo	44
		Viewing your saved photos	45

Video camera	46	Backup	54
Getting to know the viewfinder	46	Back up your smart phone data	55
Using the advanced settings	47	Scheduling automatic backups	55
Recording a quick video	47	Restoring smart phone data.....	56
After recording a video	47	Google+.....	57
Watching your saved videos	48	Voice Search	57
Adjusting the volume when viewing a video.....	48	Downloads	57
Multimedia	49	The web	58
Video Player	49	Internet	58
Playing a video	49	Using the web toolbar	58
Gallery	49	Using options.....	58
Music.....	49	Chrome.....	58
Transferring music files using Media sync (MTP).....	49	Settings	60
Playing a song	50	WIRELESS & NETWORKS.....	60
FM Radio.....	51	DEVICE.....	62
Searching for stations	51	PERSONAL	64
LG SmartWorld	52	SYSTEM	65
How to Get to LG SmartWorld from Your Phone	52	Phone software update	65
How to use LG SmartWorld.....	52	DivX HD.....	66
Utilities	53	LG On-Screen Phone	68
Setting your alarm.....	53	On-Screen Phone icons.....	68
Using your calculator.....	53	Accessories	69
Adding an event to your calendar.....	53	Troubleshooting	70
Voice Recorder	53		
Task Manager.....	54		
Polaris Office 4	54		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-P880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.618 W/kg (10g) and when worn on the body is 0.594 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

Guidelines for safe and efficient use

- Do not tap the screen with a sharp object as it may damage the phone.
 - Do not expose the phone to liquid or moisture.
 - Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
 - Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
 - Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- Do not use pacemakers, for example, in your breast pocket.
 - Some hearing aids might be disturbed by mobile phones.
 - Minor interference may affect TVs, radios, PCs etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone

you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

Guidelines for safe and efficient use

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-P880** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at **<http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>**

Ambient temperatures

Max: +50°C (discharging),
+45°C (charging)

Min: -10°C

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>
All referred licence terms, disclaimers and notices are available for download with the source code.

Contact office for compliance of this product :

LG Electronics Inc.
EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

Getting to know your phone


Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** from the DEVICE category.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.


2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to have running constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

To check the battery power level:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Battery**.

The battery status (charging or not charging) and battery level (percentage charged) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Battery** > **Battery use**.

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Using folders

You can combine several app icons in a folder. Drop one app icon over another on a home screen, and the two icons will be combined.

4. Before installing an open source application and OS

WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

Getting to know your phone

5. Using unlock pattern

Set unlock pattern to secure your phone. This opens a screen that guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure if you forgot pattern lock.

Caution: Create a Google account before setting an unlock pattern and remember Backup PIN you created while creating Pattern lock.

WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

<If you have forgotten pattern>

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the Forgot Pattern button on the bottom of the screen. You are then required to log in with your Google Account or you have to enter Backup PIN which you entered while creating Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

<If you have forgotten PIN or Password>

If you forgot your PIN or Password, you need to do hard reset.

Caution: If you perform a hard reset, all user applications and user data are deleted.

Note: If you have not logged in Google Account and forgot Unlock Pattern, you need to enter Backup PIN.

6. Using the hard reset (Factory reset)

If your phone does not restore to the original condition, use a Hard Reset (Factory Reset) to initialise it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock key + Volume Down key**.
- 3 Once LG Logo appears on the screen, release all Keys.
- 4 After some seconds, allow you to select factory reset function in the Android system recovery utility.
- 5 Scroll the list by Volume keys and select it by **Power/Lock key**.

WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to back up any important data before performing a Hard Reset.

7. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

To return to view list recently used applications:

Simply press and hold the **Home** key.

To stop applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** > **Running** from the DEVICE
- 2 Scroll and touch the desired application and touch **Stop** to stop it.

Getting to know your phone

8. Installing PC Software (LG PC Suite)

"LG PC Suite" PC Application is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Application, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device.
- Play multimedia contents of your PC from other device.

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC application.

Installing "LG PC Suite" PC Application

"LG PC Suite" PC application can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > Mobile Phone Support >** Select the Model (LG-P880).
- 3 Click **PC Sync** from **Download**, and click **WINDOW PC Sync Download** to download "LG PC Suite" PC software.

System Requirements for "LG PC Suite" PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect a LG device and PC and installed automatically when you install "LG PC Suite" PC software.

9. Synchronising your phone to a Computer

Data from your device and PC can be synchronised easily with "LG PC Suite" PC application for your convenience. Contacts, schedules, and bookmarks can be synchronised.


The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 After connection, run the program and select the device section from the category on the left side of the screen.
- 3 Click [Personal information] to select.
- 4 Select the checkbox of contents to synchronise and click the **Sync** button.


10. Synchronising your phone to a computer via USB

NOTE: To synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC.


Please refer to previous pages to install LG PC Suite.

- 1 Touch  > **Apps** tab > **Settings** > **Storage** from the DEVICE to check out the storage media. (If you want to transfer files from or to a memory card, insert a memory card into the phone.)
- 2 Connect the phone to your PC using the USB cable.
- 3 USB connection mode list will appear, and select **Media sync (MTP)** option.
- 4 Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
- 5 Copy the files from your PC to the drive folder.
- 6 Select Charge only option to disconnect the phone.

Getting to know your phone

TIP! To use the microSD card on your phone again, you need to open the notification drawer and touch  > **Charge only**.

To disconnect your phone from the computer:

Open the notification drawer and touch  > **Charge only** to disconnect your phone from the computer safely.

11. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-P880 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

12. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:


Remove the battery, reinsert it, then turn the phone on.

OR

Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

Device components

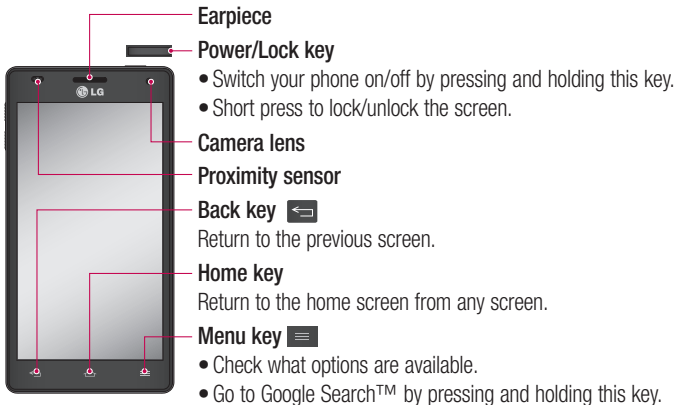

NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.


Getting to know your phone



Volume keys


- **In the home screen:** Control ringer volume.
- **During a call:** Control your earpiece volume.
- **When playing a track:** Control volume continuously.

Tip! Once press the volume up and down keys simultaneously, you can use QuickMemo function.

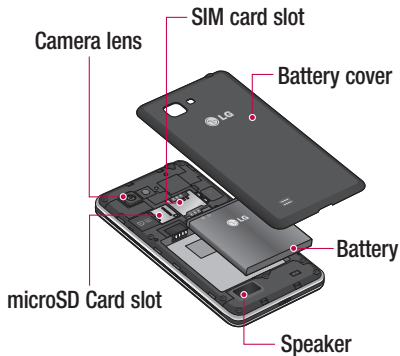

QuickMemo function

Use the **QuickMemo function** to practically and efficiently create memos during a call, with a saved picture or on the current phone screen.

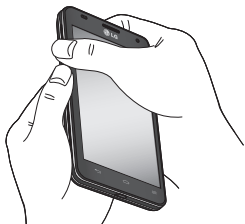


OR



OR

Touch and slide the status bar downward and touch .

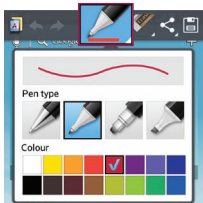

- 1 Enter the QuickMemo function screen by pressing both the Volume up and down keys for one second on the screen you want to capture.

- 2 Select the desired menu option from **Pen type**, **Colour**, **Eraser** and create a memo.

Getting to know your phone









- 3 Touch  in the Edit menu it to save the memo with the current screen.

NOTE: Please use a fingertip while using the QuickMemo function. Do not use your fingernail.

Using the QuickMemo options

You can easily use the QuickMenu options when using the QuickMemo function.

	Selects whether to use the background screen or not.
	Undo or Redo.
	Selects the pen type and the colour.
	Erases the memo that you created.
	Touch to send your memo to others or share it via social network services.
	Saves the memo with the current screen in the Gallery .


Viewing the saved QuickMemo

Touch **Gallery** and select the QuickMemo album.


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 To remove the battery cover, hold the phone firmly in one hand. With your other hand, lift off the battery cover with your thumbnail as shown in figure.

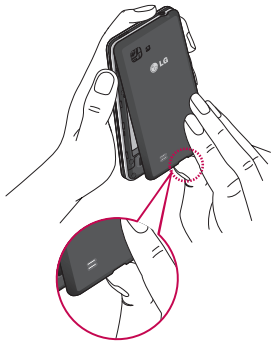

- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

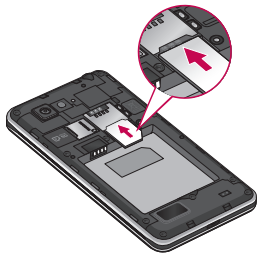

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).

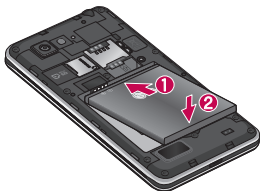

Getting to know your phone

- 4 Align the battery cover over the battery compartment (1) and press it down until it clicks into place (2).



Charging your phone

The charger connector is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.



NOTE

- The battery must be fully charged initially to improve battery lifetime.
- Do not open the battery cover during the charging your phone.


Using the memory card

To insert a memory card:

Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

To remove the memory card safely:

Touch  > **Apps** tab > **Settings** > **Storage** from the **DEVICE** > **Unmount SD card** > **OK**.

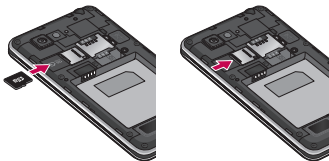

NOTE: The LG-P880 supports memory cards up to 64 GB.


⚠ WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may get corrupted.

To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.


NOTE: All files on your memory card are deleted when it is formatted.

- 1 On the home screen, touch  > **Apps** tab to open the menu.
- 2 Scroll and touch **Settings** > **Storage**.
- 3 Touch **Unmount SD card** and touch **OK** to confirm it.
- 4 Touch **Erase SD card** > **Erase SD card** > **Erase everything**, then confirm your choice.
- 5 If you have set a pattern lock, input the pattern lock then select **Erase everything**.


NOTE: If there is content on your memory card, the folder structure may be different after formatting as all the files will be deleted.

Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the LG-P880, press the **Power/Lock key**  to lock your phone.

If there are any programs running when you set lock screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock key** . The lock screen will appear. Touch and slide the lock screen in any direction to unlock your home screen. The last screen you viewed will open.

Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

To set an Unlock Pattern, PIN or Password for the first time:

- Touch  > **Apps** tab > **Settings** > **Lock screen** > **Select screen lock** > **None, Swipe, Face Unlock, Pattern, PIN** or **Password**.

NOTE:

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you cannot recall your unlock pattern:

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern** button. You are then required to log in with your Google account to unlock your phone.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – To choose a menu/option or open an application, touch it.

Touch and hold – To open an options menu or grab an object you want to move, touch and hold it.

Drag – To scroll through a list or move slowly, drag across the touch screen.

Flick – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home

Simply swipe your finger to the left or right to view the panels. You can customise each panel with Apps, Downloads, Widgets and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.

On your home screen, you can view menu icons at the bottom of the screen. Menu icons provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch screen dialpad to make a call.

 Touch the **Contacts** icon to open your contacts.

 Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.


 Touch the **Apps** icon at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

Your Home screen

Customising the Home screen

You can customise your home screen by adding Apps, Downloads, Widgets or Wallpapers. For more convenience using your phone, add your favourite apps and widgets to the home screen.

To add items on your home screen:

- 1 Touch and hold the empty part of the home screen.
Or touch  at the top of the right side.
- 2 In the Add Mode menu, select items you want to add. You will then see added items on the home screen.
- 3 Drag it to the location you want and lift your finger.

To remove an item from the home screen:

- **Home screen** > touch and hold the icon you want to remove > drag it to 

TIP! To add an application icon to the home screen from the Apps menu, touch and hold the application you want to add.

Returning to recently-used applications



- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to your current application.

Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger.

Touch  >  to manage the Notifications. Here you can check and manage QuickMemo, Sound profile, Wi-Fi, Bluetooth, NFC, Accounts & sync, Airplane mode, Auto-rotate screen, Data enabled, GPS or Portable Wi-fi hotspot.

Viewing the status bar

The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.



Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on

Icon	Description
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	NFC is on
	Vibrate mode
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	Data is syncing
	New Gmail

Your Home screen



Icon	Description
	New Google Talk message
	New message
	Song is playing
	FM radio turned on in the background
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

Onscreen keyboard

You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double-tap for all caps.

  Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á"). For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages. Then select the special character you want.

Google account set up


When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

OR

- Touch  > **Apps** tab > select a Google application, such as **Gmail** > select **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch .

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features, you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS & NETWORKS
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.

- 3 Tap Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 After connecting to a Wi-Fi network, the status bar displays icon that indicate Wi-Fi status.


Bluetooth

You can use Bluetooth to send data by running a corresponding application as on most other mobile phones.

TIP! With LG-P880, you can enjoy Bluetooth high speed. If the device you want to share files which also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depends on the device. Please check the device's settings with their service provider.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Touch  > **Apps** tab > **Settings** > Set **Bluetooth** to **ON** from the WIRELESS & NETWORKS
- 2 Tap **Bluetooth** menu again. Your phone will scan for and display the IDs of all available Bluetooth in-range devices. If the device you want to pair which isn't on the list, make sure the target device is set to be discoverable, then tap **Search for devices** again.
- 3 Choose the device you want to pair up with from the list.

Once the pairing is successful, your device will connect to the device.

Sending pictures using Bluetooth

- 1 Select a **Picture** >  > **Bluetooth**
- 2 Check whether **Bluetooth** is **ON**, then select **Search for devices**.
- 3 Choose the device you want to send data to from the list.

Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than a single device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

To change Portable Wi-Fi hotspot settings:

- Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Portable Wi-Fi hotspot** > Choose options that you want to adjust

TIP!

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

- The **Set up Wi-Fi hotspot** dialog box will open.
- You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **set up Wi-Fi hotspot** dialog box. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.

5 Touch **Save**.

ATTENTION!

If you set the security option as **Open**, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

To rename or secure your portable hotspot


You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the home screen, touch  > **Apps** tab > **Settings**
- 2 Touch **More** from the WIRELESS & NETWORKS and select **Portable Wi-Fi hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is ticked.
- 4 Touch **Set up Wi-Fi hotspot**.

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a Wi-Fi network. Both devices must be DLNA certified to support this feature.

To turn SmartShare on and allow sharing contents

- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Press  and select **Settings**.
- 3 Touch Discoverable checkbox to turn off.
 - Touch **Always accept request** to turn on if you would like to automatically accept sharing requests from other devices.
 - Touch **Receive files** to turn on if you would like to automatically allow upload files to my phone from other devices.
- 4 Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos** and **Music**.
- 5 **SmartShare** is now activated and ready to share contents.

To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

NOTE: Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

- 1 Touch the top right button to or select the device from renderer lists.
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch a content thumbnail or press the **Menu** key and select **Play** button.

To share contents from your phone to your renderer device(e.g. TV)

NOTE: Make sure that your renderer device is properly configured.

- 1 While browsing your pictures or videos using the **Gallery** application, touch  to select files. Then you will be able to select multiple files to be shared.


Connecting to Networks and Devices

- 2 Touch **Share** on the menu and select the **SmartShare**.
- 3 **SmartShare** is automatically launched with the selected files.
- 4 Select the device from renderer lists to play the files.

NOTE: Follow the similar steps to use the Music Player, Camera and Video player to share contents.

Notice: Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.


To download contents from remote content library

- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail then touch **Download menu key**.

Notice: A few types of contents are not supported.

To upload contents from my phone to remote content library





NOTE: Make sure that SD card is correctly mounted and the Receive files in settings menu is checked.


- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Touch the top left button and select My phone.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch the **Upload menu key**.
- 5 Select a device of remote content library to be uploaded.

Notice: Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.


Calls

Making a call


- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search contacts**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When you receive a call in Lock state, hold and slide the  to answer incoming call.

Hold and slide the  to Decline an incoming call.

Hold and slide the **Quick msg** icon from the bottom if you want to send one.





TIP! Decline with message

You can send a message quickly using this function. This is useful if you need to reject a call with message during a meeting.


Adjusting call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

Making a second call

- 1 During your first call, touch **Menu** > **Add call** and dial the number. Also, you can go recent dialled list by touching  or can search contacts by touching  and select the number you want to call.
- 2 Touch  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge call** to make a conference call.

Calls

- 5 To end active calls, touch **End** or press Home Key and slide the notification bar down and select **End call** icon .

NOTE: You are charged for each call you make.

Viewing your call logs

On the home screen, touch  and choose the **Call logs** tab .


View a complete list of all dialed, received and missed calls.

TIP! Touch any call log entry to view the date, time and duration of the call.

TIP! Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.


- 1 On the home screen, touch .
- 2 Touch menu.
- 3 Tap **Call settings** and choose the options that you want to adjust.

Contacts

Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search contacts** and enter the contact name using the keyboard.


Adding a new contact

- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to Contacts > Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.



Favourite contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns colorful.

Removing a contact from your favourites list

- 1 Touch  to open your contacts.
- 2 Touch the  tab, select **Favourites** at the top of the list and choose a contact to view its details.
- 3 Touch the colorful star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Moving contacts from your Old Device to your New Device



Export your contacts as a CSV file from your old device to your PC using a PC sync program.

- 1 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 2 On the top menu, select **Device > Import to device > Import contacts**.
- 3 A popup window to select the file type and a file to import will appear.
- 4 On the popup, click the **Select a file** and Windows Explorer will appear.
- 5 Select the contacts file to import in Windows Explorer and click the **Open**.
- 6 Click **OK**.
- 7 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 8 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 9 Click **OK**.


Messaging


Your LG-P880 combines SMS and MMS into one intuitive, easy-to-use menu.


Sending a message

- 1 Touch  on the home screen, and touch  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

- 3 Touch **Enter message** field and start to compose your message.
- 4 Press  to open the Options menu. Choose from **Quick message**, **Insert smiley**, **Schedule sending** and **Add subject**.
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after Recipient Name/Number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Changing your message settings

Your LG-P880 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

E-mail

You can use the Email application to read emails from services other than Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide the account settings you need.

Managing an email account

The first time you open the **E-mail** application, a setup wizard opens to help you to set up an email account.

To add another email account:



- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Add account**

After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To change an email account's setting:

- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Entire Settings**

To delete an email account:

- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Remove account** > touch an account you want to delete > **Delete**

Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message

- 1 While in the **E-mail** application, touch the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
- 3 Add Cc/Bcc and add attachment files if required.
- 4 Enter the text of the message.
- 5 Touch the .
If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder


until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

TIP! When a new email arrives in the inbox, you will receive a notification by sound or vibration. Tap the email notification to stop notifications.

Camera

To open the Camera application, tap **Camera**  on the Home screen.


Getting to know the viewfinder

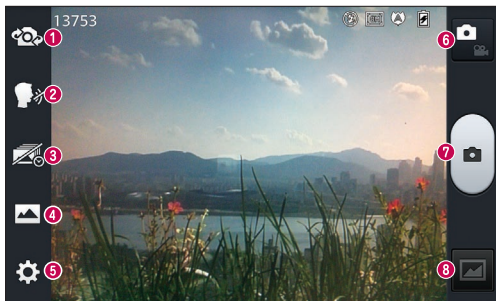













- 1 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Cheese shutter** – To take a photo, say one of the following words: Cheese, Smile, Whisky, Kimchi or LG.
- 3 Time catch shot** – Touch this icon to capture the missing moment before pressing the shutter.
- 4 Shot mode** – Choose from **Normal**, **HDR**, **Panorama** or **Continuous shot**.
- 5 Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.
- 6 Video mode** – Touch this icon to switch to video mode.
- 7 Taking a photo**
- 8 Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos while in camera mode.

NOTE: Please ensure the camera lens is clean before taking pictures.

Using the advanced settings






In the viewfinder, tap  to open the advanced options. You can change the camera settings by scrolling through the list. After selecting the option, tap the **Back** key.

	Touch if you want to change the viewfinder menu.
	Allows you to turn on the flash when taking a photo in dark conditions.
	Zoom in or out.
	Defines and controls the amount of sunlight entering the photo.
	Focuses on a specific spot.
	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	Finds the appropriate color and light settings for the current environment.

	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Applies artistic effects to your pictures.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geo tagging, you can see the pictures displayed on a map.

NOTE: This function is only available when the GPS function is active.


Camera

	Selects a shutter sound.
	Automatically shows you the picture you just took.
	Select storage to save photos.
	Restore all camera default settings.
	Touch this whenever you want to know how a function works. This icon will provide you with a quick guide.

TIP!

- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.





Taking a quick photo

- 1 Open the **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 A focus box will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Touch  to capture the photo.

Once you've taken a photo


Your captured photo will appear on the screen if Auto review is set to On (refer to Using the advanced settings).

Touch  to view the last photo you took.

	Touch to share your photo using the SmartShare function.
	Touch to take another photo immediately.
	Touch to send your photo to others or share it via social network services.
	Touch to delete the photo.

TIP! If you have an SNS account and set it up on your phone, you can share your photo with your SNS community.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Touch the Menu key  to open all advanced options.

Set image as – Touch to use the photo as a **Contact photo**, **Home screen wallpaper** or **Lock screen wallpaper**.

Move – Touch to move the photo to another place.

Copy – Touch to copy the selected photo and save it to another album.

Rename – Touch to edit the name of the selected photo.

Rotate left/right – To rotate left or right.


Crop – Crop your photo. Move your finger across the screen to select the area to be cropped.

Edit – View and edit the photo.

Slideshow – Automatically shows you the images in the current folder one after the other.

Details – Find out more information about the contents.


Viewing your saved photos

You can access your saved photos when in camera mode. Just tap the Gallery icon  and your Gallery will be displayed.

- To view more photos, scroll left or right.
- To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer together to zoom out).

Video camera

Getting to know the viewfinder

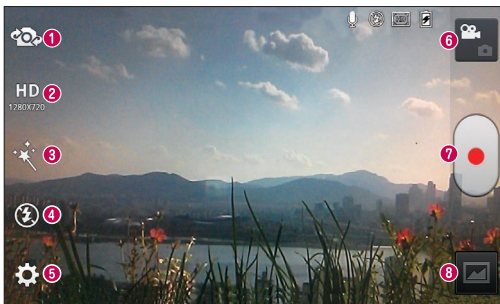











- 1 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Video size** – Touch to set the size (in pixels) of the video you are recording.
- 3 Live effect** – Live effect provides various visual effects when taking a video.
- 4 Flash** – Allows you to turn on the flash when taking a video in dark conditions.
- 5 Settings** – Touch this icon to open the settings menu.
- 6 Camera mode** – Touch this icon to switch to camera mode.
- 7 Start recording**
- 8 Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos while in video mode.

TIP!

When recording a video, place two fingers on the screen and pinch to use the Zoom function.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

	Touch if you want to change the viewfinder menu.
	Zoom in or zoom out.
	Defines and controls the amount of sunlight entering the video.
	Improves color quality in various lighting conditions.
	Choose a colour tone to use for your new view.
	Activate this to use your phone's location-based services.
	Choose Off to record a video without sound.
	Auto review automatically shows you the video you just recorded.
	Select storage to save videos.
	Restore all video camera default settings.



Touch this if you want to know how this function works. This icon will provide you with a quick guide.

Recording a quick video

- 1 Open the **Camera** application and touch the **Video mode** button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you wish to capture in your video.
- 4 Touch  once to start recording.
- 5 A red light will appear at the top left corner of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

After recording a video

A still image representing your video will appear on the screen if Auto review is set to On.

Touch  to view the last video you recorded.



Touch to share your video using the **SmartShare** function.

Video camera




Touch to record another video immediately.



Touch to send your video to others or share it via social network services.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Watching your saved videos

- 1 In the viewfinder, tap .
- 2 Your Gallery will appear on the screen.
- 3 Tap a video to play it automatically.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.


Multimedia










You can store multimedia files on a memory card for easy access to all your multimedia files.

Video Player

Your LG-P880 has a built-in video player that lets you play all your favourite videos. To access the video player, Touch  > **Apps** tab > **Video Player**.

Playing a video

- 1 In the home screen, touch  > **Apps** tab > **Video Player**.
- 2 Select the video you want to play.

	Touch to pause playback a video.
	Touch to resume playback a video.
	Touch to go 10 seconds forward.
	Touch to go 10 seconds backward.
	Touch to manage the video volume.
	Touch to set Dolby audio effect when connected with headset jack.
	Touch Speed controller icon and drag the progress bar to control playback speed.
	Touch Preview frame icon and drag the handler of seek bar to explore the content with a preview screen.
	Touch to lock a video screen.




Touch the direct list icon to see the list of videos.

To change the volume while watching a video, press the up and down volume keys on the left-hand side of the phone. Touch and hold any video in the list. It displays **Delete** and **Details** as options.

Gallery

Touch  > **Apps** tab > **Gallery**. Open a list of catalogue bars that store all your multimedia files.

Music

Your LG-P880 has a built-in music player that lets you play all your favourite tracks. To access the music player, Touch  > **Apps** tab > **Music**.


Transferring music files using Media sync (MTP)








- 1 Connect the LG-P880 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you need to change the settings manually. Choose **Settings** > **PC connection** > **USB connection type**, then select **Media sync (MTP)**.

Multimedia

- 3 You can view the mass storage content on your PC and transfer the files.

Playing a song

- 1 In the Home screen, touch  > **Apps** tab > **Music Player**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.

	Touch to find the files with YouTube
	Touch to share your music via SmartShare function.
	Touch to set shuffle mode
	Touch to set repeat mode
	Touch to manage the music volume
	Touch to pause playback
	Touch to resume playback
	Touch to skip to the next track on the album or in the playlist
	Touch to go back to the beginning of the song. Touch twice to return to the previous song
	Touch to set the favourites



Touch to see the current playlist



Touch to set Dolby audio effect when connected with a headset jack

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone. Touch and hold any song in the list. It displays **Play, Add to playlist, Share, Set as ringtone, Delete, Details** and **Search**.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

FM Radio

Your LG-P880 has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.


NOTE: You need to use your headphones to listen to the radio. Insert it into the headphone jack.

TIP! To improve radio reception, extend the headset cord as this also functions as the radio antenna. If you connect a headset not specifically made for radio reception, radio reception may be poor.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers.

Tuning in automatically


- 1 In the home screen, touch  > **Apps** tab > **FM Radio**.
- 2 Touch , then select **Scan**.
- 3 During auto scanning, touch **Cancel** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

NOTE: You can also manually tune in to a station using the on-screen wheel.


LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer "Mobile Life" experiences.

How to Get to LG SmartWorld from Your Phone

- 1 Tap the  icon to access LG SmartWorld.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the .

How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.
- Try the easy "Menu" buttons to find what you're looking for fast.

Categories – Find contents by category (e.g. Education, Entertainment, Games, etc).

Search – Search Content.

Apps for you – Recommended content based on your previous choices.

My apps – List of downloaded/to-be updated contents.

Settings – Set Profile and Display.



Sign in – Set your ID and Password.

- Try other useful functions as well. (Content Detail screen)



NOTE: LG SmartWorld may not be available in all carriers or countries.

Utilities

Setting your alarm

- 1 Touch  > **Apps** tab > **Alarm/Clock** > 
- 2 After you set the time, the LG-P880 lets you know how much time is left before the alarm will sound.
- 3 Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**. Touch **Save**.

Using your calculator

- 1 Touch  > **Apps** tab > **Calculator**
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, touch , select the **Advanced panel**, then choose sin, cos, tan, log and so on.



Adding an event to your calendar

- 1 Touch  > **Apps** tab > **Calendar**
- 2 On the middle of the screen, you can find the different view types of the Calendar (Day, Week, Agenda).
- 3 Tap on the date you want to add event on and touch 
- 4 Touch **Event name** then enter the event name.
- 5 Touch **Location** and enter the location. Check the date and enter the time you want your event to start and finish.
- 6 If you want to add a note to your event, touch **Description** and enter the details.
- 7 If you want to repeat the alarm, set **REPEAT**, and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.



Voice Recorder


Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice


- 1 Touch  > the **Apps** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.

Utilities

- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

NOTE: Touch  to access your album. You can listen to the saved recording. The available recording time may differ from actual recording time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching .
- 2 Choose from **Bluetooth**, **E-mail**, **Gmail**, **Memo** or **Messaging**. When you select Bluetooth, E-mail, Gmail, Memo or Messaging, the voice recording is added to the message. You may then write and send the message as you usually would.

Task Manager

You can manage your applications using Task Manager. You can easily check the number of applications that are currently running and shut down certain applications. You can also uninstall the applications you have installed on your device.

Polaris Office 4

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Touch  > **Apps** tab > **Polaris Office 4**.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in their original documents.

Backup

About backing up and restoring smart phone data

It recommends that you regularly create and save a backup file on the Storage card, especially before you update any software. Maintaining a current backup file on Storage memory might allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue.


This Backup application support between LG smart phones, other S/W version or

OS. And so, when you buy the new LG smart phone, you can back up the current LG-P880 smart phone data on your new one.

If you have preloaded application Backup & Restore on your smart phone, you can back up and restore most of your smart phone data, **Apps** including unprotected applications, their settings, **Applications (Downloaded)**, **Applications (Pre-installed)**, **Bookmarks**, **Calendar**, **Call log**, **Contacts**, **Home screen**, **Messages**, and **System settings** using this application.

- To perform a manual backup of your smart phone data.
- To schedule automatic backups of your smart phone data.
- To restore your smart phone data.


Back up your smart phone data

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Backup > SD Card** or **Internal Storage**.
- 3 Touch the **Add new** to enter a name for your backup file, and then select **Continue**.

- 4 Select the check box next to the item you want to back up, and then select **Continue** to back up.
- 5 When all selected files backed up, you will see the message '**Done**' and select **Continue** to finish backing up data.

Scheduling automatic backups


You can also enable automatic backups of the data on your smart phone according to your schedule setting. To do this, complete the following steps:

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Schedule**.
- 3 On the **Scheduled Backup Location** screen, touch **SD Card** or **Internal Storage**.
- 4 From the list, select how often you want to back up your device data and settings, and select **Continue**.
- 5 Select the check box next to the data you want to back up, and then select **Continue** to finish the schedule set.

Restoring smart phone data


To restore data that is in your on-board device memory, mass storage mode must be turned off.

NOTE: All files that are stored on your smart phone are deleted before the backup file is restored.


- 1 Insert the memory card into the slot and check out the storage status.
 - 2 Touch the **Apps** tab , and then select **Backup > Restore > SD Card or Internal Storage**.
 - 3 On the **Restore** screen, select a backup file that contains the data you want to restore.
 - 4 Select the check box next to the item you want to restore, and then select **Continue** to restore to phone.
- NOTE:** Please note that your phone data will be overwritten with the contents of your backup.
- 5 If the backup file is encrypted, type the password that you set to encrypt.
 - 6 When all selected files restored, you will see the message '**Done**' and select **Yes** to restart the phone.

NOTE:

- While in Mass storage mode, this Backup Application cannot be functioned. Select Charge only option when the USB cable is connected.
- You can set Enable encryption to encrypt your backup files for extra protection.

Press the **Menu**  from the **Backup** screen, and select **Settings > Security** and select the check box. And after enabling encryption, To restore synchronised organizer data, you must have an activation password.

NOTE:

You can also enable automatic delete old backups and only keep the most recent backup. Press the **Menu**  from the **Backup** screen, and select **Settings > Scheduled backup > Auto delete old backups** to select the number of scheduled backups to keep.

Google+


Use this application to stay connected with people via Google's social network service.

- Touch  > **Apps** tab > **Google +**.

NOTE: This application may not be available depending on the region or service provider.

Voice Search

Use this application to search webpages using voice.

- 1 Touch  > **Apps** tab > **Voice Search**.
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded through the applications.

- Touch  > **Apps** tab > **Downloads**.

NOTE: This application may not be available depending on the region or service provider.






The web

Internet

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using the web toolbar

-  Touch to go back a page.
-  Touch to go forwards a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.
-  Touch to go to the Home page.
-  Touch to add a new window.
-  Touch to access bookmarks.

Using options

Press  to view options.

Refresh – Update the current web page.

Save to bookmarks – Add the current web page as bookmark.

Go to Homepage – Allow you to go to a homepage.

Share page – Allows you to share the web page with others.

Find on page – Allows you to find letters or words on the current web page.

Desktop view – Allows you to view the web page as desktop.

Save for offline reading – Save current page to read it during offline.

Settings – Displays Browser settings.

Exit – Exit from the menu list.

Chrome

Use Chrome to search for information and browse webpages.

1 Touch  > **Apps** tab > **Chrome**.

NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages


Tap the Address field, and then enter a web address or search criteria.

Opening a page

To go to a new page, tap  → + **New tab**.

To go to another webpage, tap , scroll up or down and tap the page to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword and select one of the suggested keywords that appear.

Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.

To view open tabs on other devices, tap **Menu**  → **Other devices**.

Select a webpage to open.

To view bookmarks, tap .

Settings

In the home screen, touch  > **Apps** tab > **Settings**.

WIRELESS & NETWORKS


Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

< **Wi-Fi** >

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P880 into the router.

You can find the MAC address in the following user interface: Touch **Apps** tab > **Settings** > **Wi-Fi** >  > **Advanced** > **MAC address**.

< **Bluetooth** >

Turns on Bluetooth to connect to Bluetooth devices.

< **Mobile data** >

Displays the data usage and set mobile data limit.

< **Call** >

Configure phone call settings such as call forwarding and other special features offered by your carrier.

Fixed dialing numbers – Turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Save unknown numbers – Add unknown numbers to contacts after a call.

Voicemail – Allows you to select your carrier's voicemail service.

Call reject – Allows you to set the call reject function. Choose from **Call reject mode** or **Rejection list**.

Decline with message – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Power button ends call – Allows you to select your end call.

Call forwarding – Choose whether to divert all calls when the line is busy, when there is no answer or when you have no signal.

Call barring – Lock incoming, outgoing or international calls.

Call duration – View the duration of calls including Last call, All calls, Dialed calls and Received calls.

Additional settings – Allows you to change the following settings:

Caller ID: Choose whether to display your number in an outgoing call.

Call waiting: If call waiting is activated, the handset will notify you of an incoming call while you are on a call (depending on your network provider).

< **More** >

Airplane mode – After switching to airplane mode, all wireless connections are disabled.

Portable Wi-Fi hotspot – You can configure the portable Wi-Fi hotspot settings.

NFC – Your LG-P880 is NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your contents with a NFC tag or another device via simple touch with your device. If you

touch a NFC tag with your device, it will display the tag contents on your device.

NOTE: Be careful not to scratch or damage the inside of the battery cover as this is the NFC antenna.

To switch NFC on or off: From the home screen, touch and slide the notification drawer down with your finger, then select the NFC icon to turn it on.

NOTE: When the Airplane mode is activated, NFC application can be used.

Using NFC: To use NFC, make sure your device is switched on and activate the NFC setting, if disabled.

Android Beam – When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

Just bring the device together (typically back to back) and then touch your screen. The app determines what gets beamed.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Settings

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

NOTE: You must set a lock screen PIN or password before you can use credential storage.

DEVICE

< Sound >

Sound profile – Choose the Sound, either Vibrate only or Silent.

Volumes – Manage the volume of Phone ringtone, Notification sound, Touch feedback & system, Music, video, games and other media.

Quiet time – Set times to turn off all sounds except alarm and media.

Ringtone with vibration – Vibration feedback for calls and notifications.

Phone ringtone – Allows you to set your default incoming call ringtone.

Notification sound – Allows you to set your default notification ringtone.

Dial pad touch tones – Allows you to set the phone to play tones when using the dialpad to dial numbers.

Touch sounds – Allows you to set your phone to play a sound when you touch

buttons, icons and other onscreen items that react to your touch.

Screen lock sound – Allows you to set your phone to play a sound when locking and unlocking the screen.

Vibrate on touch – Allows you to set the vibration feedback when the phone screen is touched.

< Display >

Brightness – Adjust the screen brightness.

Screen timeout – Set the time for screen timeout.

Auto-rotate screen – Set to switch orientation automatically when you rotate the phone.

Font type – Change the type of the display.

Font size – Change the size of the display font.

Front key light – Set the front key LED time.

Motion sensor calibration – Improve the accuracy of the tilt and speed of the sensor.

< Home screen >

Set the **Theme**, **Animation**, **Screen swipe effect**, **Wallpaper** or **Portrait**

view only. Select the option to set **Scroll screens circularly** and **Home backup & restore**.

< Lock screen >

Select screen lock – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. Set **None, Swipe, Face Unlock, Pattern, PIN** or **Password**.

If you have enabled a Pattern lock type when you turn on your phone or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

Wallpaper – Select the wallpaper for your lock screen from Gallery or Wallpaper gallery.

Clocks & shortcuts – Customize clocks & shortcuts on the lock screen.

Owner info – Show owner info on the lock screen.

Lock timer – Set the lock time after screen timeout.

Power button instantly locks – Set the screen lock when the power button is pressed.

Vibrate on touch – Allows you to set the vibration feedback for phone screen touch.

< Gesture >

Move home screen items – Press and hold item and tilt device to move item within home screens or applications.

Tilt sensitivity – Test and adjust sensitivity of tilt sensor for home screen and applications.

Silence incoming calls – Flip phone to silence incoming calls.

Snooze or stop alarm – Flip device to snooze or stop alarm.

Pause video – Flip device to pause playing video.

Help – Help for gesture functions.

< Storage >

INTERNAL STORAGE – View the internal storage usage.

SD CARD – Check total available SD card space. Touch Unmount SD card for safe removal. Erase SD card if you want to delete all data from the SD card.

< Power saver >

Here, you can manage the battery and check the power saving items. Also, you can check the battery use.

< Apps >

You can view and manage the applications.

PERSONAL

< Accounts & sync >

Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

< Location access >

Access to my location – If you select Google's location service, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

GPS satellites – If you select GPS satellites, your phone determines your location to street-level accuracy.

Wi-Fi & mobile network location – Lets apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.

< Security >

Set up SIM card lock – Set up SIM card lock or change the SIM PIN.

Password typing visible – Show password as you type.

Phone administrators – View or deactivate device administrators.

Unknown sources – Default setting to install non-Market applications.

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates from your SD card.

Clear credentials – Remove all certificates.

< Language & input >

Use the Language & input settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

< Backup & reset >

Change the settings for managing your settings and data.

Back up my data – Set to back up your settings and application data to the Google server.

Backup account – Set to back up your account.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

Factory data reset – Reset your settings to the factory default values and delete

all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.

SYSTEM

< Date & time >

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins.

< PC connection >

USB connection type – You can set the desired mode (**Charge only**, **Media sync (MTP)**, **USB tethering**, **LG software or Camera (PTP)**).

Ask on connection – Ask USB connection mode when connecting to a computer.

Help – Help for connectivity.

On-Screen Phone – Displaying screen and controlling phone from PC are

available through USB, Bluetooth or Wi-Fi connection.

PC Suite Wi-Fi connection – Check mark this to use **LG PC Suite** with Wi-Fi connection.

< About phone >

View legal information and check phone status and software version.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before

Settings

proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First, you can check the software version on your mobile phone: **Settings > About phone > Software update > Check now for update.**

You can also delay the update by 1 hour, 4 hours, 8 hours or One day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature is dependent on your network service provider, region and country.

DivX HD

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-






on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

LG On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Wi-Fi connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone programme.
-  Maximises the On-Screen Phone window.
-  Minimize the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.

- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

How to install On-Screen Phone on your PC

- 1 Visit LG Home (www.lg.com) and select a country of your choice.
- 2 Go to **Support > Mobile Phone Support > Select the Model (LG-P880) > Click OSP (On-Screen Phone)** to download. You can install the On-Screen Phone on your PC.

Accessories

These accessories are available for use with the LG-P880. (Items described below may be optional.)

Travel adaptor



Battery



Stereo headset



Data cable

Connect your LG-P880 and PC.



User Guide

Learn more about your LG-P880.



LG Tag+



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network.	Move towards a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key down for at least two seconds.
	Battery is not charged.	Charge battery. Check charging indicator on the display.
	Battery contacts are dirty.	Clean the battery contacts.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace charger.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.

Troubleshooting

Message	Possible causes	Possible corrective measures
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone.
		Try to perform a software update via the website.

CONFIRM WARRANTY PERIOD FOR LG MC PRODUCT

Dear our valued customers,

To protect you from buying false or hand-carrying products in the market, as well as to ensure that customer can receive genuine warranty service for LG products, and to make it more convenient for you, LGEVN Co., Ltd. would like to announce you about regulation on **Warranty Period for LG MC Product**.

After you buy a LG MC product and use it continuously (for around 4 hours) with the same SIM card, a message including the IMEI No will be automatically sent from your MC to LG system.

Basing on the IMEI No, LG system will confirm genuine product, and reply you by a message to confirm warranty period for your MC.

The content of the replied message as below:

Welcome to LG smart warranty service. The warranty period of 'IMEI No' is from 'activated warranty service date' to 'the last date of warranty period'The moment you start using the MC is the activated warranty service date.

Customer will have to pay for a message sent to LG system with confirming purpose, and in return, the warranty period of customer's MC will be extended one extra month. It means the warranty period will be 13 months from the activated warranty service date instead of 12 months as before. As for accessories, LGEVN only apply warranty period of 6 months from purchase date but not over 9 months from production date on Serial No. When applying the program, without warranty card, customers still receive the best genuine warranty service for LG MC product within its warranty period.



CE0168Ⓢ