

USER GUIDE

LG G *flex 2*
LG-H955

دليل المستخدم

- قد تختلف بعض المحتويات والأشكال التوضيحية عن الجهاز وفقًا للمنطقة أو موفر الخدمة أو إصدار البرنامج أو إصدار برنامج التشغيل (OS) وتخضع للتغيير من دون إشعار مسبق.
- استخدم دائمًا ملحقات LG الأصلية. تم تصميم العناصر المتوفرة لاستخدامها مع هذا الجهاز فقط وقد تكون غير متوافقة مع أجهزة أخرى.
- قد تختلف الملحقات المتوفرة استنادًا إلى المنطقة أو البلد أو موفر الخدمة.
- لا يناسب هذا الهاتف الأشخاص الضعيفي البصر نظرًا لاحتوائه على لوحة مفاتيح تعمل باللمس.
- حقوق النشر © 2015 LG Electronics, Inc. جميع الحقوق محفوظة. LG وشعار LG هما علامتان تجاريتان مسجلتان لمجموعة LG Group والكيانات التابعة. كل العلامات التجارية الأخرى تعود إلى مالكيها.
- إن Google™ و Google Maps™ و Gmail™ و YouTube™ و Hangouts™ و سوق Play™ هي علامات تجارية لشركة Google, Inc.

41.....	إعداد حساب Google	6.....	إرشادات لاستخدام آمن وفعال
42.....	الاتصال بالشبكات والأجهزة	16.....	ملاحظة هامة
42.....	Wi-Fi	20.....	التعرف على الهاتف الخاص بك
43.....	Bluetooth	20.....	تخطيط الهاتف
44.....	Wi-Fi Direct	22.....	تثبيت بطاقة SIM أو USIM
45.....	SmartShare	23.....	شحن الهاتف
46.....	إرسال بيانات بين الكمبيوتر الشخصي والجهاز	24.....	إدخال بطاقة ذاكرة
47.....	المكالمات	25.....	إلغاء قفل الشاشة
47.....	إجراء مكالمة	26.....	الشاشة الرئيسية الخاصة بك
47.....	الاتصال بالأسماء	26.....	تلميحات شاشة اللمس
47.....	الرد على مكالمة ورفضها	27.....	الشاشة الرئيسية
48.....	إجراء مكالمة ثانية	28.....	تخصيص الشاشة الرئيسية
48.....	عرض سجلات المكالمات	29.....	العودة إلى التطبيقات المستخدمة مؤخرًا
48.....	إعدادات المكالمات	30.....	لوحة الإشعارات
49.....	الأسماء	33.....	لوحة المفاتيح على الشاشة
49.....	البحث عن اسم	34.....	الميزات الخاصة
49.....	إضافة اسم جديد	34.....	التقاط إيماء اليد
49.....	الأسماء المفضلة	34.....	عرض سريع
50.....	إنشاء مجموعة	35.....	عرض الإيماءات
51.....	الرسائل	36.....	ضبط تشغيل/إيقاف الشاشة
51.....	إرسال رسالة	36.....	Knock Code
52.....	عرض المحادثات	37.....	نافذة مزبوجة
52.....	تغيير إعدادات الرسائل	38.....	QuickMemo+
		39.....	QSlide
		40.....	QuickRemote

74.....	الإعدادات.....الإلكتروني	53.....	البريد الإلكتروني
74.....	الشبكات.....	53.....	إدارة حسابات البريد الإلكتروني
77.....	الصوت.....	54.....	العمل مع مجلدات الحسابات
78.....	إعدادات الشاشة.....	54.....	إنشاء بريد إلكتروني وإرساله
81.....	عامة.....	55.....	الكاميرا والفيديو
87.....	برنامج الكمبيوتر (LG PC Suite)	55.....	خيارات الكاميرا في محدد المنظر
87.....	نظام التشغيل Windows	56.....	استخدام الإعدادات المتقدمة
88.....	نظام التشغيل Mac OS	56.....	التقاط صورة
90.....	تحديث برنامج الهاتف	57.....	بعد التقاط الصورة
90.....	تحديث برنامج الهاتف	57.....	تسجيل فيديو
92.....	حول دليل المستخدم هذا	58.....	بعد تسجيل فيديو
92.....	حول دليل المستخدم هذا	61.....	المعرض
93.....	علامات تجارية	64.....	الوسائط المتعددة
93.....	DivX HD	64.....	موسيقى
93.....	Dolby Digital Plus	66.....	الأدوات المساعدة
94.....	الملحقات	66.....	الساعة
95.....	استكشاف الأخطاء وإصلاحها	67.....	الحاسبة
98.....	الأسئلة الشائعة	67.....	التقويم
		68.....	مسجل الصوت
		68.....	مهام
		69.....	البحث الصوتي
		69.....	تنزيلات
		69.....	راديو FM
		70.....	LG SmartWorld
		71.....	متصفح الويب
		71.....	الإنترنت
		73.....	Chrome

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني. في حال حدوث خطأ، تم تضمين أداة برنامج في الجهاز من شأنها تجميع سجل الخطأ. تجمع هذه الأداة البيانات الخاصة بالخطأ فقط. مثل قوة الإشارة وموضع معرف الخلية لدى انقطاع المكالمات المفاجئ والتطبيقات التي تم تحميلها. يستخدم السجل فقط للمساعدة في تحديد سبب الخطأ. تجدر الإشارة إلى أن هذه السجلات مشفرة ويمكن الوصول إليها من قبل مركز تصليح معتمد من LG فقط في حال احتجت إلى إعادة جهازك لتصلحه.

التعرض لطاقة التردد اللاسلكي

- معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR).
- صُمم طراز الهاتف المحمول LG-H955 هذا بحيث يفي بمتطلبات السلامة المتبعة المتعلقة بالتعرض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.
- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد (SAR). وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.
 - وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.
 - حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين Commission (ICNIRP) on Non-Ionizing Radiation Protection هو 2 واط/كجم وهو حد مقسم على نحو متناسب إلى 10 جرعات من النسيج العضوي.
 - تبلغ أعلى قيمة لمعدل الامتصاص النوعي (SAR) لطراز الهاتف هذا الذي تم اختباره للاستخدام على الأذن 0.471 واط/كجم (10 جرعات) وعند الاستخدام على الجسم 0.418 واط/كجم (10 جرعات).
 - يفي هذا الجهاز بإرشادات التعرض للتردد اللاسلكي (RF) عند استخدامه في موضع الاستخدام العادي على الأذن أو عند وضعه على بعد 1.5 سم على الأقل من الجسم. عند استخدام علبة حمل أو مشبك للحزام أو حامل لتشغيل الجهاز أثناء حمله على الجسم.

يجب ألا تحتوي على أي معدن ويجب وضع المنتج على بعد 1.5 سم على الأقل من الجسم. ومن أجل إرسال ملفات البيانات أو الرسائل. يتطلب هذا الجهاز اتصالاً نوعياً عالي الجودة بالشبكة. في بعض الحالات، يجوز أن يتم تأخير إرسال ملفات البيانات أو الرسائل إلى أن يُصبح هذا الاتصال متاحاً. احرص على اتباع التعليمات المتعلقة بالمسافات الفاصلة المنشارة إليها أعلاه إلى أن يتم اكتمال الإرسال.

العناية بالمنتج وصيانته

تحذير

إشعار لاستبدال البطارية

- لسلامتك، لا تزل البطارية المثبتة في المنتج، إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- بطارية Li-Ion هي مكون خطير يمكن أن يتسبب في الإصابة.
- استبدال البطارية من قبل شخص غير مؤهل يمكن أن يُسبب ضرراً على الجهاز الخاص بك.

تحذير

استخدم فقط البطاريات، والشواحن، والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي كفالة أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.

- يكون هذا المنتج مرئياً عند الاستخدام العادي فقط. من الممكن ثني هذا الهاتف ليصبح مسطحاً بمقدار 180 درجة لفترة محدودة ولكن لا يجب ثنيه إلى الداخل. قد تؤدي الأضرار الناجمة عن سوء الاستخدام، بالإضافة إلى على سبيل المثال لا الحصر، الثني المتعمد أو استخدام القوة بشكل مستمر على المنتج، إلى حدوث ضرر دائم في الشاشة و/أو في أجزاء الهاتف ووظائفه الأخرى.
- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى إصلاحها.
- قد تتضمن الإصلاحات المشمولة بالكفالة، وفقاً لـ LG، لوحات أو قطع الغيار سواء كانت جديدةً أو مجددةً، على أن تتمتع بوظائف موازية لوظائف الأجزاء التي تم استبدالها.

- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفاز والراديو. وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل أجهزة التدفئة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حينما تطالب القوانين الخاصة بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين أثناء شحنه. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات مثل سماعات الأذن بحذر. لا تلمس الهوائي من دون وجود سبب يدعوك إلى ذلك.
- لا تستخدم الزجاج المكسور أو تلمسه أو تحاول إزالته أو إصلاحه إذا كان مكسوراً أو متحولاً إلى شظايا أو متحطماً. لا تشمل الكفالة تلف الشاشة الزجاجية نتيجة سوء الاستخدام.
- هذا الهاتف عبارة عن جهاز إلكتروني يولد الحرارة أثناء الاستخدام العادي. قد يؤدي احتكاك المنتج بالبشرة مباشرة ولفترة طويلة في غياب التهوية المناسبة إلى عدم الشعور بالراحة أو التسبب بحروق طفيفة. لذا، استخدم الهاتف والشاحن (الشاحن السريع) بعناية أثناء التشغيل أو بعده مباشرة.

- إذا تعرّض الهاتف للبلل، قم فوراً بفصل البطاقة عنه ليحفظ بشكل كامل. لا تحاول تسريع عملية التجفيف باستخدام مصدر تجفيف خارجي مثل الفرن أو المايكروويف أو مجفف الشعر.
- يغيّر السائل في الهاتف المبلل لون تسمية المنتج داخل الهاتف. لا تشمل الكفالة الضرر الناتج عن تعرض الجهاز للسوائل.

تشغيل فعال للهاتف

الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش، مما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية من دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض، مثلاً، في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.
- استخدم الهاتف في مكان تتراوح فيه درجة الحرارة بين 0 و 40 درجة مئوية، إذا أمكن. قد يؤدي تعريض الهاتف إلى درجات حرارة مرتفعة أو منخفضة جداً إلى إلحاق الضرر به أو تعطله أو حتى إلى حدوث انفجار.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل أجهزة الستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة

بسبب أداء غير صحيح.

- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدرجاً لما يحيط بك. هذا الأمر غاية في الأهمية خصوصاً بالقرب من الطرقات.

تجنب إلحاق الضرر بسمعك



لتفادي إلحاق الضرر بالسمع، لا تستمع إلى مستويات صوت عالية لفترات طويلة.

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط صوت الموسيقى والمكالمات على مستوى معقول.

- عند استخدام سماعات الرأس، اخفض مستوى الصوت إذا كنت لا تسمع الأشخاص الذين يتحدثون بالقرب منك أو في حالة تمكّن الشخص الجالس بجوارك من سماع ما تنصت إليه.

ملاحظة: قد يؤدي ضغط الصوت المرتفع من سماعات الأذن وسماعات الرأس إلى فقدان السمع.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبدال الزجاج من قِبل موفر خدمة معتمد.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود. واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في محطة لإعادة التزود بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول أو ملحقاته.

في الطائرة.

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قبيل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرةً على جميع شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد على هاتفك المحمول فقط لإجراء مكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة من شأنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصمّمة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. فمن الممكن إعادة شحن حزمة البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية في حال عدم استخدامها لفترة طويلة وذلك لزيادة فترة صلاحية استخدامها.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- يجب التخلص من البطاريات المستعملة وفق إرشادات الشركة المصنّعة. يرجى إعادة التدوير عندما يكون ذلك ممكنًا. لا تتخلّص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، خذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للحصول على المساعدة.
- قم دائمًا بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة و إعدادات المنتج وأنماط الاستخدام والبطارية والأوضاع البيئية.
- احرص على عدم ملامسة البطارية لأغراض حادة الأطراف كأنياب الحيوانات أو الأظافر. فقد يسبب هذا الأمر حريقًا.
- لسلامتك، لا تزل البطارية المثبتة في المنتج.
- لا تترك الهاتف في أماكن ساخنة أو باردة، قد يؤدي ذلك إلى تراجع في أداء الهاتف.
- لا تستبدل البطارية بنفسك. قد تتعرض البطارية للضرر، مما قد يؤدي إلى إحماؤها بشكل مفرط ويسبب إصابات. يجب استبدال البطارية من قبل موفّر الخدمة المعتمد. ينبغي إعادة تدوير البطارية أو التخلص منها بشكل منفصل عن النفايات المنزلية.


بيان سلامة الليزر

تنبيه!

يعمل هذا المنتج بنظام ليزر. لضمان الاستخدام الصحيح لهذا المنتج، يرجى قراءة دليل المالك هذا بعناية والاحتفاظ به للرجوع إليه في المستقبل. في حال كانت الوحدة بحاجة إلى الصيانة، اتصل بمركز خدمة معتمد.

قد يؤدي استخدام عناصر التحكم أو الضبط أو القيام بإجراءات غير تلك المذكورة هنا إلى التعرّض للأشعة الخطيرة.

لتجنب التعرّض المباشر لأشعة الليزر، لا تحاول فتح الغطاء أو تجنب التعرّض مباشرة لأشعة الليزر.

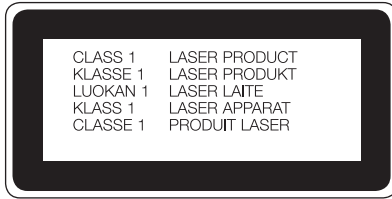

معلومات حول إشعار البرامج المفتوحة المصدر

للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL وتراخيص مفتوحة المصدر أخرى يتضمنها هذا المنتج. يرجى زيارة الموقع <http://opensource.lge.com>. بالإضافة إلى التعليمات البرمجية المصدر. تتوفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتنزيل.

ستوفر LG Electronics أيضًا التعليمات البرمجية المصدر على قرص مضغوط بتكلفة تغطي هذا التوزيع (مثل تكلفة الوسائط والشحن والاستخدام) عند طلبها بإرسال بريد إلكتروني إلى opensource@lge.com. إن هذا العرض صالح لمدة ثلاث (3) سنوات اعتبارًا من تاريخ شراء المنتج.

كيفية تحديث الجهاز

- قم بالوصول إلى أحدث إصدارات البرامج الثابتة والوظائف والتحسينات الجديدة للبرنامج.
- حدد تحديث البرنامج في قائمة الإعدادات على الجهاز.
- قم بتحديث الجهاز عبر توصيله بالكمبيوتر الشخصي. لمزيد من المعلومات حول استخدام هذه الوظيفة. يرجى زيارة الصفحة <http://www.lg.com/common/index.jsp> وتحديد البلد واللغة.

بيان التوافق

تعلن LG Electronics بموجب هذا الإشعار أن هذا المنتج LG-H955 يتوافق مع المتطلبات الأساسية والأحكام الأخرى ذات الصلة الخاصة بالتوجيه 1999/5/EC. يمكن العثور على نسخة من إعلان التوافق على العنوان التالي <http://www.lg.com/global/declaration>

شركة إل جي للإلكترونيات - المشرق العربي

مشروع العبدلي - أفنيو رفيق الحريري

البولييفارد - الساحة المركزية - الطابق الخامس

التخلص من الأجهزة القديمة الخاصة بك



- 1 جميع الأجهزة الكهربائية والإلكترونية يجب التخلص منها بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 2 سيساعد التخلص من جهازك القديم بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان.
- 3 لمزيد من المعلومات المفصلة حول التخلص من جهازك القديم، يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.

التخلص من البطاريات/المراكم النافثة



- 1 قد يتحد هذا الرمز مع الرموز الكيميائية مثل الزئبق (Hg) أو الكاديوم (Cd) أو الرصاص (Pb) إذا كانت البطارية تحتوي على أكثر من % 0.0005 زئبق أو % 0.002 كاديوم أو رصاص % 0.004.
- 2 يجب التخلص من جميع البطاريات/المراكم بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 3 سيساعد التخلص من البطاريات/المراكم القديمة بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان والحيوان.
- 4 لمزيد من المعلومات المفصلة حول التخلص من البطاريات/المراكم القديمة يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.




يرجى قراءة ما يلي قبل استخدام الهاتف!

يرجى التحقق لمعرفة ما إذا كان قد تم وصف أي مشكلة من المشاكل التي تواجهها مع هاتفك في هذا القسم قبل نقل الهاتف إلى الصيانة أو قبل الاتصال بممثل الخدمة.

1. ذاكرة الهاتف

لا يمكن للهاتف استلام رسائل جديدة عندما تكون المساحة المتاحة في ذاكرة الهاتف أقل من 10 ميغابايت. لذا عليك التحقق من ذاكرة الهاتف وحذف بعض البيانات مثل التطبيقات أو الرسائل لتوفير المزيد من المساحة في الذاكرة.

إلغاء تثبيت التطبيقات:

- 1 اضغط على  <  < علامة التبويب (إذا لزم الأمر) <  < علامة التبويب عامة < التطبيقات.
- 2 بمجرد ظهور جميع التطبيقات، قم بالتمرير وحدد التطبيق الذي تريد إلغاء تثبيته.
- 3 اضغط على إلغاء التثبيت.

2. تحسين عمر البطارية

يمكنك تمديد فترة عمل البطارية عن طريق إيقاف تشغيل الميزات التي لا تحتاج إلى تشغيلها بصورة مستمرة في الخلفية. كما يمكنك مراقبة كيفية استهلاك التطبيقات وموارد النظام لطاقة البطارية.

إطالة عمر بطارية الهاتف:

- قم بإيقاف تشغيل الاتصالات اللاسلكية التي لا تستخدمها. أوقف تشغيل خدمات Wi-Fi أو Bluetooth أو خدمات الموقع (بما في ذلك GPS) إذا كنت لا تستخدمها.

- قلة سطوع الشاشة وعيّن مهلة أقصر لإضاءة الشاشة.
- أوقف تشغيل المزامنة التلقائية لـ Gmail والتقويم والأسماء والتطبيقات الأخرى.

ملاحظة:

- قد تستهلك بعض التطبيقات التي قمت بتنزيلها طاقة البطارية.
- أثناء استخدام التطبيقات التي تم تنزيلها، تحقق من مستوى شحن البطارية.

ملاحظة: إذا ضغطت عن طريق الخطأ على زر الطاقة/القفل أثناء تواجد الجهاز في جيبك، فسيتم إيقاف تشغيل الشاشة تلقائيًا بهدف توفير طاقة البطارية.

3. قبل تثبيت تطبيق مفتوح المصدر ونظام التشغيل



تحذير

إذا قمت بتثبيت نظام تشغيل بخلاف نظام التشغيل المتوفر من قبل الجهة المصنّعة واستخدامه، فقد يتسبب في تعطل الهاتف. علاوة على ذلك، يُلغى الضمان الذي يغطي الهاتف.



تحذير

لحماية الهاتف والبيانات الشخصية، قم بتنزيل التطبيقات من المصادر الموثوق بها فقط. على سبيل المثال سوق Play™. في حالة عدم تثبيت بعض التطبيقات بالهاتف بشكل صحيح، قد لا يعمل الهاتف بشكل طبيعي أو قد يحدث خطأ جسيم. يجب إلغاء تثبيت هذه التطبيقات وكل البيانات والإعدادات المرتبطة بها من الهاتف.

4. استخدام إعادة الضبط الكامل (إعادة الضبط إلى إعدادات الشركة المصنعة)

إذا كان الهاتف بحاجة إلى أن تتم إعادة إعداداته وحالته إلى الإعدادات والحالة الأصلية. استخدام إعادة الضبط الكامل (إعادة الضبط إلى إعدادات الشركة المصنعة).

- 1 أوقف تشغيل الطاقة.
- 2 اضغط باستمرار على زر الطاقة/القفل + زر خفض مستوى الصوت على الجهة الخلفية من الهاتف.
- 3 حرّر زر الطاقة/القفل فقط عند ظهور شعار التمهيد. ثم اضغط فوراً وباستمرار على زر الطاقة/القفل مجدداً.
- 4 حرّر الأزرار كافة عند ظهور شاشة إعادة الضبط إلى إعدادات الشركة المصنعة.
- 5 اضغط على مفتاحي مستوى الصوت لتمييز نعم. واضغط على مفتاح زر الطاقة/القفل للمتابعة.
- 6 اضغط على أزرار مستوى الصوت لتمييز نعم مرة أخرى. ثم اضغط على زر الطاقة/القفل للتأكيد.



تحذير

في حال إجراء إعادة ضبط كامل. سيتم حذف تطبيقات المستخدم وبياناته وتراخيص DRM كافة. يُرجى تذكر إجراء نسخ احتياطي لأي بيانات هامة قبل إجراء إعادة ضبط كامل.

5. فتح التطبيقات وتغييرها


بعد تعدد المهام أمرًا سهلاً مع نظام التشغيل Android نظرًا لإمكانية تشغيل أكثر من تطبيق واحد في الوقت نفسه. لا حاجة لإنهاء تطبيق قبل فتح تطبيق آخر. يمكنك استخدام العديد من التطبيقات المفتوحة والتنقل فيما بينها. يدير نظام التشغيل Android كل تطبيق ويوقف تشغيله ويقوم بتشغيله عند الحاجة للتأكد من أن التطبيقات الخاملة لا تستهلك الموارد بشكل غير ضروري.

- 1 اضغط على □. ستظهر معاينات التطبيقات المستخدمة مؤخرًا.
 - 2 اضغط على التطبيق الذي تريد الوصول إليه. لا يؤدي ذلك إلى إيقاف تشغيل التطبيق السابق في الخلفية. احرص على الضغط على ◀ للخروج من الإطار بعد استخدامه.
- لإغلاق تطبيق من قائمة التطبيقات الحديثة، مرّر معاينة التطبيق إلى اليسار أو اليمين. لمسح التطبيقات كافة، اضغط على مسح الكل.

6. في حال تجمدت الشاشة

إذا تجمدت الشاشة أو في حالة عدم استجابة الهاتف عند محاولة تشغيله:
لإعادة ضبط الهاتف، اضغط باستمرار على زر الطاقة/القفل وزر خفض مستوى الصوت لحوالي 10 ثواني. لإيقاف تشغيل الهاتف، اضغط باستمرار على زر الطاقة/القفل وزر خفض مستوى الصوت لحوالي 20 ثانية. إذا استمرت المشكلة، فيرجى الاتصال بمركز الخدمة.

تخطيط الهاتف

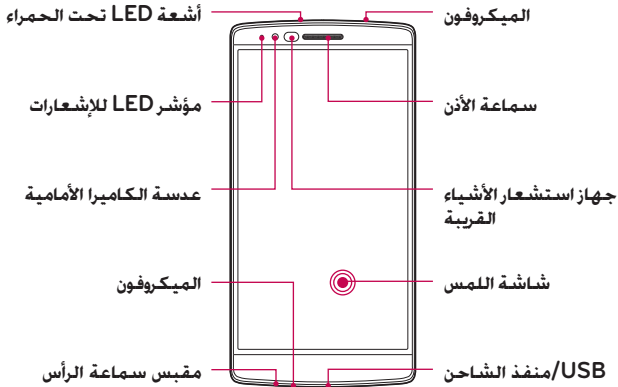

ملاحظة: جهاز استشعار الأشياء القريبة

عند تلقي مكالمة أو إجرائها، يقوم جهاز استشعار الأشياء القريبة تلقائيًا بإيقاف تشغيل الإضاءة الخلفية وإيقاف شاشة اللمس من خلال تحسس اقتراب الهاتف من الأذن. وهذا الإجراء يطيل من عمر البطارية ويمنعك من تنشيط شاشة اللمس من دون قصد أثناء المكالمات.

تحذير


قد يؤدي وضع غرض ثقيل الوزن على الهاتف أو الجلوس عليه إلى إلحاق ضرر بوظائف الشاشة وشاشة اللمس. لا تغطي جهاز استشعار الأشياء القريبة بأغلفة حماية الشاشة أو أي نوع آخر من الطبقات الواقية. فقد يتسبب هذا في تعطل جهاز الاستشعار.

ميزة التركيز التلقائي
لكشف الليزر

زر الطاقة/القفل

نقطة اتصال NFC

مكبر الصوت

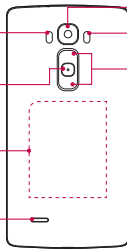

عدسة الكاميرا الخلفية

الفلش

أزرار مستوى الصوت

- قم بتشغيل الهاتف أو إيقاف تشغيله بالضغط باستمرار على هذا الزر
- اضغط ضغطة قصيرة لقفل/إلغاء قفل الشاشة

زر الطاقة/القفل

- (عندما تكون الشاشة متوقفة عن التشغيل)
- اضغط مطوّلًا على مفتاح لأعلى لتشغيل QuickMemo+
- اضغط مطوّلًا على مفتاح لأسفل لتشغيل الكاميرا

أزرار مستوى الصوت

⚠ تحذير احرص على عدم إلحاق ضرر بنقطة اتصال NFC (الاتصالات القريبة المدى) في الهاتف إذ إنها تُعدّ جزءًا من هوائي NFC.


ملاحظة: يطبّق الغطاء الخلفي لهذا المنتج تقنية "الإصلاح الذاتي"، والتي تقوم على إصلاح الخدوش الثانوية ذاتيًا في دقائق. بسبب الاستخدام العادي للهاتف حدوث خدوش ثانوية. قد لا تختفي الخدوش الناتجة عن سطح خيشن أو سوء استخدام بما في ذلك على سبيل المثال لا الحصر الخدوش المتعمدة والأضرار الناجمة عن سقوط المنتجات أو إسقاطها. قد تختلف نتائج "الإصلاح الذاتي" وفقًا لمدى الضرر فضلًا عن ظروف أخرى. بموجب هذا، يتم استبعاد أي كفاءة تغطي ميزة "الإصلاح الذاتي" صراحة.

ملاحظة: جهاز استشعار LDAF (جهاز استشعار التركيز التلقائي لكشف الليزر) بفضل اكتشاف المسافة بواسطة الليزر عند التسجيل بعدسة الكاميرا الخلفية. يمكنك مستشعر LDAF من التركيز على النطاق البعيد أو القريب بشكل أسرع وأدق.


تثبيت بطاقة SIM أو USIM

قبل البدء باستكشاف الهاتف الجديد. يجب أن تقوم بإعداده.

- 1 لإزالة الغطاء الخلفي. امسك الهاتف بيد واحدة بقوة. وباليد الأخرى. ارفع الغطاء الخلفي باستخدام الإبهام كما هو مبين في الصورة أدناه.

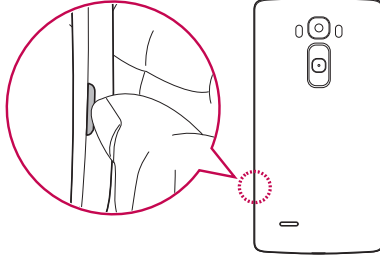


- 2 أدخل بطاقة SIM في الفتحة السفلى المخصصة لها كما هو مبين في الصورة. تأكد من أن ناحية الموصلات الذهبية على البطاقة موجهة نحو الأسفل.

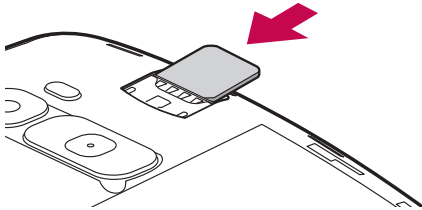

ملاحظة: تعمل بطاقات microSIM فقط مع الجهاز.

3 لإعادة تثبيت الغطاء على الجهاز، قم بحاذة الغطاء الخلفي مع حجرة البطارية (1) واضغط عليه لأسفل حتى يستقر في مكانه (2).

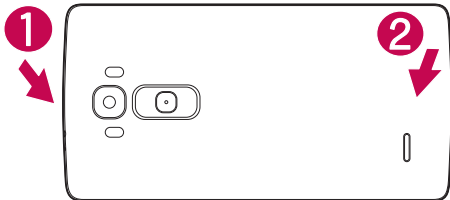

شحن الهاتف


اشحن البطارية قبل استخدامها للمرة الأولى. استخدم الشاحن لشحن البطارية.



تحذير

استخدم الشواحن والبطاريات والكيبيلات المعتمدة من قبل LG فقط. إذا استخدمت شواحن أو بطاريات أو كيبيلات غير معتمدة، قد يؤدي ذلك إلى تأخير شحن البطارية أو ظهور رسالة منبثقة تتعلق بالشحن البطيء أو قد يؤدي هذا أيضاً إلى انفجار البطارية أو إلحاق الضرر بالجهاز، وهي أضرار لا تشملها الكفالة.

يوجد موصل الشاحن في أسفل الهاتف. أدخل الشاحن وقم بتوصيله بمقبس كهربائي.

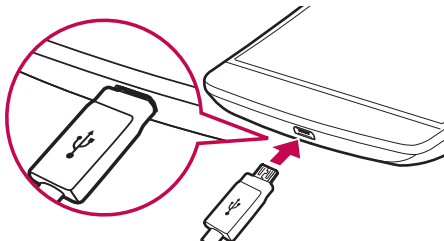

ملاحظة: لا تفتح الغطاء الخلفي أثناء شحن الهاتف.

إدخال بطاقة ذاكرة

يدعم الجهاز بطاقة microSD تصل سعتها إلى 32 جيجابايت. قد تكون بعض بطاقات الذاكرة غير متوافقة مع جهازك وذلك وفقاً للشركة المصنّعة لبطاقة الذاكرة ونوعها.



تحذير


قد لا تكون بعض بطاقات الذاكرة متوافقة بشكل كامل مع الجهاز. وقد يؤدي استخدام بطاقة غير متوافقة إلى إلحاق ضرر بالجهاز أو بطاقة الذاكرة أو إتلاف البيانات المخزنة على البطاقة.

ملاحظة:

- يدعم الجهاز نظام ملفات FAT و exFAT لبطاقات الذاكرة. عند إدخال بطاقة ذاكرة تم تنسيقها بواسطة نظام ملفات مختلف، يطلب الجهاز إعادة تنسيق البطاقة.
- تؤدي كتابة البيانات ومحوها بشكل متكرر إلى تخفيض عمر بطاقات الذاكرة.

1 انزع الغطاء الخلفي.

2 أدخل بطاقة ذاكرة ووجهه الموصلات الذهبية نحو الأسفل.

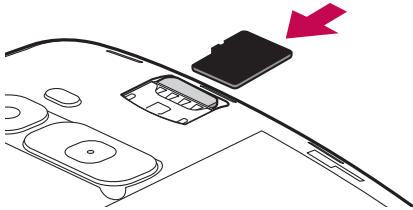

3 أعد الغطاء الخلفي إلى مكانه.

إلغاء قفل الشاشة

بشكل افتراضي، ستقفل الشاشة بعد فترة من عدم النشاط ثم تتوقف عن التشغيل.




إلغاء قفل الشاشة

- 1 اضغط على زر الطاقة/القفل أو اضغط مرتين على الشاشة.
- 2 مرّر الشاشة في أي اتجاه لإلغاء قفلها.

تلميح! Smart Lock

يمكنك استخدام ميزة Smart Lock لتسهيل عملية إلغاء قفل الهاتف. يمكنك تعيينها لإبقاء الهاتف غير مقفل عندما يكون متصلاً بجهاز Bluetooth موثوق به أو عندما تكون متواجداً في موقع مألوف مثل المنزل أو مكان العمل أو عندما يتعرّف على وجهك.

إعداد Smart Lock

- 1 اضغط على  <  < علامة التبويب التطبيقات < .
- 2 اضغط على علامة التبويب إعدادات الشاشة < تأمين الشاشة < Smart Lock.
- 3 قبل إضافة أي أجهزة موثوق بها أو أماكن موثوق بها أو وجه موثوق به. عليك القيام بإعداد قفل شاشة (نقش أو رمز PIN أو كلمة مرور).

تلميحات شاشة اللمس


في ما يلي بعض التلميحات حول كيفية التنقل على الهاتف.


- **الضغط أو اللمس** - اضغط بإصبع واحد لتحديد عناصر وارتباطات واختصارات وأحرف على لوحة المفاتيح على الشاشة.
- **اللمس باستمرار** - المس باستمرار عنصرًا على الشاشة عبر الضغط عليه من دون رفع إصبعك إلى حين حدوث الإجراء.
- **السحب** - المس باستمرار عنصرًا ما لفترة وجيزة مع تحريك إصبعك على الشاشة من دون رفعه حتى تصل إلى الموضع الهدف. يمكنك سحب عناصر على الشاشة الرئيسية لتغيير موضعها.
- **التمرير أو التحريك** - للتمرير أو التحريك، مرّر إصبعك بسرعة على سطح الشاشة من دون توقف (لتجنّب سحب عنصر).
- **الضغط مرتين** - اضغط مرتين لتكبير/تصغير صفحة ويب أو خريطة (إذا كان التطبيق يدعم الميزة).
- **التصغير والتكبير باستخدام الإصبعين** - استخدم الإصبعين السبابة والإبهام في حركة تقريب أو توسيع لتكبير المتصفح أو الخرائط أو تصغيرها، أو عند تصفح الصور (إذا كان التطبيق يدعم الميزة).
- **تدوير الشاشة** - من التطبيقات والقوائم العديدة، يتم تعديل اتجاه الشاشة الفعلي وفقًا للاتجاه الفعلي للجهاز.

ملاحظة:

- لا تضغط بقوة، فشاشة الضغط حساسة بشكل كافٍ يتيح لها التعرف على ضغطة خفيفة ولكن ثابتة.
- استخدم طرف إصبعك للضغط على الخيار المطلوب. احرص على عدم الضغط على أي مفاتيح أخرى.

الشاشة الرئيسية

تعتبر الشاشة الرئيسية نقطة بداية تشغيل وظائف عديدة. وتتيح لك إضافة عناصر مثل اختصارات التطبيقات أو عناصر واجهة الاستخدام الخاصة بـ Google لتمنحك وصولاً فورياً إلى المعلومات والتطبيقات. هذه هي المساحة المحيطة الافتراضية والتي يمكن الوصول إليها من أي قائمة عبر الضغط على .

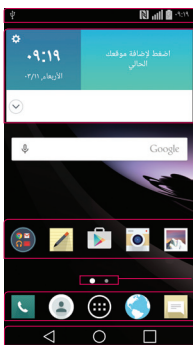

1 شريط الحالة

2 عنصر واجهة الاستخدام

3 رموز التطبيقات

4 مؤشر الموقع

5 مساحة المفاتيح السريع

6 مفاتيح اللمس على الشاشة الرئيسية

1 لإظهار معلومات حول حالة الهاتف بما في ذلك الوقت وقوة الإشارة وحالة البطارية ورموز الإشعارات.

2 تُعد عناصر واجهة الاستخدام تطبيقات مضمنة يمكن الوصول إليها عبر إطار التطبيقات أو الشاشة الرئيسية. وبخلاف الاختصار، يمكن لعنصر واجهة استخدام أن يعمل كتطبيق على الشاشة.

3 اضغط على رمز (تطبيق، مجلد، الخ) لفتحه واستخدامه.

4 لتحديد أي مساحة محيطة للشاشة الرئيسية تظهر على الشاشة الحالية.

5 لتوفير الوصول بلمسة واحدة إلى الوظيفة في أي مساحة محيطة للشاشة الرئيسية.

<p>للعودة إلى الشاشة السابقة. ولإغلاق العناصر المنبثقة مثل القوائم ومربرات الحوار ولوحة المفاتيح التي تظهر على الشاشة. المس باستمرار للوصول إلى النافذة المزدوجة.</p>	<p>◀ مفتاح رجوع</p>
<p>للعودة إلى الشاشة الرئيسية من أي شاشة.</p>	<p>○ مفتاح الشاشة الرئيسية</p>
<p>لعرض التطبيقات المستخدمة حديثاً. يؤدي لمس هذا المفتاح باستمرار إلى فتح قائمة الخيارات المتوفرة.</p>	<p>□ مفتاح التطبيقات الحديثة</p>

الشاشة الرئيسية الموسعة

يوفر نظام التشغيل مساحات محيطية متعددة للشاشة الرئيسية بهدف توفير مساحة أكبر لإضافة رموز وعناصر واجهة استخدام والمزيد غيرها.

- مرّر إصبعك إلى اليسار أو اليمين على الشاشة الرئيسية للوصول إلى مساحات محيطية إضافية.

تخصيص الشاشة الرئيسية

يمكنك تخصيص الشاشة الرئيسية عبر إضافة تطبيقات وعناصر واجهة استخدام وتغيير الخلفيات.

إضافة عناصر إلى الشاشة الرئيسية

- 1 المس باستمرار الجزء الفارغ من الشاشة الرئيسية.
- 2 في القائمة وضع الإضافة. حدد العنصر الذي تريد إضافته. ستري عندئذٍ هذا العنصر الذي تمت إضافته إلى المساحة المحيطة للشاشة الرئيسية.
- 3 اسحبه إلى الموضع المطلوب وارفع إصبعك.

تلميح! لإضافة رمز تطبيق إلى الشاشة الرئيسية من قائمة التطبيقات، المس باستمرار التطبيق الذي تريد إضافته.

إزالة عنصر عن الشاشة الرئيسية


• الشاشة الرئيسية < المس باستمرار الرمز الذي تريد إزالته < اسحبه إلى  .

إضافة تطبيق كمفتاح سريع


• من قائمة التطبيقات أو على الشاشة الرئيسية، المس باستمرار رمز تطبيق واسحبه إلى مساحة المفتاح السريع. يمكن إضافة ما يصل إلى 7 تطبيقات.

إزالة تطبيق من مساحة المفتاح السريع


• المس باستمرار المفتاح السريع المطلوب واسحبه إلى  .

ملاحظة:  تنعذر إزالة مفتاح التطبيقات.

تخصيص رموز التطبيقات على الشاشة الرئيسية

- 1 المس باستمرار رمز تطبيق موجود مسبقاً على المساحات المحيطة للشاشة الرئيسية. يظهر رمز التحرير  في الزاوية اليمنى العليا من التطبيق.
- 2 اضغط على رمز التطبيق مجددًا وحدد تصميم الرمز والحجم المطلوبين.
- 3 اضغط على موافق لحفظ التغيير.


العودة إلى التطبيقات المستخدمة مؤخرًا

- 1 اضغط على . ستظهر قائمة بالتطبيقات المستخدمة مؤخرًا.
- 2 اضغط على رمز لفتح التطبيق. أو اضغط على  للعودة إلى الشاشة السابقة.

لوحة الإشعارات

تُعلمك الإشعارات بوصول رسائل جديدة وأحداث تقويم وتنبهات بالإضافة إلى الأحداث الجارية على سبيل المثال أثناء التنقل مع التوجيه الصوتي والإرشاد بالصوت والصورة. عند وصول إشعار، يظهر رمزه عند أعلى الشاشة. تظهر رموز الإشعارات المعلقة على اليسار ورموز النظام مثل Wi-Fi وقوة البطارية على اليمين.


ملاحظة: قد تختلف الخيارات المتوفرة استنادًا إلى المنطقة أو موافق الخدمة.

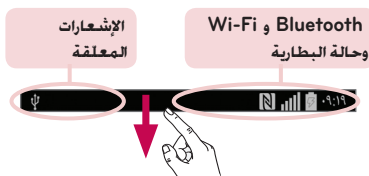

فتح لوحة الإشعارات

مرّر لأسفل من شريط الحالة لفتح لوحة الإشعارات. لإغلاق لوحة الإشعارات، المس الشاشة واسحبها إلى الأعلى.

1 مساحة التبديل السريع

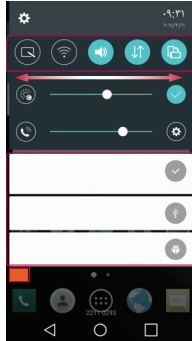

2 الإشعارات

3 مسح

- 1 اضغط على كل مفتاح تبديل سريع لتشغيله أو إيقاف تشغيله. المس باستمرار المفتاح للوصول إلى قائمة إعدادات الوظيفة. لرؤية المزيد من مفاتيح التبديل، حرّك إصبعك إلى اليسار أو اليمين. اضغط على (☰) لإزالة مفاتيح التبديل أو إضافتها أو إعادة ترتيبها.
- 2 تم إدخال كل من الإشعارات الحالية مع وصف موجز. اضغط على إشعار لفتح التطبيق المناسب الذي يديره.
- 3 اضغط لمسح الإشعارات كافة.



رموز المؤشر على شريط الحالة

تظهر رموز المؤشر على شريط الحالة في الأعلى للإبلاغ عن المكالمات التي لم يُرد عليها والرسائل الجديدة وأحداث التقويم وحالة الجهاز والمزيد.



توفر الرموز المعروضة في أعلى الشاشة معلومات حول حالة الجهاز. الرموز المدرجة في الجدول أدناه هي بعض أشهر الرموز.

الوصف	الرمز	الوصف	الرمز
يتم تشغيل ملف وسائط حاليًا		لم يتم إدخال بطاقة SIM	
تم تمكين الوضع الصامت		لا يوجد إشارة شبكة متوفرة	
وضع الاهتزاز قيد التشغيل		وضع الرحلات الجوية قيد التشغيل	
البطارية مشحونة بشكل كامل		متصل بشبكة Wi-Fi	
جاري شحن البطارية		سماعة الرأس السلكية متصلة	
الهاتف متصل بالكمبيوتر الشخصي عبر كابل USB		مكالمة جارية	
تنزيل البيانات		مكالمات لم يرد عليها	
تحميل البيانات		Bluetooth قيد التشغيل	
GPS قيد التشغيل		تحذير النظام	
تتم مزامنة البيانات		تم تعيين منبه	
اختيار أسلوب الإدخال		يتوفر بريد صوتي جديد	

مشاركة محتوى خادم الوسائط قيد التشغيل		رسالة نصية أو وسائط متعددة جديدة	
إن نقطة Wi-Fi الفعالة نشطة		NFC قيد التشغيل	

ملاحظة: قد يختلف موضع الرمز في شريط الحالة وفقًا للوظيفة أو الخدمة.

لوحة المفاتيح على الشاشة

يمكنك إدخال نص باستخدام لوحة المفاتيح على الشاشة. تظهر لوحة المفاتيح على الشاشة عند الضغط على حقل إدخال نص متوفر.

استخدام لوحة المفاتيح وإدخال النصوص

اضغط مرة واحدة لكتابة الحرف التالي بالأحرف الكبيرة. اضغط مرتين للكتابة بأحرف كبيرة.

اضغط للوصول إلى قائمة إعدادات لوحة المفاتيح.

اضغط لإدخال مسافة.

اضغط لإدخال سطر جديد.

اضغط لحذف الحرف السابق.


إدخال الأحرف المشكّلة

عندما تحدد الفرنسية أو الإسبانية كلغة إدخال النص، بإمكانك إدخال أحرف مميزة في الفرنسية أو الإسبانية (مثل "á").

على سبيل المثال، لإدخال الحرف "á"، المس باستمرار مفتاح الحرف "a" حتى يظهر الإطار المنبثق ويعرض الأحرف المميزة ذات الصلة. ثم اسحب إصبعك من دون رفعه إلى الحرف المميز المطلوب.



التقاط إيماءة اليد

التقط صورة بواسطة إيماءة بيدك. لالتقاط صورة. ارفع يدك حتى تكتشفها الكاميرا الأمامية ويظهر مربع على الشاشة.

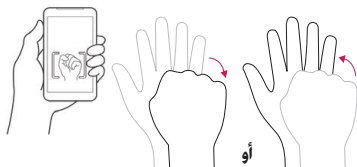




عرض سريع

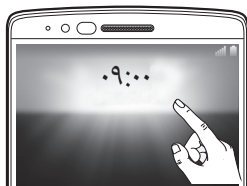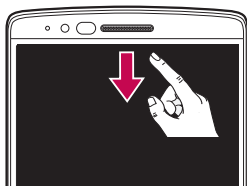
عندما تكون شاشة الهاتف متوقفة عن التشغيل، يمكنك رؤية شريط الحالة والوقت والتاريخ عبر تمرير إصبعك نحو أسفل الشاشة.



عرض الإيماءات

بعد التقاط صورة بواسطة عدسة الكاميرا الأمامية. يمكنك التحقق تلقائيًا من الصورة التي التقطتها بواسطة هذه الإيماءة.

- 1 اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .
- 2 التقط صورة باستخدام الكاميرا الأمامية.
- 3 بعد التقاط الصورة، قَرّب الهاتف من وجهك. سيتم عندئذٍ عرض الصورة التي تم التقاطها.

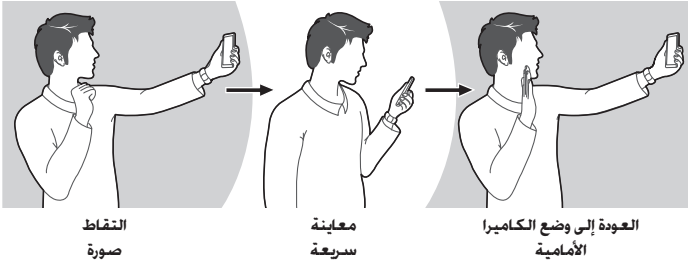

ملاحظة:

- قد لا تعمل هذه الميزة بشكل صحيح وفقًا لسرعة الإيماءة والزاوية التي تم القيام بالإيماءة منها.
- عند تغيير الزاوية بعد المعاينة السريعة، ستعود إلى وضع الكاميرا. عليك الانتقال إلى المعرض لعرض الصورة مرة أخرى.

ضبط تشغيل/إيقاف الشاشة

يمكنك تنشيط الشاشة أو إيقاف تشغيلها بسهولة تامة، إذ ما عليك سوى الضغط مرتين عليها. عندما تكون الشاشة متوقفة عن التشغيل وخاملة، اضغط مرتين وبسرعة على وسط الشاشة لتنشيطها. لإيقاف تشغيل الشاشة، اضغط مرتين على شريط الحالة في أي شاشة (باستثناء محدد منظر الكاميرا) أو مساحة فارغة على الشاشة الرئيسية.

ملاحظة: عند استخدام ميزة تشغيل/إيقاف الشاشة لتنشيط الشاشة، تأكد من عدم تغطية جهاز استشعار الأشياء القريبة. إذ قد يمنع ذلك تشغيل الشاشة. صُممت هذه الميزة لمنع تشغيل الجهاز عن غير قصد إذا كان في الجيب أو مكان التخزين.

Knock Code

تسمح لك ميزة Knock Code بتنشيط الشاشة وإلغاء قفلها باستخدام نقش Code الخاص بك. عند تمكينه، يُقسّم Knock Code الشاشة إلى 4 أقسام ويستخدم مجموعة الضغوط الفريدة الخاص بك لتأمين الجهاز. يمكنك تعطيل هذه الميزة في إعدادات قفل الشاشة.

ملاحظة:

- إذا أدخلت Knock Code خاطئًا 6 مرات، فستضطر إلى استخدام معلومات تسجيل الدخول إلى حساب Google أو استخدام رمز PIN الاحتياطي.
- استخدم طرف الإصبع بدلاً من الظفر للضغط على الشاشة لتشغيلها أو إيقاف تشغيلها.
- عندما يكون Knock Code معطلًا، يمكنك استخدام وظيفة تشغيل/إيقاف الشاشة عبر الضغط على الشاشة.

- 1 اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < علامة التبويب إعدادات الشاشة < تأمين الشاشة < اختر قفل الشاشة < Knock Code.
- 2 اتبع الخطوات على الشاشة لتعيين Knock Code الخاص بك.
- 3 اضغط على تم عندما تنتهي.


إلغاء قفل الشاشة باستخدام Knock Code

يمكنك تنشيط الشاشة وإلغاء قفلها عبر الضغط على Knock Code، الذي تم تعيينه في القسم السابق. عندما تكون الشاشة متوقفة عن التشغيل.

تسمح لك ميزة QuickMemo+ بإنشاء مذكرات والنقاط لقطات شاشة. اتخذ لقطات شاشة وارسم عليها وشاركها مع العائلة والأصدقاء باستخدام QuickMemo+.

1 (عندما تكون الشاشة متوقفة عن التشغيل) اضغط باستمرار على زر رفع مستوى الصوت.

أو

(عندما تكون الشاشة قيد التشغيل) المس شريط الحالة ومزّره لأسفل واضغط على .

2 استخدم القائمة للتحديد من الخيارات المتوفرة نوع القلم و اللون و المحمحة وإنشاء مذكرة.





3 اضغط على  لحفظ المذكرة. للخروج من وظيفة QuickMemo+ في أي وقت، اضغط على .





أو



من أي شاشة، استخدم لوحة الإشعارات للوصول بسهولة إلى المفكرة والتقويم والحاسبة والمزيد مع QSlide.

اضغط للخروج من وظيفة Qslide والعودة إلى الإطار الكامل.		1
اضغط لضبط مستوى شفافية الإطار.		2
اضغط لإغلاق إطار QSlide.		3
اسحب لضبط الحجم.		4




- 1 المس شريط الحالة ومزّره لأسفل < اضغط على **QSlide** لعرض تطبيقات QSlide المتوفرة. وعند استخدام التطبيقات التي تدعم QSlide، اضغط على . ستظهر الوظيفة كإطار صغير على الشاشة.
- 2 يمكنك استخدام الشاشة والضغط عليها ضمن إطارات **QSlide** عندما يكون شريط الشفافية غير كامل .

ملاحظة: يمكن لـ QSlide دعم ما يصل إلى إطار واحد كل مرة.

QuickRemote

تحوّل QuickRemote هاتفك إلى وحدة تحكم عن بُعد شاملة للتلفاز المنزلي وجهاز فك التشفير ونظام الصوت وغيرها.

الإعداد

1 المس بشريط الحالة ومرّره لأسفل واضغط على  < أضف جهاز تحكم عن بُعد.




أو

اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < اضغط على .

2 حدد نوع الجهاز وعلامته التجارية ثم اتبع الإرشادات التي تظهر على الشاشة لتكوين الجهاز.

الوصول إلى QuickRemote

3 عند الانتهاء من الإعداد الأولي، يمكنك بسهولة الوصول إلى QuickRemote من لوحة الإشعارات. افتح لوحة الإشعارات واستخدم وظائف QuickRemote.

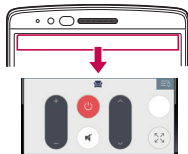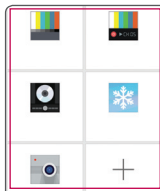



ملاحظة: تعمل وظيفة QuickRemote بالطريقة ذاتها كإشارات ما دون الحمراء (IR) لوحدة تحكم عن بُعد. احرص على عدم تغطية مؤشر الأشعة ما دون الحمراء الموجود في الجهة العلوية من الهاتف عند استخدام وظيفة QuickRemote. قد تكون هذه الوظيفة غير مدعومة حسب الطراز أو الشركة المصنعة أو شركة الخدمة.

عندما تقوم بتشغيل هاتفك للمرة الأولى، ستتوفر لديك فرصة تسجيل الدخول إلى حساب Google وتحديد كيفية استخدام بعض خدمات Google.

إعداد حساب Google

• أثناء التمهيد الأولي لجهازك، تأكد من إنشاء اتصال بين الجهاز والويب. ثم قم بتسجيل الدخول إلى حساب Google من شاشة الإعداد التي تم طلبها.
أو



• بعد الخروج من معالج بدء التشغيل، اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < علامة التبويب عامة < الحسابات والمزامنة < إضافة حساب < Google.

إذا كان لديك حساب Google، أدخل عنوان البريد الإلكتروني واضغط على التالي. بعد الانتهاء من إعداد حساب Google على هاتفك، ستتم تلقائيًا مزامنة الجهاز مع حساب Google على الويب (في حال توفر اتصال بيانات).
وفقًا لإعدادات المزامنة، تتم مزامنة الأسماء ورسائل Gmail وأحداث التقويم ومعلومات أخرى من هذه التطبيقات والخدمات على الويب مع الهاتف.
بعد تسجيل الدخول، يمكنك استخدام Gmail™ والاستفادة من خدمات Google على هاتفك.

Wi-Fi

يمكنك الوصول إلى إنترنت بسرعة عالية ضمن تغطية نقطة الوصول اللاسلكية (AP).




الاتصال بشبكات Wi-Fi

- 1 اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < علامة التبويب الشبكات < Wi-Fi.
 - 2 عيّن Wi-Fi إلى تشغيل لتشغيلها وابدأ بمسح شبكات Wi-Fi المتوفرة.
 - 3 اضغط على شبكة للاتصال بها.
- إذا كانت الشبكة محمية برمز قفل، ستحتاج إلى إدخال مفتاح حماية أو كلمة مرور.

ملاحظة: يعرض شريط الحالة رمزًا تشير إلى حالة Wi-Fi.

ملاحظة: إذا كنت خارج منطقة تغطية Wi-Fi أو عيّن Wi-Fi إلى إيقاف التشغيل، قد يتصل الجهاز تلقائيًا بالويب باستخدام بيانات المحمول الأمر الذي يؤدي إلى فرض رسوم إضافية.

تلميح! كيفية الحصول على عنوان MAC الخاص بالهاتف



- اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < علامة التبويب الشبكات < Wi-Fi <  < خيارات متقدمة Wi-Fi < عنوان MAC.

يمكنك استخدام Bluetooth للاتصال بسماعات الرأس أو أنظمة الصوت أو حتى تبادل المعلومات بين أجهزة قريبة.

ملاحظة:

- لا تحمل شركة LG مسؤولية فقدان البيانات التي يتم إرسالها أو استقبالها عبر ميزة Bluetooth أو اعتراضها أو إساءة استخدامها.
- تأكد دائمًا من مشاركة البيانات واستقبالها من الأجهزة الموثوق بها والمحمية بطريقة صحيحة.
- وفي حالة وجود عوائق بين الأجهزة، قد تقل مسافة التشغيل.
- قد تكون بعض الأجهزة غير متوافقة مع الجهاز لديك وبخاصة تلك الأجهزة التي لم تختبرها Bluetooth SIG أو لم تعتمدها.

إقران الهاتف بجهاز Bluetooth آخر

- 1 اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < علامة التبويب الشبكات < Bluetooth.
- 2 عَيِّن Bluetooth إلى تشغيل.
- 3 اضغط على البحث عن أجهزة لعرض الأجهزة في نطاق Bluetooth.
- 4 اختر الجهاز الذي تريد إقرانه من القائمة واتبع التعليمات التالية كافة لإكمال عملية الاقتران. بعد نجاح عملية الاقتران، يتصل هاتفك بالجهاز الآخر.



ملاحظة: قد يكون لبعض الأجهزة، وخصوصًا سماعات الرأس أو الأجهزة اللايدوية التي تُستخدم في السيارات رمز PIN افتراضي خاص بميزة Bluetooth مثل 0000.

إرسال البيانات عبر Bluetooth

- 1 باستخدام تطبيق يدعم المشاركة، حدد موقع البيانات أو الملفات التي تريد مشاركتها.
- 2 حدد خيار مشاركة.
- 3 حدد Bluetooth.
- 4 حدد جهاز Bluetooth المقترن (أو قم بإقرانه بجهاز جديد).

ملاحظة: قد تختلف طريقة تحديد خيار حسب نوع البيانات.

تلقي البيانات عبر Bluetooth

- 1 اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < علامة التبويب الشبكات < Bluetooth.
- 2 عيّن Bluetooth إلى تشغيل لتشغيله.
- 3 ستنتلقى طلبًا لقبول محاولة الاقتران من الجهاز المرسل. احرص على تحديد قبول.

Wi-Fi Direct

يوفر Wi-Fi Direct اتصالاً مباشرًا بين الأجهزة الممكنة لاستخدام Wi-Fi من دون الحاجة إلى نقطة وصول.

تشغيل Wi-Fi Direct

- 1 اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  < علامة التبويب الشبكات < Wi-Fi.
- 2 اضغط على  < خيارات متقدمة Wi-Fi < Wi-Fi Direct.

ملاحظة: عندما يكون الجهاز مدرجًا في هذه القائمة، يكون مرئيًا لأجهزة Wi-Fi Direct الأخرى المرئية والقريبة.

يسمح لك SmartShare بتلقي محتوى وسائط متعددة من الهواتف أو الأجهزة اللوحية من LG.

- 1 أثناء عرض المحتوى الذي تريد مشاركته، اضغط على  أو  < SmartShare.
- 2 اضغط على **Play** أو **Beam** في الإطار المنبثق الذي يظهر.
• **Play**: يمكنك تشغيل المحتوى على التلفاز وعبر مكبر صوت Bluetooth، الخ.
• **Beam**: يمكنك إرسال المحتوى إلى أجهزة Bluetooth أو الهواتف والأجهزة اللوحية من LG التي تدعم برنامج *SmartShare Beam.
* ينقل SmartShare Beam محتويات الوسائط المتعددة عبر Wi-Fi Direct بسرعة.
- 3 اضغط على الجهاز الذي تريد مشاركة المحتويات معه من القائمة.
• في حال لم يكن الجهاز مدرجًا في القائمة، احرص على تشغيل Wi-Fi أو Wi-Fi Direct أو Bluetooth. ثم اضغط على **إعادة المسح**.

الاستمتاع بتشغيل المحتويات من الأجهزة القريبة من هاتفك

- 1 لإنشاء اتصال بين الأجهزة القريبة والهاتف، اضغط على خيار الأجهزة المجاورة في تطبيق **المعرض وموسيقى**.
• احرص على توصيل هاتفك والأجهزة القريبة بشبكة Wi-Fi نفسها وتشغيل ميزة DLNA على الجهاز القريب.
- 2 اضغط على الجهاز الذي تريد الاتصال به.
إذا لم يكن الجهاز مدرجًا في القائمة، اضغط على بحث عن الأجهزة القريبة.
- 3 بعد إنشاء اتصال، يمكنك الاستمتاع بتشغيل المحتوى على الهاتف.

إرسال بيانات بين الكمبيوتر الشخصي والجهاز

يمكنك نسخ بيانات أو نقلها بين الكمبيوتر الشخصي والجهاز.

نقل البيانات

- 1 قم بتوصيل الجهاز بالكمبيوتر الشخصي باستخدام كابل USB المتوفر مع الهاتف.
- 2 افتح لوحة الإشعارات وحدد جهاز الوسائط (MTP).
- 3 سيظهر إطارًا منبثقًا على الكمبيوتر الشخصي، ما يسمح لك بنقل البيانات المطلوبة.


ملاحظة:

- يلزم تثبيت برنامج التشغيل LG Android Platform Driver على الكمبيوتر الشخصي للتمكن من اكتشاف الهاتف.
- تحقق من متطلبات استخدام جهاز الوسائط (MTP).



المطلب	العناصر
Microsoft Windows XP SP3 أو Vista أو أعلى	برنامج التشغيل
Windows Media Player 10 أو إصدار أعلى	إصدار Window Media Player

إجراء مكالمة

- 1 اضغط على  لفتح لوحة الطلب.
- 2 أدخل الرقم باستخدام لوحة الطلب. لحذف رقم، اضغط على .
- 3 بعد إدخال الرقم المطلوب، اضغط على  لإجراء المكالمة.
- 4 لإنهاء المكالمة، اضغط على .

تلميح! لإدخال علامة "+" لإجراء مكالمات دولية، المس باستمرار .




الاتصال بالأسماء

- 1 اضغط على  لفتح الأسماء.
- 2 مرّر عبر قائمة الأسماء. يمكنك أيضًا إدخال الاسم في حقل البحث أو تمرير شريط الأحرف الأبجدية في الجهة اليسرى من الشاشة.
- 3 لإجراء المكالمة، اضغط على  بالقرب من الاسم الذي تريد الاتصال به.

الرد على مكالمة ورفضها

- عند تلقي مكالمة، مرّر  في أي اتجاه للرد عليها.
مرّر  في أي اتجاه لرفض المكالمة.

إجراء مكالمة ثانية


- 1 أثناء المكالمة الأولى، اضغط على  > إضافة مكالمة.
- 2 أدخل الرقم واضغط على  لإجراء المكالمة.
- 3 يتم عرض المكالمتين معًا على شاشة المكالمة. يتم إقفال المكالمة الأولى ووضعها في حالة الانتظار.
- 4 للتبديل بين الأرقام، اضغط على الرقم الظاهر على الشاشة. يمكنك أيضًا الضغط على  لبدء مكالمة جماعية.
- 5 لإنهاء كل المكالمات، اضغط على إنهاء.

ملاحظة: ستُفرض عليك رسوم مقابل كل مكالمة تجريها.

عرض سجلات المكالمات



على الشاشة الرئيسية، اضغط على  وحدد علامة التبويب السجلات. ستظهر قائمة بكل المكالمات الصادرة والمستلمة والتي لم يُرد عليها.

تلميح!

- اضغط على أي إدخال في سجل المكالمات لعرض تاريخ المكالمة ووقتها ومدتها.
- اضغط على ، ثم اضغط على حذف الكل لحذف كافة العناصر المسجلة.


إعدادات المكالمات

يمكنك تكوين إعدادات المكالمات الهاتفية، مثل إعادة توجيه المكالمات بالإضافة إلى الميزات المميزة الأخرى التي تقدمها شركة الاتصالات.



- 1 على الشاشة الرئيسية، اضغط على  لفتح لوحة الطلب.
- 2 اضغط على  لعرض الخيارات المتوفرة.
- 3 اضغط على إعدادات المكالمات وقم بتكوين الخيارات المطلوبة.

أضف أسماء إلى الهاتف وقم بمزامنتها مع الأسماء الموجودة في حساب Google أو حسابات أخرى تدعم مزامنة الأسماء.

البحث عن اسم

- 1 اضغط على  لفتح الأسماء.
- 2 اضغط على بحث في الاسماء وأدخل الاسم باستخدام لوحة المفاتيح. يمكنك أيضًا التمرير عبر الأحرف الأبجدية في الجهة اليسرى من الشاشة.


إضافة اسم جديد

- 1 اضغط على  وأدخل رقم الاسم الجديد.
- 2 اضغط على  < إضافة إلى الأسماء > اسم جديد.
- 3 إذا أردت إضافة صورة إلى الاسم الجديد. اضغط على رمز الصورة. اختر بين التقاط صورة أو اختر من المعرض.
- 4 أدخل معلومات الاسم المطلوبة.
- 5 اضغط على حفظ.


الاسماء المفضلة

يمكنك تصنيف الأسماء التي تطلبها بشكل متكرر كمفضلات.



إضافة اسم إلى المفضلات

- 1 اضغط على  لفتح الأسماء.
- 2 اضغط على اسم لعرض تفاصيله.
- 3 اضغط على النجمة في الزاوية العليا اليسرى من الشاشة. يتغير لون النجمة إلى اللون الأصفر.

إزالة اسم من قائمة المفضلات

- 1 اضغط على  لفتح الأسماء.
- 2 اضغط على علامة التبويب المفضلة واختر اسمًا لعرض تفاصيله.
- 3 اضغط على النجمة الصفراء في الزاوية العليا اليسرى من الشاشة. يصبح لون النجمة رماديًا وتتم إزالة الاسم من المفضلات.



إنشاء مجموعة

- 1 اضغط على  لفتح الأسماء.
- 2 اضغط على المجموعات <  < مجموعة جديدة.
- 3 أدخل اسمًا للمجموعة الجديدة. يمكنك أيضًا تعيين نغمة رنين خاصة للمجموعة.
- 4 اضغط على حفظ لحفظ المجموعة.


ملاحظة: إذا حذفت مجموعة. فلن تفقد الأسماء التي تم تعيينها إلى تلك المجموعة. بل ستبقى موجودة في قائمة الأسماء.

يجمع هاتفك بين ميزة الرسائل النصية ورسائل الوسائط المتعددة في قائمة واحدة بديهية وسهلة الاستخدام.

إرسال رسالة

- 1 اضغط على  على الشاشة الرئيسية وعلى  لإنشاء رسالة جديدة.
- 2 أدخل اسمًا أو رقم اسم في الحقل إلى. بمجرد إدخال اسم، تظهر الأسماء المطابقة. يمكنك الضغط على مستلم مقترح وإضافة أكثر من اسم واحد.

ملاحظة: قد يتم فرض رسوم عليك مقابل كل رسالة نصية ترسلها. يرجى استشارة موفر الخدمة لديك.

- 3 اضغط على الحقل اكتب رسالة وابدأ بإنشاء الرسالة.
- 4 اضغط على  لفتح خيارات الرسائل.

تلميح! يمكنك الضغط على  لإرفاق ملف تريد مشاركته.

- 5 اضغط على إرسال لإرسال الرسالة.

تلميح!

- قد يختلف الحد المؤلف من 160 حرفًا من بلد إلى آخر وفقًا إلى اللغة وكيفية ترميز الرسالة النصية.
- إذا تمت إضافة صورة أو فيديو أو ملف صوت إلى رسالة نصية، فستتحول تلقائيًا إلى رسالة وسائط متعددة وستُفرض عليك رسومًا وفقًا لذلك.

عرض المحادثات



تظهر رسائل الوسائط المتعددة والرسائل النصية التي تم تبادلها مع طرف آخر بترتيب زمني لتتمكن من رؤية محادثاتك والعثور عليها بسهولة.

تغيير إعدادات الرسائل

يتم تحديد إعدادات الرسائل الخاصة بالهاتف مسبقًا للسماح لك بإرسال الرسائل على الفور. يمكنك تغيير الإعدادات وفقًا لتفضيلاتك.






• افتح تطبيق الرسائل واضغط على  > الإعدادات.

العمل مع مجلدات الحسابات

للوصول إلى مجلدات حسابات البريد الإلكتروني، افتح تطبيق  واضغط على  > مجلدات. يملك كل حساب مجلد صندوق وارد وصندوق صادر ورسائل مرسله ومسودات. قد تتوفر لديك مجلدات إضافية، ويتوقف ذلك على الميزات التي يعتمدها موفر خدمة الحسابات.

إنشاء بريد إلكتروني وإرساله





إنشاء رسائل وإرسالها

- 1 عندما تكون في تطبيق ، اضغط على  لإنشاء بريد إلكتروني جديد.
- 2 أدخل عنوان بريد مستلم رسالة البريد الإلكتروني المطلوب. عند إدخال نص، سيتم اقتراح العناوين المطابقة من الأسماء. قم بفصل العناوين المتعددة بفاصلة منقوطة.
- 3 اضغط على  لإضافة نسخة/نسخة مخفية واضغط على  لإرفاق ملفات إذا لزم الأمر.
- 4 أدخل نص البريد الإلكتروني.
- 5 اضغط على  لإرسال البريد الإلكتروني.

افتح تطبيق الكاميرا. اضغط على  <  < التطبيقات علامة التبويب (إذا لزم الأمر) < .

خيارات الكاميرا في محدد المنظر






- 1 إخفاء/عرض الخيارات - اضغط على هذا الخيار لإخفاء/عرض خيارات الكاميرا في محدد المنظر.
- 2 الفلاش - يسمح لك هذا الخيار بإدارة فلاش الكاميرا. اختر من بين إيقاف  تشغيل  تلقائي  تلقائي .
- 3 تبديل الكاميرا - اضغط على هذا الخيار للتبديل بين عدسة الكاميرا الخلفية والعدسة الأمامية.
- 4 وضع اللقطة - يسمح لك هذا الخيار بتحديد وضع اللقطة للصورة. اختر من بين تلقائي أو بانوراما أو مزوج.
- 5 الإعدادات - اضغط على هذا الخيار لضبط إعدادات الكاميرا والفيديو.
- 6 المعرض - اضغط للوصول إلى المعرض.
- 7 التسجيل - اضغط على هذا الخيار لبدء تسجيل فيديو.

8 **التقاط** - اضغط على هذا الخيار لالتقاط صورة.


9 **مفتاح رجوع** - اضغط على هذا الخيار لإغلاق القائمة المحددة أو الخروج من تطبيق الكاميرا.

استخدام الإعدادات المتقدمة

في محدد المنظر الخاص بالكاميرا، اضغط على  للوصول إلى إعدادات الكاميرا أدناه.


لجمع الصور التي تم التقاطها في حالات التعرّض المختلفة في صورة واحدة مثالية للحصول على صورة أفضل في ظروف الإضاءة الصعبة.	
لتحديد استبانة الصورة.	
يتيح لك هذا الخيار التقاط صورة بواسطة أمر صوتي. يمكنك قول LG أو Cheese أو Smile. الخ.	
لتعيين فترة تأخير بعد الضغط على مفتاح الالتقاط. هذا خيار مثالي إن أردت أن تظهر في الصورة أو الفيديو.	
لعرض خطوط الشبكة من أجل مساعدتك في محاذاة الصور ومقاطع الفيديو.	
لفتح دليل المساعدة لعرض كيفية استخدام وظيفة ما.	

التقاط صورة


- 1 افتح تطبيق الكاميرا، وصوّب العدسة نحو الهدف المطلوب تصويره.
- 2 سيظهر مؤشر التركيز في وسط شاشة محدد المنظر. يمكنك أيضًا الضغط على أي جزء من الشاشة للتركيز على هذه النقطة.
- 3 عندما يضيء مؤشر التركيز باللون الأزرق، فهذا يعني أن الكاميرا ركّزت على الهدف الذي تريد تصويره.
- 4 اضغط على  لالتقاط الصورة.

بعد التقاط الصورة


اضغط على الصورة المصغّرة في أسفل شاشة الكاميرا لعرض الصورة الأخيرة التي التقطتها. تتوفر الخيارات التالية.

اضغط لتحرير الصورة.	
اضغط لالتقاط صورة أخرى على الفور.	
اضغط لإرسال صورتك إلى الآخرين أو مشاركتها عبر أي خدمة من خدمات شبكات التواصل الاجتماعي المتوفرة.	
اضغط لحذف الصورة.	
اضغط للوصول إلى الخيارات الإضافية.	
اضغط لإضافة الصورة إلى المفضلة.	


تسجيل فيديو


- 1 افتح تطبيق الكاميرا ووجه العدسة نحو الهدف الذي تريد تصويره بواسطة الفيديو.
- 2 اضغط على  مرة واحدة لبدء التسجيل.

ملاحظة: سيظهر المؤقت على الشاشة.

- 3 يظهر ضوء أحمر في الزاوية العليا اليمنى من محدد المنظر مع مؤقت يظهر طول الفيديو.
- 4 اضغط على  لإيقاف التسجيل.

تلميح!

 - اضغط لالتقاط لقطة شاشة أثناء تسجيل فيديو.

 - اضغط لإيقاف التسجيل مؤقتًا.

بعد تسجيل فيديو

في محدد المنظر. اضغط على صورة الفيديو المصغرة في أعلى الشاشة لعرض الفيديو الأخير الذي سجلته. تتوفر الخيارات التالية.

اضغط لتسجيل فيديو آخر على الفور.	
اضغط لفتح خيارات المشاركة المتوفرة (مثل الرسائل أو Bluetooth) للمشاركة.	
اضغط لحذف الفيديو.	
اضغط للوصول إلى الخيارات الإضافية.	
اضغط لإضافة الفيديو إلى المفضلة.	

ملاحظة: قد يتم فرض رسوم إضافية عند تنزيل رسائل MMS أثناء التجوال.

التركيز التلقائي المتعدد النقاط







عند التقاط صورة، تعمل وظيفة التركيز التلقائي المتعدد النقاط (AF) تلقائيًا وتسمح لك برؤية صورة واضحة.

لقطات متلاحقة






يسمح لك هذا الخيار بالتقاط لقطات متعددة بسرعة. المس باستمرار .

وضع بانوراما

يسمح لك هذا الخيار بالتقاط صورة بانورامية.

- 1 اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .
- 2 اضغط على  بانوراما.
- 3 اضغط على  لبدء التقاط صور بانورامية.
- 4 حرّك هاتفك ببطء باتجاه واحد.
- 5 احرص على أن تكون منطقة التركيز محاذية للخط الأزرق العريض أثناء التقاط الصور.
- 6 اضغط على  للتوقف عن التقاط صور بانورامية.

تسمح لك الميزة مزدوج بالتقاط صورة أو تسجيل فيديو باستخدام عدسة الكاميرا الأمامية والخلفية في الوقت نفسه.

- 1 اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .
- 2 اضغط على الوضع  < .



ملاحظة: اسحب الشاشة الصغيرة لنقلها إلى الموقع الذي تريده. المس باستمرار الشاشة الصغيرة لتغيير حجمها. اضغط على الشاشة الصغيرة للتبديل بين عدستَي الكاميرا.

- 3 اضغط  لإيقاف التسجيل المزدوج.

التكبير أو التصغير الفائق

عند استخدام عدسة الكاميرا الخلفية، يمكنك التكبير أو التصغير بمعدل 8 أضعاف.

ملاحظة: استخدم يدًا ثابتة. لا تعمل هذه الميزة مع بعض الوظائف. كما يمكن أن تتداخل الكائنات عند التقاط صورة للأهداف التي تنحرك.

التكبير/التصغير الحي


يسمح لك هذا الخيار بإجراء التكبير/التصغير الحي لمقطع فيديو قيد التشغيل لجعل القسم المطلوب يبدو أكبر أو أصغر. عند عرض فيديو، استخدم إصبعي السبابة والإبهام في حركة تضم فيها طرفي الإصبعين أو تبعدهما للتصغير أو التكبير.






ملاحظة: لا تضغط بقوة كبيرة؛ فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة لكن ثابتة.

التشغيل المزدوج (Dual Play)

يمكن تشغيل وظيفة التشغيل المزدوج (Dual Play) (مع الاتصال السلكي أو اللاسلكي بشاشتين) على شاشة مختلفة.

ملاحظة: قم بتوصيل جهازين سلكيًا باستخدام كابل (Slimport-HDMI) أو لاسلكيًا (Miracast). يمكن أن يكون الجهاز القابل للاتصال جهاز تلفاز أو شاشة مدعومة من قبل كابل HDMI أو Miracast. تطبيقات المعرض والفيديو معتمدة في التشغيل المزدوج (Dual Play). اضغط على  مرة واحدة عند وجود شاشتين في حالتين مختلفتين (أي عندما تعرض الشاشة فيديو بينما يعرض تطبيق الفيديو على هاتفك شاشة فارغة). ثم يبدأ التشغيل المزدوج (Dual Play). ليست كل مقاطع الفيديو معتمدة لينتم عرضها في وظيفة التشغيل المزدوج. تعمل وظيفة التشغيل المزدوج باستبانة العرض 1280X720 أو أعلى.

المعرض

- يسمح لك المعرض بعرض كل الصور ومقاطع الفيديو وإدارتها.
- اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .

ملاحظة:

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقاً للبرنامج المثبت.
- قد لا تعمل بعض الملفات بشكل صحيح بسبب الترميز.

عرض الصور

يعرض المعرض صورك ضمن مجلدات. عندما يقوم تطبيق، مثل البريد بإنشاء مجلد Download (التنزيل) تلقائياً لاحتواء الصورة. وبطريقة مماثلة، يؤدي التقاط لقطة شاشة تلقائياً إلكترونياً، بحفظ صورة، يتم إلى إنشاء مجلد Screenshots (لقطات الشاشة).



تظهر الصور في مجلد بحسب تاريخ الإنشاء. حدد صورة لعرضها بملء الشاشة. مرر إلى اليسار أو اليمين لعرض الصورة التالية أو السابقة.


التكبير والتصغير

استخدم إحدى الطرق التالية لتكبير صورة معينة:

- اضغط مرتين في أي مكان للتكبير.
- أبعد إصبعين عن بعضهما في أي مكان لتكبير الصورة. ضمّ إصبعين إلى بعضهما أو اضغط مرتين على الصورة لتصغيرها.

تشغيل ملفات الفيديو

- 1 المس  < علامة التبويب التطبيقات (إذا لزم الأمر) < .
- 2 حدد الفيديو الذي تريد مشاهدته.
تتوفر الخيارات التالية.

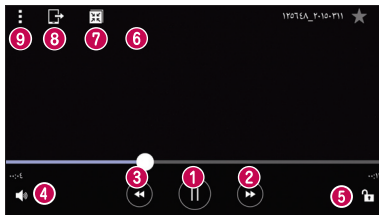

المس لاستئناف تشغيل الفيديو أو إيقاف تشغيله مؤقتًا.	 1
المس للتقديم السريع 10 ثواني.	 2
المس للإرجاع 10 ثواني.	 3
المس لضبط مستوى صوت الفيديو.	 4
المس لقفل أو إلغاء قفل الشاشة.	 5
المس لتدوير الشاشة.	 6
المس لاستخدام QSlide لتطبيق الفيديو.	 7
اضغط لمشاركة الفيديو باستخدام وظيفة SmartShare.	 8
اضغط للوصول إلى الخيارات الإضافية.	 9



لتغيير مستوى الصوت أثناء مشاهدة الفيديو، اضغط على مفتاحي رفع وخفض مستوى الصوت على الجهة الخلفية من الهاتف.

تحرير الصور


عند عرض صورة، اضغط على  .

حذف الصور/ملفات الفيديو

استخدم إحدى الطرق التالية:

- في مجلد، اضغط على  وحدد الصور/مقاطع الفيديو. ثم اضغط على حذف.
- عند عرض صورة، اضغط على  .




تعيين الخلفية

عند عرض صورة، اضغط على  < ضبط الصورة كـ لتعيين الصورة كخلفية أو تعيينها كصورة اسم.




ملاحظة:

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقاً للبرنامج المثبت.
- إذا تجاوز حجم الملف المساحة المتاحة على الذاكرة، فقد يحدث خطأ عند فتح الملفات.

موسيقى

يأتي الهاتف مزوداً بمشغلٍ موسيقى يمكّنك من تشغيل كل المسارات المفضلة لديك. للوصول إلى مشغل الموسيقى، اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .

تشغيل أغنية

- 1 اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .
- 2 اضغط على علامة التبويب الأغاني.
- 3 حدد الأغنية التي تريد تشغيلها.
- 4 تتوفر الخيارات التالية.



1 اضغط لإيقاف التشغيل مؤقتاً.



2 اضغط لاستئناف التشغيل.



اضغط للانتقال إلى المسار التالي في الألبوم أو قائمة التشغيل أو قائمة مزج المسارات. المس باستمرار للتقديم السريع.		2
اضغط لإعادة تشغيل المسار الحالي أو التخطي إلى المسار السابق في الألبوم أو قائمة التشغيل أو قائمة مزج المسارات. المس باستمرار لإرجاع التشغيل.		3
اضغط لضبط مستوى الصوت.		4
اضغط لتعيين التأثيرات الصوتية.		5
اضغط لتشغيل قائمة التشغيل الحالية في وضع مزج المسارات (يتم تشغيل المسارات في ترتيب عشوائي).		6
اضغط للتبديل بين تكرار كل الأغاني أو تكرار الأغنية الحالية أو إيقاف تشغيل التكرار.		7
اضغط لمشاركة الموسيقى باستخدام وظيفة SmartShare.		8
اضغط لإضافة الأغنية إلى المفضلة.		9
اضغط لفتح قائمة التشغيل الحالية.		10
اضغط للوصول إلى الخيارات الإضافية.		11

لتغيير مستوى الصوت أثناء الاستماع إلى الموسيقى، اضغط على أزرار رفع وخفض مستوى الصوت على الجهة الخلفية من الهاتف.

ملاحظة:




- قد تكون بعض تنسيقات الملفات غير مدعومة وفقاً للبرنامج المثبت.
- إذا تجاوز الملف حجم الذاكرة المتاحة، فقد يحدث خطأ عند فتح الملفات.

ملاحظة: قد تخضع حقوق تأليف ونشر ملفات الموسيقى لحماية المعاهدات الدولية وقوانين حقوق النشر الوطنية.

ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إصدار الموسيقى أو نسخها. تمنع القوانين الوطنية في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. قبل تحميل الملف أو نسخه، تحقق من القوانين الوطنية للبلد المعني والمتعلقة باستخدام مثل هذه المواد.

الساعة

يمكنك استخدام تطبيق الساعة من الوصول إلى وظائف التنبيهات والمؤقت والساعة العالمية وساعة الإيقاف. يمكنك الوصول إلى هذه الوظائف عبر الضغط على علامات التبويب في أعلى الشاشة أو التمرير أفقيًا عبر الشاشة.

اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .

تنبيهات

يسمح لك تطبيق التنبيهات بتعيين تلك المنبهات.

- 1 افتح تطبيق الساعة، ثم حدد علامة التبويب تنبيهات.
- 2 اضغط على الرمز منبه جديد لإضافة منبه.
- 3 اضبط الإعدادات كما تقتضي الحاجة واضغط على حفظ.

ملاحظة: يمكنك أيضًا الضغط على منبه موجود لتحريره.

المؤقت

يمكن للمؤقت تنبيهك عبر إصدار إشارة صوتية بعد مرور فترة زمنية محددة.

- 1 افتح تطبيق الساعة، ثم حدد علامة التبويب المؤقت.
- 2 عيّن الوقت المطلوب على المؤقت.

الساعة العالمية

تسمح لك الساعة العالمية بالتحقق بسهولة من الوقت الحالي في مدن أخرى حول العالم.

- 1 افتح تطبيق الساعة، ثم حدد علامة التبويب الساعة العالمية.
- 2 اضغط على الرمز مدينة جديدة وحدد المدينة المطلوبة.

ساعة الإيقاف

تسمح لك علامة التبويب ساعة الإيقاف باستخدام الهاتف كساعة إيقاف.

1 افتح تطبيق الساعة. ثم حدد علامة التبويب ساعة الإيقاف.

2 اضغط على المفتاح بدء لبدء تشغيل ساعة الإيقاف.


ملاحظة: اضغط على مفتاح الدورة لتسجيل مدة الدورات.

3 اضغط على الزر إيقاف لإيقاف تشغيل ساعة الإيقاف.

ملاحظة: لإعادة ضبط ساعة الإيقاف. اضغط على الزر إعادة ضبط. يمكنك أيضًا الضغط على الزر استئناف لتستأنف ساعة الإيقاف عملها.

الحاسبة

يسمح لك تطبيق الحاسبة بإجراء العمليات الحسابية باستخدام حاسبة عادية أو علمية.

1 اضغط على \odot < علامة التبويب التطبيقات (إذا لزم الأمر) < .

2 اضغط على مفاتيح الأرقام لإدخال الأرقام.


3 بالنسبة للعمليات الحسابية البسيطة. اضغط على الوظيفة التي تريدها لإجراء العمليات التالية (+ أو - أو \times أو \div). يتبعها =.

4 بالنسبة للعمليات الحسابية الأكثر تعقيدًا. اضغط على \equiv < الحاسبة العلمية.

ملاحظة: للتحقق من المحفوظات. اضغط على \equiv < محفوظات الحساب.

التقويم

يسمح لك تطبيق التقويم بتعقب جدول الأحداث.









1 اضغط على \odot < علامة التبويب التطبيقات (إذا لزم الأمر) < .


2 اضغط على التاريخ الذي تريد إضافة حدث إليه. ثم اضغط على \oplus .

مسجل الصوت

يسجّل تطبيق مسجّل الصوت ملفات صوتية لتستخدمها بطرق مختلفة.

تسجيل ملف صوتي أو صوت

- 1 اضغط على  <  <  <  (إذا لزم الأمر) <  .
- 2 اضغط على  لبدء التسجيل.
- 3 اضغط على  لإنهاء التسجيل.
- 4 اضغط على  للاستماع إلى التسجيل.

ملاحظة: اضغط على  للوصول إلى التسجيلات. يمكنك الاستماع إلى التسجيل المحفوظ. قد يختلف وقت التسجيل المتوفر عن وقت التسجيل الفعلي.

مهام

يمكنك إضافة مهامك في تطبيق المهام ومزامنتها مع حساب MS Exchange (إذا كانت مدعومة من قبل حساب MS Exchange).



مزامنة MS Exchange

- 1 اضغط على  <  <  < علامة التبويب التطبيقات (إذا لزم الأمر) <  .
- 2 اضغط على علامة التبويب عامة < الحسابات والمزامنة < إضافة حساب.
- 3 اضغط على **Microsoft Exchange** وقم بتسجيل الدخول إلى حسابك.
- 4 احرص على وضع علامة اختيار على خيار مهام عندما يُطلب منك ذلك.

ملاحظة: قد لا يكون MS Exchange معتمداً وفقاً لخادم البريد الإلكتروني.

البحث الصوتي

استخدم هذا التطبيق للبحث في الويب باستخدام صوتك.




1 اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < مجلد Google <

2 قل كلمة أساسية أو عبارة عند ظهور حُدث الآن على الشاشة. حدد إحدى الكلمات الأساسية المقترحة التي تظهر.

ملاحظة: قد لا يتوفر هذا التطبيق استنادًا إلى المنطقة أو موثر الخدمة.

تنزيلات

استخدم هذا التطبيق لرؤية الملفات التي تم تنزيلها باستخدام التطبيقات.

• اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .

ملاحظة: قد لا يتوفر هذا التطبيق استنادًا إلى المنطقة أو موثر الخدمة.

راديو FM

تتوفر ميزة راديو FM مدمجة في الهاتف. الأمر الذي يمكنك من ضبط محطاتك المفضلة والاستماع إليها أثناء التنقل.




اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .

ملاحظة: ستحتاج إلى استخدام سماعات الرأس كي تستمع إلى الراديو. أدخلها في مقبس سماعة الرأس.

ملاحظة: قد لا يتوفر هذا التطبيق استنادًا إلى المنطقة أو موثر الخدمة.

يقدم LG SmartWorld مجموعة من المحتويات المشوّقة - الخطوط، السمات، الألعاب، التطبيقات.


كيف تحصل على LG SmartWorld من الهاتف لديك

- 1 اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .
- 2 اضغط على تسجيل الدخول وأدخل اسم المستخدم وكلمة المرور. إذا لم تكن قد سجّلت عضويتك بعد، فاضغط على تسجيل لإنشاء حساب.
- 3 تصفّح المحتوى الذي تريده وقم بتنزيله.

ملاحظة:

- قد تُفرض عليك رسوم بيانات عند استخدام شبكة الهاتف المحمول للوصول إلى LG SmartWorld.
- قد لا يتوفر LG SmartWorld لكافة النواقل أو في كافة البلدان.

ملاحظة: ماذا لو لم يكن رمز LG SmartWorld موجوداً ؟

- 1 باستخدام متصفح ويب على الجهاز المحمول، قم بالوصول إلى LG SmartWorld (www.lgworld.com) وحدد البلد.
- 2 قم بتنزيل تطبيق LG SmartWorld.
- 3 شغل الملف الذي تم تنزيله وثبته.
- 4 قم بالوصول إلى LG SmartWorld عبر الضغط على الرمز .

مميزات خاصة متوفرة لـ LG SmartWorld

- قم بتخصيص الجهاز باستخدام سمات الصفحة الرئيسية ولوحة المفاتيح والخطوط.
- استمتع بالعروض الترويجية المميزة المقدّمة فقط على LG SmartWorld.
- تجدر الإشارة إلى أن LG SmartWorld متوفر فقط لبعض الأجهزة. يرجى التحقق من موقع www.lgworld.com للحصول على مزيد من المعلومات.

الإنترنت

استخدم هذا التطبيق لتصفح الإنترنت. يوفر لك المتصفح عالمًا سريعًا ومتنوعًا من الألعاب والموسيقى والأخبار والرياضة والترفيه والكثير غير ذلك - كل هذا على الهاتف المحمول.

ملاحظة: يتم فرض رسوم إضافية عند الاتصال بهذه الخدمات وتنزيل المحتوى. اتصل بموفر الشبكة للتحقق من رسوم البيانات.

• اضغط على  <  < علامة التبويب التطبيقات (إذا لزم الأمر) <  .

استخدام شريط أدوات المتصفح



مرّر إلى أعلى صفحة الويب للوصول إلى شريط أدوات المتصفح.

اضغط للرجوع صفحة واحدة إلى الخلف.	
اضغط للتقدم صفحة واحدة.	
اضغط للانتقال إلى الصفحة الرئيسية.	
اضغط لفتح علامة تبويب جديدة.	
اضغط للوصول إلى الإشارات المرجعية.	


عرض صفحات ويب

اضغط على حقل العنوان وأدخل عنوان الويب. ثم اضغط على اذهب على لوحة المفاتيح.

فتح صفحة



للاتنتقال إلى صفحة جديدة، اضغط على  < + .
للاتنتقال إلى صفحة ويب أخرى اضغط على  2. مرر لأعلى أو لأسفل، واضغط على الصفحة لتحديدها.

البحث في ويب باستخدام الصوت

في المتصفح، اضغط على حقل العنوان، ثم اضغط على  . قل كلمة أساسية وحدد إحدى الكلمات الأساسية المقترحة التي تظهر عندما يُطلب منك ذلك.

ملاحظة: قد لا تتوفر هذه الميزة استنادًا إلى المنطقة أو موفر الخدمة.



إشارات مرجعية

لتمييز صفحة الويب الحالية كإشارة مرجعية، اضغط على  > إضافة إلى الإشارات المرجعية < موافق.
لفتح صفحة ويب وضعت عليها إشارة مرجعية، اضغط على  وحدد الصفحة المطلوبة.

سجل

اضغط على  < سجل لفتح قائمة بصفحات الويب التي تمت زيارتها مؤخرًا. لمسح كافة السجل، اضغط على  < نعم.

استخدام QSlide مع المتصفح

استخدم هذه الميزة للقيام بمهام متعددة أثناء تصفح الإنترنت.
أثناء عرض المحتوى، مثل الأسماء أو الملاحظات التي تتضمن عناوين ويب، حدد عنوان ويب، ثم اضغط على المتصفح المنبثق لفتح المتصفح المنبثق. المس إطار QSlide واسحبه لنقله إلى موضع آخر.
لعرض المتصفح الحالي في وضع ملء الشاشة، اضغط على  .
لإغلاق المتصفح، اضغط على  .

استخدم Chrome للبحث عن المعلومات وتصفح صفحات ويب.

• اضغط على  < علامة التبويب التطبيقات (إذا لزم الأمر) <  .

ملاحظة: قد لا يتوفر هذا التطبيق استنادًا إلى المنطقة وموفر الخدمة.

عرض صفحات ويب

في متصفح Chrome، اضغط على حقل العنوان ثم أدخل عنوان ويب أو معيار بحث.

فتح صفحة

لفتح صفحة جديدة، اضغط على  < علامة تبويب جديدة.

للانتقال إلى صفحة ويب أخرى، اضغط على واضغط على الصفحة لتحديدها.

يوقّر هذا القسم لمحة عامة عن العناصر التي يمكنك تغييرها باستخدام قوائم الإعدادات النظام على الهاتف.

الوصول إلى قائمة الإعدادات:

- اضغط على < المس باستمرار على < إعدادات النظام.
- أو -
- اضغط على <  < علامة التبويب التطبيقات (إذا لزم الأمر) < .

الشبكات

> شبكات لاسلكية <

Wi-Fi

يسمح لك هذا الخيار بإدارة اتصالات Wi-Fi وبالاتصال بشبكات Wi-Fi المتوفرة.

Bluetooth

يسمح لك هذا الخيار بإدارة ميزة Bluetooth اللاسلكية.

بيانات الهاتف المحمول

لعرض استخدام البيانات وتعيين حدّ استخدام بيانات المحمول المخصص.

إعدادات المكالمات

تسمح لك هذه القائمة بتكوين الإعدادات مختلفة للمكالمة.

- البريد الصوتي - يسمح لك هذا الخيار بتحديد خدمة البريد الصوتي الخاصة بشركة المحمول.
- أرقام الاتصال الثابت - يسمح لك هذا الخيار بإدارة قائمة بالأرقام التي يمكن الاتصال بها من هاتفك وتجميعها. ستحتاج إلى رمز PIN2 الذي يوفره المشغّل. إذا تم تنشيطه، فستتمكّن من الاتصال بالأرقام المدرجة في قائمة أرقام الاتصال الثابت فقط من هاتفك.
- نافذة منبثقة للمكالمة الواردة - لعرض نافذة منبثقة للمكالمة الواردة عند استخدام تطبيق.

- رفض المكالمة - يتيح لك هذا الخيار تعيين وظيفة رفض مكالمة.
- الرفض برسالة - عندما تريد رفض مكالمة. يمكنك إرسال رسالة سريعة باستخدام هذه الوظيفة. ويعتبر هذا الأمر مفيداً إذا أردت رفض مكالمة أثناء اجتماع.
- إعادة توجيه المكالمة - يسمح لك هذا الخيار باختيار متى تريد إعادة توجيه المكالمات.
- رد آلي - لتعيين الوقت قبل أن يجيب الجهاز اللاسلكي المتصل تلقائياً على المكالمة الواردة.
- اهتزاز عند الاتصال - لاهتزاز الهاتف عندما يقوم الطرف الآخر بالرد على المكالمة.
- إيقاف الضوضاء- إيقاف الضوضاء في جهازك أثناء مكالمة.
- نقاء الصوت - لتحسين جودة الصوت في البيئات المليئة بالضجة لتتمكن من سماع صوت الشخص الذي تتكلم معه بشكل أوضح.
- حفظ الأرقام غير المعروفة - يسمح لك هذا الخيار بإضافة أرقام غير معروفة إلى الأسماء بعد مكالمة.
- مفتاح التشغيل ينهي المكالمة - يسمح لك هذا الخيار باستخدام مفتاح الطاقة لإنهاء المكالمات.
- حظر المكالمات - لحظر المكالمات الواردة أو الصادرة أو الدولية.
- مدة المكالمة - يسمح لك هذا الخيار بعرض مدة المكالمة لأنواع مختلفة من المكالمات.
- الإعدادات إضافية - يسمح لك هذا الخيار بتغيير الإعدادات التالية.

> التوصيل <

المشاركة والاتصال

- **NFC** - هذا الهاتف المحمول ممكّن لاستخدام NFC. تشير NFC (الاتصالات القريبة المدى) إلى تقنية اتصال تسمح بالاتصال ذي الاتجاهين بين الأجهزة الإلكترونية. وهي تعمل على مسافة بضعة سنتيمترات. يمكنك مشاركة المحتوى مع علامة NFC أو جهاز آخر يدعم NFC بمجرد جعل جهازك يلمس العلامة. إذا جعلت الجهاز يلمس علامة NFC، ستظهر محتويات العلامة على جهازك.
- **Android Beam** - عندما تكون هذه الميزة قيد التشغيل، يمكنك إرسال محتوى تطبيق إلى هاتف آخر ممكّن لاستخدام NFC عبر إبقاء الأجهزة قريبة من بعضها.

- ما عليك سوى وضع الجهازين بالقرب من بعضهما (نموذجيًا ظهرًا إلى ظهر) ثم اضغط على الشاشة. يحدد التطبيق ما يتم إرساله.
- برنامج **SmartShare Beam** - يسمح لك هذا الخيار بتلقي محتوى وسائط متعددة عبر الهواتف والأجهزة اللوحية المقدمة من LG.
- **خادم الوسائط** - لمشاركة محتوى الوسائط مع الأجهزة المجاورة عبر DLNA.
- **Miracast** - يسمح لك هذا الخيار بعكس شاشة الهاتف وصوته لاسلكيًا على Miracast dongle أو التلفاز.
- **LG PC Suite** - قم بتوصيل LG PC Suite بهاتفك لإدارة محتوى الوسائط المتعددة والتطبيقات بسهولة.

الاتصال والشبكات

- **اتصال USB** - يسمح لك هذا الخيار بمشاركة اتصال الإنترنت مع الكمبيوتر بواسطة كابل USB.
- **نقطة Wi-Fi المحمولة** - يسمح لك هذا الخيار بإنشاء نقطة فعالة ومشاركة الاتصال.
- **ربط Bluetooth** - يسمح لك هذا الخيار بالاتصال بأجهزة أخرى عبر Bluetooth.
- **مساعدة** - لعرض معلومات حول مساعدة الخاصة باتصال USB ونقطة Wi-Fi المحمولة ربط Bluetooth.
- **وضع الرحلات الجوية** - يسمح لك وضع الرحلات الجوية باستخدام عدد كبير من ميزات هاتفك. مثل الألعاب والموسيقى عندما تكون في مكان يُمنع فيه إجراء مكالمات أو تلقيها فضلاً عن تلقي البيانات وإرسالها. عند تعيين هاتفك إلى وضع الرحلات الجوية، لا يمكنك إجراء مكالمات أو تلقيها. كما لا يمكنك الوصول إلى البيانات عبر الإنترنت.
- **شبكات الهاتف** - تسمح لك هذه القائمة بتكوين إعدادات مختلفة لشبكات الجهاز المحمول.
- **VPN** - يمكنك من هاتفك إضافة شبكات خاصة ظاهرة (VPNs) وإعدادها وإدارتها. تسمح لك هذه الشبكات بالاتصال بالموارد الموجودة داخل شبكة محلية محمية. مثل شبكة شركتك، والوصول إليها.

الصوت

> أساسي <

أوضاع الصوت

يسمح لك هذا الخيار بتعيين وضع الصوت الخاص بالهاتف. اختر من بين الصوت أو اهتزاز فقط أو عدم الإزعاج.

مستوى الصوت


لضبط إعدادات مستوى صوت الهاتف لملاءمة احتياجاتك وبيئتك.

قوة الاهتزاز


يسمح لك هذا الخيار بتعيين قوة اهتزاز الهاتف عند تلقي مكالمات وإشعارات و عند الضغط.

> نغمات الرنين و اهتزاز <

نغمة رنين

يسمح لك هذا الخيار بتعيين نغمات رنين للمكالمات. يمكنك أيضًا إضافة نغمة رنين عبر الضغط على  في الزاوية العليا اليسرى من الشاشة.

صوت الإشعارات

يسمح لك هذا الخيار بتعيين صوت الإشعارات. يمكنك أيضًا إضافة صوت إشعار عبر الضغط على  في الزاوية العليا اليسرى من الشاشة.

صوت مع اهتزاز

ضع علامة اختيار على هذا الخيار لتعيين الهاتف إلى اهتزاز بالإضافة إلى نغمة الرنين عند تلقيك مكالمات.

نوع الاهتزاز

يسمح لك هذا الخيار باختيار نوع الاهتزاز.

> الإشعارات <

عدم الإزعاج

يسمح لك هذا الخيار بتعيين جدول يضم الأوقات التي تريد فيها منع تلقي الإشعارات. يمكنك تعيين السماح بتشغيل بعض الميزات عند تعيين الأولوية فقط.

تأمين الشاشة

يسمح لك هذا الخيار باختيار ما إذا كنت تريد عرض الإشعارات أو إخفائها على شاشة القفل.

تطبيقات

يسمح لك هذا الخيار بمنع التطبيقات من عرض إشعارات أو تعيين التطبيقات لعرض الإشعارات التي تعتبر مهمة عند تعيين عدم الإزعاج إلى الأولوية فقط.

> إعدادات متقدمة <

الاهتزاز عند الضغط

ضع علامة اختيار على هذا الخيار ليهتز الهاتف عند الضغط على أزرار لمس الشاشة الرئيسية وأثناء تفاعلات أخرى مع واجهة الاستخدام.

تأثيرات الصوت

اضغط لتعيين نغمات لمس لوحة الطلب وأصوات اللمس وصوت قفل الشاشة.

- أصوات لمس لوحة الطلب - ضع علامة اختيار على هذا الخيار لتشغيل النغمات أثناء استخدام لوحة الطلب.
- صوت اللمس - ضع علامة اختيار على هذا الخيار لتشغيل الصوت أثناء إجراء تحديدات على الشاشة.
- أصوات قفل الشاشة - ضع علامة اختيار على هذا الخيار لتشغيل الصوت عند إقفال الشاشة وإلغاء قفلها.

إشعارات الرسائل/المكالمات الصوتية

اضغط على المفتاح إشعارات الرسائل/المكالمات الصوتية لتشغيلها أو إيقاف تشغيلها. يسمح التشغيل لجهازك بقراءة المكالمات الواردة وأحداث الرسائل تلقائيًا.

إعدادات الشاشة

> الرئيسية و قفل <

الشاشة الرئيسية

- تحديد الشاشة الرئيسية - عيّن الرئيسية أو EasyHome كالصفحة الرئيسية الافتراضية.

Smart Bulletin - اضغظ على مفتاح **Smart Bulletin** للتبديل بين تشغيل وإيقاف تشغيل. يؤدي تنشيط هذه الميزة إلى إضافة شاشة رئيسية إضافية تعرض معلومات مخصصة. ضع علامة اختيار على **LG Health** أو **Smart Tips**.

سمة - لتعيين سمة الشاشة لجهازك. يمكنك تنزيل سمات جديدة من **LG SmartWorld**.

خلفية الشاشة - لتعيين الخلفية التي تريد استخدامها على الشاشة الرئيسية.

تأثيرات الشاشة - يتيح لك هذا الخيار تحديد نوع التأثير المطلوب عرضه عند التمرير من مساحة محيطية للشاشة الرئيسية إلى التالية.

السماح بالتكرار الحلقي للشاشة الرئيسية - لعرض الشاشة الأولى بعد الشاشة الأخيرة عند التمرير عبر الشاشة الرئيسية.

عمل ملفات احتياطية للشاشة الرئيسية واستعادتها - يمكنك نسخ تخطيطات التطبيقات/عناصر واجهة الاستخدام وخلفيات الشاشة الرئيسية احتياطيًا واستعادتها.

مساعدة - لعرض معلومات حول الشاشة الرئيسية.

تأمين الشاشة

إختر قفل الشاشة - لتعيين نوع قفل الشاشة لتأمين الهاتف. يؤدي هذا الخيار إلى فتح شاشات ترحيبك أثناء رسم نقش إلغاء قفل الشاشة.

إذا قمت بتمكين نوع نقش القفل عند تشغيل الهاتف أو تنشيط الشاشة. فستتم عندئذٍ مطالبتك برسم نقش إلغاء القفل لإلغاء قفل الشاشة.

Smart Lock - لإبقاء الهاتف غير مقفل عندما يكون متصلًا بجهاز **Bluetooth** موثوق به أو عندما تكون متواجدًا في موقع مألوف مثل المنزل أو مكان العمل أو عندما يتعرّف على وجهك.

تأثيرات الشاشة - يتيح لك هذا الخيار تعيين خيارات تأثير مسح الشاشة.

ملاحظة: قد يكون اسم هذا الإعداد تأثير النقر إذا تم تعيين قفل الشاشة إلى نقش.

خلفية الشاشة - يسمح لك هذا الخيار بتعيين خلفية شاشة القفل.

اختصارات - يسمح لك هذا الخيار باختيار الاختصارات المتوفرة على شاشة القفل.

- رسوم حالة الطقس - ضع علامة اختيار على هذا الخيار لإظهار رسوم حالة الطقس في الموقع الحالي على شاشة القفل.
- معلومات الاتصال للهاتف المفقود - يسمح لك هذا الخيار بعرض معلومات المالك على شاشة القفل في حال فقدان الهاتف.
- مؤقت الاغلاق - لتعيين مدة الوقت قبل إقفال الشاشة تلقائيًا بعد انقضاء مهلة الشاشة.
- يقلل زر الطاقة على الفور - ضع علامة اختيار على هذا الخيار لإقفال الشاشة على الفور عند الضغط على زر الطاقة/القفل. يمنع هذا الإعداد ضبط مؤقت قفل الأمان.

أزرار اللمس في الشاشة الرئيسية

لتعيين مفاتيح اللمس على الشاشة الرئيسية التي تظهر في أسفل كل الشاشات. تعيين المفاتيح التي تريدها أن تظهر وموقعها على الشريط وشكلها.

> الخط <

نوع الخط

لتعيين نوع الخط المستخدم للهاتف والقوائم.

حجم الخط

لتعيين حجم الخط الذي يتم عرضه في الهاتف والقوائم.

> إعدادات الشاشة الأخرى <

السطوع

لضبط سطوع الشاشة. للحصول على أداء أفضل للبطارية، استخدم السطوع الأكثر خفوتًا للشعور بالراحة.

إشعار LED

اضغط على المفتاح لتشغيله أو إيقاف تشغيله. يؤدي التشغيل إلى تنشيط ضوء LED للإشعارات التي تحددها باللون الذي تعينه لكل إشعار.

تدوير الشاشة تلقائيًا

ضع علامة اختيار على هذا الخيار لتعيين الهاتف لتدوير الشاشة تلقائيًا وفقًا لاتجاه الهاتف (عمودي أو أفقي).

مهلة الشاشة

لتعيين المدة الزمنية قبل انتهاء مهلة الشاشة.

وضع الشاشة

لتعيين وضع الشاشة. اختر من بين قياسي أو مشرق أو طبيعي.

> إعدادات متقدمة <

تأثير إيقاف الشاشة

حدد تأثير إيقاف الشاشة عند إيقاف الشاشة وإيقاف تشغيلها. اختر من بين فتحة سوداء وتلفزيون الرجعية وتلاشي.

حلم اليقظة

اضغط على مفتاح حلم اليقظة لتبديل أو إيقاف التشغيل. يسمح التشغيل بتعيين شاشة توقف لعرضها عندما يكون الهاتف ساكنًا أثناء تثبيته و/أو شحنه.

الضبط التلقائي لنغمة الشاشة

ضع علامة اختيار على هذا الخيار لضبط سطوع الشاشة تلقائيًا مع تحليل ألوان الصورة.

عامة

> شخصي <

اللغة والإدخال

استخدم إعدادات اللغة والإدخال لتحديد لغة النص على الهاتف وتكوين لوحة المفاتيح التي تظهر على الشاشة. بما في ذلك الكلمات التي أضفتها إلى القاموس.

• اللغة - لتعيين اللغة لاستخدامها على هاتفك.

• افتراضي - يسمح لك هذا الخيار بتعيين لوحة مفاتيح افتراضية لاستخدامها عند إدخال نص.

• لوحة مفاتيح LG - ضع علامة اختيار لتحديد لوحة مفاتيح LG لإدخال نص. اضغط على الرمز الإعدادات لتغيير الإعدادات التالية.

• الكتابة بالصوت من Google - ضع علامة اختيار على هذا الخيار لتحديد الكتابة

الصوتية من Google لإدخال نص. اضغط على الرمز الإعدادات لتغيير إعدادات الصوت من

Google.

الإعدادات

- بحث الصوت - لتعيين خيارات البحث الصوتي.
- تحويل النص إلى الكلام - لتعيين محرك الكلام المفضل وسرعة الكلام (من بطيء جدًا إلى سريع جدًا). لتشغيل أيضًا عرض توضيحي قصير لتركيب الكلام.
- سرعة المؤشر - يسمح لك هذا الخيار بتعيين سرعة المؤشر على شريط تمرير.

الموقع

- يسمح لك هذا الخيار بإدارة خدمات تحديد المواقع لتحديد موقعك التقريبي باستخدام نظام تحديد الموقع العالمي (GPS) و Wi-Fi وشبكات الهاتف المحمول.
- الوضع - يسمح لك باختيار وضع الموقع من الدقة الفائقة (GPS والشبكات) وتوفير طاقة البطارية (الشبكات فقط) مستشعرات الجهاز فقط (GPS فقط).
 - الكاميرا - ضع علامة اختيار على هذا الخيار لوضع علامة على الصور أو مقاطع الفيديو مع المواقع التي تم اتخاذها فيها.
 - الإبلاغ عن المواقع من Google - يسمح لك هذا الخيار بعرض إعدادات موقع Google وإدارتها.

الحسابات والمزامنة

- يتيح هذا الخيار للتطبيقات مزامنة البيانات في الخلفية. سواء كانت قيد الاستخدام بطريقة نشطة أم لا. قد يؤدي إلغاء تنشيط مزامنة البيانات تلقائيًا إلى توفير طاقة البطارية وتخفيض استخدام البيانات (ولكن لا بلغيها).

Cloud

- يسمح لك هذا الخيار بإضافة حساب Cloud لاستخدام خدمة Cloud بسرعة وسهولة.

إمكانية الوصول

- استخدم إعدادات إمكانية الوصول تكوين الوظائف الإضافية التي تثبتها على هاتفك.

ملاحظة: يتطلب تثبيت وظائف إضافية ليصبح هذا الخيار قابلاً للتحديد.

تشغيل بيد واحدة

- لوحة مفاتيح طلب الرقم - ضع علامة اختيار على هذا الخيار لتمكين من نقل لوحة مفاتيح الطلب إلى الجهة اليسرى أو اليمنى من الجهاز. ما عليك سوى الضغط على السهم لنقلها من جانب إلى آخر.

- لوحة مفاتيح LG - ضع علامة اختيار على الخيار لتمكين من نقل لوحة المفاتيح إلى الجهة اليسرى أو اليمنى من الجهاز. ما عليك سوى الضغط على السهم لنقلها من جانب إلى آخر.
- إقفال الشاشة - ضع علامة اختيار على هذا الخيار لتمكين من نقل لوحة مفاتيح شاشة قفل PIN إلى الجهة اليسرى أو اليمنى من الهاتف. ما عليك سوى الضغط على السهم لنقلها من جانب إلى آخر.
- مساعدة - لعرض معلومات حول التشغيل بيد واحدة.

مفتاح الاختصار

احصل على إمكانية الوصول السريع إلى التطبيقات عبر الضغط باستمرار على زر مستوى الصوت عندما تكون الشاشة متوقفة عن التشغيل أو مقفلة. اضغط على مفتاح الاختصار (صورة مفتاح الاختصار) في الزاوية العليا اليسرى من الشاشة للتبديل بين تشغيل أو إيقاف تشغيل.

> الخصوصية <

الحماية

- قفل المحتويات - لتحديد أنواع القفل لإقفال الملفات في المعرض. اختر من بين كلمة المرور أو النقش.
- تشفير الهاتف - تشفير كافة البيانات على الهاتف.
- تشفير وحدة تخزين بطاقة SD - يسمح لك هذا الخيار بتشفير بطاقة SD وجعل البيانات غير متوفرة لأجهزة أخرى.
- كتابة كلمة المرور مرئية - ضع علامة اختيار على هذا الخيار لعرض كل حرف من كلمات المرور بشكل سريع أثناء إدخالها بحيث يمكنك رؤية الأحرف التي تدخلها.
- مدير الهاتف - يسمح لك هذا الخيار بعرض مديري الهاتف أو تعطيلهم.
- مصادر غير معروفة - يسمح لك هذا الخيار بتثبيت التطبيقات من خارج سوق Play.
- التحقق من التطبيقات - لعدم السماح بتثبيت التطبيقات التي قد تسبب بحدوث ضرر أو التحذير قبل ذلك.
- نوع التخزين - لعرض نوع التخزين لبيانات الاعتماد.
- الاعتمادات الموثوق بها - لعرض شهادات CA الموثوق بها.

- التثبيت من المخزن - يسمح لك هذا الخيار بتثبيت الشهادات المشفرة.
- مسح التخزين - لحذف كل الشهادات الآمنة وبيانات الاعتماد ذات الصلة ومحو كلمة مرور التخزين الآمن.
- Trust agents - لعرض Trust agents أو إلغاء تنشيطهم.

> الوظائف الذكية <

إيمانات

- الرد على مكالمة واردة - ضع علامة اختيار على هذا الخيار لتمكينك من وضع الهاتف على أذنك للرد تلقائيًا على مكالمة واردة.
- خفض صوت نغمة الرنين تدريجيًا - ضع علامة اختيار على هذا الخيار لتمكينك من إزالة الهاتف عن سطح مستوي لخفض نغمة رنين المكالمة الواردة تدريجيًا.
- كتم صوت المكالمات الواردة - ضع علامة اختيار على هذا الخيار لتمكينك من قلب الهاتف لكتم صوت المكالمة الواردة.
- تأجيل أو إيقاف المنبه - ضع علامة اختيار على هذا الخيار لتمكينك من تأجيل المنبه أو إيقافه بمجرد قلب الجهاز.
- إيقاف مؤقت للفيديو - ضع علامة اختيار على هذا الخيار لتمكينك من إيقاف الفيديو الذي يتم تشغيله حاليًا مؤقتًا بمجرد قلب الجهاز.
- مساعدة - لعرض دليل التعليمات لمعرفة كيفية استخدام ميزات الإيماعات في الجهاز.
- معايرة استشعار الحركة - يسمح لك هذا الخيار بتحسين دقة إمالة جهاز الاستشعار وسرعته.

نافذة QuickCircle

تسمح لك هذه القائمة بتحديد التطبيقات التي سيتم استخدامها مباشرة على النافذة في عرض مصغّر باستخدام QuickCircle.

نافذة مزدوجة

- يسمح لك هذا الخيار بتكوين ميزة النافذة المزدوجة.
- تقسيم العرض - ضع علامة اختيار على هذا الخيار للسماح لك بالضغط على ارتباط على ملء الشاشة أو المرفقات من رسائل البريد الإلكتروني لفتح النافذة المزدوجة.

• مساعدة - لعرض تلميحات حول استخدام النافذة المزدوجة.

> إدارة الهاتف <

التاريخ والوقت

استخدم إعدادات التاريخ والوقت لتعيين كيفية عرض التواريخ. يمكنك أيضًا استخدام هذه الإعدادات لتعيين الوقت الخاص بك بالإضافة إلى المنطقة الزمنية بدلاً من الحصول على الوقت الحالي من شبكة الهواتف المحمولة.

التخزين

• وحدة تخزين داخلية - لعرض استخدام وحدة التخزين الداخلية.

البطارية

• معلومات البطارية - تظهر معلومات شحن البطارية على رسم البطارية مع النسبة المئوية لمستوى الشحن المتبقي وحالته.

المس رمز شحن البطارية لعرض شاشة استخدام البطارية لمعرفة مستوى شحن البطارية وتفاصيل الاستخدام. يعرض الهاتف أيضًا المكونات والتطبيقات التي تستهلك طاقة بطارية أكثر من غيرها. اضغط على أحد العناصر لرؤية المزيد من المعلومات المفصلة.

• استخدام البطارية - لعرض استخدام البطارية.

• النسبة المئوية للبطارية موجودة على شريط الحالة - ضع علامة اختيار على هذا الخيار لعرض مستوى شحن البطارية على شريط الحالة إلى جانب رمز البطارية.

• توفير الطاقة - اضغط على المفتاح توفير طاقة للتبديل بين تشغيل أو إيقاف التشغيل. اضغط على توفير طاقة للوصول إلى الإعدادات التالية:

• تشغيل موثر الطاقة - لتعيين مستوى شحن البطارية الذي يؤدي تلقائيًا إلى تشغيل توفير طاقة. اختر من بين على الفور و 5% من البطارية و 15% من البطارية.

• مساعدة - لعرض معلومات حول ميزة توفير طاقة.

Smart cleaning

يسمح لك بإدارة التطبيقات والبيانات غير المستخدمة.

التطبيقات

عرض التطبيقات وإدارتها.

تطبيق الرسائل الافتراضي

تسمح لك هذه القائمة بتعيين تطبيق الرسائل الافتراضي كما ترغب.

نسخ احتياطي وإعادة الضبط

تسمح لك هذه القائمة بنسخ البيانات احتياطيًا واسترجاعها تلقائيًا ومسح كل البيانات عن هاتفك.

- **نسخ احتياطي لبياناتي** - يسمح لك هذا الخيار بإجراء نسخ احتياطي للإعدادات وبيانات التطبيق إلى خادم Google.
- **الحساب الاحتياطي** - يسمح لك هذا الخيار بإجراء نسخ احتياطي لحسابك.
- **استعادة تلقائية** - يسمح لك هذا الخيار باستعادة الإعدادات وبيانات التطبيق عند إعادة تثبيت التطبيقات على الجهاز.
- **خدمة LG Backup** - يسمح لك هذا الخيار بنسخ كافة المعلومات الموجودة على الجهاز احتياطيًا واستعادتها، وذلك في حال فقدانها أو استبدالها.
- **إعادة ضبط بيانات الشركة المصنعة** - لإعادة ضبط الإعدادات إلى القيم الافتراضية للشركة المصنعة وحذف كل البيانات. بما في ذلك بيانات المستخدم مثل الصور ومقاطع الفيديو.

طباعة

للسماح لك بطباعة محتوى بعض الشاشات (مثل صفحات الويب المعروضة في متصفح Chrome) باستخدام طباعة متصلة بشبكة Wi-Fi نفسها كجهاز Android.

حول الهاتف

عرض معلومات حول الشبكة والحالة والبطارية ومعلومات الأجهزة والبرنامج والمعلومات القانونية.

نظام التشغيل Windows

يساعدك LG PC Suite في إدارة محتويات الوسائط والتطبيقات في هاتفك من خلال السماح لك بتوصيل هاتفك بالكمبيوتر الشخصي.

بفضل برنامج LG PC Suite. يمكنك...

- إدارة محتويات الوسائط (الموسيقى، الأفلام، الصور) وتشغيلها على الكمبيوتر الشخصي.
- إرسال محتويات الوسائط إلى الجهاز.
- مزامنة البيانات (الجدول، الأسماء، الإشارات المرجعية) بين الجهاز والكمبيوتر الشخصي.
- نسخ التطبيقات احتياطياً على الجهاز.
- تحديث البرنامج الموجود على الجهاز.
- تشغيل محتويات الوسائط المتعددة على الكمبيوتر الشخصي من جهاز آخر.

ملاحظة: قد لا تكون بعض الوظائف متوفرة وفقاً للطراز.

ملاحظة: يمكنك استخدام قائمة التعليمات من التطبيق للتعرف على كيفية استخدام برنامج LG PC Suite.

تثبيت برنامج LG PC Suite

لتنزيل برنامج LG PC Suite، يرجى القيام بالتالي:

- 1 الانتقال إلى www.lg.com.
- 2 انتقل إلى الدعم < دعم الهاتف المحمول > مزامنة الكمبيوتر الشخصي.
- 3 حدد معلومات الطراز وانقر فوق **انتقل**.
- 4 مرّر لأسفل وحدد علامة التبويب مزامنة الكمبيوتر الشخصي < Windows > تنزيل لتنزيل برنامج LG PC Suite.

متطلبات النظام لبرنامج LG PC Suite

- نظام التشغيل: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- وحدة المعالجة المركزية (CPU): معالجات بسرعة 1 جيجاهرتز أو أعلى
- الذاكرة: ذاكرة وصول عشوائي (RAM) بسعة 512 ميغابايت أو أعلى
- بطاقة الرسومات: بدرجة استبانة 1024 x 768. وألوان 32 بت أو أعلى
- محرك أقراص ثابت: مساحة خالية على القرص الثابت تبلغ 500 ميغابايت أو أكثر (قد يلزم توفر مساحة خالية أكبر على القرص الثابت بناءً على حجم البيانات المخزنة.)
- البرنامج المطلوب: برامج التشغيل LG United أو Windows Media Player 10 أو الإصدار الأحدث.

ملاحظة: برنامج التشغيل LG United USB

يلزم توفر برنامج التشغيل LG United USB لتوصيل جهاز LG بالكمبيوتر الشخصي. يتم تثبيته تلقائيًا عند تثبيت تطبيق برنامج LG PC Suite.

لنظام التشغيل Mac OS

بفضل برنامج LG PC Suite، يمكنك...

- إدارة محتويات الوسائط (الموسيقى، الأفلام، الصور) وتشغيلها على الكمبيوتر الشخصي.
- إرسال محتويات الوسائط إلى الجهاز.
- مزامنة البيانات (الجدول، الأسماء، الإشارات المرجعية) بين الجهاز والكمبيوتر الشخصي.

ملاحظة: قد لا تكون بعض الوظائف متوفرة وفقًا للطراز.

ملاحظة: يمكنك استخدام قائمة التعليمات من التطبيق للتعرف على كيفية استخدام برنامج LG PC Suite.

تثبيت برنامج LG PC Suite

لتنزيل برنامج LG PC Suite، يرجى القيام بالتالي:

- 1 الانتقال إلى www.lg.com.
- 2 انتقل إلى الدعم < دعم الهاتف المحمول > مزامنة الكمبيوتر الشخصي.
- 3 حدد معلومات الطراز وانقر فوق انتقال.
- 4 مرر لأسفل وحدد علامة التبويب مزامنة الكمبيوتر الشخصي < نظام التشغيل Mac OS > تنزيل لتنزيل LG PC Suite.

متطلبات النظام لبرنامج LG PC Suite

- نظام التشغيل: Mac OS X (10.6.8) أو أعلى
- الذاكرة: ذاكرة وصول عشوائي (RAM) بسعة 2 جيجابايت أو أعلى
- بطاقة الرسومات: استبانة الشاشة 1024 x 768 أو أعلى وألوان 32 بت
- القرص الصلب: تخزين بسعة 500 ميجابايت أو أكثر (قد يلزم توفير مساحة إضافية للبيانات)
- البرنامج المطلوب: برنامج التشغيل LG United Mobile

ملاحظة: برنامج تشغيل USB المضمن من LG

يلزم توفير برنامج تشغيل USB المضمن من LG لتوصيل جهاز LG بالكمبيوتر الشخصي. يتم تثبيته تلقائيًا عند تثبيت تطبيق برنامج LG PC Suite.

تحديث برنامج الهاتف

تحديث برنامج من الإنترنت لهاتف محمول من LG

لمزيد من المعلومات حول تحديثات البرامج، يرجى زيارة صفحة <http://www.lg.com/common/index.jsp>.

تسمح لك هذه الميزة بتحديث برامج الهاتف الثابتة بأحدث الإصدارات بسهولة من إنترنت من دون الحاجة إلى زيارة مركز الخدمة. ستكون هذه الميزة متوفرة عندما تصدر LG إصدار برنامج ثابت أحدث للجهاز لديك.

بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه المستخدم الكامل طوال مدة عملية التحديث، فيرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. يرجى الانتباه إلى أن إزالة كابل USB أثناء الترقية قد يتسبب في إلحاق ضرر بالغ بهاتفك المحمول.

ملاحظة: تحتفظ شركة LG بحق توفير تحديثات للبرامج الثابتة لطرازات معينة فقط وفق ما تراه مناسباً. ولا تضمن توفير إصدار أحدث لكافة طرازات الهاتف.

تحديث برنامج هاتف LG لاسلكياً (OTA)

تتيح لك هذه الميزة تحديث برنامج الهاتف إلى إصدار أحدث بشكل لائق عبر OTA، من دون التوصيل بكابل USB. ستكون هذه الميزة متوفرة عندما تصدر LG إصدار برنامج ثابت أحدث للجهاز لديك.

أولاً، عليك التحقق من إصدار البرنامج على هاتفك المحمول: الإعدادات > علامة التبويب عامة > حول الهاتف > مركز التحديث > تحديث البرنامج > تحقق الآن من التحديث.

ملاحظة: قد تفقد بياناتك الشخصية المحفوظة في ذاكرة الهاتف - بما فيها معلومات حول حساب Google وأي حسابات أخرى وبيانات النظام أو التطبيق وإعداداته وأي تطبيقات تم تنزيلها وترخيص إدارة الحقوق الرقمية (DRM) - وذلك أثناء عملية تحديث برنامج الهاتف. لذا، توصي LG بإجراء نسخة احتياطية من البيانات الشخصية قبل تحديث برنامج الهاتف. ولا تعتبر LG مسؤولة عن أي فقد للبيانات الشخصية.

ملاحظة: تعتمد هذه الميزة على موفر خدمة الشبكة الخاص بك والمنطقة والبلد.

حول دليل المستخدم هذا

- قبل استخدام الجهاز، يرجى قراءة هذا الدليل بعناية. يضمن هذا استخدام الهاتف بأمان وبطريقة صحيحة.
- قد تظهر بعض الصور واللقطات المتوفرة في هذا الدليل بشكل مختلف عن الهاتف.
- قد يختلف المحتوى الخاص بك عن المنتج النهائي أو عن البرنامج الذي يزوده موفرو الخدمة أو شركات المحمول. يخضع هذا المحتوى للتغيير من دون إشعار مسبق. للحصول على الإصدار الأحدث من هذا الدليل، يرجى زيارة موقع ويب LG على www.lg.com.
- قد تختلف تطبيقات الهاتف ووظائفها حسب البلد أو المنطقة أو مواصفات الأجهزة. لا تكون LG مسؤولة عن أي مشكلات في الأداء تنشأ عن استخدام التطبيقات التي تم تطويرها من قبل مطورين خارج LG.
- لا تتحمل LG مسؤولية مشاكل الأداء أو عدم التوافق التي تنشأ عن إعدادات السجل المحرر أو برنامج نظام التشغيل المعدّل. قد تتسبب أي محاولة لتخصيص نظام التشغيل في تشغيل الجهاز أو تطبيقاته بشكل غير صحيح.
- البرنامج والصوت وخلفية الشاشة والصور والوسائط الأخرى المتوفرة مع الهاتف مرخصة للاستخدام المحدود. إذا قمت باقتباس هذه المواد واستخدامها لأغراض تجارية أو أغراض أخرى، قد تنتهك قوانين حقوق النشر. كمستخدم، تتحمل المسؤولية كاملة عن الاستخدام غير القانوني للوسائط.
- قد تُفرض رسوم إضافية لخدمات البيانات، مثل الرسائل والتحميل والتنزيل والمزامنة التلقائية وخدمات تحديد الموقع. لتجنّب الرسوم الإضافية، حدد خطة بيانات مناسبة لاحتياجاتك. اتصل بموفر الخدمة للحصول على تفاصيل إضافية.

علامات تجارية

LG وشعار LG هما علامتان تجاريتان مسجلتان لشركة LG Electronics.
تعود كافة العلامات التجارية وحقوق النشر الأخرى إلى مالكيها.

DivX HD DivX HD

اجتاز جهاز DivX Certified® هذا اختبارات شديدة الدقة للتحقق من إمكانية تشغيله لفيديو DivX® video.

لتشغيل أفلام DivX التي تم شراؤها، سجّل أولاً الجهاز على vod.divx.com. اعثر على رمز التسجيل في قسم DivX VOD من قائمة إعداد الجهاز.

DivX Certified® لتشغيل فيديو DivX® حتى درجة الاستبانة العالية 720P. بما في ذلك المحتوى المميز.

DivX Certified® والشعارات المقترنة هي علامات تجارية لشركة DivX, LLC وتستخدم بموجب ترخيص.

DOLBY DIGITAL PLUS Dolby Digital Plus

تم تصنيعه بموجب ترخيص من Dolby Laboratories. Dolby Digital Plus و Dolby Laboratories.
ورمز العلامة التجارية حرفاً D هي علامات تجارية لـ Dolby Laboratories.

تتوفر هذه الملحقات للاستخدام مع الهاتف. (قد تكون العناصر المذكورة أدناه اختيارية.)

- محول السفر
- دليل البدء السريع
- سماعة رأس استيريو
- كيبول USB

ملاحظة:

- استخدم دائمًا ملحقات LG الأصلية. تم تصميم العناصر المتوفرة لاستخدامها مع هذا الجهاز فقط وقد تكون غير متوافقة مع أجهزة أخرى.
- قد تختلف العناصر المتوفرة مع الجهاز وأي ملحقات متوفرة بحسب المنطقة أو موفر الخدمة.

يسرد هذا الفصل بعض المشكلات التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل يتطلب منك الاتصال بموفر الخدمة. ولكن معظم المشاكل سهلة ويمكنك تصحيحها بنفسك.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
خطأ في بطاقة SIM أو USIM	لا توجد بطاقة SIM أو USIM في الهاتف أو ربما تم إدخالها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بالطريقة الصحيحة.
لا يوجد اتصال بالشبكة/ فقدان الشبكة	الإشارة ضعيفة أو أنك خارج نطاق شبكة مزود الخدمة.	توجّه نحو نافذة أو نحو مكان مفتوح. تحقق من خريطة تغطية مشغل الشبكة.
	قام المشغّل بتطبيق خدمات جديدة.	تحقق مما إذا كانت بطاقة SIM أقدم من 6~12 شهرًا. في هذه الحالة، غيّر بطاقة SIM عند أقرب فرع لموفر الشبكة. اتصل بموفر الخدمة لديك.
الرموز غير متطابقة	لتغيير رمز الحماية، عليك تأكيد الرمز الجديد وذلك بإدخاله مرة أخرى. إن الرمزَين الذين أدخلتهما لا يتطابقان.	إذا فقدت الرمز، فاتصل بموفر الخدمة.
لا توجد تطبيقات يمكن تعيينها	غير معتمد من قبل موفر الخدمة أو أنّ التسجيل مطلوب.	اتصل بموفر الخدمة لديك.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
المكالمات غير متوفرة	خطأ في الطلب	شبكة جديدة غير مصرّح لها.
	تم إدخال بطاقة SIM أو USIM جديدة.	تحقق من القيود الجديدة.
	تم الوصول إلى حد الشحن المدفوع مقدّمًا.	اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN2.
يتعدّر تشغيل الهاتف	تم ضغط مفتاح التشغيل/إيقاف قصيرة جدًا.	اضغط على مفتاح التشغيل/إيقاف التشغيل لثانيتين على الأقل.
	لم يتم شحن البطارية.	اشحن البطارية. تحقق من مؤشر الشحن على الشاشة.
خطأ في الشحن	لم يتم شحن البطارية.	اشحن البطارية.
	إنّ درجة الحرارة في الخارج عالية جدًا أو متدنية جدًا.	تأكد أنه يجري شحن الهاتف في درجة الحرارة العادية.
	مشكلة في الاتصال	تحقق من الشاحن واتصاله بالهاتف.
	لا يوجد فولتية	قم بتوصيل الشاحن بمقبس مختلف.
	خلل في الشاحن	استبدل الشاحن.
	الشاحن غير مناسب	استخدم ملحقات LG الأصلية فقط.
	رقم غير مسموح به.	تحقق من قائمة الإعدادات وأوقف تشغيل الوظيفة.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
يتعدّر استلام / إرسال رسائل نصية وصور	ذاكرة ممتلئة	احذف بعض الرسائل من الهاتف.
الملفات لا تفتح	تنسيق الملف غير معتمد	تحقق من تنسيقات الملف المعتمدة.
لا تعمل الشاشة عندما أتلقى مكالمة.	مشكلة في جهاز استشعار الأشياء القريبة	إذا استخدمت شريطًا واقئيًا أو علبة واقية، تأكد من عدم تغطية المنطقة حول جهاز استشعار الأشياء القريبة. تأكد من أن الناحية حول جهاز استشعار الأشياء القريبة نظيفة.
لا أصوات	وضع الاهتزاز	تحقق من حالة الإعدادات في قائمة الصوت للتأكد من عدم تعيين الهاتف إلى وضع الاهتزاز أو الصامت.
تعليق أو تجميد	مشكلة متقطعة في البرنامج	حاول تحديث برنامج عبر موقع الويب.

الفئة	السؤال	الجواب
Bluetooth الأجهزة	ما الوظائف المتوفرة عبر Bluetooth؟	يمكنك توصيل جهاز صوت Bluetooth مثل استيريو/سماعة هاتف أحادية أو عِدَّة السيارة.
الأسماء النسخة الاحتياطية	كيف يمكنني إجراء نسخ احتياطي للأسماء؟	يمكن مزامنة بيانات الأسماء بين الهاتف و Gmail™.
المزامنة	هل يمكن إعداد مزامنة أحادية الاتجاه مع Gmail؟	المزامنة ثنائية الاتجاه هي وحدها المتوفرة.
المزامنة	هل من الممكن مزامنة كل مجلدات البريد الإلكتروني؟	تتم مزامنة صندوق الوارد بشكل تلقائي. يمكنك عرض مجلدات أخرى عبر الضغط على الرمز  وتحديد مجلدات لاختيار مجلد.
تسجيل الدخول إلى Gmail	هل يتعيّن عليّ تسجيل الدخول إلى Gmail كلما أردت الوصول إلى Gmail؟	بمجرد تسجيل الدخول إلى Gmail، لن نحتاج إلى تسجيل الدخول إليه مجددًا.
حساب Google	هل يمكن تصفية رسائل البريد الإلكتروني؟	لا، لا يدعم الهاتف تصفية رسائل البريد الإلكتروني.
البريد الإلكتروني	ماذا الذي يحدث عند تشغيل تطبيق آخر أثناء كتابة رسالة بريد إلكتروني؟	يتم حفظ رسالة البريد الإلكتروني تلقائيًا كمسودة.
نغمة الرنين	هل يوجد حدّ لحجم الملف عند استخدام ملف MP3 كنغمات رنين؟	لا يوجد حدّ لحجم الملف.
وقت الرسالة	لا يعرض الهاتف وقت الاستلام للرسائل الأقدم من 24 ساعة. كيف يمكنني تغيير هذا؟	سوف تتمكن من مشاهدة الوقت للرسائل المستلمة في نفس اليوم فقط.
التنقل	هل يمكن تثبيت تطبيق تنقل آخر على الهاتف؟	يمكن تثبيت واستخدام أي تطبيق يتوفر على سوق Play™ ويتوافق مع الجهاز.

الفئة	السؤال	الجواب
المزامنة	هل يمكن مزامنة الأسماء من كل حسابات البريد الإلكتروني الخاصة بي؟	يمكن مزامنة أسماء Gmail وXادم MS Exchange (خادم البريد الإلكتروني للشركة) فقط.
الانتظار والتوقف المؤقت	هل من الممكن حفظ اسم مع ميزة الانتظار والتوقف المؤقت في الأرقام؟	إذا نقلت اسمًا باستخدام وظائف الانتظار والتوقف المؤقت المحفوظة في الرقم، فلن تتمكن من استخدام هذه الميزات، عليك حفظ كل رقم مجددًا. طريقة الحفظ مع ميزة الانتظار والتوقف المؤقت: 1. على الشاشة الرئيسية، اضغط على  . 2. اطلب الرقم، ثم اضغط على  . 3. اضغط على إضافة إيقاف مؤقت لثانيتين أو إضافة إنتظار.
الحماية	ما هي وظائف حماية الجهاز؟	يمكنك تعيين الهاتف لطلب إدخال نقش إلغاء قفل قبل التمكن من الوصول إلى الهاتف أو استخدامه.
إلغاء القفل النقش	كيف أنشئ نقش فتح القفل؟	1. من الشاشة الرئيسية، اضغط باستمرار على  . 2. اضغط على إعدادات النظام > علامة التبويب إعدادات الشاشة > تأمين الشاشة. 3. اضغط على اختر قفل الشاشة > النقش. في المرة الأولى التي تقوم فيها بذلك، يظهر برنامج تعليمي قصير حول إنشاء نقش إلغاء القفل. 4. قم بإعداد النقش عبر رسمه، ثم ارسمه مرة ثانية للتأكيد. احتياطات يجب اتباعها عند استخدام نقش القفل. من الهام جدًا تذكر نقش إلغاء القفل الذي قمت بتعيينه، لن تتمكن من الوصول إلى الهاتف مجددًا إذا استخدمت نقشًا غير صحيح خمس مرات. لديك 5 محاولات لإدخال نقش إلغاء القفل أو رمز PIN أو كلمة المرور. إذا استخدمت كل الفرص الخمس، فيمكنك إعادة المحاولة بعد 30 ثانية. (أو في حالة تعيين رمز PIN الاحتياطي مسبقًا، يمكنك استخدام رمز PIN الاحتياطي لإلغاء قفل النقش.)

الجواب	السؤال	الفئة
<p>إذا نسيت نقش إلغاء القفل: إذا قمت بتسجيل الدخول إلى حساب Google على الهاتف ولكن فشلت في إدخال النقش الصحيح 5 مرات، فاضغط على الزر هل نسيت النقش؟. سيطلب منك بعدها تسجيل الدخول إلى حساب Google لفتح قفل الهاتف. في حال لم تنشئ حساب Google على الهاتف أو نسيتَه، فعليك إجراء إعادة ضبط كاملة.</p> <p>تنبيه: في حال أُجريت عملية إعادة الضبط إلى إعدادات الشركة المصنعة، فسيتم حذف تطبيقات المستخدم وبياناته كلها. تجدر الإشارة إلى وجوب إجراء نسخ احتياطي لأي بيانات هامة قبل تنفيذ إعادة الضبط إلى إعدادات الشركة المصنعة.</p>	<p>ماذا عليّ أن أفعل إذا نسيت نقش إلغاء القفل ولم أنشئ حساب Google على الهاتف؟</p>	إلغاء القفل النقش
<p>نعم، سنتلقى إشعارًا بشأن ذلك.</p>	<p>هل سيتم إعلامي بامتلاء الذاكرة؟</p>	الذاكرة
<p>يتميز الهاتف بقدرات متعددة اللغات. لتغيير اللغة:</p> <ol style="list-style-type: none"> 1. من الشاشة الرئيسية، اضغط باستمرار على <input type="checkbox"/> واضغط على إعدادات النظام. 2. اضغط على علامة التبويب عامة < اللغة والإدخال < اللغة. 3. اضغط على اللغة المطلوبة. 	<p>هل يمكنني تغيير لغة الهاتف؟</p>	دعم اللغة
<p>يختلف تكوين الوصول إلى شبكة VPN من شركة إلى أخرى. لتكوين الوصول إلى شبكة VPN من الهاتف، عليك الحصول على تفاصيل من مسؤول الشبكة في شركتك.</p>	<p>كيف يمكنني إعداد شبكة VPN؟</p>	VPN

الجواب	السؤال	الفئة
<p>1. من الشاشة الرئيسية، اضغط باستمرار على <input type="checkbox"/>.</p> <p>2. اضغط على إعدادات النظام > علامة التبويب إعدادات الشاشة.</p> <p>3. اضغط على مهلة الشاشة.</p> <p>4. اضغط على المهلة المفضلة لإيقاف الإضاءة الخلفية للشاشة.</p>	<p>تتوقف شاشتي بعد مرور 15 ثانية فقط. كيف يمكنني تغيير فترة الوقت قبل توقف الإضاءة الخلفية؟</p>	مهلة الشاشة
<p>عند استخدام البيانات، قد يجعل الهاتف الاتصال الافتراضي هو اتصال Wi-Fi (في حالة تعيين اتصال Wi-Fi على هاتفك إلى تشغيل). ومع ذلك، لن يصدر إشعار عندما ينتقل الهاتف من شبكة إلى أخرى. للتعرف على اتصال البيانات قيد الاستخدام، اعرض رمز شبكة الهاتف المحمول أو رمز Wi-Fi في أعلى الشاشة.</p>	<p>عندما يتوفر كل من شبكة Wi-Fi وشبكة الجهاز المحمول، أيهما يستخدم الهاتف؟</p>	شبكة Wi-Fi وشبكة الهاتف المحمول
<p>نعم، ما عليك سوى لمس الرمز باستمرار حتى ظهور رمز سلة المهملات في أعلى الشاشة. بعد ذلك، اسحب الرمز إلى سلة المهملات بدون رفع إصبعك.</p>	<p>هل يمكن إزالة تطبيق من الشاشة الرئيسية؟</p>	الشاشة الرئيسية
<p>1. من الشاشة الرئيسية، اضغط باستمرار على <input type="checkbox"/>.</p> <p>2. اضغط على إعدادات النظام > علامة التبويب عامة > التطبيقات > التطبيقات المحملة.</p> <p>3. اضغط على التطبيقات، ثم اضغط على إلغاء التثبيت.</p>	<p>لقد قمت بتنزيل أحد التطبيقات وقد تسبب في حدوث الكثير من الأخطاء. كيف يمكنني إزالته؟</p>	تطبيق
<p>نعم، يمكن شحن الهاتف باستخدام كابل USB بغض النظر عما إذا كانت برامج التشغيل الضرورية مثبتة أم لا.</p>	<p>هل يمكنني شحن الهاتف باستخدام كابل USB بدون تثبيت برنامج تشغيل USB الضروري؟</p>	الشاحن

الفئة	السؤال	الجواب
المنبه	هل يمكنني استخدام ملفات الموسيقى في المنبه؟	نعم. بعد حفظ ملف موسيقى كنغمة رنين. يمكنك استخدامه كمنبه.
المنبه	هل سيكون صوت المنبه مسموعاً أم أنه سيختفي إذا تم إيقاف الهاتف؟	1. المس أغنية باستمرار في قائمة المكتبة. في القائمة التي تفتح اضغط على ضبط كنغمة رنين < نغمة رنين الهاتف أو نغمة رنين الاسم. 2. في شاشة إعدادات ساعة المنبه. حدد الأغنية كنغمة رنين.
المنبه	إذا تم تعيين مستوى صوت الرنين إلى إيقاف أو اهتزاز فهل سأسمع المنبه؟	لا. هذا الأمر غير معتمد.
الشاشة	حاولت تعيين سطوع الشاشة إلى الحد الأقصى ولكنها ما زالت تبدو مظلمة. كيف يمكنني جعل الشاشة أكثر سطوعاً.	المنبه مبرمج بحيث يكون مسموعاً حتى في ظل هذه السيناريوهات.
الشاشة	حاولت تعيين سطوع الشاشة إلى الحد الأقصى ولكنها ما زالت تبدو مظلمة. كيف يمكنني جعل الشاشة أكثر سطوعاً.	1. من الشاشة الرئيسية. اضغط باستمرار على <input type="checkbox"/> . 2. اضغط على إعدادات النظام < علامة التبويب إعدادات الشاشة < الضبط التلقائي لنغمة الشاشة. 3. اضغط على مربع الاختيار لإلغاء الوظيفة.
إعادة الضبط الكاملة (إعادة الضبط إلى إعدادات الشركة المصنعة)	كيف يمكنني إجراء إعادة الضبط إلى إعدادات الشركة المصنعة إذا كنت لا أستطيع الوصول إلى قائمة إعدادات الهاتف؟	في حالة عدم استعادة الهاتف حالته الأصلية. استخدم إعادة الضبط الكاملة (إعادة ضبط إعدادات الشركة المصنعة) لتهيئته.

User Guide

ENGLISH

- Some content and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- Available accessories may vary depending on your region, country or service provider.
- This handset is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Copyright ©2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

Table of contents

Guidelines for safe and efficient use	4	Google account setup	40
Important notice	15	Connecting to Networks and Devices	41
Getting to know your phone	19	Wi-Fi	41
Phone layout.....	19	Bluetooth.....	42
Installing the SIM or USIM card	21	Wi-Fi Direct	43
Charging the phone	22	SmartShare	44
Inserting a memory card.....	23	Transferring data between a PC and your device.....	45
Unlocking the screen.....	24	Calls	46
Your Home screen	25	Making a call.....	46
Touch screen tips	25	Calling your contacts	46
Home screen	26	Answering and rejecting a call	46
Customizing the Home screen	27	Making a second call.....	47
Returning to recently-used applications	28	Viewing your call logs	47
Notifications panel.....	29	Call settings.....	47
On-screen keyboard	32	Contacts	48
Special Features	33	Searching for a contact.....	48
Gesture shot.....	33	Adding a new contact	48
Glance View.....	33	Favorites contacts.....	48
Gesture View	34	Creating a group.....	49
KnockON	35	Messaging	50
Knock Code	35	Sending a message	50
Dual window.....	36	Conversation view	51
QuickMemo+.....	37	Changing message settings.....	51
QSlide.....	38		
QuickRemote.....	39		

E-mail	52	Settings	73
Managing email accounts.....	52	Networks.....	73
Working with account folders.....	52	Sound.....	76
Composing and sending email.....	53	Display.....	77
		General.....	80
Camera and Video	54	PC software (LG PC Suite)	86
Camera options on the viewfinder.....	54	For Windows OS.....	86
Using the advanced settings.....	55	For Mac OS.....	87
Taking a photo.....	55	Phone software update	89
Once you have taken a photo.....	56	Phone software update.....	89
Recording a video.....	56	About this user guide	91
After recording a video.....	57	About this user guide.....	91
Gallery.....	60	Trademarks.....	92
		DivX HD.....	92
Multimedia	63	Dolby Digital Plus.....	92
Music.....	63	Accessories	93
		Troubleshooting	94
Utilities	65	FAQ	98
Clock.....	65		
Calculator.....	66		
Calendar.....	66		
Voice Recorder.....	67		
Tasks.....	67		
Voice Search.....	68		
Downloads.....	68		
FM radio.....	68		
LG SmartWorld.....	69		
Web Browser	70		
Internet.....	70		
Chrome.....	72		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-H955 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.471 W/kg (10 g) and when worn on the body is 0.418 W/Kg (10 g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by non-qualified professional can cause damage to your device.

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- The flexibility of this product is limited to withstand ordinary and normal use. This phone may be bent flat up to 180 degrees for a limited period of time but should not be bent inward. Damages caused by misuse, including but not limited to intentionally bending or continually exerting force on the product, may lead to permanent damage to the display or other parts and functions of the phone.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone and charger (fast charger) during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
- For your safety, do not remove the battery incorporated in the product.
- Do not leave the phone in hot or cold places, as this may deteriorate phone performance.
- Do not replace the battery by yourself. The battery can be damaged, which can cause overheat and injury. The battery must be replaced by the authorized service provider. The battery should be recycled or disposed separately from household waste.


Laser safety statement

Caution!

This product employs a laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure or make direct contact with the laser.

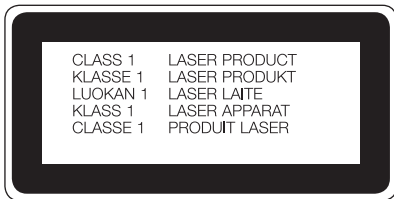

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

HOW TO UPDATE YOUR DEVICE

Access to latest firmware releases, new software functions and improvements.

- **Select the software update in settings menu on your device.**
- **Update your device by connecting it to your PC.** For more information about using this function, please visit <http://www.lg.com/common/index.jsp> select country and language.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-H955** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

LG Electronics Levant

Abdali Project, Rafik al Hariri Avenue,
The Boulevard, The Central Square, 5th Floor



Disposal of your old appliance

- 1 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 3 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Disposal of waste batteries/accumulators

- 1 This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
- 2 All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
- 4 For more detailed information about disposal of your old batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the product.




Please read this before you start using your phone!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10MB of space available in your phone memory, your phone cannot receive new messages. You must check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab (if necessary) >  > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

2. Optimizing battery life

Extend your battery's power by turning off features that you do not need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth or Location services (including GPS), turn them off.

- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.

NOTE:

- Some applications you download may consume battery power.
- While using downloaded applications, check the battery charge level.

NOTE: If you accidentally press the **Power/Lock Button** while the device is in your pocket, the screen will turn off automatically in order to save battery power.

3. Before installing an open source application and OS



WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.



WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, the phone may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

4. Using the Hard Reset (Factory Reset)

If your phone needs to be restored to its original settings and condition, use a Hard Reset (Factory Reset).

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock Button + Volume Down Button** on the back of the phone.
- 3 Release the **Power/Lock Button** only when the boot logo is displayed, then immediately press and hold the **Power/Lock Button** again.
- 4 Release all Buttons when the Factory hard reset screen is displayed.
- 5 Press the **Volume Buttons** to highlight **YES**, then press the **Power/Lock Button** to continue.
- 6 Press the **Volume Buttons** to highlight **YES** once more, then press the **Power/Lock Button** to confirm.





WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

5. Opening and switching applications

Multitasking is easy with Android; you can keep more than one application running at the same time. There is no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to make sure that idle applications don't consume resources unnecessarily.

- 1 Tap . App previews of recently used applications will be displayed.
- 2 Tap the application you want to access. This does not stop the previous app from running in the background. Make sure to tap  to back out of a window after using it.
 - To close an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.


6. If the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Press and hold the **Power/Lock Button** and **Volume Down Button** for about 10 seconds to reset your phone. To turn your phone off, press and hold the **Power/Lock Button** and the **Volume Down Button** for about 20 seconds. If it still does not work, please contact the service center.

Getting to know your phone

Phone layout

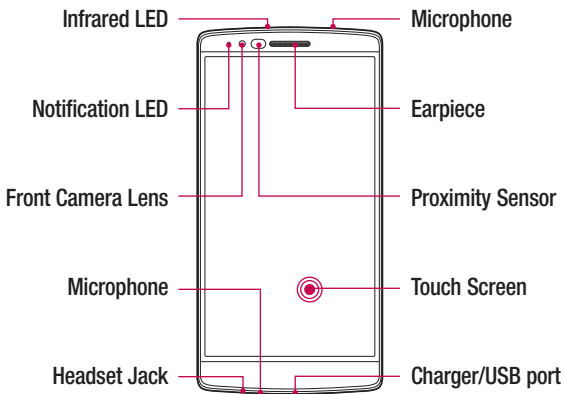


NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.



WARNING

Placing a heavy object on the phone or sitting on it can damage the display and touch screen functions. Do not cover the proximity sensor with screen protectors or any other type of protective film. This could cause the sensor to malfunction.

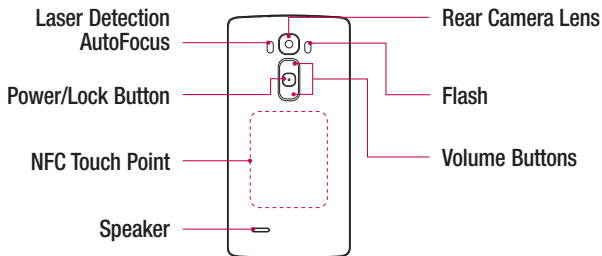

- | | |
|--------------------------|---|
| Power/Lock Button | <ul style="list-style-type: none"> • Turn your phone on/off by pressing and holding this button • Short press to lock/unlock the screen |
|--------------------------|---|

- | | |
|-----------------------|--|
| Volume Buttons | <p>(While screen is off)</p> <ul style="list-style-type: none"> • Long press the Up key to launch QuickMemo+ • Long press the Down key to launch Camera |
|-----------------------|--|

WARNING

Be careful not to damage the NFC touch point on the phone, as this is part of the NFC antenna.

NOTE: The back cover of this product applies a “self-healing” technology, which self-repairs minor scratches in just a few minutes. Minor scratches are those caused by ordinary and normal use of the phone. Scratches caused by abrasive surface, misuse, including but not limited to intentional scratches, and damages caused by a fall or dropping the product, may not disappear. The “self-healing” results may vary depending on the extent of the damage as well as other conditions. Any warranty on the “self-healing” is hereby expressly excluded.


NOTE: LDAF Sensor (Laser Detection AutoFocus Sensor)

By detecting the distance with laser, when you recording with the rear camera lens, LDAF Sensor enables you to focus the long or close range more fast and accurately.


Installing the SIM or USIM card

Before you can start exploring your new phone, you need to set it up.

- 1 To remove the back cover, hold the phone firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in the figure below.

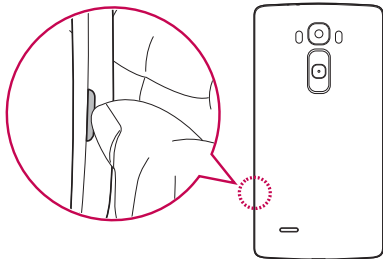


- 2 Slide the SIM card into the lower slot for the SIM card as shown in the figure. Make sure the gold contact area on the card is facing downward.

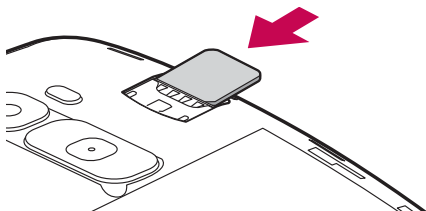

NOTE: Only the microSIM cards work with the device.

- 3 To replace the cover onto the device, align the back cover over the battery compartment (1) and press it down until it clicks into place (2).

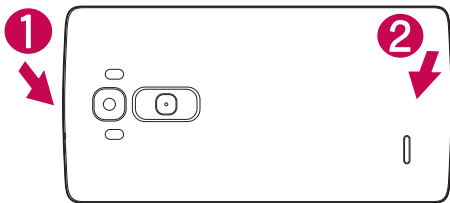


Charging the phone

Charge the battery before using it for first time. Use the charger to charge the battery.

WARNING

Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay or pop up message regarding slow charging, Or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is at the bottom of the phone. Insert the charger and plug it into a power outlet.

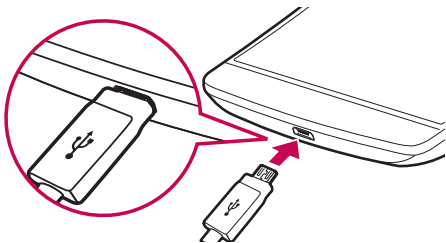

NOTE: Do not open the back cover while your phone is charging.

Inserting a memory card

Your device supports up to a 32 GB microSD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.


WARNING

Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.

NOTE:

- The device supports the FAT and the exFAT file systems for memory cards. When inserting a card formatted in a different file system, the device asks to reformat the memory card.
- Frequent writing and erasing of data shortens the lifespan of memory cards.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-coloured contacts facing downwards.

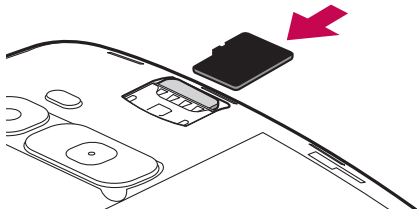

- 3 Replace the back cover.

Getting to know your phone

Unlocking the screen

By default, your screen will lock after a period of inactivity, then turn off.




Unlocking the screen

- 1 Press the **Power/Lock Button** or double-tap on the screen.
- 2 Swipe the screen in any direction to unlock it.

TIP! Smart Lock

You can use **Smart Lock** to make unlocking your phone easier. You can set it to keep your phone unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognises your face.

Setting up Smart Lock

- 1 Tap  >  > **Apps** tab > .
- 2 Tap **Display** tab > **Lock screen** > **Smart Lock**.
- 3 Before you add any trusted devices, trusted places, or trusted face, you need to set up a screen lock (pattern, PIN, or password).

Touch screen tips


Here are some tips on how to navigate on your phone.


- **Tap or touch** – A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.
- **Touch and hold** – Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs.
- **Drag** – Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.
- **Swipe or slide** – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead).
- **Double-tap** – Double-tap to zoom on a webpage or a map (if the feature is supported by the application).
- **Pinch-to-Zoom** – Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures (if the feature is supported by the application).
- **Rotate the screen** – From many applications and menus, the physical orientation of the screen adjusts to the device's physical orientation.

NOTE:

- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys.

Home screen

The Home screen is the starting point for many applications and functions. It allows you to add items like app shortcuts and Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

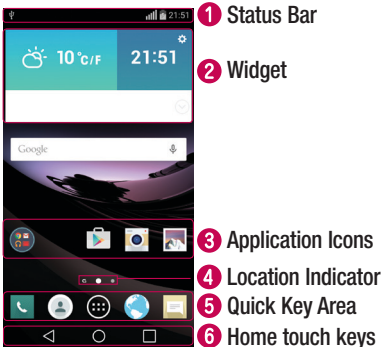

- 1 Shows phone's status information, including the time, signal strength, battery status and notification icons.
- 2 Widgets are self-contained applications that can be accessed through the Apps drawer or on the Home screen. Unlike a shortcut, a Widget can function as an on-screen application.
- 3 Tap an icon (application, folder, etc.) to open and use it.
- 4 Indicates which Home screen canvas you are currently viewing.
- 5 Provides one-touch access to the function in any Home screen canvas.

6 ◀ Back Key	Returns to the previous screen. Also closes pop-up items, such as menus, dialog boxes and the on-screen keyboard. Touch and hold it to access the Dual window.
○ Home Key	Return to the Home screen from any screen.
□ Recent Key	Displays recently used applications. If you touch and hold this key, it opens a menu of available options.

Extended Home screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets and more.

- Slide your finger left or right across the Home screen to access additional canvases.

Customizing the Home screen

You can customize your Home screen by adding apps and widgets and changing wallpapers.

Adding items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you want to add. You then see this added item onto the Home screen canvas.
- 3 Drag it to the desired location and lift your finger.

TIP! To add an application icon to the Home screen from the Apps menu, touch and hold the application you want to add.

Removing an item from the Home screen


- **Home screen** > Touch and hold the icon you want to remove > drag it to .

Adding an app as a Quick key


- From the Apps menu or on the Home screen, touch and hold an application icon and drag it to the Quick key area. Up to 7 apps can be added.

Removing an app from the Quick key area



- Touch and hold the desired quick key and drag it to .

NOTE:  **Apps Key** cannot be removed.

Customizing app icons on the Home screen

- 1 Touch and hold an application icon already on the Home screen canvas. The editing icon  appears in the upper-right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

Returning to recently-used applications


- 1 Tap . A list of recently used applications will be displayed.
- 2 Tap an icon to open the application. Or tap  to return to your previous screen.

Notifications panel

Notifications alert you to the arrival of new messages, calendar events and alarms, as well as ongoing events, such as when you are using turn-by-turn navigation.


When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons, such as Wi-Fi and battery strength shown on the right.


NOTE: The available options may vary depending on the region or service provider.

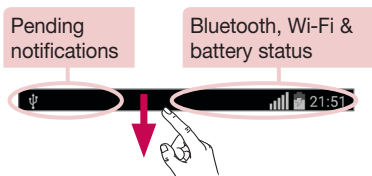

Opening the Notifications panel

Swipe down from the Status bar to open the Notifications panel. To close the Notifications panel, touch and drag the screen toward the top of the screen.

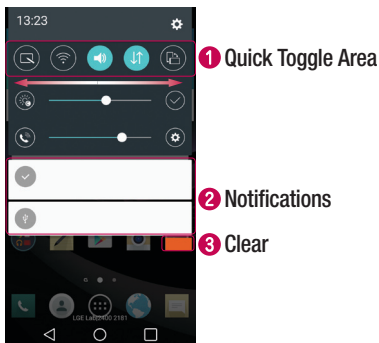












- 1** Tap each quick toggle key to turn it on/off. Touch and hold the key to access the settings menu for the function. To see more toggle keys, swipe left or right. Tap  to remove, add or rearrange toggle keys.
- 2** Current notifications are listed, each with a brief description. Tap a notification to open the corresponding application that manages it.
- 3** Tap to clear all the notifications.












Indicator icons on the Status Bar

Indicator icons appear on the Status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Missed call
	Bluetooth is on
	System warning
	An alarm is set
	New voicemail available

Icon	Description
	A media file is currently playing
	Silent mode is enabled
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	Data is synchronizing
	Choose input method


	New text or multimedia message		Media server content sharing is on
	NFC is on		Wi-Fi hotspot is active

NOTE: The icon's location in the Status bar may differ according to the function or service.


On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears on the screen when you tap an available text entry field.

Using the keypad and entering text

 Tap once to capitalize the next letter you type. Tap twice for all caps.

 Tap to access the keyboard's Settings menu.

 Tap to enter a space.

 Tap to create a new line.

 Tap to delete the previous character.

Entering accented letters


When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the pop-up appears and displays related special characters. Without lifting the finger, drag your finger to the desired special character.

Special Features


Gesture shot

Take a picture with a hand gesture. To take a photo, raise your hand until the front camera detects it and a box appears on the screen.

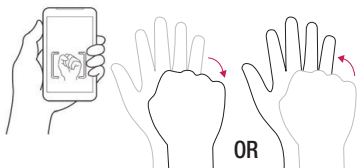




Glance View

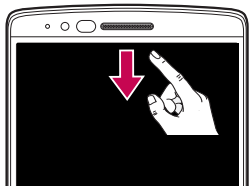
When the phone screen is off, you can see the Status bar, time and date by dragging your finger down on the screen.



Gesture View

After taking a photo with the front camera lens, you can automatically check the captured photo with this gesture.

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Take a picture with the front camera.
- 3 After taking the picture, bring the phone close to your face. The captured photo will be displayed.

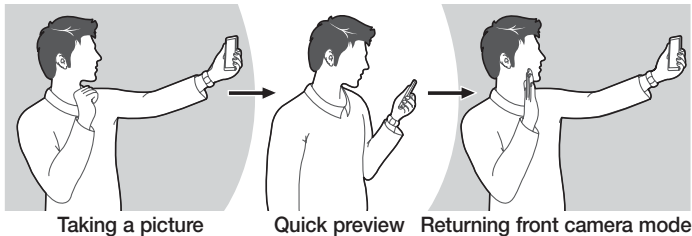

NOTE:

- Depends on the speed and angle of the gesture, this feature may not work properly.
- When the angle is changed after Quick preview, it will go back to the camera mode. You should go to Gallery to view the picture again.

KnockON

You can wake up, or turn off, the screen as easily as double-tapping the screen. While the screen is off, and idle, double-tap the center screen quickly to wake the screen. To turn the screen off, double-tap the Status bar in any screen (except on the camera viewfinder) or empty area on the Home screen.




NOTE: When using KnockOn to wake the screen, make sure you do not cover the proximity sensor. Doing so will prevent the screen from turning on. This feature is designed to prevent the device turning on inadvertently in your pocket or storage location.

Knock Code

The Knock Code feature allows you to wake and unlock the screen with your own Knock Code pattern. When enabled, Knock Code divides the screen into 4 parts and uses your unique combination of taps to secure your device. You can disable this feature in the Lock screen settings.

NOTE:

- If you enter an incorrect Knock Code combination 6 times, it will be necessary to use your Google account log in or backup PIN.
- Use the fingertip instead of finger nail to tap the screen for turning it on or off.
- When the Knock Code is not in enabled, you can use Knock On function by tapping the screen.

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Display** tab > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Follow the on-screen steps to set your Knock Code.
- 3 Tap Done when you have finished.


Unlocking the screen using the Knock Code


You can wake up and unlock the screen by tapping the Knock Code, set up in the previous section, when the screen is off.

Dual window

This feature allows you to multi-task by splitting up the screen into two, allowing you to use two compatible applications at the same time.

- 1 Touch and hold the ◀ to split the screen.
- 2 Tap or drag the app icon for the corresponding application you wish to use.

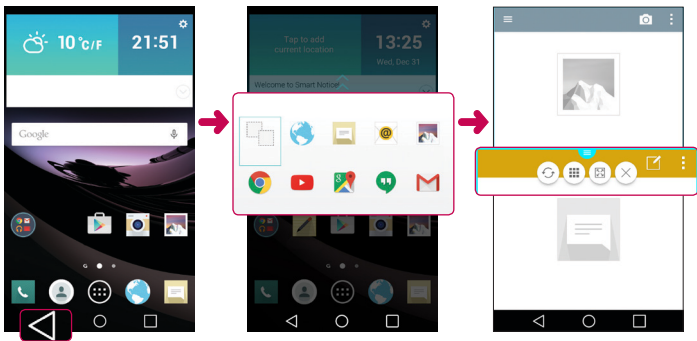

 : Tap to view the Dual window menu options, or drag to resize the split screens.




 : Switch two screens.

 : View the app list.

 : Change the selected window to full screen.


 : Close the currently selected app window.

NOTE: You can enable or disable Dual window through the Settings menu.


- 1 Tap  >  > **Apps** tab (if necessary) >  > **General** tab > **Dual window**.
- 2 Slide the toggle key to **On** or **Off**.

QuickMemo+

The **QuickMemo+** feature allows you to create memos and capture screen shots. Capture screens, draw on them and share them with family and friends with QuickMemo+.






OR



- 1 (While screen is off) Press and hold the Volume Up button.


OR

(While the screen is on) Touch and slide the Status bar downward and tap .

- 2 Use the menu to select from the available options **Pen type**, **Color**, **Eraser** and create a memo.
- 3 Tap  to save the memo. To exit QuickMemo+ at any time, tap .

QSlide

From any screen, use the Notification panel to easily access and use the Notepad, Calendar, Calculator, and more with QSlide.

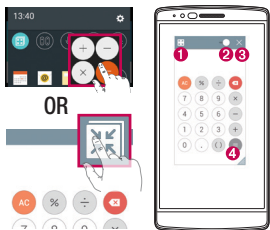



1		Tap to expand the window to full window size.
2		Tap to adjust the window's transparency.
3		Tap to close the QSlide window.
4		Drag to adjust the size.

- 1 Touch and slide the status bar downward > tap **QSlide** to view the available QSlide apps. Also, while using applications that support QSlide, tap . The function is displayed as a small window on your screen.
- 2 You can use and tap the screen under the **QSlide** windows when the transparency bar is not full


NOTE: QSlide can support up to one window at the same time.

QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV, set-top box and audio system, and more.

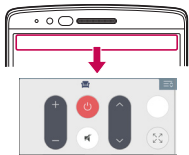

Set up

- 1 Touch and slide the Status bar downward and tap  > **ADD REMOTE**.

OR

Tap  >  > **Apps** tab (if necessary) >  > tap .

- 2 Select the type and brand of the device, then follow the on-screen instructions to configure the device.

Access your QuickRemote

- 3 Once you have completed the initial set up, you can easily access the QuickRemote from the Notification panel. Open the Notification panel and use the QuickRemote functions.

NOTE: The QuickRemote operates the same way as an ordinary remote control infrared (IR) signals. Be careful not to cover the infrared sensor at the top of the phone when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

Google account setup

When you first turn on your phone, you have the opportunity to sign into your Google Account and select how you want to use certain Google services.

Setting up your Google account

- During the initial boot up of your device, ensure your device is connected to the Web. Then, sign into a Google Account from the prompted set-up screen.

OR

- After having exited the Startup Wizard, tap  >  >  > **General** > **Accounts & sync** > **Add Account** > **Google**.

If you already have a Google account, enter your email address and tap **NEXT**.

Once you have set up your Google account on your phone, your phone will automatically synchronize with your Google account on the Web (if data connection is available).

Depending on your synchronization settings, your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your phone.




After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

You can use high-speed Internet access while within the coverage of the wireless access point (AP).





Connecting to Wi-Fi networks

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Wi-Fi**.
- 2 Set **Wi-Fi** to **ON** to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 3 Tap a network to connect to it.
 - If the network is secured with a lock icon, you will need to enter a security key or password.

NOTE: The Status bar displays icons that indicate Wi-Fi status.

NOTE: If you are out of the Wi-Fi zone or have set Wi-Fi to **OFF**, the device may automatically connect to the Web using mobile data, which may incur data charges.

TIP! How to obtain the phone's MAC address

Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Wi-Fi** >  > **Advanced Wi-Fi** > **MAC address**.




Bluetooth

You can use Bluetooth to connect with headsets, sound systems, or even to exchange data between near devices.

NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured.
- If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Pairing your phone with another Bluetooth device

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Bluetooth**.
- 2 Set **Bluetooth** to **ON**.
- 3 Tap **Search for devices** to view the devices in the Bluetooth Range.
- 4 Choose the device you want to pair with from the list and follow any subsequent instructions to complete pairing. Once the pairing is successful, your phone connects to the other device.




NOTE: Some devices, especially headsets or hands-free car kits, may have a default Bluetooth PIN, such as 0000.

Sending data via Bluetooth

- 1 Using an application that supports sharing, locate the data, or file, that you want to share.
- 2 Select the **Share** option.
- 3 Select **Bluetooth**.
- 4 Select the paired Bluetooth device (or pair with a new device).

NOTE: The method for selecting an option may vary by data type.

Receiving data via Bluetooth

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Bluetooth**.
- 2 Set **Bluetooth** to **ON** to turn it on.
- 3 You will receive a request to accept a pairing attempt from the sending device. Be sure to select **Accept**.

Wi-Fi Direct

Wi-Fi Direct provides a direct connection between Wi-Fi enabled devices without requiring an access point.



Turning on Wi-Fi Direct

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Wi-Fi**.
- 2 Tap  > **Advanced Wi-Fi** > **Wi-Fi Direct**.

NOTE: When in this menu, your device is visible to other visible Wi-Fi Direct devices nearby.

SmartShare

SmartShare allows you to receive multimedia content via LG phone and tablets.

- 1 While viewing the content you want to share, tap  or  > **SmartShare**.
- 2 Tap **Play** or **Beam** in the pop-up that is displayed.
 - **Play:** You can stream your content via a TV, Bluetooth speaker, etc.
 - **Beam:** You can send your content to Bluetooth devices or via SmartShare Beam* to supported LG phones or tablets.
*SmartShare Beam quickly transfers multimedia contents through Wi-Fi Direct.
- 3 Tap the device you want to share from the list.
 - If the device is not displayed on the list, make sure that Wi-Fi, Wi-Fi Direct, or Bluetooth is turned on. Then tap **Rescan**.

Enjoying content from nearby devices on your phone

- 1 To connect nearby devices to your phone, tap the **Nearby devices** option on the **Gallery** and **Music** apps.
 - Make sure that your phone and nearby devices are connected to the same Wi-Fi network and that the DLNA service on the nearby device is turned on.
- 2 Tap the device you wish to connect to.
If the device is not listed, tap **Search nearby devices**.
- 3 After a connection is established, you can enjoy the content on your phone.

Transferring data between a PC and your device

You can copy or move data between a PC and the device.

Transferring data





- 1 Connect your device to a PC using the USB cable that came with your phone.
- 2 Open the Notifications panel and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.


NOTE:

- The LG Android Platform Driver is required to be installed on your PC to be able to detect the phone.
- Check the requirements for using **Media device (MTP)**.



Items	Requirement
OS	Microsoft Windows XP SP3, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

Making a call

- 1 Tap  to open the dialer.
- 2 Enter the number using the dialer. To delete a digit, tap .
- 3 After entering the desired number, tap  to place the call.
- 4 To end the call, tap .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts




- 1 Tap  to open your contacts.
- 2 Scroll through the contact list. You can also enter the contact's name in the Search field or scroll along the alphabet letters on the right edge of the screen.
- 3 To place the call, tap  next to the contact you want to call.

Answering and rejecting a call

When you receive a call, swipe  in any direction to answer the call.

Swipe  in any direction to decline the call.

Making a second call

- 1 During your first call, tap  > **Add call**.
- 2 Enter the number and tap  to place the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 To toggle between numbers, tap the number displayed on the screen. You can also tap  to start a conference call.
- 5 To end all calls, tap **End**.


NOTE: You are charged for each call you make.

Viewing your call logs

On the Home screen, tap  and select **Call logs** tab.


A list of all dialed, received and missed calls is displayed.

TIP!

- Tap any call log entry to view the date, time and duration of the call.
- Tap , then tap **Delete all** to delete all of the recorded items.

Call settings


You can configure phone call settings, such as call forwarding, as well as other special features offered by your carrier.

- 1 On the Home screen, tap  to open the dialer.
- 2 Tap  to display the available options.
- 3 Tap **Call settings** and configure the desired options.



Contacts

Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

- 1 Tap  to open your contacts.
- 2 Tap **Search contacts** and enter the contact name using the keyboard. You can also scroll along the alphabet letters on the right edge of the screen.


Adding a new contact

- 1 Tap  and enter the new contact's number.
- 2 Tap  > **Add to Contacts** > **New contact**.
- 3 If you want to add a picture to the new contact, tap the image icon.
Choose **Take photo** or **Select from Gallery**.
- 4 Enter the desired information for the contact.
- 5 Tap **Save**.


Favorites contacts

You can classify frequently called contacts as favorites.



Adding a contact to your favorites

- 1 Tap  to open your contacts.
- 2 Tap a contact to view its details.
- 3 Tap the star at the top right corner of the screen. The star turns yellow.

Removing a contact from your favorites list

- 1 Tap  to open your contacts.
- 2 Tap the **Favorites** tab and choose a contact to view its details.
- 3 Tap the yellow star at the top right corner of the screen. The star turns grey color and the contact is removed from your favorites.

Creating a group



- 1 Tap  to open your contacts.
- 2 Tap **Groups** >  > **New group**.
- 3 Enter a name for the new group. You can also set a distinct ringtone for the group.
- 4 Tap **Save** to save the group.

NOTE: If you delete a group, the contacts assigned to that group are not lost. They remain in your contact list.


Messaging


Your phone combines text and multimedia messages into one intuitive, easy-to-use menu.

Sending a message

- 1 Tap  on the Home screen and tap  to create a new message.
- 2 Enter a contact name or contact number into the **To** field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient and add more than one contact.

NOTE: You may be charged for each text message you send. Please consult with your service provider.

- 3 Tap the **Enter message** field and begin composing your message.
- 4 Tap  to open the messaging options.

TIP! You can tap  to attach a file that you want to share.

- 5 Tap **Send** to send your message.

TIP!

- The 160-character limit may vary from country to country, depending on the language and how the text message is coded.
- If an image, video or audio file is added to a text message, it is automatically converted into a multimedia message and you may be charged accordingly.

Conversation view

Text and multimedia messages exchanged with another party are displayed in chronological order so that you can conveniently see and find your conversations.

Changing message settings

Your phone's messaging settings are predefined to allow you to send messages immediately. You can change the settings based on your preferences.

- Open the **Messaging** app and tap  > **Settings**.

E-mail






You can use the E-mail application to read emails from services like Gmail. The E-mail application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide you with the account settings you need.

Managing email accounts





The first time you open the **E-mail** application, a setup wizard opens to help you set up an email account.

After the initial setup, the Email app displays the contents of your inbox.






Adding another email account:

- Tap  >  > **Apps** tab (if necessary) >  >  > **Settings** >  **Add account.**



Changing an email general settings:

- Tap  >  > **Apps** tab (if necessary) >  >  > **Settings** > **General settings.**

Deleting an email account:






- Tap  >  > **Apps** tab (if necessary) >  >  > **Settings** >  > **Remove account** > Select the account you want to delete > **Remove** > **Yes.**

Working with account folders

To access your email account's folders, open the  app and tap  > **Folders**. Each account has Inbox, Outbox, Sent and Drafts folders. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

Composing and sending messages




- 1 While in the  application, tap  to create a new email.
- 2 Enter an address for the email's intended recipient. As you enter text, matching addresses are proposed from your Contacts. Separate multiple addresses using semicolons.
- 3 Tap  to add a Cc/Bcc and tap  to attach files, if required.
- 4 Enter the email's text.
- 5 Tap  to send the email.

Camera and Video

To open the Camera application, tap  >  > **Apps** tab (if necessary) > .







Camera options on the viewfinder




- 1 Hide/Display Options** – Tap to hide/display the camera options on the viewfinder.
- 2 Flash** – Allows you to manage the camera's flash. Choose from **Off** , **On** , **Auto** .
- 3 Swap camera** – Tap to swap between the rear camera and the front camera.
- 4 Shot mode** – Allows you to select the shot mode for the picture. Choose from **Auto**, **Panorama** or **Dual**.
- 5 Settings** – Tap to adjust the camera and video settings.
- 6 Gallery** – Tap to access your Gallery.
- 7 Record** – Tap to start recording a video.
- 8 Capture** – Tap to take a photo.
- 9 Back key** – Tap to close the selected menu or exit the Camera app.

Using the advanced settings

In the camera viewfinder, tap  to access the camera settings below.





	Combines photos taken at multiple exposures into one optimal photo to get a better photo in difficult lighting situations.
	Selects the photo resolution.
	Allows you to say a voice command to take pictures. You can say LG, Cheese, Smile, etc.
	Sets a delay after the capture key is pressed. This is ideal if you want to be in the photo or video.
	Displays grid lines to help you align your pictures and videos.
	Opens the Help guide to show how to use a function.

Taking a photo


- 1 Open the **Camera** application and point the lens toward the subject you want to photograph.
- 2 Focus indicators will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 3 When the focus indicators turn blue, the camera has focused on your subject.
- 4 Tap  to capture the photo.

Once you have taken a photo


Tap the image thumbnail at the bottom of the Camera screen to view the last photo you took. The following options are available.

	Tap to edit the photo.
	Tap to take another photo immediately.
	Tap to send your photo to others or share it in via any available social network services.
	Tap to delete the photo.
	Tap to access additional options.
	Tap to add the photo to your favorites.



Recording a video

- 1 Open the **Camera** application and point the lens toward the subject you want to capture in your video.
- 2 Tap  once to start recording.

NOTE: The timer will be displayed on the screen.






- 3 A red light appears in the upper-right corner of the viewfinder with a timer showing the length of the video.
- 4 Tap  to stop recording.

TIP!

-  – Tap to capture a screen shot while recording a video.
-  – Tap to pause the recording.

After recording a video

In the viewfinder, tap the video thumbnail at the top of the screen to view the last video you recorded. The following options are available.

	Tap to record another video immediately.
	Tap to open the available sharing options (such as Messaging or Bluetooth) to share.
	Tap to delete the video.
	Tap to access additional options.
	Tap to add the video to favourites.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Multi-point Auto Focus







When you take a picture, the Multi-point Auto Focus (AF) function operates automatically and allows you to see a clear image.


Burst shot

Allows you to take multiple shots quickly. Touch and hold .

Panorama mode

Allows you to take a panoramic picture.

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap  > .
- 3 Tap  to start taking the panoramic picture.
- 4 Pan your phone slowly in one direction.

- 5 Make sure that the focus area aligns with the blue guideline while taking the photo.
- 6 Tap  to stop taking the panoramic picture.

Dual

The Dual feature allows you to take a picture or record video with the front and rear cameras at the same time.

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap  > .



NOTE: Drag the small screen to move it to your desired location. Touch and hold the small screen to resize it. Tap on the small screen to alternate between the two cameras.

- 3 Tap  to stop dual recording.

Super Zooming


When using the rear camera lens, you can zoom in or out to 8x.

NOTE: Use a steady hand. This feature does not work with some functions. Objects may be overlapped when taking a picture of fast-moving subjects.

Live Zoom

Live Zoom allows you to zoom in or out on a portion of a video that is being played to make the desired section appear larger or smaller.


When viewing a video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.

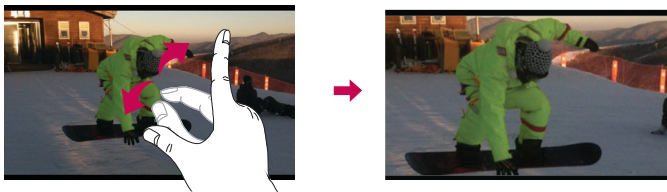

NOTE: Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

Dual Play

Dual Play (wired or wireless connection to two displays) can be run on a different screen.

NOTE: Connect two devices using a wired (Slimport-HDMI) cable or wirelessly (Miracast). The connectable device can be a TV or a monitor supported by an HDMI cable or Miracast. The Gallery and Video apps are supported on Dual Play. Tap  once when two displays are a different status (i.e. the monitor is playing a video and your phone's video app is displaying an empty screen), then Dual Play will start. Not all videos are supported by Dual Play. Dual Play operates at 1280X720 or higher display resolution.

Gallery

The **Gallery** allows you to view and manage all of your pictures and videos.

- Tap  >  > **Apps** tab (if necessary) > .

NOTE:

- Depending on the software installed, some file formats may not be supported.
- Some files may not play properly due to their encoding.

Viewing pictures

The Gallery displays your pictures in folders. When an application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder.



Pictures are displayed in a folder by creation date. Select a picture to view it full screen. Scroll left or right to view the next or previous image.


Zooming in and out







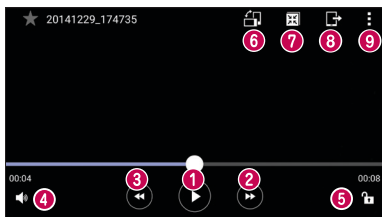


Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place in the picture zoom in. Pinch in or double-tap the image to zoom out.

Playing videos

- 1 Touch  > **Apps** tab (if necessary) > .
- 2 Select the video you want to watch.
The following options are available.



	Touch to pause/resume video playback.
	Touch to fast-forward 10 seconds.
	Touch to rewind 10 seconds.
	Touch to adjust the video volume.
	Touch to lock/unlock the screen.
	Touch to rotate the screen.
	Touch to use QSlide for the Videos app.
	Tap to share your video using the SmartShare function.
	Tap to access additional options.



To change the volume while watching a video, press the Up and Down Volume buttons on the back of the phone.

Editing photos


While viewing a photo, tap .

Deleting photos/videos

Use one of the following methods:

- While in a folder, tap , select the photos/videos and then tap **Delete**.
- While viewing a photo, tap .




Setting wallpaper

While viewing a photo, tap  > **Set image as** to set the image as wallpaper or assign it to a contact.




NOTE:

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.




Music










Your phone has a music player that lets you play all your favorite tracks. To access the music player, tap  >  > **Apps** tab (if necessary) > .

Playing a song

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap the **Songs** tab.
- 3 Select the song you want to play.
- 4 The following options are available.



1		Tap to pause playback.
		Tap to resume playback.
2		Tap to skip to the next track in the album, playlist or shuffle list. Touch and hold to fast-forward.

3		Tap to restart the current track or skip to the previous track in the album, playlist or shuffle list. Touch and hold to rewind.
4		Tap to adjust the volume.
5		Tap to set audio effects.
6		Tap to play the current playlist in shuffle mode (tracks are played in random order).
7		Tap to toggle through repeat all songs, repeat current song and repeat off.
8		Tap to share your music using the SmartShare function.
9		Tap to add the song to your favorites.
10		Tap to open the current playlist.
11		Tap to access additional options.

To change the volume while listening to music, press the Up and Down Volume buttons on the back side of the phone.

NOTE:

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a license to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Clock

Use the Clock app gives you access to the Alarms, Timer, World clock and Stopwatch functions. Access these functions by tapping the tabs across the top of the screen or swiping horizontally across the screen.

Tap  >  > **Apps** tab (if necessary) > .

Alarm

The Alarms tab allows you to set alarms.

- 1 Open the **Clock** app, then select the **Alarm** tab.
- 2 Tap the **New alarm** icon to add an alarm.
- 3 Adjust the settings as necessary and tap **Save**.

NOTE: You can also tap an existing alarm to edit it.

Timer

The Timer can alert you with an audible signal when a set amount of time has passed.

- 1 Open the **Clock** app, then select the **Timer** tab.
- 2 Set the desired time on the timer.

World clock

The World clock allows you to easily check the current time in other cities around the world.

- 1 Open the **Clock** app, then select the **World clock** tab.
- 2 Tap the **New city** icon and select the desired city.

Stopwatch

The Stopwatch tab allows you to use your phone as a stopwatch.

- 1 Open the **Clock** app, then select the **Stopwatch** tab.
- 2 Tap the **Start** key to initiate the stopwatch.






NOTE: Tap the Lap key to record lap times.


- 3 Tap the **Stop** button to stop stopwatch.

NOTE: To reset the stopwatch, tap the Reset button. You can also tap the Resume button to resume the stopwatch.

Calculator





The Calculator app allows you to perform mathematical calculations using a standard or scientific calculator.

- 1 Tap  >  > **Apps** tab (if necessary) >  .
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.
- 4 For more complex calculations, tap  > **Scientific calculator**.

NOTE: To check the history, tap  > **Calculation history**.

Calendar







The Calendar app allows you to track your schedule of events.


- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap the date you want to add an event to. Then tap .

Voice Recorder

The Voice Recorder app records audible files for you to use in a variety of ways.

Recording a sound or voice




- 1 Tap  >  > .
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.

NOTE: Tap  to access your recordings. You can listen to the saved recording. The available recording time may differ from actual recording time.

Tasks

You can add your tasks in the Tasks app and synchronize with your MS Exchange account (if supported by your MS Exchange account).




Synchronizing MS Exchange

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap **General** tab > **Accounts & sync** > **Add account**.
- 3 Tap **Microsoft Exchange** and sign in to your account.
- 4 Make sure to place a checkmark in the **Tasks** option when prompted.

NOTE: MS Exchange may not be supported depending on email server.

Voice Search

Use this application to search the web using your voice.

- 1 Tap  >  > **Apps** tab (if necessary) > **Google** folder > .
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded through your applications.

- Tap  >  > **Apps** tab (if necessary) > .

NOTE: This application may not be available depending on the region or service provider.

FM radio

Your phone has a built-in FM radio so you can tune in to your favorite stations and listen on the go.

- Tap  >  > **Apps** tab (if necessary) > .




NOTE: You need to use your headphones to listen to the radio. Insert it into the headphone jack.

NOTE: This application may not be available depending on the region or service provider.

LG SmartWorld

LG SmartWorld offers an assortment of exciting content – fonts, themes, games, applications.


How to Get to LG SmartWorld from Your Phone

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap **Sign in** and enter your user name and password. If you have not signed up yet, tap **Register** to create an account.
- 3 Browse and download the content you want.

NOTE:

- You may incur data fee charges when using your mobile network to access LG SmartWorld.
- LG SmartWorld may not be available for all carriers or in all countries.

NOTE: What if there is no LG SmartWorld icon?

- 1 Using a mobile Web browser on your device, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

Special benefits available for LG SmartWorld

- Personalize your device with home themes, keyboard themes, and fonts.
- Enjoy special promotions only offered on LG SmartWorld.
- Note that LG SmartWorld is only available for certain devices. Please check the www.lgworld.com for more information.

Web Browser

Internet






Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your mobile phone.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

- Tap  >  > **Apps** tab (if necessary) >  .

Using the Browser toolbar

Scroll towards the top of the webpage to access the browser toolbar.

	Tap to go back one page.
	Tap to go forward one page.
	Tap to go to the Home page.
	Tap to open a new window.
	Tap to access your bookmarks.

Viewing webpages


Tap the address field, enter the web address and tap **Go** on the keyboard.

Opening a page

To go to a new page, tap  > .

To go to another webpage, tap , scroll up or down, and tap the page to select it.

Searching the web by voice

In the browser, tap the address field and then tap . When prompted, say a keyword and select one of the suggested keywords that appear.



NOTE: This feature may not be available depending on the region or service provider.

Bookmarks

To bookmark the current webpage, tap  > **Add to bookmarks** > **OK**.

To open a bookmarked webpage, tap  and select the desired one.

History

Tap  > **History** to open a list of recently visited webpages. To clear all of your history, tap  > **Yes**.

Using QSlide with the Browser

Use this feature to multi-task while browsing the internet.

While viewing content, such as contacts or notes that include web addresses, select a web address and then tap **Popup Browser** to open the pop-up browser. Touch and drag the QSlide window to move it to another location.

To view the browser in full screen, tap .

To close the browser, tap .

Chrome

Use Chrome to search for information and browse webpages.

- Tap  >  > **Apps** tab (if necessary) > .

NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

In the Chrome browser, tap the address field, and then enter a web address or search criteria.

Opening a page

To open a new page, tap  > **New tab**.

To go to another webpage, tap , and tap the page to select it.

Settings

This section provides an overview of items you can change using your phone's System Settings menus.

Accessing the Settings menu:

- Tap  > touch and hold  > **System settings**.
- or -
- Tap  >  > **Apps** tab (if necessary) > .

Networks

< WIRELESS NETWORKS >

Wi-Fi

Allows you to manage your Wi-Fi connections and connect to available Wi-Fi networks.

Bluetooth

Allows you to manage your the Bluetooth wireless feature.

Mobile data

Displays the data usage and allows you to set a personalized mobile data usage limit.

Call

This menu allows you to configure various call settings.

- **Voicemail** – Allows you to select your carrier's voicemail service.
- **Fixed dialing numbers** – Allows you to manage and compile a list of numbers that can be called from your phone. You need your PIN2, which is available from your operator. If activated, only numbers in the fixed dial list can be called from your phone.

- **Incoming voice call pop-up** – Displays a pop-up for an incoming call when an app is in use.
- **Call reject** – Allows you to set the call decline function.
- **Decline with message** – When you want to decline a call, you can send a quick message using this function. This is useful if you need to decline a call during a meeting.
- **Call forwarding** – Allows you to choose when to forward calls.
- **Auto answer** – Sets the time before a connected hands-free device automatically answers an incoming call.
- **Connection vibration** – Vibrates your phone when the other party answers the call.
- **Noise suppression** – Suppresses background noise on your device during a call.
- **Voice clarity** – Enhances voice quality in noisy environments so you can hear more clearly.
- **Save unknown numbers** – Allows you to add unknown numbers to contacts after a call.
- **Power key ends call** – Allows you to use the Power key to end calls.
- **Call barring** – Locks incoming, outgoing or international calls.
- **Call duration** – Allows you to view the call duration for various types of calls.
- **Additional settings** – Allows you to change the following settings.

< CONNECTIVITY >

Share & connect

- **NFC** – Your phone is an NFC-enabled cell mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your content with an NFC tag or another NFC support device by simply tapping it with your device. If you tap an NFC tag with your device, it displays the tag content on your device.

- **Android Beam** – When this feature is turned on, you can transfer app content to another NFC-capable device by holding the devices close together. Just bring the device together (typically back to back) and then tap your screen. The app determines what gets beamed.
- **SmartShare Beam** – Allows you to receive multimedia content via LG phones and tablets.
- **Media server** – Share media content with nearby devices via DLNA.
- **Miracast** – Allows you to wirelessly mirror the phone screen and sound onto a Miracast dongle or TV.
- **LG PC Suite** – Connect LG PC Suite with your phone to easily manage multimedia content and apps.

Tethering & networks

- **USB tethering** – Allows you to share the internet connection with your computer via a USB cable.
- **Wi-Fi hotspot** – Allows you to create a hotspot and share your connection.
- **Bluetooth tethering** – Allows you to connect to other devices via Bluetooth.
- **Help** – Displays Help information about USB tethering, Wi-Fi hotspot, and Bluetooth tethering.
- **Airplane mode** – Airplane Mode (flight mode) allows you to use many of your phone's features, such as games, and music, when you are in an area where making or receiving calls or data use is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online data.
- **Mobile networks** – This menu allows you to configure various mobile network settings.
- **VPN** – From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

Sound

< BASIC >

Sound profile

Allows you to set your phone's sound profile. Choose from **Sound**, **Vibrate only** or **Do not disturb**.

Volume


Adjust the phone's volume settings to suit your needs and environment.

Vibration strength


Allows you to set the vibration strength for calls, notifications and touch feedback.

< RINGTONES & VIBRATIONS >

Ringtone

Allows you to set the ringtones for calls. You can also add a ringtone by tapping  in the upper-right corner of the screen.

Notification sound

Allows you to set the notification sound. You can also add a notification sound by tapping  in the upper-right corner of the screen.

Sound with vibration

Checkmark to set the phone to vibrate in addition to the ringtone when you receive calls.

Vibration type

Allows you to choose the type of vibration.

< NOTIFICATIONS >

Do not disturb

Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.

Lock screen

Allows you to choose if you want to show or hide notifications on the lock screen.

Apps

Allows you to prevent apps from displaying notifications or set apps to show notifications with priority when Do not disturb is set to Priority only.

< ADVANCED SETTINGS >

Vibrate on tap

Checkmark to vibrate when tapping the Home touch buttons and during other UI interactions.

Sound effects

Tap to set the dial pad touch tones, touch sounds and screen lock sound.

- **Dialpad touch sounds** – Checkmark to play tones while using the dial pad.
- **Touch sounds** – Checkmark to play a sound when making a screen selections.
- **Screen lock sound** – Checkmark to play a sound when locking and unlocking the screen.

Message/call voice notifications

Tap the **Message/call voice notifications** switch to toggle it On or Off. On allows your device to read out incoming calls and message events automatically.

Display

< HOME & LOCK >

Home screen

- **Select Home** – Set **Home** or **EasyHome** as the default home.
- **Smart Bulletin** – Tap the **Smart Bulletin** switch to toggle it On or Off. Activating this feature adds an additional Home screen showing customized information. Checkmark **LG Health**, or **Smart Tips**.

- **Theme** – Sets the screen theme for your device. You can download new themes from **LG SmartWorld**.
- **Wallpaper** – Sets the wallpaper to use on your Home screen.
- **Screen swipe effect** – Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.
- **Allow Home screen looping** – Displays the first screen after the last screen when scrolling the Home screen.
- **Home backup & restore** – You can backup and restore app/widget layouts and the Home screen wallpaper.
- **Help** – Displays help information for the Home screen.

Lock screen

- **Select screen lock** – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. If you enabled a Pattern lock type when you turn on your phone or wake up the screen, you are asked to draw your unlock pattern to unlock the screen.
- **Smart Lock** – Sets to keep your phone unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognizes your face.
- **Screen swipe effect** – Sets the screen swipe effect options.

NOTE: This setting name may be Pattern effect if the Screen lock is set to Pattern.

- **Wallpaper** – Allows you to set your Lock screen wallpaper.
- **Shortcuts** – Allows you to choose the shortcuts available on the lock screen.
- **Weather animation** – Checkmark to show weather animation on the lock screen for the current location.
- **Contact info for lost phone** – Allows you to display the owner information on the lock screen in case the phone is lost.

- **Lock timer** – Sets the amount of time before the screen automatically locks after the screen has timed out.
- **Power button instantly locks** – Checkmark to instantly lock the screen when the Power/Lock Button is pressed. This setting overrides the Security lock timer setting.

Home touch buttons

Set the Home touch buttons displayed at the bottom of all screens. Set which keys are displayed, their position on the bar and what they look like.

< FONT >

Font type

Sets the type of font used for the phone and menus.

Font size

Sets the size of the font displayed in the phone and menus.

< OTHER SCREEN SETTINGS >

Brightness

Adjusts the brightness of the screen. For best battery performance, use the dimmest comfortable brightness.

Notification LED

Tap the switch to toggle it On or Off. On activates the LED light for the notifications you select, in the color you set for each.

Auto-rotate screen

Checkmark to set the phone to automatically rotate the screen based on the phone orientation (portrait or landscape).

Screen timeout

Sets the amount of time before the screen times out.

Screen mode

Sets the screen mode. Choose from **Standard**, **Vivid** and **Natural**.

< ADVANCED SETTINGS >

Screen-off effect

Select the screen-off effect when locking and turning off the screen. Choose from **Black hole**, **Retro TV** and **Fade out**.

Daydream

Tap the Daydream switch to toggle it On or Off. On allows to set a screensaver to be displayed when the phone is sleeping while docked and/or charging.

Auto-adjust screen tone

Checkmark to adjust the screen brightness automatically with an analysis of image color.

General

< PERSONAL >

Language & input

Use the Language & input settings to select the language for the text on your phone and to configure the on-screen keyboard, including words you added to its dictionary.

- **Language** – Sets the language to use on your phone.
- **Default** – Allows you to set the default keyboard to use when entering text.
- **LG Keyboard** – Checkmark to select the LG Keyboard to enter text. Tap the Settings icon to change the following settings.
- **Google voice typing** – Checkmark to select Google voice typing to enter text. Tap the Settings icon to change the Google voice settings.
- **Voice Search** – Sets voice search options.
- **Text-to-speech output** – Sets the preferred speech engine and speech rate (very slow to very fast). Also plays a short demonstration of speech synthesis.
- **Pointer speed** – Allows you to set the pointer speed using a slide bar.

Location

Allows you to manage location services to determine your approximate location using GPS, Wi-Fi and mobile networks.

- **Mode** – Allows you to choose a location mode from **High accuracy (GPS and networks)**, **Battery saving (Networks only)** and **Device sensors only (GPS only)**.
- **Camera** – Checkmark to tag photos or videos with the location they were taken at.
- **Google Location Reporting** – Allows you to view and manage your Google location settings.

Accounts & sync

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deactivating the **Auto-sync data** option can save battery power and lower (but not eliminate) data usage.

Cloud

Allows you to add a cloud account to quickly and easily use a cloud service.

Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you installed on your phone.

NOTE: Requires additional plug-ins to become selectable.

One-handed operation

- **Dial keypad** – Checkmark to enable you to move the dial keypad to the right or left side of the device. Simply tap the arrow to move it to one side or the other.
- **LG keyboard** – Checkmark to enable you to move the keyboard to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

- **Lock screen** – Checkmark to enable you move the PIN Lock screen keypad to the right or left side of the phone. Simply tap the arrow to move it to one side or the other.
- **Help** – Displays information regarding one-handed operation.

Shortcut key

Get quick access to apps by pressing and holding the Volume button when the screen is off or locked. Tap the Shortcut key switch (Shortcut key switch image) in the upper-right corner of the screen to toggle it **On** or **Off**.

< PRIVACY >

Security

- **Content lock** – Select lock types to lock files in Gallery. Choose from **Password** or **Pattern**.
- **Encrypt phone** – Encrypt all data on the phone.
- **Encrypt SD card storage** – Allows you to encrypt the SD card and make data unavailable to other devices.
- **Password typing visible** – Checkmark to briefly show each character of passwords as you enter them so that you can see what you enter.
- **Phone administrators** – Allows you to view or deactivate phone administrators.
- **Unknown sources** – Allows you to install non-Play store applications.
- **Verify apps** – Disallow or warn before installation of apps that may cause harm.
- **Storage type** – Displays the storage type for credentials.
- **Trusted credentials** – Displays trusted CA certificates.
- **Install from storage** – Allows you to install encrypted certificates.
- **Clear credentials** – Deletes all secure certificates and related credentials and erases the secure storage's own password.
- **Trust agents** – View or deactivate Trust agents.

- **Screen pin** – This feature allows you to lock your device so that the current user can only access the pinned app. This is useful for users with children.

< SMART FUNCTIONS >

Gestures

- **Answer an incoming call** – Checkmark to enable you to bring the phone to your ear to automatically answer the incoming call.
- **Fade out ringtone** – Checkmark to allow you to pick up the phone from the flat surface to fade out the incoming call ringtone.
- **Silence incoming calls** – Checkmark to allow you to flip the phone to silence incoming calls.
- **Snooze or stop alarm** – Checkmark to allow you to simply flip the device to snooze or stop the alarm.
- **Pause video** – Checkmark to allow you to simply flip the device to pause the currently playing video.
- **Help** – Displays a Help guide on how to use the Gestures features of your device.
- **Motion sensor calibration** – Allows you to improve the accuracy of the tilt and speed of the sensor.

QuickCircle case

This menu allows you to select apps to be used directly on the cover in small view using QuickCircle.

Dual window

Allows you to configure the Dual Window feature.

- **Split view** – Checkmark to allow you to tap a link on the full screen or attachments from emails to open Dual window.
- **Help** – Display tips for using Dual window.

< PHONE MANAGEMENT >

Date & time

Use the **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

Storage

- **INTERNAL STORAGE** – View internal storage usage.

Battery

- **BATTERY INFORMATION** – The Battery charge information is displayed on a battery graphic along with the percentage of the remaining charge and its status. Touch the Battery charge icon to display the Battery use screen to see battery level and use details. The phone also displays which components and applications are using the most battery power. Tap one of the items to see more detailed information.
- **Battery usage** – Displays battery usage.
- **Battery percentage on status bar** – Checkmark to display the battery level percentage on the Status Bar next to the Battery icon.
- **BATTERY SAVER** – Tap the Battery Saver switch to toggle it On or Off. Tap Battery Saver to access the following settings:
 - **TURN BATTERY SAVER ON** – Sets the battery charge percent level that automatically turns on Battery Saver. Choose from Immediately, 5% battery and 15% battery.
 - **Help** – Displays help information for the Battery saver feature.

Smart cleaning

Allows you to manage unused apps and data.

Apps

View and manage your applications.

Default message app

This menu allows you to set your default messaging app as desired.

Backup & reset

This menu allows you to back-up your data, automatically restore data, and erase all the data on your phone.

- **Backup my data** – Allows you to back up your settings and application data to the Google server.
- **Backup account** – Allows you to back up your account.
- **Automatic restore** – Allows you to restore your settings and application data when the applications are reinstalled onto your device.
- **LG Backup service** – Backs up all information on the device and restores it in the event of data loss or replacement.
- **Factory data reset** – Reset your settings to the factory default values and delete all your data, including user data such as pictures and videos.

Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

About phone

Display information about the network, phone identity, battery, hardware, software and legal.

PC software (LG PC Suite)

For Windows OS

LG PC Suite helps you manage media contents and applications in your phone by allowing you to connect to your phone with your PC.

With the LG PC Suite software, you can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the software in your device.
- Play multimedia contents of your PC from other device

NOTE: Some functions may not be available, depending on the model.

NOTE: You can use the Help menu from the application to find out how to use the LG PC Suite software.

Installing the LG PC Suite Software

To download the LG PC Suite software, please do the following:

- 1 Go to www.lg.com.
- 2 Go to **SUPPORT > MOBILE SUPPORT > PC Sync**.
- 3 Select the model information and click **GO**.
- 4 Scroll down, select the **PC SYNC** tab > **Windows > DOWNLOAD** to download LG PC Suite.

System Requirements for LG PC Suite software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG United drivers, Windows Media Player 10 or later.

NOTE: LG United USB Driver

The LG United USB driver is required to connect an LG device and PC. It is installed automatically when you install the LG PC Suite software application.

For Mac OS

With the LG PC Suite software, you can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.

NOTE: Some functions may not be available, depending on the model.

NOTE: You can use the Help menu from the application to find out how to use the LG PC Suite software.

Installing the LG PC Suite Software

To download the LG PC Suite software, please do the following:

- 1 Go to www.lg.com.
- 2 Go to **SUPPORT > MOBILE SUPPORT > PC Sync**.
- 3 Select the model information and click **GO**.
- 4 Scroll down, select the **PC SYNC** tab > **Mac OS > DOWNLOAD** to download LG PC Suite.

System Requirements for LG PC Suite software

- OS: Mac OS X (10.6.8) or higher
- Memory : 2GB RAM or higher
- Graphics card: 1024 x 768 screen resolution or higher and 32-bit color
- Hard disc: Storage of 500 MB or higher (Additional space may be required for data)
- Required software: LG United Mobile driver

NOTE: LG Integrated USB Driver

The LG integrated USB driver is required to connect an LG device and PC. It is installed automatically when you install the LG PC Suite software application.

Phone software update

Phone software update

Software updates from the Internet for your LG phone

For more information about software updates, please visit <http://www.lg.com/common/index.jsp>.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service center. This feature will only be available if and when LG makes a newer firmware version available for your device. Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all phone models.

Software updates via Over-the-Air (OTA) for your LG phone

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your mobile phone: **Settings > General tab > About phone > Update Center > Software Update > Check now for update.**

NOTE: Your personal data saved to the internal phone memory—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—may be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature depends on your network service provider, region and country.

About this user guide

- Before using your device, please carefully read this guide. This ensures that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product or from software supplied by service providers or carriers. This content is subject to change without prior notice. For the latest version of this guide, please visit the LG website at www.lg.com.
- Your phone's applications and their functions may vary by country, region or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings or modified operating system software. Any attempt to customize your operating system may cause the device or its applications to work incorrectly.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may apply for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.

DivX HD

This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video. To play purchased DivX movies, first register your device at vod.divx.com. Find your registration code in the DivX VOD section of your device setup menu.

DivX Certified® to play DivX® video up to HD 720p, including premium content.
DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.

Dolby Digital Plus DOLBY. DIGITAL PLUS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.

Accessories

These accessories are available for use with the your phone. **(Items described below may be optional.)**

- Travel adaptor
- Quick Start Guide
- Stereo headset
- USB cable

NOTE:

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- The items supplied with the device and any available accessories may vary depending on the region or service provider.

Troubleshooting


This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.



Message	Possible causes	Possible corrective measures
SIM or USIM card error	There is no SIM or USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6~12 months old. If so, change your SIM card at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, must confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match.	


Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialing error	New network not authorized.
	New SIM or USIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed.	The Fixed dialing number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/send text messages & photos	Memory full	Delete some messages from your phone.
Files do not open	Unsupported file format	Check the supported file formats.



Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update through the website.

Category	Question	Answer
Bluetooth Devices	What are the functions available via Bluetooth?	You can connect a Bluetooth audio device, such as a Stereo/Mono headset or car kit.
Contacts Backup	How can I back up Contacts?	Contacts data can be synchronized between your phone and Gmail™.
Synchronization	Is it possible to set up one-way sync with Gmail?	Only two-way synchronization is available.
Synchronization	Is it possible to synchronize all email folders?	The Inbox is automatically synchronized. You can view other folders by tapping the  icon and selecting Folders to choose a folder.
Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you have logged into Gmail, there is no need to log into Gmail again.
Google Account	Is it possible to filter emails?	No, the phone does not support email filtering.
Email	What happens when I execute another application while writing an email?	Your email is automatically saved as a draft.
Ringtone	Is there a file size limit for using MP3 files as ringtones?	There is no file size limit.


Category	Question	Answer
Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I change this?	You will only be able to see the times for messages received the same day.
Navigation	Is it possible to install another navigation application on my phone?	Any application that is available at Play Store™ and is compatible with the hardware can be installed and used.
Synchronization	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (company email server) contacts can be synchronized.
Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact using the Wait & Pause functions saved into the number, you cannot use those features. You must save each number again.</p> <p>How to save with Wait and Pause:</p> <ol style="list-style-type: none"> 1. From the Home screen, tap . 2. Dial the number, then tap . 3. Tap Add 2-sec pause or Add wait.
Security	What are the phone's security functions?	You can set the phone to require an Unlock Pattern to be entered before the phone can be accessed or used.

Category	Question	Answer
Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold . 2. Tap System settings > Display tab > Lock screen. 3. Tap Select screen lock > Pattern. The first time you do this, a short tutorial about creating an Unlock Pattern appears. 4. Set up your pattern by drawing it then drawing it a second time for confirmation. <p>Precautions to take when using the pattern lock.</p> <p>It is very important to remember the unlock pattern you set. You can no longer access your phone if you use an incorrect pattern five times. You have five chances to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds. (Or, if you preset the backup PIN, you can use the backup PIN code to unlock the pattern.)</p>

Category	Question	Answer
Unlock Pattern	What should I do if I forget the unlock pattern and I did not create my Google account on the phone?	<p>If you forgot your pattern: If you logged into your Google account on the phone but failed to enter the correct pattern 5 times, tap the Forgot pattern button. You are then required to log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you have forgotten it, you must perform a hard reset.</p> <p>Caution: If you perform a factory reset, all user applications and user data are deleted. Please remember to back up any important data before performing a factory reset.</p>
Memory	Will I know when my memory is full?	Yes, you will receive a notification.
Language Support	Is it possible to change my phone's language?	<p>The phone has multilingual capabilities. To change the language:</p> <ol style="list-style-type: none"> 1. From the Home screen, tap and hold <input type="checkbox"/> and tap System settings. 2. Tap General tab > Language & input > Language. 3. Tap the desired language.
VPN	How do I set up a VPN?	VPN access configuration is different for each company. To configure VPN access on your phone, you must obtain the details from your company's network administrator.

Category	Question	Answer
Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold . 2. Tap System settings > Display tab. 3. Tap Screen timeout. 4. Tap the preferred screen backlight timeout time.
Wi-Fi & mobile network	When the Wi-Fi and mobile networks are both available, which service does my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there is no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, view the mobile network or Wi-Fi icon at the top of your screen.</p>
Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the trash can icon appears at the top and center of the screen. Then, without lifting your finger, drag the icon to the trash can.
Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold . 2. Tap System settings > General tab > Apps tab (if necessary) > DOWNLOADED. 3. Tap the application, then tap Uninstall.

Category	Question	Answer
Charger	Is it possible to charge my phone using a USB cable without installing the necessary USB driver?	Yes, the phone is charged through the USB cable regardless of whether the necessary drivers are installed.
Alarm	Can I use music files for my alarm?	Yes. After saving a music file as a ringtone, you can use it as an alarm. <ol style="list-style-type: none"> 1. Touch and hold a song in a library list. In the menu that opens, tap Set as ringtone > Phone ringtone or Contact ringtone. 2. On the Alarm Clock Setting screen, select the song as a ringtone.
Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Alarm	If my ringer volume is set to Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.
Display	I tried to set the screen brightness to maximum but it still appears dark. How can I make the screen brighter?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold <input type="checkbox"/>. 2. Tap System settings > Display tab > Auto-adjust screen tone. 3. Tap the checkbox to cancel the function.
Hard Reset (Factory Reset)	How can I perform a factory reset if I cannot access the phone's Settings menu?	If your phone does not restore to its original condition, use a hard reset (factory reset) to initialize it.

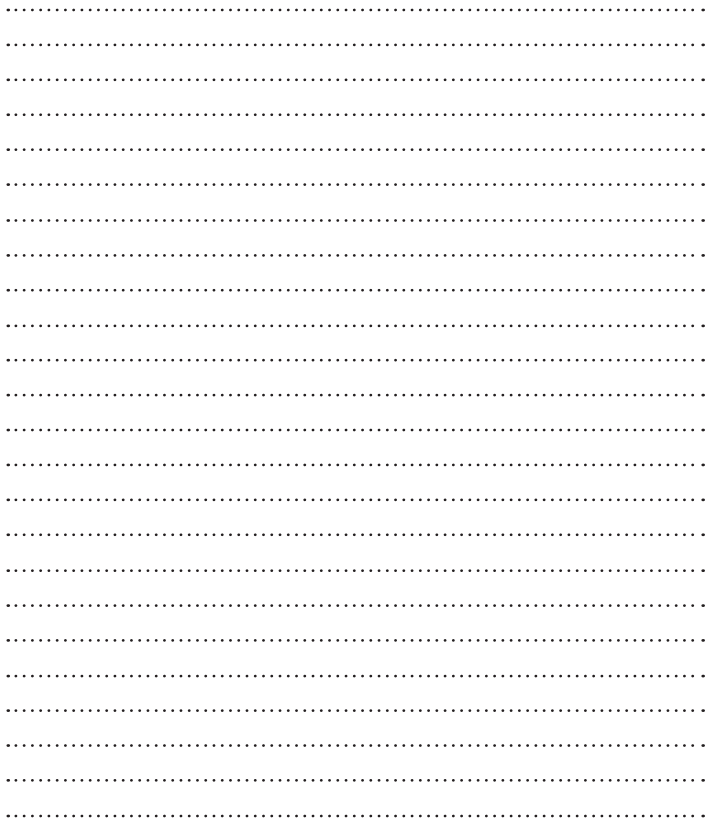



CE0168ⓘ