

עברית

ENGLISH



USER GUIDE

**LG G** *flex 2*  
LG-H955



# מדריך למשתמש

- חלק מהתוכן והאיורים עשויים להיות שונים ממה שנראה במכשיר שלך, בהתאם לאזור, לספק השירות, לגרסת התוכנה או לגרסת מערכת ההפעלה, והם נתונים לשינויים ללא הודעה מראש.
- השתמש תמיד באביזרים מקוריים של LG. הפריטים שסופקו עוצבו אך ורק עבור מכשיר זה, וייתכן שהם לא יהיו תואמים למכשירים אחרים.
- האביזרים הזמינים עשויים להשתנות בהתאם לאזור או למדינת מגוריך, או בהתאם לספק השירות.
- מכשיר זה אינו מתאים ללקויי ראייה מפני שלוח המקשים שלו נמצא במסך המגע.
- LG Copyright ©2015 LG Electronics, Inc. כל הזכויות שמורות. LG והסמל של LG הם סימנים מסחריים רשומים של LG Group ושל החברות הקשורות אליה. כל הסימנים המסחריים האחרים הם רכושם של בעליהם בהתאמה.
- Play ו- Hangouts™, YouTube™, Gmail™, Google Maps™, Google™, Store™ הם סימנים מסחריים של Google, Inc.

44	.....גדרת חשבון Google	6	.....הנחיות לשימוש בטוח ויעיל
45	.....התחברות לרשתות ולמכשירים	16	.....הודעה חשובה
45	..... Wi-Fi	20	.....היכרות עם הטלפון שלך
46	..... Bluetooth	20	.....פריסת הטלפון
47	..... Wi-Fi Direct	22	.....התקנת כרטיס SIM או USIM
48	..... SmartShare	23	.....טעינת הטלפון
48	.....העברת נתונים בין מחשב למכשיר	24	.....הכנסת כרטיס זיכרון
49	.....שלך	25	.....ביטול נעילת המסך
50	.....שיחות	27	.....המסך הראשי
50	.....ביצוע שיחה	27	.....עצות בנוגע למסך המגע
50	.....התקשרות לאנשי הקשר	28	.....מסך ראשי
50	.....מענה לשיחה ודחיית שיחה	29	.....התאמה אישית של המסך הראשי
51	.....ביצוע שיחה נוספת	29	.....חזרה ליישומים שהיו בשימוש
51	.....צפייה ביומני השיחות	30	.....לאחרונה
51	.....הגדרות שיחה	31	.....לוח ההתראות
52	.....אנשי קשר	34	.....מקלדת וירטואלית
52	.....חיפוש איש קשר	36	.....תכונות מיוחדות
52	.....הוספת איש קשר חדש	36	.....תצלום בתנועת יד
52	.....אנשי קשר מועדפים	36	.....תצוגת מבט מהיר
53	.....יצירת קבוצה	37	.....תצוגת חיישן תנועה
54	.....הודעות	38	.....הפעל מסך
54	.....שליחת הודעה	38	..... Knock Code
55	.....תצוגת שיחה	39	.....חלון כפול
55	.....שינוי הגדרות הודעות	40	.....QuickMemo+
		41	.....QSlide
		42	.....QuickRemote

<b>80</b> .....	<b>הגדרות</b>	<b>56</b> .....	<b>דוא"ל</b>
80.....	רשתות	56.....	ניהול חשבונות דוא"ל
83.....	צליל	57.....	עבודה עם תיקיות החשבון
85.....	תצוגה	57.....	חיבור ושליחה של דוא"ל
88.....	כללי	<b>58</b> .....	<b>מצלמה ווידאו</b>
<b>95 ....</b>	<b>תוכנת מחשב (LG PC Suite)</b>		אפשרויות מצלמה בתצוגה
95.....	עבור Windows OS	58.....	המקדימה
96.....	עבור Mac OS	59.....	שימוש בהגדרות המתקדמות
<b>98</b> .....	<b>עדכון תוכנת הטלפון</b>	60.....	צילום תמונה
98.....	עדכון תוכנת הטלפון	60.....	לאחר שצילמת תמונה
<b>100</b> .....	<b>אודות מדריך למשתמש זה</b>	61.....	הקלטת וידאו
100.....	אודות מדריך למשתמש זה	61.....	לאחר הקלטת וידאו
101.....	סימנים מסחריים	65.....	גלריה
101.....	DivX HD	<b>68</b> .....	<b>מולטימדיה</b>
101.....	Dolby Digital Plus	68.....	נגן מוסיקה
<b>102</b> .....	<b>אביזרים</b>	<b>71</b> .....	<b>כלי שירות</b>
<b>103</b> .....	<b>פתרון בעיות</b>	71.....	שעון
<b>107</b> .....	<b>שאלות נפוצות</b>	72.....	מחשבון
		73.....	לוח שנה
		73.....	הקלטה קולית
		74.....	משימות
		74.....	חיפוש קולי
		75.....	הורדות
		75.....	רדיו FM
		75.....	LG SmartWorld
		<b>77</b> .....	<b>דפדפן אינטרנט</b>
		77.....	אינטרנט
		79.....	Chrome

הקפד לקרוא הנחיות פשוטות אלה. אי עמידה בהנחיות אלו עלולה להיות מסוכנת או בלתי חוקית.

למקרה של תקלה, המכשיר שלך מכיל כלי תוכנה שיאסוף יומן תקלות. כלי זה אוסף רק נתונים ספציפיים לתקלה, כגון עוצמת אות, מיקום מזהה התא בעת ניתוק פתאומי של השיחה ויישומים שנטענו. היומן משמש רק לסיוע בזיהוי הגורם לתקלה. יומנים אלה מוצפנים, ורק מרכז תיקונים מוסמך של LG יוכל לגשת אליהם במקרה שתצטרך למסור את המכשיר לתיקון.

### חשיפה לאנרגיית תדר רדיו

מידע על חשיפה לגלי רדיו ושיעור ספיגה סגולית (SAR).

טלפון נייד זה מדגם LG-H955 תוכנן לעמוד בדרישות הבטיחות הרלוונטיות לחשיפה לגלי רדיו. דרישות אלו מבוססות על קווים מנחים מדעיים, ואלה כוללים שולי בטיחות המיועדים להבטיח את בטיחותם של כל בני האדם, בלא קשר לגילם או למצב בריאותם.

- הנחיות החשיפה לגלי רדיו משתמשות ביחידת מידה הקרויה 'שיעור ספיגה סגולית' (SAR). בדיקות SAR מבוצעות באמצעות שיטות מתוקננות, כאשר הטלפון משדר ברמת העוצמה המרבית המאושרת עבורו בכל תחומי התדרים שבשימוש.
- אף כי עשויים להיות הבדלים בין רמות ה-SAR של דגמי טלפונים שונים של LG, כל הטלפונים מתוכננים לעמוד בהנחיות המתאימות של חשיפה לגלי רדיו.
- מגבלת ה-SAR המומלצת על-ידי הוועדה הבין-לאומית להגנה מפני קרינה בלתי מייננת (ICNIRP) היא ממוצע של 2 ואט/ק"ג על כל 10 גרם של רקמה.

- ערך ה-SAR הגבוה ביותר עבור דגם טלפון זה שנמדד לשימוש באוזן הוא 0.471 ואת/ק"ג (10 גר'), וכאשר הוא נישא על הגוף, ערך זה עומד על 0.418 ואת/ק"ג (10 גר').
- מכשיר זה עומד בהנחיות החשיפה ל-RF כשמשתמשים בו בתנוחת השימוש הרגילה ליד האוזן או כשהוא ממוקם לפחות 1.5 ס"מ מהגוף. כאשר נעשה שימוש בנרתיק נשיאה או בתפס או מנשא לחגורה, אסור שתהיה בהם מתכת כלשהי, והמרחק בין המכשיר לגוף צריך להיות לפחות 1.5 ס"מ. כדי לשדר קובצי נתונים או הודעות, מכשיר זה מחייב חיבור איכותי לרשת. במקרים מסוימים עלול שידור קבצי נתונים או הודעות להיות מושהה עד שחיבור כזה יהיה זמין. הקפד על שמירת הוראות המרחק המינימלי המוזכרות לעיל עד לסיום השידור.

## טיפול במוצר ותחזוקה

### אזהרה

#### הדעה לגבי החלפת סוללה

- למען בטיחותך, אל תסיר את הסוללה המשולבת במוצר. אם עליך להחליף סוללה, קח אותה לנקודת השירות הקרובה של LG Electronics או למפיץ לצורך קבלת עזרה.
- סוללת ליתיום-יון הינה רכיב מסוכן, העלול לגרום לפציעה.
- החלפת הסוללה על-ידי אדם שאינו מוסמך לכך עלולה לגרום נזק להתקן.

### אזהרה

- השתמשו רק בסוללות, במטענים ובאביזרים המאושרים לשימוש עבור דגם ספציפי זה של טלפון. השימוש בסוגים אחרים עשוי לבטל את האישור או האחריות החלים על הטלפון ועלול להיות מסוכן.

- הגמישות של מוצר זה מוגבלת לעמידה בשימוש רגיל. ניתן לפתוח את הטלפון עד 180 מעלות לפרק זמן מוגבל אך אין לקפל אותו כלפי פנים. נזקים שנגרמו עקב שימוש לקוי, כולל אך לא רק קיפול מכוון או הפעלת כוח באופן רציף על המוצר, עלולים לגרום נזק לצמיתות לצג ו/או לפונקציות וחלקים אחרים של הטלפון.
- אין לפרק יחידה זו. כאשר נדרש תיקון, פנה לטכנאי שירות מוסמך.
- תיקונים במסגרת האחריות, לפי שיקול דעתה של LG, עשויים לכלול חלקים או לוחות חלופיים, חדשים או מחדשים, ובלבד שהם מצוידים בפונקציונליות זהה לזו של החלקים המוחלפים.
- אין לקרב את המכשיר למכשירים חשמליים כגון טלוויזיות, מכשירי רדיו ומחשבים אישיים.
- יש לשמור את היחידה הרחק ממקורות חום כדוגמת רדיאטורים או תנורי בישול.
- אין להפיל את היחידה.
- אין לאפשר זעזוע מכני או חבטה.
- יש לכבות את הטלפון בכל מקום שבו נדרש הדבר על-ידי תקנות מיוחדות. לדוגמה, אין להשתמש בטלפון בבתי חולים, שכן הפעלתו עלולה להשפיע על פעולת מכשור רפואי רגיש.
- אין לאחוז בטלפון בידיים רטובות בזמן הטענתו. אחיזה במצב כזה עלולה לגרום להתחשמלות ולהסב נזק כבד לטלפון.
- אין לטעון את הטלפון ליד חומר דליק, מכיוון שהמכשיר עלול להתחמם ולעלות באש.
- יש להשתמש במטלית יבשה לניקוי חלקו החיצוני של המכשיר (אין להשתמש בחומרים ממסים כגון בנזן, מדלל או אלכוהול).
- אין לטעון את הטלפון כאשר הוא נמצא על-גבי מצעים או ריפוד.
- יש לטעון את הטלפון באזור מאוורר היטב.
- אין לחשוף יחידה זו לכמות מוגזמת של עשן או אבק.

- אין להחזיק את הטלפון בסמוך לכרטיסי אשראי או כרטיסי נסיעה; הנתונים בפס המגנטי עלולים להיפגם.
- אין להקיש על המסך באמצעות חפצים חדים, שכן הדבר עלול לגרום נזק לטלפון.
- אין לחשוף את הטלפון לנוזלים או ללחות.
- יש לנקוט זהירות בשימוש באביזרים, כמו אוזניות. אין לגעת באנטנה שלא לצורך.
- אם זכוכית המכשיר שבורה או סדוקה, אל תיגע בה או תנסה להסיר אותה ואל תשתמש במכשיר. האחריות אינה מכסה נזקים שנגרמו לתצוגת הזכוכית כתוצאה מפגיעה ושימוש לרעה.
- הטלפון שלך הוא מכשיר אלקטרוני המייצר חום במהלך הפעלה רגילה. בהיעדר אוורור הולם, מגע ישיר וממושך מאוד של העור עלול לגרום לאי-נוחות או לכוויות קלות. לפיכך, נהג בזהירות בעת טיפול בטלפון שלך ובמטען (מטען מהיר) במהלך הפעולה או מיד לאחריה.
- אם הטלפון נרטב, נתק אותו מיד והנח לו להתייבש לגמרי. אל תנסה להאיץ את תהליך הייבוש בעזרת מקור חום חיצוני, כמו תנור, מיקרוגל או מייבש שיער.
- הנזלים שחדרו לטלפון ישנו את צבע תווית המוצר שבתוך המכשיר. כתב האחריות אינו מכסדה נזק למכשיר כתוצאה מחשיפה לנוזלים.

## תפעול יעיל של הטלפון

### מכשירים אלקטרוניים

- כל הטלפונים הניידים עלולים לספוג הפרעות שישפיעו לרעה על ביצועיהם.
- אין להשתמש בטלפון הנייד בסמוך לציוד רפואי ללא קבלת רשות. יש להימנע מהנחת הטלפון מעל לקוצב לב, למשל בכיס החזה.

- טלפונים ניידים עלולים להפריע לעזרי שמיעה מסוימים.
- הפרעה משנית עלולה להשפיע על מכשירי טלוויזיה, מכשירי רדיו, מחשבים וכולי.
- השתמש בטלפון שלך בטמפרטורות שבין 0°C ו-40°C, אם ניתן. חשיפת הטלפון לטמפרטורות נמוכות או גבוהות באופן קיצוני עלולה לגרום למזק, לתקלות או אפילו לפיצוץ.

## בטיחות בדרכים

- בדוק את החוקים והתקנות הנוגעים לשימוש בטלפונים ניידים באזורים שבהם אתה נוהג.
- אין להחזיק את הטלפון ביד בזמן נהיגה.
- יש להפנות את מלוא תשומת הלב לנהיגה.
- רד לשול הדרך וחנה לפני ביצוע שיחה או מענה לשיחה, בהתאם לתנאי הדרך.
- אנרגיית תדר רדיו עשויה להשפיע על מערכות אלקטרוניות מסוימות בכלי רכב, כדוגמת מערכות סטריאו וציוד בטיחות.
- אם המכונת מצוידת בכרית אוויר מתנפחת, אין לחסום אותה על-ידי התקנה של ציוד אלחוטי נישא. הדבר עלול לגרום לכשל של הכרית או לפציעה חמורה עקב ביצועים לא נאותים שלה.
- אם אתה מאזין למוסיקה בעת תנועה, ודא שהעוצמה היא ברמה סבירה, כך שתמשיך להיות מודע לסביבתך. הדבר חשוב במיוחד בקרבת כבישים.

## מנעו נזק לשמיעתכם

כדי למנוע נזק אפשרי לשמיעה, אל תאזין בעוצמות קול גבוהות לאורך זמן.



חשיפה לעוצמות קול גבוהות במשך פרקי זמן ארוכים עלולה להזיק לשמיעה. לכן אנו ממליצים שלא תדליק או תכבה את המכשיר סמוך לאוזןך. מומלץ גם להגדיר את עוצמת הקול של המוסיקה והשיחה לרמה סבירה.

• כאשר אתה משתמש באוזניות, הנמך את עוצמת הקול אם אינך מצליח לשמוע את האנשים שבסביבתך מדברים, או אם האדם שלצדך יכול לשמוע את מה שאתה שומע באוזניות.

**הערה:** עוצמת קול מופרזת מאוזניות פנימיות ואוזניות חיצוניות עלולה לפגוע בשמיעה.

## חלקי זכוכית

חלקים מסוימים של ההתקן הנייד עשויים מזכוכית. זכוכית זו עלולה להישבר אם המכשיר ייפול על משטח קשה או יקבל מכה חזקה. אם הזכוכית נשברת, אל תנסה לגעת בה או להסיר אותה. יש להפסיק להשתמש בהתקן הנייד עד להחלפת הזכוכית על-ידי ספק שירות מורשה.

## סביבה שבה מבוצעות עבודות עם חומרי נפץ

אין להשתמש בטלפון באזורים שבהם מתבצעות פעולות פיצוץ. שים לב להגבלות ועמוד בכל התקנות או הכללים.

## סביבה שבה קיימת סבירות לפיצוץ

- אין להשתמש בטלפון באזורי תדלוק.
- אין להשתמש בו בסמוך לדלק או לכימיקלים.
- אין להוביל או לאחסן גז דליק, נוזלים דליקים או חומרי נפץ בתא הרכב המכיל את הטלפון הנייד או את אביזריו.

## כלי טיס

- התקנים אלחוטיים עלולים לגרום להפרעה במטוס.
- יש לכבות את הטלפון הנייד לפני העלייה למטוס.
- אין להשתמש בו על הקרקע ללא קבלת רשות מאנשי הצוות.

## ילדים

יש לשמור על הטלפון במקום בטוח, מחוץ להישג ידם של ילדים קטנים. המכשיר כולל חלקים זעירים העלולים להוות סכנת חנק אם ינותקו מהטלפון.

## שיחות חירום

רק רשתות סלולריות מסוימות מאפשרות לבצע שיחות חירום. לפיכך, בשום מקרה אין לסמוך רק על הטלפון לביצוע שיחות חירום. בדקו את הנושא עם חברת הסלולר המקומית.

## מידע לגבי הסוללה והטיפול בה

- אין צורך לפרוק את הסוללה במלואה לפני טעינתה מחדש. בניגוד למערכות סוללה אחרות, אין השפעת זיכרון שעלולה לפגום בביצועי הסוללה.

- יש להשתמש אך ורק בסוללות ובמטענים של LG. מטעני LG מיועדים להארכת חיי הסוללה.
- אין לפרק או לקצר את הסוללה.
- יש להחליף את הסוללה כאשר היא אינה מפיקה עוד רמת ביצועים סבירה. ניתן לטעון מחדש את מארז הסוללה מאות פעמים לפני שיהיה צורך להחליפו.
- כדי להשיג שמישות סוללה מרבית, יש לטעון אותה מחדש אם לא הייתה בשימוש במשך זמן רב.
- אין לחשוף את מטען הסוללה לאור שמש ישיר או להשתמש בו בתנאי לחות גבוהה, כמו חדר אמבטיה.
- השלך סוללות משומשות על פי הוראות היצרן. יש למחזר, אם אפשר. אין להשליך אותן כאשפה ביתית.
- אם עליך להחליף סוללה, קח אותה למרכז השירות המורשה הקרוב של LG Electronics או לספק לצורך קבלת סיוע.
- יש לנתק תמיד את המטען מהשקע לאחר שהטלפון נטען במלואו כדי למנוע בזבז מיותר של חשמל מצד המטען.
- אורך חיי הסוללה בפועל תלוי בתצורת הרשת, בהגדרות המוצר, באופי השימוש, בתנאי הסוללה ובתנאים הסביבתיים.
- הקפד שלא ייווצר מגע בין הסוללה לבין פריטים חדים כגון שיניים או ציפורניים של בעל חיים. מגע כזה עלול לגרום לשריפה.
- למען בטיחותך, אל תסיר את הסוללה המשולבת במוצר.
- אין להשאיר את הטלפון במקומות חמים או קרים, שכן הדבר עלול לפגום בביצועיו.
- אל תחליף את הסוללה בכוחות עצמך. הסוללה עלולה להינזק, מה שעלול להוביל להתחממות יתר ופציעה. החלפת הסוללה חייבת להיעשות על-ידי ספק השירות המורשה. את הסוללה יש למחזר או להשליך בנפרד מהאשפה הביתית.


## הצהרת בטיחות לייזר

### זהירות!

מוצר זה עושה שימוש במערכת לייזר. כדי להבטיח שימוש נכון במוצר זה, קרא היטב את מדריך ההפעלה הזה ושמור אותו לעיון עתידי. אם תידרש תחזוקה ליחידה, פנה למרכז שירות מורשה.

שימוש בפקדים, פעולות כוונון או ביצוע הליכים אחרים מאלה שיצינו להלן עלולים להביא לחשיפה מסוכנת לקרינה.

כדי למנוע חשיפה ישירה לקרן הלייזר, אל תנסה לפתוח את המארז או ליצור מגע ישיר עם הלייזר.

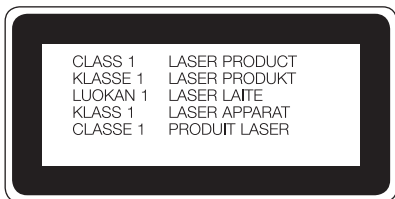

### חותפ דוק תנכות לע העדוה יטרפ

באתר בקרו אנא, זה במסמך הכלולים אחרים פתוח קוד ורישיונות תחת המקור קוד את להשיג מנת על MPL, LGPL, GPL

<http://opensource.lge.com>.

להורדה זמינים, זה במסמך שמופיעים יוצרים זכויות לגבי והערות אחריות ויתור כתיב, הרישוי מונחי כל, המקור לקוד בנוסף.

דמי, האחסון אמצעי מחיר, לדוגמה, זו פעולה של הביצוע עלות במחיר תקליטור חברת שנים (3) שלוש למשך תקפה LG Electronics על-גבי מקור קוד תספק לכתובת אלקטרוני בדואר בקשה תשלחו [opensource@lge.com](mailto:opensource@lge.com). הצעה אם, וטיפול משלוח המוצר של הרכישה ממועד.

### כיצד לעדכן את המכשיר

גש אל מהדורות קושחה עדכניות, פונקציות תוכנה חדשות ושיפורים.

**• בחר את עדכון התוכנה בתפריט ההגדרות של המכשיר.**

**• עדכן את המכשיר על-ידי חיבורו למחשב.** למידע נוסף אודות השימוש

בפונקציה זו, בקר בכתובת <http://www.lg.com/common/index.jsp> בחר את המדינה והשפה שלך.

### הצהרת תאימות

בזאת, **LG Electronics** מצהירה שהמוצר **LG-H955** תואם לדרישות היסודיות ולתנאים הרלוונטיים האחרים של הנחיה **1999/5/EC**. ניתן למצוא עותק של הצהרת התאימות בכתובת <http://www.lg.com/global/declaration>


































## אנא קרא מידע זה לפני תחילת השימוש בטלפון!

לפני שתיקח את הטלפון לנקודת שירות או שתתקשר לנציג שירות, אנא בדוק אם חלק מהבעיות שבהן נתקלת מתוארות בסעיף זה.

### 1. זיכרון הטלפון

כאשר השטח הפנוי בזיכרון הטלפון קטן מ-10MB, הטלפון לא יכול לקבל הודעות חדשות. עליך לבדוק את זיכרון הטלפון ולמחוק חלק מהנתונים, כגון יישומים או הודעות, כדי לפנות עוד זיכרון.

כדי להסיר התקנה של יישום:

- 1 הקש על  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <  <

- הפחת את בהירות המסך וקבע פרק זמן קצר יותר לכיבוי אוטומטי של המסך.
- בטל את הסנכרון האוטומטי של Gmail, לוח השנה, אנשי הקשר ויישומים אחרים.

#### **הערה:**

- חלק מהיישומים שתוריד עשויים לצרוך כוח סוללה.
- בזמן השימוש ביישומים שהורדו, בדוק את רמת הטעינה של הסוללה.

**הערה:** אם אתה מקיש בטעות על **מקש הפעלה/נעילה** בזמן שהמכשיר נמצא בכיס שלך, המסך יכבה באופן אוטומטי כדי לחסוך בכוח הסוללה.

## **3. לפני התקנת יישום או מערכת הפעלה בקוד פתוח.**

#### **אזהרה**

אם אתה מתקין או משתמש במערכת הפעלה שונה מזו שסיפק היצרן, הדבר עלול לגרום לתפקוד לקוי של הטלפון. בנוסף, האחריות על הטלפון תתבטל.

#### **אזהרה**

כדי להגן על הטלפון ועל הנתונים האישיים שלך, הורד יישומים ממקורות מהימנים בלבד, כגון Play Store™. התקנה שגויה של יישומים בטלפון עלולה לגרום לטלפון לפעול בצורה לא תקינה או להתרחשות שגיאה חמורה. יש להסיר מהטלפון את היישומים הללו ואת כל ההגדרות והנתונים הקשורים אליהם.

## 4. שימוש באיפוס קשיח (איפוס להגדרות היצרן)

אם יש צורך לשחזר את הטלפון למצבו המקורי, השתמש באיפוס קשיח (איפוס להגדרות היצרן).

1 כבה את המכשיר.

2 לחץ לחיצה ארוכה על **לחצן הפעלה/נעילה** + **לחצן הנמכת עוצמת הקול** בגב הטלפון.

3 שחרר את **לחצן הפעלה/נעילה** רק כאשר מוצג סמל האתחול, ולאחר מכן לחץ והחזק מיד את **לחצן הפעלה/נעילה** שוב.

4 שחרר את כל הלחצנים כשמוצג המסך 'איפוס קשיח להגדרות היצרן'.

5 לחץ על **מקשי עוצמת הקול** כדי לסמן את האפשרות **כן** ולאחר מכן לחץ על **לחצן הפעלה/נעילה** כדי להמשיך.

6 לחץ על **לחצני עוצמת הקול** כדי לסמן את האפשרות **כן** פעם נוספת, ולאחר מכן לחץ על **לחצן הפעלה/נעילה** כדי לאשר.

### ⚠ אזהרה

אם תבצע איפוס קשיח, כל יישומי המשתמש, נתוני המשתמש ורישיונות DRM יימחקו. זכור לגבות את כל הנתונים החשובים לפני ביצוע איפוס קשיח.

## 5. פתיחת יישומים ומעבר ביניהם

קל לבצע ריבוי-משימות במערכת Android; ניתן להפעיל יותר מיישום אחד בו-זמנית. אין צורך לצאת מיישום לפני פתיחת יישום אחר. ניתן להשתמש בכמה יישומים פתוחים ולעבור ביניהם. מערכת Android מנהלת את היישומים, ועוצרת ומפעילה אותם בהתאם לצורך כדי להבטיח שיישומים לא פעילים לא יצרכו משאבים שלא לצורך.

1 הקש על . יוצגו תצוגות מקדימות של יישומים שהיו בשימוש לאחרונה.


- 2 הקש על היישום שאליו ברצונך לגשת. פעולה זו אינה מפסיקה את פעולתו של היישום הקודם ברקע. הקפד להקיש על < כדי לצאת מחלון לאחר השימוש בו.
- כדי לסגור יישום מרשימת היישומים שהיו בשימוש לאחרונה, החלק ימינה או שמאלה את התצוגה המקדימה של היישום. כדי לנקות את כל היישומים, הקש על **נקה הכל**.

## 6. אם המסך קופא

**אם המסך קופא או שהטלפון אינו מגיב כשמנסים להפעיל אותו:**  
לחץ לחיצה ארוכה על **לחצן הפעלה/נעילה** ועל **לחצן הנמכת עוצמה** למשך כ-10 שניות כדי לאפס את הטלפון. כדי לכבות את הטלפון, לחץ לחיצה ארוכה על **לחצן הפעלה/נעילה** ועל **לחצן הנמכת עוצמה** למשך כ-20 שניות. אם הוא עדיין לא פועל, פנה למרכז השירות.

# היכרות עם הטלפון שלך

## פריסת הטלפון

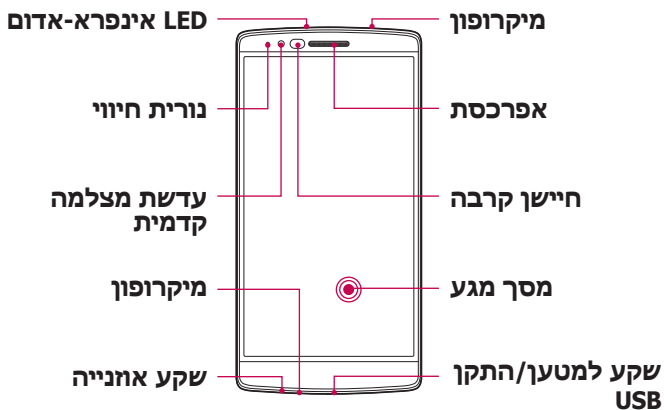


### הערה: חיישן קרבה

בעת קבלת שיחות וביצוע שיחות, חיישן הקרבה מכבה אוטומטית את התאורה האחורית ונועל את המסך כאשר הוא חש שהטלפון קרוב לאוזן. תכונה זו מאריכה את חיי הסוללה ומונעת את הפעלת מסך המגע שלא בכונה במהלך השיחה.

### אזהרה ⚠

הנחת עצם כבד על הטלפון או ישיבה עליו עלולות לגרום לפגיעה בפונקציות של הצג ומסך המגע. אין לכסות את חיישן הקרבה במגיני מסך או בכל סוג אחר של ציפוי מגן. הדבר עלול לגרום לתקלה בחיישן.

מיקוד אוטומטי  
באמצעות זיהוי  
לייזר  
לחצן הפעלה/  
נעילה  
נקודת מגע של  
NFC  
רמקול

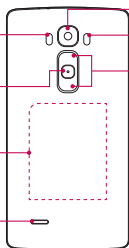

עדשת מצלמה  
אחורית  
מבזק  
לחצני עוצמת קול

<ul style="list-style-type: none"> <li>הפעל/כבה את הטלפון על-ידי לחיצה ממושכת על לחצן זה</li> <li>לחץ לחיצה קצרה כדי לנעול/לבטל נעילה של המסך</li> </ul>	<p><b>לחצן הפעלה/נעילה</b></p>
<p><b>(בזמן שהמסך כבוי)</b></p> <ul style="list-style-type: none"> <li>לחץ לחיצה ארוכה על הלחצן מעלה כדי להפעיל את QuickMemo+</li> <li>לחץ לחיצה ארוכה על הלחצן מטה כדי להפעיל את 'מצלמה'</li> </ul>	<p><b>לחצני עוצמת קול</b></p>

### ⚠ אזהרה

הקפד לא לפגוע בנקודת המגע של NFC בטלפון, מאחר שהיא מהווה חלק מאנטנת .NFC

**הערה:** המכסה האחורי של מוצר זה מחיל טכנולוגיית "ריפוי עצמי", המתקנת באופן עצמי שריטות קלות בתוך מספר דקות בלבד. שריטות קלות הן אלו הנגרמות עקב שימוש רגיל בטלפון. שריטות הנגרמות בשל משטח שורט, שימוש לרעה, כולל אך לא מוגבל לשריטות מכוונות, וזקיקים שנגרמו עקב נפילה או הפלה של המוצר, עלולות שלא להיעלם. התוצאות של "ריפוי עצמי" עשויות להשתנות, בהתאם למידת הנזק וכך תנאים נוספים. כל אחריות הנוגעת ל"ריפוי עצמי" אינה נכללת בזאת באופן מפורש.


**הערה: חיישן LDAF (Laser Detection AutoFocus Sensor - חיישן מיקוד אוטומטי באמצעות זיהוי לייזר)**

על-ידי זיהוי המרחק בעזרת לייזר, כשאתה מצלם עם עדשת המצלמה האחורית, חיישן LDAF מאפשר לך למקד את הטווח הרחוק או הקרוב יותר באופן מהיר יותר ומדויק.


## התקנת כרטיס SIM או USIM

כדי להתחיל להתמצא בטלפון החדש, יהיה עליך להגדירו.

**1** כדי להסיר את המכסה האחורי, החזק את הטלפון היטב ביד אחת. ביד השנייה משוך והסר את המכסה האחורי בעזרת ציפורן האגודל כמוצג באיור להלן.

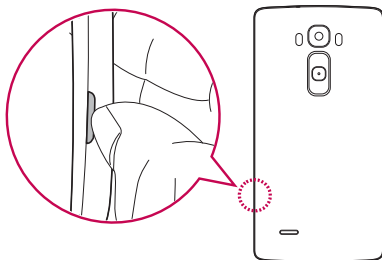


**2** הכנס את כרטיס ה-SIM לתוך החרץ התחתון של כרטיס ה-SIM כמוצג באיור. ודא שאזור מגעי הזהב של הכרטיס פונה מטה.

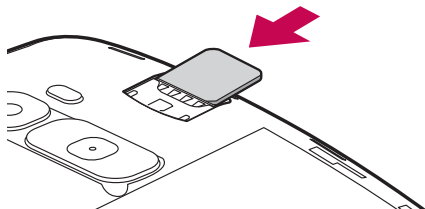

**הערה:** כרטיסי microSIM בלבד פועלים עם המכשיר.

3 כדי להחזיר את המכסה למכשיר, ישר את המכסה האחורי מעל תא הסוללה (1) ולחץ אותו מטה עד שייכנס למקומו בנקישה (2).

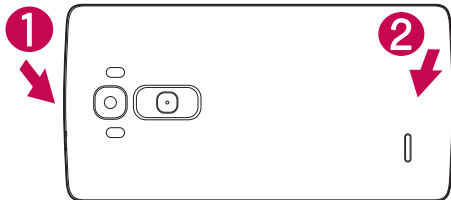


## טעינת הטלפון

טען את הסוללה לפני השימוש הראשון. השתמש במטען כדי לטעון את הסוללה.

### אזהרה

השתמש אך ורק במטענים, סוללות וכבלים המאושרים על-ידי LG. אם אתה משתמש במטענים, סוללות או כבלים שלא אושרו, הדבר עלול לגרום לעיכוב בטעינת הסוללה או להופעת הודעה לגבי טעינה איטית, או שהדבר עלול לגרום פיצוץ בסוללה או נזק בהתקן, והאחריות אינה מכסה אותם.

מחבר המטען נמצא בחלק התחתון של הטלפון. הכנס את המטען, וחבר אותו לשקע חשמל.

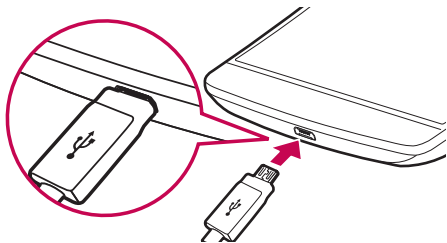

**הערה:** אל תפתח את המכסה האחורי במהלך טעינת הטלפון.

## הכנסת כרטיס זיכרון

המכשיר תומך בכרטיס microSD בנפח 32 GB לכל היותר. בהתאם ליצרך ולסוג של כרטיס הזיכרון, ייתכן שכרטיסי זיכרון מסוימים לא יהיו תואמים למכשיר.


### אזהרה

ייתכן שכרטיסי זיכרון מסוימים לא יהיו תואמים באופן מלא למכשיר. שימוש בכרטיס שאינו תואם עלול לגרום נזק למכשיר או לכרטיס הזיכרון, או לפגום בנתונים המאוחסנים בו.

### הערה:

- המכשיר תומך במערכות קבצים מסוג FAT ו-exFAT עבור כרטיסי זיכרון. בעת הכנסת כרטיס שפורמט במערכת קבצים שונה, תתבקש על-ידי המכשיר לבצע פרמט מחדש של כרטיס הזיכרון.
- כתיבה ומחיקה של נתונים לעתים תכופות יביאו לקיצור החיים של כרטיסי זיכרון.

- 1 הסר את המכסה האחורי.
- 2 הכנס כרטיס זיכרון כשהמגעים המוזהבים פונים כלפי מטה.

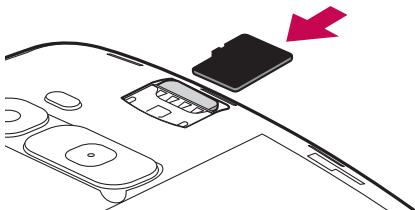

- 3 החזר את המכסה האחורי למקומו.

## ביטול נעילת המסך

כברירת מחדל, המסך יינעל לאחר פרק זמן מסוים של חוסר פעילות, ולאחר מכן יכבה.




### ביטול נעילת המסך

- 1 לחץ על **לחצן הפעלה/נעילה** או הקש פעמיים על המסך.
- 2 החלק את המסך בכיוון כלשהו כדי לבטל את נעילתו.

## עצה! Smart Lock

באפשרותך להשתמש ב**Smart Lock** כדי להקל את ביטול נעילת הטלפון. אתה יכול להגדיר שהטלפון יישאר לא נעול כאשר מחובר אליו התקן Bluetooth מהימן, כאשר הוא במיקום מוכר, כגון הבית או העבודה, או כאשר הוא מזהה את הפרצוף שלך.

### הגדרת Smart Lock

- 1 הקש על  <  < הכרטיסייה **יישומים** < .
- 2 הקש על הכרטיסייה **תצוגה** < **מסך נעילה** < **Smart Lock**.
- 3 לפני הוספת התקנים מהימנים, מקומות מהימנים או פנים מהימנות, עליך להגדיר נעילת מסך (תבנית, קוד PIN או סיסמה).

## עצות בנוגע למסך המגע


להלן מספר עצות בנושא ניווט בטלפון.


- **הקש או גע** – הקשה באצבע יחידה בוחרת פריטים, קישורים, קיצורי דרך ואותיות במקלדת שעל המסך.
- **גע והחזק** – גע והחזק בפריט במסך על-ידי הקשה עליו ואי-הרמה של האצבע עד שתתרחש פעולה.
- **גרור** – גע והחזק בפריט לרגע ולאחר מכן, מבלי להרים את האצבע, הזז את האצבע על המסך עד שתגיע למיקום היעד. ניתן לגרור פריטים במסך הראשי כדי לשנות את מיקומם.
- **החלקה רגילה או החלקה מהירה** – כדי לבצע החלקה רגילה או החלקה מהירה, הזז את האצבע במהירות על-גבי שטח המסך, מבלי להשהות את האצבע כשאתה מקיש על המסך לראשונה (כדי לא לגרור פריט בטעות).
- **הקשה כפולה** – הקש פעמיים כדי להגדיל את התצוגה של דף אינטרנט או מפה (אם התכונה נתמכת על-ידי היישום).
- **צבוט כדי לשנות את גודל התצוגה** – השתמש באצבע המורה ובאגודל בתנועת צביטה או פריסה כדי להקטין או להגדיל את התצוגה כשאתה משתמש בדפדפן או במפות, או כשאתה מדפדף בתמונות (אם התכונה נתמכת על-ידי היישום).
- **סובב את המסך** – ביישומים ותפריטים רבים, הכיוון הפיזי של המסך מתאים את עצמו לכיוון הפיזי של המכשיר.

### הערה:

- אין צורך ללחוץ חזק מדי, מסך המגע רגיש דיו כדי לחוש במגע קל אך החלטי.
- השתמש בקצה האצבע כדי להקיש על האפשרות הרצויה. היזהר שלא להקיש על אף מקש אחר.

## מסך ראשי

המסך הראשי הוא נקודת ההתחלה עבור פונקציות ויישומים רבים. הוא מאפשר לך להוסיף פריטים, כגון קיצורי דרך ליישומים וידג'טים של Google, כדי להעניק לך גישה מיידית למידע וליישומים. זהו לוח ברירת המחדל והוא נגיש מכל תפריט על-ידי הקשה על .

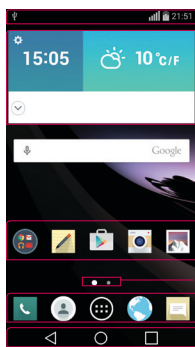

1 שורת המצב

2 וידג'ט

3 סמלי יישומים

4 מציין מיקום

5 אזור מקשים מהירים

6 מקשי מגע במסך הראשי

1 מציגה את מידע המצב של הטלפון כולל השעה, עוצמת האות, מצב הסוללה וסמלי התראות.

2 וידג'טים הם יישומים עצמאיים שניתן לגשת אליהם ממגירת היישומים או במסך הראשי. שלא כמו קיצור דרך, וידג'ט יכול לפעול כיישום במסך.

3 הקש על סמל (יישום, תיקייה וכו') כדי לפתוח אותו ולהשתמש בו.

4 מציין איזה לוח של מסך ראשי אתה מציג כעת.

5 מספק גישה בנגיעה אחת לפונקציה בכל לוח של מסך ראשי.

חזרה למסך הקודם. סוגר גם פריטים קופצים, כגון תפריטים, תיבות דו-שיח ומקלדת וירטואלית. הקש והחזק אותו כדי לגשת ל"חלון כפול".	◀ <b>מקש אחורה</b>
חזרה למסך הראשי מכל מסך אחר.	○ <b>מקש הבית</b>
מציג יישומים שהיו בשימוש לאחרונה. אם תיגע ותחזיק במקש זה, הוא יביא לפתיחת תפריט של אפשרויות זמינות.	□ <b>מקש אחרונים</b>

### מסך ראשי מורחב

מערכת ההפעלה מספקת לוחות מרובים של מסך ראשי כדי לאפשר עוד שטח להוספת סמלים, וידג'טים ועוד.  
 • החלק את האצבע לשמאל או לימין על פני המסך הראשי כדי לגשת אל לוחות נוספים.

## התאמה אישית של המסך הראשי


באפשרותך להתאים אישית את המסך הראשי על-ידי הוספת יישומים וידג'טים ועל-ידי שינוי טפטים.

### הוספת פריטים במסך הראשי

- 1 לחץ לחיצה ארוכה בנקודה הריקה במסך הראשי.
- 2 בתפריט 'מצב הוספה', בחר את הפריט שברצונך להוסיף. הפריט שהוספת יופיע בלוח המסך הראשי.
- 3 גרור אותו למיקום הרצוי והרם את האצבע.

**עצה!** כדי להוסיף סמל יישום למסך הראשי, בתפריט 'יישומים', גע והחזק את היישום שברצונך להוסיף.

## הסרת פריט מהמסך הראשי


• **מסך ראשי** < הקש והחזק בסמל שברצונך להסיר < גרור אותו אל .

## הוספת יישום כמקש מהיר


• מהתפריט 'יישומים' או במסך הראשי, הקש והחזק סמל יישום, וגרור אותו לאזור המקשים המהירים. ניתן להוסיף עד 7 יישומים.

## הסרת יישום מהאזור 'מקשים מהירים'



• גע והחזק את המקש המהיר הרצוי, וגרור אותו אל .

**הערה:**  הפריסה של מגירת ה**יישומים** אינה ניתנת להסרה.

## התאמה אישית של סמלי יישומים במסך הראשי

- 1 הקש והחזק בסמל יישום שכבר נמצא בלוח המסך הראשי. סמל העריכה  מופיע בפינה הימנית העליונה של היישום.
- 2 הקש על סמל היישום שוב ובחר בעיצוב ובגודל הרצויים עבור הסמל.
- 3 הקש על **אישור** כדי לשמור את השינוי.

## חזרה ליישומים שהיו בשימוש לאחרונה


- 1 הקש על . תוצג רשימה של יישומים שהיו בשימוש לאחרונה.
- 2 הקש על סמל כדי לפתוח את היישום שלו. לחלופין, הקש על  כדי לחזור למסך הקודם.

## לוח ההתראות

התראות מדווחות לך על הגעת הודעות חדשות, אירועים בלוח השנה ומצבי חירום, וכן על אירועים מתמשכים, כגון כאשר אתה משתמש בניווט עם הוראות מפורטות.


כשמגיעה התראה, הסמל שלה מופיע בחלק העליון של המסך. סמלים של התראות ממתינות מופיעים משמאל, וסמלי מערכת, כגון Wi-Fi ועוצמת סוללה, מופיעים מימין.

**הערה:** האפשרויות הזמינות משתנות בהתאם לאזור או לספק השירות.

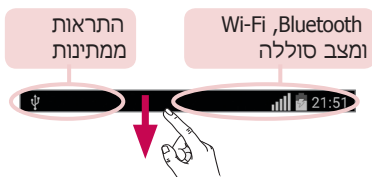

## פתיחת לוח ההתראות

החלק כלפי מטה משורת המצב כדי לפתוח את חלונית ההתראות. כדי לסגור את לוח ההתראות, גע וגרור את המסך אל עבר הקצה העליון של המסך.

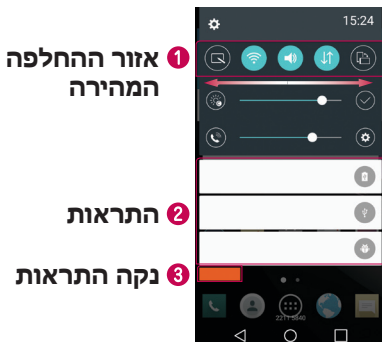

**1** אזור החלפה המהירה

**2** התראות

**3** נקה התראות

- 1** הקש על כל מקש החלפה מהירה כדי להפעיל/לכבות אותו. הקש והחזק את המקש כדי לגשת לתפריט ההגדרות עבור הפונקציה. להצגת מקשי החלפה נוספים, החלק שמאלה או ימינה. הקש על ☰ כדי להסיר, להוסיף או לשנות את הסדר של מקשי החלפה.
- 2** ההתראות הנוכחיות מפורטות, כל אחת עם תיאור קצר. הקש על התראה כדי לפתוח את היישום התואם שמנהל אותה.
- 3** הקש כדי לנקות את כל ההתראות.

## סמלי מחוונים בשורת המצב

סמלי מחוונים מופיעים בשורת המצב בחלקו העליון של המסך כדי לדווח על שיחות שלא נענו, הודעות חדשות, אירועים בלוח השנה, סטטוס המכשיר ועוד.



הסמלים המוצגים בחלקו העליון של המסך מספקים מידע על סטטוס המכשיר. הטבלה שלהלן מציגה אחדים מהסמלים הנפוצים ביותר.

סמל	תיאור	סמל	תיאור
	לא הוכנס כרטיס SIM		קובץ מדיה פועל כעת
	אין אות רשת זמין		'מצב שקט' מאופשר
	מצב טיסה מופעל		מצב רטט מופעל
	מחובר לרשת Wi-Fi		הסוללה טעונה במלואה
	האזניות הקווייות מחוברות		הסוללה נטענת
	מתבצעת שיחה		הטלפון מחובר למחשב באמצעות כבל USB
	שיחה שלא נענתה		הורדת נתונים
	Bluetooth מופעל		העלאת נתונים
	התראת מערכת		GPS פועל
	הוגדרה התראה		הנתונים מסתנכרנים






בחר שיטת קלט		קיימת הודעה קולית חדשה	
שיתוף תוכן בשרת המדיה מופעל		קיימת הודעת טקסט או מולטימדיה חדשה	
נקודה חמה ב-Wi-Fi פעילה		NFC פועל	

**הערה:** מיקום הסמל בשורת המצב עשוי להשתנות בהתאם לפונקציה או לשירות.

## מקלדת וירטואלית

ניתן להזין טקסט גם באמצעות המקלדת הווירטואלית. המקלדת הווירטואלית מופיעה במסך כאשר אתה מקיש על שדה זמין להזנת טקסט.

### שימוש בלוח המקשים והזנת טקסט

-  הקש פעם אחת כדי להפוך את האות הבאה שתקליד לאות רישית.
- הקש פעמיים כדי שכל האותיות יהיו רישיות.
-  הקש כדי לגשת אל התפריט 'הגדרות' של המקלדת.
-  הקש כדי להזין רווח.
-  הקש כדי ליצור שורה חדשה.
-  הקש כדי למחוק את התו הקודם.

## הזנת אותיות עם סימני הטעמה

כאשר אתה בוחר ב'צרפתית' או 'ספרדית' כשפת הזנת טקסט, באפשרותך להזין תווים מיוחדים הקיימים בצרפתית או בספרדית (למשל "á").

לדוגמה, כדי להזין "á", הקש והחזק את המקש "a" עד שהחלון הקופץ יופיע ויציג תווים מיוחדים קשורים. מבלי להרים את האצבע, גרור אותה אל התו המיוחד הרצוי.


## תצלום בתנועת יד

צלם תמונה בעזרת תנועת יד. כדי לצלם תמונה, הרם את ידך עד שהמצלמה הקדמית תזוהה אותה ותופיע תיבה במסך.



## תצוגת מבט מהיר

כאשר מסך הטלפון כבוי, באפשרותך לראות את שורת המצב, השעה והתאריך על-ידי גרירת האצבע מטה על המסך.

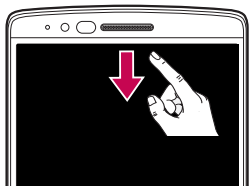


## תצוגת חיישן תנועה

לאחר צילום תמונה בעזרת העדשה של המצלמה הקדמית, באפשרותך לבדוק באופן מיידי את התמונה שצילמת באמצעות חיישן תנועה זה.

1 הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) < .

2 צלם תמונה בעזרת המצלמה הקדמית.

3 לאחר צילום התמונה, קרב את הטלפון אל פניך. התמונה שצילמת תוצג.

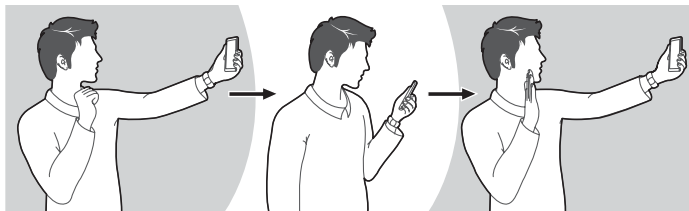

צילום תמונה

החזרת מצב מצלמה קדמית  
תצוגה מקדימה  
מהירה

### הערה:

- בהתאם למהירות ולזווית של חיישן התנועה, ייתכן שתכונה זו לא תפעל כראוי.
- כאשר הזווית משתנה לאחר 'תצוגה מקדימה מהירה', המכשיר יחזור למצב מצלמה. עליך לעבור ל'גלריה' כדי להציג את התמונה שוב.

## הפעל מסך

אתה יכול להעיר או לכבות את המסך בצורה פשוטה ביותר על-ידי הקשה פעמיים עליו.

בזמן שהמסך כבוי ולא פעיל, הקש פעמיים במהירות על המסך המרכזי כדי להעיר את המסך. כדי לכבות את המסך, הקש פעמיים על שורת המצב בתצוגה כלשהי (למעט בתצוגה המקדימה של המצלמה) או באזור ריק במסך הראשי.

**הערה:** בעת שימוש ב-KnockOn כדי להעיר את המסך, הקפד לא לכסות את חיישן הקרבה. אם הוא יהיה מכוסה, המסך לא יופעל. תכונה זו מיועדת למנוע הפעלה לא מכוונת של המכשיר כשהוא בכיס שלך או במיקום אחר.

## Knock Code

התכונה Knock Code מאפשרת לך להעיר את המסך ולבטל את נעילתו בעזרת תבנית Knock Code משלך. כאשר Knock Code מאופשר, הוא מחלק את המסך ל-4 חלקים ומשתמש בצירוף ההקשות הייחודי לך כדי לאבטח את המכשיר. ניתן להשבית תכונה זו בהגדרות מסך הנעילה.

### הערה:

- אם תזין צירוף שגוי Knock Code שש פעמים, יהיה עליך להשתמש בפרטי הכניסה לחשבון Google שלך או בקוד גיבוי.
- השתמש בקצה האצבע, במקום בציפורן, כדי להקיש על המסך כדי להפעיל או לכבות אותו.
- כאשר Knock Code אינו מאופשר, תוכל להשתמש בפונקציה Knock On על-ידי הקשה על המסך.

1 הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) <  <  < הכרטיסייה **תצוגה** < **מסך נעילה** < **בחירת נעילת מסך** < **Knock Code**.

2 פעל בהתאם להוראות המופיעות במסך כדי להגדיר את Knock Code.

3 הקש על 'סיום' כשתסיים.

## ביטול נעילת המסך באמצעות Knock Code


באפשרותך להעיר את המסך ולבטל את נעילתו על-ידי הקשת ה-Knock Code, שהוגדר בסעיף הקודם, כאשר המסך כבוי.

## חלון כפול

תכונה זו מאפשרת לך לבצע ריבוי משימות על-ידי פיצול המסך לשניים, וכך תוכל להשתמש בשני יישומים תואמים בו-זמנית.

1 הקש והחזק את הסמל < כדי לפצל את המסך.




2 הקש או גרור את סמל היישום עבור היישום המתאים שברצונך להשתמש בו.

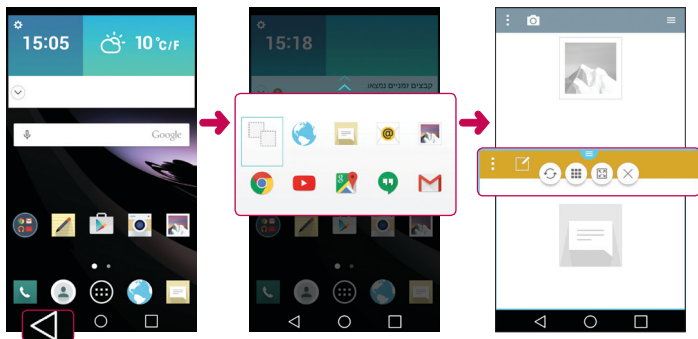

🗨️ : הקש כדי להציג את אפשרויות התפריט של 'חלון כפול', או גרור כדי לשנות את הגודל של המסכים המפוצלים.

- ⌂ : החלף בין שני מסכים.
- ☰ : הצג את רשימת היישומים.
- ⊞ : שנה את החלון שנבחר למסך מלא.
- ✕ : סגור את חלון היישום הנוכחי שנבחר.

**הערה:** אתה יכול לאפשר או להפוך ללא זמין את 'חלון כפול' דרך התפריט 'הגדרות'.

- 1 הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) <  <
- 2 החלק את מקש ההחלפה למצב **פועל** או **כבוי**.

## QuickMemo+


התכונה **QuickMemo+** מאפשרת לך ליצור מזכרים ולצלם תמונות מסך. צלם מסכים, צייר עליהם ושתף אותם עם משפחה וחברים באמצעות QuickMemo+.

- 1 (בזמן שהמסך כבוי) לחץ לחיצה ארוכה על לחצן הגברת עוצמת הקול.

### לחלופין

(בזמן שהמסך פועל) גע בשורת המצב והחלק אותה מטה, והקש על .

- 2 השתמש בתפריט כדי לבחור מבין האפשרויות הזמינות **סוג עט, צבע, מחק** וצור תזכורת.



### לחלופין



3 הקש על  כדי לשמור את התזכורת. כדי לצאת מ-QuickMemo+ בכל עת, הקש על .





## QSlide

מכל מסך שהוא, השתמש בלוח ההודעות כדי לגשת בקלות אל 'פנקס רשימות', 'לוח שנה', 'מחשבון' ועוד ולהשתמש בהם עם QSlide.

הקש כדי להרחיב את החלון לגודל חלון מלא.		1
הקש כדי לכווץ את השקיפות של החלון.		2
הקש כדי לסגור את חלון QSlide.		3
גרור כדי לכווץ את הגודל.		4



- גע בשורת המצב והחלק אותה מטה < הקש על **QSlide** כדי להציג את יישומי QSlide הזמינים. בנוסף, בזמן שימוש ביישומים התומכים ב-QSlide, הקש על . הפונקציה מוצגת כחלון קטן על המסך.
- באפשרותך גם להשתמש במסך תחת החלונות של **QSlide** ולהקיש עליו כשסרגל השקיפות אינו מלא .

**הערה:** QSlide יכול לתמוך בחלון אחד לכל היותר בו-זמנית.

# QuickRemote

QuickRemote הופך את הטלפון שלך לשלט אוניברסלי עבור מכשיר הטלוויזיה הביתי, הממיר ומערכת השמע, ועוד.

## הגדרה

- 1 גע בשורת המצב והחלק אותה מטה והקש על  < **הוסף שלט רחוק.**




## לחלופין

- הקש על  <  <  (אם יש צורך) <  < הקש על .

- 2 בחר את הסוג ומותג המכשיר, ולאחר מכן פעל בהתאם להוראות המופיעות במסך כדי להגדיר את תצורת המכשיר.

## גישה אל QuickRemote

- 3 לאחר שהשלמת את ההגדרה הראשונית, תוכל לגשת בקלות אל QuickRemote מ'לוח הודעות'. פתח את 'לוח הודעות' והשתמש בפונקציות של QuickRemote.

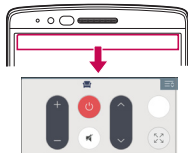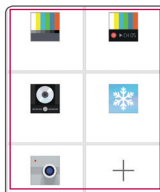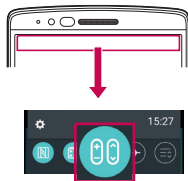

**הערה:** QuickRemote פועל באופן זהה לאותות אינפרא-אדום (IR) רגילים בשלט רחוק. הקפד לא לכסות את חיישן האינפרא-אדום בחלק העליון של הטלפון כאשר אתה משתמש בפונקציה QuickRemote. ייתכן שלא תהיה תמיכה בפונקציה זו - הדבר תלוי בדגם, ביצרן או בחברה המעניקה את השירות.

כשאתה מפעיל את הטלפון בפעם הראשונה, יש לך הזדמנות להיכנס לחשבון Google שלך ולבחור כיצד ברצונך להשתמש בשירותי Google מסוימים.

### הגדרת חשבון Google

. במהלך האתחול הראשון של המכשיר, ודא שהוא מחובר לאינטרנט. לאחר מכן, היכנס לחשבון Google ממסך הנחיות ההתקנה.

#### לחלופין

. לאחר שיצאת מאשף ההפעלה, הקש על  <  < הכרטיסייה **יישומים** (במקרה הצורך) <  < הכרטיסייה **כללי** < **חשבונות** ו**סנכרון** < **הוסף חשבון** < **Google**.

אם כבר יש לך חשבון Google, הזן את כתובת הדוא"ל שלך והקש על **הבא**.

לאחר שהגדרת את חשבון Google שלך בטלפון, הטלפון יסתנכר באופן אוטומטי עם חשבון Google שלך באינטרנט (אם יש חיבור נתונים זמין).




בהתאם להגדרות הסנכרון, יתבצע סנכרון של אנשי הקשר, הודעות Gmail, אירועי לוח השנה וכל שאר המידע שלך ביישומים ובשירותים אלה באינטרנט מול הטלפון שלך.

לאחר הכניסה תוכל להשתמש ב-Gmail™ ובשירותי Google דרך הטלפון.

## Wi-Fi

באפשרותך להשתמש בגישה לאינטרנט מהיר בזמן שאתה בטווח כיסוי נקודת הגישה (AP) האלחוטית.





### התחברות לרשתות Wi-Fi

- 1 הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) <  < הכרטיסייה **רשתות** < **Wi-Fi**.
- 2 הגדר את **Wi-Fi** ל**פועל** כדי להפעיל אותו והתחל בסריקה לאיתור רשתות Wi-Fi זמינות.
- 3 הקש על רשת כדי להתחבר אליה.  
• אם הרשת מאובטחת עם סמל מנעול, יהיה עליך להזין מפתח אבטחה או סיסמה.

**הערה:** שורת המצב מציגה סמלים המציינים את מצב ה-Wi-Fi.

**הערה:** אם אתה מחוץ לאזור ה-Wi-Fi או שהגדרת את Wi-Fi **ככבוי**, ייתכן שהמכשיר יתחבר באופן אוטומטי לאינטרנט באמצעות נתונים סלולריים, מה שעלול לגרום חיובים עבור שימוש בנתונים.

### עצה! כיצד להשיג את כתובת ה-MAC של הטלפון

הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) <  < הכרטיסייה **רשתות** < **Wi-Fi** <  < **Wi-Fi מתקדם** < כתובת **MAC**.

ניתן להשתמש ב-Bluetooth כדי להתחבר עם אוזניות, מערכות שמע, או אפילו להחליף נתונים בין התקנים סמוכים.

### הערה:

- LG אינה אחראית לאובדן, יירוט או שימוש לרעה של נתונים שנשלחו או נקלטו באמצעות התכונה Bluetooth.
- ודאו תמיד שאתם משתפים ומקבלים נתונים ממכשירים מהימנים המאובטחים כראוי.
- מכשולים בין המכשירים עלולים להקטין את מרחק הקליטה.
- חלק מהמכשירים, ובמיוחד אלה שלא נבדקו ואושרו על-ידי Bluetooth SIG, עלולים לא להתאים למכשירים שלך.

### שיוך הטלפון שלך להתקן Bluetooth אחר

- 1 הקש על  <  <  < (אם יש צורך)
- 2 הגדר את **Bluetooth לפועל**.
- 3 הקש על **חיפוש התקנים** כדי להציג את ההתקנים שנמצאים בטווח Bluetooth.
- 4 בחר את ההתקן שברצונך להתאים מתוך הרשימה ובצע את ההוראות שיופיעו כדי להשלים את ההתאמה. לאחר שההתאמה בוצעה בהצלחה, הטלפון שלך יתחבר להתקן השני.

**הערה:** ייתכן שבמכשירים מסוימים, במיוחד אוזניות או דיבוריות לרכב, יהיה קוד PIN המהווה ברירת מחדל ל-Bluetooth, לדוגמה 0000.

## שליחת נתונים באמצעות Bluetooth

- 1 באמצעות יישום התומך בשיתוף, אתר את הנתונים, או הקובץ, שברצונך לשתף.
- 2 בחר באפשרות **שתף**.
- 3 בחר ב-**Bluetooth**.
- 4 בחר את התקן Bluetooth המותאם (או התאם עם התקן חדש).

**הערה:** ייתכן שהשיטה לבחירת אפשרות תהיה שונה בהתאם לסוג הנתונים.

## קבלת נתונים באמצעות Bluetooth

- 1 הקש על  < הכרטיסייה **יישומים** (אם יש צורך) <  <
- 2 הגדר את **Bluetooth** ל**פועל** כדי להפעיל אותו.
- 3 אתה תקבל בקשה לקבל ניסיון התאמה מהתקן שולח. הקפד לבחור באפשרות **קבל**.

## Wi-Fi Direct



Wi-Fi Direct מספק חיבור ישיר בין התקנים מאפשרי Wi-Fi מבלי לחייב נקודת גישה.

### הפעלת Wi-Fi Direct

- 1 הקש על  < הכרטיסייה **יישומים** (אם יש צורך) <  <
- 2 הקש על  < **Wi-Fi** **מתקדם** < **Wi-Fi Direct**.

**הערה:** כשאתה נמצא בתפריט זה, המכשיר שלך גלוי להתקנים גלויים סמוכים אחרים של Wi-Fi Direct.

SmartShare מאפשר לך לקבל תוכן מולטימדיה דרך טלפון וטבלטים של LG.

1 בזמן הצגת התוכן שברצונך לשתף, הקש על  או על  >

### SmartShare

2 הקש על **Play** או על **Beam** בחלון הקופץ שמוצג.

• **Play**: באפשרותך להזרים את התוכן שלך דרך טלוויזיה, רמקול Bluetooth, וכו'.

• **Beam**: באפשרותך לשלוח את התוכן שלך להתקני Bluetooth או דרך SmartShare Beam\* אל טלפונים או טבלטים נתמכים של LG. SmartShare Beam\* מעביר במהירות תוכן מולטימדיה דרך Wi-Fi Direct.

3 הקש על ההתקן שברצונך לשתף מהרשימה.

• אם ההתקן אינו ברשימה, ודא שחיבור Wi-Fi Direct, Wi-Fi או Bluetooth מופעל. לאחר מכן הקש על **סרוק מחדש**.

### הנאה מתוכן בטלפון שלך דרך מכשירים סמוכים

1 כדי לחבר מכשירים סמוכים לטלפון שלך, הקש על האפשרות

#### מכשירים סמוכים ביישומים גלריה, נגן מוסיקה.

• ודא שהטלפון שלך והמכשירים הסמוכים מחוברים לאותה רשת Wi-Fi ושירות DLNA במכשיר הסמוך מופעל.

2 הקש על המכשיר שאליו ברצונך להתחבר.

אם המכשיר לא מופיע ברישימה, הקש על **חפש התקנים בקרבת מקום**.

3 לאחר שנוצר חיבור, אתה יכול ליהנות מהתוכן בטלפון שלך.

# העברת נתונים בין מחשב למכשיר שלך

ניתן להעתיק או להעביר נתונים בין מחשב לבין המכשיר.

## העברת נתונים





- 1 חבר את המכשיר למחשב באמצעות כבל ה-USB שקיבלת עם הטלפון.
- 2 פתח את 'לוח הודעות' ובחר באפשרות **התקני מדיה (MTP)**.
- 3 במחשב יקפוץ חלון, שיאפשר לך להעביר את הנתונים הרצויים.


### הערה:

- יש להתקין את LG Android Platform Driver במחשב כדי שהוא יוכל לזהות את הטלפון.
- בדוק את הדרישות עבור השימוש ב**התקני מדיה (MTP)**.



דרישה	פריטים
Microsoft Windows XP SP3, Vista או גרסה מתקדמת יותר	מערכת הפעלה
Windows Media Player 10 ומעלה	גרסת Window Media Player

## ביצוע שיחה



- 1 הקש על  כדי לפתוח את החייגן.
- 2 הזן את המספר באמצעות החייגן. כדי למחוק ספרה, הקש על .
- 3 לאחר הזנת המספר הרצוי, הקש על  כדי לבצע את השיחה.
- 4 כדי לסיים את השיחה, הקש על .

**עצה!** כדי להזין "+" לביצוע שיחות בינלאומיות, לחץ לחיצה ממושכת על הסמל .

## התקשרות לאנשי הקשר

- 1 הקש על  כדי לפתוח את אנשי הקשר.
- 2 גלול ברשימת אנשי הקשר. אתה יכול גם להזין את שם איש הקשר בשדה 'חפש' או לגלול באותיות האלפבית בקצה הימני של המסך.
- 3 כדי לבצע שיחה, הקש על  לצד איש הקשר שאליו ברצונך להתקשר.

## מענה לשיחה ודחיית שיחה

- כאשר אתה מקבל שיחה, החלק את  בכיוון כלשהו כדי לענות לשיחה.
- החלק את  בכיוון כלשהו כדי לסרב לשיחה.

## ביצוע שיחה נוספת

- 1 במהלך השיחה הראשונה שלך, הקש על **⋮** < **הוסף שיחה**.
- 2 הזן את המספר והקש על **📞** כדי לבצע את השיחה.
- 3 שתי השיחות יוצגו במסך השיחות. השיחה הראשונה שלך תינעל ותועבר למצב המתנה.
- 4 כדי להחליף בין מספרים, הקש על המספר המוצג במסך. באפשרותך גם להקיש על **⬆️** כדי להתחיל שיחת ועידה.
- 5 כדי לסיים את כל השיחות, הקש על **ניתוק**.

**הערה:** תחויב עבור כל שיחה שתבצע.

## צפייה ביומני השיחות

במסך הראשי, הקש על **📞** ובחר בכרטיסייה **שיחות**.  
תוצג רשימה של כל השיחות שחויגו, שהתקבלו ושלא נענו.

### עצה!


- הקש על כל אחד מהפריטים ביומן השיחות כדי להציג את התאריך, השעה ומשך השיחה.
- הקש על **⋮**, ולאחר מכן הקש על **מחק הכל** כדי למחוק את כל הפריטים המוקלטים.

## הגדרות שיחה


- באפשרותך לקבוע את התצורה של הגדרות שיחת טלפון, כגון העברת שיחות, וכן תכונות מיוחדות אחרות שספק השירות שלך מציע.
- 1 במסך הראשי, הקש על **📞** כדי לפתוח את החייגן.
  - 2 הקש על **⋮** כדי להציג את האפשרויות הזמינות.
  - 3 הקש על **הגדרות שיחה** וקבע את התצורה של האפשרויות הרצויות.

הוסף אנשי קשר לטלפון וסנכרן אותם עם אנשי הקשר בחשבון Google שלך או בחשבונות אחרים שתומכים בסנכרון אנשי קשר.

## חיפוש איש קשר

- 1 הקש על  כדי לפתוח את אנשי הקשר.
- 2 הקש על **חפש אנשי קשר** והזן את שם איש הקשר באמצעות המקלדת. אתה יכול גם לגלול לאורך אותיות האלפבית בקצה הימני של המסך.


## הוספת איש קשר חדש

- 1 הקש על  והזן את המספר של איש הקשר החדש.
- 2 הקש על **> הוסף לאנשי קשר < איש קשר חדש**.
- 3 אם ברצונך להוסיף תמונה לאיש הקשר החדש, הקש על סמל התמונה.
- 4 בחר באפשרות **צלם** או **בחר מהגלריה**.
- 5 הזן את המידע הרצוי עבור איש הקשר.
- 5 הקש על **שמירה**.


## אנשי קשר מועדפים

באפשרותך לסווג אנשי קשר שאליהם אתה מתקשר לעתים קרובות כמועדפים.



## הוספת איש קשר למועדפים

- 1 הקש על  כדי לפתוח את אנשי הקשר.
- 2 הקש על איש קשר כדי להציג את פרטיו.
- 3 הקש על הכוכב בפינה הימנית העליונה של המסך. הכוכב יהפוך לצהוב.

## הסרת איש קשר מרשימת המועדפים

- 1 הקש על  כדי לפתוח את אנשי הקשר.
- 2 הקש על הכרטיסייה **מועדפים** ובחר איש קשר כדי להציג את פרטיו.
- 3 הקש על הכוכב הצהוב בפינה הימנית העליונה של המסך. הכוכב ישנה את צבעו לאפור ואיש הקשר יוסר מהמועדפים שלך.



## יצירת קבוצה

- 1 הקש על  כדי לפתוח את אנשי הקשר.
- 2 הקש על **קבוצות** <  < **קבוצה חדשה**.
- 3 הזן שם לקבוצה החדשה. תוכל גם להגדיר צלצול ייחודי עבור הקבוצה.
- 4 הקש על **שמירה** כדי לשמור את הקבוצה.

**הערה:** אם תמחק קבוצה, אנשי הקשר שהוקצו לקבוצה זו לא יאבדו. הם יישארו ברשימת אנשי הקשר שלך.

הטלפון שלך משלב הודעות טקסט ומולטימדיה בתפריט יחיד, אינטואיטיבי וקל לשימוש.

## שליחת הודעה

- 1 הקש על  במסך הראשי, והקש על  כדי ליצור הודעה חדשה.
- 2 הזן שם של איש קשר או מספר להתקשרות בשדה **אל**. תוך כדי הזנת שם איש הקשר יופיעו אנשי קשר מתאימים. אתה יכול להקיש על נמען מוצע ולהוסיף יותר מאיש קשר אחד.

**הערה:** ייתכן שתחויב עבור כל הודעת טקסט שאתה שולח. התייעץ בנושא זה עם ספק השירות שלך.

- 3 הקש על השדה **כתוב הודעה** והתחל לחבר את ההודעה.
- 4 הקש על  כדי לפתוח את אפשרויות ההודעות.

**עצה!** באפשרותך להקיש על  כדי לצרף קובץ שברצונך לשתף.

- 5 הקש על **שלח** כדי לשלוח את ההודעה.

### עצה!

- מגבלת 160 התווים עשויה להשתנות ממדינה למדינה, בהתאם לשפה ולצורת הקידוד של הודעת הטקסט.
- בהוספת תמונה, סרטון וידאו או קובץ שמע להודעת טקסט, ההודעה עוברת המרה אוטומטית להודעת מולטימדיה ואתה עשוי להיות מחויב בהתאם.

## תצוגת שיחה

הודעות טקסט ומולטימדיה שהוחלפו עם צד אחר יוצגו בסדר כרונולוגי כדי שתוכל לראות ולאתר בקלות את השיחות שלך.

## שינוי הגדרות הודעות

הגדרות ההודעות בטלפון נקבעו מראש כדי לאפשר לך לשלוח הודעות באופן מיידי. תוכל לשנות את ההגדרות על-פי העדפותיך. פתח את היישום **הודעות** והקש על **!** < **הגדרות**.

ניתן להשתמש ביישום הדוא"ל כדי לקרוא הודעות דוא"ל משירותים כגון Gmail. יישום הדוא"ל תומך בסוגי החשבונות הבאים: IMAP, POP3 ו-Exchange. ספק השירות או מנהל המערכת שלך יכולים לספק לך את הגדרות החשבון הדרושות.

## ניהול חשבונות דוא"ל

בפעם הראשונה שתפתח את יישום הדוא"ל, ייפתח אשף התקנה שיסייע לך להגדיר חשבון דוא"ל. לאחר ההגדרה הראשונית, יישום הדוא"ל מציג את התוכן שבתיבת הדואר הנכנס שלך.

### הוספת חשבון דוא"ל נוסף:

• הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) < **דוא"ל** <  <  **הוסף חשבון**.

### שינוי הגדרות כלליות של דוא"ל:

• הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) < **דוא"ל** <  <  **הגדרות** <  < **הגדרות כלליות**.

### מחיקת חשבון דוא"ל:




• הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) < **דוא"ל** <  <  **הגדרות** <  <  **הסר חשבון** < בחר את החשבון שברצונך להסיר < **הסר** < **אישור**.




## עבודה עם תיקיות החשבון

כדי לגשת אל התיקיות של חשבון הדוא"ל שלך, פתח את היישום **דוא"ל** והקש על **⋮ < תיקיות**.  
כל חשבון כולל את התיקיות 'תיבת דואר נכנס', 'תיבת דואר יוצא', 'נשלח' ו'טיטות'. בהתאם לתכונות שבהן תומך ספק השירות של החשבון לך, ייתכן שיהיו לך תיקיות נוספות.

## חיבור ושליחה של דוא"ל


### כתיבת הודעות ושליחתן

- 1 בזמן שאתה ביישום **דוא"ל**, הקש על  כדי ליצור הודעת דוא"ל חדשה.
- 2 הזן כתובת עבור הנמען המיועד של הודעת הדוא"ל. תוך כדי הזנת הטקסט יוצעו כתובות תואמות מרשימת אנשי הקשר שלך. הפרד בין כתובות מרובות באמצעות תווי נקודה-פסיק.
- 3 הקש על **⋮** כדי להוסיף עותק/עותק מוסתר והקש על  כדי לצרף קבצים, במקרה הצורך.
- 4 הזן את הטקסט של הודעת הדוא"ל.
- 5 הקש על  כדי לשלוח את הודעת הדוא"ל.

כדי לפתוח את היישום 'מצלמה', הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) < .

## אפשרויות מצלמה בתצוגה המקדימה










- 1 **הסתר/הצג אפשרויות** – הקש כדי להסתיר/להציג את אפשרויות המצלמה בתצוגה המקדימה.
- 2 **מבזק** – מאפשר לך לנהל את המבזק של המצלמה. בחר מבין האפשרויות **כבוי** , **פועל** , או **אוטומטי** .
- 3 **החלף מצלמה** – הקש כדי להחליף בין המצלמה האחורית והמצלמה הקדמית.
- 4 **מצב צילום** – מאפשר לך לבחור את מצב הצילום עבור התמונה. בחר מבין האפשרויות **אוטומטי**, **פנורמה** או **כפול**.
- 5 **הגדרות** – הקש כדי לכוון את ההגדרות של המצלמה והווידאו.
- 6 **גלריה** – הקש כדי לגשת ל"גלריה".
- 7 **הקלט** – הקש כדי להתחיל להקליט וידאו.

8 **צלם** – הקש כדי לצלם תמונה.


9 **מקש 'הקודם'** – הקש כדי לסגור את התפריט שנבחר או כדי לצאת מהיישום 'מצלמה'.

## שימוש בהגדרות המתקדמות

בתצוגה המקדימה של המצלמה, הקש על  כדי לגשת אל הגדרות המצלמה הבאות.

משלב תמונות שצולמו בחשיפות שונות לתמונה אופטימלית אחת כדי לקבל תמונה טובה יותר בתנאי תאורה קשים.	
בוחר את רזולוציית התמונה.	
מאפשר לך לומר פקודה קולית כדי לצלם תמונות. אתה יכול להגיד LG, Smile, Cheese וכו'.	
מגדיר השהיה לאחר הקשה על מקש הצילום. מצב זה אידיאלי למקרה שתרצה להיות בתמונה או בווידאו בעצמך.	
מציג קווי רשת כדי לסייע לך ליישר את התמונות וסרטוני הווידאו.	
פותח את מדריך העזרה כדי להראות כיצד להשתמש בפונקציה.	

## צילום תמונה


- 1 פתח את היישום **מצלמה** וכוון את העדשה לעבר הנושא שברצונך לצלם.
- 2 מחווני מיקוד יופיעו במרכז מסך התצוגה המקדימה. ניתן גם להקיש במקום כלשהו במסך כדי להציב את הפוקוס בנקודה זו.
- 3 כשמחווני המיקוד הופכים לכחולים, המצלמה התמקדה על הנושא.
- 4 הקש על  כדי לצלם את התמונה.

## לאחר שצילמת תמונה


הקש על התמונה הממוזערת בתחתית המסך 'מצלמה' כדי להציג את הצילום האחרון שצילמת. לרשותך האפשרויות הבאות.

לחץ כדי לערוך את התמונה.	
הקש כדי לצלם תמונה נוספת מיד.	
הקש כדי לשלוח את התמונה לאחרים או לשתף אותה דרך שירותי רשתות חברתיות זמינים.	
הקש כדי למחוק את התצלום.	
הקש כדי לגשת אל אפשרויות נוספות.	
הקש כדי להוסיף את התמונה למועדפים שלך.	


## הקלטת וידאו

- 1 פתח את היישום **מצלמה** וכוון את העדשה לעבר הנושא שברצונך לצלם בסרטון הווידאו.
- 2 הקש על  פעם אחת כדי להתחיל בהקלטה.

**הערה:** הטיימר יוצג במסך.

- 3 נקודה אדומה תופיע בפניה הימנית העליונה של התצוגה המקדימה יחד עם טיימר, שיציג את משך הסרטון.
- 4 הקש על  כדי לעצור את ההקלטה.






### עצה!

 – הקש כדי ללכוד צילום מסך בעת הקלטת סרטון וידאו.

 – הקש כדי להשהות את ההקלטה.

## לאחר הקלטת וידאו

בתצוגה המקדימה, הקש על התמונה הממוזערת של סרטון הווידאו בקצה העליון של המסך כדי להציג את סרטון הווידאו האחרון שהקלטת. לרשותך האפשרויות הבאות.

הקש כדי להקליט עוד סרטון וידאו מיד.	
הקש כדי לפתוח את אפשרויות השיתוף הזמינות (כגון 'שליחת הודעות' או Bluetooth) לצורך שיתוף.	
הקש כדי למחוק את הווידאו.	
הקש כדי לגשת אל אפשרויות נוספות.	
הקש כדי להוסיף וידאו למועדפים.	

**הערה:** אם אתה מוריד הודעות MMS תוך כדי נדידה, ייתכן שיחולו חיובים נוספים.

### מוקד אוטומטי רב-נקודות








כאשר אתה מצלם תמונה, הפונקציה 'מוקד אוטומטי רב-נקודות' (AF) פועלת בצורה אוטומטית ומאפשרת לך לראות תמונה ברורה.

### צילום רציף

מאפשר לך לצלם תמונות מרובות במהירות. הקש והחזק את הסמל .






### מצב פנורמה

מאפשר לך לצלם תמונה פנורמית.

- 1 הקש על  <  <  (אם יש צורך) < .
- 2 הקש על  < **פנורמה**.
- 3 הקש על  כדי להתחיל לצלם את התמונה הפנורמית.
- 4 הזז את הטלפון שלך לאט בכיוון אחד בתנועה פנורמית.
- 5 ודא שאזור המיקוד מתיישר עם הקו המנחה הכחול בזמן צילום התמונה.
- 6 הקש על  כדי להפסיק את צילום התמונה הפנורמית.


## כפול

התכונה 'כפול' מאפשרת לך לצלם תמונה או להקליט וידאו בעזרת המצלמה הקדמית והאחורית בו-זמנית.

- 1 הקש על  <  <  (אם יש צורך) < .
- 2 הקש על  < .



**הערה:** גרור את המסך הרגיל כדי להעביר אותו למיקום הרצוי. הקש והחזק את המסך הרגיל כדי לשנות את גודלו. הקש על המסך הקטן כדי להחליף בין שתי המצלמות.

3 הקש על  כדי לעצור הקלטה כפולה.

## Super Zooming

בעת השימוש בעדשת המצלמה האחורית, אתה יכול להגדיל או להקטין את התצוגה עד פי 8.

**הערה:** השתמש ביד יציבה. תכונה זו לא פועלת יחד עם חלק מהפונקציות. עצמים עשויים להיות חופפים בעת צילום תמונה של נושאים הנעים במהירות.


'זום חי' מאפשר לך להגדיל או להקטין קטע של הווידאו המוצג כדי שהמקטע הרצוי ייראה גדול או קטן יותר. כשאתה צופה בווידאו, השתמש באצבע המורה ובאגודל בתנועת צביטה או פריסה כדי להקטין או להגדיל את התצוגה.



**הערה:** אין צורך ללחוץ חזק מדי, מסך המגע רגיש דיו כדי לחוש במגע קל אך החלטי.

## הפעלה כפולה

הפעלה כפולה (חיבור קווי או אלחוטי לשני צגים) ניתנת להפעלה במסך אחר.

**הערה:** חבר שני מכשירים באמצעות כבל קווי (Slimport-HDMI) או באופן אלחוטי (Miracast). המכשיר הניתן לחיבור יכול להיות טלוויזיה או צג הנתמך בכבל HDMI או ב-Miracast. היישומים 'גלריה' ו'וידאו' נתמכים ב'הפעלה כפולה'. הקש על  פעם אחת כאשר שני צגים נמצאים במצב שונה (כלומר, הצג מפעיל וידאו, ויישום הווידאו בטלפון שלך מציג מסך ריק), ולאחר מכן מצב 'הפעלה כפולה' יופעל. לא כל סרטוני הווידאו נתמכים על-ידי 'הפעלה כפולה'. 'הפעלה כפולה' פועל ברזולוציית תצוגה של 1280X720 ומעלה.

**הגלריה** מאפשרת לך להציג ולנהל את כל התמונות וסרטוני הווידאו שלך.

• הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) < .

### הערה:

- בהתאם לתוכנה המותקנת, ייתכן שלא תהיה תמיכה עבור חלק מתבניות הקבצים.
- ייתכן שחלק מהקבצים לא יפעלו כראוי עקב הקידוד שלהם.

## הצגת תמונות

ה'גלריה' מציגה את התמונות שלך בתיקיות. כאשר יישום, כגון דוא"ל, שומר תמונה, תיקיית ההורדה נוצרת באופן אוטומטי כדי להכיל את התמונה. בדומה לכך, לכידת צילום מסך יוצרת באופן אוטומטי את תיקיית צילומי המסך.

תמונות מוצגות בתיקייה לפי תאריך יצירה. בחר תמונה כדי להציג אותה במסך מלא. גלול שמאלה או ימינה כדי להציג את התמונה הבאה או הקודמת.


## הגדלה או הקטנה של התצוגה







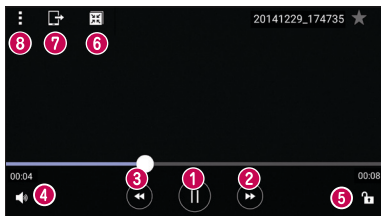

השתמש באחת השיטות הבאות כדי להגדיל תצוגת תמונה:

- הקש פעמיים בנקודה כלשהי כדי להגדיל את התצוגה.
- הזז שתי אצבעות בתנועת פריסה במקום כלשהו באפשרות ההגדלה של התמונה. צבוט את התמונה או הקש עליה פעמיים כדי להקטין.

## הפעלת סרטוני וידאו

- 1 גע בסמל  < הכרטיסייה **יישומים** (אם יש צורך) < .
- 2 בחר סרטון וידאו שברצונך לצפות בו.  
האפשרויות הבאות יהיו זמינות עבורך.



גע כדי להשהות/להמשיך את הפעלת הווידאו.	 1
גע כדי להעביר קדימה 10 שניות.	 2
גע כדי להריץ אחורה 10 שניות.	 3
גע כדי לכוונן את עוצמת הקול של הווידאו.	 4
גע כדי לנעול/לבטל נעילה של המסך.	 5
גע כדי להשתמש ב-QSlide עבור היישום 'סרטוני וידאו'.	 6
הקש כדי לשתף את התמונה שלך באמצעות הפונקציה SmartShare.	 7
הקש כדי לגשת אל אפשרויות נוספות.	 8



כדי לשנות את עוצמת הקול במהלך צפייה בוידאו, לחץ על לחצני הגברת/הנמכת עוצמת הקול שבגב הטלפון.

## עריכת תמונות

בעת הצגת תצלום, הקש על .

## מחיקת תמונות/סרטוני וידאו

השתמש באחת השיטות הבאות:

- בזמן שאתה בתוך תיקייה, הקש על , בחר בתמונות/סרטוני הווידאו ולאחר מכן הקש על **מחק**.
- בעת הצגת תצלום, הקש על .





## הגדרת טפט

בעת הצגת תמונה, הקש על **⋮** < **הגדרת תמונה בתור** כדי להגדיר את התמונה כטפט או להקצות אותה לאיש קשר.





### הערה:

- בהתאם לתוכנה המותקנת, ייתכן שלא תהיה תמיכה עבור חלק מתבניות הקבצים.
- אם גודל הקובץ חורג מכמות הזיכרון הפנוי, עלולה להתרחש שגיאה בעת פתיחת קבצים.

## נגן מוסיקה

הטלפון שלך כולל נגן מוסיקה המאפשר לך להשמיע את כל הרצועות האהובות שלך. כדי לגשת אל נגן המוסיקה, הקש על  <  <  <  .

### השמעת שיר

- 1 הקש על  <  <  <  .
- 2 הקש על הכרטיסייה **שירים**.
- 3 בחר בשיר שברצונך להשמיע.
- 4 לרשותך האפשרויות הבאות.










הקש כדי להשהות את ההפעלה.



הקש כדי לחדש את ההפעלה.



1

הקש כדי לדלג לרצועה הבאה באלבום, ברשימת ההשמעה או ברשימת ההשמעה בסדר אקראי. הקש והחזק כדי להעביר קדימה.		2
הקש כדי להפעיל מחדש את הרצועה הנוכחית או לדלג אל הרצועה הקודמת באלבום, ברשימת ההשמעה או ברשימת ההשמעה בסדר אקראי. הקש והחזק כדי להריץ אחורה.		3
הקש כדי לכוונן את עוצמת הקול.		4
הקש כדי להגדיר אפקטים קוליים.		5
הקש כדי להפעיל את רשימת ההשמעה הנוכחית במצב אקראי (הרצועות מופעלות בסדר אקראי).		6
הקש כדי להחליף בין האפשרויות 'חזור על כל השירים', 'חזור על השיר הנוכחי' ו'החזרה מושבתת'.		7
הקש כדי לשתף את המוסיקה שלך באמצעות הפונקציה SmartShare.		8
הקש כדי להוסיף את השיר למועדפים שלך.		9
הקש כדי לפתוח את רשימת ההשמעה הנוכחית.		10
הקש כדי לגשת אל אפשרויות נוספות.		11

כדי לשנות את עוצמת הקול בעת האזנה למוסיקה, לחץ על לחצני ההגברה או ההנמכה של עוצמת הקול שבגב הטלפון.

### הערה:

- בהתאם לתוכנה המותקנת, ייתכן שלא תהיה תמיכה עבור חלק מתבניות הקבצים.
- אם גודל הקובץ חורג מכמות היכרון הפנוי, עלולה להתרחש שגיאה בעת פתיחת קבצים.

**הערה:** זכויות היוצרים של קובצי מוסיקה עשויות להיות מוגנות על ידי אמנות בינלאומיות וחוקי זכויות יוצרים לאומיים.  
לפיכך ייתכן שתצטרך להשיג אישור או רישיון כדי לשכפל או להעתיק מוסיקה.  
במדינות מסוימות, החוק המקומי אוסר על העתקה פרטית של חומרים המוגנים בזכויות יוצרים. לפני הורדה או העתקה של הקובץ, בדוק את החוקים הלאומיים של המדינה הרלוונטית ביחס לשימוש בחומרים מסוג זה.

## שעון

השתמש ביישום 'שעון' כדי לקבל גישה אל הפונקציות 'שעון מעורר', 'טיימר', 'שעון עולמי' ו'שעון עצר'. גש אל פונקציות אלה על-ידי הקשה על הכרטיסיות שבראש המסך או על-ידי החלקה אופקית על פני המסך.

הקש על ○ < ☰ < הכרטיסייה **יישומים** (אם יש צורך) < ⌚.

### שעון מעורר

הכרטיסייה 'שעון מעורר' מאפשרת לך להגדיר התראות.

**1** פתח את היישום **שעון**, ולאחר מכן בחר את הכרטיסייה **שעון מעורר**.

**2** הקש על הסמל **התראה חדשה** כדי להוסיף התראה.

**3** כוונן את ההגדרות בהתאם לצורך והקש על **שמירה**.

**הערה:** אתה יכול גם להקיש על התראה קיימת כדי לערוך אותה.

### טיימר

'טיימר' יכול להתריע בפניך בעזרת אות נשמע בחלוף פרק זמן מסוים.

**1** פתח את היישום **שעון**, ולאחר מכן בחר את הכרטיסייה **טיימר**.

**2** הגדר את השעה הרצויה בטיימר.

### שעון עולמי

'שעון עולמי' מאפשר לך לבדוק בקלות את השעה הנוכחית בערים אחרות בעולם.

**1** פתח את היישום **שעון** ולאחר מכן בחר את הכרטיסייה **שעון עולמי**.

2 הקש על הסמל **עיר חדשה** ובחר את העיר הרצויה.

שעון עצר

הכרטיסייה 'שעון עצר' מאפשרת לך להשתמש בטלפון שלך כשעון עצר.

- 1 פתח את היישום **שעון**, ולאחר מכן בחר את הכרטיסייה **שעון עצר**.
- 2 לחץ על הלחצן **התחל** כדי להפעיל את שעון העצר.

**הערה:** לחץ על הלחצן 'הקפה' כדי לתעד זמני הקפות.

- 3 לחץ על הלחצן **הפסק** כדי להפסיק את שעון העצר.

**הערה:** כדי לאפס את שעון העצר, לחץ על הלחצן 'איפוס'. אתה יכול גם ללחוץ על הלחצן 'המשך' כדי להמשיך את הפעולה של שעון העצר.

## מחשבון





היישום 'מחשבון' מאפשר לך לבצע חישובים מתמטיים באמצעות מחשבון רגיל או מדעי.

- 1 הקש על  $\odot < \oplus < \otimes < \boxplus$  (אם יש צורך)  $< \boxtimes$ .
- 2 הקש על מקשי הספרות כדי להזין מספרים.
- 3 לביצוע חישובים פשוטים, הקש על הפונקציה שברצונך לבצע (+, -, x או  $\div$ ), ולאחר מכן =.
- 4 לחישובים מורכבים יותר, הקש על  $\div$  **מחשבון מדעי**.

**הערה:** כדי לבדוק את ההיסטוריה, הקש על  $\div$  **היסטוריית חישובים**.

## לוח שנה







היישום 'לוח שנה' מאפשר לך לעקוב אחר זמני האירועים שלך.


- 1 הקש על  <  < **הכרטיסייה יישומים** (אם יש צורך) <  .
- 2 הקש על התאריך שברצונך להוסיף לו אירוע. לאחר מכן הקש על  .

## הקלטה קולית

היישום 'הקלטה קולית' מקליט קבצי שמע שבהם תוכל להשתמש במגוון דרכים.

### הקלטת צלילים או קול




- 1 הקש על  <  < **הכרטיסייה יישומים** (אם יש צורך) <  .
- 2 הקש על  כדי להתחיל בהקלטה.
- 3 הקש על  כדי לסיים את ההקלטה.
- 4 הקש על  כדי להאזין להקלטה שערכת.

**הערה:** הקש על  כדי לגשת אל ההקלטות שלך. תוכל להאזין להקלטה שנשמרה. זמן ההקלטה הזמין עשוי להיות שונה מזמן ההקלטה בפועל.

## משימות

באפשרותך להוסיף את המשימות שלך ביישום 'משימות' ולסנכרן אותן עם חשבון MS Exchange שלך (אם הוא נתמך על-ידי חשבון MS Exchange שלך).




### סנכרון MS Exchange

- 1 הקש על  <  <  .
- 2 הקש על הכרטיסייה **כללי** < **חשבונות וסנכרון** < **הוסף חשבון**.
- 3 הקש על **Microsoft Exchange** והיכנס לחשבון שלך.
- 4 הקפד להוסיף סימן ביקורת בתיבת האפשרות **משימות** כאשר תתבקש לעשות זאת.

**הערה:** ייתכן שלא תהיה תמיכה ב-MS Exchange, בהתאם לשרת הדואר האלקטרוני.




## חיפוש קולי

השתמש ביישום זה כדי לחפש באינטרנט באמצעות קולך.

- 1 הקש על  <  <  .
- 2 אמור מילת מפתח או צירוף מילים כשהאפשרות **דבר עכשיו** מופיעה על המסך. בחר אחת ממילות המפתח המוצעות שיופיעו.




**הערה:** ייתכן שיישום זה לא יהיה זמין, בהתאם לאזור או לספק השירות.

## הורדות

- השתמש ביישום זה כדי לראות אילו קבצים הורדו ביישומים שלך.  
• הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) <  .

**הערה:** ייתכן שיישום זה לא יהיה זמין, בהתאם לאזור או לספק השירות.

## רדיו FM

- הטלפון שלך כולל רדיו FM מובנה כדי שתוכל להאזין לתחנות המועדפות עליך כשאתה בתנועה.  
הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) <  .




**הערה:** כדי להאזין לרדיו יש להשתמש באזניות. הכניסו אותה לשקע האוזניה.

**הערה:** ייתכן שיישום זה לא יהיה זמין, בהתאם לאזור או לספק השירות.

## LG SmartWorld

LG SmartWorld מציע מבחר תוכן מסעיר – גופנים, ערכות נושא, משחקים ויישומים.

גישה ל-LG SmartWorld מהטלפון

- 1 הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) <  .
- 2 הקש על **כניסה** והזן את שם המשתמש והסיסמה שלך. אם טרם ביצעת כניסה, הקש על **הרשמה** כדי ליצור חשבון.
- 3 דפדף והורד את התוכן הרצוי.

## הערה:

- ייתכן שיחולו חיובים בגין העברת נתונים בעת שימוש ברשת הניידת כדי לגשת אל LG SmartWorld.
- ייתכן ש-LG SmartWorld לא יהיה זמין אצל כל ספקי השירות או בכל המדינות.

## הערה: מה לעשות אם אין סמל LG SmartWorld ?

- 1 באמצעות דפדפן אינטרנט במכשיר הנייד שלך, גש אל LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) ובחר את המדינה שלך.
- 2 הורד את יישום LG SmartWorld.
- 3 הפעל והתקן את הקובץ שהורדת.
- 4 גש אל LG SmartWorld על-ידי הקשה על הסמל LG.

## יתרונות מיוחדים הזמינים עבור LG SmartWorld

- התאם אישית את המכשיר שלך בעזרת ערכות נושא של מסך ראשי, ערכות נושא של מקלדות וגופנים.
- תוכל ליהנות ממבצעים מיוחדים שמוצרים אך ורק ב-LG SmartWorld.
- שים לב כי LG SmartWorld זמין עבור מכשירים מסוימים בלבד. בדוק באתר [www.lgworld.com](http://www.lgworld.com) לקבלת מידע נוסף.

## אינטרנט



השתמש ביישום זה כדי לגלוש באינטרנט. הדפדפן מעניק לך עולם מהיר וצבעוני של משחקים, מוסיקה, חדשות, ספורט, בידור והרבה יותר, היישר לטלפון הנייד שלך.

**הערה:** יחולו חיובים נוספים בעת התחברות לשירותים אלה והורדת תוכן. בדקו את תעריפי העברת הנתונים אצל ספק הרשת שלכם.

הקש על  <  <  (אם יש צורך) < .

### שימוש בסרגל הכלים של הדפדפן

גלול אל הקצה העליון של דף האינטרנט כדי לגשת אל סרגל הכלים של הדפדפן.

הקש כדי לחזור דף אחד אחורה.	
הקש כדי להמשיך קדימה דף אחד.	
הקש כדי לעבור לדף הבית.	
הקש כדי לפתוח חלון חדש.	
הקש כדי לגשת לסימניות.	

### הצגת דפי אינטרנט

הקש על שדה הכתובת, הזן את כתובת האינטרנט והקש על **בצע** במקלדת.

## פתיחת דף

כדי לעבור אל דף חדש, הקש על **1** < +.  
כדי לעבור לדף אינטרנט אחר, הקש על **2**, גלול מעלה או מטה והקש על הדף כדי לבחור אותו.

## חיפוש באינטרנט באופן קולי

בדפדפן, הקש על שדה הכתובת ולאחר מכן הקש על **3**. כאשר תתבקש לעשות זאת, אמור מילת מפתח ובחר באחת ממילות המפתח שמופיעות.

**הערה:** ייתכן שתכונה זו לא תהיה זמינה, בהתאם לאזור או לספק השירות.

## סימניות



כדי לסמן את דף האינטרנט הנוכחי בסימנייה, הקש על **4** < **הוסף לסימניות** < **אישור**.  
כדי לפתוח דף אינטרנט שסומן בסימנייה, הקש על **5** ובחר את הדף הרצוי.

## היסטוריה




הקש על **6** < **היסטוריה** כדי לפתוח רשימה של דפי אינטרנט שבהם ביקרת לאחרונה. כדי לנקות את כל ההיסטוריה שלך, הקש על **7** < **אישור**.

## שימוש ב-QSlide עם הדפדפן

השתמש בתכונה זו כדי לבצע משימות מרובות בזמן גלישה באינטרנט. בזמן שאתה צופה בתוכן, כגון אנשי קשר או פתקים המכילים כתובות אינטרנט, בחר כתובת אינטרנט ולאחר מכן הקש על 'דפדפן מוקפץ' כדי לפתוח את הדפדפן המוקפץ. גע וגרור את חלון QSlide כדי להעביר אותו למיקום אחר.

כדי להציג את הדפדפן במסך מלא, הקש על .  
כדי לסגור את הדפדפן, הקש על .

## Chrome

השתמש ב-Chrome כדי לחפש מידע ולגלוש בדפי אינטרנט.  
הקש על  <  <  (אם יש צורך) <

**הערה:** ייתכן שיישום זה לא יהיה זמין, בהתאם לאזור ולספק השירות.

### הצגת דפי אינטרנט






בדפדפן Chrome, הקש על שדה הכתובת, ולאחר מכן הזן כתובת אינטרנט או קריטריונים לחיפוש.

### פתיחת דף

כדי לפתוח דף חדש, הקש על  < **כרטיסייה חדשה**.  
כדי לעבור לדף אינטרנט אחר, הקש על , והקש על הדף כדי לבחור אותו.

סעיף זה מספק מבט כולל על פריטים שניתן לשנותם באמצעות תפריטי 'הגדרות מערכת' של הטלפון.

**גישה לתפריט 'הגדרות':**

- . הקש על  < גע והחזק בלחצן  < **הגדרות מערכת**.
- לחלופין -
- . הקש על  <  < הכרטיסייה **יישומים** (אם יש צורך) < .

## רשתות

### > רשתות אלחוטיות <

#### Wi-Fi

מאפשר לך לנהל את חיבורי Wi-Fi שלך ולהתחבר לרשתות Wi-Fi זמינות.

#### Bluetooth

מאפשר לך לנהל את תכונת האלחוט של Bluetooth.

#### נתונים ניידים

מציג את השימוש בנתונים ומאפשר לך להגדיר מגבלת שימוש מותאמת אישית בנתונים סלולריים.

#### הגדרות שיחה

תפריט זה מאפשר לך לקבוע הגדרות שיחה שונות.

. **תא קולי** – מאפשר לך לבחור את שירות התא הקולי של הספק שלך.

. **מספרים קבועים מראש** – מאפשר לך לנהל וליצור רשימה של מספרים שאליהם ניתן להתקשר מהטלפון. לצורך כך תזדקק לקוד

PIN2 שניתן להשיגו אצל מפעיל השירות שלך. אם תוכנה זו תופעל, מהטלפון שלך ניתן יהיה להתקשר רק למספרים הכלולים ברשימת המספרים הקבועים מראש.

- **חלופית שיחה נכנסת** – מציג חלופית שיחה נכנסת כאשר יישום כלשהו נמצא בשימוש.
- **דחיית שיחות** – מאפשר לך להגדיר את הפונקציה לדחיית שיחות.
- **דחה שיחה ושלח הודעה** – כשברצונך לסרב לשיחה, באפשרותך לשלוח הודעה מהירה באמצעות פונקציה זו. אפשרות זו שימושית כאשר אתה נדרש לסרב לשיחה במהלך פגישה.
- **העברת שיחה** – מאפשר לך לבחור מתי להעביר שיחות.
- **מענה אוטומטי** – מגדיר את משך הזמן לפני שדיבורית מחוברת תענה באופן אוטומטי לשיחה נכנסת.
- **רטט חיבור** – הטלפון שלך רוטט כשהצד השני משיב לשיחה.
- **דיכוי רעשים** – מדכא רעשי רקע במכשיר במהלך שיחה.
- **צלילות הקול** – מגביר את איכות הקול בסביבות רועשות כדי שתוכל לשמוע יותר בבירור.
- **שמור מספרים לא מוכרים** – מאפשר לך להוסיף מספרים לא מוכרים לאנשי קשר לאחר שיחה.
- **מקש ההפעלה מסיים שיחה** – מאפשר לך להשתמש במקש ההפעלה כדי לסיים שיחות.
- **חסימת שיחה** – נועל שיחות נכנסות, יוצאות או בינלאומיות.
- **משך שיחה** – מאפשר לך להציג את משך השיחה עבור סוגי שיחות שונים.
- **הגדרות נוספות** – מאפשר לך לשנות את ההגדרות הבאות.

> **קישוריות** <

**שתף והתחבר**

• **NFC** – הטלפון שלך הוא טלפון נייד שתומך ב-NFC. NFC (תקשורת שדה קרוב) היא טכנולוגיה לתקשורת אלחוטית המאפשרת

- תקשורת דו-כיוונית בין מכשירים אלקטרוניים. טכנולוגיה זו פועלת במרחק של סנטימטרים ספורים. באפשרותך לשתף את התוכן שלך עם תגית NFC או מכשיר אחר התומך ב-NFC פשוט על-ידי הקשה עליו באמצעות המכשיר שלך. אם תקיש על תגית NFC באמצעות המכשיר שלך, תוכן התגית יוצג במכשיר.
- **Android Beam** – כשתכונה זו פועלת, באפשרותך להעביר תוכן מהיישום למכשיר אחר התומך ב-NFC על-ידי החזקת המכשירים סמוכים זה לזה. פשוט קרב את המכשירים זה לזה (בדרך כלל גב אל גב) ולאחר מכן הקש על המסך. היישום קובע מה ישודר.
  - **SmartShare Beam** – מאפשר לך לקבל תוכן מולטימדיה דרך טלפונים או טאבלטים של LG.
  - **שרת מדיה** – שתף תוכן מדיה עם מכשירים סמוכים דרך DLNA.
  - **Miracast** – מאפשר לך לשקף באופן אלחוטי את המסך והקול של הטלפון בהתקן הרשאה של Miracast או במכשיר הטלוויזיה.
  - **LG PC Suite** – התחבר ל-LG PC Suite באמצעות הטלפון כדי לנהל בקלות תוכן מולטימדיה ויישומים.

## רשתות ושיתוף אינטרנט

- **שיתוף באמצעות USB** – מאפשר לך לשתף את חיבור האינטרנט עם המחשב באמצעות כבל USB.
- **נקודה חמה ניידת ב-Wi-Fi** – מאפשר לך ליצור נקודה חמה ניידת ולשתף את החיבור שלך.
- **שיתוף אינטרנט ב-Bluetooth** – מאפשר לך להתחבר להתקנים אחרים דרך Bluetooth.
- **עזרה** – מציג עזרה בנושא שיתוף באמצעות USB, נקודה חמה ניידת ב-Wi-Fi ושיתוף אינטרנט ב-Bluetooth.

- **מצב טיסה** – מצב טיסה מאפשר לך להשתמש במרבית התכונות בטלפון שלך, כגון משחקים ומוסיקה, כאשר אתה נמצא באזור שבו אסור לבצע או לקבל שיחות, או להשתמש בנתונים. כאשר אתה מגדיר את הטלפון ל"מצב טיסה", הוא לא יוכל לבצע או לקבל שיחות, או לגשת אל נתונים מקוונים.
- **רשתות ניידות** – תפריט זה מאפשר לך לקבוע הגדרות שונות של רשתות ניידות.
- **VPN** – מהטלפון, אתה יכול להוסיף, להגדיר ולנהל רשתות פרטיות וירטואליות (VPN) המאפשרות לך להתחבר ולגשת אל משאבים בתוך רשת מקומית מאובטחת, כגון רשת הארגון שלך.

## צליל

### > בסיסי <

#### פרופילי צליל

מאפשר לך להגדיר את פרופילי הצליל של הטלפון. בחר מבין האפשרויות **צליל**, **רטט בלבד** או **נא לא להפריע**.

#### עוצמה


התאם את הגדרות עוצמת הקול של הטלפון כך שיתאימו לצרכים ולסביבה שלך.

#### עוצמת רטט

מאפשר לך להגדיר את עוצמת הרטט עבור שיחות, התראות ותגובה ללחיצה על מקשים.

### > רינגטונים ורטט <

#### צלצול

מאפשר לך להגדיר את הרינגטונים עבור שיחות. תוכל גם להוסיף צלצול על-ידי הקשה על  בפניה הימנית העליונה של המסך.

## **צליל התראה**

מאפשר לך להגדיר את צליל ההתראה. תוכל גם להוסיף צליל התראה על-ידי הקשה על **+** בפינה הימנית העליונה של המסך.

## **צליל עם רטט**

סמן אפשרות זו כדי להגדיר שהטלפון ירטוט בנוסף לצלצול בעת קבלת שיחות.

## **סוג רטט**

מאפשר לך לבחור את סוג הרטט.

## **> התראות <**

### **נא לא להפריע**

מאפשר לך להגדיר לוח זמנים למניעת הפרעות של התראות. אתה יכול לקבוע שתכונות מסוימות יורשו להפריע לך כאשר התכונה 'עדיפות בלבד' מוגדרת.

### **מסך נעילה**

מאפשר לך לבחור אם ברצונך להציג או להסתיר התראות במסך הנעילה.

### **יישומים**

מאפשר לך למנוע מיישומים להציג התראות, או להגדיר שיישומים יציגו התראות כאשר 'נא לא להפריע' מוגדר ל'עדיפות בלבד'.

## **> הגדרות מתקדמות <**

### **רטט בעת הקשה**

סמן אפשרות זו כדי שהטלפון ירטוט בעת לחיצה על לחצני המגע במסך הראשי ובמהלך אינטראקציות אחרות עם ממשק המשתמש.

### **אפקטים קוליים**

הקש כדי להגדיר את צלילי מקשי חיוג ואת צליל נעילת המסך.

- **צלילי מגע בלוח המקשים** – סמן אפשרות זו כדי להפעיל צלילים בזמן שימוש במקשים.
- **צליל מגע** – סמן אפשרות זו כדי שיושמע צליל בעת בחירת אפשרויות במסך.
- **צליל נעילת מסך** – סמן אפשרות זו להשמעת צליל בעת נעילה וביטול נעילה של המסך.

## התראות קוליות על הודעות/שיחות

הקש על המתג **התראות קוליות על הודעות/שיחות** כדי להפעיל או לכבות אותו. 'פועל' מאפשר למכשיר להקריא שיחות נכנסת ואירועי הודעות באופן אוטומטי.

## תצוגה

### < בית ונעילה >

#### מסך ראשי

- **בחר בית** – הגדר **בית** או **EasyHome** כמסך הראשי המוגדר כברירת מחדל.
- **Smart Bulletin** – הקש על המתג **Smart Bulletin** כדי להפעיל או לכבות אותו. הפעלת תכונה זו מביאה להוספת מסך ראשי המציג מידע מותאם אישית. סמן את **LG Health** או את **Smart Tips**.
- **ערכת נושא** – מגדירה את ערכת הנושא של המסך בהתקן שלך. אתה יכול להוריד ערכות נושא חדשות מ-**LG SmartWorld**.
- **טפט** – מגדיר את הטפט לשימוש במסך הראשי.
- **אפקט בהחלפת מסכים** – בחר את סוג האפקט שברצונך שיוצג בעת החלקה ממסך ראשי אחד לבא אחריו.
- **לאפשר לולאות מסך בית** – מציג את המסך הראשון לאחר המסך האחרון בעת גלילה של המסך הראשי.

- **גיבוי ושחזור בית** – באפשרותך לגבות ולשחזר פריסות של יישומים/וידג'טים ואת הטפט של המסך הראשי.
- **עזרה** – מציג מידע בנושאי עזרה עבור המסך הראשי.

## מסך נעילה

- **בחירת נעילת מסך** – הגדר סוג נעילת מסך כדי לאבטח את הטלפון. תיפתח סדרה של מסכים המובילים אותך בתהליך השרטוט של תבנית לביטול נעילת מסך. אם אפשרת 'תבנית' כסוג הנעילה כאשר אתה מפעיל את הטלפון או מעיר את המסך, תתבקש לשרטט את תבנית ביטול הנעילה כדי לבטל את נעילת המסך.
- **Smart Lock** – מגדיר שהטלפון יישאר לא נעול כאשר מחובר אליו התקן Bluetooth מהימן, כאשר הוא במיקום מוכר כגון הבית או העבודה שלך, או כאשר הוא מזהה את פרצופך.
- **אפקט החלקת מסך** – מגדיר את אפשרויות האפקט של החלקת מסך.

**הערה:** שם הגדרה זו עשוי להיות 'אפקט התבנית' אם נעילת המסך מוגדרת ל'תבנית'.

- **טפט** – מאפשר לך להגדיר את טפט מסך הנעילה.
- **קיצורי דרך** – מאפשר לך לבחור את קיצורי הדרך הזמינים במסך הנעילה.
- **אנימצית מזג אוויר** – סמן אפשרות זו כדי להציג אנימציות מזג אוויר במסך הנעילה עבור המיקום הנוכחי.
- **פרטי יצירת קשר עבור טלפון שאבד** – מאפשר לך להציג את פרטי הבעלים במסך הנעילה במקרה שהטלפון אבד.
- **שעון עצר לנעילה** – מגדיר את פרק הזמן לפני שהמסך יינעל באופן אוטומטי לאחר שהזמן הקצוב עבור המסך הסתיים.

**נעילה באמצעות לחצן ההפעלה** – סמן כדי לנעול את המסך באופן מיידי בעת לחיצה על המקש הפעלה/נעילה. הגדרה זו עוקפת את הגדרת הטיימר לנעילת אבטחה.

## **לחצני תצוגה**

הגדר את לחצני המגע במסך הראשי המוצגים בתחתית כל המסכים. הגדר אילו מהלחצנים יוצגו, המיקום שלהם בסרגל וכיצד הם ייראו.

### **> גופן <**

#### **סוג גופן**

מגדיר את סוג הגופן המשמש עבור הטלפון והתפריטים.

#### **גודל גופן**

מגדיר את גודל הגופן המוצג בטלפון ובתפריטים.

### **> הגדרות מסך נוספות <**

#### **בהירות**

מכוון את בהירות התצוגה. למיטוב ביצועי הסוללה, השתמש בבהירות הנמוכה ביותר הנוחה לשימוש.

#### **נורית הודעה**

הקש על המתג כדי להפעיל או להשבית אותו. האפשרות 'פועל' מפעילה את אור ה-LED עבור ההתראות שתבחר, בצבע שתגדיר עבור כל אחת.

#### **סיבוב מסך אוטומטי**

סמן אפשרות זו כדי להגדיר את הטלפון כך שסיבוב באופן אוטומטי את המסך לפי כיוון הטלפון (לאורך או לרוחב).

#### **כיבוי מסך אוטומטי**

מגדיר את משך הזמן לפני שהמסך יכבה.

#### **מצב מסך**

מגדיר את מצב המסך. בחר מבין האפשרויות **רגיל**, **חי וטבעי**.

## > הגדרות מתקדמות <

### אפקט כיבוי מסך

בחר את אפקט כיבוי המסך בעת נעילת המסך וכיבוי שלו. בחר מבין האפשרויות **חור שחור**, **טלויזיה רטרו** ו**עמעום הדרגתי**.

### חלום בהקיץ

הקש על המתג 'חלום בהקיץ' כדי להפעיל או להשבית אותו. באמצעות האפשרות 'פועל' ניתן להגדיר ששומר מסך יוצג כאשר הטלפון ישן במהלך עגינה ו/או טעינה.

### כוון אוטומטית את גוון המסך

סמן אפשרות זו כדי לכוון את בהירות המסך באופן אוטומטי בעזרת ניתוח של צבע תמונה.

## כללי

### > אישי <

#### שפה וקלט

השתמש בהגדרות שפה וקלט כדי לבחור את השפה עבור הטקסט שיוצג בטלפון וכדי לקבוע את תצורת המקלדת על המסך, לרבות מילים שהוספת למילון.

- **שפה** – מגדיר את השפה לשימוש בטלפון.
- **ברירת מחדל** – מאפשר לך להגדיר את מקלדת ברירת המחדל שתשמש בעת הזנת טקסט.
- **מקלדת LG** – סמן כדי לבחור את מקלדת LG להזנת טקסט. הקש על הסמל 'הגדרות' כדי לשנות את ההגדרות הבאות.
- **הקלדה קולית של Google** – סמן כדי לבחור את הקלדת הקול של Google לצורך הזנת טקסט. הקש על סמל ההגדרות כדי לשנות את הגדרות הקול של Google.
- **חיפוש קולי** – מגדיר אפשרויות חיפוש קולי.

- **פלט המרת טקסט לדיבור** – קובע את מנוע הדיבור המועדף ואת קצב הדיבור (איטי מאוד לעומת מהיר מאוד). בנוסף, מפעיל הדגמה קצרה של סינתזת דיבור.
- **מהירות מצביע** – מאפשר לך להגדיר את מהירות המצביע באמצעות פס המחוון.

## מיקום

מאפשר לך לנהל שירותי מיקום על מנת לקבוע את מיקומך המשוער באמצעות GPS, Wi-Fi ורשתות ניידות.

- **מצב** – מאפשר לך לבחור מצב מיקום מבין האפשרויות **דיוק גבוה (GPS ורשתות)**, **חיסכון סוללה (רשתות בלבד)** ו **חיישני המכשיר בלבד (GPS בלבד)**.

• **מצלמה** – סמן אפשרות זו כדי לתייג תמונות או סרטוני וידאו עם המיקום שבו הם צולמו.

• **דיווח מיקום של Google** – מאפשר לך לעיין בהגדרות המיקום שלך ב-Google ולנהל אותן.

## חשבונות וסנכרון

מתיר ליישומים לסנכרן נתונים ברקע, בין אם אתה עובד איתם באופן פעיל ובין אם לא. השבתת האפשרות **לסנכרן נתונים באופן אוטומטי** יכולה לחסוך בכוח הסוללה ולהפחית (אך לא לבטל) את השימוש בנתונים.

## ענן

מאפשר לך להוסיף חשבון ענן כדי להשתמש במהירות ובקלות בשירות ענן.

## נגישות

השתמש בהגדרות ה**נגישות** כדי לקבוע את התצורה של כל יישומי ה-plug-in לנגישות שהתקנת בטלפון.

## תפעול ביד אחת

- **מקשי חיוג** – סמן אפשרות זו כדי שתוכל להזיז את מקשי החיוג לצד ימין או שמאל של המכשיר. פשוט הקש על החץ כדי להזיז אותו לצד אחד או לצד השני.
- **מקלדת LG** – סמן אפשרות זו כדי שתוכל להזיז את המקלדת לצד ימין או שמאל של המכשיר. פשוט הקש על החץ כדי להזיז אותו לצד אחד או לצד השני.
- **מסך נעילה** – סמן אפשרות זו כדי שתוכל להזיז את לוח המקשים של מסך הנעילה בעזרת PIN לצד ימין או שמאל של הטלפון. פשוט הקש על החץ כדי להזיז אותו לצד אחד או לצד השני.
- **עזרה** – מציג מידע בנוגע לתפעול ביד אחת.

## מקש קיצור דרך

קבל גישה מהירה ליישומים על-ידי לחיצה והחזקה של לחצן עוצמת הקול כאשר התצוגה כבויה או נעולה. הקש על המתג של מקש קיצור הדרך (תמונה של מתג מקש קיצור דרך) בפינה הימנית העליונה של המסך כדי להעביר אותו למצב **פועל** או **כבוי**.

## > פרטיות <

### אבטחה

- **נעילת תוכן** – בחר סוגי נעילה כדי לנעול קבצים ב'גלריה'. בחר מבין האפשרויות **סיסמה** או **תבנית**.
- **הצפן טלפון** – הצפן את כל הנתונים בטלפון.
- **הצפן אחסון כרטיס SD** – מאפשר לך להצפין את כרטיס ה-SD כך שהנתונים לא יהיו זמינים למכשירים אחרים.
- **הקלדת סיסמה גלויה** – סמן אפשרות זו כדי להציג לזמן קצר כל תו בסיסמה בזמן שאתה מזין אותה, כדי שתוכל לראות מה אתה מזין.

- **מנהלי התקנים** – מאפשר לך להציג או להשבית מנהלי מכשיר.
- **מקורות לא מוכרים** – מאפשר לך להתקין יישומים שמקורם אינו Play Store-ב.
- **אמת יישומים** – הזהר או אל תאפשר התקנה של יישומים העלולים לגרום נזק.
- **סוג אחסון** – מציג את סוג האחסון לאישורים.
- **אישורים מהימנים** – מציג אישורי CA מהימנים.
- **התקן מהאחסון** – מאפשר לך להתקין אישורים מוצפנים.
- **נקה אישורים** – מוחק את כל האישורים המאובטחים והאישורים הקשורים ומוחק את הסיסמה של האחסון המאובטח.
- **Trust agents** – הצג או השבת Trust agents.
- **קביעת מסך** – תכונה זו מאפשרת לך לנעול את המכשיר כך שהמשתמש הנוכחי יוכל לגשת אך ורק למסך הקבוע. זה שימושי עבור משתמשים שיש להם ילדים.

## > פונקציות חכמות <

### מחוות

- **לענות לשיחה נכנסת** – סימן ביקורת כדי לאפשר לך לקרב את הטלפון לאוזן על מנת לענות באופן אוטומטי על השיחה הנכנסת.
- **הנמכת עוצמת רינגטון** – סמן אפשרות זו כדי שתוכל להרים את הטלפון מהמשטח הישר כדי לעמעם את הצלצול של השיחה הנכנסת.
- **להשתיק שיחות נכנסות** – סמן אפשרות זו כדי שתוכל להפוך את הטלפון על מנת להשתיק שיחות נכנסות.
- **השהיה או הפסקה של התראה** – סמן אפשרות זו כדי שתוכל פשוט להפוך את ההתקן על מנת להשהות או להפסיק את ההתראה.
- **השהיה וידאו** – סמן אפשרות זו כדי שתוכל להפוך את ההתקן על מנת להשהות את הווידאו המופעל כעת.

. **עזרה** – מציג מדריך עזרה בנוגע לאופן השימוש בתכונות המחוות בהתקן.

. **כיוול חיישן תנועה** – מאפשר לך לשפר את הדיוק של ההטיה והמהירות של החיישן.

### **כיסוי QuickCircle**

תפריט זה מאפשר לך לבחור ביישומים לשימוש ישירות בחלונית של הכיסוי באמצעות QuickCircle.

### **חלון כפול**

מאפשר לך להגדיר את תצורת התכונה 'חלון כפול'.

. **תצוגה מפוצלת** – סמן אפשרות זו כדי שתוכל להקיש על קישור במסך המלא או בקבצים מצורפים להודעות דוא"ל על מנת לפתוח 'חלון כפול'.

. **עזרה** – הצג טיפים לשימוש ב'חלון כפול'.

### **> ניהול מכשירים <**

#### **תאריך ושעה**

השתמש בהגדרות **תאריך ושעה** כדי לקבוע את אופן התצוגה של תאריכים. כמו כן, באפשרותך להשתמש בהגדרות אלה כדי להגדיר את השעה ואת אזור הזמן שלך, במקום לקבל את השעה הנוכחית מהרשת הניידת.

#### **אחסון**

. **אחסון פנימי** – הצג את השימוש באחסון פנימי.

#### **סוללה**

. **מידע על הסוללה** – המידע על טעינת הסוללה מוצג בגרפיקת סוללה לצד אחוז הטעינה שנותר והמצב שלה.  
גע בסמל טעינת הסוללה כדי להציג את מסך השימוש בסוללה, על מנת לבדוק את רמת הסוללה ואת פרטי השימוש בסוללה.  
הטלפון מציג גם את הרכיבים והיישומים שצורכים את הכמות הרבה

ביותר של אנרגיית סוללה. הקש על אחד מהפריטים כדי להציג עוד מידע מפורט.

• **ניצול סוללה** – מציג את ניצול הסוללה.

• **אחוז הסוללה בשורת המצב** – סמן אפשרות זו כדי להציג את אחוז רמת הסוללה בשורת המצב לצד סמל הסוללה.

• **חיסכון בחשמל** – הקש על המתג 'חיסכון בחשמל' כדי להפעיל או לכבות אותו. הקש על 'חיסכון בחשמל' כדי לגשת להגדרות הבאות:

• **הפעל את חיסכון בחשמל** – מגדיר את רמת אחוז טעינת הסוללה שתפעיל באופן אוטומטי את התכונה 'חיסכון בחשמל'. בחר מבין האפשרויות 'מיד', 'סוללה ב-5%' ו'סוללה ב-15%'.

• **עזרה** – מציג מידע בנושאי עזרה עבור התכונה 'חיסכון בחשמל'.

## Smart cleaning

מאפשר לך לנהל יישומים ונתונים שאינם בשימוש.

### יישומים

הצג ונהל את היישומים שלך.

### אפליקצית ברירת מחדל להודעות

תפריט זה מאפשר לך להגדיר את יישום ההודעות המוגדר כברירת מחדל הרצוי לך.

### גיבוי ואיפוס

תפריט זה מאפשר לך לגבות את הנתונים שלך, לשחזר נתונים באופן אוטומטי ולמחוק את כל הנתונים בטלפון.

• **גבה את הנתונים שלי** – מאפשר לך לגבות את ההגדרות ואת נתוני היישומים שלך לשרת Google.

• **חשבון גיבוי** – מאפשר לך לגבות את החשבון שלך.

• **שחזור אוטומטי** – מאפשר לך לשחזר את ההגדרות ואת נתוני היישומים כאשר היישומים מותקנים מחדש במכשיר שלך.

- **שירות LG Backup** – מבצע גיבוי של כל המידע בהתקן ומשחזר אותו במקרה של אובדן נתונים או החלפה.
- **שחזור נתוני היצרן** – אפס את ההגדרות שלך לערכי ברירת המחדל של היצרן ומחק את כל הנתונים שלך, כולל נתוני משתמש כגון תמונות וסרטוני וידאו.

## **הדפסה**

הגדרה זו מאפשרת לך להדפיס את התוכן של מסכים מסוימים (כגון דפי אינטרנט המוצגים ב-Chrome) במדפסת המחוברת לאותה רשת Wi-Fi שאליה מחובר התקן Android שלך.

## **אודות הטלפון**

הצג מידע על הרשת, זהות הטלפון, הסוללה, החומרה, התוכנה, מידע משפטי ותקנות ובטיחות.

## עבור Windows OS

LG PC Suite מסייע לך לנהל תוכן מדיה ויישומים בטלפון על-ידי כך שהוא מאפשר לך להתחבר לטלפון שלך באמצעות המחשב.

**באמצעות תוכנת LG PC Suite, תוכל...**

- לנהל ולהפעיל את תוכני המדיה (מוסיקה, סרטים, תמונות) מהמחשב.
- לשלוח תוכן מולטימדיה למכשיר.
- לסנכרן נתונים (לוחות זמנים, אנשי קשר, סימניות) במכשיר ובמחשב.
- לגבות את היישומים במכשיר.
- לעדכן את התוכנה במכשיר.
- להפעיל תוכן מולטימדיה של המחשב ממכשיר אחר.

**הערה:** ייתכן שחלק מהפונקציות לא יהיו זמינות, בהתאם לדגם.

**הערה:** באפשרותך להשתמש בתפריט העזרה של היישום כדי לגלות כיצד להשתמש בתוכנת המחשב LG PC Suite.

## התקנת התוכנה LG PC Suite

כדי להוריד את תוכנת LG PC Suite, בצע את הפעולות הבאות:

- 1 עבור אל [www.lg.com](http://www.lg.com).
- 2 עבור אל **תמיכה** < **תמיכה בנייד** < **סינכרון מחשב**.
- 3 בחר את המידע על הדגם ולחץ על **בצע**.

## 4 גלול מטה, בחר בכרטיסייה **סינכרון מחשב < Windows >** **הורדה** כדי להוריד את LG PC Suite.

### דרישות מערכת עבור תוכנת LG PC Suite

- מערכת הפעלה: Windows ,Windows XP (Service pack 3) 32bit
- Windows 8 ,Windows 7 ,Vista
- מעבד: 1 GHz ומעלה
- זיכרון: רכיבי RAM בנפח 512 MB ומעלה
- כרטיס מסך: רזולוציה של 1024 x 768, צבע 32 סיביות ומעלה
- דיסק: שטח דיסק פנוי של לפחות 500 MB (ייתכן שיהיה צורך בשטח רב יותר, בהתאם לנפח הנתונים המאוחסנים).
- תוכנה דרושה: מנהלי התקנים של LG United ,Windows Media Player 10 ואילך.

### **הערה: מנהל התקן USB של LG United**

נדרש מנהל התקן USB של LG United לצורך חיבור מכשיר LG ומחשב. הוא מותקן באופן אוטומטי בעת התקנת יישום התוכנה LG PC Suite.

## עבור Mac OS

### באמצעות תוכנת LG PC Suite, תוכל...

- לנהל ולהפעיל את תוכני המדיה (מוסיקה, סרטים, תמונות) מהמחשב.
- לשלוח תוכן מולטימדיה למכשיר.
- לסנכרן נתונים (לוחות זמנים, אנשי קשר, סימניות) במכשיר ובמחשב.

**הערה:** ייתכן שחלק מהפונקציות לא יהיו זמינות, בהתאם לדגם.

**הערה:** באפשרותך להשתמש בתפריט העזרה של היישום כדי לגלות כיצד להשתמש בתוכנת המחשב LG PC Suite.

### התקנת התוכנה LG PC Suite

כדי להוריד את תוכנת LG PC Suite, בצע את הפעולות הבאות:

1 עבור אל [www.lg.com](http://www.lg.com).

2 עבור אל **תמיכה** < **תמיכה בנייד** < **סינכרון מחשב**.

3 בחר את המידע על הדגם ולחץ על **בצע**.

4 גלול מטה, בחר בכרטיסייה **סינכרון מחשב** < **Mac OS** < **הורדה**

כדי להוריד את LG PC Suite.

### דרישות מערכת עבור תוכנת LG PC Suite

• מערכת הפעלה: Mac OS X (10.6.8) ואילך

• זיכרון: 2GB RAM ואילך

• כרטיס גרפי: רזולוציית מסך של 1024 x 768 ומעלה וצבע 32 סיביות

• אחסון בנפח 500 MB ומעלה (ייתכן שיידרש שטח נוסף עבור

נתונים)

• תוכנות דרושות: מנהל התקן עבור LG United Mobile

### הערה: מנהל התקן USB משולב של LG

נדרש מנהל התקן USB משולב של LG לצורך חיבור מכשיר LG ומחשב. הוא

מותקן באופן אוטומטי בעת התקנת יישום התוכנה LG PC Suite.

## עדכון תוכנת הטלפון

עדכוני תוכנה מהאינטרנט עבור הטלפון של LG

למידע נוסף על עדכוני תוכנה, בקר באתר  
<http://www.lg.com/common/index.jsp>.

תכונה זו מאפשרת לך לעדכן בנוחות את הקושחה של הטלפון לגרסה חדשה יותר מהאינטרנט, ללא צורך לבקר במרכז שירות. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

מאחר שעדכון הקושחה של הטלפון הנייד דורש את תשומת לבו המלאה של המשתמש במשך כל תהליך העדכון, הקפד לקרוא את כל ההוראות וההערות שיופיעו בכל שלב לפני שתתקדם הלאה. חשוב לזכור שהסרת כבל ה-USB או הסוללה במהלך השדרוג עלולה לגרום נזק חמור לטלפון הנייד.

**הערה:** LG שומרת על זכותה, על פי שיקול דעתה הבלעדי, להעמיד את עדכוני הקושחה לרשות דגמים נבחרים בלבד ואינה ערבה לזמינות הגרסה החדשה של הקושחה לכל דגמי הטלפון.

עדכוני תוכנה דרך **Over-the-Air (OTA)** עבור הטלפון של LG

תכונה זו מאפשרת לך לעדכן בנוחות את תוכנת הטלפון לגרסה חדשה יותר דרך OTA, מבלי להתחבר באמצעות כבל USB. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

תחילה עליך לבדוק את גירסת התוכנה בטלפון הנייד: **הגדרות** < הכרטיסייה **כללי** < **אודות הטלפון** < **מרכז עדכונים** < **עדכון תוכנה** < **חפש עדכונים כעת**.

**הערה:** הנתונים האישיים שלך נשמרים לזיכרון הפנימי של הטלפון—לרבות פרטי חשבון Google וכל חשבון אחר, נתונים והגדרות של המערכת/היישומים שלך, יישומים שהורדו ורישיון ה-DRM שלך—עשויים ללכת לאיבוד בתהליך עדכון התוכנה של הטלפון. לפיכך, LG ממליצה לך לגבות את הנתונים האישיים שלך לפני שתעדכן את תוכנת הטלפון. LG לא תישא באחריות לאובדן נתונים אישיים כלשהם.

**הערה:** תכונה זו תלויה בספק שירותי הרשת, באזור ובמדינה שלך.

## אודות מדריך למשתמש זה

- לפני השימוש במכשיר, אנא קרא בעיון מדריך זה. הדבר מבטיח שתשתמש בטלפון שלך בצורה נכונה ובטוחה.
- חלק מהתמונות ומצילומי המסך המופיעים במדריך זה עשויים להיראות שונים בטלפון שלך.
- התוכן שלך עשוי להיות שונה מהמוצר הסופי או מתוכנה שסופקה על-ידי ספקי שירות או מפעילים. תוכן זה כפוף לשינויים ללא הודעה מראש. לקבלת הגרסה העדכנית של מדריך זה, בקר באתר האינטרנט של LG בכתובת [www.lg.com](http://www.lg.com).
- היישומים בטלפון שלך והפונקציות שלהם עשויים להשתנות בהתאם למדינה, לאזור או למפרטי החומרה. LG לא תישא באחריות לבעיות ביצועים הנובעות משימוש ביישומים שפותחו על-ידי ספקים פרט ל-LG.
- LG לא תישא באחריות לבעיות ביצועים או חוסר תאימות הנובעות מהגדרות רישום ערוכות או מתוכנת מערכת הפעלה ששונתה. כל ניסיון להתאים אישית את מערכת ההפעלה שלך עלול לגרום למכשיר או ליישומים שלו לפעול באופן שגוי.
- תוכנות, שמע, טפטים, תמונות ופריטי מדיה אחרים שסופקו יחד עם המכשיר שלך מורשים לשימוש מוגבל. אם תחלץ חומר זה ותשתמש בו למטרות מסחריות או אחרות, אתה עלול להפר חוקי זכויות יוצרים. כמשתמש, אתה נושא באחריות מלאה ובלעדית לשימוש לא חוקי במדיה.
- חיובים נוספים עשויים לחול עבור שירותי נתונים, כגון שליחת הודעות, העלאה, הורדה, סינכרון אוטומטי ושירותי מיקום. כדי להימנע מחיובים נוספים, בחר תוכנית נתונים המתאימה לצרכיך. פנה אל ספק השירות לקבלת פרטים נוספים.

## סימנים מסחריים

LG והלוגו של LG הם סימני מסחר רשומים של LG Electronics. כל יתר הסימנים המסחריים וזכויות היוצרים הם רכושם של בעליהם בהתאמה.

**DivX HD**

התקן DivX Certified® זה עבר בדיקות מחמירות כדי לוודא שהוא מפעיל סרטון וידאו מסוג DivX®.

כדי להפעיל סרטי DivX שנרכשו, תחילה רשום את ההתקן שלך בכתובת [vod.divx.com](http://vod.divx.com). אתר את קוד הרישום במקטע DivX VOD שבתפריט ההגדרה של ההתקן.

**DivX Certified® להפעלת סרטוני וידאו DivX® עד HD 720p, כולל תוכן מעולה.**

**DivX®, DivX Certified® והסמלים המשויכים הם סימני מסחר של DivX, LLC והשימוש בהם כפוף לרישיון.**

**DOLBY DIGITAL PLUS Dolby Digital Plus**

**Dolby, Dolby Laboratories. Dolby מיוצר ברישיון מטעם Dolby Digital Plus וסמל ה-D הכפול הם סימנים מסחריים של Dolby Laboratories.**

האביזרים הבאים זמינים לשימוש עם הטלפון שלך. **(האביזרים המתוארים להלן עשויים להיות אופציונליים.)**

- מתאם נסיעות
- מדריך להתחלה מהירה
- אוזניות סטריאו
- כבל USB

### הערה:

- השתמש תמיד באביזרים מקוריים של LG. הפריטים שסופקו עוצבו אך ורק עבור מכשיר זה, וייתכן שהם לא יהיו תואמים למכשירים אחרים.
- הפריטים שסופקו עם המכשיר וכל האביזרים הזמינים עשויים להשתנות בהתאם לאזור או לספק השירות.

בפרק זה מוצגות מספר בעיות שאתה עלול להיתקל בהן במהלך השימוש בטלפון. בעיות מסוימות יצריכו פנייה לספק השירות, אך את רובן תוכל לפתור בקלות בעצמך.

הודעה	גורמים אפשריים	אפשרויות לתיקון הבעיה
שגיאת כרטיס SIM או USIM	אין כרטיס SIM או USIM בטלפון, או שהוא הוכנס בצורה לא נכונה.	ודא שכרטיס ה-SIM הוכנס כהלכה.
אין חיבור לרשת/ החיבור חלש	האות חלש או שאתה נמצא מחוץ לטווח הרשת של ספק השירות.	התקרב לחלון או צא לאזור פתוח. בדוק את מפת הכיסוי של מפעיל הרשת הסלולרית.
	המפעיל החיל שירותים חדשים.	בדוק אם גילו של כרטיס ה-SIM עולה על 12~6 חודשים. אם כן, החלף את כרטיס ה-SIM בחנות הקרובה ביותר של ספק הרשת. פנה אל ספק השירות.

אפשרויות לתיקון הבעיה	גורמים אפשריים	הודעה
אם שכחת את הקוד, פנה אל ספק השירות.	כדי לשנות קוד אבטחה, יש לאשר את הקוד החדש על-ידי הזנה חוזרת שלו.	הקודים אינם תואמים
	שני הקודים שהזנת אינם זהים זה לזה.	
פנה אל ספק השירות.	הוא לא נתמך על-ידי ספק השירות או שנדרש רישום עבורו.	לא ניתן להגדיר יישומים
הרשת החדשה אינה מורשית.	שגיאת חיוג	לא ניתן לבצע שיחות
בדוק אם קיימות מגבלות חדשות.	הוכנס כרטיס SIM או USIM חדש.	
צור קשר עם חברת הסלולר או אפק את המגבלה בעזרת PIN2.	הגעת למגבלת החיוב ששולם מראש.	
לחץ על מקש ההפעלה/כיבוי למשך שתי שניות לפחות.	מקש הדלקה/כיבוי נלחץ מהר מדי.	לא ניתן להפעיל את הטלפון
טען את הסוללה. בדוק את מחוון הטעינה בתצוגה.	הסוללה לא נטענה.	

הודעה	גורמים אפשריים	אפשרויות לתיקון הבעיה
שגיאת טעינה	הסוללה לא נטענה.	טען את הסוללה.
	הטמפרטורה החיצונית גבוהה או נמוכה מדי.	ודא שהטלפון נטען בטמפרטורה הרגילה.
	בעיית מגעים	בדוק את המטען ואת החיבור שלו לטלפון.
	אין מתח	חבר את המטען לשקע אחר.
	המטען פגום	החלף את המטען.
	מטען לא מתאים	השתמש רק באביזרים מקוריים של LG.
	המספר לא מורשה.	פונקציית המספר הקבוע מראש פועלת.
לא ניתן לקבל/ לשלוח הודעות טקסט ותמונות	הזיכרון מלא	מחק חלק מההודעות השמורות בטלפון.
הקבצים אינם נפתחים	אין תמיכה בתבנית הקובץ	בדוק את תבניות הקובץ הנתמכות.

אפשרויות לתיקון הבעיה	גורמים אפשריים	הודעה
<p>אם אתה משתמש בנרתיק או כיסוי להגנה, ודא שהוא אינו מכסה את האזור שסביב חיישן הקרבה. ודא שהאזור שמסביב לחיישן הקרבה נקי.</p>	<p>בעיה בחיישן הקרבה</p>	<p>המסך אינו נדלק כאשר מתקבלת שיחה.</p>
<p>בדוק את מצב ההגדרות בתפריט הצליל כדי לוודא שאינך במצב רטט או שקט.</p>	<p>מצב רטט</p>	<p>אין צליל</p>
<p>נסה לעדכן את התוכנה דרך אתר האינטרנט.</p>	<p>בעיה של נתק בתוכנה</p>	<p>ניתוק או קפיאה</p>

תשובה	שאלה	קטגוריה
באפשרותך לחבר התקן שמע של Bluetooth, כגון אזניית סטריאו/מונו או דיבורית.	אילו פונקציות זמינות דרך Bluetooth?	Bluetooth מכשירים
אפשר לסנכרן נתוני אנשי קשר בין הטלפון ו-Gmail™.	איך ניתן לגבות את אנשי הקשר?	אנשי קשר גיבוי
קיים רק סינכרון דו כיווני.	האם יש אפשרות להגדיר סינכרון חד כיווני עם Gmail?	סינכרון
תיבת הדואר הנכנס מסונכרנת באופן אוטומטי. אתה יכול לראות תיקיות אחרות על-ידי הקשה על הסמל ☰ ובחירה באפשרות <b>תיקיות</b> כדי לבחור תיקייה.	האם ניתן לסנכרן את כל תיקיות הדוא"ל?	סינכרון
לאחר שנכנסת ל-Gmail, אין צורך להיכנס ל-Gmail שוב.	האם עליי להיכנס ל-Gmail בכל פעם שברצוני לגשת אל Gmail?	כניסה ל-Gmail
לא, הטלפון לא תומך בסינון הודעות דוא"ל.	האם ניתן לסנן הודעות דוא"ל?	חשבון Google
הודעת הדוא"ל נשמרת באופן אוטומטי כטייטה.	מה קורה כאשר מפעילים יישום אחר בשעה שכותבים הודעת דוא"ל?	דוא"ל
אין מגבלה על גודל הקובץ.	האם יש מגבלת גודל קובץ לשימוש בקובצי MP3 כרינגטונים?	צלצול

תשובה	שאלה	קטגוריה
אפשר לראות רק את שעת קבלת ההודעה של הודעות שהתקבלו באותו יום.	הטלפון לא מציג את שעת קבלת ההודעה עבור הודעות שהתקבלו לפני 24 שעות. איך אפשר לשנות זאת?	שעת ההודעה
ניתן להתקין ולהשתמש בכל יישום שזמין ב-Play Store™ ותואם לחומרה.	האם ניתן להתקין בטלפון יישום ניווט אחר?	ניווט
ניתן לסנכרן רק אנשי קשר מ-Gmail ומ-MS Exchange server (שרת דוא"ל של חברה).	האם ניתן לסנכרן את אנשי הקשר מכל חשבונות הדואל שלי?	סינכרון
אם העברת איש קשר באמצעות הפונקציות 'המתן' ו'השהה' שנשמרו במספר, לא תוכל להשתמש בתכונות אלה. עליך לשמור כל מספר שוב. כיצד לשמור עם פונקציות המתן והשהה? 1. מהמסך הראשי, הקש על  . 2. חייג את המספר, ולאחר מכן הקש על  . 3. הקש על <b>הוסף השהייה של 2 שניות</b> או על <b>הוסף המתנה</b> .	האם ניתן לשמור איש קשר שבוצעו עליו פעולות המתן והשהה?	המתן והשהה
ניתן להגדיר את הטלפון כך שהוא ידרוש הזנת תבנית ביטול נעילה כתנאי לגישה או לשימוש בטלפון.	מהן פונקציות האבטחה של הטלפון?	אבטחה

1. מהמסך הראשי, הקש והחזק את .
  2. הקש על הגדרות מערכת < הכרטיסייה תצוגה < מסך נעילה.
  3. הקש על בחירת נעילת מסך < **תבנית**. בפעם הראשונה שתעשה זאת תופיע הדרכה קצרה על יצירת תבנית של ביטול נעילה.
  4. הגדר את התבנית שלך על-ידי ציור שלה פעם אחת ולאחר מכן פעם שניה לאישור.
- יש לנקוט אמצעי זהירות בעת שימוש בנעילת תבנית.
- חשוב מאוד לזכור את תבנית ביטול הנעילה שהוגדרה. לא תוכל יותר לגשת אל הטלפון אם אתה משתמש בתבנית שגויה חמש פעמים. לרשותך חמישה ניסיונות להזין את תבנית ביטול הנעילה, קוד ה-PIN או הסיסמה. אם ניצלת את כל 5 הניסיונות, תוכל לנסות שוב לאחר 30 שניות. (לחלופין, אם קבעת מראש את קוד ה-PIN לגיבוי, תוכל להשתמש בקוד זה כדי לבטל את נעילת התבנית).

ביטול נעילה  
תבנית


איך יוצרים תבנית  
ביטול נעילה?

תשובה	שאלה	קטגוריה
<p>אם שכחת את התבנית שלך:  אם נכנסת לחשבון Google בטלפון,  אך לא הצלחת להזין את התבנית  הנכונה 5 פעמים, הקש על הלחצן  'שכחת את התבנית?'. לאחר מכן  תידרש להיכנס לחשבון Google שלך  כדי לבטל את נעילת הטלפון. אם  לא יצרת חשבון Google בטלפון או  ששכחת אותו, עליך לבצע איפוס  קשיח.</p> <p>זהירות: אם תבצע איפוס לנתוני היצרן,  כל יישומי המשתמש ונתוני המשתמש  יימחקו. זכור לגבות את כל הנתונים  החשובים לפני ביצוע איפוס להגדרות  היצרן.</p>	<p>מה עליי לעשות אם  שכחתי את תבנית  ביטול הנעילה ולא  יצרתי את חשבון  Google בטלפון?</p>	<p>ביטול נעילה  תבנית</p>
<p>כן, תקבל התראה.</p>	<p>האם אדע שהזיכרון  שלי מלא?</p>	<p>זיכרון</p>
<p>לטלפון יש יכולות רב-לשוניות.  כדי לשנות את השפה:  1. במסך הראשי, הקש והחזק את  הסמל <input type="checkbox"/> והקש על <b>הגדרות</b>  <b>מערכת</b>.  2. הקש על הכרטיסייה <b>כללי</b> &lt; <b>שפה</b>  <b>וקלט</b> &lt; <b>שפה</b>.  3. הקש על השפה הרצויה.</p>	<p>האם ניתן לשנות את  השפה של הטלפון?</p>	<p>תמיכה  בשפה</p>
<p>תצורת הגישה ל-VPN שונה מחברה  לחברה. כדי לקבוע תצורה של גישה  ל-VPN מהטלפון, עליך לקבל את  המידע ממנהל הרשת בחברה שלך.</p>	<p>כיצד מגדירים VPN?</p>	<p>VPN</p>

תשובה	שאלה	קטגוריה
<p>1. מהמסך הראשי, הקש והחזק את <input type="checkbox"/>.</p> <p>2. הקש על <b>הגדרות מערכת</b> &lt; הכרטיסייה <b>תצוגה</b>.</p> <p>3. הקש על <b>כיבוי מסך אוטומטי</b>.</p> <p>4. הקש על פרק הזמן המועדף עד לכיבוי התאורה האחורית של המסך.</p>	<p>המסך שלי כבה לאחר 15 שניות בלבד. איך ניתן לשנות את פרק הזמן עד לכיבוי אור הרקע במסך?</p>	<p>כיבוי אוטומטי של המסך</p>
<p>בעת שימוש בנתונים, ייתכן שברירת המחדל של הטלפון תהיה חיבור ה-Wi-Fi (אם קישוריות Wi-Fi מוגדרת בטלפון שלך כמופעלת). עם זאת, לא מתקבלת התראה על כך שהטלפון עבר מקישוריות אחת לאחרת. כדי לדעת איזה חיבור נתונים משמש כעת, הבט בסמל של הרשת הניידת או בסמל Wi-Fi המוצג בראש המסך.</p>	<p>כאשר גם Wi-Fi וגם רשת ניידת זמינים, באיזה שירות ישתמש הטלפון?</p>	<p>Wi-Fi ורשת ניידת</p>
<p>כן. פשוט הקש והחזק את הסמל עד שיופיע סמל פח האשפה בקצה העליון ובמרכז המסך. ואז, מבלי להרים את האצבע, גררו את הסמל לפח האשפה.</p>	<p>האם אפשר להסיר יישום מהמסך הראשי?</p>	<p>המסך הראשי</p>
<p>1. מהמסך הראשי, הקש והחזק את <input type="checkbox"/>.</p> <p>2. הקש על <b>הגדרות מערכת</b> &lt; הכרטיסייה <b>כללי</b> &lt; <b>יישומים</b> &lt; <b>שהורדו</b>.</p> <p>3. הקש על היישום, ולאחר מכן הקש על <b>הסר התקנה</b>.</p>	<p>הורדתי יישום שגרם הרבה שגיאות. איך אפשר להסיר אותו?</p>	<p>יישום</p>

קטגוריה	שאלה	תשובה
מטען	האם ניתן לטעון את הטלפון באמצעות כבל USB מבלי להתקין את מנהל ההתקן הדרוש של USB?	כן, הטלפון נטען באמצעות כבל ה-USB בין אם מנהלי ההתקנים הדרושים מותקנים ובין אם לא.
התראה	האם ניתן להשתמש בקובצי מוסיקה להתראה?	כן. לאחר שמירת קובץ מוסיקה כרינגטון, באפשרותך להשתמש בו להתראה. 1. גע ברציפות בשיר ברשימת ספרייה. בתפריט שנפתח, הקש על <b>הגדר כצלצול &lt; רינגטון טלפון או רינגטון איש הקשר.</b> 2. במסך 'הגדרת שיעון מעורר', בחר את השיר כרינגטון.
התראה	האם ההתראות ישמעו בכל מקרה, או שגם ההתראות יכובו כאשר הטלפון מכובה?	לא, אין תמיכה בכך.
התראה	אם עוצמת הצלצול הוגדרה ככבויה או רטט, האם אשמע את ההתראה?	ההתראה מתוכנתת להישמע אפילו בתרחישים אלו.
תצוגה	ניסיתי להגדיר את בהירות המסך למקסימום אך הוא עדיין נראה כהה. כיצד אוכל להבהיר את המסך?	1. מהמסך הראשי, הקש והחזק את <input type="checkbox"/> . 2. הקש על <b>הגדרות מערכת &lt; הכרטיסייה תצוגה &lt; כוון אוטומטית את גוון המסך.</b> 3. הקש על תיבת הסימון כדי לבטל את הפונקציה.

תשובה	שאלה	קטגוריה
<p>אם הטלפון אינו משתחזר למצבו המקורי, יש להשתמש באיפוס קשיח (איפוס להגדרות יצרן) כדי לאתחל אותו.</p>	<p>כיצד ניתן לבצע שחזור נתוני יצרן אם אינני יכול לגשת לתפריט ההגדרות של הטלפון?</p>	<p>שימוש באיפוס קשיח (איפוס להגדרות היצרן)</p>

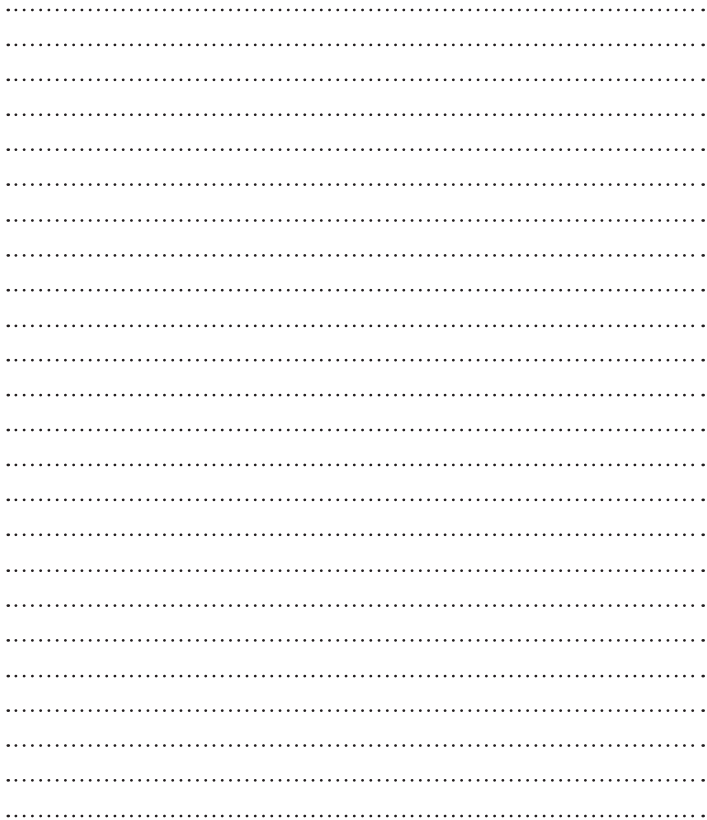

# User Guide

ENGLISH

- Some content and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- Available accessories may vary depending on your region, country or service provider.
- This handset is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Copyright ©2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

# Table of contents

<b>Guidelines for safe and efficient use</b> .....	<b>4</b>	<b>Google account setup</b> .....	<b>39</b>
<b>Important notice</b> .....	<b>14</b>	<b>Connecting to Networks and Devices</b> ....	<b>40</b>
<b>Getting to know your phone</b> .....	<b>18</b>	Wi-Fi .....	40
Phone layout.....	18	Bluetooth.....	41
Installing the SIM or USIM card .....	20	Wi-Fi Direct .....	42
Charging the phone .....	21	SmartShare .....	43
Inserting a memory card.....	22	Transferring data between a PC and your device.....	44
Unlocking the screen.....	23	<b>Calls</b> .....	<b>45</b>
<b>Your Home screen</b> .....	<b>24</b>	Making a call.....	45
Touch screen tips .....	24	Calling your contacts .....	45
Home screen .....	25	Answering and rejecting a call .....	45
Customizing the Home screen .....	26	Making a second call.....	46
Returning to recently-used applications .....	27	Viewing your call logs .....	46
Notifications panel.....	28	Call settings.....	46
On-screen keyboard .....	31	<b>Contacts</b> .....	<b>47</b>
<b>Special Features</b> .....	<b>32</b>	Searching for a contact.....	47
Gesture shot.....	32	Adding a new contact .....	47
Glance View.....	32	Favorites contacts.....	47
Gesture View .....	33	Creating a group.....	48
KnockON .....	34	<b>Messaging</b> .....	<b>49</b>
Knock Code .....	34	Sending a message .....	49
Dual window.....	35	Conversation view .....	50
QuickMemo+.....	36	Changing message settings.....	50
QSlide.....	37		
QuickRemote.....	38		

<b>E-mail</b> .....	<b>51</b>	<b>Settings</b> .....	<b>72</b>
Managing email accounts.....	51	Networks.....	72
Working with account folders.....	51	Sound.....	75
Composing and sending email.....	52	Display.....	76
		General.....	79
<b>Camera and Video</b> .....	<b>53</b>	<b>PC software (LG PC Suite)</b> .....	<b>85</b>
Camera options on the viewfinder.....	53	For Windows OS.....	85
Using the advanced settings.....	54	For Mac OS.....	86
Taking a photo.....	54	<b>Phone software update</b> .....	<b>88</b>
Once you have taken a photo.....	55	Phone software update.....	88
Recording a video.....	55	<b>About this user guide</b> .....	<b>90</b>
After recording a video.....	56	About this user guide.....	90
Gallery.....	59	Trademarks.....	91
		DivX HD.....	91
<b>Multimedia</b> .....	<b>62</b>	Dolby Digital Plus.....	91
Music.....	62	<b>Accessories</b> .....	<b>92</b>
		<b>Troubleshooting</b> .....	<b>93</b>
<b>Utilities</b> .....	<b>64</b>	<b>FAQ</b> .....	<b>97</b>
Clock.....	64		
Calculator.....	65		
Calendar.....	65		
Voice Recorder.....	66		
Tasks.....	66		
Voice Search.....	67		
Downloads.....	67		
FM radio.....	67		
LG SmartWorld.....	68		
<b>Web Browser</b> .....	<b>69</b>		
Internet.....	69		
Chrome.....	71		

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-H955 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.471 W/kg (10 g) and when worn on the body is 0.418 W/Kg (10 g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance

### **WARNING**

#### **Notice for Battery replacement**

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by non-qualified professional can cause damage to your device.

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- The flexibility of this product is limited to withstand ordinary and normal use. This phone may be bent flat up to 180 degrees for a limited period of time but should not be bent inward. Damages caused by misuse, including but not limited to intentionally bending or continually exerting force on the product, may lead to permanent damage to the display or other parts and functions of the phone.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone and charger (fast charger) during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

## Efficient phone operation

### Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

## Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

**NOTE:** Excessive sound pressure from earphones and headphones can cause hearing loss.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
- For your safety, do not remove the battery incorporated in the product.
- Do not leave the phone in hot or cold places, as this may deteriorate phone performance.
- Do not replace the battery by yourself. The battery can be damaged, which can cause overheat and injury. The battery must be replaced by the authorized service provider. The battery should be recycled or disposed separately from household waste.


## Laser safety statement

### Caution!

This product employs a laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure or make direct contact with the laser.

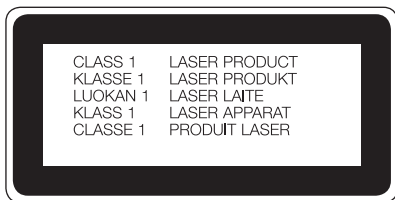

## Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

## HOW TO UPDATE YOUR DEVICE

Access to latest firmware releases, new software functions and improvements.

- **Select the software update in settings menu on your device.**
- **Update your device by connecting it to your PC.** For more information about using this function, please visit <http://www.lg.com/common/index.jsp> select country and language.

## DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-H955** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

## Important notice




### Please read this before you start using your phone!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

## 1. Phone memory

When there is less than 10MB of space available in your phone memory, your phone cannot receive new messages. You must check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab (if necessary) >  > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

## 2. Optimizing battery life

Extend your battery's power by turning off features that you do not need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth or Location services (including GPS), turn them off.

- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.

**NOTE:**

- Some applications you download may consume battery power.
- While using downloaded applications, check the battery charge level.

**NOTE:** If you accidentally press the **Power/Lock Button** while the device is in your pocket, the screen will turn off automatically in order to save battery power.

### 3. Before installing an open source application and OS



**WARNING**

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.



**WARNING**

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, the phone may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

## 4. Using the Hard Reset (Factory Reset)

If your phone needs to be restored to its original settings and condition, use a Hard Reset (Factory Reset).

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock Button + Volume Down Button** on the back of the phone.
- 3 Release the **Power/Lock Button** only when the boot logo is displayed, then immediately press and hold the **Power/Lock Button** again.
- 4 Release all Buttons when the Factory hard reset screen is displayed.
- 5 Press the **Volume Buttons** to highlight **YES**, then press the **Power/Lock Button** to continue.
- 6 Press the **Volume Buttons** to highlight **YES** once more, then press the **Power/Lock Button** to confirm.





### WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

## 5. Opening and switching applications

Multitasking is easy with Android; you can keep more than one application running at the same time. There is no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to make sure that idle applications don't consume resources unnecessarily.

- 1 Tap . App previews of recently used applications will be displayed.
- 2 Tap the application you want to access. This does not stop the previous app from running in the background. Make sure to tap  to back out of a window after using it.
  - To close an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.


## 6. If the screen freezes

**If the screen freezes or the phone does not respond when you try to operate it:**

Press and hold the **Power/Lock Button** and **Volume Down Button** for about 10 seconds to reset your phone. To turn your phone off, press and hold the **Power/Lock Button** and the **Volume Down Button** for about 20 seconds. If it still does not work, please contact the service center.

# Getting to know your phone

## Phone layout

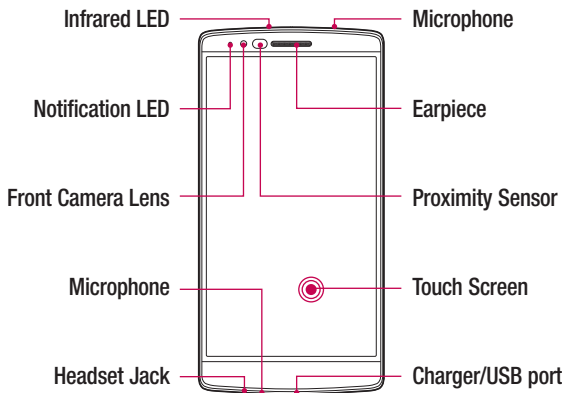


### NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

### WARNING

Placing a heavy object on the phone or sitting on it can damage the display and touch screen functions. Do not cover the proximity sensor with screen protectors or any other type of protective film. This could cause the sensor to malfunction.

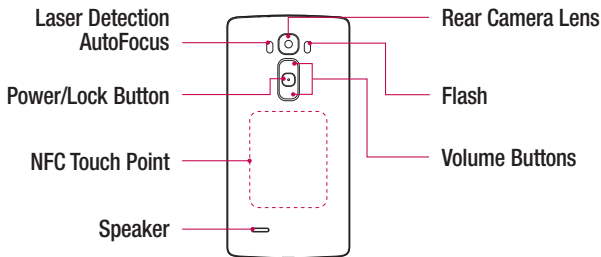

**Power/Lock Button**

- Turn your phone on/off by pressing and holding this button
- Short press to lock/unlock the screen

**Volume Buttons**

**(While screen is off)**

- Long press the Up key to launch QuickMemo+
- Long press the Down key to launch Camera



**WARNING**

Be careful not to damage the NFC touch point on the phone, as this is part of the NFC antenna.

**NOTE:** The back cover of this product applies a “self-healing” technology, which self-repairs minor scratches in just a few minutes. Minor scratches are those cause by ordinary and normal use of the phone. Scratches caused by abrasive surface, misuse, including but not limited to intentional scratches, and damages caused by a fall or dropping the product, may not disappear. The “self-healing” results may vary depending on the extent of the damage as well as other conditions. Any warranty on the “self-healing” is hereby expressly excluded.


**NOTE: LDAF Sensor (Laser Detection AutoFocus Sensor)**

By detecting the distance with laser, when you recording with the rear camera lens, LDAF Sensor enables you to focus the long or close range more fast and accurately.


## Installing the SIM or USIM card

Before you can start exploring your new phone, you need to set it up.

- 1 To remove the back cover, hold the phone firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in the figure below.

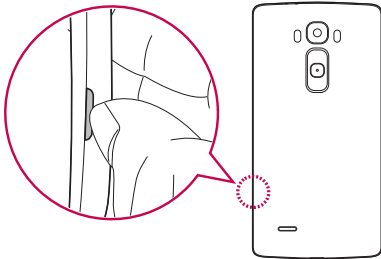


- 2 Slide the SIM card into the lower slot for the SIM card as shown in the figure. Make sure the gold contact area on the card is facing downward.

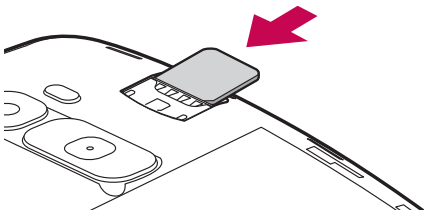

**NOTE:** Only the microSIM cards work with the device.

- 3 To replace the cover onto the device, align the back cover over the battery compartment (1) and press it down until it clicks into place (2).

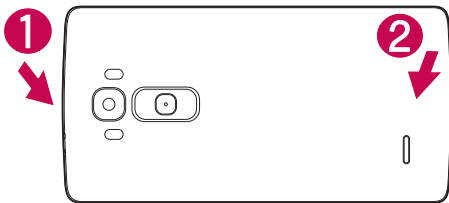


## Charging the phone

Charge the battery before using it for first time. Use the charger to charge the battery.

### WARNING

Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay or pop up message regarding slow charging, Or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is at the bottom of the phone. Insert the charger and plug it into a power outlet.

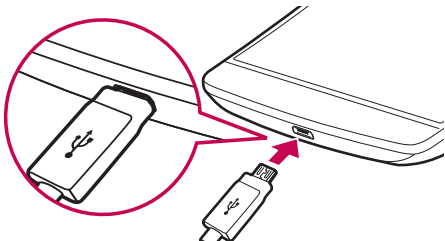

**NOTE:** Do not open the back cover while your phone is charging.

## Inserting a memory card

Your device supports up to a 32 GB microSD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.


### **WARNING**

Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.

### **NOTE:**

- The device supports the FAT and the exFAT file systems for memory cards. When inserting a card formatted in a different file system, the device asks to reformat the memory card.
- Frequent writing and erasing of data shortens the lifespan of memory cards.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-coloured contacts facing downwards.

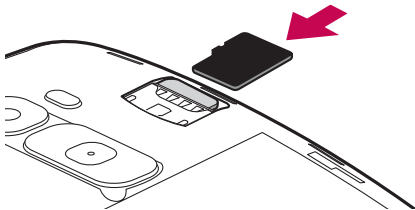

- 3 Replace the back cover.

## Unlocking the screen

By default, your screen will lock after a period of inactivity, then turn off.




### Unlocking the screen

- 1 Press the **Power/Lock Button** or double-tap on the screen.
- 2 Swipe the screen in any direction to unlock it.

#### TIP! Smart Lock

You can use **Smart Lock** to make unlocking your phone easier. You can set it to keep your phone unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognises your face.

#### Setting up Smart Lock

- 1 Tap  >  > **Apps** tab > .
- 2 Tap **Display** tab > **Lock screen** > **Smart Lock**.
- 3 Before you add any trusted devices, trusted places, or trusted face, you need to set up a screen lock (pattern, PIN, or password).

## Touch screen tips


Here are some tips on how to navigate on your phone.


- **Tap or touch** – A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.
- **Touch and hold** – Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs.
- **Drag** – Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.
- **Swipe or slide** – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead).
- **Double-tap** – Double-tap to zoom on a webpage or a map (if the feature is supported by the application).
- **Pinch-to-Zoom** – Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures (if the feature is supported by the application).
- **Rotate the screen** – From many applications and menus, the physical orientation of the screen adjusts to the device's physical orientation.

### NOTE:

- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys.

## Home screen

The Home screen is the starting point for many applications and functions. It allows you to add items like app shortcuts and Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

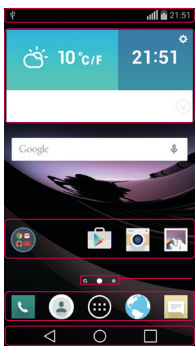

**1** Status Bar

**2** Widget

**3** Application Icons

**4** Location Indicator

**5** Quick Key Area

**6** Home touch keys

- 1** Shows phone's status information, including the time, signal strength, battery status and notification icons.
- 2** Widgets are self-contained applications that can be accessed through the Apps drawer or on the Home screen. Unlike a shortcut, a Widget can function as an on-screen application.
- 3** Tap an icon (application, folder, etc.) to open and use it.
- 4** Indicates which Home screen canvas you are currently viewing.
- 5** Provides one-touch access to the function in any Home screen canvas.

<b>6</b> ◀ <b>Back Key</b>	Returns to the previous screen. Also closes pop-up items, such as menus, dialog boxes and the on-screen keyboard. Touch and hold it to access the Dual window.
○ <b>Home Key</b>	Return to the Home screen from any screen.
□ <b>Recent Key</b>	Displays recently used applications. If you touch and hold this key, it opens a menu of available options.

## Extended Home screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets and more.

- Slide your finger left or right across the Home screen to access additional canvases.

## Customizing the Home screen

You can customize your Home screen by adding apps and widgets and changing wallpapers.

### Adding items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you want to add. You then see this added item onto the Home screen canvas.
- 3 Drag it to the desired location and lift your finger.

**TIP!** To add an application icon to the Home screen from the Apps menu, touch and hold the application you want to add.

## Removing an item from the Home screen


- **Home screen** > Touch and hold the icon you want to remove > drag it to .

## Adding an app as a Quick key


- From the Apps menu or on the Home screen, touch and hold an application icon and drag it to the Quick key area. Up to 7 apps can be added.

## Removing an app from the Quick key area



- Touch and hold the desired quick key and drag it to .

**NOTE:**  **Apps Key** cannot be removed.

## Customizing app icons on the Home screen

- 1 Touch and hold an application icon already on the Home screen canvas. The editing icon  appears in the upper-right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

## Returning to recently-used applications


- 1 Tap . A list of recently used applications will be displayed.
- 2 Tap an icon to open the application. Or tap  to return to your previous screen.

## Notifications panel

Notifications alert you to the arrival of new messages, calendar events and alarms, as well as ongoing events, such as when you are using turn-by-turn navigation.


When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons, such as Wi-Fi and battery strength shown on the right.


**NOTE:** The available options may vary depending on the region or service provider.

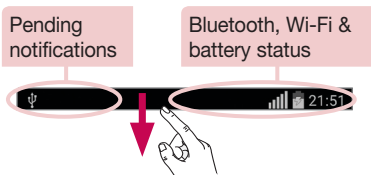

## Opening the Notifications panel

Swipe down from the Status bar to open the Notifications panel. To close the Notifications panel, touch and drag the screen toward the top of the screen.

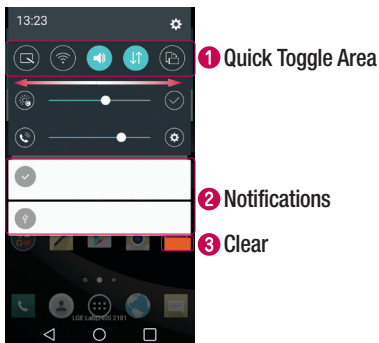












- 1 Tap each quick toggle key to turn it on/off. Touch and hold the key to access the settings menu for the function. To see more toggle keys, swipe left or right. Tap  to remove, add or rearrange toggle keys.
- 2 Current notifications are listed, each with a brief description. Tap a notification to open the corresponding application that manages it.
- 3 Tap to clear all the notifications.












## Indicator icons on the Status Bar

Indicator icons appear on the Status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Missed call
	Bluetooth is on
	System warning
	An alarm is set
	New voicemail available

Icon	Description
	A media file is currently playing
	Silent mode is enabled
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	Data is synchronizing
	Choose input method






	New text or multimedia message		Media server content sharing is on
	NFC is on		Wi-Fi hotspot is active

**NOTE:** The icon's location in the Status bar may differ according to the function or service.

## On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears on the screen when you tap an available text entry field.

### Using the keypad and entering text

-  Tap once to capitalize the next letter you type. Tap twice for all caps.
-  Tap to access the keyboard's Settings menu.
-  Tap to enter a space.
-  Tap to create a new line.
-  Tap to delete the previous character.

### Entering accented letters


When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the pop-up appears and displays related special characters. Without lifting the finger, drag your finger to the desired special character.

## Special Features


### Gesture shot

Take a picture with a hand gesture. To take a photo, raise your hand until the front camera detects it and a box appears on the screen.

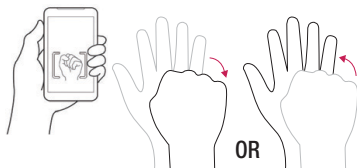




### Glance View

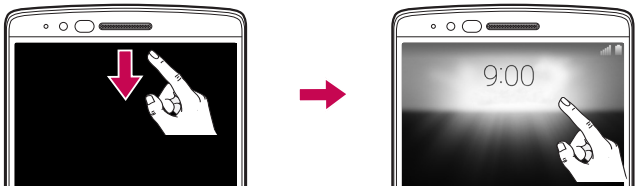
When the phone screen is off, you can see the Status bar, time and date by dragging your finger down on the screen.



## Gesture View

After taking a photo with the front camera lens, you can automatically check the captured photo with this gesture.

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Take a picture with the front camera.
- 3 After taking the picture, bring the phone close to your face. The captured photo will be displayed.

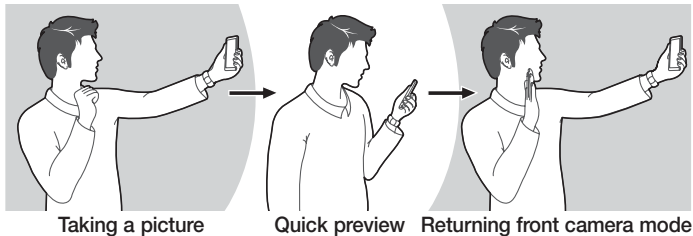

### NOTE:

- Depends on the speed and angle of the gesture, this feature may not work properly.
- When the angle is changed after Quick preview, it will go back to the camera mode. You should go to Gallery to view the picture again.

## KnockON

You can wake up, or turn off, the screen as easily as double-tapping the screen. While the screen is off, and idle, double-tap the center screen quickly to wake the screen. To turn the screen off, double-tap the Status bar in any screen (except on the camera viewfinder) or empty area on the Home screen.




**NOTE:** When using KnockOn to wake the screen, make sure you do not cover the proximity sensor. Doing so will prevent the screen from turning on. This feature is designed to prevent the device turning on inadvertently in your pocket or storage location.

## Knock Code

The Knock Code feature allows you to wake and unlock the screen with your own Knock Code pattern. When enabled, Knock Code divides the screen into 4 parts and uses your unique combination of taps to secure your device. You can disable this feature in the Lock screen settings.

**NOTE:**

- If you enter an incorrect Knock Code combination 6 times, it will be necessary to use your Google account log in or backup PIN.
- Use the fingertip instead of finger nail to tap the screen for turning it on or off.
- When the Knock Code is not in enabled, you can use Knock On function by tapping the screen.


- 1 Tap  >  > **Apps** tab (if necessary) >  > **Display** tab > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Follow the on-screen steps to set your Knock Code.
- 3 Tap Done when you have finished.


### Unlocking the screen using the Knock Code






You can wake up and unlock the screen by tapping the Knock Code, set up in the previous section, when the screen is off.

## Dual window

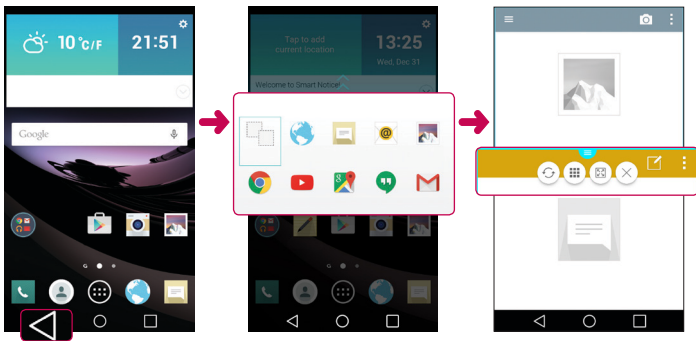


This feature allows you to multi-task by splitting up the screen into two, allowing you to use two compatible applications at the same time.

- 1 Touch and hold the  to split the screen.
- 2 Tap or drag the app icon for the corresponding application you wish to use.



-  : Tap to view the Dual window menu options, or drag to resize the split screens.
-  : Switch two screens.
-  : View the app list.
-  : Change the selected window to full screen.
-  : Close the currently selected app window.

**NOTE:** You can enable or disable Dual window through the Settings menu.

- 1 Tap  >  > **Apps** tab (if necessary) >  > **General** tab > **Dual window**.
- 2 Slide the toggle key to **On** or **Off**.

## QuickMemo+

The **QuickMemo+** feature allows you to create memos and capture screen shots. Capture screens, draw on them and share them with family and friends with QuickMemo+.






OR



- 1 (While screen is off) Press and hold the Volume Up button.


OR

(While the screen is on) Touch and slide the Status bar downward and tap .

- 2 Use the menu to select from the available options **Pen type**, **Color**, **Eraser** and create a memo.
- 3 Tap  to save the memo. To exit QuickMemo+ at any time, tap .

## QSlide

From any screen, use the Notification panel to easily access and use the Notepad, Calendar, Calculator, and more with QSlide.

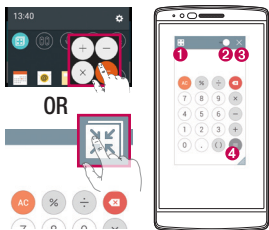



1		Tap to expand the window to full window size.
2		Tap to adjust the window's transparency.
3		Tap to close the QSlide window.
4		Drag to adjust the size.

- 1 Touch and slide the status bar downward > tap **QSlide** to view the available QSlide apps. Also, while using applications that support QSlide, tap . The function is displayed as a small window on your screen.
- 2 You can use and tap the screen under the **QSlide** windows when the transparency bar is not full .


**NOTE:** QSlide can support up to one window at the same time.

## QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV, set-top box and audio system, and more.

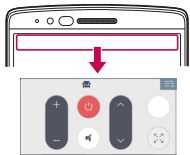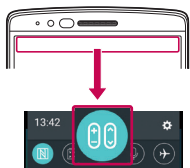

### Set up

- 1 Touch and slide the Status bar downward and tap  > **ADD REMOTE.**

### OR

Tap  >  > **Apps** tab (if necessary) >  > tap .

- 2 Select the type and brand of the device, then follow the on-screen instructions to configure the device.

### Access your QuickRemote

- 3 Once you have completed the initial set up, you can easily access the QuickRemote from the Notification panel. Open the Notification panel and use the QuickRemote functions.

**NOTE:** The QuickRemote operates the same way as an ordinary remote control infrared (IR) signals. Be careful not to cover the infrared sensor at the top of the phone when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

# Google account setup

When you first turn on your phone, you have the opportunity to sign into your Google Account and select how you want to use certain Google services.

## Setting up your Google account

- During the initial boot up of your device, ensure your device is connected to the Web. Then, sign into a Google Account from the prompted set-up screen.

**OR**

- After having exited the Startup Wizard, tap  >  >  > **General** > **Accounts & sync** > **Add Account** > **Google**.

If you already have a Google account, enter your email address and tap **NEXT**.

Once you have set up your Google account on your phone, your phone will automatically synchronize with your Google account on the Web (if data connection is available).

Depending on your synchronization settings, your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your phone.




After signing in, you can use Gmail™ and take advantage of Google services on your phone.

# Connecting to Networks and Devices

## Wi-Fi

You can use high-speed Internet access while within the coverage of the wireless access point (AP).





### Connecting to Wi-Fi networks

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Wi-Fi**.
- 2 Set **Wi-Fi** to **ON** to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 3 Tap a network to connect to it.
  - If the network is secured with a lock icon, you will need to enter a security key or password.

**NOTE:** The Status bar displays icons that indicate Wi-Fi status.

**NOTE:** If you are out of the Wi-Fi zone or have set Wi-Fi to **OFF**, the device may automatically connect to the Web using mobile data, which may incur data charges.

### **TIP!** How to obtain the phone's MAC address

Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Wi-Fi** >  > **Advanced Wi-Fi** > **MAC address**.




## Bluetooth

You can use Bluetooth to connect with headsets, sound systems, or even to exchange data between near devices.

### NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured.
- If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

### Pairing your phone with another Bluetooth device

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Bluetooth**.
- 2 Set **Bluetooth** to **ON**.
- 3 Tap **Search for devices** to view the devices in the Bluetooth Range.
- 4 Choose the device you want to pair with from the list and follow any subsequent instructions to complete pairing. Once the pairing is successful, your phone connects to the other device.




**NOTE:** Some devices, especially headsets or hands-free car kits, may have a default Bluetooth PIN, such as 0000.

## Sending data via Bluetooth

- 1 Using an application that supports sharing, locate the data, or file, that you want to share.
- 2 Select the **Share** option.
- 3 Select **Bluetooth**.
- 4 Select the paired Bluetooth device (or pair with a new device).

**NOTE:** The method for selecting an option may vary by data type.

## Receiving data via Bluetooth

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Bluetooth**.
- 2 Set **Bluetooth** to **ON** to turn it on.
- 3 You will receive a request to accept a pairing attempt from the sending device. Be sure to select **Accept**.

## Wi-Fi Direct

Wi-Fi Direct provides a direct connection between Wi-Fi enabled devices without requiring an access point.



### Turning on Wi-Fi Direct

- 1 Tap  >  > **Apps** tab (if necessary) >  > **Networks** tab > **Wi-Fi**.
- 2 Tap  > **Advanced Wi-Fi** > **Wi-Fi Direct**.

**NOTE:** When in this menu, your device is visible to other visible Wi-Fi Direct devices nearby.

## SmartShare

SmartShare allows you to receive multimedia content via LG phone and tablets.

- 1 While viewing the content you want to share, tap  or  > **SmartShare**.
- 2 Tap **Play** or **Beam** in the pop-up that is displayed.
  - **Play:** You can stream your content via a TV, Bluetooth speaker, etc.
  - **Beam:** You can send your content to Bluetooth devices or via SmartShare Beam\* to supported LG phones or tablets.  
\*SmartShare Beam quickly transfers multimedia contents through Wi-Fi Direct.
- 3 Tap the device you want to share from the list.
  - If the device is not displayed on the list, make sure that Wi-Fi, Wi-Fi Direct, or Bluetooth is turned on. Then tap **Rescan**.

### Enjoying content from nearby devices on your phone

- 1 To connect nearby devices to your phone, tap the **Nearby devices** option on the **Gallery** and **Music** apps.
  - Make sure that your phone and nearby devices are connected to the same Wi-Fi network and that the DLNA service on the nearby device is turned on.
- 2 Tap the device you wish to connect to.  
If the device is not listed, tap **Search nearby devices**.
- 3 After a connection is established, you can enjoy the content on your phone.

## Transferring data between a PC and your device

You can copy or move data between a PC and the device.

### Transferring data





- 1 Connect your device to a PC using the USB cable that came with your phone.
- 2 Open the Notifications panel and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.


#### NOTE:

- The LG Android Platform Driver is required to be installed on your PC to be able to detect the phone.
- Check the requirements for using **Media device (MTP)**.



Items	Requirement
OS	Microsoft Windows XP SP3, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

## Making a call

- 1 Tap  to open the dialer.
- 2 Enter the number using the dialer. To delete a digit, tap .
- 3 After entering the desired number, tap  to place the call.
- 4 To end the call, tap .

**TIP!** To enter "+" to make international calls, touch and hold .

## Calling your contacts




- 1 Tap  to open your contacts.
- 2 Scroll through the contact list. You can also enter the contact's name in the Search field or scroll along the alphabet letters on the right edge of the screen.
- 3 To place the call, tap  next to the contact you want to call.

## Answering and rejecting a call

When you receive a call, swipe  in any direction to answer the call.

Swipe  in any direction to decline the call.

## Making a second call

- 1 During your first call, tap  > **Add call**.
- 2 Enter the number and tap  to place the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 To toggle between numbers, tap the number displayed on the screen. You can also tap  to start a conference call.
- 5 To end all calls, tap **End**.


**NOTE:** You are charged for each call you make.

## Viewing your call logs

On the Home screen, tap  and select **Call logs** tab.



A list of all dialed, received and missed calls is displayed.

### TIP!

- Tap any call log entry to view the date, time and duration of the call.
- Tap , then tap **Delete all** to delete all of the recorded items.

## Call settings


You can configure phone call settings, such as call forwarding, as well as other special features offered by your carrier.

- 1 On the Home screen, tap  to open the dialer.
- 2 Tap  to display the available options.
- 3 Tap **Call settings** and configure the desired options.



# Contacts

Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

## Searching for a contact

- 1 Tap  to open your contacts.
- 2 Tap **Search contacts** and enter the contact name using the keyboard. You can also scroll along the alphabet letters on the right edge of the screen.


## Adding a new contact

- 1 Tap  and enter the new contact's number.
- 2 Tap  > **Add to Contacts** > **New contact**.
- 3 If you want to add a picture to the new contact, tap the image icon. Choose **Take photo** or **Select from Gallery**.
- 4 Enter the desired information for the contact.
- 5 Tap **Save**.


## Favorites contacts

You can classify frequently called contacts as favorites.



### Adding a contact to your favorites

- 1 Tap  to open your contacts.
- 2 Tap a contact to view its details.
- 3 Tap the star at the top right corner of the screen. The star turns yellow.

## Removing a contact from your favorites list

- 1 Tap  to open your contacts.
- 2 Tap the **Favorites** tab and choose a contact to view its details.
- 3 Tap the yellow star at the top right corner of the screen. The star turns grey color and the contact is removed from your favorites.

## Creating a group



- 1 Tap  to open your contacts.
- 2 Tap **Groups** >  > **New group**.
- 3 Enter a name for the new group. You can also set a distinct ringtone for the group.
- 4 Tap **Save** to save the group.

**NOTE:** If you delete a group, the contacts assigned to that group are not lost. They remain in your contact list.


# Messaging


Your phone combines text and multimedia messages into one intuitive, easy-to-use menu.

## Sending a message

- 1 Tap  on the Home screen and tap  to create a new message.
- 2 Enter a contact name or contact number into the **To** field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient and add more than one contact.

**NOTE:** You may be charged for each text message you send. Please consult with your service provider.

- 3 Tap the **Enter message** field and begin composing your message.
- 4 Tap  to open the messaging options.

**TIP!** You can tap  to attach a file that you want to share.

- 5 Tap **Send** to send your message.

### TIP!

- The 160-character limit may vary from country to country, depending on the language and how the text message is coded.
- If an image, video or audio file is added to a text message, it is automatically converted into a multimedia message and you may be charged accordingly.

## Conversation view

Text and multimedia messages exchanged with another party are displayed in chronological order so that you can conveniently see and find your conversations.

## Changing message settings

Your phone's messaging settings are predefined to allow you to send messages immediately. You can change the settings based on your preferences.

- Open the **Messaging** app and tap **⋮** > **Settings**.





You can use the E-mail application to read emails from services like Gmail. The E-mail application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide you with the account settings you need.

## Managing email accounts




The first time you open the **E-mail** application, a setup wizard opens to help you set up an email account.

After the initial setup, the Email app displays the contents of your inbox.





**Adding another email account:**

- Tap  >  > **Apps** tab (if necessary) > **E-mail** >  > **Settings** >  **Add account**.


**Changing an email general settings:**

- Tap  >  > **Apps** tab (if necessary) > **E-mail** >  > **Settings** > **General settings**.

**Deleting an email account:**





- Tap  >  > **Apps** tab (if necessary) > **E-mail** >  > **Settings** >  > **Remove account** > Select the account you want to delete > **Remove** > **Yes**.

## Working with account folders

To access your email account's folders, open the **Email** app and tap  > **Folders**. Each account has Inbox, Outbox, Sent and Drafts folders. Depending on the features supported by your account's service provider, you may have additional folders.

# Composing and sending email

## Composing and sending messages




- 1 While in the **E-mail** application, tap  to create a new email.
- 2 Enter an address for the email's intended recipient. As you enter text, matching addresses are proposed from your Contacts. Separate multiple addresses using semicolons.
- 3 Tap  to add a Cc/Bcc and tap  to attach files, if required.
- 4 Enter the email's text.
- 5 Tap  to send the email.

# Camera and Video


To open the Camera application, tap  >  > **Apps** tab (if necessary) > .







## Camera options on the viewfinder




- 1 Hide/Display Options** – Tap to hide/display the camera options on the viewfinder.
- 2 Flash** – Allows you to manage the camera's flash. Choose from **Off** , **On** , **Auto** .
- 3 Swap camera** – Tap to swap between the rear camera and the front camera.
- 4 Shot mode** – Allows you to select the shot mode for the picture. Choose from **Auto**, **Panorama** or **Dual**.
- 5 Settings** – Tap to adjust the camera and video settings.
- 6 Gallery** – Tap to access your Gallery.
- 7 Record** – Tap to start recording a video.
- 8 Capture** – Tap to take a photo.
- 9 Back key** – Tap to close the selected menu or exit the Camera app.

## Using the advanced settings

In the camera viewfinder, tap  to access the camera settings below.




	Combines photos taken at multiple exposures into one optimal photo to get a better photo in difficult lighting situations.
	Selects the photo resolution.
	Allows you to say a voice command to take pictures. You can say LG, Cheese, Smile, etc.
	Sets a delay after the capture key is pressed. This is ideal if you want to be in the photo or video.
	Displays grid lines to help you align your pictures and videos.
	Opens the Help guide to show how to use a function.

## Taking a photo


- 1 Open the **Camera** application and point the lens toward the subject you want to photograph.
- 2 Focus indicators will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 3 When the focus indicators turn blue, the camera has focused on your subject.
- 4 Tap  to capture the photo.

## Once you have taken a photo


Tap the image thumbnail at the bottom of the Camera screen to view the last photo you took. The following options are available.

	Tap to edit the photo.
	Tap to take another photo immediately.
	Tap to send your photo to others or share it in via any available social network services.
	Tap to delete the photo.
	Tap to access additional options.
	Tap to add the photo to your favorites.



## Recording a video

- 1 Open the **Camera** application and point the lens toward the subject you want to capture in your video.
- 2 Tap  once to start recording.

**NOTE:** The timer will be displayed on the screen.






- 3 A red light appears in the upper-right corner of the viewfinder with a timer showing the length of the video.
- 4 Tap  to stop recording.

### TIP!

-  – Tap to capture a screen shot while recording a video.
-  – Tap to pause the recording.

## After recording a video

In the viewfinder, tap the video thumbnail at the top of the screen to view the last video you recorded. The following options are available.

	Tap to record another video immediately.
	Tap to open the available sharing options (such as Messaging or Bluetooth) to share.
	Tap to delete the video.
	Tap to access additional options.
	Tap to add the video to favourites.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.

## Multi-point Auto Focus






When you take a picture, the Multi-point Auto Focus (AF) function operates automatically and allows you to see a clear image.

## Burst shot

Allows you to take multiple shots quickly. Touch and hold .

## Panorama mode

Allows you to take a panoramic picture.

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap **MODE** > .
- 3 Tap  to start taking the panoramic picture.
- 4 Pan your phone slowly in one direction.

5 Make sure that the focus area aligns with the blue guideline while taking the photo.

6 Tap  to stop taking the panoramic picture.

## Dual

The Dual feature allows you to take a picture or record video with the front and rear cameras at the same time.

1 Tap  >  > **Apps** tab (if necessary) > .

2 Tap **MODE** > .



**NOTE:** Drag the small screen to move it to your desired location. Touch and hold the small screen to resize it. Tap on the small screen to alternate between the two cameras.

3 Tap  to stop dual recording.

## Super Zooming


When using the rear camera lens, you can zoom in or out to 8x.

**NOTE:** Use a steady hand. This feature does not work with some functions. Objects may be overlapped when taking a picture of fast-moving subjects.

## Live Zoom

Live Zoom allows you to zoom in or out on a portion of a video that is being played to make the desired section appear larger or smaller.


When viewing a video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.

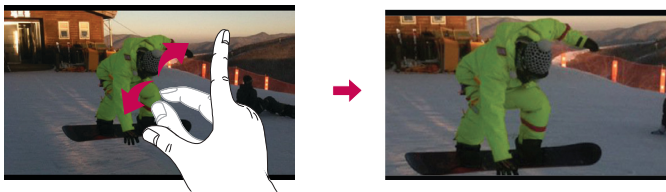

**NOTE:** Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

## Dual Play

Dual Play (wired or wireless connection to two displays) can be run on a different screen.

**NOTE:** Connect two devices using a wired (Slimport-HDMI) cable or wirelessly (Miracast). The connectable device can be a TV or a monitor supported by an HDMI cable or Miracast. The Gallery and Video apps are supported on Dual Play. Tap  once when two displays are a different status (i.e. the monitor is playing a video and your phone's video app is displaying an empty screen), then Dual Play will start. Not all videos are supported by Dual Play. Dual Play operates at 1280X720 or higher display resolution.

## Gallery

The **Gallery** allows you to view and manage all of your pictures and videos.

- Tap  >  > **Apps** tab (if necessary) > .

### NOTE:

- Depending on the software installed, some file formats may not be supported.
- Some files may not play properly due to their encoding.

### Viewing pictures

The Gallery displays your pictures in folders. When an application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder.



Pictures are displayed in a folder by creation date. Select a picture to view it full screen. Scroll left or right to view the next or previous image.


### Zooming in and out







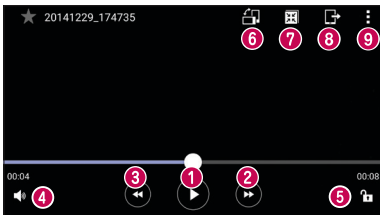


Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place in the picture zoom in. Pinch in or double-tap the image to zoom out.

## Playing videos


- 1 Touch  > **Apps** tab (if necessary) > .
- 2 Select the video you want to watch.  
The following options are available.



	Touch to pause/resume video playback.
	Touch to fast-forward 10 seconds.
	Touch to rewind 10 seconds.
	Touch to adjust the video volume.
	Touch to lock/unlock the screen.
	Touch to rotate the screen.
	Touch to use QSlide for the Videos app.
	Tap to share your video using the SmartShare function.
	Tap to access additional options.


To change the volume while watching a video, press the Up and Down Volume buttons on the back of the phone.

## Editing photos


While viewing a photo, tap .

## Deleting photos/videos

Use one of the following methods:

- While in a folder, tap , select the photos/videos and then tap **Delete**.
- While viewing a photo, tap .

## Setting wallpaper




While viewing a photo, tap  > **Set image as** to set the image as wallpaper or assign it to a contact.

### NOTE:




- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.

# Multimedia




## Music










Your phone has a music player that lets you play all your favorite tracks. To access the music player, tap  >  > **Apps** tab (if necessary) > .

### Playing a song

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap the **Songs** tab.
- 3 Select the song you want to play.
- 4 The following options are available.



1		Tap to pause playback.
		Tap to resume playback.
2		Tap to skip to the next track in the album, playlist or shuffle list. Touch and hold to fast-forward.

3		Tap to restart the current track or skip to the previous track in the album, playlist or shuffle list. Touch and hold to rewind.
4		Tap to adjust the volume.
5		Tap to set audio effects.
6		Tap to play the current playlist in shuffle mode (tracks are played in random order).
7		Tap to toggle through repeat all songs, repeat current song and repeat off.
8		Tap to share your music using the SmartShare function.
9		Tap to add the song to your favorites.
10		Tap to open the current playlist.
11		Tap to access additional options.

To change the volume while listening to music, press the Up and Down Volume buttons on the back side of the phone.

**NOTE:**

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.

**NOTE:** Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a license to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

## Clock

Use the Clock app gives you access to the Alarms, Timer, World clock and Stopwatch functions. Access these functions by tapping the tabs across the top of the screen or swiping horizontally across the screen.

Tap  >  > **Apps** tab (if necessary) > .

### Alarm

The Alarms tab allows you to set alarms.

- 1 Open the **Clock** app, then select the **Alarm** tab.
- 2 Tap the **New alarm** icon to add an alarm.
- 3 Adjust the settings as necessary and tap **Save**.

**NOTE:** You can also tap an existing alarm to edit it.

### Timer

The Timer can alert you with an audible signal when a set amount of time has passed.

- 1 Open the **Clock** app, then select the **Timer** tab.
- 2 Set the desired time on the timer.

### World clock

The World clock allows you to easily check the current time in other cities around the world.

- 1 Open the **Clock** app, then select the **World clock** tab.
- 2 Tap the **New city** icon and select the desired city.

## Stopwatch

The Stopwatch tab allows you to use your phone as a stopwatch.

- 1 Open the **Clock** app, then select the **Stopwatch** tab.
- 2 Tap the **Start** key to initiate the stopwatch.





**NOTE:** Tap the Lap key to record lap times.


- 3 Tap the **Stop** button to stop stopwatch.

**NOTE:** To reset the stopwatch, tap the Reset button. You can also tap the Resume button to resume the stopwatch.

## Calculator





The Calculator app allows you to perform mathematical calculations using a standard or scientific calculator.

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.
- 4 For more complex calculations, tap  > **Scientific calculator**.

**NOTE:** To check the history, tap  > **Calculation history**.

## Calendar







The Calendar app allows you to track your schedule of events.


- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap the date you want to add an event to. Then tap .

## Voice Recorder

The Voice Recorder app records audible files for you to use in a variety of ways.

### Recording a sound or voice




- 1 Tap  >  > .
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.

**NOTE:** Tap  to access your recordings. You can listen to the saved recording. The available recording time may differ from actual recording time.

## Tasks

You can add your tasks in the Tasks app and synchronize with you MS Exchange account (if supported by your MS Exchange account).




### Synchronizing MS Exchange

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap **General** tab > **Accounts & sync** > **Add account**.
- 3 Tap **Microsoft Exchange** and sign in to your account.
- 4 Make sure to place a checkmark in the **Tasks** option when prompted.

**NOTE:** MS Exchange may not be supported depending on email server.

## Voice Search

Use this application to search the web using your voice.

- 1 Tap  >  > **Apps** tab (if necessary) > **Google** folder >  .
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

**NOTE:** This application may not be available depending on the region or service provider.

## Downloads

Use this application to see what files have been downloaded through your applications.

- Tap  >  > **Apps** tab (if necessary) >  .

**NOTE:** This application may not be available depending on the region or service provider.

## FM radio

Your phone has a built-in FM radio so you can tune in to your favorite stations and listen on the go.

- Tap  >  > **Apps** tab (if necessary) >  .




**NOTE:** You need to use your headphones to listen to the radio. Insert it into the headphone jack.

**NOTE:** This application may not be available depending on the region or service provider.

## LG SmartWorld

LG SmartWorld offers an assortment of exciting content – fonts, themes, games, applications.


### How to Get to LG SmartWorld from Your Phone

- 1 Tap  >  > **Apps** tab (if necessary) > .
- 2 Tap **Sign in** and enter your user name and password. If you have not signed up yet, tap **Register** to create an account.
- 3 Browse and download the content you want.

#### NOTE:

- You may incur data fee charges when using your mobile network to access LG SmartWorld.
- LG SmartWorld may not be available for all carriers or in all countries.

#### NOTE: What if there is no LG SmartWorld icon?

- 1 Using a mobile Web browser on your device, access LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the .

#### Special benefits available for LG SmartWorld

- Personalize your device with home themes, keyboard themes, and fonts.
- Enjoy special promotions only offered on LG SmartWorld.
- Note that LG SmartWorld is only available for certain devices. Please check the [www.lgworld.com](http://www.lgworld.com) for more information.

# Web Browser

## Internet






Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your mobile phone.

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

- Tap  >  > **Apps** tab (if necessary) >  .

### Using the Browser toolbar

Scroll towards the top of the webpage to access the browser toolbar.

	Tap to go back one page.
	Tap to go forward one page.
	Tap to go to the Home page.
	Tap to open a new window.
	Tap to access your bookmarks.

### Viewing webpages


Tap the address field, enter the web address and tap **Go** on the keyboard.

## Opening a page

To go to a new page, tap  > .

To go to another webpage, tap , scroll up or down, and tap the page to select it.

## Searching the web by voice

In the browser, tap the address field and then tap . When prompted, say a keyword and select one of the suggested keywords that appear.



**NOTE:** This feature may not be available depending on the region or service provider.

## Bookmarks

To bookmark the current webpage, tap  > **Add to bookmarks** > **OK**.

To open a bookmarked webpage, tap  and select the desired one.

## History

Tap  > **History** to open a list of recently visited webpages. To clear all of your history, tap  > **Yes**.

## Using QSlide with the Browser

Use this feature to multi-task while browsing the internet.

While viewing content, such as contacts or notes that include web addresses, select a web address and then tap **Popup Browser** to open the pop-up browser. Touch and drag the QSlide window to move it to another location.

To view the browser in full screen, tap .

To close the browser, tap .

## Chrome

Use Chrome to search for information and browse webpages.

- Tap  >  > **Apps** tab (if necessary) >  .

**NOTE:** This application may not be available, depending on your region and service provider.

### Viewing webpages

In the Chrome browser, tap the address field, and then enter a web address or search criteria.

### Opening a page

To open a new page, tap  > **New tab**.

To go to another webpage, tap  , and tap the page to select it.

# Settings

This section provides an overview of items you can change using your phone's System Settings menus.

## Accessing the Settings menu:

- Tap  > touch and hold  > **System settings**.
- or -
- Tap  >  > **Apps** tab (if necessary) > .

## Networks

### < WIRELESS NETWORKS >

#### Wi-Fi

Allows you to manage your Wi-Fi connections and connect to available Wi-Fi networks.

#### Bluetooth

Allows you to manage your the Bluetooth wireless feature.

#### Mobile data

Displays the data usage and allows you to set a personalized mobile data usage limit.

#### Call

This menu allows you to configure various call settings.

- **Voicemail** – Allows you to select your carrier's voicemail service.
- **Fixed dialing numbers** – Allows you to manage and compile a list of numbers that can be called from your phone. You need your PIN2, which is available from your operator. If activated, only numbers in the fixed dial list can be called from your phone.

- **Incoming voice call pop-up** – Displays a pop-up for an incoming call when an app is in use.
- **Call reject** – Allows you to set the call decline function.
- **Decline with message** – When you want to decline a call, you can send a quick message using this function. This is useful if you need to decline a call during a meeting.
- **Call forwarding** – Allows you to choose when to forward calls.
- **Auto answer** – Sets the time before a connected hands-free device automatically answers an incoming call.
- **Connection vibration** – Vibrates your phone when the other party answers the call.
- **Noise suppression** – Suppresses background noise on your device during a call.
- **Voice clarity** – Enhances voice quality in noisy environments so you can hear more clearly.
- **Save unknown numbers** – Allows you to add unknown numbers to contacts after a call.
- **Power key ends call** – Allows you to use the Power key to end calls.
- **Call barring** – Locks incoming, outgoing or international calls.
- **Call duration** – Allows you to view the call duration for various types of calls.
- **Additional settings** – Allows you to change the following settings.

## < CONNECTIVITY >

### Share & connect

- **NFC** – Your phone is an NFC-enabled cell mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your content with an NFC tag or another NFC support device by simply tapping it with your device. If you tap an NFC tag with your device, it displays the tag content on your device.

- **Android Beam** – When this feature is turned on, you can transfer app content to another NFC-capable device by holding the devices close together. Just bring the device together (typically back to back) and then tap your screen. The app determines what gets beamed.
- **SmartShare Beam** – Allows you to receive multimedia content via LG phones and tablets.
- **Media server** – Share media content with nearby devices via DLNA.
- **Miracast** – Allows you to wirelessly mirror the phone screen and sound onto a Miracast dongle or TV.
- **LG PC Suite** – Connect LG PC Suite with your phone to easily manage multimedia content and apps.

## Tethering & networks

- **USB tethering** – Allows you to share the internet connection with your computer via a USB cable.
- **Wi-Fi hotspot** – Allows you to create a hotspot and share your connection.
- **Bluetooth tethering** – Allows you to connect to other devices via Bluetooth.
- **Help** – Displays Help information about USB tethering, Wi-Fi hotspot, and Bluetooth tethering.
- **Airplane mode** – Airplane Mode (flight mode) allows you to use many of your phone's features, such as games, and music, when you are in an area where making or receiving calls or data use is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online data.
- **Mobile networks** – This menu allows you to configure various mobile network settings.
- **VPN** – From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

# Sound

## < BASIC >

### Sound profile

Allows you to set your phone's sound profile. Choose from **Sound**, **Vibrate only** or **Do not disturb**.

### Volume


Adjust the phone's volume settings to suit your needs and environment.

### Vibration strength


Allows you to set the vibration strength for calls, notifications and touch feedback.

## < RINGTONES & VIBRATIONS >

### Ringtone

Allows you to set the ringtones for calls. You can also add a ringtone by tapping  in the upper-right corner of the screen.

### Notification sound

Allows you to set the notification sound. You can also add a notification sound by tapping  in the upper-right corner of the screen.

### Sound with vibration

Checkmark to set the phone to vibrate in addition to the ringtone when you receive calls.

### Vibration type

Allows you to choose the type of vibration.

## < NOTIFICATIONS >

### Do not disturb

Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.

## Lock screen

Allows you to choose if you want to show or hide notifications on the lock screen.

## Apps

Allows you to prevent apps from displaying notifications or set apps to show notifications with priority when Do not disturb is set to Priority only.

## < ADVANCED SETTINGS >

### Vibrate on tap

Checkmark to vibrate when tapping the Home touch buttons and during other UI interactions.

### Sound effects

Tap to set the dial pad touch tones, touch sounds and screen lock sound.

- **Dialpad touch sounds** – Checkmark to play tones while using the dial pad.
- **Touch sounds** – Checkmark to play a sound when making a screen selections.
- **Screen lock sound** – Checkmark to play a sound when locking and unlocking the screen.

### Message/call voice notifications

Tap the **Message/call voice notifications** switch to toggle it On or Off. On allows your device to read out incoming calls and message events automatically.

## Display

### < HOME & LOCK >

#### Home screen

- **Select Home** – Set **Home** or **EasyHome** as the default home.
- **Smart Bulletin** – Tap the **Smart Bulletin** switch to toggle it On or Off. Activating this feature adds an additional Home screen showing customized information. Checkmark **LG Health**, or **Smart Tips**.

- **Theme** – Sets the screen theme for your device. You can download new themes from **LG SmartWorld**.
- **Wallpaper** – Sets the wallpaper to use on your Home screen.
- **Screen swipe effect** – Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.
- **Allow Home screen looping** – Displays the first screen after the last screen when scrolling the Home screen.
- **Home backup & restore** – You can backup and restore app/widget layouts and the Home screen wallpaper.
- **Help** – Displays help information for the Home screen.

## Lock screen

- **Select screen lock** – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.  
If you enabled a Pattern lock type when you turn on your phone or wake up the screen, you are asked to draw your unlock pattern to unlock the screen.
- **Smart Lock** – Sets to keep your phone unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognizes your face.
- **Screen swipe effect** – Sets the screen swipe effect options.

**NOTE:** This setting name may be Pattern effect if the Screen lock is set to Pattern.

- **Wallpaper** – Allows you to set your Lock screen wallpaper.
- **Shortcuts** – Allows you to choose the shortcuts available on the lock screen.
- **Weather animation** – Checkmark to show weather animation on the lock screen for the current location.
- **Contact info for lost phone** – Allows you to display the owner information on the lock screen in case the phone is lost.

- **Lock timer** – Sets the amount of time before the screen automatically locks after the screen has timed out.
- **Power button instantly locks** – Checkmark to instantly lock the screen when the Power/Lock Button is pressed. This setting overrides the Security lock timer setting.

## Home touch buttons

Set the Home touch buttons displayed at the bottom of all screens. Set which keys are displayed, their position on the bar and what they look like.

## < FONT >

### Font type

Sets the type of font used for the phone and menus.

### Font size

Sets the size of the font displayed in the phone and menus.

## < OTHER SCREEN SETTINGS >

### Brightness

Adjusts the brightness of the screen. For best battery performance, use the dimmest comfortable brightness.

### Notification LED

Tap the switch to toggle it On or Off. On activates the LED light for the notifications you select, in the color you set for each.

### Auto-rotate screen

Checkmark to set the phone to automatically rotate the screen based on the phone orientation (portrait or landscape).

### Screen timeout

Sets the amount of time before the screen times out.

### Screen mode

Sets the screen mode. Choose from **Standard**, **Vivid** and **Natural**.

## < ADVANCED SETTINGS >

### Screen-off effect

Select the screen-off effect when locking and turning off the screen. Choose from **Black hole**, **Retro TV** and **Fade out**.

### Daydream

Tap the Daydream switch to toggle it On or Off. On allows to set a screensaver to be displayed when the phone is sleeping while docked and/or charging.

### Auto-adjust screen tone

Checkmark to adjust the screen brightness automatically with an analysis of image color.

## General

## < PERSONAL >

### Language & input

Use the Language & input settings to select the language for the text on your phone and to configure the on-screen keyboard, including words you added to its dictionary.

- **Language** – Sets the language to use on your phone.
- **Default** – Allows you to set the default keyboard to use when entering text.
- **LG Keyboard** – Checkmark to select the LG Keyboard to enter text. Tap the Settings icon to change the following settings.
- **Google voice typing** – Checkmark to select Google voice typing to enter text. Tap the Settings icon to change the Google voice settings.
- **Voice Search** – Sets voice search options.
- **Text-to-speech output** – Sets the preferred speech engine and speech rate (very slow to very fast). Also plays a short demonstration of speech synthesis.
- **Pointer speed** – Allows you to set the pointer speed using a slide bar.

## Location

Allows you to manage location services to determine your approximate location using GPS, Wi-Fi and mobile networks.

- **Mode** – Allows you to choose a location mode from **High accuracy (GPS and networks)**, **Battery saving (Networks only)** and **Device sensors only (GPS only)**.
- **Camera** – Checkmark to tag photos or videos with the location they were taken at.
- **Google Location Reporting** – Allows you to view and manage your Google location settings.

## Accounts & sync

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deactivating the **Auto-sync data** option can save battery power and lower (but not eliminate) data usage.

## Cloud

Allows you to add a cloud account to quickly and easily use a cloud service.

## Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you installed on your phone.

**NOTE:** Requires additional plug-ins to become selectable.

## One-handed operation

- **Dial keypad** – Checkmark to enable you to move the dial keypad to the right or left side of the device. Simply tap the arrow to move it to one side or the other.
- **LG keyboard** – Checkmark to enable you to move the keyboard to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

- **Lock screen** – Checkmark to enable you move the PIN Lock screen keypad to the right or left side of the phone. Simply tap the arrow to move it to one side or the other.
- **Help** – Displays information regarding one-handed operation.

## Shortcut key

Get quick access to apps by pressing and holding the Volume button when the screen is off or locked. Tap the Shortcut key switch (Shortcut key switch image) in the upper-right corner of the screen to toggle it **On** or **Off**.

## < PRIVACY >

### Security

- **Content lock** – Select lock types to lock files in Gallery. Choose from **Password** or **Pattern**.
- **Encrypt phone** – Encrypt all data on the phone.
- **Encrypt SD card storage** – Allows you to encrypt the SD card and make data unavailable to other devices.
- **Password typing visible** – Checkmark to briefly show each character of passwords as you enter them so that you can see what you enter.
- **Phone administrators** – Allows you to view or deactivate phone administrators.
- **Unknown sources** – Allows you to install non-Play store applications.
- **Verify apps** – Disallow or warn before installation of apps that may cause harm.
- **Storage type** – Displays the storage type for credentials.
- **Trusted credentials** – Displays trusted CA certificates.
- **Install from storage** – Allows you to install encrypted certificates.
- **Clear credentials** – Deletes all secure certificates and related credentials and erases the secure storage's own password.
- **Trust agents** – View or deactivate Trust agents.

- **Screen pin** – This feature allows you to lock your device so that the current user can only access the pinned app. This is useful for users with children.

## < SMART FUNCTIONS >

### Gestures

- **Answer an incoming call** – Checkmark to enable you to bring the phone to your ear to automatically answer the incoming call.
- **Fade out ringtone** – Checkmark to allow you to pick up the phone from the flat surface to fade out the incoming call ringtone.
- **Silence incoming calls** – Checkmark to allow you to flip the phone to silence incoming calls.
- **Snooze or stop alarm** – Checkmark to allow you to simply flip the device to snooze or stop the alarm.
- **Pause video** – Checkmark to allow you to simply flip the device to pause the currently playing video.
- **Help** – Displays a Help guide on how to use the Gestures features of your device.
- **Motion sensor calibration** – Allows you to improve the accuracy of the tilt and speed of the sensor.

### QuickCircle case

This menu allows you to select apps to be used directly on the cover in small view using QuickCircle.

### Dual window

Allows you to configure the Dual Window feature.

- **Split view** – Checkmark to allow you to tap a link on the full screen or attachments from emails to open Dual window.
- **Help** – Display tips for using Dual window.

## < PHONE MANAGEMENT >

### Date & time

Use the **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

### Storage

- **INTERNAL STORAGE** – View internal storage usage.

### Battery

- **BATTERY INFORMATION** – The Battery charge information is displayed on a battery graphic along with the percentage of the remaining charge and its status. Touch the Battery charge icon to display the Battery use screen to see battery level and use details. The phone also displays which components and applications are using the most battery power. Tap one of the items to see more detailed information.
- **Battery usage** – Displays battery usage.
- **Battery percentage on status bar** – Checkmark to display the battery level percentage on the Status Bar next to the Battery icon.
- **BATTERY SAVER** – Tap the Battery Saver switch to toggle it On or Off. Tap Battery Saver to access the following settings:
  - **TURN BATTERY SAVER ON** – Sets the battery charge percent level that automatically turns on Battery Saver. Choose from Immediately, 5% battery and 15% battery.
  - **Help** – Displays help information for the Battery saver feature.

### Smart cleaning

Allows you to manage unused apps and data.

### Apps

View and manage your applications.

## Default message app

This menu allows you to set your default messaging app as desired.

## Backup & reset

This menu allows you to back-up your data, automatically restore data, and erase all the data on your phone.

- **Backup my data** – Allows you to back up your settings and application data to the Google server.
- **Backup account** – Allows you to back up your account.
- **Automatic restore** – Allows you to restore your settings and application data when the applications are reinstalled onto your device.
- **LG Backup service** – Backs up all information on the device and restores it in the event of data loss or replacement.
- **Factory data reset** – Reset your settings to the factory default values and delete all your data, including user data such as pictures and videos.

## Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

## About phone

Display information about the network, phone identity, battery, hardware, software and legal.

# PC software (LG PC Suite)

## For Windows OS

LG PC Suite helps you manage media contents and applications in your phone by allowing you to connect to your phone with your PC.

With the LG PC Suite software, you can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the software in your device.
- Play multimedia contents of your PC from other device

**NOTE:** Some functions may not be available, depending on the model.

**NOTE:** You can use the Help menu from the application to find out how to use the LG PC Suite software.

## Installing the LG PC Suite Software

To download the LG PC Suite software, please do the following:

- 1 Go to [www.lg.com](http://www.lg.com).
- 2 Go to **SUPPORT > MOBILE SUPPORT > PC Sync**.
- 3 Select the model information and click **GO**.
- 4 Scroll down, select the **PC SYNC** tab > **Windows** > **DOWNLOAD** to download LG PC Suite.

## System Requirements for LG PC Suite software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG United drivers, Windows Media Player 10 or later.

### **NOTE: LG United USB Driver**

The LG United USB driver is required to connect an LG device and PC. It is installed automatically when you install the LG PC Suite software application.

## For Mac OS

### With the LG PC Suite software, you can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.

**NOTE:** Some functions may not be available, depending on the model.

**NOTE:** You can use the Help menu from the application to find out how to use the LG PC Suite software.

## Installing the LG PC Suite Software

To download the LG PC Suite software, please do the following:

- 1 Go to [www.lg.com](http://www.lg.com).
- 2 Go to **SUPPORT > MOBILE SUPPORT > PC Sync**.
- 3 Select the model information and click **GO**.
- 4 Scroll down, select the **PC SYNC** tab > **Mac OS** > **DOWNLOAD** to download LG PC Suite.

## System Requirements for LG PC Suite software

- OS: Mac OS X (10.6.8) or higher
- Memory : 2GB RAM or higher
- Graphics card: 1024 x 768 screen resolution or higher and 32-bit color
- Hard disc: Storage of 500 MB or higher (Additional space may be required for data)
- Required software: LG United Mobile driver

### **NOTE: LG Integrated USB Driver**

The LG integrated USB driver is required to connect an LG device and PC. It is installed automatically when you install the LG PC Suite software application.

## Phone software update

### Software updates from the Internet for your LG phone

For more information about software updates, please visit <http://www.lg.com/common/index.jsp>.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service center. This feature will only be available if and when LG makes a newer firmware version available for your device. Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.

**NOTE:** LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all phone models.

### Software updates via Over-the-Air (OTA) for your LG phone

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your mobile phone: **Settings > General tab > About phone > Update Center > Software Update > Check now for update.**

**NOTE:** Your personal data saved to the internal phone memory—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—may be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

**NOTE:** This feature depends on your network service provider, region and country.

## About this user guide

- Before using your device, please carefully read this guide. This ensures that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product or from software supplied by service providers or carriers. This content is subject to change without prior notice. For the latest version of this guide, please visit the LG website at [www.lg.com](http://www.lg.com).
- Your phone's applications and their functions may vary by country, region or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings or modified operating system software. Any attempt to customize your operating system may cause the device or its applications to work incorrectly.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may apply for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

## Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.

### DivX HD

This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video. To play purchased DivX movies, first register your device at [vod.divx.com](http://vod.divx.com). Find your registration code in the DivX VOD section of your device setup menu.

**DivX Certified® to play DivX® video up to HD 720p, including premium content. DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.**

### Dolby Digital Plus DOLBY DIGITAL PLUS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.

## Accessories

These accessories are available for use with the your phone. **(Items described below may be optional.)**

- Travel adaptor
- Quick Start Guide
- Stereo headset
- USB cable

### **NOTE:**

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- The items supplied with the device and any available accessories may vary depending on the region or service provider.

# Troubleshooting


This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.



Message	Possible causes	Possible corrective measures
SIM or USIM card error	There is no SIM or USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6~12 months old. If so, change your SIM card at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, must confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match.	


Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialing error	New network not authorized.
	New SIM or USIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.


<b>Message</b>	<b>Possible causes</b>	<b>Possible corrective measures</b>
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed.	The Fixed dialing number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/send text messages & photos	Memory full	Delete some messages from your phone.
Files do not open	Unsupported file format	Check the supported file formats.



Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update through the website.

Category	Question	Answer
Bluetooth Devices	What are the functions available via Bluetooth?	You can connect a Bluetooth audio device, such as a Stereo/Mono headset or car kit.
Contacts Backup	How can I back up Contacts?	Contacts data can be synchronized between your phone and Gmail™.
Synchronization	Is it possible to set up one-way sync with Gmail?	Only two-way synchronization is available.
Synchronization	Is it possible to synchronize all email folders?	The Inbox is automatically synchronized. You can view other folders by tapping the  icon and selecting <b>Folders</b> to choose a folder.
Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you have logged into Gmail, there is no need to log into Gmail again.
Google Account	Is it possible to filter emails?	No, the phone does not support email filtering.
Email	What happens when I execute another application while writing an email?	Your email is automatically saved as a draft.
Ringtone	Is there a file size limit for using MP3 files as ringtones?	There is no file size limit.

Category	Question	Answer
Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I change this?	You will only be able to see the times for messages received the same day.
Navigation	Is it possible to install another navigation application on my phone?	Any application that is available at Play Store™ and is compatible with the hardware can be installed and used.
Synchronization	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (company email server) contacts can be synchronized.
Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact using the Wait &amp; Pause functions saved into the number, you cannot use those features. You must save each number again.</p> <p>How to save with Wait and Pause:</p> <ol style="list-style-type: none"> <li>1. From the Home screen, tap .</li> <li>2. Dial the number, then tap .</li> <li>3. Tap <b>Add 2-sec pause</b> or <b>Add wait</b>.</li> </ol>
Security	What are the phone's security functions?	You can set the phone to require an Unlock Pattern to be entered before the phone can be accessed or used.

Category	Question	Answer
Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> <li>1. From the Home screen, tap and hold .</li> <li>2. Tap <b>System settings</b> &gt; <b>Display</b> tab &gt; <b>Lock screen</b>.</li> <li>3. Tap <b>Select screen lock</b> &gt; <b>Pattern</b>. The first time you do this, a short tutorial about creating an Unlock Pattern appears.</li> <li>4. Set up your pattern by drawing it then drawing it a second time for confirmation.</li> </ol> <p>Precautions to take when using the pattern lock.</p> <p>It is very important to remember the unlock pattern you set. You can no longer access your phone if you use an incorrect pattern five times. You have five chances to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds. (Or, if you preset the backup PIN, you can use the backup PIN code to unlock the pattern.)</p>

Category	Question	Answer
Unlock Pattern	What should I do if I forget the unlock pattern and I did not create my Google account on the phone?	<p>If you forgot your pattern: If you logged into your Google account on the phone but failed to enter the correct pattern 5 times, tap the <b>Forgot pattern</b> button. You are then required to log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you have forgotten it, you must perform a hard reset.</p> <p>Caution: If you perform a factory reset, all user applications and user data are deleted. Please remember to back up any important data before performing a factory reset.</p>
Memory	Will I know when my memory is full?	Yes, you will receive a notification.
Language Support	Is it possible to change my phone's language?	<p>The phone has multilingual capabilities. To change the language:</p> <ol style="list-style-type: none"> <li>1. From the Home screen, tap and hold  and tap <b>System settings</b>.</li> <li>2. Tap <b>General</b> tab &gt; <b>Language &amp; input</b> &gt; <b>Language</b>.</li> <li>3. Tap the desired language.</li> </ol>
VPN	How do I set up a VPN?	VPN access configuration is different for each company. To configure VPN access on your phone, you must obtain the details from your company's network administrator.

Category	Question	Answer
Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> <li>1. From the Home screen, tap and hold .</li> <li>2. Tap <b>System settings</b> &gt; <b>Display</b> tab.</li> <li>3. Tap <b>Screen timeout</b>.</li> <li>4. Tap the preferred screen backlight timeout time.</li> </ol>
Wi-Fi & mobile network	When the Wi-Fi and mobile networks are both available, which service does my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there is no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, view the mobile network or Wi-Fi icon at the top of your screen.</p>
Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the trash can icon appears at the top and center of the screen. Then, without lifting your finger, drag the icon to the trash can.
Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> <li>1. From the Home screen, tap and hold .</li> <li>2. Tap <b>System settings</b> &gt; <b>General</b> tab &gt; <b>Apps</b> tab (if necessary) &gt; <b>DOWNLOADED</b>.</li> <li>3. Tap the application, then tap <b>Uninstall</b>.</li> </ol>

Category	Question	Answer
Charger	Is it possible to charge my phone using a USB cable without installing the necessary USB driver?	Yes, the phone is charged through the USB cable regardless of whether the necessary drivers are installed.
Alarm	Can I use music files for my alarm?	Yes. After saving a music file as a ringtone, you can use it as an alarm. <ol style="list-style-type: none"> <li>1. Touch and hold a song in a library list. In the menu that opens, tap <b>Set as ringtone</b> &gt; <b>Phone ringtone</b> or <b>Contact ringtone</b>.</li> <li>2. On the Alarm Clock Setting screen, select the song as a ringtone.</li> </ol>
Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Alarm	If my ringer volume is set to Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.
Display	I tried to set the screen brightness to maximum but it still appears dark. How can I make the screen brighter?	<ol style="list-style-type: none"> <li>1. From the Home screen, tap and hold <input type="checkbox"/>.</li> <li>2. Tap <b>System settings</b> &gt; <b>Display</b> tab &gt; <b>Auto-adjust screen tone</b>.</li> <li>3. Tap the checkbox to cancel the function.</li> </ol>
Hard Reset (Factory Reset)	How can I perform a factory reset if I cannot access the phone's Settings menu?	If your phone does not restore to its original condition, use a hard reset (factory reset) to initialize it.





CE0168ⓘ