



LG

Life's Good

繁體中文
簡體中文
ENGLISH


使用手冊
用戶手冊
User Guide

LG G2



使用手冊

- 畫面顯示及插圖可能與實際手機上顯示的有所不同。
- 視乎軟件或服務供應商而定，本手冊中的部份內容可能不適用於您的手機。此文件中所有資訊如有更改，恕不另行通知。
- 由於使用觸控螢幕鍵盤，此手機不適合視障人士使用。
- Copyright ©2015 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Google Maps™、Gmail™、YouTube™、Google Talk™ 及 Play Store™ 均為 Google, Inc. 的商標。

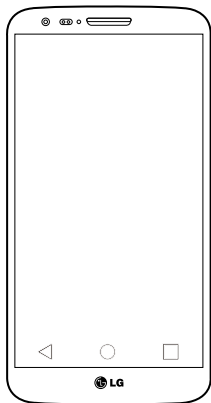

目錄

安全及有效使用準則	5	Wi-Fi Direct.....	38
重要通知.....	12	使用 SmartShare	38
瞭解您的手機	18	使用 USB 纜線進行 PC 連接	39
手機概覽	18	通話功能.....	40
安裝 Micro-SIM 卡	20	撥打電話	40
為手機充電	21	從通訊錄中撥打電話.....	40
將螢幕鎖定及解鎖	22	接聽來電和拒接來電	40
Knock Code	22	調節通話音量.....	41
開啟螢幕	24	通話期間撥打第二個電話.....	41
立體聲耳機連咪高風	24	檢視通話記錄.....	41
您的桌面.....	26	通話設定	42
觸控螢幕提示	26	通訊錄.....	43
桌面	27	搜尋通訊錄	43
擴展桌面	27	新增通訊錄	43
自訂桌面	28	最愛通訊錄	43
返回最近使用的應用程式.....	29	建立群組	44
通知面板	29	訊息.....	45
開啟通知面板.....	30	發送訊息	45
狀態欄上的指示圖示.....	30	訊息串連方塊	46
螢幕鍵盤	32	更改訊息設定	46
輸入重音字母.....	32	電子郵件.....	47
Google 帳號設定.....	33	管理電子郵件帳號	47
連接到網絡及裝置.....	34	處理帳號資料夾.....	47
Wi-Fi.....	34	編寫及發送電子郵件.....	48
連接至 Wi-Fi 網路	34	相機.....	49
開啟 Wi-Fi 並連接至 Wi-Fi 網路.....	34	瞭解取景器	49
藍牙	35	使用進階設定.....	50
共享手機的數據連接	36	快速拍照	51

使用拍攝與清除模式	51	多媒體	67
使用雙鏡頭拍攝模式	52	媒體匣	67
使用時間捕捉拍攝模式	52	檢視圖片	67
拍攝相片後	53	播放影片	67
檢視已儲存的相片	53	編輯相片	67
視像攝錄機	54	刪除相片/影片	68
瞭解取景器	54	設定為牆紙	68
使用進階設定	55	播放影片	68
錄製短片	55	影片編輯器	70
錄製影片後	56	音樂	71
觀看影片時調整音量	56	新增音樂檔案至手機	71
使用音訊縮放	57	使用媒體裝置 (MTP) 傳輸音樂	72
使用雙鏡頭錄影模式	58	播放歌曲	72
使用追蹤縮放模式	58	實用程式	74
功能	59	訪客模式	74
QuickMemo+	59	設定鬧鐘	74
使用 QuickMemo+ 選項	60	使用計算機	74
檢視已儲存的 QuickMemo+	60	新增事件至日曆	75
QuickTranslator	61	語音備忘錄	75
QSlide	62	錄製聲音或語音	75
QuickRemote	63	工作管理員	76
即時縮放	64	工作	76
LG SmartWorld	65	POLARIS Viewer 5	76
如何從手機進入 LG SmartWorld ...	65	Google+	77
如何使用 LG SmartWorld	66	語音搜尋	77
		下載	77
		網絡功能	78
		互聯網	78
		使用網絡工具列	78
		檢視網頁	78

目錄

開啟頁面	79
以語音搜尋網站	79
書籤	79
歷史記錄	79
Chrome.....	80
檢視網頁	80
開啟頁面	80
設定.....	81
網絡	81
聲音	84
顯示	85
一般	87
PC 軟件 (LG PC Suite).....	94
手機軟件更新	97
手機軟件更新	97
有關本使用者指南.....	98
有關本使用者指南	98
Trademarks	98
DivX HD	99
Dolby Digital Plus	99
配件	100
疑難排解.....	101
常見問題解答	104

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。

本型號手機 LG-D802 之設計符合適用的無線電波暴露安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作特定吸收比率 (SAR)。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。
- 本型號手機在耳邊使用的最高 SAR 值為 0.409 W/kg (10 克)，佩戴於身上時則為 0.470 W/kg (10 克)。
- 在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直到傳輸完成為止。

安全及有效使用準則

產品保護及維護

警告：

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。

- 如果玻璃螢幕碎裂，請勿接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。
- 如果手機受潮，請立即拔下手機電源線並立即擦乾。請勿嘗試用烤爐、微波爐或風筒等外部加熱裝置加快變乾的過程。
- 手機如果潮溼，液體會改變手機內產品標籤的顏色。因手機暴露於液體而造成的損壞並不受保養條款覆蓋。

有效地操作手機

電子裝置

所有手機均可能受訊號干擾，這可能會影響手機效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。
- 如可能，請在介乎 0°C 與 40°C 的溫度中使用手機。將手機曝露在極低或極高的溫度下可能會導致手機損壞、故障或甚至爆炸。

道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。

安全及有效使用準則

- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在路邊時特別重要。

避免損害您的聽覺



避免聽力受損，請不要長時間在高音量下聆聽。

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

注意：耳機的過大聲音壓力可能導致聽覺受損

玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在加油站使用手機。
- 請勿在燃料或化學物質附近使用手機。
- 請勿在放置了手機及配件的汽車車廂運送或擺放易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在機艙內使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

某些流動網絡可能無法使用緊急通話。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可降低電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池或造成電池短路。
- 請保持電池的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，重新充電以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷的地方，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

確認聲明

LG Electronics 在此聲明 LG-D802 產品符合對 1999/5/EC 指示的基本要求和和其他相關規定。確認聲明副本請見：<http://www.lg.com/global/declaration>

開放來源程式碼軟件

若要獲取此產品所包含的 GPL、LGPL、MPL 來源程式碼和其他開放來源程式碼認證，請瀏覽 <http://opensource.lge.com>。

除了來源程式碼，所有涉及到的授權條款、免責聲明和版權聲明可供下載。

LG Electronics 亦可以透過收費 CD-ROM 提供開

放來源程式碼，費用包括 CD-ROM 成本（例如媒體成本、運費以及處理費），您可透過 opensource@lge.com 索取。此服務由購買產品日期起計算三年內有效。

重要通知


使用手機前請閱讀此重要通知！

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

1. 手機記憶體

當手機記憶體的可用空間少於 10%，手機便無法接收新訊息。您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

要解除安裝應用程式：

- 1 點按  > 應用程式標籤 > 設定 > 一般標籤下的 **應用程式**。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按 **解除安裝**。

2. 充分利用電池使用時間

關閉無須持續在背景運行的功能，便能延長電池電量。您可監控應用程式及系統資源的電池電量消耗。

延長手機電池使用時間


- 不使用無線電通訊時將其關閉。不使用 Wi-Fi、藍牙或 GPS 時，請將其關閉。
- 降低螢幕亮度，並設定較短的螢幕逾時。
- 關閉 Gmail、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的部分應用程式可能會減少電池使用時間。

要檢查電池充電量：

- 點按  > 應用程式標籤 > 設定 > 一般標籤下的電池。

電池資訊（充電、放電中）及省電（電量百分比）會在螢幕顯示。

要監控與控制使用的電池電力：

- 點按  > 應用程式標籤 > 設定 > 一般標籤下 > 電池 > 電池資訊 > 電池使用狀況。

可顯示剩餘電量之電量曲線。電池使用和預期使用時間。並檢視使用電量最多的元件和應用程式。

3. 在安裝開放原始碼的應用程式及操作系統前



警告：

如果您安裝及使用並非由製造商提供的作業系統，可能會造成您的手機故障。此外，您的手機不再受保養。



警告：

為了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Play Store™。如不正確安裝應用程式，手機可能無法正常運作，或出現嚴重錯誤。您必須從手機解除安裝該應用程式及其所有相關數據和設定。

重要通知

4. 使用解鎖圖形

設定解鎖圖形以保護您的手機。點按  > 應用程式標籤 > 設定 > 顯示標籤下 > 主頁&鎖定下的鎖定螢幕 > 選擇螢幕鎖定 > 圖形。此會開啟指導您如何繪畫螢幕解鎖圖形的畫面。您必須新增一個備份 PIN 作為安全措施，以防您忘記您的解鎖圖形。

警告：請於設定解鎖圖形前建立 Google 帳號，並緊記您於新增圖形鎖時所設定的備份 PIN 碼。



警告：

使用圖案鎖定的注意事項。

請記住您所設定的解鎖圖案，這是非常重要的。如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的手機。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。

當您記不起您的解鎖圖案、PIN 或密碼：

< 如果您忘記了您的圖形 >

如果您已用手機登入至您的 Google 帳號但 5 次輸入錯誤的圖形，請按 **忘記解鎖圖形？** 按鈕。您將需要使用您的 Google 帳號登入，或輸入您於新增圖形鎖時設定的備份 PIN 碼。

如果您尚未在手機上建立 Google 帳號或忘記備份 PIN，您需要進行硬性重新設定。

< 如您忘記了您的 PIN 碼或密碼 >

如您忘記您的 PIN 或密碼，您需要進行硬體重新設定。

警告：如您進行硬體重新設定，所有使用者應用程式及資料將被刪除。

注意：如您並未登入至您的 Google 帳號，及忘記了您的解鎖圖形，您需要輸入您的備份 PIN。

5. 使用硬性重新設定（原廠設定）

如您的手機並無還原至其原始狀態，請使用強制重新設定（原廠設定）以初始化手機。

- 1 關閉電源。
- 2 同時按住**電源/鎖定鍵 + 降低音量鍵**。
- 3 LG 標誌會顯示於螢幕上，然後放開電源/鎖定鍵，然後立即再次按住電源/鎖定鍵。當顯示 Factory data reset 時，鬆開所有按鍵。
- 4 再按電源/鎖定鍵以確認進行原廠設定，您的手機將被還原至其原廠設定。要取消，請按其他鍵。




警告：


若進行硬性重新設定，所有用戶應用程式、用戶數據及 DRM 授權將被刪除。請記住先備份所有重要的數據，才進行硬性重新設定。

6. 開啟及切換應用程式

有了 Android，多任務處理變得簡易，您可以同時執行多個應用程式。開啟新的應用程式時，您無需退出原來的應用程式。使用及切換數個開啟中的應用程式。Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。


要停止應用程式：

- 1 點按  > **應用程式** 標籤 > **設定** > **一般** 標籤下的 **應用程式** > **執行**。
- 2 捲動並點按所需應用程式，點按**停止**以停止應用程式。

注意：要進行多項工作，於使用應用程式時輕觸近期任務鍵以移至另一個應用程式。此舉並不會停止之前於裝置背景上執行的應用程式。確保於使用完畢後點按  以離開應用程式。

重要通知

7. 使用媒體裝置處理 (MTP) 傳輸音樂、相片及影片

- 1 點按  > 應用程式標籤 > 設定 > 一般標籤下的儲存裝置，以查看儲存媒體。
- 2 使用 USB 線將手機連接到電腦。
- 3 選取 USB 連接方法會顯示於手機螢幕上，選擇媒體裝置 (MTP) 的選項。
- 4 開啟電腦上的憶體資料夾。您可以於電腦上檢視大容量儲存內容，並可將檔案從電腦傳輸至裝置的記憶體資料夾，相反亦然。
- 5 傳輸檔案後，向下滑動狀態欄，並點按媒體裝置 (MTP)，從選取 USB 連接方法列表選擇手機充電。

8. 將手機直立

如使用其他電話一樣，垂直握住您的手機。手機備有內置天線。小心不要刮花或損壞手機背部，這可能會影響效能。

撥打/接聽電話或傳送/接收資料時，避免握住手機的較低部分（因備有天線）。這樣做可能影響通話品質。

9. 螢幕凍結時

如果螢幕凍結或當您嘗試操作手機時沒有回應：


按住電源/鎖定鍵 8 秒，以重啟您的手機。如果仍然無法運作，請聯絡服務中心。

10. 在開啟/關閉您的電腦時，請勿連接您的手機

開啟或關閉電腦時，確保從電腦中斷手機的連接，否則電腦可能造成錯誤。

瞭解您的手機

手機概覽

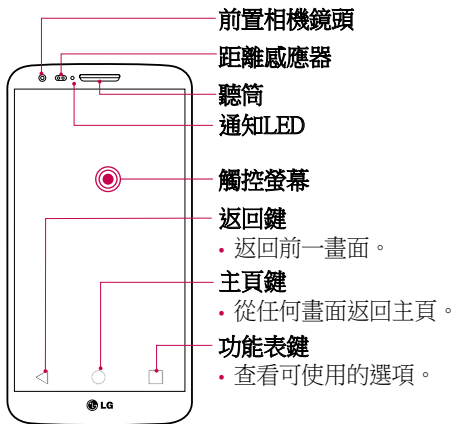


注意：距離感應器

當接收及撥出通話時，距離感應器會感應手機接近您的耳朵，並自動關閉畫面背光照明及鎖上觸控螢幕。這將延長電池壽命並且防止通話時不小心啟動觸控畫面。

警告：

若將較重物置於手機上，或坐在手機上會損壞 LCD 和觸控畫面功能。請勿將保護貼覆蓋 LCD 的距離感應器。這可能會導致感應器出現故障。

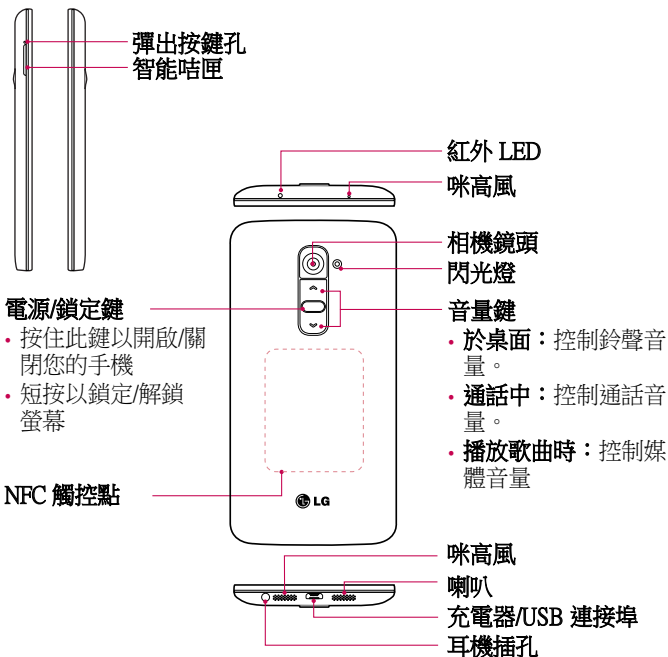

警告：

- 此電話是內置電池盒。請勿開啟背蓋。
- 請勿破壞手機上的 NFC 觸控點，它是 NFC 天線的一部分。

瞭解您的手機


安裝 Micro-SIM 卡

開始使用新手機前，您可以選擇插入 Micro-SIM 卡。

彈出按鍵為位於卡槽蓋上方的細小圓孔。要安裝新 Micro-SIM 卡：

- 1 將隨附的 Micro-SIM 彈出工具（或幼針）插入彈出按鍵孔，輕力地推入直至卡槽彈出。
- 2 將卡槽移出，將 Micro-SIM 卡放置在內(如圖)。除以此方式外並無可能將 Micro-SIM 卡緊貼置於卡槽上。
- 3 小心重新調整卡槽以將其滑進並推回到手機中。

注意：請確保卡上的金屬接觸面向下。

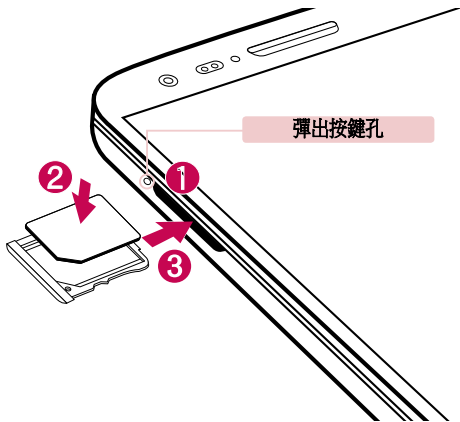


為手機充電

首次使用前請為電池充滿電量。請使用充電器為電池充電。經 USB 纜線連接，電腦亦可是為電池充電。

警告：

只使用 LG 認可的充電器、電池及纜線。如您使用未經認可的充電器、電池或纜線，可能會導致電池充電延遲或彈出關於充電延遲的訊息，又或會導致電池爆炸或裝置損壞，這並不包括於保養範圍。

充電器連接埠位於手機底部。插入充電器，並將其連接至電源插座。

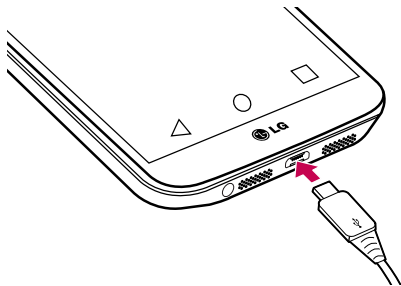

注意：

- 第一次充電時必須將電池完全充電，以提高電池使用時間。

瞭解您的手機

將螢幕鎖定及解鎖

如果您暫時不使用手機，螢幕會自動關閉及鎖定。這有助防止意外按鍵，並可節省電池電力。

當您並非使用手機時，按**電源/鎖定鍵**  以鎖定您的手機。

如鎖定手機時正在執行程式，其於鎖定模式時可能仍在執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費（例如：通話、存取網絡及數據通訊）。


要喚醒手機，按**電源/鎖定鍵** 。會顯示鎖定畫面。觸控並向任何方向滑動鎖定畫面，即可解除鎖定桌面。您最後檢視的畫面將會開啟。

Knock Code


Knock Code 功能讓您可以利用被分為四格的螢幕，以自己的 Knock Code 圖形點按螢幕，輕鬆開啟或關閉螢幕。您可在鎖定螢幕設定中停用此功能。

注意：

- 如您輸入錯誤的 Knock Code 6 次，系統會強制將您帶到後備 PIN 碼。
- 使用指尖而非指甲點按螢幕以開啟或關閉。
- 如沒有使用 Knock Code，您可以點按螢幕以使用開啟螢幕功能。

- 1 從桌面點按  **應用程式鍵** > **設定** > **顯示標籤**。
- 2 點按 **鎖定螢幕** > **選擇螢幕鎖定** > **Knock Code**。
- 3 依自己喜好的圖形點按方格，以設定您的 knock code。

您的 Knock Code 圖形可以是 2 至 8 次點按。完成後點按 [確認]。

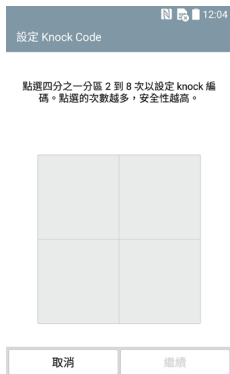

使用 Knock Code 解除鎖定螢幕

點按已設定的 Knock Code 圖形，便可解除鎖定螢幕。


- 1 螢幕關閉時，按下電源鍵。
- 2 點按先前設定的 Knock Code 圖形。

瞭解您的手機

開啟螢幕

點按兩下即可以鎖定或解鎖螢幕。

啟動開啟螢幕功能

1 點按 > ○ >  > 設定 > 一般標籤 > 手勢。

2 勾選**螢幕開啟/關閉**。

快速點按螢幕中間兩下即可解鎖螢幕。要解鎖螢幕，點按螢幕中的狀態欄（除相機取景器以外）或桌面上的空白地方。

注意：開啟螢幕時，確保您沒有掩蓋距離感應器。此舉會令螢幕開啟後即時關閉，以防在口袋或袋中異常開啟。

立體聲耳機連咪高風

連接耳機後，您可以立體聲效果欣賞音樂或影片，並可輕鬆從音樂/影片切換以接聽及結束通話。


< 前面 >




通話/結束按鍵


- 收到來電時，按此按鍵即可接聽或結束通話。
- 聆聽音樂時，按此鍵即可停止或恢復播放。按兩下即可播放下一首歌曲。


< 背面 >



1 如下所示插入耳機。

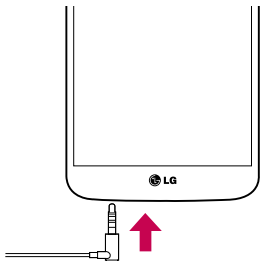

2 如將耳機連接至手機後接到來電，按  以接聽來電。

3 要結束通話，請按  鍵。

您的桌面

觸控螢幕提示

以下為如何於手機上瀏覽的一些提示。

點按或觸控 - 用手指單次點按以選擇項目、連結、捷徑及螢幕鍵盤上的字母。

點按並按住 - 點按並不抬起手指，直至動作發生，以觸摸並按住螢幕上的項目。例如，要開啟聯絡人的可用選項，觸摸並按住通訊錄列表上的聯絡人，直至開啟內容功能表。

拖拉 - 觸摸並按住項目片刻，然後於螢幕上移動手指但不抬起，直至到達目標位置。您可在桌面拖放項目改變其放置。

撥動或滑動 - 要撥動或滑動，快速移動您的手指以橫跨螢幕表面，並於首次接觸螢幕時不停止動作（否則會變成拖拉項目）。例如，您可向上或向下滑動螢幕以捲動列表，或向左或向右掃動以瀏覽不同桌面（反之亦然）。

雙點按 - 檢視圖片時，您亦可以點按兩下以進行縮放。


捏動縮放 - 使用瀏覽器或地圖，或瀏覽圖片時，捏緊或散開食指及拇指以縮小或放大。

旋轉螢幕 - 於許多應用程式及功能表，螢幕的方向會根據裝置本身的方向而作出調整。

注意：

- 要選擇項目，請點按圖示的正中心。
- 請勿過份用力按壓；只需輕力確切地觸控，觸控螢幕已能感應。
- 使用指尖點按所需選項。請注意不要點按其他按鍵。

桌面

主桌面是眾多應用程式與功能的起點，讓您可新增如應用程式捷徑、Google小工具等項目，讓您可即時存取資訊及應用程式。此為預設桌布，點按  即可從任何功能表中存取。



擴展桌面

作業系統提供多個桌面桌布，讓您有更多空間新增圖示、小工具等。

- ▶ 在桌面上向左或右滑動手指。

您的桌面

自訂桌面


您可以新增應用程式、小工具或更換牆紙，以自訂您的桌面。

要將項目新增至桌面

- 1 點按並按住桌面的空白部分。
- 2 於新增模式功能表中，選擇您想新增的項目。您將於桌面上看見已新增的項目。
- 3 將其拖拉至理想的位置，然後放開手指。

提示！ 要將應用程式圖示從應用程式功能表新增至桌面，觸摸並按住您想新增的應用程式。


要從桌面移除項目


- ▶ **桌面** > 點按並按住要移除的圖示 > 將圖示拖放至 。

要將應用程式新增為快速按鍵


- ▶ 從應用程式功能表或桌面上，觸摸並按住應用程式圖示，將其拖動至快速按鍵區。

要從快速按鍵區移除應用程式

- ▶ 觸摸並按住所需快速按鍵，並將其拖動至 。

注意：  應用程式鍵無法移除。

要在桌面上自訂應用程式圖示

- 1 觸摸並按住應用程式圖示，直至它從目前位置解除鎖定。然後將其放於畫面上。編輯圖示  將會顯示於應用程式的右上角。
- 2 再次點按應用程式圖示，並選擇所需的圖示設計。
- 3 點按**確定**以儲存變更。

返回最近使用的應用程式


- 1 觸摸 □。畫面會顯示包含您最近使用的應用程式圖示的彈出式視窗。
- 2 點按圖示以開啟應用程式。或點按 < 以返回。

通知面板

通知提醒您收到新訊息、日曆事件、鬧鐘、以及進行中事項（如正在通話）等。

收到通知時，其圖示會顯示於畫面頂部。等待通知的圖示會顯示於左方，而 Wi-Fi 或電力等的系統圖示則顯示於右方。

注意：可用選項視乎不同地區或服務供應商而可能有所不同。

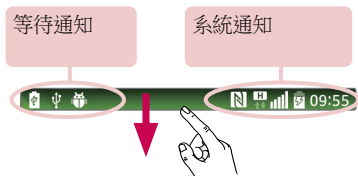

您的桌面

開啟通知面板

從狀態欄向下掃動以開啟通知面板。



快速切換區
點按每個快速切換按鈕以開啟/關閉。觸摸並按住按鈕，以存取功能的設定功能表。要查看更多切換按鈕，向左或右方掃動。點按  以移除、新增或重新整理切換按鈕。

QSlide 應用程式
點按 QSlide 應用程式以在您的螢幕上開啟小視窗。點按  以移除、新增或重新整理 QSlide 應用程式。

通知
連同簡單說明，列出目前的通知。點按通知以進行檢視。
點按  以清除所有通知。
如要關閉通知面板，點按標籤並將其拖動至螢幕頂部。

狀態欄上的指示圖示

於畫面頂部的狀態欄上顯示的指示圖示，報告未接來電、新訊息、日曆事件、裝置狀態等。



顯示於畫面頂部的圖示提供有關裝置狀態的資訊。以下圖表所列出的為最常用的圖示。

圖示	說明
	沒有插入 Micro-SIM 卡
	沒有可用的網絡訊號
	已開啟飛航模式
	已連接至 Wi-Fi 網絡
	已連接有線耳機
	正在通話
	未接來電
	藍牙開啟
	NFC 已開啟
	系統警告
	鬧鐘已設定
	新語音留言
	新文字訊息
	目前正在播放歌曲

圖示	說明
	鈴聲勿干擾
	已開啟震動模式
	電池已完全充電
	電池充電中
	手機已通過 USB 線連接至電腦
	數據下載
	數據上傳
	GPS 開啟
	正在同步資料
	新 Gmail 訊息
	新 Hangouts 訊息
	選取輸入法
	DLNA 內容分享
	DLNA 音樂播放





注意：狀態欄上的圖示位置根據功能或服務可能有所不同。


螢幕鍵盤

您可以使用螢幕鍵盤輸入文字。螢幕鍵盤在您需要輸入文字時會自動在螢幕上顯示。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

使用鍵盤與輸入文字

 點擊一次以將您要輸入的下一個字母大寫。點按兩下即可大寫所有字母。

 點按以切換至數字及符號鍵盤。

 點按以輸入一個空格。

 點按以新建一行。

 點按以刪除前一個字母。

輸入重音字母

當您選擇法文或西班牙文作為文字輸入語言，您可輸入特殊的法文或西班牙文字元（例如：「á」）。

例如，要輸入「á」，點按並按住「a」鍵直至放大鍵放大並顯示其他語言的字元。

然後選擇所需的特別字元。


Google 帳號設定


第一次開啟您的手機時，您可以啟動網絡，以登入至您的 Google 帳號，並選擇您想如何使用某些 Google 服務。

要設定 Google 帳號：

- 於系統提示的設定畫面登入 Google 帳號。

或者

- 點按  > 應用程式標籤 > 選擇一個 Google 應用程式（如 **Gmail**） > 選擇**新增電郵地址**。

如果您擁有 Google 帳號，點按**輸入您的電郵**，輸入您的電子郵件地址及密碼，然後按 。

於手機上設定了您的 Google 帳號後，您的手機會自動於網上與您的 Google 帳號進行同步。

您的通訊錄、Gmail 訊息、日曆事件及其他資訊會從網上的應用程式及服務同步至您的手機。（這視乎您的同步設定）。

登入後，您可使用 Gmail™ 並在手機上使用 Google 服務。

連接到網絡及裝置

Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速瀏覽互聯網。使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。



連接至 Wi-Fi 網路

要於手機上使用 Wi-Fi，您需要存取無線存取點或「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或使用安全功能；在連接它們前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

注意：如您並非處於 Wi-Fi 地區或已將 Wi-Fi 設定為**關閉**，您可能需支付由流動營運商收取的流動數據使用額外收費。

開啟 Wi-Fi 並連接至 Wi-Fi 網路

- 1 點按  > 應用程式標籤 >  設定 > 網絡標籤 > 無線網路下的 Wi-Fi。
- 2 將 Wi-Fi 設定為 **開啟** 以開啟並搜尋可使用的 Wi-Fi 網路。
- 3 再次點擊 Wi-Fi 功能表以查看已啟用或附近可用的 Wi-Fi 網路。
 - 已加密的網路旁邊會有一個鎖形圖示。
- 4 點按一個網路進行連接。
 - 如該網路已加密，手機會提示您輸入密碼或其他憑證（請向您的網路管理員查詢詳情）。
- 5 狀態欄上的圖示會顯示 Wi-Fi 狀態。

藍牙



在大部分手機上，您可以透過執行相應應用程式，而非從藍牙功能表，使用藍牙傳送資料。

注意：

- LG 並不會對經藍牙無線功能傳送或接收資料而造成的資料遺失、攔截或誤用負責。
- 隨時確保透過信任且安全的裝置分享與接收您的資料。若是裝置之間有障礙物，可能需要縮短可運行的距離。
- 某些裝置（特別是經由藍牙 SIG 測試許可的裝置）可能會與您的手機不相容。

開啟藍牙並與藍牙裝置配對您的手機

您必需先將裝置跟另一部機器配對，才可將兩者連接。

- 1 點按  > 應用程式標籤 >  設定 > 網路標籤 > 無線網路下的藍牙設定為開啟。
- 2 再次點按藍牙功能表。您將看見顯示您手機及搜尋裝置的選項。點按搜尋裝置以檢視藍牙範圍內的裝置。
- 3 從列表中選擇您想配對的裝置。

配對成功後，您的裝置就會連接到該裝置。

備註：某些裝置，特別是耳機或免提車內套件，可能設有固定的藍牙 PIN 碼，例如 0000。如其他裝置設定 PIN 碼，系統將提示您輸入。

連接到網絡及裝置



經由藍牙無線功能發送資料


- 1 從適當的應用程式或**下載**中選擇檔案或項目，如通訊錄、日曆事件或媒體檔案。
- 2 選擇經藍牙傳送資料的選項。

備註：選擇選項的方式會因資料類型而有所差異。

- 3 搜尋和配對已啟動藍牙的裝置。

透過藍牙無線功能接收資料

- 1 點按  > 應用程式標籤 >  設定 > 網絡標籤 > 無線網路下的藍牙設定為**開啟**。
- 2 再次點按**藍牙**功能表，並勾選螢幕頂部的核取方塊，以在其他裝置上顯示。

注意：要選擇您裝置顯示的時間長短，點按  > **可見性逾時**。

- 3 選擇**接受**以確認您願意從該裝置接收資料。

共享手機的數據連接

USB 共享網絡及可攜式 Wi-Fi 熱點在沒有可用的無線網絡連線可用時是個非常好的功能。您可以透過 USB 線（USB 網絡連線）與單一電腦共享手機的流動數據連接。您亦可同時與多部裝置分享您手機的數據連接。將您的手機作為一個可攜式 Wi-Fi 熱點。

有關共享網絡及可攜式熱點的最新資訊，包括受支援的操作系統及其他詳情，請瀏覽 <http://www.android.com>。



要將手機的數據連接以可攜式 Wi-Fi 熱點的形式分享

- 1 點按  > 應用程式標籤 >  設定 > 網路標籤 > 連接下的網路共享和網路 > Wi-Fi 熱點以啟動。
- 2 輸入密碼並點按儲存。

提示！如您的電腦運行的為 Windows 7 或最近發行的 Linux 版本（如 Ubuntu），您將無需為共享網路而預備您的電腦。不過，如您正使用較舊的 Windows 版本或其他作業系統，您可能需要預備您的電腦以經 USB 建立網路連線。有關支援 USB 共享網路的操作系統及其設定方式的最新資訊，請瀏覽 <http://www.android.com>。

要重新命名或保護可攜式熱點

您可以更改手機 Wi-Fi 網路名稱 (SSID)，並保護手機的 Wi-Fi 網路。

- 1 點按  > 應用程式標籤 >  設定 > 網路標籤 > 連接下的網路共享和網路 > Wi-Fi 熱點。
- 2 點按設定 Wi-Fi 熱點。
 - 會開啟設定 Wi-Fi 熱點的對話方塊。
 - 您可以更改其他裝置於掃描 Wi-Fi 網路時看見的 Wi-Fi 名稱 (SSID)。
 - 您亦可點按安全功能表，使用預先共用金鑰 (PSK) 設定 Wi-Fi 受保護存取 2 (WPA2) 的網路。
 - 如果您觸控 WPA2 PSK 安全選項，密碼欄會新增至設定 Wi-Fi 熱點的對話方塊上。如果您輸入密碼，使用電腦或其他裝置連接至手機的熱點時則需要輸入該密碼。您可點按安全功能表內的開啟，從 Wi-Fi 網路移除安全性。
 - 點按儲存。

注意！如果您將安全選項設定為開啟，您不能阻止他人於未經授權下使用網上服務，並可能造成額外收費。要避免未經授權的使用，我們建議您啟用安全選項。

連接到網絡及裝置

Wi-Fi Direct

Wi-Fi Direct 支援連接 Wi-Fi 功能裝置而無需接入點。由於 Wi-Fi Direct 需要使用電量較高，建議您使用 Wi-Fi Direct 功能時，將手機插入電源插座。事先檢查 Wi-Fi 和 Wi-Fi Direct 網絡連接，確保使用者已連接至相同網絡。

如要開啟 Wi-Fi Direct：

- 1 長按功能表鍵  > 系統設定 > 網絡標籤 > Wi-Fi >  > 進階的 Wi-Fi > Wi-Fi Direct。
- 2 從已掃描裝置列表選擇進行連接的裝置。

使用 SmartShare

SmartShare 使用 DLNA（數碼生活網絡聯盟）技術透過無線網絡分享數碼內容。兩個裝置均必須獲 DLNA 認證以支援此功能。

- 1 在您想要播放的內容點按 ，或點按  和 SmartShare。
- 2 點按對話方塊中的 Play 或 Beam。
 - **Play**：您可以透過 TV、藍牙揚聲器等串流您的內容。
 - **Beam**：您可以將您的內容發送至 Bluetooth 裝置或支援 SmartShare Beam 功能的 LG 手機或 Tablet。
 - *SmartShare Beam 透過 Wi-Fi Direct 快速傳輸多媒體內容。
- 3 點按列表上的裝置以播放或接收。
 - 如裝置不在列表上，請確保裝置已開啟 Wi-Fi、Wi-Fi Direct 或藍牙連接。然後點按重新掃描。

4 點選要發送的裝置。

要在手機上享受來自附近裝置（如電腦或流動裝置）的內容

- 1 要將附近裝置連接至您的手機，如下所示點按 **媒體匣**、**音樂** 或 **影片** 應用程式上的 **附近裝置**。
 - 確保您的手機及附近裝置已連接至相同的 Wi-Fi 網絡。

- 確保附近裝置上的 DLNA 功能已開啟。
- 2 點按裝置以進行連接。
如果裝置不在列表上，點按**搜尋附近裝置**。
成功連接後，您可以盡情在手機上享受來自附近裝置的內容。

使用 USB 纜線進行 PC 連接

了解如何於 USB 連接模式中以 USB 纜線將您的裝置連接到 PC。

使用 媒體裝置 (MTP) 模式傳音樂、相片及影片

- 1 使用 USB 數據線將手機連接到 PC。
- 2 如您並未於 PC 上安裝 LG Android 平台驅動程式，您將需手動更改設定。
點按並向下滑動狀態列，然後點按 ，然後選擇媒體裝置 (MTP)。
- 3 現在您可於 PC 上檢視大容量儲存內容及傳輸檔案。

與 Windows Media Player 同步

確保電腦已安裝 Windows Media Player。





- 1 使用 USB 數據線將手機連接至已安裝 Windows Media Player 的 PC。
 - 2 選擇**媒體裝置 (MTP)** 選項。連接完成後，電腦會出現彈出式視窗。
 - 3 開啟 Windows Media Player 以同步音樂檔案。
 - 4 在彈出式視窗編輯或輸入您的裝置名稱（如有需要）。
 - 5 選擇並拖放要同步列表的音樂檔案。
 - 6 開啟同步。
- 必須符合以下要求以完成與 Windows Media Player 的同步。


項目	要求
OS	Microsoft Windows XP SP2、Vista 或更高版本
Window Media Player 版本	Windows Media Player 10 或更高版本

- 如 Windows Media Player 版本為低於 10，請安裝版本 10 或更高版本。

通話功能

撥打電話



- 1 點按  開啟小鍵盤。
- 2 使用鍵盤輸入號碼，要刪除數字，點按 。
- 3 點按  以撥打電話。
- 4 要結束通話，點按**結束**圖示 。

提示！要在撥打國際電話時輸入「+」，點按並按住 。

從通訊錄中撥打電話

- 1 點按  以開啟通訊錄。
- 2 捲動聯絡人列表，或按**搜尋通訊錄**，使用鍵盤輸入該聯絡人姓名。
- 3 在列表中點按您想致電的 。

接聽來電和拒接來電

於鎖定狀態接收到來電時，向任何方向撥動  以接聽來電。
向任何方向撥動  以拒絕接聽來電。
如您想發送訊息，從底部滑動**用訊息拒絕**圖示。






提示！用訊息拒絕

透過此項功能，您可以迅速傳送訊息。如果您需要在會議中拒接來電，此功能就十分有用。

調節通話音量


要在通話時調整通話音量，使用手機背面的向上及向下音量鍵。

通話期間撥打第二個電話


- 1 進行第一個通話時，點按**功能表鍵**  > **新增通話**，然後撥打號碼。您亦可點按 **通話記錄** 以轉至最近撥出號碼列表或點按通訊錄搜尋通訊錄並選擇您想進行通話的聯絡人。
- 2 點按  以撥打電話。
- 3 兩個通話均會在通話螢幕中顯示。您的原來通話會被鎖定及保留。
- 4 點按顯示的號碼，以在通話之間切換。或點按  **合併通話** 以開始電話會議。
- 5 要結束進行中的通話，點按**結束**，或按 ，並向下滑動通知列，然後選擇**結束通話**圖示 。

注意：您撥打的每一個通話均需收費。

檢視通話記錄



在桌面點按  並選擇**通話記錄**標籤 **通話記錄**。
檢視所有已接來電、撥出通話和未接來電的完整清單。

提示！

- 點按任何通話記錄項目，檢視通話的日期、時間和持續時間。
- 點按**功能表鍵** ，然後點按**刪除全部**以刪除所有記錄項目。

通話設定

您可設定由供應商所提供如來電轉接及其他特別功能等的手機通話設定。


- 1 於桌面，點按 。
- 2 點按 。
- 3 點按 **通話設定** 並選擇您想進行調整的選項。

通訊錄




新增通訊錄至您的手機並與您的 Google 帳號或其他支援通訊錄同步的帳號同步。

搜尋通訊錄

從桌面

- 1 點按  以開啟通訊錄。
- 2 點按**搜尋通訊錄**，使用鍵盤輸入該聯絡人姓名。


新增通訊錄

- 1 點按 ，輸入新聯絡人的號碼，然後點按**功能表鍵** 。點按**新增至通訊錄 > 新增通訊錄**。
- 2 如要為新聯絡人新增圖片，點按圖片區。選擇**拍照**或**從媒體匣中選取**。
- 3 點按  選擇通訊錄類型。
- 4 點按聯絡資訊類別，然後輸入聯絡人的詳情。
- 5 點按**儲存**。

最愛通訊錄


您可將常用的聯絡人分類為您的最愛。

新增通訊錄至您的最愛

- 1 點按  以開啟通訊錄。
- 2 點按聯絡人以檢視詳情。
- 3 點按聯絡人名稱右上角的星號。星號將會變為黃色。

通訊錄

從最愛移除聯絡人

- 1 點按  以開啟通訊錄。
- 2 點按**最愛**標籤，然後選擇聯絡人以檢視詳細資料。
- 3 點按聯絡人名稱右上角的黃色星號。星號會變為原來的顏色表示聯絡人將從我的最愛移除。

建立群組



- 1 點按  以開啟通訊錄。
- 2 點按**群組**並按**功能表鍵** 。選擇**新群組**。
- 3 為新群組輸入新名稱。您亦可為新建立的群組設定鈴聲。
- 4 點按**儲存**以儲存群組。

注意：若要刪除某群組，指定給該群組的聯絡人將不會遺失。他們仍將保留在您的通訊錄中。


訊息


手機將文字訊息和多媒體訊息結合在一個易用的功能表中。

發送訊息

- 1 點按桌面上的 ，然後點按  以開啟空白訊息。
- 2 在**收件者**一欄中輸入聯絡人名稱或聯絡人號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。您可點按建議的收件者。您可新增多於一個聯絡人。

備註：向每個聯絡人所發送的訊息將被個別收取費用。

- 3 點按**輸入訊息**欄並開始撰寫訊息。
- 4 點按  以開啟選項功能表。選擇**快捷訊息**、**插入表情符號**、**排程傳送**、**新增主旨**及**捨棄**。

提示！ 您可點按  圖示以將您想分享的檔案附加至訊息。

- 5 點按**發送**以發送訊息。
- 6 螢幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息串連。



警告：

- 160 個字元的限制可能會依國家/地區而有所不同，取決於語言及文字訊息的編碼方式。
- 如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。


訊息

訊息串連方塊

與另一方交換的訊息（文字訊息、多媒體訊息）可按時間順序顯示，讓您方便地查看對話總覽。

更改訊息設定

您手機的訊息設置使您可立即發送訊息。您可因應您的喜好更改設定。

- 點按桌面上的**訊息**圖示，點按 ，然後按**設定**。

電子郵件

您可使用電子郵件應用程式以從例如 Gmail 服務等讀取電子郵件。電子郵件應用程式支援以下帳號類型：POP3、IMAP 及 Microsoft Exchange。



您的服務供應商或管理員系統可提供您所需的帳號設定。

管理電子郵件帳號



於首次開啟**電子郵件**應用程式時，設置精靈將開啟以助您設置電子郵件帳號。

於初始設置後，電子郵件會顯示您收件匣的內容。




要新增其他電郵帳號：

- 點按  > 應用程式標籤 > **電子郵件** > 點按  > 設定 > 。



要更改電子郵件設定：

- 點按  > 應用程式標籤 > **電子郵件** > 點按  > 設定 > 一般設定。

要刪除電子郵件：

- 點按  > 應用程式標籤 > **電子郵件** > 點按  > 設定 >  > 點按**移除帳號**的選項 > **移除** > 選擇是。

處理帳號資料夾





點按  > 應用程式標籤 > **電子郵件** > 點按  並選擇**資料夾**。

每個帳戶設有收件匣、草稿、寄件匣及已發送資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的功能而定。

電子郵件

編寫及發送電子郵件

要編寫及發送訊息

- 1 在**電子郵件**應用程式，點按 。
- 2 輸入將會收到訊息的收件者的地址。於輸入文字時，會從您的通訊錄建議符合地址。
- 3 點按  以新增副本/密件副本，如有需要，點按  以附加檔案。
- 4 輸入訊息的文字。
- 5 點按 。

提示！ 當新電子郵件到達您的收件匣時，會以聲音或震動進行通知。

相機

要開啟相機應用程式，點按於桌面上的**相機** 。

瞭解取景器


















- 1 閃光燈 - 選擇**關閉**、**開啟**、**自動**。
- 2 切換鏡頭 - 允許您切換至後方鏡頭或前置鏡頭。
- 3 拍攝模式 - 選擇**標準**、**拍攝與清除**、**動態調和 (HDR)**、**超廣角**、**VR 全景**、**快速連拍**、**人面優化**、**雙鏡頭拍攝**、**時間捕捉拍攝**、**智能自動調整**、**運動**或**夜間**。
- 4 設定 - 點按此圖示以開啟設定功能表。
- 5 影片模式 - 點按並向下滑動此圖示以切換至影片模式。
- 6 拍攝鍵
- 7 媒體匣 - 點按以觀賞您最後拍攝的相片。此讓您可於相機模式時進入媒體匣並檢視已儲存相片。

注意：於拍攝相片前請確保相機鏡頭清潔。

相機

使用進階設定


在取景器，點按  以開啟進階選項。於拍攝相片前請確保相機鏡頭清潔。選擇選項後，點按 。

	要拍攝相片，說出以下字詞：Cheese、Smile、Whisky、Kimchi 或 LG。
	決定並控制進入影片的亮度。
	點按以選擇對焦模式。
	選擇相片解像度。如您選擇高解像度，相片大小將會增加，這代表您可於記憶體中儲存較少相片。
	ISO 等級決定相機的光線感應器的感光度。ISO 等級越高，相機對光線越敏感。當您在光線較暗環境下拍照且無法使用補光燈時，此功能非常有用。
	設定白平衡。
	對相片添加色彩效果。
	設定於按下拍攝鍵後延遲快門。此功能最適合自拍時使用。
	啟動此功能以使用手機的地理標籤。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。 注意： 此功能只可於 GPS 功能啟用時提供。
	選擇快門音。
	設置音量鍵拍攝或縮放。
	打開說明指南，了解功能的運作方式。
	還原所有相機的預設設定。

提示！





- 當您退出相機後，某些設定將返回預設，例如白平衡、色彩效果、計時器及場景模式。拍攝下一張相片前，請先檢查這些設定。
- 設定功能表疊於取景器上，因此當您更改相片顏色或品質的設定，您會在設定功能表背後看見預覽圖像的更改。

快速拍照

- 1 開啟**相機**應用程式。
- 2 橫向握住手機，將鏡頭對準拍攝的對象。
- 3 對焦方框將出現於取景器中心。您亦可點按螢幕中任何地方以進行對焦。
- 4 當對焦方塊變藍，則表示相機對焦完成。
點按  以拍攝相片。

使用拍攝與清除模式

此功能讓相機識別您不想在相片中出現的物件。拍照後，點擊一個實線的物件以清除它，然後儲存相片。




- 1 開啟**相機**應用程式。
 - 2 點按  >  拍攝與清除。
 - 3 點按  以拍攝相片。
 - 4 點按任何實線的物件以將它們從相片移除，然後點按 。
- * 拍照時，正在移動的物件會顯示為虛線。

相機


備註





- 將相機固定在一個地方後拍攝相片。
- 如果主體的顏色與背景相似，可能只能偵測到一部分，又或可能難以清除。
- 如果正在移動的主體太小或太大，可能難以清除。
- 如果主體移動的幅度太微小，可能偵測不到。

使用雙鏡頭拍攝模式

- 1 開啟**相機**應用程式。
- 2 點按  >  雙鏡頭拍攝。
- 3 一個小取景器方框會顯示於主取景器螢幕。設定您的拍攝。
 - 拖動小取景器以移動至拍攝中想要的位置。
 - 如有需要，可觸控並按住小取景器以重新調整大小。
 - 點擊小取景器以切換主取景器及小取景器的鏡頭。
- 4 點按  以拍攝合併圖片。





使用時間捕捉拍攝模式

設定相機在點按  前拍攝五張連續相片，以捕捉錯過的時刻。

- 1 開啟**相機**應用程式。
- 2 點按  >  時間捕捉拍攝。
- 3 點按  以拍攝相片。
- 4 要檢視拍攝相片前的一刻，請點按相機螢幕底部的圖像縮圖。
- 5 選擇您想保留的圖片，然後點按螢幕最上的  。


拍攝相片後

點按  以檢視您最後拍攝的相片。

	點按以編輯您的相片。
	點按以立即拍攝新相片。
	點按以將相片發送至其他人或通過社交網絡服務分享相片。
	點按以刪除相片。

提示！ 如您擁有於手機上建立的 SNS 帳號，您可與 SNS 社群分享相片。

檢視已儲存的相片

當於相機模式時您可存取已保存相片。只需點按媒體匣圖示  然後媒體匣隨即顯示。

- 若要檢視更多相片，請左右捲動。
- 要放大或縮小，請在畫面上點按兩下，或放上兩隻手指，然後分開以放大（將手指靠攏即可縮小）。

視像攝錄機

瞭解取景器












- 1 **閃光燈** - 選擇**關閉**、**開啟**、**自動**。
- 2 **切換鏡頭** - 在後置相機鏡頭與前置相機鏡頭之間切換。
- 3 **錄製模式** - 選擇**標準**、**雙鏡頭錄影**或**追蹤縮放**。
- 4 **設定** - 點按此圖示以開啟設定功能表。
- 5 **相機模式** - 點按並向上滑動此圖示，以切換至相機模式。
- 6 **開始錄製**
- 7 **媒體匣** - 點按以觀看您最後錄製的影片。此讓您可於影片模式時進入媒體匣並檢視已儲存影片。

提示！


於錄製影片時，將兩隻手指置於螢幕上並散開手指以使用縮放功能。

使用進階設定


使用取景器，點按  以開啟所有進階選項。

	點按以開啟音訊縮放功能。您可以清晰並大聲地錄製您所需的聲音。開啟此功能後，於藍色圈內對焦您想進行縮放的主體。要放大聲音及視野，用手指散開。 備註 <ul style="list-style-type: none">• 只可在橫向檢視時使用。• 請勿遮蓋兩旁的咪高風。
	點按以設定正錄製影片的大小（像素）。
	決定並控制進入影片的亮度。您可滑動亮度指標：向「-」滑動使影片較暗，或向「+」滑動使影片較亮。
	設定白平衡。
	選擇色彩效果。
	啟動此功能以使用手機的地理標籤。
	設置音量鍵錄音或縮放。
	打開說明指南，了解功能的運作方式。
	還原所有相機的預設設定。



錄製短片

- 1 開啟**相機**應用程式並滑動**影片模式**按鈕。
- 2 視像攝錄機的取景器會在螢幕上顯示。
- 3 握住手機，將鏡頭對準拍攝影片的對象。
- 4 按一下  以開始錄製。

視像攝錄機

- REC 將於取景器上方出現，而計時器會顯示影片錄製的長度。
- 點按螢幕上的  以停止錄製。

提示！

-  - 點按即可在錄製影片時拍攝圖片。
-  - 點按即可在錄製影片時暫停。

錄製影片後

點按  以檢視您最後拍攝的影片。



點按以拍攝另一段影片。





點按以將影片發送至其他人或通過社交網絡服務分享影片。



點按以刪除影片。

觀看已儲存的影片





在取景器中點按 ，可以看到媒體匣。點按影片播放圖示  以播放影片。

觀看影片時調整音量

要在影片播放途中調整音量，您可使用在手機後的音量鍵。

使用音訊縮放

將聲音集中於您所選擇的特定區域，這可增加咪高風的敏感度，並減少背景噪音。





- 1 開啟**相機**應用程式並更改為錄影模式。
- 2 點按  >  音訊縮放並選擇開啟。
- 3 點按取景器上的空白位置，以關閉設定彈出視窗。
- 4 橫向握住手機，並點按  以開始錄製。
- 5 將您想放大的主體對焦在藍色圓圈內。然後，縮放以放大，增加聲音敏感度並減少噪音。
- 6 點按  以停止錄影。

備註

- 使用此功能時請勿遮蓋側咪高風。
- 要使用此功能，您必須以橫向方向錄製。





使用雙鏡頭錄影模式

讓您同時使用前置鏡頭及後置鏡頭錄製影片，並合併為一段影片。

- 1 開啟**相機**應用程式並更改為錄影模式。
- 2 點按  >  **雙鏡頭錄影**。
- 3 一個小取景器方框會顯示於主取景器螢幕。設定您的拍攝。
 - 拖動小取景器以移動至拍攝中想要的位置。
 - 如有需要，可觸控並按住小取景器以重新調整大小。
 - 點擊小取景器以切換主取景器及小取景器的鏡頭。
- 4 點按  以開始雙鏡頭錄影。
- 5 點按  以停止雙鏡頭錄影。

使用追蹤縮放模式


讓您定義一個錄影區域以進行對焦及放大。您可於錄影前先設定區域，然後按需要在錄影期間移動它。


- 1 開啟**相機**應用程式並更改為錄影模式。
- 2 點按  >  **追蹤縮放**。
- 3 拖動放大鏡至要放大的區域。小螢幕會顯示大視圖中的清晰焦點。
- 4 點按  以開始錄影。
 - 錄影期間，您可以移動小螢幕。觸控並拖動它至想要的位置
- 5 點按  以停止錄影。

功能

QuickMemo+

使用 **QuickMemo+** 在通話期間實際有效地建立備忘錄，還可附上已儲存圖片或目前手機畫面。

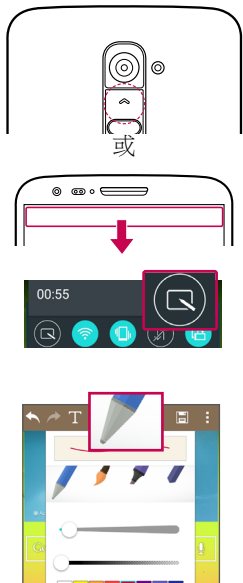


- 1 (當螢幕關閉時) 按住音量提升鍵。又或者在狀態欄點按並向下滑動，然後點按 。

- 2 從**筆型、厚度、透明、顏色、橡皮擦**選擇所需功能表選項，然後建立備忘錄。

功能



- 3 點按編輯功能表中的 ，將備忘錄與目前畫面一同儲存至**筆記本**或**媒體匣**。

注意：使用 QuickMemo+期間，請使用指尖。請勿使用指甲。

使用 QuickMemo+ 選項

使用 QuickMemo+ 時，您可輕鬆使用快捷菜單選項。



復原或重新執行。



選擇筆型及顏色。



刪除已建立的備忘錄。



將備忘錄與目前畫面一同儲存至**筆記本**或**媒體匣**。


檢視已儲存的 QuickMemo+

點按**筆記本/媒體匣**並選擇 QuickMemo+ 相簿。


QuickTranslator

只需將智能手機相機對準想進行了解的外語句子。您便可隨時隨地取得實時翻譯。

您可從 Google Play Store 購買用作離線翻譯的附加字典。

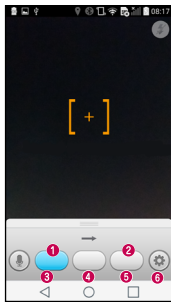

- 1 主頁語言。
- 2 目標語言。
- 3 單字翻譯。
- 4 句子翻譯。
- 5 段落翻譯。
- 6 設置。

- 1 點按  > 應用程式標籤 > QuickTranslator。
- 2 點按單字、線路或段落。
- 3 點按並選擇所需語言。
- 4 手持手機對準您想進行翻譯的主題數秒。

注意：只提供一本免費字典。額外字典需進行購買。請從列表選擇您想安裝作為免費贈送的字典。

注意：於辨別需翻譯的字母時所需速度可能因其大小、字型、顏色、亮度、角度而有所不同。

功能

QSlide

QSlide 可於您手機的顯示上進行覆蓋，以輕鬆實現多視窗功能。



1		點按以離開 QSlide 並返回至完整視窗。
2		點按以調整透明度。
3		點按以結束 QSlide。
4		點按以調整大小。

- 1 點按並向下滑動狀態欄 > 點按 QSlide 應用程式或於使用 QSlide 支援的應用程式時 > 點按 。功能將持續以小視窗顯示於螢幕上。
- 2 您可以撥打電話、瀏覽網站或選擇其他電話選項。當透明度欄並未全滿時，您亦可使用及點按小視窗畫面 。

注意：QSlide 可同時支援最多兩個視窗。


QuickRemote

QuickRemote 可將您的手機變身成家中電視、機頂盒、音訊系統、DVD/Blu-ray 播放器、冷氣機及投影機的萬用遙控器。




- 1 點按  > 應用程式標籤 > QuickRemote  > 點按 .

或者

- 點按並向下滑動狀態欄，然後點按  > 新增遠端。

- 2 選擇裝置的類型和品牌，然後按照螢幕上的說明設定裝置。

- 3 點按並向下滑動狀態欄，並使用 QuickRemote 功能。

點按功能表鍵 ，以選擇**魔力遙控器設定**、**編輯遙控器名稱**、**瞭解遙控器**、**移動遙控**、**刪除遙控**、**設定及說明**。

功能

注意：QuickRemote 與普通遙控的紅外線 (IR) 訊號的操作方式相同。使用 QuickRemote 功能時，請注意不要遮蓋手機頂部的紅外線感應器。視乎型號、製造商或服務供應商而定，此功能可能無法支援。



即時縮放

即時縮放功能讓您於正在播放的影片上按比例放大或縮小，以令所需的部分變得更大或更小。

觀看影片時，運用食指及拇指捏緊或散開以放大或縮小。

注意：

- 播放影片時，向上或向下滑動螢幕左側以調整亮度。
- 播放影片時，向上或向下滑動螢幕右側以調整音量。
- 播放影片時，向左或向右滑動螢幕以倒退或快進影片。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控螢幕已能感應。

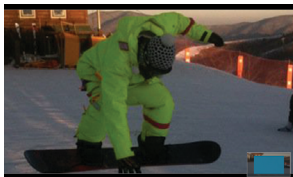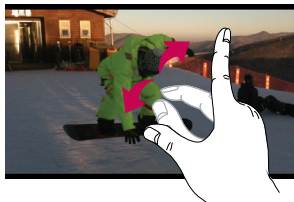


LG SmartWorld

LG SmartWorld 提供各式各樣的豐富內容 - 遊戲、應用程式、牆紙及鈴聲 - 讓 LG 手機使用者盡享多姿多采的「流動生活」體驗。

如何從手機進入 LG SmartWorld

- 1 點按  > **應用程式** 標籤 > 點按  圖示以存取 **LG SmartWorld**。
- 2 輸入 LG SmartWorld 的電子郵件及密碼並點按登入。如您尚未註冊，點按註冊以接收您的 LG SmartWorld 會籍。
- 3 下載想要的內容。

附註：如果沒有 圖示該怎麼辦？

- 1 使用手機網絡瀏覽器，存取 LG SmartWorld (www.lgworld.com) 並選擇您的國家/地區。
- 2 下載 LG SmartWorld 應用程式。
- 3 執行並安裝已下載的檔案。
- 4 點按  圖示以存取 LG SmartWorld。

功能

如何使用 LG SmartWorld

- 參與 LG SmartWorld 每月推廣。



搜尋內容。





以類別搜尋內容（例如：遊戲、教育、娛樂等。）

- 嘗試使用簡易「功能表」按鍵，快速尋找您正在搬尋的內容。
 - 設定** - 標準設定以及查看版本資訊。
 - 登入** - 輸入電子郵件及密碼。
- 也嘗試其他實用的功能吧。（內容詳見資料螢幕）

注意：LG SmartWorld 或未能在所有運營商或國家中提供。

媒體匣

您可在儲存裝置中儲存多媒體檔案，以便存取您所有的多媒體檔案。使用此應用程式以檢視如圖片或影片等多媒體檔案。

1 點按  > 應用程式標籤 >  媒體匣。

您可管理並與媒體匣分享所有圖像及影片檔案。

注意：

- 視乎手機的軟件而定，可能不支援部分檔案格式。
- 視乎檔案編碼而定，某些檔案或不能正常播放。

檢視圖片

啟動媒體匣將顯示可提供的資料夾。當其他應用程式如電子郵件等保存圖片時，下載資料夾會自動建立以存放該圖片。同樣地，當擷取螢幕截圖時，會自動建立螢幕截圖資料夾。選擇資料夾以開啟。



圖片會以建立日期排序顯示於資料夾。選擇圖片以進行全螢幕檢視。向左或右捲動以檢視下一個或上一個圖像。

放大及縮小


使用以下方法以放大圖像：

- 於任何位置點按兩次以放大。
- 於任何位置將手指分開以放大。捏緊以縮小或點按兩次以返回。

播放影片

影片檔案的  圖示將顯示於預覽中。選擇影片進行觀看並點按 。影片應用程式將隨即啟動。

編輯相片

檢視相片時，點按 。

刪除相片/影片

使用以下方法：

- 於媒體匣中，點按  並以勾選方式選擇相片/影片，然後點按**刪除**。
- 於檢視相片/影片時，點按 。




設定為牆紙

於檢視相片時，點按**功能表鍵**  > **將影像設定為** 以將圖片設定為通訊錄相片、主頁螢幕牆紙、Wallpaper 以及鎖定畫面牆紙。





注意：


- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。






播放影片



1 點按  >  > **應用程式 標籤** >  **媒體匣**。

2 選擇要播放的影片。



- ▶  **QSlide**：於手機啟用覆疊顯示以輕鬆處理多項工作。
- ▶  **SmartShare**：與 DLNA 認可裝置分享媒體檔案。
- ▶  **功能表**：點按以存取螢幕比例、字幕、分享、裁剪、設定、詳細資訊選項。
- ▶  **螢幕擷取畫面**：播放影片時擷取螢幕畫面。

注此：點按  > **設定** > **開啟螢幕擷取畫面**。

- ▶  **音量**：點按以顯示音量滑動列，然後滑動即可調整播放音量。
- ▶  **鎖定/解鎖螢幕**：鎖定觸控鍵以防止意外觸控。
- ▶  **暫停**：點按以暫停影片播放。
- ▶  **播放**：點按以恢復影片播放。
- ▶  **快轉**：點按即可快轉 10 秒。

- ▶  **倒轉**：點按即可倒轉 10 秒。
- ▶  **最愛**：點按以將影片新增至您的最愛。

播放影片

- 1 在桌面點按**應用程式鍵**  > **媒體匣**  檢視已儲存的影片。
- ▶ 向上或下捲動以檢視更多相簿。
- 2 點按相簿以開啟及檢視內容。（相簿的相片及影片按時序顯示。）
- 3 點按相簿中的影片以播放。
- ▶ 點按影片以檢視播放控制選項。


備註：播放影片時，向上或向下滑動螢幕左側即可調整亮度。播放影片時，向上或向下滑動螢幕右側以調整音量。播放影片時，點按時間軸透過小螢幕預覽正在播放的影片。點按小螢幕以跳至該影片部分。播放影片時，從左到右（或相反）滑動手指以快進或倒退。

影片編輯器

您可編輯儲存於手機上的相片或影片。

注意：影片編輯器功能只支援使用本手機拍攝或錄製的相片或影片。

< 項目列表畫面 >

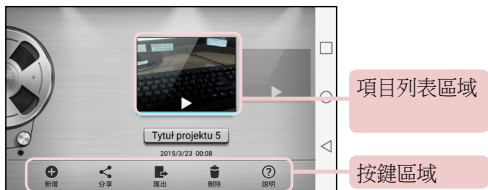

新增項目



於例如 YouTube 等應用程式中分享項目



如影片等項目應匯出至應用程式進行播放




刪除項目



說明

< 項目編輯畫面 >

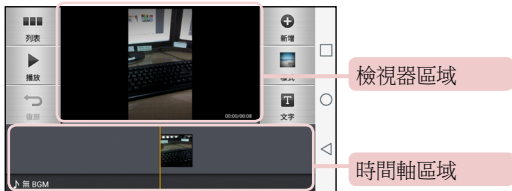

	移至項目列表畫面，目前已編輯的項目會被自動保存
	點按以播放目前片段。
	復原。
	點按以新增額外影片、圖像、標題或音效檔。
	點按以選擇式樣。
	新增文字。

音樂

手機配備內置音樂播放器，可讓您播放所有最愛的曲目。要存取音樂播放器，點按 > 應用程式標籤 > 音樂。

新增音樂檔案至手機


開始傳輸音樂檔至手機：

- 使用媒體裝置 (MTP) 傳輸音樂。
- 從無線網絡下載。
- 將手機同步至電腦
- 通過接收檔案。

使用媒體裝置 (MTP) 傳輸音樂

- 1 使用 USB 線將手機連接到電腦。
- 2 選擇**媒體裝置 (MTP)** 選項。您的手機會顯示為電腦上的其他硬碟。點擊該硬碟以檢視。複製電腦的檔案至磁碟資料夾。
- 3 完成傳輸檔案後，向下滑動狀態欄並點按**媒體裝置(MTP) > 手機充電**。您現在可以安全地移除您的裝置。

播放歌曲

- 1 點按  > **應用程式標籤 > 音樂**。
- 2 點按**歌曲**。
- 3 選擇要播放的歌曲。

	點按以暫停播放
	點按以恢復播放
	點按以跳至專輯或播放列表的下一首曲目
	點按以返回歌曲的開首。點按兩次以返回上一首歌曲
	點按以控制歌曲音量
	輕觸以設置音頻效果
	點按以查看目前播放列表
	點按以設定為最愛
	點按以設定隨機播放模式
	點按以設定重複播放模式



點按以使用 SmartShare 功能分享您的音樂。

要在聆聽音樂時調節音量，按手機後面的向上及向下音量鍵。
點按並按住列表上的任何歌曲。**播放**、**新增至播放列表**、**刪除**、**分享**、**設為鈴聲**、**詳細資料**及**搜尋**選項將會顯示。

注意：

- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。





注意：音樂檔案的版權可能受國際公約和國內版權法保護。
因此，您或需要取得授權或許可，才可以複寫或複製音樂。
在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，先檢查有關國家關於使用這類材料的國家法律。

實用程式

訪客模式


要保護您的私隱或限制子女使用部分應用程式，您可使用訪客模式。如您將手機借給他人，您可以限制顯示的應用程式。您可預先設定至訪客模式，並自訂選項。

注意：要使用訪客模式，需要先預設圖案鎖定。





- 1 點按  >  >  **設定** > **一般標籤** > **訪客模式**。
- 2 點擊  開啟**訪客模式**。

設定鬧鐘




- 1 點按  > **應用程式標籤** >  **時鐘** > 。
- 2 設定鬧鐘後，手機會讓您知道距離鬧鐘響起還剩下多少時間。
- 3 設定**重複**、**暫停時間**、**鬧鐘響時震動**、**鬧鐘提示音**、**鬧鐘音量**、**自動應用程式啟動器**、**拼圖鎖**及**備忘錄**。點按**儲存**。

注意：如要在鬧鐘列表畫面上更改鬧鐘設定，點按  並選擇**設定**。

使用計算機

- 1 點按  > **應用程式標籤** >  **計算機**。
- 2 觸控數字鍵以輸入數字。
- 3 對於簡單計算，請點按所需的功能（+、-、×、÷），然後按「=」。
- 4 如要使用科學計算機，請點擊選項功能表  並選擇**科學計算機**功能表。
- 5 如要查閱紀錄，請點擊選項功能表  並選擇**計算記錄**功能表。






新增事件至日曆


- 1 點按  > 應用程式標籤 >  日曆。
- 2 您可在螢幕中找到不同的日曆檢視類型（日、星期、月、年份、議事日程）。
- 3 點按您想新增事件的日期並點按 。
- 4 點按**事件名稱**然後輸入事件名稱。
- 5 點按**位置**以進入地點。檢查日期，並輸入事件開始及完結的時間。
- 6 如有需要亦可設定**提醒類型**。
- 7 點按**儲存**，將事件儲存至日曆。

語音備忘錄

使用錄音程式錄製語音備忘錄或其他聲音檔案。

錄製聲音或語音

- 1 點按  > 應用程式標籤 >  語音備忘錄。
- 2 點按  開始錄音。
- 3 點按  以結束錄音。
- 4 點按  以聆聽錄音。

注意：點按  以存取您的錄音集。您可聆聽已儲存的錄音。可供錄音時間可能與實際錄音有所不同。

實用程式

工作管理員

您可使用工作管理員管理應用程式。您可簡易查看目前正運行的應用程式數目並關閉某些應用程式。

工作

此工作可使用 MS Exchange 帳戶同步處理。

您可在 MS Outlook 或 MS Office Web Access 中建立工作、重新編輯和刪除工作。



同步處理 MS Exchange

- 1 從桌面輕按  >  > **應用程式鍵** >  **設定**。
- 2 點按 **一般** 標籤 > **帳號及同步處理** > **新增帳號**。
- 3 點按 **Microsoft Exchange** 以建立電郵地址和密碼。
- 4 請確認您已勾選同步工作。

注意：視乎電郵伺服器，可能不支援 MS Exchange。

POLARIS Viewer 5

POLARIS Viewer 是專業的流動辦公室解決方案，讓使用者隨時隨地使用流動裝置輕鬆檢視不同類型的辦公室文件，包括 Word、Excel 和 PowerPoint 檔案。



點按  > **應用程式** 標籤 >  **POLARIS Viewer 5**。

檢視檔案

手機用戶現在可以直接在流動裝置上輕易檢視各式各樣的檔案類型，包括 Microsoft Office 文件和 Adobe PDF。使用 POLARIS Viewer 5 檢視文件時，物件和版面會保持與原始文件相同。

Google+

使用此功能以通過 Google 的社交網絡服務與人們保存聯繫。

- 點按  > 應用程式標籤 >  Google+。

注意：此功能可能因應地區或服務供應商而未能提供。

語音搜尋



使用此功能以語音搜尋網頁。

- 1 點按  > 應用程式標籤 >  語音搜尋。
- 2 當**現在請講話**出現於畫面時說出關鍵字或字詞。從出現的建議關鍵字中進行選擇。

注意：此功能可能因應地區或服務供應商而未能提供。

下載

使用此功能以查看已通過應用程式下載的檔案。

- 點按  > 應用程式標籤 >  下載。



注意：此功能可能因應地區或服務供應商而未能提供。

網絡功能

互聯網






使用此功能以瀏覽互聯網。無論您身在何處，有何需求，瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接在手機上載入更多內容。

注意： 連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。

1 點按  > 應用程式標籤 >  互聯網。

使用網絡工具列



用手指點按並向上滑動以開啟工具列。


	點按以返回前一頁。
	點按以前往您在目前頁面後連接的一頁。此等同當您按 < 返回上一頁的相反操作方式。
	點按以前往主頁。
	點按以新增新視窗。
	點按以查看書籤。

檢視網頁


點按地址欄，輸入網址並點按**跳至**。

開啟頁面

要前往新頁面，點按  → 。

要前往其他網頁，點按 ，向上或向下捲動並點按頁面以進行選擇。

以語音搜尋網站

點按地址欄，點按 ，說出關鍵字，然後從所出現的建議關鍵字進行選擇。



注意：此功能可能因應地區或服務供應商而未能提供。

書籤

要將目前網頁新增為書籤，點按  > **新增至書籤** > **確定**。



要開啟已新增書籤的網頁，點按  並進行選擇。

歷史記錄

點按  > **記錄** 以從近期瀏覽的網頁列表中開啟網頁。要清除記錄，點按清除全部 。

Chrome

使用 Chrome 以搜尋資訊及瀏覽網頁。


1 點按  > 應用程式標籤 >  Chrome。

注意：此功能可能因應地區或服務供應商而未能提供。

檢視網頁



點按地址欄然後輸入網址或搜尋範圍。

開啟頁面




要前往新頁面，點按  → New tab。

設定

此章節是可以利用手機系統設定功能表更改的項目總覽。存取設定功能表：

點按  > 觸碰並按住  > **系統設定**。

- 或 -

點按  >  > **應用程式 標籤** >  **設定**。

網絡

< Wi-Fi >

Wi-Fi - 開啟 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

提示！ 如何取得 MAC 位址

若要在某些設有 MAC 過濾器的無線網絡建立連線，您需要將手機的 MAC 位址輸入至路由器。

您可以在以下界面，查看手機的 MAC 位址：點按  >  > **應用程式 標籤** >  **設定** > **網絡 標籤** > **Wi-Fi** >  > **進階的 Wi-Fi** > **MAC 位址**。

<藍牙>

開啟或關閉藍牙無線功能。

<流動數據>

顯示數據使用並設定流動數據限制。

<通話>

您可設置手機的通話設定，例如來電轉接及服務供應商提供的特別功能。

留言信箱 - 讓您選擇您服務供應商的語音信箱服務。

固定撥號 - 開啟並編譯可從您的手機撥出的號碼列表。需要使用 PIN2，您可以向網絡商索取此 PIN2。僅可從手機撥出固定撥號列表包含的號碼。

來電快顯視窗 - 使用應用程序時顯示來電快顯視窗。

設定

拒接來電 - 讓您設定拒接來電功能。您可選擇**來電拒接模式**或**拒接通話**。

用訊息拒絕 - 當您想拒接來電時，使用此功能可以快速發送訊息。如果您需要在會議中拒接來電，此功能將十分有用。

隱私保護工具 - 隱藏來電者名稱及號碼。

來電轉接 - 選擇忙碌、無人接聽時、無法接通時或永遠轉接以及查看通話轉接指南。

自動接聽 - 設定時間後，已連接的免提裝置會自動接聽來電。選擇關閉、1 秒、3 秒及 5 秒。

連接震動 - 在對方接聽來電時手機震動。

語音改進 - 改善吵鬧環境下的語音品質，因此您可以聽得更清楚。

儲存未知號碼 - 通話後將未知號碼新增至通訊錄。

電源鍵結束通話 - 允許您按電源鍵結束通話。

通話限制 - 鎖定來電、撥出或國際通話。

通話時間 - 檢視最後通話、撥出通話、來電及所有通話的通話時間。

其他設定 - 您可變更以下設定：

本機號碼 - 選擇是否在撥出的電話中顯示您的電話號碼。

來電待接 - 如已啟動來電等候，當您在通話中接到來電，手機便會通知您（視乎您的網絡供應商而定）。

<共用與連線>

NFC - 您的手機支援 NFC 功能。NFC（近距離無線通訊）為一種無線連接技術，使得電子裝置之間具有雙向溝通能力。NFC 可於數公分的距離上運作。您可輕鬆以您的裝置觸碰 NFC 標籤或其他支援 NFC 的裝置以分享內容。如果您以裝置接觸一個 NFC 標籤，裝置就可以顯示標籤的內容。

開啟或關閉 NFC - 在桌面用手指點選並向下滑動通知面板，然後選擇 NFC 圖示以開啟。

備註：飛行模式啟動時，仍然可以使用 NFC 應用程式。

使用 NFC - 要使用 NFC，請先確認您的手機已經開機。如 NFC 已被停用，請將功能重新啟用。

Android Beam - 開啟此功能時，只要將裝置貼近另一支援近距離通訊 (NFC) 裝置，即可傳送應用程式內容。

只需將兩部裝置貼近（通常為背對背）然後點按螢幕，應用程式會決定需要傳送的項目。

SmartShare Beam - 開啟以透過 SmartShare Beam 從 LG 手機或 Tablet 接收多媒體內容。

媒體伺服器 - 讓您透過 DLNA（數位生活網路聯盟）與附近裝置共享媒體內容。

Miracast - 您可以將手機螢幕和聲音以無線方式鏡像到支援 Miracast 的電視或連接 Miracast dongle 的 TV 上。

LG PC Suite - 將手機連接至 LG PC Suite，輕鬆管理多媒體內容及應用程式。

Wi-Fi 連線 - 勾選然後啟用 Wi-Fi 連接，並於電腦與電話間傳送音樂或圖片。

說明 - 點按以查看有關 LG PC Suite 資訊。

<網絡共享和網絡>

USB 網絡連線 - 連接 USB 線與電腦分享互聯網連接。

Wi-Fi 熱點 - 您亦可使用手機，提供流動寬頻連線。建立熱點並分享連接。

藍牙數據連線 - 可讓您透過藍牙連接至其他裝置，共享手機的網絡連接。

說明 - 點選以檢視關於 Wi-Fi 熱點及藍牙數據連線功能的說明資訊。

飛航模式 - 切換至飛航模式後，所有無線通訊會被停用。

流動網絡 - 設定流動數據、數據漫遊、網絡模式和電訊網絡商及存取點名稱 (APNs) 等的選擇。

VPN - 顯示您以前配置的虛擬專用網絡 (VPN) 列表。允許您新增不

設定

同類型的 VPN。


備註：使用加密儲存前，必須設定螢幕鎖定 PIN 或密碼。


聲音

聲音設定檔 - 您可以選擇聲音、僅震動、勿干擾。

音量 - 調整手機的音量設定以配合您的需要及環境。

震動強度 - 讓您可為來電、通知及點選震動設定震動強度。

鈴聲 - 設定來電的鈴聲。您亦可以點按螢幕右上角的  以新增鈴聲。

通知聲音 - 設定通知的聲音。您亦可以點按螢幕右上角的  以新增通知音。

聲音與振動 - 勾選以設定來電時播放電話鈴聲及震動。

震動類型 - 讓您設定來電震動類型。選擇**快速**、**快速重複**、**標準**、**滴答聲**或**連續震動**。

勿干擾 - 設定您的手機不顯示通知的時間及模式。選擇**全部**、**僅優先級**或**無**。

僅優先級 - 設定為只限優先時可使用特定功能。鬧鐘永遠優先。

從設有行事曆事件、來電、新增訊息或允許的通訊錄中選擇

日程表 - 即使設定為所有，只有優先的通知可重複顯示。

鎖定螢幕 - 於鎖定螢幕設定顯示或隱藏所有通知。

應用程式 - 設定應用程式通知。選擇**無**以不顯示應用程式通知，**優先**以顯示優先於其他應用程式的通知，**靜音**僅顯示優先的通知。

點選震動 - 勾選以於點按主頁觸摸按鈕和撥號等時震動。

音效 - 點按以設定撥號鍵盤觸控音、輕觸聲音及螢幕鎖定聲音。

撥號鍵盤觸控音 - 勾選以於使用撥號鍵盤時播放音效。

輕觸聲音 - 勾選以於作出螢幕選擇時播放音效。

螢幕鎖定聲音 - 勾選以於鎖定及解鎖螢幕時播放音效。

訊息/通話聲音通知 - 點按訊息/通話聲音通知鍵以開啟或關閉。通知開啟時讓您的手機自動大聲讀出來電及/或訊息。

顯示

<桌面>

設定**主題、牆紙、螢幕效果**或**允許主頁螢幕循環**。

主頁備份與還原 - 您可以備份及還原應用程式/小工具的版面及主題。

說明 - 點按以檢視桌面的說明資訊。

<鎖定螢幕>

選擇螢幕鎖定 - 設定螢幕鎖定類型以保護手機安全。開啟一系列畫面，以指導您繪畫螢幕解鎖圖案。設定**無、揮動、Knock Code、圖形、PIN 碼或密碼**。

如果您已啟用圖形鎖類型，當您開啟手機或螢幕時，系統會要求您畫出解鎖圖形以解鎖螢幕。

Smart Lock - 設定何時使用信任的裝置（藍牙裝置或 NFC）或信任的臉孔自動為電話解鎖。當鎖定畫面設定為 **Knock Code、圖案、PIN 碼** 或密碼，就可以使用這個功能。

螢幕效果 - 設定螢幕效果選項。選擇**輕粒子、向量圓圈、馬賽克、蘇打**。

備註：如螢幕鎖定設定為圖形，此設定的名稱可能是模式效果。

牆紙 - 設定您的鎖定畫面牆紙。從**媒體匣**或**牆紙圖庫**中選擇。

捷徑 - 可讓您選擇可在鎖定螢幕上使用的捷徑。

天氣動畫 - 勾選以根據自動數據更新顯示目前位置或在天氣中設定的主要城市的天氣動畫。

擁有者資訊 - 勾選以設定在鎖定螢幕上顯示的裝置擁有者名稱。

鎖定時計 - 設定螢幕逾時後自動鎖定的時間。

電源按鈕立即鎖定 - 勾選以在按下電源/鎖定鍵時立即鎖定螢幕。此

設定

設定覆蓋安全鎖計時器的設定。

<主頁觸摸按鈕>

設定所有螢幕底部顯示的桌面觸控鍵。設定要顯示哪些鍵、它們在欄上的位置以及樣式。選擇按鈕組合、顏色及隱藏主頁觸摸按鈕。

<字體類型>

設定手機及功能表使用的字體類型。

<字體大小>

設定手機及功能表顯示的字體大小。

<亮度>

調節螢幕亮度。為享有最佳的電池性能，請使用最暗的舒適亮度。

<通知 LED 燈>

點選開關按鈕將其切換至開啟或關閉。開啟時會啟動您勾選的顯示的 LED 通知燈。

<自動旋轉螢幕>

勾選以設定手機根據手機方向（縱向或橫向）而自動旋轉螢幕。

<螢幕逾時>

設定螢幕逾時的時間。

<智慧螢幕>

勾選以設定螢幕偵察到您的臉孔時保持開啟。

<螢幕關閉效果>

設定螢幕關閉效果。選擇黑洞、淡出及復古電視。

<休眠模式>

點按「休眠模式」以切換為開啟或關閉。開啟讓手機在插在插座時或充電時的休眠期間顯示已設定的螢幕保護。選擇時鐘及 Google Photos。

一般

<語言與輸入裝置>

使用語言與輸入設定以選擇您手機文字的語言，包括您新增至字典的字詞，並設定您的螢幕鍵盤。

語言 - 設定裝置使用語言。

預設 - 設定輸入文字時的預設螢幕鍵盤。

LG 鍵盤 - 勾選以選擇輸入文字的 LG 鍵盤。點按設定圖示以變更下列設定：

輸入語言和鍵盤配置 - 設定鍵盤語言及字元。

鍵盤高度和版面 - 個人化您的鍵盤。

路徑輸入 - 勾選以透過於所有字母繪畫路徑輸入單字。

顯示單字建議 - 勾選以透過文字預測顯示字詞配搭建議。

顯示表情符號建議 - 勾選以顯示文字相關的彩色表情符號。

中文模糊拼音 - 自動糾正常見的拼音錯誤。

自動更正 - 設定自動更正的水平。選擇關閉、輕微、中等及主動。

更新單字建議 - 使用 Swype Connect 得到更多字詞配搭建議。要使用此功能，請先同意權利條款。

其他設定 - 進階設定。

說明 - 點按說明以查閱詳細資訊。

Google 語音輸入 - 勾選以選擇 Google 語音輸入以輸入資料。點按設定圖示以變更 Google 語音設定。

選擇輸入語言 - 設定 Google 語音輸入支援的語言。

離線語音辨識 - 啟用離線語音輸入。

封鎖粗俗字眼 - 勾選以隱藏令人反感的字詞。

語音搜尋 - 設定語音搜尋選項。

語言 - 以語音設定 Google 搜尋。

語音輸出 - 設定什麼時候使用語音輸出。選擇開啟、只限免提及關閉。如要在您的手機已連接耳機時開啟語音輸出，選擇只限免提。

設定

偵測「OK Google」啟動字詞 - 啟動此功能，只需說「OK Google」就可開始 Google 搜尋應用程式。

離線語音辨識 - 沒有網絡連接時，設定一個或以上的額外語言語音識別。

封鎖粗俗字眼 - 勾選以隱藏令人反感的語音結果。

藍牙耳機 - 勾選以透過已連接的藍牙耳機記錄音效。

文字轉換語音輸出 - 設定喜愛的語音引擎及語音速率（非常慢至非常快）。同時播放簡短的語音合成。


指標速度 - 設定指標速度。

<位置>

如要開啟定位服務，您的電話會使用 GPS、Wi-Fi 和流動網絡決定您大概的所在位置。

模式 - 設定位置模式為**高精度（GPS 和網絡）、省電（僅網路）及僅裝置感應器（只限 GPS）**。

最近定位請求 - 顯示最近要求定位資訊的應用程式。

Google 位置報告 - 選擇開啟或關閉 Google 位置報告選項。如需進一步資訊，請點按  > 說明和意見反饋。

<帳號及同步處理>

允許應用程式在背景中同步資料，而不論您是否啟動它們。取消勾選此設定會幫助節省電量，同時亦會降低（但不會消除）數據用量。

<雲端>

新增雲端帳號以在 LG 應用程式上快速輕鬆使用雲端服務。

<協助工具>

為有視障、聽障和較不靈活的用家提高可存取性。

TalkBack - 讓您設定 TalkBack 功能，此功能可以透過口語反饋協助視力受損者。

字體大小 - 設定字體大小。

反轉顏色 - 勾選此選項可轉換螢幕和內容的色彩。

顏色調整 - 您可以調校螢幕及內容的顏色。

觸控縮放 - 讓您可以點按螢幕三下縮小或放大螢幕。

訊息/通話聲音通知 - 點按訊息/通話聲音通知鍵以切換開啟或關閉。讓您聽到為來電及訊息自動讀出的警示。

螢幕亮度 - 勾選以將螢幕背景光變暗，減低對比度。

輔助工具捷徑 - 讓您在任何畫面快速開啟輔助工具功能。

文字轉換語音輸出 - 點按以個人化設定文字轉換語音 (TTS)。

音訊類型 - 設定音頻類型。選擇**單聲道**或**立體聲**。

聲音平衡 - 連接好耳機後，聲音會經左及右頻道輸出聲音。要人手設定聲音的路線，移動在聲音平衡狀態欄的滑塊以進行設定。

通知 LED 燈 - 點按切換以切換為開啟或關閉。開啟時會啟動您勾選的顯示的 LED 通知燈。

閃光提示 - 勾選以設定來電及通知的閃光。

關閉所有聲音 - 勾選以關閉所有裝置聲音。

標題 - 可讓有聽力障礙的人自訂字幕設定。設定**語言**、**字體大小**及**字幕樣式**。

觸控回饋時間 - 設定觸碰與回應時間。

Touch assistant - 顯示輕易存取一般動作的觸控板。

螢幕逾時 - 設定螢幕逾時。

觸控控制區域 - 讓您選擇及限制可觸控的螢幕範圍。

自動旋轉螢幕 - 勾選以允許裝置自動根據裝置方向（縱向或橫向）而旋轉螢幕。

密碼語音確認 - 勾選允許您的手機閱讀點按的密碼。

電源鍵結束通話 - 勾選允許以按電源/鎖定鍵去結束通話。

協助工具設定捷徑 - 當您點三下主頁鍵時，可以快速簡單地存取所選的功能。

單觸輸入 - 勾選以允許單觸輸入。每次手指觸按均可在LG鍵盤上輸入字母/字元。

切換控制 - 切換存取讓您可以透過可配置鍵組合控制裝置。可將焦點移至可點擊項目並選擇。

設定

<單手操作>

撥號鍵盤 - 勾選後，您可將撥號鍵盤移至裝置的左邊或右邊。只需點按箭頭，即可將其移至另一邊。

LG 鍵盤 - 勾選後，您可將鍵盤移至裝置的左邊或右邊。只需點按箭頭，即可將其移至另一邊。

鎖定螢幕 - 勾選後，您可將 PIN 鎖定螢幕鍵盤移至裝置的左邊或右邊。只需點按箭頭，即可將其移至另一邊。

說明 - 顯示關於單手操作的資訊。

<快捷鍵>

當螢幕關閉或鎖定时，按下並按住音量鍵以快速存取應用程式。在螢幕右上角輕按快捷鍵以切換**開啟**或**關閉**。

<安全>

加密手機 - 讓您可加密手機上的資料，以保安全。每次開機時，您需要輸入 PIN 碼或密碼以解鎖手機。

設定 SIM 卡鎖定 - 設定鎖定 SIM 卡，或更改 SIM 卡 PIN 碼。

密碼鍵人為可見 - 輸入密碼時，顯示上一個輸入的字元。

裝置管理員 - 顯示裝置管理員的清單，讓您停用裝置管理員。

未知的來源 - 勾選以允許安裝非 Play Store 的應用程式。

確認應用程式 - 勾選以在安裝可能對手機造成傷害的應用程式前提出禁止或警告。

儲存裝置類型 - 顯示儲存類型。

可信認證 - 顯示可信的 CA 證書。

從儲存裝置中安裝 - 讓您從儲存中安裝安全認證的程式。

清除憑證 - 移除所有憑證，同時清除安全儲存自身的密碼。系統會提示您確定您想清除這個數據。

Trust agents - 選擇可於解鎖螢幕上使用的應用程式。

螢幕固定 - 讓應用程式只可於輸入螢幕 PIN 碼時使用。

可以使用的應用程式 - 設定應用程式存取。自主頁及 LG MLT 中選擇。

<訪客模式>

當其他人使用您的手機時，使用訪客模式。他們只可以使用您選擇的應用程式。當設定好後，只需在鎖定螢幕畫出指定訪客的圖形便可輕易在手機開啟訪客模式，該圖形必須跟您的開鎖圖形不同。

已允許的應用程式 - 點按以選擇在訪客模式中可被存取的應用程式。

牆紙 - 設定訪客模式鎖定螢幕的背景（牆紙）。

鎖定螢幕類型 - 點按以創建訪客模式的鎖定畫面。

說明 - 顯示有關訪客模式的資訊。

<手勢>

螢幕開啟/關閉 - 勾選以啟用開啟螢幕，以開啟或關閉螢幕。

快速點按兩下螢幕中心以開啟。快速點按兩下狀態列、主頁的空白位置或鎖定的螢幕以關閉螢幕。為了達至最佳效果，請不要於使用開啟螢幕功能時移動電話。

接聽來電 - 勾選後，您可以把手機靠在耳邊來接聽來電。

消除鈴聲 - 勾選後，來電時，從桌面拿起以將鈴聲變小。

靜音來電 - 勾選後，翻轉手機即可將來電靜音。

延後或停止鬧鐘 - 勾選後，只需翻轉手機，即可延後或停止鬧鐘。

暫停影片 - 勾選後，只需翻轉手機，即可暫停正在播放的影片。

說明 - 開啟關於如何使用裝置的手勢功能的說明指南。

運動感應器校正 - 改善傾斜的精準度及感應器的速度。

< QuickWindow case >

您可透過關上的手機套看見螢幕的一小部份。

選擇應用程式 - 設定不需要打開手機套都能直接在外殼視窗中使用的應用程式。

說明 - 顯示有關QuickWindow case的資訊。

<日期及時間>

使用日期及時間設定以設定顯示日期的方式。您還可以使用這些設定

設定

來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。

<儲存裝置>

使用儲存功能表監控手機內使用及剩餘的空間。

<電池>

電池資訊

充電資訊會顯示於電池圖案上，連同剩餘充電量百分比及其狀態。點按電池使用狀況以顯示電池用量螢幕，以查看電池使用狀況水平及電池使用狀況詳細資料。它會顯示使用最多電量的組件及應用程式。點按其中一項以查看更詳細資訊。

電池使用狀況 - 顯示電池使用程度及使用狀況詳細資訊。

狀態列上之電量百分比 - 勾選以在狀態欄的電池圖示旁顯示電池存量百分比。

省電

點按省電模式按鍵以將其切換至開啟或關閉。點按省電模式以存取以下設定：

省電模式 - 設定自動啟動省電模式的電池存量百分比。選擇立即、5% 電池電量及 15% 電池電量。

說明 - 說明省電項目資訊。

<應用程式>

讓您檢視安裝在手機中的應用程式詳細資訊、管理數據及強制停止。

<預設訊息應用程式>

將**訊息**或 Hangouts 設定為預設應用程式。

<備份與重設>

此功能表讓您備份及/或清除數據。

備份我的數據 - 勾選以備份應用程式數據、Wi-Fi 密碼以及其他設定至 Google 伺服器。

備份帳號 - 設定以備份帳號。

自動還原功能 - 勾選以允許您的手機在重裝應用程式時，自動還原已備份的設定及數據。

LG Backup服務 - 為裝置上的所有資料備份，以便於數據遺失或取代時可進行還原。

重設為原廠設定 - 將設定重設為原廠預設值並刪除您的所有數據。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

< 正在列印 >

允許您使用連接至與 Android 裝置相同 Wi-Fi 網絡的印表機，列印某些畫面的內容（如 Chrome 顯示的網頁）。

<關於手機>

檢視法律資訊及檢查手機狀態和軟件版本。

PC 軟件 (LG PC Suite)

「LG PC Suite」電腦軟件助您透過 USB 纜線及 Wi-Fi 將裝置連接至電腦。連接後，您可以在電腦使用手機的功能。

使用「LG PC Suite」電腦軟件，您可以...

- 在電腦管理並播放媒體內容（音樂、電影、相片）。
- 向裝置發送多媒體內容。
- 在裝置及電腦上同步數據（日曆、通訊錄及書簽）。
- 備份裝置的應用程式。
- 更新裝置的軟件。
- 備份並還原裝置數據。
- 從裝置播放電腦的多媒體內容。
- 於裝置上備份及建立並編輯備忘錄

注意：您可使用應用程式的說明功能表，了解如何使用「LG PC Suite」電腦應用程式。

安裝「LG PC Suite」電腦軟件

「LG PC Suite」電腦軟件可從 LG 的網頁下載。

- 1 移至 www.lg.com，然後選擇所需國家/語言。
- 2 前往首頁 > **流動裝置** > **手機** > **產品支援** > **支援** > **輸入型號或名稱** > **點擊搜尋**。
- 3 按一下搜索到的型號名 > **下載**中的 **電腦同步** > **LG PC Suite**，然後按一下**下載**。

「LG PC Suite」PC 軟件的系統需求

- 作業系統：Windows XP (Service pack 3) 32 位元、Windows Vista、Windows 7、Windows 8
- CPU：1GHz 或以上處理器
- 記憶體：512MB 或以上 RAM
- 顯示卡：1024 x 768 解像度、32 位元色彩或以上
- HDD：500 MB 或以上可用磁碟空間（視乎儲存的數據量，可能需要更多可用磁碟空間）。
- 軟體需求：LG 內置驅動程式、Windows Media Player 10 以上版本

備註：LG 內置 USB 驅動程式

安裝「LG PC Suite」軟件時，需要 LG 內置 USB 驅動程式，以連接 LG 裝置和電腦並自動安裝。

將裝置同步至電腦

裝置及電腦的資料可透過「LG PC Suite」電腦軟件輕鬆同步，簡易便利。通訊錄、日曆及書籤均可作同步處理。

程序如下：

- 1 將裝置連接到電腦。（使用 USB 線或 Wi-Fi 連接）。
- 2 將會顯示 **媒體裝置 (MTP)**，然後選擇 **媒體裝置 (MTP)**。
- 3 連接後，執行程式，然後從畫面左方的類別選擇裝置部分。
- 4 按**同步個人數據**進行選擇。
- 5 選擇要同步內容的取方塊，然後按**同步**按鈕。

注意：要與電腦同步您的手機，您需要於電腦上安裝 LG PC Suite。請參閱之前頁數以安裝 LG PC Suite。

將通訊錄從舊裝置移至新裝置

- 1 使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊裝置匯出至電腦。
- 2 先在電腦上安裝「LG PC Suite」。執行該程式，並使用 USB 線將 Android 行動手機連接到電腦。
- 3 在頂部功能表中，選擇**手機 > 匯入/匯出聯絡人 > 匯出至您的手機**。
- 4 可選擇檔案類型和要匯入檔案的彈出式視窗就會顯示。
- 5 在彈出式視窗中，點擊**選取**，Windows Explorer 就會顯示。
- 6 選擇要在 Windows Explorer 中匯入的聯絡人檔案，然後點擊**打開**。
- 7 按一下**匯出**。
- 8 可讓您在裝置和新聯絡人資料中連結聯絡人的**欄位映射**彈出式視窗就會顯示。
- 9 如果在電腦聯絡人和裝置聯絡人之間出現衝突，請在 LG PC Suite 中做出必要的選擇或修改。
- 10 點擊**確定**。

手機軟件更新

手機軟件更新

從互聯網更新 LG 手機軟件

更多有關此功能的資訊，請瀏覽 <http://www.lg.com/common/index.jsp> → 以選擇國家/語言。

此功能允許您無須親臨服務中心，即可輕鬆透過互聯網將手機韌體更新為較新版本。LG 為您的手機推出較新版本的韌體時，此功能才可使用。

手機韌體更新要求用戶加倍留意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的說明和備註。請注意，更新期間若移除 USB 數據線，有可能對您的手機造成嚴重損害。

注意：LG 保留權利，可酌情決定只為選定型號提供韌體更新，並不保證所有手機型號均有韌體的較新版本。

透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，亦能輕鬆透過 OTA 將手機軟件更新為較新版本。LG 為您的手機推出較新版本的韌體時，此功能才可使用。

您應先檢查手機上的軟件版本：**設定 > 一般 > 關於手機 > 更新中心 > 軟體更新 > 現在檢查更新。**

備註：內部手機儲存體的個人資料(包括 Google 帳戶及任何其他帳戶的資訊、系統 / 應用程式數據及設定、任何已下載的應用程式及 DRM 授權)在更新手機軟件的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新手機軟件。LG 對於個人資料的任何遺失概不負責。

備註：此功能視網路服務供應商、地區或國家而定。

有關本使用者指南

有關本使用者指南

- 使用裝置前，請細心閱讀本手冊。此可確保您安全及正確運用手機。
- 本指南中某些圖像及螢幕截圖可能與出現於您手機上的有所不同。
- 您的內容可能與最終產品、或來自服務網絡或供應商的軟件有所不同，此內容可能隨時作出更改而不另行通知。如要獲取本手冊的最新版本，請前往 www.lg.com 瀏覽 LG 網站。
- 手機應用程式及功能可能因應國家、地區或硬件規格而有所不同。因使用由非 LG 開發的應用程式而導致任何效能問題，LG 概不負責。
- 因編輯出廠設定或修改操作系統軟件而導致的效能或不兼容問題，LG 概不負責。於任何情況下嘗試對操作系統作出自行改動可導致裝置或應用程式無法運作。
- 於裝置中的軟件、音效、牆紙、圖像及其他媒體乃被授權作為有限度使用。如您抽取及使用這些項目作為商業用途，則可能已侵犯版權法。作為用戶，您對於已非法形式使用媒體負上全部責任。
- 於使用數據服務例如訊息、上載及下載、自動同步或使用位置服務時可能被收取額外費用。要避免產生額外收費，請選擇符合您所需的數據計劃。聯絡您的服務供應商以獲取更額外詳細資料。

Trademarks

- LG 及 LG 標誌乃 LG Electronics 的註冊商標。
- 所有其他商標與版權均屬於其擁有者。

DivX HD

本 DivX Certified® 裝置已通過嚴格的測試，以確保可正常播放 DivX® 影片。

如要播放購買的 DivX 電影，請先在 vod.divx.com 註冊您的裝置。從您裝置的設定選單，在 DivX VOD 區段中找到您的註冊碼。

DivX Certified® 可播放畫質高達 HD 720p 的 DivX 影片，包括付費內容。DivX®、DivX Certified® 和相關標誌是 DivX, LLC 的商標，必須取得授權才能使用。

Dolby Digital Plus DOLBY DIGITAL PLUS

Dolby Laboratories 授權製造。Dolby、Dolby Digital Plus 及 double-D 符號乃 Dolby Laboratories 的商標。

配件

這些配件可搭配手機使用。（下列配件為可選購配件。）

旅行充電器




立體聲耳機



快速入門指南



數據線



Micro-SIM 彈出
工具



注意：

- 只可使用原裝 LG 配件。若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

疑難排解

本章節列出一些使用手機時可能遇上問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
Micro-SIM 卡錯誤	手機中無 Micro-SIM 卡，或卡片插入方式不正確。	確保已正確地插入 Micro-SIM 卡。
無網絡連接/ 失去網絡	訊號較弱或您位於運營商網絡服務範圍外。	移近窗邊或移至空曠範圍。檢查網絡供應商的覆蓋範圍。
	網絡商套用新服務。	請聯絡您的服務供應商。
密碼不相符	要更改安全密碼，您需要重新輸入以確認新的安全密碼。	如您忘記密碼，請聯絡您的服務供應商。
	您所輸入的兩個密碼並不相符。	
並無可設定應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。

疑難排解


訊息	可能起因	可用解決方法
無法撥打電話	撥號錯誤	未授權新網絡。
	已插入新 Micro-SIM 卡。	請檢查新的限制。
	已達預付費用上限。	聯絡您的服務供應商，或使用 PIN2 重設限額。
手機無法啟動	按開/關鍵時間太短。	按住開/關鍵至少兩秒。
	電池並無充電。	為電池充電。檢查螢幕上的充電指示器。
充電錯誤	電池並無充電。	為電池充電。
	外界溫度太高或太低。	確保於正常溫度下為手機充電。
	接觸不良	檢查充電器是否正常，以及是否正確地連接至手機。
	無電壓	將充電器插入不同的插座。
	充電器故障	更換充電器。
	使用不當充電器	請只使用原裝 LG 配件。
號碼不允許	固定撥號功能已開啟。	檢查設定功能表並關閉功能。

訊息	可能起因	可用解決方法
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機的部分訊息。
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式。
接收來電時，螢幕並無開啟。	距離感應器問題	如您使用保護邊或保護殼，請確保其並無遮蓋距離感應器四周位置。確保距離感應器附近並無任何障礙物。
沒有聲音	震動模式	檢查聲音功能表的設定狀態以確保您並非使用震動或靜音模式。
死機或停止運作。	軟件間歇性問題	透過網站嘗試進行軟件更新。

常見問題解答

類別 子類別	問題	解答
藍牙 藍牙 裝置	透過藍牙可以使用哪些功能？	您可以連接藍牙音訊裝置，例如立體聲/單聲度耳機或車用配件。另外，當 FTP 伺服器連接到兼容裝置時您可分享儲存在儲存媒體中的內容。
藍牙 藍牙 耳機	如果已連接藍牙耳機，我可否透過 3.5mm 有線耳筒聆聽音樂？	連接藍牙耳機後，所有系統聲音會在耳機播放。因此，您可以透過有線耳筒聆聽音樂。
資料 通訊錄 備份	我應如何備份通訊錄？	通訊錄資料可以在您的手機與 Gmail™ 之間同步。
資料 同步	可否設定使用 Gmail 進行單向同步？	僅可以進行雙向同步。
資料 同步	可否同步全部電子郵件資料夾？	收件匣會自動同步。您可長按 功能表鍵  以檢視其他資料夾，然後點按 資料夾 進行選擇。
Google™ 服務 Gmail 登入	每當我想存取 Gmail，是否也需要登入 Gmail？	當您已登入 Gmail 後，無需再次登入。
Google™ 服務 Google 帳戶	可否篩選電子郵件？	不可以，手機不支援電子郵件篩選。

類別 子類別	問題	解答
手機功能 電子郵件	編寫電子郵件時，如果我執行其他應用程式會發生什麼？	您的電子郵件會自動被儲存為草稿。
手機功能 鈴聲	如果我需要使用 MP3 檔案作為鈴聲，是否有檔案大小限制？	沒有檔案大小限制。
手機功能 訊息時間	手機沒有顯示訊息在 24 小時之前的接收時間，可如何變更此設定？	您只能夠看見同一天接收的訊息時間。
手機功能 導航	可否在手機上安裝其他導航應用程式？	可以安裝和使用所有 Play Store™ 上可提供的應用程式以及與硬體兼容的應用程式。
手機功能 同步	可否從我全部的電郵帳戶同步通訊錄？	僅可同步 Gmail 和 MS Exchange 伺服器（公司電郵伺服器）中的通訊錄。
手機功能 等候與暫停	能否使用號碼中的等候與暫停來儲存聯絡人？	如果您傳輸的聯絡人在號碼中存有 W & P 功能，則無法使用該功能。您需要重新儲存每個號碼。 如何使用等候與暫停儲存： 1. 從桌面按 手機圖示  。 2. 撥號後長按 功能表鍵  。 3. 點按 新增 2 秒暫停功能 或 新增等待功能 。
手機功能 安全	手機有什麼安全性功能？	您可設定手機於被存取或使用前要求輸入解鎖圖形。

類別 子類別	問題	解答
手機功能 解鎖 圖形	我如何建立解鎖圖形？	<ol style="list-style-type: none">1. 從桌面長按功能表鍵 。2. 點按系統設定 > 顯示標籤下的鎖定螢幕。3. 點按選擇螢幕鎖定 > 圖形。首次進行此步驟時，將會出現關於建立解鎖圖形的簡短教程。4. 繪畫圖形一次以設定，然後再繪畫一次以確認。 <p>使用圖案鎖定需注意事項。 請記住您所設定的解鎖圖案，這是非常重要的。如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的手機。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。（或如您預設備份 PIN 碼，您可使用備份 PIN 碼以解鎖圖形。</p>
手機功能 解鎖 圖形	如果我忘記了解鎖圖形而且沒有在手機上建立 Google 帳戶，我應該怎麼辦？	<p>如果您忘記了您的圖形： 如果您已用手機登入 Google 帳號，但 5 次輸入錯誤的解鎖圖案，點按位於螢幕底部的忘記解鎖圖形？按鍵。然後，您需要登入您的 Google 帳戶以解鎖您的手機。如您沒有在手機上建立 Google 帳號或您已忘記該帳號，您需進行硬性重新設定。</p> <p>注意：若執行出廠設定，所有用戶應用程式及用戶數據將被刪除。請記住先備份所有重要的數據，才進行原廠重設。</p>

類別 子類別	問題	解答
手機功能 記憶體	記憶體已滿時我會被告知嗎？	是，您將會收到通知。
手機功能 語言支援	我可否更改手機語言？	<p>手機具有雙語功能。</p> <p>若要變更語言：</p> <ol style="list-style-type: none"> 從桌面長按功能表鍵 <input type="checkbox"/> 並點按系統設定。 一般標籤下點按語言與輸入裝置 > 語言。 點按所需語言。
手機功能 VPN	我如何設定 VPN？	<p>VPN 存取設定根據公司而有所不同。</p> <p>若要從手機設定 VPN 存取，您必須從供應商的網絡管理員取得詳細資料。</p>
手機功能 螢幕逾時	我的螢幕在 15 秒後關閉了。我如何變更背景燈關閉的時間？	<ol style="list-style-type: none"> 從桌面長按功能表鍵 <input type="checkbox"/>。 點按系統設定 > 顯示。 選擇螢幕逾時。 點按所需的螢幕背景燈逾時時間。
手機功能 Wi-Fi 及流動 網絡	當 Wi-Fi 及流動網絡均為可用時，手機將會使用哪一項服務？	<p>使用數據時，您的手機將預設為 Wi-Fi 連接（如果手機的 Wi-Fi 連接設定為開啟）。不過，手機切換服務時您將不會收到通知。</p> <p>若要知道正在使用哪一個數據連線服務，檢視螢幕上方的流動網絡或 Wi-Fi 圖示。</p>
手機功能 桌面	可否從桌面移除應用程式？	<p>可以。只需點按並按住圖示，直至畫面上方中央出現垃圾桶圖示。然後，不要放開手指，將圖示拖放至垃圾桶。</p>


常見問題解答

類別 子類別	問題	解答
手機功能 應用程式	我下載了一個應用程式，它導致大量錯誤發生。我如何移除它？	<ol style="list-style-type: none">1. 從桌面長按功能表鍵 □。2. 點按系統設定 > 一般 > 應用程式 > 已下載。3. 點按應用程式，然後按解除安裝。
手機功能 充電器	可否在沒有安裝所需 USB 驅動程式的情況下透過 USB 數據線為手機充電？	可以，不論有否安裝所需驅動程式，手機亦能透過 USB 數據線充電。
手機功能 鬧鐘	可否在鬧鐘使用音樂檔案？	可以。將音樂檔案儲存為鈴聲後，您可將其用作鬧鐘。 <ol style="list-style-type: none">1. 在鬧鐘設定畫面，點按鬧鐘提示音，選擇音樂，選擇將音樂設成為鈴聲。
手機功能 鬧鐘	如果我關閉了手機，鬧鐘仍會響鬧嗎？	不會，不支援此功能。
手機功能 鬧鐘	如果鈴聲音量設定為震動，我仍會聽到鬧鐘響鬧嗎？	即使在此情況，您的鬧鐘仍被設定為響鬧。
恢復的方法 硬性重新設定（出廠設定）	如何無法存取手機的設定功能表，應如何執行出廠設定？	如您的手機並無還原至其原始狀態，請使用強制重新設定（原廠設定）以初始化手機。



用户手册

- 屏幕显示和说明可能与手机实物上看到的不同。
- 本手册中的部分内容可能不适用于您的手机，具体视您手机的软件和服务提供商而定。本指南的所有信息如有更改，恕不另行通知。
- 此手机采用触摸屏键盘，不适合视障人士使用。
- 版权所有 ©2015 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google Maps™、Gmail™、YouTube™、Google Talk™ 和 Play Store™ 是 Google, Inc. 的商标。

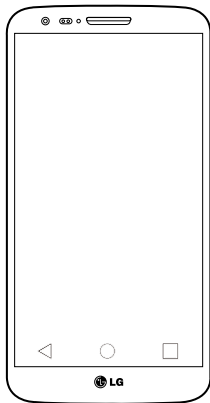

目录

关于安全有效使用手机的准则.....	5	共享手机的数据连接.....	36
重要注意事项.....	12	WLAN 直连.....	38
开始了解您的手机.....	18	使用 SmartShare.....	38
手机概览.....	18	使用 USB 数据线的 PC 连接....	39
安装 Micro-SIM 卡.....	20	通话.....	41
充电.....	21	拨打电话.....	41
屏幕锁定和解锁.....	22	呼叫联系人.....	41
轻敲解码.....	22	接听和拒绝电话.....	41
轻敲唤醒.....	23	调节通话音量.....	42
启动轻敲唤醒功能.....	23	拨打第二个电话.....	42
带麦克风的立体声耳机.....	24	查看通话记录.....	42
主屏.....	26	通话设置.....	43
触摸屏提示.....	26	联系人.....	44
主屏.....	27	搜索联系人.....	44
扩展主屏.....	27	添加新联系人.....	44
自定义主屏.....	28	按收藏夹归类联系人.....	44
返回到最近使用的应用程序.....	29	创建群组.....	45
通知面板.....	29	信息.....	46
打开通知面板.....	30	发送信息.....	46
状态栏上的指示器图标.....	30	线程框.....	47
屏上键盘.....	32	更改信息设置.....	47
输入带注音的字母.....	32	电子邮件.....	48
Google 帐户设置.....	33	管理电子邮件帐户.....	48
连接到网络和设备.....	34	使用帐户文件夹.....	48
WLAN.....	34	撰写和发送电子邮件.....	49
连接 WLAN 网络.....	34	照相机.....	50
打开 WLAN 并连接 WLAN 网络....	34	了解取景器.....	50
蓝牙.....	35	使用高级设置.....	51

快速拍照	52	查看图片	68
使用清晰拍摄模式	52	播放视频	69
使用双摄像头拍摄模式	53	编辑照片	69
使用时间捕捉拍摄模式	53	删除照片/视频	69
拍照后	54	设置为墙纸	69
查看保存的照片	54	播放视频	70
摄像机	55	视频编辑器	71
了解取景器	55	音乐	72
使用高级设置	56	将音乐文件添加至手机	72
快速录制视频	57	使用媒体设备 (MTP) 传输音乐	73
录制视频后	57	播放歌曲	73
观看保存的视频	57	实用工具	75
观看视频时调节音量	58	访客模式	75
使用音频变焦	58	设置闹钟	75
使用双重记录	58	使用计算器	75
使用动态追焦模式	59	将事件添加到日历中	76
功能	60	录音机	76
快捷备忘录+	60	录制声音或语音	76
使用快捷备忘录+选项	61	任务管理器	77
查看保存的快捷备忘录+	61	任务	77
Quick 翻译	62	POLARIS Viewer 5	77
Quick多任务	63	Google+	78
Quick遥控	64	语音搜索	78
实时缩放	65	下载内容	78
LG SmartWorld	66	网络	79
如何从手机访问 LG SmartWorld	66	互联网	79
如何使用 LG SmartWorld	66	使用 Web 工具栏	79
多媒体	68	查看网页	79
图片库	68	打开网页	80
		使用语音搜索网络	80

目录

书签.....	80
历史记录.....	80
Chrome.....	81
查看网页.....	81
打开网页.....	81
设置.....	82
网络.....	82
声音.....	85
显示屏.....	86
常规.....	88
PC 软件 (LG PC Suite).....	95
手机软件更新.....	98
手机软件更新.....	98
关于本用户指南.....	99
关于本用户指南.....	99
商标.....	99
DivX HD.....	100
Dolby Digital Plus.....	100
配件.....	101
故障排除.....	102
FAQ.....	105

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息。

此款 LG-D802 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率” (SAR) 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2 W/kg。
- 本型号手机在耳边使用的最高 SAR 值为 0.409W/kg (10 克)，佩戴于身上时则为 0.470 W/kg (10 克)。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 1.5 厘米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 1.5 厘米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

关于安全有效使用手机的准则

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因发热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误

用造成的玻璃显示屏损坏不在保修范围内。

- 本手机为正常使用过程中会发热的电子设备。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或之后立即处理您的手机时，应特别小心。
- 如果手机变湿，请立即拔下其电源插头，并让它完全晾干。切勿试图使用烤炉、微波炉或电吹风等外部热源加快干燥处理。
- 潮湿手机内的液体会改变手机内产品标签的颜色。由于接触液体而对设备造成的损坏不在保修范围内。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。
- 如果可能，请在介于 0°C 与 40°C 温度之间使用手机。将手机放置在过低或过高的温度的环境下可能会导致损坏、故障、甚至爆炸。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

关于安全有效使用手机的准则

- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在靠近马路时，尤其要注意这一点。

防止损伤您的听力



为防止听力可能受损，请勿长时间高音量倾听。

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

备注：耳机声音压力过大可能导致听力受损。

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在机舱内使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

关于安全有效使用手机的准则

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池或将其短路。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要像处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这可能引发火灾。

确认声明

LG Electronics 特此宣布此 LG-D802 产品符合指令 1999/5/EC 的核心要求和
和其它相关规定。有关《确认声明》的副本，请访问
<http://www.lg.com/global/declaration>

开源软件提示信息

为取得本产品内搭载的 GPL、LGPL、MPL 及其他开源 证书下的源代码，请您
访问 <http://opensource.lge.com>。

除源代码以外，所有相关的许可条款、免责声明和版权通知均可供下载。

LG Electronics 在收到发送至 opensource@lge.com 的电子邮件请求后，也
可以 CD-ROM 的形式为您提供源代码，仅收取执行配送的费用（如介质费
用、运输费和手续费）。此报价从您购买该产品之日起，三年内有效。

重要注意事项


使用手机前，请阅读本用户指南！

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

1. 手机内存

当手机内存可用空间小于 10% 时，您的手机无法收到新信息。您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

卸载应用程序：

- 1 轻触  > **应用程序**选项卡 > **设置** > “常规”中的**应用程序**。
- 2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。
- 3 轻触**卸载**。


2. 优化电池使用寿命

通过禁用无需在后台持续运行的功能来延长电池电量的使用寿命。您可以监视应用程序和系统资源如何消耗电池电量。

延长手机电池的使用寿命：


- 如果您未使用无线电通信，请关闭它。 如果不使用 WLAN、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕待机时间。
- 关闭 Gmail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会消耗电池电量。

检查电池电量水平：

- 轻触  > 应用程序选项卡 > 设置 > “常规”中的关于手机 > 电量使用情况。

电池状态（正在充电或正在放电）和电池级别（电量百分比）显示在屏幕顶部。

监视并控制电池电量的使用情况：

- 轻触  > 应用程序选项卡 > 设置 > “常规”中的关于手机 > 电量使用情况 > 电池使用情况。

电池使用水平显示在屏幕顶部。屏幕显示了正在使用电池电量的应用程序或服务，按最大量到最小量的顺序列出。

3. 安装开源应用程序和操作系统之前



如果安装并使用非制造商提供的操作系统，可能导致手机无法正常工作。此外，您的手机也不再享受保修。



为保护您的手机和个人数据，请只从信任的来源（如 Play 商店™）下载应用程序。如果手机上存在未正确安装的应用程序，手机可能无法正常工作，甚至可能发生严重错误。您必须从手机中卸载那些应用程序及其所有关联的数据和设置。

重要注意事项

4. 使用解锁图案

设置保护手机的解锁图案。轻触  > 应用程序选项卡 > 设置 > 显示屏中的主页&锁 > 锁定屏幕 > 选择屏幕锁定 > 图案。此时将打开一个屏幕，指导您如何绘制屏幕解锁图案。您必须创建一个备份 PIN 以作为安全措施，以免忘记了解锁图案。

注意：设置解锁图案之前，请先创建一个 Google 帐户，并记住创建图案锁定时设置的备份 PIN。



警告

使用图案锁定时预防措施。

请务必记住您设置的解锁图案。如果有 5 次使用不正确的图案，您将无法访问您的手机。您有 5 次机会输入解锁图案、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。

在无法记起解锁图案、PIN 或密码时：

<如果您忘记图案>

若已在手机上登录 Google 帐户，但连续 5 次输错图案，请轻触 **忘记了图案？** 按钮（屏幕底部）。随后，您需要使用 Google 帐户登录或输入创建图案锁定时设置的备份 PIN。

如果未在手机上创建 Google 帐户或者忘记了备份 PIN，则需要执行硬重置。

<如果您忘记 PIN 或密码>

如果您忘记 PIN 或密码，您需要进行一次硬重置。

注意：如果执行硬重置，所有用户应用程序和用户数据都将被删除。

备注：如果您未登录 Google 帐户且忘记了锁定图案，您需要输入备份 PIN。

5. 使用硬重置（恢复出厂设置）

如果手机未恢复到原始条件，请使用硬重置（恢复出厂设置）初始化手机。

- 1 关机。
- 2 同时按住**电源/锁定键 + 音量调低键**。
- 3 LG 徽标显示在屏幕上。然后释放电源/锁定键，然后立即再次按住电源/锁定键。在显示Factory data reset时释放所有按键。
- 4 再次按**电源/锁定键**以确认恢复出厂设置，之后您的手机会恢复为其出厂设置。要取消，按任何其它键。



警告

如果执行硬重置，则所有用户应用程序、用户数据和 DRM 许可将被删除。在执行硬重置之前，请记得备份任何重要数据。


6. 打开和切换应用程序

多任务可在 Android 中轻松实现，您可同时运行多个应用程序。打开其他应用程序之前，无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。


停止应用程序：

- 1 轻触  > **应用程序**选项卡 > **设置** > “常规”中的**应用程序** > **正在运行**。
- 2 滚动并轻触目标应用程序，然后轻触**停止**以停止应用程序。

重要注意事项

备注：对于多任务，轻触近期任务键可以在使用应用程序时转至另一个应用程序。但这不会让上一个应用程序在设备后台停止运行。使用完主屏键后，请确保轻触  退出应用程序。

7. 使用媒体设备 (MTP) 传输音乐、照片和视频

- 1 轻触  > **应用程序**选项卡 > **设置** > “常规”中的**存储**，然后查看存储媒体。
- 2 使用 USB 数据线将手机连接到 PC。
- 3 媒体设备 (MTP) 出现在手机屏幕上后，请选择**媒体设备 (MTP)** 选项。
- 4 打开 PC 上的存储文件夹。您可查看 PC 上的大容量存储内容，并能在 PC 和设备存储文件夹之间相互传输文件。
- 5 传输文件后，向下滑动状态栏，然后轻触 **媒体设备 (MTP)** 并从 USB 连接方法列表中选择**为手机充电**。

8. 向上持握手机

将手机像普通手机一样竖直持握。您的手机具有内置天线。请注意不要刮伤或损坏手机背面，这可能影响性能。

拨打/接听电话或发送/接收数据时，避免持握天线所处的手机部位。这样做可能会影响通话质量。

9. 屏幕冻结时

如果屏幕冻结或您尝试操作时手机无响应：


按住**电源/锁定**键 8 秒以重启手机。如果这仍不起作用，请联系服务中心。

10. 在开启或关闭您的电脑时，请勿连接您的手机

开启或关闭电脑时，确保从电脑中断手机的连接，否则可能造成错误。

开始了解您的手机

手机概览

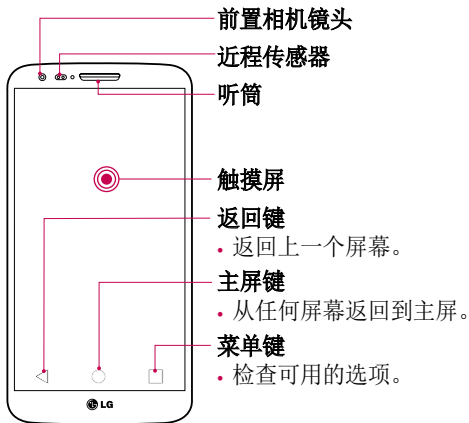


备注：近程传感器

在接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此近程传感器将自动关闭背景灯并锁定触摸屏。这样有助于延长电池寿命，并避免在通话期间无意中激活触摸屏。

警告

在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。不要在 LCD 距离传感器上使用保护膜。这可能会影响传感器的感应度。

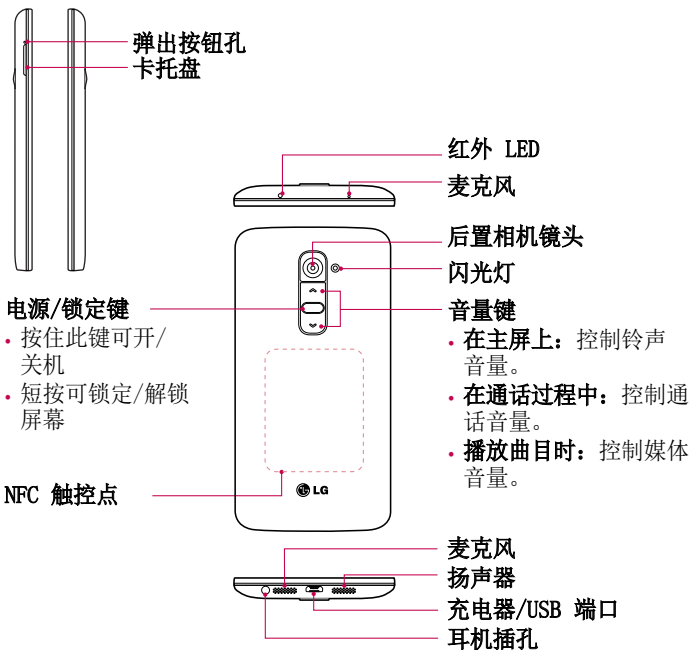

警告

- 手机是内置电池盖。请勿打开后盖。
- 注意不要损坏手机上的 NFC 触控点，这是 NFC 天线的一部分。

开始了解您的手机


安装 Micro-SIM 卡

开始浏览新手机之前，您可以选择插入 Micro-SIM 卡。

弹出按钮是文件盘门上方的小圆孔。安装新 Micro-USIM 卡：

- 1 将手机随附的 Micro-SIM 弹出工具（或细针）插入弹出按钮孔，捏紧并轻轻用力推进，直至托盘弹出。
- 2 取下托盘，放入 Micro-SIM 卡，触点朝外，圆角朝右。只有采用这种方式才能完全吻合地把 Micro-SIM 卡放入文件盘。
- 3 小心地将托盘轻轻推入手机。

备注：确保卡的金色接触区域面朝下。

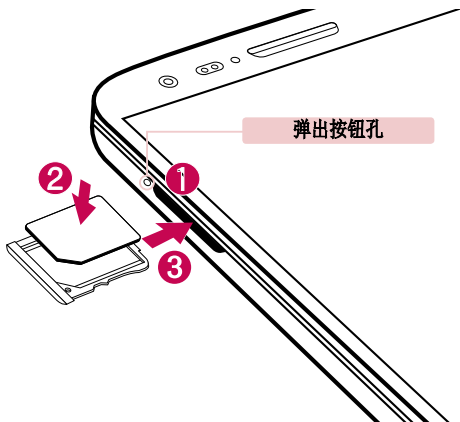


充电

第一次使用电池前，请为电池充电。使用充电器为电池充电。可以通过 USB 数据线将设备连接到计算机，使用计算机为设备充电。

警告

只能使用已获得 LG 许可的充电器、电池和数据线。如果使用未获许可的充电器、电池或数据线时，可能导致电池充电速度缓慢或弹出关于充电缓慢的消息。或者，这可导致电池爆炸或损坏设备，从而无法享受保修。

充电器接口位于手机底部。插入充电器并插入电源插座。

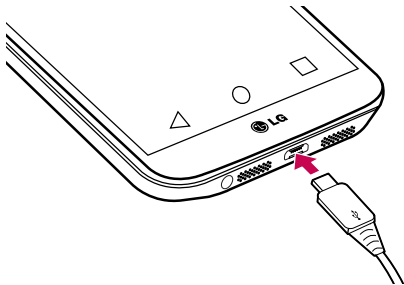

备注：

- 第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。


开始了解您的手机

屏幕锁定和解锁

如果您在一段时间内未使用手机，屏幕将自动关闭和锁定。这有助于防止意外点触，节省电池电量。

不使用手机时，按**电源/锁定键**  可锁定手机。

如果在您锁定屏幕时有程序正在运行，它们可能在锁定模式下继续运行。建议在进入锁定模式前退出所有程序以避免不必要的费用（例如，打电话、网络访问和数据通信）。



要唤醒手机，请按**电源/锁定键** 。“锁定”屏幕将会显示。轻触并向任意方向滑动锁定屏幕即可解锁主屏。您最后查看的屏幕将会打开。

轻敲解码

轻敲解码功能让您可以利用被分为四格的屏幕，以自己的轻敲解码图形点按屏幕，轻松开启或关闭屏幕。您可在锁定屏幕设置中停用此功能。

注意：

- 如您输入错误的轻敲解码 6 次，系统会强制将您带到输入 PIN 码。
- 使用指尖而非指甲点按屏幕以开启或关闭。
- 如没有使用轻敲解码，您可以点按屏幕以使用 Knock On 功能。

1 从桌面点按  应用程序键 >  **设置** > **显示屏**选项。


2 点按**锁定屏幕** > **选择屏幕锁定** > **轻敲解码**。

3 依自己喜好的图案点按方格，以设置您的轻敲解码。

您的轻敲解码图案可以是 2 至 8 次点按。完成后点按 [继续]。

设置轻敲解码

点击四分之一分区2-8次以设置轻敲解码。点击次数越多，安全性越高。

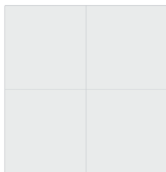

取消

继续

使用 轻敲解码 解除锁定屏幕

点按已设定的轻敲解码图形，便可解除锁定屏幕。

- 1 屏幕关闭时，按下电源键。
- 2 点按先前设定的轻敲解码图形。

轻敲唤醒

点按两下即可锁定或解锁屏幕。

启动轻敲唤醒功能

- 1 点按  >  >  **设置** > **常规标签** > **手势**。
- 2 勾选**屏幕开启/关闭**。

快速双击屏幕中心以打开屏幕。当您双击状态栏或LG主页屏幕和锁定屏幕的空白区域时，屏幕将关闭。

注意： 开启屏幕时，确保您没有掩盖近程传感器。此操作会令屏幕开启后即刻关闭，以防在口袋或袋中异常开启。

开始了解您的手机

带麦克风的立体声耳机

连接耳机，您即可享受立体声音乐或视频，且可轻松从音乐/视频任务切换至接听和结束通话。

<前面>




音量调高/调低按钮

呼叫/结束按钮


- 对于来电，按此按钮以接收或结束通话。
- 听音乐时，按此按钮以停止播放或继续播放。按此按钮两次可播放下一曲目。


<背面>




麦克风

1 按下图所示插入耳机。

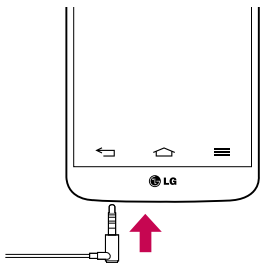

2 如果耳机连接到手机上时有来电，请按  接听呼叫。

3 要结束通话，请再次按  键。

触摸屏提示

以下是关于如何浏览手机的一些提示。

轻触或点触 - 手指轻触一下，选择项目、链接、屏上键盘的快捷方式和字母。

轻触并按住 - 点触并按住项目，方法是轻触并按住屏幕上的某个项目，不要抬起手指，直到动作发生。例如，要打开一个联系人的可用选项，请在“联系人”列表中点触并按住联系人，直至打开上下文菜单。

拖动 - 点触项目并短暂按住，不要抬起手指，在屏幕上移动手指，直至达到目标位置。在主屏上，可拖动项目进行重新定位。

滑动 - 滑动的方法是手指轻触屏幕后不要停顿（因而避免拖动项目），在屏幕表面迅速移动。例如，将屏幕向上或向下滑动可滚动浏览列表，或从左向右滑动浏览不同的主屏（反之亦然）。

轻触两次 - 查看图片时，您还可轻触两次，即可放大或缩小。


双指缩放 - 使用浏览器或地图时，或者在浏览图片时，将食指和拇指并拢或张开，即可放大或缩小。

旋转屏幕 - 可通过多个应用程序和菜单将屏幕的方向调整为设备的实际方向。

备注：

- 要选择项目，请轻触图标中心位置。
- 无需大力按，触摸屏非常敏感，轻轻点触即可。
- 使用指尖轻触所需选项。请注意不要触碰到任何其他键。

主屏

主屏是许多应用程序和功能的起点，使您可以添加应用程序快捷方式、Google 小工具等项目，从而直接访问信息和应用程序。这是默认的画布，可从任何菜单中轻触  访问画布。



扩展主屏

操作系统提供多个主屏画布，为添加图标、小工具等提供更大的空间。

- ▶ 在主屏上向左或向右滑动手指。

主屏

自定义主屏


您可以通过添加应用程序、窗口小部件或更改壁纸来自定义主屏。

在主屏上添加项目

- 1 点触并按住主屏的空白部分。
- 2 在“添加模式”菜单中，选择要添加的项目。您会在主屏上看到此添加的项目。
- 3 将它拖到您想要的位置，然后抬起手指。

提示！ 要将应用程序图标添加到主屏，请在“应用程序”菜单上点触并按住要添加的应用程序。


从主屏中移除项目


- ▶ **主屏** > 点触并按住要移除的图标 > 将其拖到 。

将某个应用程序添加为快速键


- ▶ 从应用程序菜单或主屏上，点触并按住应用程序图标并将其拖动到快速键区域。

从快速键区域删除应用程序

- ▶ 点触并按住目标快速键并将其拖动至 。

备注：  **应用程序**键无法删除。

在主屏上自定义应用程序图标

- 1 点触并按住应用程序图标直至将其从当前位置解锁。 然后将其拖放到屏幕上。将在应用程序的右上角显示编辑图标 。
- 2 再次轻触应用程序图标并选择所需的图标设计和大小。
- 3 轻触**确定**以保存更改。

返回到最近使用的应用程序


- 1 点触 □。屏幕将显示一个弹出窗口，其中包含您最近使用的应用程序图标。
- 2 轻触某个图标以打开其应用程序。或轻触 < 以返回上一个屏幕。

通知面板

通知警报可提醒您接收到新信息、日历事件和闹钟，以及正在进行的事件，如正在通话中。

当收到通知时，屏幕顶部将出现其图标。未读通知的图标会显示在左侧，WLAN 强度或电池电量等系统图标会显示在右侧。

备注：可用选项可能会因地区或服务提供商而异。

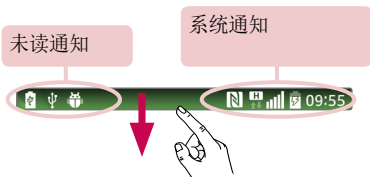

打开通知面板

从状态栏向下滑动可打开通知面板



状态栏上的指示器图标

指示器图标显示在屏幕顶部的状态栏上，可报告未接来电、新信息、日历事件、设备状态等。



屏幕顶部显示的图标可提供有关设备状态的信息。下表仅列示了最常见的图标。

图标	说明
	未插入 Micro-SIM 卡
	无信号
	飞行模式
	已连接到 WLAN 网络
	有线耳机
	正在通话
	未接来电
	蓝牙已开启
	NFC 已开启
	系统警告
	已设置闹钟
	新语音邮件
	新文字信息

图标	说明
	铃声设为请勿打扰
	振动模式
	电池已充满电
	电池正在充电
	手机已通过 USB 数据线 与 PC 连接或 USB 绑定已激活
	正在下载数据
	正在上传数据
	GPS 开启
	数据正在同步
	新 Gmail
	有新的 Hangouts 信息
	选择输入法
	DLNA 内容共享



目前正在播放歌曲



正在播放 DLNA 音樂




WLAN 热点已激活


备注：图标在状态栏中的位置可能会因功能或服务而异。


屏上键盘


您可以使用屏上键盘输入文本。在您需要输入文本时，屏上键盘会自动显示在屏幕上。要手动显示键盘，只需轻触要输入文本的文本字段。

使用键盘并输入文本

 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。

 轻触以切换为数字和符号键盘。

 轻触以输入空格。

 轻触以新建一行。

 轻触以删除上一字符。

输入带注音的字母

当选择法语或西班牙语作为文本输入语言时，您可以输入特殊的法语或西班牙语字符（如“á”）。

例如，要输入“á”，请点触并按住“a”键，直到放大键变大并显示其他语言的字符。然后，选择所需特殊字符。


Google 帐户设置


首次打开手机时，您有机会激活网络，登录 Google 帐户，并选择要如何使用某些 Google 服务。

设置您的 Google 帐户：

- 从提示的设置屏幕登录 Google 帐户。

或者

- 轻触  > **应用程序**选项卡 > 选择一个 Google 应用程序（如 Gmail）> 选择**添加电子邮件**以创建新帐户。

如果您已有 Google 帐户，输入您的电子邮件地址和密码，然后轻触 。

一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。

您的联系人、Gmail 信息、日历事件和来自网络上这些应用程序和服务的其他信息将与您的手机同步（这将取决于您的同步设置）。

登录后，您可在手机上使用 Gmail™ 收发邮件和利用 Google 服务。

连接到网络和设备

WLAN

使用 WLAN，您可在无线接入点（AP）覆盖区内高速访问互联网。使用 WLAN 尽情享受无线互联网，而且无需额外付费。



连接 WLAN 网络

要在手机上使用 WLAN，您需要访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或使用安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 WLAN，以延长电池使用寿命。

备注：如果您在 WLAN 区域之外，或者将 WLAN 设为**关**，则您的移动运营商可能为移动数据使用收取额外的费用。

打开 WLAN 并连接 WLAN 网络

- 1 轻触  > **应用程序**选项卡 >  **设置** > **网络**选项卡 > **WLAN**。
- 2 将 **WLAN** 设置为**开启**，将其打开，开始扫描可用的 WLAN 网络。
- 3 再次轻触 WLAN 菜单，查看范围内的有效 WLAN 网络列表。
 - 锁图标表示受到安全保护的**网络**。
- 4 轻触某个网络进行连接。
 - 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据（请咨询网络管理员获取详细信息）。
- 5 状态栏显示了可指明 WLAN 状态的图标。

蓝牙



与大多数手机不同，您可以通过运行对应的应用程序而不是通过蓝牙菜单，来使用蓝牙发送数据。

备注：

- LG 对经蓝牙无线功能发送或接收的数据的丢失、拦截或误用不承担任何责任。
- 随时确保您与之共享和接收数据的设备可靠且安全。如果设备间存在障碍物，则需要缩短操作距离。
- 某些未经 Bluetooth SIG 测试或认可的设备可能与您的设备不兼容。

打开蓝牙，将手机与蓝牙设备配对

您必须将您的设备与另一设备配对方可与其连接。

- 1 轻触  > **应用程序**选项卡 >  **设置** > **网络**选项卡 > 将**蓝牙**设置为“开”。
 - 2 再次轻触**蓝牙**菜单。您将看到将手机设为可见的选项和搜索设备的选项。现在轻触**搜索设备**以查看蓝牙范围内的设备。
 - 3 从列表中选择您要配对的设备。
- 一旦配对成功，您的设备将连接到另一个设备。

备注：有些耳机或免提式车载套件设备可能有固定的蓝牙 PIN，如 0000。如果配对设备有 PIN，系统会提示您输入 PIN。

连接到网络和设备



使用蓝牙无线功能发送数据


- 1 从相应的应用程序或**下载内容**中选择文件或项目，如联系人、日历事件或媒体文件。
- 2 选择选项以通过蓝牙发送数据。

备注：选择选项的方法可能会因数据类型的不同而有所变化。

- 3 搜索并配对已启用蓝牙的设备。

使用蓝牙无线功能接收数据

- 1 轻触  > **应用程序**选项卡 >  **设置** > **网络**选项卡 > 将**蓝牙**设置为“开”。
- 2 再次轻触**蓝牙**菜单，勾选屏幕顶部的复选框，以在其他设备上可见。

备注：要选择您的设备可见的时间长度，请轻触  > **可见超时**。

- 3 选择**接收**以确认您愿意接收来自该设备的数据。

共享手机的数据连接

在没有无线连接可用时，USB 绑定和便携式 WLAN 热点功能非常有用。您可以通过 USB 数据线（USB 绑定）将您手机的移动数据连接与一台电脑共享。通过将手机变为便携式 WLAN 热点，您可以一次与多个设备共享手机的数据连接。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

有关绑定和便携式热点的最新信息，包括支持的操作系统及其他详细信息，请访问 <http://www.android.com>。



将手机的数据连接共享为便携式 WLAN 热点

- 1 轻触  > 应用程序选项卡 >  设置 > 网络选项卡 > 绑定&网络 > WLAN 热点开关激活。
- 2 输入密码并轻触**保存**。

提示！如果您的计算机运行 Windows 7 或部分 Linux 风格的最新分发（例如 Ubuntu），通常无需准备计算机进行绑定。但是，如果运行的是较早版本的 Windows 或其他操作系统，则可能需要先准备您的计算机，才能通过 USB 建立网络连接。如需获得有关哪种操作系统支持 USB 绑定以及如何配置它们的最新信息，请访问 <http://www.android.com>。

重命名或确保您的便携式热点安全

您可以更改手机 WLAN 网络名称（SSID）的名称并确保其 WLAN 网络的安全。

- 1 轻触  > 应用程序选项卡 >  设置 > 网络选项卡 > 绑定&网络 > WLAN 热点。
- 2 轻触**设置 WLAN 热点**。
 - 这将打开**设置 WLAN 热点**对话框。
 - 您可以更改**WLAN名称（SSID）**，这将是其他设备在扫描 WLAN 网络时看到的名称。
 - 您也可以轻触**安全性**菜单，使用预共享密钥（PSK）来为网络配置 WLAN 保护访问 2（WPA2）安全性。
 - 如果点触 **WPA2 PSK 安全性**选项，则密码字段将会添加到**设置 WLAN 热点**对话框中。如果输入密码，您将需要在将手机的热点与电脑或其他设备连接时输入密码。您可以在**安全性**菜单中点触**开放**，以从 WLAN 网络中删除安全性。
- 5 轻触**保存**。

注意！ 如果将安全性选项设为“开放”，则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。为避免未授权使用，最好保持激活安全性选项。

连接到网络和设备

WLAN 直连



WLAN 直连支持启用了 WLAN 的设备之间无需借助接入点而直接连接。因为 WLAN 直连十分耗电，所以建议您在使用 WLAN 直连功能时将手机连接至电源插座。提前检查您的 WLAN & WLAN 直连网络，确保用户已连接到相同的网络。

打开 WLAN直连：

- 1 长按近期任务键 > 系统设置 > 网络标签 > WLAN > 高级 WLAN > WLAN直连。
- 2 在扫描到的设备列表中选择要连接的设备。

使用 SmartShare

SmartShare 使用 DLNA（数字生活网络联盟）技术，通过无线网络共享数字内容。要支持此功能，双方设备都必须经过 DLNA 认证。您

- 1 在要播放或放送的内容上，点击 ，或者点击  和 SmartShare。
- 2 在对话框中轻触Play或Beam。
 - **Play:** 您可以通过 TV、蓝牙扬声器等播放内容。
 - **Beam:** 您可以将您的内容发送至蓝牙设备或支持SmartShare Beam功能的LG手机或平板电脑。
 - *SmartShare Beam 通过 WLAN 直连快速传输多媒体内容。
- 3 轻触设备以在列表上播放或接收。
 - 如果设备不在列表上，请确保设备的 WLAN、WLAN 直连或蓝牙连接已开启。并轻触**重新扫描**。
- 4 轻触**要发送的装置**。

体验附近设备（如计算机或您手机上的移动设备）的内容

- 1 若要将附近的设备连接到您的手机上，请按下图所示，在图片库、音乐或视频应用程序上轻触**附近设备**。

- 请确保您的手机和附近设备连接到相同的 WLAN 网络。
- 请确保附近设备上的 DLNA 功能已开启。

2 轻触设备以连接。


如果设备不在列表上，请轻触**搜索附近设备**。

连接后，您可以在手机上体验附近设备上的内容。

使用 USB 数据线的 PC 连接

了解在 USB 连接模式下，如何使用 USB 数据线将您的设备与 PC 相连。

使用媒体设备（MTP）模式传输音乐、照片和视频

- 1 使用 USB 数据线将手机连接到 PC。
- 2 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。点触并向下滑动状态栏，轻触 ，然后选择**媒体设备（MTP）**。
- 3 现在，您可以在 PC 中查看大容量存储内容，然后传输文件。

与 Windows Media Player 同步

确保 Windows Media Player 已安装在您的 PC 上。

- 1 使用 USB 数据线将手机连接到安装有 Windows Media Player 的 PC。
 - 2 选择**媒体设备（MTP）**选项。连接后，PC 上显示弹出窗口。
 - 3 打开 Windows Media Player 以同步音乐文件。
 - 4 在弹出窗口中编辑或输入设备的名称（如有必要）。
 - 5 选中并拖动所需音乐文件至同步列表。
 - 6 开始同步。
- 要与 Windows Media Player 同步，必须满足以下要求。





连接到网络和设备


项目	要求
操作系统	Microsoft Windows XP SP2、Vista 或更高
Window Media Player 版本	Windows Media Player 10 或更高版本

- 如果 Windows Media Player 版本低于第 10 版，请安装第 10 版或更高版本。



通话

拨打电话



- 1 轻触  以打开键盘。
- 2 使用键盘输入号码。要删除数字，请轻触 。
- 3 轻触  以拨打电话。
- 4 要结束通话，请轻触**结束**图标 。

提示！ 要输入“+”以拨打国际电话，请点触并按住 。

呼叫联系人

- 1 轻触  以打开联系人。
- 2 滚动浏览联系人列表，或轻触**搜索联系人**，输入您要呼叫的联系人的前几个字母。
- 3 在列表中，轻触  以呼叫。

接听和拒绝电话

在锁定状态收到来电时，向任何方向滑动  可接听来电。
向任何方向滑动  可拒绝来电。
要发送信息，请滑动底部的**用消息拒绝**图标。

提示！ 用消息拒绝








您可以使用此功能快速发送信息。此选项可用于在会议时拒绝来电并发送信息。

通话

调节通话音量


要在通话期间调节通话音量，请使用手机后面的音量调高和调低键。

拨打第二个电话


- 1 在第一个通话过程中，轻触**菜单键**  > **添加通话**，然后拨号。您还可通过轻触 **通话记录**  转至最近拨出的号码，也可轻触 **联系人**  来搜索联系人并选择要呼叫的联系人。
- 2 轻触  以拨打电话。
- 3 此时呼叫屏幕上显示两个呼叫。初始呼叫被保持，通话方进入通话状态。
- 4 轻触显示的数字可在不同的通话间切换。或轻触 **合并通话**  进行多方通话。
- 5 要结束当前通话，请轻触**结束**或轻触  键，向下滑动通知栏，然后选择**挂断通话**图标 。

备注：您需要对每通电话付费。

查看通话记录

在主屏上，轻触  并选择**通话记录**选项卡。
查看所有已拨电话、已接来电和未接来电的完整列表。

提示！

- 轻触任意通话记录条目，以查看通话日期、时间。
- 轻触**菜单键** ，然后轻触**全部删除**以删除所有记录项目。

通话设置

您可以配置通话设置（如来电转接）以及运营商提供的其他特殊功能。


- 1 在主屏上，轻触 。
- 2 轻触 。
- 3 轻触**通话设置**，然后选择要调整的选项。

联系人




在手机上添加联系人，并将其与 Google 帐户或其他支持联系人同步的帐户中的联系人同步。

搜索联系人

在主屏上

- 1 轻触  以打开联系人。
- 2 轻触**搜索联系人**，使用键盘输入联系人姓名。


添加新联系人

- 1 轻触 ，输入新联系人的号码，然后轻触**菜单键** 。轻触**添加至“联系人” > 新建联系人**。
- 2 如果要为新联系人添加图片，请轻触图像区域。从**拍照**或从**图片库中进行选择**中选择。
- 3 轻触  以选择联系人类型。
- 4 轻触联系人信息类别，并输入有关联系人的详细信息。
- 5 轻触**保存**。


按收藏夹归类联系人

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹

- 1 轻触  以打开联系人。
- 2 轻触联系人以查看其详细信息。
- 3 轻触联系人姓名右角的星号。星号会变成黄色。

从收藏夹列表中删除联系人

- 1 轻触  以打开联系人。
- 2 轻触**收藏**选项卡，选择一个联系人以查看其详细信息。
- 3 轻触联系人姓名右角的黄色星号。星号变为灰色，联系人已从收藏夹中删除。

创建群组



- 1 轻触  以打开联系人。
- 2 轻触**群组**并轻触**菜单键**  选择**新群组**。
- 3 为新群组输入一个名称。您还可以为新建的群组设置一个铃声。
- 4 轻触**保存**以保存群组。

备注：如果您删除一个群组，分配至该群组的联系人不会被删除。他们将保留在您的电话本中。


信息

您的手机将短信和彩信结合到一个直观易用的菜单中。

发送信息

- 1 轻触主屏上的  图标，然后轻触  打开空白信息。
- 2 在**收件人**字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您可以轻触建议的收件人。您可添加多个联系人。

备注：您将按每个收件人每条文本信息付费。

- 3 轻触**输入内容**字段并开始编写信息。
- 4 轻触  以打开“选项”菜单。从以下选项中选择：**快速信息、插入表情符号、计划发送、添加主题和取消。**

提示！ 您可以轻触  图标以附加想要在信息中共享的文件。

- 5 轻触**发送**以发送信息。
- 6 屏幕上会显示回复。当您查看并发送附加信息时，将创建信息会话。

警告：


- 160 个字符的限制在不同国家/地区有所不同，具体取决于语言和短信编码方式。
- 如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

线程框

与另一方交换的信息（短信、彩信）将以时间顺序显示，以便您方便查看对话概述。

更改信息设置

已预定义手机信息设置，因此您可以立即发送信息。您可以根据喜好更改设置。

- 轻触主屏上的**信息**图标，然后轻触  和**设置**。

电子邮件

您可以使用电子邮件应用程序阅读 Gmail 等服务的电子邮件。电子邮件应用程序支持以下帐户类型：POP3、IMAP 和 Microsoft Exchange。




您的服务提供商或系统管理员可提供您需要的帐户设置。

管理电子邮件帐户



首次打开**电子邮件**应用程序时，将打开一个设置向导，帮助您设置电子邮件帐户。

在初始设置后，电子邮件显示收件箱的内容。



添加另一个电子邮件帐户：

- 轻触  > **应用程序选项卡** > **电子邮件** > 轻触  > **设置** >  **添加帐户**。



更改电子邮件帐户的设置：

- 轻触  > **应用程序选项卡** > **电子邮件** > 轻触  > **设置** > **常规设置**。

删除电子邮件帐户：





- 轻触  > **应用程序选项卡** > **电子邮件** > 轻触  > **设置** > 轻触 **您要删除的帐户** > **删除帐户** > **选择是**。

使用帐户文件夹

轻触  > **应用程序选项卡** > **电子邮件** > 轻触  再选择**文件夹**。每个帐户均具有收件箱、发件箱、已发送和草稿箱文件夹。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。


撰写和发送电子邮件

要撰写和发送邮件

- 1 在**电子邮件**应用程序中，轻触 .
- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址将从您的联系人中建议。
- 3 轻触  以添加抄送/密送地址，并在需要时轻触  以附加文件。
- 4 输入邮件的正文。
- 5 轻触 .

提示！ 当新电子邮件到达“收件箱”时，您将通过声音或振动收到通知。

照相机

要打开相机应用程序，请轻触主屏上的**照相机** .



了解取景器
















- 1 **闪光灯** - 从以下选项中选择：**关闭、开启、自动**。
- 2 **切换镜头** - 在后置相机镜头与前置相机镜头之间切换。
- 3 **拍摄模式** - 从以下选项中选择：**正常、橡皮擦拍摄、动态色调 (HDR)、全景、VR全景拍摄、连拍、人面优化、双摄像头拍摄、时间捕捉拍摄、智能自动、运动或夜间**。
- 4 **设置** - 轻触此图标可以打开设定菜单。
- 5 **模式切换** - 点触此图标以切换相机模式和视频模式。
- 6 **拍摄按钮**
- 7 **图片库** - 轻触以查看最近拍摄的照片。您可以访问图片库并查看保存的照片。

备注：拍照前，请确保相机镜头清洁干净。

使用高级设置

从取景器中轻触  以打开高级选项。通过滚动浏览列表，您可以更改相机设置。选择此选项后，请轻触 .


	要拍照，说出以下词语一：Cheese、Smile、Whisky、Kimchi 或 LG。
	定义并控制进入照片的光量。
	轻触以选择对焦模式。
	选择照片分辨率。如果您选择高分辨率，文件大小会增大，这意味着内存中可存放的照片数量会减少。
	ISO 评级决定相机的光传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。
	提高不同光照条件下的颜色质量。
	对图片应用艺术效果。
	设置按下拍摄按钮后的延迟。如果要为自己拍摄照片，此功能是理想之选。
	激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持定位功能的博客，您可以在地图上看到此照片。 备注： 此功能仅在激活了 GPS 时可用。
	选择快门声音。
	设置音量键拍摄或缩放。
	打开帮助指南以了解某功能的操作方式。
	恢复所有相机默认设置。

照相机

提示！





- 退出相机时，部分设置将返回默认值，如白平衡、色彩效果、计时器和场景模式。拍摄下一张照片之前，请先查看。
- 设置菜单层叠在取景器之上，因此，当您更改照片颜色或质量时，您将在“设置”菜单下预览到图像更改效果。

快速拍照

- 1 打开**照相机**应用程序。
- 2 水平拿稳手机，将镜头对准您要拍摄的物体。
- 3 对焦框将显示在取景器屏幕的中间。您还可轻触任何屏幕上的位置以对焦特定点。
- 4 对焦框变绿时，表示相机已对好焦。
- 5 轻触  以拍照。

使用清晰拍摄模式




此功能让相机识别您不想在相片中出现的物体。拍照后，点击一个实线的物件以清除它，然后储存相片。

- 1 开启**照相机**应用程序。
 - 2 点触  >  **橡皮擦拍摄**。
 - 3 点触  以拍摄相片。
 - 4 点按任何虚线的物体以将它们从相片移除，然后点按  。
- * 拍照时正在移动的物体会显示为虚线。


备注





- 将相机固定在一个地方后拍摄相片。
- 如果主题的颜色与背景相似，可能只侦测到一部分，也有可能难以清除。
- 如果正在移动的主题太小或太大可能难以清除。
- 如果主题移动的幅度太小，可能侦测不到。

使用双摄像头拍摄模式

- 1 开启**照相机**应用程序。
- 2 点按  >  **双摄像头拍摄**。
- 3 一个小取景器方框会显示于取景屏幕。设定您的拍摄。
 - 拖动小取景器以移动至拍摄中想要的位置。
 - 如有需要，可触控并按住小取景器以重新调整大小。
 - 点击小取景器以切换主取景器及小取景器的镜头。
- 4 点按  以拍摄合并图片。


使用时间捕捉拍摄模式

设定相机在点按  前拍摄五张连续相片，以捕捉错过的时刻。

- 1 开启**照相机**应用程序。
- 2 点按  >  **时间捕捉拍摄**。
- 3 点按  以拍摄相片。
- 4 要检视拍摄相片前的一刻，请点按相机屏幕底部的图像缩图。
- 5 选择您想保留的图片，然后点按屏幕上的  。

照相机

拍照后

轻触  以查看拍摄的照片。



轻触可编辑照片。



轻触可以立即拍摄其它照片。




轻触即可发送照片给他人或通过社交网络服务共享照片。



轻触以删除照片。

提示！ 如果有 SNS 帐户并在手机上设置了该帐户，您可以向 SNS 社区共享您的照片。

查看保存的照片

您可以在相机模式下访问保存的照片。只需轻触“图片库”图标  然后将显示图片库。

- 如要查看更多照片，请向左右滚动。
- 要放大或缩小，请轻触两次屏幕或将两个手指放在屏幕上，然后分开（使两根手指靠近可将其缩小）。

摄像机

了解取景器



- 1 闪光灯 - 从以下选项中选择：**关闭、开启、自动**。
- 2 切换镜头 - 在后置相机镜头与前置相机镜头之间切换。
- 3 录制模式 - 从以下选项中选择：**正常、双重记录或动态追焦**。
- 4 设置 - 轻触此图标可以打开设置菜单。
- 5 模式切换 - 点触此图标以切换相机模式和视频模式。
- 6 开始录制
- 7 图片库 - 轻触以查看最近录制的视频。您可以访问“图片库”并查看保存的视频。










提示！

录制视频时，将两根手指放在屏幕上并缩放手指，即可使用缩放功能。



摄像机

使用高级设置



使用取景器，轻触  以打开所有高级选项。

	<p>轻触以开启音频变焦功能。可以清晰并大声地录制您所需的语音。开启此功能后，将要缩放的物体聚集在蓝色圆圈内。要同时放大声音和视频，请划开手指。</p> <p>备注</p> <ul style="list-style-type: none">• 只能在横向视图中使用。• 不要盖住两侧的麦克风。
	<p>轻触以设置正在录制的视频的大小（以像素为单位）。</p>
	<p>定义并控制进入镜头的光量。沿滚动条滑动亮度指示器，滑向“-”将调低视频亮度，滑向“+”将调高视频亮度。</p>
	<p>提高不同光照条件下的颜色质量。</p>
	<p>选择要对新视图使用的色调。</p>
	<p>激活以使用手机基于位置的服务。</p>
	<p>设置音量键录音或缩放。</p>
	<p>打开帮助指南以了解某功能的操作方式。</p>
	<p>恢复所有相机默认设置。</p>


快速录制视频




- 1 打开**照相机**应用程序并滑动**视频模式**按钮。
- 2 屏幕上将显示摄像机的取景器。
- 3 拿稳手机，将镜头对准您要摄像的物体。
- 4 轻触  一次，开始录制。
- 5 取景器的顶部有红灯闪烁，计时器显示视频长度。
- 6 轻触屏幕上的  停止录制。

提示！



-  - 轻触以在录制视频过程中拍摄图像。
-  - 轻触以在录制视频过程中暂停。

录制视频后

轻触  以查看最近拍摄的视频。

	轻触以拍摄其他照片。
	轻触即可发送视频给他人或通过社交网络服务共享视频。
	轻触以删除视频。

观看保存的视频

从取景器中，轻触 ，即可看到相机图片库。轻触视频播放图标  可播放视频。





摄像机

观看视频时调节音量

要在播放视频时调节音量，请使用手机后面的音量键。

使用音频变焦

将声音集中于您所选择的特定区域，这可增加麦克风的敏感度，并减少背景噪音。





- 1 开启**照相机**应用程序并更改为视频模式。
- 2 点按  >  **音频变焦** 并选择**开启**。
- 3 点按取景器上的空白位置，以关闭设定弹出窗口。
- 4 横向握住手机，并点按  以开始录制。
- 5 将您想放大的主题对焦在蓝色圆圈内。缩进以改善音频变焦声音。
- 6 点按  以停止录制。

备注

- 使用此功能时请勿遮挡侧面的麦克风。
- 要使用此功能，您必须以横向方向录制。





使用双重记录

让您同时使用前置镜头及后置镜头拍摄视频，并合并为一段视频。

- 1 开启**照相机**应用程序并更改为视频模式。
- 2 点触  >  **双重记录**。
- 3 一个小取景器方框会显示于主取景器屏幕，设定您的拍摄。
 - 拖动小取景器以移动至拍摄中想要的位置。
 - 如有需要，可点触并按住小取景器以重新调整大小。
- 4 点触  以开始双重记录。
- 5 点触  以停止双重记录。


使用动态追焦模式

让您定义一个摄影区域以进行对焦及放大。您可于录制前先设定区域，然后按需要在录制期间移动它。


- 1 开启**照相机**应用程序并更改为视频模式。
- 2 点触  >  **动态追焦**。
- 3 拖动放大镜至要放大的区域。小屏幕会显示大视图中的清晰焦点。
- 4 点触  以开始录制。
 - 拍摄期间，您可以移动小屏幕，点触并拖动它至想要的位置。
- 5 点触  以停止录制。


快捷备忘录+


快捷备忘录+可以实用而高效地在通话过程中创建带有已保存图片的备忘录或在当前手机屏幕上创建备忘录。

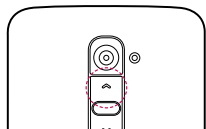

或




- 1 (当屏幕关闭时) 按住音量调高键或者未锁屏状态轻触并向下滑动状态栏，然后轻触 。

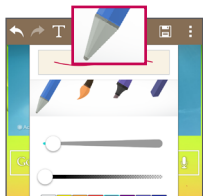

- 2 从笔型、颜色、厚度、透明、橡皮擦中选择所需菜单选项，然后创建备忘录。







- 3 在“编辑”菜单中轻触  以使用当前屏幕将备忘录保存在**图片库**或**笔记本**中。

备注：使用快捷备忘录+时请使用指尖。不要使用指甲。

使用快捷备忘录+选项

使用快捷备忘录+时，您可轻松使用快捷菜单选项。

	取消操作或重新操作。
	选择笔型和颜色。
	擦除您创建的备忘录。
	使用当前屏幕将备忘录保存在 图片库 或 笔记本 中。


查看保存的快捷备忘录+

轻触**笔记本/图片库**，并选择QuickMemo相册。


Quick 翻译

只需将智能手机的相机对准您要理解的外语句子。您可以随时随地获得实时翻译。

您可以从 Google Play Store 购买更多字典以用于脱机翻译。

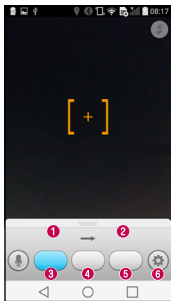

- 1 原语言。
- 2 目标语言。
- 3 字词翻译。
- 4 句子翻译。
- 5 段落翻译。
- 6 设置。

- 1 轻触  > 应用程序选项卡 > Quick 翻译。
- 2 轻触**单词、线条或段落**。
- 3 设置所需语言。
- 4 朝您要翻译的对象置于屏幕提示区域几秒。

备注：仅免费提供一个字典。若要购买附加字典，请从列表中选择要作为免费字典安装的字典。

备注：识别率可能有所差别，具体取决于需要翻译的字幕的大小、字体、颜色、亮度和角度。

Quick多任务

Quick多任务通过在手机显示屏上执行叠加操作，轻松实现多窗口浏览。




1		轻触以退出Quick多任务并返回全屏模式。
2		轻触以调整透明度。
3		轻触以结束Quick多任务。
4		轻触以调整大小。

- 1 轻触并向下滑动状态栏 > 轻触Quick多任务应用程序或使用Quick多任务支持的应用程序时 > 轻触 。该功能将在屏幕上持续显示为小窗口。
- 2 您可以拨打电话、浏览网络或选择其他手机选项。当透明度栏未满 时，也可以使用和轻触小窗口的屏幕。

备注：Quick多任务最多可同时支持两个窗口。

Quick遥控


Quick遥控将您的手机变成家庭电视、机顶盒、音频设备、DVD/蓝光播放器、空调和投影仪等适用的万能遥控器。

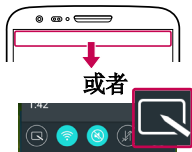

- 1 轻触  > 应用程序选项卡 > Quick遥控  > 轻触 .

或者


- 轻触并向下滑动状态栏，然后轻触  > 添加远程。

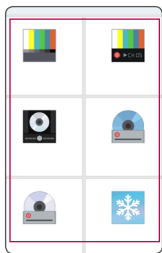

- 2 选择设备类型和品牌，再按照屏幕上的说明配置设备。



- 3 轻触并向下滑动状态栏，再使用 Quick遥控功能。

轻触菜单键  可选择魔力遥控器设置、编辑遥控器名称、了解遥控器、移动遥控器、删除遥控器、设置和帮助。

备注：Quick遥控的工作方式与普通遥控器控制红外（IR）信号相同。当您使用 Quick遥控功能时，注意不要遮盖手机顶部的红外传感器。某些型号、制造商或服务公司可能不支持此功能。



实时缩放

实时缩放可以放大或缩小正在播放的视频的某一部分，以使所需的区域变大或变小。

查看视频时，将食指和拇指并拢或张开，即可放大或缩小。

备注：

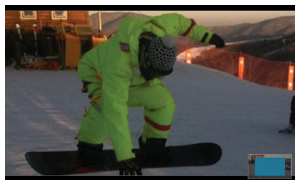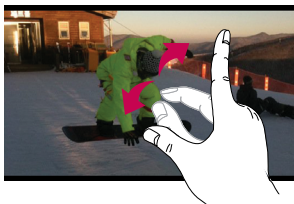

- 播放影片时，请在屏幕的左侧向上或向下滑动，以调整屏幕亮度。
- 播放影片时，请在屏幕上向上或向下滑动，以调整音量。
- 播放影片时，向左或向右滑动屏幕，以倒转或快进。
- 请勿按得太用力；只要轻轻地确点触就足以让触控屏幕感应。




LG SmartWorld

LG SmartWorld 提供了琳琅满目的精彩内容（游戏、应用程序、壁纸和铃声），将让 LG 手机用户有机会体验到更丰富的“移动生活”。

如何从手机访问 LG SmartWorld

- 1 轻触  > **应用程序**选项卡 > 轻触  图标以访问 **LG SmartWorld**。
- 2 输入您在 LG SmartWorld 的 ID/密码，然后轻触“登录”。如果您还未注册，轻触“注册”以接收您的 LG SmartWorld 会员资格。
- 3 下载所需的内容。

备注：如果没有 图标怎么办？

- 1 使用手机网络浏览器访问 LG SmartWorld (www.lgworld.com)，并选择您所在的国家/地区。
- 2 下载 LG SmartWorld 应用程序。
- 3 运行和安装下载的文件。
- 4 轻触  图标以访问 LG SmartWorld。

如何使用 LG SmartWorld

- 参加 LG SmartWorld 每月的促销活动。



搜索内容。



按类别查找内容（如游戏、教育、娱乐等）。



- 尝试使用简单的“菜单”按钮，迅速找到您正在寻找的功能。
设置 - 设置常规以及查看版本资料。
登录 - 设置您的 ID 和密码。
- 还可以试用其他有用功能（内容详见资料屏幕）。

备注： 您所在国家/地区可能无法使用 LG SmartWorld。

多媒体

图片库

您可以将多媒体文件保存在存储中，以便轻松访问所有多媒体文件。使用此应用程序查看图片和视频等多媒体文件。

- 1 轻触  > **应用程序**选项卡 >  **图片库**。
可以使用图片库管理和共享所有图片和视频文件。

备注：

- 某些文件格式不受支持，具体取决于设备已安装的软件。
- 某些文件可能无法正常播放，具体取决于它们的编码方式。

查看图片



启动图片库后，会显示可用的文件夹。当另一个应用程序（如电子邮件）保存一张图片，会自动创建下载文件夹以包含图片。同样，抓拍屏幕后，会自动创建抓拍图片文件夹。选择一个文件夹并打开它。图片按创建日期显示在文件夹中。选择一张要全屏查看的图像。向左或向右滚动以查看下一张或上一张图像。

放大和缩小


使用以下一种方法放大图像：

- 在任何位置轻触两下以放大。
- 在任何位置划开两根手指可放大，收拢手指可缩小。

播放视频



视频文件在预览时显示  图标。 选择一个将观看的视频，再轻触 。 视频应用程序会启动。

编辑照片


查看照片时，轻触 。

删除照片/视频

使用以下一种方法：

- 在文件夹中，轻触 ，再通过勾选选择照片或视频，最后轻触**删除**。
- 浏览照片或观看视频时，轻触 。








设置为墙纸

查看照片时，轻触**菜单键**  > **将图像设置为**以将图像设置为墙纸或将其分配给联系人。








备注：

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。



播放视频

- 1 点击  >  > **应用程序选项卡** >  **图片库**。
- 2 选择您要播放的视频。
 - ▶  **Quick 多任务**: 通过在手机显示屏上执行叠加操作, 轻松实现多任务处理。
 - ▶  **SmartShare**: 与 DLNA 认证设备共享媒体文件。
 - ▶  **菜单**: 轻触可访问“屏幕比例”、“字幕”、“共享”、“剪辑”、“设置”、“详细信息”选项。
 - ▶  **屏幕截图**: 播放视频时抓拍屏幕。

备注: 点击  > **设置** > **开启截图**。

- ▶  **音量**: 轻触以显示音量滑动条, 然后通过滑动条调整播放音量。
- ▶  **锁/解锁**: 锁定触控键以防意外触控。
- ▶  **暂停**: 轻触以暂停播放视频。
- ▶  **播放**: 轻触以继续播放视频。
- ▶  **前进**: 轻触可以前进 10 秒。
- ▶  **后退**: 轻触可以后退 10 秒。
- ▶  **收藏**: 点击添加视频到您的收藏夹。

播放视频

- 1 在主屏上, 轻触**应用程序键**  > **图片库**  以查看存储器中存储的视频。
 - ▶ 向上或向下滚动可查看更多相册。
- 2 轻触一个相册以打开并查看其内容。 (相册中的图片和视频以时间顺序显示。)
- 3 轻触相册中的视频即可播放。
 - ▶ 轻触视频可查看播放控件。


备注：播放视频时，将屏幕左侧向上或向下滑动以调整屏幕亮度。播放视频时，将屏幕右侧向上或向下滑动以调整音量。播放视频时，轻触时间范围点可通过小屏幕预览该段视频。轻触小屏幕可跳至该部分视频。播放视频时，从左到右（或反方向）滑动手指可快进和快退。






视频编辑器

您可以编辑存储在手机上的照片或视频。

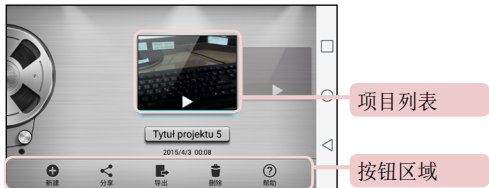
备注：视频编辑功能仅适用于通过此手机录制的照片或视频。

<项目列表屏幕>



	创建项目
	通过 YouTube 等应用程序分享项目
	应导出项目，以在视频等应用程序中播放
	删除项目
	说明

< 项目编辑画面 >

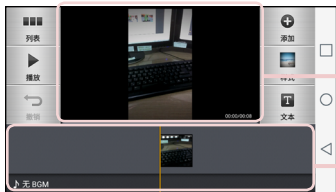

查看器区域

时间线区域



移至项目列表屏幕。当前编辑的项目将自动保存



点触以播放当前片段



撤消操作



轻触可添加其他视频、图像、标题或音频剪辑




点触以选择样式



添加文本

音乐

手机拥有内置的音乐播放器，可让您播放所有喜爱的曲目。要访问音乐播放器，请轻触  > **应用程序**选项卡 > **音乐**。

将音乐文件添加至手机


开始时将音乐文件传输至手机：

- 使用媒体设备（MTP）传输音乐。
- 从无线 Web 下载。
- 将手机与计算机同步。
- 通过蓝牙接收文件。

使用媒体设备 (MTP) 传输音乐

- 1 使用 USB 数据线将手机连接到 PC。
- 2 选择**媒体设备 (MTP)** 选项。您的手机将出现在电脑的另一个硬盘驱动器上。单击该驱动器进行查看。将 PC 中的文件复制到驱动器文件夹。
- 3 完成文件传输后，将状态栏向下滑动并轻触**媒体设备 (MTP) > 为手机充电**。现在，您可以安全地拔下设备。

播放歌曲

- 1 轻触  > **应用程序** 选项卡 > **音乐**。
- 2 轻触**歌曲**。
- 3 选择您要播放的歌曲。

	轻触可暂停播放
	轻触以继续播放
	轻触可跳至唱片或播放列表中的下一个曲目
	轻触以返回到歌曲的开头。轻触两次以返回到上一首歌曲
	轻触以管理音乐的音量
	轻触以设置音频效果
	轻触可查看当前播放列表
	轻触可设置收藏夹
	轻触以设置随机播放模式
	轻触以设置重复播放模式



轻触以使用 SmartShare 功能共享音乐。

要在聆听音乐时更改音量，请按手机后面的上下音量键。

点触并按住列表中的任何歌曲。这将显示**播放**、**添加到播放列表**、**分享**、**设置为铃声**、**删除**、**详细信息**和**搜索**选项。

备注：

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

备注：音乐文件的版权可能受国际条约和国家版权法保护。

因此，可能需要获得许可或许可证才能复制音乐。

在某些国家/地区，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家/地区立法。





实用工具

访客模式




要保护您的隐私权或针对儿童限制某些应用程序，您可以使用访客模式。


当您手机借给其他人时，您可以限制要显示的应用程序。您可以提前设置访客模式并自定义选项。

备注：要使用访客模式，则应提前设置图案锁定。

- 1 轻触  >  >  **设置** > **常规选项卡** > **访客模式**。
- 2 轻触  以开启访客模式。

设置闹钟




- 1 轻触  > **应用程序选项卡** >  **闹钟/时钟** > 。
- 2 在设置闹钟后，您的手机会提示您与闹钟时间相距多久。
- 3 设置**重复、再响间隔、闹铃响时振动、铃声、闹钟音量、自动应用程序启动器、拼图锁和备忘录**。轻触**保存**。

备注：如要更改闹钟列表屏幕上的闹钟设置，请轻触 ，然后选择**设置**。

使用计算器

- 1 轻触  > **应用程序选项卡** >  **计算器**。
- 2 轻触数字键输入数字。
- 3 对于简单的计算，请轻触要执行的函数（+、-、x 或 ÷），然后点触 =。
- 4 对于更复杂的计算，请轻触  选择科学计算器。
- 5 要检查历史记录，请轻触  选择计算历史记录。






将事件添加到日历中


- 1 轻触  > **应用程序**选项卡 >  **日历**。
- 2 在屏幕顶部，您可以发现日历的不同视图类型（日、周、月、年、日程）生活日记。
- 3 轻触要添加事件的日期，再轻触 。
- 4 轻触**活动名称**，然后输入事件名称。
- 5 轻触**位置**，然后输入位置。 查看日期并输入事件开始和结束的时间。
- 6 如果您要为事件添加备注，请轻触**说明**，然后输入详细信息。
- 7 必要时设置**提醒**。
- 8 轻触**保存**以在日历中保存事件。

录音机

使用录音机录制音频文件。

录制声音或语音

- 1 轻触  > **应用程序**选项卡 >  **录音机**。
- 2 轻触  以开始录音。
- 3 轻触  以结束录音。
- 4 轻触  收听录音。

备注：轻触  可访问录音库。 您可以收听保存的录音。 可用的录音时间可能会因实际录音时间而异。


任务管理器

您可以使用任务管理器管理应用程序。您可以轻松检查当前运行的应用程序数量和关闭特定应用程序。

任务

可使用 MS Exchange 帐户同步此任务。您可在 MS outlook 或 MS Office Outlook Web Access 中创建、修改或删除任务。



同步 MS Exchange

- 1 从主屏轻触  >  > 设置。
- 2 轻触常规 > 帐户与同步 > 添加帐户。
- 3 轻触 **Microsoft Exchange** 以创建电子邮件地址和密码。
- 4 确保选中“自动同步数据”。

备注： 根据电子邮件服务器，可能不支持 MS Exchange。

POLARIS Viewer 5

POLARIS Viewer 是专业的移动办公解决方案，让用户可使用移动设备随时随地方便地查看各种类型的办公文档，如 Word、Excel 和 PowerPoint 文件。

轻触  > 应用程序选项卡 >  POLARIS Viewer 5。



查看文件

现在，移动用户可在移动设备上轻松查看各种文件类型，包括 Microsoft Office 文档和 Adobe PDF。使用 POLARIS Viewer 5 查看文档时，对象和布局与原始文档相同。

实用工具

Google+



使用此应用程序可与他人通过 Google 社交网络服务保持联系。

- 轻触  > **应用程序**选项卡 >  **Google+**。

备注：此应用程序可能无法使用，具体取决于您所在的地区或您的服务提供商。

语音搜索



通过此应用程序，可使用语音搜索网页。

- 1 轻触  > **应用程序**选项卡 >  **语音搜索**。
- 2 当**请开始说话**出现在屏幕上时，说一个关键词或词组。从显示的关键词建议中选择一项。

备注：此应用程序可能无法使用，具体取决于您所在的地区或您的服务提供商。

下载内容

使用此应用程序可查看您通过此应用程序下载的具体文件。



- 轻触  > **应用程序**选项卡 >  **下载内容**。

备注：此应用程序可能无法使用，具体取决于您所在的地区或您的服务提供商。

互联网

使用此应用程序浏览互联网。浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

备注：连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

1 轻触  > 应用程序选项卡 >  互联网。


使用 Web 工具栏

轻触并用手指将其向上滑动以打开。



轻触可返回上一页。



轻触可前进到当前页之后的下一页。这正好与轻触  的效果相反，按此键将转到上一页。



轻触可返回主页。



轻触可添加新窗口。





轻触可访问书签。


查看网页

点触地址栏，输入网址，再点触**开始**。


网络

打开网页

要转至新页面，请轻触  → .


要转至另一个网页，请点触 ，向上或向下滚动，再点触网页以选择它。


使用语音搜索网络

轻触地址字段，轻触 ，说一个关键字，然后选择显示的建议关键字之一。



备注：此功能可能无法使用，具体取决于您所在的地区或您的服务提供商。

书签

要对当前网页添加书签，请轻触  > **添加到书签** > **确定**。



要打开一个带书签的网页，请点触 ，再选择其中一项。

历史记录

点触  > **历史记录** 以从最近访问的网页列表中打开一个网页。要清除历史记录，请轻触  > **清除浏览记录**。

Chrome

使用 Chrome 可搜索信息和浏览网页。

1 轻触  > **应用程序**选项卡 >  **Chrome**。

备注：此应用程序可能无法使用，具体取决于您所在的地区和您的服务提供商。

查看网页



点触地址栏，再输入一个网址或搜索标准。

打开网页




要转至新页面，轻触  → **打开新的标签页**。

设置

此部分将概述您可以使用手机的系统设置菜单更改的项目。 访问“**设置**”菜单：

点击  > 触摸并按住  > **系统设置**。

- 或 -

点击  >  > **应用程序选项卡** >  **设置**。

网络

<WLAN>

WLAN - 打开 WLAN 以连接到可用的 WLAN 网络。

提示！ 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入手机的 MAC 地址。

您可以在下列用户界面中找到 MAC 地址：点击  >  > **应用程序选项卡** >  **设置** > **网络选项卡** > **WLAN** >  > **高级 WLAN** > **MAC 地址**。

<蓝牙>

打开或关闭蓝牙无线功能以使用蓝牙。

<移动数据>

显示数据使用情况并设置移动数据范围。

<通话>

配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

语音邮件中心 - 您可以选择运营商的语音邮件服务。

固定拨号 - 打开并汇集一个号码列表，可从手机拨打此列表中的号码。 您需要提供 PIN2 码，此代码由运营商提供。 仅可以使用手机拨打此号码列表中的号码。

来电弹出窗口 - 使用应用程序时会显示来电弹出窗口。

拒接来电 - 允许您设置拒接来电功能。从**来电拒接模式、拒接呼叫**中选择。

用消息拒接 - 拒接来电时，可使用此功能快速发送一条信息。此选项可用于在会议期间拒接来电。

来电隐藏 - 隐藏主叫方姓名和来电号码。

来电转接 - 选择是转接所有通话、线路忙时转接、无人接听时转接，或无信号时转接。

自动应答 - 设置在连接的免提设备自动接听来电前的时间。从“禁用”、“1 秒”、“3 秒”和“5 秒”中进行选择。

连接振动 - 当对方接听电话后，您的手机会振动。

语音改进 - 在嘈杂环境中增强语音质量以便您听得更清晰。

保存未知号码 - 通话后将未知号码添加至联系人。

电源键结束呼叫 - 可供您选择按电源键结束通话。

呼叫限制 - 锁定来电、拨出电话或国际电话。

通话时间 - 查看通话时间，包括“**最后通话**”、“**已拨电话**”、“**已接来电**”和“**所有通话**”。

其他设置 - 允许您更改以下设置：

本机号码 - 选择是否要在拨出电话时显示您的号码。

来电等待 - 如果激活了来电等待功能，在通话过程中，手机将提醒您有新来电（取决于网络提供商）。

<共享与连接>

NFC - 您的手机启用了 NFC。NFC (Near Field Communication, 近场通讯) 是一项无线连接技术，它可使电子设备之间实现双向通信。它能在几厘米的距离内工作。只需通过设备轻触，即可与 NFC 标签或其他 NFC 支持设备共享内容。如果您通过设备轻触 NFC 标签，则将在设备上显示标签内容。

开启或关闭 NFC - 在主屏上，使用手指点触并向下滑动通知面板，然后选择 NFC 图标将其开启。

备注：激活飞行模式后，也可使用 NFC 应用程序。

使用 NFC - 如要使用 NFC，请确保您的设备已开启，且如果已禁用 NFC，请进行激活。

Android Beam - 启用此功能时，您可以通过将两台设备紧紧握在一起，将应用程序内容播送至其它具有 NFC 功能的设备。

只需将设备放在一起（一般采用背靠背的方式），然后轻触屏幕即可。此应用程序将决定播送的内容。

SmartShare Beam - 可接收来自 LG 手机的文件。

媒体服务器 - 通过 DLNA 与附近设备共享媒体内容。

Miracast - 以无线方式将手机屏幕和声音镜像到支持Miracast的电视或连接Miracast dongle 的电视上。

LG PC Suite - 将 LG PC Suite 与您的手机连接，以轻松管理多媒体内容和应用程序。

WLAN 连线 - 勾选后，可通过 WLAN 连接功能在电脑与手机之间传输音乐和图像。

帮助 - 点击可查看 LG PC Suite的信息。

<绑定&网络>

USB 绑定 - 连接 USB 数据线，可与电脑共享互联网连接。

WLAN 热点 - 您也可以使用手机来提供移动宽带连接。创建热点，共享连接。请阅读“**共享手机的数据连接**”了解更多信息。

蓝牙绑定 - 打开蓝牙数据连接，通过蓝牙将其他设备连接至手机。

帮助 - 轻触以查看有关 WLAN 热点和蓝牙绑定功能的帮助信息。

飞行模式 - 切换为飞行模式之后，将禁用所有无线连接。

移动网络 - 为移动数据、数据漫游、网络模式和运营商、接入点名称 (APN) 等设置选项。

VPN - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。


备注：您必须设置锁定屏幕 PIN 或密码才能使用凭据存储。


声音

声音模式 - 选择“声音”、“仅振动”或“请勿打扰”。

音量 - 调节手机的音量设置，以便适合您和环境的需要。

振动强度 - 允许您设置来电、通知和触摸反馈的振动强度。

铃声 - 设置通话的铃声。您也可以通过轻触屏幕右上角的  来添加铃声。

通知声音 - 设置通知声音。您也可以通过轻触屏幕右上角的  来添加通知声音。

声音和振动 - 勾选可设置手机在接到来电时既响铃又振动。

振动类型 - 允许您设置来电的振动类型。从**持续振动**、**快速**、**快速重复**、**标准**或**滴答声**中选择。

请勿打扰 - 设置手机不提示来电通知的时间和模式。从全部、仅优先级或无中选择。

仅优先级 - 仅允许某些优先功能提示。闹钟总是优先。从具有日历事件、来电、新信息或允许的联系人中选择

日程表 - 即便设置为全部，仍然仅重复提示优先通知。

锁定屏幕 - 设置在锁定屏幕上显示或隐藏全部通知。

应用程序 - 设置应用程序发出的通知。选择“无”不显示应用程序发出的任何通知，选择“优先”以先于其他通知显示优先通知，选择“请勿打扰”时可以设置“仅优先”。

点击振动 - 勾选以在轻触主页触摸按钮以及其他用户界面互动期间振动。

音效 - 轻触以设置拨号盘按键音、触摸声音和屏幕锁定声音。

拨号盘触摸声音 - 勾选以在使用拨号盘时播放铃声。

设置

触摸音 - 勾选以在进行屏幕选择时发出声音。

屏幕锁定提示音 - 勾选可在锁定和解锁屏幕时播放声音。

消息/呼叫声音通知 - 点击“消息/呼叫声音通知”开关可打开或关闭此功能。“打开”可以 能够大声读出呼叫着信息和消息。

显示屏

<主屏>

设置主题、壁纸、屏幕点击效果或允许主屏幕循环。

主页备份与还原 - 您可以备份和还原应用程序/小工具布局和主题。

帮助 - 轻触以查看关于主屏的帮助信息。

<锁定屏幕>

选择屏幕锁定 - 设置屏幕锁定类型以保护手机。 打开一组屏幕，它们可指导您绘制屏幕解锁图案。 设置**无、滑动、轻敲解码、图案、PIN 或密码**。

如果您在打开手机或唤醒屏幕时已启用图案锁定类型，系统会提示您绘出您的解锁图案以解开屏幕锁。

Smart Lock - 如果您希望通过受信任的设备（蓝牙设备或 NFC ）或受信任的面部来自动解锁手机，可设置此功能。 在锁定屏幕设置为**轻敲解码、图案、PIN 和密码**之一时可用该功能。

屏幕点击效果 - 设置屏幕滑动效果选项。 从**轻粒子、矢量圆圈、马赛克和苏打**中进行选择。

备注：如果“屏幕锁定”设为“图案”，此设置名称可能是图案效果。

壁纸 - 设置“锁定屏幕壁纸”。 从**图片库或壁纸图库**中进行选择。

快捷方式 - 用于更改滑动锁定屏幕上的快捷方式。

天气动画 - 勾选可根据自动数据更新显示当前位置或天气中的主要城市集的天气动画。

拥有者信息 - 勾选以设置要在锁定屏幕上显示的设备用户的名称。

锁定计时器 - 设置屏幕超时后屏幕自动锁定前的时间。

电源按钮立即锁定 - 勾选后，可在按下电源/锁定键后立即锁定屏幕。此设置将覆盖安全锁定计时器设置。

<主页触摸按钮>

设置在所有屏幕底部显示的主页触摸按钮键。设置要显示的按钮、其在栏中的位置和外观。选择“按钮组合”、“颜色”和“隐藏主页触摸按钮”。

<字体类型>

设置手机和菜单使用的字体类型。

<字体大小>

设置手机和菜单中显示的字体大小。

<亮度>

调整屏幕的亮度。为获得最佳电池性能，请使用最暗的舒适亮度。

<通知 LED 灯>

点击开关以打开或关闭此功能。打开将激活所勾选通知的 LED 灯。

<自动旋转屏幕>

勾选以将手机设为根据手机方向（纵向或横向）自动旋转屏幕。

<屏幕超时>

设置屏幕超时之前的时间。

<智能屏幕>

勾选此选项可将屏幕设置为检测到您的面部时保持启用状态。

<屏幕关闭效果>

设置屏幕关闭效果。从复古电视、黑洞和淡出中选择。

<互动屏保>

轻触互动屏保开关以打开或关闭此功能。如果打开，屏幕将在手机处于睡眠模式（插接或充电）时显示所选屏保程序。从时钟和 Google 相册中选择。

常规

<语言和输入设备>

使用语言和输入设置为手机上的文本选择语言以及配置屏上键盘（包括已添加到词典中的文字）。

语言 - 设置要在设备上使用的语言。

默认 - 设置在输入文本时要使用的默认屏上键盘。

LG 键盘 - 勾选可选择用于输入数据的 LG 键盘。轻触设置图标以更改下列设置：

输入语言和键盘布局 - 设置键盘语言和字符。

键盘高度和布局 - 个性化您的键盘。

路径输入 - 勾选可通过所有字母画出路径来输入单词。

显示字建议 - 勾选以通过文字预测显示文字。

显示表情符号建议 - 勾选可显示与单词相关的彩色表情符号。

自动更正 - 设置自动字词更正的级别。从关闭、轻微、适中和全部中选择。

更新单词建议 - 要使用此功能，请接受“协议权利”。

其他设置 - 设置高级设置。

帮助 - 点击“帮助”可了解更多信息。

Google 语音输入 - 勾选以选择 Google 语音输入来输入数据。点击设置图标以更改 Google 语音设置。

选择输入语言 - 设置 Google 语音输入支持的语言。

屏蔽不文明的字词 - 勾选以隐藏视为令人不快的文本。

离线语音识别 - 离线时，实现语音输入。

语音搜索 - 设置语音搜索选项。

语言 - 按语音语言设置 Google 搜索。

语音输出 - 设置何时使用语音输出。从“开启”、“仅在免触摸模式下”和“关闭”中进行选择。要在只有耳机已连接手机的情况下开启语音输出，请选择“仅在免触摸模式下”。

“OK Google” 启动指令检测 - 开启此功能，只需说“OK Google”即可启动 Google 搜索应用。

离线语音识别 - 设置没有网络连接时语音识别要使用的一个或多个其他语言。

屏蔽不文明的字词 - 勾选以隐藏令人不快的语音结果。

蓝牙耳机 - 勾选以通过已连接的蓝牙耳机录制音频。

文本-语音输出 - 设置首选语音引擎和语速（很慢至很快）。还会播放语音合成器的简短演示。

指针速度 - 设置图辑栏上的指针速度。

<位置>

打开位置服务，您的手机将使用 GPS、WLAN 和移动网络确定您的大概位置。

模式 - 从**高精度（GPS 和网络）、省电（仅网络）和仅设备传感器（仅限 GPS）**中设置位置模式。

最近定位请求 - 显示近期请求过位置信息的应用程序。

Google 位置报告 - 选择是打开还是关闭“Google 位置报告”选项。有关进一步信息，请点击  > 帮助和反馈。

<帐户与同步>

允许应用程序在后台同步数据，无论您当前是否正在使用。取消选择此设置可节省电池电量并减少（而非消除）数据使用。

<云>

添加云帐户以快速而轻松地在 LG 应用程序上使用云服务。

<辅助工具>

提供给视力和听力受损或灵敏度降低的用户的辅助功能。

语音菜单 - 用于设置语音菜单功能，来通过言语反馈协助视觉有障碍的人。

字体大小 - 设置字体大小。

反色 - 勾选可反转屏幕和内容的颜色。

颜色调整 - 可调整屏幕和内容颜色。

设置

- 触摸缩放** - 允许您通过三点轻触屏幕来进行缩放。
- 消息/呼叫声音通知** - 点击信息/呼叫声音通知开关可打开或关闭此功能。打开可以大声通知来电和消息。
- 屏幕亮度** - 勾选可将屏幕背光变暗，降低对比度。
- 辅助功能快捷方式** - 可以在任意屏幕上快速打开辅助功能。
- 文本-语音输出** - 点击以自定义文本转语音 (TTS) 设置。
- 音频类型** - 设置音频类型。选择**单声道**或**立体声**。
- 声音平衡** - 连接耳机时，通过左右声道输送声音。要手动设置音频输送，移动声音平衡滑动栏上的滑块予以设置。
- 通知 LED 灯** - 点击此开关可打开或关闭此功能。打开将激活所勾选通知的 LED 灯。
- 闪光灯提醒** - 勾选以设置闪光灯在有来电和通知时闪动。
- 关闭所有声音** - 勾选以关闭所有设备声音。
- 标题** - 用于为有听力障碍的人自定义字幕设置。设置**语言、字体大小和字幕形式**。
- 触摸反馈时间** - 设置触摸反馈时间。
- 触控助手** - 显示触控板以便于访问常用操作。
- 屏幕超时** - 设置屏幕超时。
- 触摸控制区域** - 可选择一个屏幕区域，仅将触控激活限制在该屏幕区域内。
- 自动旋转屏幕** - 勾选以允许手机根据手机方向（纵向或横向）旋转屏幕。
- 密码语音确认** - 勾选以便手机可读取密码。
- 电源键结束呼叫** - 勾选此选项以便通过按电源/锁定键结束语音通话。
- 辅助功能设置快捷方式** - 连续三次点击主屏键可设置对选定功能快速简便的访问。
- 单触输入** - 勾选以启用单触输入。可以使用每一个手指点触，以在 LG 键盘上输入字母或字符。

开关控制 - 开关访问允许您使用可配置的键组合控制设备。您可以将焦点移动至可点击项目并进行选择。

<单手操作>

拨号键盘 - 勾选可向设备右侧或左侧移动拨号键盘。只需轻触箭头便可将其移至一侧或另一侧。

LG 全键盘 - 勾选可向设备右侧或左侧移动键盘。只需轻触箭头便可将其移至一侧或另一侧。

锁定屏幕 - 勾选可向设备右侧或左侧移动 PIN 锁定屏幕键盘。只需轻触箭头便可将其移至一侧或另一侧。

帮助 - 显示关于单手操作的信息。

<快捷键>

当屏幕关闭或锁定时，按住音量键可快速访问应用程序。点击屏幕右上角的快捷键开关，可**打开**或**关闭**此功能。

<安全性>

加密手机 - 允许加密手机数据以保护安全性。您需要在每次开机时输入 PIN 或密码才能解密手机。

设置SIM卡锁定 - 设置锁定SIM卡，或更改SIM卡PIN 码。

密码键入为可见 - 在您键入密码时，显示隐藏的密码的最后一个字符。

设备管理器 - 显示管理器列表，允许您停用设备管理器。

未知源 - 勾选可允许安装非 Play Store 应用程序。

验证应用程序 - 勾选可在安装对手机可能有有害的应用程序前，不允许安装或发出警告。

存储器类型 - 显示当前存储器类型。

可信凭据 - 显示可信 CA 证书。

从存储器上安装 - 可以从存储器安装安全证书。

清除存储 - 删除所有安全证书及相关凭据，同时去除安全存储本身的密码。系统提醒您以确认您要清除此数据。

Trust agents - 选择可在不解锁屏幕的情况下使用的应用程序。

设置

屏幕固定 - 允许该应用程序成为固定应用程序屏幕时所使用的唯一应用程序。

可以使用的应用程序 - 设置可以使用的应用程序。从主页和 LG MLT 中选择。

<访客模式>

当您让别人使用您的手机时，请使用访客模式。他人将只能使用您选定的应用程序。设置之后，您可以在锁定屏幕上绘制指定的访客图案（该图案不同于常用图案），轻松将手机置于访客模式。

已允许的应用程序 - 点击可选择能在访客模式下查看的应用程序。

壁纸 - 为访客模式锁定屏幕设置背景（壁纸）。

锁定屏幕类型 - 点击以创建访客模式的解锁图案。

帮助 - 显示有关访客模式的信息。

<手势>

屏幕开启/关闭 - 勾选以启用轻敲唤醒，以便打开和关闭屏幕。快速双击中心屏幕将其启用。双击状态栏、主屏幕上的空白区域或锁定屏幕将关闭屏幕。为获得最佳效果，请勿在使用轻敲唤醒功能时移动手机。

接听来电 - 勾选后，只需将手机放到您的耳旁就可自动接听来电。

消除铃声 - 勾选后，只需从平整表面拿起手机就可消除来电铃声。

等待接听的来电 - 勾选后，只需翻转手机就可进行来电静音。

暂停或停止闹铃 - 勾选后，只需翻转设备就可暂停或停止闹钟。

暂停视频 - 勾选后，只需翻转设备就可暂停当前播放的视频。

帮助 - 打开关于如何使用设备手势功能的帮助指南。

运动传感器校准 - 可让您提高倾斜精确度和传感器速度。

< Quick 窗口 >

套上防护套以后，可以看到一小部分屏幕。

选择应用程序 - 无需打开保护套，即可设置能够在保护套开口直接

使用的应用程序。

帮助 - 显示 Quick 智能皮套信息。

<日期和时间>

使用日期和时间设置可设置日期的显示方式。您还可使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

<存储>

使用“存储”菜单监控手机中已用和可用的空间。

<电量使用情况>

电池信息

电池图上将显示电池电量信息，此外还将显示剩余电量百分比及电池状态。点触电池使用情况以显示电池使用情况屏幕，以查看电池使用量和电池使用详情。并将显示使用电池电量最多的组件和应用程序。轻触某个条目以查看更多详情。

电池使用情况 - 显示电池使用水平和使用详情。

状态栏上的电量百分比 - 勾选以在电池图标旁边的状态栏上显示电池使用量百分比。

省电

轻触省电开关以打开或关闭此功能。轻触省电可访问以下设置：

省电 - 设置将自动开启省电功能的电池电量百分比。从“立即”、“5% 电量”和“15% 电量”中进行选择。

帮助 - 显示省电项目信息。

<应用程序>

可以查看手机上安装的应用程序的详细信息，管理其数据和强行停止。

<默认消息应用程序>

将**信息**或**环聊**设置为默认应用程序。

<备份与重置>

通过该菜单可以备份和/或擦除数据。

设置

备份我的数据 - 勾选可将应用程序数据、WLAN 密码及其它设置备份到 Google 服务器。

备份帐户 - 设置用于备份的帐户。

自动还原 - 勾选该选项使手机可在重新安装应用程序时，自动还原备份设置和数据。

LG 备份服务 - 备份设备上的所有信息并在出现数据丢失或更换时进行恢复。

重设出厂数据 - 将您的设置重置为出厂默认值，然后删除所有数据。如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同的信息。

<正在打印>

您可以将某些屏幕的内容（如 Chrome 浏览器显示的网页）通过打印机打印，此打印机须与您的 Android 设备连接的 WLAN 网络相同。

<关于手机>

查看法律信息，检查手机状态和软件版本。

PC 软件 (LG PC Suite)

“LG PC Suite” PC 软件是一种可帮助您使用 USB 数据线和 WLAN 将设备连接到 PC 的程序。连接后，您可以在 PC 上使用设备的功能。

借助“LG PC Suite” PC 软件，您可以...

- 在 PC 上管理和播放媒体内容（音乐、视频、图片）。
- 将多媒体内容发送到设备。
- 同步设备和 PC 间的数据（日历、联系人、书签）。
- 备份设备中的应用程序。
- 更新设备中的软件。
- 备份和恢复设备数据。
- 在您的设备上播放 PC 中的多媒体内容。
- 在设备中备份、创建和编辑备忘录。

备注：您可使用应用程序中的“帮助”菜单，查找如何使用“LG PC Suite” PC 软件。

安装“LG PC Suite” PC 软件

可以从 LG 网页下载“LG PC Suite” PC 软件。

- 1 转到 www.lg.com，选择您所在的国家/地区。
- 2 转至**移动设备 > 手机 > 产品服务 > 服务与支持 > 输入型号名称或数字**，选择**搜索**。
- 3 选择型号，单击**下载**中的**电脑同步软件**，下载“LG PC Suite” PC 软件。

PC 软件 (LG PC Suite)

“LG PC Suite” PC 软件的系统要求

- 操作系统: Windows XP (Service pack 3) 32 位、Windows Vista、Windows 7、Windows 8
- CPU: 1 GHz 或更高处理器
- 内存: 512 MB 或更高 RAM
- 图形卡: 1024 x 768 分辨率, 32 位色彩或更高
- 硬盘: 500 MB 或更多的可用硬盘空间 (根据要存储数据的容量, 可能需要更多的可用硬盘空间。)
- 所需软件: LG 集成的驱动程序、Windows Media Player 10 或更高版本

备注: LG 集成的 USB 驱动程序

需要使用 LG 集成的 USB 驱动程序连接 LG 设备和 PC, 并且该驱动程序将在安装“LG PC Suite”PC 软件时自动安装。

将设备与 PC 同步

可以根据便利轻松使用“LG PC Suite”PC 软件同步设备与 PC 中的数据。您可同步日历、联系人和书签。

步骤如下:

- 1 将设备连接到 PC (使用 USB 数据线或 WLAN 连接)。
- 2 此时将出现 **媒体设备 (MTP)**, 然后选择 **媒体设备 (MTP)**。
- 3 连接后, 运行程序, 然后从屏幕左侧的类别中选择设备部分。
- 4 单击**同步个人数据**进行选择。
- 5 选择要同步内容的复选框, 然后单击**同步**按钮。

备注: 要将手机与 PC 同步, 需要在 PC 上安装 LG PC Suite。请参阅前几页安装 LG PC Suite。

将旧设备上的联系人移至新设备

- 1 使用 PC 同步程序将联系人作为 CSV 文件从旧设备导出到 PC。
- 2 首先在 PC 上安装“LG PC Suite”。运行程序，并使用 USB 数据线将您的 Android 手机连接到 PC。
- 3 在顶层菜单中，选择**手机** > **导入/导出联系人** > **导出至您的手机**。
- 4 此时会出现一个弹出窗口，可供选择文件类型和要导入的文件。
- 5 在弹出窗口中，单击**选择**，此时会出现 Windows Explorer。
- 6 在 Windows Explorer 中选择要导入的联系人文件，然后单击**打开**。
- 7 单击**导出**。
- 8 此时会出现一个**字段映射**弹出窗口，可链接至设备中的联系人和新联系人数据。
- 9 如果 PC 联系人和设备联系人中的数据出现冲突，请在 LG PC Suite 中做出必要选择或修改。
- 10 单击**确定**。

手机软件更新

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的更多信息，请访问 <http://www.lg.com/common/index.jsp> → 选择您的国家/地区和语言。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此在继续执行操作之前，请确保留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

备注：LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

通过空中下载 (OTA) 的 LG 手机软件更新

此功能使您可以通过 OTA 方便地将手机的软件更新为较新的版本，而无需连接 USB 数据线。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

首先，您应在手机上检查软件版本：**设置** > **常规** > **关于手机** > **更新中心** > **软件更新** > **现在检查更新**。

备注：手机内存中的您的个人数据（包括有关您 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息）可能会在手机软件的更新过程中遗失。因此，LG 建议您在更新手机软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。

备注：此功能取决于网络服务提供商、所在区域或国家/地区。

关于本用户指南

关于本用户指南

- 使用设备前，请仔细阅读本手册。阅读本手册后，您可安全无误地使用手机。
- 本指南手册中提供的一些图像和抓拍图片可能会在您的手机上显示不同。
- 您的内容可能与最终产品或者服务提供商或运营商提供的软件有所不同。内容如有更改，恕不另行通知。要获取本手册的最新版本，请访问 LG 网站 www.lg.com。
- 您手机的应用程序及其功能可能因国家/地区、区域或硬件规格而有所不同。因使用 LG 之外的提供商开发的应用程序而导致任何性能问题，LG 概不负责。
- 因编辑已编辑好的注册表设置或修改操作系统软件而导致性能或不兼容问题，LG 概不负责。一旦尝试自定义操作系统，即可能导致设备或设备的应用程序无法正常运作。
- 与您的设备一同提供的软件、音频、墙纸、图像及其它媒体均经过许可，可有限使用。如果您将这些材料抽取一部分或整体用于商业或其他用途，您可能会侵犯版权法。此时用户会因非法使用媒体而承担相应的全部法律责任。
- 使用信息、上传和下载、自动同步或使用位置服务等数据服务可能需要支付附加费用。为避免费用增多，请选择一项适合您自身需求的数据计划。联系您的服务提供商以获取更多详细信息。

商标

- LG 和 LG 徽标是 LG Electronics 的注册商标。
- 所有其他商标和版权是其各自所有者的财产。

DivX HD

该 DivX Certified® 认证设备已通过严格测试，确保能播放 DivX® 视频。

为播放购买的 DivX 电影，需首先在 vod.divx.com 注册设备。在设备设置菜单中的 DivX VOD 部分找到注册码。

通过 DivX Certified® 认证，能播放 DivX® 视频，最高可达 HD 720p，包括付费内容。

DivX®, DivX Certified® 以及相关标志是 DivX, LLC 的商标，经授权使用。


Dolby Digital Plus DOLBY DIGITAL PLUS

由 Dolby Laboratories 许可生产。Dolby、Dolby Digital Plus 和 double-D 符号是 Dolby Laboratories 的商标。

配件

以下配件可与您的手机一起使用。（以下配件为可选配件）。

旅行适配器




立体声耳机



快速入门指南



数据线



Micro-SIM 弹出
工具



备注:

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
Micro-SIM 卡错误	手机中没有安装 Micro-SIM 卡或 Micro-SIM 卡插入不正确。	请确保正确插入 Micro-SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。
	运营商应用了新服务。	请与服务提供商联系。
密码不匹配	要更改安全码，您需要在此输入以确认新密码。	如果忘记密码，请联系您的服务提供商。
	两次输入的代码不匹配。	
无应用程序可供设置	服务提供商不支持或需要注册。	请与服务提供商联系。

信息	可能原因	可行解决措施
无法拨打电话	拨号错误	新网络未获得授权。
	已插入新 Micro-SIM 卡。	查看新的限制。
	达到预付费上限。	与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键时间过短。	请按开/关键至少两秒钟。
	电池未充电。	为电池充电。 检查显示屏上的充电指示灯。
充电错误	电池未充电。	为电池充电。
	外部温度太热或太冷。	确保手机在正常温度下充电。
	触点问题	检查充电器以及到手机的连接。
	无电压	将充电器插入其它插座。
	充电器故障	更换充电器。
	错误充电器	请仅使用原装 LG 配件。
不允许使用号码	已打开固定拨号功能。	检查“设置”功能表并关闭该功能。

故障排除

信息	可能原因	可行解决措施
无法接收/发送短信和照片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查受支持的文件格式。
我收到来电时，屏幕未打开。	近程传感器问题	如果使用保护带或保护套，请确保其未盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	尝试通过网站执行软件更新。


类别 子类别	问	答
BT 蓝牙 设备	通过蓝牙提供哪些功能	您可以连接立体声/单声道耳机或车载套件等蓝牙音频设备。另外，FTP 服务器连接至兼容设备时，您可以共享存储在存储媒体中的内容。
BT 蓝牙 耳机	如果我的蓝牙耳机已连接，我是否可以通過 3.5 mm 有线耳机听音乐？	当已连接蓝牙耳机时，所有系统声音均在此耳机上播放。蓝牙耳机连接时，有线耳机仍可听音乐。
数据 联系人 备份	如何备份联系人？	联系人数据可以在您的耳机与 Gmail™ 之间同步。
数据 同步	是否可以设置与 Gmail 的单向同步？	只提供双向同步。
数据 同步	是否可以同步所有电子邮件文件夹？	收件箱会自动同步。您可以通过长按 菜单键 <input type="checkbox"/> 并选择 文件夹 以选中一个文件夹，查看其他文件夹。
Google™ 服务 Gmail 登录	我是否需要在每次访问 Gmail 时均需要登录 Gmail？	一旦登录 Gmail，无需再次登录。
Google™ 服务 Google 帐户	是否可以过滤电子邮件？	否，不支持通过手机过滤电子邮件。

类别 子类别	问	答
手机功能 电子邮件	在编写电子邮件时如果执行另一应用程序会发生什么情况？	您的电子邮件将自动保存为草稿。
手机功能 铃声	使用 MP3 文件作为铃声时是否有文件大小限制？	没有文件大小限制。
手机功能 信息时间	我的手机不显示超过 24 小时的信息的接收时间。如何更改？	您只能查看当天收到信息的时间。
手机功能 导航	是否可以在我的手机上安装其他导航应用程序？	在 Play Store™ 上可用并且与硬件兼容的任何应用程序均可安装和使用。
手机功能 同步	是否可以从我所有的电子邮件帐户同步我的联系人？	仅可同步 Gmail 和 MS Exchange 服务器（公司电子邮件服务器）联系人。
手机功能 等待和暂停	是否可以在保存联系人时对号码中使用等待和暂停功能？	<p>如果您传输的联系人的号码使用了等待和暂停功能，则您无法使用这些功能。您需要重新保存每个号码。如何使用等待和暂停功能进行保存？</p> <ol style="list-style-type: none"> 1. 在主屏上轻触手机图标 . 2. 拨打号码，然后点触并按住近期任务键 . 3. 轻触限时暂停或强制暂停。
手机功能 安全性	手机有什么安全功能？	您可以将手机设为在访问或使用手机前需要输入解锁图案。

类别 子类别	问	答
-----------	---	---

手机功能
解锁
图案

如何创建解锁图案？

1. 在主屏中长按**菜单键** 。
2. 轻触**系统设置** > **显示屏**下的**锁定屏幕**。
3. 轻触**选择屏幕锁定** > **图案**。第一次这样做时，将显示有关创建解锁图案的简短指南。
4. 通过画出图案一次，然后再画一次确认进行设置。

使用图案锁定时的预防措施。

请务必记住您设置的解锁图案。如果有 5 次使用不正确的图案，您将无法访问您的手机。您有 5 次机会输入解锁图案、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。（或者，如果预设了备份 PIN，您可使用备份 PIN 码解锁图案。）



手机功能
解锁
图案

在忘记解锁图案并且未在手机上创建 Google 帐户时该怎么办？

如果您忘记图案：

若要在手机上登录 Google 帐户，但连续 5 次输错图案，请轻触“忘记了图案”按钮。随后，您需要使用 Google 帐户登录才能将手机解锁。如果未在手机上创建 Google 帐户或者忘记了该帐户，则需要执行硬重置。

注意：如果执行恢复出厂设置，将删除所有用户应用程序和用户数据。在执行恢复出厂设置之前，请记得备份任何重要数据。

类别 子类别	问	答
手机功能 内存	内存已满时我是否会知道？	是，您将收到通知。
手机功能 语言支持	是否可以更改我的手机的语言？	<p>手机具有多语言功能。 更改语言： 在主屏中长按</p> <ol style="list-style-type: none"> 1. 菜单键 ，然后轻触系统设置。 2. 轻触常规 > 语言和输入设备 > 语言。 3. 轻触所需的语言。
手机功能 VPN	如何设置 VPN？	每家公司的 VPN 访问配置有所不同。要从手机配置 VPN 访问，您必须从公司的网络管理员获得详细信息。
手机功能 屏幕待机 时间	我的屏幕仅 15 秒后便关闭。如何更改关闭背景灯的时间量？	<ol style="list-style-type: none"> 1. 在主屏中长按菜单键 。 2. 轻触系统设置 > 显示屏。 3. 从“屏幕”中轻触屏幕超时。 4. 轻触首选屏幕背景灯超时时间。
手机功能 WLAN 和移动 网络	在 WLAN 和移动网络均可用时，我的手机将使用哪个服务？	<p>在使用数据时，您的手机可默认为 WLAN 连接（如果手机上的 WLAN 连接设为“开”）。但是，在手机从一个服务切换到另一服务时将不发出通知。</p> <p>要知道正在使用哪个数据连接，请查看屏幕顶部的移动网络或 WLAN 图标。</p>

类别 子类别	问	答
手机功能 主屏	是否可以从主屏删除应用程序？	是。只需点触并按住此图标，直到屏幕顶部中心出现垃圾桶图标。然后，在不抬起手指的情况下，将图标拖到垃圾桶。
手机功能 应用程序	我下载了一个应用程序，并且它导致了许多错误。如何删除它？	<ol style="list-style-type: none"> 1. 在主屏中长按菜单键 。 2. 轻触系统设置 > 常规 > 应用程序 > 已下载。 3. 轻触应用程序，然后轻触卸载。
手机功能 充电器	是否可以在未安装所需 USB 驱动程序的情况下通过 USB 数据线为手机充电？	可以，无论是否安装了必要的驱动程序，此手机均可以通过 USB 数据线充电。
手机功能 闹钟	我是否可以将音乐文件用作闹钟铃声？	<p>是。在将音乐文件保存为铃声后，您即可将其用作闹钟铃声。</p> <ol style="list-style-type: none"> 1. 点触并按住媒体库列表中的某首歌曲。在打开的菜单中，轻触设置为铃声。 2. 在闹钟设置屏幕中，选择用作铃声的歌曲。
手机功能 闹钟	如果手机关闭，我是否还可听见我的闹钟或者它也将关闭？	否，不支持此功能。
手机功能 闹钟	如果将铃声音量设为“振动”，是否可以听到闹钟铃声？	闹钟设定为即使在这些情况下也可听到。

类别 子类别	问	答
恢复解决方案 硬重置（恢复出厂设置）	如果无法访问手机的设置菜单，如何执行恢复出厂设置？	如果手机未恢复到原始条件，请使用硬重置（恢复出厂设置）初始化手机。



ENGLISH

User Guide

- Screen displays and illustrations may differ from those you see on actual phone.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the tap screen keyboard.
- Copyright ©2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

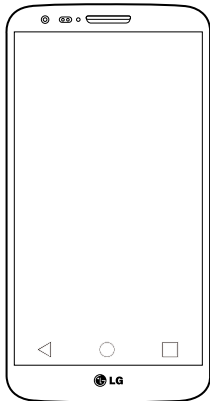


Table of contents

Guidelines for safe and efficient use5	Sharing your phone's data connection ...37
Important notice13	Wi-Fi Direct39
Getting to know your phone19	Using SmartShare.....39
Phone overview19	PC connections with a USB cable.....40
Installing the Micro-SIM card21	Calls42
Charging your phone22	Making a call42
Locking and unlocking the screen.....23	Calling your contacts42
Knock Code.....23	Answering and rejecting a call42
KnockON.....25	Adjusting the in-call volume.....43
Stereo headset with microphone.....25	Making a second call.....43
Your Home screen27	Viewing your call logs43
Touch screen tips27	Call settings.....44
Home screen28	Contacts45
Extended home screen.....28	Searching for a contact.....45
Customizing the Home screen29	Adding a new contact.....45
Returning to recently-used applications.30	Favourites contacts.....45
Notifications panel.....30	Creating a group.....46
Opening the notifications panel.....31	Messaging47
Indicator icons on the Status Bar31	Sending a message47
On-screen keyboard33	Threaded box48
Entering accented letters.....33	Changing your message settings48
Google account setup34	E-mail49
Connecting to Networks and Devices35	Managing an email account.....49
Wi-Fi35	Working with account folders.....49
Connecting to Wi-Fi networks35	Composing and sending email50
Turning Wi-Fi on and connecting to a Wi-Fi network.....35	Camera51
Bluetooth.....36	Getting to know the viewfinder51
	Using the advanced settings52

Taking a quick photo	53
Using Shot & Clear mode	53
Using Dual camera mode.....	54
Using Time catch shot mode.....	55
Once you've taken a photo.....	55
From your Gallery	56
Video camera	57
Getting to know the viewfinder	57
Using the advanced settings	58
Recording a quick video.....	59
After recording a video.....	59
From your Gallery	60
Adjusting the volume when viewing a video	60
Using Audio Zoom.....	60
Using Dual recording mode.....	61
Using Tracking zoom mode	61
Function	62
QuickMemo+.....	62
Using the QuickMemo+ options.....	63
Viewing the saved QuickMemo+.....	63
QuickTranslator	64
QSlide.....	65
QuickRemote	66
Live Zooming.....	67
LG SmartWorld	68
How to Get to LG SmartWorld from Your Phone	68
How to use LG SmartWorld.....	69
Multimedia	70
Gallery.....	70
Viewing pictures	70
Playing videos	71
Editing photos.....	71
Deleting photos/videos	71
Setting as wallpaper	71
Playing a video	72
Video Editor	73
Music	75
Add music files to your phone.....	75
Transfer music using Media device (MTP).....	75
Playing a song.....	75
Utilities	77
Guest Mode	77
Setting your alarm	77
Using your calculator	77
Adding an event to your calendar.....	78
Voice Recorder	78
Recording a sound or voice	78
Task Manager.....	79
Tasks.....	79
POLARIS Viewer 5.....	79
Google+	80
Voice Search.....	80
Downloads	80

Table of contents

The Web	81	Accessories	104
Internet.....	81	Troubleshooting	105
Using the Web toolbar	81	FAQ	109
Viewing webpages	81		
Opening a page	81		
Searching the web by voice	82		
Bookmarks	82		
History	82		
Chrome	82		
Viewing webpages	82		
Opening a page	82		
Settings	83		
Networks.....	83		
Sound.....	86		
Display	87		
General.....	89		
PC software (LG PC Suite)	97		
Phone software update	100		
Phone software update	100		
About this user guide	102		
About this user guide.....	102		
Trademarks	102		
DivX HD	103		
Dolby Digital Plus	103		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded.

The log is used only to help determine the cause of the fault.

These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-D802 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.409 W/kg (10 g) and when worn on the body is 0.470 W/Kg (10 g).

Guidelines for safe and efficient use

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the

information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Guidelines for safe and efficient use

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the phone in hot or cold places, as this may deteriorate phone performance.
- Do not replace the battery by yourself. The battery can be damaged, which can cause overheating and injury.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle

when possible. Do not dispose as household waste.

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-D802** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Important notice




Please read this before you start using your phone!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab >  **Settings** > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

2. Optimizing battery life




Extend your battery's power by turning off features that you don't have to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:



- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.
- While using downloaded applications, check the battery charge level.

NOTE: If you accidentally press the Power/Lock Key while the device is in your pocket, the screen will turn off automatically in order to save battery power.

To check the battery power level:

- Tap  >  > **Apps** tab >  **Settings** > **General** tab > **About phone** > **Battery**. The battery status (charging or discharging) and battery level (Battery percentage) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- Tap  >  > **Apps** tab >  **Settings** > **General** tab > **About phone** > **Battery** > **Battery usage**.

Battery usage time is displayed on the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Before installing an open source application and OS



WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.






WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, the phone may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

Important notice

4. Using an unlock pattern

Set an unlock pattern to secure your phone. Tap  >  > **Apps** tab >  **Settings** > **Display** tab > **Lock screen** > **Select screen lock** > **Pattern**. This opens a screen that will guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure in case you forget your unlock pattern.

Caution: Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.



WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN or Password:

< If you have forgotten your pattern >

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

< If you have forgotten your PIN or Password >

If you forget your PIN or Password, you will need to perform a hard reset.

Caution: If you perform a hard reset, all user applications and user data will be deleted.

NOTE: If you have not logged into your Google Account and have forgotten your Unlock Pattern, you will need to enter your Backup PIN.

5. Using the Hard Reset (Factory Reset)

If your phone does not restore to its original condition, use a Hard Reset (Factory Reset) to initialize it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock key + Volume Down key** on the back of the phone.
- 3 Release the **Power/Lock Key** only when the LG logo is displayed, then immediately press and hold the **Power/Lock Key** again.
- 4 Release all keys when the Factory data reset screen is displayed.
- 5 Press the **Power/Lock Key** to continue or either of the **Volume Keys** to cancel.
- 6 Press the **Power/Lock Key** once more to confirm or either of the **Volume Keys** to cancel.





WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

6. Opening and switching applications




Multi-tasking is easy with Android, you can keep more than one application running at the same time. There is no need to quit an application before opening another one. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

- 1 Tap the **Recent key** . A list of recently used applications will be displayed.
- 2 Tap the application you want to access. This does not stop the previous app running in the background on the phone. Make sure to tap **Back Key**  to exit an app after using it.

Important notice

- To stop applications, tap **Task Manager** from the recent apps list, then tap **Stop** or **Stop all**.
- To remove an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

7. Transferring music, photos and videos using Media device (MTP)

- 1 Tap  >  > **Apps** tab >  **Settings** > **General** tab > **Storage** to check out the storage media.
- 2 Connect the phone to your PC using the USB cable.
- 3 Slide down the status bar and tap **Media device(MTP)** and select **Media device (MTP)** option.
- 4 Open the memory folder on your PC. You can view the mass storage content on your PC and transfer the files from PC to Device memory folder or vice versa.
- 5 After transferring files ,slide down the status bar and tap **Media device(MTP)** and select **Charge phone** from USB connection type list.

8. Hold your phone upright

Hold your cell phone vertically, as you would a regular phone. Your phone has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

When making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

9. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:


Press and hold the **Power/Lock** key for 8 seconds to turn your phone off. If it still does not work, please contact the service center.

10. Do not connect your phone when you power on/off your PC

Make sure to disconnect your phone from the PC when powering your PC on or off as it might result in PC errors.

Getting to know your phone

Phone overview

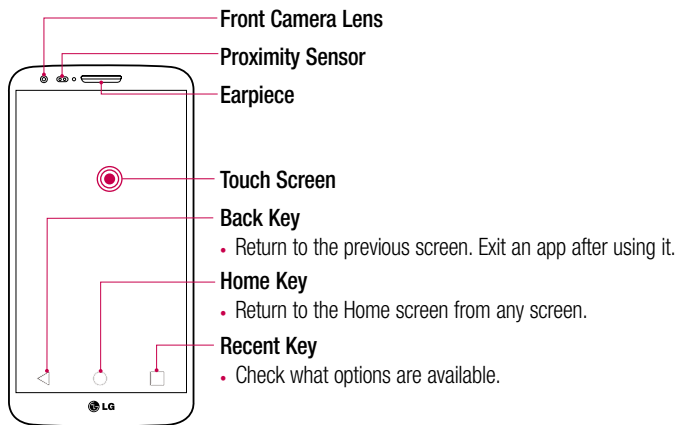


NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.



WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

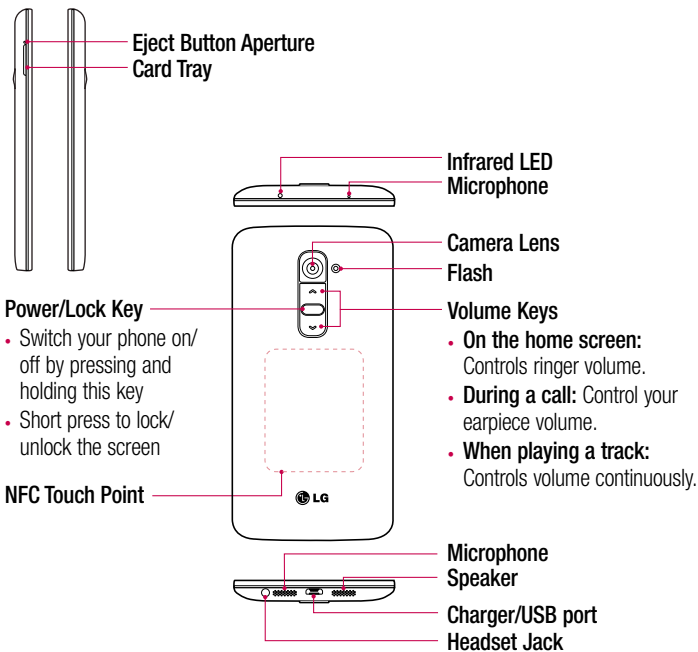

⚠ WARNING

- This part encloses the battery compartment. Please do not open the back cover.
- Be careful not to damage the NFC touch point on the phone, which is part of the NFC antenna.

Getting to know your phone


Installing the Micro-SIM card

Before you start exploring your new phone, you may choose to insert the Micro-SIM card.

The eject button is a small round aperture just above the tray door. To install a new Micro-SIM card:

- 1 Insert the Micro-SIM ejection tool that comes with the phone (or a thin pin) into the eject button aperture, and push gently but firmly until the tray pops out.
- 2 Remove the tray and place the Micro-SIM card inside it, with the contacts out and the angled corner to the right. There is only one possible way to fit the card snugly into the tray.
- 3 Carefully reposition the tray in the slot and push it gently back into the phone.

NOTE: Make sure the gold contact area on the card is facing downwards.

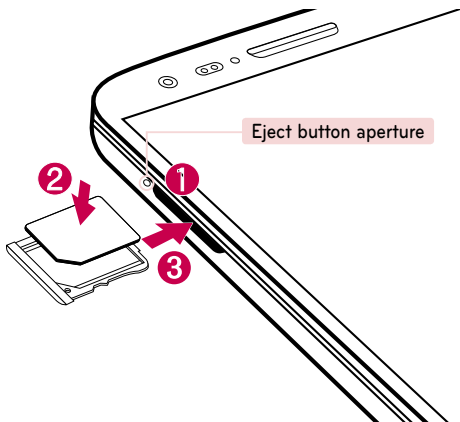


Charging your phone

Charge the battery before using it for the first time. Use the charger to charge the battery. A computer can be also used to charge the device by connecting them via the USB cable.

WARNING

Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay or pop up the message regarding slow charging, Or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.

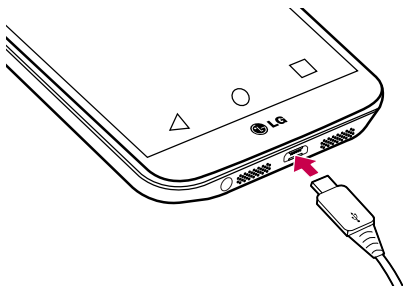



NOTE:

- The battery must be fully charged initially to improve battery lifetime.
- Do not open the back cover while your phone is charging.

Getting to know your phone

Locking and unlocking the screen

If you do not use the phone for a while, the screen will be automatically turned off and locked. This helps to prevent accidental taps and saves battery power.

When you are not using the phone, press the **Power/Lock key**  to lock your phone. If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications). To wake up your phone, press the **Power/Lock key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

Knock Code

The Knock Code feature allows you to tap the screen with your own Knock Code pattern using the screen divided by 4 squares to easily turn the screen on or off. You can disable this feature in the Lock screen settings.

NOTE:


- If you enter the wrong Knock Code 6 times, it will compulsorily take you to your google account log in/backup PIN.
- Use the fingertip instead of finger nail to tap the screen for turning it on or off.
- When the Knock Code is not in use, you can use Knock On function by taping the screen.

- 1 From the Home screen, tap the  **Apps Key** >  **Settings** > Display tab.
- 2 Tap Lock screen > Select screen lock > **Knock Code**.
- 3 Tap the squares in a pattern to set your knock code.

Your knock code pattern can be 2 to 8 taps.

Set knock code

Tap quarters 2-8 times to set knock code. The more you tap, the more security increases.

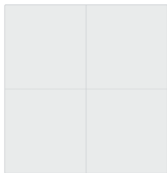

Cancel

Continue

Unlock the screen using the Knock Code

You can unlock the screen by tapping the Knock Code pattern you already set.

- 1 When the screen turns off, press the Power key .
- 2 Tap the Knock Code pattern you set before.

Getting to know your phone

KnockON

You can lock or unlock the screen by just double-tap.

To activate KnockON feature

1 Tap  >  > **Apps** tab >  **Settings** > **General** tab > **Gestures**.

2 Place a checkmark on **Screen on/off**.

Double-tap the center screen quickly to unlock the screen. To lock the screen, double-tap the status bar in any screen (except on the camera viewfinder) or empty area on the Home screen.

NOTE: When turning the screen on, make sure you do not cover the proximity sensor. Doing so will turn the screen off immediately after turning it on in order to prevent abnormal turning on in your pocket or bag.

Stereo headset with microphone

With the headset connected, you can enjoy music or video with stereo sound, and easily switch from your music/video to take and end calls.


< Front >




Call/End Button


- For an incoming call, press to receive or end a call.
- When you listen to music, press to stop playback or resume. Press twice to play the next track.


< Back >



1 Plug in the headset as shown below.

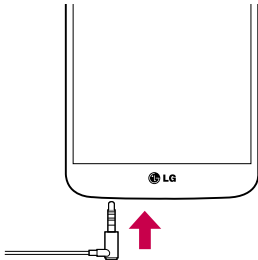

2 If a call is coming when the headset is connected to the phone, press the  to take the call.

3 To end the call, press the  again.

Your Home screen

Touch screen tips

Here are some tips on how to navigate on your phone.

Tap or touch – A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold – Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag – Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap – You can also double-tap to zoom in and out while viewing the picture.


Pinch-to-Zoom – Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures.

Rotate the screen – From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

NOTE:

- To select an item, tap the center of the icon.
- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys.

Home screen

The Home screen is the starting point for many applications and functions, and it allows you to add items like application shortcuts, or Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .



Status Bar

Shows phone's status information including the time, signal strength, battery status, and notification icons.

Widget

Widgets are self-contained applications that can be accessed through the Apps screen or on the Home screen or an extended home screen. Unlike a shortcut, the Widget appears as an on-screen application.

Application Icons

Tap an icon (application, folder, etc.) to open and use it.

Location Indicator

Indicates which Home screen canvas you are viewing.

Quick Key Area

Provides one-touch access to the function in any home screen canvas.

Extended home screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets, and more.

- ▶ Slide your finger left or right across the Home screen.

Your Home screen

Customizing the Home screen

You can customize your Home screen by adding apps, widgets or changing wallpapers.

To add items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you wish to add. You will then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

TIP! To add an application icon to the Home screen from the Apps menu, touch and hold the application you want to add.


To remove an item from the Home screen


- ▶ **Home screen** > touch and hold the icon you want to remove > drag it to .

To add an app as a Quick key


- ▶ From the Apps menu or on the Home screen, touch and hold an application icon and drag it to the Quick key area. Up to 6 apps can be added.

To remove an app from the Quick key area



- ▶ Touch and hold the desired quick key and drag it to .

NOTE:  **Apps** key cannot be removed.

To customize apps icons on the Home screen

- 1 Touch and hold an application icon until it is unlocked from its current position. Then drop it on the screen. The editing icon  will appear in the upper right corner of the application.
- 2 Tap the application icon again and select the desired icon design.
- 3 Tap **OK** to save the change.

Returning to recently-used applications


- 1 Touch . The screen displays a pop-up containing the icons of applications you used recently.
- 2 Tap an icon to open the application. Or tap  to return to your previous screen.

Notifications panel

Notifications alert you the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as when you are on a call.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons such as Wi-Fi or battery strength shown on the right.

NOTE: The available options may vary depending on the region or service provider.

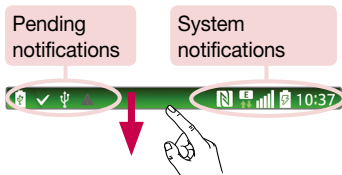

Your Home screen

Opening the notifications panel

Swipe down from the status bar to open the notifications panel.



Quick Toggle Area

Tap each quick toggle key to turn it on/off. Touch and hold the key to access the settings menu of the function. To see more toggle keys, swipe left or right. Tap to remove, add, or rearrange toggle keys.

QSlide Apps

Tap a QSlide app to open as a small window on your screen. Tap to remove, add, or rearrange QSlide apps.

Notifications

The current notifications are listed, each with a brief description. Tap a notification to view it.

Tap to clear all the notifications.















To close the notifications panel, touch and drag the tab toward the top of the screen.















Indicator icons on the Status Bar

Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No Micro-SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Missed call
	Bluetooth is on
	NFC is on
	System warning
	An alarm is set
	New voicemail available
	New message
	A song is currently playing

Icon	Description
	Ringer is silenced
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	Data is synchronizing
	New Gmail message available
	New Hangouts message available
	Choose input method
	DLNA content share
	DLNA music playing

Your Home screen



Wi-Fi hotspot


NOTE: The icons location in the status bar may differ according to the function or service.


On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply tap a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalize the next letter you type. Double-tap for all caps.

 Tap to switch to the numbers and symbols keyboard.

 Tap to enter a space.

 Tap to create a new line.

 Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account setup


When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set-up screen.

OR

- Tap  >  > **Apps** tab > select a Google application, such as **Gmail** > select **Add an email address** to create a new account.

If you have a Google account, enter your email address and password, then tap . Once you have set up your Google account on your phone, your phone automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your phone. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi




With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or 'hotspot'. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them. Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or have set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > **Wi-Fi**.
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap the Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Tap a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The status bar displays icons that indicate Wi-Fi status.

Bluetooth




You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones.

NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > set **Bluetooth** to **ON**.
- 2 Tap the **Bluetooth** menu again. You will see the option to make your phone visible and option to search devices. Now tap **Search for devices** to view the devices in the Bluetooth Range.
- 3 Choose the device you want to pair with from the list.

Once the pairing is successful, your device will connect to the other device.

NOTE: Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you will be asked to enter it.

Connecting to Networks and Devices




Send data using the Bluetooth wireless feature


- 1 Select a file or item, such as a contact, calendar event or media file, from an appropriate application or from **Downloads**.
- 2 Select the option for sending data via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

- 3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth wireless feature

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > set **Bluetooth** to **ON**.
- 2 Tap the **Bluetooth** menu again and mark the checkbox at the top of the screen to visible on other devices.

NOTE: To select the length of time that your device will be visible, tap  > **Visibility timeout**.

- 3 Select **Accept** to confirm that you are willing to receive data from the device.




Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than one device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com>.

To share your phone's data connection as a portable Wi-Fi hotspot

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > **Tethering & networks** > **Wi-Fi hotspot** switch to activate.
- 2 Enter a password and tap **Save**.

TIP! If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you will not usually need to prepare your computer for tethering. But, if you are running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com>.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > **Tethering & networks** > **Wi-Fi hotspot**.
- 2 Tap **Set up Wi-Fi hotspot**.
 - The **Set up Wi-Fi hotspot** dialogue box will open.
 - You can change the **Wi-Fi name** (SSID) that other devices see when scanning for Wi-Fi networks.
 - You can also tap the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Set up Wi-Fi hotspot** dialogue box. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.
- 3 Tap **Save**.



Connecting to Networks and Devices

ATTENTION! If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges may be incurred. To avoid unauthorized usage, you are advised to keep the security option active.

Wi-Fi Direct



Wi-Fi Direct supports a direct connection between Wi-Fi enabled devices without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature. Check your Wi-Fi & Wi-Fi Directed network in advance and make sure the users are connected to the same network.

To turn on Wi-Fi Direct:

- 1 Touch and hold the **Recent Key**  > **System settings** > **Networks** tab > **Wi-Fi** >  > **Advanced Wi-Fi** > **Wi-Fi Direct**.
- 2 Select a device to connect with from the scanned device list.

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature. You can enjoy SmartShare feature on Gallery, Music, and POLARIS Viewer 5.

- 1 On the content you want to play or beam, tap  or tap  and **SmartShare**.
- 2 Tap **Play** or **Beam** in the dialog box.
 - **Play:** You can stream your content via TV, Bluetooth speaker, etc.
 - **Beam:** You can send your content to Bluetooth devices or SmartShare Beam supported LG phones or tablets.
*SmartShare Beam quickly transfers multimedia contents through Wi-Fi Direct.
- 3 Tap the device to play or receive on the list.

- If the device is not on the list, make sure on the device that Wi-Fi, Wi-Fi Direct, or Bluetooth connection is turned on. And tap **Rescan**.

4 Tap the device on the list.

To enjoy content from nearby devices such as a computer or mobile device on your phone

1 To connect the nearby devices to your phone, tap **Nearby devices** on **Gallery, Music** application as below.

- Ensure that your phone and nearby devices are connected to the same Wi-Fi network.
- Make sure DLNA feature on the nearby device is turned on.

2 Tap the device to connect.

If the device is not on the list, tap **Search nearby devices**.

After connection, you can enjoy the contents from the nearby device on your phone.

PC connections with a USB cable

Learn to connect your device to a PC with a USB cable in USB connection modes.

Transferring music, photos and videos using Media device (MTP) mode

1 Connect your phone to a PC using a USB cable.

2 If you haven't installed the LG Android Platform Driver on your PC, you will need to manually change the settings. Touch and slide the status bar downward and tap

, then select **Media device (MTP)**.

3 You can now view the mass storage content on your PC and transfer the files.

Connecting to Networks and Devices

Synchronize with Windows Media Player

Ensure that Windows Media Player is installed on your PC.





- 1 Use the USB cable to connect the phone to a PC on which Windows Media Player has been installed.
- 2 Select the **Media device (MTP)** option. When connected, a pop-up window will appear on the PC.
- 3 Open Windows Media Player to synchronize music files.
- 4 Edit or enter your device's name in the pop-up window (if necessary).
- 5 Select and drag the music files you want to the sync list.
- 6 Start synchronization.
 - The following requirements must be satisfied to synchronize with Windows Media Player.


Items	Requirement
OS	Microsoft Windows XP SP2, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

- If the Windows Media Player version is lower than 10, install version 10 or higher.



Calls

Making a call


- 1 Tap  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, tap the .
- 3 Tap  to make a call.
- 4 To end a call, tap the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Tap  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by tapping **Search contacts**.
- 3 In the list, tap  you want to call.

Answering and rejecting a call

When you receive a call in Lock state, swipe the  in any direction to Answer the incoming call.

Swipe the  in any direction to Decline an incoming call.

Swipe the **Decline with message** icon from the bottom if you want to send a message.

TIP! Decline with message






You can send a message quickly using this function. This is useful if you need to reject a call with message during a meeting.

Calls

Adjusting the in-call volume


To adjust the in-call volume during a call, use the Volume up and down keys on the back side of the phone.

Making a second call


- 1 During your first call, tap **Menu key**  > **Add call** and dial the number. You can also go to the recently dialed numbers list by tapping **Call logs** or can search contacts by tapping **Contacts** and selecting the contact you want to call.
- 2 Tap  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Tap the displayed number to toggle between calls. Or tap  **Merge calls** to start a conference call.
- 5 To end active calls, tap **End** or tap  and slide the notification bar down and select the **End call** icon .

NOTE: You are charged for each call you make.

Viewing your call logs



On the Home screen, tap  and choose the **Call logs** tab **Call logs**.
View a complete list of all dialed, received and missed calls.

TIP!

- Tap any call log entry to view the date, time and duration of the call.
- Tap the **Menu key** , then tap **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding, as well as other special features offered by your carrier.

- 1 On the Home screen, tap .
- 2 Tap .
- 3 Tap **Call settings** and choose the options that you wish to adjust.

Contacts




Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

On the Home screen

- 1 Tap  to open your contacts.
- 2 Tap **Search contacts** and enter the contact name using the keyboard.


Adding a new contact

- 1 Tap , enter the new contact's number, then tap the **Menu key** . Tap **Add to Contacts > New contact**.
- 2 If you want to add a picture to the new contact, tap the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by tapping .
- 4 Tap a category of contact information and enter the details about your contact.
- 5 Tap **Save**.


Favourites contacts

You can classify frequently called contacts as favourites.



Adding a contact to your favourites

- 1 Tap  to open your contacts.
- 2 Tap a contact to view its details.
- 3 Tap the star to the right corner of the contact's name. The star will turn yellow color.

Removing a contact from your favourites list

- 1 Tap  to open your contacts.
- 2 Tap the **Favorites** tab, and choose a contact to view its details.
- 3 Tap the yellow color star to the right corner of the contact's name. The star turns grey color and the contact is removed from your favourites.

Creating a group



- 1 Tap  to open your contacts.
- 2 Tap **Groups** and tap the **Menu key** . Select **New group**.
- 3 Enter a name for the new group. You can also set a ringtone for the newly created group.
- 4 Tap **Save** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.


Messaging


Your phone combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Tap  on the Home screen and tap  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts will appear. You can tap a suggested recipient. You can add more than one contact.

NOTE: You will be charged for a text message for every person to whom you send the message.

- 3 Tap the **Enter message** field and begin composing your message.
- 4 Tap  to open the Options menu. Choose from **Quick message**, **Insert smiley**, **Schedule sending**, **Add subject** and **Discard**.

TIP! You can tap the  icon to attach the file, that you want to share with message.

- 5 Tap **Send** to send your message.
- 6 Responses will appear on the screen. As you view and send additional messages, a message thread is created.



WARNING:


- The 160-character limit may vary from country to country, depending on the language and how the SMS is coded.
- If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Changing your message settings

Your phone message settings are pre-defined, so you can send messages immediately. You can change the settings according to your preferences.

- Tap the **Messaging** icon on the Home screen, tap  and then tap **Settings**.

E-mail

You can use the E-mail application to read emails from services like Gmail. The E-mail application supports the following account types: POP3, IMAP and Microsoft Exchange. Your service provider or system administrator can provide you with the account settings you need.

Managing an email account




The first time you open the **E-mail** application, a set-up wizard opens to help you to set up an email account.

After the initial set-up, E-mail displays the contents of your inbox.

To add another email account:

- Tap  >  > **Apps** tab > **E-mail** > tap  > **Settings** >  **Add account**.

To change an email account's settings:

- Tap  >  > **Apps** tab > **E-mail** > tap  > **Settings** > **General settings**.

To delete an email account:

- Tap  >  > **Apps** tab > **E-mail** > tap  > **Settings** > tap  > **Remove account** > Select the account to delete > **Remove** > select **Yes**.





Working with account folders

Tap  >  > **Apps** tab > **E-mail** > tap  and select **Folders**.

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message


- 1 While in the **E-mail** application, tap the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts.
- 3 Tap the  to add a Cc/Bcc and tap  to attach files, if required.
- 4 Enter the text of the message.
- 5 Tap .




TIP! When a new email arrives in your Inbox, you will be notified by a sound or vibration.

Camera

To open the Camera application, tap **Camera**  on the Home screen.

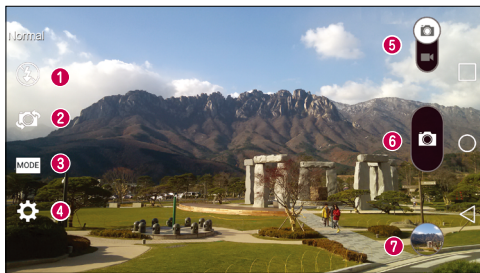

Getting to know the viewfinder














- 1 Flash** – Choose from **Off** , **On** , **Auto** .
- 2 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 Shot mode** – Choose from **Normal**, **Shot & Clear**, **Dynamic tone (HDR)**, **Panorama**, **VR panorama**, **Burst shot**, **Beauty shot**, **Dual camera**, **Time catch shot**, **Intelligent auto**, **Sports** or **Night**.
- 4 Settings** – Tap this icon to open the settings menu.
- 5 Video mode** – Tap and slide down this icon to switch to video mode.
- 6 Capture button**
- 7 Gallery** – Tap to view the last photo you captured. This enables you to access your gallery and view saved photos.

NOTE: Please ensure the camera lens is clean before taking pictures.

Using the advanced settings

In the viewfinder, tap  to open the advanced options. You can change the camera settings by scrolling through the list. After selecting the option, tap .

	To take a photo, say one of the following words: Cheese, Smile, Whisky, Kimchi or LG.
	Defines and controls the amount of sunlight entering the photo.
	Tap to select the focus mode.
	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Applies artistic effects to your pictures.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports Geotagging, you can see the pictures displayed on a map. NOTE: This function is only available when the GPS function is active.
	Selects a shutter sound.
	Set the Volume Key whether to use for the capture or zoom.

Camera



Opens the help guide to know how a function operates.




Restores all camera default settings.

TIP!




- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and shot mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.


Taking a quick photo

- 1 Open the **Camera** application and point the lens toward the subject you want to photograph.
- 2 Focus boxes will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 3 When the focus box turns green, the camera has focused on your subject.
- 4 Tap  to capture the photo.

Using Shot & Clear mode

This feature allows the camera to identify objects you may not want in your photo. After taking the photo, tap an outlined object* to remove it, then save the photo.

- 1 Open the **Camera** application.
- 2 Tap  >  **Shot & Clear**.
- 3 Tap  to take a picture.




- 4 Tap any of the outlined objects to remove them from the photo, then tap .
- * When taking a picture, moving objects are shown as dashed lines.

NOTES

- Take a picture after fixing the camera in one place.
- If the color of a subject is similar to the background, only a part may be detected or it may be difficult to erase.
- If a moving subject is too small or too large, it may be difficult to erase.
- If the subject is moving insignificantly, it may not be detected.





Using Dual camera mode

Allows you to take a picture with the front and rear cameras at the same time, combined into one picture.

- 1 Open the **Camera** application.
- 2 Tap  >  **Dual camera**.
- 3 A small viewfinder box appears on the main viewfinder screen. Set up your shot.
 - Drag the small viewfinder to move it where you want it in the shot.
 - Touch and hold the small viewfinder to resize it, if necessary.
 - Tap the small viewfinder to swap the lens between the main viewfinder and the small viewfinder.
- 4 Tap  to take the combined picture.





Using Time catch shot mode

Sets the camera to capture missing moments by taking five sequential pictures before  is tapped.

- 1 Open the **Camera** application.
- 2 Tap  >  **Time catch shot**.
- 3 Tap  to take a picture.
- 4 To view the moments just before the picture was taken, tap the image thumbnail at the bottom of the Camera screen.
- 5 Select the pictures that you want to keep, then tap  at the top of the screen.

Once you've taken a photo

Tap the image thumbnail at the bottom of the Camera screen to view the last photo you took.

	Tap to edit the photo.
	Tap to take another photo immediately.
	Tap to send your photo to others or share it via social network services.
	Tap to delete the photo.

TIP! If you have an SNS account and set it up on your phone, you can share your photo with your SNS community.

From your Gallery




Tap  **Gallery** and select **Camera**.

- To view more photos, scroll up or down.
- To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer together to zoom out).

Video camera

Getting to know the viewfinder













- 1 Flash** – Choose from **Off** , **On** , **Auto** .
- 2 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 Recording mode** – Choose from **Normal**, **Dual recording**, or **Tracking zoom**.
- 4 Settings** – Tap this icon to open the settings menu.
- 5 Camera mode** – Tap and slide up this icon to switch to camera mode.
- 6 Start recording**
- 7 Gallery** – Tap to view the last video you recorded. This enables you to access your gallery and view your saved videos while in video mode.

TIP!

When recording a video, place two fingers on the screen and pinch to use the Zoom function.



Using the advanced settings

Using the viewfinder, tap  to open all the advanced options.



	<p>Tap to turn on Audio zoom feature. You can record only the sound you want clearly and loudly. After turning this on, focus the subject you want to zoom, on inside the blue circle. To zoom in on sounds as well as sight, pinch in.</p> <p>NOTES</p> <ul style="list-style-type: none">• Only available in landscape view.• Do not cover the microphones on both sides.
	<p>Tap to set the size (in pixels) of the video you are recording.</p>
	<p>Defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar towards “-” for a lower brightness video or towards “+” for a higher brightness video.</p>
	<p>Improves color quality in various lighting conditions.</p>
	<p>Choose a colour tone to use for your new view.</p>
	<p>Activate this to use your phone's location-based services.</p>
	<p>Set the Volume Key whether to use for the record or zoom.</p>
	<p>Opens the help guide to know how a function operates.</p>
	<p>Restores all camera default settings.</p>

Video camera

Recording a quick video

- 1 Open the **Camera** application and slide the **Video mode** button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you wish to capture in your video.
- 4 Tap  once to start recording.
- 5 A red light will appear at the top left corner of the viewfinder with a timer showing the length of the video.
- 6 Tap  on the screen to stop recording.

TIP!

-  – Tap to capture image during recording a video.
-  – Tap to pause during recording a video.

After recording a video

In the viewfinder, tap the video thumbnail at the bottom of the screen to view the last video you took.



Tap to record another video immediately.





Tap to send your video to others or share it via social network services.



Tap to delete the video.

From your Gallery





Tap  **Gallery** and select **Camera**. Tap on video play icon  to play the video.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the back side of the phone.

Using Audio Zoom

Focuses the audio recording on a particular area of your choosing; this will increase microphone sensitivity and reduce background noise.





- 1 Open the **Camera** application and change to video mode
- 2 Tap  >  **Audio zoom** and select **On**.
- 3 Tap an empty space on viewfinder to close the Setting pop-up window.
- 4 Hold the phone horizontally and tap  to start recording.
- 5 Focus the subject you want to zoom in on inside the blue circle. Then, pinch to zoom in to increase sound sensitivity and decrease noise.
- 6 Tap  to stop recording.

NOTES

- Do not cover the side microphones while using this feature.
- You must record in landscape orientation to use this function.





Using Dual recording mode

Allows you to record videos with the front and rear cameras at the same time, combined into one recording.

- 1 Open the **Camera** application and change to video mode
- 2 Tap  >  **Dual recording**.
- 3 A small viewfinder box appears on the main viewfinder screen. Set up your shot.
 - Drag the small viewfinder to move it where you want it in the shot.
 - Touch and hold the small viewfinder to resize it, if necessary.
 - Tap the small viewfinder to swap the lens between the main viewfinder and the small viewfinder.
- 4 Tap  to start dual recording.
- 5 Tap  to stop dual recording.

Using Tracking zoom mode


Allows you to define an area of the recording to focus on and enlarge. You can set the area before recording, then move it as necessary during the recording.

- 1 Open the **Camera** application and change to video mode
- 2 Tap  >  **Tracking zoom**.
- 3 Drag the magnifying glass to the area to enlarge. The small screen shows the defined focus in large view.
- 4 Tap  to start recording.
 - While recording, you can move the small screen. Touch and drag it to the desired location.
- 5 Tap  to stop recording.



Function

QuickMemo+

The **QuickMemo+** allows you to create memos and capture screen shots. Capture screens, draw on them and share them with family and friends with QuickMemo+.

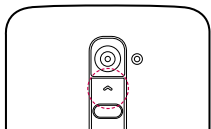


OR

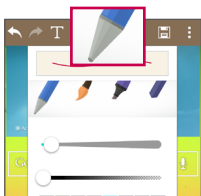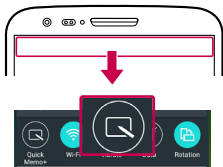


- 1 (While screen is switched off) Press and hold the Volume Up key.



OR

Touch and slide the status bar downward and tap .

- 2 Select the desired menu option from **Pen type**, **Thickness**, **Transparency**, **Colour**, **Eraser** and create a memo.

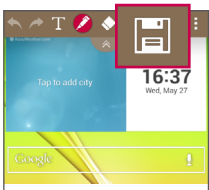Function








- 3 Tap  in the Edit menu to save the memo with the current screen. To exit QuickMemo+ at any time, tap .

NOTE: Please use a fingertip while using the QuickMemo+. Do not use your fingernail.

Using the QuickMemo+ options

You can easily use the QuickMenu options when using the QuickMemo+.

	Undo or Redo.
	Tap to insert text into your memo.
	Selects the pen type and the colour.
	Erases the memo that you created.
	Saves the memo with the current screen in the QuickMemo+ , Gallery or Notebook .


Viewing the saved QuickMemo+

Tap **QuickMemo+/Notebook/Gallery** and select the QuickMemo+ album.

QuickTranslator

Simply aim the camera of your smart phone at the foreign sentence you want to understand. You can get the real-time translation anywhere and anytime.

You can buy additional dictionaries for offline translation from the Google Play Store.

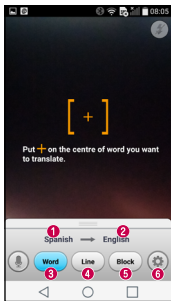

- 1 Home language.
- 2 Destination language.
- 3 Translation of word.
- 4 Translation of sentence.
- 5 Translation of block.
- 6 Settings.

- 1 Tap > > **Apps** tab > **QuickTranslator**.
- 2 Tap **Word**, **Line** or **Block**.
- 3 Tap and select the desired language.
- 4 Hold the phone toward the subject you want to translate for a few seconds.


NOTE: Only one dictionary is provided free of charge. Additional dictionaries must be purchased. Please select from the list below the dictionary you would like to install as your complimentary dictionary.

NOTE: There may be a difference in the rate of recognition depending on the size, font, color, brightness and angle of the letters that need to be translated.

Function

QSlide

From any screen, bring up a messaging, calendar, and more as a window inside your screen.

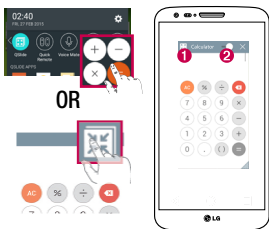



1		Tap to exit the QSlide and return to full window.
2		Swipe to adjust transparency.
3		Tap to end the QSlide.
4		Swipe to adjust the size.


- 1 Touch and slide the status bar downwards > tap QSlide apps or while using applications that support QSlide, tap . The function will be continuously displayed as a small window on your screen.
- 2 You can make a call, browse the Web, or choose other phone options. You can also use and tap the screen under the small windows when the transparency bar is not full

NOTE: The QSlide can support up to two windows at the same time.

QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV, Set top box, audio system, DVD/Blu-ray players, air conditioner and projector.

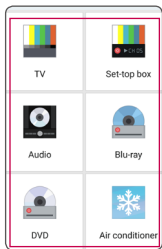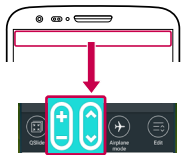

- 1 Touch and slide the status bar downwards and tap  > **ADD REMOTE**.

OR

Tap  >  > **Apps tab** >  > tap .

- 2 Select the type and brand of device, then follow the on-screen instructions to configure the device(s).

- 3 Touch and slide the status bar downwards and use QuickRemote functions.

Tap to select  **Magic Remote setting, Edit remote name, Learn remote, Move remote, Delete remote, Settings and Help.**

Function

NOTE: The QuickRemote operates the same way as an ordinary remote control infrared (IR) signals. Be careful not to cover the infrared sensor at the top of the phone when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.



Live Zooming

Live Zooming allows you to zoom in or zoom out on a portion of a video that is being played to make the desired section appear larger or smaller.

When viewing a video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.

NOTE:

- While a video is playing, slide left side on the screen up or down to adjust the screen brightness.
- While a video is playing, slide right side of the screen up or down to adjust the screen volume.
- While playing a video, slide the screen left or right to rewind or fast-forward.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm tap.

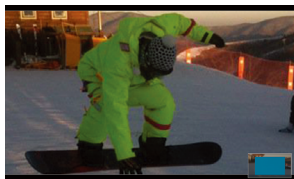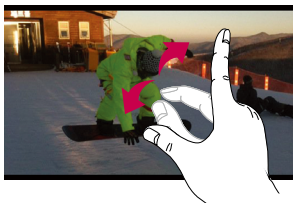



LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer "Mobile Life" experiences.

How to Get to LG SmartWorld from Your Phone

- 1 Tap  >  > **Apps** tab > tap the  icon to access **LG SmartWorld**.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not signed up yet, tap Register to receive your LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no  icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

Function

How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.



Search content.



Find content by category (e.g. Games, Education, Entertainment etc).

- Try the easy "Menu" buttons to find what you're looking for fast.

Settings – GENERAL and VERSION INFO.

Sign in – Set your ID and Password.

- Try other useful functions as well. (Content Detail screen)

NOTE: LG SmartWorld may not be available from all carriers or in all countries.

Multimedia

Gallery

Open the **Gallery** application to view albums of your pictures and videos.

1 Tap  >  > **Apps** tab >  **Gallery**.

You can manage and share all your image and video files with Gallery.

NOTE:

- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.

Viewing pictures

Launching Gallery displays your available folders. When another application, such as Email, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Select a folder to open it.

Pictures are displayed by creation date in a folder. Select a picture to view it full screen. Scroll left or right to view the next or previous image.



Zooming in and out

Use one of the following methods to zoom in on an image:


- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place to zoom in. Pinch to zoom out, or double-tap to return.

Multimedia

Playing videos

Video files show the  icon in the preview. Select a video to watch it and tap . The Videos application will launch.

Editing photos

When viewing an photo, tap .

Deleting photos/videos

Use one of the following methods:

- In a folder, tap  and select photos/videos by ticking, and then tap on **Delete**.
- When viewing a photo/Video, tap .








Setting as wallpaper


When viewing a photo, tap the **Menu key**  > **Set image as** to set the image as wallpaper or assign to a contact.








NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.



Playing a video

- 1 Tap  >  > **Apps** tab >  **Gallery**.
- 2 Select the video you want to play.
 - ▶  **QSlide:** Enables an overlay on your phone's display for easy multitasking.
 - ▶  **SmartShare:** Shares media files with DLNA certified devices.
 - ▶  **Menu:** Tap to access Screen ratio, Subtitles, Share, Trim, Settings, Details options.
 - ▶  **Screen shot:** Captures a screen shot while playing a video.

NOTE: Tap  > **Settings** > **Screenshot on.**

- ▶  **Volume:** Tap to display the Volume slider bar, then adjust the playback volume on the slider bar.
- ▶  **Lock/Unlock:** Locks the touch keys to prevent unintentional touches.
- ▶  **Pause:** Tap to pause video playback.
- ▶  **Play:** Tap to resume video playback.
- ▶  **forward:** Tap to go 10 seconds forward.
- ▶  **backward:** Tap to go 10 seconds backward.
- ▶  **favourite:** Tap to add the video to your favourites.

Play a Video


- 1 From the Home screen, tap the **Apps Key**  > **Gallery**  to view videos stored in the storage.
 - ▶ Scroll up or down to view more albums.
- 2 Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
- 3 Tap a video in an album to play.
 - ▶ Tap the video to view the playback controls.

Multimedia

NOTE: While a video is playing, slide the left side of the screen up or down to adjust the screen brightness. While a video is playing, slide the right side of the screen up or down to adjust the sound. While playing a video, tap the timeline point to preview that portion of the video via a small screen. Tap the small screen to jump to that part of the video. While playing a video, slide your finger from left to right (or vice versa) to fast-forward and rewind.


Video Editor

You can edit the photos or videos stored on the phone.

▶ Tap  >  > **Apps** tab >  **Video Editor**.

NOTE: Video Editing function is supported only for photos or videos which recorded with this phone.

< Project list screen >

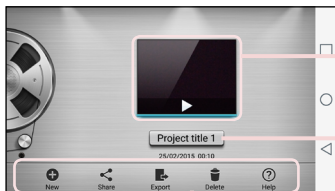

Project List Area

Tap a project to edit it.

Project Title

Tap here to edit the title.

Buttons Area



Create a new project.



Share the video project with other applications, such as YouTube.



Export the finished project to play in other applications.




Delete the video project.



View the help information.

< Project edit screen >

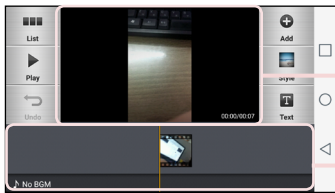

Viewer area

Timeline area



Tap to view the Project list screen.



Tap to play the current clip.



Tap to remove the last the selected clip.



Tap to add additional video, image, title or audio clips.



Tap to choose to video style.



Tap to add text in video clip.

Music

Your phone has a built-in music player that lets you play all your favorite tracks. To access the music player, tap  >  > **Apps** tab >  **Music**.

Add music files to your phone




Start by transferring music files to your phone:





- Transfer music using Media device (MTP).
- Download from the wireless Web.
- Synchronize your phone to a computer.
- Receive files via Bluetooth.








Transfer music using Media device (MTP)

- 1 Connect the phone to your PC using the USB cable.
- 2 Select the **Media device (MTP)** option. Your phone will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.
- 3 When you're finished transferring files, swipe down on the Status Bar and tap **Media device (MTP)** > **Charge phone**. You may now safely unplug your device.

Playing a song

- 1 Tap  >  > **Apps** tab >  **Music**.
- 2 Tap **Songs**.
- 3 Select the song you want to play.

	Tap to pause playback.
	Tap to resume playback.
	Tap to skip to the next track in the album, playlist, or shuffle. Touch and hold to fast forward.
	Tap to restart the current track or skip to the previous track in the album, playlist, or shuffle. Touch and hold to rewind.

	Tap to display the Volume slider bar, then adjust the playback volume on the slider bar.
	Tap to set audio effects.
	Tap to open the current playlist.
	Tap to add the song to your favourites.
	Tap to play the current playlist in shuffle mode (tracks are played in random order).
	Tap to toggle through the repeat modes to repeat all songs, repeat current song, or repeat off.
	Tap to share your music via the SmartShare function.

To change the volume while listening to music, press the up and down volume keys on the back side of the phone.

Touch and hold any song in the list. The **Play**, **Add to playlist**, **Delete**, **Share**, **Set as ringtone**, **Details** and **Search** options will be displayed.

NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Utilities

Guest Mode





To protect your privacy or limit some applications to your children, you can use the Guest mode.


When you lend your phone to others, you can limit the applications to be displayed. In advance, set the Guest mode and customize the options.

NOTE: To use the Guest mode, the pattern lock, Knock Code, PIN and Password should be set in advance.




- 1 Tap  >  > **Apps** tab >  **Settings** > **General** tab > **Guest mode**.
- 2 Tap  to make **Guest mode** on.



Setting your alarm

- 1 Tap  >  > **Apps** tab >  **Clock** > .
- 2 After you set the alarm, your phone lets you know how much time is left before the alarm will go off.
- 3 Set **Repeat**, **Snooze duration**, **Alarm with vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**. Tap **Save**.





NOTE: To change alarm settings in the alarm list screen, tap  and select **Settings**.

Using your calculator

- 1 Tap  >  > **Apps** tab >  **Calculator**.
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.

- 4 For using scientific calculator, tap option menu  and select **Scientific calculator** menu.
- 5 To check the history, tap option menu  and select **Calculation history** menu.






Adding an event to your calendar


- 1 Tap  >  > **Apps** tab >  **Calendar**.
- 2 On the screen, you can find the different view types for the Calendar (Day, Week, Month, Year, Agenda).
- 3 Tap on the date for which you wish to add an event and tap .
- 4 Tap **Event name** and enter the event name.
- 5 Tap **Location** and enter the location. Check the date and enter the time you wish your event to start and finish.
- 6 Set **REMINDERS**, if necessary.
- 7 Tap **Save** to save the event in the calendar.

Voice Recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 Tap  >  > **Apps** tab >  **Voice Recorder**.
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.

NOTE: Tap  to access your album. You can listen to the saved recording. The available recording time may differ from actual recording time.




Task Manager

You can manage your applications using Task Manager. You can easily check the number of applications that are currently running and shut down certain applications.

Tasks

This task can be synchronized with MS Exchange account. You can create task, revise it and delete it in MS outlook or MS Office Outlook Web Access.




To Synchronize MS Exchange

- 1 From the Home Screen, Tap  >  > **Apps** tab >  **Settings**.
- 2 Tap **General** tab > **Accounts & sync** > **Add account**.
- 3 Tap **Microsoft Exchange** to create Email address and Password.
- 4 Make sure if you checkmark Sync task.

NOTE: MS Exchange may not be supported depending on email server.

POLARIS Viewer 5

POLARIS Viewer 5 is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere or anytime, using their mobile devices.

Tap  >  > **Apps** tab >  **POLARIS Viewer 5**.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using POLARIS Viewer 5, the objects and layout remain the same as in the original documents.

Google+




Use this application to stay connected with people via Google's social network service.

- Tap  >  > **Apps** tab >  **Google+**.

NOTE: This application may not be available depending on the region or service provider.

Voice Search




Use this application to search webpages using voice.

- 1 Tap  >  > **Apps** tab >  **Voice Search**.
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded through the applications.

- Tap  >  > **Apps** tab >  **Downloads**.

NOTE: This application may not be available depending on the region or service provider.

The Web

Internet

Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your mobile phone wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

1 Tap  >  > **Apps** tab >  **Internet**.


Using the Web toolbar

Tap slide it upwards with your finger to open.



Tap to go back one page.



Tap to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you tap , which takes you to the previous page.



Tap to go to the Home page.



Tap to add a new window.





Tap to access bookmarks.

Viewing webpages


Tap the address field, enter the web address and tap **Go**.

Opening a page

To go to new page, tap  → .

To go to another webpage, tap , scroll up or down, and tap the page to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword, and then select one of the suggested keywords that appear.



NOTE: This feature may not be available depending on the region or service provider.

Bookmarks

To bookmark the current webpage, tap  > **Add to bookmarks** > **OK**.

To open a bookmarked webpage, tap  and select one.

History

Tap  > **History** to open a webpage from the list of recently-visited webpages. To clear the history, tap **Clear all** .

Chrome

Use Chrome to search for information and browse webpages.


1 Tap  >  > **Apps** tab >  **Chrome**.

NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

Tap the Address field, and then enter a web address or search criteria.

Opening a page

To go to a new page, tap  → **New tab**.

Settings

This section provides an overview of items you can change using your phone's System settings menus.

To access the Settings menu:

Tap  > Touch and Hold  > **System settings**.

- or -

Tap  >  > **Apps tab** >  **Settings**.





Networks

< **Wi-Fi** >

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your phone in the router.

You can find the MAC address in the following user interface: tap  >  > **Apps tab** >  **Settings** > **Networks** tab > **Wi-Fi** >  > **Advanced Wi-Fi** > **MAC address**.

< **Bluetooth** >

Turn the Bluetooth wireless feature on or off to use Bluetooth.

< **Mobile data** >

Displays the data usage and set mobile data usage limit.

< **Call** >

Configure phone call settings such as call forwarding and other special features offered by your carrier.

Voicemail – Allows you to select your carrier's voicemail service.

Fixed dialing numbers – Turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Incoming voice call pop-up – Display incoming call popup when using apps.

Call reject – Allows you to set the call reject function. Choose from **Call reject mode** or **Reject calls from**.

Decline with message – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Privacy keeper – Hides the caller name and number for an incoming call.

Call forwarding – Choose whether to divert all calls when the line is busy, when there is no answer or when you have no signal.

Auto answer – Set the time before a connected hands-free device automatically answers an incoming call. Choose from Off, 1sec, 3sec, 5sec.

Connection vibration – Vibrates your phone when the other party answers the call.

Voice enhancement – Enhances voice quality in noisy environments so you can hear more clearly.

Save unknown numbers – Add unknown numbers to contacts after a call.

Power key ends call – Allows you to press the Power button to select your end call.

Call barring – Lock incoming, outgoing or international calls.

Call duration – View the duration of calls including Last call, Outgoing calls, Incoming calls and All calls.

Additional settings – Allows you to change the following settings:

Caller ID – Choose whether to display your number in an outgoing call.

Call waiting – If call waiting is activated, the handset will notify you of an incoming call while you are on a call (depending on your network provider).

< Share & connect >

NFC – Your phone is an NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your content with an NFC tag or another NFC support device by simply tapping it with your device. If you tap an NFC tag with your device, it will display the tag content on your device.

Settings

To switch NFC on or off – From the Home screen, touch and slide the notification panel down with your finger, then select the NFC icon to turn it on.

NOTE: When airplane mode is activated, the NFC application can be used.

Using NFC – To use NFC, make sure your device is switched on, and activate NFC if disabled.

Android Beam – When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

Just bring the device together (typically back to back) and then tap your screen. The app determines what gets beamed.

SmartShare Beam – Enable to receive files from LG phones.

Media server – Share media content with nearby devices via DLNA.

Miracast – Allows you to wirelessly mirror the phone screen and sound onto a Miracast dongle or TV.

LG PC Suite – Connect LG PC Suite with your phone to easily manage multimedia content and apps.

Wi-Fi connection – Checkmark to allow Wi-Fi connection to transfer music and images between computer and phone.

Help – Tap to view about LG PC Suite information.

< Tethering & networks >

USB tethering – Connect the USB cable to share the internet connection with the computer.

Wi-Fi hotspot – You can also use your phone to provide a mobile broadband connection. Create a hotspot and share your connection. Please "**Sharing your phone's data connection**" for more information.

Bluetooth tethering – Turn on Bluetooth tethering and connect other devices to phone via Bluetooth.

Help – Tap to view help information on the Wi-Fi hotspot and Bluetooth tethering functions.

Airplane mode – After switching to Airplane mode, all wireless connections are

disabled.

Mobile networks – Set options for Mobile data, data roaming, network mode & operators, access point names (APNs) etc.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.


NOTE: You must set a lock screen PIN or password before you can use credential storage.


Sound

Sound profile – Choose the Sound, either Vibrate only or Do not disturb.

Volume – Adjust the phone's volume settings to suit your needs and your environment.

Vibration strength – Allows you to set the vibrate strength for Incoming call, Notification, Vibrate on tap..

Ringtone – Set the ringtone for calls. You can also add a ringtone by tapping  at the top right corner of the screen.

Notification sound – Set the notification sound. You can also add a notification sound by tapping  at the top right corner of the screen.

Sound with vibration – Checkmark to set the phone to vibrate in addition to the ringtone when you receive calls.

Vibration type – Allows you to set the vibration type for incoming calls. Choose from **Long Lasting**, **Rapid**, **Short repeated**, **Standard**, or **Ticktock**.

Do not disturb – Set a time and mode when your phone doesn't let you know about notifications coming in. Choose from All, Priority only, or None.

PRIORITY ONLY – Allow certain features to interrupt when Priority only. Alarms always have priority. Choose from Apps with Calendar events, Incoming calls, New messages, or Allowed contacts

SCHEDULE – Only notification with priority interrupt on repeat even when set to all.

Lock screen – Set to show or hide all notifications on the lock screen.

Settings

Apps – Set notification from Apps. Choose from None to show no notifications from the Apps, and Priority to show notifications with priority on top of others and when Do not disturb set to Priority only.

Vibrate on tap – Checkmark to vibrate when tapping the Home touch buttons and during other UI interactions.

Sound effects – Tap to set the dial pad touch tones, touch sounds, and screen lock sound.

Dial pad touch tones – Checkmark to play tones while using dial pad.

Touch sounds – Checkmark to play sound when making screen selection.

Screen lock sound – Checkmark to play sound when locking and unlocking the screen.

Message/call voice notifications – Tap the Message/call voice notifications switch to toggle it On or Off. On allows your phone to automatically read your incoming calls and/or messages out loud.

Display

< Home screen >

Set the **Theme, Wallpaper, Screen swipe effect** or **Allow Home screen looping**.

Home backup & restore – You can backup and restore app/widget layouts and themes.

Help – Tap to view help information on Home screen.

< Lock screen >

Select screen lock – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. Set **None, Swipe, Knock Code, Pattern, PIN** or **Password**.

If you have enabled a Pattern lock type when you turn on your phone or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

Smart Lock – Set when to automatically unlock phone by Trusted devices (BT device or NFC) or Trusted face. This function is available when the Lock screen is set to one of the **Knock Code, Pattern, PIN** and **Password**.

Screen swipe effect – Sets the screen swipe effect options. Choose from **Light particle**, **Vector circle**, **Mosaic** and **Soda**.

NOTE: This setting name may be Pattern effect if the Screen lock is set to Pattern.

Wallpaper – Sets your Lock screen wallpaper. Select it from **Gallery** or **Wallpaper gallery**.

Shortcuts – Allows you to change the shortcuts on the Swipe Lock screen.

Weather animation – Checkmark to show weather animation for current location or primary city set in Weather based on auto data updates.

Owner info – Checkmark to set the device owner's name to be displayed on the Lock screen.

Lock timer – Sets the amount of time before the screen automatically locks after the screen has timed-out.

Power button instantly locks – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the Security lock timer setting.

< Home touch buttons >

Set the Home Touch Keys displayed at the bottom of all of the screens. Set which ones are displayed, their position on the bar, and what they look like. Select Button combination, Color, and Hide Home touch buttons.

< Font type >

Sets the type of font used for the phone and menus.

< Font size >

Sets the size of the font displayed in the phone and menus.

< Brightness >

Adjusts the brightness of the screen. For best battery performance, use the dimmest comfortable brightness.

< Notification LED >

Tap the switch to toggle it On or Off. On will activate the LED light for the notifications you checkmark.

Settings

< Auto-rotate screen >

Checkmark to set the phone to automatically rotate the screen based on the phone orientation (portrait or landscape).

< Screen timeout >

Sets the amount of time before the screen times out.

< Smart screen >

Checkmark to set the screen stays on when phone detects your face.

< Screen-off effect >

Sets the screen-off effect. Choose from Retro TV, Black hole, and Fade out.

< Daydream >

Tap the Daydream switch to toggle it On or Off. On allows the set screensaver to be displayed when the phone is sleeping while docked and/or charging. Choose from Clock and Google Photos.

General

< Language & input >

Use the Language & input settings to select the language for the text on your phone and to configure the on-screen keyboard, including words you've added to its dictionary.

Language – Sets the language to use on your device.

Default – Sets the default on-screen keyboard to use when entering text.

LG Keyboard – Checkmark to select the LG Keyboard to enter data. Tap the Settings icon to change the following settings:

Input language and keyboard layout – Sets the keyboard language and characters.

Keyboard height and layout – Personalizes your keyboard.

Path input – Checkmark to enter a word by drawing a path through all of the letters.

Show word suggestions – Checkmark to show words through text prediction.

Show emoticon suggestions – Checkmark to show word-related color emoticons.

Auto-correction – Sets your level for automatic word correction. Choose from Off,

Mild, Moderate, and Aggressive.

Update word suggestions – Uses Swipe Connect to provide more word suggestions. To use this feature, accept the Agreement Rights.

Additional settings – Sets advanced settings.

Help – Tap the Help for more information.

Google voice typing – Checkmark to select Google voice typing to enter data. Tap the Settings icon to change the Google voice settings.

Choose input languages – Sets the languages supported with Google voice typing.

Block offensive words – Checkmark to hide recognized offensive text.

Offline speech recognition – Enables voice input while offline.

Voice Search – Sets voice search options.

Language – Sets the Google search by voice language.

Speech output – Sets when to use speech output. Choose from On, Hands-free only, and Off. To turn on speech output only when you've got a headset attached to your phone, select Hands-free only.

“OK Google” Detection – Turn this feature On to start the Google Search app simply by saying “OK Google”.

Offline speech recognition – Sets one or more additional languages for speech recognition when you don't have a network connection.

Block offensive words – Checkmark to hide offensive voice results.

Bluetooth headset – Checkmark to record audio through a connected Bluetooth headset.

Text-to-speech output – Sets the preferred speech engine and speech rate (very slow to very fast). Also plays a short demonstration of speech synthesis.

Pointer speed – Sets the pointer speed on a slide bar.

< Location >


Turn on location service, your phone determines your approximate location using GPS, Wi-Fi and mobile networks.

Mode – Set the location mode from **High accuracy (GPS and networks)**, **Battery**

Settings

saving (Networks only) and **Device sensors only (GPS only)**.

RECENT LOCATION REQUEST – Display apps that have recently requested location information.

Google Location Reporting – Select whether to turn on or off Google Location Reporting options. For further information, tap  > Help&feedback.

< **Accounts & sync** >

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lower (but not eliminate) data usage.

< **Cloud** >

Add a cloud account to quickly and easily use cloud service on LG apps.

< **Accessibility** >

Improves accessibility for users who have impaired vision, hearing, or reduced dexterity.

TalkBack – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback.

Font size – Sets the font size.

Invert colors – Checkmark to invert the colors of screen and content.

Color adjustment – Allow you to adjust screen and content colors.

Touch zoom – Allows you to zoom in and out by triple-tapping the screen.

Message/call voice notifications – Tap the Message/call voice notifications switch to toggle it On or Off. Announce incoming calls and messages out loud.

Screen shades – Checkmark to dim the screen's backlight for less contrast.

Accessibility shortcut – Allows you to open the Accessibility feature quickly on any screen.

Text-to-speech output – Tap to customize text-to-speech (TTS) settings.

Audio type – Sets the audio type. Choose **Mono** or **Stereo**.

Sound balance – Routes the sound through both the right and left channel when a headset is connected. To manually set the audio route, move the slider on the sound balance slide bar to set it.

Notification LED – Tap the switch to toggle it On or Off. On will activate the LED light for the notifications you checkmark.

Flash alerts – Checkmark to set the flash to blink for incoming calls and notifications.

Turn off all sounds – Checkmark to turn off all device sounds.

Captions – Allows you to customize caption settings for those with hearing impairments. Set **Language**, **Font size**, and **Caption style**.

Touch feedback time – Sets the touch feedback time.

Touch assistant – Show a touch board with easy access to common actions.

Screen timeout – Sets the screen timeout.

Touch control areas – Allows you to select an area of the screen to limit touch activation to just that area of the screen.

Auto-rotate screen – Checkmark to allow the phone to rotate the screen depending on the phone orientation (portrait or landscape).

Password voice confirmation – Checkmark so that your phone can read passwords you touch.

Power key ends call – Checkmark so that you can end voice calls by pressing the Power/Lock Key.

Accessibility settings shortcut – Sets quick, easy access to selected features when you triple-tap the Home Key.

One-touch input – Checkmark to enable one-touch input. It allows each finger touch to enter a letter or character on the LG keyboard. Displays the list of accessibility services installed on your phone.

Switch Access – Switch Access allows you to control your device using configurable key combinations. You can move focus to clickable items and select them.

< One-handed operation >

Dial keypad – Checkmark to enable you move the dial keypad to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

LG keyboard – Checkmark to enable you move the keyboard to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

Settings

Lock screen – Checkmark to enable you move the PIN Lock screen keypad to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

Help – Displays information regarding one-handed operation.

< **Shortcut key** >

Get quick access to apps by pressing and holding the Volume keys when screen is off or locked. Tap the Shortcut key switch at the top right corner of the screen to toggle it **ON** or **OFF**.

< **Security** >

Encrypt phone – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

Set up SIM card lock – Set up SIM card lock , or change SIM PIN.

Password typing visible – Show the last character of the hidden password as you type.

Phone administrators – Displays the list of administrators, allowing you to deactivate device administrators.

Unknown sources – Checkmark to allow installation of non-Play Store apps.

Verify apps – Checkmark to disallows or warn before installation of apps that may cause harm to your phone.

Storage type – Displays the current storage type.

Trusted credentials – Display trusted CA certificates.

Install from storage – Allows you to install a secure certificate from storage.

Clear credentials – Deletes all secure certificates and related credentials and erases the secure storage's own password. you're prompted to confirm you want to clear this data.

Trust agents – Select apps to use without unlocking screen.

Screen pin – Allow the app to be the only one used when you pin a screen of an App.

App usage access – Set apps usage access. Choose from EngineerMode, Home and LG MLT.

< **Guest mode** >

Use Guest mode when you let someone else use your phone. They'll only be able to

use the apps that you've selected. Once you set it up, you can easily put your phone in Guest mode by drawing a specified guest pattern on the Lock screen that you set, which is different from your normal pattern.

Allowed app – Tap to select the apps available to be viewed in Guest mode.

Wallpaper – Sets the background (wallpaper) for your Guest mode Lock screen.

Lock screen type – Tap to create the unlock sequence for Guest mode.

Help – Displays information regarding Guest mode.

< **Gestures** >

Screen on/off – Checkmark to enable KnockON to turn the screen on and off. Quickly double-tap center screen to turn it on. Double-tap the Status Bar, an empty area on the Home screen, or the Lock screen to turn the screen off. For the best results, do not move the phone while using the KnockON feature.

Answer an incoming call – Checkmark to enable you to bring the phone to your ear to automatically answer the incoming call.

Fade out ringtone – Checkmark to enable you to pick up the phone from the flat surface to fade out the incoming call ringtone.

Silence incoming calls – Checkmark to enable you to flip the phone to silence incoming calls.

Snooze or stop alarm – Checkmark to enable you to simply flip the device to snooze or stop the alarm.

Pause video – Checkmark to enable you to simply flip the device to pause the currently playing video.

Help – Opens a help guide on how to use the Gestures features of your device.

Motion sensor calibration – Allows you to improve the accuracy of the tilt and speed of the sensor.

< **QuickWindow case** >

Allows you to see a small portion of the screen through the closed case.

Settings

Select apps – Sets the apps that can be used directly in the case's window without opening the case.

Help – Displays QuickWindow case information.

< **Date & time** >

Use Date & time settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< **Storage** >

Use the Storage menu to monitor the used and available space in your phone.

< **Battery** >

BATTERY INFORMATION

The Battery charge information is displayed on a battery graphic along with the percentage of the remaining charge and its status. Touch the Battery usage to display the Battery use screen to see battery usage level and battery use details. It displays which components and applications are using the most battery power. Tap one of the entries to see more detailed information.

Battery usage – Show battery usage level and use details.

Battery percentage on status bar – Checkmark to display the battery level percentage on the Status Bar next to the battery icon.

BATTERY SAVER

Tap the Battery saver switch to toggle it On or Off. Tap Battery saver to access the following settings:

Battery saver – Sets the battery charge percent level that will automatically turn on Battery saver. Choose from Immediately, 5% battery and 15% battery.

Help – Display battery saving items information.

< **Apps** >

Allows you to view details about the apps installed on your phone, manage their data,

and force them to stop.

< **Default message app** >

Set **Messaging** or Hangouts as default app.

< **Backup & reset** >

This menu allows you to back up and/or erase your data.

Back up my data – Checkmark to backup app data, Wi-Fi passwords, and other settings to Google servers.

Backup account – Sets the account to backup.

Automatic restore – Checkmark to allow your phone to automatically restore backed up settings and data when an app is reinstalled on the phone.

LG Backup service – Backs up all information on the device and restores it in the event of data loss or replacement.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the phone this way, you are prompted to re-enter the same information as when you first started Android.

< **Printing** >

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

< **About phone** >

View legal information and check your phone status and software version.

PC software (LG PC Suite)

"LG PC Suite" PC software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, movie, picture) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Play multimedia contents of your PC from your device.
- Backup and create and edit the memos in your device

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.

Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > MOBILE SUPPORT > Mobile Phones > Select the Model** or Go to **Support > Mobile > Select the Model**.
- 3 Click **PC SYNC** from **MANUALS & DOWNLOAD** and click **DOWNLOAD** to download "LG PC Suite" PC software.

System Requirements for "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software application.

Synchronizing your Device to a PC

Data from your device and PC can be synchronized easily with "LG PC Suite" PC software for your convenience. Contacts, schedules and bookmarks can be synchronized.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 The **Media device(MTP)** will appear, then select **Media device(MTP)**.
- 3 After connection, run the program and select the device section from the category on the left side of the screen.
- 4 Click **Synchronize personal data** to select.
- 5 Select the checkbox of contents to synchronize and click the **Sync** button.

NOTE: To synchronize your phone with your PC, you need to install LG PC Suite onto your PC. Please refer to previous pages to install LG PC Suite.

PC software (LG PC Suite)

Moving contacts from your Old Device to your New Device

- 1 Export your contacts as a CSV file from your old device to your PC using a PC sync program.
- 2 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 3 On the top menu, select **phone > Import/Export contacts > Export to your phone**.
- 4 A popup window to select the file type and a file to import will appear.
- 5 On the popup, click the **Select** and Windows Explorer will appear.
- 6 Select the contacts file to import in Windows Explorer and click the **Open**.
- 7 Click **Export**.
- 8 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 9 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 10 Click **OK**.

Phone software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service center. This feature will only be available if and when LG makes a newer firmware version available for your device. Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device. You should first check the software version on your mobile phone: **Settings > General tab > About phone > Update Center > Software Update > Check now for update.**

Phone software update

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature depends on your network service provider, region and country.

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product, or from software supplied by service providers or carriers. This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your phone's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan to is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.

About this user guide

DivX HD

This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video. To play purchased DivX movies, first register your device at vod.divx.com. Find your registration code in the DivX VOD section of your device setup menu.

DivX Certified® to play DivX® video up to HD 720p, including premium content. DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.

Dolby Digital Plus DOLBY DIGITAL PLUS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.

Accessories

These accessories are available for use with the your phone. (Items described below may be optional.)

Travel adaptor



Stereo headset



Quick Start Guide



Data cable



Micro-SIM ejection tool



NOTE:

- Always use genuine LG accessories. Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
Micro-SIM card error	There is no Micro-SIM card in the phone or it is inserted incorrectly.	Make sure that the Micro-SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	

Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorized.
	New Micro-SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.



Troubleshooting


Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & photos	Memory full	Delete some messages from your phone.
Files do not open	Unsupported file format	Check the supported file formats.


Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update via the website.


Category Sub- Category	Question	Answer
BT Bluetooth Devices	What are the functions available via Bluetooth	You can connect a Bluetooth audio device such as a Stereo/Mono headset or Car Kit. Also, when the FTP server is connected to a compatible device, you can share content stored on the storage media.
BT Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5 mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
Data Contacts Backup	How can I backup Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data Synchronization	Is it possible to set up one-way sync with Gmail?	Only two-way synchronization is available.
Data Synchronization	Is it possible to synchronize all email folders?	The Inbox is automatically synchronized. You can view other folders by touch and hold the Recent Key <input type="checkbox"/> and select Folders to choose a folder.


Category Sub- Category	Question	Answer
Google™ Service Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you have logged into Gmail, no need to log into Gmail again.
Google™ Service Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
Phone Function Ringtone	Is there a file size limitation for when I want to use MP3 file as ring tone?	There is no file size limitation.
Phone Function Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I change this?	You will only be able to see the times for messages received the same day.
Phone Function Navigation	Is it possible to install another navigation application on my phone?	Any application that is available at Play Store™ and is compatible with the hardware can be installed and used.

Category Sub- Category	Question	Answer
Phone Function Synchronisation	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (company email server) contacts can be synchronized.
Phone Function Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact with the W & P functions saved into the number, you will not be able to use those features. You will need to re-save each number.</p> <p>How to save with Wait and Pause:</p> <ol style="list-style-type: none"> 1. From the Home screen, tap the Phone icon . 2. Dial the number, then touch and hold the Recent key . 3. Tap Add 2-sec pause or Add wait.
Phone Function Security	What are the phone's security functions?	You are able to set the phone to require that an Unlock Pattern be entered before the phone can be accessed or used.

Category Sub- Category	Question	Answer
Phone Function Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> 1. From the Home screen, touch and hold the Recent Key . 2. Tap System settings > Display tab > Lock screen. 3. Tap Select screen lock > Pattern. The first time you do this, a short tutorial about creating an Unlock Pattern will appear. 4. Set up by drawing your pattern once, and once again for confirmation. <p>Precautions to take when using the pattern lock.</p> <p>It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern five times. You have five chances to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds. (Or, if you preset the backup PIN, you can use the backup PIN code to unlock the pattern.)</p>

Category Sub- Category	Question	Answer
Phone Function Unlock Pattern	What should I do if I forget the unlock pattern and I didn't create my Google account on the phone?	<p>If you have forgotten your pattern: If you logged into your Google account on the phone but failed to enter the correct pattern 5 times, tap the forgot pattern button. You are then required to log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you have forgotten it, you will have to perform a hard reset.</p> <p>Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a factory reset.</p>
Phone Function Memory	Will I know when my memory is full?	Yes, you will receive a notification.
Phone Function Language Support	Is it possible to change my phone's language?	<p>The phone has multilingual capabilities. To change the language:</p> <ol style="list-style-type: none">1. From the Home screen, touch and hold the Recent Key  and tap System settings.2. Tap General tab > Language & input > Language.3. Tap the desired language.

Category Sub- Category	Question	Answer
Phone Function VPN	How do I set up a VPN?	VPN access configuration is different for each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.
Phone Function Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home screen, touch and hold the Recent Key . 2. Tap System settings > Display tab. 3. Tap Screen timeout. 4. Tap the preferred screen backlight timeout time.
Phone Function Wi-Fi & mobile network	When Wi-Fi and mobile network are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, view the mobile network or Wi-Fi icon at the top of your screen.</p>
Phone Function Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the dustbin icon appears at the top and center of the screen. Then, without lifting your finger, drag the icon to the trash can.

Category Sub- Category	Question	Answer
Phone Function Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> 1. From the Home screen, touch and hold the Recent Key . 2. Tap System settings > General tab > Apps > DOWNLOADED. 3. Tap the application, then tap Uninstall.
Phone Function Charger	Is it possible to charge my phone using a USB data cable without installing the necessary USB driver?	Yes, the phone will be charged by the USB cable regardless of whether the necessary drivers are installed or not.
Phone Function Alarm	Can I use music files for my alarm?	<p>Yes. After saving a music file as a ringtone, you can use it as your alarm.</p> <ol style="list-style-type: none"> 1. Touch and hold a song in a library list. In the menu that opens, tap Set as ringtone > Phone ringtone or Contact ringtone. 2. In the alarm clock setting screen, select the song as a ringtone.
Phone Function Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function Alarm	If my ringer volume is set to Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.

Category Sub- Category	Question	Answer
Recovery Solution Hard Reset (Factory Reset)	How can I perform a factory reset if I can't access the phone's setting menu?	If your phone does not restore to its original condition, use a hard reset (factory reset) to initialize it.



CE01680