



OWNER'S MANUAL Safety and Reference

คู่มือการใช้งาน เพื่อความปลอดภัยและเพื่อการอ้างอิง

LED TV*

* Disclaimer

LG LED TV applies LCD screen with LED backlights.

LED TV*

* หมายเหตุ

แอลจีแอลอีดีทีวี เป็นแอลซีดีที่ใช้แอลอีดีแบล็คไลท์เทคโนโลยี

Please read this manual carefully before operating your set and retain it for future reference.

โปรดอ่านคู่มือการใช้งานอย่างละเอียดก่อนการใช้งานเครื่องรับโทรทัศน์
และเก็บไว้อ้างอิงสำหรับการใช้งานในอนาคต



www.lg.com

P/NO : MFL68780117 (1504-REV00)

Printed in Viet / am

คำแนะนำด้านความปลอดภัย

โปรดอ่านคำแนะนำต่าง ๆ เหล่านี้ก่อนใช้งานเครื่องรับโทรทัศน์ของท่าน

คำเตือน



อย่าวางเครื่องรับโทรทัศน์และรีโมทคอนโทรล

ในสภาพแวดล้อมดังต่อไปนี้:

- สถานที่สัมผัสกับแสงแดดโดยตรง
- เป็นบริเวณที่มีความชื้นสูงเช่นห้องน้ำ
- ใกล้แหล่งความร้อนใด ๆ เช่นเตา และอุปกรณ์

อื่น ๆ ที่ผลิตความร้อน

- สถานที่ใกล้เคียงเคาน์เตอร์ห้องครัวหรือความชื้น

ซึ่งสัมผัสกับไอน้ำหรือน้ำมันได้ง่าย


- ในพื้นที่ได้รับน้ำฝนหรือลม
- อยู่ใกล้ ภาชนะบรรจุน้ำเช่นแจกัน

มีฉะนั้นอาจเป็นเหตุไฟไหม้, ไฟฟ้าช็อตการทำงาน

ผิดพลาดหรือการเสียรูปของผลิตภัณฑ์



อย่าวางผลิตภัณฑ์ในบริเวณซึ่งมีการสัมผัสกับ
ฝุ่นละอองซึ่งอาจทำให้เกิดอันตรายจากไฟไหม้



ปลั๊กไฟหลักที่ยังไม่ได้ถอดออกจากเต้าเสียบปลั๊ก
ไฟจะยังคงสภาพพร้อมใช้งานอยู่ ซึ่งอาจเกิด
อันตรายได้



อย่าสัมผัสปลั๊กไฟด้วยมือที่เปียก ถ้าปลั๊กมี
ความชื้น หรือปกคลุมไปด้วยฝุ่นละออง ควรเช็ด
ปลั๊กสายไฟให้แห้งโดยทั่ว หรือ ขจัดฝุ่นละออง
ออกก่อนใช้งาน คุณอาจได้รับอันตรายจากไฟฟ้า
ดูดเนื่องจากการความชื้นสูง



ตรวจสอบให้แน่ใจในการเชื่อมต่อสายไฟและต่อ
สายดิน (ยกเว้นสำหรับอุปกรณ์ที่ไม่ได้มีสายดิน)
เพราะคุณอาจถูกไฟฟ้าดูดหรือได้รับบาดเจ็บ



ยึดสายไฟหลักให้แน่น หากสายไฟหลักยึดไว้อย่าง
หลวม ๆ อาจเกิดประกายไฟขึ้นได้




ตรวจสอบให้แน่ใจสายไฟที่ใช้อยู่ไกลจากวัตถุที่ร้อน เช่น
เครื่องทำความร้อนซึ่งอาจทำให้เกิดไฟไหม้หรืออันตราย
จากไฟฟ้าช็อต




อย่าวางวัตถุที่หนักหรือตัวผลิตภัณฑ์ที่บนสายไฟ
อาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต.



ควรโค้งสายอากาศระหว่างภายในและนอกอาคารเพื่อ
ป้องกันไม่ให้น้ำฝนที่ไหลมาจากด้านนอก อาจทำให้เกิด
ความเสียหายต่อตัวผลิตภัณฑ์และไฟฟ้าช็อต



เมื่อการติดตั้งทีวีบนผนังแล้วตรวจสอบให้แน่ใจ
ว่าจะไม่ติดตั้งทีวีด้วยกรวยแขวนสายไฟหลัก
และสายสัญญาณที่ด้านหลังของทีวีอาจจะทำให้
เกิดไฟไหม้หรือไฟฟ้าช็อต

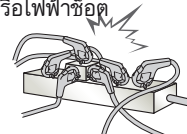

อย่าเสียบอุปกรณ์ไฟฟ้ามากเกินไปลงในเต้าเสียบ
ไฟฟ้าอาจทำให้เกิดไฟไหม้เนื่องจากความร้อน
มากเกินไป



อย่าวางผลิตภัณฑ์หรือปล่อยให้หลอดสว่างเมื่อเชื่อมต่อกับอุปกรณ์ภายนอกซึ่งอาจทำให้บาดเจ็บหรือเกิดความเสียหายให้กับผลิตภัณฑ์



เก็บวัสดุป้องกันความชื้นที่บรรจุภัณฑ์ หรือโวนิลบรรจุภัณฑ์ ออกจากมือเด็ก วัสดุป้องกันความชื้นเป็นอันตรายหากกลืนกิน หากกลืนกินโดยไม่ตั้งใจ พยายามให้ผู้ป่วย อาเจียน และไปโรงพยาบาลที่ใกล้ที่สุด บรรจุภัณฑ์โวนิลสามารถทำให้เกิดการหายใจไม่ออก เก็บไว้ให้ห่างจากมือเด็ก



อย่าปล่อยให้เด็กของท่านเป็นขึ้นไปหรือเกาะเครื่องรับโทรทัศน์ ซึ่งอาจตกหรือล้ม อาจทำให้เกิดการบาดเจ็บรุนแรง



ทั้งแบตเตอรี่ที่ใช้อย่างระมัดระวังเพื่อป้องกันเด็กจากการเผลอรับประทาน ในกรณีรับประทานให้นำไปพบแพทย์ทันที



ห้ามนำโลหะ เช่นตะเกียบที่เป็นโลหะ เสียบเข้ากับสายไฟซึ่งด้านหนึ่งมีการเสียบไฟไว้กับเต้าเสียบ ห้ามสัมผัสสายไฟหลังเสียบไฟไว้กับเต้าเสียบ คุณอาจจะได้รับอันตรายจากไฟฟ้า



หลีกเลี่ยงการเก็บวัตถุไวไฟอยู่ใกล้เครื่องรับโทรทัศน์ อาจเกิดการระเบิดหรือไฟไหม้เนื่องจากวัตถุไวไฟ



อย่าวางวัตถุที่เป็นโลหะเช่น เหรียญ หมุดผม ตะเกียบหรือเส้นลวดลงในผลิตภัณฑ์ หรือวัตถุไวไฟ เช่นกระดาษและไม้ขีดไฟ โดยเฉพาะเด็ก ซึ่งจะทำให้เกิดไฟช็อต ไฟไหม้หรือได้รับบาดเจ็บเกิดขึ้นได้ ถ้าวัดดูแปลงปลอมลงในผลิตภัณฑ์ ถอดสายไฟ และติดต่อศูนย์บริการ



อย่าฉีดยาลงบนผลิตภัณฑ์หรือ ขัดสีด้วยสารไวไฟ(ทินเนอร์หรือเบนซิน) อาจทำให้เกิดไฟไหม้หรืออุบัติเหตุไฟฟ้าช็อต



ระวังการกระแทกที่จะส่งผลกระทบต่อตัวผลิตภัณฑ์หรือวัตถุใดๆ วางอยู่ในผลิตภัณฑ์ ห้ามวางสิ่งใดบนหน้าจอ คุณอาจได้รับบาดเจ็บหรือผลิตภัณฑ์ได้รับความเสียหาย



อย่าสัมผัสกับผลิตภัณฑ์หรือเสาอากาศในช่วงพายุฟ้าคะนองหรือฟ้าแลบ เพราะคุณอาจจะถูกไฟฟ้าดูดได้



อย่าเสียบเต้าเสียบไฟที่ผนังเมื่อมีการรั่วไหลของก๊าซ เปิดหน้าต่างและระบายอากาศ มันอาจจะทำให้เกิดไฟไหม้จากประกายไฟ



อย่าถอดแยกชิ้นส่วน ซ่อมแซมหรือแก้ไขสินค้าด้วยตนเอง เพราะจะเป็นเหตุไฟไหม้หรืออุบัติเหตุไฟฟ้าช็อตได้ โปรดติดต่อศูนย์บริการเพื่อตรวจสอบแก้ไขซ่อมแซม



ถ้าเหตุการณ์ดังต่อไปนี้เกิดขึ้น ให้ถอดปลั๊กสินค้าทันทีและติดต่อศูนย์บริการใกล้บ้าน

- ผลิตภัณฑ์ที่ได้รับผลกระทบจากการกระแทก
- เกิดความเสียหายกับผลิตภัณฑ์
- วัตถุแปลกปลอมได้เข้าไปในผลิตภัณฑ์
- ผลิตภัณฑ์เกิดควันไฟหรือกลิ่นแปลกๆ

เพราะสิ่งเหล่านี้อาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต




หากคุณไม่ได้ใช้ผลิตภัณฑ์เป็นเวลานาน ควรถอดสายไฟออกจากตัวผลิตภัณฑ์เพราะฝุ่นหรือการเสื่อมสภาพฉนวน อาจทำให้เกิดการรั่วไหลของไฟฟ้า ไฟฟ้าช็อตหรือไฟไหม้



ผลิตภัณฑ์จะต้องไม่ถูกสัมผัสกับหยดน้ำ หรือราดน้ำและวัตถุใดๆ ที่เต็มไปด้วยของเหลว เช่นแจกันวางไว้บนอุปกรณ์ อย่าติดตั้งผลิตภัณฑ์บนผนังถ้ามันอาจจะสัมผัสกับน้ำมันหรือละอองน้ำมัน ซึ่งอาจทำให้เกิดความเสียหายของผลิตภัณฑ์และทำให้มันตก



ถ้าน้ำหรือสารเคมีอื่นเข้าสินค้า (เช่นอะแดปเตอร์, สายไฟ, โทรทัศน์), ถอดสายไฟและติดต่อศูนย์บริการทันที มิฉะนั้นอาจเกิดไฟไหม้หรือไฟฟ้าช็อต



ใช้อะแดปเตอร์ที่ได้รับอนุญาตและสายไฟได้รับการอนุมัติโดยแอลจีอิเล็กทรอนิกส์เท่านั้น มิฉะนั้นอาจทำให้เกิดไฟไหม้, ไฟฟ้าช็อตหรือความผิดปกติของผลิตภัณฑ์




ไม่ถอดอะแดปเตอร์หรือสายไฟ ซึ่งอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต

⚠ ข้อควรระวัง



ติดตั้งผลิตภัณฑ์ในบริเวณที่ไม่เกิดคลื่นวิทยุรบกวน



ควรมีระยะห่างเพียงพอระหว่างเสาอากาศภายนอกและสายไฟฟ้า เพื่อป้องกันการสัมผัสแม่ในขณะเสาอากาศวิ่งหรือล้ม ซึ่งทำให้เกิดไฟฟ้าช็อต



อย่าติดตั้งผลิตภัณฑ์บนสถานที่เช่นชั้นวางที่ไม่แข็งแรง หรือพื้นผิวที่เอียง และหลีกเลี่ยงสถานที่ที่มีการสั่นสะเทือน หรือไม่สามารถรองรับอย่างเต็มที่ เพราะจะทำให้ผลิตภัณฑ์ตกหรือพลิกคว่ำ ซึ่งอาจทำให้เกิดการบาดเจ็บหรือความเสียหาย




หากคุณติดตั้งโทรทัศน์บนขาตั้ง คุณจำเป็นต้องดำเนินการเพื่อป้องกันผลิตภัณฑ์จากการพลิกคว่ำ มิฉะนั้นผลิตภัณฑ์อาจตกหรือหล่น ซึ่งอาจทำให้เกิดการบาดเจ็บ

ถ้าคุณต้องการที่จะยึดผลิตภัณฑ์ไว้ที่ผนัง ยึดกับส่วนต่อ ตามมาตรฐานการติดตั้ง VESA (อะไหล่เสริม) ที่ด้านหลังของผลิตภัณฑ์ เมื่อคุณติดตั้งชุดที่จะใช้ยึดติดผนัง ติดตั้งด้วยความระมัดระวังเพื่อที่จะไม่หลุดร่วงลงกับพื้น


ใช้อุปกรณ์เสริมที่ระบุโดยผู้ผลิตเท่านั้น




เมื่อติดตั้งเสาอากาศ ควรปรึกษาช่างผู้ชำนาญซึ่งอาจเกิดอันตรายจากไฟไหม้ หรืออันตรายจากไฟฟ้าช็อต



แนะนำให้ดูทีวีด้วยระยะห่างอย่างน้อย 2 ถึง 7 เท่าของขนาดหน้าจอในแนวทแยง ถ้าดูเป็นเวลานานอาจทำให้เกิดการมองเห็นเป็นภาพซ้อน



ควรใช้ชนิดของแบตเตอรี่ตามที่กำหนดเท่านั้น เพราะอาจก่อให้เกิดความเสียหายต่อรีโมทคอนโทรล



ห้ามใช้แบตเตอรี่ใหม่ร่วมกับแบตเตอรี่เก่า ซึ่งอาจทำให้แบตเตอรี่ร้อนมากเกินไปและรั่วไหล

ห้ามให้แบตเตอรี่อยู่ในบริเวณที่สามารถสัมผัสกับความร้อน เช่น แสงแดด กองไฟ หรือเตาไฟ เพื่อป้องกันอันตราย ควรหลีกเลี่ยงบริเวณดังกล่าว


ห้ามใส่แบตเตอรี่ที่ชาร์ตไม่ได้ เข้ากับอุปกรณ์ชาร์ตแบตเตอรี่



ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่กั้นระหว่างรีโมทคอนโทรลและเซ็นเซอร์ของรีโมทคอนโทรล



สัญญาณของรีโมทคอนโทรลอาจถูกรบกวนจากแสงอาทิตย์ หรือแสงที่จ้าอื่นๆ ในกรณีนี้อาจต้องทำให้ห้องมืดลง ด้วยการปิดไฟหรือใส่ผ้าม่าน



เมื่อเชื่อมต่อกับอุปกรณ์ภายนอกเช่นวิดีโอเกมคอนโซล ตรวจสอบให้แน่ใจว่าสายเคเบิลเชื่อมต่อมีความยาวพอ เพราะอาจทำให้ทีวีรบกวนซึ่งอาจทำให้เกิดการบาดเจ็บหรือความเสียหายของสินค้า



ห้ามปิดเปิดเครื่อง ด้วยการเสียบปลั๊กหรือถอดปลั๊กไฟที่ผนัง เพราะอาจทำให้เกิดการชำรุดหรือทำให้ไฟฟ้าช็อต




กรุณาทำตามคำแนะนำการติดตั้งด้านล่างนี้เพื่อป้องกันไม่ให้เกิดความร้อนสูงเกินไป

ใกล้แหล่งความร้อนใดๆ เช่น เตาและอุปกรณ์อื่นๆ ที่ผลิตความร้อนระยะห่างระหว่างผลิตภัณฑ์และผนังควรเกิน ๕ ซม

อย่าติดตั้งผลิตภัณฑ์ในสถานที่ไม่มีกระแสระบายอากาศ(เช่นบนชั้นวางหนังสือหรือในตู้)

อย่าติดตั้งผลิตภัณฑ์บนพรมหรือเบาะรองนั่ง

ตรวจสอบให้แน่ใจช่องระบายอากาศไม่ได้ถูกปิดบังจากผ้าปูโต๊ะ ผ้าม่าน เพราะอาจทำให้เกิดไฟไหม้




ไม่สัมผัสกับช่องระบายอากาศเมื่อตู้โทรทัศน์เป็นเวลานาน ช่องระบายอากาศอาจจะเป็นอันตราย ซึ่งไม่ได้ส่งผลกระทบท่อการดำเนินงานหรือประสิทธิภาพของผลิตภัณฑ์

ตรวจสอบสายไฟของอุปกรณ์ไฟฟ้าอยู่เสมอ หากพบมีร่องรอยของความเสียหายหรือผิดปกติ ควรถอดสายไฟและหยุดใช้อุปกรณ์ไฟฟ้าและติดต่อศูนย์บริการเพื่อเปลี่ยนสายไฟ



ป้องกันไม่ให้ ฝุ่นสะสมบนขาปลั๊กสายไฟหรือเต้าเสียบ ซึ่งอาจทำให้เกิดอันตรายจากไฟไหม้

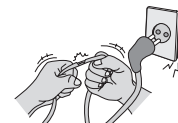

ป้องกันสายไฟจากการบิด งอ หัก ใกล้ประตูหรือโดนบีบ จนเกิดความเสียหาย ให้ความสนใจกับปลั๊กผนังและจุดที่ออกจากสายไฟเครื่องใช้ไฟฟ้า



อย่าใช้ฝ่ามือหรือวัตถุมีคม เช่น เล็บ ดินสอหรือปากกา กดลงบนหน้าจอ หรือทำให้เกิดรอยขีดข่วน



หลีกเลี่ยงการสัมผัสหน้าจอหรือใช้นิ้วของคุณกดไว้ในระยะเวลาอันยาวนานการเช่นนั้นอาจมีผลกระทบต่อการทำงานของจอภาพบางส่วนชั่วคราวบนหน้าจอ



เมื่อทำความสะอาดผลิตภัณฑ์และส่วนประกอบถอดปลั๊กไฟฟ้าก่อนและเช็ดด้วยผ้านุ่ม การใช้แรงมากเกินไปอาจทำให้เกิดรอยขีดข่วนหรือเปื้อนอย่าฉีดด้วยน้ำหรือเช็ดด้วยผ้าเปียก อย่าใช้น้ำยาทำความสะอาดกระจก น้ำยาสำหรับล้างรถหรือใช้ในอุตสาหกรรม สารกัดกร่อน หรือซีดีฟีนเบนซิน หรือแอลกอฮอล์อื่นๆ ซึ่งสามารถสร้างความเสียหายต่อสินค้า และจอแสดงผลภาพ มิฉะนั้น อาจทำให้เกิดเพลิงไหม้ ไฟฟ้าช็อตหรือความเสียหายของผลิตภัณฑ์ (การกัดกร่อนการเปลี่ยนรูปหรือแตก)

ขณะที่เครื่องเชื่อมต่อกับเต้าเสียบ ผลิตภัณฑ์จะยังเชื่อมต่อแหล่งจ่ายไฟ แม้คุณจะปิดเครื่องโดยใช้ ปุ่มกดที่เครื่อง หรือที่ปุ่มกดบนรีโมทคอนโทรล



เมื่อถอดปลั๊กไฟ ให้จับที่ตัวปลั๊กและถอด ไม่จําที่ตัวสายไฟ เพราะอาจจะทำให้เกิดไฟไหม้



เมื่อย้ายสินค้า ให้ตรวจสอบว่าได้ปิดเครื่องแล้ว จากนั้นให้ถอดปลั๊กสายไฟ สายอากาศและสายเคเบิลเชื่อมต่ออื่นๆ ระวังหากเกิดความเสียหาย อาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต



เมื่อมีการย้ายผลิตภัณฑ์ให้ช่วยกันอย่างน้อย 2 เพราะผลิตภัณฑ์มีน้ำหนักมาก อาจทำให้เกิดการบาดเจ็บ



ติดต่อศูนย์บริการปีละครั้งในการทำความสะอาดชิ้นส่วนภายในของผลิตภัณฑ์ ผุ่นสะสม อาจทำให้เกิดความเสียหายกับวงจรได้



ติดต่อศูนย์บริการ เมื่ออุปกรณ์ได้รับความเสียหาย เช่น สายไฟหรือปลั๊กเสียหาย ของเหลวรั่วไหลหรือมีวัตถุตกเข้าไปใน เบี่ยงผันหรือความชื้น ทำงานไปไม่เป็นปกติ หรือร่วงจากที่สูง



หากสัมผัสผลิตภัณฑ์แล้วรู้สึกเย็น และอาจมีความรู้สึก "วูบวาบ" เมื่อเปิดอยู่ ซึ่งเป็นเรื่องปกติไม่มีอะไรผิดปกติกับผลิตภัณฑ์



จอเป็นเทคโนโลยีชั้นสูง ผลิตภัณฑ์แสดงผลแบบ TFT กับความละเอียด 2-6 ล้านพิกเซล คุณอาจเห็นจุดสีดําเล็กๆ หรือจุดสีที่สว่าง (สีแดง, สีฟ้า หรือสีเขียว ที่ขนาด 1 ppm บนจอ นี้ไม่ได้บ่งชี้ถึงความผิดปกติและไม่ได้มีผลต่อประสิทธิภาพและความน่าเชื่อถือของผลิตภัณฑ์ ปรากฏการณ์นี้ยังเกิดขึ้นในผลิตภัณฑ์ของบริษัทอื่น และไม่อยู่ภายใต้การแลกเปลี่ยนหรือคืนเงิน



คุณอาจพบความสว่างที่แตกต่างกัน และสีของหน้าจอนั้นอยู่กับตำแหน่งการรับชม (ซ้าย ขวา บน ล่าง) ซึ่งเกิดจากลักษณะของจอภาพ ซึ่งไม่ได้เกี่ยวข้องกับประสิทธิภาพของผลิตภัณฑ์และไม่ได้เป็นความผิดปกติของผลิตภัณฑ์



การแสดงผลภาพนิ่ง เช่น โลโก้ของช่องสัญญาณการออกอากาศ, เมนูปบนหน้าจอ ฉากวิดีโอเกม เป็นเวลาที่นานอาจทำให้เกิดความเสียหายกับหน้าจอ ซึ่งเกิดเป็นรูปภาพค้างบนหน้าจอ การรับประกันไม่ครอบคลุมถึงผลิตภัณฑ์สำหรับรูปภาพค้างบนหน้าจอ หลีกเลี่ยงการแสดงรูปภาพคงที่บนหน้าจอเป็นเวลานาน (2 ชั่วโมงหรือมากกว่าสำหรับจอแอลซีดี 1 ชั่วโมงหรือมากกว่าสำหรับพลาสมา) เช่นเดียวกัน ถ้าคุณดูโทรทัศน์ในอัตราส่วน 4:3 เป็นเวลานาน รูปภาพค้างบนหน้าจออาจเกิดขึ้นบนเส้นขอบของจอ ปรากฏการณ์นี้ยังเกิดขึ้นในผลิตภัณฑ์ของบริษัทอื่น และไม่อยู่ภายใต้เงื่อนไขการแลกเปลี่ยนหรือคืนเงิน

เสียงปกติของการใช้งาน

เสียงของพลาสติกที่เกิดขึ้นเมื่อรับชมหรือปิดโทรทัศน์ เกิดขึ้นจากการหดตัวทางความร้อนของพลาสติก เนื่องจากอุณหภูมิและความชื้นเป็นเรื่องปกติสำหรับสินค้าที่จะต้องเปลี่ยนรูปความร้อน เสียงฮัมของวงจรไฟฟ้า จอสี เสียงดังในระดับต่ำจะถูกสร้างขึ้นจากวงจรไฟฟ้าภายในตัวผลิตภัณฑ์ เสียงที่เกิดขึ้นไม่ส่งผลกระทบต่อประสิทธิภาพการทำงานและความน่าเชื่อถือของผลิตภัณฑ์

ไม่ใช่เครื่องใช้ไฟฟ้าที่ใช้แรงดันไฟฟ้าสูงใกล้เครื่องรับโทรทัศน์เช่นเครื่องดักแมลง ซึ่งอาจจะส่งผลกระทบต่อการทำงานของเครื่องรับโทรทัศน์

การรับชม 3D (เฉพาะรุ่น 3D)

! คำเตือน

สภาพแวดล้อมในการรับชม

ระยะเวลาในการรับชม

- เมื่อรับชมเนื้อหา 3 มิติ ใช้เวลา 5-15 นาทีหยุดพักทุกๆ ชั่วโมง การรับชมเนื้อหา 3 มิติสำหรับระยะเวลายาวนานอาจทำให้เกิดปวดหัวเวียนหัวอ่อนเพลียหรือความเครียดต่อดวงตา

ผู้ที่ปัญหาทางเกี่ยวกับการรับรู้แสง หรือเจ็บป่วยเรื้อรัง

- ผู้ใช้บางคนอาจพบ อาการชักหรืออาการผิดปกติอื่นๆเมื่อรับชมไฟกระพริบหรือลวดลายเฉพาะอย่างจากเนื้อหา 3 มิติ
- อย่าดูวิดีโอ 3 มิติ ถ้าคุณรู้สึกคลื่นไส้ กำสั๊กตั้งครกหรือมีเจ็บป่วยเรื้อรังเช่นโรคกล้ามเนื้อ ความผิดปกติของหัวใจหรือโรคความดันโลหิต เป็นต้น
- การรับชมเนื้อหา 3 มิติ จะไม่นำให้ผู้ที่ประสบจากการตาบอดข้างใดข้างหนึ่ง หรือมีความผิดปกติทางสายตา เห็นภาพซ้อนหรือรู้สึกไม่สบายในการชม
- หากคุณมีตาเหล่ (Cross-eyed) สายตาสั้น (Amblyopia) หรืออาการตาฟาง คุณอาจมีปัญหาในการตรวจจับภาพในเชิงลึกและถ้าสายตาเนื่องจากภาพซ้อน แนะนำให้ใช้เวลาหยุดพักบ่อยกว่าเฉลี่ยของผู้ใหญ่ปกติทั่วไป
- หากสายตาของคุณแตกต่างกันระหว่างตาขวาและซ้ายของคุณ ควรได้รับการแก้ไขสายตาของคุณก่อนที่จะรับชมเนื้อหา

อาการที่ต้องหยุดหรือละเว้นการรับชมเนื้อหา 3 มิติ

- ห้ามรับชมเนื้อหา 3 มิติ เมื่อคุณรู้สึกเหนื่อยล้าจากการขาดการนอนหลับ ทำงานมากเกินไปหรือดื่มสุรา
- เมื่อมีอาการเหล่านี้ ให้หยุดใช้ หรือรับชมเนื้อหา 3 มิติและพักผ่อนเพียงพอที่จะบรรเทาอาการ
- ปรึกษาแพทย์ของคุณเมื่อมีอาการยังคงมีอยู่ อาการอาจรวมถึงอาการปวดหัว ปวดลูกตา เวียนหัว อาการคลื่นไส้ใจสั่น ตาพร่ามัว รู้สึกไม่สบาย ภาพซ้อน มองภาพไม่ชัดหรือความเมื่อยล้า

⚠️ ข้อควรระวัง

สภาพแวดล้อมขณะรับชม

- ระยะห่างในการรับชม

รักษาระยะห่างอย่างน้อยสองเท่าของความยาวเส้นทแยงมุมจอภาพเมื่อดูเนื้อหา 3 มิติ ถ้าคุณรู้สึกไม่สบายในการดูเนื้อหาแบบ 3 มิติ ให้ขยับระยะการรับชมให้ห่างไกลจากโทรทัศน์

อายุของผู้ชม

เด็กอ่อน / เด็ก

- เด็กที่มีอายุต่ำกว่า 5 ปีห้ามรับชมเนื้อหา 3 มิติ
- เด็กที่มีอายุต่ำกว่า 10 ปี อาจตอบสนองเกินจริงกลายเป็นตื่นเต้นมากเกินไปเนื่องจากสายตาสองลูกยังอยู่ในการพัฒนา (เช่น พยายามที่จะสัมผัสหน้าจอหรือพยายามที่จะกระโดดลงไปในจอ ให้ความสนใจเป็นพิเศษเป็นสิ่งที่จำเป็นสำหรับเด็ก ในการรับชมเนื้อหา 3 มิติ
- เด็กมีความแตกต่างของสายตามากในการรับชมเนื้อหา 3 มิติ จะรับชมได้ดีกว่าผู้ใหญ่ เนื่องจากระยะห่างระหว่างตาสั้นกว่าผู้ใหญ่ ดังนั้นพวกเขาจะรับรู้ในเชิงลึกสามมิติมากขึ้นเมื่อเทียบกับผู้ใหญ่ในภาพ 3 มิติเนื้อหาเดียวกัน

วัยรุ่น

- วัยรุ่นที่มีอายุต่ำกว่า 19 ปี อาจมีปฏิกิริยากับความไวแสง เนื่องจากการกระตุ้นจากแสงในเนื้อหาแบบ 3 มิติ ให้คำแนะนำให้หลีกเลี่ยงการเฝ้าดูเนื้อหา 3 มิติ เป็นเวลานานเมื่อมีอาการเหนื่อยล้า

ผู้สูงอายุ

- ผู้สูงอายุที่อาจรับรู้ผลของ 3 มิติ ได้น้อยกว่าเมื่อเทียบกับวัยรุ่น อย่างน้อยก็กับโทรทัศน์มากกว่าระยะที่แนะนำ

คำแนะนำเมื่อใช้แว่น 3 มิติ

- ให้แน่ใจว่าจะใช้แว่นตา 3 มิติของ LG มิฉะนั้นคุณอาจจะไม่สามารถที่จะดูวิดีโอ 3 มิติได้อย่างถูกต้อง
- ไม่ควรใช้แว่น 3 มิติ แทนแว่นตาปกติของคุณ แทนแว่นตากันแดดหรือแว่นป้องกัน
- การใช้แว่น 3 มิติตัดแปลงอาจก่อให้เกิดความเครียดทางสายตา หรือความผิดปกติของภาพ
- ไม่ควรเก็บแว่นตา 3 มิติของคุณในอุณหภูมิสูงหรือต่ำ เพราะจะทำให้เกิดการเสียรูป
- แว่นตา 3 มิติมีความเปราะบาง และง่ายที่จะเกิดรอยขีดข่วน ควรใช้ผ้าอ่อนนุ่มเช็ดเพื่อทำความสะอาดชิ้นส่วนเลนส์อย่างชุดเช็ดเลนส์ของแว่นตา 3 มิติกับวัตถุมีคม หรือทำความสะอาดเช็ดด้วยสารเคมี


การเตรียมพร้อมใช้งาน

❗ บันทึก

- ภาพที่ปรากฏอาจแตกต่างจากโทรทัศน์ของคุณ
- รายการเมนู OSD ที่แสดงเป็นตัวอักษรในคู่มือนี้อาจมีความแตกต่างไปจากอุปกรณ์ของท่าน
- เมนูที่มีอยู่และตัวเลือกอาจแตกต่างจากแหล่งสัญญาณอินพุตหรือรูปแบบของผลิตภัณฑ์ที่คุณกำลังใช้
- คุณลักษณะใหม่อาจจะเพิ่มเข้ากับโทรทัศน์ในอนาคต
- โทรทัศน์สามารถอยู่ในโหมดสแตนด์บายเพื่อที่จะลดการใช้พลังงาน และ

โทรทัศน์ควรจะถูกปิดใช้งานถ้าไม่ได้รับชมบางเวลา เพื่อประหยัดพลังงาน

- พลังงานที่ใช้ระหว่างการใช้งานจะลดลงหากระดับของความสว่างของภาพลดลง และสิ่งนี้จะช่วยลดค่าใช้จ่ายโดยรวม
- อุปกรณ์ที่เชื่อมต่ออาจมีความแตกต่างกันในแต่ละรุ่น
- บริษัทของสวณสิทธิ์การเปลี่ยนแปลงอุปกรณ์เสริมโดยไม่ต้องแจ้งให้ทราบล่วงหน้า
- เพื่อการเชื่อมต่อที่ดีที่สุด สาย HDMI และอุปกรณ์ USB ควรหนาแน่นกว่า 10 มม. และความกว้างน้อยกว่า 18 มม. ใช้สายต่อที่รองรับ USB 2.0 ใช้หน่วยความจำ USB หรือสายเคเบิล USB ให้พอดีกับพอร์ต USB ของโทรทัศน์




*A ≤ 10 mm (มม)

*B ≤ 18 mm (มม)

- ควรใช้สายที่มีสัญลักษณ์ HDMI แสดงอย่างชัดเจน
- ถ้าใช้สายที่ไม่ได้มาตรฐานอาจจะไม่สามารถแสดงภาพได้ หรือเกิดปัญหาขึ้นระหว่างเครื่องรับโทรทัศน์กับอุปกรณ์ต่อพ่วง
 - High-Speed HDMI®/™ cable (3 เมตรหรือน้อยกว่า)
 - High-Speed HDMI®/™ cable with Ethernet (3 เมตรหรือน้อยกว่า)

⚠️ ข้อควรระวัง

- อย่าใช้สินค้าใดๆ ที่ไม่ได้รับการรับรองมาตรฐาน เพื่อความปลอดภัยและอายุการใช้งานของผลิตภัณฑ์
- ความเสียหายหรือการบาดเจ็บโดยใช้นิรภัยที่ไม่ได้รับการรองจะไม่ได้รับการคุ้มครองจากการรับประกันของบริษัท
- ในบางรุ่นมีฟิล์มบางๆ ติดอยู่เคลือบผิวหน้าจอ ซึ่งต้องลอกออก
- อย่าถอดแผงด้วยมือหรือเครื่องมือใด ๆ การทำเช่นนั้น อาจเกิดความเสียหายต่อสินค้า (เฉพาะ UF95 **)



- เมื่อติดตั้งขาตั้งเข้ากับทีวี ให้วางพื้นหน้าจอลงบนโต๊ะพื้นผิวเรียบ และนุ่มเพื่อป้องกันหน้าจอจากรอยขีดข่วน
- ตรวจสอบให้แน่ใจว่าใส่สกรูอย่างถูกต้องและยึดอย่างปลอดภัย (หากไม่ได้ยึดอย่างปลอดภัยพอที่อาจจะมีเสียงไปข้างหน้าหลังจากติดตั้งห้ามใช้แรงมากเกินไปในการขันสกรู เพราะสกรูจะเกิดความเสียหายทำให้ไม่กระชับแน่นอย่างถูกต้อง

อุปกรณ์เสริมแยกขาย

รายการซื้อแยกสามารถเปลี่ยนแปลงหรือแก้ไขเพื่อปรับปรุงให้ได้คุณภาพโดยไม่ต้องแจ้งใด ๆ กรุณาติดต่อตัวแทนจำหน่ายของคุณเพื่อซื้อรายการเหล่านี้ อุปกรณ์เหล่านี้จะทำงานเฉพาะกับบางรุ่นรูปแบบซื้อหรือการออกแบบอาจมีการเปลี่ยนแปลงขึ้นอยู่กับ การปรับปรุงของผลิตภัณฑ์ที่ฟังก์ชันตามสถานการณ์หรือนโยบายของผู้ผลิต

(เฉพาะบางรุ่น)

AG-F*** แว่นตา Cinema 3D	AN-MR600 Magic Remote	AG-F***DP แว่นตา Dual Play
AN-VC550 กล่องวีดีโอ	LG Audio Device	

การบำรุงรักษา

การทำความสะอาดเครื่องรับโทรทัศน์

ทำความสะอาดโทรทัศน์ของคุณอย่างสม่ำเสมอเพื่อให้มีประสิทธิภาพที่ดีและยืดอายุการใช้งานผลิตภัณฑ์

- ให้แน่ใจว่าปิดเครื่องและถอดสายไฟรวมทั้งสายเคเบิลเชื่อมต่ออื่นๆ ออกก่อน
- เมื่อไม่ใช่เป็นเวลานาน ควรถอดสายไฟออกจากเต้าเสียบ เพื่อป้องกันความเสียหายจากฟ้าผ่า หรือไฟกระชาก

หน้าจอ, กรอบ, ชุดประกอบฝาหน้า และขาตั้ง

กำจัดสิ่งสกปรกฝุ่นละอองหรือฝุ่นบางๆ ควรเช็ดผิวด้วยผ้าแห้งสะอาดและอ่อนนุ่ม

เมื่อต้องการเช็ดทำความสะอาดควรสปรกควรทำความสะอาดด้วยผ้านุ่มชุบน้ำที่สะอาดหรือผงซักฟอกอ่อนเจือจาง จากนั้นเช็ดออกทันทีด้วยผ้าแห้ง

- หลีกเลี่ยงการสัมผัสหน้าจอเพราะอาจจะทำให้เกิดความเสียหาย
- อย่าถูหรือกระทบพื้นผิวหน้าจอด้วยเล็บมือหรือวัตถุมีคม เพราะอาจส่งผลให้เกิดรอยขีดข่วนและการบิดเบือนของภาพ
- อย่าใช้สารเคมีใดๆ เนื่องจากอาจสร้างความเสียหายกับผลิตภัณฑ์
- อย่าฉีดของเหลวลงบนพื้นผิว ถ้าน้ำเข้าสู่โทรทัศน์ อาจทำให้เกิดไฟไหม้ ไฟฟ้าช็อตหรือผลิตภัณฑ์ทำงานผิดปกติ

สายไฟเครื่องรับโทรทัศน์

กำจัดฝุ่นหรือสิ่งสกปรกที่สะสมอยู่บนสายไฟอย่างสม่ำเสมอ


การยกและเคลื่อนย้ายเครื่องรับโทรทัศน์

โปรดทำตามคำแนะนำต่อไปนี้เพื่อป้องกันไม่ให้โทรทัศน์เป็นรอยขีดข่วนหรือเกิดความเสียหาย และเพื่อความปลอดภัยจากการขนส่ง โดยคำนึงถึงชนิดและขนาด


- แนะนำให้เคลื่อนย้ายเครื่องรับโทรทัศน์ด้วยกล่องและโฟมที่แนบมาพร้อมกับเครื่องรับโทรทัศน์
- ถอดปลั๊กไฟ และสายเชื่อมต่อต่างๆ ก่อนเคลื่อนย้าย
- ขณะยกเครื่องให้หันหน้าเครื่องออกจากตัวผู้ยกหรือเคลื่อนย้าย



- จับด้านบนและล่างของกรอบโทรทัศน์อย่างมั่นคง ให้แน่ใจว่าไม่สัมผัสส่วนที่โปร่งใส, ลำโพง หรือพื้นที่ตะแกรงลำโพง

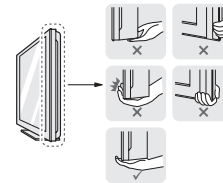

- ช่วยกันอย่างน้อย 2 คน เมื่อต้องการขนย้ายเครื่องรับโทรทัศน์ขนาดใหญ่
- เคลื่อนย้ายเครื่องรับโทรทัศน์ตามรูปที่แสดง

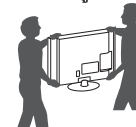


- ขณะขนย้ายระมัดระวังไม่ให้เครื่องเกิดการสั่นไหว หรือกระทบกระเทือนมากเกินไป
- เมื่อเคลื่อนย้ายเครื่องทีวีต้องตั้งตรงไม่เอียงทางด้านข้างหรือเอียงไปทางซ้ายหรือขวา
- อย่าใช้ความกดมากเกินไปจนทำให้เกิดการโค้งหรือดัดของตัวถังเฟรมมีเซนนั้นอาจเกิดความเสียหายต่อหน้าจอ
- เมื่อทำการยกทีวีจะต้องระมัดระวังไม่ให้เกิดความเสียหายกับปุ่มจอยสติ๊กที่ยื่นออกมา

ข้อควรระวัง

- หลีกเลี่ยงการสัมผัสที่จอภาพของเครื่องรับโทรทัศน์เพราะจะทำให้จอภาพเกิดความเสียหายได้
- ห้ามเคลื่อนย้ายโทรทัศน์โดยการจับที่สายเคเบิลที่ติดอยู่กับเครื่องรับโทรทัศน์เพราะจะทำให้สายเคเบิลเกิดความเสียหายและได้รับบาดเจ็บ และยังคงความเสียหายให้กับเครื่องรับโทรทัศน์

การใช้งานปุ่มกดแบบจอยสติ๊ก

ท่านสามารถควบคุมการทำงานของเครื่องรับโทรทัศน์ โดยการกดหรือเลื่อนปุ่มจอยสติ๊กเลื่อนขึ้น, เลื่อนลง, เลื่อนซ้าย, เลื่อนขวา

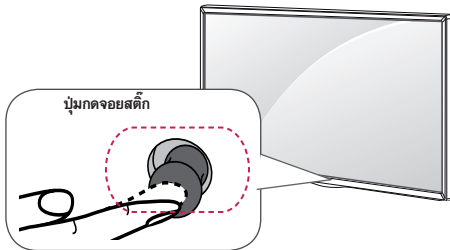

ฟังก์ชันพื้นฐาน

	เปิดเครื่อง	เมื่อทีวีปิดอยู่ กดปุ่มจอยสติ๊ก 1 ครั้งแล้วปล่อย
	ปิดเครื่อง	เมื่อทีวีเปิดอยู่ กดปุ่มจอยสติ๊กค้างไว้ซักครู่ แล้วปล่อย (หากปรากฏรายการเมนู ให้กด ค้างไว้ ซักครู่จนรายการเมนูหายไป ทุกแอปและการบันทึกใดๆจะปิด)
	ควบคุมเสียง	เลื่อนปุ่มจอยสติ๊กซ้ายหรือขวา เพื่อปรับระดับความดังของเสียง
	ควบคุมช่องรายการ	เลื่อนปุ่มจอยสติ๊กขึ้นหรือลง เพื่อปรับเปลี่ยนช่องรายการที่ได้บันทึกไว้ตามต้องการ

การปรับรายการเมนู

เมื่อเปิดเครื่องรับโทรทัศน์ กดปุ่มจอยสติ๊ก 1 ครั้ง คุณสามารถปรับค่าต่างๆ ของรายการเมนู โดยการเลื่อนปุ่มจอยสติ๊กไปในทิศทางบน, ล่าง, ซ้าย หรือ ขวา

	ปิดเครื่องรับโทรทัศน์
	ลบการแสดงผลหน้าจอและกลับไปรับชมรายการ
	เปลี่ยนการรับชมจากแหล่งสัญญาณภายนอก
	เข้าสู่เมนูหลัก


บันทึก

ระวังอย่ากดปุ่มจอยสติ๊ก ก่อนที่จะเลื่อนปุ่มซ้ายขวาหรือบนล่าง เพราะจะทำให้ไม่สามารถปรับระดับเสียงและเปลี่ยนช่องรายการ ได้

การวางเครื่องแบบตั้งโต๊ะ

(ภาพที่แสดงอาจแตกต่างจากทีวีของคุณ)

- จัดวางเครื่องรับโทรทัศน์ตามทิศทางที่ต้องการ
 - เว้นระยะไว้อย่างน้อย 10 ซม. เพื่อให้อากาศถ่ายเทได้สะดวก และยืดอายุการใช้งานให้นานยิ่งขึ้น

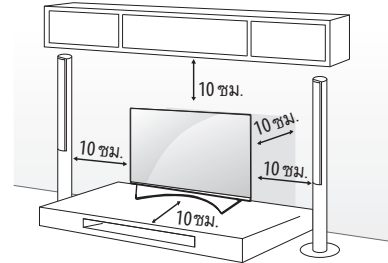

- เสียบสายไฟเข้ากับเต้าเสียบ

ข้อควรระวัง

ห้ามติดตั้งเครื่องรับโทรทัศน์ใกล้กับแหล่งกำเนิดความร้อนต่างๆ เพราะความร้อนจะทำให้เกิดความเสียหายกับเครื่องรับโทรทัศน์

คำเตือน


ถ้าเครื่องรับโทรทัศน์ ไม่ได้ติดตั้งในตำแหน่งที่มั่นคงเพียงพอ อาจเกิดอันตรายจากการตกหล่นการบาดเจ็บต่างๆ สามารถป้องกันได้ หากปฏิบัติตามคำแนะนำต่อไปนี้

- ใช้ตู้ หรือ ชั้นวาง ที่ได้รับการรับรองจากผู้ผลิต
- ใช้เฟอร์นิเจอร์ที่สามารถป้องกัน และให้ความปลอดภัยในการติดตั้งและใช้งานเครื่องรับโทรทัศน์
- ตรวจสอบให้แน่ใจว่าติดตั้งในตำแหน่งที่เหมาะสม ไม่สั่นเกินขอบของเฟอร์นิเจอร์
- ไม่ควรติดตั้งเครื่องรับโทรทัศน์กับเฟอร์นิเจอร์ที่มีความสูงมากเกินไป (เช่น ตู้เก็บของ หรือชั้นวางหนังสือ) โดยไม่มีการยึดเครื่องรับโทรทัศน์ในตำแหน่งที่เหมาะสม
- ไม่ควรวางเครื่องรับโทรทัศน์บนผ้าม่าน บนเฟอร์นิเจอร์ หรือวัสดุใดๆ ระหว่างเครื่องรับโทรทัศน์กับเฟอร์นิเจอร์
- ให้ความรู้แก่เด็กๆ เกี่ยวกับอันตรายของการปีนบนเฟอร์นิเจอร์ซึ่งมีเครื่องรับโทรทัศน์วางอยู่ ซึ่งอาจเป็นเหตุให้เกิดอุบัติเหตุที่ไม่คาดคิดได้

การใช้ระบบรักษาความปลอดภัยเคนซิงตัน


(ใช้ได้กับบางรุ่นเท่านั้น)

- รูปภาพที่แสดงอาจแตกต่างจากทีวีของคุณ
การใช้ระบบรักษาความปลอดภัยเคนซิงตันอยู่ที่ด้านหลัง
ของทีวี สำหรับข้อมูลเพิ่มเติมของการติดตั้งและการใช้ดู
ที่คำแนะนำให้กับระบบรักษาความปลอดภัยเคนซิงตัน
หรือเยี่ยมชมที่ <http://www.kensington.com>
เชื่อมต่อสายเคเบิลระบบรักษาความปลอดภัยเคนซิงตัน
ระหว่างทีวีและโต๊ะ

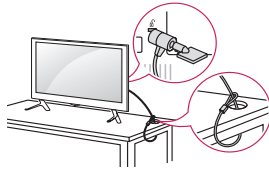

การยึดเครื่องกับผนังเพื่อความปลอดภัย

(ใช้ได้กับบางรุ่นเท่านั้น)

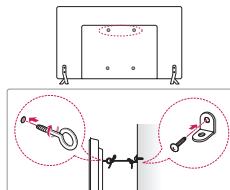

- 1) ใส่สลักเกลียวและขันให้แน่น หรือตัวยึดโทรทัศน์และสลักเกลียวที่ด้านหลังของโทรทัศน์
 - หากมีสลักเกลียวหรือสลักที่ตำแหน่ง สลักเกลียวอยู่
เอาสลักเกลียวนั้นออกก่อน
- 2) ติดตั้งตัวยึดผนังกับสลักเกลียว เข้ากับผนัง จับคู่ตำแหน่ง
ของตัวยึดผนัง และสลักเกลียวบนด้านหลังของเครื่องรับ
โทรทัศน์
- 3) เชื่อมต่อสลักเกลียวและตัวยึดผนังอย่างแน่นหนาด้วย
เชือกที่มีความทนทาน ตรวจสอบให้แน่ใจเพื่อให้เชือกอยู่ใน
แนวขนานกับพื้นผิวเรียบ

⚠️ ข้อควรระวัง


ตรวจสอบให้แน่ใจว่าเด็กไม่ได้ปีนขึ้นไปบนหรือห้อยโหนที่
บริเวณหน้าจอโทรทัศน์

❗ บันทึก

- ใช้ชั้นวางหรือตู้ที่มีความแข็งแรงและขนาดใหญ่พอที่จะ
รับเครื่องรับโทรทัศน์ได้อย่างปลอดภัย
- ตัวยึด สลักเกลียว และเชือกเป็นอุปกรณ์เสริมที่ต้อง
แยกซื้อ คุณสามารถหาซื้อเพิ่มเติมได้จากตัวแทน
จำหน่ายใกล้บ้านท่าน

การติดตั้งเครื่องแบบแขวนกับผนัง

ติดตั้งยึดเสริมสำหรับยึดติดกับผนังที่ด้านหลังของเครื่องรับ
โทรทัศน์อย่างระมัดระวัง และติดตั้งขาแขวนบนผนังในแนวตั้ง
ฉากกับพื้นที่ยึดผนัง เมื่อคุณติดโทรทัศน์กับวัสดุก่อสร้างอื่นๆ กรุณา
ติดต่อบุคลากรที่มีความชำนาญงาน แอลจีแนะนำให้ติดตั้งกับผนัง
โดยช่างฝีมืออาชีพที่ชำนาญแอลจีแนะนำให้ใช้ชุดแขวนของแอลจี
โปรดเลือกชุดแขวนผนังที่ออกแบบมาให้เหมาะสมกับทีวีและมี
พื้นที่ว่างด้านหลังมากพอที่จะทำการต่อสายต่างๆ ได้ ให้ทำการ
เชื่อมต่อสายเคเบิลทั้งหมดก่อนทำการติดตั้งเครื่องแบบแขวนกับ
ผนัง

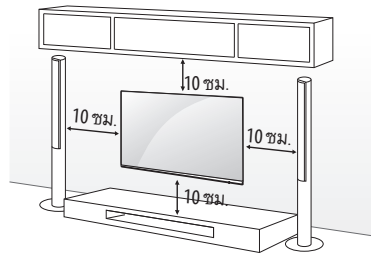


ตรวจสอบให้แน่ใจว่าสกรูและตัวยึดติดผนังที่จะใช้ยึดกับ
ผนังเป็นไปตามมาตรฐาน VESA ซึ่งได้อธิบายไว้ในตาราง
ต่อไปนี้

อุปกรณ์เสริมแยกซื้อ (ตัวยึดติดกับผนัง)

รุ่น	43UF69** 40/43UF77**	49UF69** 49/55UF77** 49/55UF85** 55UF86** 55UF95** 55UG87**
VESA(มม.)(AxB)	200 x 200	300 x 300
ขนาดสลักเกลียว	M6	M6
จำนวนช่องเกลียว	4	4
ตัวยึดติดกับผนัง	LSW240B MSW240	LSW350B MSW240
รุ่น	60/65UF77** 60/65UF85** 65UF86** 65UF95** 65UG87**	70/79UF77** 79UF86** 79UF95**
VESA(มม.)(AxB)	300 x 300	600 x 400
ขนาดสลักเกลียว	M6	M8
จำนวนช่องเกลียว	4	4
ตัวยึดติดกับผนัง	LSW350B	LSW640B

รุ่น	55UF94**	65UF94**
VESA(มม.)(AxB)	400 x 400	400 x 400
ขนาดสลักเกลียว	M6	M6
จำนวนช่องเกลียว	4	4
ตัวยึดติดกับผนัง	LSW440B MSW240	LSW440B

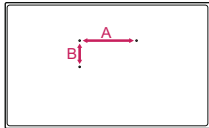


⚠️ ข้อควรระวัง


- ถอดแหล่งจ่ายไฟออกก่อน แล้วเคลื่อนที่หรือติดตั้งโทรทัศน์ มิฉะนั้นอาจเกิดไฟฟ้าช็อตได้
- ถอดขาตั้งก่อนการติดตั้งทีวีบนผนังโดยการผลักไปในทิศทางตรงข้ามกับการใส่ขา
- ฝาครอบสกรูจะช่วยป้องกันการสะสมฝุ่นและสิ่งสกปรกของรูที่เปิดไว้
- หากคุณติดตั้งโทรทัศน์บนเพดานหรือผนังแบบเอียง มันอาจตก และทำให้เกิดการบาดเจ็บรุนแรง ให้ใช้ตัวยึดติดผนังที่ได้มาตรฐานของ LG และติดตั้งโดยผู้เชี่ยวชาญ
- ไม่ขันสกรูแน่นจนเกินไป การทำเช่นนี้อาจทำให้เกิดความเสียหายกับเครื่องรับโทรทัศน์และการรับประกันเป็นโมฆะ
- ใช้สกรูและอุปกรณ์ยึดผนัง ตรงตามมาตรฐาน VESA ความเสียหายหรือการบาดเจ็บ โดยใช้ผิดประเภท หรือใช้อุปกรณ์ไม่ถูกต้องไม่ควรอยู่ในการรับประกัน

! บันทึก

- ใช้สกรูที่มีการระบุไว้ในข้อกำหนดของมาตรฐานสกรูของ VESA
- ชุดประกอบตัวยึดติดผนังประกอบด้วยคู่มือการติดตั้งและชิ้นส่วนที่จำเป็น
- อุปกรณ์ตัวยึดกับผนังเป็นอุปกรณ์เสริมพิเศษท่านสามารถติดต่อตัวแทนจำหน่าย หรือร้านค้าผู้เชี่ยวชาญในการติดตั้ง
- ความยาวของสกรูอาจแตกต่างกันขึ้นอยู่กับตัวยึดติดผนังตรวจสอบให้แน่ใจว่าใช้ความยาวที่เหมาะสม
- สำหรับข้อมูลเพิ่มเติมโปรดดูที่คู่มือที่ให้มาเกี่ยวกับอุปกรณ์แขวนทีวีกับผนัง
- เมื่อติดตั้งยึดติดผนังใช้เทปการปิดเทปกาจะช่วยป้องกันการสะสมฝุ่นและสิ่งสกปรก (เฉพาะในกรณีมีเทปกาให้)

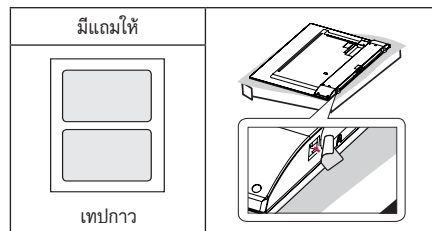


- เมื่อทำการยึดทีวีกับที่แขวนผนัง ให้ใส่แหวนรองเข้ากับที่แขวนทีวีกับผนังเพื่อให้ระยะตามมุมแนวตั้งเหมาะสมกับทีวี (เฉพาะเมื่อมีแหวนรองให้เท่านั้น)

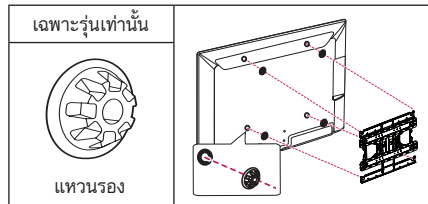


- ทั้งนี้ขึ้นอยู่กับรูปร่างของขาตั้ง การใช้เครื่องมือในลักษณะแบบกับฝาครอบขาตั้งที่แสดงด้านล่าง (เช่น ไขควงแบน) (เฉพาะรุ่นที่มีมาให้เท่านั้น)

(รูปแบบ A)

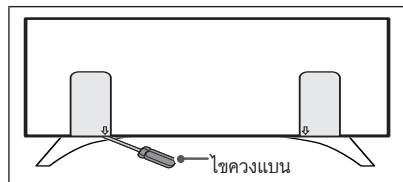

(รูปแบบ B)

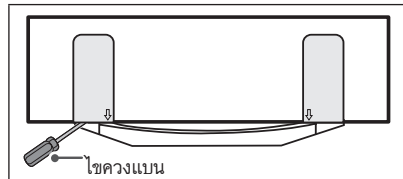

ข้อมูลเบื้องต้นเกี่ยวกับการเชื่อมต่อ

เชื่อมต่ออุปกรณ์ภายนอกต่างๆ เข้ากับโทรทัศน์ และเปลี่ยนโหมดเพื่อเลือกอุปกรณ์ภายนอก สำหรับข้อมูลเพิ่มเติมของการเชื่อมต่อของอุปกรณ์ภายนอกอ้างอิงจากคู่มือที่มาพร้อมกับเครื่องรับโทรทัศน์

อุปกรณ์ภายนอกคือ กล้องรับสัญญาณ HD, เครื่องเล่น DVD, เครื่องบันทึกสัญญาณระบบเครื่องเสียงอุปกรณ์เก็บข้อมูลแบบ USB, คอมพิวเตอร์, เครื่องเล่นเกมสและอุปกรณ์เชื่อมต่ออื่นๆ

! บันทึก

- การเชื่อมต่ออุปกรณ์ภายนอกอาจแตกต่างกันไปแต่ละรุ่น
- เชื่อมต่ออุปกรณ์ภายนอกเข้ากับโทรทัศน์โดยไม่คำนึงถึงลำดับของช่องเชื่อมต่อโทรทัศน์
- หากคุณบันทึกรายการโทรทัศน์บนเครื่องบันทึก DVD หรือ VCR ให้ตรวจสอบการเชื่อมต่อกับโทรทัศน์สัญญาณเคเบิลเข้ากับโทรทัศน์ผ่านเครื่องบันทึก DVD หรือ VCR สำหรับข้อมูลเพิ่มเติมของการบันทึกอ้างอิงจากคู่มือที่มาพร้อมกับอุปกรณ์ที่เชื่อมต่อ
- โปรดดูคู่มือของอุปกรณ์ภายนอกสำหรับการใช้งาน
- หากคุณเชื่อมต่ออุปกรณ์เล่นเกมเข้ากับโทรทัศน์ใช้สายเคเบิลที่มาพร้อมกับอุปกรณ์การเล่นเกมส์
- ในโหมดเชื่อมต่อกับคอมพิวเตอร์ อาจมีสัญญาณรบกวนที่เกี่ยวข้องกับความละเอียด รูปแบบแนวตั้งความคมชัดหรือความสว่าง ถ้าเกิดสัญญาณรบกวนขึ้น เปลี่ยนเอาท์พุทเครื่องคอมพิวเตอร์ไปความละเอียดอื่น เปลี่ยนอัตราการรีเฟรชที่อัตราอื่นหรือปรับความสว่างและความคมชัด ในรายการเมนู ระบบภาพ จนกว่าภาพที่ปรากฏชัดเจน
- ในโหมดคอมพิวเตอร์ บางค่าความละเอียดอาจไม่ทำงานอยู่ถูกต้องขึ้นอยู่กับกราฟฟิคการ์ด
- ทั้งนี้ขึ้นอยู่กับคอมพิวเตอร์ของคุณ ถ้าหากวิดีโอหรือเสียงมีการกระตุกจากการใช้เครื่องคอมพิวเตอร์เล่นเนื้อหา Ultra HD (เฉพาะบางรุ่นเท่านั้น)

การเชื่อมต่อกับสายอากาศ

เชื่อมต่อเครื่องรับโทรทัศน์กับสายอากาศขนาดมาตรฐาน (75 Ω)

- ควรใช้อุปกรณ์แยกสัญญาณและทวนสัญญาณในกรณีที่ต้องกับเครื่องรับโทรทัศน์ 2 เครื่องหรือมากกว่า
- ในบริเวณที่มีสัญญาณไม่ชัดเจน หรือมีคลื่นรบกวน ควรติดตั้งอุปกรณ์เพิ่มประสิทธิภาพสัญญาณหรือบูสเตอร์
- เพื่อเพิ่มคุณภาพของสัญญาณภาพ ควรปรับหมุนทิศทางสายอากาศในทิศทางที่เหมาะสม
- สายเคเบิลของสายสัญญาณสายอากาศและตัวแปลงสัญญาณไม่รวมในชุด
- สนับสนุนระบบเสียง DTV: MPEG, Dolby Digital, Dolby Digital Plus, HE-AAC
- โทรทัศน์สามารถรับสัญญาณ UHD (3840 x 2160 pixels) ได้โดยตรงเพราะมาตรฐานยังไม่ได้รับยืนยัน (เฉพาะบางรุ่นเท่านั้น)

การเชื่อมต่อจานดาวเทียม

(เฉพาะรุ่นดาวเทียม)

เชื่อมต่อทีวีกับจานดาวเทียมที่หัวต่อดาวเทียมด้วยสายเคเบิล

สัญญาณวิทยุดาวเทียม (75 Ω)

การเชื่อมต่อโมดูล CI

(เฉพาะบางรุ่น)

รับชมช่องมีเข้ารหัส (จ่าย) บริการในโหมดทีวีดิจิทัล

- ตรวจสอบว่าโมดูล CI จะถูกแทรกเข้าไปในช่องเสียบการ์ด PCMCIA ในทิศทางที่ถูกต้อง ถ้าโมดูลไม่ได้ใส่อย่างถูกต้องนี้สามารถทำให้เกิดความเสียหายกับทีวีและช่องเสียบการ์ด PCMCIA
- หากทีวีไม่แสดงภาพและเสียงเมื่อเชื่อมต่อ CI + CAM กรุณาติดต่อกับผู้ให้บริการทีวีภาคพื้นดิน/เคเบิล/บริการดาวเทียม

การเชื่อมต่อ USB

บาง USB อาจอาจไม่ทำงาน หากอุปกรณ์ USB เชื่อมต่อผ่าน ฮับ

USB หากไม่พบการเชื่อมต่อให้ต่อโดยตรงเข้ากับพอร์ต USB ของทีวี

การเชื่อมต่ออื่นๆ

เชื่อมต่อทีวีเข้ากับอุปกรณ์ภายนอก สำหรับภาพที่ดีที่สุดและเสียงที่มีคุณภาพ, การเชื่อมต่ออุปกรณ์ภายนอกและโทรทัศน์ด้วยสาย HDMI สายสำหรับเชื่อมต่อต้องซื้อแยกต่างหาก

🏠 → ⚙️ → ⓘ → Picture → HDMI ULTRA HD Deep Colour

- เปิด: ใช้ 4K@50/60 Hz (4:4:4, 4:2:2, 4:2:0)

- ปิด: ใช้ 4K@50/60 Hz (4:2:0)

หากอุปกรณ์ที่เชื่อมต่อกับพอร์ตอินพุตสนับสนุน ULTRA HD

Deep Colour ภาพจะมีความชัดเจน แต่ถ้าอุปกรณ์ไม่ได้สนับสนุน การทำงานอาจไม่ถูกต้อง ในกรณีที่เชื่อมต่ออุปกรณ์ด้วยพอร์ต HDMI ที่แตกต่างกันหรือเปลี่ยนพอร์ต HDMI

ULTRA HD Deep Colour ปิดการทำงาน

(การทำงานนี้ได้บางรุ่นที่สนับสนุน ULTRA HD Deep Colour เท่านั้น)

การใช้งานรีโมทคอนโทรล

(ขึ้นอยู่กับรุ่น)

คู่มือนี้อธิบายการใช้งานปุ่มกดบนเครื่องรับโทรทัศน์และปุ่มกดของรีโมทคอนโทรล โปรดอ่านคู่มือก่อนการใช้งานเพื่อการใช้งานที่ถูกต้อง

การเปลี่ยนแบตเตอรี่ให้เปิดช่องใส่แบตเตอรี่ที่อยู่ด้านหลังใส่แบบเตอรี่ชนิด AAA ขนาด 1.5V จำนวน 2 ก้อน ใส่ขั้วแบตเตอรี่ให้ตรงกับช่องใส่แบตเตอรี่ $\oplus$ และ $\ominus$ ปิดฝาช่องใส่แบตเตอรี่


⚠ ข้อควรระวัง

ห้ามใช้แบตเตอรี่เก่ากับแบตเตอรี่ใหม่ร่วมกัน

ในโทรทัศน์อะนาล็อกและบางประเทศ บางปุ่มกดของรีโมทคอนโทรลอาจจะไม่สามารถทำงานได้

รีโมทคอนโทรลบางรุ่นจะไม่รวมอยู่ในการขาย

การใช้งานรีโมทคอนโทรลให้หันทิศทางของรีโมทคอนโทรลไปยังเครื่องรับโทรทัศน์

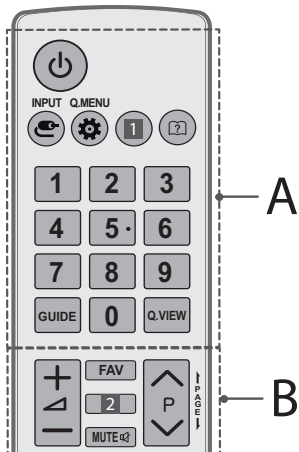

A

⏻(POWER) เปิด / ปิด เครื่อง

📶INPUT ปุ่มเลือกสัญญาณภาพและเสียงจากภายนอก

Q. MENU / ⚙(Q. Settings) เข้าใช้งานเมนูสลับ

1 INFO ⓘ แสดงรายละเอียดต่างๆ ของรายการที่รับชมอยู่ปัจจุบัน (เฉพาะบางรุ่น)

1 RATIO ปรับอัตราส่วนการแสดงผลภาพ (เฉพาะบางรุ่น)

❓(User Guide) เปิดคู่มือการใช้งาน

ปุ่มตัวเลข ปุ่มสำหรับป้อนตัวเลข

GUIDE แสดงแนะนำโปรแกรมช่องหรือรายการ

Q.VIEW สลับกลับไปรับชมรายการช่องก่อนหน้า

B

+ / - ปรับระดับเสียง

FAV แสดงรายการโปรแกรมช่องที่ตั้งไว้เป็นรายการโปรด


2 3D เปิด / ปิด การทำ

2 INFO ⓘ แสดงรายละเอียดต่างๆ ของรายการที่รับชมอยู่ปัจจุบัน

MUTE ปิดเสียงทั้งหมด

^ P v เปลี่ยนโปรแกรมช่องตามที่ได้บันทึกไว้แล้ว

← PAGE → เลื่อนไปยังหน้าจอก่อนหน้านี้หรือถัดไป

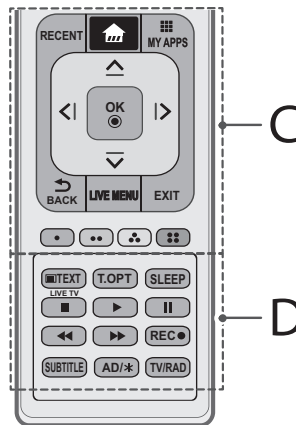

C

RECENT แสดงประวัติการรับชมในปัจจุบัน

🏠(HOME) เมนูลัดเข้า Home

📺MY APPS แสดงรายการ APPS

ปุ่มทิศทาง (บน/ล่าง/ซ้าย/ขวา)

สำหรับเลื่อนตำแหน่งในรายการเมนูหรือตัวเลือกต่างๆ

OK เลือกรายการเมนูที่อยู่ปัจจุบันหรือยืนยันค่าต่างๆ

↶BACK กลับไปยังรายการเมนูก่อนหน้านี้

LIVE MENU แสดงรายการแนะนำ โปรแกรมช่อง ค้นหา และบันทึก

EXIT ออกจากรายการเมนูและกลับสู่การรับชมรายการปกติ

ปุ่มสีต่างๆ ฟังก์ชันพิเศษ อยู่ในการใช้งานบางเมนู

• สีแดง **•• สีเขียว** **••• สีเหลือง** **•••• สีน้ำเงิน**

D

Teletext buttons (TEXT / T.OPT ปุ่มสำหรับใช้งาน Teletext

SLEEP ตั้งเวลาปิดเครื่อง

LIVE TV กลับสู่การรับชมรายการปัจจุบัน

ปุ่มควบคุม (■, ►, II, ◀, ►►) ปุ่มใช้งานใน Premium contents,

Time Machine หรือ SmartShare หรือ Simplink กับอุปกรณ์ที่รองรับ (USB หรือ Simplink หรือ Time Machine)

REC ● เริ่มบันทึก และเปิดเมนูบันทึก

(เฉพาะรุ่นที่รองรับการใช้งาน Time Machine)

SUBTITLE แสดงคำบรรยายในโหมดดิจิทัล

AD/* เปิด/ปิด การใช้งานเสียงคำบรรยาย (เฉพาะบางรุ่น)

TV/RAD เลือกสัญญาณวิทยุหรือโทรทัศน์ ในระบบดิจิทัล


การใช้งานเมจิกรีโมทคอนโทรล

(เฉพาะบางรุ่น)

เมื่อปรากฏข้อความ "Magic Remote Control Battery is low. Change the battery" (แบตเตอรี่ของเมจิกรีโมทใกล้หมด เปลี่ยนแบตเตอรี่) ให้เปลี่ยนแบตเตอรี่ ในการเปลี่ยนแบตเตอรี่ เปิดฝาหลังของรีโมท แล้วใส่แบตเตอรี่ จำนวน 2 ก้อน (1.5 V AA) จับคู่กับขั้วให้ตรงกัน ⊕ และ ⊖ ปิดฝาครอบด้านหลัง ในการใช้งานให้ชี้รีโมทไปที่เครื่องรับโทรทัศน์ เมื่อต้องการเปลี่ยนแบตเตอรี่ให้ทำการตรงข้ามกับตอนใส่แบตเตอรี่

! ข้อควรระวัง

- ห้ามใช้แบตเตอรี่เก่าและใหม่ การทำเช่นนี้อาจเกิดความเสียหายกับรีโมทได้
- ในระบบบอลล็อกทีวีและบางประเทศ ปุ่มในรีโมทอาจจะไม่สามารถใช้งานได้

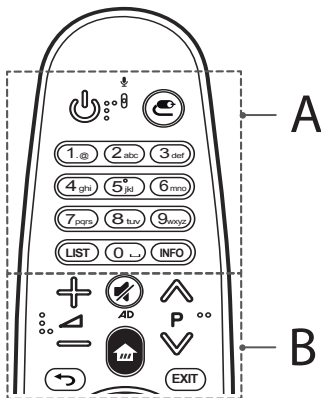

A

⏻ (POWER) เปิด / ปิด เครื่องรับโทรทัศน์

⏮ (INPUT) เลือกสัญญาณภาพและเสียงจากภายนอก

* กดปุ่ม ⏮ ค้างไว้เพื่อแสดงรายการอินพุตทั้งหมด

ปุ่มตัวเลข ปุ่มสำหรับป้อนตัวเลข

LIST ปุ่มสำหรับดูรายการโปรแกรมทั้งหมด

⏪ (Space) เปิดพื้นที่ว่างบนแป้นพิมพ์หน้าจอ

INFO แสดงรายละเอียดต่างๆ ของรายการที่รับชมอยู่ปัจจุบัน

B

⏮ ⏭ ปรับระดับเสียง

⏮ P ⏭ เปลี่ยนโปรแกรมช่องตามที่ได้บันทึกไว้แล้ว

🔇 (MUTE) ปิดเสียงทั้งหมด


* กดปุ่มค้างไว้ (🔇) ปิดการใช้งานเสียงคำบรรยาย

(เฉพาะบางรุ่น)

🏠 (HOME) เมนูลัดเข้า Home

⏮ (BACK) กลับไปยังรายการเมนูก่อนหน้า

EXIT ออกจากกรายการเมนูและกลับสู่การรับชมรายการปกติ

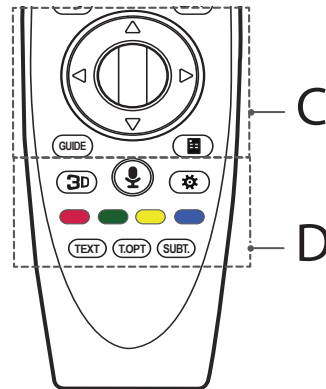

C

⬇ (Wheel) (OK) กดตรงกลางของปุ่มล้อเพื่อเลือกเมนู

คุณสามารถเปลี่ยนโปรแกรมโดยใช้ปุ่มล้อ

⬆ ⬇ ⬆ (ขึ้น/ลง/ซ้าย/ขวา) กดขึ้นลงซ้ายขวา เพื่อเลือก

รายการเมนูต่างๆ ถ้ากดปุ่ม ⬆ ⬇ ⬆ งานตัวขึ้น

หน้าจอจะหายไป และเมจิกรีโมทคอนโทรลจะทำงานคล้าย

รีโมทคอนโทรลโดยทั่วไป เมื่อต้องการใช้งานตัวขึ้นหน้าจออีกครั้งให้เขย่าเมจิกรีโมทคอนโทรลซ้ายขวา

GUIDE แสดงแนะนำโปรแกรมช่องหรือรายการ

📺 (Screen Remote) แสดงรูปรีโมทคอนโทรลที่หน้าจอโทรทัศน์

* การเข้าถึงเมนูการควบคุมหลายรูปแบบ (เฉพาะบางรุ่น)

D

3D เปิด / ปิด การทำงาน 3 มิติ

(การรับรู้เสียง) (เฉพาะบางรุ่น)

การทำงานรับรู้เสียงจำเป็นต้องเชื่อมต่อ Internet

1 กดปุ่มรับรู้เสียง

2 พุดเมื่อหน้าต่างแสดงการรับรู้เสียงปรากฏขึ้น
บนหน้าจอทีวี

- ระยะห่างต้องไม่เกิน 10 เซนติเมตรจากปากของคุณ
- การทำงานอาจผิดพลาดเมื่อคุณพูดเร็วหรือช้า มากหรือน้อยเกินไป
- อัตราการรับรู้เสียงขึ้นอยู่กับลักษณะของผู้ใช้ (เสียง, การออกเสียง และความเร็ว) และสภาพแวดล้อม

(สัญญาณรบกวนและความดังของโทรทัศน์)

(Q. Settings) เข้าใช้งานเมนูลัด

*กดปุ่ม  ค้างไว้เพื่อแสดงเมนู Advance

ปุ่มลัดต่าง ๆ ฟังก์ชันพิเศษ อยู่ในการใช้งานบางเมนู

 แดง  เขียว  เหลือง  น้ำเงิน

Teletext buttons (TEXT, T.OPT) ปุ่มใช้งาน Teletext

SUBT. แสดงคำบรรยายในโหมดดิจิทัล

การลงทะเบียนเมจิรีโมทคอนโทรล

วิธีการลงทะเบียนเมจิรีโมทคอนโทรล

เมื่อต้องการใช้งานรีโมทคอนโทรลคู่กับโทรทัศน์เป็นครั้งแรก

- 1 ใส่แบตเตอรี่ลงในรีโมทคอนโทรลและเปิดโทรทัศน์
- 2 ชีรีรีโมทคอนโทรลไปที่โทรทัศน์และกดปุ่ม  **Wheel (OK)**

บนรีโมทคอนโทรล

*หากไม่สามารถลงทะเบียนเมจิรีโมทคอนโทรลสำเร็จให้ทำใหม่อีกครั้ง
หลังจากเปิดโทรทัศน์

วิธีการยกเลิกการลงทะเบียนเมจิรีโมทคอนโทรล

กดปุ่ม  (BACK) และ  (HOME) พร้อมกันประมาณ

5 วินาที เพื่อยกเลิกการจับคู่ระหว่างโทรทัศน์กับเมจิรีโมทคอนโทรล

*กดปุ่ม **Exit** ค้างไว้เพื่อยกเลิกการจับคู่ และทำการจับคู่ใหม่ในครั้งเดียว

วิธีใช้งานเมจิรีโมทคอนโทรล



- เช้าเมจิรีโมทคอนโทรลไปทางซ้ายหรือขวา หรือกด  (HOME),  (INPUT), **3D** เพื่อให้แสดงตัวชี้ที่หน้าจอ (ในที่รีโมทรุ่น ตัวชี้จะปรากฏขึ้นเมื่อคุณกดปุ่ม  **Wheel(OK)**)
- ตัวชี้จะหายไปจากจอ หากไม่มีการใช้งานเป็นเวลานาน หรือวางเมจิรีโมทคอนโทรลไว้
- หากตัวชี้ไม่ตอบสนองอย่างราบรื่น คุณสามารถตั้งค่าตัวชี้ใหม่ โดยย้ายไปยังขอบของหน้าจอ
- แบตเตอรี่ในเมจิรีโมทคอนโทรลจะหมดเร็วกว่าปกติ เนื่องจากมีฟังก์ชันการทำงานเพิ่มขึ้นมากกว่ารีโมทคอนโทรลปกติ

ข้อควรระวังเมื่อใช้เมจิรีโมทคอนโทรล

- การใช้งานเมจิรีโมทคอนโทรลได้ระยะไกลที่สุด 10 เมตร หากใช้งานไกลมากกว่าระยะนี้อาจเกิดความผิดพลาดหรือไม่สามารถใช้งานได้
- ความล้มเหลวของการสื่อสารที่เกิดขึ้น อาจมาจากอุปกรณ์ในบริเวณใกล้เคียง อุปกรณ์ไฟฟ้าเข้า เต้ามิโครเวฟหรือผลิตภัณฑ์ไร้สายอาจทำให้เกิดการรบกวน เนื่องจากการใช้ย่านความถี่เดียวกันที่ 2.4 GHz
- เมจิรีโมทคอนโทรลอาจไม่ทำงานอย่างถูกต้อง หากมีเราเตอร์ไร้สาย (AP) อยู่ใกล้โทรทัศน์ในระยะ 1 เมตร เราเตอร์ไร้สายควรจะอยู่ในระยะที่ห่างจากโทรทัศน์มากกว่า 1 เมตร
- อย่าถอดชิ้นส่วนแบตเตอรี่หรือทำให้แบตเตอรี่ร้อน
- อย่าให้แบตเตอรี่กระทบกระเทือน หลีกเลี่ยงการกระแทกที่รุนแรงกับแบตเตอรี่
- การใส่แบตเตอรี่ผิดทิศทางอาจส่งผลให้เกิดการระเบิดได้

ลิขสิทธิ์

ใบอนุญาตที่สนับสนุนอาจแตกต่างกันไปตามรุ่น สำหรับข้อมูลเพิ่มเติม
สามารถเยี่ยมชมได้ที่ www.lg.com



ข้อควรรู้เกี่ยวกับ Open Source Software

เพื่อให้ได้ซอร์สโค้ดภายใต้ GPL, LGPL, MPL และใบอนุญาต
โอเพนซอร์สอื่นๆ ที่มีอยู่ในผลิตภัณฑ์นี้โปรดเยี่ยมชม [http://
opensource.lge.com](http://opensource.lge.com) ซอร์สโค้ดนอกจากนี้ เงื่อนไขการอนุ
ญาติที่กล่าวทั้งหมด การรับประกัน ข้อจำกัดการรับประกัน
และประกาศเกี่ยวกับลิขสิทธิ์ที่มีให้ดาวน์โหลด แอลจี จะให้
CD-ROM รวมถึงการเรียกเก็บค่าใช้จ่ายในการดำเนินการดัง
กล่าว (เช่น ต้นทุนของข้อมูล, การขนส่งและการจัดการ) เมื่อ
แจ้งความประสงค์คือเมลไปที่ opensource@lge.com ข้อเสนอ
นี้ใช้ได้สำหรับสามปี (3) นับแต่วันที่คุณซื้อผลิตภัณฑ์

การแก้ไขปัญหาเบื้องต้น

ไม่สามารถควบคุมโทรทัศน์ ควบคุมรีโมทคอนโทรล

- ตรวจสอบเซ็นเซอร์รับสัญญาณรีโมทคอนโทรลของผลิตภัณฑ์
และลองอีกครั้ง
- ตรวจสอบหากมีอุปสรรคระหว่างผลิตภัณฑ์และรีโมทคอนโทรล
- ตรวจสอบว่าแบตเตอรี่ยังคงทำงานและติดตั้งอย่างถูกต้อง
⊕ ต่อกับ ⊕, ⊖ ต่อกับ ⊖

ไม่แสดงภาพและเสียง

- ตรวจสอบว่าผลิตภัณฑ์เปิดอยู่
- ตรวจสอบว่าสายไฟเชื่อมต่ออยู่กับเต้าเสียบ
- ตรวจสอบหากมีปัญหาในปลั๊กผนังโดยการเชื่อมต่อสินค้าอื่นๆ

โทรทัศน์ปิดกะทันหัน

- ตรวจสอบการตั้งค่าการควบคุมพลังงาน แหล่งจ่ายไฟอาจจะ
หยุดชะงัก
- ตรวจสอบมีการตั้งค่าปิดอัตโนมัติ (เฉพาะบางรุ่น) /
ตั้งเวลา / เวลาปิด ไว้หรือไม่ อยู่ในรายการเมนู
Time Setting (ระบบเวลา)
- หากไม่มีสัญญาณในขณะที่โทรทัศน์เปิดอยู่ โทรทัศน์จะปิดโดย
อัตโนมัติหลังจาก 15 นาที หลังจากไม่มีการใช้งาน

เมื่อเชื่อมต่อกับคอมพิวเตอร์ (RGB / HDMI DVI) ปรากฏ

"No Signal (ไม่มีสัญญาณ)" หรือ "Invalid Format"

- เปิด/ปิด เครื่องรับโทรทัศน์อีกครั้งโดยใช้รีโมทคอนโทรล
- เชื่อมต่อสาย RGB/HDMI อีกครั้ง
- ทำการรีเซ็ตเครื่องคอมพิวเตอร์อีกครั้ง ขณะที่เปิดเครื่องรับ
โทรทัศน์ไว้

ข้อมูลจำเพาะ

ข้อมูลจำเพาะของชุดไร้สาย

- เนื่องจากแต่ละประเทศมีการใช้ช่วงความถี่ที่แตกต่างกัน ผู้ใช้ไม่สามารถเปลี่ยนแปลงหรือรับความถี่ที่ใช้งาน และผลิตภัณฑ์เหล่านี้มีการตั้งค่าสำหรับตารางความถี่ที่เหมาะสมกับภูมิภาคไว้แล้ว
- อุปกรณ์ควรติดตั้งและใช้งานในระยะอย่างน้อย 20 ซม. จากตัวผู้ใช้งาน ประโยชน์นี้เป็นคำแนะนำทั่วไปสำหรับการพิจารณาสภาพแวดล้อมของผู้ใช้

CE0197

(UF69**, UF77**, UF85**, UF86**, 79UF95**, UG87** เท่านั้น)

Wireless module (LGSBW41) specification			
Wireless LAN		Bluetooth	
มาตรฐาน	IEEE 802.11a/b/g/n	มาตรฐาน	Bluetooth Version 4.0
ช่วงความถี่	2400 to 2483.5 MHz 5150 to 5250 MHz 5725 to 5850 MHz (for Non EU)	ช่วงความถี่	2400 to 2483.5 MHz
กำลังส่ง (สูงสุด)	802.11a: 13 dBm 802.11b: 15 dBm 802.11g: 14 dBm 802.11n - 2.4GHz: 16 dBm 802.11n - 5GHz: 16 dBm	กำลังส่ง (สูงสุด)	10 dBm or Lower

(55/65UF95** เท่านั้น)

Wireless module (LGSBW51) specification			
Wireless LAN		Bluetooth	
มาตรฐาน	IEEE 802.11a/b/g/n/ac	มาตรฐาน	Bluetooth Version 4.0
ช่วงความถี่	2400 to 2483.5 MHz 5150 to 5250 MHz 5725 to 5850 MHz (for Non EU)	ช่วงความถี่	2400 to 2483.5 MHz
กำลังส่ง (สูงสุด)	802.11a: 14.5 dBm 802.11b: 14 dBm 802.11g: 13 dBm 802.11n - 2.4GHz: 14 dBm 802.11n - 5GHz: 15.5 dBm 802.11ac - 5GHz: 16 dBm	กำลังส่ง (สูงสุด)	10 dBm or Lower

ขนาดของ CI โมดูล (กว้างxสูงxหนา)		100.0 มม. x 55.0 มม. x 5.0 มม.
สภาพสิ่งแวดล้อม	อุณหภูมิในการทำงาน	0 °C ถึง 40 °C
	ความชื้นที่ใช้งาน	น้อยกว่า 80%
	อุณหภูมิในการเก็บ	-20°C ถึง 60 °C
	ความชื้นที่ใช้ในการรักษา	น้อยกว่า 85%

*สำหรับรุ่นดาวเทียมเท่านั้น

	โทรทัศน์ระบบดิจิตอล (เฉพาะบางประเทศ)	โทรทัศน์อะนาล็อก (เฉพาะบางประเทศ)
ระบบโทรทัศน์	DVB-T/T2 ¹ DVB-T/T2/C/S/S2 ²	PAL B/B, PAL B/G, PAL D/K, PAL-I, SECAM B/G, SECAM D/K, NTSC-M
ครอบคลุมสัญญาณ	VHF, UHF C-Band ² , Ku-Band ²	VHF, UHF, CATV
จำนวนช่องที่รองรับมากที่สุด	DVB-T/T2 & Analogue TV : 1,500 DVB-S/S2 : 6,000	
ความต้านทานเสาอากาศภายนอก	75 Ω	

1 เฉพาะรุ่นที่รองรับ DVB-T2 แม้จะเป็นรุ่น DVB-T2 แต่ DVB-T/T2 ไม่สามารถใช้ได้ในฟิลิปปินส์

2 เฉพาะรุ่นที่รองรับ DVB-T2/C/S2



OWNER'S MANUAL

Safety and Reference

LED TV*

* Disclaimer

LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

India region only. (Below sentence is not applicable for above 1920 X 1080 resolution TV models.)

ATTENTION:

This product is qualified for the BEE Star rating in the 'Home' Mode.

The Objectives of Star Labeling Program is designed to promote energy efficient products and practices.

When the television is initially set up, it is designed to meet the BEE Star Labeling requirements while maintaining optimum picture quality.

- Changes to certain functionalities of this television (TV Guide, Picture/sound etc) may change the power consumption.
- Depending upon such changed setting (eg., Retail mode), the power consumption may vary which possibly could exceed the stated energy consumption.

To reset the television to Star rating qualified settings, select 'Home' mode from the initial set-up procedure in 'factory settings' under the 'Set-up' menu.

Safety instructions

Please read these safety precautions carefully before using the product.

⚠ WARNING




Do not place the TV and/or remote control in the following environments:

- A location exposed to direct sunlight
- An area with high humidity such as a bathroom
- Near any heat source such as stoves and other devices that produce heat
- Near kitchen counters or humidifiers where they can easily be exposed to steam or oil
- An area exposed to rain or wind
- Near containers of water such as vases

Otherwise, this may result in fire, electric shock, malfunction or product deformation.



Do not place the product where it might be exposed to dust. This may cause a fire hazard.



Mains Plug is the TV connecting/disconnecting device to AC mains electric supply. This plug must remain readily attached and operable when TV is in use.



Do not touch the power plug with wet hands. Additionally, if the cord pin is wet or covered with dust, dry the power plug completely or wipe dust off. You may be electrocuted due to excess moisture.



Make sure to connect Mains cable to compliant AC mains socket with Grounded earth pin. (Except for devices which are not grounded on earth.) Otherwise possibility you may be electrocuted or injured.



Insert power cable plug completely into wall socket otherwise if not secured completely into socket, fire ignition may break out.



Ensure the power cord does not come into contact with hot objects such as a heater. This may cause a fire or an electric shock hazard.




Do not place a heavy object, or the product itself, on power cables. Otherwise, this may result in fire or electric shock.




Bend antenna cable between inside and outside building to prevent rain from flowing in. This may cause water damaged inside the Product and could give an electric shock.



When mounting TV onto wall make sure to neatly install and isolate cabling from rear of TV as to not create possibility of electric shock / fire hazard.

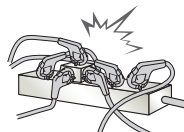

Do not plug too many electrical devices into a single multiple electrical outlet. Otherwise, this may result in fire due to over-heating.



Do not drop the product or let it fall over when connecting external devices. Otherwise, this may result in injury or damage to the product.



Keep the anti-moisture packing material or vinyl packing out of the reach of children. Anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital. Additionally, vinyl packing can cause suffocation. Keep it out of the reach of children.



Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury.



Dispose of used batteries carefully to ensure that a small child does not consume them. Please seek Doctor- Medical Attention immediately if child consumes batteries.



Do not insert any metal objects/conductors (like a metal chopstick/ cutlery/screwdriver) between power cable plug and input Wall Socket while it is connected to the input terminal on the wall. Additionally, do not touch the power cable right after plugging into the wall input terminal. You may be electrocuted. (Depending on model)



Do not put or store inflammable substances near the product. There is a danger of combustion/explosion or fire due to careless handling of the inflammable substances.



Do not drop metallic objects such as coins, hair pins, chopsticks or wire into the product, or inflammable objects such as paper and matches. Children must pay particular attention. Electrical shock, fire or injury can occur. If a foreign object is dropped into the product, unplug the power cord and contact the service centre.




Do not spray water on the product or scrub with an inflammable substance (thinner or benzene). Fire or electric shock accident can occur.



Do not allow any impact, shock or any objects to fall into the unit, and do not drop anything onto the screen. You may be injured or the product can be damaged.



Never touch this product or antenna during a thunder or lighting storm. You may be electrocuted.



Never touch the wall outlet when there is leakage of gas, open the windows and ventilate. It may cause a fire or a burn by a spark.



Do not disassemble, repair or modify the product at your own discretion. Fire or electric shock accident can occur. Contact the service centre for check, calibration or repair.



If any of the following occur, unplug the product immediately and contact your local service centre.

- The product has been impacted by shock
- The product has been damaged
- Foreign objects have entered the product
- The product produced smoke or a strange smell

This may result in fire or electric shock.



Unplug the TV from AC mains wall socket if you do not intend to use the TV for a long period of time. Accumulated dust can cause fire hazard and insulation deterioration can cause electric leakage/shock/fire.




Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall.



If water enters or comes into contact with TV, AC adapter or power cord please disconnect the power cord and contact service centre immediately. Otherwise, this may result in electric shock or fire.



Only use an authorized AC adapter and power cord approved by LG Electronics. Otherwise, this may result in fire, electric shock, malfunction or product deformation.



Never Disassemble the AC adapter or power cord. This may result in fire or electric shock.

CAUTION



Install the product where no radio wave occurs.



There should be enough distance between an outside antenna and power lines to keep the former from touching the latter even when the antenna falls. This may cause an electric shock.



Do not install the product on places such as unstable shelves or inclined surfaces. Also avoid places where there is vibration or where the product cannot be fully supported. Otherwise, the product may fall or flip over, which may cause injury or damage to the product.




If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury.

If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop.


Only use the attachments / accessories specified by the manufacturer.




When installing the antenna, consult with a qualified service technician. If not installed by a qualified technician, this may create a fire hazard or an electric shock hazard.



We recommend that you maintain a distance of at least 2 to 7 times the diagonal screen size when watching TV. If you watch TV for a long period of time, this may cause blurred vision.



Only use the specified type of battery. This could cause damage to the remote control.



Do not mix new batteries with old batteries. This may cause the batteries to overheat and leak.

Batteries should not be exposed to excessive heat. For example, keep away from direct Sunlight, open fireplace and electric heaters.


Do not place non-rechargeable batteries in charging device.



Make sure there are no objects between the remote control and its sensor.



Signal from Remote Control can be interrupted due to external/internal lighting eg Sunlight, fluorescent lighting. If this occurs turn off lighting or darken viewing area.



When connecting external devices such as video game consoles, make sure the connecting cables are long enough. Otherwise, the product may fall over, which may cause injury or damage the product.




Do not turn the product On/Off by plugging-in or unplugging the power plug to the wall outlet. (Do not use the power plug for switch.) It may cause mechanical failure or could give an electric shock.



Please follow the installation instructions below to prevent the product from overheating.

- The distance between the product and the wall should be more than 10 cm.
- Do not install the product in a place with no ventilation (e.g., on a bookshelf or in a cupboard).
- Do not install the product on a carpet or cushion.
- Make sure the air vent is not blocked by a tablecloth or curtain.

Otherwise, this may result in fire.



Take care not to touch the ventilation openings when watching the TV for long periods as the ventilation openings may become hot. This does not affect the operation or performance of the product.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.



Prevent dust collecting on the power plug pins or outlet. This may cause a fire hazard.



Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.



Do not press strongly upon the panel with a hand or sharp object such as nail, pencil or pen, or make a scratch on it, as it may cause damage to screen.



Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary or permanent distortion/damage to screen.



When cleaning the product and its components, unplug the power first and wipe it with a soft cloth. Applying excessive force may cause scratches or discolouration. Do not spray with water or wipe with a wet cloth. Never use glass cleaner, car or industrial shiner, abrasives or wax, benzene, alcohol etc., which can damage the product and its panel. Otherwise, this may result in fire, electric shock or product damage (deformation, corrosion or breakage).

As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by SWITCH.



When unplugging the cable, grab the plug and unplug it, by pulling at the plug. Don't pull at the cord to unplug the power cord from the power board, as this could be hazardous.



When moving the product, make sure you turn the power off first. Then, unplug the power cables, antenna cables and all connecting cables. The TV set or power cord may be damaged, which may create a fire hazard or cause electric shock.



When moving or unpacking the product, work in pairs because the product is heavy. Otherwise, this may result in injury.



Contact the service centre once a year to clean the internal parts of the product. Accumulated dust can cause mechanical failure.



Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



If the product feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with product.



The panel is a high technology display product with resolution of two million to six million pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product.

This phenomenon also occurs in third-party products and is not subject to exchange or refund.



You may find different brightness and color of the panel depending on your viewing position(left/right/top/down).

This phenomenon occurs due to the characteristic of the panel. It is not related with the product performance, and it is not malfunction.



Displaying a still image (e.g., broadcasting channel logo, on-screen menu, scene from a video game) for a prolonged time may cause damage to the screen, resulting in retention of the image, which is known as image sticking. The warranty does not cover the product for image sticking.

Avoid displaying a fixed image on your television's screen for a prolonged period (2 or more hours for LCD, 1 or more hours for Plasma). Also, if you watch the TV at a ratio of 4:3 for a long time, image sticking may occur on the borders of the panel.

This phenomenon also occurs in third-party products and is not subject to exchange or refund.

Generated Sound

"Cracking" noise: A cracking noise that occurs when watching or turning off the TV is generated by plastic thermal contraction due to temperature and humidity. This noise is common for products where thermal deformation is required. Electrical circuit humming/panel buzzing: A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product. It varies depending on the product.

This generated sound does not affect the performance and reliability of the product.

Do not use high voltage electrical goods near the TV (e.g. electric mosquito-swatter). This may result in product malfunction.

Viewing 3D imaging (Only 3D models)

! WARNING

Viewing environment

- Viewing Time
 - When watching 3D contents, take 5 - 15 minute breaks every hour. Viewing 3D contents for a long period of time may cause headache, dizziness, fatigue or eye strain.

Those that have a photosensitive seizure or chronic illness

- Some users may experience a seizure or other abnormal symptoms when they are exposed to a flashing light or particular pattern from 3D contents.
- Do not watch 3D videos if you feel nausea, are pregnant and/ or have a chronic illness such as epilepsy, cardiac disorder, or blood pressure disease, etc.
- 3D Contents are not recommended to those who suffer from stereo blindness or stereo anomaly. Double images or discomfort in viewing may be experienced.
- If you have strabismus (cross-eyed), amblyopia (weak eyesight) or astigmatism, you may have trouble sensing depth and easily feel fatigue due to double images. It is advised to take frequent breaks than the average adult.
- If your eyesight varies between your right and left eye, revise your eyesight prior to watching 3D contents.

Symptoms which require discontinuation or refraining from watching 3D contents

- Do not watch 3D contents when you feel fatigue from lack of sleep, overwork or drinking.
- When these symptoms are experienced, stop using/watching 3D contents and get enough rest until the symptom subsides.
 - Consult your doctor when the symptoms persist. Symptoms may include headache, eyeball pain, dizziness, nausea, palpitation, blurriness, discomfort, double image, visual inconvenience or fatigue.

⚠ CAUTION

Viewing environment

- Viewing Distance
 - Maintain a distance of at least twice the screen diagonal length when watching 3D contents. If you feel discomfort in viewing 3D contents, move further away from the TV.

Viewing age

- Infants/Children
 - Usage/ Viewing 3D contents for children under the age of 5 are prohibited.
 - Children under the age of 10 may overreact and become overly excited because their vision is in development (for example: trying to touch the screen or trying to jump into it). Special monitoring and extra attention is required for children watching 3D contents.
 - Children have greater binocular disparity of 3D presentations than adults because the distance between the eyes is shorter than that of adults. Therefore they will perceive more stereoscopic depth compared to adults for the same 3D image.
- Teenagers
 - Teenagers under the age of 19 may react with sensitivity due to stimulation from light in 3D contents. Advise them to refrain from watching 3D contents for a long time when they are tired.
- Elderly
 - The elderly may perceive less 3D effect compared to the young. Do not sit closer to the TV than the recommended distance.

Cautions when using the 3D glasses


- Make sure to use LG 3D glasses. Otherwise, you may not be able to view 3D videos properly.
- Do not use 3D glasses instead of your normal glasses, sunglasses or protective goggles.
- Using modified 3D glasses may cause eye strain or image distortion.
- Do not keep your 3D glasses in extremely high or low temperatures. It will cause deformation.
- The 3D glasses are fragile and are easily scratched. Always use a soft, clean piece of cloth when wiping the lenses. Do not scratch the lenses of the 3D glasses with sharp objects or clean/wipe them with chemicals.

Preparing

! NOTE

- If the TV is turned on for the first time after it was shipped from the factory, initialization of the TV may take a few minutes.
- Image shown may differ from your TV.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are using.
- New features may be added to this TV in the future.


- The TV can be placed in standby mode in order to reduce the power consumption. And the TV should be turned off if it will not be watched for some time, as this will reduce energy consumption.
- The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.
- The items supplied with your product may vary depending on the model.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port.



- Use a certified cable with the HDMI logo attached.
- If you do not use a certified HDMI cable, the screen may not display or a connection error may occur. (Recommended HDMI Cable Types)
 - High-Speed HDMI®/™ Cable (3 m or less)
 - High-Speed HDMI®/™ Cable with Ethernet (3 m or less)

⚠ CAUTION

- Do not use any unapproved items to ensure the safety and product life span.
- Any damage or injuries caused by using unapproved items are not covered by the manufacturer's warranty.
- Some models have a thin film attached on to the screen and this must not be removed.
- Do not remove the panel with your fingers or any tools. Doing so may damage the product. (Only UF95**)



- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.
- Make sure that the screws are inserted correctly and fastened securely. (If they are not fastened securely enough, the TV may tilt forward after being installed.) Do not use too much force and over tighten the screws; otherwise screw may be damaged and not tighten correctly.

Separate purchase

Separate purchase items can be changed or modified for quality improvement without any notification. Contact your dealer to buy these items. These devices only work with certain models. The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.

(Depending on model)

AG-F*** Cinema 3D Glasses	AN-MR600 Magic Remote	AG-F***DP Dual Play Glasses
AN-VC550 Smart camera	LG Audio Device	

Maintenance

Cleaning your TV

Clean your TV regularly to keep the best performance and to extend the product lifespan.

- Make sure to turn the power off and disconnect the power cord and all other cables first.
- When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges.

Screen, frame, cabinet and stand

To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth.

To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a dry cloth.

- Avoid touching the screen at all times, as this may result in damage to the screen.
- Do not push, rub, or hit the screen surface with your fingernail or a sharp object, as this may result in scratches and image distortions.
- Do not use any chemicals as this may damage the product.
- Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction.

Power cord

Remove the accumulated dust or dirt on the power cord regularly.


Lifting and moving the TV

Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.


- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to avoid damage.



- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

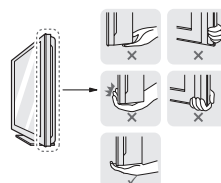

- When transporting a large TV, there should be at least 2 people.
- When transporting the TV by hand, hold the TV as shown in the following illustration.

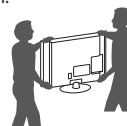

- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.
- Do not apply excessive pressure to cause flexing / bending of frame chassis as it may damage screen.
- When handling the TV, be careful not to damage the protruding joystick button.




CAUTION

- Avoid touching the screen at all times, as this may result in damage to the screen.
- Do not move the TV by holding the cable holders, as the cable holders may break, and injuries and damage to the TV may occur.

Using the joystick button

(Image shown may differ from your TV.)

You can simply operate the TV functions, pressing or moving the joystick button up, down, left or right.

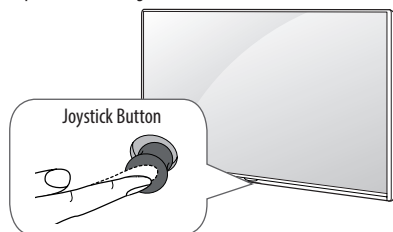

Basic Functions

	Power On	When the TV is turned off, place your finger on the joystick button and press it once and release it.
	Power Off	When the TV is turned on, place your finger on the joystick button and press it once for a few seconds and release it. All running apps will close, and any recording in progress will stop.
	Volume Control	If you place your finger over the joystick button and move it left or right, you can adjust the volume level you want.
	Programmes Control	If you place your finger over the joystick button and move it up or down, you can scroll through the saved programmes you want.

Adjusting the Menu

When the TV is turned on, press the joystick button one time. You can adjust the Menu items moving the joystick button up, down, left or right.

	Turns the power off.
	Clears on-screen displays and returns to TV viewing.
	Changes the input source.
	Accesses the Quick Settings.

! NOTE


- When your finger over the joystick button and push it to the up, down, left or right, be careful not to press the joystick button. If you press the joystick button first, you may not be able to adjust the volume level and saved programmes.

Mounting on a table

(Image shown may differ from your TV.)

1 Lift and tilt the TV into its upright position on a table.

- Leave a 10 cm (minimum) space from the wall for proper ventilation.

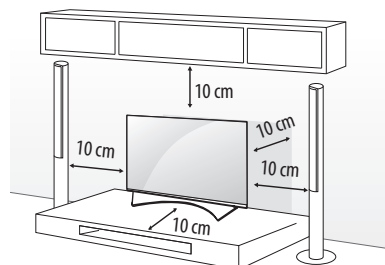

2 Connect the power cord to a wall outlet.

! CAUTION

- Do not place the TV near or on sources of heat, as this may result in fire or other damage.

! WARNING

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:


- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

Using the kensington security system

(This feature is not available for all models.)


- Image shown may differ from your TV.

The Kensington security system connector is located at the rear of the TV. For more information of installation and using, refer to the manual provided with the Kensington security system or visit <http://www.kensington.com>. Connect the Kensington security system cable between the TV and a table.

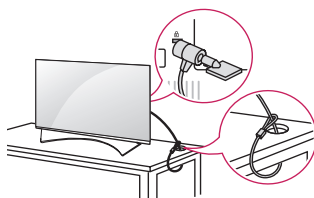

Securing the TV to a wall

(This feature is not available for all models.)

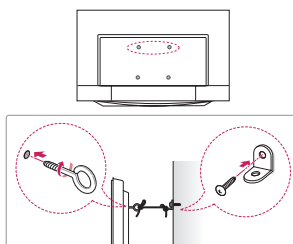

- 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.
 - If there are bolts inserted at the eye-bolts position, remove the bolts first.
- 2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV.
- 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface.

CAUTION


- Make sure that children do not climb on or hang on the TV.

NOTE

- Use a platform or cabinet that is strong and large enough to support the TV securely.
- Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer.

Mounting on a wall

Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel. LG recommends that wall mounting be performed by a qualified professional installer. We recommend the use of LG's wall mount bracket. LG's wall mount bracket is easy to move with cables connected. When you do not use LG's wall mount bracket, please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. It is advised to connect all the cables before installing fixed wall mounts.

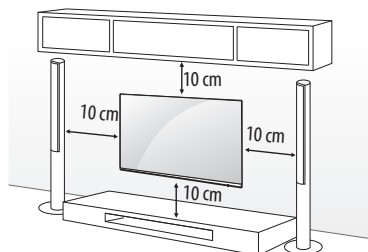


Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

Separate purchase (Wall Mounting Bracket)

Model	43UF69** 40/43UF77**	49UF69** 49/55UF77** 49/55UF85** 55UF86** 55UF95** 55UG87**
VESA (mm) (A x B)	200 x 200	300 x 300
Standard screw	M6	M6
Number of screws	4	4
Wall mount bracket	LSW240B MSW240	LSW350B MSW240
Model	60/65UF77** 60/65UF85** 65UF86** 65UF95** 65UG87**	70/79UF77** 79UF86** 79UF95**
VESA (mm) (A x B)	300 x 300	600 x 400
Standard screw	M6	M8
Number of screws	4	4
Wall mount bracket	LSW350B	LSW640B

Model	55UF94**	65UF94**
VESA (mm) (A x B)	400 x 400	400 x 400
Standard screw	M6	M6
Number of screws	4	4
Wall mount bracket	LSW440B MSW240	LSW440B

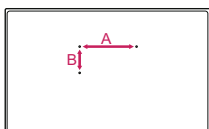


⚠ CAUTION


- Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur.
- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorised LG wall mount and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the manufacturer's warranty.

! NOTE


- Use the screws that are listed on the VESA standard screw specifications.
- The wall mount kit includes an installation manual and necessary parts.
- The wall mount bracket is not provided. You can obtain additional accessories from your local dealer.
- The length of screws may differ depending on the wall mount. Make sure to use the proper length.
- For more information, refer to the manual supplied with the wall mount.
- When installing the wall mounting bracket, use the adhesive label provided. The adhesive label will protect the opening from accumulating dust and dirt. (Only when the label is provided)

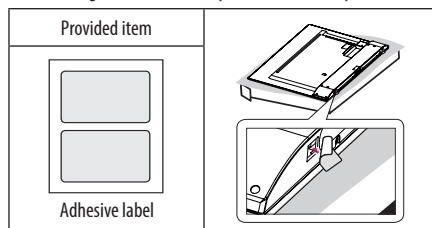


- When attaching a wall mounting bracket to the TV, insert the wall mount spacers into the TV wall mount holes to adjust the vertical angle of the TV. (Only when the item of the following form is provided)

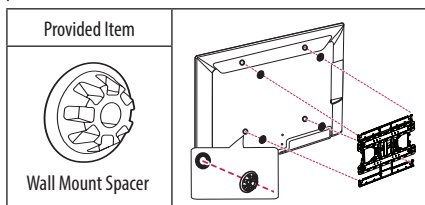

- Depending on the shape of the stand, use a flat tool to remove the stand cover as illustrated below. (e.g., a flat screwdriver) (Only when the item of the following form is provided)

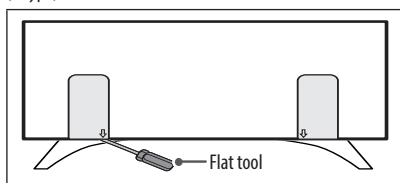

(B Type)

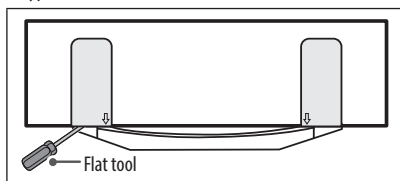

Connections (notifications)

Connect various external devices to the TV and switch input modes to select an external device. For more information of external device's connection, refer to the manual provided with each device.

Available external devices are: HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices.

! NOTE

- The external device connection may differ from the model.
- Connect external devices to the TV regardless of the order of the TV port.
- If you record a TV program on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device.
- Refer to the external equipment's manual for operating instructions.
- If you connect a gaming device to the TV, use the cable supplied with the gaming device.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.
- In PC mode, some resolution settings may not work properly depending on the graphics card.
- If ULTRA HD content is played on your PC, video or audio may become disrupted intermittently depending on your PC's performance. (Depending on model)

Antenna connection

Connect the TV to a wall antenna socket with an RF cable (75 Ω).

- Use a signal splitter to use more than 2 TVs.
- If the image quality is poor, install a signal amplifier properly to improve the image quality.
- If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction.
- An antenna cable and converter are not supplied.
- Supported DTV Audio: MPEG, Dolby Digital, Dolby Digital Plus, HE-AAC
- For a location that is not supported with ULTRA HD broadcasting, this TV cannot receive ULTRA HD broadcasts directly. This TV cannot receive ULTRA HD (3840 x 2160 pixels) broadcasts directly because the related standards have not been confirmed. (Depending on model)

Satellite dish connection

(Only satellite models)

Connect the TV to a satellite dish to a satellite socket with a satellite RF cable (75 Ω).

Euro scart connection

(Depending on model)

Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the euro scart cable as shown.

Current input mode \ Output Type	AV1 (TV Out ¹)
Digital TV	Digital TV
Analogue TV, AV	Analogue TV
Component	
HDMI	

1 TV Out : Outputs Analogue TV or Digital TV signals.

- Any Euro scart cable used must be signal shielded.
- When watching digital TV in 3D imaging mode, only 2D out signals can be output through the SCART cable. (Only 3D models)
- If you use the Time Machine function on digital TV, TV out signals cannot be output through the SCART cable.

CI module Connection

(Depending on model)

View the encrypted (pay) services in digital TV mode.

- Check if the CI module is inserted into the PCMCIA card slot in the right direction. If the module is not inserted properly, this can cause damage to the TV and the PCMCIA card slot.
- If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Terrestrial/Cable/Satellite Service Operator.

USB Connection

Some USB Hubs may not work. If a USB device connected through a USB Hub is not detected, connect it directly to the USB port on the TV.

Other connections

Connect your TV to external devices. For the best picture and audio quality, connect the external device and the TV with the HDMI cable. Some separate cable is not provided.

-  →  →  → **Picture** → **HDMI ULTRA HD Deep Colour**

- **On** : Support 4K @ 50/60 Hz (4:4:4, 4:2:2, 4:2:0)
- **Off** : Support 4K @ 50/60 Hz (4:2:0)

If the device connected to Input Port also supports ULTRA HD Deep Colour, your picture may be clearer. However, if the device doesn't support it, it may not work properly. In that case, connect the device to a different HDMI port or change the TV's **HDMI ULTRA HD Deep Colour** setting to **Off**.

(This feature is available on certain models which are supported ULTRA HD Deep Colour only.)

Remote control

(Depending on model)


The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the $\oplus$ and $\ominus$ ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse.

CAUTION

- Do not mix old and new batteries, as this may damage the remote control.
- In Analogue TV and some countries, some remote control buttons may not work.
- The remote control will not be included for all sales market.

Make sure to point the remote control toward the remote control sensor on the TV.

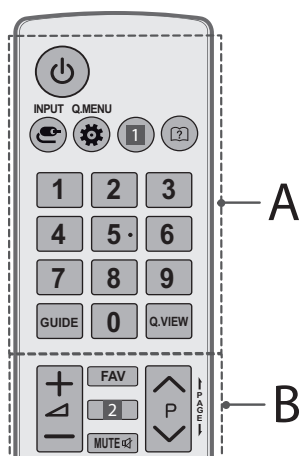

A

(POWER) Turns the TV on or off.

INPUT Changes the input source.

Q. MENU / (Q. Settings) Accesses the Quick Settings.

INFO Views the information of the current programme and screen. (Depending on model)

RATIO Resizes an image. (Depending on model)

(User Guide) Sees user- guide.

Number buttons Enters numbers.

GUIDE Shows programme guide.

Q.VIEW Returns to the previously viewed programme.

B

+/- Adjusts the volume level.

FAV Accesses your favourite programme list.


3D Used for viewing 3D video. (Depending on model)

INFO Views the information of the current programme and screen. (Depending on model)

MUTE Mutes all sounds.

P Scrolls through the saved programmes.

PAGE Moves to the previous or next screen.

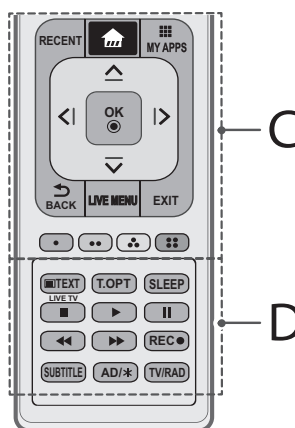

C

RECENT Shows the previous history.

(HOME) Accesses the Home menu.

MY APPS Shows the list of Apps.

Navigation buttons (up/down/left/right) Scrolls through menus or options.

OK Selects menus or options and confirms your input.

BACK Returns to the previous level.

LIVE MENU Shows the list of Programme, Search and Recorded.

EXIT Clears on-screen displays and returns to TV viewing.

Coloured buttons These access special functions in some menus.

(: Red, (: Green, (: Yellow, (: Blue)

D

Teletext buttons (**TEXT / T.OPT**) These buttons are used for teletext.

SLEEP Sets the sleep timer.

LIVE TV Returns to LIVE TV.

Control buttons (, , , ,) Controls the Premium contents, Time Machine or SmartShare menus or the SIMPLINK compatible devices (USB or SIMPLINK or Time Machine).

REC Starts to record and displays record menu. (Only Time Machine supported model)

SUBTITLE Recalls your preferred subtitle in digital mode.

AD/* By pressing the AD button, audio descriptions function will be enabled. (Depending on model)

TV/RAD Selects Radio, TV and DTV programme.

Magic remote functions


(Depending on model)

When the message "Magic remote battery is low. Change the battery." is displayed, replace the battery.

To replace batteries, open the battery cover, replace batteries (1.5 V AA) matching the and ends to the label inside the compartment, and close the battery cover. Be sure to point the magic remote toward the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse.

CAUTION

- Do not mix old and new batteries, as this may damage the remote control.
- In Analogue TV and some countries, some remote control buttons may not work.

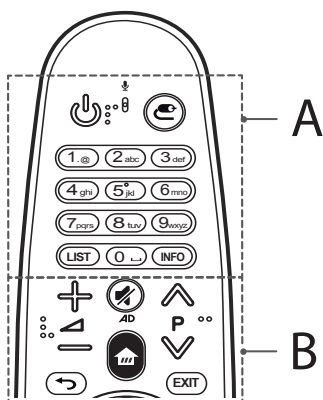

A

(**POWER**) Turns the TV on or off.

(**INPUT**) Changes the input source.

* Pressing and holding the button displays all the lists of external inputs.

Number buttons Enters numbers.

LIST Accesses the saved programmes list.

INFO Views the information of the current programmes and screen.

B

Adjusts the volume level.

Scrolls through the saved programmes.


(**MUTE**) Mutes all sounds.

* By Pressing and holding the button, video/audio descriptions function will be enabled. (Depending on model)

(**HOME**) Accesses the Home menu.

(**BACK**) Returns to the previous screen.

EXIT Clears on-screen displays and returns to Last Input viewing.

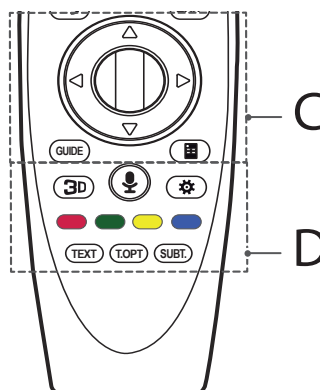

C

(**Wheel (OK)**) Press the center of the Wheel button to select a menu. You can change programmes by using the wheel button.

(**up/down/left/right**) Press the up, down, left or right button to scroll the menu. If you press buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.

GUIDE Shows programme guide.

(**Screen Remote**) Displays the Screen Remote.

* Accesses the Universal Control Menu. (Depending on model)

D

3D Used for viewing 3D video. (Only 3D models)

Voice recognition (Depending on model)

Network connection is required to use the voice recognition function.

- 1 Press the voice recognition button.
- 2 Speak when the voice display window appears on the TV screen.
 - Use the Magic Remote no further than 10 cm from your face.
 - The voice recognition may fail when you speak too fast or too slowly.
 - The recognition rate may vary depending on the user's characteristics (voice, pronunciation, intonation, and speed) and the environment (noise and TV volume).

Q. Settings Accesses the Quick Settings.

* Pressing and holding the **Q** button displays the **Advanced** menu.

Coloured buttons These access special functions in some menus.

(**Red**: Red, **Green**: Green, **Yellow**: Yellow, **Blue**: Blue)

Teletext buttons (TEXT, T.OPT) These buttons are used for teletext.

SUBT. Recalls your preferred subtitle in digital mode.

Registering magic remote

How to register the magic remote

To use the Magic Remote, first pair it with your TV.

- 1 Put batteries into the Magic Remote and turn the TV on.
- 2 Point the Magic Remote at your TV and press the **Wheel (OK)** on the remote control.

* If the TV fails to register the Magic Remote, try again after turning the TV off and back on.

How to deregister the magic remote

Press the **BACK** and **HOME** buttons at the same time, for five seconds, to unpair the Magic Remote with your TV.

* Pressing and holding the **EXIT** button will let you cancel and re-register Magic Remote at once.

How to use magic remote



- Shake the Magic Remote slightly to the right and left or press **HOME**, **INPUT**, **3D** buttons to make the pointer appear on the screen.
(In some TV models, the pointer will appear when you turn the **Wheel (OK)** button.)
- If the pointer has not been used for a certain period of time or Magic Remote is placed on a flat surface, then the pointer will disappear.
- If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen.
- The Magic Remote depletes batteries faster than a normal remote due to the additional features.

Precautions to take when using the magic remote

- Use the remote control within the specified range (within 10 m).
You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area.
- You may experience communication failures depending on the accessories.
Devices such as a microwave oven and wireless LAN operate in the same frequency band (2.4 GHz) as the Magic Remote. This may cause communication failures.
- The Magic Remote may not work properly if a wireless router (AP) is within 1 meter of the TV.
Your wireless router should be more than 1 m away from the TV.
- Do not disassemble or heat the battery.
- Do not drop the battery. Avoid extreme shocks to the battery.
- Inserting the battery in the wrong way may result in explosion.

Licenses

Supported licenses may differ by model. For more information about licenses, visit www.lge.com.



(Australia region only)



FreeviewPlus provides access to content and services from the Freeview networks. The FreeviewPlus service provides a 7 + day EPG, all available Catch Up TV, recommendations and the ability to set reminders and favourites. FreeviewPlus is available by pressing the green button on the remote.

* FreeviewPlus uses HbbTV technology which combines broadcast and broadband. It requires an internet connection. Normal data usage charges and conditions apply.

Open source software notice information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Troubleshooting

Cannot control the TV with the remote control.

- Check the remote control sensor on the product and try again.
- Check if there is any obstacle between the product and the remote control.
- Check if the batteries are still working and properly installed (⊕ to ⊕, ⊖ to ⊖).

No image display and no sound is produced.

- Check if the product is turned on.
- Check if the power cord is connected to a wall outlet.
- Check if there is a problem in the wall outlet by connecting other products.

The TV turns off suddenly.

- Check the power control settings. The power supply may be interrupted.
- Check if the **Automatic standby** (Depending on model) / **Sleep Timer** / **Timer Power Off** is activated in the **Timers** settings.
- If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity.

When connecting to the PC (HDMI), 'No signal' or 'Invalid Format' is displayed.

- Turn the TV off/on using the remote control.
- Reconnect the HDMI cable.
- Restart the PC with the TV on.

Specifications

Wireless module specification

- Because band channel used by the country could be different, the user can not change or adjust the operating frequency and this product is set for the regional frequency table.
- This device should be installed and operated with minimum distance 20 cm between the device and your body. And this phrase is for the general statement for consideration of user environment.

CE 0197

(Only UF69**, UF77**, UF85**, UF86**, UF94**, 79UF95**, UG87**)

Wireless module (LGSBW41) specification			
Wireless LAN		Bluetooth	
Standard	IEEE 802.11a/b/g/n	Standard	Bluetooth Version 4.0
Frequency Range	2400 to 2483.5 MHz 5150 to 5250 MHz 5725 to 5850 MHz (for Non EU)	Frequency Range	2400 to 2483.5 MHz
Output Power (Max.)	802.11a: 13 dBm 802.11b: 15 dBm 802.11g: 14 dBm 802.11n - 2.4 GHz: 16 dBm 802.11n - 5 GHz: 16 dBm	Output Power (Max.)	10 dBm or Lower

(Only 55/65UF95**)

Wireless module (LGSBW51) specification			
Wireless LAN		Bluetooth	
Standard	IEEE 802.11a/b/g/n/ac	Standard	Bluetooth Version 4.0
Frequency Range	2400 to 2483.5 MHz 5150 to 5250 MHz 5725 to 5850 MHz (for Non EU)	Frequency Range	2400 to 2483.5 MHz
Output Power (Max.)	802.11a: 14.5 dBm 802.11b: 14 dBm 802.11g: 13 dBm 802.11n - 2.4 GHz: 14 dBm 802.11n - 5 GHz: 15.5 dBm 802.11ac - 5 GHz: 16 dBm	Output Power (Max.)	10 dBm or Lower

CI Module ¹ (W x H x D)		100.0 mm x 55.0 mm x 5.0 mm
Environment condition	Operating Temperature	0 °C to 40 °C
	Operating Humidity	Less than 80 %
	Storage Temperature	-20 °C to 60 °C
	Storage Humidity	Less than 85 %

1 Only Satellite models.

	Digital TV (Depending on Country)	Analogue TV (Depending on Country)
Television system	DVB-T/T2 ¹ DVB-T/T2/C/S/S2 ²	PAL B/B, PAL B/G, PAL D/K, PAL-I, SECAM B/G, SECAM D/K, NTSC-M
Programme coverage	VHF, UHF C-Band ² , Ku-Band ²	VHF, UHF, CATV
Maximum number of storable programmes	DVB-T/T2 & Analogue TV : 1,500 DVB-S/S2 : 6,000	
External antenna impedance	75 Ω	

1 Only DVB-T2 support models. Despite DVB-T2 Model, DVB-T/T2 does not apply in Philippines.

2 Only DVB-T2/C/S2 support models.

ENGLISH

Environmental Information

(India region only)

Disposal of your old appliance (as per e-waste Rules)



1. When this crossed out wheeled bin symbol is depicted on the product and its operator's manual, it means the product is covered by the e-waste Management and Handling Rules, 2011 and are meant to be recycled, dismantled, refurbished or disposed off.

2. Dos

- The product is required to be handed over only to the authorized recycler for disposal.
- Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.

Don't

- The product should not be opened by the user himself/herself, but only by authorized service personnel.
 - The product is not meant for re-sale to any unauthorized agencies/scrap dealer/kabariwalah.
 - The product is not meant for mixing into household waste stream.
 - Do not keep any replaced spare part(s) from the product in exposed area.
3. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986.
4. Hazards of improper handling or accidental breakage:
- All picture tubes are hazardous due to concentration of lead, cadmium and zinc in it. The various chemicals and heavy metals contained in picture tubes cause cancer, birth defects, hormone disruption, and damage body organs when they leak into the environment. All of this can, and does, leach into the soil, ground water, air and our own bodies.
To prevent possible injury in case of breakage, wear heavy protective clothing, including gloves & safety goggles.
 - If batteries are disposed incorrectly, it can greatly harm the environment. The chemical by-products are hazardous. The metals and chemicals found in batteries can mix into soil which may be hazardous to humans, plants and animals. If thrown in fire, they can cause blast and release toxic gases which may be harmful for health.
5. To locate a nearest collection centre or call for pick-up (limited area only) for disposal of this appliance, please contact Toll Free No. 1800-180-9999 for details. All collection centre and pick up facilities are done by third parties with LG Electronics India Pvt. Ltd. merely as a facilitator. For more detailed information, please visit : <http://www.lge.com/in>

पर्यावरणीय जानकारी

आपके पुराने घरेलू उपकरण का निपटान (ई-अपशिष्ट निपटान नियमावली के अनुसार)



1. जब यह काटे गये पहिये वाले बिन का चिह्न किसी उत्पाद और इसके प्रचालक पुस्तिका के साथ संलग्न होता है, तो इसका अर्थ है, उत्पाद ई-अपशिष्ट (प्रबंधन और हथालन) नियम २०११ के अन्तर्गत, सम्मिलित किया गया है। इस नियम के अनुसार उत्पाद को पुनः नवीनीकरण, ध्वस्त या निपटाना चाहिए।

2. इसे करें

- उत्पाद को केवल अधिकृत पुनः नवीनीकरणकर्ता को निपटान हेतु हस्तान्तरित करें।
- उत्पाद कार्यात्मक ना रहे तो, उत्पाद को पृथक क्षेत्र में रखें, जिससे उत्पाद आकस्मिक क्षति से बच सके।

इसे न करें

- उत्पाद को उपभोक्ता स्वयं नहीं खोलें, बल्कि अधिकृत सेवा कर्मचारी द्वारा खुलवायें।
 - उत्पाद को किसी अनधिकृत एजेंसी/पुराने सामान के डीलर/कबाड़ी वाले को फिर से न दें।
 - उत्पाद को घरेलू अपशिष्ट धारा के साथ न मिलाएँ।
 - उत्पाद के बदले हुए या अतिरिक्त पूजों को खुली जगह में न रखें।
3. उत्पाद को किसी भी अनधिकृत एजेंसी/व्यक्ति द्वारा निपटान कराने पर, पर्यावरण (संरक्षण) अधिनियम १९८६, के तहत कार्यवाही हो सकती है।
4. गलत ढंग से रखरखाव या आकस्मिक टूट-फूट के खतरे:
- लीड, कैडमियम व जिंक की मौजूदगी के कारण सभी पिकचर ट्यूब खतरनाक होती है। पिकचर ट्यूब में विभिन्न रसायनों तथा भारी धातुओं की मौजूदगी के कारण वातावरण में इनके रिसाव से कैंसर, जन्म दोष, हार्मोन विघटन, और शरीर के अंगों को नुकसान हो सकता है। ये सभी रसायन मिट्टी में, भू-गर्भ जल में, हवा में घूल कर हमारे शरीर में प्रवेश कर सकते हैं।
 - यदि बैटरियों का गलत ढंग से निपटान किया जाता है, तो इससे पर्यावरण को काफी अधिक नुकसान हो सकता है। रासायनिक उप-उत्पाद खतरनाक होते हैं। बैटरियों में पाए जाने वाली धातुएँ व रसायन मिट्टी में मिल सकते हैं जोकि मनुष्यों, पेड़-पौधों तथा जानवरों के लिए खतरनाक हो सकते हैं। यदि आग में फँके जाते हैं, तो वे विस्फोट कर सकते हैं तथा जहरीली गैसों को छोड़ सकते हैं जोकि स्वास्थ्य के लिए हानिकारक हो सकती हैं।
5. इस उत्पाद के निपटारण हेतु या फिर नजदीकी संग्रह केन्द्र का पता लगाने के लिए, कृपया टोल फ्री नम्बर १८००-१८०-९९९९ (सीमित क्षेत्र में उपलब्ध) पर सम्पर्क करें। सभी संग्रह केन्द्र एवं पिक-अप सुविधाएं बाहरी एजेंसी द्वारा चलायी जाती हैं। LG Electronics India Pvt. Ltd. सिर्फ सुविधा प्रदान कराने का माध्यम है।
- अधिक जानकारी के लिए वेबसाइट देखें: <http://www.lge.com/in>



บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง โดยอ้างอิง
จากฉลากหลังเครื่อง เพื่อความสะดวกในการติดต่อ
ตัวแทนจำหน่ายเพื่อรับบริการอื่น ๆ ต่อไป

Record the model number and serial number of the TV.
Refer to the label on the back cover and quote this
information to your dealer when requiring any service.

ชื่อรุ่น / MODEL _____

หมายเลข
ประจำเครื่อง / SERIAL _____

(เฉพาะดิจิตอลทีวีเท่านั้น)
(Only DTV)

DVB[®]
Digital Video
Broadcasting