




ไทย
ENGLISH

คู่มือการใช้
User Guide

LG G2 *mini* ^{3G Dual}
LG-D618

คู่มือการใช้

- ภาพหน้าจอและภาพประกอบอาจแตกต่างจากที่คุณพบในโทรศัพท์จริง
- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับโทรศัพท์ ซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ ข้อมูลทั้งหมดในเอกสารนี้เปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า
- โทรศัพท์รุ่นนี้ไม่เหมาะสำหรับผู้พิการทางสายตาเนื่องจากมีแป้นพิมพ์บนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2015 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ และ Play Store™ เป็นเครื่องหมายการค้าของ Google, Inc.

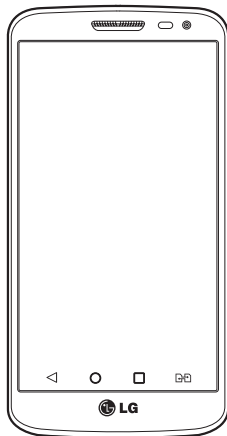

สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ..... 5	โทรศัพท์ 34
ข้อความประกาศสำคัญ 11	Wi-Fi Direct..... 35
เริ่มทำความรู้จักกับโทรศัพท์ของคุณ..... 16	SmartShare..... 35
ภาพรวมโทรศัพท์ 16	เฟลิดเฟลิกกับเนื้อหาจากอุปกรณ์ ข้างเคียง 36
การใส่ซิมการ์ดและแบตเตอรี่ 18	การเชื่อมต่อคอมพิวเตอร์ด้วย สายเคเบิล USB..... 36
การชาร์จโทรศัพท์..... 20	การโทร 38
การใส่การ์ดหน่วยความจำ..... 21	การโทรออก 38
การล็อคและปลดล็อคหน้าจอ..... 23	การโทรออกโดยใช้รายชื่อ..... 38
หน้าจอหลักของคุณ 24	การรับสายและการปฏิเสธ สายเรียกเข้า..... 38
เคล็ดลับสำหรับหน้าจอสัมผัส 24	การปรับระดับเสียงสนทนา 38
หน้าจอหลัก 24	การใช้สายที่สอง 39
หน้าจอหลักย่อย 25	การดูบันทึกการโทร 39
การปรับแต่งหน้าจอหลัก 26	ตั้งค่าการโทร..... 39
การกลับไปแอปพลิเคชันที่เพิ่งใช้ ล่าสุด..... 26	รายชื่อ..... 40
พาเนลการแจ้งเตือน 27	การค้นหารายชื่อ 40
การใช้ซิมคู่..... 27	การเพิ่มรายชื่อใหม่..... 40
การเปิดพาเนลการแจ้งเตือน 28	รายชื่อเพื่อนสนิท 40
ไอคอนสัญลักษณ์บนแถบสถานะ 28	การสร้างกลุ่ม..... 41
เมนูพิมพ์บนหน้าจอ..... 30	ข้อความ..... 42
การป้องกันตัวอักษรที่ใช้สำหรับเน้นเสียง ...30	การส่งข้อความ 42
การตั้งค่าบัญชี Google 31	กล่องเรด 42
การตั้งค่าบัญชี Google ของคุณ 31	การเปลี่ยนการตั้งค่าข้อความ อัตโนมัติ 43
การเชื่อมต่อกับเครือข่ายและอุปกรณ์.... 32	อีเมล 44
Wi-Fi 32	การจัดการแอคเคาท์อีเมล..... 44
การเชื่อมต่อกับเครือข่าย Wi-Fi 32	การทำงานกับโฟลเดอร์แอคเคาท์..... 44
การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi..... 32	การเขียนและส่งอีเมล 44
Bluetooth 33	กล้องถ่ายรูป..... 45
การแบ่งปันการเชื่อมต่อข้อมูลใน	

ทำควมรู้จักกับช่องมองภาพ	45	การเพิ่มเหตุการณ์ลงในปฏิทิน.....	62
การใช้การตั้งค่าขั้นสูง.....	46	บันทึกเสียง.....	63
การถ่ายภาพด่วน	47	การบันทึกเสียงหรือเสียงพูด	63
การใช้โหมด Time catch shot.....	47	การทำงาน.....	63
เมื่อคุณถ่ายภาพแล้ว.....	47	ThinkFree Viewer.....	64
กล้องวิดีโอ	49	Google+	64
ทำควมรู้จักกับช่องมองภาพ	49	ค้นหาด้วยเสียง	64
การใช้การตั้งค่าขั้นสูง.....	50	ดาวน์โหลด.....	64
การบันทึกวิดีโออย่างรวดเร็ว	50	LG SmartWorld	65
หลังการบันทึกวิดีโอ.....	51	วิธีการเข้าสู่ LG SmartWorld	
ฟังก์ชัน.....	52	จากโทรศัพท์ของคุณ.....	65
Knock Code.....	52	วิธีการใช้ LG SmartWorld	65
QuickMemo+	52	เว็บไซต์	66
การใช้ตัวเลือก QuickMemo+	53	อินเทอร์เน็ต.....	66
การดู QuickMemo+ ที่บันทึกไว้	54	การใช้แถบเครื่องมือเว็บ.....	66
QSlide	54	การดูเว็บเพจ.....	66
QuickRemote	55	การเปิดเพจ	66
การลบภาพถ่าย/วิดีโอ.....	57	การค้นหาเว็บด้วยเสียง	67
การตั้งค่าเป็นภาพพื้นหลัง	58	บุ๊กมาร์ค.....	67
ประวัติ.....	67	ประวัติ.....	67
การดูรูปภาพ	57	Chrome	67
การเล่นวิดีโอ.....	57	การดูเว็บเพจ.....	67
การแก้ไขภาพถ่าย.....	57	การเปิดเพจ	67
การเล่นภาพถ่าย/วิดีโอ.....	57	ตั้งค่า.....	68
การตั้งค่าเป็นภาพพื้นหลัง	58	เครือข่าย.....	68
วิดีโอ	58	เสียง.....	70
การเล่นวิดีโอ.....	58	หน้าจอ.....	72
เพลง	59	ทั่วไป.....	73
การเล่นเพลง.....	59	ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite) .	77
เพิ่มไฟล์เพลงในโทรศัพท์ของคุณ	60	อัปเดตซอฟต์แวร์โทรศัพท์.....	79
วิทยุ FM	61	อัปเดตซอฟต์แวร์โทรศัพท์.....	79
ยูทิลิตี้.....	62	เกี่ยวกับคู่มือผู้ใช้นี้	80
การตั้งเวลาการปลุก.....	62		
การใช้เครื่องคิดเลข.....	62		

สารบัญ

เกี่ยวกับคู่มือผู้ใช้.....	80
เครื่องหมายการค้า	80
DivX HD.....	80
Dolby Digital Plus	81
อุปกรณ์เสริม	82
การแก้ปัญหา.....	83
คำถามที่พบบ่อย	86

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

ในกรณีที่เกิดความผิดพลาด เครื่องมือซอฟต์แวร์ที่อยู่ในอุปกรณ์ของคุณจะเก็บรวบรวมบันทึกความผิดพลาด

เครื่องมือนี้รวบรวมเฉพาะข้อมูลเกี่ยวกับความผิดพลาด เช่น ความแรงของ สัญญาณ ตำแหน่ง ID เซลล์ในกรณีสายหลุด และแอปพลิเคชันที่โหลด บันทึกจะถูกใช้เพื่อช่วยในการตรวจสอบสาเหตุของความผิดพลาดเท่านั้น บันทึกเหล่านี้จะถูกเข้ารหัสและสามารถเข้าถึงได้โดยศูนย์บริการ LG ที่ได้รับอนุญาตเท่านั้น ในกรณีที่คุณต้องส่งคืนอุปกรณ์เพื่อซ่อมแซม

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์มือถือรุ่น LG-D618 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่อง ความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักการทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่า เพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate (SAR) การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อของร่างกายที่หนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบขณะถือแนบกับหูคือ 0.361 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.460 วัตต์/กก. (10 กรัม)
- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปยึดเข็มขัดหรือที่ใส่โทรศัพท์ เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะ และควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์



คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสิทธิของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น ทีวี วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบ่งชี้พิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอลดด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

- ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซม แก้วที่แตก มีรอยแตก หรือร้าว ความเสียหายของ หน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้ การรับประกัน
- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิว โดยตรงเป็นเวลานานโดยไม่มีการระบายอากาศหรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือ เกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการ ใช้การ
- หากโทรศัพท์ของคุณเปียกน้ำ ให้ถอดปลั๊กทันทีเพื่อให้เครื่องแห้งสนิท ห้ามทำให้อุปกรณ์แห้งเร็ว ขึ้นโดยใช้แหล่งความร้อนภายนอก เช่น เตาอบ เตาไมโครเวฟ หรือเครื่องเป่าผม
- ของเหลวในโทรศัพท์ที่เปียกน้ำจะเปลี่ยนสีของฉลากผลิตภัณฑ์ในโทรศัพท์ ความเสียหายของ อุปกรณ์ที่เป็นผลมาจากการสัมผัสกับของเหลวจะไม่ได้รับครอบคลุมภายใต้การรับประกัน

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องอาจได้รับผลจากคลื่นรบกวนได้ ทำให้มีผลต่อการทำงาน

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวาง โทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์มือถือบางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย
- ใช้โทรศัพท์ของคุณในช่วงอุณหภูมิ 0°C และ 40°C หากเป็น ไปได้ การปล่อยให้โทรศัพท์อยู่ใน อุณหภูมิเย็นจัดหรือร้อนจัด อาจทำให้เกิดความเสียหายทางานผิดพลาด หรือระเบิดได้

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับชั้ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พนักงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน



เพื่อป้องกันการทำลายความสามารถในการได้ยินที่อาจเกิดขึ้นได้ ห้ามฟังเสียงที่ดังมากเป็นเวลานาน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้นเราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆคุณได้ยินสิ่งที่คุณกำลังฟัง

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟัง และชุดหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์มือถือของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งก่อนที่จะต้องเปลี่ยนก่อนใหม่

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจลดลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่างทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับการกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ ตะปู สัมผัสกับแบตเตอรี่ ซึ่งอาจก่อให้เกิดไฟไหม้ได้

คำประกาศรับรอง

ดังนั้น **LG Electronics** ขอประกาศว่าผลิตภัณฑ์ **LG-D618** เป็นไปตาม

ข้อกำหนดที่จำเป็น และข้อกำหนดที่เกี่ยวข้องอื่นๆ ของ Directive **1999/5/EC**

คุณสามารถดูสำเนาของคำประกาศรับรองได้ที่ <http://www.lg.com/global/declaration>

ข้อความประกาศสำคัญ



โปรดอ่านข้อความนี้ก่อนที่คุณจะเริ่มใช้งานโทรศัพท์!

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์ และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การถอนการติดตั้งแอปพลิเคชัน:

- 1 และ  >  > แอป > ตั้งค่า > แอป ทั้งหมด > แอปฯ
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
- 3 และ ถอนการติดตั้ง



2. การยืดอายุแบตเตอรี่

ยืดพลังงานแบตเตอรี่โดยการปิดคุณสมบัติที่คุณไม่ได้ให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่ของโทรศัพท์:

- ปิดการสื่อสารทางสัญญาณวิทยุเมื่อคุณไม่ได้ใช้ ปิด Wi-Fi, Bluetooth หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าใหม่เอาต์หน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- แอปพลิเคชันที่คุณดาวน์โหลดบางแอปพลิเคชันอาจลดกำลังไฟแบตเตอรี่
- ขณะใช้แอปพลิเคชันที่ดาวน์โหลดมา ให้ตรวจสอบระดับประจุแบตเตอรี่



การตรวจสอบระดับกำลังไฟแบตเตอรี่:

- และ  >  > แอป > ตั้งค่า > แอป ทั้งหมด > เกี่ยวกับโทรศัพท์ > ร่วมกัน > แบตเตอรี่

สถานะแบตเตอรี่ (กำลังชาร์จหรือกำลังคายประจุ) และระดับแบตเตอรี่ (เปอร์เซ็นต์ที่ชาร์จ) จะแสดงที่ด้านบนของหน้าจอ

ข้อความประกาศสำคัญ

การตรวจสอบและควบคุมการใช้กำลังไฟแบตเตอรี่:

- และ  >  > แتب แอปฯ > ตั้งค่า > แتب ทัวไป > เกี่ยวกับโทรศัพท์ > ร่วมกัน > แบตเตอรี่ > การใช้แบตเตอรี่

เวลาในการใช้แบตเตอรี่จะปรากฏขึ้นบนหน้าจอ โดยแสดงระแวงเวลานับจากที่คุณเชื่อมต่อโทรศัพท์กับแหล่งจ่ายไฟครั้งสุดท้าย หรือหากเชื่อมต่ออยู่ในขณะนี้ จะแสดงระแวงเวลานับจากที่โทรศัพท์ใช้พลังงานจากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้กำลังไฟแบตเตอรี่ โดยเรียงลำดับตามปริมาณที่ใช้จากมากไปน้อย

3. ก่อนการติดตั้งแอปพลิเคชันและ OS โอเพ่นซอร์ส



คำเตือน



หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากของผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้ นอกจากนี้ โทรศัพท์ของคุณจะไม่ได้ได้รับความคุ้มครองตามการรับประกัน



คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Play Store™ เท่านั้น หากมีการติดตั้งแอปพลิเคชันไม่ถูกต้องในโทรศัพท์ โทรศัพท์อาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น และข้อมูลและการตั้งค่าที่เกี่ยวข้องทั้งหมดออกจากโทรศัพท์

4. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ของคุณ และ  >  > แتب แอปฯ > ตั้งค่า > แتب หน้าจอ > ล็อคหน้าจอ > เลือกแบบล็อคหน้าจอ > รูปแบบ ซึ่งจะเปิดหน้าจอที่แนะนำคุณสำหรับวิธีการวาดแบบปลดล็อคหน้าจอ คุณจะต้องสร้างแป้นคีย์ PIN เป็นมาตรการความปลอดภัยในกรณีที่คุณลืมแบบปลดล็อค

ข้อควรระวัง: สร้างบัญชี Google ก่อนทำการตั้งค่าแบบปลดล็อค และจำแป้นคีย์ PIN ที่คุณได้สร้างไว้เมื่อสร้างล็อคแบบ



คำเตือน

ข้อควรระวังเมื่อใช้ล็อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้ หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสเพียง 5 ครั้ง ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืมรูปแบบ, PIN หรือรหัสผ่านการปลดล็อคของคุณ:

< หากคุณลืมแบบของคุณ >

หากคุณล็อกอินบัญชี Google ในโทรศัพท์แต่ป้อนรูปแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม **ลืมแบบ?** ที่ด้านล่างของหน้าจอ จากนั้น คุณจะต้องล็อกอินบัญชี Google ของคุณ หรือคุณต้องป้อนแม่คีย์ PIN ที่คุณได้ป้อนไว้เมื่อสร้างล็อคแบบ หากคุณไม่ได้สร้างบัญชี Google บนโทรศัพท์ หรือคุณลืมแม่คีย์ PIN คุณต้องทำการ Hard Reset

< หากคุณลืม PIN หรือรหัสผ่านของคุณ >

หากคุณลืม PIN หรือรหัสผ่านของคุณ คุณจะต้องทำ Hard Reset

ข้อควรระวัง: หากคุณทำ Hard Reset แอปพลิเคชันผู้ใช้และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ

หมายเหตุ: หากคุณยังไม่ได้ล็อกอินบัญชี Google ของคุณและลืมแบบปลดล็อค คุณจะต้องป้อนแม่คีย์ PIN ของคุณ

5. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณไม่สามารถแก้ไขสภาวะเดิมได้ ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่มต้นของโทรศัพท์

- 1 ปิดเครื่อง
- 2 กด **ปุ่มเปิด/ปิด/ล็อค + ปุ่มลดระดับเสียง** ของโทรศัพท์ค้างไว้
- 3 ปลดปล่อย **ปุ่มเปิด/ปิด/ล็อค** เมื่อเห็นโลโก้ LG แสดงขึ้น จากนั้นกด **ปุ่มเปิด/ปิด/ล็อค** ค้างไว้อีกครั้งทันที
- 4 ปลดปล่อยปุ่มทั้งหมดเมื่อหน้าจอ Factory Data Reset ปรากฏขึ้น
- 5 กด **ปุ่มปรับระดับเสียง** เพื่อเลื่อนไปยังตัวเลือกที่ต้องการ แล้วกด **ปุ่มเปิด/ปิด/ล็อค** เพื่อยืนยัน

ข้อความประกาศสำคัญ



คำเตือน


หากคุณดำเนินการ Hard Reset แอปพลิเคชันของผู้ใช้, ข้อมูลผู้ใช้ และใบอนุญาต DRM ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

6. การเปิดและการสลับแอปพลิเคชัน

มันดีทาสกึ่งเป็นเรื่องง่ายใน Android คุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกัน โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช้ทรัพยากรโดยไม่จำเป็น

- 1 และ **ปุ่มแอปพลิเคชันล่าสุด** รายการแอปพลิเคชันที่ใช้ล่าสุดจะปรากฏขึ้น
 - 2 และแอปพลิเคชันที่คุณต้องการใช้งาน ซึ่งจะไม่เป็นการหยุดการรันของแอปพลิเคชันก่อนหน้านี้ในแบ็คกราวด์ของโทรศัพท์ อยุ่ลิมิตและ **ปุ่มย้อนกลับ** เพื่อออกจากแอปพลิเคชันหลังการใช้งาน
- ในการหยุดการทำงานของแอปพลิเคชัน ให้แตะ **จัดการแอปฯ** จากรายการแอปพลิเคชันที่ใช้ล่าสุด จากนั้นแตะ **หยุด** หรือ **หยุดทั้งหมด**
 - ในการลบแอปพลิเคชันจากรายการแอปพลิเคชันที่ใช้ล่าสุด ให้ลากตัวอย่างแอปพลิเคชันไปทางซ้ายหรือขวา หากต้องการลบแอปพลิเคชันทั้งหมด ให้แตะ **ลบทั้งหมด**

7. การถ่ายโอนเพลง ภาพถ่าย และวิดีโอโดยใช้อุปกรณ์มีเดีย (MTP)

- 1 และ >  > แท็บ **แอปฯ** > **ตั้งค่า** > แท็บ **ทั่วไป** > **ที่เก็บข้อมูล** เพื่อตรวจสอบสื่อบันทึกข้อมูล
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 เลื่อนแถบสถานะลงแล้วเลือกตัวเลือก **อุปกรณ์สื่อ (MTP)**
- 4 เปิดไฟล์เดสก์ทอปหน่วยความจำบนคอมพิวเตอร์ คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณ และโอนไฟล์จากคอมพิวเตอร์ไปยังไฟล์เดสก์ทอปหน่วยความจำอุปกรณ์ หรือสลับกัน

8. ถือโทรศัพท์ตั้งขึ้น

ถือโทรศัพท์มือถือแนวตั้งเหมือนกับโทรศัพท์ทั่วไป โทรศัพท์ของคุณมีเสาอากาศภายใน รัศมีระว่าง
อย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่บริเวณด้านหลังเครื่อง เนื่องจากอาจส่งผลกระทบต่อประสิทธิภาพ
การทำงาน

เมื่อทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล ให้หลีกเลี่ยงการถือบริเวณส่วนล่างของโทรศัพท์
ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ การทำดังกล่าวส่งผลกับคุณภาพการโทร

9. เมื่อน้ำจอด่าง

หากหน้าจอด่างหรือโทรศัพท์ไม่ตอบสนองเมื่อคุณพยายามใช้งาน:
กดปุ่ม **เปิด/ปิด/ล็อค** ค้างไว้เป็นเวลา 10 วินาทีเพื่อปิดโทรศัพท์ของคุณ
หากยังไม่สามารถแก้ไขปัญหาก็ได้ โปรดติดต่อศูนย์บริการ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ภาพรวมโทรศัพท์

หูฟัง

เซนเซอร์หน้าจอล

ปุ่มหน้าหลัก


กลับไปยังหน้าจอหลัก
จากหน้าจอใดๆ

ปุ่มย้อนกลับ

- กลับไปยังหน้าจอก่อนหน้านี้
- ออกจากแอปพลิเคชันหลังจกการใช้งาน

ปุ่มแอปพลิเคชันล่าสุด

แสดงแอปพลิเคชันที่ใช้งานล่าสุด
ถ้าคุณแตะปุ่มนี้ค้างไว้ จะเป็นการ
เปิดเมนูตัวเลือกที่มีให้เลือก

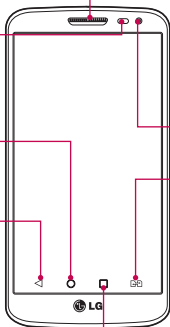

เลนส์กล้องถ่ายรูปด้านหน้า

ปุ่มสลับซิม

แตะปุ่มสำหรับการเลือกซิม1/ซิม2
(ซิมที่เลือกจะมีเครื่องหมายกล้อง
สีเหลี่ยมบนไอคอน RSSI)
แตะปุ่มค้างเพื่อไปที่ ตั้งค่าซิมคู่

หมายเหตุ: เซนเซอร์หน้าจอล

เมื่อรับสายหรือโทรออก เซนเซอร์หน้าจอลจะปิดไฟหน้าจอลโดยอัตโนมัติ และล็อกหน้าจอลสัมผัสโดยการรับรู้เมื่อโทรศัพท์ที่อยู่ใกล้หู วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้คุณเปิดใช้หน้าจอลสัมผัสโดยไม่ได้ตั้งใจขณะโทรศัพท์




คำเตือน


การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอลสัมผัสเสียหายได้ อยู่ยปิดเซนเซอร์หน้าจอล LCD ด้วยฟิล์มป้องกัน เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้

ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก:
ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย:
ควบคุมระดับเสียงหูฟัง
- ขณะเล่นเพลง:
ควบคุมระดับเสียงต่อเนื่อง

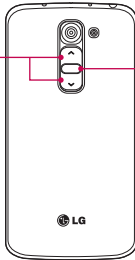

ปุ่มเปิด/ปิด/ล็อค

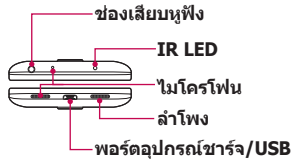

ช่องเสียบหูฟัง

IR LED

ไมโครโฟน

ลำโพง

พอร์ตอุปกรณ์ชาร์จ/USB


SIM1/micro SD cards slot

(ช่องด้านบนสำหรับ micro SD และ ช่องด้านล่างสำหรับ SIM1)

แฟลช

เลนส์กล้อง

ช่องใส่ SIM2

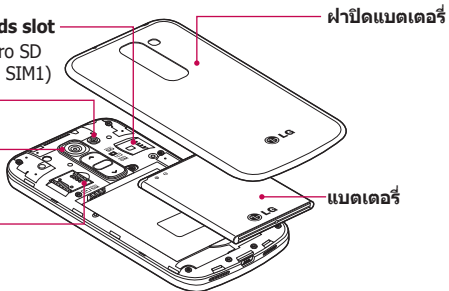

ฝาปิดแบตเตอรี่


แบตเตอรี่

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ ในการใส่ซิมการ์ดและแบตเตอรี่


- 1 ในการถอดฝาปิดแบตเตอรี่ ให้จับโทรศัพท์ไว้อย่างมั่นคงด้วยมือข้างเดียว ใช้มือข้างหนึ่งของคุณ ดึงฝาปิดแบตเตอรี่ออกด้วยนิ้วชี้ของคุณตามที่แสดงไว้ในภาพ

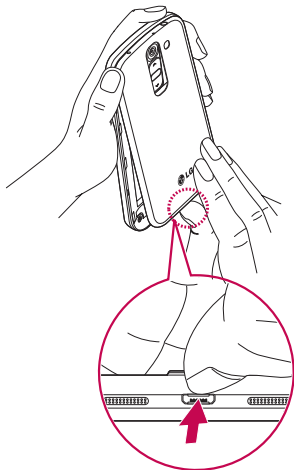

- 2 เลื่อนซิมการ์ดเข้าไปในช่องเสียบดังแสดงในภาพ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดติดคว่ำลง

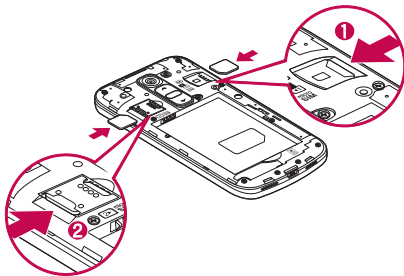


- 3 ใส่แบตเตอรี่ให้เข้าที่โดยวางหน้าสัมผัสสีทองบนโทรศัพท์ให้เป็นแนวเดียวกับแบตเตอรี่ (1) และค่อยๆ กดลงจนกว่าจะแน่นเข้าที่ (2)

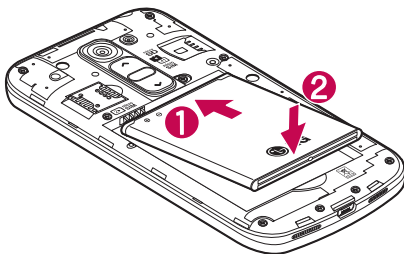

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

4 วางฝาปิดแบตเตอรี่บนช่องใส่แบตเตอรี่ (1) และกดลงจนกระทั่งแน่นเข้าที่ (2)

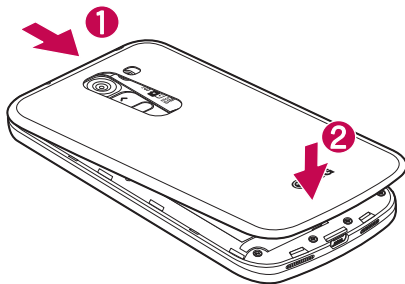

การชาร์จโทรศัพท์


ชาร์จแบตเตอรี่ก่อนการใช้งานครั้งแรก ชาร์จแบตเตอรี่ด้วยอุปกรณ์ชาร์จ สามารถชาร์จอุปกรณ์ด้วยคอมพิวเตอร์ได้ โดยเชื่อมต่อผ่านสายเคเบิล USB



คำเตือน

ใช้อุปกรณ์ชาร์จ แบตเตอรี่ และสายเคเบิลที่ได้รับการรับรองจาก LG เท่านั้น หากใช้อุปกรณ์ชาร์จหรือสายเคเบิลที่ไม่ได้รับการรับรอง อาจทำให้การชาร์จแบตเตอรี่ล่าช้า หรือมีข้อความปลอดภัยเกี่ยวกับการชาร์จซ้ำปรากฏขึ้น หรือ อาจทำให้แบตเตอรี่ระเบิดหรือทำให้อุปกรณ์ได้รับความเสียหาย ซึ่งจะไม่ได้รับความคุ้มครองตามการรับประกัน

ช่องเสียบอุปกรณ์ชาร์จอยู่ทางด้านล่างของโทรศัพท์ เสียบอุปกรณ์ชาร์จ และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ

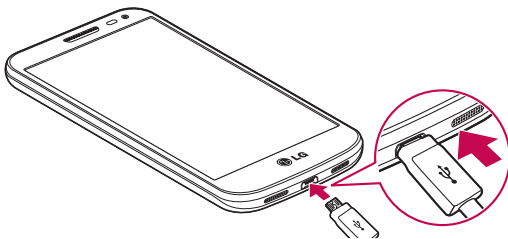

หมายเหตุ:

- แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่
- ห้ามเปิดฝาคอร์ด่านหลังขณะโทรศัพท์ของคุณกำลังชาร์จ


การใช้การ์ดหน่วยความจำ

โทรศัพท์ของคุณสนับสนุนการ์ดหน่วยความจำ microSD™ หรือ microSDHC™ ความจุสูงสุด 32GB การ์ดหน่วยความจำเหล่านี้ ออกแบบมาโดยเฉพาะสำหรับโทรศัพท์มือถือและอุปกรณ์ที่มีขนาดเล็กมากอื่นๆ และเหมาะสำหรับจัดเก็บไฟล์มีเดีย เช่น เพลง โปรแกรม วิดีโอ และภาพถ่ายสำหรับใช้กับโทรศัพท์ของคุณ


ในการใส่การ์ดหน่วยความจำ:

ใส่การ์ดหน่วยความจำลงในช่องเสียบ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสทองคว่ำลง

การถอดการ์ดหน่วยความจำออกอย่างปลอดภัย:

แตะ  > แท็บ แอปฯ > ตั้งค่า > แท็บ ทั่วไป > ที่เก็บข้อมูล > ยกเลิกการต่อเชื่อมการ์ด SD

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

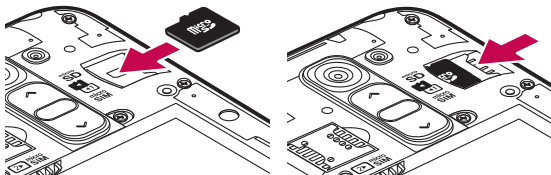

หมายเหตุ:

- ใช้งานเฉพาะการ์ดหน่วยความจำที่ใช้งานร่วมกันได้กับโทรศัพท์ของคุณเท่านั้น การใช้การ์ดหน่วยความจำที่ไม่สามารถใช้งานร่วมกันได้ อาจทำให้การ์ดและข้อมูลที่จัดเก็บไว้บนการ์ดรวมถึงโทรศัพท์เสียหายได้
- เนื่องจากอุปกรณ์ใช้ FAT32 ขนาดสูงสุดของไฟล์คือ 4 GB




คำเตือน

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ การทำดังกล่าวอาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ดหน่วยความจำอาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ:

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำก่อนจึงจะสามารถใช้งานการ์ดได้

หมายเหตุ: ไฟล์ทั้งหมดในการ์ดหน่วยความจำจะถูกลบออกเมื่อฟอร์แมต

- 1 และ  เพื่อเปิดรายการแอปพลิเคชัน
- 2 เลื่อนและแตะที่ **ตั้งค่า > แท็บ ทัวไป > ที่เก็บข้อมูล**
- 3 และ **ยกเลิกการต่อเชื่อมการ์ด SD**
- 4 และ **ลบการ์ด SD > ลบการ์ด SD > ลบทุกสิ่ง**
- 5 หากคุณตั้งค่าล๊อคแบบ ให้ป้อนข้อมูลล๊อคแบบ แล้วเลือก **ลบทุกสิ่ง**

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดืออาจจะแตกต่างไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

การล็อกและปลดล็อกหน้าจอ

หากคุณไม่ได้ใช้โทรศัพท์ช่วงหนึ่ง หน้าจอจะปิดและล็อกโดยอัตโนมัติ ซึ่งจะช่วยป้องกันการแตะโดยไม่ตั้งใจและประหยัดพลังงานแบตเตอรี่

ในขณะที่คุณไม่ได้ใช้งานโทรศัพท์ ให้กด **ปุ่มเปิด/ปิด/ล็อก** เพื่อล็อกโทรศัพท์ของคุณ

หากมีโปรแกรมกำลังทำงานอยู่เมื่อคุณล็อกหน้าจอของคุณ โปรแกรมเหล่านั้นอาจยังคงทำงานอยู่ในโหมดล็อก ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อก เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าใช้เว็บ และการสื่อสารข้อมูล)

ในการทำให้โทรศัพท์ของคุณใช้งานได้ ให้กด **ปุ่มเปิด/ปิด/ล็อก** หน้าจอล็อกจะปรากฏขึ้น และและเลื่อนล็อกหน้าจอไปในทิศทางใดๆ เพื่อปลดล็อกหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

หน้าจอล็อกของคุณ

เคล็ดลับสำหรับหน้าจอล็อก

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธีที่นาฬิกาเกิดโทรศัพท์ของคุณ
แตะหรือสัมผัส – การใช้หนึ่งนิ้วแตะเพื่อเลือกรายการ ลิงค์ ข้อตักซ์
และตัวอักษรบนแป้นพิมพ์บนหน้าจอ

แตะค้าง – แตะรายการบนหน้าจอล็อกค้างไว้ โดยให้แตะโดยไม่ตอ้งยกนิ้วขึ้นจนกว่าการดำเนินการจะเกิดขึ้น ตัวอย่างเช่น หากต้องการเปิดตัวเลือกที่มีอยู่ของรายชื่อ ให้แตะที่รายชื่อในรายการรายชื่อค้างไว้จนกว่าเมนูสลับจะเปิดขึ้น

ลาก – แตะรายการค้างไว้ชั่วคราวหนึ่ง จากนั้นเลื่อนนิ้วของคุณบนหน้าจอล็อกจนกว่าจะไปถึงตำแหน่งเป้าหมาย คุณสามารถลากรายการบนหน้าจอล็อกของคุณเพื่อจัดตำแหน่งใหม่ได้

ปิดหรือเลื่อน – ในการปิดหรือเลื่อน ให้เลื่อนนิ้วของคุณผ่านพื้นผิวของหน้าจอล็อกอย่างรวดเร็ว โดยไม่หยุดพักหลังจากที่แตะครั้งแรก (เพื่อไม่ให้กลายเป็นการลากแทน) ตัวอย่างเช่น คุณสามารถเลื่อนหน้าจอล็อกขึ้นหรือลงเพื่อเลื่อนดูรายการ หรือเรียกดูหน้าจอล็อกหลักต่างๆ ได้ โดยการปิดจากซ้ายไปขวา (และตรงกันข้าม)

แตะสองครั้ง – แตะสองครั้งเพื่อซูมเว็บเพจหรือแผนที่ เช่น แตะสองครั้งอย่างรวดเร็วที่ส่วนหนึ่งของเว็บเพจ เพื่อปรับส่วนนั้นให้พอดีกับความกว้างของหน้าจอ คุณสามารถแตะสองครั้งเพื่อซูมเข้าและออกได้เช่นกันขณะที่ดูภาพ


กางหุบนิ้วเพื่อซูม – ใช้นิ้วชี้และนิ้วโป้งของคุณในการเลื่อนเข้าหากันหรือเลื่อนออกจากกันเพื่อซูมเข้าหรือออกขณะใช้งานบราวเซอร์หรือแผนที่ หรือขณะเรียกดูรูปภาพ

หมุนหน้าจอ – จากหลายๆ แอปพลิเคชันและเมนู การวางแนวของหน้าจอจะเปลี่ยนแปลงไปตามการวางแนวจริงของตัวเครื่องอุปกรณ์

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอล็อกสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่น

หน้าจอล็อก

หน้าจอล็อกเป็นจุดเริ่มต้นในการใช้งานแอปพลิเคชันและฟังก์ชันต่างๆ และให้คุณเพิ่มรายการ เช่น ข้อตักซ์ หรือ Google Widget ของแอปพลิเคชันช่วยให้คุณเข้าใช้ข้อมูลและแอปพลิเคชันต่างๆ ได้ทันที เป็นหน้าจอล็อกเริ่มต้นและสามารถเข้าใช้ได้จากทุกเมนูด้วยการแตะ 



หน้าจอหลักย่อย

ระบบปฏิบัติการจะมีหน้าจอหลักหลายหน้าจอเพื่อให้มีพื้นที่ว่างสำหรับเพิ่มไอคอน, Widgets และอื่นๆ

- ▶ เลื่อนนิ้วไปทางด้านซ้ายหรือด้านขวาของหน้าจอหลัก

หน้าจอหลักของคุณ

การปรับแต่งหน้าจอหลัก

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่มแอปพลิเคชัน, Widgets หรือเปลี่ยนพื้นหลัง
การเพิ่มรายการในหน้าจอหลัก

- 1 แตะค้างไว้บนส่วนที่ว่างของหน้าจอหลัก
- 2 ในเมนูโหมดเพิ่ม ให้เลือกรายการที่คุณต้องการเพิ่ม จากนั้นคุณ将会เห็นรายการที่เพิ่มบนหน้าจอหลัก
- 3 ลากไปยังตำแหน่งที่คุณต้องการแล้วยกนิ้วขึ้น

เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก จากเมนูแอปฯ ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม

การลบรายการจากหน้าจอหลัก


- ▶ หน้าจอหลัก > แตะค้างไว้ที่ไอคอนที่คุณต้องการลบ > ลากไปยัง  ลบ

ในการเพิ่มแอปพลิเคชันเป็นปุ่มด่วน


- ▶ จากเมนู แอปฯ หรือบนหน้าจอหลัก ให้แตะไอคอนแอปพลิเคชันค้างไว้ แล้วลากไปยังพื้นที่ปุ่มด่วน

ในการลบแอปพลิเคชันจากพื้นที่ปุ่มด่วน



- ▶ แตะปุ่มด่วนที่ต้องการค้างไว้ แล้วลากไปยัง  ลบ

หมายเหตุ: ไม่สามารถลบปุ่ม แอปฯ  ได้

ในการปรับแต่งไอคอน แอปฯ บนหน้าจอหลัก

- 1 แตะไอคอนแอปพลิเคชันค้างไว้จนถูกปลดล็อคจากตำแหน่งปัจจุบัน แล้ววางไว้บนหน้าจอไอคอนการแก้ไข  จะปรากฏขึ้นที่มุมขวาบนของแอปพลิเคชัน
- 2 แตะไอคอนแอปพลิเคชันอีกครั้งและเลือกการออกแบบและขนาดไอคอนที่ต้องการ
- 3 แตะ **ตกลง** เพื่อบันทึกการเปลี่ยนแปลง

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด


- 1 แตะ  รายการแอปพลิเคชันที่ใช้ล่าสุดจะปรากฏขึ้น
- 2 แตะไอคอนเพื่อเปิดแอปพลิเคชัน หรือแตะ  เพื่อกลับสู่หน้าจอก่อนหน้านี้

พาดำเนินการแจ้งเตือน

การแจ้งเตือนจะแจ้งให้คุณทราบว่ามีข้อความ เหตุการณ์ปฏิทิน และการตั้งปลุกใหม่ รวมถึงเหตุการณ์ต่อเนื่อง เช่น ในขณะที่คุณใช้สาย

เมื่อการแจ้งเตือนมาถึง ไอคอนจะปรากฏขึ้นที่ด้านบนของหน้าจอ ไอคอนสำหรับการแจ้งเตือนที่รอดำเนินการจะปรากฏขึ้นทางด้านซ้าย และไอคอนระบบ เช่น Wi-Fi หรือระดับแบตเตอรี่จะแสดงอยู่ทางด้านขวา

หมายเหตุ: ตัวเลือกที่มีอาจแตกต่างกัน โดยขึ้นอยู่กับภูมิภาคหรือผู้ให้บริการ

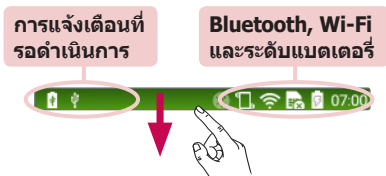

การใช้ซิมคู่

เมื่อใส่สองซิมการ์ดในโทรศัพท์ของคุณ จะแสดงข้อมูลซิมการ์ดบนแถบการแจ้งเตือนของคุณแต่ละปุ่มสลับซิม จะสลับซิมที่ใช้งานปัจจุบัน

หมายเหตุ: หากใส่ซิมการ์ดเดียวหรือปิดซิมหนึ่ง การสลับซิมจะใช้ไม่ได้ และปุ่มสลับซิมจะไม่ทำงาน ระหว่างการโทร ส่งข้อความ หรือใช้บริการข้อมูล RSSI ของอีกซิมหนึ่งอาจแสดงเป็น "ไม่มีบริการ" เนื่องจากสถานะบริการเครือข่าย




คำเตือน

หากคุณอยู่นอกพื้นที่บริการ อาจทำให้อุปกรณ์ของคุณใช้พลังงานแบตเตอรี่มากขึ้น


หน้าจอหลักของคุณ

การเปิดพาดูการแจ้งเตือน


ลากนิ้วลงจากแถบสถานะเพื่อเปิดพาดูการแจ้งเตือน

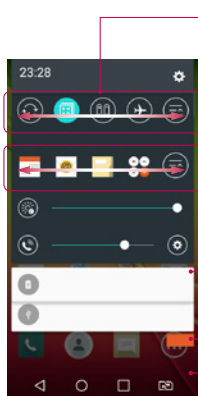

พื้นที่สลับด่วน

แตะปุ่มสลับด่วนแต่ละปุ่มเพื่อเปิด/ปิด และปุ่มค้างไว้เพื่อเข้าใช้เมนูตั้งค่าของฟังก์ชัน ในการดปุ่มสลับเพิ่มเติมให้ลากนิ้วไปทางซ้ายหรือขวา และ  เพื่อลบ เพิ่ม หรือจัดเรียงปุ่มสลับ

QSlide แอปพลิเคชัน

แตะแอปพลิเคชัน QSlide เพื่อเปิดหน้าต่างเล็กในหน้าจอของคุณ และ  เพื่อลบ เพิ่ม หรือจัดเรียงแอปฯ QSlide

การแจ้งเตือน

แสดงการแจ้งเตือนปัจจุบัน พร้อมคำอธิบายย่อ และที่การแจ้งเตือน

แตะเพื่อลบการแจ้งเตือนทั้งหมด

ในการปิดพาดูการแจ้งเตือน ให้แตะแล้วลากแท็บไปที่ด้านบนของหน้าจอ

ไอคอนสัญลักษณ์บนแถบสถานะ

ไอคอนสัญลักษณ์จะปรากฏบนแถบสถานะที่ด้านบนของหน้าจอเพื่อรายงานสายที่ไม่ได้รับข้อความใหม่ เหตุการณ์ในปฏิทิน สถานะอุปกรณ์ และอื่นๆ



ไอคอนที่แสดงที่ด้านบนของหน้าจอจะให้ข้อมูลเกี่ยวกับสถานะของอุปกรณ์ ไอคอนที่แสดงในตารางด้านล่างคือบางส่วนของไอคอนที่พบบ่อย

ไอคอน	รายละเอียด
	ไม่ได้ใส่ซิมการ์ด
	ไม่มีสัญญาณเครือข่าย
	เปิดใช้โหมดเครื่องบิน
	เชื่อมต่อกับเครือข่าย Wi-Fi
	เชื่อมต่อชุดหูฟังแบบใช้สายแล้ว
	กำลังใช้สาย
	สายไม่ได้รับ
	เปิด Bluetooth
	ค่าเตือนระบบ
	ตั้งปลุกแล้ว
	มีข้อความเสียงใหม่
	ข้อความตัวอักษร ใหม่
	กำลังเล่นเพลงอยู่

ไอคอน	รายละเอียด
	ปิดเสียงเรียกเข้า
	เปิดใช้โหมดสัน
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่
	โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล
	เปิด GPS
	กำลังซิงโครไนซ์ข้อมูล
	มีข้อความ Gmail ใหม่
	มีข้อความ Hangouts ใหม่
	เลือกวิธีป้อนข้อมูล
	กำลังใช้งาน Wi-Fi Hotspot

หมายเหตุ: ตำแหน่งไอคอนในแถบสถานะอาจแตกต่างกันไป โดยขึ้นอยู่กับฟังก์ชันหรือบริการ

หน้าจอหลักของคุณ

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏโดยอัตโนมัติบนหน้าจอเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะฟิลด์ข้อความที่คุณต้องการป้อนข้อความ


การใช้ปุ่มกด และ การป้อนข้อความ

 แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ แตะสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

 แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์

 แตะเพื่อเว้นวรรค

 แตะเพื่อสร้างบรรทัดใหม่

 แตะเพื่อลบตัวอักษรก่อนหน้า

การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง



เมื่อคุณเลือกภาษาฝรั่งเศสหรือสเปนเป็นภาษาที่ใช้ป้อนข้อความ คุณสามารถป้อนตัวอักษรพิเศษของภาษาฝรั่งเศสหรือสเปนได้ (เช่น "á")

ตัวอย่างเช่น ในการป้อน "á" ให้แตะปุ่ม "อ" ค้างไว้จนกว่าปุ่มขุมเข้าจะขยายใหญ่ขึ้นและแสดงตัวอักษรจากภาษาอื่นๆ แล้วเลือกตัวอักษรพิเศษที่คุณต้องการ

การตั้งค่าบัญชี Google

เมื่อคุณเปิดโทรศัพท์เป็นครั้งแรก คุณจะมีโอกาสเปิดการใช้เครือข่าย เพื่อลงชื่อเข้าใช้บัญชี Google และเลือกวิธีการใช้บริการ Google ที่คุณต้องการ

การตั้งค่าบัญชี Google ของคุณ

- ลงชื่อเข้าใช้บัญชี Google จากหน้าจอตั้งค่าที่แสดง
หรือ
- และ  >  > แอปฯ > เลือกแอปพลิเคชัน Google เช่น **Gmail** > **รับทราบ** > เลือก **เพิ่มที่อยู่อีเมล**เพื่อสร้างบัญชีใหม่หรือเพิ่มบัญชีของคุณ

เมื่อคุณตั้งค่าบัญชี Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับบัญชี Google บนเว็บโดยอัตโนมัติ

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ (ซึ่งจะขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ) หลังจากซิงค์แล้ว คุณสามารถใช้ Gmail™ และใช้ประโยชน์จากบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

Wi-Fi



ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP) สนุกสนานกับอินเทอร์เน็ตไร้สายโดยใช้ Wi-Fi ที่ไม่มีค่าบริการเพิ่มเติม

การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณจำเป็นต้องเข้าใช้จุดเชื่อมต่อไร้สาย หรือ 'ฮอตสปอต' จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกันคุณต้องกำหนดค่าโทรศัพท์เพื่อทำการเชื่อมต่อ
ปิด Wi-Fi เมื่อคุณไม่ได้ใช้ เพื่อยืดอายุแบตเตอรี่

หมายเหตุ: ถ้าคุณอยู่นอกพื้นที่ Wi-Fi หรือตั้งค่า Wi-Fi เป็น **ปิด** อาจมีการคิดค่าใช้จ่ายเพิ่มเติมโดยผู้ให้บริการเครือข่ายโทรศัพท์เคลื่อนที่สำหรับการใช้งานข้อมูลโทรศัพท์เคลื่อนที่

การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi

- 1 แตะ  >  > แตะ **แอปฯ** > **ตั้งค่า** > แตะ **เครือข่าย** > **Wi-Fi**
- 2 ตั้งค่า **Wi-Fi** เป็น **เปิด** เพื่อเปิดและเริ่มต้นสแกนหาเครือข่าย Wi-Fi ที่มีอยู่
- 3 แตะเมนู Wi-Fi อีกครั้งเพื่อดูรายการของเครือข่าย Wi-Fi ที่ใช้งานและที่อยู่ในระยะ
 - เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ
- 4 แตะเครือข่ายเพื่อเชื่อมต่อ
 - หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)
- 5 แถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi

Bluetooth



คุณสามารถใช้ Bluetooth เพื่อส่งข้อมูลได้โดยการเรียกใช้แอปพลิเคชันที่เกี่ยวข้อง ไม่ใช่จากเมนู Bluetooth เหมือนในโทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

หมายเหตุ:

- LG ไม่มีส่วนรับผิดชอบใดๆ สำหรับการสูญหาย การสกัดกัน หรือการนำข้อมูลที่ส่งหรือรับผ่านคุณสมบัตินี้สาย Bluetooth ไปใช้ในทางที่ผิด
- คุณต้องแน่ใจเสมอว่าได้แบ่งปันและรับข้อมูลจากอุปกรณ์ที่เชื่อถือได้และปลอดภัย ในกรณีที่มีสิ่งกีดขวางระหว่างอุปกรณ์ ระยะเวลาการทำงานอาจลดลง
- อุปกรณ์บางรุ่น โดยเฉพาะรุ่นที่ยังไม่ผ่านการทดสอบหรืออนุญาตโดย Bluetooth SIG อาจไม่สามารถใช้งานร่วมกันกับอุปกรณ์ของคุณได้

การเปิด Bluetooth และการจับคู่โทรศัพท์ของคุณกับอุปกรณ์ Bluetooth

คุณต้องจับคู่อุปกรณ์ของคุณกับอุปกรณ์อื่นก่อนที่จะเชื่อมต่อกับอุปกรณ์นั้น

- 1 แตะ  >  > แตะ แอปฯ > ตั้งค่า > แตะ เครือข่าย > ตั้ง Bluetooth เป็น เปิด
- 2 แตะเมนู Bluetooth อีกครั้ง คุณจะเห็นตัวเลือกสำหรับทำให้โทรศัพท์ของคุณมองเห็นได้ และตัวเลือกสำหรับการค้นหาอุปกรณ์ ในตอนนี้ให้แตะ ค้นหา เพื่อดูอุปกรณ์ในระยะ Bluetooth
- 3 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยจากรายการ เมื่อจับคู่สำเร็จแล้ว อุปกรณ์ของคุณจะเชื่อมต่อกับอุปกรณ์นั้น

หมายเหตุ: อุปกรณ์บางอย่าง โดยเฉพาะชุดหูฟังหรือชุดติดรถยนต์แอสแตร์ฟรี่ อาจมี Bluetooth PIN ที่กำหนดไว้แล้ว เช่น 0000 หากอุปกรณ์เครื่องอื่นมี PIN คุณจะต้องป้อน

ส่งข้อมูลด้วยคุณสมบัตินี้สาย Bluetooth



- 1 เลือกไฟล์หรือรายการ เช่น รายชื่อ เหตุการณ์ในปฏิทิน หรือไฟล์มีเดีย จากแอปพลิเคชันที่เหมาะสมหรือ **ดาวน์โหลด**
- 2 เลือกตัวเลือกการส่งด้วย Bluetooth


หมายเหตุ: วิธีการเลือกตัวเลือกอาจแตกต่างกันตามประเภทข้อมูล

- 3 ค้นหาและจับคู่อุปกรณ์ที่เปิดใช้งาน Bluetooth

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

รับข้อมูลด้วยคุณสมบัตินี้ไร้สาย Bluetooth

- 1 และ  >  > แท็บ แอปฯ > ตั้งค่า > แท็บ เครือข่าย > ตั้ง Bluetooth เป็น เปิด
- 2 และเมนู Bluetooth อีกครั้ง และทำเครื่องหมายที่ช่องทำเครื่องหมายที่ด้านบนของหน้าจอ เพื่อให้อุปกรณ์อื่นมองเห็นโทรศัพท์ของคุณ

หมายเหตุ: ในการเลือกระยะเวลาที่จะมองเห็นอุปกรณ์ของคุณได้ ให้แตะ  > เวลาที่สามารถมองเห็น

- 3 เลือก ยอมรับ เพื่อยืนยันว่าคุณต้องการรับข้อมูลจากอุปกรณ์



การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์

การปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi Hotspot เป็นคุณสมบัตินี้ยอดเยี่ยมในกรณีที่ไม่มี การเชื่อมต่อไร้สายให้ใช้งาน คุณสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับคอมพิวเตอร์ เครื่องเดียวผ่านสายเคเบิล USB (การปล่อยสัญญาณผ่าน USB) คุณยังสามารถแบ่งปันการเชื่อมต่อ ข้อมูลของโทรศัพท์กับอุปกรณ์มากกว่าหนึ่งเครื่องพร้อมกัน ด้วยการเปลี่ยนโทรศัพท์ของคุณเป็น Portable Wi-Fi Hotspot

ขณะที่โทรศัพท์กำลังแบ่งปันการเชื่อมต่อข้อมูล ไอคอนจะปรากฏขึ้นที่แถบสถานะ และแสดงเป็น การแจ้งเตือนขาออกในแถบการแจ้งเตือน

สำหรับข้อมูลล่าสุดเกี่ยวกับปล่อยสัญญาณและ Wi-Fi Hotspot แบบพกพา รวมถึงระบบปฏิบัติการที่ รองรับและรายละเอียดอื่นๆ ให้ไปที่ <http://www.android.com/tether>



การแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์โดยเป็น Portable Wi-Fi Hotspot

- 1 และ  >  > แท็บ แอปฯ > ตั้งค่า > แท็บ เครือข่าย > การปล่อยสัญญาณ & เครือข่าย > Wi-Fi hotspot สลับเพื่อเปิดใช้งาน
- 2 ป้อนรหัสผ่านแล้วแตะ บันทึก

เคล็ดลับ! หากคอมพิวเตอร์ของคุณใช้งาน Windows 7 หรือระบบปฏิบัติการที่อยู่ในกลุ่ม Linux รุ่นใหม่ๆ (เช่น Ubuntu) โดยปกติแล้วคุณจะไม่จำเป็นต้องเตรียมคอมพิวเตอร์ของคุณสำหรับการ ปล่อยสัญญาณ แต่ถ้ายกเว้นการใช้งาน Windows เวอร์ชันก่อนหน้า หรือระบบปฏิบัติการอื่น คุณ อาจจำเป็นต้องเตรียมคอมพิวเตอร์ของคุณเพื่อสร้างการเชื่อมต่อเครือข่ายผ่าน USB สำหรับ ข้อมูลล่าสุดเกี่ยวกับระบบปฏิบัติการที่สนับสนุนการปล่อยสัญญาณผ่าน USB และวิธีการปรับแต่ง โปรดไปที่ <http://www.android.com/tether>

การเปลี่ยนชื่อหรือรักษาความปลอดภัย Wi-Fi Hotspot แบบพกพาของคุณ

คุณสามารถเปลี่ยนชื่อเครือข่าย Wi-Fi (SSID) ของโทรศัพท์ของคุณ รวมทั้งรักษาความปลอดภัยของเครือข่าย Wi-Fi ได้

1 แตะ  >  > แท็บ แอปฯ > ตั้งค่า > แท็บ เครือข่าย > การปล่อยสัญญาณ & เครือข่าย > **Wi-Fi hotspot**

2 แตะ **ตั้งค่า Wi-Fi hotspot**

- กล้องโต้ตอบ **ตั้งค่า Wi-Fi hotspot** จะเปิดขึ้น
- คุณสามารถเปลี่ยน **ชื่อ Wi-Fi (SSID)** ที่จะปรากฏให้อุปกรณ์อื่นเห็นเมื่อทำการสแกนหาเครือข่าย Wi-Fi
- นอกจากนี้ยังสามารถแตะเมนู **ระบบป้องกัน** เพื่อกำหนดค่าเครือข่ายด้วยระบบป้องกัน Wi-Fi Protected Access 2 (WPA2) โดยใช้ Pre-Shared Key (PSK)
- หากคุณแตะที่ตัวเลือกระบบป้องกัน **WPA2 PSK** ฟิลเตอร์รหัสผ่านจะถูกเพิ่มลงในกล้องโต้ตอบ **ตั้งค่า Wi-Fi hotspot** ถ้าคุณป้อนรหัสผ่านไว้ คุณจะต้องป้อนรหัสผ่านดังกล่าวเมื่อทำการเชื่อมต่อ hotspot ของโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่น คุณสามารถตั้งค่า **เปิด ในเมนูระบบป้องกัน** เพื่อลบระบบป้องกันออกจากเครือข่าย Wi-Fi ของคุณ

3 แตะ **บันทึก**

ข้อควรระวัง! หากคุณตั้งค่าตัวเลือกระบบป้องกันเป็นเปิด คุณจะไม่สามารถป้องกันการให้บริการออนไลน์โดยไม่ได้รับอนุญาตของบุคคลอื่นและอาจมีค่าใช้จ่ายเพิ่มเติม คุณควรใช้งานตัวเลือกระบบป้องกันเสมอเพื่อหลีกเลี่ยงการใช้โดยไม่ได้รับอนุญาต

Wi-Fi Direct

Wi-Fi Direct สนับสนุนการเชื่อมต่อโดยตรงระหว่างอุปกรณ์ที่เปิดใช้งาน Wi-Fi โดยไม่มีจุดเชื่อมต่อ เนื่องจาก Wi-Fi Direct ใช้พลังงานแบตเตอรี่สูง ขอแนะนำให้คุณเสียบปลั๊กโทรศัพท์ของคุณเข้ากับเต้าเสียบไฟในขณะที่ใช้คุณสมบัติ Wi-Fi Direct ตรวจสอบเครือข่าย Wi-Fi และ Wi-Fi Directed ของคุณล่วงหน้า และตรวจสอบว่าผู้ใช้เชื่อมต่อกับเครือข่ายเดียวกัน

SmartShare

คุณสามารถใช้คุณสมบัติ SmartShare ได้อย่างง่ายดายในแอปพลิเคชันคลัง ภาพ, เพลง, วิดีโอ ฯลฯ

เพลิดเพลินกับเนื้อหาได้จากอุปกรณ์หลากหลาย

คุณสามารถแบ่งปันเนื้อหาถึงอุปกรณ์ได้หลากหลาย แตะ  เพื่อแบ่งปันเนื้อหาในคลังภาพ, เพลง, วิดีโอ, ThinkFree Viewer

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

การเล่น/การส่ง

เล่น: คุณสามารถเล่นเนื้อหาผ่านทีวี, ลำโพง Bluetooth ฯลฯ

Beam: คุณสามารถส่งเนื้อหาไปยังอุปกรณ์ Bluetooth ที่รองรับ SmartShare Beam

- **SmartShare Beam:** ถ่ายโอนคุณสมบัติของเนื้อหาอย่างรวดเร็วผ่าน Wi-Fi Direct



เพลิดเพลินกับเนื้อหาจากอุปกรณ์ข้างเคียง

คุณสามารถเพลิดเพลินกับเนื้อหาจากอุปกรณ์ข้างเคียง (เช่น PC, NAS, โทรศัพท์มือถือ) ได้ที่แอปพลิเคชัน คลังภาพ, เพลง, วิดีโอ

การเชื่อมต่ออุปกรณ์

เชื่อมต่ออุปกรณ์ของคุณและอุปกรณ์อื่นๆ ที่รองรับ DLNA ในเครือข่าย Wi-Fi เดียวกัน

การค้นหาอุปกรณ์อื่นๆ

- 1 ค้นห อุปกรณ์ข้างเคียง จากนั้นคุณ sẽเห็นอุปกรณ์ที่รองรับ DLNA
- 2 เชื่อมต่อกับอุปกรณ์เพื่อดูเนื้อหา

การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิล USB

เรียนรู้วิธีการเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ด้วยสายเคเบิล USB ในโหมดการเชื่อมต่อ USB

การถ่ายโอนเพลง รูปถ่าย และวิดีโอโดยใช้โหมดที่เก็บข้อมูล USB

- 1 เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ติดตั้งไดรเวอร์แพลตฟอร์ม LG Android บนคอมพิวเตอร์ คุณจะต้องเปลี่ยนการ

ตั้งค่าด้วยตัวเอง เลื่อนแถบสถานะลงแล้วเลือกตัวเลือก อุปกรณ์สื่อ (MTP)

3 คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์และโอนไฟล์ได้

ซิงโครไนซ์กับ Windows Media Player

ตรวจสอบว่าติดตั้ง Windows Media Player ใน PC ของคุณแล้ว

1 ใช้สายเคเบิล USB เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ที่ติดตั้ง Windows Media Player

2 เลือกตัวเลือก อุปกรณ์สื่อ (MTP) เมื่อเชื่อมต่อแล้ว หน้าต่างป๊อปอัปจะปรากฏขึ้นบนคอมพิวเตอร์

3 เปิด Windows Media Player เพื่อซิงโครไนซ์ไฟล์เพลง

4 แกะไขหรือป้อนชื่อของอุปกรณ์ของคุณในหน้าต่างป๊อปอัป (ถ้าจำเป็น)

5 เลือกและลากไฟล์เพลงที่คุณต้องการไปยังหน้าต่าง Sync List





6 เริ่มต้นการซิงโครไนซ์

• ต้องตรงตามข้อกำหนดต่อไปนี้เพื่อซิงโครไนซ์กับ Windows Media Player

รายการ	ข้อกำหนด
OS	Microsoft Windows XP SP2, Vista หรือสูงกว่า
เวอร์ชัน Window Media Player	Windows Media Player 10 หรือสูงกว่า



การโทร

การโทรออก


- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด ในการลบตัวเลข ให้แตะ 
- 3 แตะ  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะไอคอน  สิ้นสุด

เคล็ดลับ! ในการป้อน "+" เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่

การโทรออกโดยใช้รายชื่อ

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 เลือกรายชื่อหรือป้อนอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะ **ค้นหารายชื่อ**
- 3 ในรายชื่อ ให้แตะ  ที่คุณต้องการโทรออก

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อมีสายเรียกเข้าในสถานะล็อก ให้ลาก  ไปในทิศทางใดก็ได้เพื่อรับสายเรียกเข้า
ลาก  ไปในทิศทางใดก็ได้เพื่อปฏิเสธสายเรียกเข้า
ลากไอคอน **ปฏิเสธพร้อมส่งข้อความ** ไปทางทิศใดก็ตามหากคุณต้องการส่งข้อความ





เคล็ดลับ! ปฏิเสธพร้อมส่งข้อความ

คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายพร้อมส่งข้อความ ในระหว่างการประชุม

การปรับระดับเสียงสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่ด้านหลังของโทรศัพท์

การใช้สายที่สอง


- 1 ระหว่างการโทรสายแรก ให้แตะ  > **เพิ่มการโทร** และทำการโทรออก คุณสามารถไปยังรายการหมายเลขที่เพิ่งโทรล่าสุดได้โดยการแตะ **บันทึกการโทร** หรือค้นหารายชื่อได้โดยการแตะ **รายชื่อ** และเลือกรายชื่อที่คุณต้องการโทร
- 2 แตะ  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อคและพักสายไว้
- 4 แตะหมายเลขที่แสดงเพื่อสลับสาย หรือแตะที่ **รวมการโทร** เพื่อเริ่มต้นการประชุมสาย
- 5 ในการวางสายที่ใช้ ให้แตะ **สิ้นสุด** หรือแตะ  และเลื่อนแถบการแจ้งเตือนลง และเลือกไอคอน **วางสาย** 

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูบันทึกการโทร

บนหน้าจอหลัก ให้แตะ  และเลือกแท็บ **บันทึกการโทร**
ดูรายการสายที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด

เคล็ดลับ!

- แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร
- แตะ  จากนั้นแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 บนหน้าจอหลัก ให้แตะ 
- 2 แตะ 
- 3 แตะ **ตั้งค่าการโทร** และเลือกตัวเลือกที่คุณต้องการปรับ



รายชื่อ

เพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในบัญชี Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะ **ค้นหารายชื่อ** และป้อนชื่อโดยใช้แป้นพิมพ์


การเพิ่มรายชื่อใหม่

- 1 แตะ  ป้อนหมายเลขของรายชื่อใหม่ แล้วแตะ  แตะ **เพิ่มในรายชื่อ > รายชื่อใหม่**
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะพื้นที่ภาพเลือกจาก **ถ่ายภาพ** หรือ **เลือกจากแกลเลอรี**
- 3 แตะชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ
- 4 แตะ **บันทึก**

รายชื่อเพื่อนสนิท

คุณสามารถแยกรายชื่อที่โทรหาบ่อยๆ ไว้ในกลุ่มรายการโปรด

การเพิ่มรายชื่อเป็นเพื่อนสนิท

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวทางมุมด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเหลือง

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะแท็บ **รายการโปรด** และเลือกรายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวสีเหลืองทางมุมด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากรายการโปรดของคุณ

การสร้างกลุ่ม

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะ **กลุ่ม** แล้วแตะ  เลือก **กลุ่มใหม่**
- 3 ป้อนชื่อสำหรับกลุ่มใหม่ คุณยังสามารถตั้งค่าเสียงเรียกเข้าสำหรับกลุ่มที่เพิ่มสร้างขึ้นใหม่
- 4 แตะ **บันทึก** เพื่อบันทึกกลุ่ม



หมายเหตุ: หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไปแต่ยังคงอยู่ในรายชื่อ

ข้อความ


โทรศัพท์ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเมนูที่ใช้งานเพียงเมนูเดียว


คำเตือน: ควรตั้งค่าข้อความ LG เป็นแอปฯ SMS เริ่มต้น มิฉะนั้น ฟังก์ชันข้อความบางอย่างจะถูกจำกัด

การส่งข้อความ

- 1 แตะ  บนหน้าจอหลักและแตะ  เพื่อเปิดข้อความเปล่า
- 2 ป้อนรายชื่อหรือหมายเลขของรายชื่อในฟิลด์ **ไป** ขณะที่คุณป้อนรายชื่อรายชื่อที่ตรงกันจะปรากฏขึ้น คุณสามารถและผู้รับที่แนะนำได้ คุณสามารถเพิ่มได้มากกว่าหนึ่งรายชื่อ

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน

- 3 แตะฟิลด์ **ป้อนข้อความ** และเริ่มการเขียนข้อความของคุณ
- 4 แตะ  เพื่อเปิดเมนูตัวเลือก เลือกจาก **ข้อความด่วน, แทรกสโมลีย์, ตั้งเวลาการส่ง, เพิ่มชื่อเรื่อง และ ยกเลิก**

เคล็ดลับ! คุณสามารถแตะไอคอน  เพื่อแนบไฟล์ที่คุณต้องการแบ่งปันไปกับข้อความ

- 5 แตะที่ **ส่ง** เพื่อส่งข้อความ
- 6 การตอบกลับจะปรากฏบนหน้าจอ ขณะที่คุณดูและส่งข้อความเพิ่มเติม เรดข้อความจะถูกสร้างขึ้น



คำเตือน:

- การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับภาษาและวิธีการเข้ารหัส SMS
- หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

กล่องเรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับบุคคลอื่นสามารถแสดงเรียงตามลำดับเวลาเพื่อให้คุณสามารถดูภาพรวมของการสนทนาได้อย่างสะดวก

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ของคุณจะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้นคุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าตามความต้องการของคุณ

- แตะไอคอน **ข้อความ** บนหน้าจอหลักของคุณ และ  จากนั้นแตะ **ตั้งค่า**

อีเมล

คุณสามารถใช้แอปพลิเคชันอีเมลเพื่ออ่านอีเมลจากบริการต่างๆ เช่น Gmail ได้ แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange ผู้ให้บริการหรือผู้ดูแลระบบของคุณสามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

การจัดการแอคเคาท์อีเมล

เมื่อเปิดแอปพลิเคชัน **อีเมล** เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้นเพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

หลังจากการตั้งค่าครั้งแรก อีเมลจะแสดงเนื้อหาของกล่องขาเข้าของคุณ





การเพิ่มแอคเคาท์อีเมลอื่น:

• และ  >  > แท็บ **แอปฯ > อีเมล** > และ  > **ตั้งค่า** >  **เพิ่มแอคเคาท์**

การเปลี่ยนการตั้งค่าของแอคเคาท์อีเมล:

• และ  >  > แท็บ **แอปฯ > อีเมล** > และ  > **ตั้งค่า** > **ตั้งค่าทั่วไป**

การลบแอคเคาท์อีเมล:

• และ  >  > แท็บ **แอปฯ > อีเมล** > และ  > **ตั้งค่า** > และ  > **ลบแอคเคาท์**
> เลือกแอคเคาท์ที่จะลบ > **ลบ** > เลือก **ใช่**





การทำงานกับโฟลเดอร์แอคเคาท์

และ  >  > แท็บ **แอปฯ > อีเมล** > และ  แล้วเลือก **โฟลเดอร์**

แต่ละแอคเคาท์ประกอบด้วยโฟลเดอร์ ภาดเข้า, ภาดออก, ส่งแล้ว และ ร่าง ทั้งนี้คุณอาจมีโฟลเดอร์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอคเคาท์ของคุณสนับสนุน



การเขียนและส่งอีเมล

การเขียนและส่งข้อความ


- 1 ในขณะที่อยู่ในแอปพลิเคชัน **อีเมล** ให้แตะ 
- 2 ป้อนแอตเตรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษร แอตเตรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น ค้นแอตเตรสแต่ละแอคเคาท์ด้วยเครื่องหมายอัฒภาค
- 3 และ  เพื่อเพิ่ม Cc/Bcc และแตะ  เพื่อแนบไฟล์ หากต้องการ
- 4 ป้อนตัวอักษรในข้อความ
- 5 และ 




เคล็ดลับ! เมื่อได้รับข้อความอีเมลใหม่ในกล่องขาเข้าของคุณ คุณจะได้รับแจ้งด้วยเสียงหรือการสั่น

กล้องถ่ายรูป

ในการเปิดแอปพลิเคชันกล้อง ให้แตะ  >  > แอปฯ > 

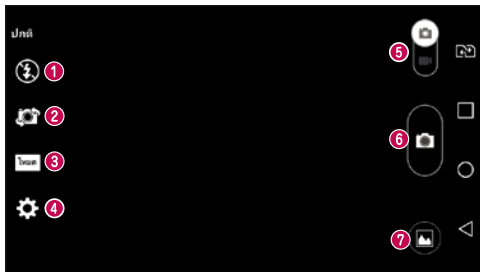ทำความรู้จักกับช่องมองภาพ


















- 1 แฟลช – เลือกจาก ปิด , เปิด , อัตโนมัติ 
- 2 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 3 โหมดชัตต – เลือกจาก ปกติ, Dynamic tone(HDR), พาโนรามา, ชัตตต่อเนื่อง, Time catch shot หรือ หรือ
- 4 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 5 โหมดวิดีโอ – แตะและเลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ
- 6 ปุ่มถ่ายภาพ – แตะเพื่อถ่ายภาพ
- 7 แกลเลอรี – แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูแกลเลอรีและดูภาพถ่ายที่บันทึกไว้ขณะอยู่ในโหมดกล้องถ่ายรูป

หมายเหตุ: โปรดตรวจสอบให้แน่ใจว่าได้ทำความสะอาดเลนส์กล้องถ่ายรูปก่อนถ่ายภาพ

กล้องถ่ายรูป

การใช้การตั้งค่าขั้นสูง


ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูง คุณสามารถเปลี่ยนการตั้งค่ากล้องถ่ายรูปได้โดย

	ในการถ่ายภาพ ให้พูดหนึ่งในคำต่อไปนี้: Cheese (ชีส), Smile (สไมล์), Whisky (วิสกี้), Kimchi (กิมจิ) หรือ LG (แอลจี)
	กำหนดและควบคุมปริมาณแสงแดดที่เข้าในรูป
	แตะเพื่อเลือกโหมดโฟกัส
	เลือกความละเอียดภาพถ่าย หากคุณเลือกความละเอียดสูง ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่าคุณสามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง
	ISO กำหนดความไวของเซ็นเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มีมืดในขณะที่คุณไม่สามารถใช้แฟลชได้
	ปรับปรุงคุณภาพสีในสภาวะแสงที่แตกต่างกัน
	ใช้เอฟเฟกต์งานศิลปะกับรูปภาพของคุณ
	ตั้งเวลาหลังจากกดปุ่มถ่ายภาพ ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้
	เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์
	หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งานฟังก์ชัน GPS หรือเชื่อมต่อกับเครือข่ายเท่านั้น
	เลือกเสียงชัตเตอร์
	ตั้งปุ่มปรับระดับเสียงว่าจะใช้สำหรับจับภาพหรือซูม
	เลือกที่เก็บข้อมูลเพื่อจัดเก็บภาพ
	เปิดวิธีใช้เพื่อดูว่าฟังก์ชันนี้ทำงานอย่างไร
	เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป

เคล็ดลับ!

- เมื่อคุณออกจากกล้อง การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง เอฟเฟกส์ ตัวตั้งเวลา และโหมดชัตเตอร์ ตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะถ่ายภาพครั้งถัดไป
- เมื่คุณตั้งค่าจะซ้อนทับอยู่บนของมองภาพ ดังนั้นเมื่อคุณเปลี่ยนสีภาพถ่ายหรือองค์ประกอบคุณภาพ คุณจะเห็นภาพตัวอย่างของภาพที่เปลี่ยนแปลงอยู่ด้านหลังเมนูตั้งค่า

การถ่ายภาพด่วน

- 1 เปิดแอปพลิเคชัน **กล้องถ่ายรูป** และหันเลนส์ไปยังวัตถุที่คุณต้องการถ่ายภาพ
- 2 ช่องโฟกัสจะปรากฏขึ้นที่กลางหน้าจอลงของมองภาพ คุณสามารถแตะตำแหน่งใดก็ได้บนหน้าจอเพื่อโฟกัสจุดนั้นนั้น
- 3 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 4 แตะ  เพื่อถ่ายภาพ


การใช้โหมด Time catch shot

ตั้งค่าให้กล้องจับภาพช่วงเวลาที่ยากหาลงไปโดยให้ถ่ายภาพหากภาพต่อเนื่องก่อนแตะ 

- 1 เปิดแอปพลิเคชัน **กล้องถ่ายรูป**
- 2 แตะ **โหมด** > **Time catch shot**
- 3 แตะ  เพื่อถ่ายภาพ
- 4 ในการดูช่วงเวลาก่อนการถ่ายภาพ ให้แตะภาพขนาดย่อที่ด้านล่างของหน้าจอลงกล้องถ่ายรูป
- 5 เลือกรูปภาพที่คุณต้องการเก็บไว้ จากนั้นแตะ  ที่ด้านบนสุดของหน้าจอลง

เมื่อคุณถ่ายภาพแล้ว

แตะภาพขนาดย่อที่ด้านล่างของหน้าจอลงกล้องถ่ายรูปเพื่อดูภาพสุดท้ายที่คุณถ่าย

	แตะเพื่อแก้ไขภาพถ่าย
	แตะเพื่อถ่ายภาพอื่นทันที

กล้องถ่ายรูป



แตะเพื่อส่งภาพถ่ายให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม




แตะเพื่อลบภาพถ่าย




เคล็ดลับ! หากคุณตั้งค่าแอคเคาท์ SNS ไว้บนโทรศัพท์ของคุณ คุณสามารถแบ่งปันภาพถ่ายของคุณกับชุมชน SNS ได้

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

กล้องวิดีโอ

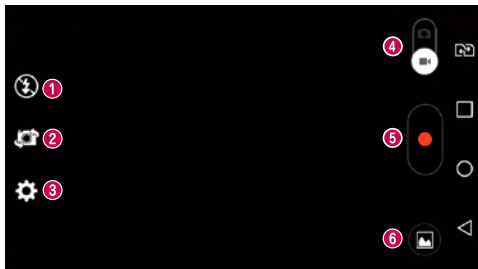ทำความเข้าใจกับช่องมองภาพ



- 1 แฟลช – เลือกจาก ปิด , เปิด , อัตโนมัติ 
- 2 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 3 ตั้งค่า –แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 4 โหมดกล้องถ่ายรูป –แตะและเลื่อนไอคอนนี้ขึ้นเพื่อสลับไปยังโหมดกล้องถ่ายรูป
- 5 เริ่มการบันทึก –แตะเพื่อเริ่มการบันทึกวิดีโอ
- 6 แกลเลอรี –แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเข้าดูแกลเลอรีและดูวิดีโอของคุณที่บันทึกไว้ขณะอยู่ในโหมดวิดีโอ










เคล็ดลับ!

เมื่อบันทึกวิดีโอ ให้วางนิ้วสองนิ้วบนหน้าจอและเลื่อนเข้าหากันเพื่อใช้ฟังก์ชันซูม



กล้องวิดีโอ

การใช้การตั้งค่าขั้นสูง

ใช้ของมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

	แตะเพื่อตั้งค่าขนาด (ฟูลเฮล) ของวิดีโอที่บันทึก
	กำหนดและควบคุมปริมาณแสงแดดที่เข้าสู่เลนส์ เลื่อนตัวบ่งชี้ความสว่างบนแถบไปทาง “-” เพื่อให้ได้วิดีโอที่มีความสว่างน้อยลง หรือไปทาง “+” เพื่อให้ได้วิดีโอที่มีความสว่างมากขึ้น
	ปรับปรุงคุณภาพสีในสภาวะแสงที่แตกต่างกัน
	เลือกโทนสีเพื่อใช้กับมุมมองใหม่
	เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์
	หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งานฟังก์ชัน GPS หรือเชื่อมต่อกับเครือข่ายเท่านั้น
	ตั้งปุ่มปรับระดับเสียงว่าจะใช้สำหรับบันทึกภาพหรือซุ่ม
	เลือกที่เก็บข้อมูลเพื่อบันทึกวิดีโอ
	เปิดวิธีใช้เพื่อดูว่าฟังก์ชันนี้ทำงานอย่างไร
	เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป

การบันทึกวิดีโออย่างรวดเร็ว

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป และเลื่อนปุ่ม โหมดวิดีโอ
- 2 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 แตะ  หนึ่งครั้งเพื่อเริ่มบันทึก
- 5 ไฟสีแดงจะปรากฏที่มุมด้านซ้ายบนของช่องมองภาพ พร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 6 แตะ  บนหน้าจอเพื่อหยุดการบันทึก





เคล็ดลับ!



- แตะเพื่อถ่ายภาพขณะบันทึกวิดีโอ
- แตะเพื่อหยุดชั่วคราวขณะบันทึกวิดีโอ

หลังการบันทึกวิดีโอ



ในช่องมองภาพ ให้แตะภาพขนาดย่อของวิดีโอที่ด้านล่างของหน้าจอเพื่อดูภาพสุดท้ายที่คุณถ่าย

	แตะเพื่อบันทึกวิดีโออื่นต่อทันที
	แตะเพื่อส่งวิดีโอให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	แตะเพื่อลบวิดีโอ
	แตะเพื่อเข้าถึงตัวเลือกมากขึ้น

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง


Knock Code

คุณสามารถปลดล็อคหน้าจอเมื่อหน้าจอปิดอยู่ ด้วยการแตะพื้นที่และลำดับที่ถูกต้อง การเปิดใช้คุณสมบัติ **Knock Code**

- 1 แตะ  >  > แท็บ แอปฯ > ตั้งค่า > แท็บ หน้าจอ > ล็อคหน้าจอ > เลือกแบบล็อคหน้าจอ > **Knock Code**
- 2 จะเป็นการเปิดหน้าจอที่จะสอนให้คุณทราบวิธีเลือกลำดับการปลดล็อค คุณจะต้องสร้างแป้นคีย์ PIN เป็นมาตรการความปลอดภัย ในกรณีที่คุณลืมแบบปลดล็อค

QuickMemo+

ใช้ **QuickMemo+** สร้างบันทึกและถ่ายภาพหน้าจอได้ ให้คุณถ่ายภาพหน้าจอ วาดรูปบนภาพ และแบ่งปันกับครอบครัวหรือเพื่อนๆ ด้วย QuickMemo+

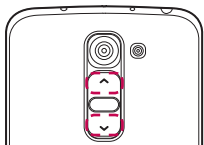


หรือ



- 1 เข้าสู่หน้าจอ QuickMemo+ โดยการกดปุ่มระดับเสียงขึ้นและลงค้างไว้หนึ่งวินาทีบนหน้าจอที่คุณต้องการถ่ายภาพ



หรือ

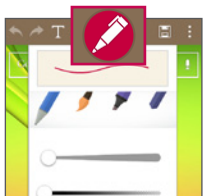แตะและเลื่อนแถบสถานะลง และแตะ 



- 2 เลือกตัวเลือกเมนูที่ต้องการจากประเภทปากกา, สี, เครื่องลบ และสร้างบันทึก








- 3 แตะ  ในเมนู แก้ไข เพื่อจัดเก็บบันทึกพร้อมกับหน้าจอปัจจุบัน ในการออกจาก QuickMemo+ ให้แตะ 

หมายเหตุ: โปรดใช้บ่อยๆในขณะที่ใช้ QuickMemo+ อย่าใช้เส้น

การใช้ตัวเลือก QuickMemo+

คุณสามารใช้ตัวเลือก QuickMenu ได้อย่างง่ายดายในขณะที่ใช้ QuickMemo+

	แตะเพื่อจัดเก็บ QuickMemo+ ปัจจุบันเป็น Text overlay บนหน้าจอและใช้โทรศัพท์ต่อไป
	เลิกทำหรือทำซ้ำ
	ใช้ฟังก์ชันแนวคิดที่ซับซ้อน
	เลือกประเภทปากกาและสี
	ลบบันทึกที่คุณสร้าง

ฟังก์ชัน



จัดเก็บบันทึกพร้อมกับหน้าจอบันทึกใน QuickMemo+ หรือ แกลเลอรี



ตัวเลือก: แตะเพื่อเลือก แบ่งปัน, สไลด์กระดาษสำหรับบันทึก

การดู QuickMemo+ ที่บันทึกไว้

แตะ แกลเลอรี และเลือกอัลบั้ม QuickMemo+

QSlide

จากหน้าจอใดๆ เปิดสมุดบันทึก ปฏิทิน และอื่นๆ เป็นหน้าต่างในหน้าจอของคุณ





1		แตะเพื่อออกจาก QSlide และกลับไปหน้าจอเดิม
2		แตะเพื่อปรับความโปร่งใส
3		แตะเพื่อสิ้นสุด QSlide
4		แตะเพื่อปรับขนาด

- 1 แตะและเลื่อนแถบสถานะลงด้านล่าง > แตะ QSlide แอปพลิเคชัน หรือขณะใช้แอปพลิเคชันที่สนับสนุน QSlide > แตะ ฟังก์ชันจะยังคงแสดงเป็นหน้าต่างขนาดเล็กบนหน้าจอของคุณต่อไป
- 2 คุณสามารถโทรออก เรียกดูเว็บ หรือเลือกตัวเลือกโทรศัพท์อื่น คุณสามารถใช้และแตะหน้าจอของหน้าต่างเล็กเมื่อแถบโปร่งใสยังไม่เต็ม ได้เช่นกัน

หมายเหตุ: QSlide สามารถสนับสนุนได้สูงสุดสองหน้าต่างพร้อมกัน

QuickRemote

QuickRemote เปลี่ยนโทรศัพท์ของคุณเป็นยูนิเวอร์แซลรีโมทสำหรับ TV และ DVD/Blue-ray ภายในบ้านของคุณ

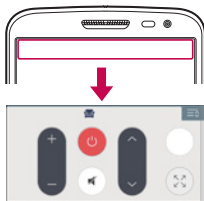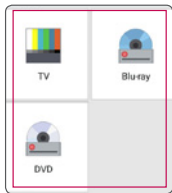

แตะ ปุ่มเมนู  เพื่อเลือก ตั้งค่าเมจิกรีโมท, แก้ไขชื่อรีโมท, ย้ายรีโมท, ลบรีโมท, แก้ไขห้อง, ตั้งค่า และ ช่วยเหลือ

- 1 แตะและเลื่อนแถบสถานะลงด้านล่างแล้วแตะ  > **เพิ่มรีโมท**

หรือ

- แตะ  >  > แท็บ **แอปฯ** >  **QuickRemote** > และ 

- 2 เลือกประเภทและแบรนด์ของอุปกรณ์ จากนั้นทำตามคำแนะนำบนหน้าจอเพื่อกำหนดค่าอุปกรณ์

- 3 แตะและเลื่อนแถบสถานะลงด้านล่างและใช้ฟังก์ชัน QuickRemote



ฟังก์ชัน

หมายเหตุ: QuickRemote จะทำงานด้วยวิธีเดียวกับสัญญาณอินฟราเรด (IR) ของรีโมทคอนโทรลทั่วไป ระวังระวังไม่ให้บังเซ็นเซอร์อินฟราเรดที่ด้านบนของโทรศัพท์เมื่อคุณใช้ฟังก์ชัน QuickRemote ฟังก์ชันนี้อาจไม่ได้รับการสนับสนุน ทั้งนี้ขึ้นอยู่กับรุ่น ผู้ผลิต หรือบริษัทที่ให้บริการ

มัลติมีเดีย

แกลเลอรี

เปิดแอปพลิเคชัน แกลเลอรี เพื่อดูอัลบั้มรูปภาพและวิดีโอ

- 1 และ  >  > แท็บ แอปฯ > แกลเลอรี
คุณสามารถจัดการและแบ่งปันไฟล์ภาพและวิดีโอทั้งหมดได้ด้วยแกลเลอรี

หมายเหตุ:

- ไม่สนับสนุนรูปแบบไฟล์บางรูปแบบ โดยขึ้นอยู่กับซอฟต์แวร์ที่ติดตั้งบนอุปกรณ์
- บางไฟล์อาจแสดงผลได้ไม่ถูกต้อง ขึ้นอยู่กับลักษณะการเข้ารหัส

การดูรูปภาพ



การเปิดแกลเลอรีจะเป็นการแสดงโฟลเดอร์ที่มีของคุณ เมื่อแอปพลิเคชันอื่น เช่น อีเมล จัดเก็บรูปภาพ โฟลเดอร์ Download จะถูกสร้างขึ้นโดยอัตโนมัติเพื่อเก็บรูปภาพ เช่นเดียวกัน การบันทึกภาพหน้าจอก็จะเป็นการสร้างโฟลเดอร์ Screenshots โดยอัตโนมัติ เลือกโฟลเดอร์เพื่อเปิดรูปภาพจะถูกแสดงตามวันที่สร้างในโฟลเดอร์ เลือกรูปภาพเพื่อดูแบบเต็มจอ เลื่อนไปทางซ้ายหรือขวาเพื่อดูภาพถัดไปหรือก่อนหน้า

การซูมเข้าและออก


ใช้หนึ่งในวิธีต่อไปนี้เพื่อซูมเข้าภาพ:

- แตะสองครั้งที่ใดก็ได้เพื่อซูมเข้า
- เลื่อนนิ้วทั้งสองออกจากกันในตำแหน่งใดก็ได้เพื่อซูมเข้า เลื่อนนิ้วเข้าหากันเพื่อซูมออก หรือแตะสองครั้งเพื่อย้อนกลับ

การเล่นวิดีโอ



ไฟล์วิดีโอจะแสดงไอคอน  ในภาพตัวอย่าง เลือกวิดีโอที่จะดูและแตะ  แอปพลิเคชัน วิดีโอ จะเปิดขึ้น

การแก้ไขภาพถ่าย

ขณะดูภาพถ่าย ให้แตะ 

การลบภาพถ่าย/วิดีโอ

ใช้หนึ่งในวิธีต่อไปนี้:

- ในโฟลเดอร์ แตะ  และเลือกภาพถ่าย/วิดีโอโดยการทำเครื่องหมายถูก จากนั้นแตะ **ลบ**
- ขณะดูภาพถ่าย ให้แตะ 

มัลติมีเดีย

การตั้งค่าเป็นภาพพื้นหลัง

ขณะถ่ายภาพ ให้แตะ  > ตั้งค่าภาพเป็น เพื่อตั้งภาพเป็นภาพพื้นหลัง หรือเพื่อกำหนดให้กับรายชื่อ

หมายเหตุ:


- ไม่สนับสนุนรูปแบบไฟล์บางรูปแบบ โดยขึ้นอยู่กับซอฟต์แวร์อุปกรณ์
- หากขนาดไฟล์ใหญ่เกินกว่าหน่วยความจำที่มีอยู่ อาจเกิดข้อผิดพลาดเมื่อคุณเปิดไฟล์นั้น

วิดีโอ





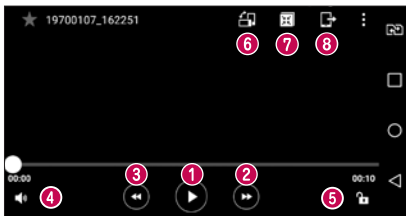

โทรศัพท์ของคุณมีเครื่องเล่นวิดีโอภายในตัวที่ให้คุณสามารถเล่นวิดีโอที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นวิดีโอ ให้แตะ  > แท็บ แอปฯ > แกลเลอรี

การเล่นวิดีโอ

- 1 แตะ  > แท็บ แอปฯ > แกลเลอรี
- 2 เลือกวิดีโอที่คุณต้องการเล่น



- | | |
|---|------------------------------------|
|  | แตะเพื่อหยุดชั่วคราว/เล่นวิดีโอต่อ |
|  | แตะเพื่อเดินหน้าไป 10 วินาที |
|  | แตะเพื่อถอยหลังไป 10 วินาที |


4		แตะเพื่อจัดการระดับเสียงของวิดีโอ
5	 / 	แตะเพื่อล๊อคหน้าจอวิดีโอ
6		เปลี่ยนการวางแนวเนื้อหาบนหน้าจอ
7		แตะเพื่อใช้ QSlide
8		แตะเพื่อแบ่งปันวิดีโอของคุณผ่านฟังก์ชัน SmartShare

เพลง







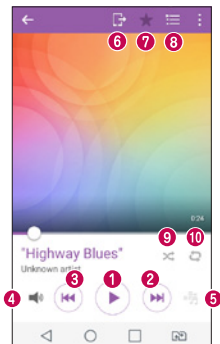



โทรศัพท์ของคุณมีเครื่องเล่นเพลงในตัวซึ่งให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ในการใช้งานเครื่องเล่นเพลง ให้แตะ  >  > แอปฯ > เพลง

การเล่นเพลง

- 1 แตะ  >  > แอปฯ > เพลง
- 2 แตะ เพลง
- 3 เลือกเพลงที่คุณต้องการเล่น



มีลติมีเดีย

1		แตะเพื่อหยุดการเล่นวิดีโอชั่วคราว/เล่นต่อ
2		แตะเพื่อข้ามไปที่แทร็คถัดไปในอัลบั้ม รายการเพลง หรือสลับเปลี่ยน แตะค้างไว้เพื่อไปข้างหน้าโดยเร็ว
3		แตะเพื่อเริ่มเล่นแทร็คปัจจุบันอีกครั้ง หรือข้ามไปยังแทร็คก่อนหน้าในอัลบั้ม รายการเพลง หรือสลับเปลี่ยน แตะค้างไว้เพื่อย้อนกลับ
4		แตะเพื่อแสดงแถบเลื่อนระดับเสียง จากนั้นปรับระดับเสียงที่แถบเลื่อน
5		แตะเพื่อตั้งค่าเอฟเฟกต์เสียง
6		แตะเพื่อแบ่งปันเพลงของคุณผ่านฟังก์ชัน SmartShare
7		แตะเพื่อเพิ่มเพลงในรายการโปรดของคุณ
8		แตะเพื่อเปิดรายการเพลงปัจจุบัน
9		แตะเพื่อเล่นรายการเพลงปัจจุบันในโหมดสลับเปลี่ยน (แทร็คจะเล่นตามลำดับการสุ่ม)
10		แตะเพื่อสลับระหว่างโหมดซ้ำ เล่นเพลงทั้งหมดซ้ำ เล่นเพลงปัจจุบันซ้ำ หรือปิดทำซ้ำ

หากต้องการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์

แตะเพลงหนึ่งในรายการเพลงค้างไว้ ตัวเลือก เล่น, เพิ่มในรายการเพลง, แบ่งปัน, ตั้งค่าเป็นเสียงเรียกเข้า, ลบ, รายละเอียด และ ค้นหา จะปรากฏขึ้น

เพิ่มไฟล์เพลงในโทรศัพท์ของคุณ

เริ่มต้นจากการถ่ายโอนไฟล์เพลงไปยังโทรศัพท์ของคุณ:




- ถ่ายโอนเพลงด้วยการใช้อุปกรณ์สื่อ (MTP)
- ดาวน์โหลดจากเว็บไร้สาย
- ซิงโครไนซ์โทรศัพท์ของคุณกับคอมพิวเตอร์
- รับไฟล์ผ่าน Bluetooth


วิทยุ FM

โทรศัพท์ของคุณมีคุณสมบัติวิทยุ FM ในตัว ดังนั้น คุณสามารถค้นหาสถานีที่คุณชื่นชอบและรับฟังวิทยุได้ตลอดเวลา





หมายเหตุ: คุณต้องใช้หูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง

การตั้งเวลาการปลุก




- 1 และ  >  > แท็บ แอปฯ > นาฬิกา > ตั้งปลุก > 
- 2 หลังจากที่คุณตั้งค่านาฬิกาปลุก โทรศัพท์ของคุณจะแจ้งให้คุณทราบว่าเหลือเวลาอีกเท่าไรก่อนที่การปลุกจะทำงาน
- 3 ตั้งค่า **ซ้ำ**, **ระยะเวลาเลื่อน**, **สนั่น** เมื่อ **มีเสียงเตือน**, **เสียงปลุก**, **ระดับเสียงปลุก**, **เริ่มใช้แอปฯอัตโนมัติ**, **ล๊อคปรีตนา** และ **บันทึก**
- 4 และ **บันทึก**

หมายเหตุ: ในการเปลี่ยนการตั้งค่าการปลุกในหน้าจอรายการเตือน ให้แตะ **ปุ่มเมนู**  และเลือก **ตั้งค่า**

การใช้เครื่องคิดเลข

- 1 และ  >  > แท็บ แอปฯ > **คิดเลข**
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 ในการตรวจสอบประวัติ ให้แตะ  แล้วเลือก **ประวัติการคำนวณ**
- 5 สำหรับการคำนวณที่ซับซ้อน แตะ  แล้วเลือก **เครื่องคิดเลขวิทยาศาสตร์** แล้วเลือก sin, cos, tan, log และอื่น ๆ






การเพิ่มเหตุการณ์ลงในปฏิทิน


- 1 และ  >  > แท็บ แอปฯ > **ปฏิทิน**
- 2 บนหน้าจอ คุณจะพบกับประเภทมุมมองต่างๆ ของปฏิทิน (วัน, สัปดาห์, เดือน, ปี, นัดหมาย)
- 3 แตะวันที่ซึ่งคุณต้องการเพิ่มเหตุการณ์ และแตะ 
- 4 แตะ **ชื่อเหตุการณ์** แล้วป้อนชื่อเหตุการณ์
- 5 แตะ **ที่ตั้ง** และป้อนตำแหน่ง ตรวจสอบวันที่และป้อนเวลาที่คุณต้องการให้เหตุการณ์เริ่มและเสร็จสิ้น
- 6 หากคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **ซ้ำ** และตั้งค่า **เตือนความจำ** หากจำเป็น
- 7 แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน

บันทึกเสียง

ใช้บันทึกเสียงเพื่อบันทึกเสียงเดือนความจำหรือไฟล์เสียงอื่นๆ

การบันทึกเสียงหรือเสียงพูด

- 1 และ  >  > แท็บ แอปฯ > บันทึกเสียง
- 2 และ  เพื่อเริ่มต้นการบันทึก
- 3 และ  เพื่อจบการบันทึก
- 4 และ  เพื่อฟังการบันทึก

หมายเหตุ: และ  เพื่อเข้าใช้อัลบั้ม คุณสามารถฟังการบันทึกเสียงที่บันทึกไว้ได้ เวลาการบันทึกที่ใช้อาจแตกต่างจากเวลาการบันทึกจริง

การทำงาน

งานนี้สามารถสามารถซิงโครไนซ์กับแอคเคาท์ MS Exchange ได้ คุณสามารถสร้าง แก้ไข และลบงานได้ใน MS outlook หรือ MS Office Outlook Web Access

ในการซิงโครไนซ์ MS Exchange

- 1 จากหน้าจอหลัก และ  >  > แท็บ แอปฯ > ตั้งค่า
- 2 และแท็บ ทั่วไป > แอคเคาท์และการซิงค์ > เพิ่มแอคเคาท์
- 3 และ **Microsoft Exchange** เพื่อสร้างอีเมลแอดเดรสและรหัสผ่าน
- 4 ตรวจสอบให้แน่ใจว่าคุณได้เลือกงานซิงค์

หมายเหตุ: MS Exchange อาจไม่ได้รับการสนับสนุน โดยขึ้นอยู่กับเซิร์ฟเวอร์อีเมล

ThinkFree Viewer

ThinkFree Viewer คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ให้ผู้ใช้ออกเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่หรือทุกเวลาด้วยมือถือของคุณ

และ  >  > แอปฯ > **ThinkFree Viewer**

การดูไฟล์

ผู้ใช้อมือถือสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือ เมื่อดูเอกสารโดยใช้ ThinkFree Viewer ออนเจกต์และเลย์เอาต์จะเหมือนกับในเอกสารต้นฉบับ

Google+



ใช้แอปพลิเคชันนี้เพื่อเชื่อมต่อกับบุคคลผ่านบริการเครือข่ายสังคมของ Google

• และ  >  > แอปฯ > **Google > Google+**.

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้ให้บริการเครือข่าย

ค้นหาด้วยเสียง

ใช้แอปพลิเคชันนี้เพื่อค้นหาเว็บเพจด้วยเสียง

- 1 และ  >  > แอปฯ > **Google > ค้นหาด้วยเสียง**
- 2 พูดคำหลักหรือวลีเมื่อ **พูดเลย** ปรากฏบนหน้าจอ เลือกคำหลักที่แนะนำค่าใดค่าหนึ่งที่ปรากฏขึ้น

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้ให้บริการเครือข่าย

ดาวนโหลด

ใช้แอปพลิเคชันนี้เพื่อดูว่ามีไฟล์อะไรบ้างที่ถูกดาวนโหลดผ่านแอปพลิเคชัน




• และ  >  > แอปฯ > **ดาวนโหลด**

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้ให้บริการเครือข่าย


LG SmartWorld

LG SmartWorld นำเสนอเนื้อหาที่น่าสนใจมากมาย เช่น เกมส์, แอปพลิเคชัน, ฟันหลังและเสียงเรียกเข้า ทำให้ผู้ใช้โทรศัพท์ LG สามารถสัมผัสกับประสบการณ์ "Mobile Life" ได้มากยิ่งขึ้น

วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ



- 1 แตะ  >  > แตะ แอปฯ > แตะไอคอน  เพื่อเข้าถึง **LG SmartWorld**
- 2 แตะ ลงชื่อเข้าใช้ และป้อนข้อมูล ID/PW สำหรับ LG SmartWorld หากคุณยังไม่ได้สมัครสมาชิก ให้แตะรีจิสเตอร์เพื่อรับสถานะสมาชิก LG SmartWorld
- 3 ดาวน์โหลดเนื้อหาที่คุณต้องการ

หมายเหตุ: หากไม่มีไอคอน 

- 1 ให้ใช้เว็บเบราว์เซอร์มือถือ เข้าใช้ LG SmartWorld (www.lgworld.com) และเลือกประเทศของคุณ
- 2 ดาวน์โหลดแอปพลิเคชัน LG SmartWorld
- 3 รันและติดตั้งไฟล์ที่ดาวน์โหลด
- 4 เข้าใช้ LG SmartWorld โดยการแตะไอคอน 

วิธีการใช้ LG SmartWorld

- เข้าร่วมการส่งเสริมการขาย LG SmartWorld ทุกเดือน

	ค้นหาเนื้อหา
	ค้นหาเนื้อหาตามประเภท (เช่น เกม การศึกษา ความบันเทิง ฯลฯ)

- ลองใช้ปุ่ม "เมนู" เพื่อค้นหาสิ่งที่คุณต้องการอย่างรวดเร็ว
ตั้งค่า – ตั้งค่าโปรไฟล์และหน้าจอ
ลงชื่อเข้าใช้ – ตั้งค่า ID และรหัสผ่านของคุณ
- และลองใช้ฟังก์ชันอื่นๆ ที่มีประโยชน์ (หน้าจอรายละเอียดเนื้อหา)

หมายเหตุ: LG SmartWorld อาจไม่มีให้บริการในบางประเทศหรือจากผู้ให้บริการบางราย

เว็บไซต์

อินเทอร์เน็ต







ใช้แอปพลิเคชันนี้เพื่อเรียกดูอินเทอร์เน็ต เบราวเซอร์จะนำคุณเข้าสู่โลกที่เต็มไปด้วยสีสันของเกมส์ เพลง ข่าวสาร กีฬา ความบันเทิงและอื่นๆ อีกมากมายอย่างรวดเร็วที่โทรศัพท์มือถือของคุณโดยตรง ไม่ว่าคุณจะอยู่ที่ใดหรือสนุกกับสิ่งใด

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

1 แตะ  >  > แตะ แอปฯ > อินเทอร์เน็ต

การใช้แถบเครื่องมือเว็บ

แตะเลื่อนขึ้นด้านบนบนตัวนิ้วมือเพื่อเปิด

	แตะเพื่อย้อนกลับหนึ่งเพจ
	แตะเพื่อไปข้างหน้าหนึ่งเพจไปยังเพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณแตะ  ซึ่งจะนำคุณไปยังเพจก่อนหน้า
	แตะเพื่อไปยังโฮมเพจ
	แตะเพื่อเพิ่มหน้าตาใหม่
	แตะเพื่อเข้าใช้งานบุ๊คมาร์ค

การดูเว็บเพจ

แตะฟิลด์แอดเดรส ป้อนเว็บแอดเดรสแล้วแตะ ไป

การเปิดเพจ

ในการไปยังเพจใหม่ ให้แตะ  > 

ในการไปยังเว็บเพจอื่น ให้แตะ  เลื่อนขึ้นหรือลง และแตะเพจเพื่อเลือก


การค้นหาเว็บด้วยเสียง

แตะฟิลด์แอดเดรส และ  พูดคำหลัก แล้วเลือกหนึ่งในคำหลักที่แนะนำที่ปรากฏขึ้น

หมายเหตุ: คุณสมบัตินี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคหรือผู้บริการเครือข่าย

บุ๊กมาร์ค

ในการบุ๊กมาร์คเว็บเพจปัจจุบัน ให้แตะ  > **เพิ่มบุ๊กมาร์ค** > **ตกลง**

ในการเปิดเว็บเพจที่บุ๊กมาร์ค ให้แตะ  แล้วเลือก

ประวัติ

แตะ  > **ประวัติ** เพื่อเปิดเว็บเพจจากรายการเว็บเพจที่เยี่ยมชมล่าสุด

Chrome

ใช้ Chrome ในการค้นหาข้อมูลและเรียกดูเว็บเพจ

1 แตะ  >  > แตะ **แอปฯ** > **Chrome**

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้บริการเครือข่ายของคุณ

การดูเว็บเพจ

แตะฟิลด์แอดเดรส จากนั้นป้อนเว็บแอดเดรสหรือเกณฑ์การค้นหา

การเปิดเพจ

ในการไปยังเพจใหม่ ให้แตะ  > **แท็บใหม่**

ตั้งค่า

ส่วนนี้จะแสดงภาพรวมรายการที่คุณสามารถเปลี่ยนแปลงผ่านเมนูการตั้งค่าระบบของโทรศัพท์ได้:
การเข้าถึงเมนูตั้งค่า:

และ  > แตะค้าง  > การตั้งค่าระบบ

- หรือ -

และ  >  > แตะ แอปฯ > ตั้งค่า

เครือข่าย

< ซิมการ์ดคู่ >

คุณสามารถกำหนด ตั้งค่าซิมคู่ ได้

ซิมการ์ด 1 – ทำให้คุณสามารถเปลี่ยนชื่อซิมการ์ด และไอคอนซิมการ์ดสำหรับซิมการ์ด 1

เปิดใช้สล็อต 1 – ทำเครื่องหมายเพื่อเปิดใช้ หรือเลิกใช้ซิมการ์ดในช่อง 1

ซิมการ์ด 2 – ทำให้คุณสามารถเปลี่ยนชื่อซิมการ์ด และไอคอนซิมการ์ดสำหรับซิมการ์ด 2

เปิดใช้สล็อต 2 – ทำเครื่องหมายเพื่อเปิดใช้ หรือเลิกใช้ซิมการ์ดในช่อง 2

ซิมสีซิมการ์ด – ให้คุณเลือกสีที่คุณต้องการ

โหมดประหยัดค่าใช้จ่าย – จะทำการเพิ่มทุกรายชื่อพร้อมกับซิมที่กำหนดเมื่อทำการเพิ่มสมุดโทรศัพท์ ในระหว่างการโทร จะระบุซิมการ์ดเครือข่ายที่ตรงกันและทำงานโดยใช้ซิมการ์ดเครือข่ายที่ตรงกัน ซึ่งทำให้สามารถใช้ประโยชน์จากการใช้เครือข่ายเดียวกันได้ ในการใช้คุณสมบัติ

หมายเหตุ: โหมดประหยัดค่าใช้จ่ายไม่ทำงานในระหว่างอยู่ในสาย

ข้อมูลโมบายล์ – แตะเพื่อทำเครื่องหมาย ซึ่งจะเปิดใช้การเข้าถึงข้อมูลผ่านเครือข่ายโทรศัพท์เคลื่อนที่

หมายเหตุ: เมื่อเปิดโหมดเครื่องบิน ตั้งค่าซิมคู่จะถูกปิดใช้งาน

ซิมการ์ดที่จะใช้ – คุณสามารถเปลี่ยนเครือข่ายข้อมูลเริ่มต้น บริการแพ็คเกจมือถือทั้งหมด (เว็บ, MMS, อีเมล ฯลฯ) จะใช้ซิมที่เลือกในคำนี้ เมื่อใส่ซิมการ์ดเดียว เครือข่ายข้อมูลเริ่มต้นจะถูกตั้งค่าเป็นซิมที่ใส่ และไมอนุญาตให้เปลี่ยน




โรมมิ่งข้อมูล – เชื่อมต่อกับบริการข้อมูลขณะโรมมิ่ง

< Wi-Fi >

Wi-Fi – เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

เคล็ดลับ! การดู MAC แอดเดรส

ในการเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยฟิลเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของโทรศัพท์ลงในเราเตอร์

คุณสามารถค้นหา MAC แอดเดรสได้ในยูสเซอร์อินเตอร์เฟซต่อไปนี้: และ  >  > แท็บแอปฯ > ตั้งค่า > แท็บ เครือข่าย > Wi-Fi >  > Wi-Fi ขั้นสูง > MAC แอดเดรส

< Bluetooth >

เปิดหรือปิดคุณสมบัติ Bluetooth เพื่อใช้ Bluetooth

< ข้อมูลโมไบล์ >

แสดงการใช้ข้อมูลและตั้งค่าขีดจำกัดการใช้ข้อมูลโทรศัพท์มือถือ

< ตั้งการโทร >

กำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

ข้อความเสียง – ให้คุณเลือกบริการข้อความเสียงของผู้ให้บริการ

จำกัดการโทร – เปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณต้องใช้ PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

การโอนสาย – เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อไม่มีสัญญาณ

ป้องกันการโทร – ล็อคสายเรียกเข้า สายโทรออก หรือสายโทรออกต่างประเทศ

เวลาโทร – ระยะเวลาการโทรทั้งหมด ได้แก่ **โทรครั้งล่าสุด, โทรออก, สายเรียกเข้า และทุกสาย**

ตั้งค่าการโทรเพิ่มเติม – ให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

ข้อมูลผู้โทร: เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่

สายเรียกซ้อน: หากเปิดใช้สายเรียกซ้อน คุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังใช้สาย (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

[แท็บทั่วไป]

การส่งต่อแบบสมาร์ท – ทำให้คุณสามารถรับสายจาก SIM2 ถ้า SIM1 กำลังถูกใช้งาน และในทางกลับกัน

บล็อภพสายโทรเข้า – แสดงบล็อภพสายที่โทรเข้าตอนใช้ทีวี กล้อง และวีดีโอ

ปฏิเสธการรับสาย – ตั้งค่าฟังก์ชันปฏิเสธการรับสาย เลือกจาก โหมดปฏิเสธสาย หรือไม่รับสายจาก

ปฏิเสธพร้อมส่งข้อความ – เมื่อคุณต้องการปฏิเสธสาย คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายในระหว่างการประชุม

ตั้งค่า

ระบบป้องกันข้อมูลลับ – ขอนชื่อผู้โทรและหมายเลขสำหรับสายเรียกเข้า

รับสายอัตโนมัติ – ตั้งค่าเวลาก่อนอุปกรณ์แอสต์ฟรีที่เชื่อมต่อจะรับสายเรียกเข้าโดยอัตโนมัติ
เลือกจาก **ปิด**, **1 ร.**, **3 ร.** และ **5 ร.**

การสั่นขณะเชื่อมต่อ – สั่นโทรศัพท์เมื่อคู่สนทนาอื่น ๆ รัยสาย

บันทึกหมายเลขที่ไม่รู้จัก – เพิ่มหมายเลขที่ไม่รู้จักลงในรายชื่อหลังจากการโทร

ปุ่มวางสาย – ให้คุณเลือกวางสาย

< **แบ่งปันและเชื่อมต่อ** >

SmartShare Beam – เปิดเพื่อรับเนื้อหาที่มีเดียผ่าน SmartShare Beam
จากโทรศัพท์หรือแท็บเล็ต LG

เซิร์ฟเวอร์มีเดีย – ทำให้คุณสามารถแบ่งปันเนื้อหาที่มีเดียของโทรศัพท์กับอุปกรณ์ใกล้เคียงผ่าน DLNA

LG PC Suite – เลือกตัวเลือกนี้เพื่อใช้ LG PC Suite กับการเชื่อมต่อ Wi-Fi ของคุณ
โปรดอย่าลืมว่าเครือข่าย Wi-Fi ควรเชื่อมต่อกับ LG PC Suite ด้วยการเชื่อมต่อ Wi-Fi

< **การปล่อยสัญญาณ & เครือข่าย** >

การปล่อยสัญญาณ USB – ต่อสาย USB เพื่อแบ่งปันการเชื่อมต่ออินเทอร์เน็ตกับ คอมพิวเตอร์

Wi-Fi hotspot – คุณยังสามารถใช้โทรศัพท์เพื่อให้การเชื่อมต่อระบบโมบายล์บรอดแบนด์ได้ด้วย
สร้างฮอตสปอตและแบ่งปันการเชื่อมต่อของคุณ สำหรับข้อมูลเพิ่มเติม ให้ไปที่ **การตั้งค่า** >
เครือข่าย > **การปล่อยสัญญาณ & เครือข่าย** > **วิธีใช้** > **Wi-Fi hotspot**

การปล่อยสัญญาณบลูทูธ – ให้คุณตั้งค่าโทรศัพท์ว่าจะแบ่งปันการเชื่อมต่ออินเทอร์เน็ตหรือไม่

ช่วยเหลือ – และเพื่อดูข้อมูลความช่วยเหลือเกี่ยวกับฟังก์ชันการปล่อยสัญญาณผ่าน USB, Wi-Fi
hotspot และการปล่อยสัญญาณบลูทูธ

โหมดเครื่องบิน – หลังจากสลับไปยังโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

หมายเหตุ: คุณต้องตั้งค่า PIN หรือรหัสผ่านล็อคหน้าจอก่อนที่จะใช้ระบบจัดเก็บข้อมูลรับรอง
สิทธิ์


VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม
VPN ประเภทต่างๆ ได้

เครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล โหมดเครือข่ายและผู้ให้บริการ
ข้อจุดเชื่อมต่อ (APN) และอื่นๆ

เสียง


โปรไฟล์เสียง – เลือก เสียง, เฉพาะสั่น หรือ เงียบ

ระดับเสียง – ปรับการตั้งค่าระดับเสียงของโทรศัพท์ตามความต้องการและสภาพแวดล้อมของคุณ
ความแรงการสั่น – ให้คุณตั้งค่าความแรงการสั่นสำหรับการโทร การแจ้งเตือน และการตอบสนองแบบสัมผัส

เสียงเรียกเข้า – ตั้ง ค่าเสียงเรียกเข้า สำหรับสายต่างๆ คุณยังสามารถเพิ่มเสียงเรียกเข้าได้ โดยการแตะ  ที่มุมขวาบนของหน้า จอ

ริงโทนซิม 1 – ให้คุณตั้งค่าเสียงสายเรียกเข้าซิม 1 ของคุณ

ริงโทนซิม 2 – ให้คุณตั้งค่าเสียงสายเรียกเข้าซิม 2 ของคุณ

เสียงการแจ้งเตือน – ตั้ง เสียงแจ้ง เตือน คุณยังสามารถเพิ่มเสียงแจ้ง เตือนได้ โดยการแตะ  ที่มุมขวาบนของหน้า จอ

เสียงการแจ้งซิม 1 – ให้คุณตั้งค่าเสียงการแจ้งซิม 1 ของคุณ

เสียงการแจ้งซิม 2 – ให้คุณตั้งค่าเสียงการแจ้งซิม 2 ของคุณ

เสียงพร้อมสั่น – เลือกเพื่อตั้งค่าให้โทรศัพท์สั่นไปพร้อมๆ กับเสียงเรียกเข้าเมื่อมีสายเรียกเข้า

ประเภทการสั่นซิม 1 – ให้คุณตั้งประเภทการสั่นสำหรับสายเรียกเข้ามายังซิมการ์ด 1

ประเภทการสั่นซิม 2 – ให้คุณตั้งประเภทการสั่นสำหรับสายเรียกเข้ามายังซิมการ์ด 2

ห้ามรบกวน – ตั้ง เวลาและโหมดเพื่อให้ โทรศัพท์ไม่แจ้ง ให้คุณทราบเมื่อมีการแจ้ง เตือนใดๆ เข้ามา เลือกได้จาก ทั้งหมด, เฉพาะระดับ ความสำคัญ หรือไม่มี

ระดับความสำคัญ – อนุญาตคุณสมบัติบางอย่างให้ส ามารถรบกวนได้ เมื่อได้รับระดับความสำคัญเท่านั้น ตั้งปลุกได้รับระดับความสำคัญก่อนเสมอ เลือกได้จาก เลือกจากแอปฯ ที่มีเหตุการณ์ในปฏิทิน สายเรียกเข้าข้อความใหม่ หรือรายชื่อที่อนุญาต

นัดหมาย – การแจ้งเตือนที่มีระดับความสำคัญเท่านั้นที่สามารถรบกวนซ้ำได้แม้การตั้งค่าเป็นทั้งหมด

ลือคหน้าจอ – ตั้งค่าให้แสดงหรือซ่อนการแจ้งเตือนทั้งหมดบนหน้าจอลือค

แอปฯ – ตั้งค่าการแจ้งเตือนจากแอปฯ เลือกได้จากไม่มีเพื่อไม่แสดงการแจ้งเตือนจากแอปฯ เหล่านั้น และ ระดับความสำคัญเพื่อแสดงการแจ้งเตือนที่มีระดับความสำคัญเหนือการแจ้งเตือนอื่น และตั้งค่า ห้ามรบกวน สำหรับแอปฯ ที่มีระดับความสำคัญเท่านั้น

สนับเมือแตะ – ทำเครื่องหมายเพื่อให้สั่นเมื่อแตะปุ่มสัมผัสหน้าจอหลัก และในระหว่างการติดต่อกับส่วนติดต่อผู้ใช้อื่นๆ

เอฟเฟ็กตเสียง – แตะเพื่อตั้ง โทนเสียงของปุ่มหมายเลข เสียงสัมผัส และเสียงลือคหน้าจอ

โทนเสียงของปุ่มหมายเลข – ทำเครื่องหมายเพื่อเล่น โทนเสียงในขณะที่ ใช้ปุ่มหมายเลข

เสียงสัมผัส – ทำเครื่องหมายเพื่อเล่นเสียงเมื่อเลือกหน้าจอเสียง

ลือคหน้าจอ – ทำเครื่องหมายเพื่อเล่นเสียงเมื่อลือคและปลดลือคหน้าจอ

การแจ้งเตือนข้อความ/สายเรียกเข้า – แตะปุ่มการแจ้งเตือนข้อความ/สายเรียกเข้า เพื่อสลับเปิด/ปิด เมื่อเปิดไว้จะทำให้อุปกรณ์แจ้งสายเรียกเข้าและข้อความเข้าโดยอัตโนมัติ

ตั้งค่า

หน้าจอ

< หน้าจอหลัก >

ตั้งค่า เลือกหน้าจอโฮม, ซิม, พื้นหลัง, เอฟเฟกต์หน้าจอ, ยอมให้วนลูปหน้าจอโฮม, แอปส์และริสโตร, ช่วยเหลือ

< ล็อคหน้าจอ >

เลือกแบบล็อคหน้าจอ – ตั้งค่าประเภทเลือกแบบล็อคหน้าจอเพื่อป้องกันโทรศัพท์ของคุณ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ ตั้งค่า **ไม่มี, ลาก, Knock Code, รูปแบบ, PIN** หรือ **รหัสผ่าน**

หากคุณเปิดใช้งานการประเภทการล็อกรูปแบบเมื่อเปิดโทรศัพท์หรือเรียกหน้าจอ คุณจะต้องวาดแบบปลดล็อคเพื่อปลดล็อคหน้าจอ

Smart Lock – กำหนดว่าเมื่อใดที่จะปลดล็อคโทรศัพท์โดยอัตโนมัติโดยอุปกรณ์ที่เชื่อถือได้ (อุปกรณ์ BT หรือ NFC) หรือใบหน้าที่เชื่อถือได้ฟังก์ชันนี้จะพร้อมใช้งานเมื่อการล็อคหน้าจอกำหนดเป็นหนึ่งในรูปแบบดังนี้ Knock Code, รูปแบบ, PIN และ รหัสผ่าน

หมายเหตุ: ในการเปิดใช้งานฟังก์ชันนี้ คุณต้องเปิดใช้งานสมาร์ตล็อค

ตั้งค่า > ทั่วไป > ระบบป้องกัน > Trust agents > Smart Lock.

เอฟเฟกต์หน้าจอ – ตั้งค่าตัวเลือกเอฟเฟกต์หน้าจอ เลือกจาก **อนุภาคแสง, วงกลมเวกเตอร์, โมเสก, หรือ โขด**

หมายเหตุ: เอฟเฟกต์หน้าจอจะกลายเป็นเอฟเฟกต์รูปแบบ หากตั้งค่าการล็อคหน้าจอไว้ที่รูปแบบ

พื้นหลัง – ตั้งค่าภาพล็อคหน้าจอของคุณ เลือกจาก **แกลเลอรี** หรือ **คลังภาพพื้นหลัง**

ซ็อคดัก – ให้คุณเปลี่ยนซ็อคดักทบทวนการล็อคหน้าจอบน **ลาก**

ข้อมูลติดต่อในกรณีโทรศัพท์สูญหาย – เลือกเพื่อตั้งค่าชื่อของเจ้าของอุปกรณ์ให้แสดงบนการล็อคหน้าจอป้องกันข้อความที่เป็นข้อมูลเจ้าของ

ตั้งเวลาล็อค – ตั้งค่าระยะเวลาก่อนที่จะล็อคโดยอัตโนมัติ หลังจากหน้าจอหมดเวลา

ล็อคปุ่มพาวเวอร์ทันที – เลือกเพื่อให้ล็อคหน้าจอตันทันทีเมื่อปุ่มเปิด/ปิด/ล็อคถูกกด การตั้งค่านี้จะแทนที่การตั้งค่าตัวจับเวลาล็อคการป้องกัน

< ปุ่มสัมผัสหน้าจอโฮม >

จัดเรียงปุ่ม – ลากไอคอนเพื่อจัดเรียงปุ่มสัมผัสโฮม คุณสามารถจัดเรียงปุ่มโฮมได้ สูงสุด 5 ปุ่ม

สี – ตั้งค่าสีพื้นหลังสำหรับปุ่มสัมผัสโฮม โดยเลือกจากสีขาวและสีดำ

< ตัวอักษร >

ชนิดแบบอักษร – ตั้งค่าชนิดแบบอักษรที่ใช้สำหรับโทรศัพท์และเมนู
ขนาดแบบอักษร: – ตั้งค่าขนาดแบบอักษรที่แสดงในโทรศัพท์และเมนู

< การตั้งค่าหน้าจอ >

ความสว่าง – ปรับความสว่างของหน้าจอ เพื่อให้ได้ประสิทธิภาพของแบตเตอรี่สูงสุด ให้ใช้ความสว่างระดับต่ำสุดที่ยังคงสามารถรับชมได้อย่างสบายตา

หมุนจออัตโนมัติ – เลือกเพื่อตั้งค่าโทรศัพท์ให้หมุนหน้าจออัตโนมัติตามแนวของโทรศัพท์ (แนวตั้งหรือแนวนอน)

ใหม่เอาต์หน้าจอ – ตั้งค่าระยะเวลาก่อนที่จะหน้าจอจะหมดเวลา

จ่ออัจฉริยะ – เลือกเพื่อไม่ให้หน้าจอหมดเวลาเมื่ออุปกรณ์ตรวจเจอดวงตาของคุณที่มองไปยังหน้าจอ

< การตั้ง ค่านี้ สูง >

เอฟเฟกต์ปิดหน้าจอ – ตั้งค่าเอฟเฟกต์ปิดหน้าจอ เลือกจาก **Retro TV**, **Black Hole** และ **Fade out**

Daydream – แตะสวิตช์ Daydream เพื่อสลับเปิดหรือปิด เมื่อเปิดไว้จะทำให้ภาพพักหน้าจอปรากฏขึ้นเมื่อโทรศัพท์กำลังพักขณะวางบนแท่นชาร์จและ/หรือกำลังชาร์จ เลือกได้จาก **นาฬิกา Google รูปภาพ**

ทั่วไป

< ภาษาและการป้อนข้อมูล >

ใช้การตั้งค่า ภาษาและการป้อนข้อมูล เพื่อเลือกภาษาสำหรับข้อความในโทรศัพท์ และเพื่อกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

< ที่ตั้ง >

เปิดใช้บริการตำแหน่ง โทรศัพท์ของคุณจะหาตำแหน่งโดยประมาณด้วย GPS, Wi-Fi และเครือข่ายโทรศัพท์มือถือ

โหมด – ตั้งค่าโหมดตำแหน่งจาก **ความแม่นยำสูง**, **ประหยัดแบตเตอรี่** และ **เซ็นเซอร์ของอุปกรณ์เท่านั้น**

< แอดเดสส์และการซิงค์ >

อนุญาตให้แอปพลิเคชันซิงค์โครโนซ์ข้อมูลในแบ็คกราวด์ ไม่ว่าคุณจะทำสิ่งใช้งานข้อมูลอยู่หรือไม่ก็ตาม การไม่เลือกการตั้งค่านี้สามารถประหยัดไฟแบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล

ตั้งค่า

< การช่วยสำหรับการเข้าถึง >

ใช้การตั้งค่า การช่วยสำหรับการเข้าถึง เพื่อกำหนดค่าปลั๊กอินช่วยเหลือสำหรับการเข้าถึงที่คุณติดตั้ง ในโทรศัพท์

< ใช้งานมือเดียว >


ปุ่มโทร – เลือกเพื่อให้คุณย้ายปุ่มโทรไปทางด้านซ้ายหรือขวาของอุปกรณ์ เพียงแตะลูกศรเพื่อย้ายไปที่ข้างใดข้างหนึ่ง

LG คีย์บอร์ด – เลือกเพื่อให้คุณย้ายคีย์บอร์ดไปทางด้านซ้ายหรือขวาของอุปกรณ์ เพียงแตะลูกศรเพื่อย้ายไปที่ข้างใดข้างหนึ่ง

ล๊อคหน้าจอ – เลือกเพื่อย้ายคีย์แพด PIN ล๊อคหน้าจอไปทางด้านซ้ายหรือขวาของอุปกรณ์ เพียงแตะลูกศรเพื่อย้ายไปที่ข้างใดข้างหนึ่ง

ช่วยเหลือ – แสดงข้อมูลที่เกี่ยวข้องกับการใช้งานด้วยมือเดียว

< ปุ่มขอร์ทคัท >

เข้าใช้งานแอปฯ แบบรวดเร็วด้วยการกดปุ่มระดับเสียงค้างไว้เมื่อนำจอปิดหรือล๊อคอยู่ และปุ่มขอร์ทคัท  ที่มุมบนขวาของหน้าจอเพื่อสลับ **เปิด** หรือ **ปิด**

< ระบบป้องกัน >

โทรศัพท์เข้ารหัส – ให้คุณเข้ารหัสข้อมูลในโทรศัพท์เพื่อความปลอดภัย คุณจะต้องป้อน PIN หรือรหัสผ่านเพื่อถอดรหัสโทรศัพท์ในแต่ละครั้งที่คุณเปิดใช้การเข้ารหัส

เข้ารหัสระบบจัดเก็บข้อมูลการ์ด SD – ทำให้คุณสามารถเข้ารหัสข้อมูลในการ์ด SD บนโทรศัพท์เพื่อความปลอดภัย

ตั้งคาล็อคซิมการ์ด – ตั้งคาล็อคซิมการ์ดหรือเปลี่ยน PIN ของซิมการ์ด

ป้อนรหัสผ่านแบบมองเห็น – แสดงตัวอักษรชุดท้ายของรหัสผ่านที่ถูกซ่อนเมื่อคุณพิมพ์

โปรแกรมควบคุมอุปกรณ์ – ดูหรือปิดการใช้งานผู้ดูแลอุปกรณ์

แหล่งที่มาที่ไม่รู้จัก – ตั้งค่าเริ่มต้นเพื่อติดตั้งแอปพลิเคชันที่ไม่ได้มาจาก Play Store

ยืนยันแอปฯ – ไม่อนุญาตหรือเตือนก่อนติดตั้งแอปฯ ที่อาจก่อกวนอันตราย

ชนิดพื้นที่จัดเก็บข้อมูล – ฮาร์ดแวร์สำรอง

การรับรองสิทธิ์ที่ไว้วางใจได้ – แสดงการรับรองสิทธิ์ CA ที่เชื่อถือได้

ติดตั้งจากที่เก็บข้อมูล – เลือกติดตั้งใบรับรองที่เข้ารหัส

ลบจัดเก็บข้อมูล – ลบใบรับรองทั้งหมด

Trust agents – เลือกแอปฯ เพื่อใช้โดยไม่ปลดล๊อคหน้าจอ

ปักหมุดหน้าจอ – อนุญาตให้ใช้งานเฉพาะแอปฯ นั้นได้เมื่อคุณใส่ PIN หน้าจอของแอปฯ

แอปที่มีสิทธิ์เข้าถึงการใช้งาน – อนุญาตให้แอปฯ สามารถดูข้อมูล การใช้งานของแอปบนโทรศัพท์ของคุณ

< โหมด Guest >

บางแอปพลิเคชันจากเด็กฯได้ ตั้งค่าเมื่อคุณให้ผู้อื่นยืมโทรศัพท์ ให้ตั้งค่าโหมด Guest และ

< Gestures >

หน้าจอล็อคเปิด/ปิด – เลือกเพื่อเปิดใช้งาน เปิดหน้าจอล็อค เพื่อเปิดและปิดหน้าจอล็อค และสองครั้งอย่างรวดเร็วที่ตรงกลางของหน้าจอล็อคเพื่อเปิด และสองครั้งที่แถบสถานะ พื้นที่ว่างในหน้าจอล็อค หรือลือคหน้าจอล็อคเพื่อปิดหน้าจอล็อค เพื่อผลลัพธ์ที่ดีที่สุด ห้ามเคลื่อนย้ายโทรศัพท์ในขณะที่เปิดใช้งานคุณสมบัตินี้ เปิดหน้าจอล็อค อยู่

สายโทรเข้าที่รออยู่ – เลือกเพื่อปิดเสียงสายเรียกเข้าเมื่อคุณพลิกโทรศัพท์

เลื่อนหรือปิดสัญญาณเตือน – เลือกเพื่อเลื่อนหรือปิดสัญญาณเตือนเมื่อคุณพลิกอุปกรณ์

หยุดวิดีโอชั่วคราว – เลือกเพื่อหยุดวิดีโอที่กำลังเล่นอยู่ชั่วคราวเมื่อคุณพลิกอุปกรณ์

ช่วยเหลือ – เปิดคู่มือความช่วยเหลือเพื่อคู่มือการใช้งานใช้คุณสมบัตินี้ Gestures ของอุปกรณ์ของคุณ

ปรับแต่งเซนเซอร์การเคลื่อนไหว – ให้คุณปรับปรุงความแม่นยำของการเอียงและความเร็วของเซนเซอร์

< เคส QuickWindow >

เปิดใช้เพื่อทำให้ใช้งานคุณสมบัติต่างๆ เช่น บันทึกการโทร, กล้องถ่ายรูป, สุขภาพ LG, ข้อความ, เพลงได้ในมุมมองขนาดเล็กเมื่อใช้ QuickWindow Case

< วันที่และเวลา >

ใช้การตั้งค่า **วันที่และเวลา** เพื่อตั้งค่าการแสดงวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้เพื่อตั้งค่าเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์เคลื่อนที่

< ที่เก็บข้อมูล >

ที่เก็บข้อมูลภายใน – ดูการใช้ที่เก็บข้อมูลภายใน

SD การ์ด – ตรวจสอบพื้นที่การ์ด SD ที่ใช้ได้ทั้งหมด และ ยกเลิกการต่อเชื่อมการ์ด SD เพื่อถอดการ์ดออกอย่างปลอดภัย ลบการ์ด SD หากคุณต้องการลบข้อมูลทั้งหมดจากการ์ด SD

< แบตเตอรี่ >

ข้อมูลแบตเตอรี่

จะแสดงข้อมูลการชาร์จแบตเตอรี่อยู่บนกราฟิกแบตเตอรี่พร้อมกับเปอร์เซ็นต์ของพลังงานที่เหลือและสถานะ

การใช้งานแบตเตอรี่ – แสดงส่วนประกอบและแอปพลิเคชันที่กำลังใช้พลังงานแบตเตอรี่สูงสุด

แสดงเปอร์เซ็นต์แบตเตอรี่ในแถบสถานะ – เลือกเพื่อแสดงเปอร์เซ็นต์ระดับแบตเตอรี่บนแถบสถานะด้านข้างไอคอนแบตเตอรี่

ประหยัดพลังงาน

แตะสวิตช์ประหยัดพลังงานเพื่อสลับเปิดหรือปิด และประหยัดพลังงานเพื่อเข้าถึงการตั้งค่าต่อไปนี้:

ตั้งค่า

ประหยัดพลังงาน – ตั้งค่าเปอร์เซ็นต์ระดับแบตเตอรี่ที่จะให้เปิดการประหยัดพลังงานโดยอัตโนมัติ
เลือกจาก เปิดระบบประหยัดพลังงาน และ จำกัดแอปฯ ในพื้นหลัง
ช่วยเหลือ – และเพื่อดูข้อมูลวิธีใช้เกี่ยวกับเทคนิคการประหยัดพลังงาน

< แอปฯ >

ดูและจัดการแอปพลิเคชันของคุณ

< แอปข้อความเริ่มต้น >

ตั้งค่า การรับส่งข้อความ หรือ แสงเฝ้าท์เป็นแอปเริ่มต้น

< แอปค้นหาและรีเซ็ท >

เปลี่ยนการตั้งค่าสำหรับการจัดการการตั้งค่าและข้อมูลของคุณ

สำรองข้อมูลของฉัน – ตั้งค่าเพื่อสำรองข้อมูลการตั้งค่าและแอปพลิเคชันของคุณลงบนเซิร์ฟเวอร์ของ Google

แอคเคาท์ข้อมูลสำรอง – ตั้งค่าเพื่อสำรองข้อมูลแอคเคาท์ของคุณ

เรียกคืนอัตโนมัติ – ตั้งค่าให้ทำการเรียกคืนข้อมูลการตั้งค่าและแอปพลิเคชันของคุณ เมื่อมีการติดตั้งแอปพลิเคชันซ้ำบนอุปกรณ์ของคุณ

บริการ LG Backup – สำรองข้อมูลทั้งหมดในอุปกรณ์และเรียกคืนข้อมูลในกรณีที่ข้อมูลสูญหายหรือเปลี่ยนเครื่อง

รีเซ็ตข้อมูลจากโรงงาน – รีเซ็ตการตั้งค่าของคุณกลับสู่ค่าเริ่มต้นจากโรงงาน

และลบข้อมูลทั้งหมดของคุณ หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

< กำลังพิมพ์ >

ทำให้คุณสามารถพิมพ์เนื้อหาจากหน้าจอ (เช่น จากเว็บเพจที่แสดงใน Chrome) ไปยังเครื่องพิมพ์ที่เชื่อมต่ออยู่บนเครือข่าย Wi-Fi เดียวกันกับอุปกรณ์ Android ของคุณ

< เกี่ยวกับโทรศัพท์ >

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์ของคุณ

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ ผ่านสายเคเบิลการสื่อสารข้อมูล USB และ Wi-Fi เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

ด้วยซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" คุณสามารถ...

- จัดการและเล่นเนื้อหาที่มีเดียของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาที่มีเดียไปยังอุปกรณ์ของคุณ
- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุคลากร) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ
- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองและเรียกคืนข้อมูลอุปกรณ์ของคุณ
- เล่นเนื้อหาที่มีเดียในคอมพิวเตอร์ของคุณจากอุปกรณ์ของคุณ
- สำรองและสร้างและแก้ไขบันทึกในอุปกรณ์ของคุณ

หมายเหตุ: คุณสามารถใช้เมนู วิธีใช้ จากแอปพลิเคชันเพื่อค้นหาระบบการใช้งานซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" ของคุณได้

การติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" สามารถดาวน์โหลดได้จากเว็บไซต์ของ LG

- 1 ไปที่ www.lg.com และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ **บริการ > บริการโทรศัพท์มือถือ > โทรศัพท์มือถือ LG > เลือกรุ่น**
หรือ
ไปที่ **บริการ > โทรศัพท์มือถือ > เลือกรุ่น**
- 3 คลิก **PC SYNC** จาก **คู่มือและการดาวน์โหลด** จากนั้นคลิก **ดาวน์โหลด** เพื่อดาวน์โหลดซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ข้อกำหนดของระบบสำหรับ "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32 บิต, Windows Vista, Windows 7, Windows 8
- CPU: โปรเซสเซอร์ 1 GHz หรือสูงกว่า
- หน่วยความจำ: 512 MB RAM หรือสูงกว่า
- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 500 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น โดยขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG, Windows Media Player 10 หรือใหม่กว่า

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

ไดรเวอร์ USB ในตัวของ LG จำเป็นในการเชื่อมต่ออุปกรณ์ LG และคอมพิวเตอร์ และไดรเวอร์จะถูกติดตั้งโดยอัตโนมัติ เมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

การซิงโครไนซ์อุปกรณ์ของคุณกับคอมพิวเตอร์

ข้อมูลจากอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ง่ายๆ ด้วยซอฟต์แวร์ "LG PC Suite" เพื่อความสะดวกของคุณ รายชื่อ กำหนดการ และปฏิทินสามารถซิงโครไนซ์ได้ ขั้นตอนจะมีดังต่อไปนี้:

- 1 เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ของคุณ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)
- 2 **เลือกรหัสเชื่อมต่อแบบ USB** จะปรากฏขึ้น แล้วเลือก**อุปกรณ์สื่อ (MTP)**
- 3 หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
- 4 คลิก **ข้อมูลส่วนตัว** เพื่อเลือก
- 5 ทำเครื่องหมายที่ช่องเนื้อหาเพื่อซิงโครไนซ์ และคลิกที่ปุ่ม **ซิงค์**

หมายเหตุ: ในการซิงโครไนซ์โทรศัพท์กับคอมพิวเตอร์ คุณต้องติดตั้ง LG PC Suite ในคอมพิวเตอร์ โปรดดูหน้าก่อนหน้านี้นี้สำหรับการติดตั้ง LG PC Suite

การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

- 1 แอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync
- 2 ติดตั้ง "LG PC Suite" ในคอมพิวเตอร์ก่อน เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 ที่เมนูบนสุด เลือก **Device > Import to device > Import contacts**
- 4 หน้าต่างป๊อปอัพเพื่อเลือกประเภทไฟล์และไฟล์ที่จะอิมพอร์ตจะปรากฏขึ้น
- 5 บนป๊อปอัพ คลิก **Select a file** แล้ว Windows Explorer จะปรากฏขึ้น
- 6 เลือกไฟล์รายชื่อที่จะอิมพอร์ตใน Windows Explorer แล้วคลิก **Open**
- 7 คลิก **OK**
- 8 ป๊อปอัพ **Field mapping** เพื่อลิงค์รายชื่อในอุปกรณ์ของคุณและข้อมูลรายชื่อใหม่จะปรากฏขึ้น
- 9 หากมีการขัดแย้งระหว่างข้อมูลในรายชื่อ PC และรายชื่ออุปกรณ์ ให้ทำการเลือกหรือแก้ไขที่จำเป็นใน LG PC Suite
- 10 คลิก **OK**

อัปเดตซอฟต์แวร์โทรศัพท์

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://www.lg.com/common/index.jsp>
→ เลือกประเทศและภาษาของคุณ

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายข้อมูล USB ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือของคุณเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้นตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตซอฟต์แวร์ของโทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อโดยใช้สายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

คุณควรตรวจสอบเวอร์ชันของซอฟต์แวร์ในโทรศัพท์มือถือของคุณก่อน: **ตั้งค่า > แท็บ ทั่วไป > เกี่ยวกับโทรศัพท์ > แท็บ ร่วมกัน > ศูนย์กลางอัปเดต > Software Update > ตรวจสอบอัปเดตในตอนนี้**

หมายเหตุ: ข้อมูลส่วนตัวของคุณจากพื้นที่การจัดเก็บภายในโทรศัพท์—รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google ของคุณและแอคเคาท์อื่นๆ, ข้อมูลระบบหรือแอปพลิเคชัน และการตั้งค่าของคุณ, แอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM—อาจสูญหายในกระบวนการอัปเดตซอฟต์แวร์ของโทรศัพท์ ดังนั้น LG ขอแนะนำให้สำรองข้อมูลส่วนตัวก่อนการอัปเดตซอฟต์แวร์ของโทรศัพท์ LG ไม่รับประกันการสูญหายของข้อมูลส่วนตัวใดๆ

หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการเครือข่าย ภูมิภาค และประเทศของคุณ

เกี่ยวกับคู่มือผู้ใช้

เกี่ยวกับคู่มือผู้ใช้

- โปรดอ่านคู่มือนี้โดยละเอียดก่อนการใช้งานอุปกรณ์ เพื่อให้มั่นใจว่าคุณใช้โทรศัพท์ของคุณได้อย่างถูกต้องและปลอดภัย
- ภาพและภาพหน้าจอบางภาพที่มีในคู่มือนี้อาจแตกต่างจากที่แสดงบนโทรศัพท์ของคุณ
- เนื้อหาของคุณอาจแตกต่างจากผลิตภัณฑ์ที่วางจำหน่าย หรือจากซอฟต์แวร์ที่มาจากผู้ให้บริการหรือเครือข่าย เนื้อหานี้อาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า สำหรับเวอร์ชันล่าสุดของคู่มือนี้ โปรดดูที่เว็บไซต์ LG ที่ www.lg.com
- แอปพลิเคชันและฟังก์ชันของโทรศัพท์อาจแตกต่างกันตามประเทศ ภูมิภาค หรือข้อมูลจำเพาะของฮาร์ดแวร์ LG ไม่รับผิดชอบต่อปัญหาด้านประสิทธิภาพที่เกิดจากการใช้แอปพลิเคชันที่พัฒนาขึ้นโดยผู้ให้บริการอื่นที่ไม่ใช่ LG
- LG ไม่รับผิดชอบต่อปัญหาด้านประสิทธิภาพหรือการไม่สามารถใช้งานร่วมกันได้ที่เกิดจากการแก้ไข การตั้งค่าริชชีหรือการแก้ไขซอฟต์แวร์ระบบการปฏิบัติการ ความพยายามในการปรับแต่งระบบปฏิบัติการอาจทำให้อุปกรณ์หรือแอปพลิเคชันของอุปกรณ์ทำงานผิดปกติ
- ซอฟต์แวร์, เสียง, พื้นหลัง, ภาพ และมีเดียที่มีมาให้อุปกรณ์ของคุณได้รับอนุญาตเพื่อการใช้งานที่จำกัด หากคุณจัดเก็บข้อมูลและใช้ข้อมูลเหล่านี้เพื่อการพาณิชย์หรือวัตถุประสงค์อื่นๆ คุณอาจละเมิดกฎหมายลิขสิทธิ์ ในฐานะผู้ใช้งาน คุณมีส่วนรับผิดชอบอย่างสมบูรณ์สำหรับการใช้มีเดียอย่างผิดกฎหมาย
- อาจมีค่าใช้จ่ายเพิ่มเติมสำหรับบริการข้อมูล เช่น ข้อความ, การอัปโหลดและดาวน์โหลด, ซิงค์อัตโนมัติ หรือการให้บริการระบุพิกัด เพื่อหลีกเลี่ยงค่าใช้จ่ายเพิ่มเติม ให้เลือกแผนบริการข้อมูลที่เหมาะกับความต้องการของคุณ ติดต่อผู้ให้บริการของคุณเพื่อรับรายละเอียดเพิ่มเติม

เครื่องหมายการค้า

- LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Electronics
- เครื่องหมายการค้าและลิขสิทธิ์อื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ

DivX HD

เกี่ยวกับวิดีโอ DivX: DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ซึ่งผ่านการทดสอบที่เข้มงวดเพื่อยืนยันว่าเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ divx.com

เกี่ยวกับ DivX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียน

เพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้
ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณ
ไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

DivX Certified® สำหรับเล่นวิดีโอ DivX® ไม่เกิน HD 720p รวมถึงเนื้อหาพรีเมียม
DivX®, DivX Certified® และโลโก้ที่เกี่ยวข้องเป็นเครื่องหมายการค้าของ
Rovi Corporation หรือบริษัทในเครือ และใช้โดยได้รับอนุญาต

Dolby Digital Plus  **DOLBY**
DIGITAL PLUS

ผลิตภายใต้การอนุญาตของ Dolby Laboratories Dolby, Dolby Digital Plus
และสัญลักษณ์ตัวอักษร D สองตัว เป็นเครื่องหมายการค้าของ Dolby Laboratories

ประกาศ: ซอฟต์แวร์โอเพ่นซอร์ส


ในการขอรับซอร์สโค้ดที่เกี่ยวข้องตาม GPL, LGPL, MPL และและใบอนุญาตโอเพ่นซอร์สอื่นๆ
โปรดไปที่ <http://opensource.lge.com/>

เงื่อนไขใบอนุญาต การปฏิเสธการรับผิดชอบ และประกาศที่อ้างอิงถึงทั้งหมด สามารถดาวน์โหลด
ได้พร้อมกับซอร์สโค้ด

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ของคุณ (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อะแดปเตอร์สำหรับ
ชาร์จแบตเตอรี่




ชุดหูฟังสเตอริโอ



คู่มือแนะนำอย่างย่อ



สายเคเบิลข้อมูล



แบตเตอรี่



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสินเลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงบวรคดี เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-เสาร์,

08:00 - 18:00น.

Call center : 0-2878-5757

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบเมื่อใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหามางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ซิมการ์ด ผิดพลาด	ไม่ได้ใส่ซิมการ์ด ในโทรศัพท์ หรือใส่ ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อม ต่อกับเครือข่าย /เครือข่ายขาด หาย	สัญญาณอ่อนหรือ คุณอยู่นอกเครือข่ายผู้ ให้บริการ	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ เครือข่าย
	ผู้ให้บริการ ใช้บริการใหม่	ตรวจสอบว่าซิมการ์ดใช้งานมากกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมการ์ด ของคุณที่สาขาของผู้ให้บริการเครือข่ายที่ใกล้ ที่สุด ติดต่อผู้ให้บริการ
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน กัน คุณต้องยืนยัน รหัสใหม่โดยป้อน รหัสใหม่ซ้ำ	หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ
	รหัสที่คุณป้อนทั้งสอง ครั้งไม่ตรงกัน	
ไม่สามารถ ตั้งค่าแอป พลิเคชัน	ผู้ให้บริการไม่สนับสนุน หรือต้องลง ทะเบียน	ติดต่อผู้ให้บริการ

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต
	มีการใส่ซิมการ์ดใหม่	ตรวจสอบข้อกำหนดใหม่
	ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดแล้วปล่อยเร็วเกินไป	กดปุ่มเปิด/ปิดอย่างน้อยสองวินาที
	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์กำลังชาร์จบนหน้าจอ
ข้อผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่
	อุณหภูมิภายนอกร้อนหรือเย็นเกินไป	ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จไฟที่อุณหภูมิปกติ
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อของอุปกรณ์ชาร์จกับโทรศัพท์
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น
	อุปกรณ์ชาร์จชำรุด	เปลี่ยนอุปกรณ์ชาร์จ
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่อนุญาตให้ใช้ตัวเลข	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว
ไม่สามารถรับ / ส่ง SMS และรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความบางข้อความออกจากโทรศัพท์
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่สนับสนุน
หน้าจอไม่ทำงานเมื่อจัมรับสาย	เซนเซอร์หน้าจอมีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์หน้าจอสะอาด
ไม่มีเสียง	โหมดสั่น	ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดสั่นหรือโหมดปิดเสียง
โทรศัพท์ค้างหรือไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ลองใช้งานการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์

คำถามที่พบบ่อย

ชนิด ชนิดย่อย	คำถาม	คำตอบ
BT Bluetooth อุปกรณ์	ฟังก์ชันที่ใช้ได้ผ่าน Bluetooth มีอะไรบ้าง	คุณสามารถเชื่อมต่ออุปกรณ์เสียง Bluetooth เช่น ชุดหูฟังสเตอริโอ/ไมโน หรือชุดติด รถยนต์ได้ และเมื่อเซิร์ฟเวอร์ FTP เชื่อมต่อกับ อุปกรณ์ที่ใช้งานร่วมกัน คุณสามารถแบ่งปันเนื้อ หาที่จัดเก็บในมือถือที่เก็บข้อมูลได้
ข้อมูล รายชื่อ สำรองข้อมูล	ฉันจะสามารถสำรองข้อมูล รายชื่อได้อย่างไร	ข้อมูลรายชื่อสามารถซิงโครไนซ์ระหว่าง โทรศัพท์ของคุณกับ Gmail™ ได้
ข้อมูล การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะตั้งค่า การซิงค์ทางเดียวกับ Gmail	มีเฉพาะการซิงโครไนซ์สองทางให้ใช้งาน
ข้อมูล การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะซิงโคร ไนซ์โฟลเดอร์อีเมลทั้งหมด	ถ้าจะซิงโครไนซ์โดยอัตโนมัติ คุณสามารถดูโฟลเดอร์อื่นๆ ได้โดยการแตะ ปุ่มเมนู แล้วเลือก โฟลเดอร์ เพื่อเลือกโฟลเดอร์
บริการของ Google™ ล็อกอิน Gmail	ฉันต้องล็อกอิน Gmail เมื่อต้องการเข้าถึง Gmail หรือไม่	เมื่อคุณล็อกอิน Gmail แล้ว คุณไม่จำเป็นต้องล็อกอิน Gmail อีก
บริการของ Google™ บัญชี Google	เป็นไปได้หรือไม่ที่จะ ฟิลเตอร์อีเมล	ไม่ได้ ไม่สนับสนุนการฟิลเตอร์อีเมลผ่าน โทรศัพท์
ฟังก์ชัน โทรศัพท์ อีเมล	จะเกิดอะไรขึ้นเมื่อฉันใช้ งานแอปพลิเคชันอื่นขณะ เขียนอีเมล	อีเมลของคุณจะถูกบันทึกเป็นร่างโดยอัตโนมัติ
ฟังก์ชัน โทรศัพท์ เสียงเรียกเข้า	เมื่อฉันใช้ไฟล์ .MP3 เป็นเสียงเรียกเข้า จะมี การจำกัดขนาดไฟล์ หรือไม่	ไม่มีการจำกัดขนาดไฟล์

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชัน โทรศัพท์ เวลาข้อความ	โทรศัพท์ของฉันไม่แสดง เวลาที่ได้รับข้อความที่เก่า เกิน 24 ชั่วโมงได้ ฉัน สามารถดูเวลาหรือไม่	เปิดการสนทนาและแตะข้อความที่ต้องการ แล้วแตะรายละเอียด
ฟังก์ชัน โทรศัพท์ การนำทาง	เป็นไปได้หรือไม่ที่จะติดตั้ง แอปพลิเคชันการนำทางอื่น ในโทรศัพท์ของฉัน	แอปพลิเคชันที่มีอยู่ที่ Play Store™ และใช้งาน ร่วมกับฮาร์ดแวร์ได้สามารถติดตั้งและใช้งานได้
ฟังก์ชัน โทรศัพท์ การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะซิง โครไนซ์รายชื่อจากแอค เคาท์อีเมลทั้งหมดของฉัน	สามารถซิงโครไนซ์ได้เฉพาะรายชื่อของ Gmail และเซิร์ฟเวอร์ MS Exchange (เซิร์ฟเวอร์อีเมลของบริษัท) เท่านั้น
ฟังก์ชัน โทรศัพท์ รอและหยุด ชั่วคราว	เป็นไปได้หรือไม่ที่จะบันทึก รายชื่อด้วยรอยรอยและ หยุดพักในรูปแบบหมายเลข	<p>หากคุณโอนรายชื่อด้วยฟังก์ชัน W & P เป็นหมายเลข คุณจะไม่สามารถใช้คุณสมบัติ เหล่านั้นได้ คุณจะต้องบันทึกแต่ละหมายเลข ใหม่อีกครั้ง</p> <p>วิธีการบันทึกด้วยรอและหยุดชั่วคราว:</p> <ol style="list-style-type: none"> 1. จากหน้าจอหลัก ให้แตะไอคอน โทรศัพท์ 2. กดหมายเลขโทรศัพท์ และแตะ ปุ่มเมนู 3. แตะ การเพิ่มหยุดชั่วคราว 2 วันที่ หรือ เพิ่มการรอ
ฟังก์ชัน โทรศัพท์ ระบบป้องกัน	ฟังก์ชันระบบป้องกันของ โทรศัพท์มีอะไรบ้าง	คุณสามารถตั้งค่าโทรศัพท์ให้ต้องป้อนแบบปลด ล็อคก่อนที่จะเข้าใช้หรือใช้งานโทรศัพท์ได้

คำถามที่พบบ่อย

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชัน โทรศัพท์ ปลดล็อค แบบ	ฉันจะสร้างแบบ ปลดล็อคได้อย่างไร	<ol style="list-style-type: none">1. จากหน้าจอหลัก ให้แตะค้างไว้ที่ ปุ่มแอปล่าสุด <input type="checkbox"/>2. แตะ การตั้งค่าระบบ > แท็บ หน้าจอ > ล็อคหน้าจอ3. แตะ เลือกแบบล็อคหน้าจอ > รูปแบบ ในครั้งแรก จะมีการแสดงบทช่วยสอนสั้นๆ เกี่ยวกับการสร้างแบบปลดล็อค4. ตั้งค่าโดยการวาดแบบของคุณหนึ่งครั้ง และอีกครั้งเพื่อยืนยัน <p>ข้อควรระวังเมื่อใช้ล็อคแบบ</p> <p>สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หาก คุณใช้แบบไม่ถูกต้องห้าครั้ง คุณมีโอกาสเพียง ห้าครั้งในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลัง จากผ่านไป 30 วินาที (หรือหากคุณตั้งค่าแบ็คอัพ PIN ไว้แล้ว คุณสามารถใช้รหัสแบ็คอัพ PIN เพื่อปลดล็อคแบบได้)</p>

ชนิด ชนิดย่อย	คำถาม	คำตอบ
<p>ฟังก์ชัน โทรศัพท์ ปลดล็อค แบบ</p>	<p>ฉันควรทำอะไรหาก ฉันลืมแบบปลดล็อคและ ไม่ได้สร้างบัญชี Google ในโทรศัพท์</p>	<p>หากคุณลืมแบบของคุณ: หากคุณล็อกอินบัญชี Google ในโทรศัพท์ แต่ป้อนรูปแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้น คุณจะต้องลงชื่อเข้าใช้ด้วยแอด เดสก์ท็อปของคุณเพื่อปลดล็อคโทรศัพท์ หากคุณไม่ได้สร้างบัญชี Google บนโทรศัพท์ หรือคุณลืมแอดเดสก์ท็อป คุณต้องทำการ Hard Reset</p> <p>ข้อควรระวัง: หากคุณทำการรีเซ็ตค่าจากโรงงาน ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ โปรดอย่า ลืมสำรองข้อมูลสำคัญไว้ก่อนทำการรีเซ็ต ค่าจากโรงงาน</p>
<p>ฟังก์ชัน โทรศัพท์ หน่วยความจำ</p>	<p>ฉันจะรู้ว่าหน่วยความจำ เต็มได้หรือไม่</p>	<p>ได้ คุณจะได้รับการแจ้งเตือน</p>
<p>ฟังก์ชัน โทรศัพท์ การสนับสนุน ภาษา</p>	<p>เป็นไปได้หรือไม่ที่จะ เปลี่ยนภาษาของ โทรศัพท์ของฉัน</p>	<p>โทรศัพท์มีความสามารถหลายภาษา การเปลี่ยนภาษา:</p> <ol style="list-style-type: none"> 1. จากหน้าจอล็อก ให้แตะค้างไว้ที่ ปุ่มแอปล่าสุด <input type="checkbox"/> และแตะ การตั้งค่าระบบ 2. แตะแท็บ ทั่วไป > ภาษาและการป้อนข้อมูล > ภาษา 3. แตะภาษาที่ต้องการ
<p>ฟังก์ชัน โทรศัพท์ VPN</p>	<p>ฉันจะตั้งค่า VPN ได้อย่างไร</p>	<p>การกำหนดค่าการเข้าถึง VPN จะแตกต่างกันสำหรับแต่ละบริษัท ในการกำหนดค่าการเข้าถึง VPN จากโทรศัพท์ของคุณ คุณต้องมีรายละเอียดจาก ผู้ดูแลระบบเครือข่ายของบริษัทของคุณ</p>

คำถามที่พบบ่อย

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชัน โทรศัพท์ ระยยะหมด เวลาหน้าจอ	หน้าจอของฉันปิดหลังจาก เพียงแค่ 15 วินาที ฉันจะเปลี่ยนระยะเวลา สำหรับการปิดไฟหน้าจอ ได้อย่างไร	<ol style="list-style-type: none">1. จากหน้าจอหลัก ให้แตะค้างไว้ที่ ปุ่มแอปล่าสุด <input type="checkbox"/>2. แตะ การตั้งค่าระบบ > แท็บ หน้าจอ3. แตะ ใหม่เอาต์หน้าจอ4. แตะระยยะหมดเวลาไฟหน้าจอที่ต้องการ
ฟังก์ชัน โทรศัพท์ Wi-Fi และ เครือข่าย โทรศัพท์ เคลื่อนที่	เมื่อใช้ได้ทั้ง Wi-Fi และ เครือข่ายโทรศัพท์เคลื่อนที่ ที่ โทรศัพท์ของฉันจะใช้ บริการใด	เมื่อใช้ข้อมูล โทรศัพท์ของคุณอาจใช้การเชื่อมต่อ ต่อ Wi-Fi เป็นค่าเริ่มต้น (หากเปิดการเชื่อมต่อ Wi-Fi ในโทรศัพท์) อย่างไรก็ตาม จะไม่มีการ แจ้งเตือนเมื่อโทรศัพท์เปลี่ยนจากบริการหนึ่ง ไปสู่อีกบริการหนึ่ง หากต้องการทราบว่ากำลังใช้การเชื่อมต่อข้อมูล ใด ให้ดูไอคอนเครือข่ายโทรศัพท์เคลื่อนที่หรือ Wi-Fi ที่บนสุดของหน้าจอ
ฟังก์ชัน โทรศัพท์ หน้าจอหลัก	เป็นไปได้หรือไม่ที่จะลบ แอปพลิเคชันออกจาก หน้าจอหลัก	ได้ เพียงแตะไอคอนค้างไว้จนกว่าไอคอนถึงขยะ ปรากฏขึ้นที่บริเวณมุมขวบนของหน้าจอ จากนั้น ลากไอคอนไปยังถึงขยะโดยไม่ต้องยกนิ้วขึ้น
ฟังก์ชัน โทรศัพท์ แอปพลิเคชัน	ฉันดาวน์โหลดแอปพลิเคชัน และแอปพลิเคชันนั้นทำ ให้เกิดข้อผิดพลาดจำนวนมาก ฉันจะลบได้อย่างไร	<ol style="list-style-type: none">1. จากหน้าจอหลัก ให้แตะค้างไว้ที่ ปุ่มแอปล่าสุด <input type="checkbox"/>2. แตะ การตั้งค่าระบบ > แท็บ ทัวไป > แอปฯ > ดาวน์โหลด3. แตะแอปพลิเคชัน แล้วแตะ ถอนการติดตั้ง
ฟังก์ชัน โทรศัพท์ อุปกรณ์ชาร์จ	ฉันสามารถชาร์จโทรศัพท์ ของฉันโดยใช้สายเคเบิล ข้อมูล USB โดยไม่ติดตั้ง ไดรเวอร์ USB ที่จำเป็น ได้หรือไม่	ได้ โทรศัพท์จะชาร์จไฟจากสายเคเบิล USB ไม่ว่าจะมีการติดตั้งไดรเวอร์ที่จำเป็นหรือไม่
ฟังก์ชัน โทรศัพท์ การปลุก	ฉันสามารถใช้ไฟล์เพลง ของฉันในการปลุก ได้หรือไม่	ได้ ในการตั้งค่านาฬิกาปลุก ให้เลือกเพลงเป็นเสียงปลุก

ชนิดชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์การปลุก	การปลุกจะส่งเสียงหรือไม่หากโทรศัพท์ปิดอยู่	ไม่ ไม่สนับสนุนการทำงานนี้
ฟังก์ชันโทรศัพท์การปลุก	ถ้าระดับเสียงสั้นของฉันถูกตั้งค่าให้สั้นผมจะได้ยินเสียงสัญญาณเตือนภัยของฉันได้อย่างไร	การปลุกของคุณถูกกำหนดให้ส่งเสียงแม้ในสถานการณ์เหล่านี้
โซลูชันการกู้คืนข้อมูล Hard Reset (รีเซ็ตค่าจากโรงงาน)	ฉันจะทำการรีเซ็ตค่าจากโรงงานได้อย่างไร หากฉันไม่สามารถเข้าไปที่เมนูการตั้งค่าของโทรศัพท์ได้	หากโทรศัพท์ของคุณไม่สามารถแก้ไขสถานะเดิมได้ ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่มต้นของโทรศัพท์



ENGLISH

User Guide

- Screen displays and illustrations may differ from those you see on actual phone.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the tap screen keyboard.
- Copyright ©2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

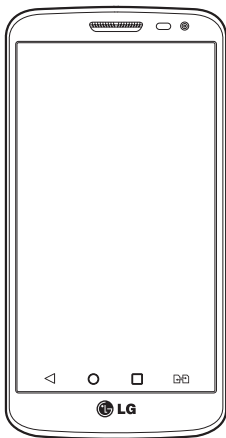


Table of contents

Guidelines for safe and efficient use	5	Enjoying the content from Nearby devices	35
Important notice	11	PC connections with a USB cable	35
Getting to know your phone	16	Calls	37
Phone overview	16	Making a call	37
Installing the SIM card and battery	18	Calling your contacts	37
Charging your phone	20	Answering and rejecting a call	37
Using the memory card	21	Adjusting the in-call volume	37
Locking and unlocking the screen	22	Making a second call	38
Your Home screen	23	Viewing your call logs	38
Touch screen tips	23	Call settings	38
Home screen	23	Contacts	39
Extended home screen	24	Searching for a contact	39
Customizing the Home screen	25	Adding a new contact	39
Returning to recently-used applications	25	Favourites contacts	39
Notifications panel	26	Creating a group	40
Using Dual SIM	26	Messaging	41
Opening the notifications panel	27	Sending a message	41
Indicator icons on the Status Bar	27	Threaded box	41
On-screen keyboard	29	Changing your message settings	42
Entering accented letters	29	E-mail	43
Google account setup	30	Managing an email account	43
To set up your Google account	30	Working with account folders	43
Connecting to Networks and Devices	31	Composing and sending email	43
Wi-Fi	31	Camera	44
Connecting to Wi-Fi networks	31	Getting to know the viewfinder	44
Turning Wi-Fi on and connecting to a Wi-Fi network	31	Using the advanced settings	45
Bluetooth	32	Taking a quick photo	46
Sharing your phone's data connection	33	Using Time catch shot mode	46
Wi-Fi Direct	34	Once you've taken a photo	47
SmartShare	34	Video camera	48

Getting to know the viewfinder	48	Voice Search	63
Using the advanced settings.....	49	Downloads	63
Recording a quick video	49	LG SmartWorld	64
After recording a video	50	How to Get to LG SmartWorld from Your Phone	64
Function	51	How to use LG SmartWorld.....	64
Knock Code.....	51	The Web	65
QuickMemo+	51	Internet	65
Using the QuickMemo+ options.....	52	Using the Web toolbar	65
Viewing the saved QuickMemo+	53	Viewing webpages	65
QSlide	53	Opening a page	65
QuickRemote	54	Searching the web by voice	65
Multimedia.....	56	Bookmarks	66
Gallery	56	History	66
Viewing pictures	56	Chrome.....	66
Playing videos.....	56	Viewing webpages	66
Editing photos.....	56	Opening a page	66
Deleting photos/videos	56	Settings.....	67
Setting as wallpaper.....	57	Networks	67
Videos.....	57	Sound	69
Playing a video	57	Display.....	70
Music.....	58	General	72
Playing a song	58	PC software (LG PC Suite)	75
Add music files to your phone.....	59	Phone software update	77
FM Radio	60	Phone software update.....	77
Utilities	61	About this user guide	78
Setting your alarm.....	61	About this user guide	78
Using your calculator.....	61	Trademarks.....	78
Adding an event to your calendar	61	DivX HD.....	78
Voice Recorder	62	Dolby Digital Plus	79
Recording a sound or voice	62		
Tasks	62		
ThinkFree Viewer.....	63		
Google+	63		

Table of contents

Accessories.....	80
Troubleshooting.....	81
FAQ.....	84

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log.

This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-D618 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.361 W/kg (10g) and when worn on the body is 0.460 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Guidelines for safe and efficient use

Product care and maintenance



WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Guidelines for safe and efficient use

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.

Guidelines for safe and efficient use

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-D618** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

Important notice



Please read this before you start using your phone!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab > **Settings** > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.



2. Optimizing battery life

Extend your battery's power by turning off features that you don't have to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.
- While using downloaded applications, check the battery charge level.



To check the battery power level:

- Tap  >  > **Apps** tab > **Settings** > **General** tab > **About phone** > **Common** > **Battery**.

The battery status (charging or discharging) and battery level (percentage charged) is displayed at the top of the screen.

Important notice

To monitor and control how battery power is being used:

- Tap  >  > **Apps** tab > **Settings** > **General** tab > **About phone** > **Common** > **Battery** > **Battery usage**.

Battery usage time is displayed on the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power.

The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Before installing an open source application and OS



WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.



WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, the phone may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

4. Using an unlock pattern

Set an unlock pattern to secure your phone. Tap  >  > **Apps** tab > **Settings** > **Display** tab > **Lock screen** > **Select screen lock** > **Pattern**. This opens a screen that will guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure in case you forget your unlock pattern.

Caution: Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.



WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN or Password:

< If you have forgotten your pattern >

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

< If you have forgotten your PIN or Password >

If you forget your PIN or Password, you will need to perform a hard reset.

Caution: If you perform a hard reset, all user applications and user data will be deleted.

NOTE: If you have not logged into your Google Account and have forgotten your Unlock Pattern, you will need to enter your Backup PIN.

5. Using the Hard Reset (Factory Reset)

If your phone does not restore to its original condition, use a Hard Reset (Factory Reset) to initialize it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock Key + Volume Down Key** on the phone.
- 3 Release the **Power/Lock Key** only when the LG logo is displayed, then immediately press and hold the **Power/Lock Key** again.
- 4 Release all keys when the Factory data reset screen is displayed.
- 5 Press the **Volume Key** to scroll to the desired option, then press the **Power/Lock Key** to confirm.
- 6 Press the **Volume Key** to scroll to the desired option, then press the **Power/Lock Key** to confirm one more time.

Important notice





WARNING



If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

6. Opening and switching applications

Multi-tasking is easy with Android, you can keep more than one application running at the same time. There is no need to quit an application before opening another one. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

- 1 Touch the **Recent Apps Key** . A list of recently used applications will be displayed.
 - 2 Tap the application you want to access. This does not stop the previous app running in the background on the phone. Make sure to tap **Back Key**  to exit an app after using it.
- To stop applications, tap **Task Manager** from the recent apps list, then tap **Stop** or **Stop all**.
 - To remove an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

7. Transferring music, photos and videos using Media device (MTP)

- 1 Tap  >  > **Apps** tab > **Settings** > **General** tab > **Storage** to check out the storage media.
- 2 Connect the phone to your PC using the USB cable.
- 3 Slide down the status bar and select the **Media device (MTP)** option.
- 4 Open the memory folder on your PC. You can view the mass storage content on your PC and transfer the files from PC to Device memory folder or vice versa.

8. Hold your phone upright

Hold your cell phone vertically, as you would a regular phone. Your phone has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

When making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.


9. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Press and hold the **Power/Lock Key** for 10 seconds to turn your phone off. If it still does not work, please contact the service center.

Getting to know your phone

Phone overview

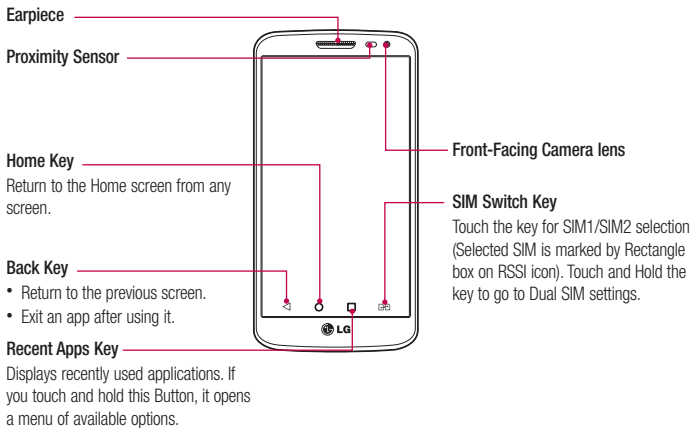

NOTE: Proximity sensor


When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

WARNING


Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

Volume keys

- In the Home screen: Control ringer volume.
- During a call: Control your earpiece volume.
- When playing a song: Control volume continuously.

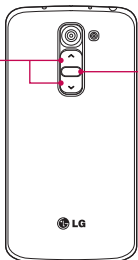

Power/Lock Key

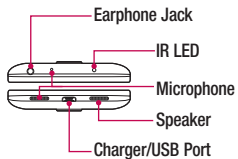

SIM1/micro SD cards slot

(Upper slot for micro SD and Lower slot for SIM1)


Flash

Camera lens

SIM2 card slot

Battery cover

Battery

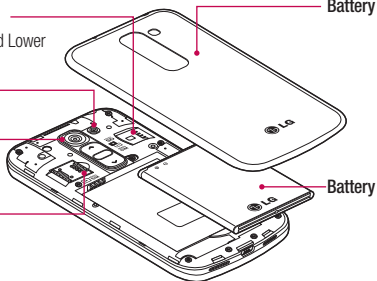


Getting to know your phone


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery.


- 1 To remove the battery cover, hold the phone firmly in one hand. With your other hand, lift off the battery cover with your thumbnail as shown in figure.

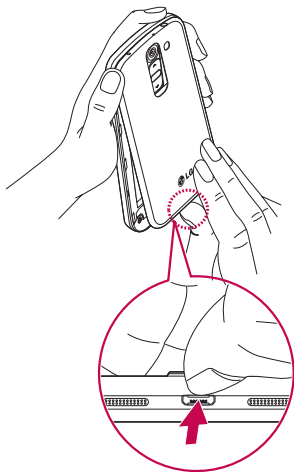

- 2** Slide the SIM card into its slots as shown in the figure. Make sure the gold contact area on the card is facing downwards.

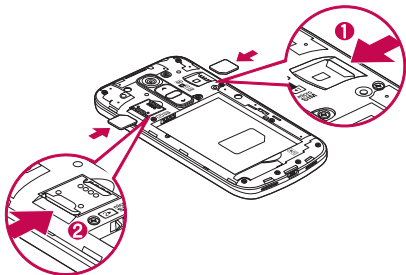


- 3** Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).

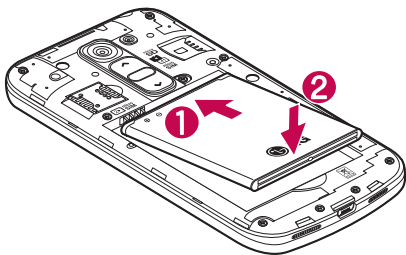

Getting to know your phone

- 4 Align the battery cover over the battery compartment (1) and press it down until it clicks into place (2).

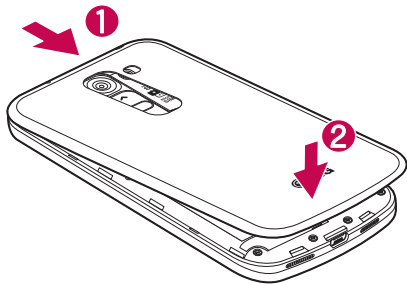


Charging your phone

Charge the battery before using it for the first time. Use the charger to charge the battery. A computer can be also used to charge the device by connecting them via the USB cable.

WARNING

Use only LG-approved chargers, batteries, and cables. When using unapproved chargers or cables, it may cause battery charging delay or pop-up message regarding slow charging. Or, unapproved chargers or cables can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.

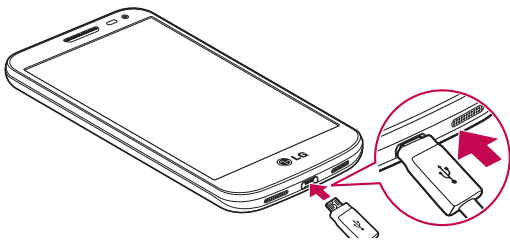

NOTE:

- The battery must be fully charged initially to improve battery lifetime.
- Do not open the back cover while your phone is charging.

Using the memory card


Your phone supports the use of microSD™ or microSDHC™ memory cards of up to 32 GB capacity. These memory cards are specifically designed for mobile phones and other ultra-small devices, and are ideal for storing media-rich files such as music, programs, videos, and photographs for use with your phone.

To insert a memory card:

Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

To safely remove the memory card:

Touch  > Apps tab > Settings > General tab > Storage > Unmount SD card.

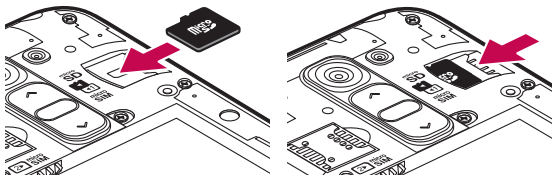

Getting to know your phone

NOTE:

- Use only compatible memory cards with your phone. Using incompatible memory cards may damage the card and data stored on the card, as well as the phone.
- As the device uses FAT32, the maximum size for any given file is 4 GB.




WARNING

Do not insert or remove the memory card when the phone is ON. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may become corrupt.

To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on your memory card are deleted when it is formatted.

- 1 Touch  to open the application list.
- 2 Scroll and touch **Settings** > **General** tab > **Storage**.
- 3 Touch **Unmount SD card**.
- 4 Touch **Erase SD card** > **Erase SD card** > **Erase everything**.
- 5 If you have set a pattern lock, input the pattern lock then select **Erase everything**.

NOTE: If there is content on your memory card, the folder structure may be different after formatting, as all the files will have been deleted.

Locking and unlocking the screen

If you do not use the phone for a while, the screen will be automatically turned off and locked. This helps to prevent accidental taps and saves battery power.

When you are not using the phone, press the **Power/Lock key**  to lock your phone.

If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

Your Home screen

Touch screen tips

Here are some tips on how to navigate on your phone.

Tap or touch – A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold – Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag – Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap – Double-tap to zoom on a webpage or a map. For example, quickly double-tap a section of a webpage to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out while viewing the picture.

Pinch-to-Zoom – Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures.

Rotate the screen – From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.


NOTE:

- To select an item, tap the center of the icon.
- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys.

Home screen

The Home screen is the starting point for many applications and functions, and it allows you to add items like application shortcuts, or Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

Your Home screen

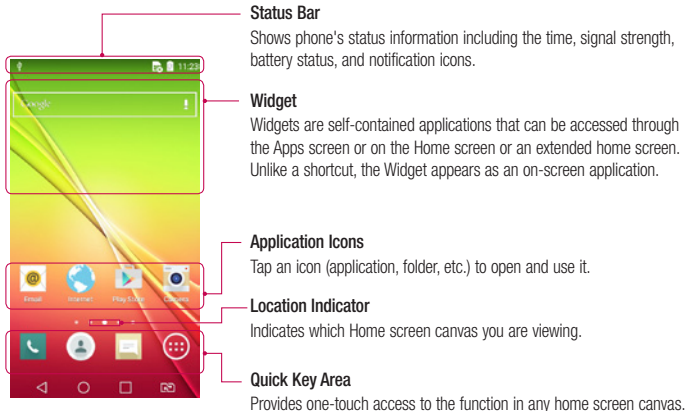

Extended home screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets, and more.

- ▶ Slide your finger left or right across the Home screen.

Customizing the Home screen


You can customize your Home screen by adding apps, widgets or changing wallpapers.

To add items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you wish to add. You will then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

TIP! To add an application icon to the Home screen from the Apps menu, touch and hold the application you want to add.

To remove an item from the Home screen


- ▶ Home screen > touch and hold the icon you want to remove > drag it to  **Remove**.

To add an app as a Quick key


- ▶ From the Apps menu or on the Home screen, touch and hold an application icon and drag it to the Quick key area.

To remove an app from the Quick key area

- ▶ Touch and hold the desired quick key and drag it to  **Remove**.

NOTE:  **Apps** key cannot be removed.

To customize apps icons on the Home screen

- 1 Touch and hold an application icon until it is unlocked from its current position. Then drop it on the screen. The editing icon  will appear in the upper right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

Returning to recently-used applications

- 1 Touch . A list of recently used applications will be displayed.
- 2 Tap an icon to open the application. Or tap  to return to your previous screen.


Your Home screen

Notifications panel

Notifications alert you the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as when you are on a call.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons such as Wi-Fi or battery strength shown on the right.

NOTE: The available options may vary depending on the region or service provider.

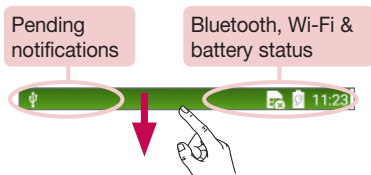

Using Dual SIM

When two SIM cards are inserted on your phone, the SIM cards information are displayed on your notification drawer. When you touch the SIM switch key, currently active SIM is switched.

NOTE: If only one SIM card is inserted or one SIM is off, SIM switching is not available, and the SIM switch key has no action. During a call, sending a message or using a data service, the other SIM's RSSI might be displayed as 'No service' due to the network service status.




WARNING

If you are outside of the service area, it may cause your device to consume more battery power.

Opening the notifications panel

Swipe down from the status bar to open the notifications panel.

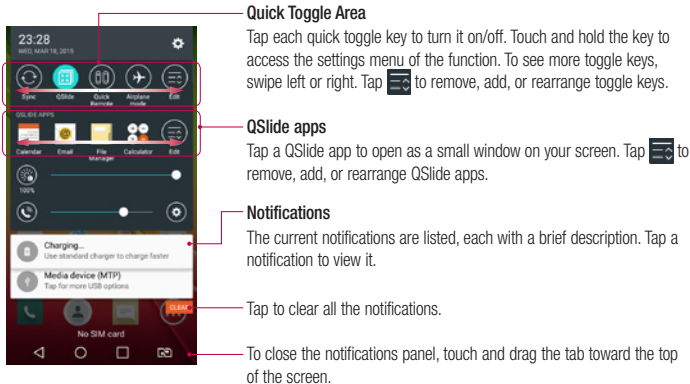



Indicator icons on the Status Bar














Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.



Your Home screen

The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Missed call
	Bluetooth is on
	System warning
	An alarm is set
	New voicemail available
	New text message
	A song is currently playing

Icon	Description
	Do not disturb
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	Data is synchronizing
	New Gmail message available
	New Hangouts message available
	Choose input method
	Wi-Fi hotspot is active

NOTE: The icons location in the status bar may differ according to the function or service.


On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply tap a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalize the next letter you type. Double-tap for all caps.

 Tap to switch to the symbols keyboard.

 Tap to enter a space.

 Tap to create a new line.

 Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account setup

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

To set up your Google account

- Sign into a Google Account from the prompted set-up screen.

OR

- Tap  >  > **Apps** tab > select a Google application, such as **Gmail** > Tap **GOT IT** > select **Add an email address** to create a new account.

Once you have set up your Google account on your phone, your phone automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your phone. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.



Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or 'hotspot'. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or have set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Tap  >  > **Apps** tab > **Settings** > **Networks** tab > **Wi-Fi**.
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap the Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Tap a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The status bar displays icons that indicate Wi-Fi status.

Connecting to Networks and Devices

Bluetooth



You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones.

NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Tap  >  > **Apps** tab > **Settings** > **Networks** tab > set **Bluetooth** to **ON**.
 - 2 Tap the **Bluetooth** menu again. You will see the option to make your phone visible and option to search devices. Now tap **Search** to view the devices in the Bluetooth Range.
 - 3 Choose the device you want to pair with from the list.
- Once the pairing is successful, your device will connect to the other device.

NOTE: Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you will be asked to enter it.



Send data using the Bluetooth wireless feature


- 1 Select a file or item, such as a contact, calendar event or media file, from an appropriate application or from **Downloads**.
- 2 Select the option for sending data via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

- 3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth wireless feature

- 1 Tap  >  > **Apps** tab > **Settings** > **Networks** tab > set **Bluetooth** to **ON**.
- 2 Tap the **Bluetooth** menu again and mark the checkbox at the top of the screen to make your phone visible to other devices.

NOTE: To select the length of time that your device will be visible, tap  > **Visibility timeout**.

- 3 Select **Accept** to confirm that you are willing to receive data from the device.

Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than one device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable Wi-Fi hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

To share your phone's data connection as a portable Wi-Fi hotspot



- 1 Tap  >  > **Apps** tab > **Settings** > **Networks** tab > **Tethering & networks** > **Wi-Fi hotspot** switch to activate.
- 2 Enter a password and tap **Save**.

TIP! If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you will not usually need to prepare your computer for tethering. But, if you are running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

Connecting to Networks and Devices

To rename or secure your portable Wi-Fi hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 Tap  >  > **Apps** tab > **Settings** > **Networks** tab > **Tethering & networks** > **Wi-Fi hotspot**.
- 2 Tap **Set up Wi-Fi hotspot**.
 - The **Set up Wi-Fi hotspot** dialogue box will open.
 - You can change the **Wi-Fi name (SSID)** that other devices see when scanning for Wi-Fi networks.
 - You can also tap the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Set up Wi-Fi hotspot** dialogue box. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.
- 3 Tap **Save**.

ATTENTION! If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges may be incurred. To avoid unauthorized usage, you are advised to keep the security option active.

Wi-Fi Direct

Wi-Fi Direct supports a direct connection between Wi-Fi enabled devices without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature. Check your Wi-Fi & Wi-Fi Direct network in advance and make sure the users are connected to the same network.

SmartShare

You can use the SmartShare feature easily in the Gallery, Music, Video apps, etc.

Enjoying content via a variety devices


You can share your phone's content with a variety devices. Tap  to share the contents in the Gallery, Music, Videos, ThinkFree Viewer.

Playing/Sending

Play: You can play the content via a TV, a Bluetooth speaker or etc.

Beam: You can send the content to the device of Bluetooth and SmartShare Beam supported.

- **SmartShare Beam:** Transferring the content feature fast via Wi-Fi Direct.

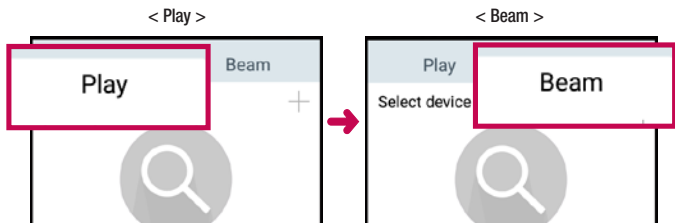

Enjoying the content from Nearby devices

You can enjoy the content from nearby devices (i.e. PC,NAS, Mobile) in the **Gallery, Music, Videos** app.

Connecting devices

Connect your device and other devices supported by DLNA in the same Wi-Fi network.

Searching other devices

- 1 Tap Nearby devices, then you can see the DLNA-supported devices.
- 2 Connect to the device to view the content.

PC connections with a USB cable

Learn to connect your device to a PC with a USB cable in USB connection modes.

Transferring music, photos and videos using the USB mass storage mode

- 1 Connect your phone to a PC using a USB cable.
- 2 If you haven't installed the LG Android Platform Driver on your PC, you will need to manually change the settings. Slide down the status bar and select the **Media device (MTP)** option.

Connecting to Networks and Devices

3 You can now view the mass storage content on your PC and transfer the files.

Synchronize with Windows Media Player





Ensure that Windows Media Player is installed on your PC.


- 1 Use the USB cable to connect the phone to a PC on which Windows Media Player has been installed.
 - 2 Select the **Media device (MTP)** option. When connected, a pop-up window will appear on the PC.
 - 3 Open Windows Media Player to synchronize music files.
 - 4 Edit or enter your device's name in the pop-up window (if necessary).
 - 5 Select and drag the music files you want to the sync list.
 - 6 Start synchronization.
- The following requirements must be satisfied to synchronize with Windows Media Player.

Items	Requirement
OS	Microsoft Windows XP SP2, Vista or higher
Window Media Player version	Windows Media Player 10 or higher



Calls

Making a call



- 1 Tap  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, tap the .
- 3 Tap  to make a call.
- 4 To end a call, tap the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Tap  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by tapping **Search contacts**.
- 3 In the list, tap  you want to call.

Answering and rejecting a call

When you receive a call in Lock state, swipe the  in any direction to Answer the incoming call.
Swipe the  in any direction to Decline an incoming call.
Swipe the **Decline with message** icon in any direction if you want to send a message.

TIP! Decline with message






You can send a message quickly using this function. This is useful if you need to reject a call with message during a meeting.

Adjusting the in-call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the back side of the phone.

Calls

Making a second call


- 1 During your first call, tap  > **Add call** and dial the number. You can also go to the recently dialled numbers list by tapping **Call logs** or can search contacts by tapping **Contacts** and selecting the contact you want to call.
- 2 Tap  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Tap the displayed number to toggle between calls. Or tap  **Merge calls** to start a conference call.
- 5 To end active calls, tap **End** or tap  and slide the notification bar down and select the **End call** icon .

NOTE: You are charged for each call you make.

Viewing your call logs



On the Home screen, tap  and choose the **Call logs** tab.
View a complete list of all dialled, received and missed calls.

TIP!

- Tap any call log entry to view the date, time and duration of the call.
- Tap , then tap **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding, as well as other special features offered by your carrier.


- 1 On the Home screen, tap .
- 2 Tap .
- 3 Tap **Call settings** and choose the options that you wish to adjust.

Contacts



Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

On the Home screen

- 1 Tap  to open your contacts.
- 2 Tap **Search contacts** and enter the contact name using the keyboard.


Adding a new contact

- 1 Tap , enter the new contact's number, then tap . Tap **Add to Contacts > New contact**.
- 2 If you want to add a picture to the new contact, tap the image area.
Choose from **Take photo**, **Select from Gallery**.
- 3 Tap a category of contact information and enter the details about your contact.
- 4 Tap **Save**.

Favourites contacts


You can classify frequently called contacts as favourites.

Adding a contact to your favourites



- 1 Tap  to open your contacts.
- 2 Tap a contact to view its details.
- 3 Tap the star to the right corner of the contact's name. The star will turn yellow color.

Contacts

Removing a contact from your favourites list

- 1 Tap  to open your contacts.
- 2 Tap the **Favorites** tab, and choose a contact to view its details.
- 3 Tap the yellow color star to the right corner of the contact's name. The star turns grey color and the contact is removed from your favourites.

Creating a group

- 1 Tap  to open your contacts.
- 2 Tap **Groups** and tap . Select **New group**.
- 3 Enter a name for the new group. You can also set a ringtone for the newly created group.
- 4 Tap **Save** to save the group.



NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

Messaging


Your phone combines SMS and MMS into one intuitive, easy-to-use menu.


WARNING: LG message should be set up to default SMS app. If not, some message functions will be limited.

Sending a message

- 1 Tap  on the Home screen and tap  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts will appear. You can tap a suggested recipient. You can add more than one contact.

NOTE: You will be charged for a text message for every person to whom you send the message.

- 3 Tap the **Enter message** field and begin composing your message.
- 4 Tap  to open the Options menu. Choose from **Quick message**, **Insert smiley**, **Schedule sending**, **Add subject** and **Discard**.

TIP! You can tap the  icon to attach the file, that you want to share with message.

- 5 Tap **Send** to send your message.
- 6 Responses will appear on the screen. As you view and send additional messages, a message thread is created.

WARNING:


- The 160-character limit may vary from country to country, depending on the language and how the SMS is coded.
- If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Changing your message settings

Your phone message settings are pre-defined, so you can send messages immediately. You can change the settings according to your preferences.

- Tap the **Messaging** icon on the Home screen, tap  and then tap **Settings**.

E-mail

You can use the E-mail application to read emails from services like Gmail. The E-mail application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide you with the account settings you need.

Managing an email account

The first time you open the **E-mail** application, a set-up wizard opens to help you to set up an email account. After the initial set-up, E-mail displays the contents of your inbox.

To add another email account:

- Tap  >  > **Apps** tab > **E-mail** > tap  > **Settings** >  **Add account**.




To change an email account's settings:

- Tap  >  > **Apps** tab > **E-mail** > tap  > **Settings** > **General settings**.

To delete an email account:

- Tap  >  > **Apps** tab > **E-mail** > tap  > **Settings** > tap  > **Remove account** > Select the account to delete > **Remove** > select **Yes**.





Working with account folders

Tap  >  > **Apps** tab > **E-mail** > tap  and select **Folders**.

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message

- 1 While in the **E-mail** application, tap the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts. Separate multiple addresses using semicolons.
- 3 Tap the  to add a Cc/Bcc and tap  to attach files, if required.
- 4 Enter the text of the message.
- 5 Tap .




TIP! When a new email arrives in your Inbox, you will be notified by a sound or vibration.

Camera

To open the Camera application, tap  >  > **Apps** tab > .

Getting to know the viewfinder

















- 1 Flash** – Choose from **Off** , **On** , **Auto** .
- 2 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 Shot mode** – Choose from **Normal**, **Dynamic tone (HDR)**, **Panorama**, **Continuous shot**, **Beauty shot**, **Time catch shot** or **Sports**.
- 4 Settings** – Tap this icon to open the settings menu.
- 5 Video mode** – Tap and slide down this icon to switch to video mode.
- 6 Capture button** – Tap to take a photo.
- 7 Gallery** – Tap to view the last photo you captured. This enables you to access your gallery and view saved photos while in camera mode.

NOTE: Please ensure the camera lens is clean before taking pictures.

Using the advanced settings

In the viewfinder, tap  to open the advanced options. You can change the camera settings by scrolling through the list.


	To take a photo, say one of the following words: Cheese, Smile, Whiskey, Kimchi or LG.
	Defines and controls the amount of sunlight entering the photo.
	Tap to select the focus mode.
	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Applies artistic effects to your pictures.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your phone's location-based services. NOTE: This function is available when the GPS function is active or connected network.
	Selects a shutter sound.
	Set the Volume Key whether to use for the capture or zoom.
	Select storage to save images.
	Opens the help guide to know how a function operates.
	Restores all camera default settings.

Camera

TIP!




- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and shot mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.

Taking a quick photo

- 1 Open the **Camera** application and point the lens toward the subject you want to photograph.
- 2 Focus boxes will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 3 When the focus box turns green, the camera has focused on your subject.
- 4 Tap  to capture the photo.

Using Time catch shot mode

Sets the camera to capture missing moments by taking five sequential pictures before  is tapped.

- 1 Open the **Camera** application.
- 2 Tap  > **Time catch shot**.
- 3 Tap  to take a picture.
- 4 To view the moments just before the picture was taken, tap the image thumbnail at the bottom of the Camera screen.
- 5 Select the pictures that you want to keep, then tap  at the top of the screen.

Once you've taken a photo

Tap the image thumbnail at the bottom of the Camera screen to view the last photo you took.



Tap to edit the photo.



Tap to take another photo immediately.



Tap to send your photo to others or share it via social network services.




Tap to delete the photo.




TIP! If you have an SNS account set up on your phone, you can share your photo with your SNS community.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Video camera

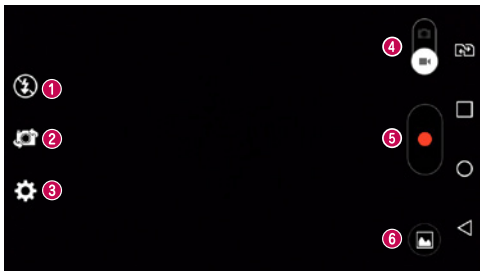Getting to know the viewfinder













- 1 Flash** – Choose from **Off** , **On** , **Auto** .
- 2 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 Settings** – Tap this icon to open the settings menu.
- 4 Camera mode** – Tap and slide up this icon to switch to camera mode.
- 5 Start recording** – Tap to start recording a video.
- 6 Gallery** – Tap to view the last video you recorded. This enables you to access your gallery and view your saved videos while in video mode.

TIP!



When recording a video, place two fingers on the screen and pinch to use the Zoom function.

Using the advanced settings

Using the viewfinder, tap  to open all the advanced options.

	Tap to set the size (in pixels) of the video you are recording.
	Defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar towards “-” for a lower brightness video or towards “+” for a higher brightness video.
	Improves color quality in various lighting conditions.
	Choose a colour tone to use for your new view.
	Activate this to use your phone's location-based services. NOTE: This function is available when the GPS function is active or connected network.
	Set the Volume Key whether to use for the record or zoom.
	Select storage to save videos.
	Opens the help guide to know how a function operates.
	Restores all camera default settings.

Recording a quick video

- 1 Open the **Camera** application and slide the **Video mode** button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you wish to capture in your video.
- 4 Tap  once to start recording.
- 5 A red light will appear at the top left corner of the viewfinder with a timer showing the length of the video.
- 6 Tap  on the screen to stop recording.

Video camera

TIP!



– Tap to capture an image during recording a video.



– Tap to pause recording a video.

After recording a video

In the viewfinder, tap the video thumbnail at the bottom of the screen to view the last video you took.



Tap to record another video immediately.



Tap to send your video to others or share it via social network services.



Tap to delete the video.



Tap for more options.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Function

Knock Code


You can unlock the screen when screen is off by tapping the correct area and sequence.

To activate Knock Code feature

- 1 Tap  >  > **Apps** tab > **Settings** > **Display** tab > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 This opens a screen that will guide you through how to select the unlock sequence. You have to create a Backup PIN as a safety measure in case you forget your unlock sequence.

QuickMemo+

The **QuickMemo+** allows you to create memos and capture screen shots. Capture screens, draw on them and share them with family and friends with QuickMemo+.

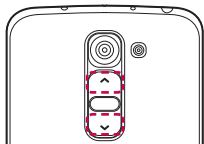


OR




- 1 Enter the QuickMemo+ screen by pressing both the Volume up and down keys for one second on the screen you want to capture.

OR



Touch and slide the status bar downward and tap .

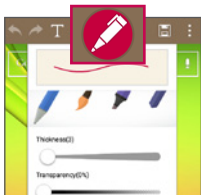Function



- 2 Select the desired menu option from **Pen type**, **Colour**, **Eraser** and create a memo.








- 3 Tap  in the Edit menu to save the memo with the current screen. To exit QuickMemo+ at any time, tap .

NOTE: Please use a fingertip while using the QuickMemo+. Do not use your fingernail.

Using the QuickMemo+ options

You can easily use the QuickMenu options when using the QuickMemo+.

	Tap to keep the current QuickMemo+ as a text overlay on the screen and continue to use the phone.
	Undo or Redo.
	Use complex concept function.
	Select the pen type and the colour.
	Erase the memo that you created.



Save the memo with the current screen in the **QuickMemo+** or **Gallery**.




Option: Tap to choose **Share** or **Paper style** for the memo.

Viewing the saved QuickMemo+

Tap **Gallery** and select the QuickMemo+ album.

QSlide

From any screen, bring up a notepad, calendar, and more as a window inside your screen.

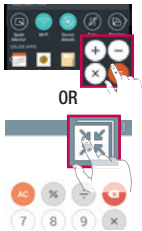


1		Tap to exit the QSlide and return to full window.
2		Tap to adjust transparency.
3		Tap to end the QSlide.
4		Tap to adjust the size.

- 1 Touch and slide the status bar downwards > tap QSlide apps or while using applications that support QSlide, tap . The function will be continuously displayed as a small window on your screen.
- 2 You can make a call, browse the Web, or choose other phone options. You can also use and tap the screen under the small windows when the transparency bar is not full .

NOTE: The QSlide can support up to two windows at the same time.



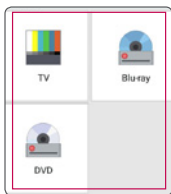

QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV and DVD/Blue-ray.



- 1 Touch and slide the status bar downwards and tap  > **ADD REMOTE.**

OR

Tap  >  > **Apps tab** >  **QuickRemote**
> tap .

- 2 Select the type and brand of device, then follow the on-screen instructions to configure the device(s).
- 3 Touch and slide the status bar downwards and use QuickRemote functions.

Tap the **Menu key**  to select **Magic Remote setting, Edit remote name, Move remote, Delete remote, Settings and Help.**

NOTE: The QuickRemote operates the same way as an ordinary remote control infrared (IR) signals. Be careful not to cover the infrared sensor at the top of the phone when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

Multimedia

Gallery

Open the **Gallery** application to view albums of your pictures and videos.

- 1 Tap  >  > **Apps** tab > **Gallery**.

You can manage and share all your image and video files with Gallery.

NOTE:

- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.

Viewing pictures

Launching Gallery displays your available folders. When another application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Select a folder to open it.



Pictures are displayed by creation date in a folder. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Zooming in and out


Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place to zoom in. Pinch to zoom out, or double-tap to return.

Playing videos

Video files show the  icon in the preview. Select a video to watch it and tap . The Videos application will launch.

Editing photos


When viewing an photo, tap .

Deleting photos/videos

Use one of the following methods:

- In a folder, tap  and select photos/videos by ticking, and then tap on **Delete**.
- When viewing a photo, tap .


Setting as wallpaper

When viewing a photo, tap  > **Set image as** to set the image as wallpaper or assign to a contact.

NOTE:


- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.





Videos

Your phone has a built-in video player that lets you play all of your favorite videos. To access the video player, touch  > **Apps** tab > **Gallery**.

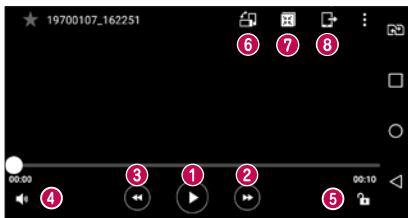



Playing a video

- 1 Touch  > **Apps** tab > **Gallery**.
- 2 Select the video you want to play.



	Touch to pause/resume video playback.
	Touch to go 10 seconds forward.
	Touch to go 10 seconds backward.
	Touch to manage the video volume.

Multimedia



5		Touch to lock/unlock a video screen.
6		Touch to change the screen orientation.
7		Touch to use QSlide.
8		Tap to share your video via the SmartShare function.


Music









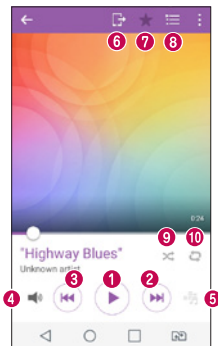

Your phone has a built-in music player that lets you play all your favorite tracks.

To access the music player, tap  >  > **Apps** tab > **Music**.

Playing a song

- 1 Tap  >  > **Apps** tab > **Music**.
- 2 Tap **Songs**.
- 3 Select the song you want to play.



1		Tap to pause/ resume playback.
2		Tap to skip to the next track in the album, playlist, or shuffle. Touch and hold to fast forward.
3		Tap to restart the current track or skip to the previous track in the album, playlist, or shuffle. Touch and hold to rewind.
4		Tap to display the Volume slider bar, then adjust the playback volume on the slider bar.
5		Tap to set audio effects.
6		Tap to share your music via the SmartShare function.
7		Tap to add the song to your favourites.
8		Tap to open the current playlist.
9		Tap to play the current playlist in shuffle mode (tracks are played in random order).
10		Tap to toggle through the repeat modes to repeat all songs, repeat current song, or repeat off.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. The **Play**, **Add to playlist**, **Delete**, **Share**, **Set as ringtone**, **Details** and **Search** options will be displayed.

Add music files to your phone

Start by transferring music files to your phone:

- Transfer music using Media device (MTP).
- Download from the wireless Web.
- Synchronize your phone to a computer.
- Receive files via Bluetooth.




Multimedia


FM Radio

Your phone has a built-in FM Radio so you can tune in to your favorite stations and listen on the go.





NOTE: You need to use your headphones to listen to the radio. Insert it into the headphone jack.

Setting your alarm




- 1 Tap  >  > **Apps** tab > **Clock** > **Alarms** > .
- 2 After you set the alarm, your phone lets you know how much time is left before the alarm will go off.
- 3 Set **Repeat**, **Snooze duration**, **Alarm with vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**.
- 4 Tap **Save**.

NOTE: To change alarm settings in the alarm list screen, tap the **Menu key**  and select **Settings**.

Using your calculator

- 1 Tap  >  > **Apps** tab > **Calculator**.
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.
- 4 To check the history, touch  and select the **Calculation history**.
- 5 For more complex calculations, touch  and select the **Scientific calculator**, then choose sin, cos, tan, log etc.






Adding an event to your calendar


- 1 Tap  >  > **Apps** tab > **Calendar**.
- 2 On the screen, you can find the different view types for the Calendar (Day, Week, Month, Year, Agenda).
- 3 Tap on the date for which you wish to add an event and tap .
- 4 Tap **Event name** and enter the event name.
- 5 Tap **Location** and enter the location. Check the date and enter the time you wish your event to start and finish.
- 6 If you wish to repeat the alarm, set **REPEAT** and set **REMINDERS**, if necessary.
- 7 Tap **Save** to save the event in the calendar.

Voice Recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice



- 1 Tap  >  > **Apps** tab > **Voice Recorder**.
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.

NOTE: Tap  to access your album. You can listen to the saved recording. The available recording time may differ from actual recording time.

Tasks

This task can be synchronized with MS Exchange account. You can create task, revise it and delete it in MS outlook or MS Office Outlook Web Access.



To Synchronize MS Exchange

- 1 From the Home Screen, Tap  >  > **Apps** tab > **Settings**.
- 2 Tap **General** tab > **Accounts & sync** > **Add account**.
- 3 Tap **Microsoft Exchange** to create E-mail address and Password.
- 4 Make sure if you checkmark Sync task.

NOTE: MS Exchange may not be supported depending on email server.

ThinkFree Viewer

ThinkFree Viewer is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere or anytime, using their mobile devices.


Tap  >  > **Apps tab** > **ThinkFree Viewer**.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using ThinkFree Viewer, the objects and layout remain the similar in the original documents.

Google+



Use this application to stay connected with people via Google's social network service.

- Tap  >  > **Apps tab** > **Google** > **Google+**.

NOTE: This application may not be available depending on the region or service provider.

Voice Search

Use this application to search webpages using voice.

- 1 Tap  >  > **Apps tab** > **Google** > **Voice Search**.
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded through the applications.

- Tap  >  > **Apps tab** > **Downloads**.




NOTE: This application may not be available depending on the region or service provider.

Utilities


LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer "Mobile Life" experiences.

How to Get to LG SmartWorld from Your Phone

- 1 Tap  >  > **Apps** tab > tap the  icon to access **LG SmartWorld**.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not signed up yet, tap Register to receive your LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.



Search content.



Find content by category (e.g. Games, Education, Entertainment etc).

- Try the easy "**Menu**" buttons to find what you're looking for fast.
Settings – Set Profile and Display.
Sign in – Set your ID and Password.
- Try other useful functions as well. (Content Detail screen)

NOTE: LG SmartWorld may not be available from all carriers or in all countries.

The Web

Internet







Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your mobile phone wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

1 Tap  >  > **Apps** tab > **Internet**.

Using the Web toolbar

Tap slide it downwards with your finger to open.

	Tap to go back one page.
	Tap to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you tap  , which takes you to the previous page.
	Tap to go to the Home page.
	Tap to add a new window.
	Tap to access bookmarks.

Viewing webpages

Tap the address field, enter the web address and tap **Go**.

Opening a page

To go to new page, tap  > .

To go to another webpage, tap , scroll up or down, and tap the page to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword, and then select one of the suggested keywords that appear.

The Web

NOTE: This feature may not be available depending on the region or service provider.

Bookmarks

To bookmark the current webpage, tap  > **Add to bookmarks** > **OK**.

To open a bookmarked webpage, tap  and select one.

History

Tap  > **History** to open a webpage from the list of recently-visited webpages.

Chrome

Use Chrome to search for information and browse webpages.

1 Tap  >  > **Apps** tab > **Chrome**.

NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

Tap the Address field, and then enter a web address or search criteria.

Opening a page

To go to a new page, tap  > **New tab**.

Settings

This section provides an overview of items you can change using your phone's System settings menus.

To access the Settings menu:

Tap  > touch and hold  > **System settings.**

- or -

Tap  >  > **Apps tab > Settings.**

Networks

< **Dual SIM card** >

You can configure Dual SIM settings.

SIM card 1 – Allows you to change the SIM card name and SIM card icon for SIM card 1.

Activate slot 1 – Checkmark to activate or deactivate the SIM card slot 1.

SIM card 2 – Allows you to change the SIM card name and SIM card icon for SIM card 2.

Activate slot 2 – Checkmark to activate or deactivate the SIM card slot 2.

SIM color theme – Allows you to select your desired colors.

Cost save mode – Every contact is added along with assigned SIM when adding in phone book. During Calling, matching operator SIM is identified and the operation is completed using the matching operator SIM. This makes possible to use benefit from using same operator.

NOTE: Cost save mode doesn't work during in-call.

Mobile data – This enable data access over the mobile network.

NOTE: When airplane mode is on, dual SIM settings is disabled.

SIM card to use – You can change the default data network. All mobile packet services (Web, MMS, Email, etc) will use SIM selected on this value. When only one SIM card is inserted, the default data network is set as the inserted SIM and it is not allowed to change.

Data roaming – Allows you to connect to data services when roaming.




< **Wi-Fi** >

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

Settings

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your phone in the router.

You can find the MAC address in the following user interface: tap  >  > **Apps tab** > **Settings** > **Networks tab** > **Wi-Fi** >  > **Advanced Wi-Fi** > **MAC address**.

< Bluetooth >

Turn the Bluetooth wireless feature on or off to use Bluetooth.

< Mobile data >

Displays the data usage and set mobile data usage limit.

< Call >

Configure phone call settings such as call forwarding and other special features offered by your carrier.

Vicemail – Allows you to select your carrier's voicemail service.

Fixed dialing numbers – Turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Call forwarding – Choose whether to divert all calls when the line is busy, when there is no answer or when you have no signal.

Call barring – Lock incoming, outgoing or international calls.

Call duration – View the duration of calls including Last call, Outgoing calls, Incoming calls and All calls.

Additional settings – Allows you to change the following settings:

Caller ID: Choose whether to display your number in an outgoing call.

Call waiting: If call waiting is activated, the handset will notify you of an incoming call while you are on a call (depending on your network provider).

[Common tab]

Smart forward – You can receive SIM2 calls if you are busy on SIM1 and vice versa.

Incoming call pop-up – Display incoming call popup when using camera and videos.

Call reject – Allows you to set the call reject function. Choose from Call reject mode or Reject calls from.

Decline with message – When you want to reject a call, you can send a quick message using this function.

Privacy keeper – Hides the caller name and number for an incoming call.

Auto answer – Set the time before a connected hands-free device automatically answers an incoming call. Choose from **Off**, **1 sec**, **3 sec** and **5 sec**.

Connection vibration – Vibrates your phone when the other party answers the call.

Save unknown numbers – Add unknown numbers to contacts after a call.

Power button ends call – Allows you to select your end call.

< **Share & connect** >

SmartShare Beam – Turn on to receive multimedia content via SmartShare Beam from LG phones or tablets.

Media server – Allows you to share the phone's multimedia content with nearby DLNA-compatible devices.

LG PC Suite – Check this to use LG PC Suite with your Wi-Fi connection. Please note that Wi-Fi network should be connected to LG PC Suite via a Wi-Fi connection.

< **Tethering & networks** >

USB tethering – Connect the USB cable to share the internet connection with the computer.

Wi-Fi hotspot – You can also use your phone to provide a mobile broadband connection. Create a hotspot and share your connection. For more info, go to **Settings > Networks > Tethering & networks > Help > Wi-Fi hotspot**.

Bluetooth tethering – Allows you to set your phone whether you are sharing the Internet connection or not.

Help – Tap to view help information on the USB tethering, Wi-Fi hotspot and Bluetooth tethering functions.

Airplane mode – After switching to Airplane mode, all wireless connections are disabled.

NOTE: You must set a lock screen PIN or Password before you can use credential storage.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.


Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) etc.

Sound

Sound profile – Choose Sound, Vibrate only or Do not disturb.


Volume – Adjust the phone's volume settings to suit your needs and your environment.

Vibrate strength – Allows you to set the vibrate strength for calls, notifications, and touch feedback.

Ringtone – Set the ringtone for calls. You can also add a ringtone by tapping  at the top right corner of the screen.

SIM1 ringtone – Allows you to set your SIM1 incoming call ringtone.

SIM2 ringtone – Allows you to set your SIM2 incoming call ringtone.

Notification sound – Set the notification sound. You can also add a notification sound by tapping  at the top right corner of the screen.

SIM1 Notification sound – Allows you to set your SIM1 notification sound.

Settings

SIM2 Notification sound – Allows you to set your SIM2 notification sound.

Sound with vibration – Checkmark to set the phone to vibrate in addition to the ringtone when you receive calls.

SIM1 vibration type – Allows you to set the vibration type for incoming calls to SIM1 card.

SIM2 vibration type – Allows you to set the vibration type for incoming calls to SIM2 card.

Do not disturb – Set a time and mode when your phone doesn't let you know about notifications coming in. Choose from All, Priority only or None.

PRIORITY ONLY – Allow certain features to interrupt when Priority only. Alarms always have priority. Choose from Apps with Calendar events, Incoming calls, New messages, or Allowed contacts.

SCHEDULE – Only notification with priority interrupt on repeat even when set to all.

Lock screen – Set to Show all notifications, Hide sensitive only, Hide all notifications on the lock screen.

Apps – Set notification from Apps. Choose from None to show no notifications from the Apps, and Priority to show notifications with priority on top of others and when Do not disturb set to Priority only.

Vibrate on tap – Checkmark to vibrate when tapping the Home touch buttons and during other UI interactions.

Sound effects – Tap to set the dialpad touch sounds, touch sounds, and screen lock sound.

Dialpad touch sounds – Checkmark to play tones while using dial pad.

Touch sound – Checkmark to play sound when making screen selection.

Screen lock sound – Checkmark to play sound when locking and unlocking the screen.

Message/call voice notifications – To read out the incoming call and the message event automatically.

Display

< Home screen >

Set the **Select Home, Theme, Wallpaper, Screen swipe effect, Allow Home screen looping, Home backup & restore, Help.**

< Lock screen >

Select screen lock – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. Set **None, Swipe, Knock Code, Pattern, PIN or Password.**

If you have enabled a Pattern lock type when you turn on your phone or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

Smart Lock – Set when to automatically unlock phone by Trusted devices (BT device or NFC), Trusted places or Trusted face. This function is available when the Lock screen is set to one of the Knock Code, Pattern, PIN and Password.

NOTE: To use this feature, Smart Lock must be On.

Settings > General > Security > Trust agents > Smart Lock.

Screen swipe effect – Sets the screen swipe effect options. Choose from **Light particle**, **Vector circle**, **Mosaic** and **Soda**.

NOTE: Screen swipe effect becomes Pattern effect if the screen lock is set to Pattern.

Wallpaper – Sets your Lock screen wallpaper. Select it from **Gallery** or **Wallpaper gallery**.

Shortcuts – Allows you to change the shortcuts on the **Swipe** Lock screen.

Contact info for lost phone – Select whether to display the owner information on the lock screen and customize the owner information.

Lock timer – Sets the amount of time before the screen automatically locks after the screen has timed-out.

Power button instantly locks – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the Security lock timer setting.

< **Home touch buttons** >

Button combination – Drag an icon to rearrange Home touch buttons. You can have up to 5 Home touch buttons.

Color – Sets the background color for the Home touch buttons. Select it from White and Black.

< **FONT** >

Font type – Sets the type of font used for the phone and menus.

Font size – Sets the size of the font displayed in the phone and menus.

< **OTHER SCREEN SETTINGS** >

Brightness – Adjusts the brightness of the screen. For best battery performance, use the dimmest comfortable brightness.

Auto-rotate screen – Checkmark to set the phone to automatically rotate the screen based on the phone orientation (portrait or landscape).

Screen timeout – Sets the amount of time before the screen times out.

Smart screen – Checkmark to keep the screen from timing-out when the device detects your eyes looking at the screen.

< **ADVANCED SETTINGS** >

Screen-off effect – Sets the screen-off effect. Choose from **Retro TV**, **Black hole** and **Fade out**.

Daydream – Tap the Daydream switch to toggle it On or Off. On allows the set screensaver to be displayed when the phone is sleeping while docked and/or charging. Choose from **Clock** and **Google Photos**.

Settings

General

< Language & input >

Use the Language & input settings to select the language for the text on your phone and to configure the on-screen keyboard, including words you've added to its dictionary.

< Location >

Turn on location service, your phone determines your approximate location using GPS, Wi-Fi and mobile networks.

Mode – Set the location mode from **High accuracy**, **Battery saving** and **Device sensors only**.

< Accounts & sync >

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lower (but not eliminate) data usage.

< Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

< One-handed operation >


Dial keypad – Checkmark to enable you move the dial keypad to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

LG keyboard – Checkmark to enable you move the keyboard to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

Lock screen – Checkmark to enable you move the PIN Lock screen keypad to the right or left side of the device. Simply tap the arrow to move it to one side or the other.

Help – Displays information regarding one-handed operation.

< Shortcut key >

Get quick access to apps by pressing and holding the volume keys when screen is off or locked. Tap the Shortcut key switch  at the top right corner of the screen to toggle it **On** or **Off**.

< Security >

Encrypt phone – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

Encrypt SD card storage – Allows you to encrypt SD card data on the phone for security.

Set up SIM card lock – Set up SIM card lock or change the SIM card PIN.

Password typing visible – Show the last character of the hidden password as you type.

Phone administrators – View or deactivate phone administrators.

Unknown source – Default setting to install non-Play store applications.

Verify apps – Disallow or warn before installation of apps that may cause harm.

Storage type – Hardware-backed.

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates.

Clear credentials – Remove all certificates.

Trust agents – Select apps to use without unlocking the screen.

Screen pin – Allow an app to be the only one used when you pin the screen of an app.

App usage access – Allow apps to view the usage information of apps on your phone.

< Guest mode >

When you lend your phone to others, you can limit the applications to be displayed.

< Gestures >

Screen on/off – Checkmark to enable KnockON to turn the screen on and off. Quickly double-tap center screen to turn it on. Double-tap the Status Bar, an empty area on the Home screen, or the Lock screen to turn the screen off. For the best results, do not move the phone while using the KnockON feature.

Silence incoming calls – Checkmark to enable you to flip the phone to silence incoming calls.

Snooze or stop alarm – Checkmark to enable you to simply flip the device to snooze or stop the alarm.

Pause video – Checkmark to enable you to simply flip the device to pause the currently playing video.

Help – Opens a help guide on how to use the Gestures features of your device.

Motion sensor calibration – Allows you to improve the accuracy of the tilt and speed of the sensor.

< QuickWindow case >

Activate to make features, such as music, weather, and clock, available in small view when using the QuickWindow case.

< Date & time >

Use **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< Storage >

INTERNAL STORAGE – View the internal storage usage.

SD CARD – Check total available SD card space. Touch Unmount SD card for safe removal. Erase SD card if you want to delete all data from the SD card.

Settings

< Battery >

BATTERY INFORMATION

The Battery charge information is shown on a battery icon along with the percentage of the remaining charge and its status.

Battery usage – Shows which components and applications are using the most battery power.

Battery percentage on status bar – Checkmark to display the battery level percentage on the Status Bar next to the battery icon.

BATTERY SAVER

Tap the Battery saver switch  to toggle it **On** or **Off**. Tap Battery saver to access the following settings:

Battery saver – Sets the battery charge percent level that will automatically turn on Battery saver. Choose from **Turn Battery saver on** and **Restrict apps in background**.

Help – Tap to view help information on the battery saver tips.

< Apps >

View and manage your applications.

< Default message app >

Set **Messaging** or **Hangouts** as default app.

< Backup & reset >

Change the settings for managing your settings and data.

Back up my data – Set to backup your settings and application data to the Google server.

Backup account – Set to backup your account.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

LG Backup service – Backs up all information on the device and restores it in the event of data loss or replacement.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the phone this way, you are prompted to re-enter the same information as when you first started Android.

< Printing >

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

< About phone >

View legal information and check your phone status and software version.

PC software (LG PC Suite)

"LG PC Suite" PC software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, movie, picture) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device data.
- Play multimedia contents of your PC from your device.
- Backup and create and edit the memos in your device

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.

Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > MOBILE SUPPORT > LG Mobile Phones > Select the Model**
or
Go to **Support > Mobile > Select the Model**.
- 3 Click **PC SYNC** from **MANUALS & DOWNLOAD** and click **DOWNLOAD** to download "LG PC Suite" PC software.

System Requirements for "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

PC software (LG PC Suite)

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and is installed automatically when you install "LG PC Suite" PC software application.

Synchronizing your Device to a PC

Data from your device and PC can be synchronized easily with "LG PC Suite" PC software for your convenience. Contacts, schedules and bookmarks can be synchronized.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 The **Select USB connection method** will appear, then select **Media device (MTP)**.
- 3 After connection, run the program and select the device section from the category on the left side of the screen.
- 4 Click **Personal information** to select.
- 5 Select the checkbox of contents to synchronize and click the **Sync** button.

NOTE: To synchronize your phone with your PC, you need to install LG PC Suite onto your PC. Please refer to previous pages to install LG PC Suite.

Moving contacts from your Old Device to your New Device

- 1 Export your contacts as a CSV file from your old device to your PC using a PC sync program.
- 2 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 3 On the top menu, select **Device > Import to device > Import contacts**.
- 4 A popup window to select the file type and a file to import will appear.
- 5 On the popup, click the **Select a file** and Windows Explorer will appear.
- 6 Select the contacts file to import in Windows Explorer and click the **Open**.
- 7 Click **OK**.
- 8 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 9 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 10 Click **OK**.

Phone software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service center. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your mobile phone: **Settings > General tab > About phone > Common tab > Update Center > Software Update > Check now for update.**

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature depends on your network service provider, region and country.

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product, or from software supplied by service providers or carriers. This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your phone's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan that is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Dolby Digital Plus  **DOLBY**
DIGITAL PLUS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.

Notice: Open Source Software


To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

Accessories

These accessories are available for use with the your phone. (Items described below may be optional.)

Travel adaptor



Stereo headset




Quick Start Guide



Data cable



Battery



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.; Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sat, 08:00 - 18:00

Call center : 0-2878-5757

Troubleshooting


This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.



Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6–12 months old. If so, change your SIM card at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.


Troubleshooting


Message	Possible causes	Possible corrective measures
Calls not available	Dialling error	New network not authorized.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.



Message	Possible causes	Possible corrective measures
Number not allowed	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & photos	Memory full	Delete some messages from your phone.
Files do not open	Unsupported file format	Check the supported file formats.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update via the website.

Category Sub-Category	Question	Answer
BT Bluetooth Devices	What are the functions available via Bluetooth	You can connect a Bluetooth audio device such as a Stereo/Mono headset or Car Kit. Also, when the FTP server is connected to a compatible device, you can share content stored on the storage media.
Data Contacts Backup	How can I backup Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data Synchronization	Is it possible to set up one-way sync with Gmail?	Only two-way synchronization is available.
Data Synchronization	Is it possible to synchronize all email folders?	The Inbox is automatically synchronized. You can view other folders by tapping the Menu Key  and select Folders to choose a folder.
Google™ Service Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you have logged into Gmail, no need to log into Gmail again.
Google™ Service Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function E-mail	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.

Category Sub-Category	Question	Answer
Phone Function Ringtone	Is there a file size limitation for when I want to use MP3 file as ring tone?	There is no file size limitation.
Phone Function Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I view the time?	Open the conversation and touch and hold the desired message. Then tap Details .
Phone Function Navigation	Is it possible to install another navigation application on my phone?	Any application that is available at Play Store™ and is compatible with the hardware can be installed and used.
Phone Function Synchronisation	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (company email server) contacts can be synchronized.
Phone Function Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact with the W & P functions saved into the number, you will not be able to use those features. You will need to re-save each number.</p> <p>How to save with Wait and Pause:</p> <ol style="list-style-type: none"> 1. From the Home screen, tap the Phone icon . 2. Dial the number, then tap the Menu Key . 3. Tap Add 2-sec pause or Add wait.
Phone Function Security	What are the phone's security functions?	You are able to set the phone to require that an Unlock Pattern be entered before the phone can be accessed or used.

Category Sub-Category	Question	Answer
Phone Function Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none">1. From the Home screen, tap and hold the Recent Apps key .2. Tap System settings > Display tab > Lock screen.3. Tap Select screen lock > Pattern. The first time you do this, a short tutorial about creating an Unlock Pattern will appear.4. Set up by drawing your pattern once, and once again for confirmation. <p>Precautions to take when using the pattern lock.</p> <p>It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern five times. You have five chances to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds. (Or, if you preset the backup PIN, you can use the backup PIN code to unlock the pattern.)</p>

Category Sub-Category	Question	Answer
Phone Function Unlock Pattern	What should I do if I forget the unlock pattern and I didn't create my Google account on the phone?	<p>If you have forgotten your pattern:</p> <p>If you logged into your Google account on the phone but failed to enter the correct pattern 5 times, tap the forgot pattern button. You are then required to log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you have forgotten it, you will have to perform a hard reset.</p> <p>Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a factory reset.</p>
Phone Function Memory	Will I know when my memory is full?	Yes, you will receive a notification.
Phone Function Language Support	Is it possible to change my phone's language?	<p>The phone has multilingual capabilities. To change the language:</p> <ol style="list-style-type: none"> 1. From the Home screen, tap and hold the Recent Apps key  and tap System settings. 2. Tap General tab > Language & input > Language. 3. Tap the desired language.
Phone Function VPN	How do I set up a VPN?	<p>VPN access configuration is different for each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.</p>

Category Sub-Category	Question	Answer
Phone Function Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold the Recent Apps key . 2. Tap System settings > Display tab. 3. Tap Screen timeout. 4. Tap the preferred screen backlight timeout time.
Phone Function Wi-Fi & mobile network	When Wi-Fi and mobile network are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, view the mobile network or Wi-Fi icon at the top of your screen.</p>
Phone Function Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the dustbin icon appears at the top right hand side of the screen. Then, without lifting your finger, drag the icon to the trash can.
Phone Function Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold the Recent Apps key . 2. Tap System settings > General tab > Apps > DOWNLOADED. 3. Tap the application, then tap Uninstall.
Phone Function Charger	Is it possible to charge my phone using a USB data cable without installing the necessary USB driver?	Yes, the phone will be charged by the USB cable regardless of whether the necessary drivers are installed or not.
Phone Function Alarm	Can I use music files for my alarm?	Yes. In the Alarm clock setting, select the song as the Alarm sound.

Category Sub-Category	Question	Answer
Phone Function Alarm	Will my alarm be audible if the phone is turned off?	No, this is not supported.
Phone Function Alarm	If my ringer volume is set to Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.
Recovery Solution Hard Reset (Factory Reset)	How can I perform a factory reset if I can't access the phone's setting menu?	If your phone does not restore to its original condition, use a hard reset (factory reset) to initialize it.

LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี

1-800-545454

กรุงเทพและปริมณฑล

0-2878-5757

เว็บไซต์และอีเมล :

<http://www.lg.com/th> และ support.lgeth@lge.com

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง
เพื่อความสะดวกในการติดต่อ
กับศูนย์บริการของแอลจีทั่วประเทศ



CE0168