Model	VN-28**H**		
Language	Persian&English		
Page	30	Color(cover/body)	2/1
Material	Weight 100g	Size(W*H)	150X220(mm)
Date	2009/07/15	Designer	Li Yue
Part No.	MFL62343509	Description	owner's manual

Change Record

No.	Change content	ECO No.	Date	Designer	Confirm
1					
2					
3					
4					
5					
6					
7					
8					
9					



OWNER'S MANUAL

NEW TYPE CYCLONE VACUUM CLEANER

This information contains important instructions for the safe use and maintenance of the vacuum cleaner. Especially, please read all of the information on page 4-7 for your safety. Please keep this manual in an easily accessible place and refer to it anytime.

VN-28**H**



MFL62343509

www.lg.com

Table of contents

Information for Your Safety4~7
How to Use 8
Assembling cleaner 8
Using the and Accessory Nozzles 10
User's guide for turbine nozzle 12
Changing Dust Bag13
Operation14
Cleaning the Exhaust Filter15
What to do if your Vacuum Cleaner does not work?16
What to do when suction performance decreases?16

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following ECDirectives:-2006/95/EC Low Voltage Directive-2004/108/EC EMC Directive.



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION." These words mean:



This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.

MARNING

Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.

If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilties, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person resposible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the ap-pliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING

· Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in

Failure to do so could result in electrical shock or personal injury.

- · Do not vacuum liquid, blade, gesso, substances, or small particles like cement, burning or smoking such as cigarettes, or hot ashes in cleaning.
- Do not vacuum flammable or explosive substances such as gasoline, benzene. thinners, propane (liquids or gases).

The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.

· Do not handle plug or vacuum cleaner with wet hands.

Doing so could result in death or electrical shock.

- · Do not unplug by pulling on cord. Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.
- · Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

Failure to do so could result in electrical shock or personal injury.

. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cordaround sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord awayfrom heated surfaces.

Failure to do so could result in electrical shock or personal injury or fire or product damage.

. Do not allow to be used as toy. Close attention is necessary when used by or near children

Personal injury or product damage could result.

 Do not use vacuum cleaner if it has been under water.

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

• Do not continue to vacuum if any parts appear missing or damaged.

Personal injury or product damage could result. In these cases, contact LG Electronics ServiceAgent to avoid hazard.

. Do not use an extension cord with this vacuum cleaner

Fire hazard or product damage could result.

· Using proper voltage.

Using improper voltage may result in damageto the motor and possible injury to the user. Proper voltage is listed onthe bottom of vacuum cleaner.

- Turn off all controls before unplugging. Failure to do so could result in electrical shock or personal injury.
- · Do not change the plug in any way. Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.
- Repairs to electrical appliances may only be performed by qualified service engineers. Improper repairs may lead to serious hazards for the user.
- · Do not plug in if control knob is not in OFF position.

Personal injury or product damage could result. (Depending on model)

· Keep children away and beware of obstructions when rewinding the cordto prevent personal injury.

The cord moves rapidly when rewinding. (Depending on model)

· The hose contains electrical wires. Do not use it if it is damaged, cut or punctured. Failure to do so could result in death, or electrical shock. (Depending on model)

CAUTION

Do not put any objects into openings.

Failure to do so could result in product damage Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.

Failure to do so could result in product damage.

Do not use vacuum cleaner without dust tank and/or filters in place.

Failure to do so could result in product

• Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips,

They may damage the cleaner or dust bin. Store the vacuum cleaner indoors

Put the vacuum cleaner away after use to prevent tripping over it.

Only use parts produced or recommended by LG Electronics Service Agents.

Failure to do so could result in product damage.

Use only as described in this manual. Use only with LG recommended or approved attachments and accessories. Failure to do so could result in personal injury or product damage.

To avoid personal injury and to prevent the machine from falling when cleaning stairs. always place it at the bottom of stairs.

Failure to do so could result in personal injury or product damage.

Use accessory nozzles in sofa mode.

Failure to do so could result in product damage. Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.

Failure to do so could result in product damage. Do not dry the filter in an oven or microwave.

Failure to do so could result in fire hazard. Do not dry the filter in a clothes dryer.

Failure to do so could result in fire hazard.

Do not dry near an open flame.

Failure to do so could result in fire hazard.

Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.

These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner. (Depending on model) Don't grasp the tank handle when you are moving the vacuum cleaner. The vacuum

cleaner's body may fall when separating tank and body. Personal injury or product damage could result. You should grasp the carrier handle when you aremoving the vacuum cleaner. (Depending on model)


If after emptying the dust tank the indicator light is on(red), clean the dust tank.

Failure to do so could result in product damage. (Depending on model)

▲ CAUTION

Thermal protector:

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch.

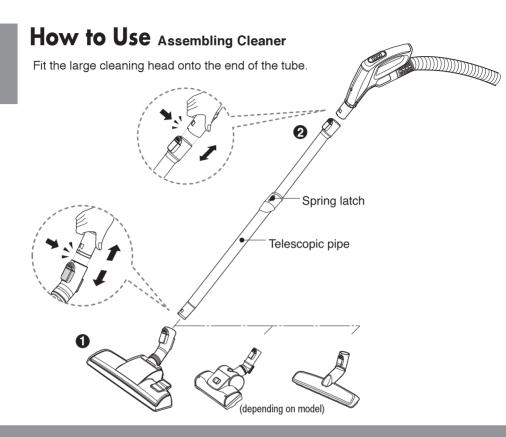


1 The 2 position head

Push telescopic tube into nozzle outlet.

2 Telescopic pipe


- Push telescopic pipe firmly into hose handle.
- · Grasp the spring latch to expand.
- Pull out the pipe to desired length.

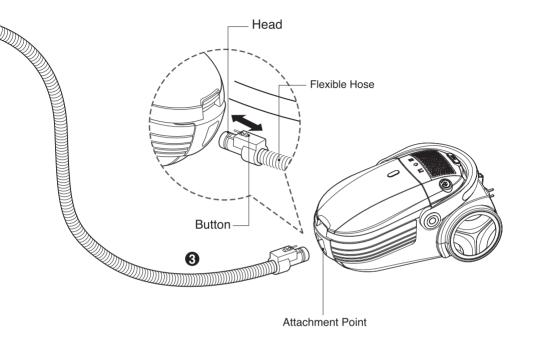

3 Connecting the flexible hose

- Push the end of the head on the flexible hose into the attachment point on the vacuum cleaner.
- To remove the flexible hose from the vacuum cleaner, press on the button situated on the head, then pull the head out of the vacuum cleaner.

How to Use Using the Accessory Nozzles

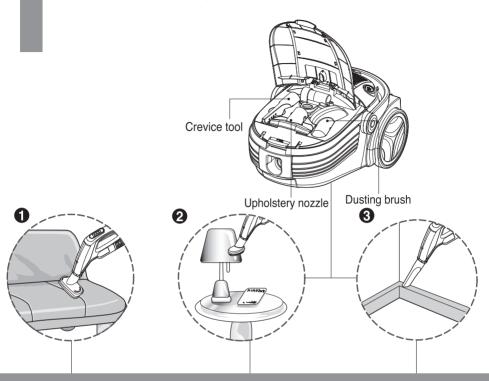

1 Upholstery Nozzle


Upholstery Nozzle is for vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.


2 Dusting Brush

Dusting Brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.

3 Crevice Tool

Crevice Tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs, or between the cushions of a sofa.

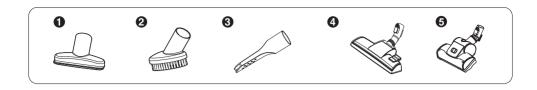

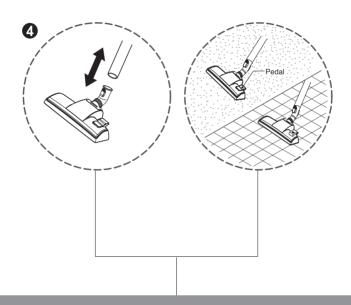


The 2 position head

- The 2 position cleaning head equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.
- Hard floor position (tiles, parquets floor)
 Press the pedal to lower brush.
- Carpet or rug position
 Press the pedal to lift the brush up.

How to use


USER'S GUIDE FOR TURBINE NOZZLE

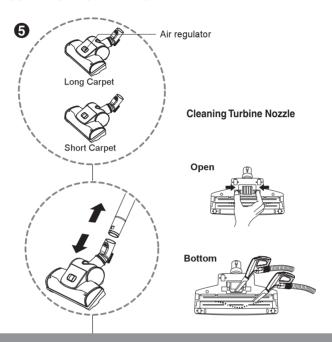

1 Turbine Nozzle (depending on model)

- Cleaning turbine brush nozzle.
- Press the button on the rear side of the nozzle to separate the air cover.
- Use the dusting brush & crevice tool to vacuum clean the brush and fan.

How to use Changing dust bag

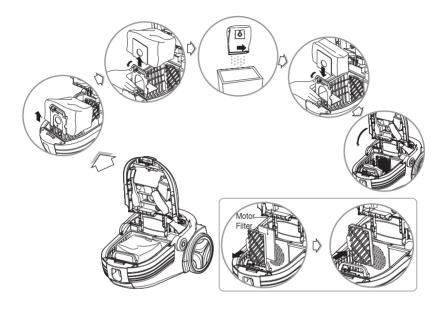

The dust bag needs changing when the cleaner is set to maximum power and the cleaner head is off the floor but the indicator window is completely coloured red.

Even if the dust bag does not appear to be full at this stage, it should be changed.

It could be that a great deal of very fine dust has clogged up the pores of the dust bag.

- · Turn off the appliance and unplug it.
- · Lift up the button and open the cover.
- · Your appliance is equipped with either a paper dust bag or a fabric dust bag.
- Pull the handle up.

Push the blue button and remove the old dust bag.

• If your appliance is fitted with a fabric dust bag, follow the above instructions.

And then open zipper and empty dirt.

Wash the colth bag and dry it for a day in a shade.


Then replace it.

· If paper bag, just insert the new dust bag.

Note: as the appliance is fitted with a safety device which checks that the dust bag is in place you cannot close the lid if the dust bag is not fitted correctly.

The motor filter is situated inside the appliance between the dust bag and the motor. Each time that you change the air outlet filter we advise you to remove the motor filter and to clean it by tapping to remove the dirt and then replacing it in the vacuum cleaner.

Operation

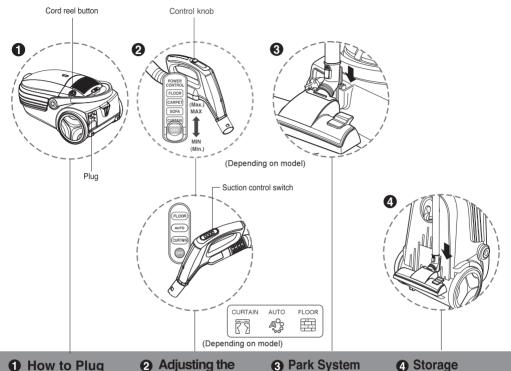

1 How to Plug in and Use


- Suction level
- Park System
- 4 Storage

- · Pull out the power cord to the desired length and plug into
- · the socket. Press the cord reel button to retract the power cord after use.
- · Adjust the power by using the power control switch in the handle
 - · When you press the button that you desire, the light comes on.
 - · If you press the auto button, the power is automatically adjusted by the amount of dust
- · To store after vacuuming and pause while vacuuming.
- · For deposit after vacuuming. for example to move a small piece of furniture or a rug, use the Park system to support the flexible hose and cleaning head. -Slide the hook on the large cleaning head into the slot on the

rear of the body cover.

- · Switch off, unplug the appliance and rewind thecord by pressing the button when you store.
- You can store your appliance in a vertical position by sliding the hook on the large cleaning head into the clip on the underside of the appliance.

Cleaning the Exhaust Filter

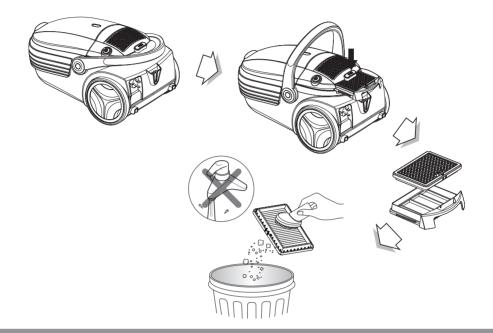

- The exhaust filter is a reusable HEPA filter. Changing the air outlet filter.
- To change the exhaust filter, push the HEPA locker.
- Pull out the exhaust filter.
- · Dust off filter.
- The exhaust filter should be cleaned at least once a year.

What to Do if Your Vacuum Cleaner Does Not Work?

Check that the vacuum is plugged in correctly and that the electrical socket is working.

What to Do When Suction Performance Decreases?

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic tube, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust bag is not full. Empty if necessary.
- Check that the exhaust filter is not blocked. Clean the exhaust filter, if necessary.






موارد مورد بررسی در هنگام عدم کارکرد صحیح دستگاه

ابتدا چک نمائید که دستگاه به طرز صحیح به برق اتصال یافته و پریز برق درست کار می کند .

موارد مورد بررسی در هنگام کاهش مکش دستگاه


- دستگاه را خاموش کرده و دوشاخه را از برق خارج نمائید .
- لوله خرطومی ، لوله انعطاف پذیر و لوازم جانبی را از لحاظ گرفتگی مجرای هوا بررسی نمائید .
 - محفظه گرد و غبار را از لحاظ خالی بودن چک و در صورت نیاز آن را تخلیه نمائید .
 - فیلتر خروجی را چک نموده تا گرفتگی نداشته باشد. در صورت نیاز آن را تمیز نمائید .

روش تميز كردن فيلتر هواي خروجي

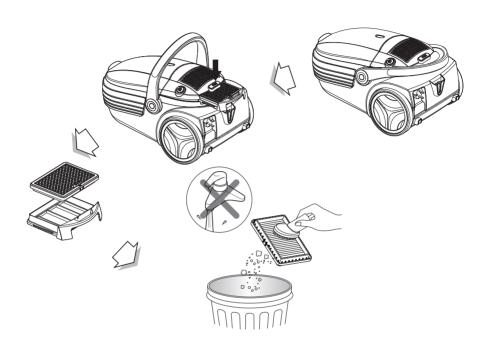

- فیلتر خروجی هوا عبارت است از یک فیلتر قابل استفاده مجدد هپا (HEPA).
 - برای تعویض فیلتر خروجی هوا،
 - دهید. سپس فیلتر HEPA را از
 - فیلتر خروجی هوا را بیرون بیاورید.
 - گرد و غبار روی آن را پاک کنید.
 - فیلتر خروجی هوا حداقل باید یک بار در سال تمیز شود.

عملكرد دستگاه

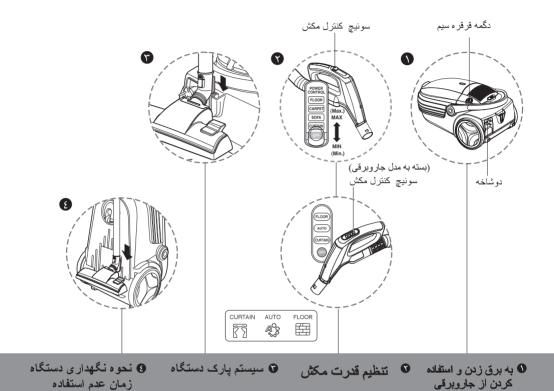

میم برق را به اندازه لازم بیرون بکشید

قدرت را با تنظیم سوییچ روی دسته

 وقتی دکمه دلخواهتان را فشار دادید، چراغ لد آن روشن می شود.

• اگر دکمه حالت خودکار (AUTO) را

تنظيم مي شود.

فشار دهید، قدرت مکش دستگاه به صورت


خودكار به اندازه زباله اى كه جارو مى كنيد،

شيلنگ خرطومي تنظيم كنيد

- سیم برق را به اندازه لازم بیرون بکشید
 و آن را به پریز برق بزنید.
- پس از استفاده از جار وبرقی برای جمع کردن سیم برق آن، دکسه سیم جمع کن را فشار دهید.

- ...
 - این سیستم در هنگام عدم کارکرد و یا توقف بین جارو کار آئی دارد.
 - جهت نگهداری دستگاه ، بعنوان مثال جابجا کر دن اثاثیه از این امکان جهت نگهداری لوله انعطاف پذیر و سر مکش استفاده فرمائید.
 - به این منظور قلاب سر مکش را داخل شیار پشت محفظه گرد و غبار جاي دهید .
- پس از پایان کار با دستگاه، آن را خاموش کنید، از برق بکشید و برای جمع کردن سیم برق دستگاه، دگمه سیم جمع کن را فشار دهید.
- شما امکان نگهداری دستگاه بصورت عمودی را دار اهستید بدین منظور قلاب روی سر مکش را داخل بست زیر دستگاه حرکت دهید.

روش استفاده روش تعویض کیسه آشغال

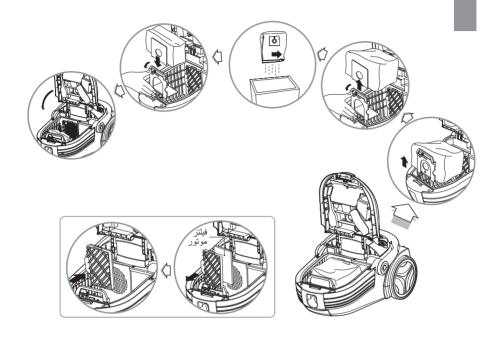

زمانی که دسنگاه را روی حداکثر قدرت ننظیم کرده اید و سر خرطوم جارو برقی روی هیچ سطحی نیست اما نمایشگر «کیسه پر است» کاملا فرمز شده است، کیسه زباله باید نعویض شود.

> در چنین حالتی حتی اگر به نظر داخل کیسه زباله پر نباشد، باید آن را عوض کنید زیرا احتمالاً گرد و غبار روزنه های کیسه زباله را کاملاً بسته است.


- دستگاه را خاموش کنید و از برق بکشید.
- قفل را بلند كنيد و يوشش را باز كنيد.
- دستگاه شما با دارای یک کیسه زبله کاغذی با یک کیسه زباله بارچه ای است.
 - دسته را به بالا بكشيد.
 - دکمه آبی رنگ را فشار دهید و کیسه کهنه گردوخاک را در آورید
- اگر جاروبرقی شما دارای یک کیسه زباله پارچه ای است، همان مراحل بالا را انجام دهید.
 - سپس طیسه زباله را خالی کر ده و أن را جاگذاری طنید. و سپس زیپ را باز کرده و زباله را تخلیه کنید.
 - کیسه زباله پارچه ای را بشویید و به مدت یک روز در زیر سایه خشک کنید.
 - اگر كيسه زباله جاروبرقي كاغذى است، يك كيسه جديد جاگذاري كنيد

نکته: دستگاه مجهز به یک کنترل کننده ایمنی است که اگر کیسه زباله به درستی جاگذاری نشده باشد اجازه بسته شدن سرپوش را نسی دهد. فیلتر موتور در داخل دسدگاه و مابین موتور و کیسه زیله تعبیه شده است. نوصیه می کنیم هر بار که فیلتر خروجی هوا را تعویض می کنید، هیلتر موتور را نیز درآورده و با درداشتن زباله ها از اطرافش و زدن به جای سفت (تکاندن آن)گرد و غیارش را تمیز کنید و دوباره در جای خودش نصب کنید.

روش کاربرد


راهنمای کاربر درباره کله گی

تمیز کردن کله گی دارای چرخاننده

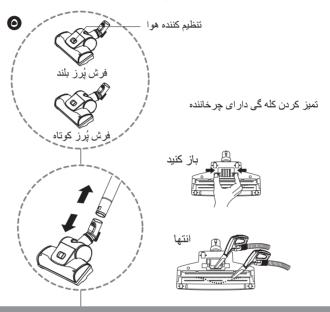

کله گی دارای چرخاننده (بسته به مدل جاروبرقی)


- تمیز کردن کله گی دارای چرخاننده
- دگمه روی کله گی در قسمت پشت آن را فشار
 دهید و پوشش هوا را جدا کنید.
- از بر ٔ س گردگیری و ابزار شکاف استفاده کرده و بر ٔ س و پروانه را با جاروبرقی تمیز کنید.

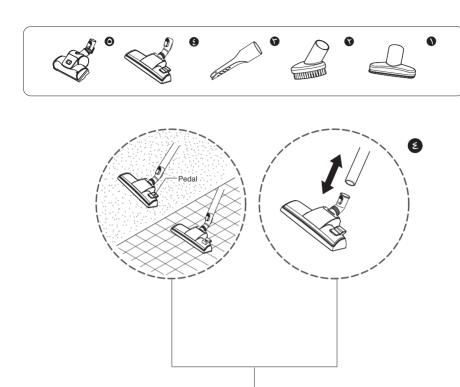

٤ سر دو وضعيته

- سر دو وضعیته جارو مجهز به پدال بوده که به شما امکان تغییر وضعیت بر مبنای سطح مورد نظر را می دهد.
- هنگام تمیز کردن سطوح سحّت (مانند سرامیک و پارکت) پدال را فشار داده تا برس به سمت پائین بیاید.
- هنگام تمیز کردن فرش و گلیم ، پدال را فشار دهید تا برس به سمت بالا بیاید.

روش استفاده از سری های اضافی

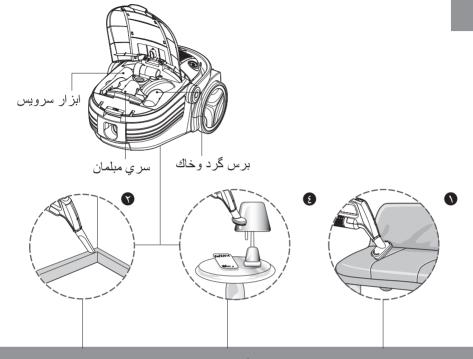

• سری اضافی مبلمان


ع برس گرد وخاک

ابزار سرویس

سر ی اضافی مبلمان جهت تمیز کردن مبل ، بالش و غیره به کار می رود .جمع کننده نخ و الیاف جهت مکش نخها ، الیاف و کرک به کار می رود.

برس گرد و خاک جهت تمیز کردن قاب عکسها ، کتابخانه ها و سایر سطوح ناهمو ار کار آئی دارد.


ابز ار سرویس جهت مکش گوشه هانی که دسترسی به آنها مشکل است مانند گوشه های کمد و فضای ما بین کوسنهای مبل به کار می-رود.

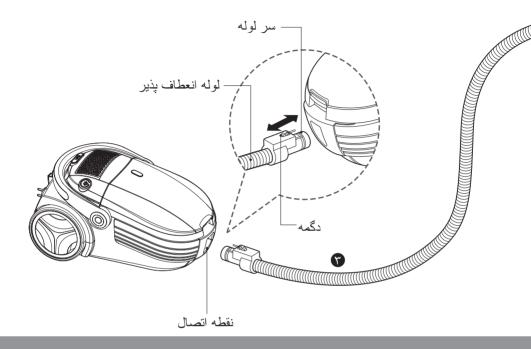

وصل كردن لوله انعطاف يذير

- قسمت انتهائي سر تميز كننده بر روي لوله انعطاف پذير را بر روي
 نقطه اتصال روي دستگاه فشار دهيد
 - جهت خارج کردن لوله انعطاف پذیر از جارو برقی ،
 دگمه ای را که در قسمت سر آن است فشار دهید و
 سپس سر آن را از دستگاه بیرون بکشید .

روش استفاده نحوه اتصال قطعات منفصله دستگاه

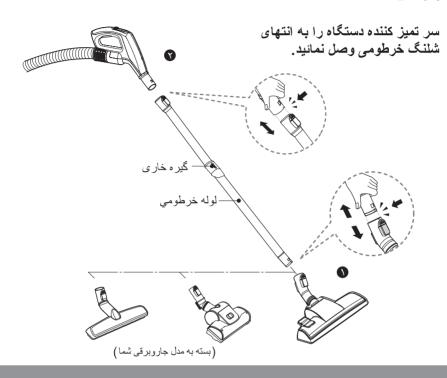

الوله خرطومي

سر دو وضعیته

- گیره خاری را فشار داده تا آزاد شود.
- لوله را به اندازه مورد نیاز بیرون بکشید .
- گیره خاری را رها کرده تا لوله در وضعیت خود ثابت گردد .
- لوله خرطومی را محکم داخل دسته شلنگ فشار دهید .
- لوله خرطومي را داخل سري مكش فشار دهيد .

دستورالعمل هاى ايمنى مهم

▲ اخطار

- از قرار دادن اشیاء در داخل روزنه ها خودداری کنید.
 این عمل منجر به خرابی دستگاه می شود.
- از مسدود کردن روزنه ها خودداری کنید: روزنه ها را از گرد و غبار، کرک، مو و هرچیزی که باعث کاهش فشار هوا می شود. عاری کنند.
 - در غیر این صورت منجر به خرابی دستگاه می شود.
- از استفاده جاروبرقی بدون مخزن یا فیلترها خودداری کنید.
 این عمل منجر به خرابی دستگاه می شود.
 - از جاروبرقی برای برداشتن اشیاء تیز، اسباب بازی های
 کوچک، سوزن، سنجاق و غیره استفاده نکنید.
 - این عمل منجر به خرابی دستگاه و مخزن می شود.
 - جاروبرقی را در محیط داخل منزل نگهداری کنید.
 جاروبرقی را پس از هربار استفاده به کناری قرار دهید تا در
 معرض ضربه نباشد.
 - فقط از قطعات توصیه شده یا تولید شده توسط مرکز خدمات مجاز ال جی استفاده کنید.
 - در غیر این صورت منجر به خرابی دستگاه می شود.
- فقط به روش توصیه شده در این دفترچه از دستگاه استفاده
 کنید. فقط از متعلقات توصیه شده یا تایید شده توسط ال چی
 استفاده کنید.
 - در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
 - جهت پیشگیری از آسیب جانی افراد یا پیشگیری از افتادن
 جاروبرقی در هنگام تمیز کردن پله ها، همواره دستگاه را در
 پایین پلکان قرار دهید.
 - در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.

- در حالت کاناپه از نازل های جانبی استفاده کنید. در غیر این صورت منجر به خرابی دستگاه می شود.
- پیش از قرار دادن فیلتر ها در دستگاه (فیلتر خروجی هوا و فیلترموتور) از خشک شدن کامل آنها اطمینان حاصل نمایید.
 - در غیر این صورت منجر به خرابی دستگاه می شود.
- از قرار دادن فیلتر در داخل اجاق یا مایکروویو خودداری کنید.
 - این عمل منجر به آتش سوزی می گردد.
- از خشک کردن فیلتر در داخل خشک کن لباس خودداری کنید.
 - این عمل ممکن است منجر به آتش سوزی شود.
 - از خشک کردن فیلتر در نزدیکی آتش خودداری کنید.
 این عمل ممکن است منجر به آتش سوزی شود.
- پس از استفاده از جاروبرقی برای مواردی نظیر نرم کننده فرش، شوینده فرش و غیره محفظه دستگاه را تمیز کنید. این مواد باعث انسداد فیلترها، کاهش فشار هوا شده و به دستگاه آسیب می رسانند. سهل انگاری در این مورد موجب خرابی می شود. (به مدل بستگی دارد)
- هنگام حمل جاروبرقی آن را از دستگیره مخزن نگیرید.
 چرا که ممکن است مخزن از بدنه جدا شده و جاروبرقی بیفتد.
 در این صورت علاوه برآسیب جانی منجر به خرابی دستگاه
 می شود. برای حمل شما باید از دستگیره حمل آن را بگیرید.
 (به مدل بستگی دارد)
- چنانچه پس از تخلیه مخزن چراغ (قرمز) روشن شد، مخزن را تمیز کنید.

در غیر این صورت منجر به خرابی دستگاه می شود. (به مدل بستگی دارد)

اخطار 🛕

محافظ حرارتي:

این جاروبرقی دارای یک ترموستات ویژه ای است که مانع از بیش از حد گرم شدن جاروبرقی می شود. چنانچه جاروبرقی به طور ناگهانی خاموش شود، کلید را خاموش کرده و دو شاخه را از پریز بیرون بکشید. مواردی را که ممکن است باعث افزایش دما شود بررسی کنید از قبیل پر شدن مخزن، گرفتگی لوله خرطومی یا انسداد فیلتر. در صورت صحیح بودن موارد فوق، آنها را در محل خود قرار داده و پیش از روشن کردن دوباره حداقل مدت ۳۰ دقیقه صبر کنید. پس از ۳۰ دقیقه دو شاخه را به پریز متصل کرده و کلید را روشن کنید.

دستورالعمل هاى المنى مهم

مشيدار 🚹

- هنگام تمیز کردن جاروبرقی یا زمانی که از آن استفاده نمی کنید دوشاخه ی آن را از پریز بیرون بکشید. در غیر این صورت منجر به برق گرفتگی یا آسیب جانی
 - از جاروبرقی برای برداشتن مواد شعله ور یا دودزا نظیر سیگار یا خاکستر داغ استفاده نکنید.
- از جاروبرقی برای جمع آوری مواد قابل انفجار یا قابل اشتعال نظیر گازوئیل، بنزین، تینر، یرویان (مایع یا گاز) استفاده نکنید.
- گاز ناشی از این مواد می تواند منجر به انفجار یا خطر آتش سوزی شود. در نتیجه احتمال مرگ یا آسیب جانی وجود دارد.
- هرگز با دستان مرطوب جاروبرقی یا دوشاخه آن را لمس
 - این عمل منجر به مرگ یا برق گرفتگی می شود.
- برای کشیدن دو شاخه از پریز هرگز سیم آن را نکشید. این عمل منجر به خرابی دستگاه یا برق گرفتگی می شود. برای جدا کردن سیم برق از پریز همواره دو شاخه آن را بگیرید.
- همواره مو، خرده پارچه، انگشتان و ساير قسمت هاي بدن را از روزنه های دستگاه و قطعات متحرک دور نگه داريد.
- این عمل منجر به برق گرفتگی یا آسیب دستگاه می گردد.
- هرگز برای حمل از سیم جاروبرقی استفاده نکنید و یا سیم آن را حول لبه های تیز نپیچید. جاروبرقی را برروی سیم آن قرار ندهید. سیم را از سطوح گرم دور نگه دارید. در غیر این صورت منجر به برق گرفتگی و آسیب جانی و یا آتش سوزی یا خرابی دستگاه می شود.
- هرگز اجازه ندهید از جاروبرقی به عنوان وسیله اسباب بازی استفاده شود. همواره توجه خاصی به جاروبرقی ای که در نزدیکی کودکان است، داشته باشید.
- در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه
- در صورت خیس شدن جاروبرقی، از آن استفاده نکنید. در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه مى شود.
 - برای پیشگیری از خطر با مرکز خدمات مجاز گلدیران تماس بگیرید.

- در صورت مفقود شدن یا معیوب شدن قطعات جاروبرقی از آن استفاده نکنید.
- در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه
 - برای پیشگیری از خطر با مرکز خدمات مجاز گلدیران تماس بگیرید.
 - هرگز از سیم سیار استفاده نکنید.
 - این عمل منجر به آتش سوزی یا خرابی دستگاه می شود.
 - از ولتاژ صحیح استفاده کنید.
 - استفاده از ولتاژ نامناسب منجر به خرابی موتور دستگاه یا آسیب فردی کاربر می شود. ولتاژ مناسب دستگاه در كف جاروبرقي درج شده است.
- يىش از كشىدن دو شاخه جاروبرقى از يربز تمامى كلىدها را خاموش کنید.
 - در غیر این صورت منجر به برق گرفتگی یا آسیب جانی مى شود.
 - از تعویض دوشاخه خودداری نمایید.
- این عمل منجر به برق گرفتگی یا آسیب جانی و خرابی دستگاه می شود. اگر دو شاخه با پریز مطابقت ندارد برای نصب پریز مناسب با یک برق کار تماس بگیرید.
- تعمير وسايل برقى فقط بايد توسط افراد مركز خدمات مجاز انجام شود.
- تعمیرات غیرمجاز منجر به خطرات شدید جانی می گردد.
- اگر زبانه کنترل در حالت خاموش نیست، دوشاخه را به يريز متصل نكنيد.
- در غیر اینصورت منجر به آسیب جانی یا مالی می شود. (به مدل بستگی دارد)
- کودکان را از دستگاه دور نگهداشته و هنگام جمع کردن سیم مراقب اشیاء و افراد اطراف دستگاه باشید.
 - سیم در هنگام جمع شدن با سرعت زیادی حرکت می کند. (به مدل بستگی دارد)
 - لوله خرطومی دارای تعدای سیم است. در صورت آسیب دیدن، از آن استفاده نکرده و از بریدن یا له شدگی آن جلوگیری
 - در غیر اینصورت منجر به مرگ یا شوک الکتریکی می شود. (به مدل بستگی دارد)

دستورالعمل هاى ايمنى مهم

🛕 هشیدار

- در صورت خرابی سیم برق یا دوشاخه جاروبرقی، از آن استفاده نکنید.
- در صورت آسیب دیدگی سیم برق، تعویض آن را به مرکز خدمات مجاز گلدیران بسپارید تا خطری شما را تهدید نکند.
- استفاده از این دستگاه برای افرادی (نظیر کودکان) که از توانایی فیزیکی محدودی برخوردارند، یا ناتوان هستند یا از تجربه کمی برخوردارند، مجاز نیست مگر تحت نظارت افراد بالغ.

مراقب کودکان باشیم تا از جاروبرقی به عنوان وسیله بازی استفاده نکنند.

• کودکان ۸ سال به بالا می توانند از این دستگاه استفاده کنند و افراد ناتوان یا افرادی که دارای مشکلات حسی و ذهنی هستند یا افراد کم تجربه باید با نظارت افراد بالغ از دستگاه استفاده نمایند تا از خطرات احتمالی آگاه شوند. به کودکان اجازه بازی با دستگاه را ندهید. تمیز کردن و نگهداری جاروبرقی نباید توسط کودکان بدون نظارت افراد بالغ انجام شود.

<u>۔</u> دستورالعمل های ایمنی مهم

پیش از استفاده از جاروبرقی جهت پیشگیری از خطر آتش سوزی، برق گرفتگی، آسیب جانی یا خرابی دستگاه در هنگام استفاده از آن، لطفاً تمامی دستورالعمل های زیر را مطالعه کرده و اجرا کنید. این راهنما تمامی شرایط احتمالی را پوشش نمی دهد. برای مشکلاتی که آنها را درک نمی کنید با مرکز خدمات مجاز تماس بگیرید. این دستگاه مطابق با EMC Directive EC Directives:-2006/95/EC Low Voltage Directive-2004/108/EC است.



این علامت هشدار ایمنی است.

این علامت بیانگر خطرات بالقوه ای است که ممکن است باعث مرگ یا آسیب شما و دیگران شود. تمامی پیام های ایمنی به همراه علامت هشدار ایمنی و در ادامه کلمات "اخطار" یا "هشدار" است. این دو عبارت به معنای:



این علامت به شما می گوید که احتمال خطر و موارد غیر ایمنی وجود دارد که می تواند باعث آسیب شدید جانی یا مرگ شود.

▲ اخطار

این علامت بیانگر خطرات و شرایط غیرایمنی است که می تواند باعث آسیب جانی یا خسارت مالی شود.

فهرست مطالب

7~4 · · · · · · · · · · · · · · · · · · ·	عنعما ممم عاملم على روتس
8	روش استفاده
8	نحوه اتصال قطعات منفصله دستگاه
10	روش استفاده از سری های اضافی
12 · · · · · · · · · · · · · · · · · · ·	تمیز کردن کله گی دارای چرخاننده
	روش تعویض کیسه آشغال
14 · · · · · · · · · · · · · · · · · · ·	عملکرد دستگاه
15	روش تميز كردن فيلتر هواي خروجي
دستگاه 16	موارد مورد بررسی در هنگام عدم کارکرد صحیح
ه 16	موارد مورد بررسی در هنگام کاهش مکش دستگا



دفترچه راهنمای

جاروبرقی نوع جدید سایکلون

این دفترچه حاوی اطلاعات مهمی پیرامون استفاده صحیح و نگهداری جاروبرقی است. بخصوص به منظور ایمنی خود تمامی مطالب صفحات 4 - 7 مطالعه کنید. این دفترچه را برای مراجعه بعدی در دسترس نگهدارید.

VN-28**H**



MFL62343509

www.lg.com