



LG

Life's Good

ไ ท ย
ENGLISH

คู่มือการใช้

User Guide

LG G *Tablet 8.0^{4G}*


LG-V490



ไทย

คู่มือการใช้

- ภาพหน้าจอและภาพประกอบอาจแตกต่างจากที่
คุณพบในอุปกรณ์จริง
- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้กับ
อุปกรณ์ของคุณได้ ขึ้นอยู่กับโทรศัพท์ ซอฟต์แวร์
หรือผู้ให้บริการของคุณ ข้อมูลทั้งหมดในเอกสารนี้
เปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า
- อุปกรณ์นี้ไม่เหมาะสำหรับผู้พิการทางสายตาเนื่อง
จากเป็นคีย์บอร์ดบนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2015 LG Electronics, Inc.
สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group
และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่น ๆ
ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™,
YouTube™, แสงอาทิตย์™ และ Google Play™
เป็นเครื่องหมายการค้าของ Google, Inc.

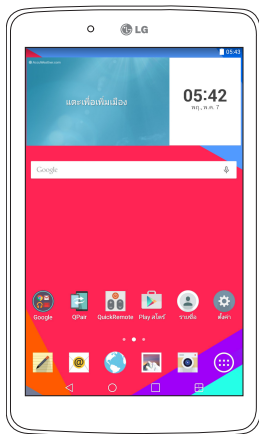

สารบัญ

เกี่ยวกับคู่มือผู้ใช้.....	5	กางหูนิ้วเพื่อชม.....	30
เกี่ยวกับคู่มือผู้ใช้.....	5	หมุนหน้าจอ.....	30
เครื่องหมายการค้า.....	6	หน้าจอหลัก.....	30
DivX HD.....	6	การปรับแต่งหน้าจอหลัก.....	32
คำแนะนำเพื่อความปลอดภัยและการใช้ งานอย่างมีประสิทธิภาพ.....	8	การเปิด การสลับ หรือการหยุดแอปฯ.....	32
ข้อความประกาศสำคัญ.....	16	การใช้หน้าต่างคู่.....	33
เริ่มทำความรู้จักกับอุปกรณ์ของคุณ.....	20	การกำหนดไอคอนแอปฯ เองบน หน้าจอหลัก.....	34
ภาพรวมแท็บเล็ต.....	20	การเข้าใช้งานด่วน.....	35
การชาร์จแท็บเล็ตของคุณ.....	22	การแจ้งเตือน.....	35
การยืดอายุแบตเตอรี่.....	23	การเข้าใช้งานการแจ้งเตือน.....	36
การยืดอายุแบตเตอรี่.....	24	ตั้งค่ารวดเร็วบนแผงการแจ้งเตือน.....	37
การดูระดับประจุแบตเตอรี่.....	24	การจัดเรียงตัวเลือกตั้งค่ารวดเร็วใหม่บน แผงการแจ้งเตือน.....	37
การตรวจสอบและควบคุมการใช้แบตเตอรี่.....	24	แอปฯ QSlide ในแผงการแจ้งเตือน.....	37
การติดตั้งซิมการ์ด.....	24	การใช้ QSlide แอปพลิเคชัน.....	37
การใส่การ์ด microSD.....	25	ไอคอนการแจ้งเตือนบนแถบสถานะ.....	38
การถอดการ์ด microSD.....	26	ผู้ใช้หลายราย.....	39
การฟอร์แมตการ์ด microSD.....	27	QSlide.....	41
การล็อคและปลดล็อคหน้าจอ.....	27	การถ่ายภาพหน้าจอ.....	43
การเปิดหน้าจอโดยใช้คุณสมบัติเปิดหน้าจอ....	28	การใช้ QuickMemo+ เพื่อจับภาพบันทึกหน้า จอ.....	43
การปลดล็อคหน้าจอของคุณโดยใช้คุณสมบัติ Knock Code.....	28	การใช้ Capture plus เพื่อจับภาพหน้าจอเบราว์เซอร์.....	43
หน้าจอหลักของคุณ.....	29	วิธีป้อนข้อมูลข้อความ.....	43
เคล็ดลับสำหรับหน้าจอสัมผัส.....	29	ป้อนคำศัพท์ที่แนะนำโดยใช้การควบคุมท่า ทาง.....	44
แตะหรือสัมผัส.....	29	การป้อนอักขระพิเศษ.....	45
แตะค้างไว้.....	29	การใช้ถาดคีย์.....	45
ลาก.....	29		
ปัดหรือเลื่อน.....	30		
แตะสองครั้ง.....	30	การตั้งค่าบัญชี Google.....	47

การเชื่อมต่อกับเครือข่ายและอุปกรณ์.....	48	ข้อความ.....	59
Wi-Fi.....	48	มุมมองการสนทนา.....	59
การเชื่อมต่อกับเครือข่าย Wi-Fi	48	การส่งข้อความ.....	59
การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi.....	48	การใช้สไลม์ลีย์.....	60
Bluetooth	48	การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย.....	60
การเปิด Bluetooth และการจับคู่แท็บเล็ต ของคุณกับอุปกรณ์ Bluetooth.....	49	อีเมล	61
ส่งข้อมูลด้วยคุณสมบัติ Bluetooth.....	50	การจัดการแอคเคาท์อีเมล.....	61
รับข้อมูลด้วยคุณสมบัติ Bluetooth.....	50	การทำงานกับโฟลเดอร์แอคเคาท์	62
SmartShare	50	การเขียนและส่งอีเมล.....	62
ผลิตเพลนกับเนื้อหาบนอุปกรณ์ที่ หลากหลาย	50	การรับอีเมล	62
การเล่น/การส่ง	51	ความบันเทิง	63
ผลิตเพลนกับเนื้อหาจากอุปกรณ์ ข้างเคียง	51	กล้องถ่ายรูป	63
การเชื่อมต่ออุปกรณ์.....	51	ทำความรู้จักกับช่องมองภาพ	63
การค้นหาอุปกรณ์อื่นๆ.....	51	การใช้การตั้งค่าขั้นสูง	64
การใช้เนื้อหาจากระบบ Cloud.....	51	การถ่ายภาพ.....	64
การใช้ระบบ Cloud	52	การซูมเข้าหรือซูมออก	64
QPair	52	การถ่ายรูปด้วยท่าทาง	65
การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิล USB.....	54	เมื่อคุณถ่ายภาพแล้ว.....	65
ถ่ายโอนเพลง รูปภาพ และวิดีโอด้วยการใช้ โหมดอุปกรณ์มีเดีย (MTP).....	54	การดูรูปภาพที่บันทึกไว้	66
ซิงโครไนซ์กับ Windows Media Player	55	การบันทึกวิดีโอ	67
การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิล USB สำหรับผู้ใช้ Mac OS X.....	56	การดูวิดีโอที่บันทึกไว้.....	67
รายชื่อ.....	57	แกลเลอรี.....	68
การค้นหารายชื่อ	57	การดูรูปภาพ.....	68
การเพิ่มรายชื่อใหม่.....	57	การเล่นวิดีโอ.....	68
รายชื่อที่ซบซ้อน.....	57	การลบภาพและวิดีโอ	69
การสร้างกลุ่ม	58	การตั้งค่าเป็นภาพพื้นหลัง	69
		สไลด์โชว์.....	69
		วิดีโอ.....	69
		การเล่นวิดีโอ.....	70
		เพลง.....	71
		ถ่ายโอนเพลงด้วยการใช้โหมดอุปกรณ์มีเดีย (MTP).....	71

การเล่นเพลง.....	71	อุปกรณ์.....	92
เครื่องมือ.....	74	ส่วนตัว.....	96
QuickMemo+.....	74	ระบบ.....	99
QuickRemote.....	76	LG Backup.....	102
นาฬิกา.....	77	เกี่ยวกับการสำรองข้อมูลและ	
คิดเลข.....	78	เรียกคืนข้อมูลของอุปกรณ์.....	102
ปฏิทิน.....	78	แบ็คอัพข้อมูลแท็บเล็ตของคุณ.....	103
การทำงาน.....	79	การเรียกคืนข้อมูลแท็บเล็ต.....	103
จัดการไฟล์.....	80	อัปเดตซอฟต์แวร์แท็บเล็ต.....	105
บันทึกเสียง.....	81	อัปเดตซอฟต์แวร์แท็บเล็ต.....	105
POLARIS Office 5.....	82	อัปเดตซอฟต์แวร์แท็บเล็ต LG ผ่าน	
Google+.....	83	Over-the-Air (OTA).....	105
LG SmartWorld.....	83	อุปกรณ์เสริม.....	107
เริ่มใช้.....	85	การแก้ปัญหา.....	108
อินเตอร์เน็ต.....	85		
การเปิดเพจ.....	85		
บุ๊กมาร์ค.....	86		
ประวัติ.....	86		
การใช้โหมดการอ่าน.....	86		
การใช้ QSlide.....	86		
การดาวน์โหลดไฟล์.....	86		
Chrome.....	86		
การดูเว็บเพจ.....	87		
การเปิดเพจ.....	87		
การค้นหาเว็บด้วยเสียง.....	87		
การซิงค์กับอุปกรณ์อื่น.....	87		
การเพิ่มและการดูบุ๊กมาร์ค.....	87		
เมนู Chrome Options.....	88		
ตั้งค่า.....	89		
เข้าถึงเมนูตั้งค่า.....	89		
เครือข่ายไร้สาย.....	89		

เกี่ยวกับคู่มือผู้ใช้

เกี่ยวกับคู่มือผู้ใช้

- โปรดอ่านคู่มือนี้โดยละเอียดก่อนการใช้งานอุปกรณ์ เพื่อให้มั่นใจว่าคุณใช้อุปกรณ์ของคุณได้อย่างถูกต้องและปลอดภัย
- ภาพและภาพหน้าจอบางภาพที่มีในคู่มือนี้อาจแตกต่างจากที่แสดงบนแท็บเล็ตของคุณ
- เนื้อหาของคุณอาจแตกต่างจากผลิตภัณฑ์ที่วางจำหน่าย หรือจากซอฟต์แวร์ที่มาจากผู้ให้บริการหรือเครือข่าย เนื้อหานี้อาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า สำหรับเวอร์ชันล่าสุดของคู่มือนี้ โปรดดูที่เว็บไซต์ LG ที่ www.lg.com
- แอปพลิเคชันและฟังก์ชันของอุปกรณ์อาจแตกต่างกันตามประเทศ ภูมิภาค หรือข้อมูลจำเพาะของฮาร์ดแวร์ LG ไม่รับผิดชอบต่อปัญหาด้านประสิทธิภาพที่เกิดจากการใช้แอปพลิเคชันที่พัฒนาขึ้นโดยผู้ให้บริการอื่นที่ไม่ใช่ LG
- LG ไม่รับผิดชอบต่อปัญหาด้านประสิทธิภาพหรือการไม่สามารถใช้งานร่วมกันได้ที่เกิดจากการแก้ไขการตั้งค่ารีจิสทรี หรือการแก้ไขซอฟต์แวร์ระบบการปฏิบัติการ ความพยายามในการปรับแต่งระบบปฏิบัติการอาจทำให้อุปกรณ์หรือแอปพลิเคชันของอุปกรณ์ทำงานผิดปกติ
- ซอฟต์แวร์, เสียง, ฟันหลัง, ภาพ และมีเดียที่มีมาให้พร้อมอุปกรณ์ได้รับอนุญาตเพื่อการใช้งานที่จำกัด หากคุณจัดเก็บข้อมูลและใช้ข้อมูลเหล่านี้เพื่อการพาณิชย์หรือวัตถุประสงค์อื่น ๆ คุณอาจละเมิดกฎหมายลิขสิทธิ์ ในฐานะผู้ใช้งาน คุณมีส่วนรับผิดชอบอย่างสมบูรณ์สำหรับการใช้มีเดียอย่างผิดกฎหมาย
- อาจมีค่าใช้จ่ายเพิ่มเติมสำหรับบริการข้อมูล เช่น ข้อความ, การอัปโหลดและดาวน์โหลด, ซิงค์อัตโนมัติ หรือการให้บริการระบบฟิสิกส์ เพื่อหลีกเลี่ยงค่าใช้จ่ายเพิ่มเติม ให้เลือกแผนบริการข้อมูลที่เหมาะสมกับความต้องการของคุณ ติดต่อผู้ให้บริการของคุณเพื่อรับรายละเอียดเพิ่มเติม

เครื่องหมายการค้า

- LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Electronics
- เครื่องหมายการค้าและลิขสิทธิ์อื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ

DivX HD 

เกี่ยวกับวิดีโอ DivX: DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ซึ่งผ่านการทดสอบที่เข้มงวดเพื่อยืนยันว่าเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ divx.com

เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณ ไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

DivX Certified® สำหรับเล่นวิดีโอ DivX® ไม่เกิน HD 720p
รวมถึงเนื้อหาฟรีเมียม

DivX®, DivX Certified® และโลโก้ที่เกี่ยวข้องเป็นเครื่องหมายการค้าของ Rovi Corporation หรือบริษัทในเครือ และใช้โดยได้รับอนุญาต

ข้อมูลประกาศของซอฟต์แวร์โอเพ่นซอร์ส

หากต้องการรับซอร์สโค้ดภายใต้ข้อตกลงโอเพ่นซอร์ส GPL, LGPL, MPL และข้อตกลงโอเพ่นซอร์สอื่นๆ ที่มีอยู่ในผลิตภัณฑ์นี้ โปรดไปที่ <http://opensource.lge.com>

นอกเหนือจากซอร์สโค้ดแล้ว เงื่อนไข การปฏิเสธการรับประกัน และการประกาศเกี่ยวกับลิขสิทธิ์ทั้งหมดที่อ้างถึงนั้นสามารถดาวน์โหลดได้

LG Electronics จะยังมอบซอร์สโค้ดแก่คุณบน CD-ROM โดยคิดค่าใช้จ่ายในการแจกจ่าย (เช่น ค่าใช้จ่ายของสื่อบันทึกข้อมูล การจัดส่ง และการจัดการ) หากได้รับการร้องขอทางอีเมลไปยัง opensource@lge.com ข้อเสนอนี้มีผลใช้ได้สาม (3) ปีนับจากวันที่คุณซื้อสินค้า

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

ในกรณีที่เกิดความผิดพลาด เครื่องมือซอฟต์แวร์ที่อยู่ในอุปกรณ์ของคุณจะเก็บรวบรวมบันทึกความผิดพลาด เครื่องมือนี้รวบรวมเฉพาะข้อมูลเกี่ยวกับความผิดพลาด เช่น ความแรงของสัญญาณ และแอปพลิเคชันที่โหลด บันทึกจะถูกใช้เพื่อช่วยในการตรวจสอบสาเหตุของความผิดพลาดเท่านั้น บันทึกเหล่านี้จะถูกเข้ารหัสและสามารถเข้าถึงได้โดยศูนย์บริการ LG ที่ได้รับอนุญาตเท่านั้น ในกรณีที่您需要ส่งคืนอุปกรณ์เพื่อซ่อมแซม

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

แท็บเล็ตรุ่น LG-V490 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานสำหรับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate (SAR) การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้อุปกรณ์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่ใช้งานได้
- แม้ว่าจะระดับ SAR ของอุปกรณ์ LG แต่ละรุ่นจะแตกต่างกันบ้างแต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม

- ค่า SAR สูงสุดสำหรับอุปกรณ์นี้เมื่อพกพาไว้กับตัวตามที่อธิบายในคู่มือผู้ใช้คือ 1.420 วัตต์/กก.
- อุปกรณ์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 0.00 ซม. เมื่อใช้กล่องสำหรับพกพา คลิปยึดเข็มขัด หรือที่ใส่เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านี้ไม่ควรเป็นโลหะและควรให้ผลิตภัณฑ์อยู่ห่างจากร่างกายอย่างน้อย 0.00 ซม. อุปกรณ์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูล ในบางครั้งการส่งไฟล์ข้อมูลอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

การดูแลและการบำรุงรักษาผลิตภัณฑ์

คำเตือน

ประกาศสำหรับการเปลี่ยนแบตเตอรี่

- เพื่อความปลอดภัยของคุณ ห้ามถอดแบตเตอรี่ที่อยู่ในผลิตภัณฑ์ หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับบริการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- แบตเตอรี่ Li-Ion เป็นส่วนประกอบที่อันตรายซึ่งอาจทำให้ได้รับบาดเจ็บได้
- การเปลี่ยนแบตเตอรี่โดยช่างที่ไม่มีความรู้ อาจทำให้อุปกรณ์ของคุณเสียหายได้

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับอุปกรณ์รุ่นนี้ เท่านั้นการใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของอุปกรณ์สิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่อง ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจซ่อม
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น ทีวี วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งเครื่องไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
- อย่าทำตก
- ยานำเครื่องนี้ไว้ในที่ที่มีการสันสะท้อนหรือการกระแทก
- ปิดอุปกรณ์ในบริเวณที่มีข้อกำหนดพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้อุปกรณ์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- อย่าสัมผัสอุปกรณ์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้อุปกรณ์เสียหายได้
- อย่าชาร์จอุปกรณ์ใกล้วัตถุไวไฟ เนื่องจากอุปกรณ์อาจร้อนและทำให้เกิดไฟไหม้ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่อง (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จแท็บเล็ตโดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จอุปกรณ์ในบริเวณที่มีการถ่ายเทอากาศดี
- ยานำเครื่องนี้ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางอุปกรณ์ใกล้แบตเตอรี่หรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจด้วยวัตถุมีคม เพราะอาจทำให้แท็บเล็ตเสียหายได้
- อย่าให้อุปกรณ์สัมผัสกับของเหลวหรือความชื้น

- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง
- ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซมแก้วที่แตก มีรอยแตก หรือร้าว ความเสียหายของหน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
- แتبเบิลเล็ตของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลานานโดยไม่มีการระบายอากาศหรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือ แتبเบิลเล็ตในระหว่างหรือทันทีหลังจากการใช้งาน
- หากอุปกรณ์ของคุณเปียกน้ำ ให้ถอดปลั๊กทันทีเพื่อให้เครื่องแห้งสนิท ห้ามทำให้อุปกรณ์แห้งเร็วขึ้นโดยใช้แหล่งความร้อนภายนอก เช่น เตาอบ เตาไมโครเวฟ หรือเครื่องเป่าผม
- ของเหลวในอุปกรณ์ที่เปียกน้ำจะเปลี่ยนสีของฉลากผลิตภัณฑ์ในอุปกรณ์ของคุณ ความเสียหายของอุปกรณ์ที่เป็นผลมาจากการสัมผัสกับของเหลวจะไม่ได้รับครอบคลุมภายใต้การรับประกัน
- ใช้แتبเบิลเล็ตของคุณในช่วงอุณหภูมิ 0 °C และ 40 °C หากเป็นไปได้ การปล่อยให้ อุปกรณ์อยู่ในอุณหภูมิเย็นจัดหรือร้อนจัดอาจทำให้เกิดความเสียหาย ทำงานผิดพลาด หรือระเบิดได้

การทำงานอย่างมีประสิทธิภาพของอุปกรณ์

อุปกรณ์อิเล็กทรอนิกส์

อุปกรณ์แتبเบิลเล็ตทุกเครื่องอาจได้รับผลจากคลื่นรบกวนได้ ทำให้มีผลต่อการทำงาน

- ห้ามใช้อุปกรณ์แتبเบิลเล็ตใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางแتبเบิลเล็ตเหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- อุปกรณ์แتبเบิลเล็ตบางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและข้อกำหนดว่าด้วยเรื่องการใช้อุปกรณ์แท็บเล็ตในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้อุปกรณ์มือถือในขณะขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุดีเดรยนด์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะอยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟัง และชุดหูฟังสามารถทำให้สูญเสียการได้ยินได้



เพื่อป้องกันการทำลายความสามารถในการได้ยินที่อาจเกิดขึ้นได้ ห้ามฟังเสียงที่ดังมากเป็นเวลานาน

- ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดแท็บเล็ตใกล้กับหูของคุณ นอกจากนี้คุณควรตั้งระดับเสียงเพลงไว้ในระดับที่เหมาะสม
- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

ส่วนที่เป็นแก้ว

บางส่วนของอุปกรณ์แท็บเล็ตของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากอุปกรณ์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตกอย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้อุปกรณ์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้แท็บเล็ตในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้แท็บเล็ตใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บอุปกรณ์แท็บเล็ตหรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดแท็บเล็ตของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก


เก็บอุปกรณ์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก อุปกรณ์นี้ยังประกอบด้วยแบตเตอรี่ภายในซึ่งอาจเป็นอันตรายหากไม่ได้ใช้หรือเก็บรักษาอุปกรณ์อย่างถูกวิธี

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้อุปกรณ์ชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำอย่างวางอุปกรณ์ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ชาร์จแล้วโปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบบนผนังทุกครั้งหลังจากแท็บเล็ตชาร์จเต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ ตะปู สัมผัสกับแบตเตอรี่ ซึ่งอาจก่อให้เกิดไฟไหม้ได้

วิธีการอัปเดตแท็บเล็ตของคุณ

เข้าใช้งานเฟิร์มแวร์ล่าสุด, ฟังก์ชันซอฟต์แวร์ใหม่ และการปรับปรุงต่างๆ

- อัปเดตแท็บเล็ตของคุณโดยไม่ใช้คอมพิวเตอร์: เลือก **ศูนย์กลางอัปเดต**  > **Software Update** > ตรวจสอบอัปเดตในตอนนี้
- อัปเดตแท็บเล็ตของคุณโดยเชื่อมต่อกับคอมพิวเตอร์
สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่
<http://www.lg.com/common/index.jsp> เลือกประเทศและภาษา

คำประกาศรับรอง

ดังนั้น **LG Electronics** ขอประกาศว่าผลิตภัณฑ์ **LG-V490**
เป็นไปตามข้อกำหนดที่จำเป็น และข้อกำหนดที่เกี่ยวข้องอื่นๆ ของ
Directive **1999/5/EC** คุณสามารถดูสำเนาของ คำประกาศรับรองได้ที่
<http://www.lg.com/global/declaration>

ข้อกำหนดและความปลอดภัย

ไปที่ “ตั้งค่า > เกี่ยวกับแท็บเล็ต > กฎเกณฑ์และความปลอดภัย”
เพื่อดูข้อมูลข้อกำหนดและความปลอดภัย

ข้อความประกาศสำคัญ




โปรดอ่านข้อความนี้ก่อนที่คุณจะเริ่มใช้งานแท็บเล็ต!

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในแท็บเล็ตของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะนำแท็บเล็ตไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำแท็บเล็ต

คุณต้องตรวจสอบหน่วยความจำของแท็บเล็ตและลบข้อมูลบางบ้าง เช่น แอปพลิเคชันต่างๆ เพื่อเพิ่มพื้นที่ว่างหน่วยความจำ

การถอนการติดตั้งแอปพลิเคชัน:

- 1 และ  >  > แท็บ แอปฯ > ตั้งค่า  > แอปฯ
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลือกแอปพลิเคชันที่คุณต้องการถอนการติดตั้ง
- 3 และ ถอนการติดตั้ง และ ตกลง เพื่อยืนยัน

2. ก่อนการติดตั้งแอปพลิเคชันโอเพ่นซอร์สและระบบปฏิบัติการ (OS)




คำเตือน

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากของผู้ผลิต อาจทำให้แท็บเล็ตของคุณทำงานผิดปกติได้ นอกจากนี้ แท็บเล็ตของคุณจะไม่ได้รับความคุ้มครองตามการรับประกัน

คำเตือน

เพื่อปกป้องแท็บเล็ตและข้อมูลส่วนตัวของคุณ ควรดาวน์โหลดแอปพลิเคชันจากแหล่งที่เชื่อถือได้เท่านั้น เช่น Play Store หากมีการติดตั้งแอปพลิเคชันไม่ถูกต้องในแท็บเล็ต แท็บเล็ตอาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น และข้อมูลและการตั้งค่าที่เกี่ยวข้องทั้งหมดออกจากแท็บเล็ต

3. การใช้การล็อคหน้าจอ

ตั้งค่าการล็อคหน้าจอเพื่อให้แท็บเล็ตของคุณปลอดภัย และ  >  > แท็บเล็ต >  > หน้าจอ > ล็อคหน้าจอ > เลือกแบบล็อคหน้าจอ และเลือก

แบบล็อคหน้าจอที่คุณต้องการจาก ลาก, **Knock Code**, รูปแบบ, **PIN** และ รหัสผ่าน คุณสามารถสร้างแป้นคีย์ PIN เป็นมาตรการรักษาความปลอดภัยได้ในกรณีที่คุณลืมการล็อคหน้าจอ

โปรดระวัง: โปรดสร้างหรือลงชื่อเข้าใช้แอคเคาท์ Google ก่อนการตั้งค่าการล็อคหน้าจอ และโปรดจำแป้นคีย์ PIN ที่คุณสร้างไว้เมื่อทำการสร้างการล็อคหน้าจอของคุณ

คำเตือน

ข้อควรระวังเมื่อใช้การล็อคหน้าจอ

สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ให้ได้ คุณจะไม่สามารถใช้แท็บเล็ตของคุณได้ถ้าคุณปลดล็อคหน้าจอไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสมือเพียง 5 ครั้งในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืมรูปแบบล็อค, PIN หรือรหัสผ่าน:

< หากคุณลืมแบบของคุณ >

หากคุณล็อกอินบัญชี Google ในแท็บเล็ตแต่ป้อนรูปแบบไม่ถูกต้อง 5 ครั้ง ให้แตะ **ลืมแบบ?** ที่ด้านล่างของหน้าจอ จากนั้น คุณจะต้องล็อกอินบัญชี Google ของคุณ หรือคุณต้องป้อนแม่คีย์ PIN ที่คุณได้ป้อนไว้เมื่อสร้างล็อคแบบ

หากคุณไม่ได้สร้างแอคเคาท์ Google บนแท็บเล็ต หรือลืมแม่คีย์ PIN คุณจำเป็นต้องทำการ Hard Reset

< หากคุณลืม PIN หรือรหัสผ่านของคุณ >

หากคุณลืม PIN หรือรหัสผ่านของคุณ คุณจะต้องทำ Hard Reset

โปรดระวัง: หากคุณทำ Hard Reset แอปพลิเคชันผู้ใช้และข้อมูลผู้ใช้ทั้งหมด จะถูกลบ

หมายเหตุ: หากคุณยังไม่ได้ล็อกอินเข้าสู่แอคเคาท์ Google ของคุณและลืมแบบปลดล็อค คุณจะต้องป้อนแม่คีย์ PIN ของคุณ

4. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณไม่สามารถแก้ไขสู่สภาพเดิมได้ ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่มต้นของแท็บเล็ต

1 การปิดแท็บเล็ต

2 กด **ปุ่มลดระดับเสียง** ค้างไว้ก่อน || จากนั้นกด **ปุ่มเพาเวอร์/ล็อค** || ที่ด้านขวาของแท็บเล็ตค้างไว้จนกระทั่งโลโก้ LG ปรากฏขึ้น

3 ปลดปล่อยปุ่มทั้งหมดเฉพาะเมื่อโลโก้ LG ปรากฏขึ้นแล้วเท่านั้น

4 ทิ้งที่โลโก้ปรากฏ ให้กด **ปุ่มเพาเวอร์/ล็อค** || + **ปุ่มลดระดับเสียง** || ค้างไว้พร้อมกัน

- 5 ปลอ่ยปุ่มทั้งหมดเมื่อหน้าจอ รีเซ็ตข้อมูลจากโรงงาน ปรากฏขึ้น
- 6 กด ปุ่มปรับระดับเสียง $\uparrow \downarrow$ เพื่อย้ายเคอร์เซอร์ไปที่ **ใช่** จากนั้นกด ปุ่มเพาเวอร์/ล็อก \square เพื่อดำเนินการต่อ
- 7 กด ปุ่มปรับระดับเสียง $\uparrow \downarrow$ เพื่อย้ายเคอร์เซอร์ไปที่ **ใช่** อีกครั้งหนึ่ง จากนั้นกด ปุ่มเพาเวอร์/ล็อก \square เพื่อยืนยัน
- 8 อุปกรณ์ของคุณจะทำการ Hard Reset

คำเตือน


หากคุณดำเนินการ Hard Reset แอปพลิเคชันของผู้ใช้, ข้อมูลผู้ใช้ และใบอนุญาต DRM ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

5. เมื่อนำจอค้าง

หากหน้าจอของคุณค้างหรือแฮ็บเล็ตไม่ตอบสนองเมื่อคุณพยายามใช้งาน: ให้กด ปุ่มเพาเวอร์/ล็อก \square ค้างไว้ประมาณ 8 วินาทีจนกว่าโลโก้ LG จะปรากฏเพื่อรีสตาร์ทแฮ็บเล็ตของคุณ หากยังไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการ

เริ่มทำความรู้จักกับอุปกรณ์ของคุณ

ภาพรวมแท็บเล็ต

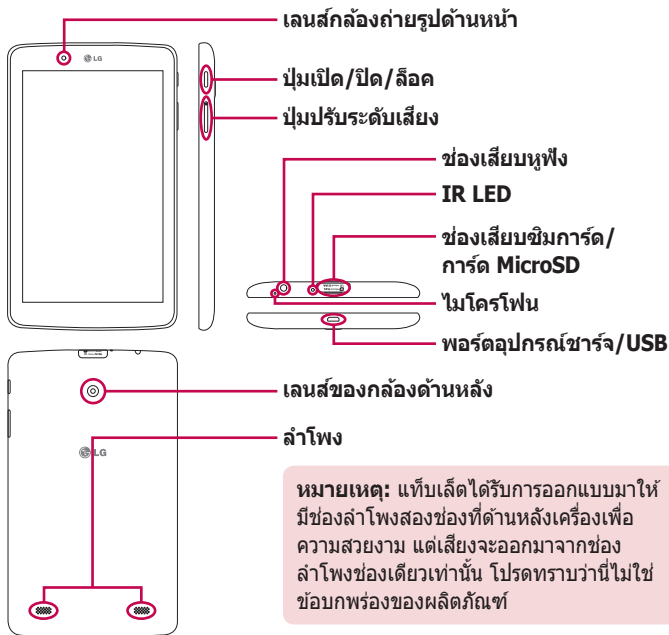



หมายเหตุ: ตรวจสอบให้แน่ใจว่าไมโครโฟนไม่ได้ถูกบังเมื่อบันทึกวิดีโอหรือคลิปเสียง

เลนส์กล้องถ่ายรูปด้านหลัง	ใช้ถ่ายภาพหรือบันทึกวิดีโอตัวคุณเอง คุณยังสามารถใช้สำหรับวิดีโอแชทด้วย รักษาความสะอาดเพื่อประสิทธิภาพสูงสุด
ปุ่มเปิด/ปิด/ล๊อค	กดเพื่อล๊อค/ปลดล๊อคหน้าจอ กดค้างไว้เพื่อ เปิด/ปิดแท็บเล็ต รีโมทคอนโทรล เปิดใช้/เลิกใช้โหมด เครื่องบิน หรือเปลี่ยนการตั้งค่าเสียง
ปุ่มปรับระดับเสียง	ให้คุณปรับระดับเสียงมีเดีย กดทั้งสองปุ่มค้างไว้ พร้อมกันเพื่อเข้าใช้งานพีเจอร์ QuickMemo+
ช่องเสียบหูฟัง	ให้คุณเสียบชุดหูฟังเสริมเพื่อความสะดวกยิ่งขึ้น โดยการสนทนาแฮนด์ฟรี คุณยังสามารถ เสียบหูฟังเพื่อฟังเพลงได้ด้วย
อินฟราเรด (IR) LED	ใช้เป็นเซนเซอร์สำหรับแอปฯ QuickRemote
ช่องเสียบซิมการ์ด/ การ์ด microSD	เพื่อให้คุณใส่ซิมการ์ดและการ์ด microSD
ไมโครโฟน	บันทึกเสียงของคุณและใช้สำหรับฟังก์ชัน เปิดใช้งานด้วยเสียง
พอร์ตอุปกรณ์ชาร์จ/USB	ให้คุณเชื่อมต่อแท็บเล็ตและสาย USB สำหรับ ใช้กับอะแดปเตอร์อุปกรณ์ชาร์จ พีซีของคุณ หรืออุปกรณ์เสริมที่ใช้ร่วมกันได้อื่นๆ
เลนส์ของกล้องด้านหลัง	ใช้รูปถ่ายหรือบันทึกวิดีโอ รักษาความสะอาด เพื่อประสิทธิภาพสูงสุด
ลำโพง	ใช้ในการฟังเสียงจากฟังก์ชันที่เลือก (เช่น เพลง, วิดีโอ, คลิปเสียง ฯลฯ)

คำเตือน

การวางวัตถุที่มีน้ำหนักมากบนแท็บเล็ตหรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้

เคล็ดลับ!

- แตะ **ไอคอน เมนู**  เมื่อคุณเปิดแอปพลิเคชันเพื่อตรวจสอบว่ามีตัวเลือกอะไรบ้าง
- หากเครื่องลือคอยู่และไม่ทำงาน กดปุ่มเปิดปิด/ลือค  ค้างเอาไว้มากกว่า 8 วินาที จนกระทั่งโลโก้ LG แสดงขึ้นมา เพื่อรีเซ็ตแท็บเล็ต


การชาร์จแท็บเล็ตของคุณ

อะแดปเตอร์ USB ที่ให้มาพร้อมกับแท็บเล็ตของคุณจะใช้สำหรับชาร์จแบตเตอรี่ก่อนการใช้แท็บเล็ตครั้งแรก ให้ตรวจสอบว่าแบตเตอรี่ชาร์จเต็มแล้ว

หมายเหตุ: อุปกรณ์ของคุณมีแบตเตอรี่ชนิดชาร์จได้อยู่ภายใน เพื่อความปลอดภัยของคุณ ห้ามถอดแบตเตอรี่ที่อยู่ในผลิตภัณฑ์

คำเตือน! หากหน้าจอสัมผัสไม่ทำงานขณะที่แท็บเล็ตกำลังชาร์จ อาจเกิดขึ้นเนื่องจากการจ่ายไฟไม่สม่ำเสมอ หากเป็นเช่นนั้น ให้ถอดสาย USB ออกจากอุปกรณ์หรือถอดปลั๊กอะแดปเตอร์ USB ออกจากเต้าเสียบ

- 1 เชื่อมต่ออะแดปเตอร์ USB และสาย USB
- 2 เสียบสาย USB (ตามที่แสดงด้านล่าง) กับพอร์ตอุปกรณ์ชาร์จ/USB ของแท็บเล็ต
- 3 เสียบอุปกรณ์ชาร์จเข้ากับเต้ารับไฟฟ้า

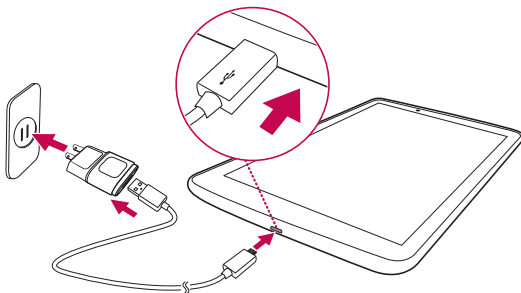

หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่



การยืดอายุแบตเตอรี่

คุณสามารถยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณยังสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้


การยืดอายุแบตเตอรี่

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ เช่น Wi-Fi, Bluetooth หรือ GPS
- ลดความสว่างหน้าจอและตั้งค่าโหมดประหยัดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail™, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- บางแอปพลิเคชันที่คุณดาวน์โหลดอาจทำให้พลังงานแบตเตอรี่ลดลง
- ขณะใช้แอปพลิเคชันที่ดาวน์โหลดมา ให้ตรวจสอบระดับประจุแบตเตอรี่

การดูระดับประจุแบตเตอรี่

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > ตั้งค่า  > เกี่ยวกับแท็บเล็ต > แบตเตอรี่
- 2 สถานะแบตเตอรี่ (กำลังชาร์จหรือคายประจุ) และระดับจะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและความคุ้มค่าการใช้แบตเตอรี่

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > ตั้งค่า  > เกี่ยวกับแท็บเล็ต > แบตเตอรี่ > อัตราการใช้แบตเตอรี่
- 2 หน้าจอจะแสดงเวลาในการใช้แบตเตอรี่และรายการแอปพลิเคชันหรือบริการที่กำลังใช้พลังงานแบตเตอรี่จากมากที่สุดไปน้อยที่สุด


การติดตั้งซิมการ์ด

- 1 ในการใส่ซิมการ์ด ให้มองหาและเปิดฝาครอบช่องใส่
- 2 สอดเล็บของคุณเข้าไปในรอยบากและค่อยๆ ดึงถาดซิมการ์ดออกมา

หมายเหตุ: จะมีสองช่องใส่ฝาครอบ (อีกช่องหนึ่งสำหรับใส่การ์ด microSD)

หมายเหตุ: ถ้าคุณเปลี่ยนซิมการ์ด หลังจากใส่การ์ดใบใหม่แล้ว คุณต้องรีเซ็ตรทแท็บเล็ตของคุณ

- 3** ใส่ซิมการ์ดลงในถาดโดยคว่ำหน้าสัมผัสสีทองลง ดันถาดกลับเข้าไปในช่องเสียบจนได้ยินเสียง "คลิก" เข้าที่แล้วปิดฝาครอบ

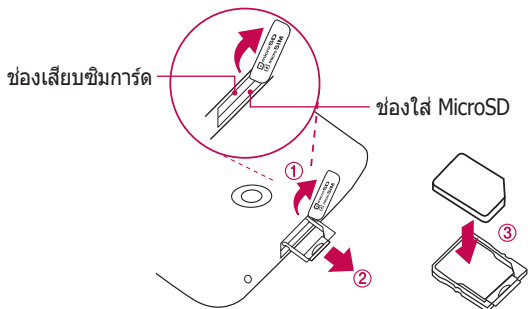


การใส่การ์ด microSD

อุปกรณ์ของคุณสนับสนุนการใช้การ์ดหน่วยความจำ microSD ความจุสูงสุด 128 GB เนื้อหามัลติมีเดียสามารถบันทึกในการ์ด microSD ได้

- 1** ใช้เล็บมีอวางลงในร่องแล้วค่อยๆ ดึงที่ปิดช่องใส่การ์ดหน่วยความจำเพื่อเปิด



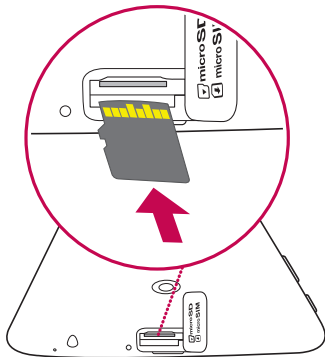

- 2** ใส่การ์ดหน่วยความจำในช่องเสียบโดยหงายหน้าสัมผัสสีทองขึ้น ค่อยๆ ดันที่ปิดช่องใส่การ์ดหน่วยความจำจากกลับเข้าที่



การถอดการ์ด microSD



ในการถอดการ์ด microSD ออกจากแท็บเล็ตอย่างปลอดภัย
คุณต้องยกเลิกการเชื่อมต่อก่อน

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > ตั้งค่า  > ที่เก็บข้อมูล > ยกเลิกการต่อเชื่อมการ์ด SD
- 2 เปิดถาดการ์ด microSD แล้วดันการ์ดลงไปเพื่อปลดการ์ด
- 3 ค่อยๆ ดึงการ์ด microSD ออกจากช่อง

คำเตือน! ห้ามถอดการ์ด microSD โดยไม่ได้ยกเลิกการเชื่อมต่อก่อน มิเช่นนั้นอาจทำให้การ์ด microSD และแท็บเล็ตของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ด microSD อาจเสียหาย


การฟอร์แมตการ์ด microSD

คำเตือน! ไฟล์ทั้งหมดที่จัดเก็บในการ์ด microSD จะถูกลบออก
เมื่อคุณฟอร์แมตการ์ด

- 1 จากหน้าจอหลัก ให้แตะ **แอปฯ**  > **ตั้งค่า**  > **ที่เก็บข้อมูล**
- 2 **แตะ ลบการ์ด SD** (สองครั้ง)
- 3 หากคุณตั้งค่าปลดล็อคแบบ ให้ป้อนและแตะ **ลบทุกสิ่ง** การ์ดจะได้รับการฟอร์แมต และพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ด microSD ของคุณ โครงสร้างไฟล์เดอ์อาจจะแตกต่างไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

การล็อคและปลดล็อคหน้าจอ


หากคุณไม่ได้ใช้แท็บเล็ตชั่วขณะหนึ่ง หน้าจอจะปิดและล็อคโดยอัตโนมัติ ซึ่งจะช่วยป้องกันการแตะโดยไม่ตั้งใจและประหยัดพลังงานแบตเตอรี่ ในขณะที่คุณไม่ได้ใช้งานแท็บเล็ตของคุณ ให้กด **ปุ่มเปิด/ปิด/ล็อค**  เพื่อล็อคแท็บเล็ตของคุณ

หากมีโปรแกรมกำลังทำงานอยู่เมื่อคุณล็อคหน้าจอของคุณ โปรแกรมเหล่านั้นอาจยังคงทำงานอยู่ในโหมดล็อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การเข้าใช้เว็บ และการสื่อสารข้อมูล)

ในการทำให้แท็บเล็ตของคุณใช้งานได้ ให้กด **ปุ่มเปิด/ปิด/ล็อค**  หน้าจอล็อคจะปรากฏขึ้น แตะและเลื่อนล็อคหน้าจอไปในทิศทางใดๆ เพื่อปลดล็อคหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

การเปิดหน้าจอโดยใช้คุณสมบัติเปิดหน้าจอ

คุณสมบัตินี้เปิดหน้าจอให้คุณแตะสองครั้งที่หน้าจอเพื่อเปิดหรือปิดหน้าจอได้ง่ายๆ

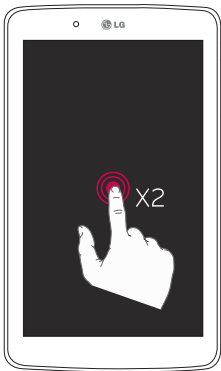

- แตะสองครั้งอย่างรวดเร็วที่กลางหน้าจอเพื่อเปิดหน้าจอ
- แตะสองครั้งอย่างรวดเร็วที่แถบสถานะ พื้นที่ว่างในหน้าจอหลัก หรือลอคหน้าจอเพื่อปิดหน้าจอ

การปลดลอคหน้าจอของคุณโดยใช้คุณสมบัติ Knock Code

คุณสมบัตินี้ Knock Code ให้คุณสร้างรหัสปลดลอคของคุณเองโดยใช้การเคาะ (หรือแตะ) ร่วมกันบนหน้าจอ

- ในขณะที่หน้าจอดับอยู่ ให้แตะตามลำดับเดียวกับที่คุณได้ตั้งค่าไว้ที่ใดก็ได้บนหน้าจอ จะเข้าถึงการใช้งานหน้าจอหลักในทันที

การเปิดใช้คุณสมบัตินี้ Knock Code

- 1 จากหน้าจอหลัก แตะ แอปฯ  > ตั้งค่า  > หน้าจอ > ล็อคหน้าจอ > เลือกแบบล็อคหน้าจอ > Knock Code
- 2 จะเป็นการเปิดหน้าจอที่จะสอนให้คุณทราบวิธีเลือกลำดับการปลดลอค คุณจำเป็นต้องสร้างแป้นคีย์ PIN เป็นมาตรการรักษาความปลอดภัยในกรณีที่คุณลืมแบบล็อคหน้าจอ

หน้าจอลหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธีนำวีเกตแท็บเล็ตของคุณ

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ

แตะหรือสัมผัส

การใช้หนึ่งนิ้วแตะเพื่อเลือกรายการ ลิงค์ ข้อคิดฯ และตัวอักษรบนแป้นพิมพ์บนหน้าจอ

แตะค้างไว้

แตะรายการบนหน้าจอค้างไว้ โดยให้แตะโดยไม่ต้องยกนิ้วขึ้นจนกว่าการดำเนินการจะเกิดขึ้น ตัวอย่างเช่น หากต้องการเปิดตัวเลือกที่มีอยู่ของรายชื่อ ให้แตะที่รายชื่อในรายการรายชื่อค้างไว้จนกว่าเมนูลัดจะเปิดขึ้น

ลาก

แตะรายการค้างไว้ชั่วคราวหนึ่ง จากนั้นเลื่อนนิ้วของคุณบนหน้าจอจนกว่าจะไปถึงตำแหน่งเป้าหมาย คุณสามารถลากรายการบนหน้าจอหลักของคุณเพื่อจัดตำแหน่งใหม่ได้

ปิดหรือเลื่อน

ในการปิดหรือเลื่อน ให้เลื่อนนิ้วของคุณผ่านพื้นผิวของหน้าจออย่างรวดเร็ว โดยไม่หยุดพักหลังจากที่แตะครั้งแรก (เพื่อไม่ให้กลายเป็นการลากแทน) ตัวอย่างเช่น คุณสามารถเลื่อนหน้าจอขึ้นหรือลงเพื่อเลื่อนดูรายการ หรือเรียกดูหน้าจอหลักต่างๆ ได้ โดยการปัดจากซ้ายไปขวา (และในทางกลับกัน)

แตะสองครั้ง

แตะสองครั้งเพื่อซูมเว็บเพจหรือภาพ เช่น แตะสองครั้งอย่างรวดเร็วที่ส่วนหนึ่งของเว็บเพจ เพื่อปรับส่วนนั้นให้พอดีกับความกว้างของหน้าจอ คุณสามารถแตะสองครั้งเพื่อซูมเข้าและออกได้เช่นกันขณะที่ดูภาพ แตะสองครั้งที่ค่าเพื่อไฮไลต์

การแตะสองครั้งยัง

เปิดใช้คุณสมบัติเปิดหน้าจอเพื่อเปิดหรือปิดหน้าจอสัมผัสด้วย

กางหุบนิ้วเพื่อซูม

ใช้นิ้วชี้และนิ้วโป้งของคุณในการหุบนิ้วหรือกางนิ้วออกเพื่อซูมเข้าหรือออกขณะใช้งานเบราว์เซอร์ แผนที่ หรือขณะเรียกดูรูปภาพ


หมุนหน้าจอ

ในหลายๆ แอปพลิเคชันและเมนู การวางแนวของหน้าจอจะเปลี่ยนแปลงไปตามการวางแนวของตัวอุปกรณ์

หน้าจอหลัก

เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดูพาเนล นอกจากนี้ คุณสามารถปรับแต่งพาเนลด้วยแอปพลิเคชัน, ดาวนโหลด, วิดเจ็ต และพื้นหลัง

จะมีปุ่มด่วนให้ใช้งานบริเวณส่วนล่างของหน้าจอหลัก ให้คุณเข้าถึงฟังก์ชันที่คุณใช้งานมากที่สุดได้อย่างง่ายดายด้วยสัมผัสเดียว

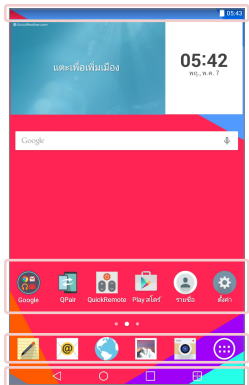

แถบสถานะ – แสดงข้อมูลสถานะของอุปกรณ์ รวมถึงเวลา ความแรงของสัญญาณ Wi-Fi สถานะแบตเตอรี่ และไอคอนการแจ้งเตือน

ไอคอนแอปพลิเคชัน – แตะไอคอน (แอปพลิเคชัน, วิดเจ็ต, โฟลเดอร์ ฯลฯ) เพื่อเปิดและใช้

ปุ่มด้าน – ทำให้เข้าใช้งานฟังก์ชันที่ใช้น้อยที่สุดได้อย่างง่ายดายด้วยสัมผัสเดียว

ปุ่มหน้าต่างๆ – แตะเพื่อเปลี่ยนเป็นโหมดหน้าต่างๆ ซึ่งให้คุณสามารถจัดการแอปฯ สองแอปได้พร้อมกันโดยแบ่งเป็นสองหน้าจอ

ปุ่มแอปฯ ล่าสุด – แตะเพื่อแสดงแอปพลิเคชันที่เพิ่งใช้งานล่าสุด คุณยังสามารถแตะค้างไว้เพื่อแสดงตัวเลือกเมนูในแอปพลิเคชันได้ด้วย

ปุ่มโฮม – กลับไปยังหน้าจอหลัก (หรือกลับจากหน้าจอหลักใดๆ ที่ขยายไว้เพิ่มเติมไปที่หน้าจอหลักเริ่มต้น) และค้างไว้เพื่อเข้าใช้งาน Google Now

ปุ่มย้อนกลับ – กลับไปยังหน้าจอก่อนหน้า รวมทั้งปิดรายการป๊อปอัพ เช่น เมนู, กล้องโต้ตอบ และแป้นพิมพ์บนหน้าจอ และค้างไว้เพื่อเข้าใช้งานหน้าต่างคู่

การปรับแต่งหน้าจอหลัก

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่มแอปพลิเคชัน, ดาวนโหลด, วิดเจ็ต หรือพื้นหลัง เพื่อให้ใช้แท็บเล็ตได้สะดวกยิ่งขึ้น ให้เพิ่มแอปพลิเคชันและวิดเจ็ตที่ใช้บ่อยในหน้าจอหลัก

การเพิ่มรายการในหน้าจอหลัก:

- 1 แตะค้างไว้บนส่วนที่ว่างของหน้าจอหลัก
- 2 แตะที่แท็บ แอปฯ หรือ Widgets
- 3 ลากรายการที่ต้องการไปยังตำแหน่งที่ต้องการแล้วปล่อยนิ้ว


การลบรายการจากหน้าจอหลัก:

แตะค้างไว้ที่ไอคอนที่คุณต้องการลบ ลากไปยัง  แล้วปล่อยนิ้ว

เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลักจากหน้าจอแอปฯ ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม แล้วลากไปยังตำแหน่งที่ต้องการ

เคล็ดลับ! คุณสามารถเพิ่มหลายไอคอนแอปพลิเคชันไว้ในหนึ่งโฟลเดอร์ได้ วางไอคอนแอปพลิเคชันหนึ่งบนอีกไอคอนหนึ่งในหน้าจอหลัก และโฟลเดอร์จะถูกสร้างขึ้น



การเปิด การสลับ หรือการหยุดแอปฯ


แตะ  เพื่อแสดงแอปฯ ที่ใช้งานล่าสุด คุณสามารถรันแอปฯ หลายแอปฯ ได้พร้อมกัน และสลับไปมาระหว่างแอปฯ เหล่านั้นได้ ยังสามารถหยุดการรันแอปฯ เหล่านั้นได้ด้วยตัวเอง





การใช้หน้าต่างคู่

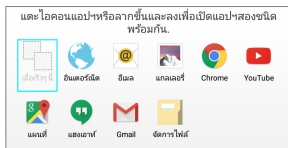คุณสมบัติหน้าต่างคู่จะแยกหน้าจอเพื่อเปิดใช้งานมัลติทาสกิ้ง การลากแล้วปล่อยระหว่างกัน การลึงก์อัตโนมัติ และแอปฯ ที่ใช้งานล่าสุด

- 1 แตะ  เพื่อแบ่งหน้าจอหรือแตะค้างไว้ที่  จนกว่ารายการแอปฯ จะแสดงขึ้นมา



- 2 แตะหรือลากไอคอนแอปฯ ไปยังที่ว่างที่คุณต้องการ
- 3 แตะ  เพื่อแสดงตัวเลือกดังต่อไปนี้ คุณยังสามารถลากแท็บเพื่อเปลี่ยนขนาดของหน้าต่างได้อีกด้วย

	สลับไปมาระหว่างสองหน้าต่าง
	เปลี่ยนรายการแอปฯ
	ดูแบบเต็มหน้าจอ
	ปิดแอปฯ


การปิดใช้งานคุณสมบัติหน้าต่างๆ



- 1 และ  > แอปฯ  > ตั้งค่า  > หน้าต่างๆ
- 2 และที่หน้าต่างๆสลับเพื่อสลับเป็น ปิด

เคล็ดลับ! คุณสามารถเรียกใช้แอปฯ อินเทอร์เน็ตสองแอปได้พร้อมกัน

การกำหนดไอคอนแอปฯ เองบนหน้าจอหลัก


คุณสามารถกำหนดไอคอนแอปพลิเคชันแต่ละไอคอนได้ด้วยรูปภาพจากแกลเลอรีของคุณ

- 1 และไอคอนแอปพลิเคชันค้างไว้จนถูกปลดล็อคจากตำแหน่งปัจจุบัน แล้ววางไว้บนหน้าจอ ไอคอนการแก้ไข  จะปรากฏขึ้นที่มุมขวาบนของแอปพลิเคชัน
- 2 และไอคอนของแอปพลิเคชันอีกครั้งและเลือกไอคอนที่มีการออกแบบที่ต้องการ แล้วแตะ **ตกลง** หรือแตะ **เพิ่มใหม่** และปรับขนาดไอคอนแล้วเลือกรูปจากคลังภาพ

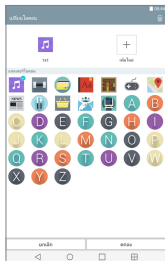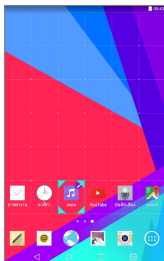

ในการดูแผงของหน้าจอหลักอื่นๆ

- ลาก (หรือสลับ) นิ้วของคุณไปทางซ้ายหรือขวาผ่านหน้าจอหลัก
- ใช้นิ้วบนหน้าจอหลักเพื่อแสดงมุมมองแผงขนาดเล็ก จากนั้นแตะแผงหน้าจอหลักที่คุณต้องการดู

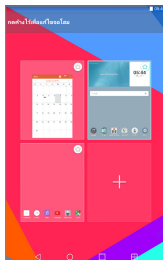

การเข้าใช้งานด่วน

ในการดูรายการการเข้าใช้งานด่วน ให้แตะที่ใดก็ได้ในพื้นที่ปุ่มด้านหน้าแล้วลากขึ้น จะมีตัวเลือกต่อไปนี้ให้ใช้งาน: Google




การแจ้งเตือน

การแจ้งเตือนจะแจ้งเตือนคุณเมื่อมีข้อความใหม่ เหตุการณ์ในปฏิทิน และนาฬิกาปลุก รวมถึงเหตุการณ์ต่อเนื่อง เช่น การดาวน์โหลด เป็นต้น

จากแผงแจ้งเตือน คุณสามารถดูสถานะปัจจุบันของแท็บเล็ต และการแจ้งเตือนที่รอดำเนินการได้ เมื่อการแจ้งเตือนมาถึง ไอคอนจะปรากฏขึ้นที่ด้านบนของหน้าจอ ไอคอนสำหรับการแจ้งเตือนที่รอดำเนินการจะปรากฏขึ้นทางด้านซ้าย และไอคอนระบบที่แสดงสิ่งต่างๆ เช่น Wi-Fi หรือระดับแบตเตอรี่อยู่ทางด้านขวา

การแจ้งเตือนที่รอดำเนินการ

การแจ้งเตือนของระบบ



การเข้าใช้งานการแจ้งเตือน

ลากแถบสถานะลงเพื่อเปิดแผงการแจ้งเตือนและเข้าใช้งานการแจ้งเตือน ในการปิดแผงแจ้งเตือน ให้ลากแถบที่อยู่ด้านล่างของหน้าจอขึ้น



แถบตั้งค่ารวดเร็ว – ลากไปทางขวาหรือซ้ายเพื่อเลื่อนผ่านรายการ และที่ไอคอนเพื่อเปิดหรือปิดการใช้งานคุณสมบัตินั้นๆ

QSLIDE แอปพลิเคชัน – แตะแอปฯ QSlide เพื่อเปิดหน้าต่างขนาดเล็กบนหน้าจอของคุณ และเพื่อลบ เพิ่ม หรือจัดเรียงแอปฯ QSlide

เลื่อนไปทางซ้ายและขวาเพื่อปรับความสว่างของหน้าจอและระดับเสียง

ปุ่ม ลบ – แตะที่นี่เพื่อสร้างรายการการแจ้งเตือนตามเหตุการณ์ของคุณ


แตะการแจ้งเตือนเพื่อเปิด

ตั้งค่ารวดเร็วบนแผงการแจ้งเตือน

ใช้ตั้งค่ารวดเร็วเพื่อสลับการตั้งค่าฟังก์ชันต่างๆ อย่างง่ายดาย เช่น Wi-Fi ตั้งค่ารวดเร็วอยู่ที่ด้านบนของแผงแจ้งเตือน

หมายเหตุ: แต่ละค้างไว้ที่ไอคอนในแถบการตั้งค่าด่วนเพื่อดูเมนูการตั้งค่าของฟังก์ชัน

การจัดเรียงตัวเลือกตั้งค่ารวดเร็วใหม่บนแผงการแจ้งเตือน

เปิดแผงการแจ้งเตือน ลากการตั้งค่ารวดเร็วไปทางซ้ายแล้วแตะ  ในการจัดเรียงรายการใหม่ ให้ลาก  ไปยังตำแหน่งที่ต้องการ เมื่อต้องการเพิ่มไอคอน ให้ใส่เครื่องหมายถูกยังฟังก์ชันที่ต้องการ

แอปฯ QSlide ในแผงการแจ้งเตือน

แอปฯ QSlide จะปรากฏในแถบของแผงการแจ้งเตือนด้านล่างแถบตั้งค่ารวดเร็ว ไอคอนเหล่านี้ให้วิธีการที่สะดวกรวดเร็วในการมัลติทาสบนหน้าจอเดียวกัน (คล้ายการชอนภาพใน TV) QSlide จะแสดงหน้าต่างแอปพลิเคชันขนาดเล็กบนหน้าจอซึ่งสามารถย้าย ปรับขนาด หรือตั้งค่าให้โปร่งใสได้






หมายเหตุ: คุณสามารถเอาแถบแอป QSlide ออกได้ด้วยการแตะไอคอน QSlide ในแถบตั้งค่ารวดเร็ว








การใช้ QSlide แอปพลิเคชัน

แตะ QSlide แอปพลิเคชันในแถบเพื่อเปิดใช้ เมื่อเปิดใช้ คุณสมบัติ QSlide จะเปิดแอปพลิเคชันในหน้าต่างในส่วนหน้าให้คุณเข้าใช้แอปพลิเคชันอื่นในแบ็คกราวด์ คุณสามารถเปิดหน้าต่าง QSlide ได้สูงสุดสองหน้าต่างพร้อมกัน

ไอคอนการแจ้งเตือนบนแถบสถานะ

ไอคอนที่แสดงในตารางด้านล่างคือบางส่วนของไอคอนที่พบบ่อย

ไอคอน	รายละเอียด
	โหมดเครื่องบิน
	เชื่อมต่อกับเครือข่าย Wi-Fi
	เชื่อมต่อชุดหูฟังแบบใช้สายแล้ว
	เปิด Bluetooth
	ค่าเตือนระบบ
	เปิดใช้โหมดสั่น
	เปิดใช้โหมดเงียบ
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่
	เปิดใช้การแบ่งปันเนื้อหา
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล
	ตั้งปลุกแล้ว

	เปิด GPS
	กำลังซิงค์ข้อมูล
	ข้อความ Gmail ใหม่
	ข้อความ Hangouts ใหม่
	กำลังเล่นเพลงอยู่
	แท็บเล็ตถูกเชื่อมต่อกับ PC ผ่านสาย USB
	เปิดใช้โหมดประหยัดพลังงาน
	กำลังใช้งาน Wi-Fi Hotspot

ผู้ใช้หลายราย

สามารถสร้างได้เพียงหนึ่ง ID เจ้าของแท็บเล็ตเท่านั้น แต่สามารถเพิ่มได้หลาย ID ผู้ใช้ เพื่อให้ผู้อื่นสามารถล็อกอินเพื่อใช้งานแท็บเล็ตได้อย่างอิสระจากกัน ผู้ใช้แต่ละคนสามารถกำหนดการตั้งค่าแท็บเล็ตของตนเองได้ ใช้พื้นที่จัดเก็บของตนเองได้ และใช้สิทธิ์การอัปเดตแอปพลิเคชันของตนเองได้

สิทธิ์ของเจ้าของแท็บเล็ต

- ผู้มีสิทธิ์ ID เจ้าของแท็บเล็ตเท่านั้นที่สามารถเพิ่มล็อกอิน ID ผู้ใช้ใหม่ และลบ ID ผู้ใช้ได้

ข้อจำกัดของการใช้งานแท็บเล็ตแบบหลายผู้ใช้

- ผู้ใช้ทุกคนจะใช้งานแบบเดอรี หน่วยความจำภายใน และการใช้งานข้อมูลทั้งหมดร่วมกัน
- การตั้งค่าภาษาที่ตั้งโดยผู้ใช้อายหนึ่งจะใช้กับผู้ใช้รายอื่นทั้งหมด
- ผู้ใช้แต่ละคนสามารถกำหนดค่าและใช้งานเฉพาะเนื้อหาและข้อมูลของตนเท่านั้น (เช่น การตั้งค่าหน้าจอล็อก)
- ผู้ใช้คนหนึ่งคนใดสามารถยอมรับการอัปเดตแอปฯ แทนผู้ใช้คนอื่นทั้งหมด
- ข้อความและตารางนัดหมายในปฏิทินจะถูกส่งเพื่อแจ้งเตือนผู้ใช้ที่มี ID ที่ระบุเท่านั้น
- เมื่อผู้ใช้เริ่มต้นพิมพ์เอกสารโดยใช้ Mobile Print งานพิมพ์จะดำเนินต่อไปแม้ว่าจะเปลี่ยน ID ผู้ใช้
- การโอนถ่ายข้อมูล, การดาวน์โหลด, การเล่นเกมฟรี, และบริการการสื่อสารจะหยุดลงถ้ามีการเปลี่ยน ID ผู้ใช้ อย่างไรก็ตาม การถ่ายโอนข้อมูลผ่าน Play Store จะยังคงดำเนินอยู่แม้ว่า ID ผู้ใช้จะเปลี่ยนไป

การเพิ่มผู้ใช้ใหม่ในแท็บเล็ตของคุณ

1 จากหน้าจอหลัก ให้แตะ แอปฯ  > ตั้งค่า  > ผู้ใช้ > เพิ่ม ผู้ใช้


2 เลือกประเภทของผู้ใช้ที่คุณต้องการเพิ่ม

- **ผู้ใช้:** ผู้ใช้จะมีแอปฯ และเนื้อหาของตนเอง
- **ผู้ใช้ที่ใช้งานแบบจำกัด:** คุณสามารถจำกัดการเข้าใช้งานแอปฯ และเนื้อหาจากแอคเคาท์ของคุณได้

3 ตั้งค่าวิซาร์ดจะเปิดขึ้นเพื่อช่วยให้คุณเพิ่มผู้ใช้ใหม่ และที่ **ตั้งค่าตอนนี้**


- หลังจากสร้างผู้ใช้ใหม่ ผู้ใช้รายนั้นจำเป็นต้องผ่านขั้นตอนการตั้งค่าในการล็อกอินครั้งแรก

ในการสลับผู้ใช้


- 1 ดึงแถบสถานะลงมาจากด้านบนของหน้าจอ
- 2 แตะไอคอนของผู้ใช้  เพื่อแสดงแผงเปลี่ยนผู้ใช้
- 3 แตะหนึ่งในไอคอนผู้ใช้นบนหน้าจอ เลือกจากชื่อเจ้าของหรือชื่อของผู้ใช้ที่คุณสร้าง

QSlide

ฟังก์ชัน QSlide ให้คุณสามารถใช้หน้าต่างซ้อนบนหน้าจอแท็บเล็ตของคุณเพื่อทำมัลติทาสได้อย่างง่ายดาย หน้าต่าง QSlide สามารถเปิดได้จากแถบ **QSLIDE** แอปพลิเคชัน ในแผงแจ้งเตือน หรือโดยตรงจากแอปพลิเคชันที่สนับสนุนฟังก์ชัน QSlide

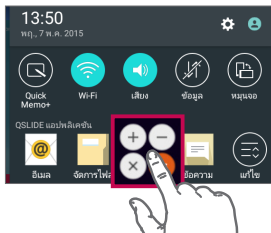

เปิดแผงแจ้งเตือน และแตะแอปพลิเคชันที่ต้องการจากส่วน **QSLIDE** แอปพลิเคชัน

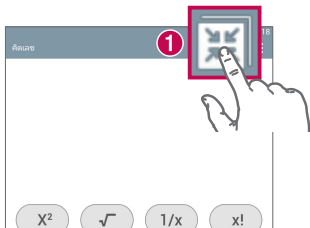


หรือ

ขณะใช้แอปพลิเคชันที่สนับสนุน QSlide ให้แตะ  ฟังก์ชันจะยังคงแสดงเป็นหน้าต่างขนาดเล็กบนหน้าจอของคุณต่อไป

การใช้ QSlide

ฟังก์ชัน QSlide จะเปิดแอปฯ ที่เกี่ยวข้องในหน้าต่างด้านหน้า เพื่อให้คุณสามารถเข้าใช้งานแอปอื่นๆ ในแบ็คกราวด์ได้ ซึ่งจะแสดงบนหน้าจอของคุณอย่างต่อเนื่องจนกว่าคุณจะปิด

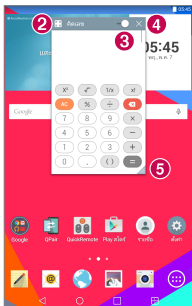

1		แตะเพื่อรัน QSlide
2		แตะเพื่อออกจาก QSlide และกลับไปหน้าจอต่างแบบเต็ม
3		แตะเพื่อปรับความโปร่งใส
4		แตะเพื่อปิด QSlide
5		แตะเพื่อปรับขนาด


หมายเหตุ: ฟังก์ชัน QSlide สามารถสนับสนุนได้สูงสุดสองหน้าต่างพร้อมกัน QSlide สนับสนุนเฉพาะแอปพลิเคชันต่อไปนี้: วิดีโอ, อินเทอร์เน็ต, ปฏิทิน, อีเมล, ตัวจัดการไฟล์, เครื่องคิดเลขและการข้อความ

การถ่ายภาพหน้าจอ

กด ปุ่มลด ระดับเสียง || และ ปุ่มเพาเวอร์/ล็อค | ค้างไว้พร้อมกันประมาณ 2 วินาทีเพื่อจับภาพบันทึกหน้าจอของหน้าจอปัจจุบัน

เมื่อต้องการดูรูปภาพที่จับภาพไว้ ให้ไปที่ แอปฯ  > แกลเลอรี  > โฟลเดอร์ Screenshots

การใช้ QuickMemo+ เพื่อจับภาพบันทึกหน้าจอ

บนหน้าจอที่คุณต้องการจับภาพ ให้ลากแถบสถานะลงแล้วเลือก QuickMemo+  หรือ

กด ปุ่มปรับระดับเสียง || ทั้งสองปุ่มค้างไว้พร้อมกัน

การใช้ Capture plus เพื่อจับภาพหน้าจอเบราว์เซอร์

คุณสมบัตินี้ให้คุณถ่ายภาพบางส่วนของหน้าจอในเบราว์เซอร์อินเทอร์เน็ตเริ่มต้น


1 เปิดแอปฯ อินเทอร์เน็ต และนำทางไปยังหน้าที่คุณต้องการจับภาพบันทึกหน้าจอ

2แตะ ไอคอน เมนู  > Capture plus

3ปรับกล่องสีน้ำเงินไปตามขนาดที่ต้องการ แล้วแตะ บันทึก พื้นที่ที่เลือกจะถูกบันทึกลงในโฟลเดอร์ Capture plus ในแกลเลอรี

วิธีป้องกันข้อมูลข้อความ

แป้นพิมพ์บนหน้าจอจะแสดงโดยอัตโนมัติบนหน้าจอเมื่อคุณจำเป็นต้องป้อนข้อความในการทำให้แป้นพิมพ์บนหน้าจอปรากฏขึ้นด้วยตนเอง เพียงแตะฟิลด์ข้อความที่คุณต้องการป้อนข้อความ

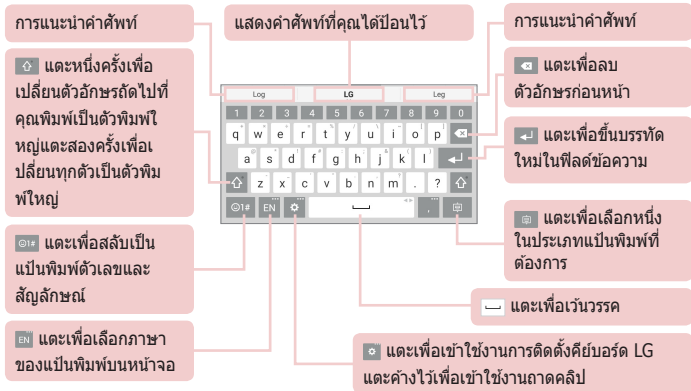

ป้อนคำศัพท์ที่แนะนำโดยใช้การควบคุมท่าทาง

ป้อนตัวอักษรบนแป้นพิมพ์และการแนะนำคำศัพท์ที่เกี่ยวข้องจะปรากฏและหรือปิดขึ้นที่

ด้านซ้ายของคีย์บอร์ดเพื่อเลือกคำแนะนำทางด้านซ้าย และหรือปิดขึ้นที่ด้านขวาของคีย์บอร์ดเพื่อเลือกคำแนะนำทางด้านขวา

แยกคีย์บอร์ดด้วยท่าทาง

คุณสมบัติการแยกแป้นพิมพ์ทำให้คุณใช้สองมือในการพิมพ์ได้แนวนอน แต่แต่ละครั้งของคีย์บอร์ดจะหดรัดกลับไปทางด้านซ้ายและขวาของหน้าจอ

ในการเปลี่ยนความสูงของคีย์บอร์ด

ปรับความสูงของคีย์บอร์ดเพื่อให้แสดงหน้าจอได้มากขึ้นและควบคุมคีย์บอร์ดได้ง่ายยิ่งขึ้น

- และ > ความสูงและเลย์เอาต์ของคีย์บอร์ด > ความสูงของคีย์บอร์ดตามแนวตั้ง > และและลากไอคอน เพื่อปรับความสูงของคีย์บอร์ด

เมื่อต้องการเปลี่ยนปุ่มแฉก

-  > ความสูงและเลย์เอาต์ของคีย์บอร์ด > รูปแบบ QWERTY > แฉกแล้วลากเพื่อเพิ่มหรือลบปุ่มหรือเปลี่ยนลำดับ

หมายเหตุ: เฉพาะคีย์บอร์ดแบบ QWERTY, QWERTZ, AZERTY เท่านั้นที่สามารถกำหนดได้ ฟังก์ชันนี้ไม่รองรับในบางภาษา

การป้อนอักขระพิเศษ



แป้นพิมพ์บนหน้าจอให้คุณป้อนอักขระพิเศษ (เช่น "á")

ตัวอย่างเช่น แฉกปุ่มที่ต้องการค้างไว้ (ตัวอย่างเช่น ปุ่ม "a") หลังจากอักขระที่ต้องการปรากฏขึ้น ให้เลื่อนนิ้วไปที่อักขระนั้นและปล่อยนิ้วเพื่อป้อน


หมายเหตุ: สัญลักษณ์ที่อยู่ทางมุมบนขวาของปุ่มบ่งชี้ว่ายังมีอักขระเพิ่มเติมให้ใช้งาน

การใช้ถาดคีย์

เข้าถึงเนื้อหาที่คุณเก็บไว้ในถาดคีย์ได้จากทุกที่และทุกเวลาที่คุณต้องการ คุณสามารถคัดลอกรูปภาพหรือข้อความและเก็บไว้ในถาดคีย์ได้จากนั้นคุณสามารถวางได้ทุกที่ทุกเวลาที่ต้องการ

- 1 แตะข้อความและภาพค้างไว้ ขณะที่คุณกำลังดูหรือแก้ไขสิ่งเหล่านั้นแล้วแตะ ถาดคีย์
- 2 แตะค้างไว้ที่ฟลัดรอกข้อความและเลือก **ถาดคีย์** คุณยังสามารถเข้าถึง **ถาดคีย์** โดยการแตะ  >  ค้างไว้



หมายเหตุ:

- คุณสามารถบันทึกได้ถึง 10 รายการในถาดคลิป
- ไปที่ถาดคลิปและแตะ  เลือกรายการที่คุณต้องการลบแล้วแตะ เสร็จ
- แอปพลิเคชันที่ดาวน์โหลดอาจไม่สนับสนุนฟังก์ชันนี้

การตั้งค่าบัญชี Google

เมื่อคุณเปิดแท็บเล็ตเป็นครั้งแรก คุณจะมีโอกาสเปิดการใช้เครือข่ายเพื่อลงชื่อเข้าใช้บัญชี Google และเลือกวิธีการใช้บริการ Google ที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google ของคุณ

- ลงชื่อเข้าใช้แอคเคาท์ Google จากหน้าจอตั้งค่าที่แสดง
หรือ
- จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > ตั้งค่า  > แอคเคาท์และการซิงค์ > เพิ่มแอคเคาท์ > Google

หากคุณมีแอคเคาท์ Google อยู่แล้ว ให้กรอกอีเมลแอดเดรสของคุณ แล้วแตะ **ถัดไป** หรือแตะ **หรือสร้างบัญชีใหม่** และป้อนข้อมูลที่จำเป็นในการสร้างแอคเคาท์ Google ใหม่

เมื่อคุณตั้งค่าบัญชี Google บนแท็บเล็ต แท็บเล็ตของคุณจะซิงโครไนซ์กับบัญชี Google บนเว็บโดยอัตโนมัติ

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับแท็บเล็ตของคุณ (ซึ่งจะขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ)

หลังจากใช้นั้น คุณจะสามารถใช้ Gmail™ และใช้ประโยชน์จากบริการต่างๆ ของ Google บนแท็บเล็ตของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์




Wi-Fi

ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP) สนุกสนานกับอินเทอร์เน็ตไร้สายโดยใช้ Wi-Fi ที่ไม่มีค่าบริการเพิ่มเติม

การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในแท็บเล็ต คุณจำเป็นต้องเข้าใช้จุดเชื่อมต่อไร้สาย หรือ 'Hotspot' จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าแท็บเล็ตเพื่อทำการเชื่อมต่อ ปิด Wi-Fi เมื่อคุณไม่ได้ใช้ เพื่อยืดอายุแบตเตอรี่

การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi

- 1 จากหน้าจอหลัก ให้แตะ **แอปฯ**  > แท็บ **แอปฯ** > **ตั้งค่า**  > **Wi-Fi**
- 2 แตะ  เพื่อเปิด Wi-Fi และเริ่มสแกนหาเครือข่าย Wi-Fi ที่ใช้ได้
- 3 แตะ **ค้นหา** เพื่อดูรายการเครือข่าย Wi-Fi ที่ทำงานอยู่และและอยู่ในพื้นที่
 - เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ
- 4 แตะที่เครือข่ายเพื่อเชื่อมต่อ
 - หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)
- 5 แถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi ของคุณ

Bluetooth




คุณสามารถใช้ Bluetooth เพื่อส่งข้อมูลได้โดยการรันแอปพลิเคชันที่เกี่ยวข้อง แต่ไม่ใช่จากเมนู Bluetooth เหมือนในโทรศัพท์มือถือหรือแท็บเล็ตรุ่นอื่นๆ ส่วนใหญ่


หมายเหตุ:

- LG ไม่มีส่วนรับผิดชอบใดๆ สำหรับการสูญหาย การสับสน หรือการนำข้อมูลที่ส่งหรือรับผ่านคุณสมบัติไร้สาย Bluetooth ไปใช้ในทางที่ผิด
- คุณต้องแน่ใจเสมอว่าได้แบ่งปันและรับข้อมูลจากอุปกรณ์ที่เชื่อถือได้และปลอดภัยในกรณีที่มีสิ่งกีดขวางระหว่างอุปกรณ์ ระยะการทำงานอาจลดลง
- อุปกรณ์บางรุ่น โดยเฉพาะรุ่นที่ยังไม่ผ่านการทดสอบหรืออนุญาตโดย Bluetooth SIG อาจไม่สามารถใช้งานร่วมกันกับอุปกรณ์ของคุณได้

การเปิด Bluetooth และการจับคู่แท็บเล็ตของคุณกับอุปกรณ์ Bluetooth

คุณต้องจับคู่อุปกรณ์ของคุณกับอุปกรณ์อื่นก่อนที่จะเชื่อมต่อกับอุปกรณ์นั้น

- 1 จากหน้าจอหลัก ให้แตะ **แอปฯ**  > แท็บ **แอปฯ** > **ตั้งค่า**  > **Bluetooth**
- 2 แตะสวิตช์ Bluetooth  เพื่อเปิดใช้งาน
- 3 แตะกล่องทำเครื่องหมายที่อยู่ถัดจากชื่อแท็บเล็ตของคุณ เพื่อให้อุปกรณ์ Bluetooth อื่นสามารถมองเห็นแท็บเล็ตของคุณได้

หมายเหตุ: ในการเลือกระยะเวลาที่จะมองเห็นอุปกรณ์ของคุณได้ ให้แตะ **ไอคอน เมนู**  > **เวลาที่สามารถมองเห็น**

- 4 รายการแสดงอุปกรณ์ที่ใช้งานได้จะปรากฏขึ้น เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยจากรายการ

หมายเหตุ: คุณอาจต้องป้อนรหัสให้ตรงกัน ยืนยันรหัส หรืออุปกรณ์อาจทำการจับคู่กันโดยอัตโนมัติ ขึ้นอยู่กับประเภทของอุปกรณ์

- 5 เมื่อจับคู่สำเร็จแล้ว แท็บเล็ตของคุณจะเชื่อมต่อกับอุปกรณ์นั้น

หมายเหตุ: แท็บเล็ตของคุณไม่สนับสนุนโปรไฟล์แฮนด์ฟรี ดังนั้นการใช้คุณสมบัติการโทรด้วยอุปกรณ์เสริมบางอย่าง เช่น ชุดหูฟัง Bluetooth หรืออุปกรณ์ที่ใช้ Bluetooth อาจใช้ไม่ได้สำหรับอุปกรณ์นี้

ส่งข้อมูลด้วยคุณสมบัติ Bluetooth

1 เปิดรายการและแตะ 

หรือ

แตะรายการค้างไว้และเลือก **แบ่งปัน**

2 แตะ **Bluetooth** เพื่อแบ่งปันผ่าน Bluetooth

หมายเหตุ: วิธีการเลือกตัวเลือกอาจแตกต่างกันตามประเภทข้อมูล

3 ค้นหาและจับคู่อุปกรณ์ที่เปิดใช้งาน Bluetooth

รับข้อมูลด้วยคุณสมบัติ Bluetooth

1 โปรดดูคู่มือการใช้อุปกรณ์ Bluetooth ในการส่งไฟล์ไปยังแท็บเล็ตของคุณ อุปกรณ์ทั้งสองต้องจับคู่กันอยู่และต้องเปิด Bluetooth

2 จับคู่อุปกรณ์และแตะ **ยอมรับ** เมื่อคุณได้รับคำขอตรวจสอบสิทธิ์บลูทูธเพื่อยอมรับไฟล์

SmartShare

คุณสามารถใช้คุณสมบัติ SmartShare ได้อย่างง่ายดายในแกลเลอรี, เพลง, แอปฯ และอื่นๆ

ผลิตเพลินกับเนื้อหาบนอุปกรณ์ที่หลากหลาย

คุณสามารถแบ่งปันเนื้อหาแท็บเล็ตของคุณได้กับหลากหลายอุปกรณ์ แตะ  หรือแตะ  > **SmartShare** เพื่อแบ่งปันเนื้อหาในแอป แกลเลอรี, เพลง, แอปฯ


POLARIS Office 5

การเล่น/การส่ง

Play: คุณสามารถเล่นเนื้อหาผ่านทีวี, ลำโพง Bluetooth หรืออื่นๆ

Beam: คุณสามารถส่งเนื้อหาไปยังอุปกรณ์ Bluetooth และ SmartShare Beam ที่รองรับ

- **SmartShare Beam** – ช่วยให้สามารถถ่ายโอนเนื้อหาอย่างรวดเร็วผ่าน Wi-Fi Direct



ผลิตเพลลิ่งกับเนื้อหาจากอุปกรณ์ข้างเคียง

คุณสามารถผลิตเพลลิ่งกับเนื้อหาจากอุปกรณ์ข้างเคียง (เช่น PC, โทรศัพท์มือถือ) ได้ที่แอปฯ แกลเลอรี, เพลง

การเชื่อมต่ออุปกรณ์

เชื่อมต่ออุปกรณ์ของคุณและอุปกรณ์อื่นๆ ที่รองรับ DLNA ในเครือข่าย Wi-Fi เดียวกัน

การค้นหาอุปกรณ์อื่นๆ

แตะ **อุปกรณ์ข้างเคียง** จากนั้นคุณ sẽเห็นอุปกรณ์ที่รองรับ DLNA เชื่อมต่อกับอุปกรณ์เพื่อค้นหา

การใช้เนื้อหาจากระบบ Cloud

คุณสามารถใช้เนื้อหาจากระบบ Cloud ได้ (เช่น Dropbox) ในแอปฯ แกลเลอรี และเพลง

การใช้ระบบ Cloud

หมายเหตุ: คุณสมบัติที่รองรับอาจมีหลากหลายขึ้นอยู่กับระบบ Cloud การดึงข้อมูลอาจใช้เวลานานทั้งนี้ขึ้นอยู่กับระบบ Cloud

- 1 เลือก **Cloud** ในแอปฯ แกลเลอรี และเพลง
- 2 เลือกระบบ Cloud ที่คุณต้องการใช้แล้วล็อกอิน
- 3 คุณสามารถใช้เนื้อหาของระบบ Cloud ดังกล่าวได้หลังจากล็อกอิน
- 4 ตั้งค่าระบบ Cloud เพื่อเลือกให้แอปฯ ใช้ Cloud

QPair

ด้วยการเชื่อมต่อแท็บเล็ตและโทรศัพท์มือถือของคุณผ่าน QPair คุณสามารถซิงค์สายเรียกเข้า ข้อความ และการแจ้งเตือนเครือข่ายสังคมระหว่างแท็บเล็ตและโทรศัพท์มือถือของคุณได้



1 รั้น QPair  แล้วแตะ **ตั้งค่าเบื้องต้น** > **เริ่ม** บนแท็บเริ่มต้นของคุณก่อนแล้วรั้นขั้นตอนเดียวกันนี้บนโทรศัพท์มือถือของคุณ

เคล็ดลับ! อาจไม่ได้ติดตั้ง QPair ไว้ล่วงหน้าในโทรศัพท์ ไปที่ Google Play Store และค้นหา Qpair และติดตั้ง

หมายเหตุ:

- QPair ทำงานกับโทรศัพท์ที่ใช้ Android 4.1 หรือใหม่กว่า คุณสมบัตินี้บางอย่างอาจถูกจำกัด ขึ้นอยู่กับรุ่นของโทรศัพท์ของคุณ
- เนื่องจาก QPair จะใช้ฟังก์ชันบลูทูธ หากคุณแก้ไขการตั้งค่าบลูทูธขณะใช้ QPair อาจทำให้ QPair ทำงานไม่ปกติ

2 การเชื่อมต่อ Bluetooth จะเปิดโดยอัตโนมัติ

คุณสมบัติ QPair

แจ้งเตือนการโทร – ส่งการแจ้งเตือนไปที่แท็บเล็ตเมื่อโทรศัพท์ได้รับสายเรียกเข้า การแจ้งเตือนจะแสดงหมายเลขผู้โทรและให้คุณรับสายหรือปฏิเสธสายเรียกเข้าได้ คุณยังสามารถเปลี่ยนการตั้งค่าการโทร เช่น เสียงเรียกเข้า ระดับเสียงเรียกเข้า เสียงเรียกเข้าพร้อมการสั่น หรือส่งข้อความปฏิเสธเมื่อมีสายเข้า

หมายเหตุ: คุณสามารถรับสายที่มีเทคโนโลยีบลูทูธรองรับเท่านั้น ไม่สามารถโทรออกจากแท็บเล็ตโดยใช้คุณสมบัติ QPair ได้

ระบบแจ้งเตือนข้อความ – ส่งการแจ้งเตือนไปที่แท็บเล็ตเมื่อโทรศัพท์ได้รับข้อความ คุณยังสามารถเปลี่ยนการตั้งค่าข้อความ เช่น ข้อความป๊อปอัป, การดูตัวอย่างข้อความ, เสียงการแจ้งเตือน และ การแจ้งเตือนพร้อมการสั่น

การแจ้ง SNS – แสดงการแจ้งเตือนเครือข่ายสังคมบนแถบสถานะของแท็บเล็ตของคุณเมื่อมีการแจ้งเตือนมาที่โทรศัพท์ของคุณ

หมายเหตุ: เมื่อต้องการเปิดใช้งานคุณสมบัตินี้ ให้เปิดตัวเลือก **การแจ้งเครือข่ายสังคม QPair** บนโทรศัพท์ของคุณ (**ตั้งค่า > การช่วยสำหรับการเข้าถึง > การแจ้งเตือนเครือข่ายสังคม QPair**) ตัวเลือกนี้ช่วยให้คุณสามารถรับการแจ้งเตือนของระบบแจ้งเตือนเครือข่ายสังคมบนแท็บเล็ตของคุณได้

QuickMemo+ โอนสาย – บันทึก QuickMemo+ ปัจจุบันของคุณในแกลเลอรีของแท็บเล็ต จากนั้นจะซิงค์แกลเลอรีของแท็บเล็ตกับแกลเลอรีบนโทรศัพท์ของคุณ **เชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์** – เชื่อมต่อแท็บเล็ตของคุณกับอินเทอร์เน็ตผ่านโทรศัพท์
มือถือของคุณ (เป็น Wi-Fi hotspot) โดยอัตโนมัติ การใช้คุณสมบัตินี้อาจมีค่าใช้จ่ายข้อมูล เพื่อประหยัดการใช้ข้อมูลในโทรศัพท์ โทรศัพท์จะเชื่อมต่อกับ Wi-Fi hotspot ที่เชื่อถือได้ในพื้นที่โดยอัตโนมัติ

การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิล USB

คุณสามารถเชื่อมต่อแท็บเล็ตเข้ากับ PC ของคุณเพื่อซาร์ข้อมูล ถ่ายโอนรายการต่างๆ จากแท็บเล็ตไปยัง PC หรือกลับกันได้

ถ่ายโอนเพลง รูปภาพ และวิดีโอด้วยการใช้ โหมดอุปกรณ์มีเดีย (MTP)

- 1 เชื่อมต่อแท็บเล็ตของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ติดตั้งไดรเวอร์แพลตฟอร์ม LG Android บนคอมพิวเตอร์ คุณจะต้องเปลี่ยนการตั้งค่าด้วยตัวเอง เพื่อเปลี่ยนการตั้งค่า ให้เลื่อนแถบสถานะลงและแตะที่ โหมดการเชื่อมต่อ USB ปัจจุบัน > **อุปกรณ์มีเดีย (MTP)**
- 3 คุณสามารถดูข้อมูลของอุปกรณ์มีเดียบนคอมพิวเตอร์และถ่ายโอนไฟล์ได้

หมายเหตุ: หากคุณต้องการเปลี่ยนการตั้งค่าการเชื่อมต่อ PC ให้เลื่อนแถบสถานะลงและเลือกตัวเลือกโหมดการเชื่อมต่อสายเคเบิล USB เท่านั้น การตั้งค่านี้จะปรากฏบนแถบสถานะเมื่อคุณเชื่อมต่อสายเคเบิล USB กับแท็บเล็ตของคุณเท่านั้น

ซิงโครไนซ์กับ Windows Media Player

ตรวจสอบว่าติดตั้ง Windows Media Player ใน PC ของคุณแล้ว

- 1 ใช้สายเคเบิล USB เชื่อมต่อแท็บเล็ตกับคอมพิวเตอร์ที่ติดตั้ง Windows Media Player
 - 2 เลือกตัวเลือก **อุปกรณ์มีเดีย (MTP)**
 - 3 เมื่อเชื่อมต่อแล้ว หน้าต่างป้อนอัปเดตจะปรากฏขึ้นบนคอมพิวเตอร์ เลือกตัวเลือก Windows Media Player เพื่อซิงโครไนซ์ไฟล์เพลง
 - 4 แกะไขหรือป้อนชื่อของอุปกรณ์ของคุณในหน้าต่างป้อนอัปเดต (ถ้าจำเป็น)
 - 5 เลือกไฟล์เพลงแล้วลากไปยังรายการซิงค์
 - 6 เริ่มต้นการซิงโครไนซ์
- ต้องตรงตามข้อกำหนดต่อไปนี้เพื่อซิงโครไนซ์กับ Windows Media Player

รายการ	ข้อกำหนด
OS	Microsoft Windows XP SP2, Vista หรือสูงกว่า
เวอร์ชัน Window Media Player	Windows Media Player 10 หรือสูงกว่า

- หากเวอร์ชัน Windows Media Player ต่ำกว่า 10 ให้ติดตั้งเวอร์ชัน 10 หรือสูงกว่า

การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิล USB สำหรับผู้ใช้ Mac OS X

คุณสามารถถ่ายโอนข้อมูลสื่อจากแท็บเล็ตไปยังเครื่อง Mac OS X หรือจากเครื่อง Mac ไปแท็บเล็ตได้ด้วยการตั้งค่าโปรแกรมถ่ายโอนไฟล์ Android

- 1** สำหรับผู้ใช้ Mac สามารถดาวน์โหลดและติดตั้งโปรแกรม Android File Transfer ได้จากเว็บไซต์ android.com (<http://www.android.com/filetransfer/>)
- 2** เชื่อมต่อแท็บเล็ตเข้ากับคอมพิวเตอร์ของคุณ แล้วดับเบิลคลิก แอปพลิเคชัน AFT (Android File Transfer program) เพื่อเริ่มใช้งาน
- 3** คุณสามารถดูเนื้อหาที่มีเดียได้โดยลากแล้ววางไฟล์มีเดียไปยังหรือจากแท็บเล็ต (หรือคอมพิวเตอร์) ได้





รายชื่อ

คุณสามารถเพิ่มรายชื่อในแท็บเล็ตและซิงโครไนซ์กับรายชื่อในแอคเคาท์ Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

- 1 บนหน้าจอหลัก ให้แตะ **รายชื่อ**  เพื่อเปิดรายการรายชื่อของคุณ
- 2 แตะกล่อง **ค้นหารายชื่อ** แล้วป้อนชื่อ คุณยังสามารถแตะตัวอักษรทางด้านซ้ายของหน้าจอเพื่อเข้าใช้ชื่อที่ขึ้นต้นด้วยตัวอักษรที่เลือกได้ด้วย

การเพิ่มรายชื่อใหม่


- 1 จากหน้าจอหลัก ให้แตะ **รายชื่อ** 
- 2 แตะ **รายชื่อใหม่**  เลือกแอคเคาท์ที่ต้องการ (หากมี)
- 3 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะ  เลือกจาก **ถ่ายภาพ** เพื่อถ่ายภาพโดยใช้กล้อง หรือ **เลือกจากแกลเลอรี** จากนั้นไปที่ภาพและเลือก
- 4 แตะ  เพื่อป้อนข้อมูลชื่อที่ระบุเฉพาะมากขึ้น
- 5 ป้อนรายละเอียดเกี่ยวกับรายชื่อของคุณ
- 6 แตะ **บันทึก**

รายชื่อที่ใช้บ่อย

คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ ไว้ในกลุ่มเพื่อนสนิท

การเพิ่มรายชื่อในเพื่อนสนิท

- 1 จากหน้าจอหลัก ให้แตะ **รายชื่อ** 
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด

3 แตะดาว  ทางด้านขวาของชื่อ ดาวจะกลายเป็นสีทอง และรายชื่อนั้นจะถูกเพิ่มในรายการโปรดของคุณ

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท

1 จากหน้าจอหลัก ให้แตะ **รายชื่อ**  เพื่อเปิดรายชื่อของคุณ

2 แตะแท็บ **รายการโปรด** เพื่อดูรายชื่อเพื่อนสนิทของคุณ

3 แตะที่รายชื่อเพื่อดูรายละเอียด

4 แตะดาวสีทองทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากรายการโปรดของคุณ

การสร้างกลุ่ม

1 จากหน้าจอหลัก ให้แตะ **รายชื่อ**  เพื่อเปิดรายชื่อของคุณ

2 แตะแท็บ **กลุ่ม** แล้วแตะ 

3 ป้อนชื่อสำหรับกลุ่มใหม่

- แตะ **เพิ่มสมาชิก** เพื่อเพิ่มรายชื่อลงในกลุ่มใหม่ของคุณ

4 แตะ **บันทึก** เพื่อบันทึกกลุ่ม

หมายเหตุ: หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ในรายชื่อ






ข้อความ

แท็บเล็ตของคุณได้รวมข้อความและมัลติมีเดียไว้ในเมนูที่ใช้งานง่ายเพียงเมนูเดียว

มุมมองการสนทนา

จะแสดงข้อความสนทนากับบุคคลต่างๆ ตามลำดับก่อนหลัง รวมถึงเรดข้อความ เพื่อให้คุณสามารถมองเห็นภาพรวมการสนทนาได้โดยง่าย



การส่งข้อความ

- 1 จากหน้าจอหลัก และ แอปฯ , ข้อความ , จากนั้น และ **เขียนข้อความ**  เพื่อสร้างข้อความใหม่
- 2 ป้อนรายชื่อหรือหมายเลขโทรศัพท์ของรายชื่อในฟิลด์ ถึง ขณะที่คุณป้อนรายชื่อข้อความที่ตรงกันจะปรากฏขึ้น คุณสามารถแตะผู้รับที่แนะนำได้ คุณยังสามารถเพิ่มได้หลายข้อความ
- 3 แตะที่ฟิลด์ข้อความเพื่อเริ่มต้นป้อนข้อความ
- 4 แตะ **ไอคอน เมนู**  เพื่อเปิดเมนูตัวเลือก เลือกลงจากตัวเลือกที่มีอยู่
- 5 แตะ  เพื่อส่งข้อความ

คำเตือน! ชัดจำกัดที่ 160 ตัวอักษรอาจต่างกันไปในแต่ละประเทศขึ้นอยู่กับว่าข้อความมีการเข้ารหัสอย่างไร และภาษาที่ใช้ในข้อความ ไฟล์ภาพ, วิดีโอ หรือเสียงที่ถูกเพิ่มไว้ในข้อความ จะถูกแปลงเป็นข้อความมัลติมีเดียโดยอัตโนมัติ และจะทำการหักเงินจากการส่งข้อความ

การใช้สไลม์

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้สไลม์

เมื่อเขียนข้อความใหม่ให้แตะ  และเลือก ประเภท บนแถบเครื่องมือที่อยู่ด้านล่างของคีย์บอร์ด คุณยังสามารถแตะ ไอคอน เมนู  > แทรกสไลม์

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของแท็บเล็ตจะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้นคุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าตามความต้องการของคุณ


- จากหน้าจอหลักให้แตะ ข้อความ  > ไอคอน เมนู  > ตั้งค่า

อีเมล

คุณสามารถใช้แอปพลิเคชันอีเมลเพื่ออ่านอีเมลจากบริการต่างๆ เช่น Yahoo!, MSN และ AOL ได้ แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange

ผู้ให้บริการหรือผู้ดูแลระบบของคุณสามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

การจัดการแอคเคาท์อีเมล

แตะที่ **อีเมล**  บนหน้าจอหลัก เมื่อเปิดแอปพลิเคชัน อีเมล เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้นเพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

หลังจากการตั้งค่าครั้งแรก จะแสดงเนื้อหาต่างๆ ในแถบเข้าของคุณ ถ้าคุณเพิ่มแอคเคาท์มากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับไปมาระหว่างแอคเคาท์เหล่านั้นได้

การเพิ่มแอคเคาท์อีเมลอื่น:

- เปิดแอปพลิเคชัน **อีเมล** และแตะ **ไอคอน เมนู**  > **ตั้งค่า** >  **เพิ่มแอคเคาท์**

การสลับระหว่างแอคเคาท์:

ถ้าคุณทำการเพิ่มมากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับระหว่างแอคเคาท์ได้อย่างง่ายดาย จากโฟลเดอร์อีเมลใดๆ ให้แตะที่แอคเคาท์ปัจจุบัน (ที่ด้านบนของหน้าจอ) จากนั้นแตะที่แอคเคาท์ที่คุณต้องการเข้าถึง

การเปลี่ยนการตั้งค่าทั่วไปของอีเมล:

เปิดแอปพลิเคชัน **อีเมล** และแตะ **ไอคอน เมนู**  > **ตั้งค่า** > **ตั้งค่าทั่วไป** เพื่อกำหนดการตั้งค่าที่ใช้ได้กับแอคเคาท์ทั้งหมดของคุณ และที่แต่ละแอคเคาท์เพื่อกำหนดการตั้งค่าสำหรับแอคเคาท์นั้น

การลบแอคเคาท์อีเมล:




- เปิดแอปพลิเคชัน **อีเมล** แล้วแตะ **ไอคอน เมนู**  > **ตั้งค่า** > **ไอคอน เมนู**  > **ลบแอคเคาท์** > **แตะแอคเคาท์ที่คุณต้องการลบ** > **ลบ** > **ใช่**

การทำงานกับโฟลเดอร์แอคเคาท์

เปิดแอปพลิเคชัน **อีเมล** และแตะ **ไอคอน เมนู**  และเลือก **โฟลเดอร์**

แต่ละแอคเคาท์ประกอบด้วยโฟลเดอร์ ภาตเข้า, ภาตออก, ส่งแล้ว และ ร่าง ทั้งนี้คุณอาจมีโฟลเดอร์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอคเคาท์ของคุณสนับสนุน

การเขียนและส่งอีเมล

- 1 ในขณะที่อยู่ในแอปพลิเคชัน **อีเมล** ให้แตะ **เขียนข้อความ** 
- 2 ป้อนแอดเดรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษร แอดเดรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น คั้นแอดเดรสแต่ละแอคเคาท์ด้วยเครื่องหมายอัฒภาค
- 3 แตะ **แนบ**  เพื่อแนบไฟล์ ถ้าต้องการ
- 4 ป้อนชื่อเรื่องและข้อความของคุณ
- 5 แตะ **ส่ง**  เพื่อส่งข้อความหากคุณไม่ได้เชื่อมต่อกับเครือข่าย ตัวอย่างเช่น หากคุณกำลังใช้งานในโหมดเครื่องบิน ข้อความที่คุณต้องการส่งจะถูกจัดเก็บในโฟลเดอร์ภาตออก จนกว่าจะเชื่อมต่อกับเครือข่ายอีกครั้ง หากมีข้อความที่กำลังรอส่งอยู่ ภาตออก จะปรากฏบนหน้าจอ แอคเคาท์

การรับอีเมล

เมื่อมีอีเมลใหม่ในภาตเข้า จะมีการแจ้งเตือนด้วยเสียง หรือด้วยการสั่น (ขึ้นอยู่กับการตั้งค่าเสียงและการสั่นของคุณ) และจะปรากฏไอคอนการแจ้งเตือนบนแถบสถานะ

ความบันเทิง

กล้องถ่ายรูป

ในการเปิดแอปพลิเคชันกล้องถ่ายรูป ให้แตะ **กล้องถ่ายรูป**  บนหน้าจอหลัก

ทำความรู้จักกับช่องมองภาพ








- 1 มุมมองแบบคลีน – แตะเพื่อแสดงหรือซ่อนเมนูต่างๆ บนช่องมองภาพ
- 2 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องด้านหลังและเลนส์กล้องด้านหน้า คุณยังสามารถสลับกล้องได้ด้วยการปิดหน้าจอ
- 3 โหมด – ทำให้คุณสามารถตั้งโหมดภาพเป็น **อัตโนมัติ** หรือ **พาโนรามา**
- 4 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 5 แกลเลอรี – แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูแกลเลอรีและดูรูปถ่ายที่บันทึกไว้ขณะอยู่ในโหมดกล้อง
- 6 โหมดวิดีโอ – แตะเพื่อเริ่มต้นการบันทึกวิดีโอ
- 7 ถ่ายภาพ – บันทึกรูปภาพ
- 8 ออก – แตะเพื่อออกจากกล้องถ่ายรูป

หมายเหตุ: โปรดตรวจสอบให้แน่ใจว่าได้ทำความสะอาดเลนส์กล้องถ่ายรูปก่อนถ่ายภาพ


การใช้การตั้งค่าขั้นสูง

ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูง

	เลือกความละเอียดภาพถ่าย หากคุณเลือกความละเอียดสูง ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่าคุณสามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง
	ถ่ายภาพโดยใช้คำสั่งเสียง
	ตั้งเวลาหลังจากกดปุ่มถ่ายภาพ ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้
	แสดงเส้นตารางบนหน้าจอเพื่อช่วยคุณในการจัดเรียงภาพถ่าย
	เปิดวิธีใช้เพื่อดูว่าฟังก์ชันนี้ทำงานอย่างไร

เคล็ดลับ! เมื่อคุณออกจากกล้องถ่ายรูป การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ตัวตั้งเวลา ตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

การถ่ายภาพ


- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป
- 2 หันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 แตะ  เพื่อถ่ายภาพ คุณยังสามารถถ่ายภาพได้ด้วยการแตะที่ใดก็ได้บนหน้าจอ ในโหมด มุมมองแบบคลีน

การซูมเข้าหรือซูมออก

เมื่อทำการถ่ายภาพหรือบันทึกวิดีโอ ให้วางนิ้วสองนิ้วที่ใดก็ได้บนหน้าจอแล้วกางออกเพื่อซูมเข้า เมื่อต้องการซูมออก ให้หุบสองนิ้วเข้าด้วยกัน





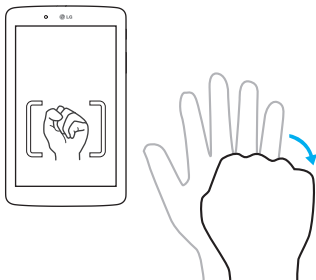

การถ่ายรูปด้วยท่าทาง

คุณสมบัติการถ่ายรูปด้วยท่าทางทำให้คุณสามารถถ่ายรูปได้ด้วยการเคลื่อนไหวมือขณะใช้กล้องหน้า เพื่อถ่ายรูป ให้ยกมือขึ้นและเปิดฝ่ามือจนกระทั่งกล้องหน้าตรวจจับได้และกล้องสีเหลี่ยมปรากฏขึ้นบนจอ จากนั้นให้กำมือแล้วเครื่องจะเริ่มจับเวลาให้คุณได้มีเวลาเตรียมพร้อม



เมื่อคุณถ่ายภาพแล้ว

- 1 แตะที่ภาพตัวอย่างด้วยปุ่มจับภาพเพื่อดูภาพถ่ายล่าสุดที่จับภาพไว้
- 2 แตะ แกลเลอรี แล้วแตะ ตกลง

	แตะเพื่อแก้ไขภาพถ่าย
	แตะเพื่อถ่ายภาพอื่นทันที
	แตะเพื่อส่งภาพถ่ายให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	แตะเพื่อลบรูป
	แตะเพื่อเข้าถึงตัวเลือกอื่นๆ
	แตะเพื่อเพิ่มรูปภาพไปยังรายการโปรดของคุณ

เคล็ดลับ! หากคุณมีแอคเคาท์เครือข่ายสังคม และตั้งค่าบนแท็บเล็ตของคุณ คุณสามารถแบ่งปันรูปถ่ายของคุณกับชุมชนเครือข่ายสังคมของคุณได้

แตะ **ไอคอน เมนู**  เพื่อเปิดตัวเลือกดังต่อไปนี้

SmartShare – แตะเพื่อแบ่งปันรูปถ่ายด้วยฟังก์ชัน SmartShare

ตั้งค่าภาพเป็น – แตะเพื่อใช้ภาพถ่ายเป็น **ภาพหน้าจอลหลัก**, **ภาพของรายชื่อที่ติดต่อ**, **ภาพลอคหน้าจอ** หรือ **วอลเปเปอร์**

ย้าย – แตะเพื่อย้ายรูปถ่ายไปอีกอัลบั้ม

คัดลอก – แตะเพื่อคัดลอกภาพถ่ายที่เลือก และบันทึกลงในอัลบั้มอื่น

คัดลอกไปยังภาคศิลป์ – แตะเพื่อคัดลอกรูปถ่ายและจัดเก็บในภาคศิลป์

สไลด์โชว์ – แสดงภาพของคุณในโพลเดอร์ปัจจุบันที่ละภาพ

หมุน ซ้าย/ขวา – แตะเพื่อหมุนภาพถ่ายไปทางด้านซ้ายหรือขวา

ตัดภาพ – ตัดภาพถ่ายของคุณ เลื่อนนิ้วของคุณบนหน้าจอลเพื่อเลือกพื้นที่ที่จะตัดภาพ

เพิ่มการระบุตำแหน่ง – เพื่อเพิ่มข้อมูลตำแหน่ง

แก้ไข – แตะเพื่อแก้ไขชื่อของภาพถ่ายที่เลือก

พิมพ์ – ให้คุณพิมพ์ภาพถ่าย

รายละเอียด – แสดงข้อมูลเพิ่มเติมเกี่ยวกับรูปภาพ

การดูรูปภาพที่บันทึกไว้



คุณสามารถเข้าดูรูปภาพที่บันทึกไว้เมื่ออยู่ภายในโหมดกล้องถ่ายรูปได้ เพียงแตะตัวอย่างรูปภาพถัดจากปุ่มถ่ายภาพแล้วแกลเลอรีของคุณจะแสดงขึ้นมา

1 เลือกแอปฯ ที่จะใช้ในการดูและ/หรือแก้ไขรูปถ่ายของคุณ แตะ **แกลเลอรี**  หรือ **รูปภาพ** 



2 แตะ **ตกลง**

- ในการดูภาพถ่ายเพิ่มเติม ให้เลื่อนไปทางซ้ายหรือขวา
- ในการซูมเข้าหรือออก ให้แตะหน้าจอลสองครั้งหรือวางนิ้วสองนิ้วและเลื่อนออกจากกัน (เลื่อนนิ้วเข้าหากันเพื่อซูมออก)

การบันทึกวิดีโอ


- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป
- 2 หันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 3 แตะไอคอนโหมดวิดีโอ  เพื่อเริ่มต้นการบันทึก
- 4 ตัวตั้งเวลาที่แสดงความยาววิดีโอจะปรากฏขึ้น
- 5 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก

เคล็ดลับ!

- แตะ  เพื่อพักการบันทึก
- แตะ  เพื่อถ่ายภาพหน้าจอขณะบันทึกวิดีโอ

การดูวิดีโอที่บันทึกไว้

เข้าถึงวิดีโอที่บันทึกไว้ได้จากโหมดกล้องถ่ายวิดีโอโดยแตะที่ภาพตัวอย่างด้วยปุมถ่ายภาพ

- 1 ในช่องมองภาพ ให้แตะภาพตัวอย่างด้วยปุมถ่ายภาพ
- 2 **แกลเลอรี** ของคุณจะปรากฏขึ้นบนหน้าจอพร้อมกับแสดงวิดีโอที่บันทึกล่าสุด บัดไปทางซ้ายเพื่อเลื่อนไปยังวิดีโออื่นของคุณ
- 3 แตะไอคอนเล่น  บนวิดีโอเพื่อเล่นวิดีโอโดยอัตโนมัติ

หมายเหตุ: คุณสามารถดูวิดีโอของคุณจากในแอปฯ แกลเลอรีและรูปถ่ายได้

หมายเหตุ: ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน

แกลเลอรี

คุณสามารถจัดเก็บไฟล์มีเดียเพียงลงในหน่วยความจำภายในเพื่อการเข้าถึงไฟล์มีเดียมีเดียทั้งหมดของคุณอย่างง่ายดาย ใช้แอปพลิเคชันนี้เพื่อดูไฟล์มีเดียมีเดีย

รูปภาพ และวิดีโอ

จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > แกลเลอรี 

คุณสามารถจัดการและแบ่งปันไฟล์ภาพและวิดีโอทั้งหมดได้ด้วยแกลเลอรี

หมายเหตุ:

- ไม่สนับสนุนรูปแบบไฟล์บางรูปแบบ โดยขึ้นอยู่กับซอฟต์แวร์ที่ติดตั้งบนอุปกรณ์
- บางไฟล์อาจแสดงผลได้ไม่ถูกต้อง ขึ้นอยู่กับลักษณะการเข้ารหัส
- หากขนาดไฟล์ใหญ่เกินกว่าหน่วยความจำที่มีอยู่ อาจเกิดข้อผิดพลาดเมื่อคุณเปิดไฟล์นั้น

การดูรูปภาพ

เริ่มใช้งานแอปฯ แกลเลอรี  จะแสดงโฟลเดอร์ที่มีใช้งานของคุณ

เมื่อแอปพลิเคชันอื่น เช่น อีเมล ทำการบันทึกรูปภาพ โฟลเดอร์ดาวน์โหลดจะถูกสร้างขึ้นเพื่อเก็บรูปภาพนั้นโดยอัตโนมัติ เช่นเดียวกัน การบันทึกภาพหน้าจอจะเป็นการสร้างโฟลเดอร์ Screenshots โดยอัตโนมัติ และโฟลเดอร์เพื่อเปิด

รูปภาพจะถูกแสดงตามลำดับวันที่สร้างขึ้น เลือกรูปภาพเพื่อดูแบบเต็มจอ เลื่อนไปทางซ้ายหรือขวาเพื่อดูภาพถัดไปหรือก่อนหน้า

การเล่นวิดีโอ

เปิดแอปฯ แกลเลอรี  แล้วเลือกอัลบั้มหนึ่ง ไอคอนเล่น  จะถูกแสดงบนไฟล์วิดีโอ และที่รูปเพื่อเลือก เลือกแอปฯ เพื่อเล่น (แตะแอปฯ รูปภาพ  หรือแอปฯ

วิดีโอ ) จากนั้นแตะ ตกลง แล้ววิดีโอจะเริ่มเล่น

หมายเหตุ:

- เมื่อใช้แอปฯ วิดีโอในการเล่นวิดีโอ คุณสามารถเลื่อนหน้าจอด้านซ้ายขึ้นหรือลงเพื่อปรับความสว่างหน้าจอ เลื่อนหน้าจอด้านขวาขึ้นหรือลงเพื่อปรับระดับเสียง
- เมื่อใช้แอปฯ วิดีโอในการเล่นวิดีโอ คุณสามารถเลื่อนหน้าจอไปทางซ้ายหรือขวาเพื่อย้อนกลับหรือเดินหน้าอย่างรวดเร็ว

การลบภาพและวิดีโอ

ใช้หนึ่งในวิธีต่อไปนี้:


- ในโฟลเดอร์ ให้แตะ  แล้วเลือกรูปถ่ายและวิดีโอที่คุณต้องการลบ แล้วแตะ **ลบ** และ **ใช่** เพื่อยืนยัน
- ขณะดูรูปถ่ายหรือวิดีโอ ให้แตะ  แล้วแตะ **ใช่** เพื่อยืนยัน

การตั้งค่าเป็นภาพพื้นหลัง

ขณะดูรูปถ่าย ให้แตะ **ไอคอน เมนู**  > **ตั้งค่าภาพเป็น** แล้วเลือก **ภาพหน้าจอหลัก**, **ภาพล็อคหน้าจอ** หรือ **วอลเปเปอร์**

สไลด์โชว์

คุณสามารถดูภาพถ่ายของคุณในแบบสไลด์ตามอัลบั้ม หรือโดยการเลือกภาพถ่ายทั้งหมดของคุณ จากหน้าจอหลัก ให้แตะ **แกลเลอรี** 


- แตะอัลบั้มที่มีรูปถ่ายที่คุณต้องการดู แล้วแตะ **ไอคอน เมนู**  > **สไลด์โชว์** > **เลือกรูปภาพที่คุณต้องการดู** > **ถัดไป** > **ตรวจสอบการตั้งค่าสไลด์โชว์** > **เริ่ม** แตะที่กึ่งกลางของหน้าจอเพื่อหยุดเล่นภาพสไลด์







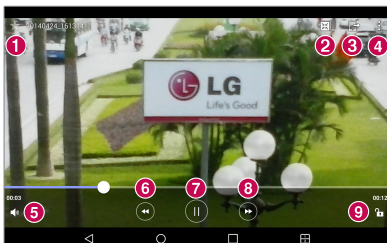


วิดีโอ


แกลเลอรีของคุณมีเครื่องเล่นวิดีโอซึ่งให้คุณสามารถเล่นวิดีโอที่คุณชื่นชอบทั้งหมดได้

การเล่นวิดีโอ

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > แกลเลอรี  > วิดีโอ
- 2 เลือกวิดีโอที่คุณต้องการเล่น





1		แตะเพื่อเพิ่มวิดีโอไปยังรายการโปรดของคุณ
2		แตะเพื่อเข้าใช้ QSlide และแสดงวิดีโอในหน้าต่างเล็ก
3		แตะเพื่อแบ่งปันวิดีโอของคุณผ่านฟังก์ชัน SmartShare
4		แตะเพื่อเข้าถึงตัวเลือกอื่นๆ
5		แตะเพื่อจัดการระดับเสียงของวิดีโอ
6		แตะค้างไว้เพื่อย้อนกลับคราวละ 3 วินาที และหนึ่งครั้งเพื่อกรอกกลับ 10 วินาที
7		แตะเพื่อหยุดการเล่นวิดีโอชั่วคราว
8		แตะค้างไว้เพื่อไปข้างหน้าคราวละ 3 วินาที และหนึ่งครั้งเพื่อไปข้างหน้าคราวละ 10 วินาที
9		แตะเพื่อล็อกหน้าจอวิดีโอ

ในการเปลี่ยนระดับเสียงในขณะที่ดูวิดีโอ ให้กดปุ่มระดับเสียงทางด้านขวาของแท็บเล็ต และ **แกลเลอรี** >  (ที่มุมซ้ายบนของแถบชื่อ) > **วิดีโอ** แล้วแตะวิดีโอในรายการค้างเอาไว้เพื่อเข้าถึงตัวเลือกต่างๆ ดังนี้: **แบ่งปัน**, **ลบ**, **Trim**, **แก้ไข** และ **รายละเอียด**

เคล็ดลับ! ขณะดูไฟล์วิดีโอ เลื่อนขึ้นและลงที่ขอบด้านซ้ายของหน้าจอเพื่อปรับความสว่างของหน้าจอ เลื่อนขึ้นและลงที่ด้านขวาของหน้าจอเพื่อปรับระดับเสียง

เพลง


แท็บเล็ตของคุณมีเครื่องเล่นเพลงซึ่งให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ในการเข้าใช้งานเครื่องเล่นเพลง จากหน้าจอหลัก ให้แตะ **แอปฯ**  > **แท็บ แอปฯ** > **เพลง** 







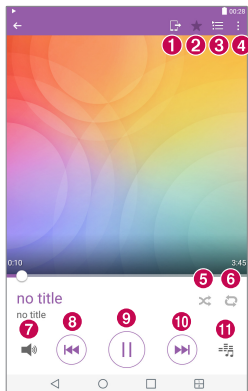

ถ่ายโอนเพลงด้วยการใช้โหมดอุปกรณ์มีเดีย (MTP)




- 1 เชื่อมต่อแท็บเล็ตกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 เลือกตัวเลือก **อุปกรณ์มีเดีย (MTP)** แท็บเล็ตของคุณจะปรากฏเป็นฮาร์ดไดรฟ์ในคอมพิวเตอร์ของคุณ คลิกไดรฟ์เพื่อดู คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโฟลเดอร์ไดรฟ์

การเล่นเพลง

- 1 จากหน้าจอหลัก ให้แตะ **แอปฯ**  > **แท็บ แอปฯ** > **เพลง** 
- 2 แตะแท็บ **เพลง**
- 3 เลือกเพลงที่คุณต้องการเล่น



1	 และเพื่อแบ่งปันเพลงของคุณผ่านฟังก์ชัน SmartShare
2	 และเพื่อตั้งค่าเพลงปัจจุบันเป็นรายการโปรด
3	 และเพื่อดูรายการเพลงที่เล่นอยู่
4	 และเพื่อเข้าถึงตัวเลือกอื่นๆ
5	 และเพื่อตั้งค่าโหมดสลับเปลี่ยน
6	 และเพื่อตั้งค่าโหมดซ้ำ
7	 และเพื่อจัดการระดับเสียงของเพลง
8	 และเพื่อย้อนไปยังช่วงเริ่มต้นของเพลงนั้น และสองครั้งเพื่อกลับไปฟังเพลงก่อนหน้า และค้างไว้เพื่อย้อนกลับไป 3 วินาที

9	 ตัดเพื่อหยุดการเล่นไว้ชั่วคราว
10	 ตัดเพื่อข้ามไปยังเพลงถัดไปในอัลบั้ม หรือในรายการเพลง และค้างไว้เพื่อไปข้างหน้าอย่างรวดเร็ว 3 วินาที
11	 ตัดเพื่อตั้งค่าเอฟเฟกต์เสียง

ในการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้กดปุ่มระดับเสียงทางด้านขวาของแท็บเล็ต

ตัดเพลงใดๆ ในรายการค้างไว้เพื่อเข้าถึงตัวเลือกต่อไปนี้:

เล่น, เพิ่มในรายการเพลง, ลบ, แบ่งปัน, รายละเอียด และ ค้นหา

หมายเหตุ:




- ไม่สนับสนุนรูปแบบไฟล์บางรูปแบบ โดยขึ้นอยู่กับซอฟต์แวร์อุปกรณ์
- หากขนาดไฟล์ใหญ่เกินกว่าหน่วยความจำที่มีอยู่ อาจเกิดข้อผิดพลาดเมื่อคุณเปิดไฟล์นั้น
- ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้รับสิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ให้ตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

เครื่องมือ

QuickMemo+








คุณสมบัต QuickMemo+ ให้คุณสร้างบันทึกและถ่ายภาพหน้าจอได้ ถ่ายภาพหน้าจอวาดบนหน้าจอ และแบ่งปันกับครอบครัวหรือเพื่อนๆ ได้ด้วย QuickMemo+




การสร้างบันทึก

- 1 จากหน้าจอหลัก ให้แตะ **QuickMemo+**  แล้วแตะ  เพื่อสร้างบันทึกใหม่
- 2 คุณสามารถแก้ไขข้อความได้ด้วยการพิมพ์คำต่างๆ โดยตรงหรือเลือกประเภทปากกาและสีที่คุณต้องการใช้และป้อนข้อความด้วยการเขียนด้วยมือ
- 3 เพิ่มการเตือนความจำด้วยการแตะ  เพื่อตั้งค่าการแจ้งการเตือนความจำสำหรับเหตุการณ์
- 4 เพิ่มข้อมูลสภาพอากาศและตำแหน่งที่ตั้งลงในบันทึกของคุณได้ถ้าเครือข่ายข้อมูลมีให้ใช้งาน




การใช้ตัวเลือก QuickMemo+


มีตัวเลือกต่อไปนี้ให้ใช้งานในแถบเครื่องมือ QuickMemo+ ที่ด้านบนของหน้าจอ

	แตะเพื่อเปิดบันทึกใน QSlide
	ให้คุณเลิกทำหรือทำซ้ำการดำเนินการก่อนหน้า
	ให้คุณแก้ไขตัวอักษร สี และการจัดตำแหน่ง
	ให้คุณป้อนตัวอักษรได้ด้วยการเขียนด้วยมือ คุณสามารถเลือกประเภทปากกาที่จะใช้และความหนา ความโปร่งใส และสีของปากกาได้
	ลบการแก้ไขที่คุณทำไว้กับบันทึก
	บันทึกบันทึกดังกล่าวลงใน QuickMemo+
	แตะเพื่อเข้าถึงตัวเลือกอื่นๆ

	ให้คุณตั้งค่าการแจ้งเตือนความจำสำหรับเหตุการณ์ได้
	ให้คุณแทรกข้อมูลสภาพอากาศลงในบันทึกได้
	ให้คุณเพิ่มข้อมูลพิกัดที่ตั้งโดยใช้ GPS ได้

การถ่ายภาพการบันทึกหน้าจอสําหรับ QuickMemo+ ของคุณ

- 1 เมื่อต้องการเข้าใช้คุณสมบัติ QuickMemo+ ให้เลื่อนแถบสถานะลง แล้วแตะ  หรือ กด ปุ่มปรับระดับเสียง ทั้งสองปุ่มพร้อมกันประมาณ 1 วินาที
- 2 เลือกตัวเลือกเมนูที่ต้องการจากแถบเครื่องมือแล้วสร้างบันทึก
- 3 แตะ  เพื่อจัดเก็บบันทึก เมื่อใดที่ต้องการออกจาก QuickMemo+ ให้แตะ ปุ่ม ย้อนกลับ 

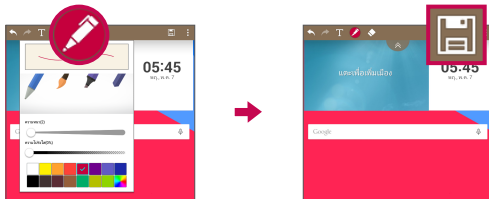






หมายเหตุ: โปรดใช้ปลายนิ้วขณะใช้ QuickMemo+ อย่าใช้เล็บ

QuickRemote

QuickRemote เปลี่ยนแท็บเล็ตของคุณเป็นยูนิเวอร์แซลรีโมทสำหรับ TV, Blu-ray หรือ DVD ภายในบ้านของคุณ


หมายเหตุ: QuickRemote อาจใช้ไม่ได้สำหรับอุปกรณ์บางรุ่นหรือบางพื้นที่

เมื่อต้องการเปิดหรือกำหนดค่า QuickRemote

- 1 จากหน้าจอหลัก และ แอปฯ  > แท็บ แอปฯ > **QuickRemote** 
คุณยังสามารถทำการตั้งค่า QuickRemote แบบเริ่มต้นได้จากพาเนลการแจ้งเตือน ลากแถบสถานะลง และไอคอน **QuickRemote**  แล้วแตะ **เพิ่มรีโมท**
- 2 และ  **พ้องเสียง** เพื่อเลือกประเภทห้อง และแตะ  เพื่อเพิ่มอุปกรณ์
- 3 เลือกประเภทและแบรนด์ของอุปกรณ์ จากนั้นทำตามคำแนะนำบนหน้าจอเพื่อกำหนดค่าอุปกรณ์

หมายเหตุ: QuickRemote จะทำงานด้วยวิธีเดียวกับรีโมทคอนโทรลอินฟราเรด (IR) ทั่วไปในภูมิภาคหรือประเทศของคุณ ระยะเวลาว่างไม่ให้งับเซ็นเซอร์อินฟราเรดที่ด้านบนของแท็บเล็ตเมื่อคุณใช้ฟังก์ชัน QuickRemote ฟังก์ชันนี้อาจไม่ได้รับการสนับสนุน ทั้งนี้ขึ้นอยู่กับรุ่น ผู้ผลิต หรือบริษัทที่ให้บริการ

การใช้ QuickRemote

- 1 เปิด **QuickRemote**  แล้วเลือกห้องที่คุณกำหนดค่ารีโมท
- 2 เลือกรีโมทที่คุณต้องการโดยแตะที่ชนิด/ชื่อของรีโมทบนแถบ QuickRemote ที่ด้านซ้ายของหน้าจอ

3 แตะปุ่มบนรีโมทที่แสดง

หมายเหตุ: เมื่อเพิ่มรีโมทคอนโทรลของ TV, QuickRemote สามารถใช้ปุ่มอินพุตเพื่อกำหนดค่ารีโมทคอนโทรลที่เหมาะสมได้ เมื่อกำหนดค่าปุ่มอินพุตแหล่งสัญญาณอินพุต TV สามารถเปลี่ยนได้ เมื่อต้องการรีเซ็ตแหล่งสัญญาณอินพุต TV ให้แตะปุ่มอินพุตบน QuickRemote หลายครั้ง (ขึ้นอยู่กับจำนวนของอุปกรณ์ที่เชื่อมต่อกับ TV)




ตัวเลือก QuickRemote


เมื่อต้องการเข้าถึงเมนูตัวเลือก QuickRemote ให้แตะ **ไอคอน เมนู**  เพื่อเลือกตัวเลือกที่ต้องการ

หมายเหตุ: ขณะเล่นเพลงในแบ็คกราวด์ การกดปุ่ม QuickRemote จะปิดเสียงเป็นเวลาหนึ่งวินาที

นาฬิกา



การตั้งเวลาการปลุก

- 1 จากหน้าจอหลัก แตะ **แอปฯ**  > **แท็บ แอปฯ** > **นาฬิกา**  > 
- 2 ตั้งเวลาปลุกที่ต้องการ
- 3 ตั้งค่า **ซ้ำ**, **ระยะเวลาเลื่อน**, **สั่นเมื่อมีเสียงเตือน**, **เสียงปลุก**, **ระดับเสียงปลุก**, **เริ่มใช้แอปฯ** **อัตโนมัติ**, **ลือคปริศนา** และ **บันทึก**
- 4 แตะ **บันทึก**



หมายเหตุ: ในการเปลี่ยนการตั้งค่าการปลุกในหน้าจอรายการปลุก ให้แตะ **ไอคอน เมนู**  แล้วเลือก **ตั้งค่า**

คิดเลข

การใช้เครื่องคิดเลข

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > คิดเลข 
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะฟังก์ชันที่คุณต้องการ (+, -, × หรือ ÷) แล้วตามด้วย =




หมายเหตุ:

- สำหรับการคำนวณที่ซับซ้อนยิ่งขึ้น ให้แตะ ไอคอน เมนู  เลือก เครื่องคิดเลขวิทยาศาสตร์ แล้วเลือกฟังก์ชันที่ต้องการ
- ในการดูประวัติการคำนวณ ให้แตะ ไอคอน เมนู  > ประวัติการคำนวณ

ปฏิทิน

เหตุการณ์ต่างๆ จากแต่ละแอคเคาท์ที่คุณเพิ่มลงในแท็บเล็ทของคุณและกำหนดค่าให้ซึ่งใครในซัพปฏิทินแล้วจะแสดงอยู่ในปฏิทินของคุณ


การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > ปฏิทิน 
- 2 แตะเมนูที่มุมซ้ายบนเพื่อเปลี่ยนมุมมองปฏิทิน (วัน, สัปดาห์, เดือน, ปี, นัดหมาย)
- 3 แตะวันที่ที่คุณต้องการเพิ่มเหตุการณ์ลงไปแล้วแตะ 
- 4 แตะฟิลด์ ชื่อเหตุการณ์ แล้วป้อนชื่อเหตุการณ์
- 5 แตะฟิลด์ ที่ตั้ง เพื่อป้อนตำแหน่ง ตรวจสอบวันที่และป้อนเวลาที่คุณต้องการให้เหตุการณ์เริ่มและเสร็จสิ้น

- 6 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะฟิลด์ **คำอธิบาย** แล้วป้อนรายละเอียด
- 7 หากคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **ซ้ำ** และตั้งค่า **เตือนความจำ** หากจำเป็น
- 8 แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน




หมายเหตุ: แตะที่ใดที่หนึ่งในปฏิทินค้างไว้เพื่อบันทึกเหตุการณ์ในวันที่ดังกล่าวในปฏิทินอย่างรวดเร็ว เพียงใส่ชื่อและเวลาของเหตุการณ์ จากนั้นแตะ **บันทึก** คุณสามารถแตะ **ข้อมูล** แล้วใส่ข้อมูลเพิ่มเติม หรืออัปเดตเหตุการณ์ด้วยรายละเอียดเพิ่มเติมในภายหลังได้

เมื่อต้องการเปลี่ยนมุมมองของปฏิทินของคุณ

ไม่ว่าคุณจะอยู่ที่ใดในแอปฯ ปฏิทิน คุณก็สามารถสลับมุมมองของปฏิทินได้อย่างง่ายดาย เพียงแตะ  ที่มุมบนซ้ายของแถบชื่อเรื่อง หรือที่ด้านซ้ายของหน้าจอให้ลากนิ้วมือของคุณจากซ้ายไปขวาเพื่อแสดงเมนูของมุมมองปฏิทิน **แตะ** วัน, สัปดาห์, เดือน, ปี หรือ **นัดหมาย**

การทำงาน

สามารถซิงโครไนซ์แอปฯ งาน กับแอคเคาท์ MS Exchange ของคุณได้ คุณสามารถสร้างและจัดการงานของคุณได้ด้วยแท็บเล็ตของคุณ หรือจาก MS Outlook หรือ MS Office Outlook Web Access

- 1 จากหน้าจอหลัก ให้แตะ **แอปฯ**  > **การทำงาน** 
- 2 แตะไอคอน **เพิ่ม** งาน  (ในมุมบนขวาของหน้าจอ)
- 3 ป้อนข้อมูล **ชื่อเรื่อง**, **วันที่เริ่มต้น**, **วันครบกำหนด**, **คำอธิบาย**, **ซ้ำ** และ **การเตือน** เท่าที่จำเป็น
- 4 แตะ **บันทึก**

จัดการไฟล์








แอปพลิเคชัน ตัวจัดการไฟล์ ให้คุณจัดการไฟล์ในที่เก็บข้อมูลภายใน/ภายนอกของคุณ ตัวจัดการไฟล์ทำให้การดูและการจัดการไฟล์ของคุณเป็นเรื่องง่าย เพียงแตะประเภทของไฟล์ (ไฟล์ทั้งหมด ไฟล์เพลง ไฟล์ภาพ ไฟล์วิดีโอ ไฟล์เอกสาร หรือไฟล์จาก Cloud) จากนั้นแตะโฟลเดอร์ที่จำเป็นเพื่อค้นหาไฟล์ของคุณ

การเปิดแอปพลิเคชันตัวจัดการไฟล์

- จากหน้าจอหลัก แตะ **แอปฯ**  > **แท็บ แอปฯ** > **จัดการไฟล์** 

ตัวเลือกตัวจัดการไฟล์

เปิดแอปฯ **จัดการไฟล์** > **ทุกไฟล์** > ที่เก็บข้อมูลภายใน เพื่อเข้าใช้งานตัวเลือกดังต่อไปนี้ (ที่ด้านบนของหน้าจอ)


	ให้คุณเปิดตัวจัดการไฟล์ในหน้าต่าง QSlide
	ให้คุณค้นหาไฟล์หรือข้อมูลของคุณ
	ให้คุณสร้างโฟลเดอร์ใหม่
	ให้คุณย้ายไฟล์และโฟลเดอร์ไปยังตำแหน่งที่ตั้งอื่น
	ให้คุณคัดลอกไฟล์และโฟลเดอร์ไปยังตำแหน่งที่ตั้งอื่น
	ให้คุณลบไฟล์และโฟลเดอร์
	ให้คุณเข้าใช้งานตัวเลือกเพิ่มเติมอื่นๆ

บันทึกเสียง

ใช้บันทึกเสียงเพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

การบันทึกเสียงหรือเสียงพูด

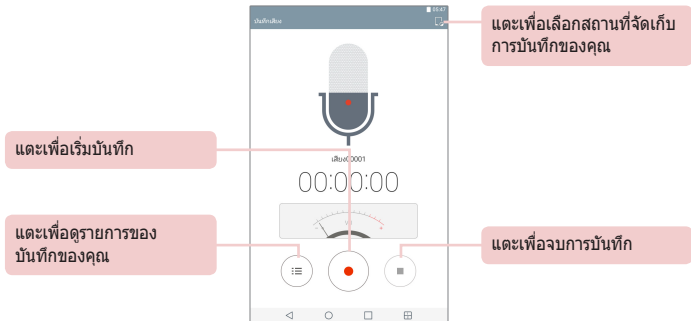

- จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > บันทึกเสียง 



หมายเหตุ: เวลาการบันทึกที่มีอยู่อาจแตกต่างจากเวลาการบันทึกจริง

การจัดการบันทึกเสียงของคุณ



จากหน้าจอรายการตัวบันทึกเสียง:

- แตะที่ไอคอน **แบ่งปัน**  เพื่อแบ่งปันการบันทึกเสียงด้วยตัวเลือกที่มีอยู่
- แตะที่ไอคอน **ลบ**  เพื่อเลือกการบันทึกเสียงที่คุณต้องการลบ
- แตะการบันทึกเสียงค้างไว้เพื่อเปิดบริบทการบันทึกเพื่อเลือก **แบ่งปัน**, **ลบ**, **แก้ไข**, **Trim** หรือ **รายละเอียด**



POLARIS Office 5

POLARIS Office 5 คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ให้ผู้ใช้ออกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่หรือทุกเวลาด้วยอุปกรณ์มือถือของคุณ

การสร้างเอกสารใหม่


- 1 จากหน้าจอหลัก ให้แตะ **แอปฯ**  > แท็บ **แอปฯ** > **POLARIS Office 5** 
- 2 ลงทะเบียนอีเมลแอดเดรสของคุณในหน้าการลงทะเบียน

หมายเหตุ: คุณสามารถแตะ **ข้าม** เพื่อละเว้นข้อมูลการลงทะเบียนได้




- 3 แตะ  เพื่อเริ่มเอกสารใหม่
- 4 แตะประเภทเอกสารจากรายการดรอปดาวน์ แล้วเลือกรูปแบบอัตโนมัติ
- 5 ป้อนเนื้อหาในเอกสารโดยใช้เครื่องมือที่ด้านบนของหน้าจอ และแป้นพิมพ์บนหน้าจอ
- 6 เมื่อเสร็จสิ้นการทำงานบนเอกสารแล้ว ให้แตะ  (ที่มุมบนซ้ายของหน้าจอ) จากนั้นแตะ **บันทึก** (หรือ **บันทึกเป็น** เพื่อป้อนชื่อเอกสารใหม่) เพื่อบันทึก
- 7 ป้อนข้อมูลชื่อเอกสารแล้วแตะ **บันทึก**

การดูและแก้ไขเอกสารในอุปกรณ์ของคุณ

คุณสามารถดูและแก้ไขไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือ

- 1 เปิด **POLARIS Office 5** แล้วค้นหาเอกสาร
- 2 แตะเอกสารที่คุณต้องการดูหรือแก้ไข เมื่อดูเอกสารด้วย POLARIS Office 5 วัตถุและแบบจะคงรูปแบบตามเอกสารต้นฉบับ
- 3 ในการแก้ไขเอกสาร ให้แตะ 

Google+




ใช้แอปฯ Google+ เพื่อเชื่อมต่อกับบุคคลผ่านบริการเครือข่ายสังคมของ Google จากหน้าจอหลักให้แตะ แอปฯ  > แท็บ แอปฯ > Google  > Google+ 

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้ให้บริการเครือข่าย


LG SmartWorld

LG SmartWorld นำเสนอเนื้อหาต่างๆ ที่น่าตื่นตาตื่นใจ ซึ่งมีทั้งแบบอักษร อิม เกม แอปพลิเคชัน

วิธีการเข้าสู่ LG SmartWorld จากแท็บเล็ตของคุณ

- 1 แตะ  > แอปฯ  > แท็บ แอปฯ > และไอคอน  เพื่อเข้าถึง LG SmartWorld
 - 2 แตะ **ลงชื่อเข้าใช้** และป้อนข้อมูล ID/PW สำหรับ LG SmartWorld หากคุณยังไม่ได้สมัครสมาชิก ให้แตะ **รีจิสเตอร์** เพื่อรับสถานะสมาชิก LG SmartWorld
 - 3 ดาวนโหลดเนื้อหาที่คุณต้องการ
- LG SmartWorld อาจไม่มีให้บริการในบางประเทศหรือจากผู้ให้บริการบางราย

หมายเหตุ: หากไม่มีไอคอน 

- 1 ให้ใช้เว็บเบราว์เซอร์มือถือ ใช้ LG SmartWorld (www.lgworld.com) และเลือกประเทศ/ภาษาของคุณ
- 2 ดาวน์โหลดแอปพลิเคชัน LG SmartWorld
- 3 รันและติดตั้งไฟล์ที่ดาวน์โหลด
- 4 ใช้ LG SmartWorld โดยการแตะไอคอน 









ประโยชน์พิเศษเฉพาะใน LG SmartWorld

- 1 ตกแต่งแท็บเล็ตตามสไตล์ของคุณด้วยการใช้ธีมหลัก, ธีมแป้นพิมพ์ และแบบอักษรที่มีให้ใน LG SmartWorld (อย่างไรก็ตาม จะสามารถใช้บริการนี้ได้กับอุปกรณ์บางรุ่นเท่านั้น โปรดตรวจสอบที่เว็บไซต์ LG SmartWorld เรื่องความพร้อมใช้งาน)
- 2 เพลิดเพลินกับบริการพิเศษของ LG SmartWorld โดยการเข้าร่วมการส่งเสริมการขายที่มีให้อย่างต่อเนื่อง


อินเทอร์เน็ต

ใช้แอปพลิเคชันนี้เพื่อเรียกดูอินเทอร์เน็ต เบราวเซอร์จะนำคุณเข้าสู่โลกที่เต็มไปด้วย
สีสันของเกมส์ เพลง ข่าวสาร กีฬา ความบันเทิงและอื่นๆ อีกมากมายอย่างรวดเร็วที่
แท็บเล็ตของคุณโดยตรง ไม่ว่าคุณจะอยู่ที่ใดหรือสนุกกับสิ่งใด

จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > อินเทอร์เน็ต 

	แตะเพื่อรัน QSlide
	แตะเพื่อย้อนกลับหนึ่งเพลง
	แตะเพื่อไปข้างหน้าหนึ่งเพลง ไปยังเพลงที่ทำการเชื่อมต่อหลังจากเพลง ปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณแตะ ปุ่ม ย้อนกลับ  ซึ่งจะนำคุณไปยังเพลงก่อนหน้า
	แตะเพื่อรีเฟรชหรือหยุดเพลงปัจจุบัน
	แตะเพื่อไปยังโฮมเพจ
	แตะเพื่อเข้าใช้งานบุ๊กมาร์ค
	แตะเพื่อเข้าถึงตัวเลือกอื่นๆ



การเปิดเพจ

- ในการเปิดหน้าใหม่ ให้แตะ  ที่ด้านบนของเบราว์เซอร์
- ในการไปที่เว็บเพจอื่น ให้แตะแท็บที่ด้านบนของหน้าจอเพื่อดูหน้าดังกล่าว


บุ๊กมาร์ค

เมื่อต้องการเปิดเว็บเพจที่บุ๊กมาร์ค ให้แตะ  บนแถบเครื่องมือบราวเซอร์ แล้วเลือก

ประวัติ

แตะ  บนแถบเครื่องมือบราวเซอร์ และเลือกแท็บ **ประวัติ** เพื่อเปิดเว็บเพจจากรายการของเว็บเพจที่เยี่ยมชมล่าสุด เมื่อต้องการลบประวัติ ให้แตะ  เพื่อลบประวัติทั้งหมด

การใช้โหมดการอ่าน

แท็บเล็ตของคุณสามารถแสดงผลเว็บเพจอย่างง่ายให้อ่านได้ง่าย ดูข่าวหรือโพสต์บล็อกและเพจบทความอื่นๆ ได้อย่างง่ายดายปราศจากการรบกวนด้วยโหมดการอ่าน ที่ให้คุณอ่านเพจในแบบที่ไมรกรุงรัง และ  บนเว็บแอดเดรสบาร์ URL เพื่อเปิดใช้งานโหมดการอ่าน



การใช้ QSlide

ใช้คุณสมบัตินี้เพื่อเข้าใช้อินเตอร์เน็ตโดยไม่ต้องปิดแอปพลิเคชันปัจจุบัน ขณะดูเนื้อหาในบราวเซอร์ ให้แตะ  คุณจะสามารถเรียกดูข้อมูลอื่นในแท็บเล็ตของคุณได้ ในการดูบราวเซอร์แบบเต็มหน้าจอ ให้แตะ 

การดาวน์โหลดไฟล์


ใช้แอปฯ ดาวน์โหลด เพื่อดูว่าได้ดาวน์โหลดไฟล์อะไรไว้บ้าง จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > ดาวน์โหลด 

Chrome


ใช้ Chrome ในการค้นหาข้อมูลและเรียกดูเว็บเพจ จากหน้าจอหลัก ให้แตะ แอปฯ  > แท็บ แอปฯ > Chrome 

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้บริการเครือข่ายของคุณ

การดูเว็บเพจ

แตะที่ฟิลด์ที่อยู่ (ที่ด้านบนของหน้าจอ) ใส่เว็บแอดเดรสหรือคำค้นหา แล้วแตะ  บนคีย์บอร์ด

การเปิดเพจ

- ในการไปที่หน้าใหม่ ให้แตะ  ที่ด้านบนของบราวเซอร์
- ในการไปที่เว็บเพจอื่น ให้แตะแท็บที่ด้านบนของหน้าจอเพื่อเลือกหน้าดังกล่าว


การค้นหาเว็บด้วยเสียง

แตะฟิลด์แอดเดรส แตะ  พูดคำหลัก และเลือกหนึ่งในคำหลักที่แนะนำที่ปรากฏขึ้น

หมายเหตุ: คุณสมบัตินี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคหรือผู้บริการเครือข่าย

การซิงค์กับอุปกรณ์อื่น

ซิงค์แท็บที่เปิดและบุ๊กมาร์คเพื่อใช้กับ Chrome ในอุปกรณ์อื่นเมื่อคุณล็อกอินด้วยบัญชี Google เดียวกัน

ในการดูแท็บที่เปิดบนอุปกรณ์อื่น ให้แตะ **ไอคอน เมนู**  > **แท็บล่าสุด** คุณต้องลงชื่อเข้าใช้แอดเดสส์ Google เดียวกันบนอุปกรณ์ทั้งหมด เลือกเว็บเพจที่จะเปิด

การเพิ่มและการดูบุ๊กมาร์ค

ในการเพิ่มบุ๊กมาร์ค ให้แตะ  ในแถบ URL

ในการเปิดเว็บเพจที่บุ๊กมาร์คเอาไว้ ให้แตะไอคอน **ไอคอน เมนู**  > **บุ๊กมาร์ก** แล้วเลือกเพจที่ต้องการ

เมนู Chrome Options

แตะ ไอคอน เมนู  เพื่อเข้าถึงตัวเลือกดังต่อไปนี้

- **แท็บใหม่** – แตะเพื่อเปิดแท็บเว็บเพจใหม่
- **แท็บใหม่ที่ไม่ระบุตัวตน** – แตะเพื่อเปิดแท็บใหม่ที่ไม่ระบุตัวตน
- **บุ๊กมาร์ก** – แสดงเว็บเพจที่ถูกบุ๊กมาร์ก
- **แท็บล่าสุด** – แสดงเว็บเพจที่เปิดอยู่บนอุปกรณ์อื่นๆ
- **ประวัติการเข้าชม** – แสดงการเรียกดูข้อมูลของคุณ (เว็บเพจที่คุณเคยเยี่ยมชม)
- **แชร์...** – ให้คุณแบ่งปันเว็บเพจได้
- **พิมพ์...** – แตะเพื่อพิมพ์เว็บเพจ เลือกเพื่อค้นหาเครื่องพิมพ์บนเครือข่ายของคุณ โดยอัตโนมัติ หรือใส่เครื่องที่คุณจะใช้ด้วยตัวเอง
- **ค้นหาในหน้า** – ให้คุณสามารถค้นหาข้อความในเว็บเพจปัจจุบันได้
- **เพิ่มไปยังหน้าจอหลัก** – ให้คุณเพิ่มข้อดัดที่จะไปยังหน้าเว็บปัจจุบันได้บนหน้าจอหลัก
- **ขอไซต์รุ่นสำหรับเดสก์...** – ทำเครื่องหมายเพื่อเข้าถึงไซต์แบบเดสก์ท็อปเมื่อคุณเข้าชมเว็บเพจบนแท็บเล็ตของคุณ
- **การตั้งค่า** – ให้คุณสามารถเปลี่ยนการตั้งค่าที่จำเพาะกับแอปฯ Chrome
- **ความช่วยเหลือและความคิด...** – แสดงข้อมูลเกี่ยวกับการใช้แอปฯ Chrome บนแท็บเล็ตของคุณและอนุญาตให้คุณทำการตอบรับไปยังนักพัฒนาของ Chrome ได้

ตั้งค่า

เข้าถึงเมนูตั้งค่า

1 จากหน้าจอหลัก ให้แตะ แอปฯ  > แอปฯ > ตั้งค่า 

หรือ

จากหน้าจอหลัก แตะค้างไว้ที่ ปุ่มแอปพลิเคชันเมื่อเร็วๆ นี้  > การตั้งค่าระบบ

2 เลือกประเภทของการตั้งค่า แล้วตั้งค่าตัวเลือกที่ต้องการ

เครือข่ายไร้สาย

Wi-Fi

Wi-Fi – เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่
รายการเครือข่าย Wi-Fi ที่มีอยู่จะปรากฏขึ้น แตะที่รายการหนึ่งเพื่อเชื่อมต่อ

หมายเหตุ: แตะ ค้นหา เพื่อสแกนหาเครือข่าย Wi-Fi ที่มีอยู่

แตะ ไอคอน เมนู  ในเมนู Wi-Fi เพื่อเข้าถึงตัวเลือกต่อไปนี้

เพิ่ม Wi-Fi – ให้คุณเนียนเครือข่าย Wi-Fi ใหม่ได้ด้วยตัวเอง

Wi-Fi ที่บันทึกเอาไว้ – ทำให้คุณสามารถลบเครือข่าย Wi-Fi ที่บันทึกออกไปได้




Wi-Fi ขั้นสูง – เข้าถึงการตั้งค่า Wi-Fi ขั้นสูง

การสอนแบบอินเตอร์แอคทีฟ – แสดงแบบฝึกหัดที่เป็นประโยชน์บางแบบสำหรับฟังก์ชันของ Wi-Fi

เคล็ดลับ! การดู MAC แอดเดรส

ในการเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยฟิลเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของแท็บเล็ตลงในเราเตอร์

คุณสามารถค้นหา MAC แอดเดรสได้ในยูสเซอร์อินเตอร์เฟซต่อไปนี้:

จากหน้าจอหลัก ให้แตะ **แอปฯ**  > **ตั้งค่า**  > **Wi-Fi** > **ไอคอน เมนู** 
> **Wi-Fi** ชั้นสูง > **MAC แอดเดรส**

Bluetooth

เปิดหรือปิดคุณสมบัติ Bluetooth เพื่อใช้ Bluetooth การเปิด Bluetooth ทำให้คุณจับคู่

และเชื่อมต่อกับอุปกรณ์ Bluetooth อื่นๆ ได้

แตะ **ไอคอน เมนู**  ในเมนู Bluetooth เพื่อเข้าถึงตัวเลือกต่อไปนี้

แก้ไขชื่อแท็บเล็ต – เปลี่ยนชื่อแท็บเล็ตของคุณเพื่อให้ง่ายต่อการระบุตัวตนเมื่อทำการจับคู่และเชื่อมต่อ ใส่ชื่อแท็บเล็ตของคุณแล้วแตะ **บันทึก**

เวลาที่สามารถมองเห็น – ตั้งระยะเวลาที่อุปกรณ์ Bluetooth อื่นๆ จะมองเห็นแท็บเล็ตของคุณสำหรับการจับคู่และเชื่อมต่อ เลือกจาก **2 นาที**, **5 นาที**, **1 ชม.** และ **ไม่มีกำหนด**

ได้รับ ไฟล์ – แสดงรายการของไฟล์ที่ได้รับของ Bluetooth

การสแกนแบบอินเตอร์แอกทีฟ – แสดงแบบฝึกหัดที่มีประโยชน์เกี่ยวกับคุณสมบัติของ Bluetooth

ช่วยเหลือ - ข้อมูลเกี่ยวกับการเชื่อมต่อ Bluetooth

ข้อมูลโมไบล์

แสดงข้อมูลที่ใช้ระหว่างช่วงเวลาที่คุณเลือก แตะแอปฯ จากรายการเพื่อดูข้อมูลที่ใช่ของแอปฯ นั้น

แบ่งปันและเชื่อมต่อ

คุณสามารถกำหนดค่าตัวเลือกต่างๆ สำหรับการใช้งานข้อมูลร่วมกันและการเชื่อมต่อกับอุปกรณ์อื่น

SmartShare Beam – ทำให้สามารถเปิดรับเนื้อหาอัลติมีเดียจากโทรศัพท์หรือแท็บเล็ตของ LG

หมายเหตุ: คุณต้องเปิดใช้งาน Wi-Fi เพื่อเปิดใช้งาน SmartShare Beam

เซิร์ฟเวอร์มีเดีย – ทำให้สามารถแบ่งปันข้อมูลมีเดียกับอุปกรณ์ใกล้เคียงผ่าน DLNA

Miracast – ทำมีเรอร์หน้าจอและระบบเสียงของโทรศัพท์ไปยัง Miracast dongle หรือทีวีแบบไร้สาย

หมายเหตุ: ในการเริ่มใช้คุณสมบัติ Miracast อย่างรวดเร็ว ให้แตะไอคอน Miracast ในแผงการแจ้งเตือน ขณะที่ทำมีเรอร์ จะไม่สามารถใช้ Mobile Hotspot ได้พร้อมกัน

LG PC Suite – ช่วยให้คุณสามารถใช้ LG PC Suite ในการถ่ายโอนเพลงและภาพระหว่างคอมพิวเตอร์และแท็บเล็ตของคุณ

การปล่อยสัญญาณ & เครือข่าย

ช่วยให้คุณสามารถเชื่อมต่ออุปกรณ์อื่นๆ เข้ากับแท็บเล็ตเพื่อใช้อินเตอร์เน็ตหรือตั้งค่าการตั้งค่าเครือข่าย

การปล่อยสัญญาณผ่าน USB – ช่วยให้คุณสามารถเปิดการปล่อยสัญญาณผ่าน USB และเชื่อมต่อกับอุปกรณ์อื่นๆ เพื่อแบ่งปันข้อมูลของคุณ

Wi-Fi hotspot – ช่วยให้คุณสามารถเปิด Wi-Fi hotspot และเชื่อมต่อกับอุปกรณ์อื่นๆ เข้ากับโทรศัพท์ผ่าน Wi-Fi

การปล่อยสัญญาณบลูทูธ – ช่วยให้คุณสามารถเปิดการปล่อยสัญญาณบลูทูธและเชื่อมต่อกับอุปกรณ์อื่นๆ เข้ากับแท็บเล็ตผ่าน Bluetooth

ช่วยเหลือ – ช่วยให้คุณสามารถทราบข้อมูลของการปล่อยสัญญาณผ่าน USB, Wi-Fi hotspot และการปล่อยสัญญาณผ่านบลูทูธ

โหมดเครื่องบิน – ช่วยให้คุณสามารถปิดการเชื่อมต่อไร้สายต่างๆ เช่น Wi-Fi และ Bluetooth

เครือข่ายโทรศัพท์เคลื่อนที่ – ช่วยให้คุณสามารถตั้งค่าว่าจะเปิดหรือปิดใช้งานการเข้าถึงข้อมูลในแท็บเล็ตของคุณ

VPN – ช่วยให้คุณสามารถตั้งค่าและจัดการ Virtual Private Networks (VPN)

อุปกรณ์

เสียง

โปรไฟล์เสียง – ให้คุณตั้งค่าโปรไฟล์เสียงเป็น เสียง, เฉพาะสั้น หรือ ห้ามรบกวนระดับเสียง – จัดการระดับเสียงของ เสียงการแจ้งเตือน, เสียงสัมผัสและระบบ และ เพลง, วิดีโอ, เกมส์ และมีเดียอื่นๆ

ความแรงการสั่น – ให้คุณตั้งค่าความแรงการสั่นสำหรับการโทร การแจ้งเตือน และการตอบสนองแบบสัมผัส

เสียงการแจ้งเตือน – ให้คุณตั้งค่าเสียงการแจ้งเตือนเริ่มต้นของคุณ

ห้ามรบกวน - ทำให้คุณสามารถตั้งเวลาในการป้องกันการขัดจังหวะจากการแจ้งเตือน คุณสามารถกำหนดเพื่อให้คุณสงบได้บางอย่างสามารถขัดจังหวะได้เมื่อตั้งค่าเฉพาะระดับความสำคัญ

ลือคหน้าจอ - ทำให้คุณสามารถเลือกว่าคุณต้องการแสดง หรือซ่อนการแจ้งเตือนบนลือคหน้าจอ

แอปฯ - ทำให้คุณสามารถป้องกันแอปฯ ไม่ให้แสดงการแจ้งเตือนที่สำคัญเมื่อตั้งการป้องกันการรบกวนเป็นเฉพาะระดับความสำคัญ

เสียงสัมผัส – ให้คุณตั้งค่าให้แท็บเล็ตเล่นเสียงเมื่อคุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองการสัมผัส

เสียงลือคหน้าจอ – ให้คุณตั้งค่าให้แท็บเล็ตเล่นเสียงเมื่อลือคและปลดลือคหน้าจอ

สั้นเมื่อแตะ – ให้คุณตั้งค่าการตอบสนองการสั่นเมื่อหน้าจอแท็บเล็ตถูกสัมผัส

หน้าจอ

หน้าจอหลัก

ธีม – ตั้งค่าธีมหน้าจอสำหรับอุปกรณ์ของคุณ

พื้นหลัง – ตั้งค่าพื้นหลังเพื่อใช้ในหน้าจอหลัก

เอฟเฟกต์หน้าจอ – ตั้งค่าเอฟเฟกต์เมื่อคุณลากเพื่อเปลี่ยนหน้าจอ

ยอมให้วนลูปหน้าจอโฮม – เลือกเพื่อตั้งค่าหน้าจอหลักให้อย่างต่อเนื่อง โดยไม่ต้องเลื่อนย้อนกลับไปในทิศทางตรงข้ามเมื่อคุณไปสุดด้านหนึ่ง

แบ็คอัปและรีสโตร – ให้คุณสำรองและเรียกคืนการกำหนดค่าแอปพลิเคชันและวิดเจ็ต และธีม

ช่วยเหลือ – แสดงข้อมูลเกี่ยวกับหน้าจอหลัก

ล๊อคหน้าจอ

เลือกแบบล๊อคหน้าจอ – ตั้งค่าประเภทการล๊อคหน้าจอเพื่อให้แท็บเล็ตของคุณปลอดภัย

หมายเหตุ: หลังจากอัปเดตเป็น Lollipop OS การล๊อคหน้าจอของคุณอาจไม่สามารถใช้ได้ยกเว้นลวดลาย, PIN และรหัสผ่าน

ในกรณีนี้ให้ไปที่ **แอปฯ** > **ตั้งค่า** > **ระบบป้องกัน** >

ลบจัดเก็บข้อมูล เพื่อลบใบรับรองการป้องกันแล้วตั้งค่าการล๊อคหน้าจอ

ให้ระยะเวลาที่คุณลบจัดเก็บข้อมูล เพราะใบรับรองการป้องกันที่คุณติดตั้งทั้งหมดจะถูกลบด้วย

Smart Lock – ตั้งค่าเพื่อปลดล๊อคแท็บเล็ตของคุณเมื่อคุณเชื่อมต่อกับอุปกรณ์ให้ Bluetooth ที่คุณเชื่อถือ เมื่อโทรศัพท์อยู่ในสถานที่ที่คุณเคย เช่น บ้าน หรือที่ทำงาน หรือเมื่อโทรศัพท์จำหน้าคุณได้

เอฟเฟกต์หน้าจอ – ตั้งค่าตัวเลือกเอฟเฟกต์หน้าจอ

พื้นหลัง – ตั้งค่าภาพล๊อคหน้าจอของคุณ เลือกจาก **แกลเลอรี** หรือ **คลังภาพพื้นหลัง**

ซ็อดคัท – ให้คุณเปลี่ยนซ็อดคัทบนการล๊อคหน้าจอแบบลาก

ข้อมูลเจ้าของ – ให้คุณป้อนข้อมูลการติดต่อที่จะแสดงบนการลือคหน้าจอในกรณีที่แท็บเล็ตของคุณสูญหาย

ตั้งเวลาล็อค – ตั้งค่าระยะเวลาก่อนที่จะหน้าจอล็อคโดยอัตโนมัติหลังจากหน้าจอหมดเวลา

ล็อคปุ่มพาวเวอร์ทันที – เลือกเพื่อให้ลือคหน้าจอตันทันทีเมื่อปุ่มเปิด/ปิด/ลือคถูกกด การตั้งค่านี้จะแทนที่การตั้งค่าตัวจับเวลาล็อคการป้องกัน

ความสว่าง – ปรับความสว่างของหน้าจอ สัมผัส **ความสว่าง** ในตอนกลางคืน เพื่อตั้งค่าความสว่างไปที่ 0% โดยอัตโนมัติในช่วงระหว่าง 12:00 น. - 6:00 น.

ใหม่เอาต์หน้าจอ – ตั้งค่าเวลาหน่วงก่อนที่จะหน้าจจะปิดโดยอัตโนมัติ

เอฟเฟกต์ปิดหน้าจอ – ตั้งค่าเอฟเฟกต์ปิดหน้าจอที่ใช้เมื่อปิดหน้าจอ

หมุนจออัตโนมัติ – ตั้งค่าเพื่อสลับการวางแนวโดยอัตโนมัติเมื่อคุณหมุนแท็บเล็ต

Daydream – แตะสวิตช์ Daydream  เพื่อสลับไปมาระหว่างเปิดหรือปิด เมื่อเปิดไว้จะทำให้สกรีนเซฟเวอร์ปรากฏขึ้นเมื่อแท็บเล็ตกำลังพักขณะวางบนแท่นชาร์จ และ/หรือกำลังชาร์จ เลือกจาก **นาฬิกา** และ **Google รูปภาพ**

หมายเหตุ: การชาร์จอาจช้าลงขณะเปิดสกรีนเซฟเวอร์

ชนิดแบบอักษร – เปลี่ยนประเภทของแบบอักษรที่แสดง

ขนาดแบบอักษร – เปลี่ยนขนาดของแบบอักษรที่แสดง

จ่อัจฉริยะ – ช่วยให้เปิดหน้าจอไว้เมื่ออุปกรณ์ตรวจพบใบหน้าของคุณ

ปุ่มสัมผัสหน้าจอโฮม – ให้คุณตั้งค่าปุ่มสัมผัสของโฮม ที่จะแสดงและตำแหน่งของปุ่มเหล่านั้นบนแถบ คุณยังสามารถเลือกสีและพื้นหลังได้อีกด้วย

ปรับแต่งเซนเซอร์การเคลื่อนไหว – ให้คุณปรับปรุงความแม่นยำของการเอียงและความเร็วของเซนเซอร์

ที่เก็บข้อมูล

ที่เก็บข้อมูลภายใน – แสดงจำนวนรวมของพื้นที่ในหน่วยความจำอุปกรณ์ และแสดงรายการประเภทข้อมูลที่ใช้พื้นที่

SD การ์ด – แสดงจำนวนรวมของพื้นที่หน่วยความจำในการ์ด microSD

ต่อเชื่อมการ์ด/ยกเลิกการต่อเชื่อมการ์ด SD – เชื่อมต่อและยกเลิกการต่อเชื่อมการ์ด microSD จากแท็บเล็ตเพื่อให้คุณเข้าใช้ข้อมูลที่จัดเก็บภายในฟลอรีเมตการ์ด หรือถอดออกอย่างปลอดภัย การตั้งค่านี้จะใช้ไม่ได้หากไม่ได้ติดตั้งการ์ด microSD หากคุณยกเลิกการเชื่อมต่อแล้ว หรือหากคุณเชื่อมต่อการ์ด microSD บนคอมพิวเตอร์

ลบการ์ด SD – ลบข้อมูลทั้งหมดในการ์ด microSD อย่างถาวร และเตรียมสำหรับใช้กับแท็บเล็ตของคุณ

แบตเตอรี่

ข้อมูลแบตเตอรี่ – ดูปริมาณพลังงานแบตเตอรี่ที่ใช้สำหรับกิจกรรมของอุปกรณ์ ระดับแบตเตอรี่แสดงเป็นเปอร์เซ็นต์ นอกจากนี้ยังแสดงเวลาใช้งานที่เหลืออีกด้วย

อัตราการใช้แบตเตอรี่ – แสดงการใช้งานแบตเตอรี่

แสดงเปอร์เซ็นต์แบตเตอรี่ในแถบสถานะ – แสดงเปอร์เซ็นต์ของแบตเตอรี่บนแถบสถานะ

ประหยัดพลังงาน – จัดการแบตเตอรี่สำหรับไอเท็มที่ใช้ระบบประหยัดพลังงาน และสวิตช์  เพื่อเปิดคุณสมบัตินี้ และ **ประหยัดพลังงาน** สำหรับตัวเลือกต่อไปนี้

- **เปิดระบบประหยัดพลังงาน:** ตั้งค่าระดับแบตเตอรี่ในระดับที่คุณต้องการให้ระบบประหยัดพลังงานเปิดใช้งาน เลือกลงจากทันที, 5% แบตเตอรี่ และ 15% แบตเตอรี่

ช่วยเหลือ – แตะเพื่อเข้าถึงบางคำแนะนำสำหรับการประหยัดพลังงาน

Smart cleaning

คุณสามารถจัดการแอปฯ ที่ไม่ใช้งาน ไฟล์ต่างๆ หรือไฟล์อินเทอร์เน็ตชั่วคราวที่บันทึกไว้ได้

แอปฯ

แสดงรายการแอปพลิเคชัน เช่น ที่กำลังรันหรือดาวน์โหลด
ปิดไปทางซ้ายและขวาเพื่อดูหนึ่งในสามแท็บที่ด้านบนของหน้าจอเพื่อดูข้อมูลอย่างละเอียดเกี่ยวกับแอปพลิเคชันที่ **ดาวน์โหลด**, **บนการ์ด SD**, **การรัน** และ **ทั้งหมด** และรายการหนึ่งเพื่อดูข้อมูลเพิ่มเติม โดยแตะ **บังคับหยุด** (หรือ **หยุด**) จากนั้น **ตกลง** เพื่อให้หยุดทำงาน

แอปฯ รับส่งข้อความเริ่มต้น

คุณสามารถเลือกแอปพลิเคชันข้อความเริ่มต้นได้

หน้าต่างคู่

มุมมองแบ่งหน้าจอ – อนุญาตให้อุปกรณ์เปิดหน้าต่างคู่โดยอัตโนมัติเมื่อคุณแตะลิงก์บนหน้าจอแบบเต็มจอหรือแตะสิ่งที่แนบมากับอีเมล (เฉพาะรูปภาพเท่านั้น)

ช่วยเหลือ – แสดงข้อมูลช่วยเหลือเกี่ยวกับการใช้คุณสมบัติหน้าต่างคู่

ส่วนตัว

Cloud

แตะ **เพิ่มแอคเคาท์** เพื่อเพิ่มแอคเคาท์ Cloud คุณเข้าใช้งานแอคเคาท์ Cloud ของคุณได้จากเมนูนี้ และ **ไอคอน**  เพื่ออัปโหลดไฟล์

ผู้ใช้

เมนูนี้จะแสดงผู้ใช้งานปัจจุบันที่คุณได้สร้างไว้

เพิ่มผู้ใช้ที่ลอคแท็บเล็ต – ทำให้คุณสามารถเพิ่มผู้ใช้รายใหม่เมื่อแท็บเล็ตของคุณลอคอยู่

เพิ่ม ผู้ใช้ – ให้คุณเพิ่มแอคเคาท์ใหม่สำหรับแท็บเล็ตและใช้คุณสมบัติผู้ใช้หลายคน

ที่ตั้ง

โหมด

- **แม่นยำสูง (GPS และเครือข่าย)** – ใช้ GPS และเครือข่าย Wi-Fi เพื่อระบุตำแหน่งโดยประมาณ
- **ประหยัดแบตเตอรี่ (เครือข่ายเท่านั้น)** – ใช้เครือข่าย Wi-Fi และเครือข่ายโทรศัพท์มือถือในการระบุตำแหน่งโดยประมาณ
- **เซนเซอร์ของอุปกรณ์เท่านั้น (เฉพาะ GPS)** – ใช้ GPS ในการระบุตำแหน่งของคุณ

คำขอระบุตำแหน่งล่าสุด – แสดงแอปฯ ล่าสุดที่ขอข้อมูลพิกัดที่ตั้งของคุณ
กล้องถ่ายรูป – อนุญาตให้อุปกรณ์แท็กภาพถ่ายและวิดีโอด้วยตำแหน่งที่ตั้งของภาพเหล่านั้น

การรายงานตำแหน่งของ Google – ให้คุณดูการตั้งค่าระบบระบุพิกัดของ Google ของคุณได้

ระบบป้องกัน

เข้ารหัสแท็บเล็ต – ให้คุณเข้ารหัสข้อมูลในแท็บเล็ตเพื่อความปลอดภัย
คุณจะต้องป้อน PIN หรือรหัสผ่านเพื่อถอดรหัสแท็บเล็ตในแต่ละครั้งที่คุณเปิดใช้การเข้ารหัส

เข้ารหัสระบบจัดเก็บข้อมูลการ์ด SD – ให้คุณเข้ารหัสข้อมูลใน microSD เพื่อความปลอดภัย

ตั้งค่าล็อคซิมการ์ด – ตั้งค่าล็อคการ์ด Micro-USIM หรือเปลี่ยน PIN ของการ์ด Micro-USIM

ป้อนรหัสผ่านแบบมองเห็น – แสดงตัวอักษรตัวสุดท้ายของรหัสผ่านที่ซ่อนอยู่ตามที่คุณพิมพ์

ผู้ดูแลระบบแท็บเล็ต – ดูหรือเลิกใช้ผู้ดูแลระบบแท็บเล็ต

แหล่งที่มาที่ไม่รู้จัก – อนุญาตการติดตั้งแอปฯ ที่มาจากแอปพลิเคชันที่ไม่ใช่ Play Store

ยืนยันแอปฯ – ไม่อนุญาตหรือเตือนก่อนติดตั้งแอปฯ ที่อาจก่ออันตราย

ชนิดพื้นที่จัดเก็บข้อมูล – แสดงประเภทที่เก็บข้อมูลสำหรับใบรับรอง
การรับรองสิทธิ์ที่ไวใจได้ – แสดงการรับรองสิทธิ์ CA ที่ไวใจได้
ติดตั้งจากที่เก็บข้อมูล – เลือกติดตั้งใบรับรองที่เข้ารหัส
ลบจัดเก็บข้อมูล – ลบใบรับรองทั้งหมด

Trust agents – ดูหรือปิดการใช้งาน Trust agents

ปิดหมดหน้าจอ – คุณสมบัตินี้จะทำให้คุณสามารถล๊อคอุปกรณ์ของคุณได้ เพื่อให้ผู้ใช้ปัจจุบันสามารถเข้าถึงแอปที่ปิดหมดไว้ได้เท่านั้น ความสามารถนี้มีประโยชน์สำหรับผู้ใช้ที่มีเด็ก ๆ

แอปฯที่มีสิทธิ์เข้าถึงการใช้งาน - ทำให้สามารถดูข้อมูลการใช้แอปฯ

แอดเคาท์และการซิงค์

อนุญาตให้แอปพลิเคชันซิงโครไนซ์ข้อมูลในแบ็คกราวด์ ไม่ว่าคุณจะทำสิ่งใดในข้อมูลอยู่หรือไม่ก็ตาม การปิดใช้งาน **ซิงค์ข้อมูลโดยอัตโนมัติ** สามารถช่วยประหยัดพลังงานแบตเตอรี่และลด (แต่ไม่กำจัด) การใช้ข้อมูลได้

ภาษาและการป้อนข้อมูล

ใช้การตั้งค่า ภาษาและการป้อนข้อมูล เพื่อเลือกภาษาสำหรับข้อความในแท็บเล็ต และเพื่อกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

แอ็พอัปเดตและรีเซ็ท

สำรองข้อมูลของฉัน – ตั้งค่าเพื่อสำรองข้อมูลการตั้งค่าและแอปพลิเคชันของคุณลงบนเซิร์ฟเวอร์ของ Google

แอดเคาท์ข้อมูลสำรอง – ตั้งค่าแอดเคาท์ที่คุณต้องการสำรองข้อมูล

เรียกคืนอัตโนมัติ – ตั้งค่าให้ทำการเรียกคืนข้อมูลการตั้งค่าและแอปพลิเคชันของคุณเมื่อมีการติดตั้งแอปพลิเคชันซ้ำบนอุปกรณ์ของคุณ

บริการ LG Backup – สำรองข้อมูลทั้งหมดในอุปกรณ์และเรียกคืนข้อมูลในกรณีที่ข้อมูลสูญหายหรือเปลี่ยนเครื่อง

- **คัดลอก & ได้รับข้อมูล** – ทำให้คุณสามารถถ่ายโอนข้อมูล เช่น รายชื่อ, ภาพถ่าย และเพลงระหว่างอุปกรณ์ต่างๆ ได้

- **สำรองและเรียกคืน** – ทำให้คุณสามารถเก็บข้อมูลได้อย่างปลอดภัย

รีเซ็ตข้อมูลจากโรงงาน – รีเซ็ตการตั้งของคุณกลับสู่ค่าเริ่มต้นจากโรงงาน และลบข้อมูลทั้งหมดของคุณ หากคุณรีเซ็ตแท็บเล็ตด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

ระบบ

ปุ่มขีดคัต

ทำให้สามารถเปิดปิดปุ่มลัดได้


วันที่และเวลา

ใช้การตั้งค่า วันที่และเวลา เพื่อตั้งค่าการแสดงผลวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้ เพื่อตั้งค่าเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์เคลื่อนที่ได้

การช่วยสำหรับการเข้าถึง


ใช้การตั้งค่า การช่วยสำหรับการเข้าถึง เพื่อกำหนดค่าปลั๊กอินช่วยเหลือสำหรับการเข้าถึงที่คุณติดตั้งในแท็บเล็ต

หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติมเพื่อให้สามารถเลือกได้

TalkBack – ให้คุณตั้งค่าฟังก์ชัน Talkback ซึ่งจะช่วยผู้ที่มีความบกพร่องทางด้านสายตาด้วยการตอบสนองด้วยเสียง และสวิตช์ TalkBack  ที่มุมบนขวาของหน้าจอเพื่อเปิดใช้งาน และ **ตั้งค่า** ที่ด้านล่างของหน้าจอเพื่อปรับการตั้งค่า TalkBack

ขนาดแบบอักษร – เลือกเพื่อปรับขนาดของข้อความ

สลัปส์ – เลือกเพื่อสลัปส์ของหน้าจอและเนื้อหา

การปรับแต่งสี – ตั้งค่าเพื่อดูหน้าจอด้วยความเข้มของสีที่มากขึ้น และสวิตช์  เพื่อเปิดใช้งาน จากนั้นแตะที่หน้าจอแล้วลากผ่านหน้าจอในทิศทางใดๆ จนกว่าคุณจะเห็นความเข้มของสีที่คุณต้องการใช้

แตะเพื่อชม – ให้คุณชมเข้าและออกด้วยการแตะสามครั้งที่หน้าจอ

เจดสีบนหน้าจอ – ปรับลดแสงไฟของหน้าจอ

ขีดจำกัดความสามารถในการเข้าถึง – เปิดใช้งานคุณสมบัตินี้เพื่อให้คุณเปิดใช้งานคุณสมบัติการช่วยสำหรับการเข้าถึงได้อย่างรวดเร็วยิ่งขึ้น

เอาต์พุตแปลงข้อความเป็นคำพูด – ตั้งค่าเอนจินการแปลงข้อความเป็นเสียงพูด และการตั้งค่าความเร็วเสียงพูดตามที่ต้องการ และสาธิตการสังเคราะห์เสียงแบบสั้นๆ อีกด้วย สถานะของภาษาเริ่มต้นจะถูกแสดงด้วย

ประเภทเสียง – ตั้งค่าประเภทของออดิโอ เลือก **โมโน** หรือ **สเตอริโอ**

บาลานซ์เสียง – กำหนดเส้นทางของออดิโอ ปรับสไลด์เดออร์บนแถบสไลด์ เพื่อตั้งค่า




ปิดเสียงทั้งหมด – ปิดเสียงทั้งหมด

คำบรรยาย – ให้คุณปรับแต่งการตั้งค่าคำอธิบายสำหรับผู้ที่มีความบกพร่องทางการได้ยิน **แตะสวิตช์**  เพื่อเปิดคุณสมบัตินี้ ตั้งค่าภาษา ขนาดข้อความ และตัวเลือกสไลด์คำอธิบายตามที่ต้องการ

แตะเวลาตอบสนอง – ตั้งการสัมผัสและเวลาในการตอบสนอง เลือกจาก **สั้น**, **กลาง** และ **นาน**

Touch assistant – แสดงบอร์ดการสัมผัสที่สามารถเข้าถึงการกระทำที่ซับซ้อนได้อย่างง่าย

ใหม่เอาต์หน้าจอ – ตั้งค่าระยะเวลาก่อนที่หน้าจอจะปิด

แตะพื้นที่ควบคุม – **แตะสวิตช์**  เพื่อเปิดคุณสมบัตินี้ ช่วยให้คุณสามารถจำกัดการควบคุมด้วยการสัมผัสที่บางแห่งของหน้าจอ กด **ปุ่มลดระดับเสียง**  และ **ปุ่มโฮม**  พร้อมกันเพื่อเปิดใช้งานและปิดใช้งานคุณสมบัตินี้

หมุนจออัตโนมัติ – เลือกเพื่อให้อุปกรณ์หมุนหน้าจอตามแนวของอุปกรณ์ (แนวตั้งหรือแนวนอน)

ยืนยันเสียงรหัสนวน – ทำเครื่องหมายถูกเพื่อให้มีการยืนยันด้วยเสียงเมื่อป้อนรหัสนวนแต่ละอักขระ

ขอรหัสการตั้งค่าความสามารถในการเข้าถึง – ตั้งค่าการเข้าถึงคุณสมบัติที่เลือกไว้อย่างง่ายดายและรวดเร็วเมื่อคุณแตะปุ่มโฮมสามครั้ง

อินพุทปุ่มเดียว – แต่ละการสัมผัสของนิ้วมือจะใส่ตัวอักษร/ลักษณะเฉพาะบนคีย์บอร์ดของ LG

เปลี่ยนการเข้าถึง – ให้คุณใช้งานอุปกรณ์ของคุณโดยใช้คีย์ที่เหมือนปุ่มแป้นพิมพ์ที่มีมากกว่าหนึ่งปุ่ม เมื่อนี้เป็นประโยชน์สำหรับผู้ใช้ที่มีข้อจำกัดด้านสถานที่ทำงานที่ไม่สามารถใช้งานอุปกรณ์ของคุณได้โดยตรง

Quick Cover

เปิดใช้งานเมนูนี้เพื่อเปิดหรือปิดหน้าจอโดยอัตโนมัติเมื่อใช้ Quick Cover

กำลังพิมพ์

ทำให้คุณสามารถพิมพ์เนื้อหาจากบางหน้าจอ (เช่น จากเว็บเพจที่แสดงใน Chrome) ไปยังเครื่องพิมพ์ที่เชื่อมต่ออยู่บนเครือข่าย Wi-Fi เดียวกันกับอุปกรณ์ Android ของคุณ

เกี่ยวกับแท็บเล็ต

เมนูนี้ช่วยให้คุณจัดการอัปเดตซอฟต์แวร์ และดูข้อมูลต่างๆ ที่เกี่ยวข้องกับแท็บเล็ตของคุณได้

ชื่อแท็บเล็ต – ให้คุณตั้งค่าชื่อแท็บเล็ต

ศูนย์กลางอัปเดต – ให้คุณตรวจสอบแอปฯ และอัปเดตซอฟต์แวร์

เครือข่าย – ช่วยให้คุณสามารถดูข้อมูลเครือข่ายของแท็บเล็ตของคุณ

สถานะ – ช่วยให้คุณสามารถดูหมายเลขโทรศัพท์, IMEI, IMEI SV ของแท็บเล็ต

แบตเตอรี่ – ให้คุณดูข้อมูลสถานะแบตเตอรี่ ระดับแบตเตอรี่ และการใช้แบตเตอรี่

ข้อมูลเกี่ยวกับฮาร์ดแวร์ – ช่วยให้คุณสามารถดูหมายเลขรุ่น, ช่วงเวลาที่ทำงาน, MAC แอดเดรสของ Wi-Fi และบลูทูธแอดเดรส

ข้อมูลของซอฟต์แวร์ – ให้คุณดูเวอร์ชัน Android, เวอร์ชัน Baseband, เวอร์ชัน Kernel, หมายเลข Build และเวอร์ชันซอฟต์แวร์

ข้อมูลทางกฎหมาย – ให้คุณดูเอกสารทางกฎหมายสำหรับซอฟต์แวร์ LG ในใบอนุญาตโอเพนซอร์ส และข้อมูลทางกฎหมายของ Google

เกี่ยวกับการสำรองข้อมูลและเรียกคืนข้อมูลของอุปกรณ์

ขอแนะนำให้คุณสร้างและบันทึกไฟล์สำรองไว้ในที่เก็บข้อมูลภายในเป็นระยะ โดยเฉพาะอย่างยิ่งก่อนอัปเดตซอฟต์แวร์ใดๆ การจัดเก็บไฟล์สำรองปัจจุบันไว้ในหน่วยความจำเก็บข้อมูลอาจช่วยให้คุณกู้ข้อมูลอุปกรณ์ได้ หากอุปกรณ์ของคุณสูญหาย ถูกขโมย หรือเสียหายจากปัญหาที่ไม่คาดคิด



แอปพลิเคชัน LG แบ็คอัพนี้สนับสนุนสมาร์ตโฟนและแท็บเล็ต LG, เวอร์ชันซอฟต์แวร์หรือระบบปฏิบัติการอื่นๆ ดังนั้น เมื่อคุณเชื่อมต่อสมาร์ตโฟนหรือแท็บเล็ต LG เครื่องใหม่ คุณสามารถสำรองข้อมูลอุปกรณ์เครื่องปัจจุบันไปยังเครื่องใหม่ของคุณได้

หากคุณมีแอปพลิเคชัน LG แบ็คอัพติดตั้งไว้ล่วงหน้าในสมาร์ตโฟนและแท็บเล็ตของคุณ คุณสามารถสำรองและเรียกคืนข้อมูลของคุณส่วนใหญ่ได้ รวมถึงแอปพลิเคชันที่ดาวน์โหลดหรือติดตั้งล่วงหน้า, บัญชี, รายการปฏิทิน, รายชื่อ, การตั้งค่าหน้าจอหลัก และการตั้งค่าระบบ และคุณยังสามารถ:

- ดำเนินการแบ็คอัพอุปกรณ์ของคุณด้วยตัวเอง
- เรียกคืนข้อมูลอุปกรณ์



คำเตือน! เพื่อป้องกันการปิดเครื่องที่คาดไม่ถึงระหว่างการสำรองหรือเรียกคืนข้อมูล อันเนื่องมาจากแบตเตอรี่ไม่เพียงพอ คุณควรชาร์จแบตเตอรี่ให้เต็มเสมอ

แบ็คอัปข้อมูลแท็บเล็ตของคุณ

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > ตั้งค่า  > แบ็คอัปและรีเซ็ท > บริการ LG Backup > สำรองและเรียกคืน > สำรองข้อมูล
- 2 บนหน้าจอตำแหน่งที่จัดการแบ็คอัป ให้แตะ ที่เก็บข้อมูลภายใน หรือ SD การ์ด แล้วแตะ ถัดไป
- 3 เลือกกล่องกาเครื่องหมายสำหรับรายการที่คุณต้องการสำรองข้อมูล แล้วเลือก ถัดไป
- 4 อ่านข้อมูลที่แสดงบนหน้าจอ แล้วแตะ เริ่ม
- 5 เมื่อสำรองข้อมูลไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ สำรองข้อมูลเสร็จสมบูรณ์

การเรียกคืนข้อมูลแท็บเล็ต

หมายเหตุ: ไฟล์ทั้งหมดที่เก็บไว้ในแท็บเล็ตของคุณจะถูกลบก่อนที่จะไฟล์สำรองจะถูกเรียกคืน ตรวจสอบให้แน่ใจว่าได้คัดลอกไฟล์แบ็คอัปไปยังตำแหน่งที่ตั้งอื่น

- 1 จากหน้าจอหลัก ให้แตะ แอปฯ  > ตั้งค่า  > แบ็คอัปและรีเซ็ท > บริการ LG Backup > สำรองและเรียกคืน > การจัดการและการโอนถ่ายไฟล์กลับ
- 2 ในหน้าจอ เรียกคืน ให้เลือกไฟล์สำรองที่มีข้อมูลที่คุณต้องการเรียกคืน
- 3 เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการเรียกคืน แล้วเลือก ถัดไป เพื่อเรียกคืนรายการไปยังแท็บเล็ต

หมายเหตุ: โปรดทราบว่าคุณจะเรียกคืนข้อมูลแท็บเล็ตของคุณจะถูกบันทึกด้วยเนื้อหาจากการสำรองของคุณ

- 4 หากไฟล์สำรองถูกเข้ารหัส ให้พิมพ์รหัสผ่านที่คุณสร้างไว้เพื่อเข้ารหัส
- 5 เมื่อเรียกคืนข้อมูลไฟล์ที่เลือกทั้งหมดแล้ว แท็บเล็ตจะรีสตาร์ทโดยอัตโนมัติ

หมายเหตุ: คุณสามารถตั้งค่าตัวเลือก **ล็อคไฟล์แบ็คอัพ** ได้เมื่อสร้างการสำรองข้อมูลเพื่อเข้ารหัสไฟล์แบ็คอัพของคุณสำหรับการป้องกันเพิ่มเติม

บนหน้าจอหลักของ LG แบ็คอัพ ให้แตะ **ไอคอน เมนู** > **ตั้งรหัสผ่าน** แล้วป้อนรหัสผ่านและคำแนะนำในกรณีที่คุณลืมรหัสผ่าน หลังจากที่คุณตั้งค้ำรหัสผ่าน คุณจะต้องป้อนทุกครั้งที่ต้องการสำรอง/เรียกคืน

อัปเดตซอฟต์แวร์แท็บเล็ต

อัปเดตซอฟต์แวร์แท็บเล็ต



คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของแท็บเล็ตเป็นเวอร์ชันล่าสุดได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการใช้ฟังก์ชันนี้ โปรดไปที่: <http://www.lg.com>

เนื่องจากการอัปเดตเฟิร์มแวร์แท็บเล็ตต้องการให้ผู้ใช้ดำเนินการระหว่างกระบวนการอัปเดต โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่าการ์ดถอดสาย USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้แท็บเล็ตเสียหายร้ายแรงได้

อัปเดตซอฟต์แวร์แท็บเล็ต LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตเฟิร์มแวร์แท็บเล็ตเป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้งานได้ต่อเมื่อ LG ให้บริการเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น ก่อนอื่น คุณสามารถตรวจสอบเวอร์ชันของซอฟต์แวร์ในแท็บเล็ตของคุณได้ :

จากหน้าจอหลัก ให้แตะ **แอปฯ**  > **ตั้งค่า**  > **เกี่ยวกับแท็บเล็ต** > **ข้อมูลของซอฟต์แวร์**

เมื่อต้องการอัปเดตซอฟต์แวร์แท็บเล็ต จากหน้าจอหลัก ให้แตะ **แอปฯ**  > **ตั้งค่า**  > **เกี่ยวกับแท็บเล็ต** > **ศูนย์กลางอัปเดต** > **Software Update** > **ตรวจสอบอัปเดตในตอนนี้**


หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับเฉพาะบางรุ่นเท่านั้น ตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับแท็บเล็ตทุกรุ่น

หมายเหตุ: ข้อมูลส่วนตัวของคุณ—รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google ของคุณและแอคเคาท์อื่นๆ, ข้อมูลระบบหรือแอปพลิเคชันและการตั้งค่าของคุณ, แอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM —อาจสูญหายในกระบวนการอัปเดตซอฟต์แวร์ของอุปกรณ์ ดังนั้น LG ขอแนะนำให้คุณสำรองข้อมูลส่วนตัวก่อนการอัปเดตซอฟต์แวร์ของแท็บเล็ต LG ไม่รับผิดชอบต่อการสูญหายของข้อมูลส่วนตัวใดๆ


อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับแท็บเล็ตของคุณ
(รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อะแดปเตอร์
สำหรับชาร์จ
แบตเตอรี่



สายเคเบิล USB



คู่มือแนะนำอย่างย่อ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามดังกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบเมื่อใช้แท็บเล็ต คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่สามารถตั้งค่าแอปพลิเคชัน	ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ข้อผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่
	อุณหภูมิภายนอกร้อนหรือเย็นเกินไป	ตรวจสอบให้แน่ใจว่าแท็บเล็ตกำลังชาร์จไฟที่อุณหภูมิปกติ
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อของอุปกรณ์ชาร์จ
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น
	อุปกรณ์ชาร์จชำรุด	เปลี่ยนอุปกรณ์ชาร์จ
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น
ไม่สามารถรับ / ส่งรูปถ่ายได้	หน่วยความจำเต็ม	ลบบางภาพออกจากแท็บเล็ต
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่สนับสนุน
ไม่มีเสียง	โหมดย่น	ตรวจสอบตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดย่นหรือโหมดย่นปิดเสียง


**เครื่องโทรคมนาคมและอุปกรณ์นี้
มีความสอดคล้องตามข้อกำหนดของ กทช.**

**ศูนย์บริการ LG โดย บริษัท แอลจี
อีเลคทรอนิกส์ (ประเทศไทย) จำกัด**

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน 72/127 ถ.สมเด็จพระเจ้าตากสิน
แขวงบคคโล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-เสาร์, 08:00 - 18:00น.

Call center : 0-2878-5757

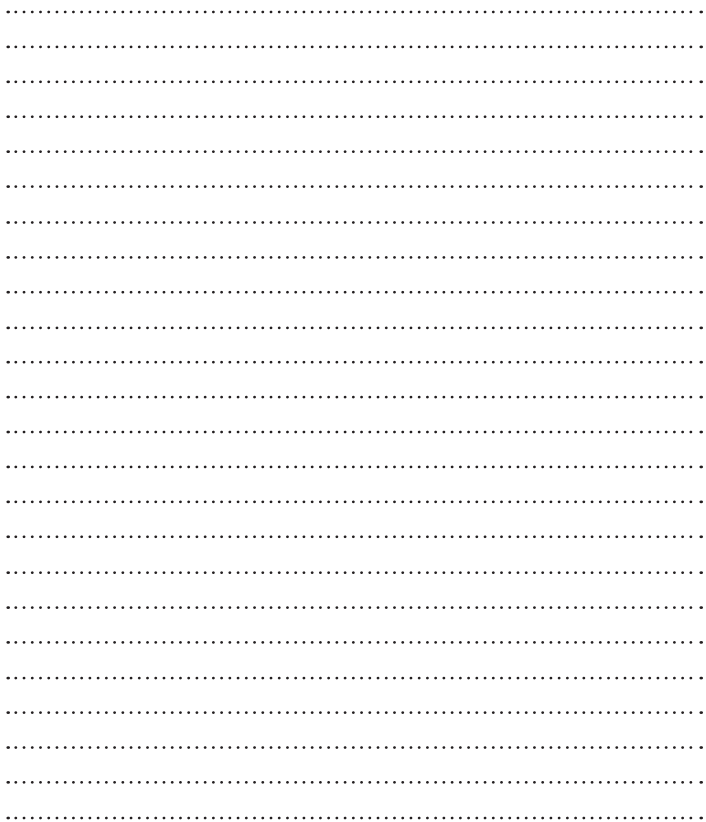



ENGLISH

User Guide

- Screen displays and illustrations may differ from those you see on actual device.
- Some of the contents of this guide may not apply to your device, depending on the software and your service provider. All information in this document is subject to change without notice.
- This device is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Google Play™ are trademarks of Google, Inc.

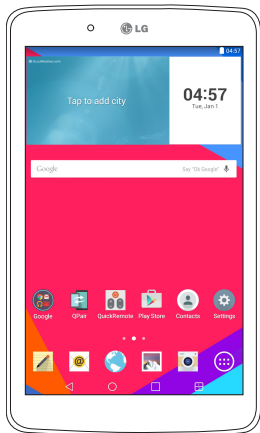


Table of contents

About this user guide	5	Double-tap	30
About this user guide	5	Pinch-to-Zoom	30
Trademarks.....	6	Rotate the screen	30
DivX HD.....	6	Home screen	30
Guidelines for safe and efficient use	8	Customizing the Home screen.....	32
Important notice	16	Opening, switching, and stopping apps	32
Getting to know your device	20	Using Dual window.....	33
Tablet Overview.....	20	Customizing app icons on the Home screen.....	34
Charging your tablet	22	Quick access	35
Optimizing Battery Life	23	Notifications	35
To extend the life of your battery.....	23	Accessing notifications.....	36
To view the battery charge level.....	24	Quick Settings on the Notifications Panel.....	36
To monitor and control what uses the battery	24	To rearrange Quick Setting options on the Notification Panel	37
Installing the SIM card	24	QSlide apps on the Notifications Panel.....	37
Inserting a microSD card	25	Using the QSlide apps	37
Removing the microSD card	26	Notification icons on the Status Bar.....	37
Formatting the microSD card	27	Multiple Users	39
Locking and unlocking the screen	27	QSlide	40
Turning the screen on using the KnockON feature	28	Capturing a Screenshot	42
Unlocking your screen using the Knock Code feature.....	28	Using QuickMemo+ to capture a screenshot	42
Your Home screen	29	Using Capture plus to capture a screenshot of the browser.....	42
Touch screen tips	29	Text Input Methods	43
Tap or touch.....	29	Enter suggested word using gesture control	43
Touch and hold.....	29	Entering special characters	44
Drag.....	29		
Swipe or slide	30		

Using Clip Tray.....	45
Google account setup.....	46
Connecting to Networks and Devices	47
Wi-Fi	47
Connecting to Wi-Fi networks.....	47
Turning Wi-Fi on and connecting to a Wi-Fi network.....	47
Bluetooth	48
Turning on Bluetooth and pairing up your tablet with a Bluetooth device	48
Send data using the Bluetooth feature	49
Receive data using the Bluetooth feature	49
SmartShare	50
Enjoying the content via a variety of devices	50
Playing/Sending.....	50
Enjoying the content from Nearby devices	50
Connecting devices.....	50
Searching other devices	51
Using the content from the Cloud	51
Using the Cloud	51
QPair	51
PC connections with a USB cable.....	54
Transferring music, photos and videos using the Media device (MTP) mode... ..	54
Synchronize with Windows Media Player	54
PC connections with a USB cable for Mac OS X users	55
Contacts	56
Searching for a contact	56
Adding a new contact	56
Favorite Contacts.....	56
Creating a group.....	57
Messaging	58
Conversation view.....	58
Sending a message.....	58
Using smilies.....	59
Changing your message settings	59
E-mail	60
Managing an email account.....	60
Working with account folders	61
Composing and sending email.....	61
Receiving emails.....	61
Entertainment.....	62
Camera	62
Getting to know the viewfinder	62
Using the advanced settings	63
Taking a photo	63
To zoom in or out.....	64
Gesture shot.....	64
Once you've taken a photo.....	64
Viewing your saved photos	66
Recording a video	66
Watching your saved videos.....	66
Gallery	67
Viewing pictures	67
Playing videos.....	68
Deleting images and videos.....	68
Setting as wallpaper.....	68

Slideshow.....	68	Adding and viewing bookmarks.....	87
Video.....	69	Chrome Options menu.....	87
Playing a video.....	69	Settings.....	88
Music.....	70	Access the Settings menu.....	88
Transfer music using Media device		WIRELESS NETWORKS.....	88
(MTP) mode.....	70	DEVICE.....	91
Playing a song.....	71	PERSONAL.....	95
Tools.....	73	SYSTEM.....	98
QuickMemo+.....	73	LG Backup.....	102
QuickRemote.....	75	About backing up and restoring	
Clock.....	76	device data.....	102
Calculator.....	77	Backup your tablet data.....	103
Calendar.....	77	Restoring tablet data.....	103
Tasks.....	78	Tablet software update.....	105
File Manager.....	79	Tablet software update.....	105
Voice Recorder.....	80	LG tablet software update via	
POLARIS Office 5.....	81	Over-the-Air (OTA).....	105
Google+.....	82	Accessories.....	107
LG SmartWorld.....	82	Troubleshooting.....	108
The Web.....	84		
Internet.....	84		
Opening a page.....	84		
Bookmarks.....	85		
History.....	85		
Using Reader mode.....	85		
Using QSlide.....	85		
Download files.....	85		
Chrome.....	85		
Viewing web pages.....	86		
Opening a page.....	86		
Searching the web by voice.....	86		
Syncing with other devices.....	86		

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your device safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your tablet.
- Your content may differ from the final product, or from software supplied by service providers or carriers. This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your device's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully are entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan to is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This tablet device model LG-V490 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the device transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG device models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.

- The highest SAR value for this device when worn on the body, as described in this user guide, is 1.420 W/kg.
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 0.00 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 0.00 cm away from your body.

In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by non-qualified professional can cause damage to your device.

WARNING

Only use batteries, chargers and accessories approved for use with this particular device model. The use of any other types may invalidate any approval or warranty applying to the device and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the device in any area where you are required to by special regulations. For example, do not use your device in hospitals as it may affect sensitive medical equipment.
- Do not handle the device with wet hands while it is being charged. It may cause an electric shock and can seriously damage your device.
- Do not charge a device near flammable material as the device can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the tablet when it is on soft furnishings.
- The device should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the device next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the tablet.
- Do not expose the device to liquid or moisture.

- Use accessories like earphones cautiously.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your tablet is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your device during or immediately after operation.
- If your device gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet device, changes the color of the product label inside your device. Damage to your device as a result of exposure to liquid is not covered under your warranty.
- Use your tablet in temperatures between 0 °C and 40 °C, if possible. Exposing your device to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Efficient device operation

Electronics devices

All tablet device may receive interference, which could affect performance.

- Do not use your tablet device near medical equipment without requesting permission. Avoid placing the tablet over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by tablet device.
- Minor interference may affect TVs, radios, PCs etc.

Road safety

Check the laws and regulations on the use of tablet device in the area when you drive.

- Do not use a hand-held device while driving.
- Give full attention to driving.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.



To prevent possible hearing damage, do not listen at high volume levels for long periods

- Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the tablet close to your ear. We also recommend that music volumes are set to a reasonable level.
- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

Glass Parts

Some parts of your tablet device are made of glass. This glass could break if your device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the tablet where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your tablet at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your tablet device or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your tablet off before boarding any aircraft.
- Do not use it in aircraft without permission from the crew.

Children


Keep the device in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached. This device also contains an internal battery that can be hazardous if the device is not used or maintained properly.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
Do not leave the device in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the tablet is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

How to update your tablet

Access to latest firmware releases, new software functions and improvements.

- Update your tablet without a PC: Select **Update Center**  > **Software Update** > **Check now for update**.
- Update your tablet by connecting it to your PC.

For more information about using this function, please visit

<http://www.lg.com/common/index.jsp> and select the country/region and language.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-V490** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

Regulatory and Safety

Go to "**System settings** > **About tablet** > **Regulatory and Safety**" to get regulatory and safety information

Important notice




Please read this before you start using your tablet!

Please check to see whether any problems you encountered with your tablet are described in this section before taking the tablet in for service or calling a service representative.

1. Tablet Memory

You need to check your tablet memory and delete some data, such as applications, to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab > **Settings**  > **Apps**.
- 2 Once all of the applications appear, select the application you want to uninstall.
- 3 Tap **Uninstall** and **OK** to confirm.

2. Before installing an open source application and operating system (OS)




WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your tablet to malfunction. In addition, your tablet will no longer be covered by the warranty.

WARNING

To protect your tablet and personal data, only download applications from trusted sources, such as Play Store. If there are improperly installed applications on your tablet, the tablet may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the tablet.

3. Using a Screen Lock

Set an screen lock to secure your tablet. Tap  >  > **Apps** tab > **Settings**  > **Display** > **Lock screen** > **Select screen lock** and select a desired screen lock from **None**, **Swipe**, **Knock Code**, **Pattern**, **PIN** and **Password**. You can create a Backup PIN as a safety measure in case you forget your screen lock.

Caution: Create or sign into a Google account before setting a screen lock and remember the Backup PIN you created when creating your screen lock.

WARNING

Precautions to take when using a screen lock.

It is very important to remember the screen lock you set. You will not be able to access your tablet if you use an incorrect screen lock 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your Pattern, PIN or Password:

< If you have forgotten your pattern >

If you logged in to your Google account on the tablet but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock.

If you have not created a Google account on the tablet or you forgot the Backup PIN, you have to perform a hard reset.

< If you have forgotten your PIN or Password >





If you forget your PIN or Password, you will need to perform a hard reset.







Caution: If you perform a hard reset, all user applications and user data will be deleted.

NOTE: If you have not logged into your Google Account and have forgotten your Pattern, you will need to enter your Backup PIN.

4. Using the Hard Reset (Factory Reset)

If your tablet does not restore to its original condition, use a Hard Reset (Factory Reset) to initialize it.


- 1 Turn the tablet off.
- 2 Press and hold the **Volume Down Key**  first, then press and hold the **Power/Lock Key**  on the right side of the tablet until the LG logo is displayed.
- 3 Release all of the keys when the LG logo is displayed.
- 4 Immediately press and hold the **Power/Lock Key**  + **Volume Down Key**  at the same time.

- 5 Release all keys when the Factory data reset screen is displayed.
- 6 Press either of the **Volume Keys**   to move the cursor to **Yes**, then press the **Power/Lock Key**  to continue.
- 7 Press either of the **Volume Keys**   to move the cursor to **Yes** once again, then press the **Power/Lock Key**  to confirm.
- 8 Your device will perform a hard reset.

 **WARNING**


If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

5. When the screen freezes

If the screen freezes or the tablet does not respond when you try to operate it: Press and hold the **Power/Lock Key**  for over 8 seconds until the LG logo is displayed to restart your tablet. If it still does not work, please contact the service center.

Getting to know your device

Tablet Overview

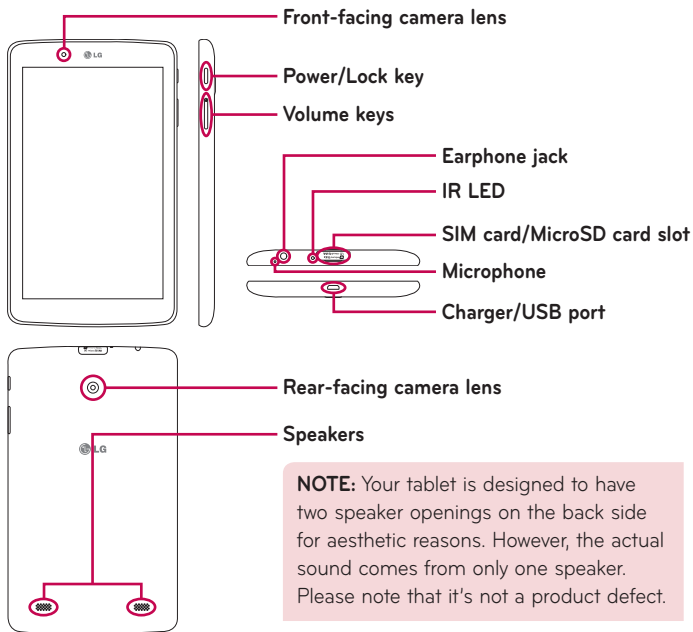



NOTE: Make sure that the microphone is not blocked when recording a video or audio clip.

Front-facing camera lens	Use to take pictures and record videos of yourself. You can also use this for video chatting. Keep it clean for optimal performance.
Power/Lock key	Press to lock/unlock the screen. Press and hold to turn the tablet on/off, restart it, activate/deactivate airplane mode, and change the sound settings.
Volume keys	Allow you to adjust the media volumes. Press and hold both keys at the same time to access the QuickMemo+ feature.
Earphone jack	Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.
Infrared (IR) LED	Used as a sensor for the QuickRemote app.
SIM card/MicroSD card slot	Allows you to insert your SIM card and a microSD card.
Microphone	Records your voice and allows use for voice-activated functions.
Charger/USB port	Allows you to connect the tablet and the USB cable for use with the charger adapter, your PC, or other compatible accessories.
Rear-facing camera lens	Use to take photos and record videos. Keep it clean for optimal performance.
Speakers	Use to listen to the audio from the selected function (e.g., music, videos, sound clips, etc.).

WARNING

Placing a heavy object on the tablet or sitting on it can damage the LCD and touch screen functions.

TIP!

- Tap the **Menu icon**  whenever you open an application to check what options are available.
- If the device is locked and does not work, press and hold the **Power/Lock Key**  for over 8 seconds until LG logo is displayed to restart your tablet.


Charging your tablet

A USB adapter, which is included with your tablet, is used to charge the battery. Before using your tablet for the first time, make sure the battery is fully charged.

NOTE: Your device has an internal rechargeable battery. For your safety, do not remove the battery incorporated in the product.

WARNING! If the touch screen does not function while the tablet's in the process of charging, this may be due to an unstable power supply. If this occurs, disconnect the USB cable from the device or unplug the USB adapter from the power outlet.

- 1 Connect the USB adapter and USB cable.
- 2 Plug the USB cable (as shown below) into the tablet's Charger/USB port.
- 3 Plug the charger into an electrical socket.

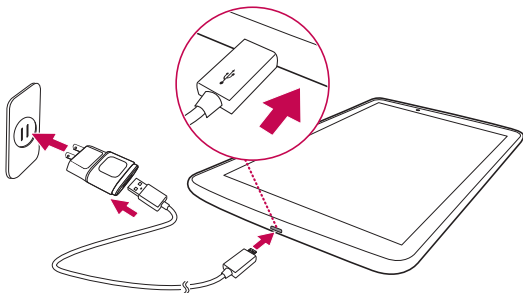

NOTE: The battery must be fully charged initially to improve battery lifetime.

Optimizing Battery Life



You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery



- Turn off radio communications that you aren't using, such as Wi-Fi, Bluetooth, or GPS.
- Lower screen brightness and set a shorter screen timeout.

- Turn off automatic syncing for Gmail™, Calendar, Contacts, and other applications.
- Some applications you have downloaded may cause your battery power to be reduced.
- While using downloaded applications, check the battery charged level.

To view the battery charge level

- 1 From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Battery**.
- 2 The battery status (charging or discharging) and level are displayed on the top menu of the screen.

To monitor and control what uses the battery


- 1 From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Battery** > **Battery usage**.
- 2 The screen displays battery usage time and also lists applications or services using battery power from greatest amount to least.

Installing the SIM card

- 1 To install the SIM card, locate and open the cover to the slot.
- 2 Place your fingernail in the cutout and gently pull out the SIM card tray.



NOTE: There are two slots underneath the cover (the other slot is for a microSD card).

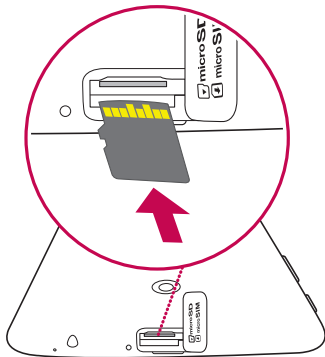NOTE: If you swap the SIM card, after inserting the SIM card you have to restart your tablet.



Removing the microSD card



To safely remove the microSD card from your tablet, first you need to unmount it.

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Storage** > **Unmount SD card**.
- 2 Open the microSD card tray and push the card in to release it.
- 3 Gently pull the microSD card from the slot.

WARNING! Do not remove the microSD card without unmounting it first. Otherwise, it may damage the microSD card as well as your tablet, and the data stored on the microSD card may be corrupted.


Formatting the microSD card

WARNING! All files stored on your microSD card are deleted when you format the card.


- 1 From the Home screen, tap **Apps**  > **Settings**  > **Storage**.
- 2 Tap **Erase SD card** (twice).
- 3 If you set an unlock pattern, enter it and tap **Erase everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your microSD card, the folder structure may be different after formatting since all the files will have been deleted.

Locking and unlocking the screen


If you do not use the tablet for a while, the screen will be automatically turned off and locked. This helps to prevent accidental touches and saves battery power. When you are not using the your tablet, press the **Power/Lock Key**  to lock your tablet.

If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. web access, data communications).

To wake up your tablet, press the **Power/Lock Key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

Turning the screen on using the KnockON feature

The KnockON feature allows you to double-tap the screen to easily turn the screen on or off.

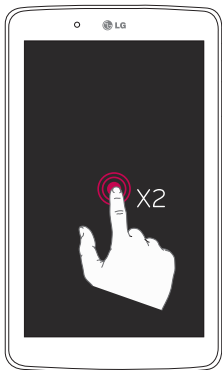



- Quickly double-tap the center of the screen to turn the screen on.
- Quickly double-tap the Status Bar, an empty area on the Home screen, or the Lock screen to turn the screen off.

Unlocking your screen using the Knock Code feature

The Knock Code feature allows you to create your own unlock code using a combination of knocks (or taps) on the screen.

- While the screen is off, tap the same sequence you established anywhere on the screen. The Home screen will be accessed directly.

To activate Knock Code feature

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Display** > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 This opens a screen that will guide you through how to select the unlock sequence. You have to create a backup PIN as a safety measure in case you forget your unlock sequence.

Your Home screen

Touch screen tips

Here are some tips on how to navigate on your tablet.

NOTE:

- To select an item, touch the center of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, yet firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Tap or touch

A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold

Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screen canvases by swiping from left to right (and vice versa).

Double-tap

Double-tap to zoom on a webpage or image. For example, quickly double-tap a section of a webpage to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when viewing a picture. Double-tap a word to highlight it. Double-tap can also activate the KnockON feature to turn the touchscreen on or off.

Pinch-to-Zoom

Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser, Maps, or when browsing pictures.


Rotate the screen

From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

Home screen

Simply swipe your finger to the left or right to view the panels. You can customize each panel with apps, downloads, widgets and wallpapers.

The Quick Keys are available at the bottom part of the Home screen and provide easy, one-touch access to the functions you use the most.

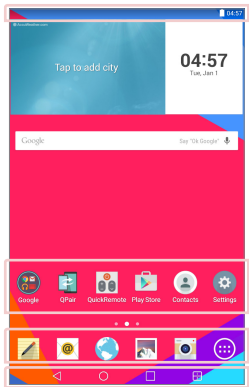

Status Bar – Shows device status information, including the time, Wi-Fi signal strength, battery status, and notification icons.

Application icons – Tap an icon (application, widget, folder, etc.) to open and use it.

Quick Keys – Provide easy, one-touch access to the functions used most often.

Dual window Key – Tap to change to dual window mode. It allows you to manage two different apps at the same time by splitting the screen in two.

Recent Apps Key – Tap to display recently used applications. You can also touch and hold it to display the Menu options in applications.

Home Key – Returns to the Home screen (or returns to your default Home screen canvas from any of the Home screen extension canvases). Touch and hold it to access Google Now.

Back Key – Returns to the previous screen. Also closes pop-up items such as menus, dialog boxes, and the on-screen keyboard. Touch and hold it to access Dual window.


Customizing the Home screen

You can customize your Home screen by adding apps, downloads, widgets or wallpapers. For more convenience using your tablet, add your favorite apps and widgets to the Home screen.

To add items on your Home screen:

- 1 Touch and hold the empty part of the Home screen.
- 2 Tap the **Apps** or **Widgets** tab.
- 3 Drag the desired item to the desired location and lift your finger.


To remove an item from the Home screen:

Touch and hold the icon you want to remove, drag it to , and lift your finger.

TIP! To add an application icon to the Home screen from the Apps screen, touch and hold the application you want to add and drag it to the desired location.

TIP! You can add several app icons in a folder. Drop one app icon over another one on a Home screen, and a folder will be created.


Opening, switching, and stopping apps


Tap  to display recently used applications. You can keep multiple apps running at the same time, and switch between several open apps. You can also manually stop apps from running.



Using Dual window

The Dual window feature splits the screen to enable multi-tasking, drag and drop interaction, auto-linking and recently used apps.

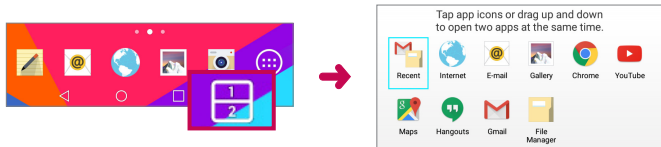


- 1 Touch  to split the screen or touch and hold the  until the app list is displayed.



- 2 Touch or drag an app icon to the desired space.
- 3 Tap  to display the following options. You can also drag the tabs to change the size of the windows.

	Switch two screens.
	Change the apps list.
	Full screen view.
	Close the apps.


To disable the Dual window feature



- 1 Tap  > **Apps**  > **Settings**  > **Dual window**.
- 2 Tap the Dual window switch to toggle it to **OFF OR ON**.

TIP! You can launch two **Internet** apps at the same time.

Customizing app icons on the Home screen

You can customize each application icon with images from your Gallery.

- 1 Touch and hold an application icon until it's unlocked from its current position. Then drop it on the screen. The editing  icon will appear in the upper right corner of the application.
- 2 Tap the application icon again and select the desired icon design and tap **OK**. Or tap **Add new** and adjust the icon size and select an image from your Gallery.

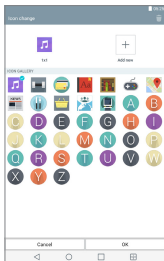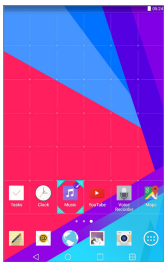


To view other Home screen panels

- Swipe (or flick) your finger left or right across the Home screen.
- Pinch in on the Home screen to display the mini panel view, then tap the Home screen panel you want to view.



Quick access


To view the quick access items, touch anywhere in the front key area and drag up. The following options are available: Google.

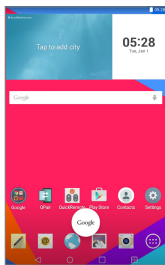

Notifications


Notifications alert you to the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as downloads.

From the Notifications Panel, you can view your tablet's current status and pending notifications. When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons showing things like Wi-Fi or battery strength on the right.

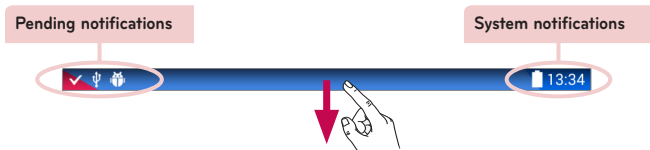


Accessing notifications

Swipe the Status Bar down to open the Notifications Panel and access notifications. To close the Notifications Panel, swipe the bar that is at the bottom of the screen upwards.

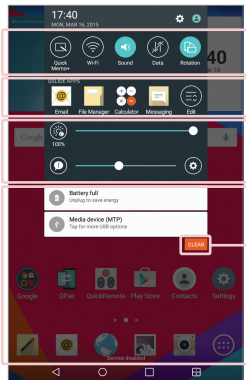

Quick Settings Bar – Swipe to the right or left to scroll through the list. Tap an icon to activate/deactivate the feature.

QSlide Apps – Tap a QSlide app to open as a small window on your screen. Tap  to remove, add, or rearrange QSlide apps.

Slide to the left and right to adjust the screen brightness and volume.

Clear Button – Tap here to clear your list of event-based notifications.



Tap a notification to open it.

Quick Settings on the Notifications Panel

Use the Quick Settings to easily toggle function settings like Wi-Fi. The Quick Settings are located at the top of the Notifications Panel.

NOTE: Touch and hold an icon in the Quick Settings Bar to view the function's settings menu.

To rearrange Quick Setting options on the Notification Panel

Open the Notifications Panel, swipe the Quick Settings to the left, and tap . To rearrange items, drag  to the desired location. To add more icons, checkmark the desired functions.

QSlide apps on the Notifications Panel

QSlide apps are displayed in a bar on the Notifications Panel below the Quick Settings Bar. These icons provide a quick, convenient way to multi-task on the same screen (similar to picture-in-picture on a TV). QSlide displays a small application window on the screen that can be moved, resized, or made transparent.




NOTE: You can remove the QSlide apps bar by tapping the QSlide icon in the Quick Settings bar.


















Using the QSlide apps

Tap any of the QSlide apps in the bar to activate it. When activated, the QSlide feature opens the application in a window in the foreground, allowing you to access other applications in the background. You can open up to two QSlide windows at a time.

Notification icons on the Status Bar

The icons listed in the table below are some of the most common ones.

Icon	Description
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset connected

	Bluetooth is on
	System warning
	Vibrate mode is on
	Silent mode is on
	Battery fully charged
	Battery is charging
	Content sharing is on
	Downloading data
	Uploading data
	An alarm is set
	GPS is on
	Data is syncing
	New Gmail message
	New Hangouts message
	A song is currently playing
	Tablet is connected to PC via USB cable
	Battery saver mode is on



Multiple Users

Only one tablet owner ID can be created, but multiple user IDs can be added so that others can log in and use the tablet independently. Each user can configure their own tablet settings, use their own storage space, and have their own app update privileges.



Tablet owner privileges

- Only the tablet owner ID can add a new user log in ID and remove user IDs.


Multiple tablet user limitations

- All users share the same battery, internal memory, and data usage with all of the other users.
- The language settings set by one user apply to all of the other users.
- Each user can configure and use only their own content and data (e.g., Home screen settings).
- Any user can accept updated app permissions on the behalf of all of the other users.
- Messages and scheduled calendar events will be sent to notify the specified user ID only.
- Once a user starts printing a document using Mobile Print, the print job will continue even if the user ID is changed.
- Data transfer, download, multimedia play, and communication services will stop if the user ID is changed. However, the data transfer through Play Store can be continued even if the user ID is changed.

To add a new user on your tablet


- 1 From the Home screen, tap **Apps**  > **Settings**  > **Users** > **Add user**.
- 2 Select the type of user you want to add.
 - **User:** Users have their own apps and content.
 - **Restricted user:** You can restrict access to apps and content from your account.
- 3 The setup wizard opens to help you add a new user. Touch **Set up now**.
 - After creating a new user, that person needs to go through the setup process upon their first login.

To switch users


- 1 Pull down the Status bar at the top of the screen.
- 2 Touch the user icon  to show user switching panel.
- 3 Touch one of the user icons on the screen. Choose from the owner name or any other user names you created.

QSlide


The QSlide function enables an overlay window on your tablet's display for easy multi-tasking. QSlide windows can be opened from the **QSLIDE APPS** bar on the Notifications panel, or directly from the applications that support the QSlide function.

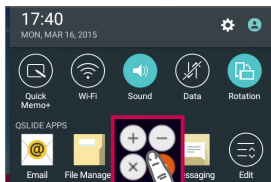

Open the Notifications Panel and tap the desired app from the **QSLIDE APPS** section.

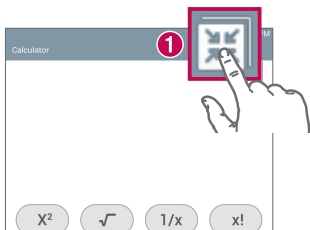







OR

While using an application that supports QSlide, tap . The function will be displayed continuously as a small window on your screen.

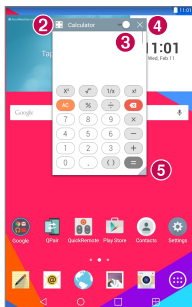Using QSlide

The QSlide function opens the associated app in a window in the foreground, allowing you to access other apps in the background. It's displayed continuously on the screen until you close it.





1		Tap to run QSlide.
2		Tap to exit QSlide and return to full window.
3		Tap to adjust the transparency.
4		Tap to close QSlide.
5		Tap to adjust the size.


NOTE: The QSlide function can support up to two windows at the same time. QSlide only supports the following applications: Video, Internet, Calendar, Email, File Manager, Calculator and Messaging.

Capturing a Screenshot

Press and hold the **Volume Down Key**  and **Power/Lock Key**  at the same time for 2 seconds to capture a screenshot of the current screen.

To view the captured image, go to **Apps**  > **Gallery**  > **Screenshots** folder.

Using QuickMemo+ to capture a screenshot


On the screen you want to capture, drag the Status Bar downward and select **QuickMemo+** .

OR

Press and hold both **Volume Keys**   at the same time.


Using Capture plus to capture a screenshot of the browser

This feature allows you to capture a portion of the screen in the default Internet browser.

- 1 Open the **Internet** app and navigate to the page you want to capture a screen shot of.
- 2 Tap the **Menu icon**  > **Capture plus**.
- 3 Adjust the blue box to the desired size, and then tap **Save**. The selected area is saved to the **Capture plus** folder in the Gallery.

Text Input Methods

The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the on-screen keyboard, simply tap a text field where you want to enter text.

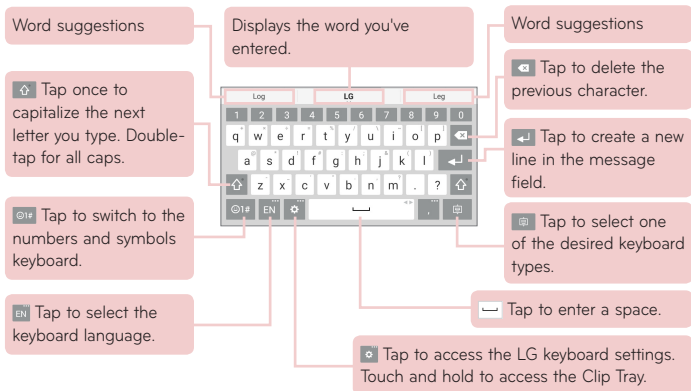

Enter suggested word using gesture control



Enter text on the keyboard and the related word suggestions appear. Tap or flick upward on the left side of the keyboard to select the left-side suggestion. Tap or flick upward on the right side of the keyboard to select the right-side suggestion.

Split keyboard using gesture


The split keyboard feature allows you to use both hands to type. Each half of the keyboard withdraws to the left and right of the screen.

To change the keyboard height

Adjust height of keyboard to show more of the screen and to control keyboard more easily.

- Tap  > **Keyboard height and layout** > **Keyboard height in portrait** > Tap and drag the icon  to adjust the keyboard height.

To change the bottom row keys

- Tap  > **Keyboard height and layout** > **QWERTY keyboard layout** > Tap and drag to add or delete keys or change the order.

NOTE: Only QWERTY, QWERTZ, AZERTY keyboards can be customized. This function dose not support some languages.

Entering special characters



The on-screen keyboard allows you to enter special characters (e.g. "á").

For example, touch and hold the desired key (for example, the "a" key). After the desired character appears, slide your finger over it and lift it off to enter it.


NOTE: A symbol at the top right corner of a key indicates that additional characters are available.

Using Clip Tray

Easily access the contents you stored in the Clip Tray whenever and wherever you want. You can copy images or texts and keep them in the Clip Tray. Then, you can paste them whenever and wherever you want.

- 1 Touch and hold text and images while viewing or editing them and tap Clip Tray.
- 2 Touch and hold the text input field and select **Clip Tray**. You can also access the **Clip Tray** by touching and holding  > .

NOTE:

- You can save up to 10 items in the Clip Tray.
- Access Clip Tray and tap , select the items you want to delete, then tap Done.
- This function may not be supported in downloaded apps.

Google account setup

When you first turn on your tablet, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

To set up your Google account

- Sign into a Google Account from the prompted setup screen.

OR

- From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Accounts & sync** > **Add account** > **Google**.

If you already have a Google account, enter your email address and tap **NEXT**. Otherwise, touch **OR CREATE A NEW ACCOUNT** and enter the necessary information to create a new Google Account.

Once you have set up your Google account on your tablet, your tablet automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your tablet. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your tablet.

Connecting to Networks and Devices




Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your tablet, you need to access a wireless access point or 'hotspot'. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your tablet to be able to connect to them. Turn off Wi-Fi when you're not using it to extend the life of your battery.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Wi-Fi**.
- 2 Tap  to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 3 Tap **Search** to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The Status Bar displays icons that indicate your Wi-Fi status.

Bluetooth




You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones and tablets.


NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your tablet with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Bluetooth**.
- 2 Tap the Bluetooth switch  to turn it on.
- 3 Tap the check box next to your tablet's name to make your tablet visible to other Bluetooth devices.

NOTE: To select the length of time that your device will be visible, tap the **Menu icon**  > **Visibility timeout**.

- 4 A list of available devices will be displayed. Tap the device you want to pair with from the list.

NOTE: Depending on the type of device, you may have to enter matching codes, confirm matching codes, or the devices may automatically pair.

5 Once pairing is successful, your tablet will connect to the other device.

NOTE: Your tablet doesn't support Handsfree Profile. Therefore, the use of call features with some of accessories, such as Bluetooth headsets or Bluetooth-enabled devices, may not be available for this device.

Send data using the Bluetooth feature

1 Open the item and tap .

OR

Touch and hold the item and select **Share**.

2 Tap **Bluetooth** to share via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth feature



1 Refer to the Bluetooth device's user guide to send a file to your tablet. Both devices must be paired and Bluetooth must be on.

2 Pair the devices and tap **Accept** when you receive a Bluetooth Authorization Request to accept the file(s).

SmartShare

You can use the SmartShare feature easily in the Gallery, Music apps, and others.

Enjoying the content via a variety of devices


You can share your tablet's content with a variety of devices. Tap  or tap  > **SmartShare** to share the content in the **Gallery**, **Music**, **POLARIS Office 5** apps.

Playing/Sending

Play – You can play the content via a TV, a Bluetooth speaker or etc.

Beam – You can send the content to the device of Bluetooth and SmartShare Beam supported.

- **SmartShare Beam** – This allows to transfer the content feature fast via Wi-Fi Direct.



Enjoying the content from Nearby devices

You can enjoy the content from nearby devices (i.e. PC, Mobile) in the Gallery and Music apps.

Connecting devices

Connect your device and other devices supported by DLNA in the same Wi-Fi network.

Searching other devices

Tap **Nearby devices**, then you can see the DLNA-supported devices. Connect to the device to view the content.

Using the content from the Cloud

You can use the content from the cloud (i.e., Dropbox) in the Gallery and Music apps.

Using the Cloud


NOTE: The supported features may vary depending on the cloud. Retrieving data may take some time depending on the cloud.

- 1 Select **Cloud** in the Gallery and Music apps.
- 2 Select the cloud what you want to use and log in.
- 3 You can use the content of the cloud after logging in.
- 4 Set the cloud settings to select the app to use the cloud.

QPair

By connecting your tablet and mobile phone via QPair, you can sync incoming calls, messages, and social networking notifications between your tablet and mobile phone.



- 1 Run **QPair**  and tap **Get started** > **Start** on your tablet first and then run the same steps on your phone.

TIP! QPair may not be pre-installed on the phone. Go to the Google Play Store and search for QPair and install it.

NOTE:

- QPair works with phones running Android 4.1 or later. Some features may be limited depending on your phone model.
 - Since QPair uses the Bluetooth function, it may not work normally if you change the Bluetooth settings while QPair is in use.
- 2 Bluetooth connection will be turned on automatically.

QPair features

Call notifications – Sends the tablet a notification when the phone receives a call. The notification displays the caller's number and allows you to answer and decline the call. You can also change call settings, such as a ringtone, ringtone volume, ringtone with vibration, or send a decline message when you get a call.

NOTE: You can only receive a call supported by Bluetooth technology. Dialing a call from the tablet using the QPair feature is not possible.

Message notifications – Sends the tablet a notification when the phone receives a message. You can also change message settings, such as message pop-up, message preview, notification sound, and notification vibration.

Social network notifications – Displays a social networking notification on your tablet's Status Bar when it arrives on your phone.

NOTE: To enable this feature, turn the **QPair social network notifications** option on your phone (**Settings > Accessibility > QPair social network notifications**). This option allows you to be notified of social networking notifications on your tablet.

QuickMemo+ transfer – Saves your current QuickMemo+ in the tablet's Gallery, and then syncs the tablet's Gallery with the Gallery on your phone.

Internet via phone – Automatically connects your tablet to the Internet through your mobile phone (as a Wi-Fi hotspot). Using this feature may incur data charges. To save data usage on the phone, the phone automatically connects to any trusted Wi-Fi hotspots within range.

PC connections with a USB cable

You can connect your tablet to your PC to charge it, transfer items to the PC from the tablet and vice versa.

Transferring music, photos and videos using the Media device (MTP) mode

- 1 Connect your tablet to a PC using a USB cable.
- 2 If you haven't installed the LG Android Platform Driver on your PC, you will need to manually change the settings. To change the settings, slide the Status Bar down and tap the current USB connection mode > **Media device (MTP)**.
- 3 You can now view the Media device content on your PC and transfer the files.

NOTE: If you want to change the PC connection settings, slide the Status Bar down and select the USB connection mode option. This setting is visible on the Status Bar only when you connect a USB cable to your tablet.

Synchronize with Windows Media Player

Ensure that Windows Media Player is installed on your PC.

- 1 Use the USB cable to connect the tablet to a PC on which Windows Media Player has been installed.
- 2 Select the **Media device (MTP)** option.
- 3 When connected, a pop-up window will appear on the PC. Select the Windows Media Player option to synchronize music files.
- 4 Edit or enter your device's name in the pop-up window (if necessary).
- 5 Select and drag music files to the sync list.

6 Start synchronization.

- The following requirements must be satisfied to synchronize with Windows Media Player.

Items	Requirement
OS	Microsoft Windows XP SP2, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

- If the Windows Media Player version is older than 10, install version 10 or newer.

PC connections with a USB cable for Mac OS X users


You can transfer media contents to your Mac OS X PC from the tablet and vice versa by setting up the Android File Transfer program.

- 1 Download and install the Android File Transfer program from android.com website for Mac Users (<http://www.android.com/filetransfer/>).
- 2 Connect your tablet to your computer, and double click the AFT (Android File Transfer program) application to start it up.
- 3 You can view the media contents, drag and drop the media file to and from the tablet (or PC).





Contacts

You can add contacts on your tablet and synchronize them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 From the Home screen, tap **Contacts**  to open your contact list.
- 2 Tap the **Search contacts** box and enter the contact's name. You can also tap a letter along the left side of the screen to access names starting with the chosen letter.


Adding a new contact


- 1 From the Home screen, tap **Contacts** .
- 2 Tap **New contact** . Select the desired account (if applicable).
- 3 If you want to add a picture to the new contact, tap . Choose from **Take photo** to take a picture using the camera or **Select from Gallery**. Then browse for an image and select it.
- 4 Tap  to enter more specific name information.
- 5 Enter the details about your contact.
- 6 Tap **Save**.

Favorite Contacts

You can classify frequently called contacts as favorites.

To add a contact to your favorites

- 1 From the Home screen, tap **Contacts**  to open your contacts.
- 2 Tap a contact to view its details.

3 Tap the star  to the right of the contact's name. The star turns gold and the contact is added to your favorites.

To remove a contact from your favorites list

1 From the Home screen, tap **Contacts**  to open your contacts.

2 Tap the **Favorites** tab to view your favorite contacts.

3 Tap a contact to view its details.

4 Tap the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

Creating a group

1 From the Home screen, tap **Contacts**  to open your contacts.

2 Touch the **Groups** tab, then touch .

3 Enter a name for the new group.

- Tap **Add members** to add contact entries to your new group.

4 Touch **Save** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.






Messaging

Your tablet combines text and multimedia messages into one intuitive, easy-to-use menu.

Conversation view

Messages exchanged with another party are displayed in chronological order and message threads so that you can conveniently see an overview of your conversations.

Sending a message



- 1 From the Home screen, tap **Apps** , tap **Messaging** , then tap **Compose**  to create a new message.
- 2 Enter a contact name or phone number in the To field. As you enter the contact name, matching message appear. You can tap a suggested recipient. You can also add multiple message.
- 3 Tap the text field to start entering your message.
- 4 Tap the **Menu icon**  to open the options menu. Choose from any of the available options.
- 5 Tap  to send your message.

WARNING! The 160-character limit may vary from country to country depending on how the text message is coded and the language used in the message.

If an image, video, or audio file is added to a text message, it will be automatically converted into a multimedia message and your service plan will be decremented accordingly.

Using smilies

Liven up your messages using smilies.

When writing a new message, tap  and choose a category on the toolbar at the bottom of the keyboard. You can also tap the **Menu icon**  > **Insert smiley**.

Changing your message settings

Your tablet's message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.


- From the Home screen, tap **Messaging**  > **Menu icon**  > **Settings**.

E-mail



You can use the Email application to read emails from services like Yahoo!, MSN, and AOL. The Email application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide you with the account settings you need.

Managing an email account

Tap the **E-mail**  on the Home screen. The first time you open the Email application, a set-up wizard opens to help you to set up an email account. After the initial setup, the contents of your inbox are displayed. If you have added more than one account, you can switch among accounts.


To add another email account:

- Open the **E-mail** application and tap the **Menu icon**  > **Settings** >  **Add account**.



To switch between accounts:

If you've added more than one account, you can easily switch between them. From any email folder, tap the current account (at the top of the screen), then tap the account you want to access.


To change an email general settings:

Open the **E-mail** application and tap the **Menu icon**  > **Settings** > **General settings** to configure settings that apply to all of your accounts. Tap an individual account to configure settings only for that particular account.




To delete an email account:

- Open the **E-mail** application and tap the **Menu icon**  > **Settings** > **Menu icon**  > **Remove account** > touch an account you want to delete > **Remove** > **Yes**.

Working with account folders

Open the **E-mail** application and tap the **Menu icon**  and select **Folders**. Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

- 1 While in the **E-mail** application, tap **Compose** .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts. Separate multiple addresses using semicolons.
- 3 Tap **Attach**  to attach files, if required.
- 4 Enter the subject and your message.
- 5 Tap **Send**  to send the message.

If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send will be stored in your Outbox folder until you connect to a network again. If it contains any pending messages, the Outbox will be displayed on the Accounts screen.

Receiving emails

When a new email arrives in your Inbox, you'll be notified by a sound or vibration (depending on your sound and vibration settings) and its notification icon appears on the Status Bar.

Entertainment

Camera

To open the Camera application, tap **Camera**  on the Home screen.


Getting to know the viewfinder








- 1 Clean view** – Touch to show or hide menus on the view finder.
- 2 Swap camera** – Switch between the back-facing camera lens and the front-facing camera lens. You can also switch the camera by swiping the screen.
- 3 Mode** – Allows to set the shot mode to **Auto** or **Panorama**.
- 4 Settings** – Touch this icon to open the settings menu.
- 5 Gallery** – Touch to view the last photo you captured. This enables you to access your Gallery and view saved photos while in camera mode.
- 6 Video mode** – Tap to start recording a video.
- 7 Capture** – Takes a picture.
- 8 Exit** – Touch to exit the camera.

NOTE: Please ensure the camera lens is clean before taking pictures.


Using the advanced settings

In the viewfinder, tap  to open the advanced options.

	Selects photo resolution. If you choose a high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.
	Take photos by voice command.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Displays grid lines on the screen to help you align your photos.
	Opens the help guide to know how a function operates.

TIP! When you exit the camera, some settings return to their defaults, such as timer. Check these before you take your next photo.

Taking a photo


- 1 Open the **Camera** application.
- 2 Point the lens towards the subject you want to photograph.
- 3 Touch  to capture the photo. You can also capture the photo by touching anywhere on the screen on **Clean view** mode.

To zoom in or out

When taking a picture or recording a video, place two fingers anywhere on the screen and spread them apart to zoom in. To zoom back out, pinch them together.

Gesture shot

The Gesture shot feature allows you to take a picture with a hand gesture using the front camera. To take photo, raise your hand, with an open palm, until the front camera detects it and a box appears on the screen. Then close your hand into a fist and a timer will start, allowing you time to get ready.

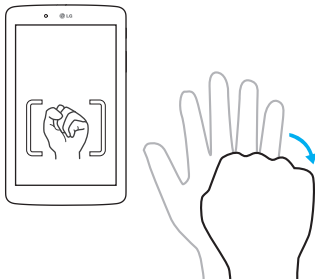

Once you've taken a photo





- 1 Tap the image preview by the gallery button to view the last photo you captured.
- 2 Tap **Gallery**, then tap **OK**.



Touch to edit the photo.



Touch to take another photo immediately.

	Touch to send your photo to others or share it via social networking services.
	Touch to delete the photo.
	Touch to access more options.
	Touch to add the picture to your favorites.

TIP! If you have a social networking account and set it up on your tablet, you can share your photo with your social networking community.

Touch the **Menu icon**  to open the following options.

SmartShare – Touch to share your photo using the SmartShare function.

Set image as – Touch to use the photo as a **Home screen wallpaper**, **Contact photo**, **Lock screen wallpaper** or **Wallpaper**.

Move – Touch to move the photo to another album.

Copy – Touch to copy the selected photo and save it to another album.

Copy to Clip Tray – Touch to copy the photo and store in the Clip Tray.

Slideshow – Automatically shows you the images in the current folder one after the other.

Rotate left/right – Touch to rotate the picture to the left or right.

Crop – Crop your photo. Move your finger across the screen to select the area to be cropped.

Add location – To add the location information.



Rename – Touch to edit the name of the selected photo.

Print – Allows you to print the picture.



Details – Displays more information about the picture.

Viewing your saved photos



You can access your saved photos when in camera mode. Just tap the image preview by the gallery button and your Gallery will be displayed.

- 1 Choose the app to use to view and/or edit your photos. Tap **Gallery**  or **Photos** .
- 2 Tap **OK**.
 - To view more photos, scroll left or right.
 - To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer together to zoom out).

Recording a video


- 1 Open the **Camera** application.
- 2 Point the lens towards the subject you wish to capture in your video.
- 3 Touch the Video mode icon  to start recording.
- 4 A timer showing the length of the video will appear.
- 5 Touch  on the screen to stop recording.

TIP!

- Tap  to pause the recording.
- Tap  to take a screen shot while recording a video.

Watching your saved videos

Access your saved videos from video camera mode by tapping the image preview by the gallery button.

- 1 In the viewfinder, tap the image preview by the gallery button.
- 2 Your **Gallery** will appear on the screen with your most recent recorded video displayed. Swipe to the left to scroll to your other videos.
- 3 Tap the Play icon  on a video to play it automatically.

NOTE: You can view your videos in the Gallery and Photos apps.

NOTE: Do not to press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

Gallery

You can store multimedia files in internal memory for easy access to all your multimedia files. Use this application to view multimedia files like pictures and videos.


From the Home screen, tap **Apps**  > **Apps** tab > **Gallery** .

You can manage and share all your image and video files with the Gallery.

NOTE:





- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.
- If the file size exceeds the available memory, an error can occur when you open files.

Viewing pictures

Launching the **Gallery** app  displays your available folders. When another application, such as Email, saves a picture, the Downloads folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Tap a folder to open it.

Pictures are displayed in order by creation date. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Playing videos



Open the **Gallery** app  and select an album. The Play icon  is displayed on video files. Tap an image to select it. Select the app to play it (tap the **Photos** app  or the **Video** app ) , then tap **OK** and the video begins playback.

NOTE:


- When using the Videos app to play a video, slide the left side of the screen up and down to adjust the screen brightness. Slide the right side of the screen up and down to adjust the volume.
- When using the Videos app to play a video, slide the screen left or right to rewind or fast-forward.

Deleting images and videos

Use one of the following methods:


- In a folder, tap  and select the photos and videos you want to delete, then tap **Delete**, the **Yes** to confirm.
- When viewing a photo or video, tap , then tap **Yes** to confirm.

Setting as wallpaper

When viewing a photo, touch the **Menu icon**  > **Set image as** and select **Home screen wallpaper**, **Lock screen wallpaper** or **Wallpaper**.

Slideshow

You can view your photos in a slideshow by album or by selecting all of your photos. From the Home screen, tap **Gallery** .



- Tap the album with the photos you want to view, then tap the **Menu icon**  > **Slideshow** > choose the images you want to view > **Next** > verify the slideshow settings > **Start**.


Tap the center of the screen to stop playing the slideshow.






Video



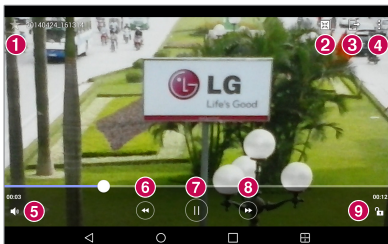

Your Gallery has an integrated video player that lets you play all of your favorite videos.

Playing a video


- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Gallery**  > **Video**.
- 2 Select the video you want to play.



1 	Touch to add the video to your favorites.
2 	Touch access QSlide and display the video in small window.
3 	Touch to share your video via the SmartShare function.
4 	Touch to access more options.
5 	Touch to manage the video volume.



6 	Touch and hold to rewind in 3 second increments. Tap once to rewind 10 seconds.
7 	Touch to pause video playback.
8 	Touch and hold to fast-forward in 3 second increments. Tap once to fast-forward 10 seconds.
9 	Touch to lock/unlock a video screen.

To change the volume while watching a video, press the Volume Keys on the right side of the tablet.

Tap **Gallery** >  (in the upper left corner of the title bar) > **Videos**, then touch and hold a video in the list to access the following options: **Share**, **Delete**, **Trim**, **Rename** and **Details**.

TIP! While watching a video, slide up and down along the left side of the screen to adjust the screen brightness. Slide up and down along the right side of the screen to adjust the volume.



Music


Your tablet has a music player that lets you play all your favorite tracks. To access the music player, from the Home screen, tap **Apps**  > **Apps** tab > **Music** .







Transfer music using Media device (MTP) mode

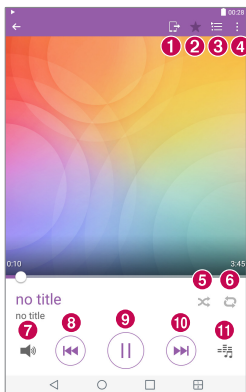




- 1 Connect the tablet to your PC using the USB cable.
- 2 Select the **Media device (MTP)** option. Your tablet will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.

Playing a song

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Music** .
- 2 Touch the **Songs** tab.
- 3 Select the song you want to play.



	Touch to share your music via the SmartShare function.
	Touch to set the current song as a favorite.
	Touch to see the Now playing playlist.
	Touch to access more options.
	Touch to set shuffle mode.
	Touch to set repeat mode.

7		Touch to manage the music volume.
8		Touch to go back to the beginning of the song. Touch twice to return to the previous song. Touch and hold to rewind 3 seconds.
9		Touch to pause playback.
10		Touch to skip to the next track on the album or in the playlist. Touch and hold to fast-forward 3 seconds.
11		Touch to set the audio effect.

To change the volume while listening to music, press the Volume Keys on the right side of the tablet.

Touch and hold any song in the list to access the following options:

Play, Add to playlist, Delete, Share, Details and Search.




NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.
- Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

QuickMemo+






The QuickMemo+ feature allows you to create memos and capture screen shots. Capture screens, draw on them, and share them with family and friends with QuickMemo+.






Creating a memo

- 1 From the Home screen, tap **QuickMemo+** , then tap  to create a new memo.
- 2 You can edit texts by typing words directly or select the pen type and color you want to use and enter text by handwriting.
- 3 Add a reminder by touching  to set the reminder notification for the event.
- 4 Add weather and location information to your memo if a data network is available.


Using the QuickMemo+ options

The following options are available in the QuickMemo+ toolbar at the top of the screen.

	Touch to open the memo in QSlide.
	Allows you to undo and redo previous actions.
	Allows you to edit the text, its color and its alignment.
	Allows you to enter text by handwriting. You can select the type of pen to use and its thickness, transparency, and color.
	Erases edits you've made to the memo.



	Saves the memo in QuickMemo+.
	Touch to access more options.
	Allows you to set a reminder notification for an event.
	Allows you to insert weather information into the memo.
	Allows you to add location information using GPS.


Capturing a screen shot for your QuickMemo+

- 1 To access the QuickMemo+ feature, slide the Status Bar downwards and touch .

OR

Press both of the **Volume Keys** at the same time for one second.

- 2 Select the desired menu option from the toolbar and create a memo.
- 3 Tap  to save the memo. To exit QuickMemo+ at any time, tap the **Back Key** .

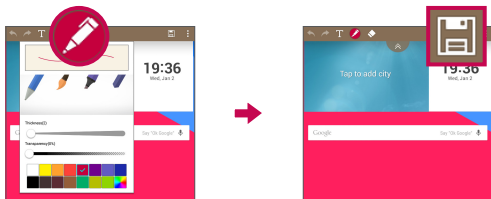






NOTE: Please use a fingertip while using the QuickMemo+. Do not use your fingernail.

QuickRemote

QuickRemote turns your tablet into a Universal Remote for your home TV, Blu-ray or DVD.


NOTE: QuickRemote may not be available for some devices and areas.

To open and configure QuickRemote

- 1 From the Home screen, tap the **Apps**  > **Apps** tab > **QuickRemote** . You can also perform the initial set up of your QuickRemote from the Notifications Panel. Swipe the Status Bar downward, tap the **QuickRemote** icon , then tap **ADD REMOTE**.
- 2 Touch  **Living room** to select a room type and touch  to add the device.
- 3 Select the type and brand of device, then follow the on-screen instructions to configure the device(s).

NOTE: The QuickRemote operates the same way as an ordinary infrared (IR) remote control in your region or country. Be careful not to cover the infrared sensor at the top of the tablet when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.


Using QuickRemote

- 1 Open **QuickRemote**  and choose the room where you configured the remote.
- 2 Select the remote you want by tapping its type/name on the QuickRemote bar along the left side of the screen.

3 Tap the buttons on the displayed remote.

NOTE: When adding the TV remote control, QuickRemote can use the INPUT button to configure appropriate remote control. When configuring the INPUT button, the TV input source can be changed. To reset the TV input source, tap the INPUT button on QuickRemote several times (depending on the number of devices connected to the TV).




QuickRemote options


To access the QuickRemote options menu, tap the **Menu icon**  to select the desired option.

NOTE: While playing music in the background, pressing any QuickRemote button will mute the sound for a second.

Clock



Setting your alarm

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Clock**  > .
- 2 Set the desired alarm time.
- 3 Set **Repeat**, **Snooze duration**, **Alarm with vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**.
- 4 Touch **Save**.



NOTE: To change alarm settings in the alarm list screen, touch the **Menu icon**  and select **Settings**.

Calculator

Using your calculator

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Calculator** .
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, × or ÷) followed by =.




NOTE:

- For more complex calculations, touch the **Menu icon** , select **Scientific calculator**, then choose the desired function.
- To view the calculation history, tap **Menu icon**  > **Calculation history**.

Calendar

Events from each account you've added to your tablet and configured to synchronize calendars is displayed in your Calendar.


Adding an event to your calendar

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Calendar** .
- 2 Tap the menu at the top left corner to change the calendar view (Day, Week, Month, Year, Agenda).
- 3 Tap the date you wish to add an event to and tap .
- 4 Touch the **Event name** field and enter the event name.
- 5 Touch the **Location** field and enter the location. Check the date and enter the time you wish your event to start and finish.

- 6 If you wish to add a note to your event, touch the **Description** field and enter the details.
- 7 If you wish to repeat the alarm, set **REPEAT** and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.




NOTE: Touch and hold a spot on the calendar to quickly save a calendar event on that date. Simply enter the event name and time, then tap **Save**. You can tap **Details** and enter more information, or update the event with additional details later.

To change your calendar view

No matter where you're in the Calendar app, you can easily switch calendar views. Simply tap  in the upper left corner of the title bar, or on the left side of the screen swipe your finger from left to right to display a menu of calendar views. Tap **Day**, **Week**, **Month**, **Year**, or **Agenda**.

Tasks

The Tasks app can be synchronized with your MS Exchange account. You can create and manage your tasks using your tablet or from MS Outlook or MS Office Outlook Web Access.

- 1 From the Home screen, tap **Apps**  > **Tasks** .
- 2 Tap the **Add** task icon  (in the upper-right corner of the screen).
- 3 Enter the **Subject**, **START DATE**, **DUE DATE**, **DESCRIPTION**, **REPEAT** and **REMINDER** as necessary.
- 4 Tap **Save**.

File Manager

The File Manager application allows you to manage files in your internal/external storage.








File Manager makes it easy to view and manage your files. Simply tap a file type (All files, Music files, Image files, Video files, Document files, or Cloud files), then tap on the necessary folders to find your files.

To open the File Manager application

- From the Home screen, tap **Apps**  > **Apps** tab > **File Manager** .

File Manager Options

Open the **File Manager** app > **All files** > **Internal storage** to access to the following options (at the top of the screen):


	Allows you to open File Manager in a QSlide window.
	Allows you to search for your files or information.
	Allows you to create a new folder.
	Allows you to move files and folders to another location.
	Allows you to copy files and folders to another location.
	Allows you to delete files and folders.
	Allows you to access more options.

Voice Recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

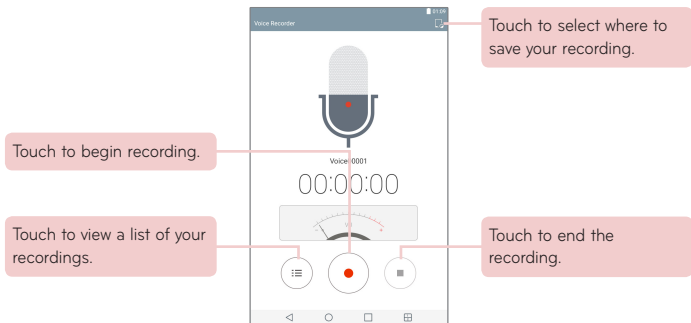

- From the Home screen, tap **Apps**  > **Apps** tab > **Voice Recorder** .



NOTE: The available recording time may differ from actual recording time.

Managing your Voice memos



From the Voice Recorder list screen:

- Tap the **Share** icon  to share the voice memo using the available choices.
- Tap the **Delete** icon  to select the voice memo(s) you want to delete.
- Touch and hold a voice memo to open a context menu to select **Share**, **Delete**, **Rename**, **Trim**, or **Details**.



POLARIS Office 5

POLARIS Office 5 is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere or anytime, using their mobile devices.

To create a new document


- 1 From the Home screen, tap **Apps**  > **Apps** tab > **POLARIS Office 5** .
- 2 Register your email address on the Registration page.

NOTE: You can tap **Skip** to ignore the registration information.

- 3 Tap  to start a new document.
- 4 Tap a document type from the drop-down list, then choose a template.
- 5 Enter contents in the document using the tools at the top of the screen and the on-screen keyboard.
- 6 When you're done working on the document, tap  (in the top left corner of the screen), then tap **Save** (or **Save as** to enter a new document name) to save.
- 7 Enter the document name and touch **Save**.

To view and edit a document on your device

You can now easily view and edit a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices.

- 1 Open **POLARIS Office 5** and search for a document.
- 2 Touch the document that you want to view or edit.
When viewing documents using POLARIS Office 5, the objects and layout remain the same as in the original documents.
- 3 To edit the document, tap .

Google+

Use the Google+ app to stay connected with people via Google's social network service.




From the Home screen, tap **Apps**  > **Apps** tab > **Google**  > **Google+** .


NOTE: This application may not be available depending on the region or service provider.


LG SmartWorld

LG SmartWorld offers an assortment of exciting content – fonts, themes, games, applications.

How to Get to LG SmartWorld from Your Tablet

- 1 Tap  > **Apps**  > **Apps** tab > tap the  icon to access LG SmartWorld.
 - 2 Tap **Sign in** and enter ID/PW for LG SmartWorld. If you have not signed up yet, tap **Register** to receive your LG SmartWorld membership.
 - 3 Download the content you want.
- LG SmartWorld may not be available for all carriers or in all countries.

NOTE: What if there is no  icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your Country/Language.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

Special benefit only in LG SmartWorld









- 1 Decorate your own style on your tablet by personalizing it with Home themes, keyboard themes, and fonts provided on LG SmartWorld. (However, this service is available only to specific devices. Please check the LG SmartWorld website to check availability).
- 2 Enjoy LG SmartWorld's special service by joining promotions that are consistently provided.

The Web


Internet

Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your tablet wherever you are and whatever you enjoy.


From the Home screen, tap **Apps**  > **Apps** tab > **Internet** .

	Tap to run QSlide.
	Tap to go back one page.
	Tap to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you touch the Back Key  , which takes you to the previous page.
	Tap to refresh or stop the current page.
	Tap to go to the Home page.
	Tap to access your bookmarks.
	Touch to access more options.



Opening a page

- To open a new page, tap  at the top of the browser.
- To go to another web page, tap a tab at the top of the screen to view the page.

Bookmarks

To open a bookmarked web page, tap  on the browser toolbar and select one.

History

Tap  on the browser toolbar and select the **History** tab to open a web page from the list of recently-visited web pages. To clear the history, tap  to clear all history.

Using Reader mode



Your tablet can display simplified web pages for easier reading.

View news or blog posts and other article pages easily with no distractions – with Reader mode, you can read a clutter-free page.

Tap  on the URL web address bar to activate Reader mode.

Using QSlide

Use this feature to access the Internet without closing the current application.

While viewing content on the browser, tap . You can then browse other information on your tablet. To view the browser in full screen, tap .

Download files

Use the Downloads app to see what files have been downloaded.

From the Home screen, tap **Apps**  > **Apps** tab > **Downloads** .


Chrome

Use Chrome to search for information and browse web pages.


From the Home screen, tap **Apps**  > **Apps** tab > **Chrome** .

NOTE: This application may not be available, depending on your region and service provider.


Viewing web pages

Tap the address field (at the top of the screen), enter a web address or search criteria, and tap  on the keyboard.

Opening a page

- To go to a new page, tap  at the top of the browser.
- To go to another web page, tap a tab at the top of the screen to select the page.


Searching the web by voice

Tap the address field, tap , speak a keyword and select one of the suggested keywords that appear.

NOTE: This feature may not be available depending on the region or service provider.


Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.


To view open tabs on other devices, tap the **Menu icon**  > **Recent tabs**. You must be signed in to the same Google account on all devices. Select a web page to open.

Adding and viewing bookmarks

To add bookmarks, tap  in the URL bar.

To open a bookmarked web page, tap the **Menu icon**  > **Bookmarks** and select the desired page.

Chrome Options menu

Tap the **Menu icon**  to access the following options.


- **New tab** – Tap to open a new web page tab.
- **New incognito tab** – Tap to open a new incognito tab.
- **Bookmarks** – Displays your bookmarked web pages.
- **Recent tabs** – Displays your open web pages on other devices.
- **History** – Displays your browsing data (web pages you've visited).
- **Share...** – Allows you to share the web page.
- **Print...** – Tap to print the web page. Choose to automatically find a printer on your network, or manually enter one to use.
- **Find in page** – Allows you to search for text on the current web page.
- **Add to home screen** – Allows you to add a shortcut to the current page on your Home screen.
- **Request desktop site** – Checkmark to access the desktop site when you view web pages on your tablet.
- **Settings** – Allows you to change the settings specific to the Chrome app.
- **Help & feedback** – Displays information about using the Chrome app on your tablet and allows you to provide feedback to Chrome developers.

Settings

Access the Settings menu

1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings** .

OR

From the Home screen, touch and hold the **Recent Apps Key**  > **System settings**.

2 Select a setting category and set the desired option.

WIRELESS NETWORKS

Wi-Fi

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

A list of all available Wi-Fi networks will be displayed. Tap one to connect to it.

NOTE: Tap **Search** to scan for available Wi-Fi networks.

Tap the **Menu icon**  in the Wi-Fi menu to access the following options.

Add Wi-Fi – Allows you to manually enter a new Wi-Fi network.




Saved Wi-Fi – Allows you to forget saved Wi-Fi network.

Advanced Wi-Fi – Accesses the advanced Wi-Fi settings.

Interactive tutorial – Displays some useful tutorials for the Wi-Fi function.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your tablet in the router.

You can find the MAC address in the following user interface: From the Home screen, tap **Apps**  > **Settings**  > **Wi-Fi** > **Menu icon**  > **Advanced Wi-Fi** > **MAC address**.

Bluetooth

Turn the Bluetooth wireless feature on or off to use Bluetooth. Turning Bluetooth on allows you to pair and connect to other Bluetooth devices.

Tap the **Menu icon**  in the Bluetooth menu to access the following options.

Edit tablet name – Changes your tablet name for easy identification when pairing and connecting. Enter your new tablet name, then tap **Save**.

Visibility timeout – Sets the amount of time other Bluetooth devices can see your tablet for pairing and connection. Choose from **2 min**, **5 min**, **1 h**, and **Never time out**.

Received files – Displays a list of your Bluetooth received files.

Interactive tutorial – Displays some useful tutorials about Bluetooth features.

Help - Information about bluetooth connectivity.

Mobile data

Displays the data usage during the chosen periods of time. Tap an app from the list to view the app's data usage.

Share & connect

Allows you to configure various options for sharing data and connecting with other devices.

SmartShare Beam – Allows you to receive multimedia content from LG phones or tablets.

NOTE: You must enable Wi-Fi to activate SmartShare Beam.

Media server – Share media content with nearby devices via DLNA.

Miracast – You can mirror phone screen and sound onto LG Miracast dongle or TV wirelessly.

NOTE: To start the Miracast feature quickly, tap the Miracast icon in the Notification Panel. While mirroring, Mobile Hotspot cannot be used simultaneously.

LG PC Suite – Allows you to use LG PC Suite to transfer music and images between a computer and your tablet.

Tethering & networks

Allows you to connect other devices to tablet to use the Internet or set the networks settings.

USB tethering – Allows you to turn on USB tethering and connect other devices to share your data.

Wi-Fi hotspot – Allows you to turn on Wi-Fi hotspot and connect other devices to phone via Wi-Fi.

Bluetooth tethering – Allows you to turn on Bluetooth tethering and connect other devices to tablet via bluetooth.

Help – Allows you to know the informations of the USB tethering, Wi-Fi hotspot and Bluetooth tethering.

Airplane mode – Allows you to turn off all wireless connections such as Wi-Fi and Bluetooth.

Mobile networks – Allows you to set whether to enable or disable data access on your tablet.

VPN – Allows you to set up and manage Virtual Private Networks(VPNs).

DEVICE

Sound

Sound profile – Allows you to set the sound profile to **Sound, Vibrate only** or **Do not disturb**.

Volume – Manage the volume for **Notification sound, Touch feedback & system,** and **Music, video, games & other media.**

Vibration strength – Allows you to set the vibrate strength for calls, notifications, and touch feedback.

Notification sound – Allows you to set your default notification ringtone.

Do not disturb – Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.

Lock screen – Allows you to choose if you want to show or hide notifications on the lock screen.

Apps – Allows you to prevent apps from displaying notifications or set apps to show notifications with priority when Do not disturb is set to Priority only.

Touch sound – Allows you to set your tablet to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sound – Allows you to set your tablet to play a sound when locking and unlocking the screen.

Vibrate on tap – Allows you to set the vibration feedback when the tablet screen is touched.

Display

Home screen

Theme – Sets the screen theme for your device.

Wallpaper – Sets the wallpaper to use on your Home screen.

Screen swipe effect – Sets the effect when you swipe to change screens.

Allow Home screen looping – Checkmark to set the Home screens to scroll continuously, eliminating the need to scroll back in the opposite direction when you reach one end.



Home backup & restore – Allows you to backup and restore app and widget configurations and themes.

Help – Displays information about the Home screen.

Lock screen

Select screen lock – Set a screen lock type to secure your tablet.

NOTE: After upgrading to Lollipop OS, your screen lock may not be available except for Pattern, PIN and Password.

In this case, go to **Apps**  > **Settings**  > **Security** > **Clear credentials** to delete the security certificates, and then, set up a screen lock.

Be careful when you clear credentials because all the security certificates you have installed will be deleted.

Smart Lock – Sets to keep your tablet unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognizes your face.

Screen swipe effect – Sets the screen swipe effect options.

Wallpaper – Sets your Lock screen wallpaper. Select it from **Gallery** or **Wallpaper gallery**.

Shortcuts – Allows you to change the shortcuts on the Swipe Lock screen.

Owner info – Allows you to enter contact info to be displayed on the Lock screen in case the tablet is lost.

Lock timer – Sets the amount of time before the screen automatically locks after the screen has timed-out.


Power button instantly locks – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the Security lock timer setting.

Brightness – Adjust the screen brightness. Touch **Night brightness** to set the brightness to 0% automatically between the hours of 12:00 am - 6:00 am.

Screen timeout – Set the time delay before the screen automatically turns off.

Screen-off effect – Sets the screen-off effect used when the screen turns off.

Auto-rotate screen – Set to switch orientation automatically when you rotate the tablet.

Daydream – Tap the Daydream switch  to toggle it On or Off. On allows the set screen saver to be displayed when the tablet is sleeping while docked and/or charging. Choose from **Clock** and **Google Photos**.

NOTE: Charging might be slow while the screen saver is on.

Font type – Change the type of display font.

Font size – Change the size of the display font.

Smart screen – Keeps the screen on when the device detects your face.

Home touch buttons – Allows you to set which Home touch buttons are displayed and their position on the bar. You can also select the color and the background.

Motion sensor calibration – Allows you to improve the accuracy of the tilt and speed of the sensor.

Storage

INTERNAL STORAGE – Displays the total amount of space in the device's memory and lists what type of data is using up space.

SD CARD – Displays the total amount of memory space on the microSD card.

Mount/Unmount SD card – Mounts and unmounts the microSD card from your tablet so that you can access the data stored in it, format the card, or safely remove it. This setting is dimmed if there's no microSD card installed, if you've already unmounted it, or if you've mounted the microSD card on your computer.


Erase SD card – Permanently erases everything on the microSD card and prepares it for use with your tablet.

Battery

BATTERY INFORMATION – See how much battery power is used for device activities. The battery level displays in a percentage. The remaining time of use is also displayed.

Battery usage – Displays battery usage.

Battery percentage on status bar – Displays the battery percentage on the Status Bar.

Battery saver – Manage the battery for the power saving items. Tap the switch  to turn this feature on. Tap **Battery saver** for the following options.

- **TURN BATTERY SAVER ON:** Set the battery level at which you want Battery saver to turn on. Choose from Immediately, 5% battery and 15% battery.

Help – Touch to access some tips for Power saver.

Smart cleaning

You can manage the unused apps, saved files or temporary internet files.

Apps

Display the list of applications such as currently running or downloaded.

Swipe left and right to view one of the three tabs across the top of the screen to view detailed information for **DOWNLOADED, ON SD CARD**, **RUNNING**, and **ALL** applications.

Tap an entry to view more information, tap **Force stop** (or **Stop**), then **OK** to stop it from running.

Default message app

You can choose the default message app.

Dual window

Split view – Allows the device to automatically open Dual window when you tap a link on the full screen or tap an e-mail attachment (images only).

Help – Displays help information about using the Dual window feature.

PERSONAL

Cloud

Tap **Add account** to add a cloud account. You access your cloud accounts from this menu. Tap the **Menu icon**  to upload files.

Users

This menu displays the current users you've created.

Add users when tablet locked – Allows you to add a new user when your tablet is locked.

Add user – Allows you to add new account for the tablet and use the Multi-user feature.

Location

Mode

- **High accuracy (GPS and networks)** – Use GPS and Wi-Fi networks to estimate location.
- **Battery saving (Networks only)** – Use Wi-Fi networks and mobile networks to estimate location.
- **Device sensors only (GPS only)** – Use GPS to pinpoint your location.

RECENT LOCATION REQUEST – Displays apps that have recently requested your location information.

Camera – Allows the device to tag photos and videos with their locations.

Google Location Reporting – Allows you to view your Google location settings.

Security

Encrypt tablet – Allows you to encrypt data on the tablet for security. You will be required to enter a PIN or password to decrypt your tablet each time you power it on.

Encrypt SD card storage – Allows you to encrypt data on the MicroSD for security.

Set up SIM card lock – Set up Micro-USIM card lock or change the Micro-USIM card PIN.

Password typing visible – Shows the last character of the hidden password as you type.

Tablet administrators – View or deactivate tablet administrators.

Unknown sources – Allows installation of apps from non-Play Store applications.

Verify apps – Disallow or warn before installation of apps that may cause harm.

Storage type – Displays the storage type for certificates.

Trusted credentials – Displays trusted CA certificates.

Install from storage – Choose to install encrypted certificates.

Clear credentials – Remove all certificates.

Trust agents – View or deactivate Trust agents.

Screen pin – This feature allows you to lock your device so that the current user can only access the pinned app. This is useful for users with children.

App usage access – Allows to view usage info of apps.

Accounts & sync

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deactivating **Auto-sync data** can save battery power and lower (but not eliminate) data usage.

Language & input

Use the Language & input settings to select the language for the text on your tablet and to configure the on-screen keyboard, including words you've added to its dictionary.

Backup & reset

Back up my data – Set to backup your settings and application data to the Google server.

Backup account – Set the account to which you want to backup data to.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

LG Backup service – Backs up all information on the device and restores it in the event of data loss or replacement.

- **Copy & receive data** – Allows you to transfer data such as contacts, photos, and music between devices.
- **Backup and restore** – Allows you to make keeping data safe.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the tablet this way, you are prompted to re-enter the same information as when you first started Android.

SYSTEM

Shortcut key

Allows you to turn the Shortcut keys on and off.


Date & time

Use Date & time settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

Accessibility


Use the Accessibility settings to configure accessibility plug-ins you have installed on your tablet.

NOTE: Requires additional plug-ins to become selectable.

TalkBack – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback. Tap the TalkBack switch  at the top right corner of the screen to turn it on. Tap **Settings** at the bottom of the screen to adjust the TalkBack settings.

Font size – Checkmark to adjustment the size of the text.

Invert colors – Checkmark to invert the colors of the screen and content.

Color adjustment – Sets to view the screen with greater color contrast. Tap the switch  to turn it on. Then tap the screen and drag across the screen in any direction until you see the color contrast you want to use.

Touch zoom – Allows you to zoom in and out by triple-tapping the screen.

Screen shade – Dims the screen's backlight.


Accessibility shortcut – Activate this feature to allow you to quickly enable accessibility features.

Text-to-speech output – Sets the text-to-speech preferred engine and speech rate setting. Also plays a short demonstration of speech synthesis. The default language status is also displayed.

Audio type – Sets the audio type. Choose **Mono** or **Stereo**.

Sound balance – Sets the audio route. Move the slider on the slide bar to set it.




Turn off all sounds – Turns off all sounds.

Captions – Allows to customize caption settings for those with hearing impairments. Tap the switch  to turn this feature on. Set the language, Font size, and caption style options as desired.

Touch feedback time – Sets the touch and feedback time. Choose from **Short**, **Medium**, and **Long**.

Touch assistant – Show a touch board with easy access to common actions.

Screen timeout – Sets the amount of time before the screen turns off.

Touch control areas – Tap the switch  to turn this feature on. Allows you to limit the touch control to selected areas of the screen. Press the **Volume Down Key**  and **Home Key**  at the same time to activate and deactivate the feature.

Auto-rotate screen – Checkmark to allow the device to rotate the screen depending on the device orientation (portrait or landscape).

Password voice confirmation – Checkmark to have voice confirmation of characters when inputting passwords.

Accessibility settings shortcut – Sets quick and easy access to selected features when you triple-tap the Home Key.

One-touch input – Each finger touch enters a letter/character on the LG keyboard.

Switch Access – Allows you to interact with your device using one or more switches that work like keyboard keys. This menu can be helpful for users with mobility limitations that prevent them from interacting directly with the your device.

Quick Cover

Activate this menu to turn the screen on or off automatically when using the Quick Cover.

Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

About tablet

This menu allows you to manage your software updates and view various information relating to your tablet.

Tablet name – Allows you to set your tablet name.

Update Center – Allows you to check for app and software updates.

Network – Allows you to view your tablet's network informations.

Status – Allows you to view Tablet phone number, IMEI, IMEI SV.

Battery – Allows you to view battery status, battery level, and battery use information.

Hardware info – Allows you to view the model number, up time, Wi-Fi MAC address and Bluetooth address.

Software info – Allows you to view Android version, Baseband version, kernel version, build number and software version.

Legal info – Allows you to view legal documents for LG software, open source licenses and Google legal information.

Regulatory and safety – Government regulations for enterprises for smartphones and safety requirements.

LG Backup

About backing up and restoring device data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover device data if your device is lost, stolen, or corrupted by an unforeseen issue.



This LG Backup application is supported between LG smartphones and tablets, other software or operating system versions. As a result, when you buy the new LG smartphones and tablets, you can backup the current device data to your new device.

If you have the LG Backup application preloaded on your smartphones and tablets, you can backup and restore most of your data, including downloaded and pre-installed applications, bookmarks, calendar entries, contacts, home screen settings, and system settings. You may also:

- Perform a manual backup of your device.
- Restore your device data.



WARNING! To protect against an unexpected power off during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

Backup your tablet data

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Backup & reset** > **LG Backup service** > **Backup and restore** > **Backup**.
- 2 On the Backup Location screen, touch **Internal storage** or **SD card**, then tap **Next**.
- 3 Select the check box for the items you want to backup and select **Next**.
- 4 Read the information presented on the screen, then tap **Start**.
- 5 When all selected files have been backed up, you will see the message **Backup completed**.

Restoring tablet data

NOTE: All files that are stored on your tablet are deleted before the backup file is restored. Make sure to copy the backup file to another location.


- 1 From the Home screen, tap **Apps**  > **Settings**  > **Backup & reset** > **LG Backup service** > **Backup and restore** > **File restore & management**.
- 2 On the Restore screen, select a backup file that contains the data you wish to restore.
- 3 Select the check box next to the item you wish to restore and select **Next** to restore it to your tablet.

NOTE: Please note that your tablet data will be overwritten with the content of your backup.

- 4 If the backup file is encrypted, type the password that you created to encrypt it.

5 When all selected files have been restored, the tablet will automatically be restart.

NOTE: You can set the **Lock backup files** option when creating a backup to encrypt your backup files for extra protection.

On the LG Backup main screen, touch the **Menu icon**  > **Set password** and enter a password and hint in case you forgot your password. Once you have set up a password, you need to enter it every time you want to do backup/restore.

Tablet software update

Tablet software update



This feature allows you to update the firmware of your tablet to the latest version conveniently from the internet without the need to visit a service center. For more information on how to use this function, please visit: <http://www.lg.com>

As the tablet firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable or battery during the upgrade may seriously damage your tablet.

LG tablet software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your tablet to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device. First, you can check the software version on your tablet:

From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Software info**.

To perform the tablet software update, from the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Update Center** > **Software Update** > **Check now for update**.


NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all tablet models.

NOTE: Your personal data—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence —might be lost in the process of updating your device's software. Therefore, LG recommends that you back up your personal data before updating your tablet's software. LG does not take responsibility for any loss of personal data.


Accessories

These accessories are available for use with the your tablet. **(Items described below may be optional.)**

Travel adaptor



USB cable



Quick Start Guide



NOTE:

- Always use genuine LG accessories. Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter when using your tablet. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure tablet is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the tablet.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Impossible to receive / send photos	Memory full	Delete some images from your tablet.

Message	Possible causes	Possible corrective measures
Files do not open	Unsupported file format	Check the supported file formats.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.; Bookala,

Thonburi, Bangkok 10600

Working day : Mon - Sat, 08:00 - 18:00

Call center : 0-2878-5757

LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี

1-800-545454

กรุงเทพและปริมณฑล

0-2878-5757

เว็บไซต์และอีเมล :

<http://www.lg.com/th> และ support.lgeth@lge.com

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง
เพื่อความสะดวกในการติดต่อ
กับศูนย์บริการของแอลจีทั่วประเทศ



CE0168!