LG
Life's Good

9.1 聲道影院音效

3D Blu-ray ™/ DVD 家庭影院系統


BH9540TW

中文 | 簡短說明

可瀏覽 CD-ROM ，參閱包含進階功能的電子版附加使用說明書。若要讀取檔案，您需要使用設有 CD-ROM 光碟機的個人電腦開啟光碟。本說明書的部分內容可能會跟您的播放器有差異。

ENGLISH | SIMPLE MANUAL


An extended Owner's Manual that contains information on the advanced features is located on the CD-ROM provided in an electronic version. To read these files, you will need to use a Personal Computer (PC) equipped with a CD-ROM drive. Some of the content in this manual may differ from your unit.

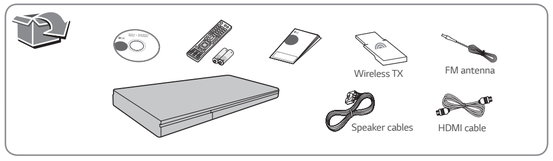

MFL68163624

www.lg.com


電視連接 (HDMI 輸出)
TV Connection (HDMI OUT)

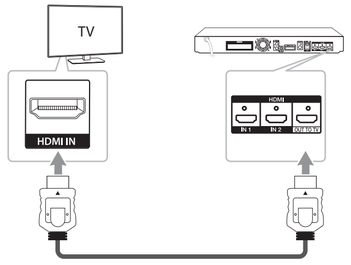

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

電視連接 (OPTICAL IN）
TV Connection (OPTICAL IN)


1

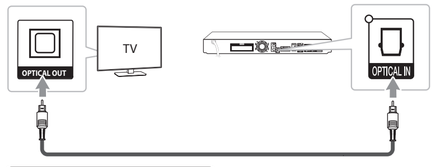


2



有線網路連接
Wired Network Connection

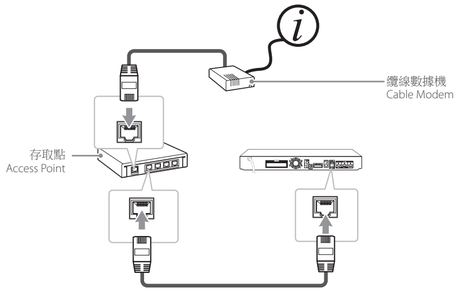


無線網路連接
Wireless Network Connection

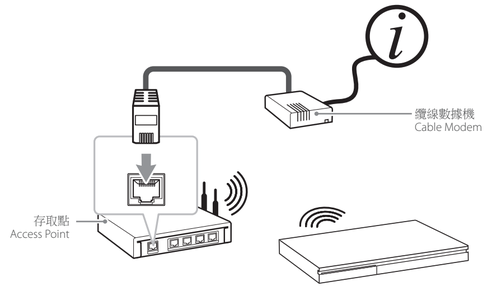

連接揚聲器
Speaker Connection

揚聲器設計和連接方法可能依據型號而有所不同。/
Speaker design and connection method may be different according to models.

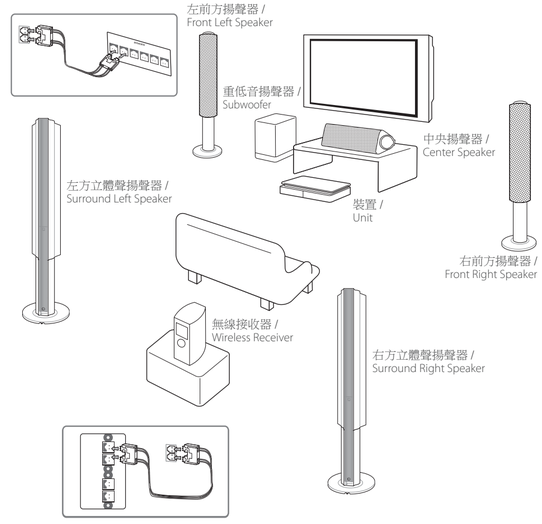


初始设置
Initial Setup






依照螢幕上所顯示初始设定的指導進行操作。/
Follow the directions for the initial setup displayed on the screen.

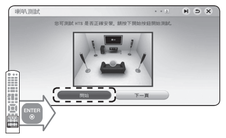

開始揚聲器測試。/
Start the speaker test.




停止揚聲器測試並選取 [下一頁] 。/
Stop the speaker test and select [Next].

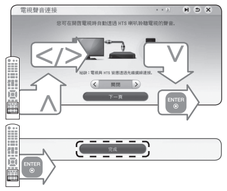

設定 [電視聲音連接] 並選取 [下一頁] 。/
Setup [TV Sound Connecting] and select [Next].

使用 HOME 功能表
Using HOME menu

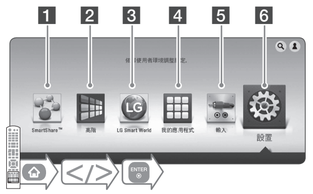

1 顯示 SmartShare 功能表。/
Displays SmartShare menu.

2 顯示高階主頁畫面。/
Displays the Premium Home screen.

3 顯示為本機提供的 LG Apps 標題。/
Displays LG Apps titles provided to the unit.


4 顯示 [我的應用程式] 畫面。/
Displays the [My Apps] screen.

5 轉換輸入模式。/
Changes input mode.

6 調整系統設定。/
Adjusts the system settings.

光碟，數據播放
Disc, Data Playback


1

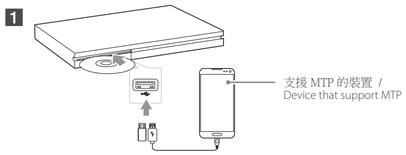

2



3

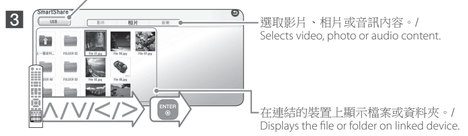

大部分音訊 CD、BD-ROM 及 DVD-ROM 光碟均會自動播放。/
For the most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically.

LG
Life's Good

網路播放
Network Playback


SmartShare PC 軟體安裝
SmartShare PC software Installation

1 安裝 SmartShare PC 軟體。/
Install SmartShare PC software.

2 

執行此程式，並設定您需要的共用資料夾。/
Run the program, and set the share folder you want.

智慧共用網路播放
SmartShare Network Playback

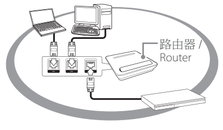1 

核取網路連線與設定。/
Check the network connection and settings.

2 


3 

享用 Miracast
Enjoying Miracast

1 

開啟 Miracast 認證裝置並且執行其 [Miracast] 功能。/
Turn on the device and run its [Miracast] function.

2 

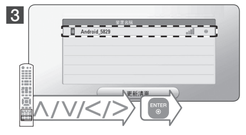3 

由於您的無線網路情況不同，鏡像可能不穩定。/
Depending on your wireless network condition, mirroring may be unstable.


享用網頁瀏覽
Enjoying Web browsing

1 核取網路連線與設定。/
Check the network connection and settings.

2 

我們建議連接速度最低為 4 Mbps，瀏覽網頁中可播放的檔案格式為「.jpeg」、「.png」、「.gif」、「.wmv」、「.asf」、「.wma」、「.mp3」、「.mp4」。/
We recommend a minimum connection speed of 4 Mbps and playable file formats on web browsing are ".jpeg",".png",".gif",".wmv",".asf",".wma",".mp3",".mp4".

享用私人聲音
Enjoying Private Sound

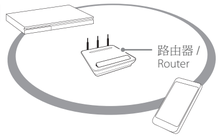1 


確認您的智慧手機連接至與此播放器相同的 Wi-Fi 網路。/
Make sure that mobile device is connected to the same Wi-Fi network as this player.

2 開啟已安裝行動裝置 LG AV Remote 應用程式並執行 LG AV Remote。/
Turn on the mobile device LG AV Remote App is Installed and run LG AV Remote App.

3 

並非任何模式均支援私人聲音並且配對多個裝置無法使用。/
Not all modes support sound privacy and pairing multiple devices is not available.

軟體更新
Software Update

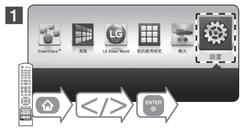1 

2 

3 

4 

其他資訊
Additional Information

客戶支援
您可以使用最近軟體更新播放器，增強產品操作及/或添加新功能。要獲取本播放器的最新軟體（如已有更新），請繼續上述軟體更新或造訪 http://www.lg.com 或聯絡 LG Electronics 客戶服務中心。

Customer Support
You can update the Player using the latest software to enhance the products operation and/or add new features. To obtain the latest software for this player (if updates have been made), proceed the software updates as written or visit http://www.lg.com or contact LG Electronics customer care centre.

開放源碼軟件通知
要取得 GPL、LGPL 及其他開放授權的對應來源編碼，請瀏覽 http://opensource.lge.com 。所有相關的授權條款、保證免責聲明及版權公告可使用來源編號下載。

Open source software notice
To obtain the corresponding source code under GPL, LGPL and other open source licenses, please visit http://opensource.lge.com. All referred license terms, warranty disclaimers and copyright notices are available to download with the source code.

規格
Specification

中文

電源要求	請參照後面板上的主標籤。
耗電量	請參照後面板上的主標籤。
尺寸 (闊 x 高 x 厚)	約 444 毫米 x 65 毫米 X 292.5 毫米
淨重 (大約)	3.3 公斤
匯流排電源供應 (USB)	DC 5 V ⎓ 500 mA (前置) / DC 5 V ⎓ 300 mA (後置)

如設計及規格有任何變更,恕不另行通告。

ENGLISH

Power requirements	Refer to main label on the rear panel.
Power consumption	Refer to main label on the rear panel.
Dimensions (W x H x D)	Approx. 444 mm x 65 mm X 292.5 mm
Net Weight (Approx.)	3.3 kg
Bus Power Supply (USB)	DC 5 V ⎓ 500 mA (Front) / DC 5 V ⎓ 300 mA (Rear)

Design and specifications are subject to change without notice.

安全資訊
Safety Information

危險
觸電風險切勿開啟

小心： 為減低觸電風險、切勿拆開本機前蓋(或後蓋) 播放器內並無使用者可自行修理的部份如需維修,請聯絡合資格的技術人員。

等邊三角形內帶閃電箭頭的符號用以提醒使用者：產品內部含有未絕緣的危險電壓,其強度可能會使人觸電。

等邊三角形內帶感嘆號的符號用以提醒使用者：產品隨附的資料中包含重要的操作及維修 (服務) 指引。

警告： 為免引起火警或觸電意外,切勿將本產品暴露於雨水或潮濕位置。

警告： 切勿把本設備安裝在狹窄的空間,如書櫃或類似的地方。

小心： 切勿阻塞任何通風口。請依照生產商指示安裝。機殼上的插槽及通風開口特別為通風而設,可確保產品正常運作以及避免產品過熱。
切勿把產品置於睡床、沙發、地毯或其他類似的表面上,以免堵塞通風口。除非已有正確通風或依照生產商指示,否則本產品不應置於如書架或機架等內建裝置上。



若設備需要維修,請與授權的服務中心聯絡。執行本說明書內容以外的控制、調整或程序，可能會引致危險輻射洩露。

連續大部份裝置的電線均使用專用電路;

要中斷主機電源,請拔除主機電線插頭。安裝產品時,請確定插頭容易插拔。

小心： 切勿把本機暴露於有水(滴水或濺水) 的地方,且不應將注滿液體的物體(如花瓶) 於置在本機上。

本機配有可攜式電池或蓄電池。

安全地拆除本機電池的方法： 把舊電池或電池組拆除，步驟與裝配程序相反。為了防止污染環境或損害人類及動物的健康，應把舊電池或電池棄置到指定收集處適當的容器內。切勿把電池連同其他廢棄物一併棄置。我們建議閣下使用本地、可免費退款的電池及蓄電池。」
切勿將電池曝露於溫度過高的環境中，例如陽光、火等等。

安全注意事項

本機的插頭握柄是專爲本產品所設計，且與附贈的電源線結合為一體，若您因爲任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據 1994 年之插頭及插座規範的規定，將插頭確實地與電源線結合。

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION concerning the Power Cord
To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

Java POWERED