LG
Life's Good

ENGLISH

SIMPLE MANUAL

Mini Hi-Fi System

To view the instructions of advanced features,
visit **http://www.lg.com** and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
CM4360 (CM4360, CMS4360F)

MFL69360221


www.lg.com

LG
Life's Good

CM4360-FB_AZAFLLB_SIM_ENG_0221.indd 1-2 2016-05-20 11:30:56




Front Panel

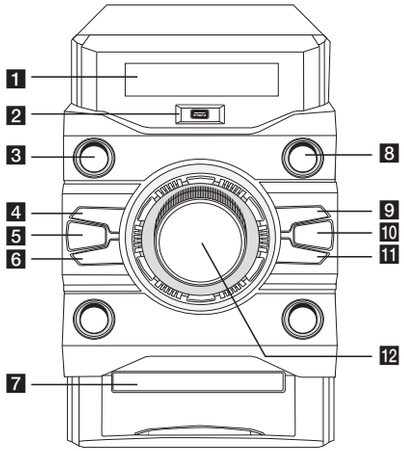

1. Display window
2. USB : Plays the audio files by connecting the USB device.
3. ⏻/I (Power) : Switches the unit ON or OFF.
4. ⏭ (Skip/Search) : Searches forward. / Skips to the next track/file.
5. **AUTO DJ** : Selects the AUTO DJ mode.
6. ⏮ (Skip/Search) : Searches backward. / Skips to the previous track/file.
7. Disc tray
8. **FUNCTION** : Selects the function or input source.
9. ⏯ (Play/Pause) : Starts or pauses playback. / Selects Stereo/Mono.
10. **REGION EQ / B. BLAST** : Chooses region equalizer. / Selects BASS effect.
11. ⏏ : Opens or closes the disc tray.
12. **Master Volume** : Adjusts volume of speaker.

Rear Panel

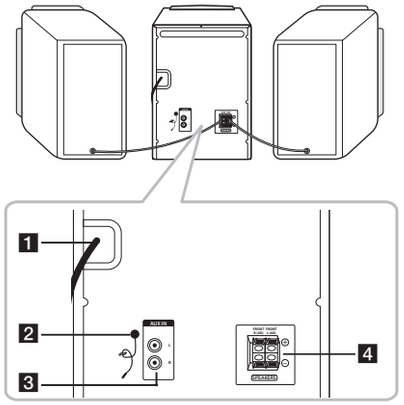

1. **POWER IN**
2. **FM ANTENNA**
3. **AUX IN (L/R)** connectors
4. **SPEAKERS (L/R)** terminals

Controller App




Download the **Music Flow Bluetooth** App to your device.

LG Sound Sync (Wireless)



For more information, download the online owner's manual. **http://www.lg.com**

Speaker Connection

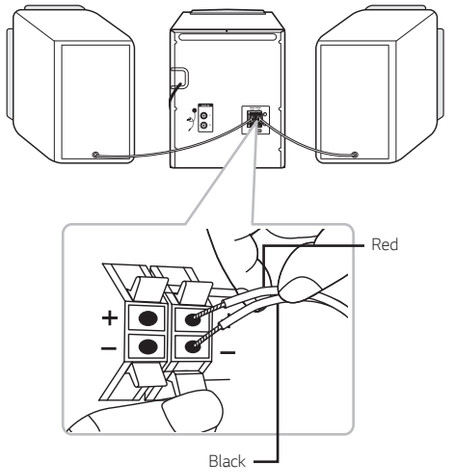

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
	Networked standby : 0.4 W
	(If all network ports are activated.)
Dimensions (W x H x D)	Approx. 204.5 mm x 278 mm x 285.5 mm
Net Weight	Approx. 2.53 kg
Bus Power Supply (USB)	5 V ⎓ 500 mA
Total Output (RMS)	230 W

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

