

SIMPLE MANUAL

HIGH POWER  
SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
RNC7




MFL71984124  
2301\_Rev01

[www.lg.com](http://www.lg.com)  
Copyright © 2023 LG Electronics Inc. All Rights Reserved.

ENGLISH




Top panel

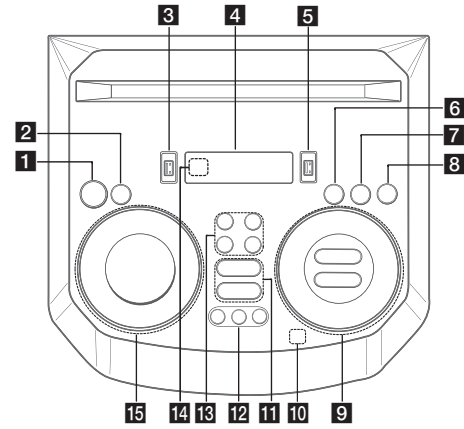


- 1** (Standby)  
Turns the power on or off.
- 2** **USB REC / DEMO**  
- Records to USB.  
- Stops recording.  
- In power off status, if you press **USB REC / DEMO**, show demo mode.
- 3** USB 1 Port  
You can play sound files by connecting the USB device.
- 4** Display window
- 5** USB 2 Port  
You can play sound files by connecting the USB device.
- 6** **F** (Function)  
Selects the function and input source.
- 7** **LIGHTING**  
Selects the lighting mode.
- 8** **TWIN**  
Connects two units for TWIN mode in WIRELESS PARTY LINK.
- 9** (Skip/Search)  
- Skips backward or forward.  
- Searches for a section within a file.  
- Selects the radio stations.
- (Play/Pause)  
- Starts or pauses playback.  
- Selects stereo/mono.
- **Bluetooth** connection lock (BT LOCK): Select the **Bluetooth** function by pressing **F** repeatedly. And long press to limit **Bluetooth** connection to only BT and LG TV.

- AUTO DJ**  
Selects the AUTO DJ mode.
- VOL** (Volume) **-/+**  
Adjusts speaker volume.
- MIC** (Microphone) / **GUITAR -/+**  
Adjusts Microphone volume or Guitar volume.
- 10** (Auto Music Play)  
Plays the audio currently playing by tagging the mobile (with "LG XBOOM" App) to this unit. (Android Only)
- 11** **VOICE CANCELLER**  
You can reduce the vocal tones during music playback from various input sources.
- EQ**  
Chooses sound impressions.
- 12** **CLUB, DRUM, USER** (DJ PAD)  
Selects CLUB, DRUM or USER sound effect to mix.  
(If you want to use USER, you have to register a source with "LG XBOOM" app. (Android Only))
- 1, 2, 3** (DJ PAD)  
Press a desired sound pad.
- 13** **MIC** (Microphone) **ECHO**  
Selects ECHO mode.
- VOCAL EFFECTS**  
Selects various vocal effects mode.
- KEY CHANGER** (**b/#**)  
Changes the key to suit your vocal range.
- 14** Remote sensor
- 15** **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**)  
- Chooses special equalizer.  
- Press and hold to select BASS (or BASS+) effect directly.
- SEARCH**  
Moves to folder or file in selection mode.
- OK**  
Selects a folder when searching a file.
- USER EQ**  
Selects the equalizer created by your own.
- Multi jog**  
- Searches a folder or a file.  
- Turns clockwise or counterclockwise to control the USER EQ level.  
- Chooses special equalizer.

Front panel / Rear panel

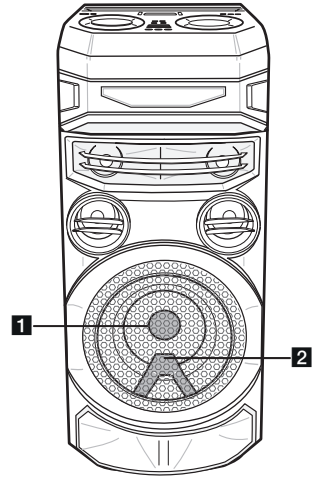

- 1** Lighting
- 2** Remote sensor

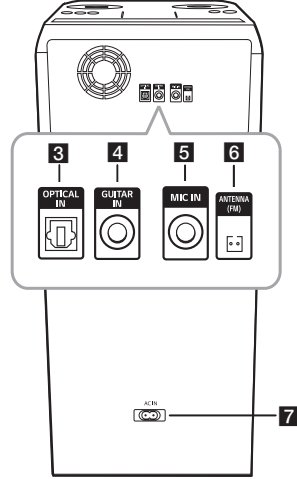

- 3** **OPTICAL IN**: Connect an optical device.
- 4** **GUITAR IN**: Connect a guitar.
- 5** **MIC** (Microphone) **IN**: Connect a microphone.
- 6** **ANTENNA** (FM)
- 7** **AC IN** socket

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Controller App



Android



iOS

Download the **LG XBOOM** App to your device.

LG Sound Sync



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 785.0 mm x 344.0 mm
Bus Power Supply (USB)	5 V  500 mA

Design and specifications are subject to change without notice.


Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the **LIGHTING** is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the **LIGHTING** of the unit.

Replacement of battery

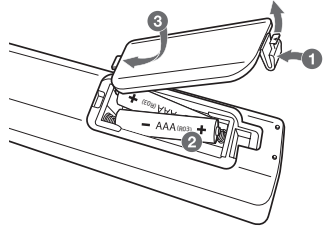

**Contact office for compliance of this product:**  
LG Electronics (Levant) - Jordan  
Abdali Project, Rafik Al-Hariri Avenue, The Boulevard,  
Central Square, 5th Floor

## دليل مبسط

# نظام السماعات ذي القوة العالية

يرجى قراءة هذا الدليل بعناية قبل تشغيل جهازك واحتفظ به للرجوع إليه في المستقبل.  
لعرض تعليمات الميزات المتقدمة، تفضل بزيارة موقع الويب <http://www.lg.com>، ثم قم بتنزيل دليل المالك.  
يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز

RNC7



MFL71984124  
2301\_Rev01

www.lg.com  
حقوق النشر والتأليف © لعام ٢٠٢٣ لـ LG Electronics Inc. جميع الحقوق محفوظة.

الرجوع




## اللوحة العلوية

- 1 (الاستعداد)  
يشغل السماعة أو يوقف تشغيلها.
- 2 **USB REC / DEMO**  
- التسجيل إلى الذاكرة المتنتقة USB.  
- إيقاف التسجيل.  
- في حالة إيقاف التشغيل، إذا ضغطت على زر **USB REC / DEMO** سيتم عرض الوضع التجريبي.
- 3 منفذ USB1  
يمكن تشغيل ملفات الصوت عن طريق توصيل جهاز USB.
- 4 نافذة العرض
- 5 منفذ USB2  
يمكن تشغيل ملفات الصوت عن طريق توصيل جهاز USB.
- 6 **F** (الوظيفة)  
اختيار الوظيفة ومصدر الإدخال.
- 7 **LIGHTING**  
اختيار وضع الإضاءة.
- 8 **TWIN**  
يوصل سماعتين من أجل وضع **TWIN** في **WIRELESS PARTY** **LINK**.
- 9 **KK/DX** (تخطي/بحث)  
- التخطي للأمام أو الخلف.  
- البحث عن مقطع داخل ملف.  
- تحديد محطة الراديو.  
D (تشغيل/إيقاف)  
- يبدأ التشغيل أو يوقفه مؤقتاً.  
- اختيار ستيريو/ أحادي.  
- تأمين اتصال **Bluetooth** (BT LOCK): اختر وظيفة البلوتوث بالضغط على مفتاح **F** بشكل متكرر. ثم اضغط ضغطة طويلة على **D** لتحجيم اتصال البلوتوث ليصل ب **BT** و **LG TV** وحسب.

- AUTO DJ**  
لاختيار الوضع **AUTO DJ**.
- VOL** -+ (الصوت)  
اضبط مستوى صوت السماعة.
- MIC** -+ / **GUITAR** (مايكروفون)  
اضبط مستوى صوت المايكروفون أو صوت الغيتار.
- 10 (تشغيل موسيقى تلقائي)  
يشغل الصوت الذي يتم تشغيله حالياً عبر تمييز الهاتف الجوال لهذه الوحدة (باستخدام تطبيق "LG XBOOM"). (أجهزة Android فقط)
- 11 **VOICE CANCELLER**  
يمكنك تقليل النغمات الصوتية أثناء تشغيل الموسيقى من مصادر الإدخال المختلفة.
- EQ**  
يختار مرات ظهور الصوت.
- 12 **USER, DRUM, CLUB** (DJ PAD)  
تحديد المؤثر الصوتي **CLUB** أو **DRUM** أو **USER** للمزج.  
(إذا كنت ترغب باستخدام **USER**، عليك تسجيل مصدر من خلال تطبيق "LG XBOOM". (أندرويد فقط))
- 1, 2, 3 (DJ PAD)  
اضغط على لوحة الصوت المراد.
- 13 **ECHO** (مايكروفون) **MIC**  
تحديد وضع **ECHO**.
- VOCAL EFFECTS**  
اختيار وضع المؤثرات الصوتية المتعددة.
- KEY CHANGER** (b/#)  
تغيير المفتاح ليناسب نطقك الصوتي.
- 14 أداة الاستشعار عن بعد
- 15 **SPECIAL EQ / BASS BLAST** (**BASS BLAST+**)  
- اختيار المعادل الخاص.  
- اضغط مع الاستمرار في الضغط لتحديد مؤثرات **BASS** (**BASS+**) مباشرة.
- SEARCH**  
الانتقال إلى مجلد أو ملف في وضع التحديد.
- OK**  
اختيار مجلد عند البحث عن ملف.
- USER EQ**  
اختيار المعادل الذي قمت أنت بعمله.
- Multi jog**  
- البحث في مجلد أو ملف.  
- يدور في اتجاه حركة عقارب الساعة أو عكسها للتحكم في مستوى **USER EQ**.
- اختيار المعادل الخاص.

## اللوحة الأمامية / اللوحة الخلفية

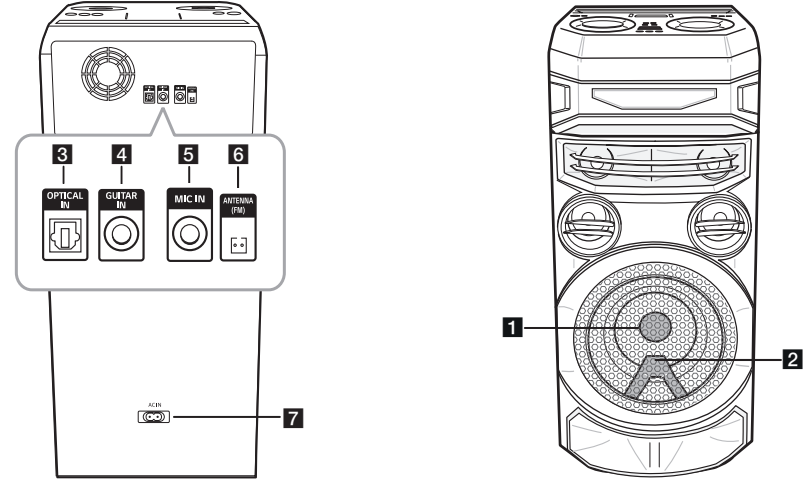


- 1 مصباح LED
- 2 مستشعر جهاز التحكم عن بعد

- 3 **OPTICAL IN**: اتصال جهاز ضوئي.
- 4 **GUITAR IN**: اتصال بالغيترار.
- 5 **MIC IN** (مايكروفون): اتصال بالمايكروفون.
- 6 **ANTENNA (FM)**
- 7 مقبس **AC IN**

إذا لم يوصل الكابل البصري بالاتجاه الصحيح، قد يتسبب هذا في تلف المقبس البصري.

## مزامن صوت LG



لمزيد من المعلومات، حمل دليل المالك عبر الإنترنت.  
<http://www.lg.com>


## تطبيق المتحكم



تحميل تطبيق **LG XBOOM** على جهازك.

## معلومات إضافية

### استبدال البطارية

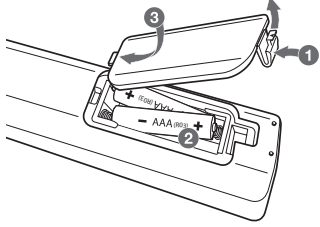

متطلبات الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
استهلاك الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
الأبعاد الخارجية (العرض x الارتفاع x العمق)	حوالي ٢٣٠,٠ مم x ٧٨٥,٠ مم x ٣٤٤,٠ مم
وحدة التغذية بالطاقة الناقلة (USB)	دخل التيار المباشر بجهد ٥ فولت ٥٠٠ ملي أمبير

التصميمات والمواصفات عرضة للتغيير دون إشعار مُسبق.

### تنبيه

- وصل سلك الطاقة بمأخذ التيار مباشرة إن أمكن وفي حالة استخدام كبل تمديد. فإنه ينصح بشدة استخدام كبل تمديد ١١٠ فولت/١٥ أمبير أو ٢٣٠ فولت/١٥ أمبير وإلا قد لا تعمل الوحدة بشكل مناسب بسبب النقص في توريد الطاقة.

- لا تحمل سلك التمديد بحمل كهربائي مفرط.

### ملحوظة

- لا تنتظر إلى الإضاءة الصادرة من الجزء مباشرة عند تشغيل **LIGHTING**.
- إذا كان سطوع الإضاءة متوهجاً، قم بتشغيل إضاءة الغرفة أو إيقاف تشغيل **LIGHTING** بالوحدة.

اتصل بمكتب الإمتثال الخاص بهذا المنتج:  
شركة إل جي للإلكترونيات – المشرق العربي  
منطقة مشروع العبدلي- جادة رفيق الحريري- الطابق الخامس