



ไทย
ENGLISH

คู่มือผู้ใช้

LG-E900

คู่มือนี้จะช่วยให้คุณเริ่มต้นใช้งานโทรศัพท์ของคุณ หากคุณต้องการข้อมูลเพิ่มเติม โปรดไปที่ www.lg.com

P/NO: MFL66983334 (1.0) H

www.lg.com



ลิขสิทธิ์ ©2010 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้
LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่
เกี่ยวข้อง

Bluetooth QD ID B016767

คู่มือการใช้ LG-E900 - ไทย



- คู่มือนี้จะช่วยให้คุณเริ่มต้นใช้งานโทรศัพท์ของคุณ หากคุณต้องการข้อมูลเพิ่มเติม โปรดไปที่ www.lg.com
- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ
- ไม่แนะนำให้ผู้ที่มีความบกพร่องทางด้านสายตาใช้เครื่องรุ่นนี้ เนื่องจากมีปุ่มกดบนหน้าจอแบบสัมผัส
- ลิขสิทธิ์ ©2010 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ



ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น LG-E900
ของ LG ซึ่งทันสมัย ออกแบบให้ทำงานด้วยการใช้เทคโนโลยี
การสื่อสารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

ลิขสิทธิ์และ เครื่องหมายการค้า

สิทธิ์ในเทคโนโลยีและผลิตภัณฑ์
ทั้งหมดที่ประกอบด้วยอุปกรณ์นี้เป็น
ทรัพย์สินของเจ้าของนั้นๆ:

- ผลิตภัณฑ์
ประกอบด้วย
ซอฟต์แวร์ที่ได้
รับอนุญาตใช้งาน
จาก MS ซึ่งเป็นบริษัทในเครือของ
Microsoft Corporation Microsoft
และซอฟต์แวร์ที่มีชื่อ Microsoft เป็น
เครื่องหมายการค้าจดทะเบียนของ
Microsoft Corporation ก่อนใช้งาน
ผลิตภัณฑ์นี้ โปรดอ่านข้อกำหนดสิทธิ์
การใช้งานซอฟต์แวร์ Microsoft ของ
ข้อตกลงเกี่ยวกับซอฟต์แวร์ Windows
Phone 7 ที่ด้านหลังของคู่มือฉบับ
นี้เพื่อดูข้อมูลเกี่ยวกับสิทธิ์และขอ
จำกัดต่างๆ
- Bluetooth® เป็นเครื่องหมายการค้าจ
ทะเบียนของ Bluetooth SIG, Inc.
- © 2010 Microsoft Corporation
สงวนลิขสิทธิ์ Microsoft, Internet
Explorer® Mobile, Windows®



Phone, Windows® Phone
Marketplace, Xbox LIVE®,
Zune®, <รายการ Windows ตลอด
จนชื่อเครื่องหมายการค้าและโลโก้
อื่นๆ ทั้งหมดที่อ้างอิงในเนื้อหา
โดยเรียงตามลำดับตัวอักษร> เป็น
เครื่องหมายการค้าของกลุ่มบริษัท
Microsoft

สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ..... 6	
ส่วนประกอบของโทรศัพท์..... 11	
เริ่มทำความรู้จักกับโทรศัพท์ของคุณ. 11	
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ. 12	
การใส่ USIM และแบตเตอรี่..... 13	
การนำวิเคด Windows Phone 16	
การใช้หน้าจอสัมผัส..... 16	
เริ่มทำความรู้จักกับหน้าจอเริ่มต้น..... 19	
การทำความรู้จักและนำวิเคดหน้าจอ. 19	
การปรับแต่งหน้าจอเริ่มต้น..... 24	
การเข้ใช้งานแอฟพลีเคชัน..... 25	
เริ่มทำความรู้จักกับแถบแอฟพลีเคชัน..... 25	
การปรับแต่ง Windows Phone..... 28	
การป้อนข้อความ..... 30	
การดาวน์โหลดแอฟพลีเคชันจาก Marketplac..... 31	
การเริ่มใช้งาน 32	
การเข้คนอื่นด้วย Windows Live ID . 32	
การอิมพอร์ตรายชื่อของคุณ 33	
การซิงค..... 34	
การสื่อสาร..... 35	
โทรศัพท์..... 35	
ข้อความ..... 38	
อีเมล..... 40	
Facebook..... 45	
ความบันเทิง..... 46	
กล้องถ่ายรูป..... 46	
รูปภาพ..... 52	
เพลงและวิดีโอ..... 57	
เกมส์..... 62	
วิทยุ FM..... 63	
ยูทิลิตี้..... 66	
การตั้งเวลาการปลุก..... 66	
การใช้เครื่องคิดเลข..... 66	
การเข้เหตุการณ์ลงในปฏิทิน..... 66	
Office..... 67	
แอฟพลีเคชัน Windows 68	
แผนที่..... 68	
Marketplace..... 69	
Hotmail..... 69	

เว็บไซต์.....	70
เบราเซอร์.....	70
การเชื่อมต่อ.....	71
Bluetooth (บลูทูธ).....	71
Wi-Fi.....	72
Play To.....	74
ตั้งค่า.....	75
ระบบ.....	75
แอปพลิเคชัน.....	78
การอัปเดตซอฟต์แวร์.....	81
อัปเดตซอฟต์แวร์โทรศัพท์.....	81
อุปกรณ์เสริม.....	82
FAQ (คำถามที่พบบ่อย).....	85

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น LG-E900 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ใดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรบกวนสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.935 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.47 วัตต์/กก. (10 กรัม)
- ข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

การดูแลและการบำรุงรักษาเครื่อง โทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์น วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสิ้นสะท้อนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน

- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่กรดหรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจодด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- อย่าใช้โทรศัพท์หรืออุปกรณ์เสริมในบริเวณที่มีความชื้นสูง เช่น สระน้ำ เรือ

กระจกปลุกต้นไม้ เรือนกระจกฝั่งแดด หรือสภาวะแวดล้อมรอนขึ้น เพราะอาจทำให้โทรศัพท์เสียหายและทำให้การรับประกันเป็นโมฆะ

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์การแพทย์และอิเล็กทรอนิกส์
โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต เสียก่อน โปรดปรึกษาแพทย์เพื่อตรวจสอบว่าโทรศัพท์ของคุณอาจรบกวนการทำงานของอุปกรณ์การแพทย์ของคุณหรือไม่
- โทรศัพท์อาจรบกวนการทำงานของเครื่องช่วยฟังบางชนิด
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุดีดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ตรวจสอบให้แน่ใจว่าอุปกรณ์ของโทรศัพท์และอุปกรณ์เสริมจะไม่ขัดขวางการทำงานของถุงลม เพราะอาจทำให้การทำงานขัดข้อง หรือทำให้ได้รับบาดเจ็บรุนแรง หากอุปกรณ์ดังกล่าวขัดขวางการทำงานของถุงลมนิรภัย
- หากคุณกำลังฟังเพลงขณะที่อยู่ข้างนอก โปรดตรวจสอบวาระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

เสียงและแรงดันที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้ ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตกอย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยศูนย์บริการที่ได้รับ การแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอมอบอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน โทรตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคอยประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานต่อได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่

- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเตาเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับ การกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

ส่วนประกอบของโทรศัพท์

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ช่องเสียบชุดหูฟัง

ปุ่มเปิด/ปิดเครื่อง/ปุ่มล็อค

- กดค้างไว้ (สามวินาที) เพื่อเปิด/ปิดโทรศัพท์
- กดครู่หนึ่งเพื่อปิดหน้าจอ

หูฟัง

เซ็นเซอร์รับสัญญาณ

เซ็นเซอร์ ALS (Ambient Light Sensor)

ปุ่มค้นหา

เปิดการค้นหาด่วน

ปุ่มเริ่ม

ย้อนกลับไปยังหน้าจอเริ่มต้น
เริ่มต้นฟังก์ชันระบบความจำเสียง (กดค้างไว้)

ปุ่มย้อนกลับ

ย้อนกลับไปยังหน้าจอก่อนหน้า

ไมโครโฟน



คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ ห้ามติดฟิล์มป้องกันบนเซ็นเซอร์รับสัญญาณของ LCD เนื่องจากอาจทำให้เซ็นเซอร์ทำงานผิดปกติได้

ปุ่มปรับระดับเสียง

- เมื่อนำจอไม่ใช้งาน: ระดับเสียงของระบบและเสียงเรียกเขา
- ระหว่างการใช้สาย: ระดับเสียงหูฟัง
- ขณะเล่นแท็ค: ควบคุมระดับเสียงแท็ค




อุปกรณ์ชาร์จ สายเคเบิลข้อมูล (พอร์ตสายเคเบิล USB)

เคล็ดลับ! ก่อนการเชื่อมต่อสายเคเบิล USB ให้รอจนกระทั่งโทรศัพท์ที่เปิดเครื่องและได้ลงทะเบียนกับเครือข่ายแล้ว

ปุ่มกล้องถ่ายรูป

- ไปที่การดูตัวอย่างภาพโดยตรงโดยกดปุ่มกล้องถ่ายรูป


ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

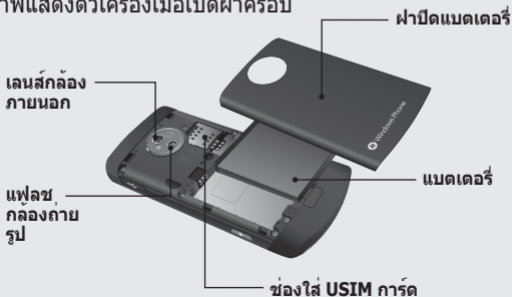

การใส่ USIM และแบตเตอรี่

1 ถอดฝาปิดแบตเตอรี่


กดปุ่มคล้ายลีดคฝาปิดแบตเตอรี่ดังแสดง
ในภาพด้านล่าง (1) ถอดฝาปิดออกจาก
โทรศัพท์ (2)

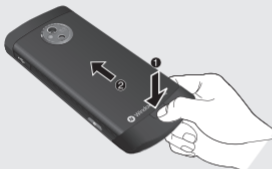

2 ถอดแบตเตอรี่

ยกแบตเตอรี่ขึ้นจากช่องใส่แบตเตอรี่โดย
ใช้รอยตัดที่ด้านล่าง



 คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

3 ใส่ USIM การ์ด

ใส่ USIM การ์ดเข้าไปในช่องใส่ USIM
การ์ด โปรดตรวจสอบให้แน่ใจว่าหน้า
สัมผัสสีทองของการ์ดหันเข้าหาโทรศัพท์
ด้านช่องใส่ USIM การ์ดกลับเข้าที่



4 ใส่แบตเตอรี่

ใส่แบตเตอรี่โดยให้ด้านบนของแบตเตอรี่ลงไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วของโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่



คุณไม่สามารถเปิดใช้งานโทรศัพท์ได้ หากแบตเตอรี่คายประจุออกจนหมด และต้องใช้เวลาประมาณสี่ถึงห้านาทีก่อนถึงสถานะการชาร์จที่เพียงพอต่อการนุทเครืองโดยเครื่องชาร์จ TA


และจะใช้เวลาประมาณ 14-15 นาทีในการชาร์จโดยใช้การเชื่อมต่อ USB


ในกรณีที่แบตเตอรี่ต่ำมาก จะปรากฏภาพที่แสดงว่าแบตเตอรี่ต่ำมากเพื่อให้คุณชาร์จแบตเตอรี่ให้มากขึ้น


หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่


5 การชาร์จโทรศัพท์


เปิดฝาช่องเสียบเครื่องชาร์จที่ด้านข้างของโทรศัพท์ LG-E900 เสียบหัวเสียบเครื่องชาร์จลงในช่องเสียบ และเสียบปลั๊กเครื่องชาร์จเข้ากับเต้าเสียบไฟ

 คำเตือน: ห้ามเชื่อมต่ออุปกรณ์ชาร์จกับโทรศัพท์ที่ไม่ได้ใส่แบตเตอรี่ไว้ คุณต้องตรวจสอบว่าได้ใส่แบตเตอรี่ก่อนทำการชาร์จ

 คำเตือน: ห้ามถอดแบตเตอรี่หรือ USIM การถอดออกในขณะที่กำลังชาร์จแบตเตอรี่

 คำเตือน: หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้ ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว

 คำเตือน: ถอดปลั๊กอุปกรณ์ชาร์จออกจากเตาเสียบและโทรศัพท์ระหว่างเกิดพายุฝนฟ้าคะนองเพื่อป้องกันไม่ให้อุณหภูมิฟัดูดหรือเกิดเพลิงไหม้

 คำเตือน: ระวังอย่าให้แบตเตอรี่ได้รับความเสียหายจากของมีคมต่าง ๆ เนื่องจากอาจเกิดเพลิงไหม้

การนำเวก Windows Phone

การใช้หน้าจอสัมผัส

เคล็ดลับสำหรับหน้าจอสัมผัส

หน้าจอสัมผัสของโทรศัพท์จะช่วยให้คุณเลือกรายการหรือใช้งานฟังก์ชันต่างๆ ได้อย่างง่ายดาย โปรดเรียนรู้เกี่ยวกับการดำเนินการพื้นฐานเพื่อใช้หน้าจอสัมผัส

หมายเหตุ:

- เพื่อป้องกันไม่ให้หน้าจอสัมผัสเกิดรอยขีดข่วน โปรดอย่าใช้วัตถุมีคม
- อย่าให้หน้าจอสัมผัสสัมผัสกับอุปกรณ์ไฟฟ้าอื่นๆ เนื่องจากการคายประจุไฟฟ้าสถิตอาจเป็นสาเหตุให้หน้าจอสัมผัสทำงานผิดปกติได้
- อย่าให้หน้าจอสัมผัสโดนน้ำ เนื่องจากหน้าจอสัมผัสอาจทำงานผิดปกติในสภาพที่มีความชื้น หรือสัมผัสโดนน้ำ
- เพื่อประสิทธิภาพการใช้งานสูงสุดของหน้าจอสัมผัส ให้ลอกแผ่นฟิล์มปกป้องหน้าจอออกก่อนใช้งานโทรศัพท์
- หน้าจอสัมผัสจะมีชั้นสำหรับตรวจจับประจุไฟฟ้าเล็กน้อยที่ปล่อยจากร่างกายมนุษย์

- เพื่อประสิทธิภาพการใช้งานสูงสุด ให้ใช้ปลายนิ้วสัมผัสหน้าจอ หน้าจอสัมผัสจะไม่ตอบสนองการสัมผัสด้วยวัตถุปลายแหลม เช่น สไตลัสหรือปากกา

หมายเหตุ:

- หน้าจอสัมผัสจะปิดลง เมื่อคุณไม่ได้ใช้งานเป็นเวลาตามที่ระบุไว้ ในการเปิดหน้าจอ ให้กดปุ่ม [เปิด/ปิด]
- คุณสามารถปรับเวลาของไฟหน้าจอหรือเปลี่ยนภาพพื้นหลังได้อีกด้วย ในหน้าจอเริ่มต้น ให้ไปที่รายการแอปพลิเคชัน และเลือก **Settings** (การตั้งค่า) > **lock & wallpaper** (ล็อกและภาพพื้นหลัง)

การลากนิ้วบนหน้าจอสัมผัส

สำหรับแอปพลิเคชันส่วนใหญ่ คุณสามารถใช้การลากนิ้วแบบเป็นธรรมชาติ เพื่อเลื่อนและใช้คำสั่งต่างๆ ในการพิมพ์ข้อความ ใช้แป้นพิมพ์บนหน้าจอหรือแป้นพิมพ์ฮาร์ดแวร์

การลากนิ้วในรูปแบบต่อไปนี้จะใช้เพื่อเลื่อนหน้าจอบน Windows Phone 7:

แตะ

การแตะ คือการสัมผัสลงบนหน้าจอแบบเร็วๆ หนึ่งครั้ง ใช้การแตะเพื่อออกคำสั่งต่างๆ (คล้ายกับการกดปุ่ม Enter ในคอมพิวเตอร์) การแตะยังใช้เพื่อหยุดการเคลื่อนไหวต่างๆ บนหน้าจออีกด้วย



การแตะสองครั้ง

การแตะสองครั้ง คือการสัมผัสลงบนหน้าจอแบบเร็วๆ สองครั้งในตำแหน่งเดียวกัน การแตะสองครั้งจะเป็นการออกคำสั่งให้โทรศัพท์ซูมเข้าหรือออกตามความเหมาะสม



แตะค้างไว้

การแตะค้างไว้สามารถทำได้โดยการกดนิ้วลงบนหน้าจอค้างไว้เป็นเวลาสองสามวินาที



เลื่อน

การเลื่อนใช้สำหรับย้ายออบเจกต์ขึ้นหรือลงใช้นิ้วกดลงบนหน้าจอแล้วเลื่อนไปยังทิศทางที่ต้องการ หากต้องการสิ้นสุดการเลื่อน ไท้ยกนิ้วขึ้นจากหน้าจอ



ลากนิ้ว

การลากนิ้วใช้สำหรับย้าย
ออบเจกต์ไปด้านข้าง
ใช้นิ้วกดลงบนหน้าจอ
แล้วเลื่อนไปยังทิศทางที่
ต้องการ หากต้องการสิ้นสุดการลากนิ้ว ใช้นิ้วขึ้นจากหน้าจอ



เลื่อนนิ้วเข้าหากันหรือ แยกออกจากกัน

การเลื่อนนิ้วเข้าหากันหรือ
แยกออกจากกันจะเป็นการ
ลากนิ้วในทิศทางตรงกัน
ข้ามกัน การลากนิ้วใน
ลักษณะนี้มักใช้กับแผนที่
เพื่อซูมเข้าและออก

การเลื่อนนิ้วเข้าหากัน
ทำได้โดยกดนิ้วสองนิ้วลง
บนหน้าจอแล้วเคลื่อนนิ้ว
เข้าหากัน ซึ่งจะเป็นการ
ซูมเข้าหาเนื้อหา ขณะที่
เน้นศูนย์กลางไปที่ภาพซึ่ง
อยู่ระหว่างปลายนิ้ว ส่วน
การเลื่อนนิ้วแยกจากกัน
นั้น นิ้วจะเลื่อนออกจากกัน
เพื่อซูมออกจากภาพ



เริ่มทำความรู้จักกับหน้าจอเริ่มต้น

จากหน้าจอนี้คุณสามารถเข้าใช้งานตัวเลือกเมนูต่างๆ โทรออก ดูสถานะของโทรศัพท์ และอื่นๆ ได้อีกมากมาย



การทำความรู้จักและनावิเกตหน้าจอ

หน้าจอเริ่มต้น คือ ส่วนเริ่มต้นของ Windows Phone 7 ที่คุณจะพบหลังจากเปิดใช้งานโทรศัพท์ หน้าจอเริ่มต้นจะแสดงช่องแสดงข้อมูลแอปพลิเคชันที่คุณได้ใส่และวางไว้ในตำแหน่งที่คุณเลือกเพื่อเริ่มต้นใช้งานอย่างรวดเร็ว การกดปุ่ม [เริ่มต้น] บนโทรศัพท์จะนำคุณย้อนกลับไปยังหน้าจอเริ่มต้น ไม่ว่าแอปพลิเคชันใดกำลังทำงานอยู่ก็ตาม

1 เพียงเลื่อนนิ้วไปทางซ้าย ขวา ขึ้นหรือลงเพื่อดู

นอกจากนี้ คุณยังสามารถปรับแต่งช่องแสดงข้อมูลบนหน้าจอเริ่มต้น ซึ่งเป็นข้อดีค้ำไปยังเมนูและแอปพลิเคชันโปรด
หมายเหตุ: เมื่อคุณอยู่ในหน้าจอสแตนด์บายหลังจากที่ปลดล็อคโทรศัพท์ ให้เลื่อนนิ้วขึ้นเพื่อดูหน้าจอเริ่มต้นที่แสดงช่องแสดงข้อมูลแอปพลิเคชัน

ช่องแสดงข้อมูลบนหน้าจอเริ่มต้น

ช่องแสดงข้อมูล คือ ข้อคิดทที่ง่ายต่อการจดจำของแอปพลิเคชันหรือเนื้อหาของแอปพลิเคชัน คุณสามารถวางช่องแสดงข้อมูลใดทุกแห่งบนหน้าจอเริ่มต้น

ช่องแสดงข้อมูลที่ใช้คุณสมบัติการแจ้งเตือนเกี่ยวกับช่องแสดงข้อมูลสามารถอัปเดตกราฟิก ช่องแสดงข้อมูลหรือข้อความของแสดงข้อมูล หรือเพิ่มตัวนับใด ซึ่งช่วยให้คุณสร้างหน้าจอเริ่มต้นในแบบของคุณเองได้อย่างรวดเร็ว ตัวอย่างเช่น การแสดงวาล์งตาของคุณในการเล่นเกมสแลวหรือยัง ตลอดจนแสดงสภาวะอากาศ หรือจำนวนข้อความอีเมลที่คุณได้รับ

หน้าจอเริ่มต้นจะแสดงในมุมมองแบบแนวตั้งเสมอ

ไอคอน รายละเอียด



โทรออก เข้าถึงผู้โทรล่าสุด รายการโปรด และรายชื่อทั้งหมดของคุณได้อย่างรวดเร็ว โทรออกด้วยตนเองโดยใช้ปุ่มกดตัวเลข เพียงแตะที่ไอคอนข้อความเสียง เพื่อฟังข้อความเสียงที่คุณต้องการตามลำดับที่คุณกำหนด



แตะเพื่อเข้าใช้งานฮับ People (บุคคล) ซึ่งเป็นแอปพลิเคชันการสื่อสารแบบของครวมสำหรับอีเมล รายชื่อและข้อมูลอื่นๆ



รับและส่งข้อความตัวอักษร SMS การสนทนาจะถูกบันทึกในรูปแบบการสนทนาโต้ตอบแบบทันที ดังนั้น คุณจะมองเห็นประวัติของข้อความที่คุณส่งและได้รับ ส่งข้อความ MMS พร้อมภาพที่คุณถ่ายไว้



ระบบ Windows Phone ทำงานร่วมกับ Microsoft Exchange, Microsoft Outlook Web App และระบบอีเมลอื่นๆ ที่ได้รับความนิยมอีกมากมาย รวมถึง Hotmail, Yahoo! Mail, Google และอื่นๆ บันทึกภาพและกราฟิกที่แนบมากับข้อความลงในรูปภาพที่บันทึกของคุณ

ไอคอน รายละเอียด



แตะที่เล่นเพื่อสตรีมวิดีโอ เพลง และรูปภาพจากโทรศัพท์ของคุณไปยังอุปกรณ์เครื่องเล่นที่ใช้ได้กับระบบ Digital Living Network Alliance (DLNA)



ด้วยไอคอน ScanSearch คุณสามารถค้นหาข้อมูลผลิตภัณฑ์และข้อมูลในท้องถิ่นเกี่ยวกับถนน เมือง หรือประเทศ ScanSearch ยังช่วยให้คุณ สามารถดูข้อมูลทางธุรกิจในท้องถิ่น ซึ่งรวมถึงสถานที่ตั้งและข้อมูลติดต่อ



บ่อนเหตุการณ์ต่างๆ ลงใน Windows Phone เครื่องใหม่ของคุณ สมัครใช้บริการปฏิทิน ตั้งค่าการแจ้งเตือนเพื่อเตือนความจำของคุณเกี่ยวกับเหตุการณ์ การนัดหมาย และวันที่ครบกำหนดต่างๆ นอกจากนี้ ยังสามารถซิงค์ข้อมูลเข้ากับปฏิทินใน Windows Live และซิงค์ข้อมูลจาก Windows Live มายังโทรศัพท์ได้อีกด้วย



แตะเพื่อเข้าใช้ Internet Explorer



เข้าใช้งาน Xbox LIVE เพื่อเล่นเกมส์และเชิญเพื่อนให้มาเล่นกับคุณ ดาวน์โหลดเกมส์ใหม่ๆ ลงในโทรศัพท์



ดูรูปภาพและวิดีโอที่คุณถ่ายไว้ผ่าน Windows Phone เครื่องใหม่ของคุณ รับอีเมลหรือข้อความ MMS หรือซิงค์ข้อมูลจากซอฟต์แวร์ Zune ของคอมพิวเตอร์ (ระบบปฏิบัติการ Windows เท่านั้น) ดูในรูปแบบแนวตั้งหรือแนวนอน ชุมเขาภาพถ่ายเพื่อดูภาพใหญ่ใกล้ยิ่งขึ้น ส่งอีเมลหรือข้อความ MMS พร้อมกับแนบภาพถ่าย

ไอคอน รายละเอียด



เล่นเพลง วิดีโอ และ Podcast ที่จัดเก็บในอุปกรณ์โดยเชื่อมต่อกับคอมพิวเตอร์เพื่อซิงโครไนซ์ข้อมูลของคุณ ฟังวิทยุ FM ไปที่ Marketplace



ค้นหาใน Application Store เพื่อดูแอปพลิเคชัน Windows Phone และเพลงที่คุณสามารถซื้อหรือดาวน์โหลดโดยใช้การเชื่อมต่อเครือข่ายข้อมูลแบบ Wi-Fi หรือ Cellular อ่านบทวิจารณ์หรือเขียนบทวิจารณ์ของคุณเองเกี่ยวกับแอปพลิเคชันที่คุณโปรดปราน ดาวน์โหลดและติดตั้งแอปพลิเคชันบนหน้าจอเริ่มต้น

หมายเหตุ: ตำแหน่ง ชื่อ และการออกแบบของแสดงข้อมูลที่ได้รับการจัดการ จะแตกต่างกันไปตามสถานะการตั้งค่า พื้นที่ และผู้ให้บริการ แผน และเวอร์ชันของซอฟต์แวร์ Windows Phone

ฟังก์ชันแอปพลิเคชันและความพร้อมใช้งานอาจแตกต่างกันไป ขึ้นอยู่กับประเทศหรือพื้นที่ที่คุณซื้อและใช้ Windows Phone ของคุณ สำหรับข้อมูลเพิ่มเติม โปรดติดต่อผู้ให้บริการของคุณ

การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ขอความใหม่, อายุแบตเตอรี่ และบลูทูธที่ใช้งานและการเชื่อมต่อข้อมูล

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ



[แถบสถานะ]

ไอคอน	รายละเอียด
	ความแรงของสัญญาณ
	HSDPA
	3G
	2G-GPRS
	2G-EDGE
	การส่งต่อสาย
	โรมมิ่ง

ไอคอน	รายละเอียด
	ความแรงของสัญญาณเครือข่ายไร้สาย
	สถานะบลูทูธ
	โหมดเสียงกริ่ง
	สถานะการป้อนข้อมูล
	ระดับพลังงานแบตเตอรี่
	นาฬิกากระบบ


การปรับแต่งหน้าจอเริ่มต้น



คุณสามารถปรับแต่งเลย์เอาต์ของช่องแสดงข้อมูลบนหน้าจอเริ่มต้นได้

คุณสามารถใส่ทุกอย่างไว้บนหน้าจอได้ รวมถึงแอปพลิเคชัน เว็บไซต์ ตำแหน่งบนแผนที่ และแม้กระทั่งรายชื่อ หากคุณใส่รายชื่อไว้ที่หน้าจอเริ่มต้น คุณจะได้รับอัปเดตพีดีทั้งหมดของบุคคลนั้นทันทีจากช่องแสดงข้อมูล

ในการใส่แอปพลิเคชันเพิ่มเติมลงบนหน้าจอเริ่มต้น ให้เปิดรายการแอปพลิเคชัน และรายการนั้นค้างไว้ แล้วแตะที่หมดเพื่อเริ่มต้น

- หากคุณต้องการย้ายช่องแสดงข้อมูลไปที่อื่นในบนหน้าจอเริ่มต้น ให้แตะที่ช่องค้างไว้ และย้ายไปยังที่ที่คุณต้องการ
- ในการลบช่องแสดงข้อมูล ให้แตะที่ช่องค้างไว้ และแตะที่ไอคอนยกเลิกการปักหมุด 

การนำเว็ทและตั้งค่า แอฟฟลลเคชัน

การเข้าใช้งานแอฟฟลลเคชัน

เมื่อต้องการเข้าใช้งานแอฟฟลลเคชันของ Windows Phone:

- 1 บนหน้าจอรเริ่มต้น ให้แตะที่ลูกศร ➔ เพื่อเข้าใช้งานรายการแอฟฟลลเคชัน
- 2 เลื่อนลงไปยังช่องแสดงข้อมูล หากมองไม่เห็นช่องดังกล่าว
- 3 เลือกแอฟฟลลเคชัน
- 4 กดปุ่ม **Back** (ย้อนกลับ) ⬅ เพื่อย้อนกลับไปยังหน้าจอรกอนหน้า กดปุ่ม **Start** (เรืมต่น) Ⓜ เพื่อย้อนกลับไปยังหน้าจอรเรืมต่น

หมายเหตุ:


- คุณสามารถเพิ่มข้อค้ทให้กับแอฟฟลลเคชันโดยการแตะไอคอนแอฟฟลลเคชันนั้นค้ทไว้จากรายการแอฟฟลลเคชัน คุณสามารถย้ายแอฟฟลลเคชันไปยังตำแหน่งที่ต้องการบนหน้าจอรเรืมต่นได้

- Windows Phone มีเซนเซอร์การเคลื่อนไหวในตัวที่สามารถตรวจจับการวางแนวของโทรศัพท์ได้ หากคุณหมุนโทรศัพท์ ขณะที่ใช้คุณสมบัติบางอย่างเมนูสำหรับผู้ไชจะสลับไปเป็นมุมมองแบบแนวอนโดยอัตโนมัติ

เรืมทำความรู้จักกับแถบ แอฟฟลลเคชัน

ในการตั้งค่าแอฟฟลลเคชัน คุณสามารถไชแถบแอฟฟลลเคชันและเมนูแถบแอฟฟลลเคชันที่ด้านล่างของหน้าจอรได้ ตัวอย่างเช่น ในการตั้งค่าการตั้งปลก

- 1 บนหน้าจอรเริ่มต้น ให้แตะที่ลูกศร ➔ เพื่อเข้าใช้งานรายการแอฟฟลลเคชัน
- 2 แตะ **Alarms** (ตั้งปลก) Ⓜ
- 3 แตะแถบแอฟฟลลเคชันเพื่อดูเมนูแอฟฟลลเคชัน หรือเพื่อแสดงปุ่มไอคอนพรอมขอความก้ก
- 4 เลือกปุ่มไอคอนหรือเมนูที่คุณต้องการตั้งค่า

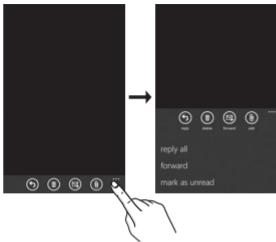

แถบแอปพลิเคชัน

แถบแอปพลิเคชันจะให้มุมมองที่แสดงปุ่มไอคอนพร้อมข้อความกำกับ และเมนูการใช้งานที่เป็นทางเลือก หากคุณแตะที่แถวแสดงจุด หรือลากนิ้วขึ้นบนแถบแอปพลิเคชัน คุณสามารถซ่อนมุมมองนี้ได้อีกครั้งโดยการแตะที่ด้านนอกของพื้นที่เมนูหรือบนจุด โดยใช้ปุ่มย้อนกลับ หรือเลือกรายการเมนูหรือไอคอนแถบแอปพลิเคชัน

เมนูแถบแอปพลิเคชัน

เมนูแถบแอปพลิเคชันเป็นอีกทางเลือกหนึ่งในการเข้าถึงงานบางอย่างจากแถบแอปพลิเคชัน คุณสามารถใช้งานเมนูแถบแอปพลิเคชันได้โดยการแตะที่แถวแสดงจุดในแถบแอปพลิเคชัน หรือลากนิ้วขึ้นบนแถบแอปพลิเคชัน คุณสามารถซ่อนมุมมองนี้ได้อีกครั้ง โดยการแตะที่ด้านนอกของพื้นที่เมนูหรือบนจุด โดยใช้ปุ่มย้อนกลับ หรือเลือกรายการเมนูหรือไอคอนแถบแอปพลิเคชัน

หมายเหตุ:

- หน้าจอสามารถแสดงรายการเมนูได้สูงสุดห้ารายการ
- หากไม่มีการแสดงรายการเมนูใดๆ หน้าจอจะแสดงเพียงข้อความกำกับไอคอนเท่านั้น
- เมนูแถบแอปพลิเคชันจะยังคงปรากฏอยู่บนหน้าจอ จนกว่าคุณจะทำเนือการอย่างหนึ่งอย่างใด

ไอคอนบนแถบแอปพลิเคชัน

ต่อไปนี้เป็นไอคอนการตั้งค่าแอปพลิเคชันบางไอคอนที่มักใช้อยู่เป็นประจำ



สร้าง



เพิ่ม



ลบ



ตรวจสอบ



ปิด



ยกเลิก



ซิงค์



รีเฟรช



เครื่องหมายคำถาม



เครื่องหมายตกใจ



ย้อนกลับ



ถัดไป



search (ค้นหา)



ลบ



บันทึก



โฟลเดอร์



วิดีโอ



กล้องถ่ายรูป



อีเมล



ตั้งค่า



รายการโปรด



เพิ่มในรายการโปรด



ดาวน์โหลด



อัปโหลด



แบ่งปัน



แก้ไข



จุด



เล่น



หยุดพัก



ก่อนหน้า/ย้อนกลับ



ถัดไป/ไปข้างหน้าแบบเร็ว

การปรับแต่ง Windows Phone
ใช้ประโยชน์เพิ่มมากขึ้นจากโทรศัพท์
โดยการปรับแต่งให้เหมาะสมกับความ
ต้องการของคุณ

การตั้งค่าเวลาและวันที่ปัจจุบัน

- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร
➔ เพื่อไปยังรายการแอปพลิเคชัน
- 2 แตะ **Settings** (ตั้งค่า) > **System**
(ระบบ) > **date & time** (วันที่และ
เวลา)
- 3 ลากนิ้วบนแถบ **Set automatically**
(ตั้งค่าอัตโนมัติ) และเปลี่ยนแปลงวันที่
และเวลา และตัวเลือกอื่นๆ

การเปิดหรือปิดเสียงเรียกเข้า และเสียงต่างๆ

คุณสามารถแก้ไขเสียงเรียกเข้าและเสียง
ต่างๆ เช่น เสียงเรียกเข้า ขอความตัว
อักษรใหม่ ขอความเสียงใหม่ อีเมลใหม่
และอื่นๆ ได้

- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร
➔ เพื่อไปยังรายการแอปพลิเคชัน
- 2 แตะ **Settings** (ตั้งค่า) > **System**
(ระบบ) > **ringtones & sounds**
(เสียงเรียกเข้าและเสียง)

การสลับไปยังโหมดเงียบ

คุณสามารถเปิดหรือปิดโหมดเงียบได้
โดยลากนิ้วไปทางซ้ายหรือขวาบนแถบ
สถานะ **Ringer** (เสียงเรียกเข้า)

การปรับระดับเสียงของเสียง เรียกเข้า

กดปุ่มปรับระดับเสียงขึ้นหรือลงเพื่อปรับ
ระดับเสียงของเสียงเรียกเข้า

การเลือกภาพพื้นหลังสำหรับ หน้าจอเริ่มต้น

- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร
➔ เพื่อไปยังรายการแอปพลิเคชัน
- 2 แตะ **Settings** (ตั้งค่า) > **System**
(ระบบ) > **lock & wallpaper**
(ล็อคและภาพพื้นหลัง) > **change
wallpaper** (เปลี่ยนภาพพื้นหลัง)
- 3 เลือกภาพแล้วบันทึก
คุณยังสามารถเปลี่ยนแปลงระยะเวลา
ในการปิดหน้าจอและรหัสผ่านได้อีก
ด้วย

หมายเหตุ:

- LG ไม่มีส่วนรับผิดชอบใดๆ ต่อการใช้
รูปภาพหรือภาพพื้นหลังที่เป็นค่าเริ่มต้น
ซึ่งมีให้ในโทรศัพท์ของคุณ

การปรับความสว่างของหน้าจอ

คุณสามารถปรับความสว่างของหน้าจอได้อย่างรวดเร็วโดยการเลื่อนไปทางซ้ายหรือขวาของแถบสัญลักษณ์ของหน้าจอในการปรับความสว่างในเมนูการตั้งค่า

- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร → เพื่อไปยังรายการแอปพลิเคชัน
- 2 แตะ **Settings** (ตั้งค่า) > **System** (ระบบ) > **brightness** (ความสว่าง)
- 3 ลากตัวเลื่อนสำหรับ **Automatically adjust** (ปรับอัตโนมัติ) ไปที่ปิด และแตะที่ระดับความสว่างที่ต้องการ

หมายเหตุ: ระดับความสว่างของหน้าจอจะมีส่วนทำให้สิ้นเปลืองพลังงานแบตเตอรี่เร็วขึ้น

การล็อคซิมการ์ด

คุณสามารถล็อคโทรศัพท์โดยเปิดใช้งาน PIN ที่มีอยู่ในซิมการ์ดของคุณ

- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร → เพื่อไปยังรายการแอปพลิเคชัน
 - 2 แตะ **Settings** (ตั้งค่า) และลากเพื่อเลือก **application** (แอปพลิเคชัน) > **phone** (โทรศัพท์)
 - 3 ลากตัวเลื่อน **SIM security** (ความปลอดภัยของซิม) ไปที่ **On** (เปิด)
 - 4 ป้อน PIN และเลือก **enter** (ป้อน)
- หมายเหตุ:

- เมื่อเปิดใช้งานการล็อค PIN แล้ว คุณต้องป้อน PIN ทุกครั้งที่เปิดโทรศัพท์
- หากคุณป้อนรหัส PIN ไม่ถูกต้องหลายครั้ง ซิมการ์ดของคุณจะถูกบล็อก คุณต้องป้อนรหัส PUK (PIN Unblocking Key) เพื่อปลดล็อคซิมการ์ด

การป้อนข้อความ

คุณสามารถป้อนข้อความโดยเลือกตัวอักษรบนปุ่มกดเสมือน

คุณจะไม่สามารถป้อนข้อความในบางภาษาได้ ในการป้อนข้อความ โปรดตรวจสอบและเลือกข้อความที่จะเขียนจากภาษาที่สนับสนุน (**Settings (ตั้งค่า) > System (ระบบ) > keyboard (แป้นพิมพ์)**)



การป้อนข้อความด้วยปุ่มกดของโทรศัพท์

- 1 แตะที่ไอคอนพาเนลป้อนข้อมูล
- 2 แตะตัวอักษรเพื่อป้อนข้อความ

หมายเหตุ:

- โทรศัพท์มีตัวช่วยในการพิมพ์หลายอย่าง เช่น การแสดงข้อความแนะนำ ซึ่งปรากฏเหนือแป้นพิมพ์ การแก้ไขคำผิดอัตโนมัติ และโครงร่างแป้นพิมพ์ตามบริบท (**Settings (ตั้งค่า) > System (ระบบ) > keyboard (แป้นพิมพ์)**)
- Windows Phone 7 สนับสนุนเฉพาะโครงร่างตัวอักษรที่ครบถ้วนสมบูรณ์ เช่น QWERTY, AZERTY และ QWERTZ
- ปุ่ม Shift ช่วยให้คุณสามารถพิมพ์ตัวอักษรพิมพ์ใหญ่ โดยมีโหมด Shift สามโหมด ได้แก่ เบ็ด, ปิด และโหมดตัวพิมพ์ใหญ่ (แตะค้างไว้)
- ปุ่มสัญลักษณ์แสดงอารมณ์จะแสดงตัวเลือกสัญลักษณ์แสดงอารมณ์
- การแตะค้างไว้ที่ตัวอักษร a, i, e, u, o บนจอแสดงผลจะแสดงตัวเลือกเครื่องหมาย

การดาวน์โหลดแอปพลิเคชัน จาก Marketplac

Marketplace ช่วยให้ค้นหาและเป็น
เจ้าของเพลงและแอปพลิเคชัน (รวม
ถึงเกมส์) ได้อย่างง่ายดายเพื่อเพิ่ม
ประสิทธิภาพของ Windows Phone
นอกจากนั้น ยังได้เพิ่มเพลงชนิดของ
แอปพลิเคชัน, เกมส์ และเพลงแต่ละเพลง
ลงในเว็บไซต์

- บนหน้าจอเริ่มต้น ให้แตะที่  เพื่อ
ไปยังรายการแอปพลิเคชัน และแตะ
Marketplace 
หรือแตะที่ช่องแสดงข้อมูล
Marketplace จากหน้าจอเริ่มต้น
- กดปุ่ม **Search** (ค้นหา) เพื่อค้นหา
แอปพลิเคชัน และแตะที่สตริงค้นหา
อีกครั้งเพื่อแก้ไขและค้นหา
- พิมพ์ข้อความในสตริงที่ต้องการ แล้ว
แตะ จากนั้นผลการค้นหาจะปรากฏขึ้น
ที่ด้านล่างของเพลงเดียวกัน
- แตะ **list item** (รายการ) เพื่อไปยัง
เพจ Marketplace ที่ถูกต้อง

- ขณะที่เบร่าส์หรือค้นหาแอปพลิเคชัน
คุณสามารถแตะที่แอปพลิเคชันหรือ
เกมส์ จากนั้นเพลงรายละเอียดของ
แอปพลิเคชันนั้นจะปรากฏขึ้น
- เลือกรายการที่คุณต้องการซื้อและแตะ
ที่ **download** (ดาวน์โหลด)



หมายเหตุ:


- รูปภาพ, Podcast และวิดีโอไม่มีให้บริการ
ใน Marketplace
- คุณสมบัตินี้อาจไม่สามารถใช้งานได้ขึ้น
อยู่กับพื้นที่ของคุณ

การเริ่มใช้งาน

เมื่อคุณเปิดใช้งานโทรศัพท์เป็นครั้งแรก คุณจะได้รับคำแนะนำสำหรับการตั้งค่าที่สำคัญต่างๆ โปรดทำตามคำแนะนำบนหน้าจอเพื่อใช้งานโทรศัพท์ของคุณต่อไปนี่คือขั้นตอนที่แนะนำ

SELECT LANGUAGE (เลือกภาษา) > WINDOWS PHONE SETTINGS (การตั้งค่า WINDOWS PHONE) > TIME ZONE (โซนเวลา) และ ใช้น์อื่น โดยใช้ Windows Live ID ของคุณ

การใช้น์อื่นด้วย Windows Live ID

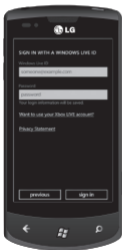

ในการรับแอปพลิเคชัน เล่นเกมส์ Xbox LIVE ใช้ Zune Pass และซิงโครไนซ์ข้อมูล Windows Live เขากับเว็บโดยอัตโนมัติและอื่นๆ คุณจำเป็นต้องใช้น์อื่นโดยใช้ Windows LIVE ID

Windows Live ID คืออีเมลแอดเดรสที่คุณใช้น์อื่นเข้าสู่บริการต่างๆ เช่น Xbox LIVE®, Zune®, Hotmail® และอื่นๆ หากคุณจำอีเมลแอดเดรสที่คุณใช้ไม่ได้:

สำหรับ Xbox LIVE: บนคอนโซล Xbox 360® ให้ใช้น์อื่นด้วย Gamer tag ของคุณ แล้วกดปุ่ม Guide บนคอนโทรลเลอร์ (ปุ่มที่อยู่ตรงกลางที่ดูเหมือนโลโก้ Xbox) ใน Settings (การตั้งค่า) ให้คลิก **Account Management (จัดการแอดเคาท)** > **Windows Live ID**

สำหรับ Zune: ใช้น์อื่นเข้าสู่ซอฟต์แวร์ Zune บนคอมพิวเตอร์ของคุณ คลิกขวาที่รูปภาพโปรไฟล์ และคลิก Switch user (สลับผู้ใช้น์) เพื่อดู Windows Live ID ของคุณ ในการรีเซ็ตหรือรับเตือนความจำ ให้ไปที่ <http://account.live.com/ResetPassword.aspx>

หากคุณยังไม่ได้ใช้น์อื่นด้วย Windows Live ID คุณอาจไม่สามารถทำบางอย่างได้บนโทรศัพท์ของคุณในครั้งแรก (เช่น รับแอปพลิเคชัน หรือเล่นเกมส์ Xbox LIVE)

การอิมพอร์ตรายชื่อของคุณ



เมื่อคุณตั้งค่าแอคเคาท์อีเมลหรือ Facebook รายชื่อจะถูกอิมพอร์ตโดยอัตโนมัติลงในฮับ People (บุคคล) และเมื่อคุณเพิ่ม Facebook พีดของเพื่อนจะปรากฏในฮับ People (บุคคล) ของคุณ ภาพถ่ายของพวกเขาจะแสดงในฮับ Pictures (รูปภาพ) และพีดของคุณจะป๊อปอัปในช่อง Me (ฉัน) ของคุณ

ในการตั้งค่าแอคเคาท์ Facebook (หรืออีเมลอื่นๆ):

- 1 แตะลูกศรในหน้าจอเริ่มต้นเพื่อไปที่รายการแอปพลิเคชันของคุณ
- 2 แตะ Settings (การตั้งค่า) > Email & accounts (อีเมลและแอคเคาท์)

การโหลดรายชื่อจากโทรศัพท์เครื่องเก่าทำได้ง่ายมาก ใส่ซิมการ์ดเก่าของคุณในโทรศัพท์เครื่องใหม่ แล้วไปที่ Settings (การตั้งค่า) เลื่อนนิ้วไปที่ Applications (แอปพลิเคชัน) และ People (บุคคล) แล้วแตะ Import SIM contacts (อิมพอร์ตรายชื่อในซิม)

การซิงค์






ในการซิงค์เพลง วิดีโอ รูปภาพ และแอปเด็ดของคุณจากคอมพิวเตอร์ไปยังโทรศัพท์ (หรือในทางกลับกัน) คุณต้องมีซอฟต์แวร์ Zune

- 1 ไปที่ windowsphone.com เพื่อติดตั้ง ซอฟต์แวร์ Zune
- 2 เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สาย USB
- 3 เปิดซอฟต์แวร์ Zune แล้วทำตามคำแนะนำเพื่อจัดเพลง วิดีโอ รูปภาพ และอื่นๆ ลงในคอลเลคชันของคุณ
- 4 คลิก Collection (คอลเลคชัน) แล้วลากทุกอย่างที่คุณต้องการซิงค์ไปยังไอคอนโทรศัพท์ที่ด้านล่างซ้าย

การสื่อสาร โทรศัพท์


การโทรออก

- 1 และ 
- 2 และ 
- 3 ป้อนหมายเลขบนปุ่มกดในการกดตัวเลข ให้แตะที่ 
- 4 และ เพื่อโทรออก
- 5 ในการวางสาย ให้แตะ

คุณสามารถโทรออกได้โดยใช้ช่องแสดงข้อมูล Phone (โทรศัพท์) บนหน้าจอเริ่มต้น คุณสามารถโทรออกได้

เคล็ดลับ! ในการป้อน “+” เพื่อโทรออกต่างประเทศ ให้แตะ [0+] ค้างไว้

การโทรออกโดยใช้รายชื่อ

- 1 แตะ People (บุคคล) เพื่อเปิดรายชื่อ
- 2 เลื่อนรายชื่อหรือป้อนอักษรตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะที่ 
- 3 ในรายการ ให้แตะที่รายชื่อที่คุณต้องการโทร แล้วเลือกหมายเลขที่จะใช้หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข

การรับสายและการปฏิเสธสายเรียกเขา

เมื่อโทรศัพท์ดังขึ้น ให้แตะที่แท็บรับสายเพื่อรับสาย
แตะที่แท็บ **ignore** (ไม่รับสาย) เพื่อปฏิเสธสายเรียกเขา

เคล็ดลับ! เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่มลดระดับเสียงที่ด้านซ้ายของโทรศัพท์
ถ้าคุณต้องการสลับไปที่โหมดปิดเสียงเรียกเขา

โหมด Flight (ปิดการสื่อสารไร้สาย)

ในบางสถานที่กำหนดให้คุณต้องปิดการเชื่อมต่อแบบไร้สายของโทรศัพท์ โดยเข้าสู่โหมด Flight

และ **SETTINGS (ตั้งค่า) > flight mode (โหมด Flight)** คุณสมบัตินี้จะสลับการสื่อสารเคลื่อนที่, Wi-Fi และบลูทูธของโทรศัพท์พร้อมกัน

การปรับระดับเสียงสายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์


การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ  แลแล้วแตะเพิ่มสาย 
- 2 โทรออกไปยังหมายเลขนั้นหรือค้นหารายชื่อโดยใช้  หรือ 
- 3 แตะที่ไอคอนโทรเพื่อโทรออก
- 4 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อคและพับสายไว้
- 5 แตะ **PRESS TO SWAP** (กดเพื่อสลับ) ที่ด้านบนของหน้าจอเพื่อสลับสายสนทนา

- 6 ในการวางสายที่กำลังสนทนา ให้แตะที่ **end call** (วางสาย) หากไม่มีสายที่กำลังสนทนา โทรศัพท์จะวางสายที่พับไว้แทน

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูข้อมูลการโทรของคุณ

บนหน้าจอเริ่มต้น โทกด  เพื่อดูบันทึกการโทร

ดูรายการสายที่โทรออก ได้รับ ไม่ได้รับ และโทรด้วยเสียงทั้งหมด

เคล็ดลับ! แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่และเวลาของการโทร

เคล็ดลับ! แตะที่แท็บแถบแอปพลิเคชันแล้วแตะ **delete all** (ลบทั้งหมด) เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 ในหน้าจอเริ่มต้น ให้แตะที่ 
- 2 แตะที่แถบแอปพลิเคชันที่ด้านล่างของหน้าจอข้อมูลการโทร และเปิดเมนู **Call Settings** (ตั้งค่าการโทร)
- 3 เลื่อนและแตะการตั้งค่าการโทร และเลือกตัวเลือกที่คุณต้องการปรับ

Voicemail number (ศูนย์ข้อความเสียง)

- แก้ไขหมายเลขข้อความเสียง


Show my caller ID to (แสดงข้อมูลผู้โทร) เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่

international assist (ตัวช่วยการโทรออกต่างประเทศ) - ช่วยแก้ไขข้อผิดพลาดทั่วไปให้โดยอัตโนมัติในระหว่างการโทรออกต่างประเทศหรือการโทรเมื่ออยู่ต่างประเทศ

การค้นหารายชื่อ


คุณสามารถค้นหารายชื่อได้สองวิธี:

บนหน้าจอเริ่มต้น


- 1 บนหน้าจอเริ่มต้น แตะที่ช่องแสดงข้อมูลฮับ **People** (บุคคล) เพื่อเปิดรายชื่อของคุณ (ฮับ People (บุคคล))
- 2 แตะ  และป้อนชื่อโดยใช้ปุ่มกด

เคล็ดลับ! ในการค้นหาอักษรตัวแรกของชื่อ แตะที่แท็บ Contacts (รายชื่อ) ที่ด้านบนของหน้าจอ และเลือก Groups (กลุ่ม) ซึ่งจะเป็นการแสดงรายการกลุ่มทั้งหมดของคุณ

จากเมนูแอปพลิเคชัน

- 1 บนหน้าจอเริ่มต้น แตะ  เพื่อไปยังเมนูแอปพลิเคชัน
- 2 แตะแอปพลิเคชัน People (บุคคล) และเลือกโปรไฟล์ที่ต้องการ

การเพิ่มรายชื่อใหม่

- 1 บนหน้าจอเริ่มต้น แตะที่แอปพลิเคชัน People (บุคคล)
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะที่  คุณสามารถใช้รูปภาพที่บันทึกไว้ หรือถ่ายรูปใหม่
- 3 แตะที่รายการที่ต้องการ แล้วแตะฟิลด์ขอความเพื่อเปิดแป้นพิมพ์สัมผัส
- 4 แตะที่ไอคอน **Done** (เสร็จ) เพื่อบันทึกข้อมูลที่เพิ่มในขณะนั้น
- 5 แตะที่ชนิดของข้อมูลรายชื่อ และอ่านรายละเอียดเกี่ยวกับรายชื่อ
- 6 แตะที่ไอคอนบันทึกเพื่อบันทึกรายชื่อ

เคล็ดลับ!

- แตะที่แท็บแถบแอปพลิเคชัน แล้วแตะ “delete” (ลบ) เพื่อลบรายชื่อที่เพื่งบันทึกไว้
- เมื่อคุณแตะที่แท็บรายชื่อหนึ่งในรายชื่อบุคคลค้างไว้ เมนูย่อที่คุณสามารถเลือกกำหนดให้เริ่มต้นแก้ไข และลบจะปรากฏขึ้น

รายชื่อที่ใช้อยู่



คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ ไว้ในกลุ่มรายการโปรด


การเพิ่มรายชื่อในรายการโปรด (ใส่ไว้ในหน้าจอเริ่มต้น)

- 1 บนหน้าจอเริ่มต้น แตะที่  เพื่อเปิดรายชื่อโปรดไฟล์
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด
- 3 แตะที่ **Pin to start** (ใส่ไว้บนหน้าจอเริ่มต้น) บนเมนูแอปพลิเคชัน จากนั้นรายชื่อที่ใช้อยู่ของคุณจะถูกใส่ไว้บนหน้าจอเริ่มต้น


ข้อความ

การส่งข้อความตัวอักษร


- 1 บนหน้าจอเริ่มต้น แตะที่ **Messaging** (ข้อความ)  > **New** (สร้าง) 
- 2 ทำตามขั้นตอนใดขั้นตอนหนึ่งต่อไปนี้:
 - เริ่มต้นพิมพ์ชื่อบุคคลในช่อง To: (ถึง:) แล้วแตะที่รายชื่อที่ต้องการในรายการทำซ้ำเพื่อเพิ่มรายชื่อผู้รับ จากนั้นชื่อของผู้รับจะถูกเพิ่มโดยอัตโนมัติลงในช่อง To: (ถึง:)

- ป้อนหมายเลขโทรศัพท์หรืออีเมลแอดเดรสของบุคคลนั้นลงในช่อง To: (ถึง:) ในการเพิ่มรายชื่อผู้รับเพิ่มเติม และที่ปุ่ม Enter หลังจากเพิ่มแต่ละรายชื่อ
- และ **Add** (เพิ่ม)  ลากนิ้วไปที่รายชื่อ แล้วแตะ ทำซ้ำเพื่อเพิ่มรายชื่อผู้รับ จากนั้นชื่อของผู้รับจะถูกเพิ่มโดยอัตโนมัติลงในช่อง To: (ถึง:)



3 แตะที่ช่องข้อความ พิมพ์ข้อความที่ต้องการ แล้วแตะ **Send** (ส่ง) 

หมายเหตุ: หากคุณต้องการแนบข้อมูลไปกับข้อความของคุณ แตะ  ที่ด้านล่างของหน้าจอ แล้วเลือกไฟล์ที่ต้องการ โปรดจำไว้ว่าคุณสามารถแนบได้เฉพาะรูปภาพเท่านั้น

การตอบกลับข้อความตัวอักษร

- 1 บนหน้าจอเริ่มต้น แตะที่ Messaging (ข้อความ) แล้วแตะที่การสนทนาที่มีข้อความตัวอักษรที่คุณได้รับ
- 2 แตะที่ช่องข้อความ พิมพ์ข้อความตอบกลับ แล้วแตะ **Send** (ส่ง) 


การส่งต่อข้อความตัวอักษร

- 1 บนหน้าจอเริ่มต้น แตะที่ **Messaging** (ข้อความ)  แล้วแตะที่การสนทนาที่มีข้อความตัวอักษรที่คุณต้องการส่งต่อ
- 2 แตะที่ข้อความค้างไว้ แล้วแตะ **Forward** (ส่งต่อ)
- 3 ป้อนชื่อ หมายเลขโทรศัพท์ หรืออีเมลแอดเดรสของบุคคลนั้นในช่อง To: (ถึง:)
- 4 แตะที่ช่องข้อความ พิมพ์ข้อความที่ต้องการ แล้วแตะ **Send** (ส่ง) 

หมายเหตุ:

- ผู้ให้บริการเครือข่ายโทรศัพท์เคลื่อนที่ของคุณอาจเรียกเก็บค่าบริการเพิ่มเติมสำหรับการส่งข้อความตัวอักษรและบริการนี้ต้องเปิดให้บริการในแผนโทรศัพท์ของคุณ
- ข้อความตัวอักษรเรียกอีกอย่างหนึ่งว่าข้อความ SMS (Short Message Service) และมีความยาวสูงสุด 160 ตัวอักษร
- ในกรณีที่มีข้อความตัวอักษรของคุณยาวกว่า 160 ตัว ข้อความจะถูกส่งไปในข้อความเดียวหรือมากกว่าหนึ่งข้อความ
- บางครั้งผู้ให้บริการเครือข่ายโทรศัพท์เคลื่อนที่ จะส่งข้อความตัวอักษรที่คุณไม่สามารถตอบกลับหรือส่งต่อได้ และของแสดงข้อความจะระบุข้อความนั้นเป็นแบบอ่านอย่างเดียว

การบันทึกรูปภาพจากข้อความตัวอักษร

- 1 บนหน้าจอเริ่มต้น และที่ **Messaging** (ข้อความ) 
- 2 และที่การสนทนาที่มีรูปภาพ แล้วแตะที่รูปภาพนั้น
- 3 แตะค้างไว้ที่รูปภาพที่เปิดขึ้น แล้วแตะ **Save to phone** (บันทึกลงในโทรศัพท์)
รูปภาพนั้นจะถูกบันทึกในอัลบั้ม **Saved Pictures** (รูปภาพที่บันทึก) บนโทรศัพท์ของคุณ

หมายเหตุ:

- ผู้ให้บริการเครือข่ายโทรศัพท์เคลื่อนที่ของคุณอาจเรียกเก็บค่าบริการเพิ่มเติมสำหรับการส่งข้อความตัวอักษรและบริการนี้ต้องเปิดให้บริการในแผนโทรศัพท์ของคุณ
- ข้อความตัวอักษรที่มีรูปภาพแนบมาด้วยสามารถเรียกอีกอย่างว่าข้อความ MMS (Multimedia Message Service)
- รูปภาพบางรูปที่คุณได้รับอาจได้รับการปกป้องโดยใช้ระบบจัดการสิทธิ์ดิจิทัล และไม่สามารถบันทึกลงในโทรศัพท์ของคุณได้ อย่างไรก็ตาม คุณสามารถตั้งค่าให้ภาพดังกล่าวเป็นภาพพื้นหลังของโทรศัพท์ได้

อีเมลล์


การตั้งค่าอีเมลล์แอดเดสส์

ไม่ว่าจะเป็นอีเมลล์ส่วนตัวหรืออีเมลล์ที่เกี่ยวกับของกับเรื่องงาน คุณสามารถใช้อีเมลล์นั้นบน Windows Phone โดยตั้งค่าอีเมลล์แอดเดสส์ประเภทต่างๆ คุณสามารถดูรายการอื่นๆ จากแอดเดสส์ของคุณ (เช่น รายชื่อ ปฏิทิน และอื่นๆ) ได้เช่นกัน ขึ้นอยู่กับอีเมลล์แอดเดสส์ที่คุณตั้งค่าไว้ในโทรศัพท์

หมายเหตุ: ในการตั้งค่าอีเมลล์แอดเดสส์บนโทรศัพท์ คุณต้องมีการเชื่อมต่อข้อมูลแบบ Cellular หรือ Wi-Fi สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการเชื่อมต่อเครือข่าย Wi-Fi โปรดดูที่ **เชื่อมต่อเครือข่าย Wi-Fi**

การตั้งค่าแอดเดสส์ Windows Live

เมื่อคุณตั้งค่าโทรศัพท์เป็นครั้งแรก จะมีข้อความขอให้คุณไชนอินด้วย Windows Live ID ของคุณ หาก你不ไชนอินด้วย ID ดังกล่าวในเวลานั้น หรือถ้าคุณมี Windows Live ID มากกว่าหนึ่ง ID คุณสามารถไชนอินตอนกลางเพื่อตั้งค่า Windows Live ID หลักหรือ Windows Live ID เพิ่มเติมได้

บนหน้าจอเริ่มต้น ลากนิ้วไปทางซ้าย
ของรายการแอปพลิเคชัน และ 
Settings (ตั้งค่า) แล้วแตะ **Email &
accounts (อีเมลและแอคเคาท์)**


1 และ **Add an account (เพิ่มแอค
เคาท์) > Windows Live** และทำ
ตามคำแนะนำบนหน้าจอ

หมายเหตุ:

- แอคเคาท์ Windows Live แรกที่คุณตั้งค่าไว้จะไม่สามารถลบออกจากโทรศัพท์ได้
- ในกรณีที่คุณตั้งค่า Windows Live ID เพิ่มเติมบนโทรศัพท์ รูปภาพในแอคเคาท์เพิ่มเติมนั้นจะไม่ซิงค์กับโทรศัพท์ของคุณ
- คุณสามารถสร้างแอคเคาท์ Hotmail ได้ที่นี่และดึงข้อความอีเมลใหม่จาก Hotmail ไปยัง Inbox (กล่องเข้า) เมื่อคุณใช้งานงานแอปพลิเคชัน Hotmail นี้ หมายเลขของอีเมลใหม่จะปรากฏบนช่องแสดงข้อมูลอีเมล


การตั้งค่าอีเมลแอคเคาท์ Microsoft Exchange

คุณสามารถใช้ขั้นตอนต่อไปนี่เพื่อตั้งค่าอีเมลแอคเคาท์ที่อยู่บน Microsoft Exchange Server (ตัวอย่างเช่น อีเมลแอคเคาท์เกี่ยวกับงานของคุณอาจอยู่บน Microsoft Exchange Server) คุณยังสามารถใช้ขั้นตอนต่อไปนี่เพื่อตั้งค่าอีเมลแอคเคาท์อื่นๆ ที่ใช้ Exchange ActiveSync ซึ่งรวมถึงอีเมลแอคเคาท์ที่โฮสต์ใน Microsoft Exchange หรือแอคเคาท์ Outlook Web App

- 1 บนหน้าจอเริ่มต้น ลากนิ้วไปทางซ้ายของรายการแอปพลิเคชัน และ 
Settings (ตั้งค่า) แล้วแตะ **Email & accounts (อีเมลและแอคเคาท์)**
- 2 และ **Add an account (เพิ่มแอคเคาท์) > Outlook**

การตั้งค่าอีเมลแอดเดสจากผู้ใช้บริการอินเทอร์เน็ต (ISP)

เมื่อคุณตั้งค่าอีเมลแอดเดส โทรศัพท์จะพยายามค้นหาการตั้งค่าที่ถูกต้องสำหรับอีเมลแอดเดสของคุณโดยอัตโนมัติ อีเมลแอดเดสอาจเป็นแอดเดสที่ผ่านผู้ใช้บริการอินเทอร์เน็ต (ISP) หรือเป็นอีเมลแอดเดส IMAP หรือ POP อื่นๆ จากผู้ให้บริการอื่น

- 1 บนหน้าจอเริ่มต้น ลากนิ้วไปทางซ้ายของรายการแอปพลิเคชัน และ  **Settings (ตั้งค่า)** แล้วแตะ **Email & accounts (อีเมลและแอดเดส)**
- 2 แตะ **Add an account (เพิ่มแอดเดส)** > **Other account (แอดเดสอื่น)**



ต่อไปนี้เป็นรายการตั้งค่าที่คุณจำเป็นต้องทราบล่วงหน้า เมื่อไม่สามารถหาอีเมลแอดเดสที่ถูกต้องได้โดยอัตโนมัติ โดยทั่วไป คุณสามารถค้นหาขอมูลนี้ได้ในเว็บไซต์ของผู้ให้บริการ


- ประเภทอีเมลแอดเดส (POP หรือ IMAP)
- แอดเดสเซิร์ฟเวอร์อีเมลขาเข้า
- แอดเดสเซิร์ฟเวอร์อีเมลขาออก (SMTP)

- การตั้งค่าการตรวจสอบความถูกต้องเซิร์ฟเวอร์
- ข้อกำหนด SSL สำหรับอีเมลขาเข้า
- ข้อกำหนด SSL สำหรับอีเมลขาออก

การส่งข้อความอีเมล

หลังจากที่ตั้งค่าอีเมลแอดเดสบนโทรศัพท์ คุณสามารถส่งหรือรับอีเมลของแอดเดสนั้นได้

- 1 บนหน้าจอเริ่มต้น แตะที่อีเมลแอดเดสที่คุณต้องการเข้าใช้งาน (เช่น Outlook, Google หรือ Windows Live)
- 2 แตะ New (สร้าง) 
- 3 ทำตามขั้นตอนใดขั้นตอนหนึ่งต่อไปนี้:
 - ในช่อง To: (ถึง:) แตะที่ Add (เพิ่ม)  แล้วเลือกรายชื่อ
 - แตะที่ช่อง To: (ถึง:) แล้วเริ่มต้นพิมพ์อีเมลแอดเดส โทรศัพท์ของคุณจะแสดงข้อความแนะนำ ขณะที่คุณพิมพ์
 - ในการลบผู้รับ แตะชื่อหรืออีเมลแอดเดสของผู้รับ แล้วแตะ Remove (ลบ)
- 4 แตะที่ช่อง Subject: (หัวเรื่อง:) แล้วพิมพ์หัวเรื่อง

5 แตะที่ด้านล่างของช่อง Subject: (หัวเรื่อง:) พิมพ์อีเมล แล้วแตะ **Send** (ส่ง) 

หมายเหตุ: คุณสามารถแนบรูปภาพโดยแตะที่  ก่อนส่งอีเมล

การดูข้อความอีเมล

1 บนหน้าจอเริ่มต้น แตะที่อีเมลแอคเคาท์ที่คุณต้องการเข้าใช้งาน (เช่น Outlook, Google หรือ Windows Live)

2 เลือกข้อความอีเมล


จากมุมมองข้อความ ให้ใช้ตัวเลือกต่อไปนี้:

- ในการตอบกลับหรือส่งต่ออีเมล แตะที่ **Respond** (ตอบกลับ)  และดำเนินการอย่างหนึ่งต่อไปนี้:
- ในการลบอีเมลหนึ่ง แตะที่อีเมลนั้นเพื่อเปิด แล้วแตะ **Delete** (ลบ) 
- ในการลบอีเมลหลายอีเมล แตะที่ด้านซ้ายสุดของอีเมลที่คุณต้องการลบ จะมีกล่องทำเครื่องหมายปรากฏขึ้น แตะที่กล่องทำเครื่องหมายที่อยู่ติดกับอีเมลแต่ละฉบับที่คุณต้องการลบ แล้วแตะ **Delete** (ลบ)

การดึงข้อมูลอีเมล

คุณสามารถตรวจสอบอีเมลใหม่ในแอคเคาท์ของคุณแบบอัตโนมัติหรือด้วยตนเองได้

ในการตรวจสอบด้วยตนเอง:

- 1 แตะ  บนหน้าจอเริ่มต้นเพื่อไปที่รายการแอปพลิเคชัน แล้วแตะแอปพลิเคชัน Email (อีเมล) หรือคุณสามารถแตะที่ช่องแสดงข้อมูล Email (อีเมล) บนหน้าจอเริ่มต้น โดยเป็นแอคเคาท์ที่คุณต้องการใช้ เช่น Hotmail, gmail และอื่นๆ
- 2 เลือกซิงโครไนซ์และ Windows Phone จะเชื่อมต่ออีเมลแอคเคาท์และดึงข้อมูลข้อความใหม่ของคุณ

ในการตรวจสอบโดยอัตโนมัติ:

- 1 Windows Phone จะดึงอีเมลโดยอัตโนมัติ ตามการตั้งค่าแอคเคาท์
- 2 คุณสามารถเปลี่ยนแปลงรอบเวลาการดึงข้อมูล (การซิงค์) โดยเปลี่ยนแปลงการตั้งค่า "ดาวน์โหลดอีเมลจาก" (โปรดดูรายละเอียดที่หัวข้อถัดไป "การเปลี่ยนแปลงการตั้งค่าอีเมลแอคเคาท์")

การเปลี่ยนการตั้งค่าของอีเมลแอดเดส

คุณสามารถตั้งค่าแอดเดสเพิ่มเติมตามความต้องการของคุณ

- 1 แตะที่ ➔ บนหน้าจอเริ่มต้นเพื่อไปยังรายการแอปพลิเคชัน และแตะแอปพลิเคชันอีเมล และคุณยังสามารถแตะที่ของแสดงข้อมูล Email (อีเมล) บนหน้าจอเริ่มต้น
- 2 แตะที่แถบแอปพลิเคชันที่ด้านล่างของหน้าจอ เพื่อเปิดเมนูตัวเลือก และแตะอีเมลแอดเดส
- 3 เลือกอีเมลที่คุณต้องการเพิ่ม ตัวเลือกที่มี เช่น Windows Live, Outlook, Yahoo! Mail, Google และแอดเดสอื่นๆ
- 4 ป้อนอีเมลแอดเดสและรหัสผ่าน จากนั้นระบบจะซิงโครไนซ์กับอีเมลแอดเดสใหม่ของคุณโดยอัตโนมัติ

คุณสามารถเปลี่ยนการตั้งค่าโดยอิงตามความต้องการของคุณ

- 1 แตะที่แถบแอปพลิเคชันที่ด้านล่างของหน้าจอ เพื่อเปิดเมนูตัวเลือก และแตะที่การตั้งค่า
- 2 คุณสามารถเปลี่ยนแปลงตัวเลือกการซิงโครไนซ์โดยแตะที่ "sync

settings" (การตั้งค่าการซิงค์) หรือทำเครื่องหมาย/ลบเครื่องหมายในช่อง "Always bcc myself" (ส่งสำเนาถึงฉันเสมอ) และ "Use an email signature" (ใช้ลายเซ็นสำหรับอีเมล)

หมายเหตุ:

- ใน "sync settings" (การตั้งค่าการซิงค์) คุณสามารถเปลี่ยนแปลงการตั้งค่าด้านล่าง
ดาวน์โหลดเนื้อหาใหม่: รอบการดึงข้อมูลเนื้อหา
ดาวน์โหลดอีเมลจากเนื้อหาเพื่อซิงค์ (อีเมล รายชื่อ ปฏิทิน): ใช้งาน/เลิกใช้เนื้อหาและข้อมูลรายละเอียดอื่นๆ ของแอดเดส

การลบอีเมลแอดเดส

- 1 แตะ ➔ ในหน้าจอเริ่มต้นเพื่อไปที่รายการแอปพลิเคชัน
- 2 แตะ Settings (ตั้งค่า) และไปที่ email & accounts (อีเมลและแอดเดส)
- 3 แตะค้างไว้ที่แอดเดสที่คุณต้องการลบ และแตะที่ลบ

Facebook

การตั้งค่าแอคเคาท์ Facebook

เมื่อคุณตั้งค่าแอคเคาท์ Facebook บนโทรศัพท์ ข้อมูลใน Facebook จะสามารถใช้ได้ผ่านทางโทรศัพท์ของคุณ จากนั้นคุณสามารถเข้าใช้งานข้อมูล Facebook ในฮับ People (บุคคล), ฮับ Pictures (รูปภาพ) และการด Me

- 1 บนหน้าจอเริ่มต้น ลากนิ้วไปทางซ้ายของรายการแอปพลิเคชัน และ **Settings** (ตั้งค่า) > **Email & accounts** (อีเมลและแอคเคาท์)
- 2 และ **Add an account** (เพิ่มแอคเคาท์) > **Facebook**.

หมายเหตุ:




- ในการตั้งค่าแอคเคาท์ Facebook บนโทรศัพท์ คุณต้องมีการเชื่อมต่อข้อมูลแบบ Cellular หรือ Wi-Fi
- คุณสามารถตั้งค่าแอคเคาท์ Facebook บนโทรศัพท์ได้เพียงครั้งละหนึ่งแอคเคาท์เท่านั้น ถ้าคุณต้องการเพิ่มแอคเคาท์อื่น คุณจะต้องลบแอคเคาท์ที่มีอยู่บนโทรศัพท์ออกก่อน

ความบันเทิง

กล้องถ่ายรูป

ก่อนใช้กล้องถ่ายรูป จะมีข้อความถามว่าคุณต้องการอนุญาตให้ระบบตำแหน่งที่ตั้งของคุณหรือไม่ การใช้ตัวเลือกนี้จะเป็นการเพิ่มข้อมูลตำแหน่งลงในรูปภาพของคุณ ดังนั้น คุณจะเห็นข้อมูลตำแหน่งที่ตั้งที่คุณถ่ายภาพ

การถ่ายภาพ

- 1 บนหน้าจอเริ่มต้น ลากนิ้วไปทางซ้ายของรายการแอปพลิเคชัน
- 2 แตะที่  **Camera** (กล้องถ่ายรูป) หรือกดปุ่ม **Camera** (กล้องถ่ายรูป) ค้างไว้เพื่อเริ่มต้นใช้กล้องถ่ายรูป
- 3 ตรวจสอบให้แน่ใจว่าได้เลือกโหมดกล้องถ่ายรูป  แล้ว ถือโทรศัพท์ใหม่ในคางในแนวตั้งหรือแนวนอน คุณสามารถชมเขาหรือออก  เพื่อชมภาพเขาหาหรือถอยออกห่างจากรัตถุที่จะถ่าย

เคล็ดลับ! หากต้องการใช้การตั้งค่าต่างๆ ของกล้องถ่ายรูป แตะเพื่อปรับการตั้งค่าต่างๆ รวมถึงแฟลช

- 4 กดปุ่มกล้องถ่ายรูปเพื่อถ่ายภาพ
- 5 ภาพถ่ายจะถูกบันทึกลงในอัลบั้ม Camera Roll บนโทรศัพท์ของคุณโดยอัตโนมัติ

คุณยังสามารถเลือกอัปโหลดภาพไปยังเว็บไซต์ รวมถึงแบ่งปันภาพผ่านทาง SkyDrive หรือ Facebook ได้อีกด้วย

เมื่อคุณถ่ายภาพแล้ว

- 1 หลังจากที่คุณถ่ายภาพ ให้ลากนิ้วไปทางขวาเพื่อดูภาพถ่ายในโปรแกรมดูรูปภาพ

เคล็ดลับ! หากต้องการดูภาพถ่ายและวิดีโอในมุมมองแบบแถบฟิล์ม (Filmstrip) ไปที่โหมดกล้องถ่ายรูปแล้วแตะที่ภาพถ่ายหรือวิดีโอ เลื่อนนิ้วเข่าหากันเหมือนกับจะยอภาพนั้นแล้วลากนิ้วไปทางซ้ายหรือขวาเพื่อดูในแบบแถบฟิล์ม (Filmstrip) การดูในแบบแถบฟิล์มจะทำงานดีที่สุดเมื่อคุณหมุนโทรศัพท์และใช้งานการดูตามแนวนอน

2. แตะภาพถ่ายค้างไว้เพื่อดูตัวเลือกภาพถ่าย เช่น การเพิ่มเป็นรายการโปรด การลบภาพ การใช้เป็นภาพพื้นหลัง หรือการอัปโหลดไปยัง Messaging หรือ Play To

การบันทึกวิดีโอ

1. บนหน้าจอเริ่มต้น ลากนิ้วไปทางซ้ายของรายการแอปพลิเคชัน
2. แตะที่  **Camera** (กล้องถ่ายรูป) หรือกดปุ่ม Camera (กล้องถ่ายรูป) ค้างไว้เพื่อเริ่มต้นใช้กล้องถ่ายรูป
3. ตรวจสอบให้แน่ใจว่าได้เลือกโหมดวิดีโอ  แล้ว ถู้อโทรศัพท์ใหม่ในแนวตั้งหรือแนวนอน
4. กดปุ่มกล้องถ่ายรูปเพื่อเริ่มต้นหรือหยุดการบันทึกวิดีโอจะถูกบันทึกลงในอัลบั้ม Camera Roll บนโทรศัพท์ของคุณโดยอัตโนมัติ

หลังการถ่ายวิดีโอ

1. หลังจากที่คุณบันทึกวิดีโอแล้ว ให้ลากนิ้วไปทางขวา แล้วแตะที่วิดีโอเพื่อเล่นในโปรแกรมดูวิดีโอ

ภาพหนึ่งที่แสดงวิดีโอของคุณจะปรากฏขึ้นบนหน้าจอ และจะปรากฏระยะเวลาขึ้นที่ด้านล่างของหน้าจอ

หมายเหตุ: ถ้า Windows Phone มี RAM ขนาด 288 MB หรือสูงกว่านั้น และถ้าโทรศัพท์ของคุณได้เพิ่มตัวเลือกนี้แล้ว คุณสามารถบันทึกและเล่นวิดีโอแบบ HD ได้ (ความละเอียดสูง 1280x720) หากคุณเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ และคัดลอกวิดีโอไปยังคอมพิวเตอร์ คุณสามารถเล่นวิดีโอแบบ HD ด้วยความละเอียดสูงสุด 1280x720

เคล็ดลับ!

- หากคุณต้องการดูวิดีโอที่ดาวน์โหลดจากเว็บไซต์บนโทรศัพท์ ให้เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ และซิงค์วิดีโอเหล่านั้นเข้ากับโทรศัพท์ คุณไม่สามารถดาวน์โหลดวิดีโอไปยังโทรศัพท์โดยอัตโนมัติได้
- ในการค้นหาวิดีโอที่บันทึกไว้บนโทรศัพท์ซึ่งคุณสามารถซิงค์เข้ากับคอมพิวเตอร์ ให้เปิดซอฟต์แวร์ Zune แล้วคลิก **Collection (คอลเลคชัน) > Videos (วิดีโอ)**
- ถ้าคุณมีภาพถ่ายหรือวิดีโอที่ต้องการลบเป็นจำนวนมาก หรือหากคุณต้องการบันทึกไฟล์เหล่านั้นลงในคอมพิวเตอร์ คุณสามารถประหยัดเวลาได้โดยการเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ และใช้ซอฟต์แวร์ Zune เพื่อดำเนินการดังกล่าว

การเพิ่มข้อมูลตำแหน่งที่ตั้งลงในภาพถ่าย

ถ้าคุณรวมข้อมูลตำแหน่งที่ตั้ง (GPS) ในภาพที่คุณถ่าย บุคคลอื่นจะเห็นข้อมูลนั้นด้วยเช่นกัน หลังจากที่คุณอัปโหลดและแบ่งปันภาพเหล่านั้น เมื่อคุณดำเนินการดังกล่าว คุณและเพื่อนๆ จะเพลิดเพลินกับการดูภาพเหล่านั้นโดยบนแผนที่โดยใช้ Bing และ Windows Live Photo Gallery และยังสามารถค้นหาภาพถ่ายอื่นๆ ที่คล้ายคลึงกับภาพเหล่านั้นบนเว็บไซต์ เนื่องจากภาพของคุณจะมีข้อมูลตำแหน่งอยู่เบื้องหลัง

- 1 บนหน้าจอเริ่มต้นลากนิ้วไปทางซ้ายของรายการแอปพลิเคชัน และ Settings (ตั้งค่า) > Applications (แอปพลิเคชัน) > Pictures + Camera (รูปภาพและกล้องถ่ายรูป)
- 2 เปิดใช้การรวมข้อมูลตำแหน่งที่ตั้ง (GPS) ในรูปที่ถ่าย

หมายเหตุ: หากคุณต้องการให้ข้อมูลนี้คงอยู่ในภาพถ่ายของคุณ ขณะที่อัปโหลดไปยัง Facebook หรือ SkyDrive ให้เปิดใช้งาน Keep location info on upload pictures (คงข้อมูลตำแหน่งบนภาพที่อัปโหลด)

เริ่มทำความรู้จักกับโหมดกล้อง ถ่ายรูป

Camera/Video Record mode (โหมด
กล้องถ่ายรูป/บันทึกวิดีโอ) - และที่
ไอคอนนี้เพื่อสลับระหว่างโหมดกล้อง
ถ่ายรูป/บันทึกวิดีโอ

Zoom (ซูม) - ซูมเข้าหรือซูมออก

Settings (ตั้งค่า) - และที่ไอคอนนี้
เพื่อเปิดเมนูตั้งค่า โปรดดูที่ การใช้
การตั้งค่าขั้นสูง ช่วยให้คุณสามารถ
ตั้งค่า Intelligent Shot (ช็อตอัจฉริยะ)
, Beauty shot (ช็อตความงาม),
ScanSearch, Photo Resolution (ความ
ละเอียดภาพถ่าย) และอื่นๆ ได้

การใช้การตั้งค่าอัจฉริยะสำหรับภาพถ่าย/วิดีโอ

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าอัจฉริยะทั้งหมด
คุณสามารถเปลี่ยนการตั้งค่าได้โดยเลื่อนปุ่มหมุน

หลังจากเลือกตัวเลือกที่เหมาะสม ให้แตะและกำหนดการตั้งค่าที่เกี่ยวข้อง

ตัวเลือกการตั้งค่า	ฟังก์ชัน
Intelligent Shot (ช็อตอัจฉริยะ)	Windows Phone จะตั้งค่าความเร็วชัตเตอร์และรูรับแสงตาม วัตถุและความสว่างเพื่อการถ่ายภาพที่ดีที่สุด
Beauty Shot (ช็อตความงาม)	Windows Phone รุ่นใหม่จะตั้งค่าไฟกัสและความสมดุลสีโดย อัตโนมัติ เพื่อแสดงโทนผิวตามธรรมชาติ

ตัวเลือกการตั้งค่า	ฟังก์ชัน
ScanSearch	คุณสามารถไปที่โหมดแอปพลิเคชัน ScanSearch ได้โดยตรง
Photo resolution (ความละเอียดภาพถ่าย)	จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์นั้นก็ยิ่งมากขึ้นเท่านั้น ซึ่งหมายถึงการใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์ให้มากขึ้น คุณสามารถลดจำนวนเมกะพิกเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้
Brightness (ความสว่าง)	Brightness (ความสว่าง) ช่วยให้คุณสามารถตั้งค่าความสว่างของภาพบันทึกภาพตามสภาพแสงได้
White Balance (ความสมดุลแสง)	ปรับสีของวัตถุโดยอัตโนมัติ คุณสามารถบันทึกภาพในสีตามธรรมชาติ โดยอิงตามวัตถุและสภาพแสง
Colour effect (เอฟเฟกต์สี)	เลือกตัวเลือกการตั้งค่าที่ต้องการบนเมนู ได้แก่ off (ปิด) , sepia (ซีเปีย) , mono (โมโน) , negative (เนกาทีฟ) , solarise (โซลาร์ไลซ์)
Quality (คุณภาพ)	เลือกระหว่าง Super fine (ละเอียดมาก) , (Fine) ละเอียด และ Normal (ปกติ) คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของรูปภาพก็มากขึ้นเท่านั้น อย่างไรก็ตาม ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า คุณสามารถจัดเก็บรูปภาพในหน่วยความจำของโทรศัพท์ได้น้อยลง

ตัวเลือกการตั้งค่า	ฟังก์ชัน
Anti-shake (ป้องกันภาพสั่นไหว)	ลดความเบลอของภาพที่เกิดจากการสั่นหรือเคลื่อนไหว
Flash (แฟลช)	การใช้ฟังก์ชัน Flash (แฟลช) ช่วยให้คุณสามารถตั้งค่าแฟลชภายในตัวกล้องให้ทำงานในสภาพแสงน้อย
Video Resolution (ความละเอียดวิดีโอ)	จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์นั้นก็จะใหญ่มากขึ้นเท่านั้น ซึ่งหมายถึงการใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บวิดีโอในโทรศัพท์ที่ใหญ่มากขึ้น คุณสามารถปรับเปลี่ยนความละเอียดเพื่อทำให้ไฟล์มีขนาดเล็กลงได้
Restore to default (เรียกคืนค่าดีฟอลต์)	รีเซ็ตเมนูและตัวเลือกการถ่ายภาพ

หมายเหตุ: ก่อนถ่ายภาพ คุณสามารถแตะที่ **Settings (ตั้งค่า) > Applications (แอปพลิเคชัน) > pictures & camera (รูปภาพและกล้องถ่ายรูป)** เพื่อเข้าใช้งานการตั้งค่าต่อไปนี้ ได้แก่ GPS, SkyDrive

รูปภาพ

เรียนรู้เพื่อดูรูปภาพและเล่นวิดีโอที่บันทึกในหน่วยความจำของโทรศัพท์ ในกรณีของวิดีโอ คุณสามารถดูได้เฉพาะวิดีโอที่บันทึกไว้ในกล้องถ่ายรูป

ฮับ Pictures (รูปภาพ)

ฮับ Pictures (รูปภาพ) คือเวอร์ชันดิจิทัลของรูปภาพในช่องใส่ภาพของ Windows Phone โดยจะแสดงภาพทั้งหมดที่คุณถ่ายด้วยกล้องบนโทรศัพท์บันทึกจากอีเมลหรือข้อความตัวอักษรหรือดาวน์โหลดจากเว็บไซต์หรือจากคอมพิวเตอร์ของคุณ



- ผนัง Times Square เป็นการแสดงภาพในโทรศัพท์จากมุมมองทั้งหมด ภาพเบลอของช่วงเวลาถ่ายภาพที่ดี

ที่สุดจะเปลี่ยนทุกห้าครั้งที่คุณเปิดเครื่องโทรศัพท์ หากคุณซิงค์โทรศัพท์โดยใช้ซอฟต์แวร์ Zune ก่อนเยี่ยมฮับ Pictures (รูปภาพ) คุณจะเห็นรูปภาพที่นี้เมื่อคุณมาถึง

- มีอะไรใหม่ คือรูปถ่ายล่าสุดที่เพื่อนหรือครอบครัวอัปโหลดไปยัง Windows Live หรือ Facebook
- Picture collection (คอลเลคชันรูปภาพ) คุณสามารถดูรูปถ่ายและวิดีโอตามอัลบั้ม วันที่ หรือรายการโปรด เมื่อคุณเพิ่มรูปภาพเป็นรายการโปรด โดยเป็นส่วนหนึ่งของอัลบั้ม Favourites (รายการโปรด) คุณสามารถใส่อัลบั้มนั้นไว้บนหน้าจอเริ่มต้นได้
- Hub background (ภาพพื้นหลังของฮับ) และที่ใดก็ได้ในฮับเพื่อเปลี่ยนแปลงภาพพื้นหลัง หรือให้เราดำเนินการให้โดยใช้ภาพของคุณ ซึ่งไม่ว่าจะเป็นวิธีการใด การเปลี่ยนภาพพื้นหลังจะเป็นการเปลี่ยนช่องแสดงข้อมูล Pictures (รูปภาพ) บนหน้าจอเริ่มต้นด้วย
- ซอฟต์แวร์ Zune ซิงค์ไฟล์โดยใช้ My Phone เพื่อย้ายภาพจากคอมพิวเตอร์

ไปยังอัลบั้มภาพบนโทรศัพท์และ กลับกัน

หมายเหตุ: เมื่อคุณไปที่อัลบั้ม Pictures (รูปภาพ) ครั้งแรก คุณจะเห็นรูปภาพ 8 ภาพจากโฟลเดอร์ 7 บนผนัง Times Square ในการดูภาพของคุณในแบบเบลอ คุณต้องแตะที่โฟลเดอร์ 7 เพื่อลบออก ผนัง Times Square จะสุ่มเลือกภาพจากอัลบั้ม Camera Roll รวมถึงอัลบั้มที่คุณซิงค์จากคอมพิวเตอร์หรือเว็บไซต์เครือข่ายสังคม

รูปแบบไฟล์ที่สนับสนุน

ประเภท	รูปแบบ
ภาพ	นามสกุลไฟล์: bmp, gif, jpg, png, tiff
วิดีโอ	<ul style="list-style-type: none">นามสกุลไฟล์: mp4Codec: MPEG4

หมายเหตุ: โทรศัพท์สนับสนุนเฉพาะรูปแบบไฟล์ JPG เมื่อแนบขึ้นไฟล์ภาพโดยใช้ Zune PC client

- รูปแบบไฟล์บางอย่างอาจไม่สามารถใช้ได้ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์

- หากขนาดไฟล์ใหญ่เกินกว่าหน่วยความจำที่มีอยู่ อาจเกิดข้อผิดพลาดเมื่อคุณเปิดไฟล์นั้น

อัลบั้ม

อัลบั้มภาพคือส่วนที่สำคัญในวิธีการจัดการภาพถ่ายและวิดีโอบนโทรศัพท์ของคุณ และบนเว็บไซต์ การทราบว่าคุณสามารถเพิ่มและลบอัลบั้มได้จากที่ใดจะช่วยให้ทุกอย่างทำงานอย่างมีระบบ ซอฟต์แวร์ Zune จะนำภาพจากอัลบั้มต่างๆ บนโทรศัพท์ ได้แก่ Camera Roll, Saved Pictures และ Received Pictures ไปไว้ในไลบรารีภาพบนคอมพิวเตอร์

หมายเหตุ: ยกเว้นเพียงการดูและลบอัลบั้ม งานอื่นๆ ทุกอย่างเกี่ยวกับอัลบั้มสามารถทำได้โดยใช้ซอฟต์แวร์ Zune บนคอมพิวเตอร์

การดูรูปภาพ

- 1 บนหน้าจอเริ่มต้น และที่ลูกศรเพื่อไปที่รายการแอปพลิเคชัน และแตะ **Pictures** (รูปภาพ) หรือแตะช่องแสดงข้อมูล **Pictures** (รูปภาพ) จากหน้าจอเริ่มต้น หากได้ใส่ไว้เป็นช่องแสดงข้อมูลที่ใช้อยู่บนหน้าจอ นั้น
- 2 ใน Pictures (รูปภาพ) ให้เลื่อนและไปยังอัลบั้มภาพ (ทั้งหมด, วันที่, รายการโปรด) และแตะที่ช่องแสดงข้อมูลภาพเพื่อเปิดและดู

ขณะที่ดูภาพ ให้ใช้ตัวเลือกต่อไปนี้:

- ในการดูภาพเพิ่มเติม ให้เลื่อนไปทางซ้ายหรือขวา
- เมื่อคุณแตะที่ภาพค้างไว้ เมนูย่อที่ คุณสามารถเลือกกำหนดโหลบ แบ่งปัน และเพิ่มลงในรายการโปรดจะปรากฏขึ้น
- ในการซูมเข้าหรือออก ให้แตะที่หน้าจอดด้วยนิ้วสองนิ้ว แล้วลากนิ้วแยกจากกัน (ลากนิ้วเข้าหากันเพื่อซูมเข้า)

การเล่นวิดีโอ

- 1 ใน Pictures (รูปภาพ) ให้เลื่อนและไปยังอัลบั้มภาพ (ทั้งหมด, วันที่, รายการโปรด) และแตะที่ช่องแสดงข้อมูลวิดีโอเพื่อเปิดและดู
- 2 แตะที่ช่องแสดงข้อมูลวิดีโอเพื่อดู
- 3 หมุนโทรศัพท์ทวนเข็มนาฬิกาเพื่อดูในแบบแนวนอน
- 4 ควบคุมการเล่นวิดีโอด้วยปุ่มเสมือน

การแบ่งปันรูปภาพ

- 1 บนหน้าจอเริ่มต้น และที่ Pictures (รูปภาพ)
- 2 ค้นหาภาพที่คุณต้องการแบ่งปัน ภาพจากอัลบั้มออนไลน์จะไม่สามารถอัปโหลดได้
- 3 แตะที่ภาพนั้นค้างไว้ แล้วแตะ **Share** (แบ่งปัน)
- 4 เลือกวิธีที่คุณต้องการแบ่งปันหรืออัปโหลดภาพไปยังเว็บไซต์ตระหวาง, ขอความตัวอักษรหรือขอความอีเมล หรือแบ่งปันไปยัง **SkyDrive**

หมายเหตุ: SkyDrive เป็นส่วนหนึ่งของ Windows Live ซึ่งเป็นบริการที่ได้รับ การคุ้มครองโดยเซิร์ฟเวอร์บนเว็บไซต์ (photos.live.com) โดยคุณสามารถจัดเก็บ และแบ่งปันเอกสารและรูปภาพได้สูงสุด 25 GB โดยไม่เสียค่าใช้จ่าย ใช้นับด้วย Windows Live ID จากนั้น คุณก็พร้อมแล้ว ที่จะดำเนินการต่างๆ

เคล็ดลับ! หลังจากที่คุณอัปโหลดภาพ ไปยัง SkyDrive จากโทรศัพท์ คุณ สามารถค้นหาและแก้ไขภาพเหล่านั้น ภายใน Windows Live Photo Gallery บนคอมพิวเตอร์โดยไม่ต้องเชื่อมต่อ กับเว็บไซต์ โดยคุณต้องมีคอมพิวเตอร์ ที่ใช้งาน Windows Vista or Windows 7 ในการดูว่าคุณได้ติดตั้ง Windows Live Photo Gallery แล้วหรือไม่ ให้คลิกที่ปุ่ม Start  บนคอมพิวเตอร์ ในช่องค้นหา พิมพ์คำว่า photo gallery และในรายการผลลัพธ์ คลิกที่ Windows Live Photo Gallery

รายการโปรดใน Pictures gallery

การใช้อัลบั้ม Favourites (รายการโปรด) บนฮับ Pictures (รูปภาพ) มีประโยชน์ มาก เนื่องจากเป็นการใส่ภาพที่น่าสนใจ ที่สุดของคุณไว้ในที่เดียวเพื่อง่ายต่อการ ดู ภาพใน Favourites (รายการโปรด) ยัง เป็นภาพจากแหล่งเดียวที่คุณสามารถ ใส่ไว้บนหน้าจอเริ่มต้น (หากคุณมีภาพ ที่ทำให้คุณมีความสุขทุกครั้งที่คุณเห็นภาพ เหล่านั้น)

- 1 บนหน้าจอเริ่มต้น แตะที่ **Pictures** (รูปภาพ) แล้วค้นหาภาพและแตะที่ ภาพนั้นเพื่อเปิด
- 2 ในโปรแกรมดูภาพ แตะที่ภาพนั้นค้างไว้ แล้วแตะ **Add to Favourites** (เพิ่มในรายการโปรด)

เคล็ดลับ! หากคุณต้องการเพิ่มภาพจากอัลบั้มออนไลน์ให้เป็นรายการโปรด ให้เปิดภาพนั้น และที่ภาพ แล้วแตะที่ Save to phone (บันทึกลงในโทรศัพท์) ภาพนั้นจะถูกเพิ่มลงในโฟลเดอร์ Saved Pictures (รูปภาพที่บันทึก) (ในฮับ Pictures (รูปภาพ) ไปที่ All (ทั้งหมด) > Saved Pictures (รูปภาพที่บันทึก)) ค้นหาภาพ แล้วทำตามขั้นตอนที่ 2 ข้างต้นเพื่อเพิ่มภาพที่บันทึกเป็นรายการโปรด

การเพิ่มหรือลบคำบรรยายภาพออกจากภาพ

การเพิ่มคำบรรยายภาพ

คุณสามารถเพิ่มคำบรรยายภาพให้กับรูปภาพที่คุณอัปโหลดไปยัง Facebook หรือ Windows Live

- 1 แตะที่ภาพนั้น แล้วแตะที่ Share (แบ่งปัน)
- 2 เลือกแอคเคาท์ที่จะอัปโหลดภาพของคุณ
- 3 แตะที่ช่องข้อความเพื่อพิมพ์คำบรรยายภาพ คุณมีเวลา 4 วินาทีเพื่อเริ่มต้นพิมพ์คำบรรยายภาพ มิฉะนั้นภาพนั้นจะถูกอัปโหลดโดยไม่มีคำบรรยายภาพใดๆ
- 4 แตะที่ Upload (อัปโหลด)

การลบคำบรรยายภาพ

คุณต้องใช้คอมพิวเตอร์เพื่อลบคำบรรยายภาพ และคุณสามารถลบคำบรรยายภาพได้จากภาพที่คุณอัปโหลดเท่านั้น

- 1 ค้นหาภาพของคุณ
- 2 ไซน์อินและทำตามขั้นตอนใน Facebook หรือ Windows Live เพื่อลบคำบรรยายภาพ

การเพิ่มข้อมูลตำแหน่งที่ตั้งลงในภาพถ่าย

เมื่อคุณรวมข้อมูลตำแหน่งที่ตั้ง (GPS) ในภาพที่คุณถ่าย บุคคลอื่นจะเห็นข้อมูลนั้นด้วยเช่นกัน หลังจากที่คุณอัปโหลดและแบ่งปันภาพเหล่านั้น เมื่อคุณดำเนินการดังกล่าว คุณและเพื่อนๆ จะเพลิดเพลินกับการดูภาพเหล่านั้นโดยบนแผนที่โดยใช้ Bing และ Windows Live Photo Gallery และยังสามารถค้นหาภาพถ่ายอื่นๆ ที่คล้ายคลึงกับภาพเหล่านั้นบนเว็บไซต์ เนื่องจากภาพของคุณจะมีข้อมูลตำแหน่งอยู่เบื้องหลัง

- 1 บนหน้าจอเริ่มต้นลากนิ้วไปทางซ้ายของรายการแอปพลิเคชันและ **Settings (ตั้งค่า) > Applications (แอปพลิเคชัน) > Pictures + Camera (รูปภาพและกล้องถ่ายรูป)**

- 2 เปิดใช้การรวมข้อมูลตำแหน่งที่ตั้ง (GPS) ในรูปที่ถ่าย

หมายเหตุ: หากคุณต้องการให้ข้อมูลนี้คงอยู่ในภาพถ่ายของคุณ ขณะที่อัปโหลดไปยัง Facebook หรือ SkyDrive ให้เปิดใช้งาน Keep location info on upload pictures (คงข้อมูลตำแหน่งบนภาพที่อัปโหลด)

เพลงและวิดีโอ

ซอฟต์แวร์ Zune

ซิงค์ไฟล์โดยใช้ My Phone เพื่อย้ายเพลงและวิดีโอจากคอมพิวเตอร์ไปยังโทรศัพท์และกลับกัน

การรับเพลง วิดีโอ และ Podcast จาก Marketplace

Zune Marketplace เป็นร้านค้าแบบครบวงจรสำหรับเพลง, Podcast, ภาพยนตร์, วิดีโอ, รายการโทรทัศน์ และอื่นๆ ข้อมูลบางอย่างสามารถเล่น ดาวน์โหลด และดูตัวอย่างโดยไม่เสียค่าใช้จ่าย แต่รายการอื่นๆ มีให้บริการซื้อหรือเช่า การเข้าใช้งาน Zune Marketplace ทำได้สองวิธีคือ:

การดาวน์โหลดหรือสตรีมเพลง โดยตรงจากโทรศัพท์:

- 1 บนหน้าจอเริ่มต้น และที่ **Music & Videos** (เพลงและวิดีโอ)
- 2 เลื่อนนิ้วไปที่ Zune แล้วแตะ **Marketplace**
- 3 ค้นหาเพลง อัลบั้ม ศิลปิน หรือรายการเพลง โดยดำเนินการอย่างหนึ่งต่อไปนี้:
 - ลากนิ้วไปทางซ้ายหรือขวา เบรส์ ในรายการชนิดที่มี แลวแตะรายการที่ต้องการ
 - กดปุ่ม Search (ค้นหา) ป้อนชื่อเพลง ชื่ออัลบั้ม หรือชื่อศิลปิน แลวแตะรายการที่ต้องการ
- 4 ทำตามคำแนะนำเพื่อรับเพลง วิดีโอ รูปภาพ และอื่นๆ มายังคอลเลคชันของคุณ

การดาวน์โหลดเพลง, Podcast, วิดีโอ, ภาพยนตร์ และรายการ โทรทัศน์ไปยังคอมพิวเตอร์ของคุณ

- 1 ไปที่ **windowsphone.com** เพื่อติดตั้ง ซอฟต์แวร์ Zune
- 2 เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สาย USB
- 3 เปิดซอฟต์แวร์ Zune แล้วทำตามคำแนะนำเพื่อจัดเพลง วิดีโอ รูปภาพ และอื่นๆ ลงในคอลเลคชันของคุณ หากคุณยังไม่ได้ไชนอิน คลิกที่ Sign In (ไชนอิน) หากคุณมีแอคเคาท์ Windows Live ID หลายแอคเคาท์ ป้อนแอคเคาท์ที่คุณใช้เมื่อตั้งค่าโทรศัพท์
- 4 คลิก **Collection** (คอลเลคชัน) แลวลากทุกอย่างที่คุณต้องการซิงค์ไปยังไอคอนโทรศัพท์ที่ด้านล่างซ้าย

หมายเหตุ: รายการบางอย่างอาจไม่มีให้สำหรับชื่อ เข้า ดาวน์โหลด หรือสตรีม Zune Marketplace ไม่ได้มีในทุกพื้นที่หรือทุกภาษา เนื้อหาใน Zune Marketplace จะแตกต่างกันไปตามพื้นที่แต่ละแห่ง หากต้องการดูข้อมูลเพิ่มเติมเกี่ยวกับการใช้ Zune Marketplace โปรดไปที่ **Zune.net**

รูปแบบไฟล์ที่สนับสนุน

ประเภท	รูปแบบ	ซิงค์จาก ซอฟต์แวร์ Zune
เสียง	นามสกุล ไฟล์: mp3, mp4, m4a, wma Codec: MP3, AAC, WMA	นามสกุล ไฟล์: mp3, mp4, m4a, wma Codec: MP3, AAC, WMA
วิดีโอ	นามสกุล ไฟล์: 3gp, 3g2, mp4, m4v, wmv Codec: MPEG4, H263, H264, VC-1	นามสกุล ไฟล์: mp4, m4v, wmv Codec: MPEG4, H.264, VC-1

การเล่นเพลง วิดีโอ และ Podcast

Windows Phone ไม่ได้เป็นเพียงแค่โทรศัพท์เท่านั้น แต่ยังเป็นเครื่องเล่นเพลงและวิดีโอ Zune ที่มีประสิทธิภาพเยี่ยมอีกด้วย

คุณสามารถฟังเพลงขณะเซิร์ฟเว็บ หรือตรวจสอบอีเมล ไลดู Podcast โปรด ขณะสื่อสารหรือเฟล็ดเพลินกับภาพยนตร์ระหว่างรอบินเที่ยวถัดไป โดยไม่ต้องพกพาอุปกรณ์อื่นๆ เพิ่มเติม เพราะ Windows Phone มีพร้อมทุกสิ่งสำหรับรองรับความต้องการด้านความบันเทิงของคุณ

- 1 บนหน้าจอเริ่มต้น และที่ **Music & Videos** (เพลงและวิดีโอ)
- 2 เลื่อนนิ้วไปที่ **Zune** แล้วแตะ **Music** (เพลง), **Videos** (วิดีโอ) หรือ **Podcasts**
- 3 ค้นหารายการที่คุณต้องการเล่นโดยดำเนินการอย่างหนึ่งต่อไปนี้:
 - ลากนิ้วไปทางซ้ายหรือขวา และที่ชนิด (เช่น ศิลปิน, อัลบั้ม หรือเพลง) แล้วลากนิ้วขึ้นหรือลงตามความจำเป็น
 - ในการค้นหา Zune Marketplace กดปุ่ม Search (ค้นหา) แล้วป้อนชื่อ

เพลง ชื่ออัลบั้ม หรือชื่อศิลปิน (Zune Marketplace อาจใช้ไม่ได้ในบางประเทศหรือภูมิภาค)




4. และรายการที่คุณต้องการเล่น หากคุณต้องการปรับระดับเสียง กดที่ปุ่มเพิ่มระดับเสียงหรือลดระดับเสียงที่ด้านข้างของโทรศัพท์

เคล็ดลับ!

- มีวิธีการที่รวดเร็วในการดูเพลงทั้งหมดในลำดับแบบสุ่ม เลื่อนนิ้วไปที่ Zune แล้วแตะที่ Play (เล่น) ไอคอนนี้จะอยู่ติดกับ Music (เพลง)
- หากคุณมีรายการมากมายในชนิดนั้นๆ (เช่น เพลงหรืออัลบั้ม) มีวิธีที่รวดเร็วในการไปยังจุดที่ต้องการในรายการโดยไม่ต้องใช้เวลามากในการเลื่อน เช่น สมมติว่าคุณอยู่ที่บนสุดของรายการเพลง (ในส่วนตัวอักษร "a") และต้องการเล่นเพลงที่ขึ้นต้นด้วยตัวอักษร "s" แตะที่ช่องสี่ที่มีตัวอักษร "a" อยู่ภายใน ในตารางตัวอักษรที่ปรากฏขึ้น แตะที่ S

การปรับการเล่น

1. เมื่อเล่นรายการหนึ่ง ให้ใช้การควบคุมต่อไปนี้เป็นเพื่อปรับการเล่น (การควบคุมบางอย่างอาจไม่มีสำหรับประเภทมีเดียทุกชนิด เช่น วิดีโอ)

แตะที่	เพื่อดำเนินการ
	เพลง: แตะที่ภาพอัลบั้ม แล้วแตะ Repeat (เล่นเพลงซ้ำ) เพื่อเล่นรายการเพลงปัจจุบันซ้ำ
	เพลง: แตะที่ภาพอัลบั้ม แล้วแตะ Shuffle (สับเปลี่ยน) เพื่อเล่นเพลงในรายการเพลงปัจจุบันตามลำดับแบบสุ่ม
	การจัดอันดับจะช่วยให้คุณจัดระเบียบคอลเลกชันเพลงของคุณได้: การจัดประเภทเพลง ศิลปิน หรืออัลบั้มโดยการจัดอันดับจะช่วยให้คุณทราบได้อย่างรวดเร็วว่าจะลบรายการใดออกไป หากคุณต้องการพื้นที่ว่างเพิ่มเติม


แต่ที่	เพื่อดำเนินการ
	เพลง: แต่เพื่อข้ามไปยังจุดเริ่มต้นของเพลงปัจจุบัน หรือข้ามไปยังเพลงก่อนหน้าในรายการเพลง (ฟังก์ชันนี้จะขึ้นอยู่กับว่าคุณได้เล่นเพลงเป็นจำนวนมากเพียงใดจนถึงปัจจุบัน) วิดีโอและ Podcast เสียง: แต่เพื่อข้ามย้อนหลังไปเจ็ดวินาทีทั้งหมด: แต่ค้างไว้เพื่อย้อนกลับรายการปัจจุบัน
	เพลง: แต่เพื่อข้ามไปยังเพลงถัดไปในรายการเพลง วิดีโอและ Podcast เสียง: แต่เพื่อข้ามไปข้างหน้า 30 วินาทีทั้งหมด: แต่ค้างไว้เพื่อไปข้างหน้าแบบเร็วในรายการปัจจุบัน
	แต่เพื่อหยุดเล่นชั่วคราว
	แต่เพื่อเล่น

เคล็ดลับ!

- ขณะเล่นเพลงหรือ Podcast เสียง คุณสามารถข้ามไปยังรายการถัดไปหรือก่อนหน้าในรายการเพลงโดยลากนิ้วไปทางขวาหรือซ้าย
- ขณะเล่นวิดีโอ และบนหน้าจอเพื่อแสดงส่วนควบคุมการเล่น กดปุ่ม Back (ย้อนกลับ) เพื่อย้อนกลับเพลงและวิดีโอ
- กดปุ่มปรับระดับเสียงขึ้นหรือลงเพื่อแสดงส่วนควบคุมการเล่นแบบย่อ คุณสมบัตินี้สามารถใช้ได้แม้ขณะที่ล็อคหน้าจอ

การแสดงรายการเพลงปัจจุบัน

ขณะที่คุณกำลังเล่นเพลง รายการถัดไปไม่ก็รายการในรายการเพลงจะปรากฏอยู่ด้านล่างภาพอัลบั้ม ในการดูรายการทั้งหมดในรายการเพลง ให้ดำเนินการดังต่อไปนี้:

- 1 แต่ที่ชื่อของเพลงปัจจุบัน (ได้ภาพอัลบั้ม)
- 2 ในการซ่อนรายการเพลง ให้รอสองสามวินาที หรือกดปุ่ม Back (ย้อนกลับ) 

เคล็ดลับ! ในการเล่นเกมอื่นในรายการเพลง ลากนิ้วขึ้นหรือลงตามความจำเป็น แล้วแตะชื่อรายการที่คุณต้องการเล่น

การแสดงรายการที่กำลังเล่น

1 ทำตามขั้นตอนใดขั้นตอนหนึ่งต่อไปนี้:

- กดปุ่มปรับระดับเสียงขึ้นหรือลง ชื่อของรายการเพลงมีจุดบั้งจะปรากฏเหนือส่วนควบคุมการเล่นแบบย่อ คุณสมบัตินี้สามารถใช้ได้แม้ขณะที่ล็อคโทรศัพท์
- ใน Music & Videos (เพลงและวิดีโอ) ลากนิ้วไปที่ History (ประวัติ)

การแสดงผลที่เกี่ยวข้องกับเพลง

- 1 ใน **Music & Videos** (เพลงและวิดีโอ) ขณะที่เล่นเพลง ให้แตะที่ชื่อศิลปิน
- 2 ลากนิ้วไปทางซ้ายหรือขวาเพื่อดูข้อมูล (เมื่อสามารถใช้ได้) เช่น อัลบั้มอื่นของศิลปินนี้ บทวิจารณ์อัลบั้ม และชีวประวัติของศิลปิน

เกมส์

ฮับ Games (เกมส์)

จากฮับ Games (เกมส์) คุณสามารถเล่นเกมที่ไม่เพียงแคบนโทรศัพท์ แต่ยังสามารถเชื่อมต่อและเล่นเกมในคอมพิวเตอร์และคอนโซล Xbox ได้อีกด้วย

- Spotlight (ข้อมูลเด่น) อ่านข่าวสารเกี่ยวกับเกมส์ Xbox LIVE เคล็ดลับและแนวโน้มจากทีมงาน Xbox LIVE
- โปรไฟล์ Xbox LIVE Gamer ดูโปรไฟล์ของคุณเพื่อดูเกมส์ที่เพิ่งเล่นเกมสการ์ด เปลี่ยนข้อมูลแอดแคทท์ และแนะนำการเปลี่ยนการดูให้เป็นข้อมูลส่วนตัวของคุณ
- คำขอ ดูคำเชิญเพื่อเข้าร่วมเล่นเกมอย่างรวดเร็ว รับการแจ้งเตือนถึงรอบในการเล่นเกมส์ที่มีการผลัดกันเล่นตามรอบ หรือรับ Nudge จากเพื่อนเพื่อไปยังการเล่นรอบถัดไป
- คอลเลคชัน ดู Xbox LIVE และเกมส์อื่นๆ ทั้งหมดที่คุณมีบนโทรศัพท์ในทีเดียว

การเล่นเกมส์

Xbox LIVE อาจไม่มีให้บริการในพื้นที่ของคุณ ในกรณีที่ไม่มีให้บริการ และคุณต้องการเล่นเกมส ให้อะแดคเคาท Xbox LIVE ที่มีอยู่หรือกำหนดแอดเคาทใหม่ขึ้น คุณจะตองติดตั้งเกมส์ลงในโทรศัพท์ ก่อนจึงจะเล่นได้

- 1 บนหน้าจอลเริ่มต้น และที่ **Games** (เกมส์)
- 2 ลากนิ้วไปทางซ้ายของ Collection (คอลเลคชัน) และแตะเพื่อเปิดเกมส์ที่คุณซื้อไว้แล้ว ถ้าคุณตองการเล่นเกมส์ Xbox LIVE คุณจะตองไชนอินใน (หรือรวมใน) Xbox LIVE
- 3 หากคุณตองการว่าคุณมีค่าเชิญเล่นเกมสหรือการแจงเตือนรอบการเล่นเกมส์หรือไม ใหลากนิ้วไปทางซ้ายของ Requests (คำขอ) หากคุณตองการเล่นเกมส์รวมกับเพื่อน แต่ไม่มีเกมส์ใดๆ บนโทรศัพท์ที่สามารถเล่นได้มากกว่าหนึ่งคน ใหลากนิ้วไปที่ด้านล่างของคอลเลคชัน แล้วแตะ Get more games (รับเกมส์เพิ่ม) เพื่อว่าคุณสามารถลองเล่นหรือซื้อเกมส์ได้จาก Marketplace


หมายเหตุ: Xbox LIVE อาจใช้ไม่ได้ในประเทศหรือภูมิภาคของคุณ

วิทย FM



เรียนรูการฟังเพลงและข่าวสารบนวิทย FM ในการฟังวิทย FM คุณตองเชื่อมตอกับชุดหูฟังที่มีให้ ซึ่งทำหน้าที่เป็นเสาอากาศวิทย

การฟังสถานี

- 1 เลียบชุดหูฟังที่มีให้เข้ากับอุปกรณ์ (ซึ่งทำหน้าที่เป็นเสาอากาศด้วย)
- 2 บนหน้าจอลเริ่มต้น และที่ **Music & Videos** (เพลงและวิดีโอ)
- 3 เลื่อนนิ้วไปที่ **Zune** แล้วแตะ **Radio** (วิทย)
- 4 ในการเลือกสถานี ให้ดำเนินการอย่างหนึ่งต่อไปนี้:
 - เลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อปรับปุ่มเปลี่ยนช่องขึ้นหรือลง
 - เมื่อคุณแตะที่ปุ่มเปลี่ยนช่องวิทยค้างไว้ เมนูย่อที่คุณสามารถเลือกเพื่อกำหนดให้เริ่มต้น ตั้งค่า แก๊ซ โหมต วิทย:ลำโพงจะปรากฏขึ้น



- แตะที่ Favourites (รายการโปรด)  เพื่อแสดงสถานีโปรด

เคล็ดลับ!

- แตะที่ Play (เล่น)  หรือ Pause (หยุดพัก)  เพื่อเริ่มต้นหรือหยุดการเล่น
- ขณะที่ลือคหน้าจอกดปุ่มปรับระดับเสียงขึ้นหรือลงเพื่อแสดงส่วนควบคุมการเล่นแบบย่อ คุณสามารถใช้ส่วนควบคุมเพื่อหยุดพักหรือกลับมาฟังวิทยุอีกครั้ง หรือข้ามไปยังสถานีถัดไปหรือก่อนหน้า

การเพิ่มหรือลบสถานีโปรด

ในการปรับคลื่นสถานีให้เร็วขึ้น ให้ลองเพิ่มบางสถานีเป็นรายการโปรด

- 1 ปรับคลื่นสถานี
 - 2 ทำตามขั้นตอนใดขั้นตอนหนึ่งต่อไปนี้:
- ในการเพิ่มสถานีเป็นรายการโปรด ให้แตะที่ Add Favourite (เพิ่มรายการโปรด) 
 - ในการลบสถานีเป็นรายการโปรด ให้แตะที่ Remove Favourite (ลบรายการโปรด) 

เคล็ดลับ! ในการแสดงสถานีโปรด แตะที่ Favourites (รายการโปรด) คุณยังสามารถใส่สถานีโปรด your favouไว้บนหน้าจอลเริ่มต้น โดยกดที่หมายเลขสถานีค้างไว้

การสลับระหว่างโหมดลำโพง และชุดหูฟัง

- 1 ขณะที่ใช้เล่นสถานี ดะหมายเลขสถานี คางไว
- 2 ดะโหมด Radio (วิทยุ): ชุดหูฟัง หรือโหมด Radio (วิทยุ): ลำโพงเพื่อสลับระหว่างสองตัวเลือก





การสลับพื้นที่วิทยุ

หากคุณเดินทางไปยังต่างประเทศ คุณอาจต้องสลับการตั้งค่าพื้นที่วิทยุเพื่อฟังวิทยุ FM ขณะที่อยู่ต่างประเทศ หากคุณเปลี่ยนแปลงการตั้งค่านี้ อย่าลืมสลับคืนสู่การตั้งค่าเดิมเมื่อกลับสู่ประเทศของคุณ



- 1 ขณะที่ใช้เล่นสถานี ดะหมายเลขสถานี คางไว
- 2 ดะที่ **Settings** (ตั้งค่า)
- 3 บนหน้าจอ Radio (วิทยุ) ดะที่ช่อง Region (พื้นที่) แลวดะชื่อของพื้นที่สถานีวิทยุที่ต้องการ

ยูทิลิตี้

การตั้งเวลาการปลุก



- 1 แตะที่  บนหน้าจอเริ่มต้นเพื่อไปยังรายการแอปพลิเคชัน และแตะแอปพลิเคชัน **Alarms** (การปลุก) 
- 2 ถ้าคุณต้องการเพิ่มการตั้งปลุกใหม่ แตะที่  ที่แถบเมนูตัวเลือกด้านล่าง มีการปลุกที่ตั้งควรวางนาฬิกาซึ่งคุณสามารถเปิดใช้งานได้
- 3 แตะ Time (เวลา) แล้วกำหนดเวลาที่ต้องการให้ส่งเสียงปลุก
- 4 ตั้งค่าการปลุกซ้ำ
ไอคอนจะแสดงวันทำงานที่คุณเลือก
- 5 เลือกเสียงที่คุณชอบและตั้งชื่อ เมื่อตั้งค่าการปลุกเสร็จแล้ว ให้แตะ  ที่ด้านล่างของเพจ



การใช้เครื่องคิดเลข

- 1 แตะที่  บนหน้าจอเริ่มต้นเพื่อไปยังรายการแอปพลิเคชัน และแตะแอปพลิเคชัน **Calculator** (เครื่องคิดเลข) 
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข

- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =



การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แตะที่  บนหน้าจอเริ่มต้นเพื่อไปยังรายการแอปพลิเคชัน และแตะแอปพลิเคชัน **Calendar** (ปฏิทิน) 
- 2 แตะ  เพื่อสร้างการจัดหมายใหม่
- 3 แตะ Subject (หัวเรื่อง) เพื่อกำหนดชื่อสำหรับการนัดหมาย
- 4 แตะ Location (ตำแหน่ง) เพื่อป้อนสถานที่ของการนัดหมาย
- 5 แตะ When (เวลา) เพื่อเลือกวันที่แล้วเลือกเวลาที่คุณต้องการเริ่มการนัดหมาย
- 6 แตะ How long (ระยะเวลา) เพื่อเลือกระยะเวลาของการนัดหมาย
- 7 หากคุณต้องการตั้งค่าการเตือน การเกิดเหตุการณ์และสถานะ ให้แตะรายละเอียดเพิ่มเติม และเลือกตัวเลือกที่ต้องการ

- 8 ถ้าคุณต้องการให้ผู้เข้าร่วมเพิ่มการนัดหมาย และ Add someone (เพิ่มบุคคล) เพื่อเลือกรายชื่อ คุณยังสามารถกำหนดว่าการนัดหมายนั้นเป็นแบบส่วนตัวหรือไม่ และจัดทำหมายเหตุดังต่อไปนี้ได้อีกด้วย
- 9 แตะ **บันทึก** เพื่อบันทึกการนัดหมายในปฏิทิน วันที่ที่มีการบันทึกการนัดหมายไว้จะมีเครื่องหมายกรอบสีเหลี่ยมสีในปฏิทินกำกับอยู่
- 10 คุณอาจต้องการเปลี่ยนแปลงรายละเอียดการนัดหมายหรือลบข้อมูลทิ้ง แตะ  เพื่อแก้ไขการนัดหมาย หรือแตะ  เพื่อลบการนัดหมาย

Office

คุณสามารถจัดการและดูไฟล์เอกสารได้ ประเภทไฟล์ที่สนับสนุนได้แก่ doc, docx, txt, xls และ xlsx

- 1 แตะที่  บนหน้าจอเริ่มต้นเพื่อไปยังรายการแอปพลิเคชัน และแตะแอปพลิเคชัน **Office** 
- 2 ในการสร้างบันทึกหนึ่งรายการ ให้แตะที่บันทึกใหม่และติดตามข้อมูลได้ที่บ้าน โรงเรียน หรือที่ทำงาน ในการดูบันทึกทั้งหมดของคุณ ให้แตะที่ All (ทั้งหมด)
- 3 ในการดูหรือแก้ไขไฟล์ Explore Excel, Explore Word, Explore PowerPoint ในลากลิ้งไปยัง Documents (เอกสาร)
- 4 แตะไฟล์หนึ่งค้างไว้ หน้าจอจะปรากฏตัวเลือกส่ง, ลบ, คุณสมบัติ

แอปพลิเคชัน Windows

- 1 ขั้นแรก ให้สร้างแอคเคาท์ Windows ป้อนชื่อผู้ใช้และรหัสผ่าน
- 2 หลังจากไชนอินเข้าสู่ระบบ รายชื่อ อีเมล และปฏิทินในแอคเคาท์ Windows จะซิงโครไนซ์กับ Windows Phone 7 ของคุณโดยอัตโนมัติ


เคล็ดลับ! ถ้าคุณเปลี่ยนแปลงแอคเคาท์ Windows Live ID หลังจากไชนอินหรือลบ ให้ทำตามขั้นตอนด้านล่าง:

Applications (แอปพลิเคชัน)
> **Settings (ตั้งค่า)** > **system (ระบบ)** > **email & accounts (อีเมลและแอคเคาท์)** > **add an account (เพิ่มแอคเคาท์)** > **Touch and hold Window Live ID to synchronise or delete (แตะ Window Live ID ค้างเพื่อซิงโครไนซ์หรือลบ)**


แผนที่

ตรวจสอบสถานที่ปัจจุบันของคุณและรับข้อมูลทิศทางเพื่อไปยังปลายทางของคุณ Windows Phone 7 ต้องเชื่อมต่อกับ Wi-Fi หรือ 3G/GPRS

Me

แตะ  เพื่อค้นหาตำแหน่งที่ตั้งของคุณ ซึ่งแท้จริงแล้วก็คือตำแหน่งที่ตั้งของโทรศัพท์ คุณสามารถดูตำแหน่งของคุณได้อย่างถูกต้องยิ่งขึ้นโดยแตะสองครั้งหรือเลื่อนนิ้วเขากากัน และขยายหน้าจอคุณยังสามารถใส่ที่ตั้งลงในหน้าจอลเริ่มต้น หรือแบ่งปันโดยการส่งข้อความหรือ hotmail

search (ค้นหา)

แตะ  และป้อนตำแหน่งที่ตั้งที่คุณต้องการค้นหา ซึ่งจะทำให้ปรากฏแผนที่ตำแหน่งที่ตั้งบนหน้าจอ

หมายเหตุ: ถ้าคุณเปิดมุมมองทางอากาศที่ด้านล่างของเพจโดยลากนิ้วขึ้นและแตะที่มุมมองนั้น คุณสามารถค้นหาตำแหน่งทางอากาศได้ และยังมีคำอธิบายถึงอาคารและพื้นที่ใกล้เคียงอีกด้วย

Marketplace

Marketplace ช่วยให้คุณสามารถดาวน์โหลดแอปพลิเคชันที่มีประโยชน์ รวมถึงเพลง และเกมส์ต่างๆ หากคุณติดตั้งข้อมูลเหล่านี้จาก Marketplace รายการข้อมูลนี้จะปรากฏในรายการแอปพลิเคชัน

- 1 แตะที่ ➔ บนหน้าจอเริ่มต้นเพื่อไปยังรายการแอปพลิเคชัน และแตะแอปพลิเคชัน **Marketplace** คุณยังสามารถแตะที่ช่องแสดงข้อมูล **Marketplace** บนหน้าจอเริ่มต้นได้อีกด้วย
- 2 Marketplace มีข้อมูลสามชนิด ได้แก่ แอปพลิเคชัน เกมส์ และเพลง เลือกข้อมูลที่คุณต้องการติดตั้งหรือดาวน์โหลด

Hotmail

Hotmail ได้รับการกำหนดค่าเมื่อคุณตั้งค่าโทรศัพท์เป็นครั้งแรก ขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ Hotmail ในโทรศัพท์ของคุณจะทำการซิงโครไนซ์กับแอคเคาท์ Windows บนเว็บโดยอัตโนมัติ

รายการสนทนาในถาดเข้าจะเป็นมุมมองดีฟอลต์ของ Hotmail
แตะปุ่ม Menu (เมนู) แล้วแตะ Refresh (รีเฟรช) เพื่อส่งหรือรับอีเมลใหม่ และซิงโครไนซ์อีเมลของคุณกับแอคเคาท์ Windows บนเว็บ

เว็บไซต์

เบราวเซอร์

เบราวเซอร์ ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหน หรือกำลังทำอะไร

การเข้าใช้เว็บ

1 แตะที่  บนหน้าจอเริ่มต้นเพื่อไปยังรายการแอปพลิเคชัน และแตะแอปพลิเคชัน **Internet Explorer** คุณยังสามารถแตะที่ช่องแสดงข้อมูล **Internet Explorer** บนหน้าจอเริ่มต้นได้อีกด้วย

2 คุณจะเข้าสู่เว็บไซต์

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการของคุณ

การใช้ตัวเลือก

แตะแถบตัวเลือก Menu (เมนู) เพื่อดูตัวเลือกเพิ่มเติม

forward (ไปข้างหน้า) - ไปข้างหน้ายังเพจที่เยี่ยมชม

share Page (แบ่งปันเพจ) - ส่งลิงค์เพจโดยใช้อีเมลหรือข้อความ

find on page (หาในเพจ) - เลื่อนแถบสีไปที่สิ่งที่คุณต้องการค้นหาบนเพจ

pin to start (ใส่ไว้บนหน้าจอเริ่มต้น) - ใส่เพลงลงในหน้าจอเริ่มต้นเพื่อเริ่มใช้งานอย่างรวดเร็ว

setting (ตั้งค่า) - ตั้งค่าตัวเลือกด้านล่าง

Allow cookies on my phone (ยอมให้ใช้คุกกี้ในโทรศัพท์)


Let Bing suggest sites as I type (ให้ Bing แสดงคำแนะนำเว็บไซต์ขณะพิมพ์ข้อความ)


การตั้งค่าเว็บไซต์ที่ต้องการ


เวอร์ชันโทรศัพท์มือถือ

เวอร์ชันเดสก์ท็อป

Delete history (ลบประวัติ) - ลบไฟล์ชั่วคราวทั้งหมด, ประวัติ, คุกกี้ และรหัสผ่านที่บันทึกจาก Internet Explorer

 Add (เพิ่ม) - เพิ่มเพลงลงใน Favourite

 Favourites (รายการโปรด) - เข้าใช้งาน / แก้ไขเพจโปรด และเพลงประวัติ

 Tabs (แท็บ) - ใช้แท็บเป็นนารีเกเตอร์สำหรับสลับระหว่างชุดเพลงต่าง ๆ

การเชื่อมต่อ

Bluetooth (บลูทูธ)

เปิดคุณสมบัติไร้สายบลูทูธ



- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร ➔ เพื่อไปยังรายการแอปพลิเคชัน
- 2 แตะ **Settings** (ตั้งค่า) > **System** (ระบบ) > **Bluetooth** (บลูทูธ)
- 3 ในการเปิดบลูทูธ ให้ลากตัวเลื่อนของสถานะไปที่ **On** (เปิด)
- 4 เริ่มต้นค้นหาอุปกรณ์บลูทูธ
- 5 แตะอุปกรณ์ที่คุณต้องการจับคู่

การเชื่อมต่อกับชุดหูฟังบลูทูธ

หลังจากจับคู่แล้ว คุณสามารถเชื่อมต่อกับอุปกรณ์บลูทูธได้ตามต้องการ

- หากบลูทูธปิดอยู่ ให้แตะที่ Bluetooth (บลูทูธ) เพื่อเปิดใช้งาน ในรายการอุปกรณ์บลูทูธ แตะชื่อของอุปกรณ์ที่จับคู่ในรายการ

หมายเหตุ:

- หากคุณต้องการปิดบลูทูธในภายหลัง ให้ไปที่ Settings (ตั้งค่า) แล้วแตะ Bluetooth (บลูทูธ) และเลื่อนสลับไปทางซ้ายเพื่อไปยังตำแหน่ง Off (ปิด)
- เมื่อดังค่าบลูทูธแล้ว Windows Phone 7 จะรู้จักค่านี้เมื่อเปิดใช้งาน
- Windows Phone 7 ไม่สนับสนุนฟังก์ชันการถ่ายโอนไฟล์ทางบลูทูธระหว่างโทรศัพท์มือถือ. สำหรับข้อมูลเพิ่มเติมเกี่ยวกับบลูทูธ โปรดดูที่ FAQ (คำถามที่พบบ่อย)

Wi-Fi

เรียนรู้เพื่อใช้คุณสมบัติเครือข่ายไร้สายของโทรศัพท์เพื่อเปิดใช้งานและเชื่อมต่อเครือข่ายไร้สายในท้องถิ่น (WLAN) ที่ใช้ได้กับมาตรฐาน IEEE 802.11 b/g/n คุณสามารถเชื่อมต่ออินเทอร์เน็ตหรืออุปกรณ์เครือข่ายอื่นๆ ได้ทุกทีที่มีจุดเชื่อมต่อหรือฮอตสปอต อุปกรณ์ของคุณใช้ยานคลื่นความถี่ไม่สอดคล้องกันและเหมาะสมสำหรับใช้ในประเทศในทวีปยุโรปทั้งหมด WLAN สามารถใช้งานได้ในประเทศสมาชิกสหภาพยุโรปโดยไม่จำกัดภายในอาคาร แต่ไม่สามารถใช้งานได้ภายนอกได้ในประเทศฝรั่งเศส



การเชื่อมต่อกับเครือข่ายไร้สาย

- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร ➔ เพื่อไปยังรายการแอปพลิเคชัน
 - 2 แตะ **Settings (ตั้งค่า) > System (ระบบ) > Wi-Fi** เพื่อเชื่อมต่อกับเครือข่ายไร้สาย
 - 3 ย้ายตัวเลื่อนไปที่ **On (เปิด)** เพื่อเปิดใช้การเชื่อมต่อแบบไร้สาย โดยส่วนใหญ่ คุณจะเห็นทั้งเครือข่ายที่ปลอดภัยและไม่ปลอดภัย
 - 4 ในขั้นนี้ ให้แตะเครือข่ายที่คุณต้องการเชื่อมต่อ
 - 5 ในหน้าจอถัดไป แตะที่ฟิลด์ข้อความ จากนั้นพิมพ์ชื่อผู้ใช้และรหัสผ่าน
 - 6 แตะ **Done (เสร็จ)** เพื่อเสร็จสิ้น
- หมายเหตุ: เพื่อป้องกันการเชื่อมต่อโดยไม่ได้ตั้งใจเข้ากับเครือข่ายที่ไม่ถูกต้องซึ่งมีชื่อเดียวกัน ค่าเดือนนี้จะปรากฏขึ้น และ Connect (เชื่อมต่อ) หากคุณมั่นใจว่าเป็นเครือข่ายที่ถูกต้อง

การแก้ไขการเชื่อมต่อ Wi-Fi

ในกรณีที่คุณต้องการเปลี่ยนแปลงการตั้งค่าของเครือข่ายไร้สาย หรือเครือข่ายนั้นไม่ปรากฏขึ้น

- 1 ให้อีกกลับไปหน้าจอ Wi-Fi Settings (การตั้งค่า Wi-Fi) เพื่อเลือกเครือข่ายที่จะแก้ไข แล้วแตะที่เครือข่ายที่คุณต้องการแก้ไขค้างไว้
- 2 แตะ **edit** (แก้ไข) เพื่อเปลี่ยนแปลงรายการที่รวบรวมโดย Windows Phone ใหม่
- 3 ถ้าคุณต้องการแก้ไขชื่อผู้ใช้และรหัสผ่าน ให้ไปที่การตั้งค่าเครือข่าย
- 4 ถ้าคุณต้องการเพิ่มหรือแก้ไขข้อมูลหรือแก้ไขให้ดำเนินการที่นี่ แตะค้างไว้เพื่อเรียกใช้ตัวเลือกหรือแก้ไข
- 5 ถ้าคุณต้องการแก้ไขข้อมูลเครือข่ายใหม่พิมพ์ในฟิลด์ที่เหมาะสม คุณต้องรับข้อมูลการตั้งค่าใหม่จากผู้ดูแลระบบของคุณ

หมายเหตุ:

- เลื่อนลงเพื่อดูตัวเลือกเครือข่ายอื่นๆ ข้อมูลนี้ควรได้รับการป้อนโดย Windows Phone 7 โดยอัตโนมัติ เมื่อมีการระบุเครือข่ายของคุณ
- ในการปิดเครือข่ายไร้สาย ให้ไปที่หน้าจอ Settings (ตั้งค่า) และตั้งค่า **Wi-Fi** เป็น **Off** (ปิด)
- เมื่อคุณเปิด Wi-Fi อีกครั้ง โทรศัพท์ของคุณจะจดจำการตั้งค่าเครือข่ายได้ และเชื่อมต่อโดยอัตโนมัติ

Play To

เรียนรู้วิธีการใช้ Play To ที่สามารถใช้ร่วมกับบริการ Digital Living Network Alliance (DLNA) ที่ช่วยให้คุณสามารถเล่นเนื้อหาในโทรศัพท์กับอุปกรณ์ที่เปิดใช้งาน DLNA DMR ที่บ้านของคุณผ่านระบบ Wi-Fi

ก่อนเริ่มต้นใช้งาน คุณต้องเปิดใช้คุณสมบัติ Wi-Fi และเพิ่มโปรไฟล์ Wi-Fi ก่อน

หมายเหตุ:

- ไฟล์บางอย่างอาจไม่สามารถเล่นบนอุปกรณ์ที่ใช้กับ DLNA-DMR ได้ ขึ้นอยู่กับอุปกรณ์นั้นๆ
- การเล่นอาจมีบัฟเฟอร์ ขึ้นอยู่กับการเชื่อมต่อเครือข่าย และเครื่องเล่นที่เปิดใช้ DLNA DMR ที่เชื่อมต่อด้วย

การเล่นไฟล์บนอุปกรณ์ที่ใช้ DLNA-DMR

- 1 บนหน้าจอเริ่มต้น ให้แตะที่ลูกศร ➔ เพื่อไปยังรายการแอปพลิเคชันและเลือก **Play To**
- 2 แตะไอคอน **Device** (อุปกรณ์) บนแถบการแจ้งเตือน และเลือกเป้าหมายอุปกรณ์ของคุณจะค้นหาอุปกรณ์ที่ใช้ใช้งาน DLNA DMR โดยอัตโนมัติ
- 3 เลือกชนิดมีเดีย > ไฟล์
- 4 เริ่มต้นการเล่นที่เครื่องเล่นที่เลือกไว้
- 5 ควบคุมการเล่นโดยใช้ไอคอนของโทรศัพท์

หมายเหตุ:

- การเล่นอาจมีบัฟเฟอร์ ขึ้นอยู่กับการเชื่อมต่อเครือข่าย และเซิร์ฟเวอร์ที่เชื่อมต่อ
- คุณสามารถค้นหาอุปกรณ์ที่ใช้ DLNA DMR เฉพาะเมื่ออุปกรณ์เหล่านั้นเปิดอยู่เท่านั้น

ตั้งค่า

ในเมนูนี้ คุณสามารถกำหนดการตั้งค่าส่วนบุคคลบนโทรศัพท์ได้ และ
➔ บนหน้าจอเริ่มต้น เพื่อไปยังรายการแอปพลิเคชัน และแต่งการตั้งค่า

ระบบ

ringtones & sounds (เสียงเรียกเข้าและเสียง)

ตั้งค่าเสียงกริ่งและการสั่น และเลือก Ringtone (เสียงเรียกเข้า), New text message (ข้อความตัวอักษรใหม่), New voicemail (ข้อความเสียงใหม่), New mail (เมลใหม่)

ตั้งค่าเพื่อเล่นเสียงสำหรับการเตือนความจำการนัดหมาย, การกดปุ่ม, ล็อคและปลดล็อค และการแจ้งเตือนอื่นๆ ทั้งหมด

theme (ธีม)

เปลี่ยนแปลงภาพพื้นหลังและสีที่เน้นของโทรศัพท์เพื่อให้เหมาะกับอารมณ์ในวันนี้ อาทิตย์นี้ หรือทั้งเดือนของคุณ

flight mode (โหมด Flight)

สลับการสื่อสารเคลื่อนที่, Wi-Fi และบลูทูธของโทรศัพท์พร้อมกัน คุณยังสามารถสลับ Wi-Fi และบลูทูธแยกกันได้

Wi-Fi

เปิดใช้ Wi-Fi เพื่อเชื่อมต่อกับเครือข่าย Wi-Fi ที่ใช้ได้

ตั้งค่า Wi-Fi – ตั้งค่าการแจ้งผ่านเครือข่าย หรือเพิ่มเครือข่าย Wi-Fi

Bluetooth (บลูทูธ)

ค้นหาและเชื่อมต่ออุปกรณ์บลูทูธ

email & accounts (อีเมลและแอคเคาท์)

ตั้งค่าอีเมล, รายชื่อ, Facebook และอื่นๆ

lock & wallpaper (ล็อคและภาพพื้นหลัง)

ตั้งค่าเพื่อเปลี่ยนแปลงภาพพื้นหลังและระยะเวลาในการปิดหน้าจอ

สลับเพื่อตั้งค่ารหัสผ่านและสร้างรหัสผ่าน 4 หลัก

location (ตำแหน่ง)

แอปพลิเคชันที่คุณเปิดใช้งานบริการแจ้งตำแหน่งก่อนหน้านี้จะสามารถเข้าถึงตำแหน่งปัจจุบันของคุณได้

mobile network (เครือข่ายโทรศัพท์เคลื่อนที่)

ตั้งค่าการเชื่อมต่อข้อมูลและการโรมมิ่งข้อมูล

สลับเพื่อตั้งค่าการเชื่อมต่อแบบ 3G และเลือกเครือข่าย

date & time (วันที่และเวลา)

ตั้งค่าวันที่ เวลา และโซนเวลา

Brightness (ความสว่าง)

ปรับความสว่างของหน้าจอ

keyboard (แป้นพิมพ์)

ตั้งค่าภาษาของแป้นพิมพ์ คุณสามารถทำเครื่องหมายเลือกให้แสดงข้อความแนะนำและแสดงแถบสีคำที่สะกดผิด, แก้ไขคำที่สะกดผิด, ใส่เววรรคหลังการเลือกข้อความแนะนำ, ใส่จุดหลังการดับเบิลคลิกแป้นเววรรค และกำหนดให้อักษรตัวแรกของประโยคเป็นตัวพิมพ์ใหญ่

region & language (ประเทศ และภาษา)

ตั้งค่าภาษาที่แสดง, รูปแบบพื้นที่, วันที่แบบย่อ, วันที่แบบยาว, วันแรกของสัปดาห์, ภาษาของระบบ และภาษาของเบราว์เซอร์และการค้นหา

ease of access (ความสะดวกในการใช้งาน)

ตั้งค่าโหมด TTY/TDD

speech (เสียงพูด)

ตั้งค่าการยืนยันการเล่นเสียง และใช้เสียงพูดเมื่อล็อคโทรศัพท์

find my phone (ค้นหาโทรศัพท์)

กำหนดแผนที่, เสียงกริ่ง, ล็อค หรือลบโทรศัพท์ของคุณที่ windowsphone.live.com

หากคุณทำโทรศัพท์หาย คุณสมบัตินี้จะช่วยคุณในการค้นหาโทรศัพท์ ไปที่ windowsphone.live.com และใช้นับอื่นด้วย Windows live ID และรหัสผ่าน

phone update (อัปเดตโทรศัพท์)

แจ้งคุณเมื่อพบการอัปเดตใหม่ ใช้การเชื่อมต่อข้อมูลโทรศัพท์เคลื่อนที่เพื่อตรวจสอบการอัปเดต

about (เกี่ยวกับ)

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์

reset your phone (รีเซ็ตโทรศัพท์)

การรีเซ็ตจะลบเนื้อหาส่วนตัวของคุณทั้งหมด รวมถึงแอปพลิเคชันที่คุณซื้อ และดาวน์โหลด และจะเรียกคืนการตั้งค่าจากโรงงาน

feedback (ความเห็น)

ส่งความเห็นเพื่อช่วยปรับปรุง Windows Phone

แอปพลิเคชัน

games (เกมส์)

เชื่อมต่อเพื่อเปิด/ปิด Xbox LIVE

Internet Explorer

เลือกว่าคุณอนุญาตให้ใช้คุกกี้ใน
โทรศัพท์ของคุณได้หรือไม่ และยัง
สามารถกำหนดว่าจะให้ Bing แนะนำ
เว็บไซต์ขณะที่คุณพิมพ์ข้อความหรือไม่
เลือกการตั้งค่าเว็บไซต์ที่ต้องการ
เวอร์ชันโทรศัพท์มือถือหรือเวอร์ชัน
เดสก์ท็อป

delete history (ลบประวัติ)

ลบไฟล์ชั่วคราว, ประวัติ, คุกกี้ และ
รหัสผ่านที่บันทึกไว้ทั้งหมดออกจาก
Internet Explorer

maps (แผนที่)

สลับการเปิด/ปิดตัวเลือกแบ่งปันข้อมูล
กับ Google

โดยจะใช้ตำแหน่งของคุณเพื่อแสดงผล
การค้นหาในพื้นที่ได้ดียิ่งขึ้น

delete history (ลบประวัติ)

ลบการค้นหาแผนที่ก่อนหน้านี้ ใส่ว่า
แสดงข้อมูลภาพจากโทรศัพท์

messaging (ข้อความ)

ตั้งค่าเปิด/ปิดการยืนยันการส่ง SMS

music & videos (เพลงและ วิดีโอ)

เปิด/ปิดการเชื่อมต่อกับ Zune
เปิดเพื่อดาวน์โหลดข้อมูลโดยอัตโนมัติ
เพื่อเพิ่มประสิทธิภาพในการใช้งาน Zune

Office

username (ชื่อผู้ใช้)

ป้อนข้อมูลผู้ใช้เพื่อระบุตัวคุณในช่อง
ความเห็น และช่วยในการรวมมือและ
ติดตามตรวจสอบเอกสาร

SharePoint

- แหล่งข้อมูล
คุณสามารถสร้างพื้นที่ว่างบนโทรศัพท์
โดยล้างแคช SharePoint ซึ่งจะ
เป็นการลบไฟล์และประวัติชั่วคราว
ทั้งหมดของ SharePoint
- การขัดแย้ง
SharePoint ช่วยให้คุณสามารถเลือก
วิธีจัดการกับการขัดแย้งระหว่างไฟล์
บนโทรศัพท์และบนเซิร์ฟเวอร์ คุณ
สามารถเลือกรหัสที่คุณต้องการแก้ไข
การขัดแย้ง

- Notify me and I'll resolve the conflict manually (แจ้งให้ฉันทราบเพื่อแก้ไขการขัดแย้งด้วยตนเอง)
- Automatically replace item on the phone (แทนที่รายการบนโทรศัพท์โดยอัตโนมัติ)
- startup option (ตัวเลือกการเริ่มต้น)
ทำเครื่องหมายเพื่อเปิดลิงค์
SharePoint เสมอ
- reset (รีเซ็ต)
เรียกคืนการตั้งค่าดีฟอลต์

OneNote

สลับการเปิด/ปิดการซิงโครไนซ์อัตโนมัติ
เปิดเพื่อซิงโครไนซ์บันทึกโดยอัตโนมัติ
เมื่อคุณเปิดเพจ บันทึกเพจ หรือเปิดส่วน

people (บุคคล)

อิมพอร์ตรายชื่อในซิมจะซิงค์กับรายชื่อใน
Windows Live ออนไลน์ของคุณ

- เรียงลำดับตามชื่อ / นามสกุล
- แสดงชื่อตามชื่อ-นามสกุล / นามสกุล-ชื่อ

phone (โทรศัพท์)

ตั้งค่าหมายเลขข้อความเสียง
แสดงข้อมูลผู้โทรของฉันแก่ทุกคน/ ไม่มี
ใคร / รายชื่อของฉัน
เปิด/ปิดการส่งต่อสาย
เปิด/ปิดตัวช่วยการโทรออกต่างประเทศ
เปิด/ปิดความปลอดภัยซิม

pictures & camera (รูปภาพ และกล้องถ่ายรูป)

ตั้งค่าตัวเลือกด้านล่าง
เปิด/ปิด Allow the camera button to
wake up the phone (ใช้ปุ่มกล้องถาย
รูปเพื่อเปิดโทรศัพท์)
เปิด/ปิด Include location (GPS)
information in pictures you take (รวม
ข้อมูลตำแหน่งที่ตั้ง (GPS) ในรูปที่ถ่าย)
เปิด/ปิด Auto upload to SkyDrive (อัป
โหลดอัตโนมัติไปยัง SkyDrive)
เปิด/ปิด Keep location information on
uploaded pictures (คงข้อมูลตำแหน่ง
บนภาพที่อัปโหลด)

radio (วิทยุ)

ตั้งค่าตัวเลือกภูมิภาค

North America (อเมริกาเหนือ)/ World (โลก)/ Japan (ญี่ปุ่น)

search (ค้นหา)

สลับการเปิด/ปิดตัวเลือกแบ่งปันข้อมูลกับ Google

โดยจะใช้ตำแหน่งของคุณเพื่อแสดงผลการค้นหาในพื้นที่ใดดียิ่งขึ้น

ทำเครื่องหมายเลือกเพื่อแสดงข้อมูลแนะนำจาก Bing ขณะที่คุณพิมพ์

delete history (ลบประวัติ)

ลบค่าที่ค้นหาก่อนหน้านี้ออกจากโทรศัพท์

การอัปเดตซอฟต์แวร์ อัปเดตซอฟต์แวร์โทรศัพท์

Windows Phone Update จะช่วยให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์ให้เป็นเวอร์ชันล่าสุด โทรศัพท์จะเตือน Windows Phone Updates โดยอัตโนมัติด้วยบริการ Windows Phone Update และจะติดตั้งอัปเดตในโทรศัพท์โดยใช้ซอฟต์แวร์ Zune ที่รันอยู่ในคอมพิวเตอร์ของผู้ใช้ โปรดไปที่เมนูการตั้งค่าของ 'PHONE' (โทรศัพท์) จากซอฟต์แวร์ Zune และคลิก 'UPDATE' (อัปเดต) เพื่อตรวจสอบการอัปเดตที่มีอยู่

*ติดต่อศูนย์บริการเพื่อรับข้อมูลเพิ่มเติม

อุปกรณ์เสริม

โทรศัพท์เคลื่อนที่รุ่นนี้มีอุปกรณ์เสริมหลากหลายให้คุณเลือกใช้ ซึ่งอุปกรณ์เสริมบางชิ้นอาจมีการแยกขาย เลือกใช้อุปกรณ์เสริมเหล่านี้ตามความต้องการในการสื่อสารส่วนตัวของคุณ โปรดสอบถามเกี่ยวกับอุปกรณ์เสริมที่มีจำหน่ายได้จากตัวแทนจำหน่ายในพื้นที่ของคุณ (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล
เชื่อมต่อโทรศัพท์
LG-E900 ของคุณเข้า
กับคอมพิวเตอร์



แบตเตอรี่



คู่มือการใช้
เรียนรู้เพิ่มเติมเกี่ยวกับ
โทรศัพท์ LG-E900



ชุดหูฟัง สเตอริโอ



Microsoft SHG
(คู่มือเริ่มต้นการใช้
งาน)
ช่วยให้คุณเริ่มต้นใช้
งาน Windows Phone



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

อุณหภูมิตัวอ่อน

สูงสุด: +55°C (คายนรก)
+45°C (ขณะชารจ)

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด
ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงบุดโคล เขตธนบุรี กรุงเทพฯ 10600
วันและเวลาทำการ : จันทร์-อาทิตย์, 07:00 - 19:00น.
Call center : 0-2878-5757

FAQ (คำถามที่พบบ่อย)

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณในโทรศัพท์มีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อพนักงานฝ่ายบริการ

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
Bluetooth (บลูทูธ)	ชุดหูฟังบลูทูธ	คุณไม่สามารถฟังเพลงด้วยชุดหูฟังบลูทูธระยะไกลได้	<ul style="list-style-type: none">* ตรวจสอบว่าคุณไม่ได้ต่อชุดหูฟังกับโทรศัพท์• ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อ กับชุดหูฟังสเตอริโอ• ตรวจสอบว่ารูปแบบเพลงที่คุณพยายามฟังสนับสนุนโดยชุดหูฟัง• ตรวจสอบว่าระยะห่างระหว่างชุดหูฟังและอุปกรณ์ไม่เกิน 10 เมตร และไม่มีกำแพงหรือสิ่งกีดขวางอื่นๆ คั่นอยู่
Bluetooth (บลูทูธ)	ชุดหูฟังบลูทูธ	คุณไม่สามารถฟังเสียงวีดีโอด้วยชุดหูฟังบลูทูธระยะไกลได้	ไม่สนับสนุน หากคุณต้องการฟังเสียงวีดีโอ โปรดใช้ช่องเสียงหูฟังแทนชุดหูฟังบลูทูธ

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
Bluetooth (บลูทูธ)	โปรไฟล์ที่สนับสนุนบลูทูธ	โปรไฟล์ใดที่สนับสนุนสำหรับ Windows Phone 7?	HFP (โปรไฟล์แฮนด์ฟรี) HSP (โปรไฟล์ชุดหูฟัง) A2DP(โปรไฟล์การเผยแพร่เสียงชั้นสูง) AVRCP(โปรไฟล์รีโมทคอนโทรล A/V) - เพลง: สนับสนุนเล่น/หยุดชั่วคราว/เพลงก่อนหน้า/เพลงถัดไปเท่านั้น PBAP(โปรไฟล์เข้าใช้สมุดโทรศัพท์)
Bluetooth (บลูทูธ)	การเชื่อมต่อบลูทูธ	ฟังก์ชันที่ใช้ได้ผ่านบลูทูธมีอะไรบ้าง?	เชื่อมต่อชุดหูฟังสเตอริโอ/โมนอ, ชุดติดรถยนต์
Bluetooth (บลูทูธ)	การเชื่อมต่อบลูทูธ	ใช้อินเตอร์เน็ตขณะซึ่งโครโนซ์ระหว่างโทรศัพท์และคอมพิวเตอร์ได้หรือไม่? (ในกรณีดังกล่าวคอมพิวเตอร์เชื่อมต่อกับ LAN แบบใช้สาย)	ไม่สนับสนุน

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
Bluetooth (บลูทูธ)	การรับส่งข้อมูลรายชื่อ	มีวิธีถ่ายโอนข้อมูลรายชื่อไปยังโทรศัพท์ผ่านบลูทูธหรือไม่? เช่น รายชื่อของโทรศัพท์อื่นย้ายไปยังโทรศัพท์ผ่าน BT	ไม่สนับสนุน
Bluetooth (บลูทูธ)	พิมพ์	คุณสามารถพิมพ์เอกสาร MS Office (MS word, Excel, PDF, ฯลฯ) โดยใช้ BT หรือระบบไร้สายใดหรือไม่?	ไม่สนับสนุน
ข้อมูล	สำรองข้อมูล	คุณเอิมปอร์ตรายชื่อจากโทรศัพท์เครื่องเก่าไปยัง Windows Phone 7 อย่างไร?	<ul style="list-style-type: none"> ใส่ซิมการ์ดเก่าของคุณในโทรศัพท์เครื่องใหม่ แล้วไปที่ Settings (การตั้งค่า) เลื่อนไปที่ Applications (แอปพลิเคชัน) และ People (บุคคล) > Import SIM contacts (เอิมปอร์ตรายชื่อในซิม) คุณไม่สามารถดำเนินการนี้ผ่าน Zune ได้

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
ข้อมูล	การซิงโครไนซ์	ข้อจำกัดเมื่อซิงโครไนซ์ข้อมูลระหว่าง Windows Phone 7 และคอมพิวเตอร์คืออะไร?	ใน Windows Phone 7 จะใช้แอปพลิเคชัน "Zune" แทน "Activesync" ข้อจำกัดของ Zune คือ ในขณะที่ซิงโครไนซ์ (เพลง, วิดีโอ และรูปภาพ) จะไม่สามารถเล่นไฟล์บนโทรศัพท์ได้
ข้อมูล	การซิงโครไนซ์	คุณซิงโครไนซ์ระหว่างโทรศัพท์และคอมพิวเตอร์ภายใต้ Windows Vista และ Win7 อย่างไร?	โดยใช้แอปพลิเคชันของ Microsoft "Zune" ซึ่งสามารถดาวน์โหลดได้จากเว็บไซต์ของ MS
ข้อมูล	การอัปเดตผ่านเว็บ	สำรองข้อมูลผู้ใช้โดยอัตโนมัติเมื่ออัปเดตผ่านเว็บใดหรือไม่?	Zune สนับสนุนการสำรองแฟลชทั้งหมด แต่ไม่สนับสนุนการสำรองข้อมูลผู้ใช้แยกต่างหาก
อื่นๆ	เวลาการโทร	เวลาการโทรจะคำนวณแตกต่างกันตามรูปแบบ (เช่น 2G/3G, CDMA ...) หรือไม่?	รูปแบบ CDMA: เวลาการโทรจะเริ่มคำนวณเมื่อคุณกด "call" หลังจกป้อนหมายเลข รูปแบบ 2G/3G: เวลาการโทรจะเริ่มคำนวณเมื่อเชื่อมต่อสายแล้ว
อื่นๆ	อีเมล	คุณหาการตั้งค่าเซิร์ฟเวอร์ POP3 และ SMTP ได้จากที่ใด?	โปรดติดต่อผู้ดูแลระบบอีเมลสำหรับความช่วยเหลือ

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
อื่นๆ	Active X	สนับสนุน Active X เช่นเดียวกับคอมพิวเตอร์หรือไม่?	ไม่สนับสนุน
ฟังก์ชันโทรศัพท์	แบตเตอรี่	คุณตรวจสอบว่าแบตเตอรี่ชาร์จเต็มแล้วได้อย่างไร?	สถานะการชาร์จแบตเตอรี่จะแสดงที่ด้านบนของหน้าจอ
ฟังก์ชันโทรศัพท์	ตัวเลือก W&P	ใช้ตัวเลือก W(รอ) & P(หยุดชั่วคราว) เมื่อบันทึกหมายเลขโทรศัพท์ในรายชื่อใดหรือไม่?	ใช้ได้ แต่สนับสนุนการใช้แป้นพิมพ์ฮาร์ดแวร์เท่านั้น ไม่สนับสนุนแป้นพิมพ์บนหน้าจอ
ฟังก์ชันโทรศัพท์	Office Mobile	แก้ไขไฟล์ในแอปพลิเคชัน Office ของมือถือได้หรือไม่?	อ่านได้เท่านั้น <ul style="list-style-type: none"> โปรดทราบว่า Microsoft Office Mobile ไม่สนับสนุนคุณสมบัติบางอย่างที่พบใน Microsoft Office 2010 หากเอกสารมีเนื้อหาที่ไม่สนับสนุนใน Office Mobile คุณยังสามารถเปิดเอกสารในโทรศัพท์ได้ แต่จะไม่แสดงเนื้อหาที่ไม่สนับสนุน

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชัน โทรศัพท์	การตั้งค่า เสียงเรียก เขา	ฉันจะตั้งค่าเสียง เรียกเขาได้ อย่างไร?	ไปที่รายการแอปพลิเคชัน และแตะ Settings (ตั้งค่า) > Ringtone & sounds (เสียงเรียกเขาและเสียง) เพื่อตั้งค่า Ring Tone มีการเตือนชนิดต่างๆ และเสียงเรียก เขาที่แตกต่างกันให้คุณระบุให้บุคคล ต่างๆ ได้ ใน Start ให้แตะ People (บุคคล) > รายชื่อที่ต้องการเปลี่ยน > Edit (แก้ไข) > Ringtone (เสียงเรียกเขา)
ฟังก์ชัน โทรศัพท์	การตั้งค่า เสียงเรียก เขา	ฉันจะใช้เพลงที่ ชอบเป็นเสียงเรียก เขาได้อย่างไร?	Marketplace ช่วยให้คุณค้นหาและ โหลดเสียงเรียกเขาที่ชอบได้ ไปที่รายการแอปพลิเคชัน และแตะ Marketplace > Music (เพลง) และ เรียกดูและเลือกเสียงเรียกเขาที่ชอบ โปรดทราบว่า Marketplace อาจใช้ ไม่ได้ในบางประเทศหรือภูมิภาค
ฟังก์ชัน โทรศัพท์	ภาษาที่ สนับสนุน	เปลี่ยนภาษาได้ หรือไม่?	Windows Phone 7 ของคุณ สนับสนุนภาษาต่างๆ ถึง 6 ภาษา (เยอรมัน, อังกฤษ (สหราชอาณาจักร/ สหรัฐอเมริกา), สเปน, ฝรั่งเศส, อิตาลี) หากคุณต้องการเปลี่ยนการตั้งค่า ให้ แตะ Settings (ตั้งค่า) > Region & language (ประเทศและภาษา) > Display language (ภาษาที่ใช้แสดง)

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์	การตั้งค่าเสียง	ตั้งค่าเสียงระบบและเสียงเรียกเขาได้อย่างไร?	คุณสามารถปรับเพลง เสียงเรียกเขา และเสียงระบบได้ด้วยปุ่มปรับระดับเสียง <ul style="list-style-type: none"> ไปที่ "Settings (ตั้งค่า) > Ringtone & sounds" (เสียงเรียกเขาและเสียง)
ฟังก์ชันโทรศัพท์	การตั้งค่าเวลา	คุณตั้งค่าเวลาในโทรศัพท์ได้อย่างไร?	Applications list (รายการแอปพลิเคชัน) > Settings (ตั้งค่า) > Date & time (วันที่และเวลา) > ตั้งค่าตัวเลือก Automatically เป็น Off > ตั้งเวลา
ฟังก์ชันโทรศัพท์	Youtube	ดูวิดีโอคลิปจาก Youtube ได้หรือไม่?	สามารถดูได้ผ่าน Marketplace YouTube player โปรดทราบว่า Marketplace YouTube player อาจใช้ไม่ได้ในบางประเทศหรือภูมิภาค
ฟังก์ชันโทรศัพท์	อายุใช้งานแบตเตอรี่	เวลาสนทนาของโทรศัพท์นานเท่าใด?	การโทร: 360 นาที (บน 3G)

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์	กล้องถ่ายรูป	มีตัวเลือกบันทึกหรือลบรูปภาพทันทีหลังจากถ่ายหรือไม่?	รูปภาพจะบันทึกโดยอัตโนมัติไปที่ Picture Viewer (โปรแกรมดูรูปภาพ) โดยเลื่อนไปทางขวาและที่รูปภาพที่ถ่ายค้างไว้ ดูตัวเลือกที่ใช้ได้ (เช่น Adding to favourites (การเพิ่มในรายการโปรด), Deleting (การลบ) ฯลฯ)
ฟังก์ชันโทรศัพท์	อีเมล	ตั้งค่าการฟิวเตอร์อีเมลใดหรือไม่?	สามารถฟิวเตอร์อีเมลได้ผ่านการใช้ฟังก์ชัน "ค้นหา"
ฟังก์ชันโทรศัพท์	อีเมล	ตั้งค่าเสียงเตือนเมื่อได้รับอีเมลได้หรือไม่?	[ขั้นตอน] Settings (ตั้งค่า) > ringtones & sounds (เสียงเรียกเข้าและเสียง) > New email (อีเมลใหม่) > เลือกรายการ
ฟังก์ชันโทรศัพท์	การตั้งค่าเบราว์เซอร์	ฉันจะเปลี่ยนการตั้งค่าความเป็นส่วนตัวและการตั้งค่าเบราว์เซอร์อื่นๆได้อย่างไร	ไปที่ Settings (ตั้งค่า) > applications (แอปพลิเคชัน) > Internet Explorer เพื่อลบคุกกี้และคุณสามารถปิดการแชร์ตำแหน่งได้โดยใช้ Settings (ตั้งค่า) > system (ระบบ) > location (ตำแหน่ง)

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์	เซนเซอร์รับสัญญาณ	คุณจะทำเปิดหน้าจอ LCD ระหว่างการสนทนาได้อย่างไร?	เซนเซอร์รับสัญญาณถูกออกแบบมาให้เปิด LCD ตามค่าเริ่มต้นระหว่างการสนทนา
ฟังก์ชันโทรศัพท์	ล๊อคซิม	ใช้ซิมการ์ดจากผู้ให้บริการรายอื่นได้หรือไม่?	โปรดติดต่อร้านที่จำหน่ายโทรศัพท์ของคุณเพื่อตรวจสอบว่ามีบริการล๊อคซิมหรือไม่ หากไม่มีการล๊อคซิม คุณเสียบัณฑิตหรือบริการบางอย่างอาจใช้ไม่ได้เนื่องจาก การตั้งค่าโทรศัพท์หรือเครือข่าย
ฟังก์ชันโทรศัพท์	ล๊อคซิม	Windows Phone ถูกล๊อคซิม ในกรณีนี้ LG สามารถช่วยฉันได้หรือไม่	การล๊อคซิมขึ้นอยู่กับผู้ให้บริการเครือข่ายที่จำหน่าย Windows Phone ของคุณ โปรดติดต่อผู้ให้บริการเครือข่ายหรือร้านที่จำหน่าย Windows Phone ให้คุณ
ฟังก์ชันโทรศัพท์		สนับสนุน Adobe Flash หรือไม่ (คล้ายกับเบราว์เซอร์ของคอมพิวเตอร์)	ไม่สนับสนุน
ฟังก์ชันโทรศัพท์		สนับสนุนบริการสตรีมมิ่งหรือไม่	ไม่สนับสนุนโปรโตคอลสตรีมมิ่งบางอย่าง (เช่น RTSP) สนับสนุน HTTP-Progressive และ IIS SmoothStreaming ขึ้นอยู่กับเว็บไซต์ที่คุณดูและแอปพลิเคชันที่คุณใช้

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
คุณสมบัติของโทรศัพท์	ระบบ	เทคโนโลยี GSM technology แบบระบบ, สามระบบหรือสองระบบ? (ตัวอย่างเช่น: 1900Mhz, 900, 1800, 850)	สนับสนุนแบบระบบ
คุณสมบัติของโทรศัพท์	คุณสมบัติของโทรศัพท์	ใช้อุปกรณ์ GPS ภายนอกได้หรือไม่	ไม่ได้ มีอุปกรณ์ GPS ในตัวอยู่ภายในอุปกรณ์ Windows Phone 7 ของคุณ
Wi-Fi	คำถามเบื้องต้นเกี่ยวกับ Wi-Fi	ฉันใช้ Wi-Fi (เครือข่ายไร้สาย) ทำอะไรได้บ้าง?	คุณสามารถเชื่อมต่ออินเทอร์เน็ตหรืออุปกรณ์เครือข่ายอื่นๆ ได้ทุกที่ที่มีจุดเชื่อมต่อหรือฮอตสปอต
Wi-Fi	คำถามเบื้องต้นเกี่ยวกับ Wi-Fi	Wi-Fi เป็นบริการจากผู้ให้บริการใช้หรือไม่?	ไม่ใช่ ผู้ใช้สามารถเข้าถึงอินเทอร์เน็ตผ่าน AP (จุดเชื่อมต่อ) ได้
โซลูชันการกู้คืนข้อมูล	รหัสผ่านหาย	คุณต้องทำอะไรเมื่อคุณลืมรหัสผ่าน? คุณจะได้รับรหัสผ่านได้อย่างไร หากลืม?	ติดต่อผู้ให้บริการ

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
โซลูชันการ กู้คืนข้อมูล	รีเซ็ต ค่าจาก โรงงาน การอัปเดต ผ่านเว็บ	<p>ฉันต้องการ รีเซ็ตโทรศัพท์ เพื่อปรับปรุง ประสิทธิภาพ ฉัน ต้องทำอะไร?</p> <p>ฉันต้องการอัปเดต ซอฟต์แวร์ที่ รันในโทรศัพท์ เพื่อปรับปรุง ประสิทธิภาพ ฉัน ต้องทำอะไร?</p>	<p>1. รีเซ็ตเป็นค่าจากโรงงาน และที่ Applications list (รายการ แอปพลิเคชัน) > Settings (ตั้ง ค่า) > about (เกี่ยวกับ) > reset your phone (รีเซ็ตโทรศัพท์) การรีเซ็ตจะลบเนื้อหาส่วนตัวของคุณ ทั้งหมด รวมถึงแอปพลิเคชันที่คุณซื้อ และดาวน์โหลด และจะเรียกคืนการตั้ง ค่าจากโรงงาน</p> <p>2. พยายามอัปเดตเวอร์ชัน SW ล่าสุด ผ่านเว็บ โทรศัพท์จะเตือน Windows Phone Updates โดยอัตโนมัติด้วย บริการ Windows Phone Update และจะติดตั้งอัปเดตในโทรศัพท์ โดยใช่ซอฟต์แวร์ Zune ที่รันอยู่ใน คอมพิวเตอร์ของคุณเมื่อเชื่อมต่อกับ โทรศัพท์</p> <p>หากคุณยังไม่ได้ติดตั้ง ซอฟต์แวร์ Zune ให้ไปที่ www.windowsphone.com เพื่อ ติดตั้ง</p> <p>คำเตือน! การดำเนินการ "รีเซ็ตเป็นค่าจาก โรงงาน" ข้อมูลผู้ใช้ทั้งหมดจะถูกลบ ลูกค้าน่าสงสัยของข้อมูลก่อนรับการ รีเซ็ตเป็นค่าจากโรงงานและอัปเดต ผ่านเว็บ</p>

ชนิด	ชนิดย่อย	คำถาม	คำตอบ
โซลูชันการกู้คืนข้อมูล	รีเซ็ตเป็นค่าจากโรงงาน	เมื่อประสิทธิภาพลดลงจากเมื่อก่อนต้องทำอย่างไร?	<p>1. รีเซ็ตเป็นค่าจากโรงงาน และที่ Applications list (รายการแอปพลิเคชัน) > Settings (ตั้งค่า) > about (เกี่ยวกับ) > reset your phone (รีเซ็ตโทรศัพท์)</p> <p>การรีเซ็ตจะลบเนื้อหาส่วนตัวของคุณทั้งหมด รวมถึงแอปพลิเคชันที่คุณซื้อและดาวน์โหลด และจะเรียกคืนการตั้งค่าจากโรงงาน</p> <p>2. พยายามอัปเดตเวอร์ชัน SW ล่าสุดผ่านเว็บ โทรศัพท์จะเตือน Windows Phone Updates โดยอัตโนมัติด้วยบริการ Windows Phone Update และจะติดตั้งอัปเดตในโทรศัพท์ โดยใช่ซอฟต์แวร์ Zune ที่รินอยู่ในคอมพิวเตอร์ของคุณเมื่อเชื่อมต่อกับโทรศัพท์</p> <p>หากคุณยังไม่ได้ติดตั้งซอฟต์แวร์ Zune ให้ไปที่ www.windowsphone.com เพื่อติดตั้ง</p> <p>*ขอควรระวัง</p> <p>ในกรณีรีเซ็ตเป็นค่าจากโรงงานและอัปเดตผ่านเว็บ ข้อมูลผู้ใช้ทั้งหมดจะถูกลบ</p> <p>ดังนั้น ลูกค้าน่าต้องสำรองข้อมูลไว้ก่อน</p>

LG-E900 User Guide - English



- **This guide helps you to start using your phone. If you need more information, please visit www.lg.com.**
- Some of the contents of this manual may not apply to your phone, depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.



Congratulations on your purchase of the advanced and compact LG-E900 phone by LG, designed to operate with the latest digital mobile communications technology.

Copyrights and trademarks

Rights to all technologies and products that comprise this device are the property of their respective owners:

- This product includes software  licensed from MS, an affiliate of the Microsoft Corporation. Microsoft and software bearing the Microsoft name are registered trademarks of the Microsoft Corporation. Before using this product, refer to the Microsoft software license terms for Windows Phone 7 software agreement. at the back of this guide for information about rights and restrictions.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc.
- © 2010 Microsoft Corporation. All rights reserved. Microsoft, Internet Explorer® Mobile, Windows® Phone, Windows® Phone Marketplace, Xbox

LIVE®, Zune®, <list Windows and all other trademarked names and logos that are referenced in the materials, in alphabetical order> are trademarks of the Microsoft group of companies.

Contents

Guidelines for safe and efficient use 6

Assembling 11

Getting to know your phone..... 11

Open view 12

Installing the USIM and battery 13

Navigating your Windows Phone 16

Using the touch screen 16

Getting to know your Start screen ... 19

Knowing and navigating the screen. 19

Customising the Start screen..... 24

Accessing applications..... 25

Getting to know the application bar. 25

Customising your Windows Phone .. 28

Entering text..... 30

Downloading applications from
Marketplace 31

Getting Started 32

Signing in with a Windows Live ID... 32

Importing your contacts..... 33

Staying in Sync..... 33

Communicating 34

Phone 34

Messaging 37

Email 39

Facebook 43

Entertainment 44

Camera..... 44

Pictures 49

Music & Videos..... 53

Games 58

FM Radio 59

Utilities..... 61

Setting an alarm 61

Using your calculator 61

Adding an event to your calendar.... 61

Office..... 62

Windows applications..... 63

Maps 63

Marketplace 64

Hotmail 64

The Web	65
Browser	65
Connectivity	66
Bluetooth	66
Wi-Fi	67
Play To.....	69
Settings	70
system.....	70
applications.....	72
Software update	75
Phone software update	75
Accessories	76
FAQ	79

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model LG-E900 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.935 W/kg (10g) and when worn on the body is 1.47 W/Kg(10g).
- The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments; it may cause damage to the phone and void the warranty.

Efficient phone operation

Electronic and medical devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Mobile phones may interfere with some hearing aids.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.

- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- If your vehicle is equipped with an airbag, ensure it is not obstructed by your mobile device or accessories. It may fail or cause a serious injury if obstructed when deployed.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Excessive sound and pressure from earphones can causing hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service centre.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Assembling

Getting to know your phone

Headset jack

Power/Lock key

- Long press (three seconds) to the power on/off.
- Short press to turn the screen off.

Earpiece

Proximity sensor

ALS(Ambient Light Sensor)

Search button

Open Quick Search

Start button

Return to the Start screen;
Start the Voice Recognition function (press and hold).

Back button

Return to the previous screen.

Mouthpiece



WARNING:

Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protective film on the proximity sensor of the LCD, as this can cause the sensor to malfunction.

Volume keys

- **When the screen is idle:** volume of system tone & ring tone.
- **During a call:** earpiece volume.
- **When playing a track:** controls track volume.



Charger, data cable (USB cable port)

TIP! Before connecting a USB cable, wait until the phone has powered up and been registered on the network.

Camera key

- Go directly to camera preview by pressing the camera key.


Open view



Installing the USIM and battery

1 Remove the battery cover

Press the battery cover release button as shown in the image below (1). Lift the cover away from the phone (2).

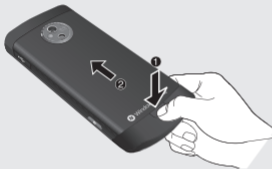

2 Remove the battery

Using the cut-out at the bottom, lift the battery out of its compartment.



⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card

Put the USIM card into the USIM card holder. Make sure the gold-coloured contact area on the card is facing into the phone. Push the USIM card holder back.



4 Install the battery

First, insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.



5 Charging your phone

Open the charger port cover on the side of your LG-E900. Insert the charger connector into the port and plug the charger into a mains electricity outlet.





You cannot switch on the phone if the battery is fully discharged. It takes approximately four to five minutes to reach a charge state sufficient for booting by TA charger.


It takes approximately 14-15 minutes longer to charge using a USB connection.


If the battery is critically low, the image for the critically low battery will appear to notify you to charge for longer.


NOTE: The battery must be fully charged initially to improve battery life.

 **WARNING:** Do not connect the charger to the phone without the battery being installed. You must check the battery is inserted before charging.

 **WARNING:** Do not remove the battery or USIM card while charging the phone.

 **WARNING:** There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries in accordance with the manufacturer's instructions.

 **WARNING:** Unplug the charger from the mains and phone during lightning storms to avoid electric shock or fire.

 **WARNING:** Make sure that no sharp items come into contact with the battery. This could pose a fire risk.

Navigating your Windows Phone

Using the touch screen

Touch screen tips

Your phone's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.

NOTE:

- To avoid scratching the touch screen, do not use sharp objects.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or if exposed to water.
- For optimal use of the touch screen, remove the screen protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body.

- For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches by sharp objects, such as a stylus or pen.

NOTE:

- Your phone turns off the touch screen when you do not use it for a specified period. To turn on the screen, press the [Power] button.
- You can also adjust the backlight time or change the wallpaper. On the Start screen, go to the application list and select **Settings > lock & wallpaper**.

Universal gestures on your touch screen

For most applications, natural gestures can be used to move about and give commands. To type text, use the onscreen or the hardware keyboard.

The following gestures are used to move around for your Windows Phone 7:

Tap

A tap is a single, quick downward touch on the screen. Tap is used to execute commands (like pressing Enter on a PC). Tapping also stops any movement on the screen.



Double tap

A double tap is two quick downward touches on the screen in the same place. The double tap commands the phone to zoom in or out, as appropriate.



Touch and hold

To touch and hold, the finger is pressed down and held there for a few seconds.



Scroll

Scrolling is for moving objects upwards and downwards.

The finger is pressed down and moved in the desired direction. To end the scrolling, the finger is lifted up.



Flick

Flicking is for moving objects sideways.

The finger is pressed down and moved in the desired direction. To end the gesture, the finger is lifted up.



Pinch and stretch

Pinch and stretch are opposites of each other. These gestures are often used with maps to zoom in and out.

Pinching is achieved by pressing two fingers down on the screen and bringing them together. This zooms in on content, while centering the image between the finger tips. For stretching, the fingers are moved apart from each other to zoom out on an image.




Getting to know your Start screen

From this screen you can access menu options, make a call, view the status of your phone and much more.



Knowing and navigating the screen

Start screen is the beginning of the Windows Phone 7 experience for you after you power on your phone. The Start screen displays application tiles that you have pinned and placed in a position of your choice for quick launch. Pressing the [Start] Button  on the phone always returns you to the Start screen, no matter what application is running.

1 Simply swipe your finger to the left, right, up or down to view them.

You can also customise tiles on the Start screen, which are shortcuts to your favourite menus and applications.

NOTES: When you are in a standby display after unlocking the phone, swipe your finger upwards to see the Start screen displaying application tiles.

Tiles on the Start screen

A tile is an easily recognisable visual shortcut for an application or its content. You can place tiles anywhere on the phone Start experience.

Tiles that use the tile notification feature can update the tile graphic or title text, or increment a counter, enabling you to create a personalised, “at a glance” Start experience. Examples include displaying if it is your turn in a game, the weather, or how many email messages you have received.

The Start screen is always presented in portrait view.

Icon	Description
------	-------------



Make calls, with quick access to recent callers, favourites, and all your contacts. Dial manually using the numeric keypad. Just tap the voicemail icon to listen to voice message you want, in any order you like.



Touch to access People hub, the integrated communication application for emails, messages, contacts and other information.



Send and receive SMS text messages. Conversations are saved in an instant chat style, so you can see a history of messages you've sent and received. Send MMS messages with a picture you've taken.



Your Windows Phone works with Microsoft Exchange, Microsoft Outlook Web App and many of the most popular email systems, including Hotmail, Yahoo! Mail, Google and others. Save attached photos and graphics to your Saved Pictures.

Icon	Description
------	-------------



Touch Play To to stream videos, music, and pictures from your phone to Digital Living Network Alliance (DLNA) compatible playback devices.



With ScanSearch, you can search product and local information for streets, cities, or countries. ScanSearch allows you to view local business information, including locations and contact information.



Enter events on your new Windows Phone. Subscribe to calendars. Set alerts to remind you of events, appointments and deadlines. Plus, they get synced back to the calendar on your Windows Live and vice versa.



Touch to access the Internet Explorer.



Access to Xbox LIVE to play a game and invite a friend to play it with you. Download new games onto your phone.



View photos and videos you've taken with your new Windows Phone, received in Email or MMS messages, or synced from your computer's Zune Software. (Windows OS only) View them in portrait or landscape format. Zoom in on photos for a closer look. Send an email or MMS messages with attached photos.



Play musics, videos and podcasts stored in the device by connecting to your PC to synchronise your stuff. Listen to FM radio. Go to marketplace.

Icon	Description
------	-------------



Search the Application Store for your Windows Phone applications and musics you can purchase or download, using your Wi-Fi or cellular data network connection. Read reviews or write your own reviews for your favourite apps. Download and install the applications on your Start screen.

NOTES: The arranged location, name, or design of tiles may vary by your setting status, area, service provider, plan, and version of Windows Phone software. Application functionality and availability may vary depending on the country or region where you purchase and use your Windows Phone. Contact your service provider for more information.

Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.



[Status bar]

Icon	Description
	Signal strength
	HSDPA
	3G
	2G-GPRS
	2G-EDGE
	Call forwarding
	Roaming


Icon	Description
	Wireless network signal strength
	Bluetooth status
	Ringer mode
	Input status
	Battery power level
	System clock

Customising the Start screen



You can customise the layout of Tiles on the Start screen. You can pin all sorts of things to the screen, including apps, websites, map locations, and even contacts. If you pin a contact to the Start screen, you'll get all of that person's feed updates-right from the tile.




To pin more applications to Start open the application list, touch and hold the item then tap pin to start.

- If you'd like to move a tile somewhere else on the Start screen, tap and hold the tile, and then move it wherever you want.
- To remove a tile, touch and hold it, and tap unpin .

Navigating and setting applications

Accessing applications

To access your Windows Phone's applications:

- 1 On the Start screen, tap the arrow  to access the application list.
- 2 Scroll down to the tile if it isn't already visible.
- 3 Select an application.
- 4 Press the **Back** button  to return to the previous screen; Press the **Start**  button to return to the Start screen.



NOTES:


- You can add a shortcut to an application by tapping and holding the application icon from the application list. You can move the application to the location you want on the Start screen.
- Your Windows Phone has a built-in motion sensor that detects its orientation. If you rotate the phone while using some features, the interface will automatically switch to landscape view.

Getting to know the application bar

To set an application, you can use the below application bar and application bar menu at the bottom of the screen.

For example, to set the Alarms

- 1 On the Start screen, tap the arrow  to access the application list.
- 2 Tap **Alarms** .
- 3 Tap the application bar to see the application menu or to display icon buttons with the text hints.
- 4 Select the icon button or menu that you want to set.

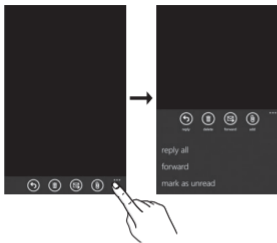

Application bar

The Application bar provides a view that displays icon buttons with text hints and an optional context menu if you tap the visual row of dots or flicks up the Application bar. This view can be hidden again by tapping outside of the menu area or on the dots, using the back button, or selecting a menu item or Application bar icon.

Application bar menu

The Application bar menu is an optional way to access specific tasks from the Application bar. The Application bar menu can be accessed by tapping the visual row of dots in the Application bar or by flicking the Application bar up. This view can be hidden again by tapping outside of the menu area or on the dots, using the back button, or selecting a menu item or Application bar icon.

NOTES:

- A maximum of five menu items can be displayed.
- If no menu items are displayed, only the icon text hints are displayed.
- The Application bar menu will remain on the screen until you perform an action.

Application bar icons

The following are some of the application setting icons that are frequently used.



new



add



minus



check



close



cancel



sync



refresh



question mark



exclamation



back



next



search



delete



save



folder



video



camera



e-mail



settings



favourites



add to favourites



download



upload



share



edit



overflow dots



play



pause



previous/rewind




next/fast forward

Customising your Windows Phone


Get more from your phone by customising it to match your preferences.

Setting the current time and date

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > date & time**.
- 3 Flick the **Set automatically** bar and change the date and time and other options.

Turning on or off the ringtone and sounds

You can adjust the Ringtone and sound like Ringtone, New text message, New voicemail, New email, and so on.

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > ringtones & sounds**.


Switching to silent mode

You can switch the silent mode on or off by flicking the **Ringer** status bar left or right.

Adjusting the volume of ringtones

Press the Volume key up or down to adjust the ringtone volume.

Selecting a wallpaper for the Start screen

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > lock & wallpaper > change wallpaper**.
- 3 Select an image and save.
You can also change the Screen time-out and password.

NOTE:

- LG is not responsible for any use of default images or wallpapers provided on your phone.

Adjusting the brightness of the display

You can quickly adjust the display brightness by scrolling left or right on the indicator line of the screen.

To adjust the brightness in the setting menu,

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > brightness**.
- 3 Drag the slider for **Automatically adjust** to Off and tap the desired brightness level.

NOTE: The brightness level of the display will affect how quickly the phone consumes battery power.

Locking your SIM card

You can lock your phone by activating the PIN supplied with your SIM card.

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings** and drag to select **application > phone**.
- 3 Drag the **SIM security Slider** to **On**.
- 4 Enter your PIN and select **enter**.

NOTE:

- Once the PIN lock is enabled, you must enter the PIN each time you turn on the phone.
- If you enter an incorrect PIN too many times, your SIM card will be blocked. You must then enter a PIN unlock key (PUK) to unblock the SIM card.

Entering text

You can enter text by selecting characters on the virtual keypad.

You cannot enter text in some languages. To enter text, please check out and select from the supported languages for writing. (**Settings > System > keyboard**)



Entering text with the Phonepad

- 1 Tap the input panel icon.
- 2 Tap characters to enter your text.


NOTES:

- The phone features several typing aids, such as text suggestions that appear above the keyboard, auto-correction, and context-specific keyboard layouts. (**Settings > System > keyboard**)
- Windows Phone 7 supports only full alphabet layouts, such as QWERTY, AZERTY, and QWERTZ.
- The shift key allows you to type capital letters. There are three shift modes: On, Off and Caps Lock (tap and hold).
- The emoticon key brings up the emoticons picker.
- Tapping and holding a, i, e, u, o on the screen displays an accent picker.

Downloading applications from Marketplace

Marketplace lets you easily find and acquire music and applications (including games) to enhance your Windows phone.

Individual category pages have been added to the site for apps, games and music.

- On the Start screen, tap  to go to your App list and tap **Marketplace**



Or, tap the **Marketplace** tile from the Start screen.

- Press the **Search** button to search for apps and tap the search string again to edit and search.
- Type in the desired string and tap and the results are displayed below on the same page.
- Tap a **list item** to go to the correct Marketplace page.

- While browsing or searching for an app, you can tap on an application or game and the Details page for the app will appear.
- Select the item you want to buy and tap **download**.



NOTE:

- Pictures, podcasts, and videos are not available on Marketplace.
- This feature may not be available depending on your region.


Getting Started

When you turn on your phone for the first time, you will be guided through essential settings. Please follow the instructions on the screen to activate your phone.

The following are the recommended steps.

SELECT LANGUAGE > WINDOWS PHONE SETTINGS > TIME ZONE and sign in with your Windows Live ID

Signing in with a Windows Live ID

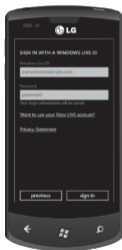

To get applications, play Xbox LIVE games, use a Zune Pass, automatically synchronise Windows Live information to the web and more, you need to sign in with a Windows LIVE ID.

Your Windows Live ID is the email address you use to sign in to services like Xbox LIVE®, Zune®, Hotmail®, and so on. If you can't remember the email address you use:

For Xbox LIVE: On your Xbox 360® console, sign in with your gamer tag, then press the Guide button on your controller (the one in the middle that looks like the Xbox logo). In Settings, click **Account Management > Windows Live ID**.

For Zune: Sign in to the Zune software on your PC. Right-click your profile picture and click Switch user to see your Windows Live ID. To reset your password or get a reminder,

go to <http://account.live.com/ResetPassword.aspx>.

If you haven't yet signed in with a Windows Live ID, there are a few things you won't be able to do on your phone at first (such as, get applications or play Xbox LIVE games).

Importing your contacts



When you set up your email or Facebook account, your contacts are imported automatically into your People hub. And when you add Facebook, your friends' feeds appear in your People hub, their photos show up in your Pictures hub, and your own feeds pop up in your Me tile.

To set up a Facebook (or any kind of email) account:

- 1 Tap the arrow on the Start screen to go to your App list.
- 2 Tap Settings > email & accounts.

Getting your contacts from your old phone is also easy. Put your old SIM card into your new phone, and then go to Settings. Flick to applications, tap people, and then tap import SIM contacts.

Staying in Sync








To sync your music, videos, pictures, and updates from your computer to your phone (or vice versa), you'll need the Zune software.

- 1 Go to windowsphone.com to install the Zune software.
- 2 Connect your phone to your computer using the USB cable.
- 3 Open the Zune software, and then follow the instructions to get your music, videos, pictures, and so on into your collection.
- 4 Click collection, and then drag everything you want to sync to the phone icon in the lower left.

Communicating

Phone


Making phone calls

- 1 Touch .
- 2 Tap .
- 3 Enter the number on the keypad.
To delete a digit, touch .
- 4 Touch  to make a call.
- 5 To end a call, touch .

You can also place calls using the Phone tile on the Start screen. You can dial calls.

TIP! To enter “+” to make international calls, touch and hold down [0+].

Calling your contacts

- 1 Touch People to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 In the list, touch the contact you want to call, and then select the number to use if there is more than one for that contact.

Answering and rejecting a call

When your phone rings, tap the answer tab to answer.

Tap the **ignore** tab to reject an incoming call.

TIP! When the phone rings, Turn down the volume button on the left if you want to switch to silent ringer mode.

Flight mode (disable wireless communications)





Some locations may require you to turn off your phone's wireless connections by placing your phone in Flight mode.

Tap **SETTINGS > flight mode**. This features toggles your phone's mobile, Wi-Fi, and Bluetooth communications simultaneously.

Adjusting call volume


To adjust the volume during a call, use the volume up & down button on the left side of the phone.

Making a second call

- 1 During your initial call, touch the  then tap add call .
- 2 Call the number, or search your contacts using the  or .
- 3 Touch the call icon to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch PRESS TO SWAP on the top of the screen to toggle between calls.
- 6 To end active calls, touch **end call**. If there is no active call, it will end the Hold call.

NOTE: You will be charged for each call you make.

Viewing your call history

On the Start screen, press the  to view the Call log.


View a complete list of all dialed, received, and missed voice calls.

TIP! Touch any single call log entry to view the date, and time of the call.

TIP! Tap the Application bar tab, then touch **delete all** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding, and other special features offered by your service provider.

- 1 On the Start screen, touch .
- 2 Tap the Applications bar at the bottom of the call history screen and open the **Call Settings** menu.
- 3 Scroll and tap call settings and choose options that you want to adjust.

Voicemail number - Edits the voicemail number


Show my caller ID to - Choose whether to display your number on an outgoing call.

international assist- Helps to automatically correct some common mistakes while dialling internationally or dialling while abroad.

Searching for a contact


There are two ways to search for a contact:

On the Start screen

- 1 On the Start screen, touch the **People** hub tile to open your contacts (People hub).
- 2 Touch  and enter the contact name using the keypad.


TIP! To search for the initial of a name, touch the Contacts tab at the top of the screen and select Groups. This will display a list of all your groups.

From the application menu

- 1 On the Start screen, touch  to go to the applications menu.
- 2 Touch the People application and select the desired profile.

Adding a new contact

- 1 On the Start screen, touch the People application.

- 2 If you want to add a picture to the new contact, touch .
You can use a saved picture or take a new one.
- 3 Touch the desired item and tap a text field to open the touch keyboard.
- 4 Touch the **Done** icon to save the current added information.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch the save icon to save the Contact

TIP!

- Tap the Application bar tab, and then touch “delete” to delete the contact you just saved.
- When you long tap a contact in a people list, a short menu that you can choose to pin to start, edit and delete appears.

Favourite Contacts



You can classify frequently called contacts as favourites.



Adding a contact to your Favourites (Pin to the Start screen)


- 1 On the Start screen, touch  to open your profile contacts.
- 2 Touch a contact to view the details.
- 3 Touch **Pin to start** on the application menu, and then your favourite contact pins to Start screen.

Messaging



Sending a text message

- 1 On the Start screen, tap **Messaging**  > **New** .
- 2 Do one of the following:
 - Begin typing a person's name in the To: box, and then tap a matching contact name in the list. Repeat to add more recipients, and their names will be added automatically in the To: box.



- Enter the person's mobile phone number or their email address in the To: box. To enter additional recipients, tap Enter after each one.
- Tap **Add** , flick to a contact, and then tap it. Repeat to add more recipients, and their names will be added automatically in the To: box.
- 3 Tap the message box, type your message, and then tap **Send** .

NOTES: If you want to attach data on your messaging, touch  at the bottom of the screen and choose the desired file. Remember that you are able to attach pictures only.

Replying to a text message

- 1 On the Start screen, tap **Messaging** , and then tap the conversation that has the text message you received.
- 2 Tap the message box, type your response, and then tap **Send** .

Forwarding a text message


- 1 On the Start screen, tap **Messaging** , and then tap the conversation that has the text message you want to forward.
- 2 Tap and hold a message, and then tap **Forward**.
- 3 Type the person's name, mobile phone number, or email address in the To: box.
- 4 Tap the message box, type a message if you'd like, and then tap **Send** .

NOTES:

- Your mobile operator might charge you extra for text messaging, and this service must be available with your current phone plan.
- Text messages are also called SMS (Short Message Service) messages and can be up to 160 characters long.
- If your text message is longer than 160 characters, it will be sent in one or more additional messages.
- Sometimes mobile operators will send a text message that you can't reply to

or forward, and the message box says Read-only message.

Saving a picture from a text message

- 1 On the Start screen, tap **Messaging** .
- 2 Tap a conversation that has a picture, and then tap the picture.
- 3 Tap and hold the opened picture, and then tap Save to phone. The picture is saved in the Saved Pictures album on your phone.

NOTES:

- Your mobile operator might charge you extra for text messaging, and this service must be available with your current phone plan.
- Text messages that have a picture attached are also called MMS (Multimedia Message Service) messages.
- Some pictures you receive might be protected using digital rights management and can't be saved to your phone. However, the picture can still be set as the wallpaper on your phone.

Email

Setting up an email account

Whether it's personal or work-related email, you can use it on your Windows Phone by setting up different types of email accounts. Depending on the email account you set up on your phone, other items from your account (such as contacts, calendar, and more) can be retrieved as well.

NOTE: To set up an email account on your phone, you must have a working cellular data or Wi-Fi connection. For more information about connecting to a Wi-Fi network, see [Connect to a Wi-Fi network](#).

Setting up a Windows Live account

When you're first setting up your phone, you're asked to sign in with your Windows Live ID. If you didn't sign in with it at that time or if you have more than one Windows Live ID, you can use the steps below to set up your primary Windows Live ID or additional Windows Live IDs.

On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email & accounts**.

1 Tap **Add an account > Windows Live** and follow the instruction on the screen.

NOTES:

- The first Windows Live account that you set up can't be deleted from your phone.
- If you set up additional Windows Live IDs on your phone, photos in those additional accounts won't be synced to your phone.
- You can create a Hotmail account here and retrieve new email messages from Hotmail to your Inbox. When you access this Hotmail application, the number of new emails is displayed on the email tile.

Setting up a Microsoft Exchange email account

You can use the following steps to set up an email account that is on a Microsoft Exchange Server. (For example, your email account at work might be on a Microsoft Exchange Server.) You can also use the steps in the following procedure to set up other email accounts that use Exchange ActiveSync—including a hosted Microsoft Exchange email account or an Outlook Web App account.

- 1 On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email & accounts**.
- 2 Tap **Add an account > Outlook**.

Setting up an email account from an Internet Service Provider (ISP)

When you set up an email account, your phone will try to automatically find correct settings for your email account. The email account might be one that's through your Internet Service Provider (ISP), or it might be another IMAP or POP email account from another provider.

- 1 On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email & accounts**.
- 2 Tap **Add an account > Other account**.



The following is a list of settings that you'll need to know beforehand when the correct email account settings can't be found automatically. Generally, you can find this information on the provider's website.


- The email account type (POP or IMAP)


- The incoming email server address
- The outgoing (SMTP) email server address
- Server authentication settings
- SSL requirements for incoming email
- SSL requirements for outgoing email

Sending an email message

After you set up an email account on your phone, you can send or receive emails on that account.

- 1 On the Start screen, tap the email account that you want to access (for example, Outlook, Google, or Windows Live).
- 2 Tap New .
- 3 Do one of the following:
 - In the To: text box, tap Add , and then choose a contact.
 - Tap in the To: text box, and then start typing an email address. Your phone will offer suggestions as you type.



- To remove a recipient, tap their name or email address, and then tap Remove.
- 4 Tap in the Subject: text box and type a subject.
 - 5 Tap below the Subject: text box, type your email, and then tap **Send** .

NOTE: You can attach pictures by tapping  before sending it.

Viewing email messages

- 1 On the Start screen, tap the email account that you want to access (for example, Outlook, Google, or Windows Live).
- 2 Select an email message.

From the message view, use the following options:

- To reply to or forward an email, tap **Respond** , and do one of the following:
 - To delete one email, tap on the email to open it, and then tap **Delete** .

- To delete multiple emails, tap on the far left of an email you want to delete. A check box will appear. Tap the check box next to each email you want to delete, and then tap **Delete**.

Retrieving your email

You can automatically or manually check your account for new email.

To check manually:

- 1 Tap  on the Start screen to go to your App list and tap Email application.
Or, you can also tap the Email tile on Start screen, and which is the account you want to use, like Hotmail, gmail, and so on.
- 2 Choose synchronise and your Windows phone will then connect to your email account and retrieve your new messages.


To check automatically :

- 1 Windows phone retrieves emails automatically as the setting of the account.

- 2 You can change the period of retrieving(syncing) by changing "download email from" setting. (Please refer to the next category "Changing your email account's setting" for details.)

Changing your email account's settings

You can set up additional accounts based on your own preferences.

- 1 Tap  on the Start screen to go to your App list and tap Email application. Or, you can also tap the Email tile on Start screen.
- 2 Touch the Application bar at the bottom of the screen to open the options menu, and tap add email account.
- 3 Choose the email you want to add. There are options such as Windows Live, Outlook, Yahoo! Mail, Google and other account.
- 4 Enter your email address and password, then it will automatically synchronise with your new email account.


You can change settings based on your own preferences.

- 1 Touch the Application bar at the bottom of the screen to open the options menu, and tap settings.
- 2 You can change detail sync options by tapping "sync settings" or checking/discheking "Always bcc myself" and "Use an email signature".

NOTES:

- In "sync settings" you can change the settings below
download new content : the period of retrieving contents
download email from content to sync (email, contacts, calendar) : enable/disable the contents and other detailed account information.

Deleting your email account

- 1 Tap  on the Start screen to go to your App list.
- 2 Tap Settings and go to email & accounts.
- 3 Touch and hold the account you want to delete and tap delete.

Facebook

Setting up a Facebook account

When you set up your Facebook account on your phone, Facebook info is available throughout your phone. You can then access Facebook info in the People hub, Pictures hub, and the Me card.

- 1 On the Start screen, flick left to the Apps list, tap **Settings > Email & accounts**.
- 2 Tap **Add an account > Facebook**.

NOTES:




- To set up your Facebook account on your phone, you must have a working cellular data or Wi-Fi connection.
- You can only have one Facebook account set up on your phone at a time. If you want to add a different account, you'll need to delete the existing one on your phone first.


Entertainment

Camera

Before using the camera, you will be asked whether you want to allow it to use your location. Allowing this option will add location info to your pictures, so you can see where they were taken.

Taking a picture

- 1 On the Start screen, flick left to the Apps list.
- 2 Tap  **Camera**.
Or press and hold the Camera key to start the camera.
- 3 Make sure the camera mode  is selected. Hold the phone steady, either vertically or horizontally. You can zoom in or out  to get closer or further away from your subject.

TIP! Want to play with camera settings? Tap  to adjust various settings, including flash.

- 4 Press the Camera key to take a picture.
- 5 The picture is automatically saved in the Camera Roll album on your phone.

You can also choose to upload pictures to the Web, including automatically sharing your pictures to SkyDrive or Facebook.

Once you've taken the photo

- 1 After you take a picture, flick right to see it in the picture viewer.

TIP! Want to see your pictures and videos in filmstrip view? Go to the camera, tap a picture or video, pinch it as if to shrink it and then flick left or right to see the filmstrip. The filmstrip works best when you turn your phone sideways and use a in landscape view.

- 2 Tap and hold the picture to view picture options, such as adding it as a favourite, deleting it, using it as wallpaper, or uploading it to Messaging or Play To.

Recording a video

- 1 On the Start screen, flick left to the Apps list.
- 2 Tap  **Camera**.
Or press and hold the Camera key to start the camera.
- 3 Make sure the video mode  is selected. Hold the phone steady, either vertically or horizontally.
- 4 Press the Camera key to start or stop recording.
The video is automatically saved in the Camera Roll album on your phone.

After shooting a video

- 1 After you record a video, flick right, and then tap it to play it in the video viewer.

A still image representing your video will appear on the screen and the duration will be shown on the bottom of the screen.

NOTE: If your Windows Phone has 288 MB RAM or higher, and your phone has added the option, you can record and play HD video (1280x720 high-def resolution). If you connect your phone to your computer and copy the video to it, you can play HD video in its full 1280x720 resolution.

TIPS!

- If you want to watch videos downloaded from a website on your phone, connect your phone to your PC and sync them to your phone. You can't automatically download videos to your phone.
- To find a video you took on your phone that you synced to your computer, open the Zune software, then click **Collection > Videos**.
- If you have a lot of pictures or videos that you want to delete, or if you want to save them to your computer, you can save time by connecting your phone to your computer and using the Zune software to do the work for you.

Adding location info to my pictures

If you include location (GPS) information in the pictures you take, the information can be seen by others after you upload and share them. Once you do, you and your friends can have fun viewing these pictures on a map

using Bing and Windows Live Photo Gallery, and even searching the Web for other pictures just like it because the location is embedded in your picture behind the scenes.

- 1 On the Start screen, flick left to the Apps list, and tap Settings > Applications > Pictures + Camera.
- 2 Turn on Include location (GPS) info in pictures you take.

NOTE: If you want this information to stay with your pictures when you upload them to Facebook or SkyDrive, turn on Keep location info on upload pictures.


Getting to know the Camera mode

Camera/Video Record mode - Tap this icon to switch between Camera/Video Record modes

Zoom - Zoom in or zoom out.

Settings - Touch this icon to open the settings menu. See Using advanced settings. Allows you to set up Intelligent Shot, Beauty shot, ScanSearch, Photo Resolution, and so on.

Using Photo/Video Smart Settings

From the viewfinder, touch  to open all smart settings options.

You can change the settings by scrolling the wheel.

After selecting the appropriate option, tap and set the related setting.

Setting Options	Function
Intelligent Shot	Your Windows Phone automatically sets the shutter speed and aperture according to the subject and brightness for the optimum photograph.
Beauty Shot	Your new Windows Phone automatically sets the focus and colour balance to express the natural skin tone.
ScanSearch	You can directly to the ScanSearch application mode.
Photo resolution	The more pixels, the larger the file, which means that files take up more memory space. If you want to store more pictures on your phone, you can reduce the number of megapixels to make the files smaller.
Brightness	Brightness enables you to set the recording brightness according the lighting conditions.
White Balance	Automatically adjusts the colour of the subject. You can record in natural colours depending on the subject and lighting conditions.

Setting Options	Function
Colour effect	Select the desired setting options on the menu: off, sepia, mono, negative, solarise
Quality	Choose between Super fine, Fine, and Normal . The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the phone's memory.
Anti-shake	Reduce blur caused by vibration or movement.
Flash	Using the Flash function, you can set the built-in flash to fire under low light conditions.
Video Resolution	The more pixels, the larger the file size, which means that files take up more memory space. If you want to store more videos on your phone, you can alter their resolution to make the files smaller.
Restore to default	Reset menus and shooting options.

NOTE: Before taking a photo, you can tap **Settings > Applications > pictures & camera** to access the following settings: GPS, SkyDrive.

Pictures

Learn to view photos and play videos saved in your phone's memory. In case of videos, you are able to view the only video recorded in a camera.

Pictures hub

The Pictures hub is your Windows Phone's digital version of those pictures in your wallet. Show off all the pictures you took with the camera on your phone, saved from emails or text messages, or downloaded from the Web or from your PC.



- Times Square wall. A showcase of local pictures from your All view. The mosaic of picture-perfect moments

changes every fifth time you turn on your phone. If you sync your phone using the Zune software before you visit the Pictures hub, you'll see your pictures here when you arrive.

- What's new? These are the latest pictures your friends and family uploaded to Windows Live or Facebook.
- Picture collection. You can view your pictures and videos by album, date, or favourites. When you add a picture as a favourite as part of your Favourites album, you can then pin that album to the Start screen.
- Hub background. Tap anywhere in the hub to change the background, or let us do it for you using any of your pictures. Either way, changing the background will also change the Pictures tile on the Start screen.
- Zune software. Sync files using My Phone to move pictures from your PC into albums on your phone and vice versa.

NOTE: When you go to the Pictures hub for the first time, you'll see 8 pictures from the 7 folder in the Times Square wall. To see a mosaic of your own pictures here, you need to tap the 7 folder to delete it. The Times Square wall will now randomly take pictures from your Camera Roll, as well as albums you sync from your PC or your social networking sites.

Supported file formats

Type	Format
Image	Extension: bmp, gif, jpg, png, tiff
Video	<ul style="list-style-type: none">• Extension: mp4• Codec: MPEG4

NOTE: Phone only Supports JPG file format when sharing picture files using Zune PC client.

- Some file formats are not supported depending on the software of the phone.
- If the file size exceeds the available

memory, an error can occur when you open files.

Albums

Picture albums are a big part of how you organise your pictures and videos on your phone, on your computer, and on the Web. Knowing where albums can be added to and deleted from will help keep everything in working order. The Zune software puts pictures from your phone albums-Camera Roll, Saved Pictures, and Received Pictures-into the Pictures library on your computer.

NOTE: With the exception of viewing and deleting albums, all other album tasks must be completed using the Zune software on your computer.

Viewing a picture

- 1 On the Start screen, tap the arrow to go to your App list and tap **Pictures**. Or, tap the **Pictures** tile from the Start screen if it's pinned as a favourite tile on the screen.
- 2 In Pictures, scroll and go to picture albums (all, date, favourites) and tap a photo tile to open and view.

While viewing a photo, use the following options:

- To view more photos, scroll left or right.
- When you long tap a picture, a short menu that you can choose to delete, share, and add to favourites appears.
- To zoom in or out, tap the screen with two fingers and move them apart (move your fingers closer together to zoom it).

Playing a video

- 1 In Pictures, scroll and go to picture albums (all, date, favourites) and tap a video tile to open and view.
- 2 Tap a video tile to view.
- 3 Rotate the phone anti-clockwise to landscape view.
- 4 Control playback with the virtual keys.

Sharing pictures

- 1 On the Start screen, tap Pictures.
- 2 Find a picture you want to share. Pictures from online albums can't be

uploaded.

- 3 Tap and hold the picture, then tap **Share**.
- 4 Choose how you want to share or upload your picture to the web—text or email message, or sharing to **SkyDrive**.

NOTE: SkyDrive is part of Windows Live, a password-protected service on the Web (photos.live.com), where you can store and share documents and pictures up to 25 GB for free. Sign in with your Windows Live ID and you're all set.

TIP! After you upload your pictures to SkyDrive from your phone, you can find and edit them within Windows Live Photo Gallery on your computer without having to connect to the web. You must have a computer running Windows Vista or Windows 7. To see if you have Windows Live Photo Gallery installed, from your computer, click the Start button . In the search box, type photo gallery, and in the list of results, click Windows Live Photo Gallery.

Favourites in the Pictures gallery

Using the Favourites album on your Pictures hub has the advantage of putting your most interesting pictures in one place for easy viewing. Pictures in Favourites are also the only ones you can pin to the Start screen (if you have certain pictures that make you happy every time you see them).

- 1 On the Start screen, tap **Pictures**, and find a picture and tap to open it.
- 2 In the picture viewer, tap and hold the picture, and then tap **Add to Favourites**.

TIP! Want to add a picture from an online album as a favourite? Open a picture, tap it, and then tap Save to phone. The picture will be added to the Saved Pictures folder (in the Pictures hub, go to All > Saved Pictures). Find the picture, and then follow Step 2 above to add a saved picture as a favourite.

Adding or deleting a caption from a picture

Adding a caption

You can add captions to pictures that you upload to Facebook or Windows Live.

- 1 Tap the picture, and then tap Share.
- 2 Choose an account to upload your picture to.
- 3 Tap the text box to type a caption. You have 4 seconds to start typing or the picture will be uploaded without a caption.
- 4 Tap Upload .

Deleting a caption

You must be on your computer to delete a caption, and you can only delete a caption from a picture that you've uploaded.

- 1 Find your picture.
- 2 Sign in and follow the steps provided by Facebook or Windows Live to delete a caption.

Adding location info to my pictures

When you include location (GPS) information in the pictures you take, the information can be seen by others after you upload and share them. Once you do, you and your friends can have fun viewing these pictures on a map using Bing and Windows Live Photo Gallery, and even searching the Web for other similar pictures, because the location is embedded in your picture behind the scene.

- 1 On the Start screen, flick left to the Apps list, and tap **Settings > Applications > Pictures + Camera**.
- 2 Turn on Include location (GPS) info in pictures you take.

NOTE: If you want this information to stay with your pictures when you upload them to Facebook or SkyDrive, turn on Keep location info on upload pictures.

Music & Videos

Zune software

Sync files with my phone to move music & videos from your PC into your phone and vice versa.

Getting music, videos, and podcasts from Marketplace

Zune Marketplace is your one-stop shop for great music, podcasts, movies, videos, TV shows and more. Some things are free to play, download or sample. Other items are available to buy or rent.

There are two ways to access Zune Marketplace:

Downloading or streaming music directly to your phone

- 1 On the Start screen, tap **Music & Videos**.
- 2 Flick to Zune, and then tap **Marketplace**.
- 3 Find a song, album, artist or playlist by doing one of the following:
 - Flick left or right, browse through

the available categories, then tap the desired item.

- Press the Search button , enter a song title, album title or artist name, then tap the desired item.
- 4 Follow the instructions to get your music, videos, pictures, and so on into your collection.

Downloading music, podcasts, videos, movies, and TV shows on your PC

- 1 Go to **windowsphone.com** to install the **Zune software**.
- 2 Connect your phone to your computer using the USB cable.
- 3 Open the Zune software, then follow the instructions to get your music, videos, pictures, and so on into your collection.
If you're not signed in, click Sign In.
If you have multiple Windows Live ID accounts, enter the one you used when you set up your phone.
- 4 Click **collection**, and then drag everything you want to sync to the phone icon in the lower left.

NOTE: Not all items are available for purchase, rental, download or streaming. Zune Marketplace is not available in all locations or languages. Zune Marketplace content varies by market. To learn more about using Zune Marketplace, go to **Zune.net**.

Supported file formats

Type	Format	Sync from Zune SW
Audio	Extension: mp3, mp4, m4a, wma Codec: MP3, AAC, WMA	Extension: mp3, mp4, m4a, wma Codec: MP3, AAC, WMA
Video	Extension: 3gp, 3g2, mp4, m4v, wmv Codec: MPEG4, H263, H264, VC-1	Extention: mp4, m4v, wmv Codec: MPEG4, H.264, VC-1

Playing music, videos and podcasts

Your Windows Phone isn't just a phone, it's also a great Zune music and video player.

Listen to music while you surf the Web or check your email, catch up on your favourite podcasts while commuting, or enjoy a movie on your next flight. There's no need carry another device with you. Windows Phone has all your entertainment needs covered.

- 1 On the Start screen, tap **Music & Videos**.
- 2 Flick to **Zune**, and then tap **Music**, **Videos** or **Podcasts**.
- 3 Find the item you want to play by doing one of the following:
 - Flick left or right, tap a category (such as Artists, Albums, or Songs), and flick up or down as necessary.
 - To search Zune Marketplace, press the Search button, and then enter a song title, album title or artist name. (Zune Marketplace may not

be available in some countries or regions.)




- 4 Tap the item you want to play. If you need to adjust the volume, press the Volume Up or Volume Down buttons on the side of your phone.

TIP!

- There's a quick way to play all your music in random order. Flick to Zune, and then tap Play. This icon is next to Music.
- If you have a lot of items in a category (such as Songs or Albums), there's a quick way to jump to a particular point in the list without a lot of scrolling. For example, let's say you're at the top of the Songs list (in the "a" section) and you want to play a song that starts with the letter "s". Tap the coloured box with the letter "a" in it. In the grid of letters that appears, tap S.

Adjusting playback

- 1 When playing an item, use the following controls to adjust playback (some controls aren't available for all media types, such as videos).

Tap this	To do this
	Music: Tap the album image, and then tap Repeat to play the current playlist repeatedly.
	Music: Tap the album image, and then tap Shuffle to play the items in the current playlist in random order.
	Ratings can help you organize your music collection: Sorting songs, artists, or albums by rating gives you a quick look at which ones to get rid of if you need more space.

Tap this	To do this
	Music: Tap to skip to the beginning of the current song or to skip to the previous song in the playlist (the function depends on how much of the song you've played so far). Videos and audio podcasts: Tap to skip backward seven seconds. All: Tap and hold to rewind the current item.
	Music: Tap to skip to the next song in the playlist. Videos and audio podcasts: Tap to skip forward 30 seconds. All: Tap and hold to fast forward the current item.
	Tap to pause playback.
	Tap to play.

TIP!

- When playing songs or audio podcasts, you can also skip to the next and previous items in the playlist by flicking right or left.
- When playing videos, tap the screen to display the playback controls. Press the Back button to return to Music & Videos.
- Press the Volume Up or Volume Down buttons to show the mini playback controls. This works even when the screen is locked.

TIP! To play a different song in the playlist, flick up or down as necessary, and then tap the name of the item you want to play.

Showing what's playing now


- 1 Do one of the following:
 - Press the Volume Up or Volume Down buttons. The name of the current song is shown above the mini playback controls. This works even if your phone is locked.
 - In Music & Videos, flick to History.

Showing related info about a song

- 1 In **Music & Videos**, when playing a song, tap the artist name.
- 2 Flick left or right to see information (when available), such as other albums by this artist, album reviews and artist biographies.

Showing the current playlist

When you're playing music, the next few items in the playlist are displayed beneath the album image. To see all items in the playlist, do the following:

- 1 Tap the name of the current song (beneath the album image).
- 2 To hide the playlist, wait a few seconds or press the Back  button.

Games

Games hub

From the Games hub, you can play games not just on the phone; you can also connect to and extend your gaming experience to your computer and your Xbox console.

- **Spotlight.** Read up on Xbox LIVE game news, tips and trends from the Xbox LIVE team.
- **Xbox LIVE Gamer Profile.** Look at your profile to view recently played games, see your gamercard, change account information and even personalise your avatar.
- **Requests.** View invitations to quickly jump into game play, keep up with turn notifications in a turn-based game or accept a nudge from your buddy to make the next move.
- **Collection.** View all Xbox LIVE and other games that you have on your phone in one place.

Playing a game

Xbox LIVE might not be available in your area. If it is available and you want to play games, use an existing Xbox LIVE account or set one up. You'll need to install the game on your phone before you can play it.

- 1** On the Start screen, tap **Games**.
- 2** Flick left to Collection and tap to open a game you've already purchased. If you want to play an Xbox LIVE game, you'll need to sign in to (or join) Xbox LIVE.
- 3** If you want to see whether you have a game invitation or a turn notification, flick left to Requests. If you want to play a game with a friend, but don't have any games on your phone that allow more than one player, flick to the bottom of your collection, then tap Get more games to see what you can try or buy from Marketplace.

NOTE: Xbox LIVE may not be available in your country or region.

FM Radio



Learn to listen to music and news on FM radio. To listen to the FM radio, you must connect the supplied headset, which acts as the radio antenna.

Listening to a station

- 1 Plug the supplied headset into the device. (this doubles as an antenna).**
- 2** On the Start screen, tap **Music & Videos**.
- 3** Flick to **Zune**, and then tap **Radio**.
- 4** To choose a station, do one of the following:
 - Swipe left or right to go up or down the dial.
 - When you long tab a dial on radio, a short menu that you can choose to pin to start, settings, radio mode: speaker appears.



- Tap Favourites  to show your favourite stations.

TIP!

- Tap Play  or Pause  to start or stop play.
- When the screen is locked, press the Volume Up or Volume Down buttons to show the mini playback controls. You can use the controls to pause or resume the radio or to skip to the next or previous station.

Adding or remove a favourite station

To tune into stations more quickly, try adding a few as favourites.

- 1 Tune in to a station.
- 2 Do one of the following:
 - To add the station as a favourite, tap Add Favourite .
 - To remove the station as a favourite, tap Remove Favourite .

TIP! To show your favourite stations, tap Favourites . You can also pin your favourite station to the Start screen by pressing and holding the station number.

Switching between speaker and headset modes

- 1 While playing a station, tap and hold the station number.
- 2 Tap Radio mode: headset or Radio mode: speaker, to switch between the two options.

Switching radio regions

If you travel internationally, you might need to switch the radio region setting to listen to FM radio when you're abroad. If you do change this setting, don't forget to switch it back to the original setting when you get home.



- 1 While playing a station, tap and hold the station number.
- 2 Tap **Settings**.
- 3 On the Radio screen, tap the Region box, and then tap the name that corresponds to your desired radio region.

Utilities

Setting an alarm




- 1 Tap  on the Start screen to go to your App list and tap the **Alarms**  application.
- 2 If you want to add a new alarm, tap  on the bottom option menu bar. There are preset alarms you can activate.
- 3 Touch Time to set the time you want the alarm to sound.
- 4 Set the repeat.
The icons indicate the weekday you select.
- 5 Choose the sound you like and name on it. When the alarm setting is done, touch  at the bottom of the page.



Using your calculator

- 1 Tap  on the Start screen to go to your App list and tap the **Calculator**  application.
- 2 Touch the number buttons to enter numbers.

- 3 For simple calculations, touch the function you want (+, -, x, or ÷), followed by =.



Adding an event to your calendar

- 1 Tap  on the Start screen to go to your App list and tap the **Calendar**  application.
- 2 Touch  to make a new appointment.
- 3 Tap Subject to make a title for the appointment.
- 4 Tap Location to enter where it's happening.
- 5 Tap When to choose a date, and then choose the time you want the appointment to begin.
- 6 Tap How long to choose the time the appointment lasts.
- 7 If you would like to set reminder, occurs and status, touch more details and select the options you want.

- 8 If you want attendees to add the appointment, tap add someone to choose a contact. you can also check if it is private and make some notes.
- 9 Touch **Save** to save the appointment in the calendar. A coloured square in the calendar will mark all days that have saved appointments.
- 10 You might want to change the appointment details or delete them. Touch  to modify them or touch  to remove them.

Office

You can manage and view document files. Supported file types are doc, docx, txt, xls and xlsx.

- 1 Tap  on the Start screen to go to your App list and tap the **Office**  application.
- 2 To create one note, tap new note and keep track of stuff at home, school, or work.
To view all your notes, tap All.
- 3 To view or edit explore Excel, Explore Word, Explore PowerPoint files, flick to Documents.
- 4 Touch and hold any file, and the options send, delete, properties will appear.

Windows applications


- 1 First, set up a Windows account.
Enter your user name and password.
- 2 After signing in, the contacts, email, and calendar in your Windows account will automatically synchronise with your Windows Phone 7.

TIP! If you change your Windows Live ID account after signing in or delete it, follow the steps below:
Applications > Settings > system > email & accounts > add an account > Touch and hold Window Live ID to synchronise or delete.

Maps


Check your current location and receive directions to your destination. Your Windows Phone 7 must be connected to Wi-Fi or 3G/GPRS.

me

Tap  to search for your location. This is actually where your phone is. You can see your location more accurately by double tapping or pinching and stretching the screen.

You can also pin it to the Start screen, or share it by messaging or hotmail.


search

Tap  and enter the location you want to find out. It will move the map to the place.

NOTE: If you turn aerial view on at the bottom of the page by flicking upward and tapping it, you can search for the aerial location. It even describes nearby buildings and views.

Marketplace

Marketplace lets you download useful applications, and music and games. If you install these from Marketplace, they appear in your App list.

- 1 Tap  on the Start screen to go to your App list and tap the **Marketplace** application. You can also tap the **Marketplace** tile on the Start screen.
- 2 Marketplace has three categories - apps, games and music. Select the one you want to install or download.

Hotmail

Hotmail is configured when you first set up your phone. Depending on your synchronisation settings, Hotmail on your phone is automatically synchronised with your Windows account on the Web.

The inbox conversations list is your default Hotmail view.


Touch the Menu button, then touch Refresh to send or receive new emails and to synchronise your emails with your Windows account on the Web.

The Web

Browser

Browser gives you a fast, full colour world of games, music, news, sports, entertainment, and much more- right on your mobile phone. Wherever you are and whatever you're into.

Accessing the Web

1 Tap  on the Start screen to go to your App list and tap the **Internet Explorer** application. You can also tap the **Internet Explorer** tile on the Start screen.

2 You will move to the website.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your service provider.

Using options

Touch the Menu options bar to find more options.

forward - Go forward to the visited page.

share Page - Send the page link by Email or Messaging.

find on page - Highlight the thing you want to find on a page.

pin to start - Pin the page to the Start screen for quick launch.

setting - Set the options below

Allow cookies on my phone

Let Bing suggest sites as I type

Website preference


Mobile version

Desktop version

delete history - Delete all temporary files, history, cookies and saved passwords from Internet Explorer.

 **add** - Add the page to favourite

 **favourites** - Access a / Edit favourite pages and history pages.

 **tabs** - Use tabs as a navigator for switching between sets of pages.

Connectivity

Bluetooth

Turning on the Bluetooth wireless feature



- 1 On the Start screen, tap the arrow (→) to go to your App list.
- 2 Tap **Settings** > **System** > **Bluetooth**.
- 3 **To turn on Bluetooth, drag** the slider of the **status** to **On**.
- 4 Starts to search for Bluetooth devices.
- 5 Tap a device which you want to pair with.

Connecting to a Bluetooth headset

Once paired, you can connect to a Bluetooth device as needed.

- If Bluetooth is off, touch Bluetooth to turn it on. In the list of Bluetooth devices, touch the name for the paired device on the list.

NOTE:


- If you want to turn off your Bluetooth later, go to Settings, then tap Bluetooth and slide the toggle left to the Off position.
 - Once Bluetooth has been set up, the Windows Phone 7 recognises it when it is turned on.
- Windows Phone 7 does not support the Bluetooth file transfer function between cell phones. For more information about Bluetooth, see FAQ.

Wi-Fi

Learn to use your phone's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available. Your device uses a non-harmonised frequency and is intended for use in all European countries. WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.



Connecting to a wireless network

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings** > **System** > **Wi-Fi** to connect to a wireless network.
- 3 Move the slider to **On** to turn on wireless connections. In most cases you'll see both secure and unsecured networks.
- 4 Now tap the network you want to connect to.
- 5 On the next screen, tap the text fields. Then type your user name or password.
- 6 Tap **done** to finish.

NOTE: To guard against accidentally connecting to an incorrect network with the same name, this warning will appear. Tap connect if you're confident it is the correct network.

Editing your Wi-Fi connection

Suppose you need to change the settings for a wireless network, or the network doesn't appear.

- 1 Go back to the Wi-Fi Settings screen to select the network to edit, and then tap and hold the network you want to edit.
- 2 Tap **edit** to change the collected by your new Windows Phone.
- 3 If you need to edit your user name and password, go through the network settings.
- 4 If you need to add or edit proxy information, do it here. Tap and hold to get proxy options.
- 5 If you need to edit the network information, type in the appropriate fields. You'll need to get the new settings information from your network administrator.

NOTE:

- Scroll down to see other network options. This information should be automatically entered by Windows Phone 7 when it identifies your network.
- To turn off a wireless network, go back to the Settings screen, and set **Wi-Fi** to **Off**.
- When you turn Wi-Fi back on, your phone will remember the network settings and automatically connect.

Play To


Learn to use Play To compatible with the Digital Living Network Alliance (DLNA) service that enables you to have contents in your phone play with DLNA DMR-enabled devices in your home over a Wi-Fi.

Before you start, you must first activate the Wi-Fi feature and add a Wi-Fi profile.

NOTES:

- Some files may not play on devices compatible with DLNA-DMR depending on the devices.
- Playback may be buffered, depending on the network connection and the connected DLNA DMR-enabled players.


Playing your files on another DLNA-DMR enabled device

- 1 On the Start screen, tap the arrow  to go to your App list and select **Play To**.
- 2 Tap **Device** icon on the notification bar and choose a target. Your device automatically searches for DLNA DMR-enabled devices.
- 3 Select a media category > a file.
- 4 Playback begins at the selected player.
- 5 Control playback using icons of your phone.

NOTES:

- Playback may be buffered, depending on the network connection and the connected server.
- You can search DLNA DMR-enabled devices only if they are turned on.

Settings

In this menu, you can personalise the settings on your phone. Touch  on the Start screen to go to app list and tap settings.

system

ringtones & sounds

Set Ringer and Vibrate and choose Ringtone, New text message, New voicemail, New mail.

Set to play a sound for Appointment reminders, Key press, Lock and unlock, All other notifications.

theme

Change your phone's background and accent colour to suit your mood today, this week or all month.

flight mode

Toggle your phone's mobile, Wi-Fi, and Bluetooth communications simultaneously. You'll still be able to toggle Wi-Fi and Bluetooth separately.

Wi-Fi

Turn on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Set network notification, or add a Wi-Fi network

Bluetooth

Search and connect Bluetooth devices.

email & accounts

Set up email, contacts, Facebook and others.

lock & wallpaper

Set to change wallpaper and screen time-out.

Toggle to set password and create a 4-digit password.

location

Applications for which you've previously enabled location services can now access your current location.

mobile network

Set Data connection and Data roaming.

Toggle to set 3G connection and select Network.

date & time

Set date, time, and time zone

brightness

Adjust the brightness of the screen.

keyboard

Set Keyboard languages. You can check to Suggest text and highlight misspelt words, Correct misspelt words, Insert a space after selecting a suggestion, Insert a full-stop after double-clicking the spacebar and Capitalise the first letter of a sentence.

region & language

Set Display language, Region format, Short date, Long date, First day of week, System locale and Browser & search language.

ease of access

Set TTY/TDD mode

speech

Set to Play audio confirmations and Use Speech when the phone is locked.

find my phone

Map, ring, lock or erase your phone at windowsphone.live.com

If you've lost your phone, this will help you find it. Go to windowsphone.live.com and sign in your Windows live ID and password.

phone update

Notify you when new updates are found. Use your mobile data connection to check for updates.

about

View legal information, and check the phone status and software version.

reset your phone

Resetting your phone will erase all your personal content, including applications that you purchased and downloaded, and will restore the factory settings.

feedback

Send feedback to help improve Windows Phone

applications

games

Connect to Xbox LIVE On/Off.

Internet Explorer

Check whether you allow cookies on your phone or not. Also you can set if you let Bing suggest sites as you type.

Choose website preference.

Mobile version or Desktop version

delete history

Delete all temporary files, history, cookies and saved passwords from Internet Explorer.

maps

Toggle Use my location On/Off.

It uses your location to provide you with better local search results.

delete history

Delete previous map searches, pins and image data from your phone.

messaging

Set SMS delivery confirmation On/Off.

music & videos

Connect with Zune On/Off.

Turn on to automatically download information that enhances your Zune experience.

Office

username

Enter your user information to identify yourself in comments and to help with collaboration and document tracking.

SharePoint

- data store
You can create space on your phone by clearing the SharePoint cache. This will delete all temporary SharePoint files and history.
- conflicts
SharePoint lets you choose how to manage conflicts between files on your phone and the server. You can choose the way you want to resolve conflicts.

- Notify me and I'll resolve the conflict manually.
- Automatically replace item on the phone.
- startup option
Check to always open SharePoint links.
- reset
Restore default settings.

OneNote

Toggle Automatic synchronisation On/Off.

Turn on to automatically synchronise notes when you open a page, save a page or open a section.

people

Import SIM contacts will be synced with your online Windows Live contact list.

- Sort list by First name / Last name.
- Display names by First Last / Last, First.

phone

Set Voicemail number.

Show my caller ID to everyone / no one / my contacts

Call forwarding On/Off

International assist On/Off

SIM security On/Off

pictures & camera

Set options below.

Allow the camera button to wake up the phone On/Off.

Include location (GPS) information in pictures you take On/Off.

Auto upload to SkyDrive On/Off.

Keep location information on uploaded pictures On/Off.

radio

Set regional options.

North America / World / Japan

search

Toggle Use my location On/Off.

It uses your location to provide you with better local search results.

Check to get suggestions from Bing as you type.

delete history

Delete previously entered search terms from your phone.

Software update

Phone software update

Windows Phone Update enables you to update the firmware of your phone to the latest version. Your phone are alerted to Windows Phone Updates automatically by the Windows Phone Update service, and the updates are installed on the phone by using the Zune software running on the user's personal computer. Please go to 'PHONE' menu of settings from the Zune software and click 'UPDATE' to check for updates available.

Accessories

There are a variety of accessories available for your mobile phone, which may be sold separately. Select these options according to your personal communication needs. Consult your local dealer for availability. (Items described below may be optional.)

Charger



Data cable

Connect your LG-E900 and PC.



Battery



User guide

Learn more about your LG-E900.



Stereo headset



Microsoft SHG (start here guide)

Help you get started with your Windows Phone.



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

“LG Service Center”

by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sun : 7am - 7pm

Call center : 0-2878-5757

FAQ

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.

Category	Sub-Category	Question	Answer
Bluetooth	Bluetooth Headset	You cannot listen to music on a remote Bluetooth headset	<ul style="list-style-type: none">* Check you do not have headphones connected to the phone.• Ensure that your device is connected to the Stereo headset.• Ensure that the music format you are trying to listen to is supported by the headset.• Ensure that the distance between the headset and device is not more than 10 metres and that they are not separated by walls or other obstacles.
Bluetooth	Bluetooth Headset	You cannot listen to video sound on a remote Bluetooth headset	It's not supported. If you want to listen to video sound, please use the ear-jack instead of Bluetooth headset.
Bluetooth	Bluetooth supported Profile	Which profiles are supported for Windows Phone 7?	<ul style="list-style-type: none">HFP (HandsFreeProfile)HSP (HeadSet Profile)A2DP(Advanced Audio Distribution Profile)AVRCP(A/V Remote Control Profile)- Music : only support Play/Pause/Previous Song/ Next SongPBAP(Phone Book Access Profile)

Category	Sub-Category	Question	Answer
Bluetooth	Bluetooth Connection	What are the functions available via Bluetooth?	Connecting to Stereo/Mono Headset, Car Kit is possible.
Bluetooth	Bluetooth Connection	Is it possible to use internet when synchronising between phone and pc? (In such case, where pc is connected with wired LAN).	It's not supported.
Bluetooth	Contact transmission	Is there any way to transfer the contacts data to other phone thru bluetooth? Ex) Contacts of other phone move to phone via BT.	It's not supported.
Bluetooth	Print	Can you print MS office document (MS word, excel, PDF, etc.) using BT or wireless?	It's not supported.
Data	Backup	How do you import contacts from your old phone to your Window Phone 7?	<ul style="list-style-type: none"> Put your old SIM card into your new phone, then go to Settings. Flick to applications, tap people > import SIM contacts. You cannot do this through Zune.
Data	Synchronization	What are some limitations, when data synchronising between windows phone 7 and pc?	<p>In Window Phone 7, "Zune" application is used instead of "Activesync".</p> <p>The limitation of Zune is, while synchronizing, (music, video and picture) files can not be played on the phone.</p>

Category	Sub-Category	Question	Answer
Data	Synchronization	How do you synchronise between phone and pc under Windows Vista & Win7?	By using microsoft application "Zune" which can be downloaded from MS website.
Data	Web-Upgrade	Is it possible to backup the user data automatically when upgrading thru Web.	Zune supports whole flash backup, but does not support backup of user data seperately.
Misc.	Call Time	Is the Calling time calculated differently according to the model(Ex. 2G/3G, CDMA ...)	CDMA Model : Calling time is calculated from when you press "call" after dialling the number. 2G/3G Model : Calling time is calculated from when the call is connected.
Misc.	E-Mail	Where do you get POP3 & SMTP Server settings?	Please consult email system administrator for assistance.
Misc.	Active X	Is the Active X supported like PC?	No, it's not supported.
Phone Function	Battery	How do you check if battery is fully charged?	Battery charge status is displayed on top of the screen.
Phone Function	W&P option	Is it possible to use W(Wait) & P(Pause) option, when saving phone number to contacts?	Yes, it's possible. But it's supported using the hardware keyboard only. it's not supported for the on-screen keyboard.

Category	Sub-Category	Question	Answer
Phone Function	Office Mobile	Is it possible to edit files in office applications of mobile?	<p>It's only possible to read.</p> <ul style="list-style-type: none"> Please note that Microsoft Office Mobile doesn't support all the features that are found in Microsoft Office 2010. <p>If a document has content that's not supported in Office Mobile, you can still open the document on your phone, but the unsupported content won't be displayed.</p>
Phone Function	Ring Tone Setting	How do I set the Ring Tone?	<p>Go to Application list and tap Settings > ringtone & sounds to set up the Ring Tone.</p> <p>There are different kinds of alerts and different ringtones you can assign to different people.</p> <p>On start, tap People > the contact you want to change > Edit > Ringtones.</p>
Phone Function	Ring Tone Setting	How can I use my favourite music as a ringtone?	<p>Marketplace enables users to easily find & acquire your favourite ringtone</p> <p>Go to Application list and tap Marketplace > Music. And browse and choose your favourite ringtone.</p> <p>Please note that Marketplace may not be available in your country or region.</p>

Category	Sub-Category	Question	Answer
Phone Function	Supported Language	Is it possible to change the language?	Your Windows Phone 7 supports 6 different languages (Deutsch, English (United Kingdom/ United States), Español, Français, Italiano). If you want to change the settings, go to tap Settings> region & language > Display language .
Phone Function	Sound Settings	How to setup the system sound and Ring sound?	You can adjust the music, ringtone and system sound with volume keys. • Go to " Settings > ringtone & sounds "
Phone Function	Time Setting	How do you set the time on the phone?	Applications list > Settings > date & time > Set automatically slider to Off > Set the Time
Phone Function	Youtube	Is it possible to view video clips from Youtube?	This is possible via use of Marketplace YouTube player. Please note that Marketplace YouTube player may not be available in your country or region.
Phone Function	Battery Life Time	What is the talk time of this phone?	Calling : 360 min. (based on 3G)
Phone Function	camera	Is there any option to save or erase a picture, right after it's taken?	Picture is saved automatically. Navigate to Picture Viewer by flicking to the right. Touch and hold the picture taken. View available options. (eg. Adding to favourites, deleting etc).

Category	Sub-Category	Question	Answer
Phone Function	E-mail	Is it possible to set e-mail filtering?	E-Mail filtering is possible via use of "Search" button.
Phone Function	E-mail	Is it possible to set the alert sound when receiving e-mail?	[Steps] Settings > ringtones & sounds > New email > Choose an item
Phone Function	browser settings	How can I change privacy and other browser settings?	Go to Settings > applications > Internet Explorer to delete cookies. Also, you can turn off sharing your location using Settings > system > location .
Phone Function	Proximity Sensor	How do you keep the LCD screen on, during phone conversation?	Proximity sensor on the phone is designed to switch the LCD off by default whilst on a call.
Phone Function	SIM Lock	Is it possible to use SIM Card that's provided by different operator?	Please contact the store that sold you the phone to check if a SIM lock is active or not. If there is no SIM Lock, certain features or services might not be available due to phone or network settings.
Phone Function	SIM Lock	My Windows Phone has a SIM lock, can LG help me in this case?	SIM lock depends on the network operator that sold you the Windows Phone. Please contact the network operator or the store that sold you the Windows Phone.

Category	Sub-Category	Question	Answer
Phone Function		Is Adobe Flash supported (similar to PC browser)?	It's not supported.
Phone Function		Is Streaming service supported.	Some streaming protocols are not supported (e.g. RTSP). HTTP-Progressive and IIS SmoothStreaming is supported depending on the website you are visiting and the application you are using.
Phone Spec	Band	Is GSM technology Quadra band, tri band or dual band? (For example: 1900Mhz, 900, 1800, 850)	Quad band is supported.
Phone Spec	Phone Spec	Is it possible to use external GPS device?	No. There is a built-in GPS unit in your Windows Phone 7 device.
Wi-Fi	Wi-Fi Simple Inquiry	What can I do with Wi-Fi (wireless networking)?	You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.
Wi-Fi	Wi-Fi Simple Inquiry	Is Wi-Fi serviced by Operator?	No, it isn't. Users can access the internet thru AP(Access Point).
Recovery Solution	Password missing	What do you do, when you've forgotten your password? How do you obtain your password, if forgotten?	Contact your service provider.

Category	Sub-Category	Question	Answer
Recovery Solution	Factory Rest Web update	I want to reset my phone to improve performance, how do I do this? I want to update the software running on my phone to improve performance, how do I do this?	<p>1. Factory Reset. Go to tap Applications list > Settings > about > reset your phone.</p> <p>Resetting your phone will erase all your personal content, including applications that you purchased and downloaded, and will restore the factory settings.</p> <p>2. Try to update latest SW version via Web. Your phone are alerted to Windows Phone Updates automatically by the Windows Phone Update service, and the updates are installed on the phone by using the Zune software running on your personal computer, when you connect your phone with it.</p> <p>If you didn't install the Zune software yet, go to www.windowsphone.com to install.</p> <p>Warning! By performing "Factory Reset", all user data will be ERASED. Customer MUST backup PRIOR to running factory reset & Web update.</p>

Category	Sub-Category	Question	Answer
Recovery Solution	Factory Reset	How to do when the performance is much lower than before?	<p>1. Factory Reset. Go to tap Applications list > Settings > about > reset your phone.</p> <p>Resetting your phone will erase all your personal content, including applications that you purchased and downloaded, and will restore the factory settings.</p> <p>2. Try to update latest SW version via Web. Your phone are alerted to Windows Phone Updates automatically by the Windows Phone Update service, and the updates are installed on the phone by using the Zune software running on your personal computer, when you connect your phone with it.</p> <p>If you didn't install the Zune software yet, go to www.windowsphone.com to install.</p> <p>*Attention In case of Factory Reset and Web update, all user data will be erased. hence, customer should have to back up them before.</p>

