LG
Life's Good

SIMPLE MANUAL

Wireless Sound Bar

To view the instructions of advanced features,
visit http://www.lg.com and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
SH5


MFL69586994

www.lg.com

ENGLISH




Front Panel



The buttons are located on the rear.

⏻/I ..... Standby / On
F ..... Selects Function
– + ... Adjusts Volume

Rear Panel



OPTICAL IN ..... Connect to an Optical device
PORTABLE IN ..... Connect to a Portable device
USB port ..... Connect to a USB device
HDMI IN ..... Connect to HDMI out on a device
HDMI OUT (TV ARC) ..... Connect to a TV

1 Subwoofer Connection

Place the wireless subwoofer near the speaker and follow steps below.

1. Connect the power cord of wireless subwoofer to the outlet.
2. Turn on the main unit. :

   The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

Subwoofer Connection Manually

1. Reset the Subwoofer

   If the green LED on the subwoofer blinks quickly, skip this step and go to 2.

   - Press and hold **Pairing** button for 5 seconds.
   - The LED lights up alternately in red and green.
   - Plug out the power cord. After the LED turns off completely, plug in the power cord again.


When the reset is completed, the subwoofer's green LED blinks quickly.

2. Reset the sound bar

   - Adjust volume to minimum. "MIN" appears on display window.
   - Press and hold 🔇 (Mute) button on the remote control for 3 seconds.
     "SUB - WF RESET" appears on display window.
   - Turn the sound bar's power off and on while the subwoofer's green LED blinks.

When the connection is completed, you can see the green LED on the subwoofer.

> Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1m to prevent wireless interference.




2 TV Connection

Connect with the Sound Bar and TV using Optical (Ⓐ) or HDMI ARC (Ⓑ).

Ⓐ Optical Connection

1. Connect the the sound bar to the TV using Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.



Ⓑ HDMI(ARC) Connection


1. Connect the sound bar to the TV using HDMI cable.
2. Set up [External Speaker (HDMI ARC)] on your TV setting menu.



> HDMI connection is unavailable if your TV does not support HDMI ARC.

Additional Device Connection

1. Connect to the external device as follows.

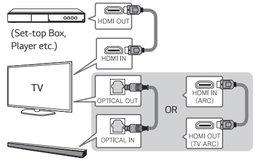


2. Set the input source by pressing **F** on the remote control or unit repeatedly.

Remote control



☽: Turns down the volume at night.
AV SYNC: Synchronizes the audio and video.
AUTO VOL: Adjusts the volume level appropriately.
AUTO POWER: Automatically turns on by an input source.

Replacement of battery

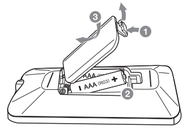

Additional Information

Specification

Power consumption	Refer to the main label. Networked standby : 0.5 W (If all network ports are activated.)
AC adapter	• Model : DA-38A25 • Manufacturer : Asian Power Devices Inc. • Input : 100 - 240 V ~ 50 - 60 Hz 1.2 A • Output : 25 V ⎓ 1.52 A
Dimensions (W x H x D)	Approx. 945 mm x 53 mm x 85 mm Without foot
Net Weight	Approx. 2.6 kg
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS Output power)	320 W

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Declaration of Conformity

CE 0197

Hereby, LG Electronics European Shared Service Center B.V., declares that this Wireless Sound Bar is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.
Krijgsman 1
1186 DM Amstelveen
The Netherlands

or can be requested at our dedicated DoC website:

http://www.lg.com/global/support/cedoc/cedoc

This device is a 2.4 GHz and 5 GHz wideband transmission system, intended for use in all EU member states and EFTA countries.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

LG
Life's Good

簡易手冊

無線
Sound Bar

要查看進階功能，請瀏覽 http://www.lg.com 並下載使用者手冊。
本手冊中的某些內容可能不適用於此裝置上。

型號
SH5


MFL69586994

www.lg.com

中文




前面板



按鈕位於後方。

- ⏻/I ····· 待機/啟動
- F ····· 選擇功能
- − + ····· 調節音量

後面板



- **OPTICAL IN** ····· 連接至光纖裝置
- **PORTABLE IN** ····· 連接至可攜式裝置
- **USB port** ····· 連接至 USB 裝置
- **HDMI IN** ····· 從其他裝置經 HDMI 輸入
- **HDMI OUT (TV ARC)** ····· 連接至電視

1 無線超低音揚聲器連接

把無線超低音揚聲器放置在 Sound Bar 式揚聲器附近並按照以下步驟操作。

1. 把無線重低音揚聲器的電源線連接到電源插座。
2. 開啓 Sound Bar：
   Sound bar 與無線超低音揚聲器會自動連接。 無線超低音揚聲器的綠色 LED 燈會亮起。

手動連接無線超低音揚聲器


1. 重設無線超低音揚聲器
   如果無線超低音揚聲器的綠色 LED 燈快速閃爍，略過此步驟，移到 2。
   - 持續按住**Pairing**按鈕5秒。
   - 紅色和綠色的 LED 燈會交替閃爍。
   - 拔除電源線，待 LED 燈完全熄滅後，重新插入電源線。

當重設完成，無線超低音揚聲器的綠色 LED 燈會快速閃爍。

2. 重設 Sound Bar
   - 將音量調至最小。"MIN"會在顯示屏上出現 。
   - 按住遙控器上的 （靜音）鍵約3秒鐘。"SUB - WF RESET"會在顯示屏上出現。
   - 無線超低音揚聲器的綠色 LED 燈在閃爍時， 關掉並再開啓 Sound Bar 的電源。

當連接完成時，您會看到綠色LED燈在無線超低音揚聲器上亮起。

請將 Sound Bar 和無線超低音揚聲器放置在離其他裝置（例如無線路由器、微波爐等等）超過 1米（3.3 尺）的位置，避免無線干擾。




2 電視連接

透過光纖 (Ⓐ) 或 HDMI ARC (Ⓑ) 連接 Sound Bar 和電視。

Ⓐ 光纖連接

1. 透過光纖將 Sound Bar 連接至電視。
2. 在您的 電視 設定功能表上設定 [外置揚聲器（光纖）]。



Ⓑ HDMI (ARC) 音訊連接


1. 透過 HDMI 纜線連接 Sound Bar 至 電視。
2. 在您的電視設定功能表上設定 [外置揚聲器 (HDMI ARC)]。



假如您的電視不支援HDMI ARC，HDMI 連接並不適用。

額外裝置連接

1. 依照下圖連接外接裝置。

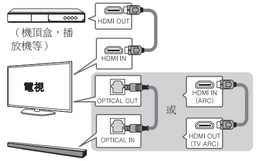


2. 重複按遙控器或本裝置上的**F**以設定輸入源。

遙控器



♪: 在夜晚調低音量。
AV SYNC: 同步音訊和視訊。
AUTO VOL: 適當地調節音量。
AUTO POWER: 透過輸入源自動開啟。

更換電池

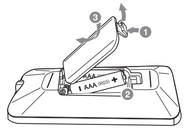

其他資訊

規格

耗電	請參閱主要標籤。 網絡待機：0.5 W （如果所有網絡端口都已被啟動。）
AC 轉接器	• 型號 : DA-38A25 • 製造商：Asian Power Devices Inc. • 電源輸入 : 100 - 240 V ~ 50 - 60 Hz 1.2 A • 電源輸出 : 25 V ⎓ 1.52 A
尺寸 (寬 x 高 x 深)	大約 945 mm x 53 mm x 85 mm 不連腳墊
淨重	大約 2.6 kg
匯流排電源供應 (USB)	5 V ⎓ 500 mA
擴音器（總RMS輸出功率）	320 W

設計和規格如有任何變更，恕不另行通知。

如何中斷連接無線網絡或無線裝置

設定自動電源開啟/關閉功能關閉它及關閉裝置。

符合標準聲明

CE 0197

LG Electronics European Shared Service Center B.V. 特此聲明這個 Wireless Sound Bar 可兼容基本要求和其他相關的 1999/5/EC 指令，或經以下的通訊地址要求遞交整個符合標準聲明：

LG Electronics European Shared Service Center B.V.
Krijgsman 1
1186 DM Amstelveen
The Netherlands

或可向我們專設的 DoC 網站查詢：

http://www.lg.com/global/support/cedoc/cedoc#

這個裝置是 2.4 GHz 和 5 GHz 的寬頻傳輸系統，適用於所有歐盟成員國和 EFTA 國家。

安全注意事項

本機的插頭握柄是專爲本產品所設計,且與附設的電源線為一體,若您因爲任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定,將插頭確實地與電源線結合。

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE