LG
Life's Good

OWNER'S MANUAL
LED TV*

* LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

LA79**
LA86**
LA96**
LA97**
LA98**
LM96**



www.lg.com

P/NO : MFL67728106 (1410-REV05)
Printed in Korea

TABLE OF CONTENTS

A-3 SETTING UP THE TV

A-3 Attaching the stand
A-6 Tidying cables

A-8 MAKING CONNECTIONS

A-8 Antenna connection
A-9 Satellite dish connection
A-9 HDMI connection
A-10 - ARC (Audio Return Channel)
A-11 Headphone connection
A-11 DVI to HDMI connection
A-13 Component connection
A-14 Composite connection
A-15 MHL connection
A-16 Audio connection
A-16 - Digital optical audio connection
A-17 USB connection
A-18 CI module connection
A-19 Euro Scart connection

COMMON

LANGUAGE LIST

English
Türkçe

LANGUAGE


B-1 SPECIFICATIONS COMMON

Setting up the TV


Image shown may differ from your TV.

Attaching the stand

LA79**

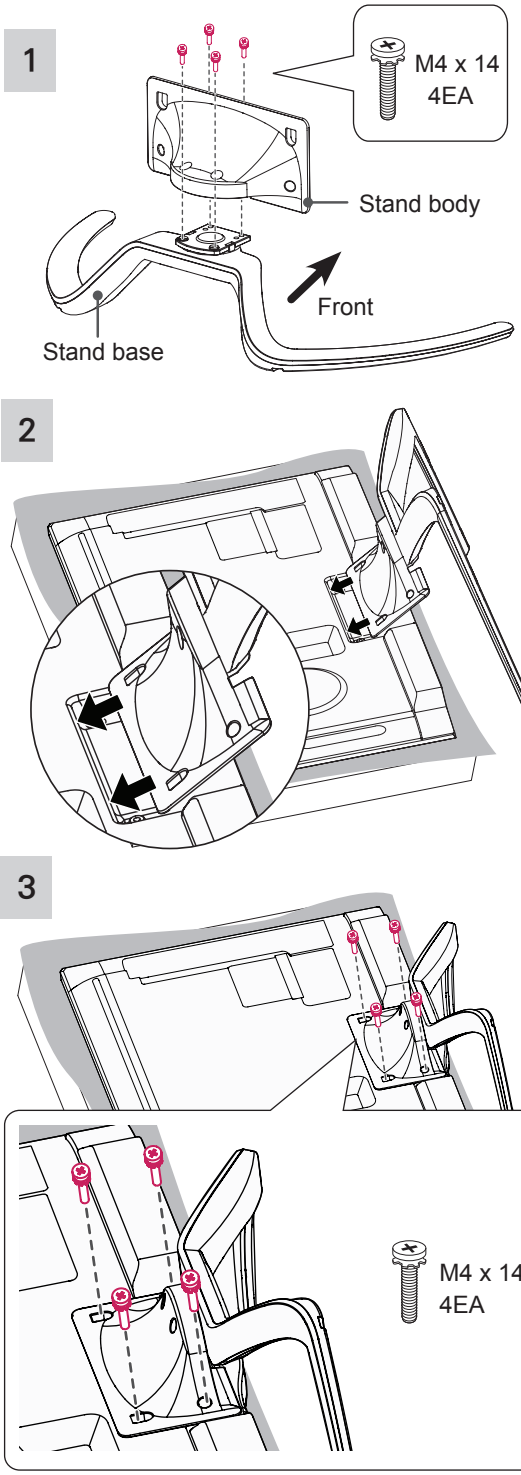


LA860*, LA960*

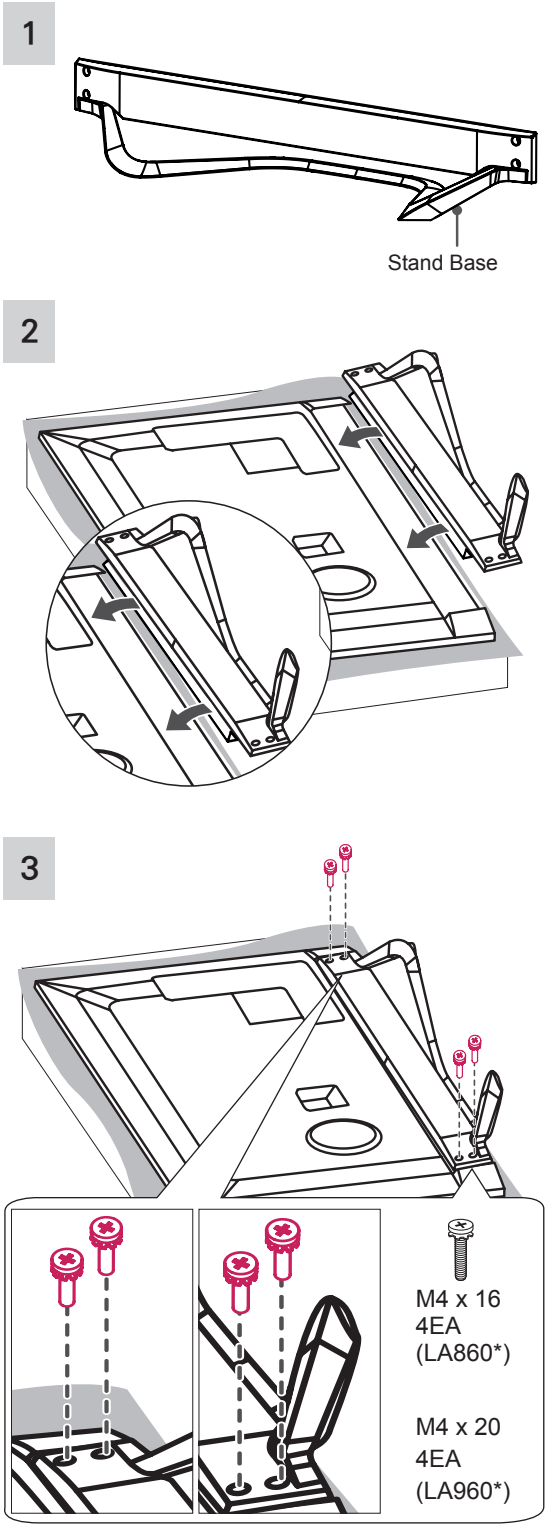


LA868*


1

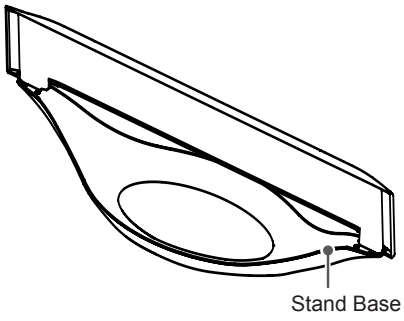

2

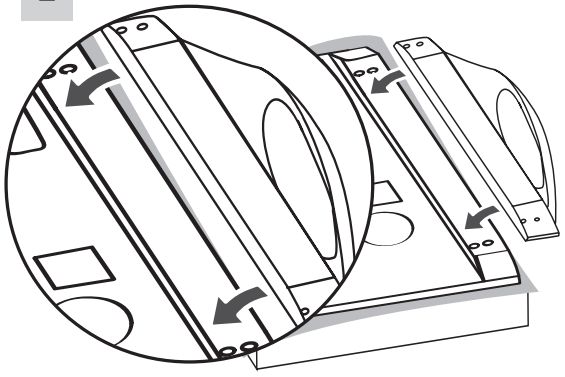


3

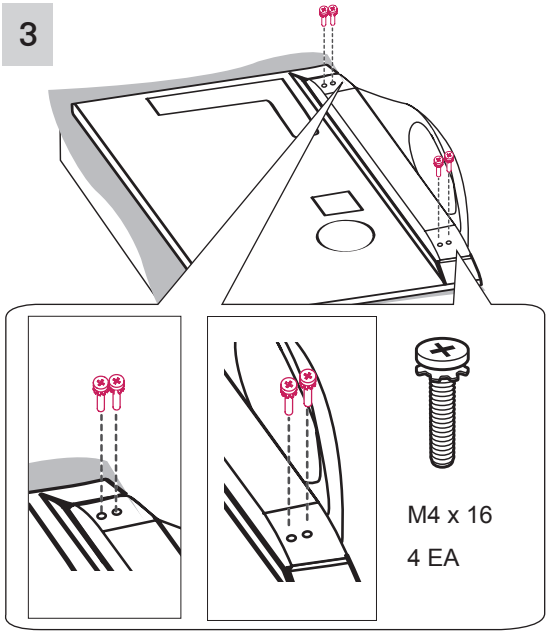


LA965*

1

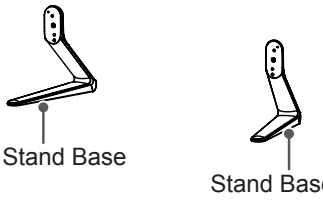

2

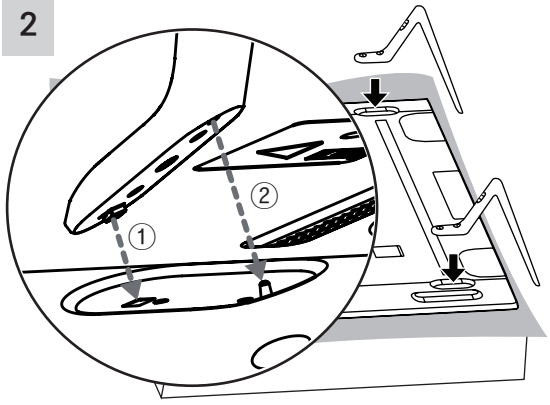


① Attach the stand to the TV using the upper mounting hole on the back of the TV.
② Attach the stand to the TV using the lower connection on the back of the TV.

NOTE


- Be sure to attach the upper mounting hole first, and then attach the lower connection second.

3

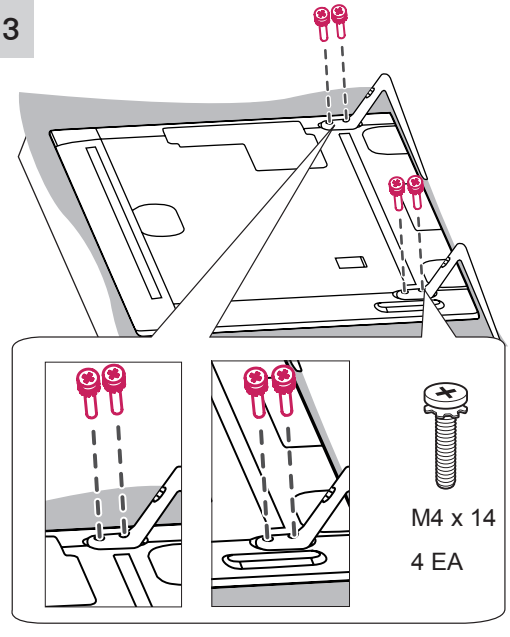


LA97**


1

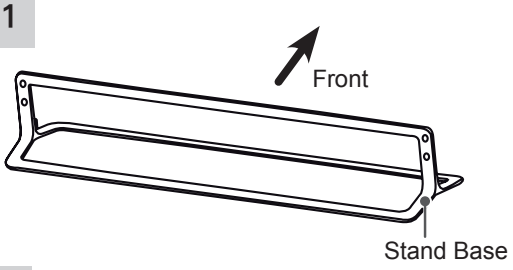

2

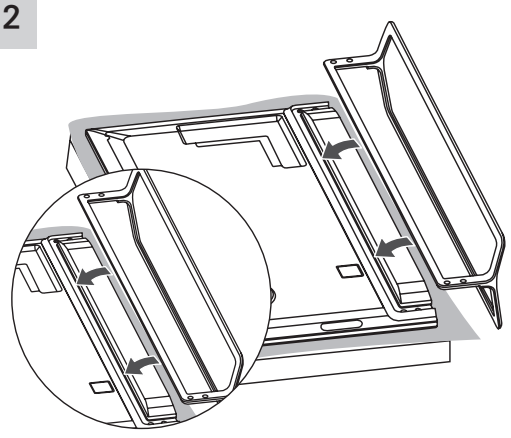

3

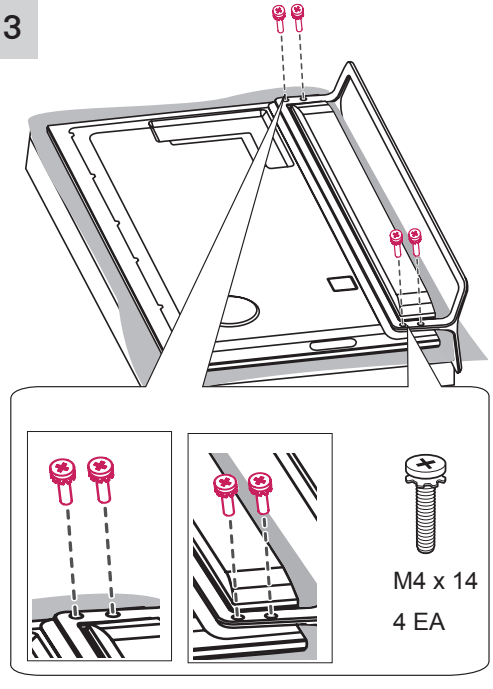


NOTE


- The stand screws are already attached at the back of the TV. Please use these attached screw to assemble the TV and stand. (Only 65LA97**)

LA98**, LM96**


1

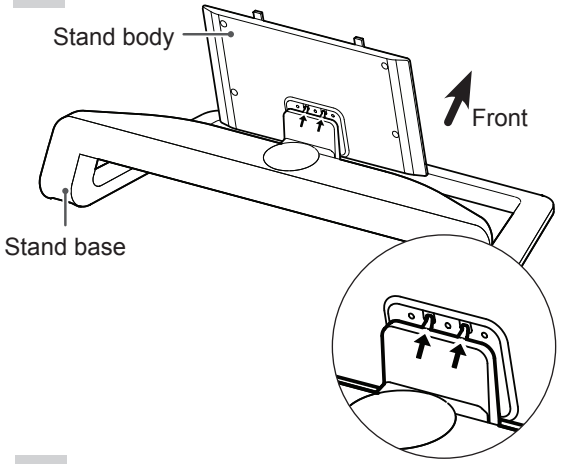


2

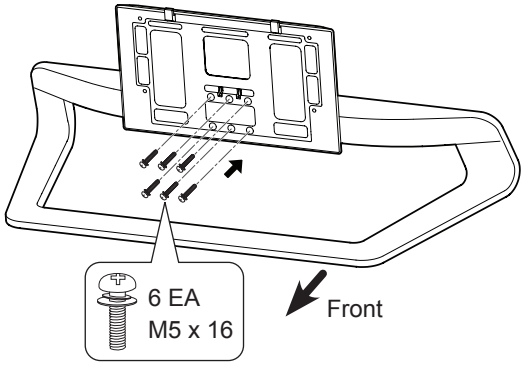

3

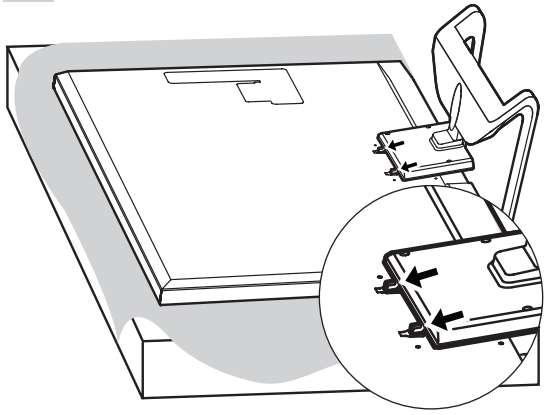

4

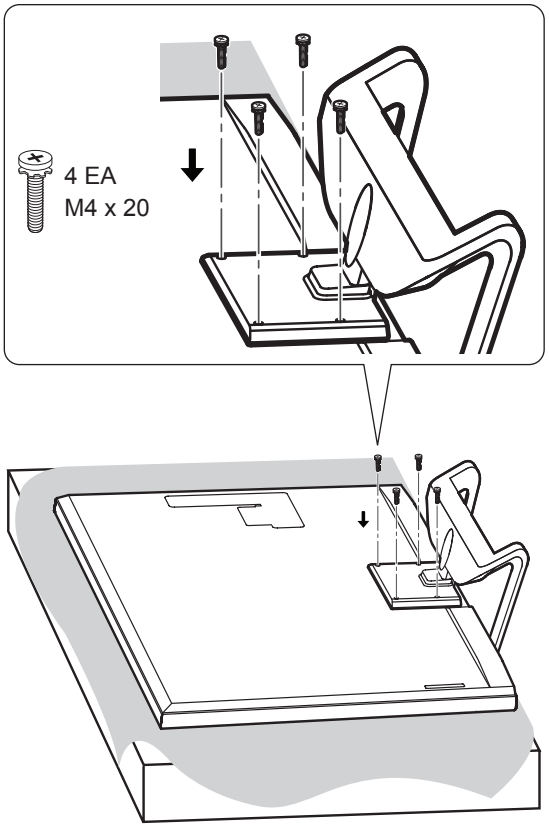

CAUTION

- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.
- Make sure that the screws are inserted correctly and fastened securely. (If they are not fastened securely enough, the TV may tilt forward after being installed.)
  Do not use too much force and over tighten the screws; otherwise screw may be damaged and not tighten correctly.


NOTE

- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.

Tidying cables


(Only LA79**)

1 Gather and bind the cables with the Cable Management.
2 Fix the Cable Management firmly to the TV.

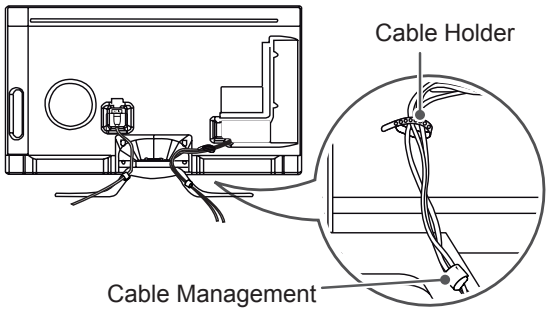


(Only LA860*, LA960*)

1 Gather and bind the cables with the Cable Holder and the Cable Management.
2 Fix the Cable Management firmly to the TV.

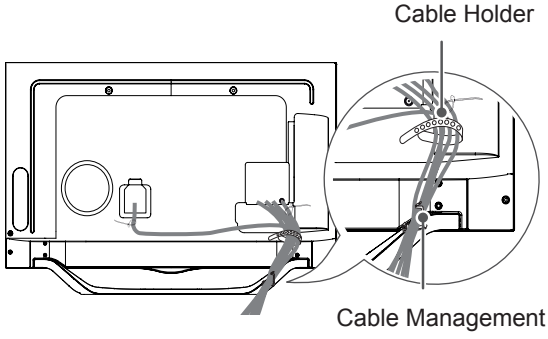


(Only LA98**, LM96**)

1 Gather and bind the cables with the Cable Holder and the Cable Management.
2 Fix the Cable Management firmly to the TV.

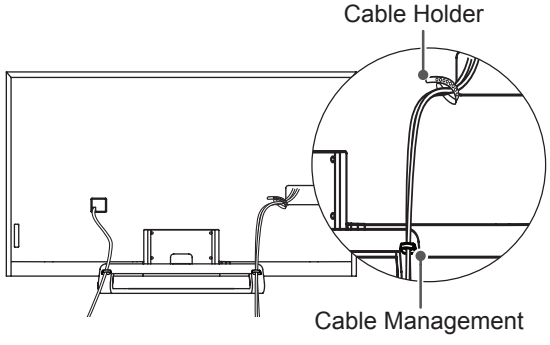


(Only LA965*)

1 Gather and bind the cables with the cable holder on the back of the TV.
2 Fix the Cable Management firmly to the TV.

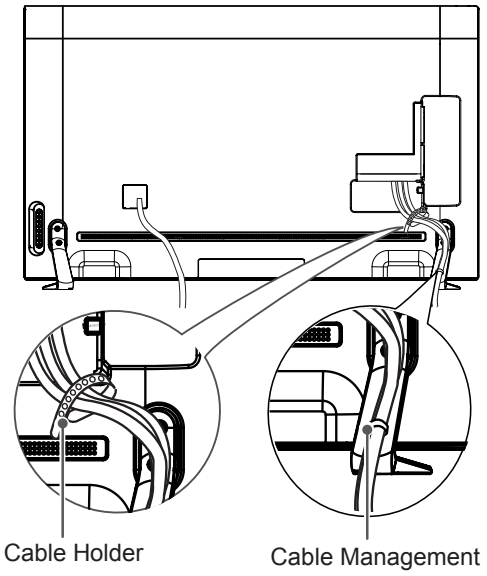


(Only LA868*)

1 Gather and bind the cables with the cable holder on the back of the TV.

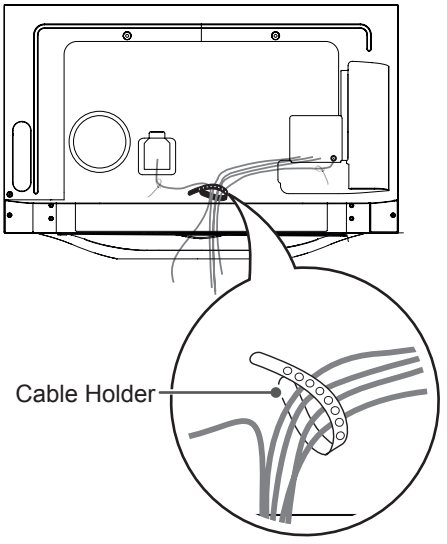

(Only LA97**)

1 Gather and bind the cables with the cable holder on the back of the TV.

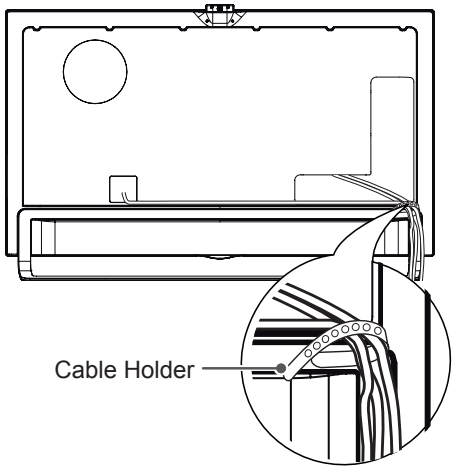


CAUTION

- Do not move the TV by holding the cable holders, as the cable holders may break, and injuries and damage to the TV may occur.

MAKING CONNECTIONS

This section on **MAKING CONNECTIONS** mainly uses diagrams for the LA79** models.

Antenna connection

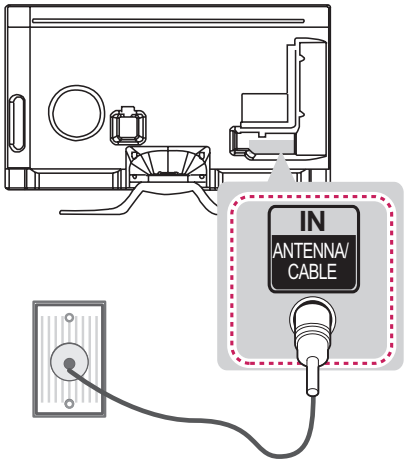

English

Connect the TV to a wall antenna socket with an RF cable (75 Ω).

NOTE

- Use a signal splitter to use more than 2 TVs.
- If the image quality is poor, install a signal amplifier properly to improve the image quality.
- If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction.
- An antenna cable and converter are not supplied.
- Supported DTV Audio: MPEG, Dolby Digital, Dolby Digital Plus, HE-AAC
- Display of Ultra HD(3840 x 2160 pixels) content compatible; additional device capable of processing Ultra HD source content (in 2D or 3D) may be required and will be sold separately. (Only LA965*, LA97**, LA98**, LM96**)

Türkçe


TV'yi RF kablosu (75 Ω) ile duvar anten soketine bağlayın.

NOT

- İkiden fazla TV'de kullanmak için bir sinyal ayırıcısı kullanın.
- Görüntü kalitesinin kötü olması durumunda görüntü kalitesini artırmak üzere bir sinyal güçlendiricisi kullanın.
- Anten bağlıyken görüntü kalitesinin kötü olması durumunda anteni doğru yönde yeniden hizalamayı deneyin.
- Anten kablosu ve dönüştürücü ürünle birlikte verilmemektedir.
- Desteklenen DTV Ses: MPEG, Dolby Digital, Dolby Digital Plus, HE-AAC
- Ultra HD (3840x2160 piksel) içerik gösterimine uygun ekran için harici Ultra HD içerik oynatıcı gerekebilir ve ayrı olarak satılır. (Yalnızca LA965*, LA97**, LA98**, LM96**)

Satellite dish connection

(Only satellite models)

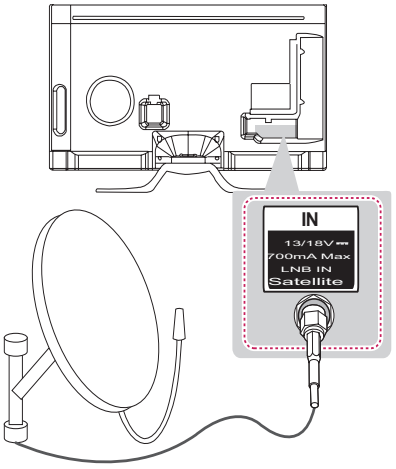

English


Connect the TV to a satellite dish to a satellite socket with a satellite RF cable (75 Ω).

Türkçe


TV'yi uydu RF kablosu (75 Ω) kullanarak çanak antene ve uydu soketine bağlayın.

HDMI connection

(Only LA79**, LA86**, LA960*)

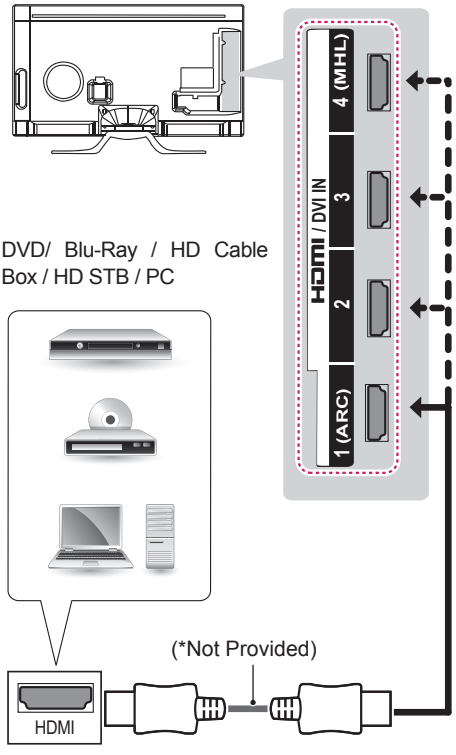

(Only LA965*, LA97**, LA98**, LM96**)

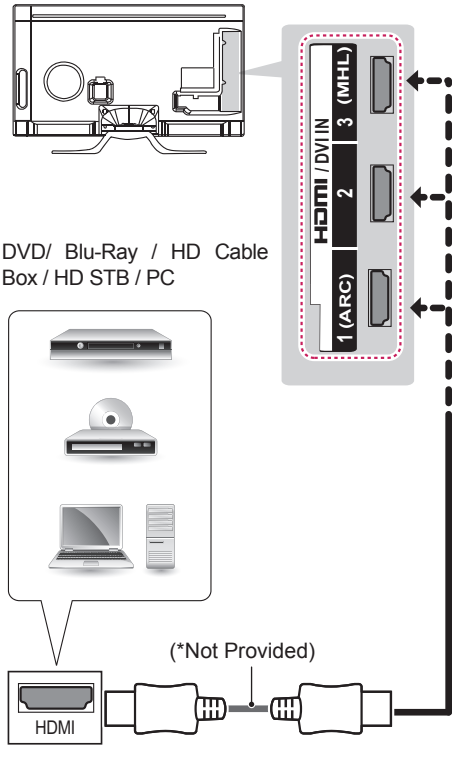

English

Transmits the digital video and audio signals from an external device to the TV. Connect the external device and the TV with the HDMI cable as shown. Choose any HDMI input port to connect. It does not matter which port you use.

NOTE

- It is recommended to use the TV with the HDMI connection for the best image quality.
- Use the latest High Speed HDMI™ Cable with CEC (Customer Electronics Control) function.
- High Speed HDMI™ Cables are tested to carry an HD signal up to 1080p and higher.
- Supported HDMI Audio format : Dolby Digital, DTS, PCM (Up to 192 KHz, 32KHz/44.1KHz/48KHz/88KHz/96KHz/176KHz/192KHz)

Türkçe

Harici cihazdan TV'ye dijital video ve ses sinyalleri gönderir. Harici cihaz ile TV'yi HDMI kablosuyla aşağıdaki şekilde gösterildiği gibi bağlayın. Bağlanmak için herhangi bir HDMI giriş bağlantı noktasını seçin. Kullandığınız bağlantı noktası önemli değildir.

NOT

- En iyi görüntü kalitesi için, TV'nin HDMI bağlantısıyla kullanılması önerilir.
- CEC (Tüketici Elektronik Kontrolü) fonksiyonlu en son Yüksek Hızlı HDMI™ Kablosunu kullanın.
- Yüksek Hızlı HDMI™ Kablolarının 1080p ve üzerine kadar HD sinyalini taşıyabildiği test edilmiştir.
- Desteklenen HDMI Ses biçimi: Dolby Digital, DTS, PCM (En fazla 192 KHz, 32KHz/44.1KHz/48KHz/88KHz/96KHz/176KHz/192KHz)

ARC (Audio Return Channel)


English

- An external audio device that supports SIMPLINK and ARC must be connected using HDMI/DVI IN 1 (ARC) port.
- When connected with a high-speed HDMI cable, the external audio device that supports ARC outputs optical SPDIF without additional optical audio cable and supports the SIMPLINK function.

Türkçe

- HDMI/DVI IN 1 (ARC) bağlantı noktası kullanılarak SIMPLINK ve ARC'yi destekleyen harici bir ses cihazının bağlanması gerekir.
- ARC'yi destekleyen harici ses cihazı, yüksek hızlı bir HDMI kablosuyla bağlandığında ek optik ses kablosu eklemeye gerek kalmadan optik SPDIF çıkışı sağlar ve SIMPLINK fonksiyonunu destekler.

Headphone connection

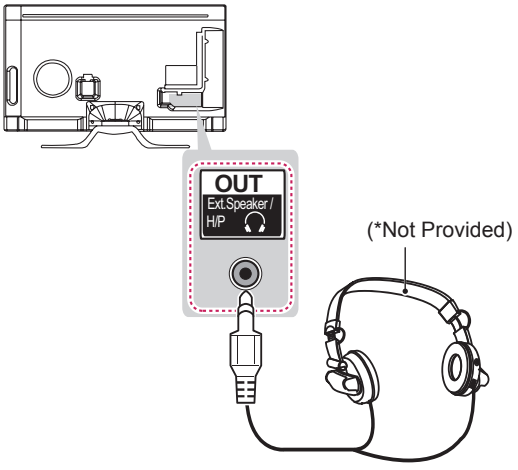

English

Transmits the headphone signal from the TV to an external device. Connect the external device and the TV with the headphone as shown.

NOTE

- AUDIO menu items are disabled when connecting a headphone.
- Optical Digital Audio Out is not available when connecting a headphone.
- Headphone impedance: 16 Ω
- Max audio output of headphone: 0.624 mW to 1.04 mW
- Headphone jack size: 0.35 cm

Türkçe


TV'den harici bir cihaza kulaklık sinyali gönderir. Harici cihaz ile TV'yi kulaklıkla aşağıdaki şekilde gösterildiği gibi bağlayın.

NOT

- Kulaklık bağlandığında SES menüsü öğeleri devre dışı bırakılır.
- Optik Dijital Ses Çıkışı kulaklık takılı olduğunda kullanılamaz.
- Kulaklık empedansı: 16 Ω
- Kulaklığın maks. ses çıkışı: 0.624 mW - 1.04 mW
- Kulaklık jakı boyutu: 0,35 cm


DVI to HDMI connection

(Only LA79**, LA86**, LA960*)

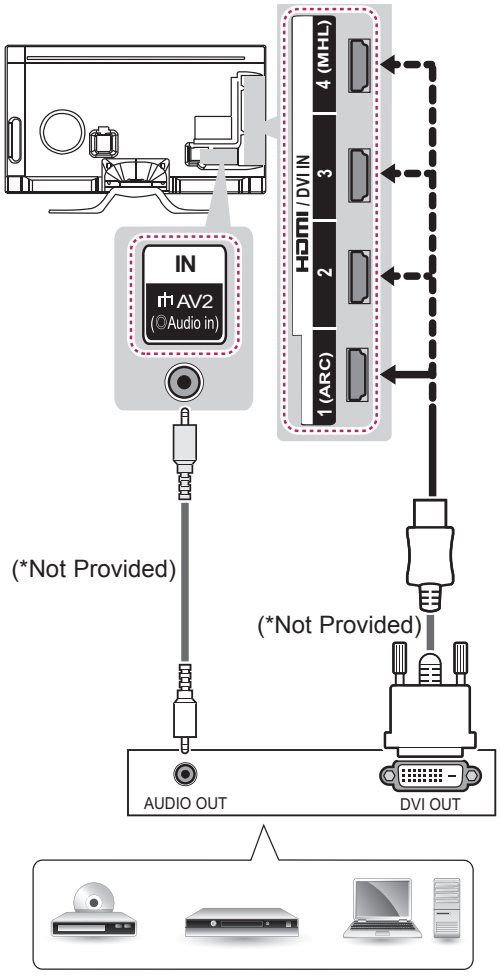

DVD / Blu-Ray / HD Cable Box / PC

(Only LA965*, LA97**, LA98**, LM96**)

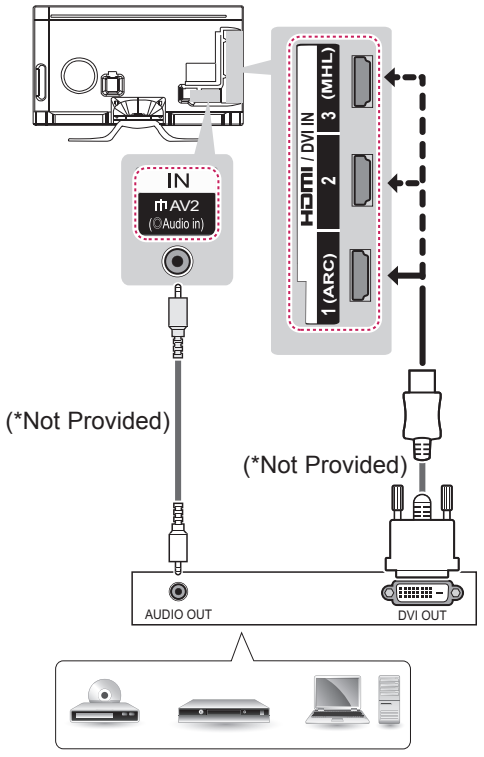

DVD / Blu-Ray / HD Cable Box / PC

English

Transmits the digital video signal from an external device to the TV. Connect the external device and the TV with the DVI-HDMI cable as shown. To transmit an audio signal, connect an audio cable. Choose any HDMI input port to connect. It does not matter which port you use.

NOTE

- Depending on the graphics card, DOS mode may not work if a DVI to HDMI Cable is in use.
- When using the DVI/HDMI cable, single link is only supported.


Türkçe

Harici cihazdan TV'ye dijital video sinyali gönderir. Harici cihaz ile TV'yi DVI-HDMI kablosuyla aşağıdaki şekilde gösterildiği gibi bağlayın. Ses sinyali göndermek için bir ses kablosu bağlayın. Bağlanmak için herhangi bir HDMI giriş bağlantı noktasını seçin. Kullandığınız bağlantı noktası önemli değildir.

NOT

- Grafik kartına bağlı olarak, HDMI-DVI Kablosu kullanılıyorsa DOS modu çalışmayabilir.
- HDMI/DVI kablosunu kullanırken yalnızca tek bağlantıya izin verilir.

Component connection

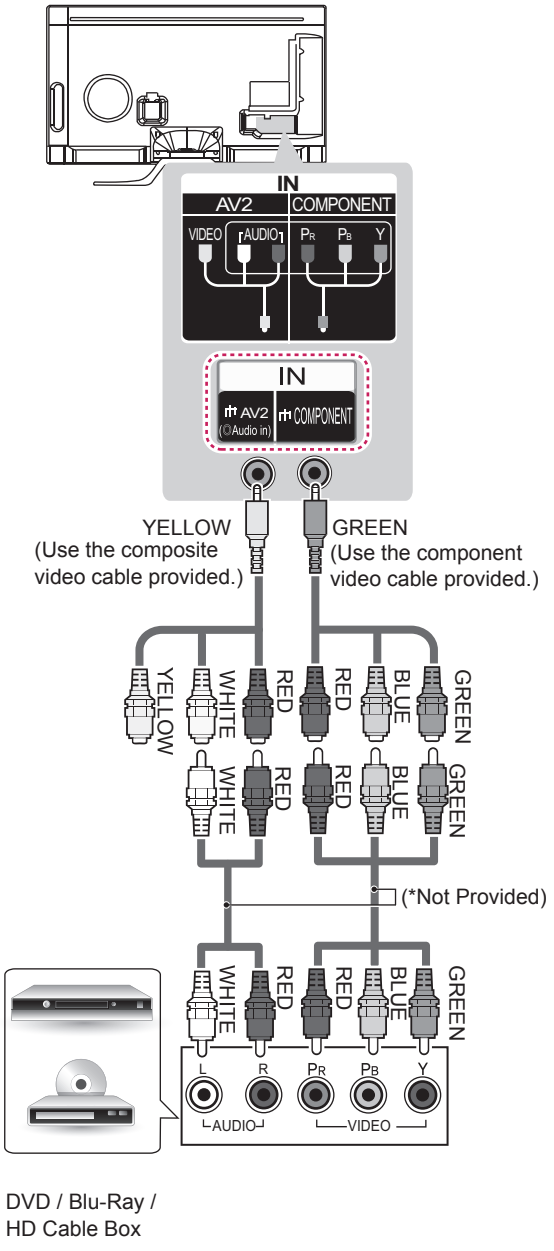

DVD / Blu-Ray /
HD Cable Box

English

Transmits analog video and audio signals from an external device to the TV. Connect the external device and the TV with a component gender cable as shown.

NOTE

- If cables are not installed correctly, it could cause this image to display in black and white or with distorted colours.


Türkçe

Harici cihazdan TV'ye analog video ve ses sinyalleri gönderir. Harici cihaz ile TV'yi komponent kablosuyla aşağıdaki şekilde gösterildiği gibi bağlayın.

NOT

- Kabloların yanlış takılması, görüntünün siyah beyaz veya bozuk renklerle gösterilmesine neden olabilir.

Composite connection

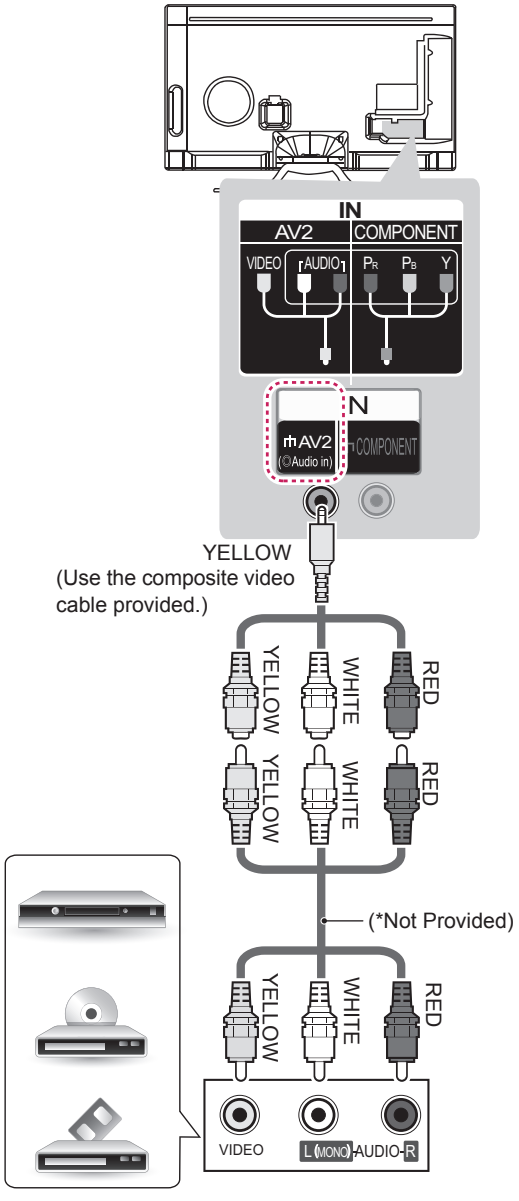

VCR / DVD / Blu-Ray
/ HD Cable Box

English


Transmits analog video and audio signals from an external device to the TV. Connect the external device and the TV with the composite cable as shown.

Türkçe


Harici cihazdan TV'ye analog video ve ses sinyalleri gönderir. Harici cihaz ile TV'yi kompozit kablosuyla aşağıdaki şekilde gösterildiği gibi bağlayın.

MHL connection

(Only LA79**, LA86**, LA960*)

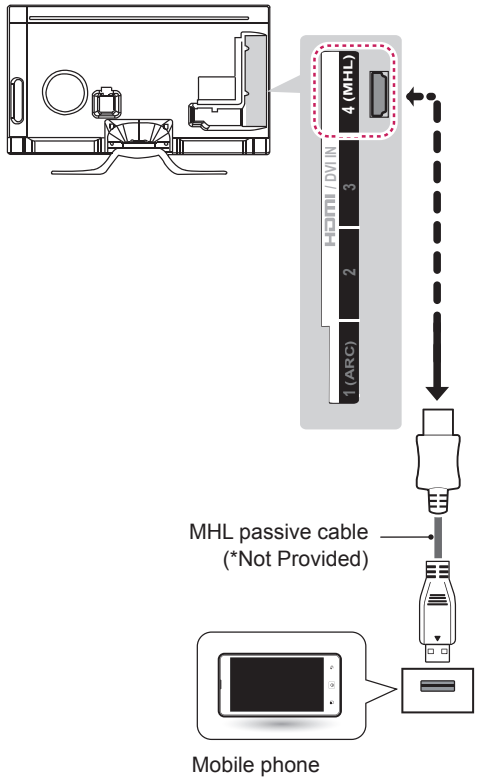

(Only LA965*, LA97**, LA98**, LM96**)

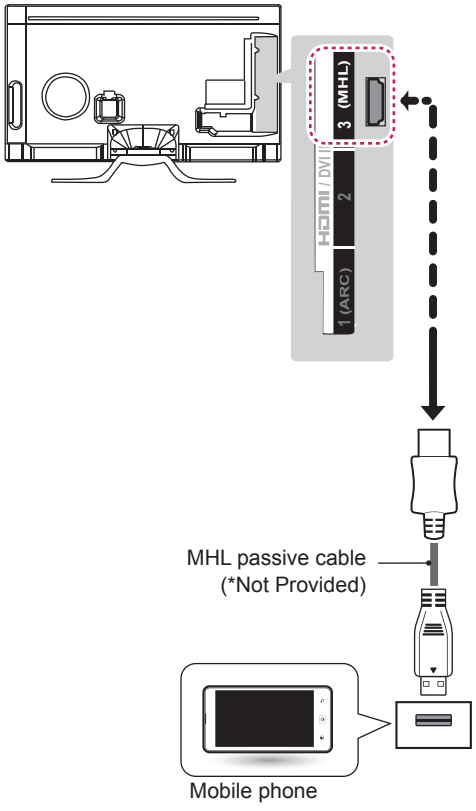

English

Mobile High-definition Link (MHL) is an interface for transmitting digital audiovisual signals from mobile phones to television sets.

NOTE

- Connect the mobile phone to the HDMI/DVI IN 4 (MHL) or HDMI/DVI IN 3 (MHL) port to view the phone screen on the TV.
- The MHL passive cable is needed to connect the TV and a mobile phone.
- This only works for the MHL-enabled phone.
- Some applications can be operated by the remote control.
- For some mobile phones supporting MHL, you can control with the magic remote control.
- Remove the MHL passive cable from the TV when:
  - the MHL function is disabled
  - your mobile device is fully charged in stand-by mode


Türkçe

Mobil Yüksek Tanımlı Bağlantı (MHL) dijital görsel işitsel sinyalleri cep telefonlarından televizyon setlerine iletmek için kullanılan bir arabirimdir.

NOT

- TV'de telefon ekranını görüntülemek için cep telefonunu HDMI/DVI IN 4 (MHL) veya HDMI/DVI IN 3 (MHL) bağlantı noktasına bağlayın.
- TV ile cep telefonunu birbirine bağlamak için MHL pasif kablo gereklidir.
- Bu yalnızca MHL etkin telefonlarda çalışır.
- Bazı uygulamalar uzaktan kumanda ile çalıştırılabilir.
- MHL desteği olan bazı cep telefonlarını sihirli uzaktan kumanda olarak kullanabilirsiniz.
- MHL pasif kablosunu TV'den çıkarın:
  - MHL işlevi devre dışı bırakıldığında
  - Mobil cihazınız bekleme modunda tamamen şarj edildiğinde

Audio connection

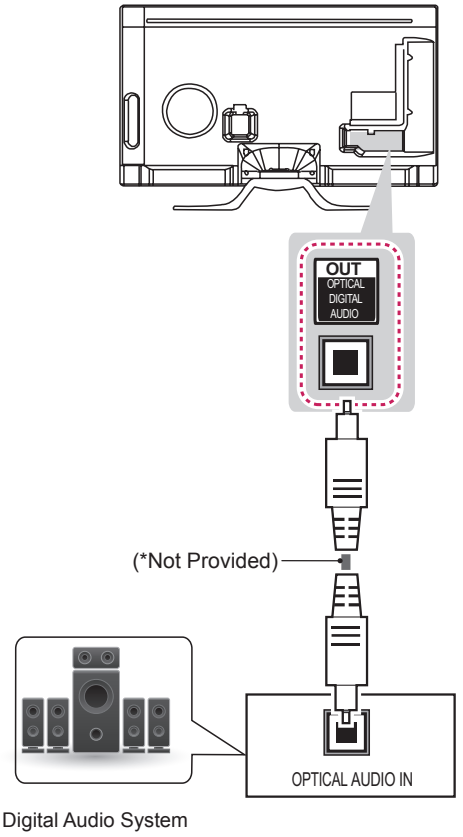

Digital Audio System

English

You may use an optional external audio system instead of the built-in speaker.

Digital optical audio connection

Transmits a digital audio signal from the TV to an external device. Connect the external device and the TV with the optical audio cable as shown.

NOTE

- Do not look into the optical output port. Looking at the laser beam may damage your vision.
- Audio with ACP (Audio Copy Protection) function may block digital audio output.

Türkçe

Dahili hoparlör yerine isteğe bağlı bir harici ses sistemi kullanabilirsiniz.

Dijital optik ses bağlantısı


TV'den harici cihaza dijital ses sinyali gönderir. Harici cihaz ile TV'yi optik ses kablosuyla aşağıdaki şekilde gösterildiği gibi bağlayın.

NOT


- Optik çıkış bağlantı noktasına doğru bakmayın. Lazer ışınına bakmak gözlerinize zarar verebilir.
- ACP (Ses Kopyalama Koruması) özelliğine sahip sesler dijital ses çıkışını engelleyebilir.

USB connection

(Only LA79**, LA86**, LA960*)

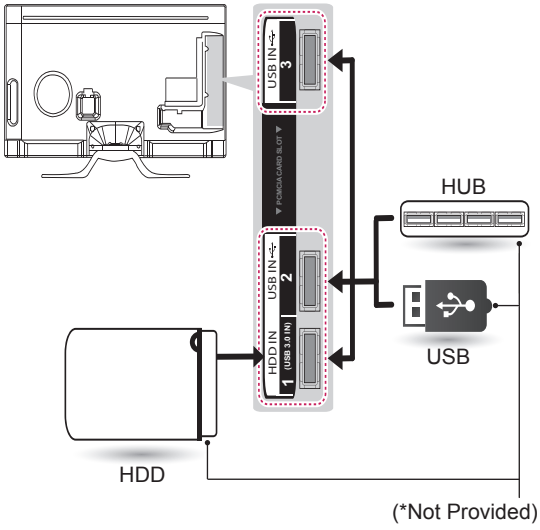

(Only LA965*, LA97**, LA98**, LM96**)

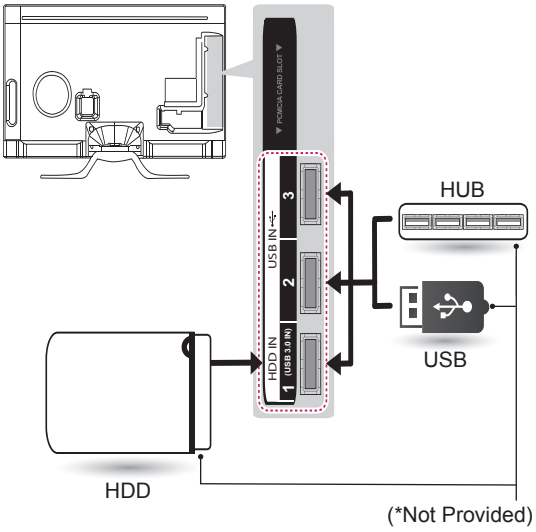

English

Connect a USB storage device such as a USB flash memory, external hard drive, or a USB memory card reader to the TV and access the SmartShare menu to use various multimedia files.

NOTE

- Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.
- Connect the external power source if your USB is needed.


Türkçe


Çeşitli multimedya dosyalarını kullanmak için TV'ye USB flaş bellek, harici sabit disk ya da USB bellek kartı okuyucu gibi bir USB depolama aygıtı bağlayın ve SmartShare menüsüne gidin.

NOT

- Bazı USB Hubları çalışmayabilir. USB Hubı ile bağlanan bir USB aygıtı çalışmazsa, doğrudan TV üzerindeki USB bağlantı noktasına bağlayın.
- USB kullanmanız gerekiyorsa harici güç kaynağını bağlayın.

CI module connection

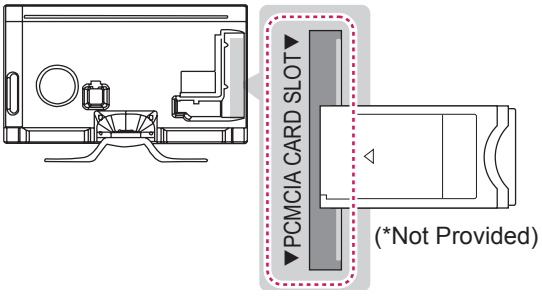

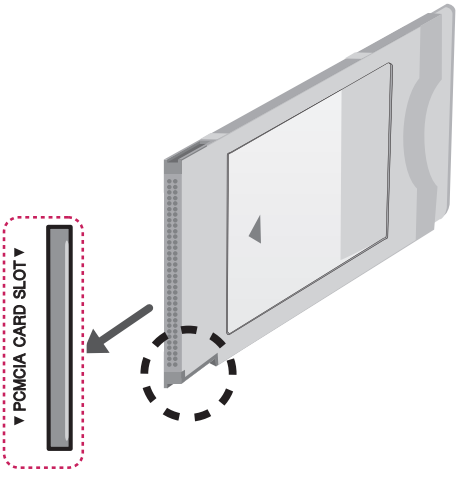

English

View the encrypted (pay) services in digital TV mode. This feature is not available in all countries.

NOTE

- Check if the CI module is inserted into the PCMCIA card slot in the right direction. If the module is not inserted properly, this can cause damage to the TV and the PCMCIA card slot.
- If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Terrestrial/Cable/Satellite Service Operator.


Türkçe

Dijital TV modunda şifreli (ücretli) servisleri görüntüler. Bu özellik her ülkede mevcut değildir.

NOT

- CI modülünün PCMCIA kart yuvasına doğru yönde takıldığından emin olun. Modül doğru takılmadığında, TV'nin ve PCMCIA kart yuvasının zarar görmesine neden olabilir.
- CI+ CAM bağlandığında TV'de herhangi bir görüntü ve ses yoksa, lütfen Karasal/Kablo/ Uydu Servis Operatörü ile iletişime geçin.

Euro Scart connection

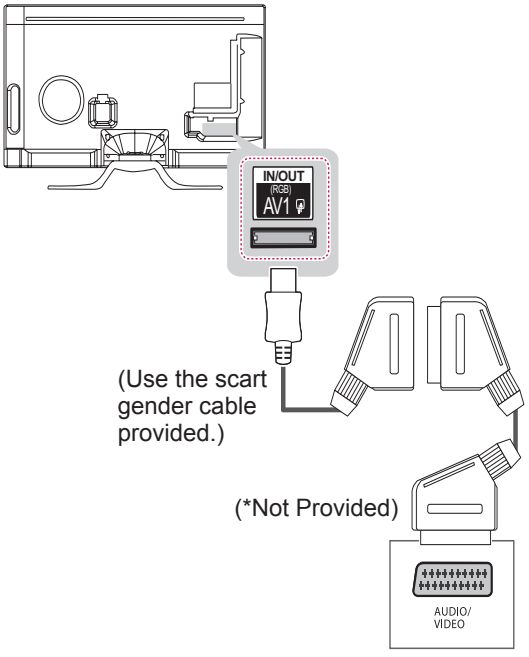

English

Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the euro scart cable as shown.

Output Type / Current input mode	AV1 (TV Out[1])
Digital TV	Digital TV
Analogue TV, AV	Analogue TV
Component	
HDMI	

1 TV Out : Outputs Analogue TV or Digital TV signals.

NOTE

- Any Euro scart cable used must be signal shielded.
- When watching digital TV in 3D imaging mode, TV out signals cannot be output through the SCART cable. (Only 3D models)
- If you set the 3D mode to On while a scheduled recording is performed on digital TV, monitor out signals cannot be output through the SCART cable, and the recording cannot be performed.

Türkçe

Harici cihazdan TV setine video ve ses sinyalleri gönderir. Harici cihaz ve TV setini aşağıdaki şekilde gösterildiği gibi Euro Scart kablosuyla bağlayın.

Çıkış tipi / Geçerli giriş modu	AV1 (TV Çıkışı[1])
Dijital TV	Dijital TV
Analog TV, AV	Analog TV
Komponent	
HDMI	

1 TV Çıkışı: Analog TV veya Dijital TV sinyal çıkışı sağlar.

NOT

- Kullanılacak Euro Scart kablosu sinyal korumalı olmalıdır.
- 3D görüntü modunda dijital TV izlerken, yalnızca 2D çıkış sinyallerinin SCART kablosu aracılığıyla çıkışı sağlanabilir. (Yalnızca 3D modeller)
- Dijital TV'de programlanmış kayıt yapılırken, 3D modunu Açık olarak ayarladığınızda SCART kablosu aracılığıyla monitör çıkış sinyallerinin çıkışı sağlanamaz ve kayıt yapılamaz.

English

Connect various external devices to the TV and switch input modes to select an external device. For more information of external device's connection, refer to the manual provided with each device.
Available external devices are: HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices.

NOTE

- The external device connection may differ from the model.
- Connect external devices to the TV regardless of the order of the TV port.
- If you record a TV program on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device.
- Refer to the external equipment's manual for operating instructions.
- If you connect a gaming device to the TV, use the cable supplied with the gaming device.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.
- In PC mode, some resolution settings may not work properly depending on the graphics card.

Türkçe

TV'ye çeşitli harici cihazlar bağlayın ve bir harici cihaz seçmek için giriş modlarına geçin. Harici cihaz bağlantısı hakkında daha fazla bilgi için cihazlarla birlikte verilen kılavuza bakın. Kullanılabilir harici cihazlar şunlardır: HD alıcılar, DVD oynatıcılar, VCR cihazları, ses sistemleri, USB depolama aygıtları, PC, oyun cihazları ve diğer harici cihazlar.

NOT

- Harici cihaz bağlantısı modele göre değişiklik gösterebilir.
- Harici cihazları TV'ye, TV bağlantı noktalarını dikkate almaksızın bağlayın.
- DVD kayıt cihazına ya da VCR cihazına bir TV programı kaydederken TV sinyal giriş kablosunun DVD kayıt cihazı ya da VCR üzerinden TV'ye bağlandığından emin olun. Kayıt hakkında daha fazla bilgi için, bağlanan cihazla birlikte verilen kılavuza bakın.
- Kullanım talimatları için harici cihazın kullanım kılavuzuna başvurun.
- TV'ye bir oyun cihazı bağlarsanız, oyun cihazıyla birlikte verilen kabloyu kullanın.
- PC modunda, çözünürlük, dikey desen, kontrast veya parlaklığa bağlı parazit görülebilir. Parazit varsa PC çıkışını başka bir çözünürlüğe ayarlayın, yenileme hızını değiştirin veya net bir görüntü elde edene kadar RESİM menüsünden parlaklık ve kontrast ayarlarını değiştirin.
- PC modunda bazı çözünürlük ayarları grafik kartına bağlı olarak çalışmayabilir.

LG
Life's Good

OWNER'S MANUAL
LED TV*

* LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

www.lg.com

ENGLISH

TABLE OF CONTENTS

3 LICENSES

3 OPEN SOURCE SOFTWARE NOTICE

4 SAFETY INSTRUCTIONS

10 - Viewing 3D Imaging (Only 3D models)

12 INSTALLATION PROCEDURE

12 ASSEMBLING AND PREPARING

12 Unpacking
16 Separate purchase
17 Parts and buttons
19 Lifting and moving the TV
20 Mounting on a table
21 Mounting on a wall
23 Using Sliding Speaker
23 Using Built-in Camera
24 - Preparing Built-in Camera
24 Name of Parts of Built-in Camera
24 - Checking the Camera's Shooting Range

25 REMOTE CONTROL

26 MAGIC REMOTE CONTROL FUNCTIONS

28 Registering Magic Remote Control
28 How to use Magic Remote Control
28 Precautions to Take when Using the Magic Remote Control

29 USING THE USER GUIDE

30 MAINTENANCE

30 Cleaning your TV
30 - Screen, frame, cabinet and stand
30 - Power cord

30 TROUBLESHOOTING

31 EXTERNAL CONTROL DEVICE SETUP

31 SPECIFICATIONS

WARNING

- If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death.

CAUTION

- If you ignore the caution message, you may be slightly injured or the product may be damaged.

NOTE

- The note helps you understand and use the product safely. Please read the note carefully before using the product.

LICENSES

Supported licenses may differ by model. For more information about licenses, visit *www.lg.com*.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit *divx.com* for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

“DivX Certified® to play DivX® video up to HD 1080p, including premium content.”

“DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.”

“Covered by one or more of the following U.S. patents :
7,295,673; 7,460,668; 7,515,710; 7,519,274”

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

OPEN SOURCE SOFTWARE NOTICE

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit *http://opensource.lge.com .*
In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.
LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

ENGLISH

SAFETY INSTRUCTIONS

Please read these safety precautions carefully before using the product.



WARNING




- Do not place the TV and/or remote control in the following environments:
  - » A location exposed to direct sunlight
  - » An area with high humidity such as a bathroom
  - » Near any heat source such as stoves and other devices that produce heat
  - » Near kitchen counters or humidifiers where they can easily be exposed to steam or oil
  - » An area exposed to rain or wind
  - » Near containers of water such as vases

  Otherwise, this may result in fire, electric shock, malfunction or product deformation.



- Do not place the product where it might be exposed to dust.
  This may cause a fire hazard




- Mains Plug is the TV connecting/disconnecting device to AC mains electric supply. This plug must remain readily attached and operable when TV is in use.




- Do not touch the power plug with wet hands. Additionally, if the cord pin is wet or covered with dust, dry the power plug completely or wipe dust off.
  You may be electrocuted due to excess moisture.




- Make sure to connect Mains cable to compliant AC mains socket with Grounded earth pin. (Except for devices which are not grounded on earth.) Otherwise possibility you may be electrocuted or injured.



- Insert power cable plug completely into wall socket otherwise if not secured completely into socket, fire ignition may break out.

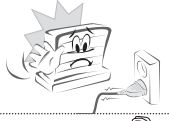

- Ensure the power cord does not come into contact with hot objects such as a heater. This may cause a fire or an electric shock hazard.

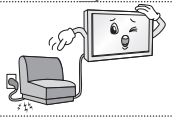


- Do not place a heavy object, or the product itself, on power cables.
  Otherwise, this may result in fire or electric shock.




- Bend antenna cable between inside and outside building to prevent rain from flowing in.
  This may cause water damaged inside the Product and could give an electric shock.



- When mounting TV onto wall make sure to neatly install and isolate cabling from rear of TV as to not create possibility of electric shock /fire hazard.

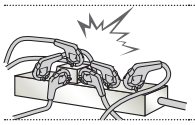

- Do not plug too many electrical devices into a single multiple electrical outlet. Otherwise, this may result in fire due to over-heating.

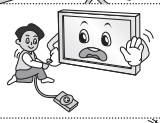

- Do not drop the product or let it fall over when connecting external devices. Otherwise, this may result in injury or damage to the product.




- Keep the anti-moisture packing material or vinyl packing out of the reach of children.
  Anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital. Additionally, vinyl packing can cause suffocation. Keep it out of the reach of children.



- Do not let your children climb or cling onto the TV.
  Otherwise, the TV may fall over, which may cause serious injury.



- Dispose of used batteries carefully to ensure that a small child does not consume them.
  Please seek Doctor- Medical Attention immediately if child consumes batteries.



- Do not insert any metal objects/conductors (like a metal chopstick/cutlery/ screwdriver) between power cable plug and input Wall Socket while it is connected to the input terminal on the wall. Additionally, do not touch the power cable right after plugging into the wall input terminal. Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury. (Depending on model)



- Do not put or store inflammable substances near the product.
  There is a danger of combustion/explosion or fire due to careless handling of the inflammable substances.



- Do not drop metallic objects such as coins, hair pins, chopsticks or wire into the product, or inflammable objects such as paper and matches. Children must pay particular attention.
  Electrical shock, fire or injury can occur. If a foreign object is dropped into the product, unplug the power cord and contact the service centre.




- Do not spray water on the product or scrub with an inflammable substance (thinner or benzene). Fire or electric shock accident can occur.



- Do not allow any impact, shock or any objects to fall into the unit, and do not drop anything onto the screen.
  You may be injured or the product can be damaged.



- Never touch this product or antenna during a thunder or lighting storm.
  You may be electrocuted.



- Never touch the wall outlet when there is leakage of gas, open the windows and ventilate.
  It may cause a fire or a burn by a spark.




- Do not disassemble, repair or modify the product at your own discretion.
  Fire or electric shock accident can occur.
  Contact the service centre for check, calibration or repair.



- If any of the following occur, unplug the product immediately and contact your local service centre.
  » The product has been impacted by shock
  » The product has been damaged
  » Foreign objects have entered the product
  » The product produced smoke or a strange smell
  This may result in fire or electric shock.




- Unplug the TV from AC mains wall socket if you do not intend to use the TV for a long period of time. Accumulated dust can cause fire hazard and insulation deterioration can cause electric leakage/shock/fire.

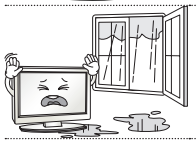


- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

⚠ CAUTION

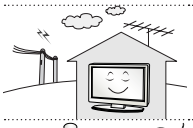


- Install the product where no radio wave occurs.

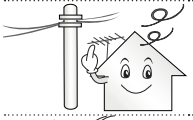

- There should be enough distance between an outside antenna and power lines to keep the former from touching the latter even when the antenna falls.
  This may cause an electric shock.



- Do not install the product on places such as unstable shelves or inclined surfaces. Also avoid places where there is vibration or where the product cannot be fully supported.
  Otherwise, the product may fall or flip over, which may cause injury or damage to the product.

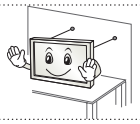


- If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury.


- If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop.
- Only use the attachments / accessories specified by the manufacturer.




- When installing the antenna, consult with a qualified service technician. If not installed by a qualified technician, This may create a fire hazard or an electric shock hazard.



- We recommend that you maintain a distance of at least 2 to 7 times the diagonal screen size when watching TV.
  If you watch TV for a long period of time, this may cause blurred vision.



- Only use the specified type of battery.
  This could cause damage to the remote control.



- Do not mix new batteries with old batteries.
  This may cause the batteries to overheat and leak.


- Batteries should not be exposed to excessive heat. For example, keep away from direct sunlight , open fireplace and electric heaters.
- Do not place non-rechargeable batteries in charging device.



- Make sure there are no objects between the remote control and its sensor.




- Signal from Remote Control can be interrupted due to external/internal lighting eg Sunlight, fluorescent lighting. If this occurs turn off lighting or darken viewing area.




- When connecting external devices such as video game consoles, make sure the connecting cables are long enough.
  Otherwise, the product may fall over, which may cause injury or damage the product.



- Do not turn the product On/Off by plugging-in or unplugging the power plug to the wall outlet. (Do not use the power plug for switch.)
  It may cause mechanical failure or could give an electric shock.

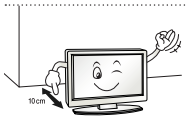


- Please follow the installation instructions below to prevent the product from overheating.
  » The distance between the product and the wall should be more than 10 cm.
  » Do not install the product in a place with no ventilation (e.g., on a bookshelf or in a cupboard).
  » Do not install the product on a carpet or cushion.
  » Make sure the air vent is not blocked by a tablecloth or curtain.
  Otherwise, this may result in fire.




- Take care not to touch the ventilation openings when watching the TV for long periods as the ventilation openings may become hot. This does not affect the operation or performance of the product.

- Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

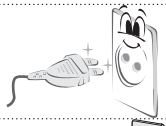

- Prevent dust collecting on the power plug pins or outlet.
  This may cause a fire hazard.

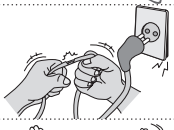

- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.



- Do not press strongly upon the panel with a hand or sharp object such as nail, pencil or pen, or make a scratch on it, as it may cause damage to screen.




- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary or permanent distortion/damage to screen.



- When cleaning the product and its components, unplug the power first and wipe it with a soft cloth. Applying excessive force may cause scratches or discolouration. Do not spray with water or wipe with a wet cloth. Never use glass cleaner, car or industrial shiner, abrasives or wax, benzene, alcohol etc., which can damage the product and its panel.
  Otherwise, this may result in fire, electric shock or product damage (deformation, corrosion or breakage).

- As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by SWITCH.



- When unplugging the cable, grab the plug and unplug it, by pulling at the plug. Don’t pull at the cord to unplug the power cord from the power board, as this could be hazardous.



- When moving the product, make sure you turn the power off first. Then, unplug the power cables, antenna cables and all connecting cables.
  The TV set or power cord may be damaged, which may create a fire hazard or cause electric shock.



- When moving or unpacking the product, work in pairs because the product is heavy.
  Otherwise, this may result in injury.



- Contact the service centre once a year to clean the internal parts of the product. Accumulated dust can cause mechanical failure.




- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




- If the product feels cold to the touch, there may be a small “flicker” when it is turned on. This is normal, there is nothing wrong with product.



- The panel is a high technology display product with resolution of two million to six million pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product.
  This phenomenon also occurs in third-party products and is not subject to exchange or refund.



- You may find different brightness and color of the panel depending on your viewing position(left/right/top/down).
  This phenomenon occurs due to the characteristic of the panel. It is not related with the product performance, and it is not malfunction.



- Displaying a still image (e.g., broadcasting channel logo, on-screen menu, scene from a video game) for a prolonged time may cause damage to the screen, resulting in retention of the image, which is known as image sticking. The warranty does not cover the product for image sticking.
  Avoid displaying a fixed image on your television’s screen for a prolonged period (2 or more hours for LCD, 1 or more hours for Plasma).
  Also, if you watch the TV at a ratio of 4:3 for a long time, image sticking may occur on the borders of the panel.
  This phenomenon also occurs in third-party products and is not subject to exchange or refund.

- **Generated Sound**
  “Cracking” noise: A cracking noise that occurs when watching or turning off the TV is generated by plastic thermal contraction due to tempera-ture and humidity. This noise is common for products where thermal deformation is required. Electrical circuit humming/panel buzzing: A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product. It varies depending on the product.
  This generated sound does not affect the performance and reliability of the product.

Viewing 3D Imaging (Only 3D models)

⚠ WARNING

Viewing Environment

- Viewing Time
  - When watching 3D contents, take 5 - 15 minute breaks every hour. Viewing 3D contents for a long period of time may cause headache, dizziness, fatigue or eye strain.

Those that have a photosensitive seizure or chronic illness

- Some users may experience a seizure or other abnormal symptoms when they are exposed to a flashing light or particular pattern from 3D contents.
- Do not watch 3D videos if you feel nausea, are pregnant and/ or have a chronic illness such as epilepsy, cardiac disorder, or blood pressure disease, etc.
- 3D Contents are not recommended to those who suffer from stereo blindness or stereo anomaly. Double images or discomfort in viewing may be experienced.
- If you have strabismus (cross-eyed), amblyopia (weak eyesight) or astigmatism, you may have trouble sensing depth and easily feel fatigue due to double images. It is advised to take frequent breaks than the average adult.
- If your eyesight varies between your right and left eye, revise your eyesight prior to watching 3D contents.

Symptoms which require discontinuation or refraining from watching 3D contents

- Do not watch 3D contents when you feel fatigue from lack of sleep, overwork or drinking.
- When these symptoms are experienced, stop using/watching 3D contents and get enough rest until the symptom subsides.
  - Consult your doctor when the symptoms persist. Symptoms may include headache, eyeball pain, dizziness, nausea, palpitation, blurriness, discomfort, double image, visual inconvenience or fatigue.

⚠ CAUTION

Viewing Environment

- Viewing Distance
  - Maintain a distance of at least twice the screen diagonal length when watching 3D contents. If you feel discomfort in viewing 3D contents, move further away from the TV.

Viewing Age

- Infants/Children
  - Usage/ Viewing 3D contents for children under the age of 6 are prohibited.
  - Children under the age of 10 may overreact and become overly excited because their vision is in development (for example: trying to touch the screen or trying to jump into it. Special monitoring and extra attention is required for children watching 3D contents.
  - Children have greater binocular disparity of 3D presentations than adults because the distance between the eyes is shorter than that of adults. Therefore they will perceive more stereoscopic depth compared to adults for the same 3D image.
- Teenagers
  - Teenagers under the age of 19 may react with sensitivity due to stimulation from light in 3D contents. Advise them to refrain from watching 3D contens for a long time when they are tired.
- Elderly
  - The elderly may perceive less 3D effect compared to the young. Do not sit closer to the TV than the recommended distance.

Cautions when using the 3D glasses

- Make sure to use LG 3D glasses. Otherwise, you may not be able to view 3D videos properly.
- Do not use 3D glasses instead of your normal glasses, sunglasses or protective goggles.
- Using modified 3D glasses may cause eye strain or image distortion.
- Do not keep your 3D glasses in extremely high or low temperatures. It will cause deformation.
- The 3D glasses are fragile and are easily scratched. Always use a soft, clean piece of cloth when wiping the lenses. Do not scratch the lenses of the 3D glasses with sharp objects or clean/wipe them with chemicals.

NOTE

- Image shown may differ from your TV.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are using.
- New features may be added to this TV in the future.
- The TV can be placed in standby mode in order to reduce the power consumption. And the TV should be turned off if it will not be watched for some time, as this will reduce energy consumption.
- The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.

INSTALLATION PROCEDURE

1 Open the package and make sure all the accessories are included.

2 Attach the stand to the TV set.

3 Connect an external device to the TV set.

4 Make sure the network connection is available.
You can use the TV network functions only when the network connection is made.

ASSEMBLING AND PREPARING

Unpacking


Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product.
The illustrations in this manual may differ from the actual product and item.


CAUTION

- Do not use any unapproved items to ensure the safety and product life span.
- Any damages or injuries by using unapproved items are not covered by the warranty.
- Some models have a thin film attached on to the screen and this must not be removed.


NOTE

- The items supplied with your product may vary depending on the model.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port.

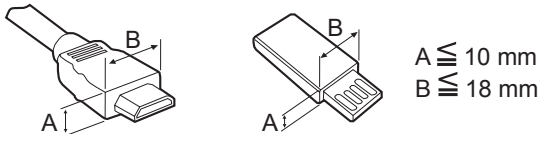



Owner's manual

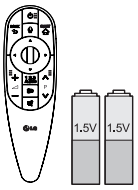

Magic remote control, batteries (AA)
(Only LA79**, LA86**, LA960*, LA98**, LM96**)
(See p. 26)



Tag on
(Depending on model)




Scart gender cable
(See p. A-19)




Dual play glasses
(Depending on model)




Cinema 3D Glasses
The number of 3D glasses may differ depending on the model or country.




Component video cable
(See p. A-13)



Composite video cable
(See p. A-13, A-14)

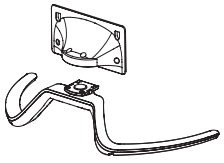

Stand Base / Stand Body
(Only LA79**)
(See p. A-3)



Cable holder
(Depending on model)
(See p. A-6, A-7)



Cable Management
(Only LA79**)
(See p. A-6)




Stand Screws
8EA, M4 x 14
(Only LA79**)
(See p. A-3)



Stand Screws
4EA, M4 x 16
(Only LA860*, LA868*)
(See p. A-3, A-4)




Stand Screws
4EA, M4 x 20
(Only LA960*, LA98**, LM96**)
(See p. A-3, A-6)




Stand Base
(Only LA860*, LA960*)
(See p. A-3)




Power Cord
(Depending on model)



Remote control, batteries (AAA)
(Depending on model)
(See p. 25)

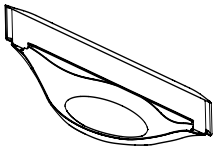

Stand Base
(Only LA868*)
(See p. A-4)

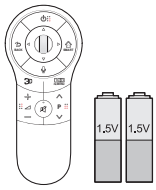


Magic remote control, batteries (AA)
(Only LA965*, LA97**)
(See p. 27)



Stand Base
(Only LA97**)
(See p. A-5)



Stand Base
(Only LA965*)
(See p. A-4)




Video call camera
(Only 70LA860*)




Stand Screws
4EA, M4 x 14
(Only 55LA97**, LA965*)
(See p. A-4, A-5)




Wall mount inner spacers
4EA (Only LA97**)
(See p. 22)



Wall mount screws
4EA, M6 x 54
(Only 55LA97**)
(See p. 22)




Wall mount screws
4EA, M8 x 44
(Only 65LA97**)
(See p. 22)

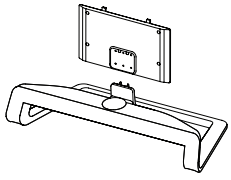

Stand Base / Stand Body
(Only LA98**, LM96**)
(See p. A-5)




Stand Screws
6EA, M5 x 16
(Only LA98**, LM96**)
(See p. A-5)

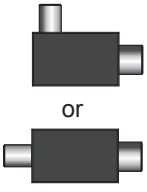

Isolator
(See p. 15)

NOTE

- Antenna Isolator Installation Guide
  - Use this to install TV in a place where there is a voltage difference between TV Set and GND of antenna signal.
    - » If there is a voltage difference between TV Set and GND of antenna signal, the antenna contact might be heated and excessive heat might cause an accident.
  - You can improve the safety when watching TV by efficiently removing power voltage from TV antenna. It is recommended to mount the isolator to the wall. If it cannot be mounted to the wall, mount it on the TV. Avoid disconnecting the antenna Isolator after installation.
  - Before starting, be sure that the TV antenna is connected.

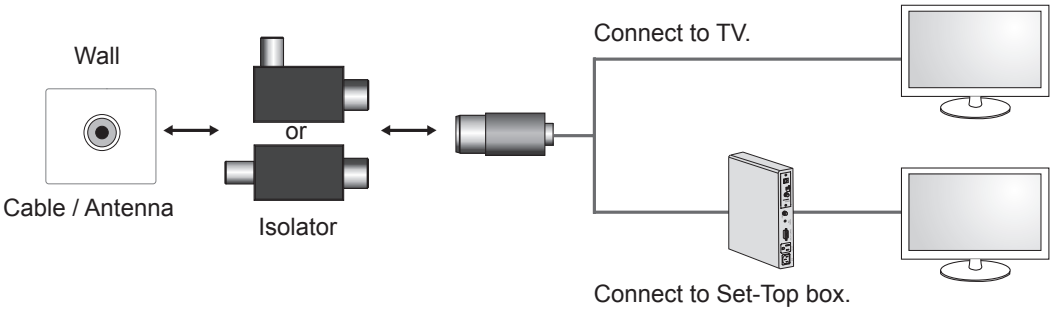

Connect one end of the isolator to cable/antenna jack and the other to TV set or set-top box.

“Equipment connected to the protective earthing of the building installation through the mains connection or through other equipment with a connection to protective earthing - and to a cable distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11)”

When applying the RF Isolator, a slight loss of signal sensitivity can occur.

ENGLISH

Separate purchase

Separate purchase items can be changed or modified for quality improvement without any notification.
Contact your dealer to buy these items.
These devices only work with certain models.




AG-F*DP**
Dual play glasses




AG-F***
Cinema 3D glasses




AN-MR400
Magic remote

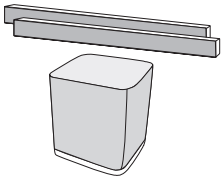

NB7530
Built-in sound bar



AN-VC5**
Video call camera

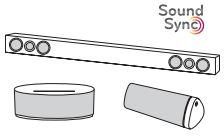

LG Audio device




Tag on

Compatibility	LA79**, LA965*	LA86**	LA960*, LA97**	LA98**, LM96**
AG-F*DP** Dual play glasses	•	•	•	•
AG-F*** Cinema 3D glasses	•	•	•	•
AN-MR400 Magic remote	•	•	•	•
AN-VC5** Video call camera	•	• (Depending on model)		•
LG Audio device	•	•	•	•
Tag on	•	•	•	•
NB7530 Built-in sound bar				• (Depending on model)


The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.

Parts and buttons


A type : LA79**

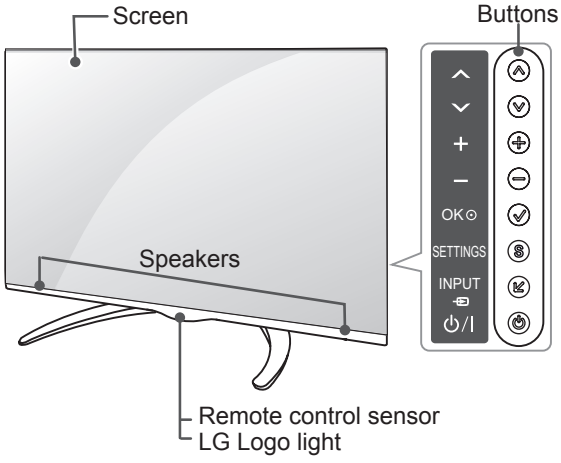


B type : LA860*, LA960*

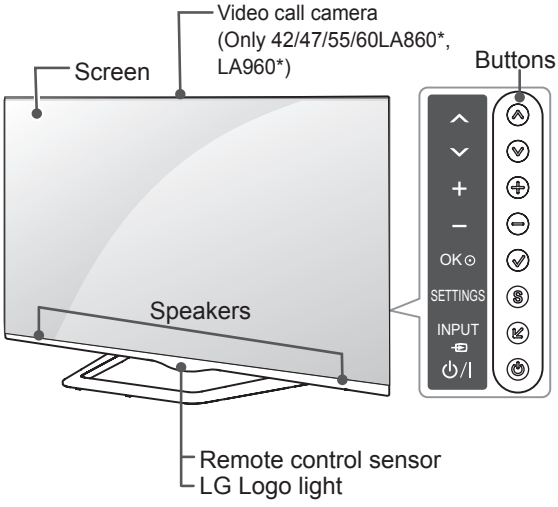


C type : LA868*

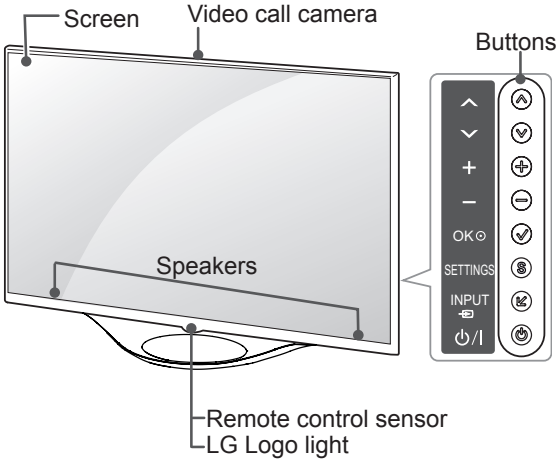


D type : LA965*

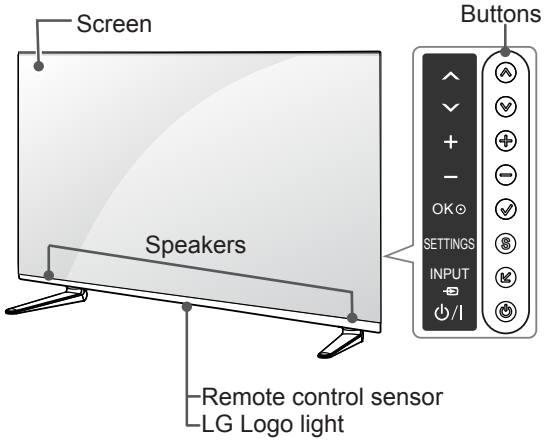

E Type : LA97**

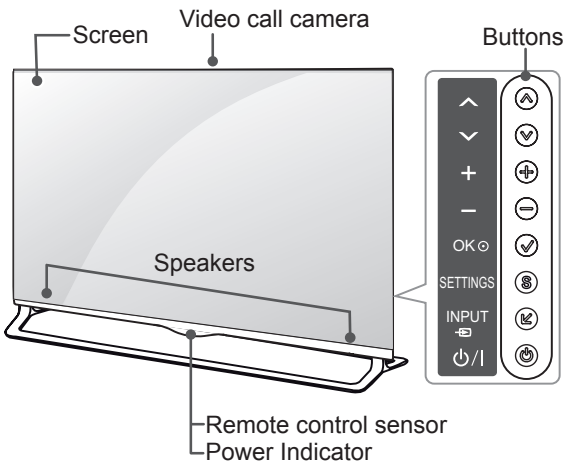


F type : LA98**, LM96**

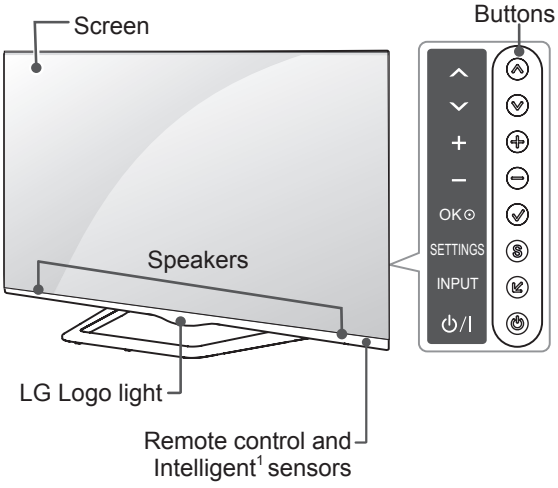

Button	Description
∧ ∨	Scrolls through the saved programmes.
+ −	Adjusts the volume level.
✓	Selects the highlighted menu option or confirms an input.
S	Accesses the main menu, or saves your input and exits the menus.
↙	Changes the input source.
⏻	Turns the power on or off.

1 Intelligent sensor - Adjusts the image quality and brightness based on the surrounding environment.

CAUTION

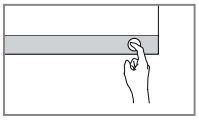

- To avoid possible SPEAKER damage or degradation in performance please keep contact of TV /Speaker out of reach of children. (Only LA965*)

NOTE

- You can set the LG Logo Light to on or off by selecting **OPTION** in the main menus. (Depending on model)


Lifting and moving the TV

Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.


CAUTION

- Avoid touching the screen at all times, as this may result in damage to the screen.


- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to avoid damage.

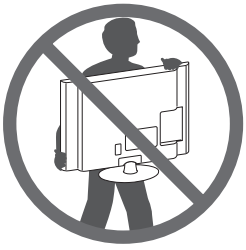

- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

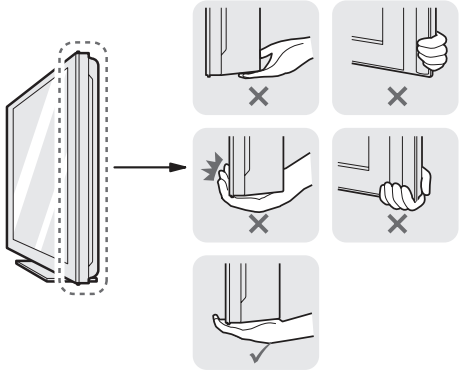


- When transporting a large TV, there should be at least 2 people.
- When transporting the TV by hand, hold the TV as shown in the following illustration.

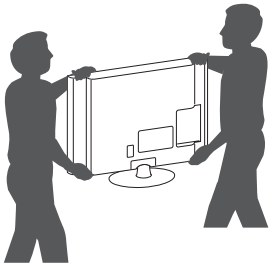

- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.
- Do not apply excessive pressure to cause flexing /bending of frame chassis as it may damage screen.

Mounting on a table

1 Lift and tilt the TV into its upright position on a table.
- Leave a 10 cm (minimum) space from the wall for proper ventilation.

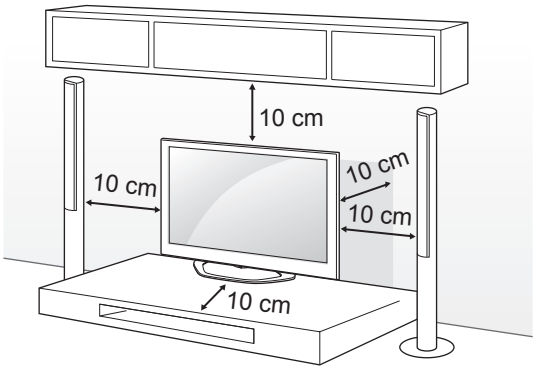

2 Connect the power cord to a wall outlet.

CAUTION


- Do not place the TV near or on sources of heat, as this may result in fire or other damage.

Using the Kensington security system (This feature is not available for all models.)

- Image shown may differ from your TV.


The Kensington security system connector is located at the rear of the TV. For more information of installation and using, refer to the manual provided with the Kensington security system or visit *http://www.kensington.com.*

Connect the Kensington security system cable between the TV and a table.

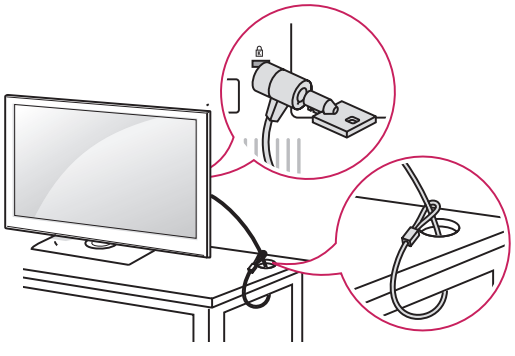


Adjusting the angle of the TV to suit view


(This feature is not available for all models.)
Swivel 15 degrees to the left or right and adjust the angle of the TV to suit your view. (Only LA79**)

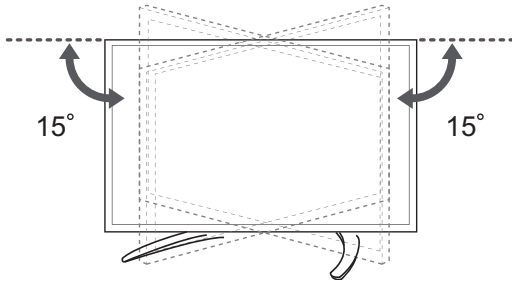


Swivel 10 degrees to the left or right and adjust the angle of the TV to suit your view.
(Only 42/47LA860*)

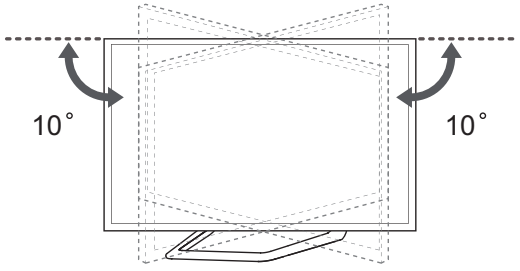

Swivel 8 degrees to the left or right and adjust the angle of the TV to suit your view.
(Only 55/60LA860*)

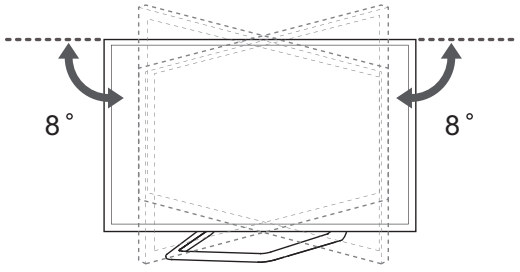


Swivel 7 degrees to the left or right and adjust the angle of the TV to suit your view.
(Only LA98**, LM96**)

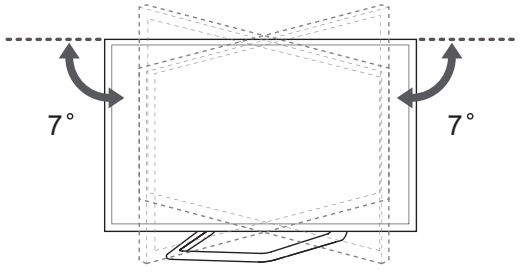

CAUTION

- When adjusting the angle adof the product, watch out for your fingers.


» Personal injury may occur if hands or fingers are pinched. If the product is tilted too much, it may fall, causing damage or injury.

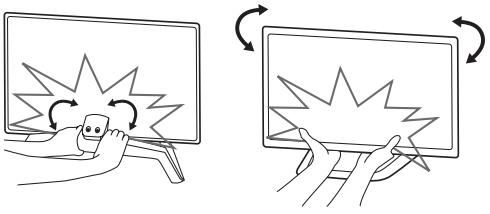

<Rear> <Front>

Securing the TV to a wall

(This feature is not available for all models.)

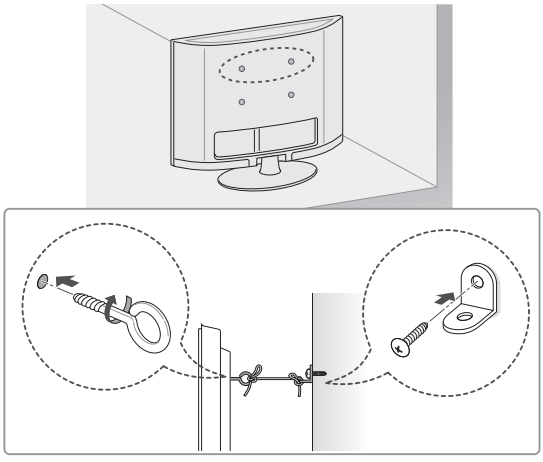

1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.
   - If there are bolts inserted at the eye-bolts position, remove the bolts first.

2 Mount the wall brackets with the bolts to the wall.
   Match the location of the wall bracket and the eye-bolts on the rear of the TV.

3 Connect the eye-bolts and wall brackets tightly with a sturdy rope.
   Make sure to keep the rope horizontal with the flat surface.

CAUTION


- Make sure that children do not climb on or hang on the TV.

NOTE

- Use a platform or cabinet that is strong and large enough to support the TV securely.
- Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer.

Mounting on a wall

Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel. LG recommends that wall mounting be performed by a qualified professional installer.

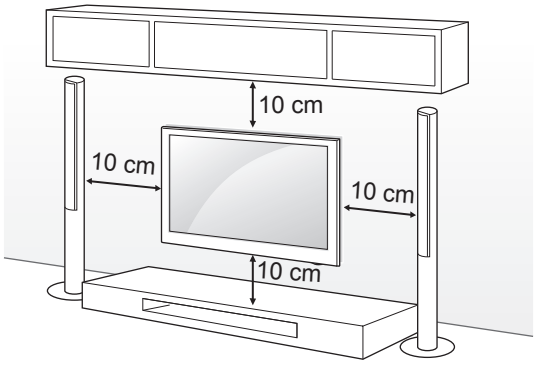

CAUTION

- When TV Wall Mount installation is applied please consider adequate spacing around perimeter of TV and at bottom for proper operation of Sliding Speaker compartment. Inadequate space may interfere with normal operation of Sliding Speaker compartment.

» Sliding Speaker OPEN state lowers/extends to (25-35mm) below TV.

CAUTION

- Be sure to use the existing Components provided with the TV. Do NOT use components supplied with Wall Bracket to install Wall Bracket to TV. (Only LA97**)



Wall mount inner spacers
4EA






Wall mount screw
4EA, M6 x 54
(Only 55LA97**)
4EA, M8 x 44
(Only 65LA97**)

Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

Separate purchase(Wall Mounting Bracket)

Model	42/47/55LA79** 42/47/55LA86** 47/55LA960* 55LA965*	65LA97** 84LA98** 84LM96**
VESA (A x B)	400 x 400	600 x 400
Standard screw	M6	M8
Number of screws	4	4
Wall mount bracket	MSW240 LSW430B	LSW630B
Model	60LA86** 65LA965* 55LA97**	70LA86**
VESA (A x B)	400 x 400	400 x 400
Standard screw	M6	M8
Number of screws	4	4
Wall mount bracket	LSW430B	LSW430BX

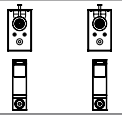Wall mount bracket		
LSW430B	LSW630B	MSW240
		
LSW430BX		
		

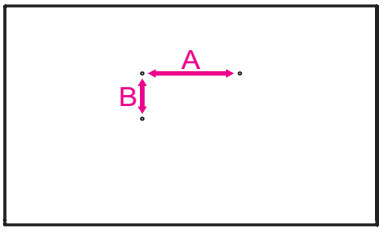


CAUTION

- Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorised LG wall mount and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.


NOTE

- Use the screws that are listed on the VESA standard screw specifications.
- The wall mount kit includes an installation manual and necessary parts.
- The wall mount bracket is not provided. You can obtain additional accessories from your local dealer.
- The length of screws may differ depending on the wall mount. Make sure to use the proper length.
- For more information, refer to the manual supplied with the wall mount.
- When attaching the LG wall mount bracket to the TV, do not use wall mount spacers and wall mount screws provided with the LG wall mount bracket. Please use wall mount inner spacers and wall mount screws provided with the TV accessory. (Only LA97**)

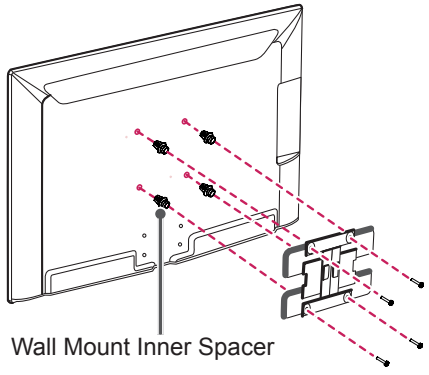

Using Sliding Speaker

(Only LA97**)

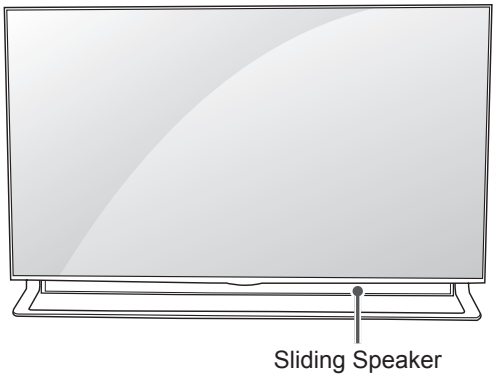

1 When TV is turned ON - the hidden speaker slides out from inside the TV.

2 Go to **More ➡ Settings ➡ SOUND ➡ Sliding Speaker** to set Sliding Speaker.

- If you are mounting TV on entertainment table/unit please make sure there is enough clearance between yourself and foreign objects to allow operation of internal sliding speaker otherwise injury to yourself or damage to TV could occur.
- Please Do Not use excessive force during operation of internal sliding Speaker as it may cause it to malfunction.
- Make sure Speaker is in OPEN position when viewing TV as sound will be abnormal or distorted.

3 When transporting the TV, make sure that the Sliding Speaker is closed. If the Sliding Speaker is open when being transported, it may become damaged, resulting in malfunction.

- To close the Sliding Speaker, go to **SOUND ➡ Sliding Speaker**, select '**Opens when TV is turned on**' and press the POWER button.

Using Built-in Camera

(Depending on model)


This TV does not support the use of an external camera.

NOTE

- Before using the built-in camera, you must recognize the fact that you are legally responsible for the use or misuse of the camera by the relevant national laws including the criminal law.
- The relevant laws include the Personal Information Protection law which regulates the processing and transferring of personal information and the law which regulates the monitoring by camera in a workplace and other places.
- When using the built-in camera, avoid questionable, illegal, or immoral situations. Other than at public places or events, consent to be photographed may be required. We suggest avoiding the following situations :
  (1) Using the camera in areas where the use of camera is generally prohibited such as restroom, locker room, fitting room and security area.
  (2) Using the camera while causing the infringement of privacy.
  (3) Using the camera while causing the violation of the relevant regulations or laws.

Preparing Built-in Camera


1 Pull up the slide at the back of the TV.

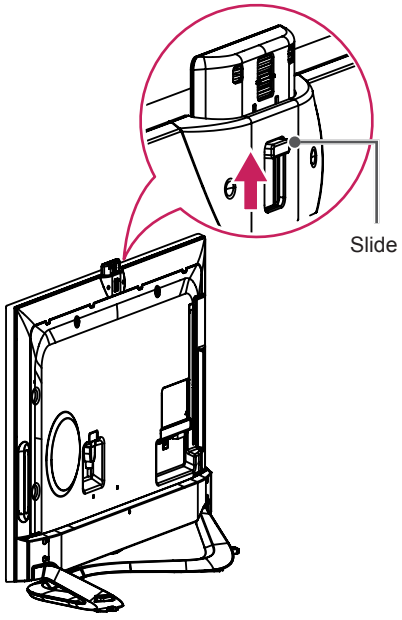


NOTE

- Remove the protective film before using the built-in camera.


2 You can adjust the angle of the camera with the angle adjustment lever on the back of the built-in camera (within 5 degrees vertically).

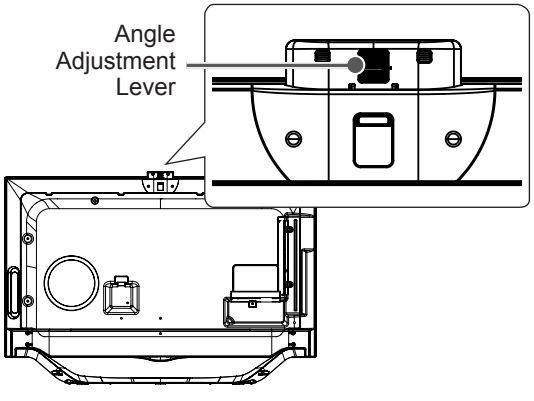

3 Pull down the built-in camera when you are not using it.

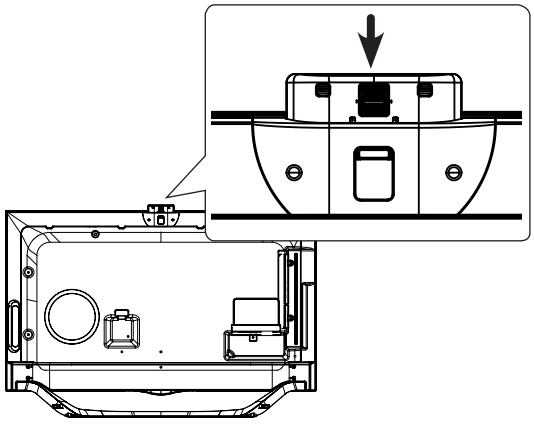

Name of Parts of Built-in Camera

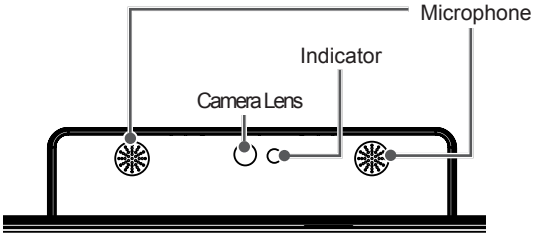

Checking the Camera's Shooting Range

1 Press the **SMART** button on the remote control to display the More menu.

2 Select **Settings** from the More menu and then press the **wheel (OK)** button.


3 Go to **OPTION ➡ Camera Setting Help** and press the **wheel (OK)** button.

NOTE

- The optimal distance from the camera to use the motion recognition function is between 1.5 and 4.5 m.

REMOTE CONTROL

The descriptions in this manual are based on the buttons on the remote control.
Please read this manual carefully and use the TV correctly.
To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover.
To remove the batteries, perform the installation actions in reverse.

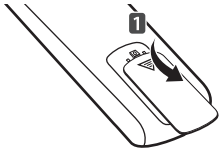


CAUTION

- Do not mix old and new batteries, as this may damage the remote control.

Make sure to point the remote control toward the remote control sensor on the TV.

(Depending on model)

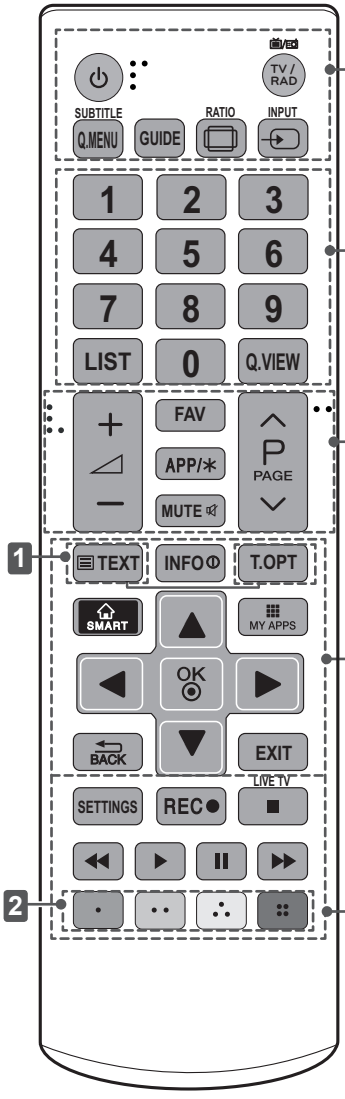

TV / RAD Selects Radio, TV and DTV programme.
SUBTITLE Recalls your preferred subtitle in digital mode.
Q.MENU Accesses the Quick menus.
GUIDE Shows programme guide.
RATIO Resizes an image.
INPUT Changes the input source.

LIST Accesses the saved programme list.
Q.VIEW Returns to the previously viewed programme.

⊿ + − Adjusts the volume level.
FAV Accesses your favourite programme list.
APP/* Selects the MHP TV menu source. (Only Italy) (Depending on model)
MUTE Mutes all sounds.
∧ **P** ∨ Scrolls through the saved programmes.
∧ **PAGE** ∨ Moves to the previous or next screen.


1 **TELETEXT buttons** These buttons are used for teletext.
INFO ⓘ Views the information of the current programme and screen.
SMART Accesses the Smart Home menus.
MY APPS Shows the list of Apps.
Navigation buttons (up/down/left/right) Scrolls through menus or options.
OK ◉ Selects menus or options and confirms your input.
BACK Returns to the previous level.
EXIT Clears on-screen displays and returns to TV viewing.

SETTINGS Accesses the main menus.
REC ● Starts to record and displays record menu.
LIVE TV Returns to LIVE TV.
Control buttons (■ ◀◀ ▶ ■ ▶▶) Controls the Premium contents, Time Machine or SmartShare menus or the SIMPLINK compatible devices (USB or SIMPLINK or Time Machine).
2 **Coloured buttons** These access special functions in some menus. **(** Red Green Yellow Blue**)**

ENGLISH

MAGIC REMOTE CONTROL FUNCTIONS


When the message “Magic Remote Control battery is low. Change the battery.” is displayed, replace the battery.
To replace batteries, open the battery cover, replace batteries (1.5 V AA) matching ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control toward the remote control sensor on the TV.
To remove the batteries, perform the installation actions in reverse.

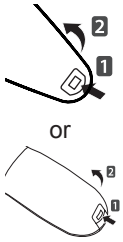

CAUTION

- Do not mix old and new batteries, as this may damage the remote control.

(Only LA79**, LA86**, LA960*, LA98**, LM96**)

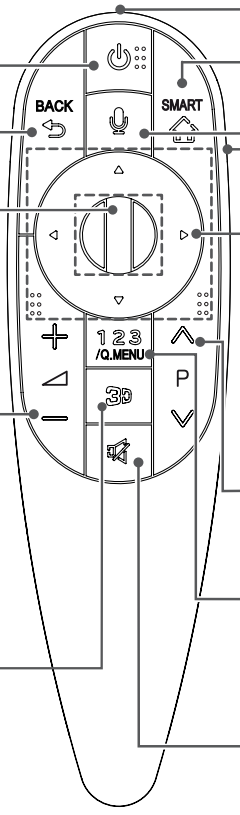

Pointer (RF transmitter)

(POWER)
Turns the TV on or off.

SMART
Accesses the Smart Home.

BACK
Returns to the previous level.

Voice recognition
(Depending on model)

Wheel(OK)
Selects menus or options and confirms your input.
Scrolls through the saved programmes.
If you press the navigation button while moving the pointer on the screen, the pointer disappears, and the Magic Remote Control works as a regular remote control.
To display the pointer again, shake the Magic Remote Control from side to side.

LIGHTING ON/OFF
Turns the light on and off.
If you set it to ON, the light automatically turns off in 5 seconds

Navigation buttons (up/down/left/right)
Scrolls through menus or options.

P
Scrolls through the saved programmes or channels.

+ -
Adjusts the volume level.

123 /Q.MENU
Accesses the quick menus.
Accesses the Universal Control.
(This feature is not available in all countries.)

3D
Used for viewing 3D video.

(MUTE)
Mutes all sounds.

Voice recognition(Depending on model)
Network connection is required to use the voice recognition function.
The recognition rate may vary depending on the user’s characteristics (voice, pronunciation, intonation and speed) and the environment (noise and TV volume).


1. Press the Voice recognition button.

2. Speak when the voice display window appears on the left of the TV screen.

• The voice recognition may fail when you speak too fast or too slow.

• Use the Magic remote control no further than 10 cm from your face.

(Only LA965*, LA97**)

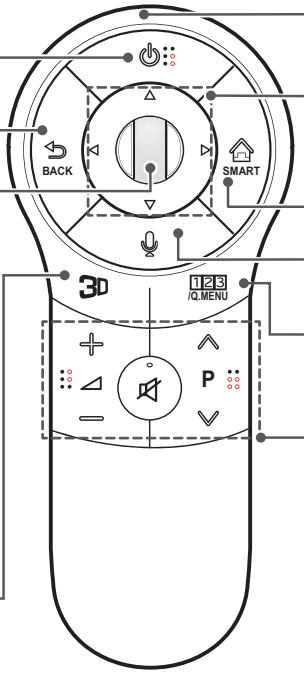

(POWER)
Turns the TV on or off.

BACK
Returns to the previous level.

Wheel(OK)
Selects menus or options and confirms your input.
Scrolls through the saved programmes.
If you press the navigation button while moving the pointer on the screen, the pointer disappears, and the Magic Remote Control works as a regular remote control.
To display the pointer again, shake the Magic Remote Control from side to side.

3D
Used for viewing 3D video.

Pointer (RF transmitter)

Navigation buttons
(up/down/left/right)
Scrolls through menus or options.

SMART
Accesses the Smart Home menu.

Voice recognition
(Depending on model)

1 2 3 /Q.MENU
Accesses the quick menus.
Accesses the Universal Control.
(This feature is not available in all countries.)

+ -
Adjusts the volume level.

P
Scrolls through the saved programmes or channels.

(MUTE)
Mutes all sounds.

Voice recognition (Depending on model)
Network connection is required to use the voice recognition function.
The recognition rate may vary depending on the user's characteristics (voice, pronunciation, intonation and speed) and the environment (noise and TV volume).

1. Press the Voice recognition button.
2. Speak when the voice display window appears on the left of the TV screen.
   - The voice recognition may fail when you speak too fast or too slow.
   - Use the Magic remote control no further than 10 cm from your face.

ENGLISH

Registering Magic Remote Control

It is necessary to ‘pair’ (register) the magic remote control to your TV before it will work.


How to register the Magic Remote Control

	1 To register automatically, turn the TV on and press the **Wheel(OK)** button. When registration is completed, the completion message appears on the screen. 2 If registration fails, turn the TV off and back on, then press the **Wheel(OK)** button to complete registration.

How to re-register the Magic Remote Control

BACK ⮌ **SMART** ⌂	1 Press and hold the **BACK**⮌ and **SMART**⌂ buttons together for 5 seconds to reset, then register it by following “How to register the Magic Remote Control” above. 2 To re-register the Magic Remote Control, press and hold the **BACK**⮌ button for 5 seconds toward the TV. When registration is completed, the completion message appears on the screen.

How to use magic remote control

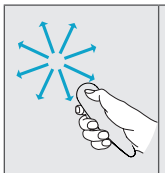	1 If the pointer disappears, move the Magic Remote Control slightly to left or right. Then, it will automatically appear on the screen. » If the pointer has not been used for a certain period of time, it will disappear. 2 You can move the pointer by aiming the Pointer Receiver of the Magic Remote Control at your TV then move it left, right, up or down. » If the pointer does not work properly, leave the Magic Remote Control for 10 seconds then use it again.



1	If you press **Wheel(OK)** on the Magic Remote Control, the following screen appears. Shows information about the current programme and screen.
2	You can select More Menu.

Precautions to Take when Using the Magic Remote Control

- Use the Magic Remote Control within the maximum communication distance (10 m). Using the Magic Remote Control beyond this distance, or with an object obstructing it, may cause a communication failure.
- A communication failure may occur due to nearby devices. Electrical devices such as a microwave oven or wireless LAN product may cause interference, as these use the same bandwidth (2.4 GHz) as the Magic Remote Control.
- The Magic Remote Control may be damaged or may malfunction if it is dropped or receives a heavy impact.
- Take care not to bump into nearby furniture or other people when using the Magic Remote Control.
- Manufacturer and installer cannot provide service related to human safety as the applicable wireless device has possibility of electric wave interference.
- It is recommended that an Access Point (AP) be located more than 1 m away from the TV. If the AP is installed closer than 1 m, the Magic Remote Control may not perform as expected due to frequency interference.


USING THE USER GUIDE

User Guide allows you to more easily access the detailed TV information.

1 Press the **SMART** button to access the Smart Home menu.
2 Select **User Guide** and press **Wheel(OK)**.




User Guide

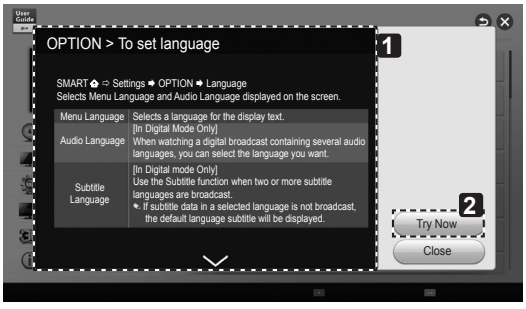

1 Shows the description of the selected menu. You can use ^/v to move between pages.

2 Moves to the selected menu directly from the User Guide.

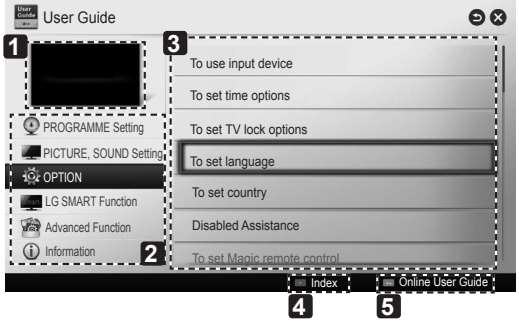

1 Shows the current watching programme or input source screen.

2 Allows to select the category you want.

3 Allows to select the item you want. You can use ^/v to move between pages.

4 Allows to browse the description of the function you want from the index.

5 Provides the detailed information on the functions of LG Smart TV when the Internet is connected.
(It may not be available depending on the country/language.)

MAINTENANCE

Cleaning your TV

Clean your TV regularly to keep the best performance and to extend the product lifespan.

CAUTION

- Make sure to turn the power off and disconnect the power cord and all other cables first.
- When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges.

Screen, frame, cabinet and stand

- To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth.
- To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a dry cloth.

CAUTION

- Avoid touching the screen at all times, as this may result in damage to the screen.
- Do not push, rub, or hit the screen surface with your fingernail or a sharp object, as this may result in scratches and image distortions.
- Do not use any chemicals as this may damage the product.
- Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction.

Power cord

Remove the accumulated dust or dirt on the power cord regularly.

TROUBLESHOOTING

Problem	Solution
Cannot control the TV with the remote control.	• Check the remote control sensor on the product and try again. • Check if there is any obstacle between the product and the remote control. • Check if the batteries are still working and properly installed (⊕ to ⊕, ⊖ to ⊖).
No image display and no sound is produced.	• Check if the product is turned on. • Check if the power cord is connected to a wall outlet. • Check if there is a problem in the wall outlet by connecting other products.
The TV turns off suddenly.	• Check the power control settings. The power supply may be interrupted. • Check if the **Automatic Standby** (Depending on model) / **Sleep Timer** / **Off Time** feature is activated in the **TIME** settings. • If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity.
When connecting to the PC (HDMI), 'No signal' or 'Invalid Format' is displayed.	• Turn the TV off/on using the remote control. • Reconnect the HDMI cable. • Restart the PC with the TV on.

EXTERNAL CONTROL DEVICE SETUP

To obtain the external control device setup information, please visit *www.lg.com*

SPECIFICATIONS

Wireless LAN module(TWFM-B006D) specification	
Standard	IEEE802.11a/b/g/n
Frequency Range	2400 to 2483.5 MHz 5150 to 5250 MHz 5725 to 5850 MHz (for Non EU)
Output Power (Max.)	802.11a: 11 dBm 802.11b: 14 dBm 802.11g: 10.5 dBm 802.11n - 2.4GHz: 11 dBm 802.11n - 5GHz: 12.5 dBm
Bluetooth module (BM-LDS401) specification	
Standard	Bluetooth Version 3.0
Frequency Range	2400 ~ 2483.5 MHz
Output Power (Max.)	10 dBm or lower

- Because band channel used by the country could be different, the user can not change or adjust the operating frequency and this product is set for the regional frequency table.

CE 0197 !

LG
Life's Good

KULLANIM KILAVUZU
LED TV*

* LG LED TV, LED arka ışıkları olan LCD ekranına sahiptir.

Setinizi çalıştırmadan önce bu kılavuzu lütfen dikkatle okuyun ve ileride başvurmak için saklayın.

www.lg.com

TÜRKÇE

İÇİNDEKİLER

3 LISANSLAR

3 AÇIK KAYNAKLI YAZILIM BİLDİRİMİ

4 GÜVENLIK TALIMATLARI

10 - 3D Görüntü İzleme (Yalnızca 3D modelleri)

12 KURULUM PROSEDÜRÜ

12 MONTAJ VE HAZIRLIK

12 Paketin Açılması
16 Ayrı satılan öğeler
17 Parçalar ve düğmeler
19 TV'nin kaldırılması ve taşınması
20 Sehpa üzerine montaj
21 Duvara montaj
23 Sürgülü Hoparlörü kullanma
23 Dahili Kamerayı Kullanma
24 - Dahili Kamerayı Hazırlama
24 Dahili Kamera Parçalarının Adları
24 - Kameranın Çekim Aralığını Kontrol Etme

25 UZAKTAN KUMANDA

26 SİHIRLİ UZAKTAN KUMANDA FONKSİYONLARI

28 Sihirli Uzaktan Kumandanın Kaydettirilmesi
28 Sihirli Uzaktan Kumandanın kullanılması
28 Sihirli Uzaktan Kumandayı Kullanırken Alınacak Önlemler

29 KULLANICI KILAVUZUNUN KULLANILMASI

30 BAKIM

30 TV'nizin temizlenmesi
30 - Ekran, çerçeve, kabin ve ayaklık
30 - Güç kablosu

30 SORUN GİDERME

31 HARİCİ KONTROL AYGITI KURULUMU

31 TEKNİK ÖZELLİKLER

32 ÇEVRESEL BİLGİLER

32 WEEE
32 Pil

UYARI

- Uyarı mesajını ciddiye almazsanız, ciddi şekilde yaralanabilir veya bir kaza ya da ölüme sebebiyet verebilirsiniz.

DİKKAT

- Dikkat mesajını ciddiye almazsanız, hafifçe yaralanabilir veya ürüne zarar verebilirsiniz.

NOT

- Notlar ürünü tanımanızı ve güvenli bir şekilde kullanmanızı sağlar. Lütfen ürünü kullanmadan önce notları dikkatli bir şekilde okuyun.

LİSANSLAR

Desteklenen lisanslar modele göre değişiklik gösterebilir. Lisanslar hakkında daha fazla bilgi için *www.lg.com* adresini ziyaret edin.

Dolby Laboratories lisansı altında üretilmiştir. Dolby ve çift D sembolü, Dolby Laboratories'ın ticari markalarıdır.

HDMI ve HDMI Yüksek Tanımlı Multimedya Arabirimi terimleri ve HDMI Logosu, HDMI Licensing, LLC'nin Amerika Birleşik Devletleri ve diğer ülkelerde ticari markaları veya tescilli ticari markalarıdır.

DIVX VIDEO HAKKINDA: DivX®, Rovi Corporation şirketine bağlı DivX, LLC tarafından oluşturulan bir dijital video biçimidir. Bu cihaz resmi olarak, DivX video gösterimi için DivX Certified® bir cihazdır. Dosyalarınızı DivX videoya dönüştürme hakkında daha fazla bilgi ve yazılım araçları edinmek için *divx.com* adresini ziyaret edin.

DIVX VIDEO-ON-DEMAND HAKKINDA: Bu DivX Certified® cihazın satın alınan DivX Video-on-Demand (VOD) filmleri oynatması için kaydedilmesi gerekmektedir. Kayıt kodunuzu almak için aygıt kurulum menüsünde DivX VOD bölümünü bulun. Kaydınızı tamamlama hakkında ek bilgi almak için vod.divx.com adresine gidin.

"Maksimum HD 1080p DivX video oynatmak için DivX Certified®, premium içerik dahil."

"DivX®, DivX Certified® ve ilgili logolar Rovi Corporation veya bağlı şirketlerin ticari markalarıdır ve lisansla kullanılır."

"Aşağıdaki bir veya birkaç ABD patentiyle korunmaktadır:
7,295,673; 7,460,668; 7,515,710; 7,519,274"

5,956,674, 5,974,380, 6,487,535 numaralı ABD Patentleri ve ABD ve dünya çapında verilmiş ya da beklemedeki diğer patentler çerçevesinde üretilmiştir. DTS, Symbol & DTS ve Symbol kayıtlı ticari markalardır; DTS 2.0+Digital Out, DTS, Inc firmasının ticari markasıdır. Ürün yazılım içerir. © DTS, Inc. Tüm Hakları Saklıdır.

AÇIK KAYNAKLI YAZILIM BİLDİRİMİ

GPL, LGPL, MPL ve bu ürünün içerdiği diğer açık kaynaklı lisanslar altında kaynak kodu elde etmek için lütfen *http://opensource.lge.com* adresini ziyaret edin.
Kaynak koduna ek olarak, adı geçen tüm lisans koşulları, garanti feragatnameleri ve telif hakkı bildirimleri indirilmek üzere mevcuttur.
LG Electronics, opensource@lge.com adresine e-posta atarak talep etmeniz durumunda dağıtım masrafları (medya, sevkiyat ve taşıma ücretleri gibi) size ait olmak üzere ürünün kaynak kodunu bir CD-ROM'a kayıtlı olarak da gönderecektir. Bu teklif, ürünü satın aldığınız tarihten itibaren üç (3) yıl süreyle geçerlidir.

GÜVENLİK TALİMATLARI

Lütfen ürünü kullanmadan önce bu güvenlik önlemlerini dikkatlice okuyun.

⚠ UYARI




- TV'yi ve uzaktan kumandayı aşağıdaki ortamlara koymayın:
  - Doğrudan güneş ışığına maruz kalan bir yer
  - Banyo gibi yüksek oranda nem içeren bir alan
  - Fırın gibi herhangi bir ısı kaynağının ya da ısı üreten diğer aygıtların çevresi
  - Ürünün buhara ve yağa kolaylıkla maruz kalabileceği mutfak tezgahları veya hava nemlendiricilerin çevresi
  - Yağmura veya rüzgara maruz kalan bir alan
  - Vazo gibi su içeren kapların çevresi

  Aksi halde yangın, elektrik çarpması, arıza veya ürün bozulması gibi durumlar yaşanabilir.



- Ürünü toza maruz kalabileceği bir yere yerleştirmeyin.
  Bu durum yangın tehlikesi oluşturabilir.




- Şebeke fişi bağlantıyı kesen cihazdır. Fişin her zaman kullanıma hazır durumda olması gerekir.




- Islak elle fişe dokunmayın. Ayrıca kablo pimi ıslaksa ya da tozlanmışsa fişi iyice kurutun ya da üzerindeki tozu alın.
  Aşırı nem nedeniyle elektrik çarpılabilirsiniz.




- Güç kablosunu topraklanmış bir elektrik tesisatına bağladığınızdan emin olun. (Topraklama yapılmış aygıtlar hariç.)
  Elektrik çarpılabilir veya yaralanabilirsiniz.




- Güç kablosunu tam olarak takın.
  Güç kablosu tam olarak takılmazsa yangın çıkabilir.




- Güç kablosunu ısıtıcı gibi sıcak nesnelerle temas ettirmeyin.
  Bu durum, yangına veya elektrik çarpmasına neden olabilir.

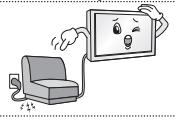


- Ürünün veya güç kablolarının üzerine ağır bir nesne koymayın.
  Aksi halde bu durum yangın veya elektrik çarpması ile sonuçlanabilir.




- Yağmur suyunun girmesini önlemek için binanın içi ile dışı arasındaki anten kablosunu bükün.
  Bu durum suyun Ürünün iç kısmına zarar vermesine sebep olabilir ve elektrik çarpmasına yol açabilir.



- TV'yi duvara monte ederken, TV'yi güç ve sinyal kabloları TV'nin arkasından sarkacak şekilde kurmayın.
  Bu durum yangına ve elektrik çarpmasına yol açabilir.

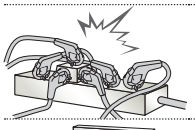


- Tek bir çoklu elektrik prizine çok fazla elektrikli aygıt takmayın.
  Aksi halde bu durum aşırı ısınmaya bağlı olarak yangına yol açabilir.



- Ürünü düşürmeyin veya harici cihazlar bağlarken bu cihazların ürünün üzerine düşmemesine dikkat edin.
  Aksi halde bu durum yaralanmayla veya ürünün zarar görmesiyle sonuçlanabilir.




- Nem önleyici malzemeyi ya da vinil ambalajı çocukların erişemeyeceği yerde saklayın.
  Nem önleyici malzemenin yutulması zararlıdır. Kazara yutulursa hastanın kusmasını sağlayın ve en yakın hastaneye gidin. Ayrıca vinil ambalaj boğulmaya neden olabilir. Çocukların erişemeyeceği yerde saklayın.

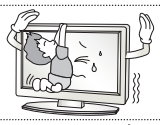

- Çocuklarınızın TV üzerine çıkmasına veya TV'ye asılmasına izin vermeyin.
  Aksi halde TV düşebilir ve ciddi yaralanmalara yol açabilir.



- Çocukların yemesini önlemek için kullanılmış pilleri dikkatli bir şekilde atın.
  Çocukların pili yemesi halinde derhal bir doktora götürün.



- Bir ucu duvar prizine takılıyken güç kablosunun diğer ucuna bir iletken (metal çubuk gibi) takmayın. Ayrıca, duvar prizine taktıktan hemen sonra güç kablosuna dokunmayın.
  Elektrik çarpılabilirsiniz.
  (Modele bağlı olarak)



- Ürünün yakınlarında yanıcı maddeler bulundurmayın veya saklamayın.
  Alev alabilen maddelerin dikkatsiz kullanımı nedeniyle patlama veya yangın tehlikesi olabilir.



- Madeni para, metal toka, metal çubuk veya tel gibi metal nesneleri ya da kağıt veya kibrit gibi kolayca alev alabilen nesneleri ürünün içine düşürmeyin. Çocuklar özellikle dikkat etmelidir.
  Elektrik çarpması, yangın veya yaralanma gibi durumlar oluşabilir. Ürünün içine yabancı bir nesne düşerse güç kablosunu prizden çekin ve servis merkeziyle temas kurun.




- Ürünün üzerine su püskürtmeyin veya alev alabilir maddelerle (tiner veya benzen) silmeyin. Yangın veya elektrik çarpması kazaları olabilir.



- Ürüne çarpmayın ya da içine bir şey düşürmeyin ve ekrana bir cisimle vurmayın.
  Aksi takdirde yaralanabilirsiniz veya ürün zarar görebilir.



- Şimşekli havalarda bu ürüne ya da antene kesinlikle dokunmayın.
  Elektrik çarpılabilirsiniz.



- Gaz kaçağı olduğu zaman duvar prizine kesinlikle dokunmayın ve camları açarak ortamı havalandırın.
  Aksi halde yangın çıkabilir veya kıvılcım sıçramasına bağlı yanıklar oluşabilir.



- Ürünü kendi başınıza sökmeyin, tamir veya tadil etmeyin.
  Yangın veya elektrik çarpması kazaları olabilir.
  Kontrol, kalibrasyon veya onarım için servis merkezi ile temasa geçin.




- Aşağıdaki durumlardan biri oluşursa derhal ürünün fişini çekin ve yerel servis merkezinizle temasa geçin.
  - Ürün darbelerden etkilendiyse
  - Ürün zarar gördüyse
  - Ürünün içine yabancı nesneler girdiyse
  - Üründen duman veya garip bir koku çıkıyorsa

  Bu durum yangın veya elektrik çarpması ile sonuçlanabilir.




- Ürünü uzun süre kullanmayı düşünmüyorsanız güç kablosunu üründen çıkarın.
  Ürünün tozlanması yangına neden olabilir veya kabloların bozulması elektrik kaçağına, elektrik çarpmasına veya yangına neden olabilir.

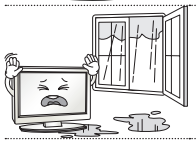


- Bu cihaz su ile (damlama veya sıçrama yoluyla) temas etmemelidir ve vazo gibi içi su dolu nesneler cihazın üzerine yerleştirilmemelidir.

⚠ DİKKAT

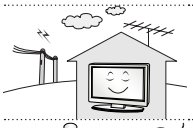

- Ürünü radyo dalgasının bulunmadığı bir yere monte edin.

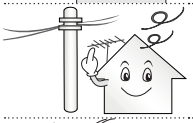

- Harici antenin düşmesi halinde elektrik hatlarına değmesini önlemek için harici antenle elektrik hatları arasında yeterli mesafe olmalıdır.
  Böyle bir durum elektrik çarpmasına yol açabilir.



- Ürünü dengesiz raf veya eğimli yüzeyler üzerine kurmayın. Ayrıca titreşimli olan ve ürünün tam olarak desteklenmeyeceği yerlere monte etmekten kaçının.
  Aksi halde ürün düşebilir veya devrilebilir ve yaralanmaya ya da ürünün zarar görmesine yol açabilir.




- TV'yi bir ayaklığa monte ederseniz ürünün aşırı dönmesini önlemek için gerekli önlemleri almanız gerekir. Aksi halde ürün düşebilir ve yaralanmalara yol açabilir.


- Ürünü duvara monte etmeyi düşünüyorsanız ürünün arkasına VESA standart montaj aparatı (isteğe bağlı parçalar) takın. Seti duvara montaj braketine (isteğe bağlı parçalar) takarken düşmeyecek şekilde dikkatlice sabitleyin.
- Yalnızca, üreticinin onayladığı bağlantıları / aksesuarları kullanın.




- Anteni kurarken kalifiye bir servis görevlisine danışın.
  Bu durum yangın tehlikesi veya elektrik çarpması tehlikesi oluşturabilir.



- TV izlerken en az ekranın çapraz boyutunun 2-7 katı kadar bir mesafe bırakmanızı öneririz.
  Uzun süre TV seyretmek görüşünüzün bulanıklaşmasına yol açabilir.




- Yalnızca belirtilen türde pil kullanın.
  Aksi halde uzaktan kumanda zarar görebilir.



- Yeni pillerle eski pilleri bir arada kullanmayın.
  Bu durum pillerin aşırı ısınmasına ve sızıntı yapmasına neden olabilir.


- Piller aşırı ısıya maruz bırakılmamalıdır. Örneğin, doğrudan güneş ışığına, açık şömineye ve elektrikli ısıtıcılara maruz bırakmayın.
- Şarj edilebilir olmayan pilleri şarj cihazına koymayın.



- Uzaktan kumanda ile sensörü arasında bir nesne bulunmamasına dikkat edin.




- Uzaktan kumandanın sinyali güneş ışığından veya başka güçlü ışıklardan etkilenebilir. Bu durumda odadaki ışığı azaltın.



- Video oyun konsolu gibi harici aygıtlar bağlarken bağlantı kablolarının yeterli uzunlukta olmasına dikkat edin.
  Aksi halde ürün devrilebilir ve yaralanmaya ya da ürünün zarar görmesine yol açabilir.




- Ürünü elektrik fişini duvar prizine takarak veya prizden çıkartarak açıp kapatmayın. (Açıp kapatmak için fişi kullanmayın.)
  Bu durum mekanik arızaya veya elektrik çarpmasına yol açabilir.

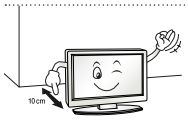


- Ürünün aşırı ısınmasını önlemek için lütfen aşağıdaki kurulum talimatlarını izleyin.
  - Ürünle duvar arasındaki mesafe en az 10 cm olmalıdır.
  - Ürünü havalandırması olmayan bir yere kurmayın (örn., bir kitaplığa ya da dolaba).
  - Ürünü halı veya minderin üzerine kurmayın.
  - Havalandırma kapağının bir masa örtüsü veya perdeyle kapanmamasına dikkat edin.

  Aksi halde yangın çıkabilir.




- Uzun süre boyunca TV izleyeceğiniz zaman, havalandırma açıklıkları sıcak hale gelebileceğinden havalandırma açıklıklarına dokunmamaya özen gösterin. Bu durum ürünün işleyişini veya performansını etkilemez.

- Cihazınızın kablosunu düzenli aralıklarla inceleyin ve kablonun görünümü hasara veya bozulmaya işaret ediyorsa, fişi prizden çekin, cihazı kullanmayın ve kablonun bir yetkili servis personeli tarafından aynısıyla değiştirilmesini sağlayın.

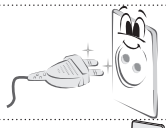


- Elektrik fişi pimlerinde veya prizde toz birikmesini önleyin.
  Bu durum yangın tehlikesi oluşturabilir.

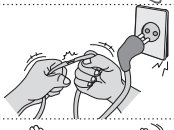

- Elektrik kablosunu bükülme, dolanma, sıkışma, kapıya sıkışma veya üzerine basılma gibi fiziksel veya mekanik zararlardan koruyun. Özellikle fişlere, duvar prizlerine ve kablonun cihazdan çıktığı noktaya dikkat edin.



- Panele elinizle veya tırnak, kurşun kalem ya da tükenmez kalem gibi keskin bir nesne ile bastırmayın veya üzerini çizmeyin.

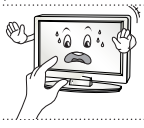


- Ekrana dokunmayın veya uzun süre parmaklarınızla bastırmayın. Aksi halde ekran üzerinde geçici şekil bozuklukları ortaya çıkabilir.



- Ürünü ve bileşenlerini temizlerken öncelikle ürünü prizden çekin ve yumuşak bir bezle silin. Aşırı kuvvet uygulamak çizilmelere veya renk değişimine yol açabilir. Su püskürtmeyin veya ıslak bezle silmeyin. Ürüne ve paneline zarar verebilecek cam temizleyiciler, otomobil parlatıcısı veya sanayi tipi parlatıcı, aşındırıcı maddeler veya cila, benzen, alkol ve benzeri maddeler kesinlikle kullanmayın.
  Aksi halde yangın çıkabilir, elektrik çarpabilir veya ürün zarar görebilir (deformasyon, aşınma veya kırılma).

- Bu ünite AC duvar prizine bağlı olduğu sürece, üniteyi DÜĞMESİNDEN kapatsanız bile AC güç kaynağı ile bağlantısı kesilmez.



- Kabloyu fişinden tutarak prizden çekin.
  Güç kablosunun içindeki teller koparsa yangın çıkabilir.



- Ürünü taşırken öncelikle kapattığınızdan emin olun. Ardından güç kablolarını, anten kablolarını ve tüm bağlantı kablolarını çıkarın.
  TV seti veya güç kablosu zarar görerek yangın tehlikesine veya elektrik çarpmasına yol açabilir.



- Ürünü taşırken veya paketini açarken, ürünün ağır olması sebebiyle bir kişiden daha yardım alın.
  Aksi halde yaralanabilirsiniz.



- Ürünün iç kısımlarını temizlemek için yılda bir kez servis merkezi ile temasa geçin.
  Biriken toz mekanik arızaya yol açabilir.




- Tüm servis işlemlerinin kalifiye servis personeli tarafından yapılmasını sağlayın.
  Elektrik kablosunun ya da fişinin hasar görmesi, üzerine sıvı dökülmesi ya da yabancı nesnelerin cihaza girmesi, cihazın yağmur ya da neme maruz kalması, normal çalışmaması veya bir yerden düşmesi gibi cihazın hasar gördüğü tüm durumlarda servis işlemi gereklidir.




- Cihaz dokunduğunuzda soğuksa, açıldığında küçük bir “titreşme” olabilir. Bu normal bir durumdur ve ürünle ilgili bir sorun yoktur.



- Panel, iki milyon ila altı milyon piksel çözünürlüğe sahip yüksek teknolojili bir ürünüdür. Panelin üzerinde 1 ppm boyutunda siyah ve/veya parlak renkli küçük noktalar görebilirsiniz. Bu noktalar ürünün arızalı olduğunu göstermez ve performansını ve güvenilirliğini etkilemez.
  Bu durum üçüncü taraf ürünlerde de oluşmaktadır ve ürün değişimi veya para iadesine tabi değildir.



- İzleme konumunuza (sol/sağ/yukarı/aşağı) bağlı olarak panelin parlaklığında ve renginde farklılıklar olduğunu görebilirsiniz.
  Bu durum panelin özelliğine bağlı olarak oluşur. Ürün performansıyla ilgisi yoktur ve arıza değildir.



- Hareketsiz görüntülerin (örn., kanal logosu, ekran üstü menü, bir video oyunu sahnesi) uzun süre görüntülenmesi ekrana zarar vererek görüntü yapışması adıyla bilinen görüntü tutulmasına yol açabilir. Görüntü yapışması garanti kapsamında değildir.
  Televizyonunuzun ekranında sabit bir görüntüyü uzun süre (LCD için 2 saat veya daha fazla, Plazma için 1 saat veya daha fazla) görüntülemekten kaçının.
  Ayrıca TV'nizi uzun süre boyunca 4:3 oranında izlerseniz panelin kenarlarında görüntü yapışması oluşabilir.
  Bu durum üçüncü taraf ürünlerde de oluşmaktadır ve ürün değişimi veya para iadesine tabi değildir.
- **Oluşan Sesler**
  “Çatlama” sesi: TV izlerken veya kapatıldığında oluşan çatlama sesi, sıcaklık ve neme bağlı olarak termal plastik kasılmasından kaynaklanır. Bu ses termal deformasyon gerektiren ürünlerde yaygın olarak görülür. Elektrik devresi uğultusu/panel cızırtısı: Ürünü çalıştırmak için yüksek miktarda akım sağlayan yüksek hızlı anahtar devresi düşük seviyeli bir gürültüye sebep olur. Bu ses ürüne bağlı olarak değişir.
  Oluşan ses ürünün performansını ve güvenilirliğini etkilemez.

3D Görüntü İzleme (Yalnızca 3D modelleri)

⚠ UYARI

İzleme Ortamı

- İzleme Süresi
  - 3D içerik izlerken saatte bir 5 - 15 dakika ara verin. Uzun süre 3D içerik izlemek baş ağrısı, baş dönmesi, yorgunluk veya göz yorgunluğuna yol açabilir.

Fotosensitivite nöbetleri veya kronik hastalığı olan kişiler

- Bazı kullanıcılar 3D içeriklerdeki yanıp sönen ışığa veya belirli şekillere maruz kaldıklarında nöbet geçirebilir veya başka anormal semptomlar gösterebilir.
- Bulantı hissediyorsanız, hamileyseniz ve/veya sara, kalp bozukluğu, tansiyon hastalığı gibi kronik bir hastalığınız varsa 3D video izlemeyin.
- Stereo körlük veya stereo anomali yaşayan kişilerin 3D içerik izlemesi tavsiye edilmemektedir. Çift görme veya görme rahatsızlığı oluşabilir.
- Strabismus (şaşılık), ambliyopi (zayıf görme) veya astigmatizminiz varsa çift görüntülerden dolayı derinliği algılamakta güçlü çekebilir ve kendini kolaylıkla yorgun hissedebilirsiniz. Ortalama bir yetişkinden daha sık ara vermeniz tavsiye edilir.
- Görme yeteneğiniz sağ ile sol gözünüz arasında farklılık gösteriyorsa 3D içerik izlemeden önce gözlerini kontrol ettirin.

3D içerik izlemekten vazgeçilmesini veya kaçınılmasını gerektiren semptomlar

- Uykusuzluk, aşırı çalışmak veya alkol almaktan kaynaklanan bir yorgunluk hissediyorsanız 3D içerik izlemeyin.
- Bu semptomlar görüldüğünde 3D içerik kullanmayı/izlemeyi bırakın ve semptomlar geçene kadar dinlenin.
  - Semptomlar devam ederse doktorunuza danışın. Bu semptomlar arasında baş ağrısı, göz küresinde acı, baş dönmesi, bulantı, çarpıntı, bulanık görme, rahatsızlık, çift görme, görme rahatsızlığı veya yorgunluk sayılabilir.

⚠ DİKKAT

İzleme Ortamı

- İzleme Uzaklığı
  - 3D içerik izlerken en az ekranın çapraz uzunluğunun iki katı kadar bir mesafe bırakın. 3D içerik izlerken kendinizi rahatsız hissederseniz TV'den uzaklaşın.

İzleme Yaşı

- Bebekler/Çocuklar
  - 6 yaşından küçük çocukların 3D içerik kullanması/izlemesi yasaktır.
  - 10 yaşından küçük çocuklar, görme duyuları gelişme aşamasında olduğundan aşırı tepki gösterebilir veya aşırı heyecanlanabilirler (örneğin, ekrana dokunmaya veya üzerine atlamaya çalışabilirler). Çocuklar 3D içerik izlerken özellikle takip edilmeli ve daha fazla dikkat gösterilmelidir.
  - Gözlerinin arasındaki uzaklık yetişkinlere göre daha kısa olduğu için çocuklar 3D sunumlara karşı daha fazla binoküler fark gösterirler. Bu nedenle aynı 3D görüntüyü izlerken yetişkinlere göre daha fazla stereoskopik derinlik algılarlar.
- Gençler
  - 19 yaşından küçük gençler 3D içeriklerdeki ışıktan kaynaklanan uyarımlara bağlı olarak duyarlılık gösterebilirler. Yorulduklarında uzun süre 3D içerik izlememelerini tavsiye edin.
- Yaşlılar
  - Yaşlıklar, 3D efektini gençlere göre daha az algılayabilirler. TV'ye önerilen uzaklıktan daha yakın oturmayın.

3D gözlüklerin kullanımına ilişkin uyarılar

- LG 3D gözlüğü kullanmaya dikkat edin. Aksi halde 3D videoları düzgün bir şekilde izleyemeyebilirsiniz.
- 3D gözlüğü normal gözlük, güneş gözlüğü veya koruyucu gözlük yerine kullanmayın.
- Değiştirilmiş 3D gözlük kullanmak göz yorgunluğuna veya görüntülerin bozulmasına yol açabilir.
- 3D gözlüğünüzü aşırı yüksek veya düşük sıcaklıklarda bırakmayın. Aksi halde deformasyon oluşabilir.
- 3D gözlükler hassas nesnelerdir, kolaylıkla çizilirler. Gözlüğün camlarını silerken her zaman yumuşak, temiz bir bez kullanın. 3D gözlüğün camlarını keskin nesnelerle çizmeyin veya kimyasal maddelerle temizlemeyin/silmeyin.

NOT

- Gösterilen resim sizin TV'nizden farklı olabilir.
- TV'nizin OSD'si (Ekran Üstü Gösterim) bu kılavuzda gösterilenlerden farklı olabilir.
- Mevcut menü ve opsiyonlar kullanmakta olduğunuz ürün modelinden veya giriş kaynağından farklı olabilir.
- Gelecekte bu TV'ye yeni özellikler eklenebilir.
- TV, güç tüketimini azaltmak için bekleme moduna alınabilir. Enerji tasarrufu amacıyla, bir süre izlenmeyecekse TV kapatılmalıdır.
- Görüntü parlaklığı seviyesinin düşürülmesiyle, kullanım sırasında tüketilen enerji miktarı önemli ölçüde azaltılabilir; bu durum genel çalıştırma maliyetini düşürecektir.

KURULUM PROSEDÜRÜ

1 Paketi açın ve tüm aksesuarların sağlandığından emin olun.
2 Ayaklığı TV setine takın.
3 Harici bir aygıtı TV setine bağlayın.
4 Ağ bağlantınızın olduğundan emin olun.
TV ağ fonksiyonlarını yalnızca ağ bağlantısı yapıldığında kullanabilirsiniz.

MONTAJ VE HAZIRLIK

Paketin Açılması


Ürün kutunuzda aşağıdaki öğelerin olup olmadığını kontrol edin. Aksesuarlarda herhangi bir eksiklik olması durumunda ürünü satın aldığınız yerel satıcıyla iletişime geçin. Bu kılavuzdaki resimler gerçek ürün ve öğeden farklı olabilir.


DİKKAT

- Ürün kullanım ömrü ve güvenliğiniz için onaylanmamış öğeler kullanmayın.
- Onaylanmamış öğelerin kullanılmasından kaynaklanan hasar ve yaralanmalar garanti kapsamına girmez.
- Bazı modellerde ekrana yapıştırılmış ince bir film bulunur ve bu film sökülmemelidir.


NOT

- Ürününüzle birlikte verilen öğeler modele göre değişiklik gösterebilir.
- Ürün özellikleri veya bu kılavuzun içeriği, ürün fonksiyonlarının yükseltilmesine bağlı olarak önceden haber verilmeksizin değiştirilebilir.
- Optimum bağlantı için, HDMI kabloları ve USB aygıtları 10 mm kalınlıktan ve 18 mm genişlikten az çıkıntıya sahip olmalıdır. USB kablo veya USB taşınabilir bellek TV'nizin USB bağlantı noktasına uymazsa, USB 2.0'ı destekleyen bir uzatma kablosu kullanın.

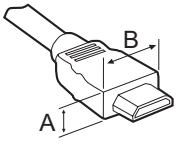


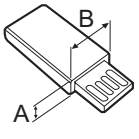

*A ≦ 10 mm
*B ≦ 18 mm



Kullanım kılavuzu

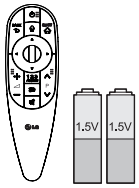

Sihirli Uzaktan Kumanda, Piller (AA)
(Yalnızca LA79**, LA86**, LA960*, LA98**, LM96**)
(Bkz. s. 26)



Tag on
(Modele bağlı olarak)




SCART Kablosu
(Bkz. s. A-19)




Çift oynatma gözlükleri
(Modele bağlı olarak)




Cinema 3D Gözlükleri
3D gözlük sayısı modele veya ülkeye göre değişebilir.




Komponent video kablosu
(Bkz. s. A-13)



Kompozit video kablosu
(Bkz. s. A-13, A-14)

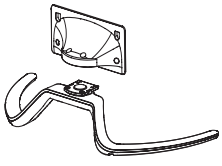

Ayaklık Tabanı / Ayak Gövdesi
(Yalnızca LA79**)
(Bkz. s. A-3)



Kablo tutucu
(Modele bağlı olarak)
(Bkz. s. A-6, A-7)



Kablo tutucu
(Yalnızca LA79**)
(Bkz. s. A-6)




Ayaklık Vidaları
8EA, M4 x 14
(Yalnızca LA79**)
(Bkz. s. A-3)



Ayaklık Vidaları
4EA, M4 x 16
(Yalnızca LA860*, LA868*)
(Bkz. s. A-3, A-4)




Ayaklık Vidaları
4EA, M4 x 20
(Yalnızca LA960*, LA98**, LM96**)
(Bkz. s. A-3, A-6)




Ayaklık Tabanı
(Yalnızca LA860*, LA960*)
(Bkz. s. A-3)




Güç Kablosu
(Modele bağlı olarak)



Uzaktan kumanda ve piller (AAA)
(Modele bağlı olarak)
(Bkz. s. 25)

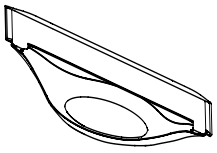

Ayaklık Tabanı
(Yalnızca LA868*)
(Bkz. s. A-4)

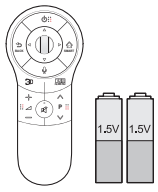


Magic remote control, batteries (AA)
(Yalnızca LA965*, LA97**)
(Bkz. s. 27)



Ayaklık Tabanı
(Yalnızca LA97**)
(Bkz. s. A-5)



Ayaklık Tabanı
(Yalnızca LA965*)
(Bkz. s. A-4)



Görüntülü Çağrı Kamerası
(Yalnızca 70LA860*)




Ayaklık Vidaları
4EA, M4 x 14
(Yalnızca 55LA97**, LA965*)
(Bkz. s. A-4, A-5)




Duvara montaj aparatı iç aralıkları
4EA (Yalnızca LA97**)
(Bkz. s. 22)



Duvara montaj vidası
4EA, M6 x 54
(Yalnızca 55LA97**)
(Bkz. s. 22)




Duvara montaj vidası
4EA, M8 x 44
(Yalnızca 65LA97**)
(Bkz. s. 22)

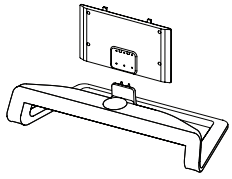

Ayaklık Tabanı / Ayak Gövdesi
(Yalnızca LA98**, LM96**)
(Bkz. s. A-5)



Ayaklık Vidaları
6EA, M5 x 16
(Yalnızca LA98**, LM96**)
(Bkz. s. A-5)

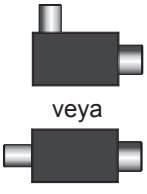


veya

İzolatör
(Bkz. s. 15)

NOT

- Anten İzolatörü Kurulum Kılavuzu
  - TV Setiyle anten sinyalinin topraklaması arasında voltaj farkı olan bir yere TV'yi kurmak için anten izolatörü kullanın.
    - » TV Setiyle anten sinyali topraklaması arasında bir voltaj farkı varsa, anten temas noktası ısınabilir ve aşırı ısı kazalara sebep olabilir.
  - TV izlerken TV anteninden güç voltajını etkili bir şekilde kaldırarak güvenliği arttırabilirsiniz. İzolatörü duvara monte etmeniz önerilir. Duvara monte edilemezse, TV'nin üzerine monte edin. Kurulumdan sonra anten İzolatörünün bağlantısını kesmeyin.
  - Başlamadan önce TV anteninin bağlı olduğundan emin olun.

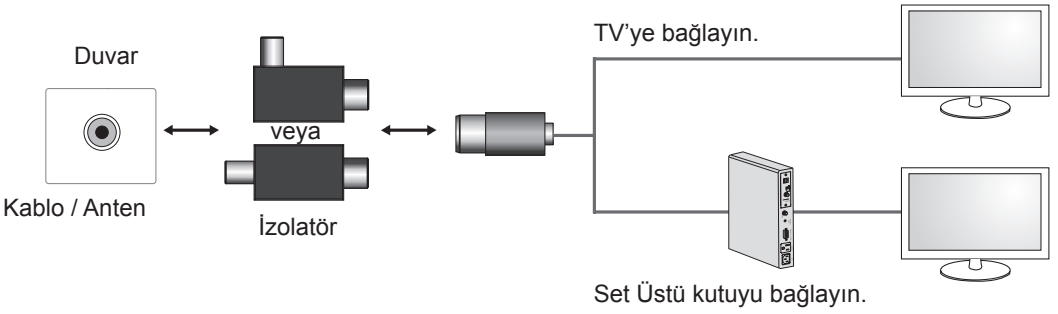

İzolatörün bir ucunu kablo/anten jakına, diğer ucunu TV setine veya set üstü kutuya bağlayın.

"Ana şebeke bağlantısı olan bina kurulumlarının koruyucu topraklamasına bağlı ekipman ya da koruyucu topraklama bağlantısı olan ya da koruyucu topraklama bağlantısına ve koaksiyel kablo kullanarak kablo dağıtım sistemine bağlı olan ekipmanlar, bazı durumlarda yangın tehlikesine yol açabilir. Bu sebeple, kablo dağıtım sistemine yapılan bağlantı, belirli bir frekans aralığı altında elektrik yalıtımı sağlayan bir aygıt vasıtasıyla sağlanmalıdır (galvanik izolatör, bkz. EN 60728-11)"

RF İzolatörünü uyguladığınızda, hafif bir sinyal hassasiyeti kaybı yaşanabilir.

Ayrı satılan öğeler


Ayrı satılan öğeler haber verilmeksizin değiştirilebilir veya kalitesinin artırılması amacıyla üzerinde değişiklik yapılabilir.
Bu öğeleri satın almak için satıcınızla temas kurun.
Bu cihazlar yalnızca belirli modellerle birlikte çalışır.




AG-F*DP**
Çift oynatma gözlükleri




AG-F***
Cinema 3D Gözlükleri




AN-MR400
Sihirli Uzaktan Kumanda

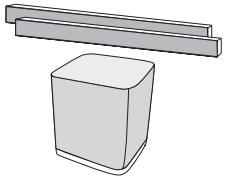

NB7530
Dahili ses çubuğu



AN-VC5**
Görüntülü Çağrı Kamerası

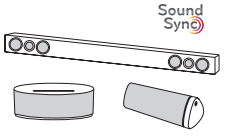

LG Ses cihazı




Tag on

Uyumluluk	LA79**, LA965*	LA86**	LA960*, LA97**	LA98**, LM96**
AG-F*DP** Çift oynatma gözlükleri	•	•	•	•
AG-F*** Cinema 3D Gözlükleri	•	•	•	•
AN-MR400 Sihirli Uzaktan Kumanda	•	•	•	•
AN-VC5** Görüntülü Çağrı Kamerası	•	• (Modele bağlı olarak)		•
LG Ses cihazı	•	•	•	•
Tag on	•	•	•	•
NB7530 Dahili ses çubuğu				• (Modele bağlı olarak)


Model adı veya tasarımı, ürün fonksiyonlarının yükseltilmesine, üreticinin koşullarına veya politikalarına bağlı olarak değiştirilebilir.

Parçalar ve düğmeler


A tipi : LA79**

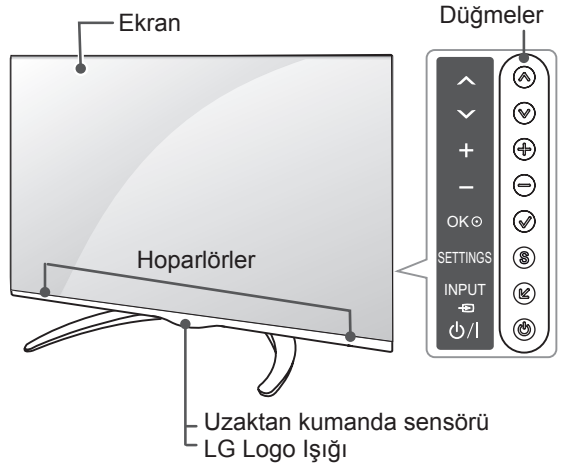


B tipi : LA860*, LA960*

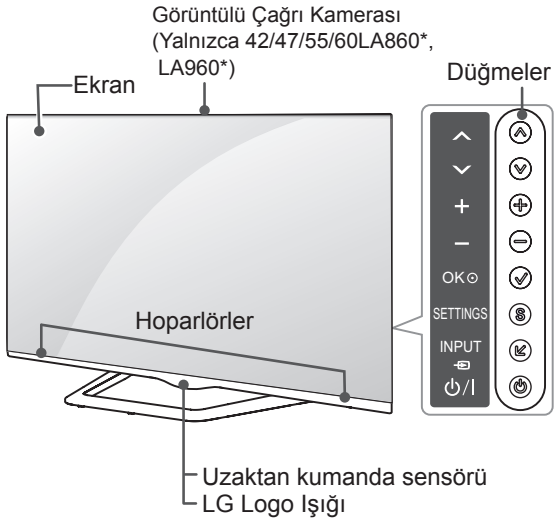


C tipi : LA868*

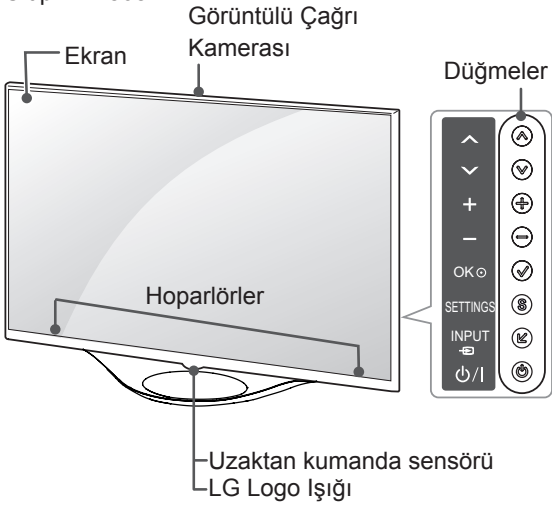


D tipi : LA965*

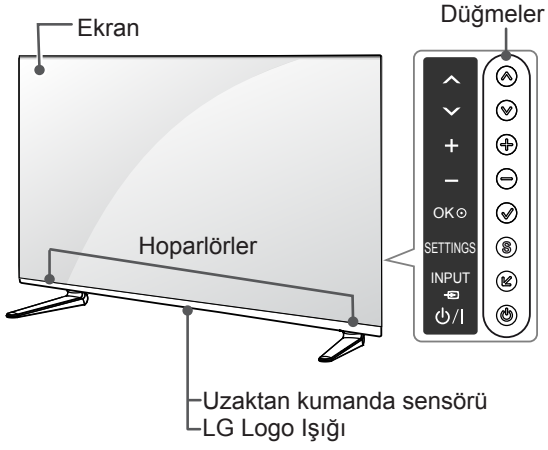

E tipi : LA97**

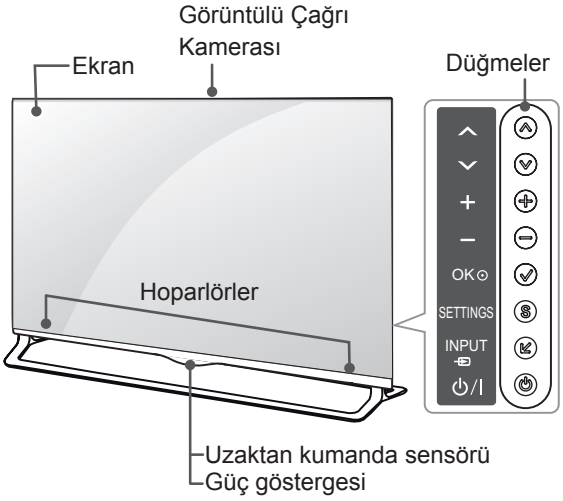


F tipi : LA98**, LM96**

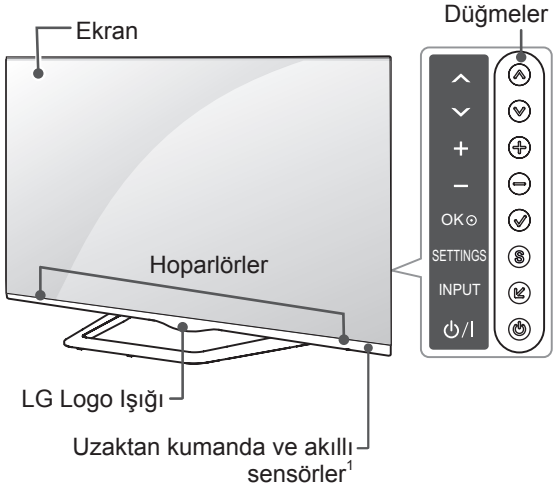

Düğme	Açıklama
∧ ∨	Kayıtlı programlar arasında gezinmenizi sağlar.
+ −	Ses seviyesini ayarlar.
✓	Vurgulanan menü opsiyonunu seçer veya bir girişi onaylar.
S	Ana menüye erişim sağlar veya girişinizi kaydeder ve menülerden çıkmanızı sağlar.
↙	Giriş kaynağını değiştirir.
⏻	Gücü açar veya kapatır.

1 Akıllı sensör - Çevreleyen alana göre görüntü kalitesini ve parlaklığını ayarlar

DİKKAT

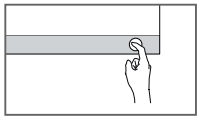

- Olası HOPARLÖR hasarını veya performans düşmesini önlemek için TV'yi / Hoparlörü çocukların erişemeyeceği yerde saklayınız. (Yalnızca LA965*)

NOT

- Ana menüde **OPSİYON** öğesini seçerek LG Logo Işığını açıp kapatabilirsiniz. (Modele bağlı olarak)


TV'nin kaldırılması ve taşınması

TV'nin kaldırılırken veya taşınırken çizilmesini ya da hasar görmesini önlemek ve tipi ve boyutu ne olursa olsun emniyetli ve uygun şekilde taşınmasını sağlamak için aşağıdakileri okuyun.


DİKKAT

- Hasar görmesine yol açabileceğinden ekrana hiçbir koşulda dokunmayın.


- TV'nin kutuda ya da TV'nin orijinal ambalaj malzemesinde taşınması önerilir.
- TV kaldırılmadan ya da taşınmadan önce, güç kablosunu ve diğer tüm kabloları çıkarın.
- TV'yi tutarken hasar görmesini önlemek amacıyla ekran size doğru bakmamalıdır.

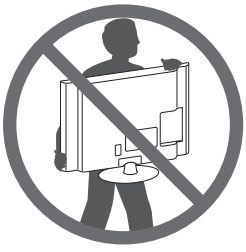

- TV çerçevesinin alt ve üst kısmını sıkıca tutun. Saydam kısım, hoparlör ve hoparlör ızgarası alanından tutmadığınızdan emin olun.

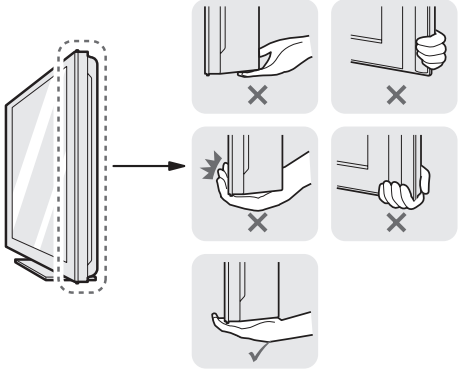


- Büyük bir TV taşınırken, en az 2 kişi hazır bulunmalıdır.
- TV'yi elde taşırken aşağıdaki şekilde gösterildiği gibi tutun.

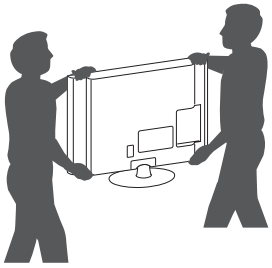

- Taşıma esnasında, TV'yi sarsmayın veya aşırı titreşime maruz bırakmayın.
- Taşıma esnasında, TV'yi dik tutun, kesinlikle yan döndürmeyin ya da sola veya sağa doğru yatırmayın.
- Aşırı basınç uygulanması gövde çerçevesinin katlanıp bükülmesine yol açabilir, bu durum ekrana hasar verebilir.

Sehpa üzerine montaj

1 TV'yi kaldırıp sehpa üzerinde dik konuma getirin.
- Uygun havalandırma için duvarla arasında 10 cm (minimum) boşluk bırakın.

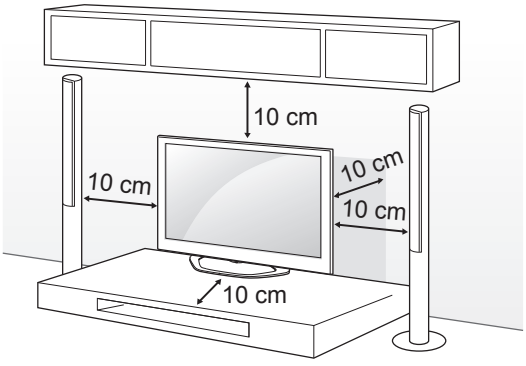

2 Güç kablosunu prize takın.

DİKKAT


- Yangına ya da başka hasarlara neden olabileceğinden TV'yi ısı kaynaklarının üzerine veya yakınına kurmayın.

Kensington güvenlik sisteminin kullanılması (Bu özellik tüm modellerde mevcut değildir.)

- Gösterilen resim sizin TV'nizden farklı olabilir.


Kensington güvenlik sistemi konnektörü TV'nin arka tarafında yer alır. Kurulum ve kullanıma ilişkin daha fazla bilgi için, Kensington güvenlik sistemiyle birlikte verilen kılavuza bakın ya da *http://www.kensington.com* adresini ziyaret edin.

Kensington güvenlik sistemi kablosunu TV ve sehpa arasına bağlayın.

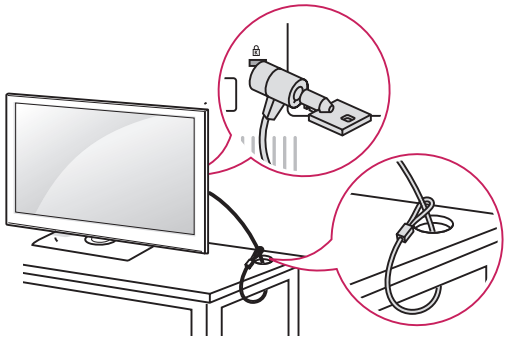


TV'nin açısını izleme yönüne uygun olarak ayarlama


(Bu özellik her modelde mevcut değildir.)
TV'nin açısını izleme yönünüze uygun olarak ayarlarken 15 derece sola veya sağa döndürün ve TV'nin açısını izleme yönünüze uygun olacak şekilde ayarlayın. (Yalnızca LA79**)

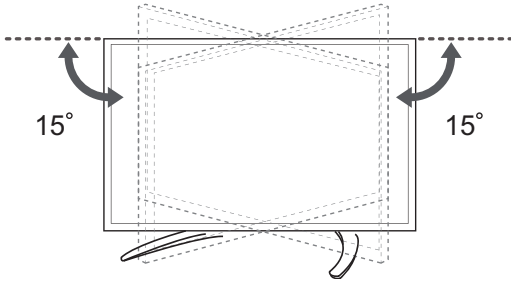


TV'nin açısını İzleme yönünüze uygun olarak sola ya da sağa doğru 10 dereceye kadar döndürebilirsiniz. (Yalnızca 42/47LA860*)

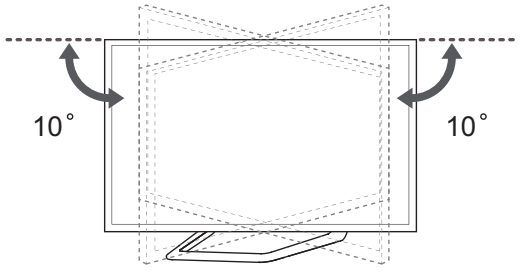

TV'nin açısını İzleme yönünüze uygun olarak sola ya da sağa doğru 8 dereceye kadar döndürebilirsiniz. (Yalnızca 55/60LA860*)

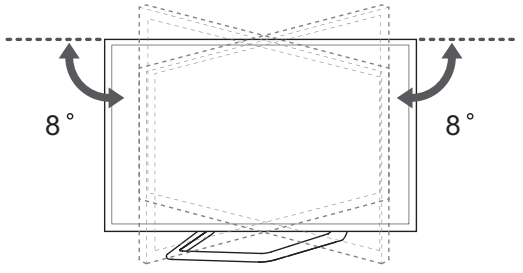


TV'nin açısını İzleme yönünüze uygun olarak sola ya da sağa doğru 7 dereceye kadar döndürebilirsiniz. (Yalnızca LA98**, LM96**)

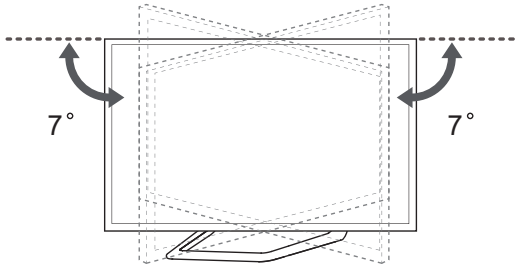

DİKKAT

- Ürünün açısını ayarlarken parmaklarınıza dikkat edin.

» Eliniz veya parmaklarınız sıkışırsa yaralanabilirsiniz. Ürünün çok fazla eğilmesi düşmesine ve hasara ya da yaralanmaya yol açabilir.

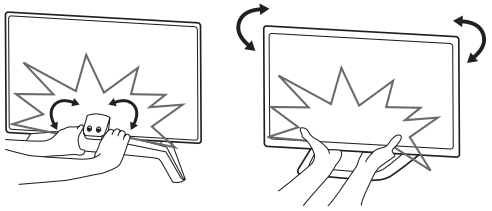

<Arka> <Ön>

DİKKAT


- Çocukların TV üzerine çıkmamasına ve TV'ye asılmamasına dikkat edin.

NOT

- TV'yi emniyetli bir şekilde destekleyecek kadar büyük ve sağlam bir platform veya kabin kullanın.
- Braket, cıvata ve ipler ürünle birlikte verilmez. Yerel satıcınızdan ilave aksesuarlar alabilirsiniz.

TV'nin duvara sabitlenmesi


(Bu özellik her modelde mevcut değildir.)

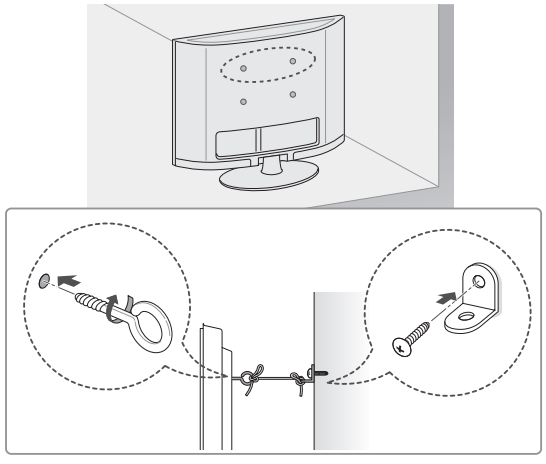

1 Delikli cıvataları ya da TV braketlerini ve cıvatalarını TV'nin arka tarafına takarak sıkın.
   - Delikli cıvataların konumunda takılı cıvata varsa öncelikle bu cıvataları sökün.
2 Duvara montaj braketlerini cıvatalarla duvara monte edin.
   Duvara montaj braketinin konumuyla TV'nin arkasındaki delikli cıvataları birbirine hizalayın.
3 Delikli cıvatalarla duvara montaj braketlerini sağlam bir iple sıkıca bağlayın.
   İpin düz yüzeyle yatay konumda kalmasını sağlayın.

Duvara montaj

TV'nin arka tarafına dikkatli bir şekilde isteğe bağlı bir duvara montaj braketi bağlayın ve duvara montaj braketini zemine dik ve sağlam bir duvara takın. TV'yi başka yapı malzemelerine bağlamanız durumunda, lütfen yetkili personelle temas kurun. LG, duvar montajının kalifiye bir kurulum uzmanı tarafından yapılmasını önerir.

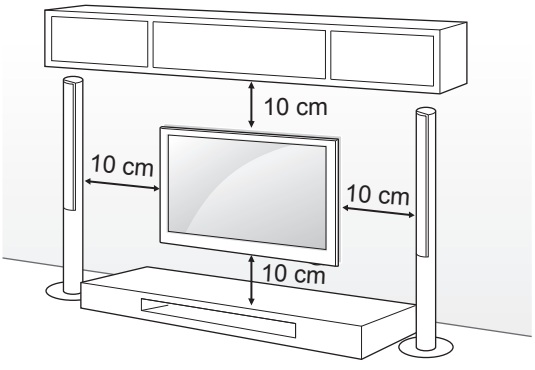

DİKKAT

- TV Duvara Montaj kurulumu uygulandığında, Sürgülü Hoparlör bölmesinin doğru çalışması için lütfen TV çevresinde ve alt kısımda yeterli boşluk olmasını sağlayın. Yeterli boşluk olmaması, Sürgülü Hoparlör bölmesinin doğru çalışmamasına neden olabilir.

» Sürgülü Hoparlör AÇIK durumunda TV'nin altına doğru (25-35 mm) alçalır/genişler.

DİKKAT

- Mevcut Bileşenlerin TV ile birlikte kullanıldığından emin olun. Duvar Braketini TV'ye kurmak için Duvar Braketi ile birlikte verilen bileşenleri KULLANMAYIN. (Yalnızca LA97**)



Duvara montaj aparatı iç aralıkları
4EA








Duvara montaj vidası
4EA, M6 x 54
(Yalnızca 55LA97**)
4EA, M8 x 44
(Yalnızca 65LA97**)

VESA standartlarını karşılayan duvara montaj braketleri ve vidaları kullandığınızdan emin olun. Duvar montaj kitlerinin standart ölçüleri aşağıdaki tabloda belirtilmiştir.

Ayrı satılır (Duvara Montaj Braketi)

Model	42/47/55LA79** 42/47/55LA86** 47/55LA960* 55LA965*	65LA97** 84LA98** 84LM96**
VESA (A x B)	400 x 400	600 x 400
Standart vida	M6	M8
Vida sayısı	4	4
Duvara montaj braketi	MSW240 LSW430B	LSW630B
Model	60LA86** 65LA965* 55LA97**	70LA86**
VESA (A x B)	400 x 400	400 x 400
Standart vida	M6	M8
Vida sayısı	4	4
Duvara montaj braketi	LSW430B	LSW430BX

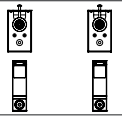Duvara montaj braketi		
LSW430B	LSW630B	MSW240
		
LSW430BX		
		

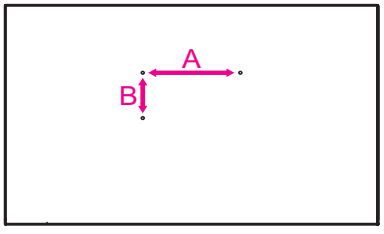


DİKKAT

- Öncelikle fişi çekin, ardından TV'yi taşıyın veya kurun. Aksi halde elektrik çarpabilir.
- TV'yi tavana veya eğimli bir duvara monte ederseniz TV düşerek ciddi yaralanmalara yol açabilir. LG tarafından onaylanmış bir duvara montaj aparatı kullanın ve yerel satıcınızla veya yetkili personelle temas kurun.
- TV'ye hasar verebileceği ve garantinizin geçersiz kalmasına yol açabileceğinden vidaları çok fazla sıkmayın.
- VESA standartlarını karşılayan vidaları ve duvar montaj aparatlarını kullanın. Hatalı kullanım veya uygun olmayan aksesuarların kullanılmasından kaynaklanan hasar ve yaralanmalar garanti kapsamına girmez.

NOT


- VESA standart vida teknik özelliklerinde belirtilen vidaları kullanın.
- Duvara montaj kiti kurulum kılavuzunu ve gerekli parçaları içerir.
- Duvara montaj braketi isteğe bağlı bir aksesuardır. Yerel satıcınızdan ilave aksesuarlar alabilirsiniz.
- Vidaların boyları duvara montaj aparatına göre değişiklik gösterebilir. Uygun boyda vida kullandığınızdan emin olun.
- Daha fazla bilgi için duvara montaj aparatıyla birlikte verilen kılavuza bakın.
- LG duvar braketini TV'ye takarken LG duvar braketi ile sağlanan duvara montaj aralıkları ve duvara montaj vidalarını kullanmayın. Lütfen TV aksesuarı ile birlikte sağlanan duvara montaj aparatı iç aralıkları ve duvara montaj vidalarını kullanın. (Yalnızca LA97**)

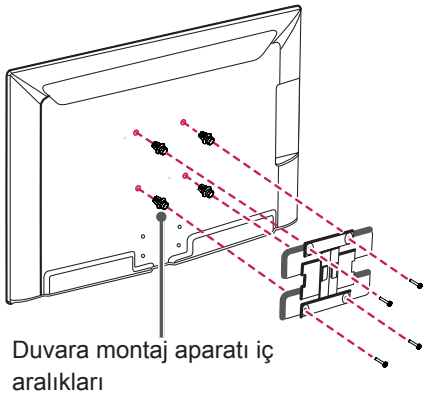

Duvara montaj aparatı iç aralıkları

Sürgülü Hoparlörü Kullanma

(Yalnızca LA97**)

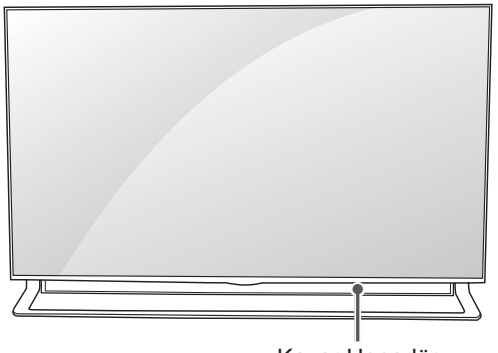

Kayar Hoparlör

1 TV açıldığında - gizli hoparlör TV'nin içerisinden dışarıya kayar.

2 Sürgülü Hoparlörü ayarlamak için Daha **Fazlası ➡ Ayarlar ➡ SES ➡ Kayar Hoparlör** öğesine gidin.

- TV'yi eğlence tablosu/ünitesi üzerine monte ediyorsanız dahili sürgülü hoparlörün çalışmasını sağlamak için lütfen yabancı nesnelerle arasında yeterli mesafenin bulunduğundan emin olun, aksi halde yaralanabilirsiniz ya da TV'niz hasar görebilir.
- Dahili sürgülü hoparlörün çalıştırılması sırasında lütfen aşırı güç kullanmayın, bu durum arızaya neden olabilir.
- TV'yi izlerken Hoparlör'ün AÇIK konumda olduğundan emin olun, ses anormal veya bozuk olabilir.

3 TV'yi taşırken Sürgülü Hoparlörün kapalı olduğundan emin olun. Taşıma sırasında Sürgülü Hoparlör açıksa, bu durum hoparlörün hasar görmesine ve arızalanmasına neden olabilir.

- Sürgülü Hoparlörü kapatmak için **SES ➡ Kayar Hoparlör**, **'TV açıldığı zaman aç.'** öğesini seçin ve GÜÇ düğmesine basın.

Dahili Kamerayı Kullanma

(Modele bağlı olarak)


Bu TV, harici kamera kullanımını desteklemez.

NOT

- Dahili kamerayı kullanmadan önce, ceza hukuku da dahil olmak üzere konuya ilişkin ulusal kanunlara göre kameranın kullanımından veya kötüye kullanımından yasal olarak sorumlu olduğunuzu kabul etmelisiniz.
- Konuya ilişkin kanunlar kişisel bilgilerin işlenmesini ve aktarılmasını düzenleyen Kişisel Bilgilerin Korunması kanununu ve iş yerinde ve başka bir yerde kamera ile izleme yapılmasını düzenleyen kanunu içerir.
- Dahili kamerayı kullanırken şüpheli, yasa dışı veya ahlaka aykırı durumlardan kaçının. Halka açık olan yerler veya etkinlikler haricinde, fotoğraf çekmek için izin almanız gerekebilir. Aşağıdaki durumlardan kaçınmanızı öneririz. :
  (1) Kamerayı kullanımının genel olarak yasak olduğu tuvalet, soyunma odaları, soyunma kabinleri ve güvenlik alanlarında kullanmak.
  (2) Kamerayı kişisel gizliliğin ihlaline neden olacak şekilde kullanmak.
  (3) Kamerayı konuya ilişkin kanunların veya yönetmeliklerin ihlaline neden olacak şekilde kullanmak.

Dahili Kamerayı Hazırlama


1 TV'nin arkasındaki kapağı yukarıya doğru çekin.

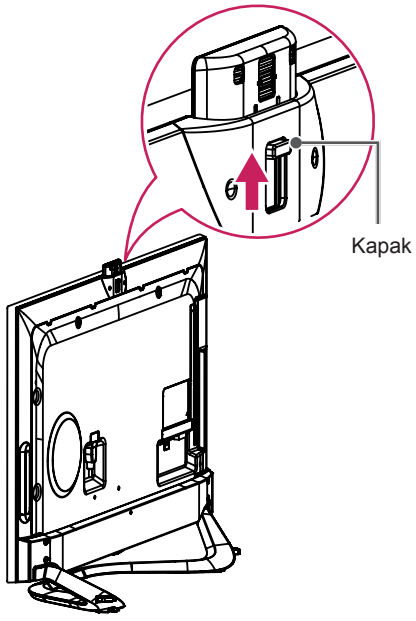


NOT

- Dahili kamerayı kullanmadan önce koruyucu filmi kaldırın.


2 Dahili kameranın arkasındaki açı ayarlama kolu ile kamera açısını ayarlayabilirsiniz (dikey olarak 5 derece içerisinde).

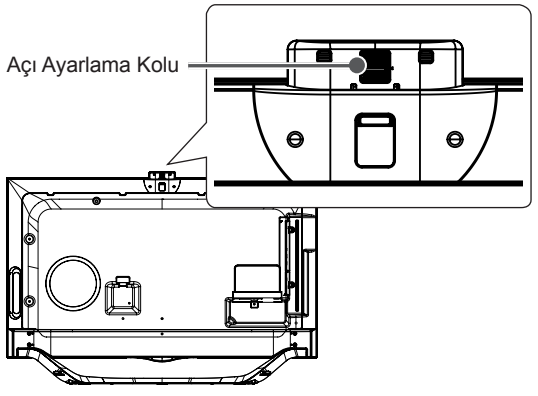

3 Kullanmadığınız zaman dahili kamerayı aşağıya doğru çekin.

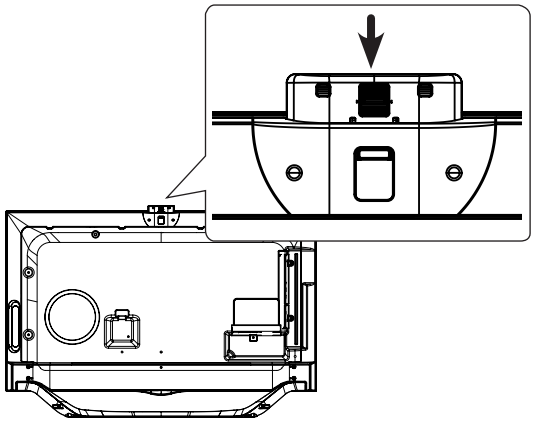

Dahili Kamera Parçalarının Adları

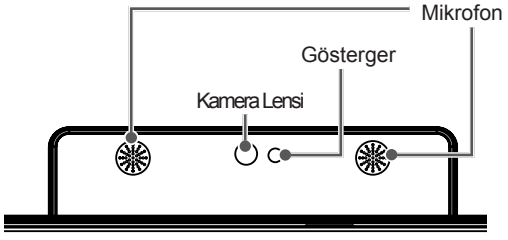

Kameranın Çekim Aralığını Kontrol Etme

1 Daha fazla menüsünü görüntülemek için uzaktan kumanda üzerindeki **SMART** düğmesine basın.


2 Daha Fazla **menüsünden** Ayarlar seçeneğini belirleyin ve ardından **tekerlek (OK)** düğmesine basın.

3 **OPTION (OPSİYON) ➡ Kamera Ayarı Yardımı** öğesine gidin ve **tekerlek (OK)** düğmesine basın.

NOT

- Hareket tanıma işlevini kullanmak için kameradan optimum uzaklık 1,5 - 4,5 m arasıdır.

UZAKTAN KUMANDA

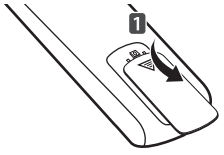


Bu kılavuzdaki açıklamalar uzaktan kumanda üzerinde bulunan düğmeler temel alınarak verilmiştir.
Lütfen bu kılavuzu dikkatlice okuyun ve TV'yi doğru şekilde kullanın.
Pilleri değiştirmek için pil kapağını açın, pilleri (1.5 V AAA) ⊕ ve ⊖ uçları pil yuvasındaki etiketle eşleşecek şekilde değiştirin ve pil kapağını kapatın.
Pilleri yerinden çıkarmak için pil takma işlemlerini ters sıra ile yapın.

⚠ DİKKAT

- Eski ve yeni pilleri birlikte kullanmayın, aksi halde uzaktan kumanda hasar görebilir.

Uzaktan kumandayı, TV üzerindeki uzaktan kumanda sensörüne doğru tuttuğunuzdan emin olun.

(Modele bağlı olarak)

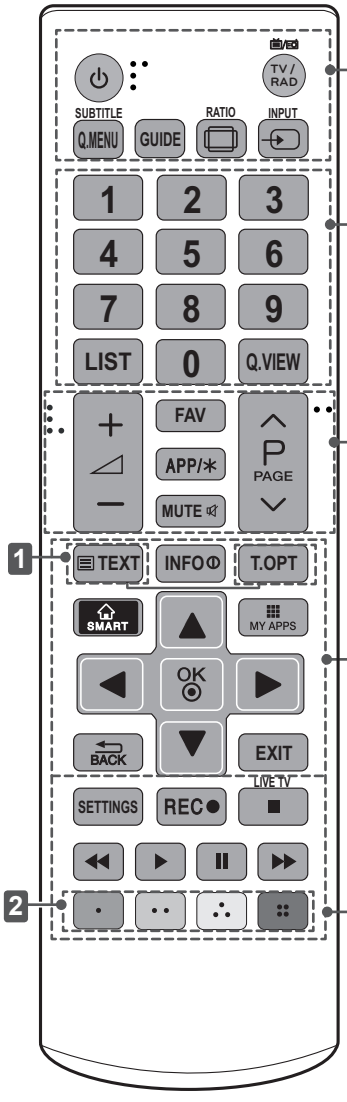

TV/RAD Radyo, TV ve DTV programını seçer.
SUBTITLE Dijital modda tercih ettiğiniz altyazıyı çağırır.
Q. MENU Hızlı menülere erişim sağlar.
GUIDE Program kılavuzunu gösterir.
RATIO Bir görüntüyü yeniden boyutlandırır.
INPUT Giriş kaynağını değiştirir.

LIST Kayıtlı program listesine erişim sağlar.
Q.VIEW İzlediğiniz bir önceki programa döner.


+ − Ses seviyesini ayarlar.
FAV Favori kanal listenize erişim sağlar.
APP/* MHP TV menü kaynağını seçmenizi sağlar. (Yalnızca İtalya) (Modele bağlı olarak)
MUTE Tüm sesleri kapatır.
P Kaydedilen programlar veya kanallar arasında gezinmenizi sağlar.
PAGE Bir önceki veya bir sonraki ekrana geçer.

1 TELETEXT DÜĞMELERİ Bu düğmeler teletext için kullanılır.
INFO Mevcut program ve ekran bilgilerini görüntüler.
SMART Smart Ana menülerine erişim sağlar.
MY APPS Uygulama listesini gösterir.
Gezinme düğmeleri (yukarı/aşağı/sol/sağ) Menüler veya opsiyonlar arasında gezinmenizi sağlar.
OK Menüleri ve opsiyonları seçer ve girişinizi onaylar.
BACK Önceki seviyeye döner.
EXIT Ekran üstünde görüntülenenleri silerek TV izleme moduna geri döner.

SETTINGS Ana menülere erişim sağlar.
REC ● Kaydetmeye ve kayıt menüsünü görüntülemeye başlayın.
LIVE TV Canlı TV'ye geri dönmenizi sağlar.
Kontrol düğmeleri (■ ◀◀ ▶ ■ ▶▶) Premium içeriği, Time Machine veya SmartShare menülerini veya SIMPLINK uyumlu cihazları (USB veya SIMPLINK ya da Time Machine) kumanda eder.
2 Renkli düğmeler Bu düğmeler bazı menülerde bulunan özel fonksiyonlara erişim sağlar. (●: Kırmızı, ●: Yeşil, ●: Sarı, ●: Mavi)

SİHİRLİ UZAKTAN KUMANDA FONKSİYONLARI


"Sihirli Uzak Kumanda pili zayıf. Pili değiştirin." mesajı gösterildiğinde pili değiştirin.
Pilleri değiştirmek için pil kapağını açın, pilleri (1,5 V AA) ⊕ ve ⊖ uçları pil yuvasındaki etiketle eşleşecek şekilde değiştirin ve pil kapağını kapatın. Uzaktan kumandayı, TV üzerindeki uzaktan kumanda sensörüne doğru tuttuğunuzdan emin olun.
Pilleri yerinden çıkarmak için pil takma işlemlerini ters sıra ile yapın.

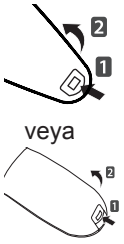

⚠ DİKKAT

- Eski ve yeni pilleri birlikte kullanmayın, aksi halde uzaktan kumanda hasar görebilir.

(Yalnızca LA79**, LA86**, LA960*, LA98**, LM96**)

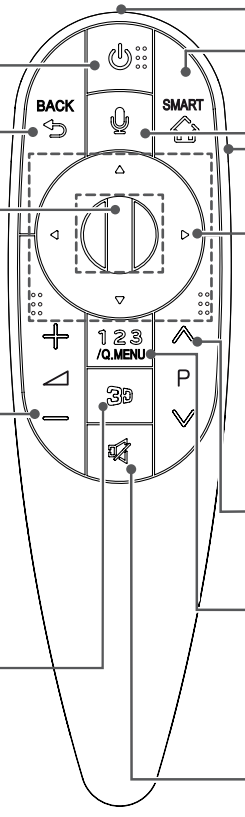

İmleç (RF verici)

SMART
Smart Ana menülerine erişim sağlar.

Ses Tanıma
(Modele bağlı olarak)

Işığı açar ve kapatır.
Işığı açar ve kapatır.
AÇIK olarak ayarlarsanız ışık 5 saniye içinde otomatik olarak kapanır.

Gezinme düğmeleri
(Yukarı/Aşağı/Sol/sağ)
Menüler veya opsiyonlar arasında gezinmenizi sağlar

P
Kaydedilen programlar veya kanallar arasında gezinmenizi sağlar.

1 2 3 /Q.MENU
Hızlı menülere erişim sağlar.
Çok Amaçlı Kumandaya erişim sağlar.
(Bu özellik her ülkede mevcut değildir.)

(Sessiz)
Tüm sesleri kapatır.

(GÜÇ)
TV'yi açar veya kapatır.

BACK
Önceki seviyeye döner

Hareket Tuşu(OK)
Menüleri ve opsiyonları seçer ve girişinizi onaylar.
Kayıtlı kanallar arasında gezinmenizi sağlar.
Ekran üzerinde imleci hareket ettirirken gezinme düğmesine basarsanız, imleç kaybolur ve Sihirli Uzaktan Kumanda normal bir uzaktan kumanda gibi çalışmaya devam eder.
İmleci tekrar görüntülemek için Sihirli Uzaktan Kumandayı yanlara doğru sallayın.


+ -
Ses seviyesini ayarlar.

3D
3D video izlemek için kullanılır.

Ses Tanıma (Modele bağlı olarak)
Ses tanıma işlevini kullanmak için ağ bağlantısı gereklidir.
Tanıma hızı, kullanıcının konuşma özelliklerine (ses, telaffuz, tonlama ve hız) ve ortama (gürültü ve TV sesi) göre değişiklik gösterir.

1. Ses Tanıma düğmesine basın.
2. Ses görüntüleme penceresi TV ekranının sol tarafında belirdiğinde istediğiniz sözü söyleyin.
   - Çok hızlı veya çok yavaş konuştuğunuzda ses tanıma özelliği başarısız olabilir.
   - Sihirli uzaktan kumandayı yüzünüzden en fazla 10 cm uzakta olacak şekilde kullanın.

(Yalnızca LA965*, LA97**)

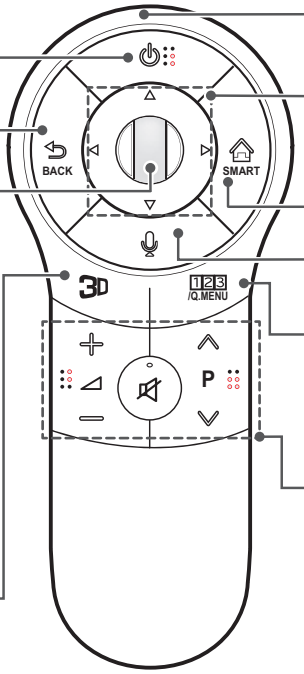

(GÜÇ)
TV'yi açar veya kapatır.

BACK
Önceki seviyeye döner

Hareket Tuşu(OK)
Menüleri ve opsiyonları seçer ve girişinizi onaylar. Kayıtlı kanallar arasında gezinmenizi sağlar. Ekran üzerinde imleci hareket ettirirken gezinme düğmesine basarsanız, imleç kaybolur ve Sihirli Uzaktan Kumanda normal bir uzaktan kumanda gibi çalışmaya devam eder. İmleci tekrar görüntülemek için Sihirli Uzaktan Kumandayı yanlara doğru sallayın.

3D
3D video izlemek için kullanılır.

İmleç (RF verici)

Gezinme düğmeleri
(Yukarı/Aşağı/Sol/sağ)
Menüler veya opsiyonlar arasında gezinmenizi sağlar

SMART
Smart Ana menülerine erişim sağlar.

Ses Tanıma
(Modele bağlı olarak)

1 2 3 /Q.MENU
Hızlı menülere erişim sağlar. Çok Amaçlı Kumandaya erişim sağlar. (Bu özellik her ülkede mevcut değildir.)

+ -
Ses seviyesini ayarlar.

P
Kaydedilen programlar veya kanallar arasında gezinmenizi sağlar.

(Sessiz)
Tüm sesleri kapatır.

Ses Tanıma (Modele bağlı olarak)
Ses tanıma işlevini kullanmak için ağ bağlantısı gereklidir.
Tanıma hızı, kullanıcının konuşma özelliklerine (ses, telaffuz, tonlama ve hız) ve ortama (gürültü ve TV sesi) göre değişiklik gösterir.

1. Ses Tanıma düğmesine basın.
2. Ses görüntüleme penceresi TV ekranının sol tarafında belirdiğinde istediğiniz sözü söyleyin.
   - Çok hızlı veya çok yavaş konuştuğunuzda ses tanıma özelliği başarısız olabilir.
   - Sihirli uzaktan kumandayı yüzünüzden en fazla 10 cm uzakta olacak şekilde kullanın.

Sihirli Uzaktan Kumandanın Kaydettirilmesi

Çalıştırmadan önce sihirli uzaktan kumandayı TV'nizle 'eşleştirmeniz' (kaydetmeniz) gerekir.

Sihirli Uzaktan Kumandanın kaydettirilmesi

	1 Otomatik olarak kaydetmek için TV'yi açıp **Hareket Tuşuna(OK)** basın. Kayıt işlemi tamamlandıktan sonra ekranda tamamlama mesajı görüntülenir. 2 Kayıt başarısız olursa TV'yi kapatıp yeniden açın ve kayıt işlemini tamamlamak için **Hareket Tuşuna(OK)** basın.

Sihirli Uzaktan Kumandanın yeniden kaydettirilmesi

BACK (Geri) ⮌ **SMART** ⌂	1 Sıfırlamak için **BACK**⮌ ve **SMART**⌂ düğmelerinin ikisini de 5 saniye boyunca basılı tutun, ardından yukarıdaki "Sihirli Uzaktan Kumandanın kaydettirilmesi" bölümünü takip ederek kumandayı kaydedin. 2 Sihirli Uzaktan Kumandayı yeniden kaydettirmek için uzaktan kumandayı TV'ye doğru tutarak **BACK**⮌ düğmesine 5 saniye boyunca basın. Kayıt işlemi tamamlandıktan sonra ekranda tamamlama mesajı görüntülenir.

Sihirli Uzaktan Kumandanın kullanılması

	1 İmleç kaybolursa uzaktan kumandayı hafifçe sola veya sağa hareket ettirin. İmleç otomatik olarak yeniden ekranda görüntülenecektir. » İmleç belirli bir süre boyunca kullanılmazsa kaybolur. 2 Uzaktan kumandanın İmleç Alıcısını TV'ye doğru tutarak imleci oynatabilir, ardından sola, sağa, yukarı ve aşağı hareket ettirebilirsiniz. » İmleç düzgün çalışmıyorsa uzaktan kumandayı 10 saniye bekledikten sonra yeniden kullanmayı deneyin.



1	Sihirli Uzaktan Kumandadaki **Hareket Tuşuna(OK)** (Tamam) bastığınızda aşağıdaki ekran görüntülenir. Geçerli program ve ekran hakkındaki bilgileri gösterir.
2	Daha Fazla Menü seçebilirsiniz.


Sihirli Uzaktan Kumandayı Kullanırken Alınacak Önlemler

- Uzaktan kumandayı maksimum iletişim uzaklığı dahilinde kullanın (10 m). Uzaktan kumanda bu uzaklığın ötesinde veya engelleyen bir nesne ile kullanıldığında bir iletişim arızası oluşabilir.
- Yakındaki cihazlar nedeniyle bir iletişim arızası oluşabilir. Sihirli Uzaktan Kumanda ile aynı bant genişliğini (2.4 GHz) kullandıkları için mikrodalga fırın veya kablosuz LAN ürünü gibi elektrikli cihazlar girişime neden olabilir.
- Sihirli Uzaktan Kumanda düşürülürse veya ağır bir darbe alırsa zarar görebilir veya arızalanabilir.
- Sihirli Uzaktan Kumandayı kullanırken mobilyaların kenarına veya diğer insanlara çarpmamaya dikkat edin.
- Söz konusu kablosuz cihazda elektrik dalgası girişimi olasılığı bulunduğu için üretici ya da kurulum uzmanı, insanların emniyetine ilişkin bir hizmet sunamaz.
- Erişim Noktasının (AP) TV'den en az 1 m uzaklıkta bulunması önerilir. AP 1 metreden daha yakındaysa frekans girişimi sebebiyle Sihirli Uzaktan Kumanda beklenen şekilde çalışmayabilir.

KULLANICI KILAVUZUNUN KULLANILMASI


Kullanıcı Kılavuzu ayrıntılı TV bilgilerine daha kolay erişmenizi sağlar.

1 Smart Ana menüsüne erişmek için **SMART** düğmesine basın.
2 **Kullanıcı Kılavuzu** opsiyonunu seçin ve **Hareket Tuşuna(OK)** (Tamam) basın.

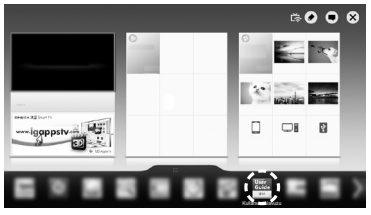




Kullanıcı Kılavuzu

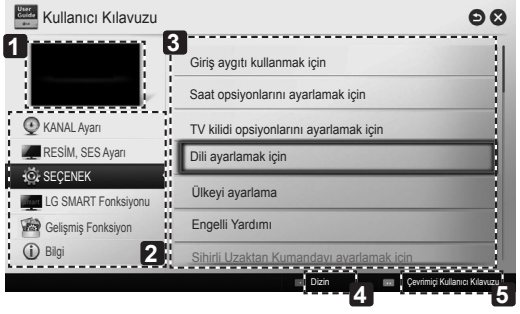

1 O an izlenmekte olan programı veya giriş kaynağı ekranını gösterir.
2 İstediğiniz kategoriyi seçmenizi sağlar.
3 İstediğiniz öğeyi seçmenizi sağlar. Sayfalar arasında gezinmek için ∧/∨ düğmelerini kullanabilirsiniz.
4 Dizinden istediğiniz fonksiyonunun açıklamasına bakmanızı sağlar.
5 Internete bağlıyken LG Smart TV'nin işlevleriyle ilgili ayrıntılı bilgi sunar. (Bu işlev, ülke/dilinize bağlı olarak kullanılamayabilir.)

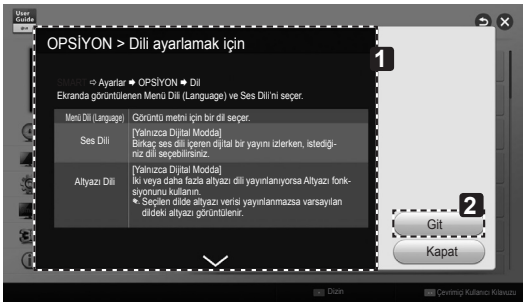

1 Seçilen menünün açıklamasını gösterir. Sayfalar arasında gezinmek için ∧/∨ düğmelerini kullanabilirsiniz.
2 Doğrudan Kullanıcı Kılavuzu'ndan seçilen menüye gider.

BAKIM

TV'nizin temizlenmesi

Yüksek performansı korumak ve ürünün kullanım ömrünü uzatmak için TV'nizi düzenli olarak temizleyin.

⚠ DİKKAT

- Gücün kapandığından, güç kablosu ve diğer tüm kabloların çıkarıldığından emin olun.
- TV'nin uzun süre kullanılmayacaksa, olası yıldırım ve voltaj dalgalanmalarından dolayı hasar görmesini önlemek için güç kablosunu duvar prizinden çekin.

Ekran, çerçeve, kabin ve ayaklık

- Tozu ve hafif kirleri temizlemek için, yüzeyi kuru, temiz ve yumuşak bir bezle silin.
- Ağır kirleri temizlemek için, yüzeyi temiz su veya hafif deterjana batırılmış bir bezle silin. Ardından hemen kuru bir bezle kurulayın.

⚠ DİKKAT

- Hasar görmesine yol açabileceğinden ekrana hiçbir koşulda dokunmayın.
- Ekranda çiziklere ve görüntü bozulmalarına neden olabileceğinden dolayı, ekran yüzeyine tırnağınızla veya sivri bir nesneyle dokunmayın, bastırmayın ve vurmayın.
- Yüzeye zarar verebileceğinden dolayı herhangi bir kimyasal madde kullanmayın.
- Yüzeye sıvı püskürtmeyin. TV'ye su girmesi durumunda, yangın, elektrik çarpması ya da arıza meydana gelebilir.

Güç kablosu

Güç kablosunda biriken toz ve kirleri düzenli olarak temizleyin.

SORUN GİDERME

Sorun	Çözüm
TV uzaktan kumandayla kontrol edilemiyor.	• Ürün üzerindeki uzaktan kumanda sensörünü kontrol edin ve tekrar deneyin. • Ürün ve uzaktan kumanda arasında engel olup olmadığını kontrol edin. • Pillerin hala çalışır durumda olduğunu ve düzgün takılıp takılmadığını kontrol edin (pilin ⊕ ucu yuvanın ⊕ ucuna, ⊖ ucu ise yuvanın ⊖ ucuna gelmelidir).
Görüntü ve ses gelmiyor.	• Ürünün açık olup olmadığını kontrol edin. • Güç kablosunun bir duvar prizine bağlı olup olmadığını kontrol edin. • Başka ürünler bağlayarak prizde bir sorun olup olmadığını kontrol edin.
TV aniden kapanıyor.	• Güç kontrol ayarlarını gözden geçirin. Güç kaynağı kesintiye uğramış olabilir. • **Zamanlayıcılar** ayarlarında **Otomatik Bekleme** (Modele bağlı olarak) **/ Uyuma Zamanlayıcısı / Güç Kapalı** özelliğinin etkinleştirilip etkinleştirilmediğini kontrol edin. • TV açıkken sinyal yoksa 15 dakika sonra TV otomatik olarak kapanacaktır.
PC'ye (HDMI) bağladığımda 'Sinyal yok' veya 'Geçersiz Format' mesajı görüntüleniyor.	• Uzaktan kumandayı kullanarak TV'yi açıp kapatın. • HDMI kablosunu yeniden bağlayın. • TV açıkken PC'yi yeniden başlatın.

HARİCİ KONTROL AYGITI KURULUMU

Harici kontrol aygıtı kurulumu hakkında bilgi almak için lütfen *www.lg.com* sayfasını ziyaret edin.

TEKNİK ÖZELLİKLER

Kablosuz LAN modülü (TWFM-B006D) teknik özellikleri	
Standart	IEEE802.11a/b/g/n
Frekans Aralığı	2400 - 2483,5 MHz 5150 - 5250 MHz 5725 - 5850 MHz (AB Dışındaki Ülkeler İçin)
Çıkış Gücü (Maks.)	802.11a: 11 dBm 802.11b: 14 dBm 802.11g: 10.5 dBm 802.11n - 2.4 GHz: 11 dBm 802.11n - 5 GHz: 12.5 dBm
Bluetooth modülü (BM-LDS401) teknik özellikleri	
Standart	Bluetooth Sürüm 3.0
Frekans Aralığı	2400 ~ 2 483.5 MHz
Çıkış Gücü (Maks.)	10 dBm veya daha az

- Ülkede kullanılan bant kanalı farklı olabileceği için, kullanıcı çalışma frekansını değiştiremez veya ayarlayamaz ve bu ürün bölgesel frekans tablosuna göre ayarlanmıştır.

CE 0197 !

ÇEVRESEL BİLGİLER

WEEE



Eski cihazınızın atılması

Bir çarpı işaretli tekerlekli çöp tenekesi sembolü ürünün 2002/96/EC Avrupa Yönergesi kapsamında olduğunu gösterir.

Tüm elektrik ve elektronik ürünler hükümetin veya mahalli yetkililerin gösterdiği toplama tesislerine atılmalıdır.

Eski cihazınızın uygun biçimde atılması çevreye ve insan sağlına zararlı potansiyel negatif sonuçları önler.

Eski cihazınızın atılmasıyla ilgili daha detaylı bilgi almak için lütfen mahalli yetkililerle, katı atık servisiyle ya da ürünü aldığınız mağaza ile irtibata geçiniz. EEE Yönetmeliğine uygundur.

Pil



Kullanılmış pil ve akümülatörlerin elden çıkarılması

Üstünde çarpı işareti bulunan tekerlekli çöp bidonu sembolünün ürünün üzünüzerinde olması, bu ürünün Avrupa Birliği Yönergesi 2006/66/EC kapsamında olduğunu belirtir. Bu sembol pillerin %0,0005 oranında civa, %0,002 oranında kadmiyum veya %0,004 oranında kurşun içermesi durumunda cıva (Hg), kadmiyum (Cd) veya kurşun (Pb) kimyasal sembolleri ile bir arada bulunabilir.

Tüm piller ve akümülatörler, normal atıl çöplerden ayrı olarak, hükümet veya yerel idareler tarafından belirlenmiş olan toplama merkezlerinde atılmalıdır.

Bu tip kullanılmış pil/akümülatörlerin doğru olarak atılması hem çevreye hem de hayvan ve insan sağlığına verilebilecek potansiyel olumsuz sonuçları önleyecektir.

Kullanılmış pillerinizin/akümülatörlerinizin atılması ile ilgili olarak, bulunduğunuz yerdeki belediye, çöp atım hizmeti veren kuruluşlara veya ürünü satın aldığınız yerlere başvurabilirsiniz.

Kullanım süresi 10 yıldır. (Ürünün fonksiyonlarını yerine getirebilmesi için gerekli yedek parça temin süresi).

NAKLİYE VE TAŞIMA SIRASINDA DİKKAT EDİLMESİ GEREKENLER

1- Cihazın fişini prizden çıkarınız
2- Taşıma sırasında ekranı düşürmeyin, sarsmayarak darbe görmesini önleyiniz.
3- Ürünü normal kullanma konumunda taşıyınız, mümkünse orjinal malzemesiyle paketleyerek taşıyın.
4- Taşıma sırasında cihazın üstüne ağır bir şey koymayınız.
5- Mümkünse iki kişi taşıyınız.
6- Kesinlikle cihazınızı panel üzerine yatırmayınız.

ENERJİ TASARRUF BİLGİLERİ

1- Plazma veya LCD TV nizi kullanmadığınız sürede kapalı tutun
2- Uzun süre kullanmayacaksınız cihazın fişini muhakkak çıkarın
3- Kısa aralıklarda cihazınızı stand-by konumunda bırakabilirsiniz

LG ELECTRONICS TİCARET A.Ş.
Kaptanpaşa Mah. Piyalepaşa Bulvarı No : 73
Ortadoğu Plaza Kat : 7
Şişli - İstanbul - Turkey

Tel: (0 212) 314 52 52
Fax: (0 212) 222 61 44

Yetkili Servisler

Değerli Müşterimiz,

LG Çağrı Yönetim Merkezi 444 6 543 (LGE) no.lu telefon numarası ile, 7 gün / 24 saat hizmet vermektedir (Saat 20:00 ile 09:00 saatleri arasında otomatik kayıt sistemi ile). Bu saatler dışında aradığınızda adınızı, soyadınızı ve telefon numaranızı alan kodu ile bıraktığınızda ilk mesai saatinde sizinle irtibata geçilecektir. Doğrudan bu numarayı çevirerek size en yakın Yetkili Servis telefonunu alabilir veya arzu ettiğiniz hizmeti talep edebilirsiniz.

Çağrı Merkezi
444 6 543 (LGE)

ÇAĞRI MERKEZİMİZİ SABİT TELEFONLARDAN VEYA CEP TELEFONLARINDAN ALAN KODU ÇEVİRMEKSİZİN ARAYABİLİRSİNİZ.

SPECIFICATIONS

Product specifications may be changed without prior notice due to upgrade of product functions.
For the power supply and power consumption, refer to the label attached to the product.

MODELS		42LA79**	47LA79**	55LA79**
		42LA790V-ZA, 42LA790W-ZA, 42LA7909-ZA	47LA790V-ZA, 47LA790W-ZA, 47LA7909-ZA	55LA790V-ZA, 55LA790W-ZA, 55LA7909-ZA
Dimensions (W x H x D)	With stand (mm)	965 x 628 x 285	1077x 690 x 285	1247 x 789 x 326
	Without stand(mm)	965 x 562 x 34.1	1077 x 625 x 34.1	1247 x 722 x 34.1
Weight	With stand (kg)	14.7	18.5	25.3
	Without stand (kg)	13.1	16.8	23.0
Power requirement		AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz
Power consumption		120 W	130 W	150 W
MODELS		**42LA860***	**47LA860***	**55LA860***
		42LA860V-ZA, 42LA860W-ZA, 42LA8609-ZA	47LA860V-ZA, 47LA860W-ZA, 47LA8609-ZA	55LA860V-ZA, 55LA8609-ZA, 55LA860W-ZA
Dimensions (W x H x D)	With stand (mm)	948 x 631 x 269	1059 x 694 x 269	1229 x 788 x 316
	Without stand(mm)	948 x 562 x 35.1	1059 x 625 x 35.1	1229 x 721 x 35.1
Weight	With stand (kg)	15.6	19.3	26.2
	Without stand (kg)	13.5	17.2	23.4
Power requirement		AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz
Power consumption		120 W	130 W	150 W
MODELS		**60LA860***	**70LA860***	
		60LA860V-ZA, 60LA860W-ZA, 60LA8609-ZA	70LA860V-ZA, 70LA860W-ZA, 70LA8609-ZA	
Dimensions (W x H x D)	With stand (mm)	1338 x 850 x 316	1582 x 997 x 401	
	Without stand(mm)	1338 x 782 x 35.1	1582 x 922 x 57.9	
Weight	With stand (kg)	30.5	46.1	
	Without stand (kg)	27.7	42.1	
Power requirement		AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz	
Power consumption		170 W	250 W	

MODELS		42LA868*	47LA868*	55LA868*
		42LA868V-ZD	47LA868V-ZD	55LA868V-ZD
Dimensions (W x H x D)	With stand (mm)	948 x 619 x 251	1059 x 682 x 251	1229 x 784 x 310
	Without stand(mm)	948 x 562 x 35.1	1059 x 625 x 35.1	1229 x 721 x 35.1
Weight	With stand (kg)	15.9	19.7	26.7
	Without stand (kg)	13.5	17.2	23.4
Power requirement		AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz
Power consumption		120 W	130 W	150 W

MODELS		47LA960*	55LA960*
		47LA960V-ZA, 47LA960W-ZA, 47LA9609-ZA	55LA960V-ZA, 55LA960W-ZA, 55LA9609-ZA
Dimensions (W x H x D)	With stand (mm)	1050 x 684 x 266	1220 x 781 x 305
	Without stand(mm)	1050 x 616 x 31.2	1220 x 712 x 31.5
Weight	With stand (kg)	15.5	21.0
	Without stand (kg)	13.6	18.4
Power requirement		AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz
Power consumption		190 W	200 W

MODELS		55LA965*	65LA965*
		55LA965V-ZA, 55LA965W-ZA, 55LA9659-ZA	65LA965V-ZA, 65LA965W-ZA, 65LA9659-ZA
Dimensions (W x H x D)	With stand (mm)	1234 x 790 x 261	1455 x 912 x 294
	Without stand(mm)	1234 x 755 x 41.9	1455 x 881 x 43.5
Weight	With stand (kg)	26.1	36.8
	Without stand (kg)	24.6	35.0
Power requirement		AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz
Power consumption		190 W	250 W

MODELS		55LA97**	65LA97**
		55LA970V-ZA, 55LA970W-ZA, 55LA9709-ZA	65LA970V-ZA, 65LA970W-ZA, 65LA9709-ZA
Dimensions (W x H x D)	With stand (mm)	1230 x 781 x 274	1451 x 910 x 325
	Without stand(mm)	1230 x 714(*743) x 40.2	1451 x 838(*868) x 40.8
Weight	With stand (kg)	31.0	44.2
	Without stand (kg)	27.9	40.6
Power requirement		AC 100-240 V ~ 50/60 Hz	AC 100-240 V ~ 50/60 Hz
Power consumption		280 W	370 W

* : Sliding Speaker open state

MODELS		84LA98**	84LM96**
		84LA980V-ZB 84LA980V-ZD	84LM960V-ZD 84LM960W-ZD
Dimensions (W x H x D)	With stand (mm)	1916 x 1214 x 399	1916 x 1214 x 399
	Without stand(mm)	1916 x 1120 x 39.9	1916 x 1120 x 39.9
Weight	With stand (kg)	81.7	81.7
	Without stand (kg)	70.4	70.4
Power requirement		AC 100-240 V~ 50 / 60 Hz	AC 100-240 V~ 50 / 60 Hz
Power consumption		520 W	520 W

CI Module Size (W x H x D)	100.0 mm x 55.0 mm x 5.0 mm

Environment condition	Operating Temperature	0 °C to 40 °C
	Operating Humidity	Less than 80 %
	Storage Temperature	-20 °C to 60 °C
	Storage Humidity	Less than 85 %

	Digital TV	Analogue TV
Television system	DVB-T/T2[1] DVB-C[2] DVB-S/S2[3]	PAL/SECAM B/G/I/D/K, SECAM L/L'
Programme coverage	VHF, UHF C-Band, Ku-Band	VHF: E2 to E12 UHF: E21 to E69 CATV: S1 to S20 HYPER: S21 to S47
Maximum number of storable programmes	6,000	1,200
External antenna impedance	75 Ω	

1 T/T2 : Terrestrial

2 C : Cable

3 S/S2 : Satellite

HDMI/DVI-DTV supported mode

(Only LA965*, LA97**, LA98**, LM96** - HDCP1.4)

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 X 480	31.469 31.5	59.94 60
720 X 480	31.469 31.5	59.94 60
720 X 576	31.25	50
1280 X 720	37.5 44.96 45	50 59.94 60
1920 X 1080	33.72 33.75 28.125 26.97 27 33.716 33.75 56.25 67.43 67.5	59.94 60 50 23.97 24 29.976 30.00 50 59.94 60
3840 x 2160 (Only LA97**, LA965*, LA98**, LM96**)	53.95 54 56.25 61.43 67.5	23.976 24.00 25.00 29.970 30.00

HDMI-PC supported mode

(Only LA965*, LA97**, LA98**, LM96** - HDCP1.4)

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 x 350	31.468	70.09
720 x 400	31.469	70.08
640 x 480	31.469	59.94
800 x 600	37.879	60.31
1024 x 768	48.363	60.00
1152 x 864	54.348	60.053
1360 x 768	47.712	60.015
1280 x 1024	63.981	60.020
1920 x 1080	67.50	60.00
3840 x 2160 (Only LA97**, LA965*, LA98**, LM96**)	54 56.25 67.5	24.00 25.00 30.00

Component port connecting information

Component ports on the TV	Y	P_B	P_R

Video output ports on DVD player	Y	P_B	P_R
	Y	B-Y	R-Y
	Y	Cb	Cr
	Y	Pb	Pr

Signal	Component
480i/576i	O
480p/576p	O
720p/1080i	O
1080p	O (50 Hz / 60 Hz only)

* You may experience video/sound lag when playing the ultra HD content (resolution: 3840 x 2160) on your computer, depending on your computer specifications.

[ULTRA HD] Video Supported Codec

- Maximum resolution : 3840 x 2160 @ 30p

- Maximum data transfer rate :
  3840 X 2160(H.264 L5.1) : 50Mbps(megabits per second)
  3840 X 2160(HEVC L5.0) : 25Mbps

Extension	Codec	
.mkv / .mp4 / .ts	Video	H.264/AVC
	Audio	Dolby Digital, Dolby Digital Plus, AAC, HE-AAC
.ts	Video	HEVC
	Audio	Dolby Digital, Dolby Digital Plus, AAC, HE-AAC

NOTE

- Unsupported codecs are only available after a software upgrade.
- Video files created by some encoders may not be played back.
- ATTENTION : Your ULTRA HD TV may not support HEVC encoded contents that are not officially supplied by LG.
- Video files in formats other than the ones specified here may not be played back.
- Playback of video files stored on the USB device that do not support High Speed, may not work properly.
- Some subtitles created by users may not work properly.
- The video and subtitle files should be placed in the same folder. For subtitles to display correctly, the video and subtitle files must have the same name.
- It supports the playback through USB only.
- Some ULTRA HD models will need to be connected to an “ULTRA HD Upgrade Kit”.

3D supported mode

- Video, which is input as below media contents is switched into the 3D screen automatically.
- The method for 3D digital broadcast may differ depending on the signal environment. If video is not switched automatically into 3D, manually convert the settings to view 3D images.

<table>
<tr><th colspan="5">3D supported mode automatically</th></tr>
<tr><th>Input</th><th>Signal</th><th>Horizontal Frequency (kHz)</th><th>Vertical Frequency (Hz)</th><th>Playable 3D video format</th></tr>
<tr><td rowspan="24">HDMI</td><td rowspan="2">640x480</td><td>31.469 / 31.5</td><td rowspan="4">59.94 / 60</td><td>Side by Side(Half), Top & Bottom, Side by Side(Full)</td></tr>
<tr><td>62.938 / 63</td><td>Frame Packing, Line Alternative</td></tr>
<tr><td rowspan="2">480p</td><td>31.469 / 31.5</td><td>Side by Side(Half), Top & Bottom, Side by Side(Full)</td></tr>
<tr><td>62.938 / 63</td><td>Frame Packing, Line Alternative</td></tr>
<tr><td rowspan="2">576p</td><td>31.25</td><td rowspan="2">50</td><td>Side by Side(Half), Top & Bottom, Side by Side(Full)</td></tr>
<tr><td>62.5</td><td>Frame Packing, Line Alternative</td></tr>
<tr><td rowspan="4">720p</td><td>37.50</td><td>50</td><td rowspan="2">Side by Side(Half), Top & Bottom, Side by Side(Full)</td></tr>
<tr><td>44.96 / 45</td><td>59.94 / 60</td></tr>
<tr><td>75</td><td>50</td><td rowspan="2">Frame packing, Line Alternative</td></tr>
<tr><td>89.91 / 90</td><td>59.94 / 60</td></tr>
<tr><td rowspan="4">1080i</td><td>28.125</td><td>50</td><td rowspan="2">Side by Side(Half), Top & Bottom, Side by Side(Full)</td></tr>
<tr><td>33.72 / 33.75</td><td>59.94 / 60</td></tr>
<tr><td>56.25</td><td>50</td><td rowspan="2">Frame packing, Field Alternative</td></tr>
<tr><td>67.432 / 67.5</td><td>59.94 / 60</td></tr>
<tr><td rowspan="9">1080p</td><td>26.97 / 27</td><td>23.97 / 24</td><td rowspan="3">Side by Side(Half), Top & Bottom, Side by Side(Full)</td></tr>
<tr><td>28.125</td><td>25</td></tr>
<tr><td>33.716 / 33.75</td><td>29.976 / 30</td></tr>
<tr><td>43.94 / 54</td><td>23.97 / 24</td><td rowspan="3">Frame packing, Line Alternative</td></tr>
<tr><td>56.25</td><td>25</td></tr>
<tr><td>67.432 / 67.5</td><td>29.976 / 30</td></tr>
<tr><td>56.25</td><td>50</td><td rowspan="2">Side by Side(Half), Top & Bottom</td></tr>
<tr><td>67.432 / 67.5</td><td>59.94 / 60</td></tr>
<tr><td>USB</td><td>1080p</td><td>33.75</td><td>30</td><td rowspan="2">Side by Side(Half), Top & Bottom, Checker Board, MPO(Photo), JPS(Photo)</td></tr>
<tr><td>DLNA</td><td>1080p</td><td>33.75</td><td>30</td></tr>
<tr><td></td><td colspan="3">Signal</td><td>Playable 3D video format</td></tr>
<tr><td>DTV</td><td colspan="3">Frame Compatible</td><td>Side by Side(Half), Top & Bottom</td></tr>
</table>

<table>
<tr><th colspan="5">3D supported mode manually</th></tr>
<tr><th rowspan="2">Input</th><th colspan="3">Signal</th><th rowspan="2">Playable 3D video format</th></tr>
<tr><th>Resolution</th><th>Horizontal Frequency (kHz)</th><th>Vertical Frequency (Hz)</th></tr>
<tr><td>DTV</td><td>HD / SD</td><td>-</td><td>-</td><td rowspan="4">2D to 3D, Side by Side(Half), Top & Bottom</td></tr>
<tr><td>ATV(CVBS)</td><td>SD</td><td>-</td><td>-</td></tr>
<tr><td>Component</td><td>HD / SD</td><td>-</td><td>-</td></tr>
<tr><td rowspan="4">HDMI-PC</td><td>1024X768</td><td>48.36</td><td rowspan="3">60</td></tr>
<tr><td>1360X768</td><td>47.71</td></tr>
<tr><td>1920X1080</td><td>67.5</td><td>2D to 3D, Side by Side(Half), Top & Bottom, Checker Board, Frame Sequential, Row Interleaving, Column Interleaving</td></tr>
<tr><td>3840X2160 (Only LA97**, LA965*, LA98**, LM96**)</td><td>54
56.25
67.5</td><td>24.00
25.00
30.00</td><td>2D to 3D, Top & Bottom(Half) Side by Side(Half)</td></tr>
<tr><td>Others</td><td>-</td><td>-</td><td>2D to 3D, Side by Side(Half), Top & Bottom</td></tr>
<tr><td rowspan="11">HDMI-DTV</td><td>480P</td><td>31.5</td><td>60</td><td rowspan="4">2D to 3D, Side by Side(Half), Top & Bottom, Checker Board, Frame Sequential, Row Interleaving, Column Interleaving</td></tr>
<tr><td>576P</td><td>31.25</td><td>50</td></tr>
<tr><td rowspan="2">720p</td><td>37.5</td><td>50</td></tr>
<tr><td>45</td><td>60</td></tr>
<tr><td rowspan="2">1080i</td><td>28.12</td><td>50</td><td rowspan="2">2D to 3D, Side by Side(Half), Top & Bottom</td></tr>
<tr><td>33.75</td><td>60</td></tr>
<tr><td rowspan="6">1080p</td><td>27</td><td>24</td><td rowspan="3">2D to 3D, Side by Side(Half), Top & Bottom,Checker Board, Row Interleaving, Column Interleaving</td></tr>
<tr><td>28.12</td><td>25</td></tr>
<tr><td>33.75</td><td>30</td></tr>
<tr><td>56.25</td><td>50</td><td rowspan="2">2D to 3D, Side by Side(Half), Top & Bottom, Checker Board, Frame Sequential, Row Interleaving, Column Interleaving</td></tr>
<tr><td>67.5</td><td>60</td></tr>
<tr><td>2160p (Only LA97**, LA965*, LA98**, LM96**)</td><td>53.95
54
56.25
61.43
67.5</td><td>23.976
24.00
25.00
29.970
30.00</td><td>2D to 3D, Top & Bottom(Half), Side by Side(Half)</td></tr>
<tr><td rowspan="4">USB ,DLNA (Movie)</td><td>Under 704x480</td><td>-</td><td>-</td><td>2D to 3D</td></tr>
<tr><td>Over 704x480 interlaced</td><td>-</td><td>-</td><td>2D to 3D, Side by Side(Half), Top & Bottom</td></tr>
<tr><td rowspan="2">Over 704x480 progressive</td><td>-</td><td>50 / 60</td><td>2D to 3D, Side by Side(Half), Top & Bottom,Checker Board, Frame Sequential, Row Interleaving, Column Interleaving</td></tr>
<tr><td>-</td><td>others</td><td>2D to 3D, Side by Side(Half), Top & Bottom,Checker Board, Row Interleaving, Column Interleaving</td></tr>
</table>

3D supported mode manually				
Input	Signal			Playable 3D video format
	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	
USB, DLNA (Photo)	Under 320x240	-	-	2D to 3D
	Over 320x240	-	-	2D to 3D, Side by Side(Half), Top & Bottom
Miracast/Widi	1024X768p	-	30 / 60	2D to 3D, Side by Side(Half), Top & Bottom
	1280x720p	-	30 / 60	
	1920X1080p	-	30 / 60	
	Others	-	-	2D to 3D

LG
Life's Good

Please contact LG First.
If you have any inquiries or comments,
please contact LG customer information centre.

LG Customer Information Centre			
Country	LG Service	Country	LG Service
Österreich	0 810 144 131	Nederland	0900 543 5454
België	015 200 255	Norge	800 187 40
Luxembourg	0032 15 200 255	Polska	801 54 54 54
България	07001 54 54	Portugal	808 78 54 54
Česká Rep.	810 555 810	România	031 228 3542
Danmark	8088 5758	Slovensko	0850 111 154
Suomi	0800 0 54 54	España	963 050 500
France	3220 dites LG ou tapez 54	Sverige	0770 54 54 54
Deutschland	01806 11 54 11 (0,20€ pro Anruf aus dem Festnetz der DTAG; Mobilfunk: max. 0,60€ pro Anruf)	Schweiz	0848 543 543
Ελλάδα	801 11 200 900, 210 4800 564	United Kingdom	0344 847 5454
		Россия	8 800 200 7676
Magyarország	06 40 54 54 54	Eesti	800 9990
Éire	01 686 9454	Украина	0 800 303 000
Italia	199600099	Казахстан	8 8000 805 805, 2255(GSM)
Беларусь	8 820 0071 1111		
Latvija	80200201	Узбекистан	8 800 120 2222
Lietuva	880008081	Кыргызстан	8 0000 710 005
www.lg.com			

Record the model number and serial number of the TV.
Refer to the label on the back cover and quote this information to your dealer when requiring any service.

MODEL _____

SERIAL _____

DVB
Digital Video Broadcasting