Additional Information

Specification

Power consumption	Refer to the main label.
AC adapter	• Model : DA-38A25 • Manufacturer : Asian Power Devices Inc. • Input : 100 - 240 V ~ 50 - 60 Hz • Output : 25 V ⎓ 1.52 A
	• Model : MS-Z1520R250-038A0-P • Manufacturer : MOSO POWER SUPPLY TECHNOLOGY CO., LTD. • Input : 100 - 240 V ~ 50/60 Hz • Output : 25 V ⎓ 1.52 A
Dimensions (W x H x D)	Approx. 890.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS Output power)	300 W RMS

Design and specifications are subject to change without notice.

LG
Life's Good

ENGLISH

SIMPLE MANUAL

Wireless Sound Bar


Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit
http://www.lg.com and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL

SL4

MFL71380138
2105_Rev01

www.lg.com
Copyright © 2021 LG Electronics Inc. All Rights Reserved.

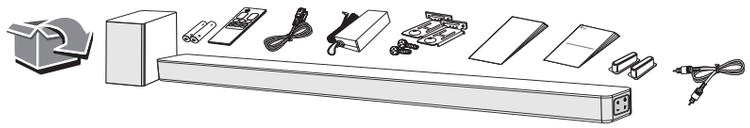


Front Panel



⏻ (Standby) ····· Switches the unit ON or OFF.
F (Function) ····· Selects function.
—/+ (Volume) ····· Adjusts volume.

Rear Panel

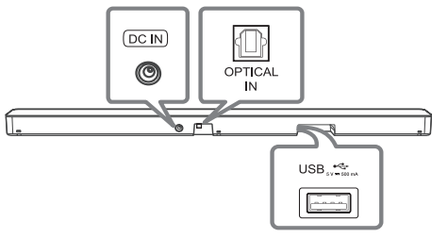

DC IN ····· Connect to the AC adapter.
OPTICAL IN ····· Connect to an optical device.
USB Port ····· Connect to a USB device.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.


1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
2. Turn on the sound bar.
   - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's yellow - green LED turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.


1. Press **PAIRING** on the rear of the wireless subwoofer.
   - The yellow - green LED on the front of the wireless subwoofer blinks quickly. (If the yellow - green LED does not blink, press and hold the **PAIRING**.)
2. Turn on the sound bar.
   - Pairing is completed. The yellow - green LED on the front of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

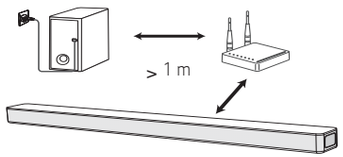


TV Connection

1. Connect the sound bar to the TV using Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.

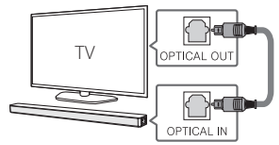


Additional Device Connection

1. Connect to the external device like as follow.

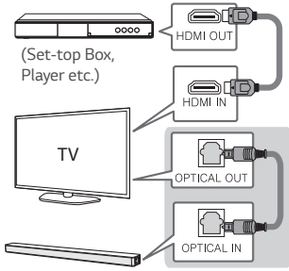


2. Set the input source by pressing **F** repeatedly.

Remote control

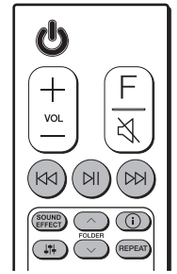

Replacement of Battery

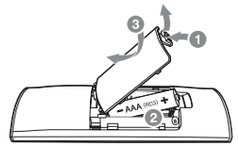

⏮/⏭: Skip/Search
⏯: Play/Pause
- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press ⏯ and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.
- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ∧/∨**:** Searches a folder.
ⓘ**:** Displays the information of a file, an input source or connected **Bluetooth** device name.
- **Auto Power ON/OFF:** Long press ⓘ and press it again.

🎚**:** Adjusts sound level of each speaker.
REPEAT: Listens to your files repeatedly or randomly.