


SEC. WORK	가	나	다	PRINTING DEGREE		MATERIAL AND PRINTING DESCRIPTION	LG MODEL	SUFFIX	LANGUAGE	PAGE	REMARK
	BRAND	MODEL	P/NO.	EXTERIER	INTERIER						
60	LG	F8K5XNK3 F8K5XNK4	MFL69962060	1	1	표지 : 모조지 150g OFFSET 인쇄 속지 : 모조지 80g OFFSET 인쇄	F8K5XNK3 F8K5XNK4	ELF	EN+AR	84	W-module (W)

## &lt;&lt; 주기 &gt;&gt;

- 재질 : 모조지 80g
- 인쇄 작업
  - G/S(LG) BRAND(FIG1): \* 표지 – 1도 : LG RED PANTONE #207  
– 2도 : LG GRAY PANTONE #430  
\* 내지 – 1도 : BLACK
  - OEM BRAND(FIG2) : \* 표지 – 1도 : BLACK  
\* 내지 – 1도 : BLACK
- 문자의 크기 및 형상은 주어진 FILM에 준한다.
- 책자의 크기는 일반적 규격(국판)에 준한다.
- 양산 전에 설계 한도를 득할것.
- 유해물질 관리 기준  
:본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501-34를  
만족할 것.

## &lt;&lt; NOTES &gt;&gt;

- Material : Vellum paper
- Print work
  - G/S(LG) BRAND(FIG1) : \* Cover – First color : LG Red Pantone #207  
– Second color : LG GRAY PANTONE #430  
\* Inside – First color : Black
  - OEM BRAND(FIG2) : \* Cover – First color : Black  
\* Inside – First color : Black
- Printing, text size and line are based on LG designing film.
- Size will Follow the standard.
- Before product controlled by criteria sample.
- Standard of supervision for hazardous material  
: The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB,PBDE)  
and details should comply with LG standard of LG(63)-A-5501-34.

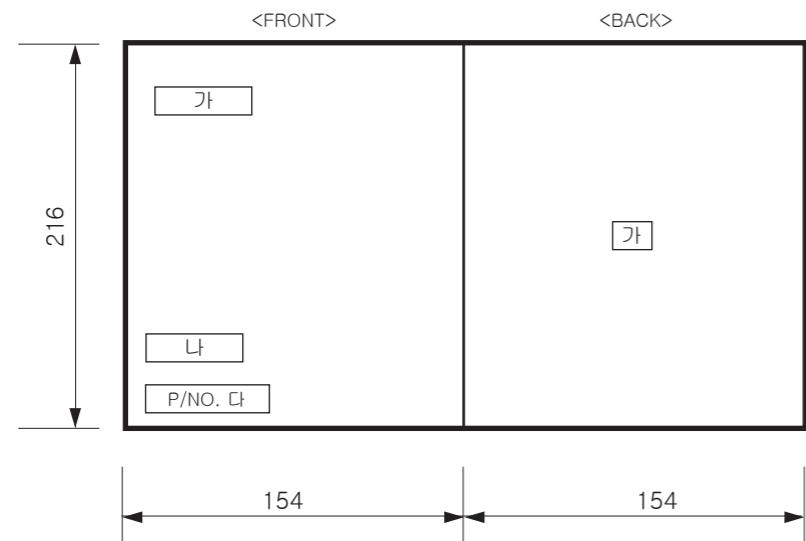

DR COMPLETED  
도면 DR 완료  
완료일 : 16.09.19

TRIG.	UNIT	mm	SCALE	1/1	T I T L E	DWG. No.	MANUAL, OWNER'S	
MODELING	DESIGNED	REVIEWED	CHECKED	APPROVED			LG 전자 (주)	
							RELATED DWG.	
※	주연수 18.01.30	※	이갑선 18.01.30	김남철 18.01.30			LG Electronics Inc.	

W-module(W) 1/1

MFL69962060

△	친환경 문구 추가	EAGI200023	18/02/01	주연수	김남철
△					
△					
△					
REV. NO. 기호	REVISION DESCRIPTION 변경 사항	REF. NO. 시방 번호	DATE 년/월/일	PREPARED 시방자	APPROVED 승인자



## OWNER'S MANUAL

# WASHING MACHINE



**Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.**

**EN ENGLISH**

F8K5XNK3  
F8K5XNK4



MFL69962060  
Rev.01\_020118

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

[www.lg.com](http://www.lg.com)



# TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

<b>SAFETY INSTRUCTIONS .....</b>	<b>4</b>
IMPORTANT SAFETY INSTRUCTIONS .....	4
Disposal of Your Old Appliance .....	9
<b>INSTALLATION .....</b>	<b>10</b>
Parts .....	10
Accessories .....	11
Specifications .....	11
Installation Place Requirements .....	12
Stacking Mini Washer .....	13
Connecting the Supply Hose .....	15
Installing the Drain Hose .....	17
Leveling the Appliance .....	18
<b>OPERATION .....</b>	<b>19</b>
Using the Appliance .....	19
Sorting Laundry .....	20
Closing the Door and Drawer .....	21
Adding Cleaning Products .....	22
Control Panel .....	24
Programme Table .....	25
Option Programme .....	26
<b>SMART FUNCTIONS .....</b>	<b>27</b>
Using SmartThinQ Application .....	27
Using Smart Diagnosis™ .....	29
<b>MAINTENANCE .....</b>	<b>30</b>
Cleaning the Washing Machine .....	30
Cleaning the Drum .....	31
Cleaning the Water Inlet Filter .....	31
Cleaning the Lint Filter .....	32
Caution on Freezing During Winter .....	32
<b>TROUBLESHOOTING .....</b>	<b>34</b>
Diagnosing Problems .....	34
Error Messages .....	38

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



## WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



## CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

## IMPORTANT SAFETY INSTRUCTIONS



### WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

#### Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be installed and transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, or rain or temperatures below freezing.
- Tighten the drain hose at connecting ends to avoid separation.

- If the power cord is damaged or the hole of the outlet socket is loose, do not use the power cord and contact an authorized service centre.
- This appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.
- This appliance must be grounded (earthed via the power cord). In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor (earthing pin) and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the power plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

## Operation

- The Mini Washer is suitable for COLD wash operation only.
- Do not use a sharp object like drill or pin to penetrate, modify or disassemble the unit.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Use a new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Do not reach into the appliance if the tub or agitator is moving.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not put animals, such as pets into the appliance.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, vegetable oil, cooking oil, etc.). Improper use can cause a fire or explosion.
- In case of flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Do not push down the drawer excessively, when the appliance drawer is open.

- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the appliance.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- When pulling out the power plug from an outlet, hold the power plug, not the cable.
- Do not bend the power cable excessively or place a heavy object on it.
- If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately.
- Do not instal the Mini Washer on top of another Mini Washer or Pedestal or elevated surface or stand.
- To avoid breaking the door glass, do not push too hard on the door when closing.
- Do not step on Mini Washer.
- The Mini Washer is designed to wash lightly soiled and delicate items and should not be used to wash normally soiled clothes or other items such as sheets, towels, rugs, jeans, and pet blankets.
- This appliance must only be used for domestic household purposes and should not be used in mobile applications.
- Do not open or close the door by foot.

## Maintenance

- Securely plug the power plug in the socket outlet after completely removing any moisture and dust.
- Disconnect the power cord before cleaning the appliance.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the socket outlet.
- Do not spray water inside or outside the appliance to clean it.

## Disposal


- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

## Disposal of Your Old Appliance



- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## Parts

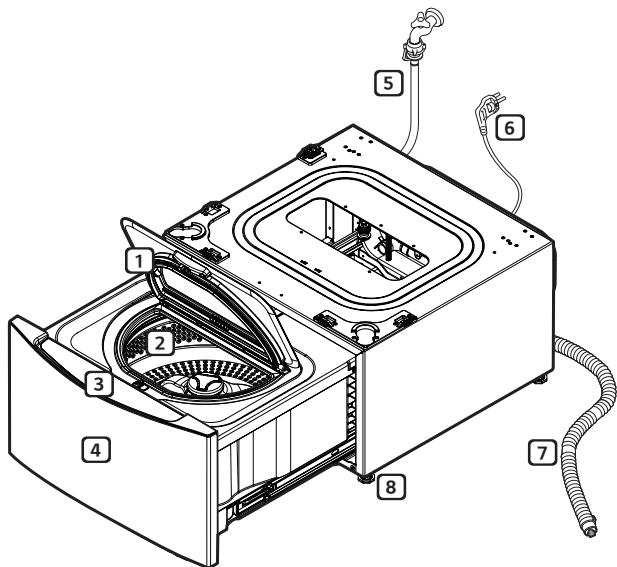

1 Door

5 Water Supply Hose

2 Drum

6 Power Plug

3 Control Panel

7 Water Drain Hose

4 Drawer

8 Leveling Feet

## Accessories



Water supply hose  
(for cold water)




Connecting supply hose



Water drain hose



Water supply hose connector

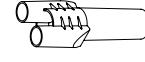

Water drain hose connector



Anti-slip sheets  
(2 EA)



Detergent measuring cup




Brackets (front)  
(2 EA)



Brackets (back)  
(2 EA)



Spanner

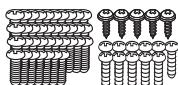

\* Screws  
Type A (37 EA)  
Type B (5 EA)  
Type C (11 EA)



Cable ties  
(2 EA)



Band clamps  
(3 EA)



Remote control  
(some models only)

\* Type A : long sheet metal screw, Type B : short sheet metal screw, Type C : machine screw

### NOTE

- Different accessories may apply to each model.
- Depending on the installation environment, you may have to purchase a separate drain hose connector. The connector supplied will suit a standard laundry drum side drain hole.
- In addition to the screws required for installation, some extra screws have been provided.


## Specifications

Power supply	220 - 240 V~, 50 Hz
Size	600 mm (W) X 700 mm (D) X 365 mm(H)
Product weight	43 kg
Permissible water pressure	0.1 - 0.8 Mpa (1.0 - 8.0 kgf / cm <sup>2</sup> )
Wash capacity	2 kg

- Appearance and specifications may change without notice to improve the quality of the product.

# Installation Place Requirements

## Location

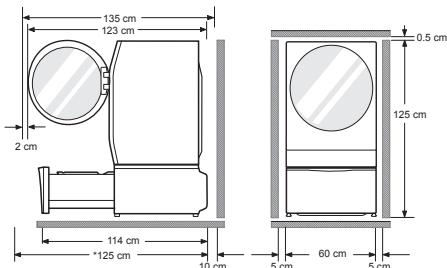

\*125 cm: minimum space for installation

**Level floor** : Allowable slope under the entire appliance is 1°.

**Power outlet** : Must be within 1.5 meters of either side of the location of the appliance.

- Do not overload the outlet with more than one appliance.

**Additional Clearance** : 5 cm at the sides and 10 cm behind the unit.

- Do not place or store laundry products on top of the appliance at any time. These products may damage the finish or controls.

### ⚠ WARNING

- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

## Positioning

- Install the appliance on a flat hard floor. Then, level the Mini Washer before placing the Main washer on top. Lock only the rear feet of the Mini washer after leveling as the two front feet may need readjusting after the Main Washer has been placed on top.
- Make sure that air circulation around the appliance is not impeded by carpets, rugs, etc.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the appliance.
- If it is impossible to avoid positioning the appliance next to a gas cooker or coal burning stove, an insulation (85x60 cm) covered with aluminum foil on the side facing the cooker or stove must be inserted between the two appliances.

- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.

- With the appliance installed, adjust all four feet using a transit bolt spanner to ensure the appliance is stable, and a clearance of approximately 5 mm is left between the top of the appliance and the underside of any work-top.

- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.

- Do not use a drip pan as it can block the drawer. Using the drip pan may result in increased vibration and noise during operation.


### ⚠ WARNING

- This appliance is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc.

## Electrical Connection


- Do not use an extension cord or double adapter.
- Always unplug the appliance and turn off the water supply after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.
- Repairs to the appliance must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact an authorised LG repairer.

## Stacking Mini Washer

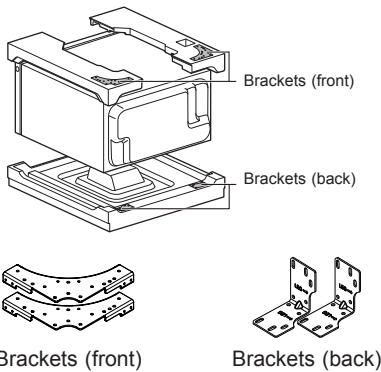

- The **E7** error message appears on the display, if the stacking holder is not attached to the bottom of the Main Washer.

### 1 Tilt and hold Main Washer.

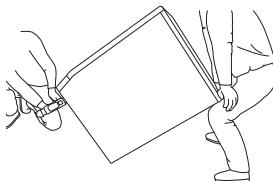


### 2 Assemble the front brackets and stacking holder at the bottom of Main Washer.

#### NOTE

- The stacking holder and screws needed for assembly are enclosed in the Main Washer, which must be stacked with this Mini Washer.
- If the Main Washer already has a stacking holder, do not install the stacking holder provided with the Mini Washer.


#### Type 1. Where the bottom part of the Main Washer is silver in color.

- First assemble the stacking holder using 2 type A screws included in the accessory box of the Mini Washer, then each bracket using 7 type A screws included in the accessory box of the Mini Washer.

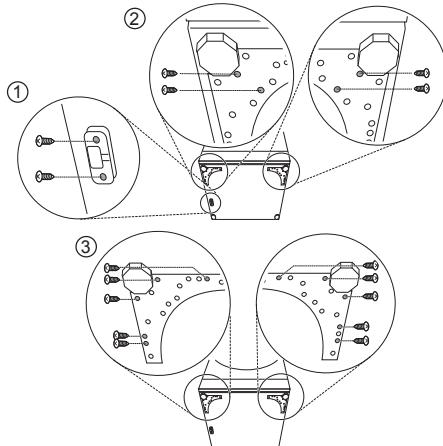


#### Type 2. Where the bottom part of the Main Washer is white in color.

- First assemble the stacking holder using 2 type C screws included in the accessory box of the Main Washer, then each bracket using 4 type C screws included in the accessory box of the Mini Washer.

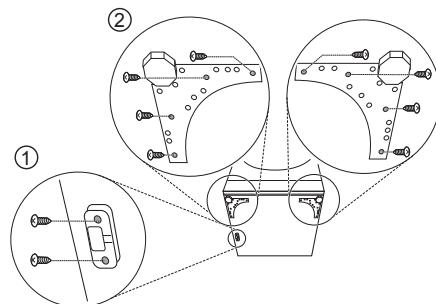

- 3** Pull and save the foam block for future use.
- If the washing machine must be moved in the future, the foam block will help prevent damage to the washing machine during transportation.

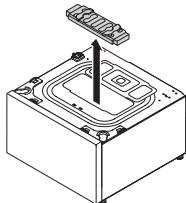


**NOTE**


- To prevent damage, do not remove the foam block until Mini Washer is at the final location.

- 4** Rotate the top cover 180 degrees.

Cover the upper hole with the top cover and install 4 type B screws to fix it in place.

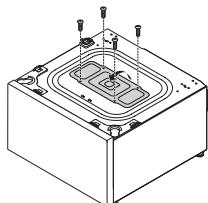


- 5** Attach the two back brackets on the rear top of the Mini Washer by inserting 4 type A screws in each bracket.

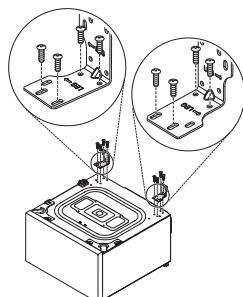

- 6** Carefully place the Main Washer on top of Mini Washer.

- Make sure the 4 legs are totally wound in and the holes of Mini Washer align with the holes of Main Washer.

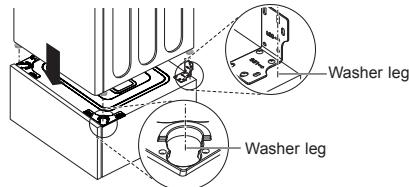


- 7** Securely attach the two appliances at the corners using 14 type A screws.


- First, insert screws on each side. Then insert screws on the front and back side.

**NOTE**

- It can be difficult to assemble if it is not assembled in the proper order.
- Use two type C screws to assemble the stacking holder.

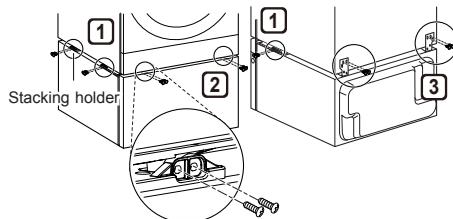

- 8** Turn the feet of the Main Washer slightly until they are firmly snug up against the Mini Washer.

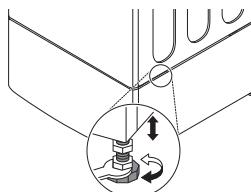

**NOTE**



- Mini Washer will not work as a standalone unit.

## Connecting the Supply Hose

- Water supply pressure must be between 0.1 MPa and 0.8 MPa (100 ~ 800kPa).
- Do not overtighten the water supply hose.
- If the water supply pressure is more than 0.8 MPa, a decompression device should be installed.
- Periodically check the condition of the hose even after installation and replace the hose if necessary.
- Contact the service centre if there is no rubber seal fitted to the hose ends.

## Checking the Rubber Seal on the Supply Hose


Two rubber seals are supplied with the water supply hoses. They are used for preventing water leaks. Make sure the connection to taps is sufficiently tight. Do not use mechanical devices such as multi grips to tighten the inlet hoses.

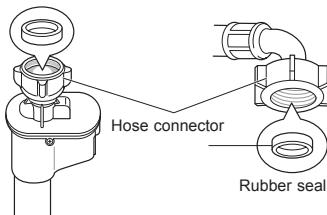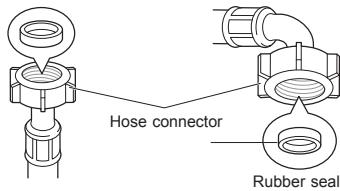

## Connecting Hose to Water Tap


### Connecting Screw-Type Hose to Tap with Thread

Screw an inlet hose of the Main washer to the COLD water supply tap.

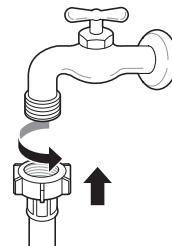


## Connecting Hose to Two Washing Machines


- 1 Connect one end of the cold water supply hose connector to the cold water supply hose of the Main Washer first. Open the accessory package for the Mini Washer installation accessories.

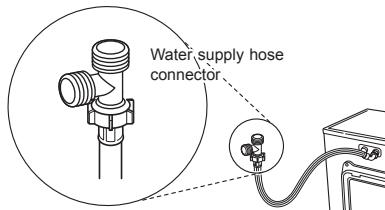

- 2 Connect the water supply hose of Mini Washer to the COLD water supply hose connector.

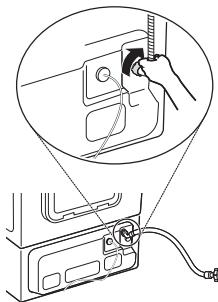

- 3 Connect the additionally provided water supply hose of Main Washer to the cold water supply hose connector and cold water tap.

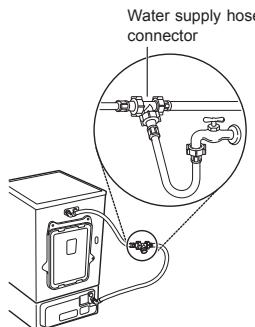


### NOTE

- Make sure the water supply hose is not kinked or pinched.


## Installing the Drain Hose

- The drain hose should not be placed higher than 100 cm above the floor. Water in the appliance may not drain or may drain slowly.


- Insert the band clamp onto the drain hose elbow. Pliers may be required to open the clamp so it can be fitted to the rubber end of the hose.

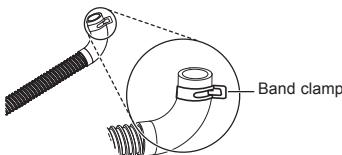

- With the hose leading up from the elbow, firmly insert the elbow onto the drain outlet on the back of Mini Washer.

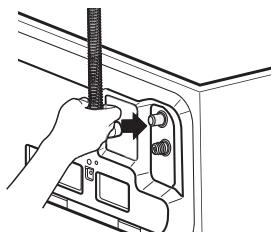


- Adjust the band clamp with pliers to keep the hose securely in place and prevent leaking.

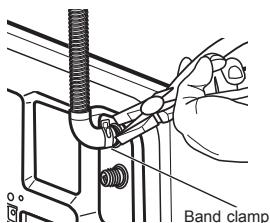

## Using the Drain Hose Connector

- Connect the drain hose of Main Washer and Mini Washer to the drain connector.
- Insert the included band clamps on to the ends of the two drain hoses.
- Push the drain hoses firmly onto the drain connector.

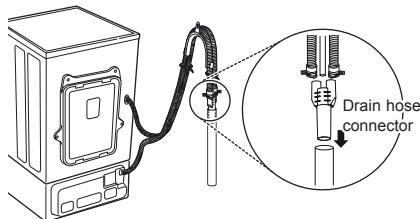

### CAUTION

- Adjust the band clamps to prevent the hoses from coming loose or leaking. Failure to do so could result in flooding. Use of the drain connector helps avoid siphoning, odors, or improper draining.
- Make sure the drain hoses are not kinked or pinched. This is a potential cause of drainage problems or noise.


### NOTE

- Depending on the installation environment, you may have to purchase a separate drain hose connector. The connector supplied will suit a standard laundry tub side drain hole.

## Leveling the Appliance

If the floor is uneven, turn the adjustable feet as required (Do not insert pieces of wood etc. under the feet). Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (Use a spirit level).

- Once the appliance is level, tighten the lock nuts up towards the base of the appliance. All lock nuts must be tightened.

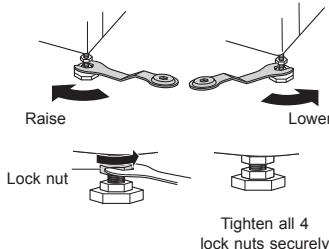

### Diagonal Check

- When pushing down on the edges of the top plate diagonally, the appliance should not move up and down at all (check both directions). If the appliance rocks when pushing the machine top plate diagonally, adjust the necessary foot or feet again.

### ! WARNING

- After stacking the Main Washer on to the Mini Washer, use the leveling feet on Mini Washer to level both. Main Washer's leveling feet should be already be firmly snug against the Mini Washer and the locknuts turned counter-clockwise to secure them.



### NOTE

- Timber or suspended type flooring will contribute to excessive vibration and unbalance. Reinforcement or bracing of the timber floor may need to be considered to stop or reduce excessive noise and vibration.

## Using Anti-Slip Sheets (Optional)

If you install the appliance on a slippery surface, it may move because of excessive vibration. Incorrect leveling may cause malfunction through noise and vibration. If this occurs, install the anti-slip sheets under the leveling feet and adjust the level.

- Clean the floor to attach the anti-slip sheets.
  - Use a dry rag to remove and clean foreign objects and moisture. If moisture remains, the anti-slip sheets may slip.
- Adjust the level after placing the appliance in the installation area.
- Place the adhesive side of the anti-slip sheets on the floor.
  - It is most effective to install the anti-slip sheets under the front feet. If it is difficult to place the pads under the front feet, place them under the back feet.

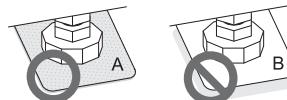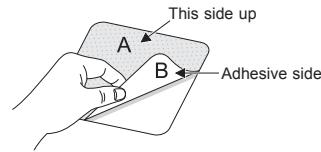

- Ensure the appliance is level.
  - Push or rock the top edges of the appliance gently to make sure that the appliance does not rock. If the appliance rocks, level the appliance again.


### NOTE

- You can obtain anti-slip sheets from an LG Service Centre or a Hardware store.

## Using the Appliance

### 1 Sort laundry and load items.

- Sort laundry by fabric type, soil level, colour and load size as needed. Open the door and load items into the washing machine.
- This appliance is not suitable for heavy or normal soiled laundry.

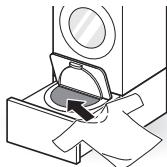

### 2 Add cleaning products.


- Add the proper amount of detergent with the detergent measuring cup to the washing drum evenly.



### 3 Closing the door and drawer.

### 4 Turn on the washing machine.

- Press the **Power** button to turn on the washing machine.

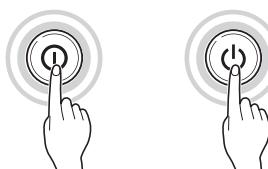

### 5 Choose the desired washing cycle.

- Press the cycle button repeatedly until the desired cycle is selected.



### 6 Begin cycle.

- Press the **Start/Pause** button to begin the cycle. The Mini washer will agitate briefly without water to measure the weight of the load. If the **Start/Pause** button is not pressed within 15 minutes, the washing machine will shut off and all settings will be lost.



### 7 To Add softener.


- The Mini Washer will chime during the final rinse for approximately 20 seconds. When this occurs, press the Start/Pause button, then slide open the drawer and open the Lid to manually add the softener, and then after closing the lid and drawer, press **Start/Pause** to resume the cycle. If no attempt is made to add softener, the machine will automatically continue to wash 30 seconds after the chime has finished sounding.

### 8 End of cycle.

- When the cycle is finished, another melody will sound. Immediately remove your clothing from the washing machine to reduce wrinkling and odors.
- After washing is complete, wipe off the washing machine door, gasket and inside the washing drum with a soft dry towel for clean washing.

## Sorting Laundry

- 1 Look for the care label on your clothes.
- This will tell you about the fabric content of your garment and how it should be washed.
  - Symbols on the care labels.

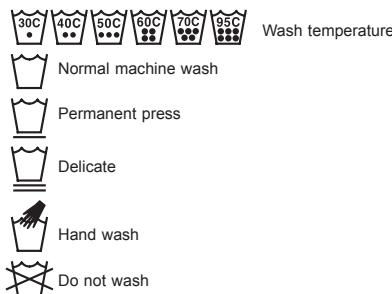

### 2 Sorting laundry.

- To get the best results, sort clothes into loads that can be washed with the same wash cycle.
- Different fabrics need to be washed at varying temperatures and spin speeds.
- Wash two or more towels or knits together. If washed separately, laundry which absorbs a lot of water may not be washed well or abnormal spin-drying may occur due to an unbalanced load.
- Always sort dark colours from pale colours and whites. Wash separately as dye and lint transfer can occur causing discolouration of white and pale garments. The Mini Washer is not designed to wash normal or heavily soiled items and should be used to wash lightly soiled and special care items only. The maximum load capacity is 2kg.

- Colour (White, Lights, Dark): Separate white fabrics from coloured fabrics.
- Lint (Lint producers, Collectors): Wash lint producers and lint collectors separately.

### 3 Caring before loading.

- Do not wash items that contain support or memory wire such as Bras as it may damage other clothes as well as the washing machine and cause noise and vibration.
- Check all pockets to make sure that they are empty. Items such as nails, hair clips, matches, pens, coins and keys can damage both your washing machine and your clothes.




- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.
- Pre-treat dirt and stains by brushing a small amount of detergent dissolved water onto stains to help lift dirt.
- If an item of clothing has a long lace attached to it, arrange the lace so it cannot be tangled or put it into a washing net.
- Remove the insides of cushions, pillows, or sitting mats and only wash the cover. The insides may protrude, damaging other laundry. Plastic parts may generate abnormal vibrations.

### ⚠ CAUTION

- Do not wash normal or heavily soiled loads and loads over 2kg. The clothes should be submerged in water during the wash for best results. If laundry expands during washing, it may cause damage to the wash load and to the washer's parts during washing or spin.

## Closing the Door and Drawer

- 1 Gently push down on the Mini Washer's Lid until it clicks.

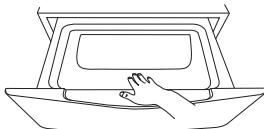

- 2 Push the drawer in until it has completely closed.

### **⚠ CAUTION**

- Do not let your hands get stuck between the door and the washing machine, as this can cause injury.
- Forcing the drawer or the Lid to open can cause parts to be damaged and safety problems.
- Closing the drawer before having closed the Lid completely may scratch the Lid glass.
- Ensure the drawer is pulled out completely to prevent the Lid from contacting the front of the upper Main washing machine.

### NOTE

- The Lid lock may fail if there is too much laundry in the machine or if the Lid is not completely closed.
- If the product is operating or the drawer lock  indicator is displayed, the drawer cannot open. To open the drawer, press the **Start/Pause** button to stop the washer, and when the drawer lock  indicator disappears, open the drawer. Do not force the drawer or the glass Lid open.
- If , ,  warning appears on the display, close the drawer and the Lid completely. After doing so, press the **Start/Pause** button again.
- If the drawer cannot be opened completely, pull the drawer forward with a little force using both hands.
- If power failure occurs during product operation, the door cannot be opened. Restore the power again or contact the LG service centre.
- The Lid may not open due to high ambient temperatures, if this occurs after a wash and there are no error codes on the display, select the Rinse+Spin programme or wait until temperatures drop so that the Lid can be released.


## Adding Cleaning Products

### Detergent Dosage

- Detergent should be used according to the instruction of the detergent manufacturer and selected according to type, colour, soiling of the fabric and washing temperature.
- If too much detergent is used, too many suds can occur and this will result in poor washing results or cause heavy load to the motor.
- If you wish to use liquid detergent follow the guidelines provided by the detergent manufacturer. We recommend the use of low sudsing Front loader detergent for use in this Mini Washer.
- If too many suds occur, reduce the detergent amount.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.
- Refer to the label of the clothes, before choosing the detergent and water temperature.
- When using the washing machine, use designated detergent for each type of clothing only:
  - General powdered detergents for all types of fabric
  - Powdered detergents for delicate fabric
  - Liquid detergents for all types of fabric or designated detergents only for wool
- For better washing performance and whitening, use detergent with the general powdered bleach.

### Adding Detergent

Measure the detergent with the detergent dispenser and pour it into the tub.

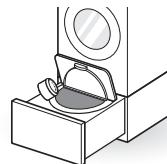

- Use the provided detergent measuring cup to add only one cup of detergent.
- Less detergent is required for lightly soiled items. Please use appropriate amount of detergent in the Mini Washer. If you use too much detergent, excessive bubbles will remain after rinsing.

## Adding Softeners

### Adding Fabric Softener

#### CASE 1. When the machine chimes:

- 1 Press **Start/Pause** to pause the cycle.
    - It can be paused by pressing the **Start/Pause** button of the Mini Washer or by using the remote control.
  
  - 2 Slide open the drawer, open the door, and add the liquid fabric softener.
  
  - 3 Close the door, slide the drawer closed, and press **Start/Pause** to restart the cycle.
- 
- #### NOTE
- To disable or enable the fabric softener alert, press and hold the **Extra Rinse** button for three seconds.
  - The fabric softener can be added within 30 seconds after the chime has sounded.
- 
- #### CASE 2. If you miss the softener add point:
- 1 Press the **Power** button to interrupt the cycle.
  
  - 2 Slide open the drawer, open the door, and add the liquid fabric softener.
  
  - 3 Close the door, Slide the drawer, and select the **Rinse+Spin** programme.
  
  - 4 Press the **Start/Pause** to restart the cycle.

#### NOTE

- Do not pour fabric softener directly on the clothes.
- The softener can also be diluted with water and added directly into the drum. Do not pour undiluted softener directly onto clothing as it may stain fabrics.


## Adding Water Softener

- A water softener, such as anti-limescale (e.g. Calgon) can be used to cut down on the use of detergent in extremely hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.
- Use the quantity of detergent required for soft water.

### ⚠ CAUTION

- Do not directly pour bleach on to the clothes. This may cause partial discolouration and severe damage to the load.
- Do not use chlorine bleach or acidic cleaner when washing the laundry, as it can cause damage to clothes such as discolouration of the clothes.

## Control Panel

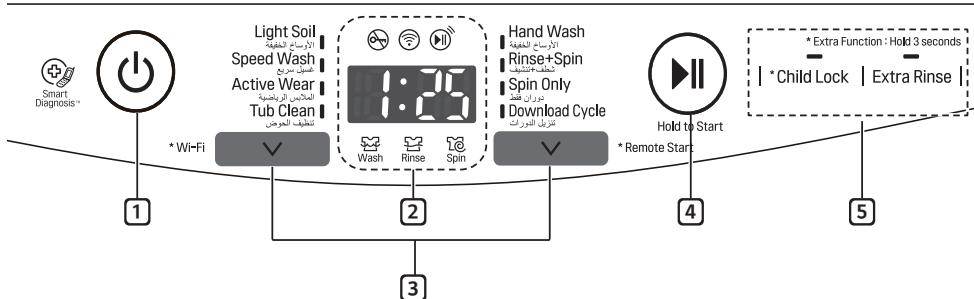

### 1 Power Button

- Press the **Power** button to turn the washing machine on, or off if washing hasn't commenced.

### 2 Display

- The display shows the cycle status and estimated time remaining.
- ⌚: Drawer lock indicator
- ⓘ: Wi-Fi connect indicator
- ⓘ: Remote start indicator

### 3 Programme Button

- Programmes are available according to laundry type.
- In order to use the Download Cycle function, refer to SMART FUNCTIONS.

### 4 Start/Pause Button

- The **Start/Pause** button is used to start the wash cycle or pause the wash cycle.
- If a temporary stop of the wash cycle is needed, press the **Start/Pause** button.

### NOTE

- If you do not press the **Start/Pause** button within 15 minutes of selecting a programme, the washing machine automatically turns off and all cycle settings are lost.

### 5 Options

- Use these buttons to select the desired options for the selected programme. For more information about the options for the each programme, please refer to Extra Options.
- The setting indicator lights above the buttons will illuminate to show the current selection.

## Programme Table

### Washing Programme (All programmes are cold water only)

Programme	Description	Note	Maximum Load
Light Soil	Use this programme to wash lightly soiled normal items, except delicate fabrics such as wool or silk.	<ul style="list-style-type: none"> <li>Pressing the <b>Start/Pause</b> button without selecting a programme will cause the Normal programme to begin immediately using the default settings.</li> </ul>	2.0 kg
Speed Wash	Use this programme to speed up the washing time for small loads and lightly soiled clothes.	<ul style="list-style-type: none"> <li>Use very little detergent in this programme.</li> </ul>	1.5 kg
Active Wear	Use this programme to wash performance garments that are specially designed and treated for sports.	<ul style="list-style-type: none"> <li>Use 1/2 the amount of detergent recommended by the manufacturer for a normal load.</li> <li>Do not wash white or brightly colored laundry with darkly colored laundry that can discharge colors.</li> <li>It is more effective to pre-wash laundry which is stained with blood or milk briefly with cold water before carrying out main washing can remove stains more effectively.</li> <li>Bubble Removing Function: If an excessive amount of detergent is used, the bubble removing function may operate.</li> <li>Lowering Drain Temperature Function: For the safety, cold water is briefly supplied before draining to lower the water temperature.</li> </ul>	1.0 kg
Tub Clean	Use this programme to keep the drum clean by sterilizing germs within the drum.	<ul style="list-style-type: none"> <li>Select a proper type of neutral detergent such as Dish Washer powdered detergent.</li> <li>DO NOT add clothes or any other items during this function.</li> </ul>	
Hand Wash	Use this programme to wash textiles, lingerie, or fine clothes likely to shrink or deform.	<ul style="list-style-type: none"> <li>Laundry weight should be less than 1 kg to prevent damage to the fabric.</li> <li>Use only natural or wool-safe detergent safe for fabrics and load 1/2 of the normal amount of detergent.</li> <li>The <b>Hand Wash</b> programme uses a gentle wash action and low speed spin for the ultimate fabric care.</li> </ul>	1.0 kg
Rinse+Spin	Select this programme to rinse and spin a load separately from a regular cycle.	<ul style="list-style-type: none"> <li>Add fabric softener only if desired.</li> </ul>	1.5 kg

## Option Programme

### Spin Only

Use this option to spin a hand washed load that may not have been washed in the machine.

### Extra Rinse

Use this option to increase the number of rinsing programmes.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Extra Rinse** button to set the amount of Rinses required.
  - When you press the **Extra Rinse** button, the number of rinsing cycles will be displayed. (1 up to 5 extra rinses can be selected depending on the Programme)
- 4 Press the **Start/Pause** button.

### Child Lock

Use this option to disable the controls. This feature can prevent children from changing cycles or operating the appliance.

#### Locking the Control Panel

- 1 Press and hold the **Child Lock** button for three seconds.
- 2  will appear on the display. When the Child Lock is set, all buttons are locked except the **Power** button.

#### NOTE

- Turning off the power or completing all cycles will not reset the child lock function. You must deactivate child lock before you can access any other functions.

#### Unlocking the Control Panel

Press and hold the **Child Lock** button for three seconds.

- To change the cycle or option, press the **Start/Pause** button to stop operation, and then choose the cycle or option which you wish to change. Depending on the selection, the cycle may restart again.

## Using SmartThinQ Application

### Installing SmartThinQ

Search for the LG SmartThinQ application from the Google Play Store or Apple App Store on a smart phone. Follow instructions to download and install the application.

### Wi-Fi Function

- For appliances with the  or  logo

### Washer Cycle (Remote Start, Download Cycle)

Set or download any preferred cycle and operate by remote control.

### Tub Clean Coach

This function shows how many cycles remain before it is time to run the Tub Clean cycle.

### Energy Monitoring

Check the energy consumption of the recently used cycles and monthly average.

### Smart Diagnosis™

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

### Settings

Various functions are available.

### Push Alert

Turn on the Push Alerts to receive appliance status notifications. The notifications are triggered even if the LG SmartThinQ application is off.

### NOTE

- To verify the Wi-Fi connection, check that **Wi-Fi**  icon on the control panel is lit.
- LG SmartThinQ is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- The machine supports 2.4 GHz Wi-Fi networks only.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the product again.
- Router SSID, please use only letters, numbers. Other characters may not be supported.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

## Using Washer Cycle

### Remote Start

Use a smart phone to control your appliance remotely. You can also monitor your cycle operation so you know how much time is left in the cycle.

#### To Use Remote Start:

- 1 Press the **Power** button.
- 2 Put the laundry in drum.
- 3 Press and hold **Remote Start** button for 3 seconds to enable Remote Start function.
- 4 Start a cycle from the LG SmartThinQ application on your smart phone.

#### NOTE

- Once the Remote Start mode is enabled, you can start a cycle from the LG SmartThinQ smartphone application. If the cycle is not started, the machine will wait to start the cycle until it is turned off remotely from the application or the Remote Start mode is disabled.
- When Remote Start is turned on, the door is automatically locked.

#### To Disable Remote Start:

When the Remote Start is activated, press and hold **Remote Start** button for 3 seconds.

## Download Cycle

Download new and special cycles that are not included in the basic cycles on the appliance.

Appliances that have been successfully registered can download a variety of specialty cycles specific to the appliance.

Only one cycle can be stored on the appliance at a time.

Once cycle download is completed in the appliance, the product keeps the downloaded cycle until a new cycle is downloaded.

## Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

## Smart Diagnosis™ Using a Smart Phone

- For appliances with the  or  logo

Use this function if you need an accurate diagnosis by an LG Electronics customer information centre when the appliance malfunctions or fails.


Smart Diagnosis™ can not be activated unless the appliance is connected to power. If the appliance is unable to turn on, then troubleshooting must be done without using Smart Diagnosis™.

## Using Smart Diagnosis™

### Smart Diagnosis™ Through the Customer Information Centre

Use this function if you need an accurate diagnosis by an LG Electronics customer information centre when the appliance malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

- 1 Press the **Power** button after opening the drawer on Mini Washer.
- 2 When instructed to do so by the call centre, place the mouthpiece of your phone close to the Smart Diagnosis™ icon.

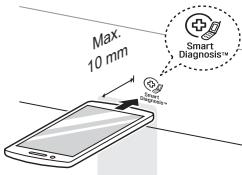

- 3 Press and hold the **Extra Rinse** button for three seconds, while holding the phone mouthpiece to the icon or **Power** button.
- 4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.
  - For best results, do not move the phone while the tones are being transmitted.
  - If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.

- 5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

#### NOTE

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.


## ⚠️ WARNING

- Unplug the washing machine before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washing machine. They may damage the finish.

## Cleaning the Washing Machine

### Care After Wash

- After the cycle is finished, wipe the door and the inside of the door seal to remove any moisture.
- Leave the door open to dry the drum interior.
- Wipe the body of the washing machine with a dry cloth to remove any moisture.

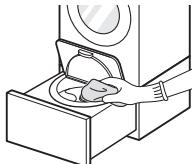

## Cleaning the Exterior

Proper care of your washing machine can extend its life.

### Door:

- Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

### Exterior:

- Immediately wipe off any spills.
- Wipe with a damp cloth.
- Do not press the surface or the display with sharp objects.

## Cleaning the Interior

- Use a towel or soft cloth to wipe around the washing machine Lid opening and when wiping the the Lid's glass.
- Always remove items from the washing machine as soon as the cycle is complete. Leaving damp items in the washing machine can cause wrinkling, colour transfer, and odour.
- Run the Tub Clean programme once a month (or more often if needed) to remove detergent buildup and other residue

## Cleaning the Drum

Use the Tub Clean option to keep the drum clean.

- 1 Press the **Power** button.
- 2 Dilute 200 ml liquid chlorine bleach in 1 ℥ of water and pour the mixture in the drum.
- 3 Select the **Tub Clean** programme.
- 4 Press the **Start/Pause** button.


### ! CAUTION

- Do not leave the machine's drawer or Lid open if there is an unsupervised child nearby.


## Cleaning the Water Inlet Filter

- Turn off the water supply tap if the washing machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
-  icon may blink on the display when the water pressure is weak or an inlet filter is clogged with dirt. Clean the inlet filter.
- The inlet filter mesh could be clogged by hard water scale, sediment in the water supply, or other debris.

- 1 Turn off the water tap and unscrew the water inlet hose.

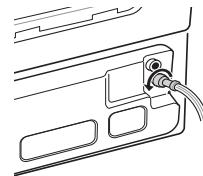


- 2 Clean the filter using a hard bristle brush.

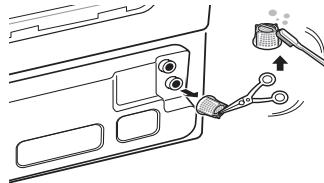


## Cleaning the Lint Filter

The Lint filter is an important part for an efficient washing performance result, so it needs special care from you. It is recommended that the filter be cleaned regularly.


- 1 Squeeze the side tabs and lift out the filter.

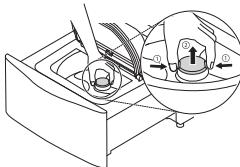

- 2 Open the cap and remove any lint before washing it

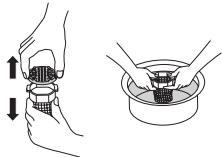

- 3 Insert the lower part of the filter into the drum and close the cap until you hear a click sound.

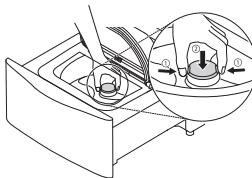

### NOTE


- When the lint filter is damaged, contact an LG service centre.
- Do not operate the washing machine without the lint filter.
- Do not leave the lint filter loosely or poorly fitted. Doing so may damage the fabrics or the washing machine.

## Caution on Freezing During Winter

- When frozen, the product does not operate normally. Make sure to install the product where it will not freeze during winter.
- In case the product must be installed outside on a porch or in other outdoor conditions, make sure to check the following.

## How to Keep the Product from Freezing

- After closing the tap, disconnect the cold supply hose from the tap, and remove water while keeping the hose facing downwards.

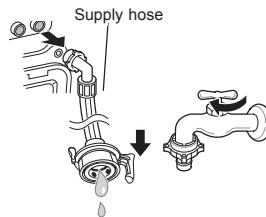

## How to Handle Freezing

### Step 1. When the Door is Frozen

- Thaw out the door using a hot water cloth.

### Step 2. When the Water Supply Hose is Frozen

-   icon may blink on the display when water supply problems occur, take the following measures.

- Take out water supply hose and connect to the tap and check that water comes from the tap and supply hose.
- Turn off the tap, and thaw out the tap and both connection areas of supply hose of the product using a hot water cloth.
- Take out supply hose and immerse in warm water below 50–60 °C.



### Step 3. When the Drain Pump is Frozen

-   icon may blink on the display when drain pump problems occur, take the following measures.

- 1 Pour 15 l warm water below 50–60 °C in the drum until washing machine wing nuts are immersed and wait for an hour.
- 2 Press the **Power** button and then run the Spin Only programme.
  - When   icon appears on the display, repeat steps 1 to 2.
- 3 When   icon appears on the display, thaw out the drain hose inner part with the hot water.

The appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If the appliance does not function properly or does not function at all, check the following before you call for service:

## Diagnosing Problems

Symptoms	Reason	Solution
The drawer does not open.	<p><b>Power failure, or the power cord was pulled out during washing.</b></p> <p>- The machine may not be level</p>	<ul style="list-style-type: none"> <li>After restoring the power again, press the <b>Power</b> button on the control panel of the Main Washer or the remote control.</li> <li><b>Ensure that the Mini Washer is leveled correctly with the use of a spirit level and checking the door symmetry for parallel lines.</b></li> </ul>
<b>Draining starts when pressing Start/ Pause button.</b>	<b>The Start/Pause button is pressed during washing.</b>	<ul style="list-style-type: none"> <li>When pressing the <b>Start/Pause</b> button during washing, the drawer is unlocked after the water is drained out for safety reasons.</li> </ul>
<b>Rattling and clanking noise</b>	<b>Foreign objects, such as keys, coins, or safety pins may be in the drum.</b>	<ul style="list-style-type: none"> <li>Stop the washing machine, check drum for foreign objects. If noise continues after washing machine is restarted, call for service.</li> </ul>
<b>Thumping sound</b>	<b>Heavy wash loads may produce a thumping sound.</b>	<ul style="list-style-type: none"> <li>If sound continues, wash load is probably out of balance. Stop and redistribute the wash load.</li> </ul>
	<b>Wash load may be out of balance.</b>	<ul style="list-style-type: none"> <li>Pause the cycle and redistribute the load after the door unlocks.</li> </ul>
<b>Vibrating noise</b>	<b>Packaging materials were not removed.</b>	<ul style="list-style-type: none"> <li>Remove packing materials.</li> </ul>
	<b>Wash load may be unevenly distributed in the drum.</b>	<ul style="list-style-type: none"> <li>Pause the cycle and redistribute the load after the door unlocks.</li> </ul>
	<b>Not all leveling feet are resting firmly and evenly on the floor.</b>	<ul style="list-style-type: none"> <li>See <b>Leveling the Appliance</b> in the <b>Installation</b> section.</li> </ul>
	<b>Floor not rigid enough.</b>	<ul style="list-style-type: none"> <li>Make sure that the floor is solid and does not flex.</li> </ul>
<b>Water leaks every load</b>	<b>Hoses not installed correctly.</b>	<ul style="list-style-type: none"> <li>Check all fill and drain hose connections to ensure that they are tight and secure.</li> </ul>
<b>Excessive sudsing</b>	<b>Too much detergent or incorrect detergent.</b>	<ul style="list-style-type: none"> <li>Reduce the amount of detergent for lightly soiled laundry. If you use too much detergent, excessive bubbles will remain after rinsing.</li> </ul>

Symptoms	Reason	Solution
Staining	<b>Clothes were not properly sorted.</b> <b>-Wrong detergents are added.</b>	<ul style="list-style-type: none"> <li>Always wash dark colors separately from light colors and whites to prevent discoloration.</li> <li>Do not mix softener and detergent together. Add softener only when the softener alert chime indicates to do so.</li> </ul>
Water leaking	<b>Supply hose connection is loose at the tap, washing machine, or drain hose connector.</b>	<ul style="list-style-type: none"> <li>Check hoses and drain hose connectors for leaks, cracks and splits.</li> <li>Tighten hose connections.</li> </ul>
	<b>House drain pipes are clogged.</b>	<ul style="list-style-type: none"> <li>The washing machine pumps out water very rapidly. Check for water backing up out of the drain pipe during drain. If water is seen coming out of the drain, check for proper drain hose installation and check for restrictions in the drain. Contact a plumber to repair the drain pipe.</li> </ul>
	<b>Drain hose has come out of drain connector or is not inserted far enough.</b>	<ul style="list-style-type: none"> <li>Tie drain hose to supply hose or standpipe to prevent it from coming out during drain. For smaller drain pipes, insert the drain hose into the pipe as far as the drain hose flange. For larger drain pipes, insert the drain hose into the pipe 2-5 cm past the flange.</li> </ul>
	<b>Load is too large for the drum.</b>	<ul style="list-style-type: none"> <li>Reduce the load or use the Main Washer.</li> <li>Stop the washing machine and check the load. Make sure the load fits loosely in the drum and the door closes easily.</li> </ul>
	<b>Oversudsing of detergent.</b>	<ul style="list-style-type: none"> <li>Oversudsing may create leaks, and may be caused by the type and amount of detergent used. Always reduce the amount of detergent if the load is small or lightly soiled, or if your water is very soft. Never use more than the maximum amount shown in the dispenser provided.</li> </ul>
Wrinkling	<b>Washing machine not unloaded promptly.</b>	<ul style="list-style-type: none"> <li>Always remove items from the washing machine as soon as the cycle is completed.</li> </ul>
	<b>Washing machine overloaded.</b>	<ul style="list-style-type: none"> <li>The washing machine can be fully loaded, but the drum should not be tightly packed with items. The door of the washing machine should close easily.</li> </ul>

Symptoms	Reason	Solution
Washing machine will not operate.	Control panel has powered off due to inactivity.	• This is normal. Press the <b>Power</b> button to turn the washing machine back on.
	Washing machine is unplugged.	• Make sure the power cord is plugged securely into a working outlet.
	Water supply is turned off.	• Turn the cold water tap fully on.
	Controls are not set properly.	• Make sure the cycle was set correctly, close the door and press the <b>Start/Pause</b> button.
	Lid or drawer is open.	• Close the Lid and drawer make sure that nothing is caught under the Lid preventing it from closing completely.
	Circuit breaker/fuse is tripped/blown.	• Check house circuit breakers/fuses. Replace fuses or reset breaker. The washing machine should be on a dedicated circuit. The washing machine will resume the cycle from where it stopped once power is restored.
	Control needs to be reset.	• Press the <b>Power</b> button, then re-select the desired programme and press the <b>Start/Pause</b> button.
	Start/Pause was not pressed after a cycle was set.	• Press the <b>Start/Pause</b> button on the control panel of the Main Washer or remote control after closing the drawer. • When using the control panel of the Mini Washer, press the <b>Start/Pause</b> button and close the drawer within 5 seconds.
	Extremely low water pressure.	• Check another tap in the house to make sure that household water pressure is adequate.
	Washing machine is too cold.	• If the washing machine has been exposed to temperatures below freezing for an extended period of time, allow it to warm up before pressing the <b>Power</b> button.

Symptoms	Reason	Solution
Washing machine is not filling properly.	Filter clogged.	<ul style="list-style-type: none"> <li>• Make sure the inlet filter on the fill valve is not clogged. Refer to the filter cleaning instructions.</li> </ul>
	Supply hoses may be kinked.	<ul style="list-style-type: none"> <li>• Check that the supply hose is not kinked or clogged.</li> </ul>
	Insufficient water supply.	<ul style="list-style-type: none"> <li>• Make sure that the cold water tap is turned on all the way.</li> </ul>
	door and drawer are open.	<ul style="list-style-type: none"> <li>• The washing machine will not operate if the lid is open. Close the lid and make sure that nothing is caught under the lid preventing it from closing completely.</li> </ul>
	Water level in the tub appears to be too low.	<ul style="list-style-type: none"> <li>• The fill level is optimized for the wash motion to achieve the best wash performance.</li> </ul>
Water in the washing machine does not drain or drains slowly.	Drain hose is kinked, pinched, or clogged.	<ul style="list-style-type: none"> <li>• Make sure the drain hose is free of blockages, kinks, etc., and is not pinched behind or under the washing machine.</li> </ul>
Poor stain removal	Heavily soiled load.	<ul style="list-style-type: none"> <li>• Use Main Washer.</li> </ul>
	Previously set stains.	<ul style="list-style-type: none"> <li>• Articles that have previously been washed may have stains that have been set. These stains may be difficult to remove and may require hand washing or pre-treating to aid in stain removal.</li> </ul>
Wash cycle time is longer than usual.	The washing machine automatically adjusts the wash time for the amount of laundry, water pressure and other operating conditions.	<ul style="list-style-type: none"> <li>• This is normal. The washing machine adjusts cycle time automatically to provide optimal results for the selected programme. The time remaining shown in the display is only an estimate. Actual time may vary.</li> </ul>
Musty or mildewy odor in washing machine	Incorrect or too much detergent has been used.	<ul style="list-style-type: none"> <li>• This machine requires very little detergent. Use the provided detergent measuring cup.</li> </ul>
	Inside of drum was not cleaned properly.	<ul style="list-style-type: none"> <li>• Run the Tub Clean programme regularly.</li> </ul>
Washing machine chimes repeatedly before final rinse.	This is not an error.	<ul style="list-style-type: none"> <li>• This is an alert to allow the addition of liquid fabric softener before the final rinse.</li> </ul>

## Error Messages

Symptoms	Reason	Solution
	<b>Drawer is not closed properly.</b>	<ul style="list-style-type: none"> <li>• Close the drawer and press <b>Start/Pause</b> button to start the cycle.</li> <li>• If the drawer is closed and the drawer lock error message is displayed, call for service.</li> </ul>
	<b>Door is not closed properly.</b>	<ul style="list-style-type: none"> <li>• Open the drawer and make sure the latch area is free of clothing or other obstructions.</li> <li>• Close the door, shut the drawer, and press <b>Start/Pause</b> to start the cycle.</li> <li>• If the door is closed and the door error message is displayed, call for service.</li> </ul>
	<b>The cold water tap is not fully open.</b>	<ul style="list-style-type: none"> <li>• Make sure that the cold water tap is fully open.</li> </ul>
	<b>Water line hoses are kinked, pinched, or crushed.</b>	<ul style="list-style-type: none"> <li>• Make sure that the hoses are not kinked or pinched. Be careful when moving the washing machine during cleaning and maintenance.</li> </ul>
	<b>Water inlet filters are clogged.</b>	<ul style="list-style-type: none"> <li>• Clean the inlet filters.</li> </ul>
	<b>Water supply pressure to tap or house is too low or very high.</b>	<ul style="list-style-type: none"> <li>• Check another tap in the house to make sure that household water pressure is adequate and flow is not restricted. Disconnect the supply hose from the washing machine and run a few liters of water through the hose to flush the water supply lines. If water pressure is too high, it may need a pressure reduction device fitted to the tap.</li> </ul>
	<b>Water supply connected with leak-limiting hoses.</b>	<ul style="list-style-type: none"> <li>• Hoses designed to limit leaks can trip falsely and prevent the washing machine from filling. The use of leak limiting hoses is not recommended.</li> </ul>
	<b>Drain hose is kinked, pinched, or clogged.</b>	<ul style="list-style-type: none"> <li>• Make sure the drain hose is free of blockages, kinks, etc., and is not pinched behind or under the washing machine.</li> </ul>

Symptoms	Reason	Solution
<b>UE</b>	UE rebalancing operation was not successful.	<ul style="list-style-type: none"> <li>The automatic attempt to rebalance the load was not successful. The cycle has been paused to allow the load to be manually adjusted.</li> </ul>
	The load is too small.	<ul style="list-style-type: none"> <li>Add more items to allow the washing machine to balance the loads.</li> </ul>
	Heavy articles are mixed with lighter items.	<ul style="list-style-type: none"> <li>Wash articles of somewhat similar weight.</li> </ul>
	The load is out of balance.	<ul style="list-style-type: none"> <li>Manually redistribute the load if articles have become tangled.</li> </ul>
<b>EE</b>	Control error.	<ul style="list-style-type: none"> <li>Unplug the power plug and call for service.</li> </ul>
<b>FE</b>	Water level is too high due to a faulty water valve.	<ul style="list-style-type: none"> <li>Close the water taps, unplug the washing machine, and call for service.</li> </ul>
<b>PE</b>	The water level sensor is not working correctly.	<ul style="list-style-type: none"> <li>Close the water taps, unplug the washing machine, and call for service.</li> </ul>
<b>LE</b>	A motor error has occurred.	<ul style="list-style-type: none"> <li>Allow the washing machine to stand for 30 minutes and then restart the cycle. If the LE error code persists, call for service.</li> </ul>
<b>TCL</b>	It is a reminder to run the Tub Clean programme.	<ul style="list-style-type: none"> <li>Run the Tub Clean programme.</li> </ul>
<b>E7</b>	Mini Washer is being operated without a full-size washing machine.	<ul style="list-style-type: none"> <li>Mini Washer will not operate as a standalone unit. It must be stacked under a suitable LG front-loading washing machine.</li> </ul>
	Stacking switch is not working properly.	<ul style="list-style-type: none"> <li>The product is for use only in combination with LG authorized appliances. Call the customer information centre to check out LG authorized appliances.</li> </ul>
<b>FF</b>	Drain hose, supply hose or drain pump is frozen.	<ul style="list-style-type: none"> <li>Thaw out the supply hose using a hot water cloth.</li> <li>Pour warm water in the drum.</li> </ul>
<b>CL</b>	CL is not an error. This prevents children from changing cycles or operating the appliance.	<ul style="list-style-type: none"> <li>To deactivate, press the <b>Child Lock</b> button for three seconds.</li> </ul>

# **Memo**

# **Memo**

# **Memo**

دليل المالك

# غسالة الملابس

قبل البدء في تركيب الجهاز، اقرأ هذه التعليمات بعناية. حيث سيسهل ذلك عملية التركيب ويضمن تركيب الجهاز بشكل صحيح وأمن. واحتفظ بهذه التعليمات بالقرب من المنتج بعد التركيب للرجوع إليها في المستقبل.



ARABIC AR

F8K5XNK3

F8K5XNK4



[www.lg.com](http://www.lg.com)

حقوق النشر © ٢٠١٨ جي للاكترونيات. كل الحقوق محفوظة.

MFL69962060  
Rev.01\_020118



# جدول المحتويات

قد يحتوي هذا الدليل على صور أو محتوى يختلف عن  
الطراز الذي قمت بشرائه.  
يخص هذا الدليل للمراجعة من الشركة المصنعة.

٤	إرشادات السلامة
٤	إرشادات السلامة الهمة
٩	التخلص من الأجهزة القديمة الخاصة بك
١٠	<b>التركيب</b>
١٠	الأجزاء
١١	الملحقات
١١	المواصفات
١٢	تركيب مكان التركيب
١٣	رصن الغسالة الصغيرة
١٥	توصيل خرطوم الإمداد
١٨	تركيب خرطوم التصريف
١٩	ضبط مستوى الجهاز
٢٠	<b>التشغيل</b>
٢٠	استخدام الجهاز
٢١	فرز الغسيل
٢٢	إغلاق الباب والدرج
٢٣	إضافة منتجات التنظيف
٢٥	لوحة التحكم
٢٦	جدول البرامج
٢٧	خيارات البرامج
٢٨	<b>الوظائف الذكية</b>
٢٨	استخدام تطبيق LG SmartThinQ
٣٠	استخدام Smart Diagnosis™
٣١	<b>الصيانة</b>
٣١	تنظيف الغسالة
٣٢	تنظيف حلة الغسيل
٣٢	تنظيف فلتر إدخال الماء
٣٣	توكح الحذر من التجمد في أثناء الشتاء
٣٥	<b>استكشاف الأعطال وإصلاحها</b>
٣٥	تشخيص المشكلات
٣٩	رسائل الخطأ

يتمثل الغرض من إرشادات السلامة التالية في الحيلولة دون وقوع المخاطر غير المتوقعة أو الأضرار الناجمة عن التشغيل غير الآمن أو غير الصحيح للمنتج.

يتم تقسيم الإرشادات إلى "تحذير" و"تنبيه" على النحو الموضح أدناه.

**!** **تحذير** يتم عرض هذا الرمز للإشارة إلى الأمور وعمليات التشغيل التي يمكن أن تسبب مخاطر، فاحرص على قراءة الجزء الذي يحمل هذا الرمز بعناية واتبع الإرشادات لتجنب المخاطر.

**!** **تحذير** يشير هذا إلى أن عدم اتباع الإرشادات قد يسبب وقوع إصابة خطيرة أو الوفاة.

**!** **تنبيه** يشير هذا إلى أن عدم اتباع الإرشادات قد يتسبب في وقوع إصابة طفيفة أو تلف المنتج.

## إرشادات السلامة الهامة

**!** **تحذير** لتنقيل مخاطر وقوع انفجار، أو نشوب حريق، أو حدوث وفاة، أو التعرض لصدمة كهربائية، أو حدوث إصابة، أو حروق للأشخاص عند استخدام المنتج، يجب اتباع احتياطات السلامة الأساسية، بما فيها ما يلي:

### الأطفال بالمنزل

هذا الجهاز غير مخصص لاستخدام الأفراد (بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية، أو ليس لديهم خبرة ومعرفة، ما لم يتم الإشراف عليهم أو تقدم لهم الإرشادات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم، كذلك يجب الإشراف على الأطفال للتأكد من عدم عبئهم بالجهاز.

## التركيب

- لا تحاول أبداً تشغيل هذا الجهاز إذا كان تالفاً، أو به عطل، أو مفككاً بشكل جزئي، أو به أجزاء مفقودة أو محطمة، بما في ذلك سلك أو قابس تالف.
- يجب أن يتم تثبيت هذا الجهاز ونقله من قبل شخصين أو أكثر يحملون الجهاز بأمان.
- تجنب تركيب الجهاز في أماكن الرطوبة والغبار. تجنب تركيب أو تخزين الجهاز في الهواء الطلق أو في مساحة معرضة للتأثيرات الجوية كضوء الشمس المباشر أو الرياح أو المطر أو درجات الحرارة دون درجة التجمد.
- أحكم ربط خرطوم التصريف لتجنب فصله.

- في حالة تلف سلك الطاقة أو ارتخاء فتحة المقبس، لا تستخدم سلك الطاقة واتصل بمركز خدمة معتمد.
- يجب عدم تركيب هذا الجهاز خلف باب قابل للغلق، أو باب منزلي، أو باب مزود بmfصلة على الجانب المقابل للجهاز، حيث يؤدي هذا إلى إعاقة فتح باب الجهاز بالكامل.
- يجب تأريض هذا الجهاز. في حالة حدوث أي خلل أو عطل، سيدع التأريض من خطر التعرض لصدمة كهربائية من خلال توفير مسار أقل مقاومة للتيار الكهربائي.
- يأتي هذا الجهاز مزوداً بسلك طاقة يحتوي على موصل تأريض للجهاز وقبس طاقة بوصلة تأريض. يجب توصيل قابس الطاقة بمقبس تيار مناسب مثبت ومورض وفقاً لجميع القوانين واللوائح المحلية.
- يمكن أن يؤدي توصيل موصل حماية غير مناسب إلى خطر التعرض لصدمة كهربائية. استشر كهربائياً أو موظف خدمة مؤهلاً إذا كان لديك أي شك حول ما إذا كان الجهاز مورضاً بشكل صحيح أم لا.
- لا تقم بتعديل قابس الطاقة المتوفر مع الجهاز. إذا لم يكن القابس مناسباً لأخذ التيار، فيمكنك تثبيت مأخذ تيار مناسب من خلال كهربائي مؤهل.

## التشغيل

- لا تستخدم أداة حادةً مثل مثقب أو دبوس للضغط على وحدة التشغيل أو فصلها.
- تجنب إصلاح أو استبدال أي جزء من الجهاز. يجب إجراء جميع التصليحات والخدمة من خلال موظف خدمة مؤهل إلا إذا أوصى دليل المالك الحالي بغير ذلك بشكل محدد. استخدم فقط أجزاء المصنع المعتمدة.
- استخدم الخرطوم الجديد أو مجموعة الخراطيم الجديدة المرفقة مع الجهاز. علماً بأن إعادة استخدام الخراطيم القديمة قد يؤدي إلى تسرب المياه وبالتالي تلف الممتلكات.
- تجنب محاولة الوصول إلى داخل الجهاز إذا كان الحوض أو القلاب في حالة حركة.
- حافظ على المنطقة الموجودة أسفل الجهاز وحوله خالية من المواد القابلة للاحتراق مثل الوبر، والورق، وقطع القماش، والمواد الكيميائية، وما إلى ذلك.
- لا تضع الحيوانات الحية مثل الحيوانات الأليفة داخل الجهاز.
- لا تترك باب الجهاز مفتوحاً. حيث يمكن أن يتسلل الأطفال بالباب أو يزحفوا إلى داخل الجهاز، مما قد يسبب التلف أو التعرض للإصابة.
- لا تقترب أبداً من الجهاز في أثناء تشغيله. انتظر حتى تتوقف حلة الغسل تماماً.
- لا تضع أو تغسل أو تجفف الأغراض النظيفة، أو المغسولة، أو المفتوحة، أو الملطخة بالمواد المتقدمة أو القابلة للاحتراق (مثل الشمع، والبنزرين، والطلاء، والجازولين، ومزيل الشحوم، ومذيبات التنظيف الجاف، والكيروسين، والزيوت النباتية، وزيوت الطهي، وما إلى ذلك). حيث يمكن أن يتسبب الاستخدام غير السليم في نشوب حريق أو وقوع انفجار.
- في حال حدوث فيضان، افصل مقبس الطاقة واتصل بمركز LG Electronics لمعلومات العملاء.
- لا تدفع الدرج لأسفل بشكل مفرط، عندما يكون درج الجهاز مفتوحاً.

- يجب عدم لمس الباب أثناء البرامج ذات درجة الحرارة المرتفعة.
- لا تستخدم غازاً قابلاً للاشتعال أو مواد قابلة للاحتراق (البنزين، والجازولين، وسائل تخفيف الدهان "الترر"، والمواد البترولية، والكحول، وما إلى ذلك) بالقرب من الجهاز.
- لا يمكنك استخدام خرطوم التصريف أو خرطوم الإدخال في حالة تجمدهما خلال فصل الشتاء إلا بعد الذوبان.
- احفظ جميع منظفات الغسيل، والمواد المنعمة، والمبيضات بعيداً عن متناول الأطفال.
- تجنب لمس قابس الطاقة أو عناصر التحكم في الجهاز بيدين مبتلتين.
- عند سحب قابس الطاقة من مأخذ التيار الكهربائي، أمسك بقابس الطاقة وليس الكابل.
- احرص على عدم ثني كابل الطاقة بشكل مفرط أو وضع شيء ثقيل عليه.
- في حالة وجود تسرب غاز (أيسوبروپين، أو البروبان، أو الغاز الطبيعي، أو ما إلى ذلك)، لا تلمس الجهاز أو قابس الطاقة وقم بتنهية المنطقة على الفور.
- لا تشغّل الغسالة الصغيرة مع غسالتين مكديتين صغيرتين أو أكثر.
- لتجنب كسر الباب الزجاجي، لا تضغط بقوة على الباب عند إغلاقه.
- لا تضغط على الغسالة الصغيرة.
- لا تقم بغسل السجاد، أو الأبسطة، أو الأحذية، أو الأغطية الخاصة بالحيوانات الأليفة، أو أي أغراض أخرى خلاف الملابس والملاءات، في هذه الغسالة.
- لا يستخدم هذا الجهاز إلا للأغراض المنزلية فقط ولا ينبغي استخدامه في الاستخدامات المتنقلة.
- لا تستخدم القدم في فتح باب المنتج أو إغلاقه.

## الصيانة

- أدخل قابس الطاقة بإحكام في مقبس الخرج بعد إزالة أي رطوبة أو غبار بشكل كامل.
- افصل سلك الطاقة قبل تنظيف الجهاز.
- احرص دائمًا على عدم فصل الطاقة عن الجهاز من خلال شد كابل الطاقة. ولإخراج قابس الطاقة من مقبس الخرج احرص دائمًا على الإمساك به بإحكام قبل أن تقوم بجذبه في وضعية مستقيمة.
- لا تقم برش الماء داخل الجهاز أو خارجه لتنظيفه.


## التخلص

- قبل التخلص من جهاز قديم، قم بفصله. اقطع الكابل الموجود خلف الجهاز مباشرةً لمنع سوء استخدامه.
- تخلص من جميع مواد التعبئة (مثل أكياس البلاستيك ومادة الستايروفوم) بعيدًا عن متناول الأطفال، إذ يمكن لمواد التغليف أن تسبب الاختناق.
- قم بazarة الباب قبل التخلص من هذا الجهاز تفادياً لخطر احتباس الأطفال أو الحيوانات الصغيرة بداخله.

## التخلص من الأجهزة القيمة الخاصة بك

- جميع الأجهزة الكهربائية والإلكترونية يجب التخلص منها بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- سيساعد التخلص من جهازك القديم بشكل صحيح في الحد من التبعات السلبية المحمولة للبيئة وصحة الإنسان.
- لمزيد من المعلومات المفصلة حول التخلص من جهازك القديم، يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بال محل الذي اشتريت منه المنتج.



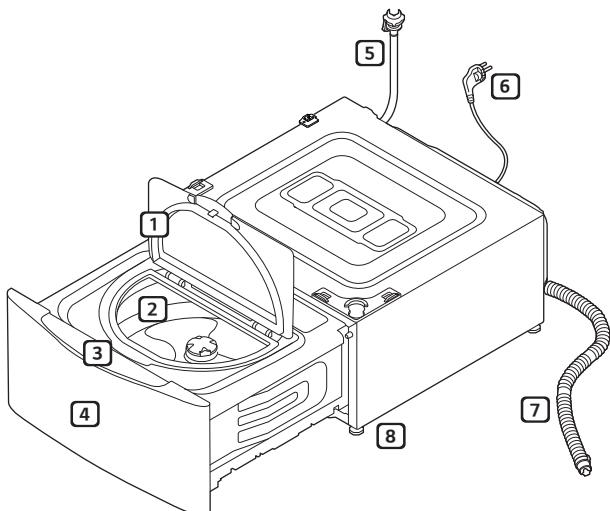

5 خرطوم إمداد الماء

1 باب

6 قابس الطاقة

2 الحوض


7 خرطوم تصريف الماء

3 لوحة التحكم

8 أقدام التسوية

4 درج

## الملحقات

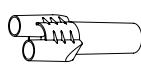

موصل خرطوم  
تصريف الماء



موصل خرطوم  
إمداد الماء



خرطوم تصريف الماء



توصيل  
خرطوم الإمداد



خرطوم إمداد الماء  
(خاص بالماء البارد)



مفتاح ربط



دعامتان (خلفيتان)  
(عدد ٢)



دعامتان (أماميتان)  
(عدد ٢)



كوب عيار  
المنظف



شرافف مضادة للانزلاق  
(٢ عدد)




جهاز التحكم عن بعد  
(اختياري)



مشابك شريطية  
(٣ عدد)



أشدّطة ربط الكابلات  
(٢ عدد)

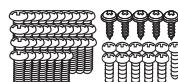

\* براغي  
من النوع A (٣٧ الواحد)  
من النوع B (٥ الواحد)  
من النوع C (١١ الواحد)

\* النوع A : براغي معدني طويل ، النوع B : براغي معدني قصير ، النوع C : براغي الماكنة

### ملاحظة

- قد يتم إرفاق ملحقات مختلفة لكل طراز.
- وفقاً لبيانات التثبيت، ربما يتوجب عليك شراء موصل خرطوم تصريف مياه منفصل.
- بالإضافة إلى البراغي المطلوبة للتثبيت، تم توفير براغي إضافية.

## المواصفات

٢٤٠-٢٢٠ فولتـ، ٥٠ هرتز	مصدر الطاقة
٦٠٠ ملم (العرض) × ٧٠٠ ملم (العمق) × ٣٦٥ ملم (الارتفاع)	الحجم
٤٣ كم	وزن المنتج
١،٠ - ٠،٨ ميجا باسكال (١٠ - ٨٠ كم ق/سم <sup>٢</sup> )	ضغط المياه المسموح به
٢ كجم	حجم الغسيل

- يمكن تغيير الشكل والمواصفات دون إخطار بذلك من أجل تحسين جودة المنتج.

## تركيب مكان التركيب الموق


- لا تركيب الجهاز في غرف يمكن أن تصل درجة حرارتها إلى التجمد، حيث يمكن أن تتجدد الخراطيم المتجمدة تحت الضغط. يمكن أن تقل كفاءة وحدة التحكم الإلكترونية في ظل درجات الحرارة الأقل من درجة التجمد.
- تأكيد عند تركيب الجهاز من سهولة وصول المهندس إليه في حالة تعطله.
- عند تركيب الجهاز، يتعين عليك تعديل الأقدام الأربعية مستخدماً مفتاح ربط لمسامير النفل للتأكد من استقرار الجهاز، ووجود مسافة بمقابل 5 سم بين قمة الجهاز والجزء السفلي لا يزيد سطح عمل أعلىها.
- في حالة الحصول على الجهاز في الشتاء وكانت درجات الحرارة أقل من درجة التجمد، ضعف الجهاز في درجة حرارة الغرفة لبعض ساعات قبل تشغيله.
- لا تستخدم وعاء للتصريف، لأنه قد يعيق الدراج. كما قد يؤدي استخدام وعاء تصريف إلى زيادة الاهتزاز والضوضاء أثناء التشغيل.

### تحذير !

هذا الجهاز ليس مصمماً للاستخدام البحري أو للاستخدام في عمليات التثبيت المتنقلة مثل القوافل، الطائرات وما إلى ذلك.

## التوصيات الكهربائية

- لا تستخدم سلك إطالة ولا محولاً مزدوجاً.
- احرص دائمًا على فصل الجهاز وإيقاف إمداد الماء بعد الاستخدام.
- يتعين توصيل الجهاز بمقاييس مؤرض وفقاً للوائح توصيل الأسلاك الكهربائية.
- يجب وضع الجهاز بحيث يمكن الوصول إلى القابس بسهولة.
- يجب عدم إصلاح الجهاز إلا بواسطة شخص مؤهل، حيث يمكن أن تؤدي الإصلاحات التي تتم من قبل أشخاص ليس لديهم خبرة إلى التعرض إلى إصابة أو عطل خطير. اتصل بمركز الخدمة المحلي.

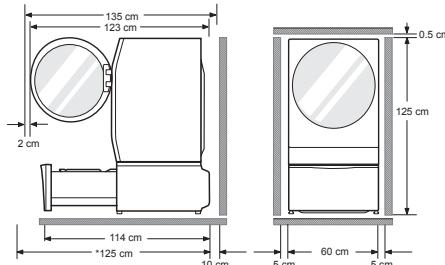

١٢٥\* سم: حد أدنى المساحة التثبيت

أرض مستوية : المنحدر المسموح به تحت الجهاز بأكمله يكون بزاوية ١٠°.

- مأخذ الطاقة : يجب أن يكون بطول ١٠,٥ متر من كلا جانبي الجهاز.
- لا تزد荷 الحمل على مأخذ الطاقة باستخدام أكثر من جهاز.
- خلوص إضافي : ٥ سم على الجوانب و ١٠ سم خلف الوحدة.
- لا تضع منتجات التغسيل ولا تخزنها فوق الجهاز في أي وقت. قد تتلف هذه المنتجات بتنشيط الغسالة أو عناصر التحكم.

### تحذير !


- يجب توصيل القابس بمأخذ تيار مناسب مثبت بشكل صحيح ومؤرض وفقاً لجميع القوانين واللوائح المحلية.

## تحديد المكان

- قم بتركيب الجهاز على أرضية صلبة ومسطحة.
- تأكيد من عدم إعاقة السجاد أو النسُط أو ما إلى ذلك لدوران الهواء حول الجهاز.
- لا تحاول أبداً تصحيح أي عدم استواء في الأرضية باستخدام قطع من الخشب أو الورق المقوى أو مواد مشابهة تحت الجهاز.
- إذا كان من المستحبيل تجنب وضع الجهاز بجانب موقد غاز أو موقد يعمل بالفحم، فيجب وضع عازل (٨٥x٦٠ سم) مغطى برقائق الألومنيوم على الجانب المواجه للفرن أو الموقد بين الجهازين.


## النوع ١. الجزء السفلي من الغسالة الرئيسية لونه فضي.

- في البداية، قم بتجمیع حامل التکدیس باستخدام ٢ من البراغی من النوع A الموجودة في صندوق کمالیات الغسالة الصغیرة، ثم قم بتركيب كل دعامة باستخدام ٧ برااغی من النوع A الموجودة أيضاً في صندوق کمالیات الغسالة الصغیرة.

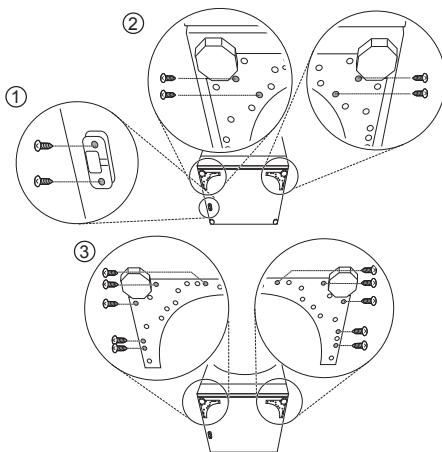


## النوع ٢. الجزء السفلي من الغسالة الرئيسية لونه أبيض.

- في البداية، قم بتجمیع حامل التکدیس باستخدام ٢ من البراغی من النوع C الموجودة في صندوق کمالیات الغسالة الرئيسية، ثم قم بتركيب كل دعامة باستخدام ٤ برااغی من النوع C الموجودة أيضاً في صندوق کمالیات الغسالة الصغیرة.

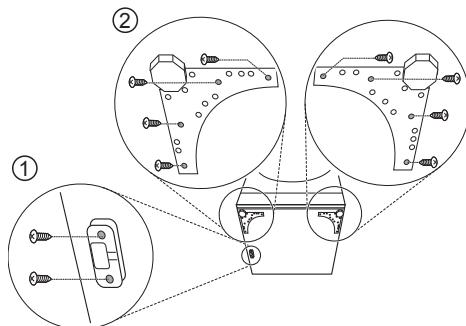


## رص الغسالة الصغيرة

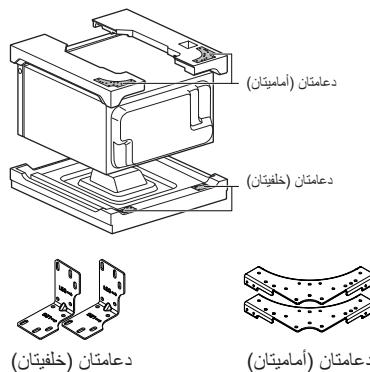

- تظہر الرسالہ الخطأ ٦ [E 6] إذا لم يتم إرفاق حامل التراص إلى الجزء السفلي من الغسالة الرئيسية.

١ قم بامالة الغسالة الرئيسية وأمسكها.

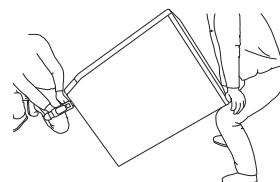


- ٢ رکب الدعامة (الأمامیة) وحامل الرص في الجزء السفلي من الغسالة الرئيسية.

### ملاحظة

- حامل التکدیس والبراغی الالزام للتجمیع موجودة داخل الغسالة الرئيسية والتي يمكن تركبها مع الغسالة الصغیرة.
- إذا كانت الغسالة الرئيسية مزودة بحامل تکدیس بالفعل، فلا ترکب حامل التکدیس المزود مع الغسالة الصغیرة.

- ٦ ضع الغسالة الرئيسية على الجزء العلوي من الغسالة الصغيرة.
- تأكد من أن الأقدام الأربع مفقلة بالحكم وأن فتحات الغسالة الصغيرة في محاذاة مع فتحات الغسالة الرئيسية.

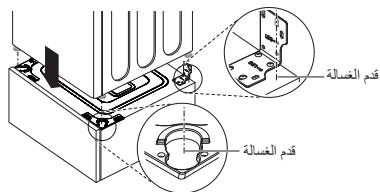


٧ أربط وثبت بشكل آمن الجهازين من الزوايا بواسطة البراغي عدد ٤ نوع ١.


- أولاً، أدخل البراغي على كل جانب. ثم أدخل البراغي على الجانب الأمامي والخلفي.

#### ملاحظة

- من الممكن أن يكون من الصعب التركيب إذا لم يتم التركيب بالترتيب الصحيح.
- استخدام اثنين من البراغي نوع ج لتجمیع حامل التراص.

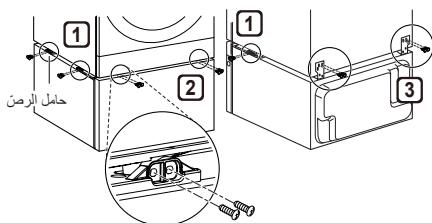


٨ أدر قدم الغسالة الرئيسية قليلاً حتى تستقر في مواجهة الغسالة الصغيرة.

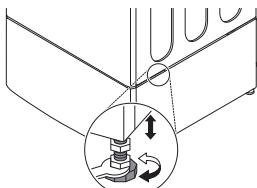

#### ملاحظة

- لن تعمل الغسالة الصغيرة كوحدة منفصلة.


- ٩ انزع مواد التغليف واحفظ بها للاستفادة منها في المستقبل.
- إذا اقتضى الأمر نقل الغسالة في المستقبل، فستساعدك مواد التغليف على منع إلحاق الضرر بالغسالة أثناء إثناء عملية النقل.

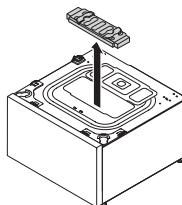


#### ملاحظة

- لمنع التلف، لا تقم بإزالة كتلة الرغوة حتى تستقر الغسالة الصغيرة في موقعها الأخير.

- ٤ أدر الغطاء العلوي بمقدار ١٨٠ درجة تقريباً.
- غطي التقبط العلوي مع الغطاء العلوي وثبتتها في مكانها بواسطة ٤ براغي نوع ب.

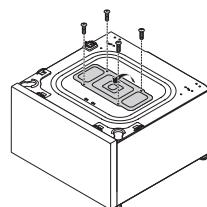


- ٥ ثبت القطعتين المعدتين على الجانب العلوي الخلفي للغسالة الصغيرة عن طريق ٤ براغي من الشكل (٤).

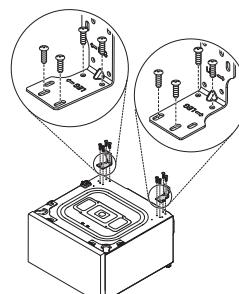


## توصيل الخرطوم بصنبورة الماء

توصيل الخرطوم اللولبي بالصنبورة المزود بأسنان ثبت موصل الخرطوم بصنبورة إمداد الماء.

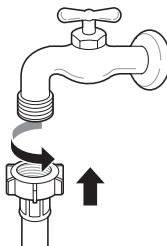


## توصيل خرطوم لولبي بالصنبورة غير المزود بأسنان

١ فك مسامير التثبيت الأربع.

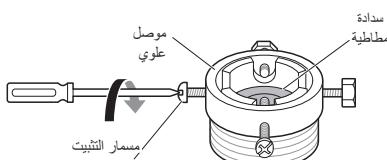

٢ أزل لوحة التوجيه إذا كان الصنبور كبيراً جداً حتى يلائم الممول.


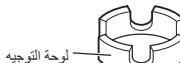


## توصيل خرطوم الإمداد


- يجب أن يكون ضغط إمداد الماء ما بين ١٠٠،٠ ميجا باسكال و ٨٠،٠ ميجا باسكال (١٠،٠ كجم ثقلي/سم<sup>٢</sup>).
- لا تُفرط في إحكام غلق خرطوم إمداد المياه.
- إذا كان ضغط إمداد الماء أعلى من ٨٠،٠ ميجا باسكال، فيجب تركيب جهاز تخفيف الضغط.
- تحقق من حالة الخرطوم بصورة دورية واستبدله إذا لزم الأمر.
- اتصل بمركز الخدمة في حالة عدم وجود سادة محكمة مطاطية.

## التحقق من السادة المطاطية بخرطوم الإمداد


تتوفر سادات مطاطية مزودة بخرطوم إمداد الماء، حيث يتم استخدامهما لمنع تسرب الماء. تأكّد من إحكام التوصيل بالصنايبير للغاية.

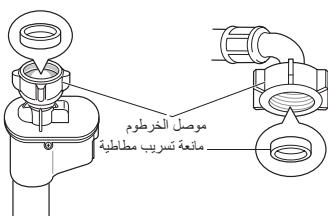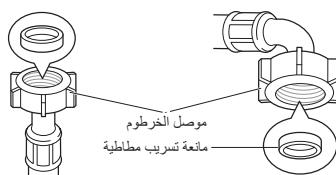

٢ أزل لوحة التوجيه إذا كان الصنبور كبيراً جداً حتى يلائم المحوول.

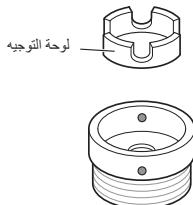


٣ ادفع المحوول إلى طرف الصنبور بحيث تتشكل الحشية المطاطية وصلة منيعة للماء. أحكم ربط مسامير التثبيت الأربعه واللوحة الحلقية للمحوول.

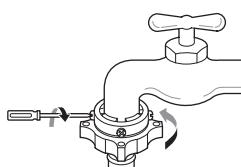


٤ اسحب لوحة مزلاج الموصى إلى أسفل، وادفع خرطوم الإمداد إلى المحوول، وحرر لوحة مزلاج الموصى. وتأكد أن أفال المحوول في مكانها.




٣ ادفع المحوول إلى طرف الصنبور بحيث تتشكل الحشية المطاطية وصلة منيعة للماء. وأحكم ربط مسامير التثبيت الأربعه.

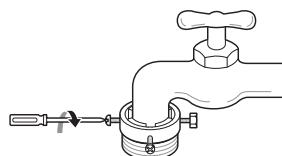

٤ ادفع خرطوم الإمداد بشكل عمودي لأعلى بحيث يمكن للسادة المطاطية الموجودة داخل الخرطوم أن تلتقي بالصنبور تماماً ثم أحكم ربطه عن طريق إدارته إلى اليمين.

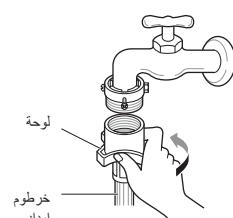

توصيل خرطوم من نوع اللمسة الواحدة بالصنبور غير المزود بأسنان ١ فك اللوحة الحلقية للمحوول وحرر مسامير التثبيت الأربعه.

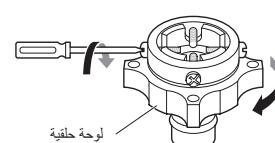


#### ملاحظة

- بعد توصيل خرطوم الإمداد بصنبورة الماء، قم بتنشيف صنبور الماء لطرد المواد الغريبة (الغبار، والرمل، وتنشارة الخشب، وما إلى ذلك) الموجودة في خطوط الماء. واترك ماء الصرف في دلو، وتحقق من درجة حرارة الماء.


## توصيل الخرطوم بالغسالتين

٣ صل موصل خرطوم الإمداد المُقْبَم الإضافي الخاص بالغسالة الرئيسية بموصل خرطوم الإمداد وصنبور المياه.

موصل خرطوم إمداد الماء

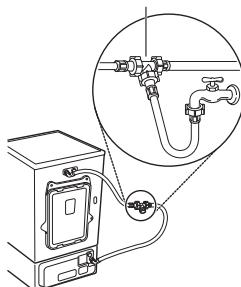


١ صل موصل خرطوم الإمداد بخرطوم الإمداد الخاص بالغسالة الصغيرة. افتح صندوق الملحقات لتنبيت الغسالة الصغيرة.

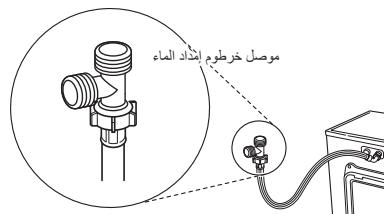

٢ صل خرطوم الإمداد الخاص بالغسالة الصغيرة بموصل خرطوم الإمداد.

- تأكّد من أن خرطوم الإمداد ليس ملتوياً أو مشنثياً.


### ملاحظة

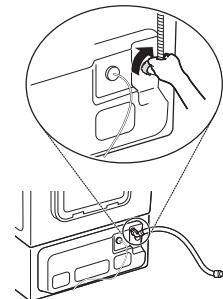

## استخدام موصل خرطوم التصريف

- ١ صل خرطوم التصريف الخاص بالغسالة الرئيسية والغسالة الصغيرة بموصل التصريف.
- ٢ أدخل مشابك الخرطوم السلكي المرفق إلى نهايات خرطومي التصريف.

- ٣ ادفع خراطيم التصريف على موصل التصريف.

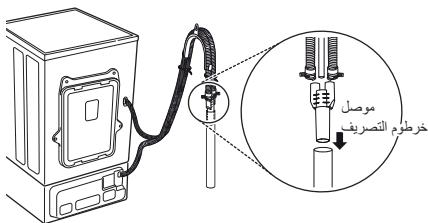

### تنبيه

- اضبط مشابك الخرطوم السلكي لمنع الخراطيم من الانفكاك أو التسرب. قد يتسبب الفشل في القيام بذلك في حدوث فيضان.
- يساعد استخدام موصل التصريف في تجنب الشفط، أو الروائح، أو تصريف المياه غير الصحيح.
- تأكّد من أن خرطوم التصريف ليس ملتوياً أو مشدوداً. فهذا هو السبب المحتمل لمشاكل التصريف أو الضوضاء.


### ملاحظة

- وفقاً لبيئة التثبيت، ربما يتوجب عليك شراء موصل خرطوم تصريف مياه منفصل.


## تركيب خرطوم التصريف

- لا يجب وضع خرطوم التصريف على ارتفاع أعلى من ١٠٠ سم عن الأرض. قد يتذرّع تصريف الماء الموجود في الجهاز أو يتم تصريفه ببطء.


- ١ قم بتركيب المشبك المشترك في كوع خرطوم التصريف.

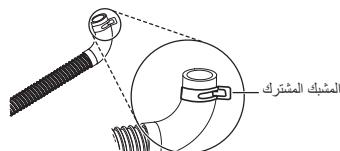

- ٢ باستخدام الخرطوم الذي يبدأ من الوصلة، أدخل الوصلة في منفذ التصريف على الجزء الخلفي من الغسالة الصغيرة.

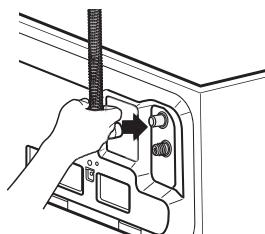

- ٣ اضبط المشبك المشترك باستخدام الكماشة لتأمين الخرطوم في مكانه ومنع التسريب.

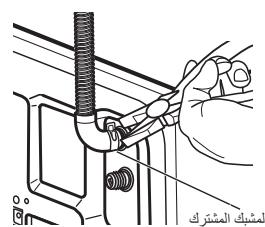

## استخدام شرائح مانعة للانزلاق (عنصر اختياري)

عند تركيب الجهاز على سطح زلق، قد تتحرك الغسالة نتيجة للاهتزاز الشديد. ويمكن أن تؤدي التسوية غير الصحيحة إلى حدوث عطل من خلال الضوضاء والاهتزاز في حالة حدوث ذلك، يتعين عليك تركيب شرائح مانعة للانزلاق أسفل أرجل الإستواء وضبط المستوى.


### ١ نظف الأرضية لوضع الشرائح المانعة للانزلاق.

- استخدم قطعة قماش جافة لإزالة الأوساخ الغربية والرطوبة وتنظيفها. وإذا ظل بالمكان بعض الرطوبة، فقد تنزلق الشرائح المانعة للانزلاق.

### ٢ ضبط المستوى بعد وضع الجهاز في منطقة التركيب.

#### ٣ ضع الجانب اللاصق للشرائح المانعة للانزلاق على الأرض.

- يعد تثبيت الحشيات المضادة للانزلاق تحت الأرجل الإمامية ذات تأثير أكثر فاعلية. إذا كان من الصعب وضع الحشيات المانعة للانزلاق تحت الأقدام الإمامية، فضعها تحت الأقدام الخلفية.

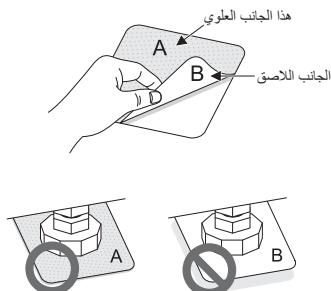

#### ٤ تأكيد من استواء الجهاز.

- ادفع الحواف الطولية للغسالة أو قم بهزها بلطف للتأكد من عدم اهتزازها. وفي حالة اهتزاز الجهاز، قم بتسويته مرة أخرى.


## ملاحظة

- يمكنك الحصول على شرائح مانعة للانزلاق من مركز خدمة LG.

## ضبط مستوى الجهاز

إذا كانت الأرضية غير مستوية، فلن الأقدام القابلة للضبط حسب الحاجة (لا تضع الخشب وما إلى ذلك تحت الأقدام). تأكيد من أن جميع الأقدام الأربع مثبتة وثبتة على الأرض ثم تأكيد من أن الجهاز مستقر تماما على الأرض (استخدم ميزان الماء).

- بمجرد أن يصبح الجهاز مستويا، أحكم ربط صواميل القفل باتجاه قاعدة الجهاز. و يجب إحكام ربط كل صواميل القفل.

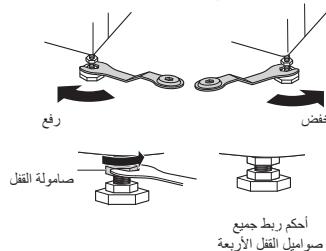

## الفحص القطري

- عند الضغط على حواف اللوحة العلوية للجهاز بشكل قطري (أسفل)، يجب ألا يتحرك الجهاز لأعلى ولأسفل على الإطلاق (فحص كل الاتجاهين). وفي حالة اهتزاز الجهاز عند دفع اللوحة العلوية للجهاز بشكل قطري، قم بضبط الأقدام مرة أخرى.

## تحذير

- عند رص الغسالة الرئيسية فوق الغسالة الصغيرة، استخدم قدم التسوية على الغسالة الصغيرة لتسوية كل منها. يجب أن تكون قدم تسوية الغسالة الرئيسية مخفضة لأقصى حد وأن يتم إدارة براعيم التثبيت بعكس اتجاه عقارب الساعة لتنبيتها.

## ملاحظة

- يمكن أن تحدث الأرضيات الخشبية أو المعلقة اهتزازاً عنيفاً وعدم اتزان.
- إذا تم تثبيت الغسالة الصغيرة على منصة مرتفعة، يجب أن يتم تثبيتها بشكل محكم للتنقلي من خطر السقوط.

## استخدام الجهاز

٥ اختيار دورة الغسيل المطلوبة.

- اضغط زر اختيار الدورات بشكل متكرر حتى يتم تحديد الدورة المطلوبة.



٦ بدء الدورة.

- اضغط على زر بدء/إيقاف مؤقت لبدء الدورة. ستحترك الغسالة لفترة وجيزة بدون مياه لقياس وزن الحمولة. إذا لم يتم الضغط على زر بدء/إيقاف مؤقت خلال ١٥ دقيقة، سيتوقف تشغيل الغسالة وستنعد جميع الإعدادات.




٧ أضف المنعم.

- بعد أن تقوم الغسالة بإصدار صوت جرس يستمر لمدة ٢٠ ثانية تقريباً، أضف المنعم واضغط على بدء/إيقاف مؤقت لإعادة تشغيل الدورة.


٨ إنتهاء الدورة.

- سيصدر صوت نغمة عند إنتهاء الدورة. وعلى الفور أخرج ملابسك من الغسالة للتخلص من الكريمة والروائح.
- وبعد اكتمال عملية الغسيل، قم بمسح باب الغسالة، والحشية، وحلة الغسيل بمنشفة جافة لتنظيفها.

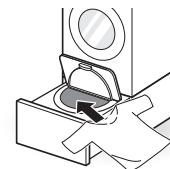

٩ أفرز الغسيل وضع الملابس.


- أفرز الغسيل حسب نوع النسيج، ومستوى الأوساخ، واللون، وحجم الحمولة حسب الحاجة. ثم افتح الباب وضع الملابس داخل الغسالة.

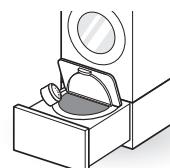

١٠أغلق الباب والدرج.

١١ تشغيل الغسالة.

- اضغط على زر الطاقة لتشغيل الغسالة.

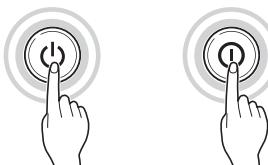

## فرز الغسيل

### ٣ العناية قبل وضع الحمولة.

- لا تقم بغسل الملابس النسائية الداخلية التي تحتوي على "سلاك معدني" (مثل حمالة الصدر) حيث قد تؤدي إلى إتلاف الملابس الأخرى أو الغسالة وقد يحدث صوًّا.
- افصح جميع الجيوب للتأكد من أنها فارغة. فقد تؤدي أشياء مثل المسامير، ومشبك الشعر، والقلاب، والأقلام، والقطع المعدنية، والمفاتيح إلى إحداث ضرر في كل من الغسالة وملابسك.



- أغلق السحابات، والخطافات، والسلالس للتأكد من أن هذه الأغراض لن تعلق بالملابس الأخرى.
- امسح الأوساخ والبقع من خلال وضع مقدار صغير من المنظف المذاب في الماء على البقع وغسلها للمساعدة في إزالة الأوساخ.
- في حالة وجود حزام طوبل بأخذ قطع الملابس، قم بتسويفه بحيث لا يتشابك أو ضعه في الشبكة الخاصة بالغسيل.
- أزل الحشوارات الداخلية للمساند، أو الوساند، أو أبسطة الجلوس، وأغسل فقط الأطعمة. فقد تخرج الأجزاء الداخلية منها، وتتلف الغسيل. ربما تؤدي القطع المصنوعة من البلاستيك إلى إحداث اهتزازات غير عادية.

### تنبيه !

قسم الملابس في أقسام من أجل الغسيل بحيث يمكن غمر الملابس تحت الماء بشكل كامل. علماً بأنه إذا تمددت الملابس أثناء الغسيل، قد يؤدي ذلك إلى تلف الملابس والأجزاء خلال الغسيل أو التشيف.

- ١ ابحث عن ملصق العناية الموجود على ملابسك.

سيوضح لك هذا الملصق محتويات أقمشة ملابسك وطريقة غسلها.


- الرموز الموجودة على ملصق العناية.




درجة حرارة الغسيل




غسل في غسلة عالمة

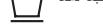

طبيعة دائمة

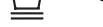

الملابس الحساسة

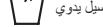

غسل بدوبي



منع الغسل

### ٢ فرز الغسيل.

- الحصول على أفضل النتائج، افرز الملابس إلى أنواع يمكن غسلها في دوره الغسيل نفسها.
- تحتاج الأقمشة المختلفة إلى درجات حرارة وسرعات دوران مختلفة عند غسلها.
- اغسل منتفقين أو قطعتين من القماش معًا. عند الغسيل بشكل منفصل، فإن الملابس التي تمتص الكثير من الماء قد لا تكون مغسولة بشكل جيد أو قد يحدث تجفيف بشكل غيري بسب الميل.
- افرز دائمًا الملابس ذات الألوان الغامقة عن الملابس ذات الألوان الباهة والملابس البيضاء، واغسلها بشكل منفصل حيث إن الصبغة والوبر قد تنتقل بين الملابس، مما قد يؤدي إلى تغيير لون الملابس البيضاء والفاتحة. ولا تغسل الملابس شديدة الالساح مع الملابس طيلة الاتساح إذا كان ذلك ممكناً.


- اتساخ (شديد، عادي ، خفيف) : افرز الملابس وفقاً لدرجة اتساخها.
- اللون (أبيض، فاتح، غامق) : افصل المنتوجات البيضاء عن المنتوجات الملونة.
- الوبر (منتجات ويرية، منتجات تجذب الوبر) : اغسل المنتوجات المنتجة للوبر و المنتوجات المجمعة للوبر بشكل منفصل عن بعضها البعض.

## اغلاق الباب والدرج

### ملاحظة

- قد يتعرّض تأمّن قفل الباب إذا كان هناك كمية كبيرة من الغسيل في الغسالة أو إذا لم يتم إغلاق الباب بإحكام.
- إذا كان المنتج قيد التشغيل أو قفل الدرج (٤)، يتم عرض المؤشر، لا يمكن فتح الدرج. لفتح الباب، اضغط على زر البدء/إيقاف الموقت لإيقاف المنتج، وعندما يكون قفل الدرج (٤)، والمؤشر يختفي، افتح الدرج. لا تدفع الدرج والباب مفتوحاً.
- إذا كان (٤)، (٥)، (٦)، أو علامة تذير تظهر على الشاشة، فاغلق الدرج والباب تماماً. بعد القيام بهذا، اضغط على زر التشغيل/إيقاف الموقت.
- في حالة تذير فتح الدرج بشكل كامل، اسحب الدرج إلى الأمام ببعض القوة مستخدماً كلتا يديك.
- إذا حدث انقطاعاً للتيار الكهربائي أثناء عملية تشغيل المنتج، لا يمكن فتح الباب. زوّد الطاقة مرة أخرى أو اتصل بمركز خدمة شركة LG.
- في حالة تذير فتح الباب بسبب الحرارة العالية، قم بعملية الشطف بالماء البارد باستخدام البرنامج شطف+تنشيف أو انتظر لفترة قبل فتح الباب.

- ١ اضغط على باب الغسالة حتى يصدر صوتاً.

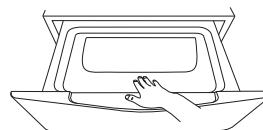


- ٢ اضغط على الدرج حتى يتم إغلاقه بشكل كامل.

### تنبيه !

- احرص على تجنب انحصار يدك بين الباب والغسالة، حيث يمكن أن يعرضك ذلك للإصابة.
- قد يؤدي فتح الدرج أو الباب عنوة إلى حدوث تلف بأجزاء الغسالة ويعرض سلامتك للخطر.
- قد يؤدي إغلاق الدرج قبل إغلاق الباب بشكل كامل إلى احداث خدوش بالباب الزجاجي.
- تأكد من سحب الدرج بشكل كامل لتجنب ملامسة الباب لغسالة التحميل الأمامي.

## إضافة المنظف

قم بمعايرة المنظف باستخدام درج توزيع المنظف واسكه في الحوض.

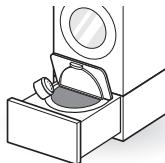

- استخدم كوب عيار المنظف المزود لإضافة كوب واحد فقط من المنظف.
- يتعين إضافة منظفات غسيل أقل للأغراض ذات الأوساخ الخففة، ويرجى استخدام كمية المنظفات المناسبة في الغسالة الصغيرة. ففي حال استخدام منظفات كثيرة جداً، سوف تبقى الفقاعات الزائدة بعد التقطيف.

## إضافة منتجات التنظيف

### مقدار المنظف

- يجب استخدام المنظف وفقاً لتعليمات الشركة المصنعة للمنظف، وأختيارها وفقاً لنوع الأقمشة، ولوتها، ومدى اتساعها، ودرجة حرارة الغسيل.
- عند استخدام مقدار كبير من المنظف، فقد تحدث رغوة كثيرة جداً وهذا يقلل من كفاءة الغسيل أو يؤدي إلى تقليل الحمولة على المحرك.
- إذا كنت ترغب في استخدام منظف سائل، فاتبع الإرشادات التي توفرها الشركة المصنعة للمنظف.
- في حالة حدوث الكثير من الرغاوي، يتعين عليك تقليل كمية المنظف.
- قد تحتاج إلى تعديل مقدار استخدام المنظف حسب درجة حرارة الماء، وعسر الماء، وحجم الحمولة، ومستوى الأوساخ. للحصول على أفضل النتائج، تجنب حدوث رغوة زائدة عن المد.
- راجع ملصق الملابس، قبل اختيار المنظف ودرجة حرارة الماء.
- عند استخدام الغسالة، لا تستخدم إلا المنظفات المخصصة لكل نوع من أنواع الملابس:
  - منظفات المسابيق العامة لجميع أنواع الأقمشة
  - منظفات مساحيق للأقمشة الحساسة
  - المنظفات السائلة لجميع أنواع الأقمشة أو المنظفات المخصصة للصوف فقط
- للحصول على غسيل وتنبيض أفضل، استخدم المنظف الذي يحتوي على مبيضم المسحوق العام.

**إضافة المواد المنعمة****إضافة منعم القماش****الحالة ١. عند إصدار الغسالة لصوت جرس:**

١ اضغط على بدء/إيقاف مؤقت لإيقاف الدورة مؤقتاً.

- يمكن الإيقاف المؤقت بالضغط على زر بدء/إيقاف مؤقت للغسالة الصغيرة أو باستخدام جهاز التحكم عن بعد.

٢ حرك لفتح الدرج، وفتح الباب، وإضافة منقى النسيج السائل.

٣ ق باغلاق الباب، وازلاق الدرج لاغلاقه، ثم اضغط على بدء/إيقاف مؤقت لإعادة تشغيل الدورة.

**ملاحظة**

- لتتمكن تحذير منعم الأقشة أو تعطيله، اضغط على الزر Extra Rinse باستمرار لمدة ثلاثة ثوانٍ.

- يمكن إضافة منقى النسيج خلال ٣٠ ثانية بعد أن تصدر الإشارة صوتاً.

**الحالة ٢. إذا أغلقت مرحلة إضافة المنعم:**

١ اضغط على زر الطاقة لإيقاف الدورة.

٢ حرك لفتح الدرج، وفتح الباب، وإضافة منقى النسيج السائل.


٣أغلق الباب، وحرك الدرج، وحدد برنامج Rinse+Spin.

٤ اضغط على زر البدء/إيقاف المؤقت لإعادة بدء تشغيل الدورة.

**ملاحظة**

- لا تسكب منعم القماش على الملابس مباشرةً.
- يمكن أيضاً تخفيف المنعم بالماء وإضافته مباشرةً إلى حلة الغسيل.
- لا تسكب المنعم غير المخفف بشكل مباشر على الملابس حيث قد يتسبب بذلك في إحداث بقع على الملابس.

## لوحة التحكم

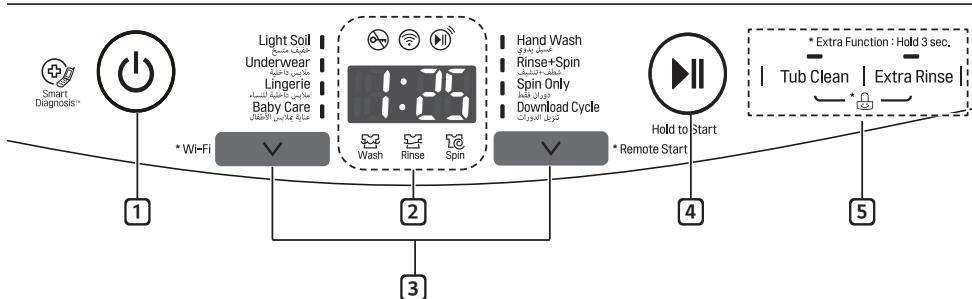

### 1 زر الطاقة

- اضغط فوق زر الطاقة لتشغيل الغسالة.

4 زر بدء/إيقاف مؤقت

- يُستخدم هذا الزر بدء/إيقاف مؤقت لبدء دورة الغسيل أو إيقافها مؤقتاً.

• في حالة الحاجة إلى إيقاف دورة الغسيل مؤقتاً، اضغط على الزر بدء/إيقاف مؤقت.

### ملاحظة

- إذا لم تقم بالضغط على زر بدء/إيقاف مؤقت خلال 15 دقيقة من تحديد البرنامج، يتم إيقاف تشغيل الغسالة تلقائياً وقد تُلغى جميع إعدادات الدورة.

### 2 شاشة العرض

- توضح الشاشة حالة الدورة والوقت المُقرَّر الباقِي.

• ④: مؤشر قفل الدرج

• ⑤: مؤشر الاتصال بشبكة Wi-Fi

• ⑥: مؤشر بدء التشغيل عن بعد

### 3 زر البرامج

- متوفَّر البرامج وفقاً لنوع الغسيل.
- لاستخدام وظيفة "تنزيل الدورات"، راجع "الوظائف الذكية".

### 5 الخيارات

- استخدم هذه الأزرار في تحديد خيارات الدورة المطلوبة للبرنامج المحدَّد.
- تضمن مصابيح الإعدادات الموجودة فوق الأزرار لإظهار التحديد الحالي.

## جدول البرامج

## برامج الغسيل

البرنامج	الوصف	ملاحظة	الحد الأقصى للحمولة
<b>Light Soil (الأوساخ الخفيفة)</b>	استخدم هذا البرنامج لغسل الملابس قليلة الاتساخ، ما عدا الأقمشة الناعمة مثل الصوف والحرير.	<ul style="list-style-type: none"> <li>• لتنغير الإعداد أثناء الغسيل، غير الإعداد بعد الضغط على زر <b>التشفيل/الإيقاف المؤقت</b>.</li> </ul>	٢,٠ كجم
<b>Speed Wash (غسيل سريع)</b>	استخدم هذا البرنامج لتسريع الوقت المستغرق لغسل كيويات صغيرة والبقع السريعة.	<ul style="list-style-type: none"> <li>• استخدم كمية صغيرة جداً من المسحوق.</li> </ul>	١,٥ كجم
<b>Active Wear (الملابس الرياضية)</b>	استخدم هذا البرنامج لغسل ملابس الأداء المصممة والمعدة خصيصاً للرياضة.	<ul style="list-style-type: none"> <li>• استخدم <math>\frac{1}{4}</math> كمية المنظف التي توصي بها الشركة المصممة للحمل العادي.</li> <li>• لا تغسل الملابس البيضاء أو ذات الألوان الفاتحة مع الملابس ذات الألوان الداكنة التي ربما تبيت الوانها.</li> <li>• إن غسل الملابس الملوثة ببقع دماء أو لين قبل عملية الغسل الأساسية لمدة قصيرة بالماء البارد قد يكون أكثر فاعلية في إزالة البقع.</li> <li>• وظيفة التخلص من الفقاعي: في حالة استخدام كمية كبيرة من المنظف، ربما يتم تشغيل وظيفة التخلص من الفقاعي.</li> <li>• وظيفة خفض درجة حرارة ماء التسريح: لأسباب تتلخص بالأمان، يتم تزويد ماء بارد قبل تسريح الماء الخفيف درجة حرارة الماء.</li> </ul>	١,٠ كجم
<b>Tub Clean (تنظيف الحوض)</b>	استخدم هذا البرنامج للحفاظ على نظافة حوض الغسيل عن طريقة تعقيمها من الجراثيم الموجودة فيه.	<ul style="list-style-type: none"> <li>• اختر نوعاً مناسباً من المنظفات المحابدة.</li> <li>• إن غسل الملابس الملوثة ببقع الطعام، والعرق، والبول، والباراز قبل عملية الغسيل الأساسية لمدة قصيرة يكون أكثر فاعلية.</li> </ul>	
<b>Hand Wash (الأوساخ الخفيفة)</b>	استخدم هذا البرنامج لغسل الصوف القابل للاتكاش أو الأغراض القابلة للغسيل البديوي والتي تحتاج إلى عناية فائقة. اغسل الأغراض المصنوعة من الصوف فقط إذا كانت تحمل بطاقة الغسيل الآلي أو الغسيل البديوي.	<ul style="list-style-type: none"> <li>• يجب أن يكون وزن الحمولة أقل من ١ كجم لتجنب تلف القماش.</li> <li>• استخدم فقط المنظف الطبيعي أو الأمان للكتان والأمن للقماش، وضع <math>\frac{1}{4}</math> من الكمية العادي من المنظف.</li> <li>• يستخدم برنامج <b>Hand Wash</b> حركة غسيل خففة وسرعة دوران متخصصة للحصول على أعلى درجات العناية بالقماش.</li> </ul>	١,٠ كجم
<b>Rinse+Spin (شطف+تنشيف)</b>	اختر هذا البرنامج لشنط وتنشيف حمولة بشكل منفصل عن الدورة العادي.	<ul style="list-style-type: none"> <li>• لا تقم إلا بإضافة منع الأقمشة فقط.</li> </ul>	١,٥ كجم

## القفل ضد عبث الأطفال Child Lock

استخدم هذا الخيار لتنطيل أدوات التحكم. يمكن أن يمنع هذا الخيار الأطفال من تغيير الدورات أو تشغيل الجهاز.

### قفل لوحة التحكم

١ اضغط مع الاستمرار على الزر **Child Lock** لمدة ٣ ثوان.

٢ سيظهر  على الشاشة.  
عند ضبط قفل الأطفال، يتم قفل جميع الأزرار باستثناء زر الطاقة.

### ملاحظة

لن يؤدي إيقاف تشغيل الطاقة أو إكمال جميع الدورات إلى إعادة ضبط وظيفة قفل الأطفال. يجب إلغاء تفعيل القفل للأطفال لنتتمكن من الوصول إلى أي وظائف أخرى.

### إلغاء قفل لوحة التحكم

اضغط مع الاستمرار على الزر **Child Lock** لمدة ٣ ثوان.

- لتنبئ الدورة أو الخيار، اضغط على الزر **بدء/إيقاف مؤقت** لإيقاف العملية، ثم اختر الدورة أو الخيار الذي ترغب في تغييره.

## خيارات البرامج

### (الأوساخ الخفيفة) Spin Only

استخدم هذا الخيار للمجفف.

### (شفط زائد) Extra Rinse

استخدم هذا الخيار لزيادة عدد برامج الشطف.

١ اضغط على الزر **طاقة**.

٢ حدد برنامج الغسيل.

٣ اضغط على الزر **Extra Rinse**.

- عند الضغط على زر **Extra Rinse**، سيتم عرض عدد دورات الشطف المراد إضافتها (١ - ٥).

٤ اضغط على الزر **بدء/إيقاف مؤقت**.

## ملاحظة

- للتحقق من اتصال Wi-Fi، قم بفحص رمز Wi-Fi على لوحة التحكم ما إذا كان مضبوطاً.
- تطبيق LG SmartThinQ ليس مسؤولاً عن أي مشاكل الاتصال بالشبكة أو أي أعطال، أو خلل، أو أخطاء نتجت عن طريق الاتصال بالشبكة.
- لا يدعم الجهاز سوى شبكات Wi-Fi التي تصل سرعتها إلى 2,4 جيجا هرتز.
- إذا كان بروتوكول الأمان الخاص بجهاز التوجيه مضبوطاً على **WEP**، فقد يتغير عليك إعداد الشبكة. الرجاء تغييره إلى بروتوكول أمان آخر (يُنصح باختيار **WPA 2**) ثم أعد تسجيل المنتج.
- معرف SSID لجهاز التوجيه، الرجاء استخدام الأحرف والأرقام فقط والرموز الأخرى قد لا يمكن دعمها.
- إذا كان لدى الجهاز مشكلة اتصال بشبكة Wi-Fi، قد تكون بعيدة كل البعد عن جهاز التوجيه. اشتري جهاز توسيع Wi-Fi (موضع المدى) لتحسين قوة إشارة Wi-Fi.
- قد لا يتم الاتصال بشبكة Wi-Fi أو قد يتم قطع الاتصال حسب جودة بيئة الشبكة المحلية.
- قد لا يعمل الاتصال بالشبكة بشكل صحيح وفقاً لمزود خدمة الإنترنت.
- يمكن أن تجعل البنية اللاسلكية المحيطة خدمة الشبكة اللاسلكية تعمل ببطء.
- يُنصح التطبيق للتغيير لأغراض تحسين الجهاز بدون إشعاع المستخدمين.
- قد تتغير الميزات حسب الطراز.

## استخدام تطبيق LG SmartThinQ

## تثبيت تطبيق LG SmartThinQ

"ابحث عن تطبيق LG SmartThinQ على Apple App Store أو Google Play Store من على هاتف ذكي. اتبع التعليمات لتنزيل التطبيق وتثبيته."

## Wi-Fi وظيفة

• للأجهزة بشعار  أو 

## دورة الغسالة

قم بتعيين الدورة المفضلة أو قم بتنزيلها وتشغيلها باستخدام جهاز التحكم عن بعد.

## التدريب على تنظيف الحوض

تُظهر هذه الوظيفة عدد الدورات المتبقية قبل أن يحين وقت تشغيل دورة تنظيف الحوض.

## مراقبة الطاقة

تحقق من استهلاك الطاقة للدورات التي تم استخدامها مؤخراً والمتوسط الشهري.

## Smart Diagnosis™

توفر هذه الوظيفة معلومات مفيدة حول تشخيص مشكلات الجهاز وحلها حسب نمط الاستخدام.

## الإعدادات

توفر وظائف مختلفة.

## التنبيهات

قم بتشغيل "التنبيهات" لاستلام الإشعارات الخاصة بحالة الجهاز. يتم تشغيل الإشعارات حتى إذا كان تطبيق "LG SmartThinQ" متوقفاً عن التشغيل.

## دورة الغسيل

### معلومات حول إشعار البرامج المفتوحة المصدر

للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL و تراخيص مفتوحة المصدر أخرى يضمها هذا المنتج، يرجى زيارة الموقع <http://opensource.lge.com> بالإضافة إلى التعليمات البرمجية المصدر، توفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتوزيل.

ستتوفر LG Electronics أيضًا التعليمات البرمجية المصدر على قرص مضغوط بتكلفة تغطي هذا التوزيع (مثل كلفة الوسائط والشحن والاستخدام) عند طلبها بارسال بريد الكتروني إلى [opensource@lge.com](mailto:opensource@lge.com). إن هذا العرض صالح لمدة ثلاثة (٣) سنوات اعتبارًا من تاريخ شراء المنتج.

### Remote Start (التشغيل عن بعد)

استخدم هاتف ذكي للتحكم في جهازك عن بعد. يمكنك أيضًا مراقبة تشغيل الدورة للتعرف على الوقت المتبقي للدورة.

#### لاستخدام التشغيل عن بعد:

- ١ اضغط على الزر الطاقة.
- ٢ ضع الغسيل في الحلة.

### باستخدام هاتف ذكي Smart Diagnosis™

#### • للأجهزة بشعار أو

استخدم هذه الوظيفة إذا كنت بحاجة إلى تشخيص دقيق من مركز معلومات عمالء LG Electronics عند تعطل المنتج أو توقفه عن العمل.

يتعذر تشغيل Smart Diagnosis™ إلا عند توصيل الجهاز بالطاقة. إذا تعذر تشغيل الجهاز، فربما تفيد استكشاف المشكلات وإصلاحها باستخدام Smart Diagnosis™.

### ٣ اضغط مع الاستمرار على زر Remote Start لمدة ٣ ثوانٍ لتمكين وظيفة بدء التشغيل عن بعد.

### ٤ ابدأ إحدى الدورات من التطبيق LG SmartThinQ على هاتفك الذكي.

#### ملاحظة

- بمجرد أن يتم تشغيل وضع "بدء التشغيل عن بعد"، يمكنك أن تبدأ دورة من تطبيق الهاتف الذكي LG SmartThinQ. حال لم تبدأ الدورة، فستتظر الآلة لبدء تشغيل الدورة حتى يتم إيقاف تشغيلها عن بعد من التطبيق أو تطبيق وضع "بدء التشغيل عن بعد".
- عند تشغيل "التشغيل عن بعد"، يتم قفل الباب أوتوماتيكياً.

#### لتطيعيل التشغيل عن بعد:

عندما يتم تفعيل بدء التشغيل عن بعد، اضغط مع الاستمرار على زر Remote Start لمدة ٣ ثوانٍ.

### Download Cycle (تنزيل الدورات)

قم بتنزيل الدورات الجديدة والخاصة التي لم يتم تضمينها في الدورات الأساسية على الجهاز.

يمكن للأجهزة التي تم تجسيدها بنجاح تنزيل مجموعة متنوعة من الدورات المتخصصة المصممة للجهاز.

يمكن تخزين دورة واحدة في الجهاز في كل مرة. بمجرد اكتمال تنزيل الدورة في الجهاز، يحتفظ المنتج بالدورة التي تم تنزيلها حتى يتم تنزيل دورة جديدة.

- ٥ بمجرد انتهاء العد التنازلي وتوقف النغمات، تابع محادثتك مع وكيل مركز الاتصال الذي سيتمكن من مساعدتك باستخدام المعلومات المرسلة للتحليل.

#### ملاحظة

- تعتمد وظيفة Smart Diagnosis™ على جودة المكالمة المحلية.
- سوف يتحسن أداء الاتصال ويمكنك تلقى خدمة أفضل في حالة استخدام هاتف المنزل.
- إذا كان نقل بيانات Smart Diagnosis™ رديئاً بسبب تدني جودة المكالمة، فقد لا تلتقي بأفضل خدمة Smart Diagnosis™.


## استخدام Smart Diagnosis™

### من خلال مركز Smart Diagnosis™ معلومات العلاء

استخدم هذه الوظيفة إذا كنت بحاجة لتشخيص دقيق عن طريق مركز معلومات العلاء في شركة LG Electronics عندما تحدث أخطاء أو فشل بالجهاز. استخدم هذه الوظيفة فقط للاتصال بممثل الخدمة، ليس أثناء عملية التشغيل العادية.

١ اضغط على زر الطاقة بعد فتح الدرج على الغسالة الصغيرة.

٢ عندما يتم توجيهك للقيام بهذا عن طريق مركز الاتصالات، ضع السماعة الخاصة بهاتفك القريبة من رمز Smart Diagnosis™.

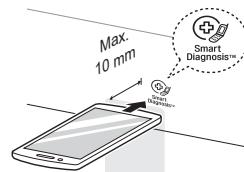

٣ اضغط مع الاستمرار على زر Extra Rinse لمدة ٣ ثوان، مع الاستمرار في الإمساك بصواني التكلم في الهاتف فوق الأيفونة أو زر الطاقة.

٤ أبى الهاتف في مكانه حتى تنتهي نغمة النقل. ويتم عرض الوقت المتبقى لنقل البيانات.

• الحصول على أفضل النتائج، لا تحرك الهاتف في أثناء نقل النغمات.

• إذا لم يتمكن موظف مركز الاتصال من الحصول على تسجيل دقيق للبيانات، فقد يطلب منك إعادة المحاولة.

## تنظيف داخلي

- استخدم فوطة أو قطعة قماش ناعمة لمسح المنطقة المحيطة بفتحة باب الغسالة ورجاج الباب.
- أزل دانماً الأغراض من الغسالة بمجرد اكمال الدورة. قد يتسبب ترك الملابس مبللة داخل الغسالة في كرمشتها، وقدان لونها، وتغير رائحتها.
- شغل برنامج "تنظيف الحوض" مرة واحدة في الشهر (أو أكثر من مرة حسب الحاجة) لإزالة تراكمات المنظف والبقايا الأخرى.


## ! تحذير

- افصل الغسالة قبل التنظيف لتجنب خطر التعرض لصمة كهربائية. قد يؤدي عدم اتباع هذا التحذير إلى التعرض إلى إصابة خطيرة، أو نشوب حريق، أو التعرض لصمة كهربائية، أو حدوث وفاة.
- لا تستخدم أبداً مواداً كيميائية مركزة، أو منظفات كاشطة، أو مذيبات لتنظيف الغسالة. قد يتسبب ذلك في تلف تشطيب الغسالة.

## تنظيف الغسالة

### العناية بعد الغسيل

- بعد انتهاء الدورة، امسح الباب وداخل مانعة تسريب الباب لإزالة أي رطوبة.
- اترك الباب مفتوحاً لتجفيف حلة الغسل من الداخل.
- امسح هيكل الغسالة بقطعة قماش ناعمة جافة لإزالة أي رطوبة.

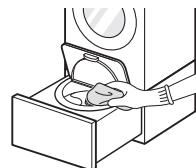

## تنظيف الهيكل الخارجي

يمكن أن تزيد العناية المناسبة لغسالتك من عمرها الافتراضي.

### الباب:


- امسح الجزء الداخلي والخارجي باستخدام قطعة قماش مبللة ثم جفف باستخدام قطعة قماش ناعمة.

### الهيكل الخارجي:


- امسح أي تسربات على الفور.
- امسح باستخدام قطعة قماش مبللة.
- لا تضغط على السطح أو على شاشة العرض باستخدام أدوات حادة.

## تنظيف فلتر إدخال الماء

- أغلق المحسس إذا كان سيتم ترك الغسالة لأي فترة من الوقت (على سبيل المثال عطلة)، وخصوصاً عند عدم وجود صرف في الأرضية (أخدود) في المنطقة المجاورة مباشرة.
- قد يومنص الرمز  على الشاشة عند ضعف ضغط الماء أو انسداد فلتر الإدخال بالأوساخ. قم بتنظيف فلتر الإدخال.
- قد يتم سد مرشحات فلتر الإدخال برواسب من الماء العسر، أو برواسب إمداد الماء، أو بمخلفات أخرى.
- ١ أغلق صنبور الماء وفك خرطوم إدخال الماء.

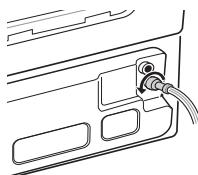

- ٢ نظف الفلتر باستخدام فرشاة خشنة ووصلية.

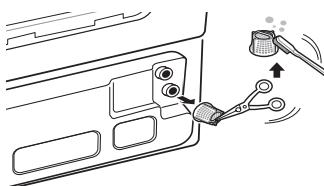

## تنظيف حلقة الغسيل

- استخدم خيار تنظيف الحوض للحفاظ على نظافة الحلقة.
- ١ اضغط على الزر الطاقة.
- ٢ قم بتحفيض ٢٠٠ ميلي من مبيض الكلور السائل في لتر من الماء وقم بسكب المزيج داخل الحلقة.
- ٣ حدد على برنامج **Tub Clean**.

- ٤ اضغط على الزر بعد/إيقاف مؤقت.

### تنبيه

- في حالة وجود طفل، توخي الحذر من إبقاء الباب مفتوحاً لفترة طويلة جداً.

## كيفية التعامل مع التجمد

### الخطوة ١. عند تجمد الباب

- قم بإذابة الثلج من على الباب باستخدام قطعة قماش مبللة بالماء الساخن.

### الخطوة ٢. عند تجمد خرطوم إمداد الماء

- قد يومض رمز  على الشاشة عند حدوث مشكلة في إمداد الماء، لذا يرجى اتخاذ الإجراءات التالية.

- أزل خرطوم إمداد الماء ووصله بالصنبور ثم تحقق من سريان الماء في الصنبور وخرطوم الإمداد.
- أغلق الصنبور، وقم بإذابة الثلج من الصنبور وكل من منطقتي توصيل خرطوم الإمداد للمنتج باستخدام قطعة قماش مبللة بالماء الساخن.
- انزع خرطوم الإمداد واغمره في ماء دافئ تبلغ درجة حرارته أقل من ٦٠٠.٥ درجة مئوية.




## توك الخدر من التجمد في أثناء الشتاء

- في حالة التجمد، لا يعمل المنتج بشكل طبيعي. وتلك من تثبيت المنتج في مكان لن يتجمد فيه في أثناء الشتاء.
- إذا كان يجب تثبيت المنتج في الخارج في الشرفة أو في ظروف خارجية أخرى، فلحرص على التحقق من التالي.

## كيفية حماية المنتج من التجمد

- بعد غلق الصنبور، افصل خرطوم الإمداد البارد من الصنبور، وأزل الماء مع الحفاظ على توجيه الخرطوم لأسفل.

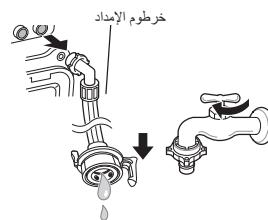

### الخطوة ٣. عند تجمد مضخة التصريف

- ٠ قد يومض رمز **FF** ، **OE** على الشاشة عند حدوث مشاكل في مضخة التصريف، لذا يرجى اتخاذ الإجراءات التالية.

١ اسكب ١٥ لترًا من الماء الدافئ الذي تبلغ درجة حرارته من ٥٠ إلى ٦٠ درجة مئوية داخل الحلة حتى يتم إغراق الصامولة المجنحة وانتظر لمدة ساعة.

٢ اضغط على زر **الطاقة** ومن ثم شغل برنامج العناية بملابس الأطفال لمدة ساعة.

- ٣ عند ظهور الرمز **E** ، **! ١** على الشاشة، كرر الخطوتين ١ و ٢.

٤ قم بفصل الطاقة عند انتهاء برنامج "العناية بالأطفال". إذا كان الدرج مفتوحًا، حدد **Rinse+Spin** برنامج واضغط على زر بدء/إيقاف مؤقت للتأكد من أن الغسالة تعمل.

٥ عند ظهور الرمز **OE** على الشاشة، قم بذابة الثلوج من على الجزء الداخلي من خرطوم التصريف بالماء الساخن.

تم تزويد الجهاز بنظام رصد الخطأ أليًا لكشف المشكلات وتشخيصها في مرحلة مبكرة. وإذا لم يعمل الجهاز بشكل صحيح أو لم يعمل على الإطلاق، فتحقق من التالي قبل الاتصال بالخدمة:

## تشخيص المشكلات

الأعراض	السبب	الحل
الدرج لا يفتح.	انقطاع التيار الكهربائي، أو تم سحب سلك الطاقة للخارج أثناء الغسيل.	<ul style="list-style-type: none"> <li>بعد توفير الطاقة مرة أخرى، اضغط على زر الطاقة مع لوحة التحكم الخاصة بالغسالة الرئيسية أو جهاز التحكم عن بعد.</li> </ul>
يبدأ تصريف المياه عند الضغط على زر التشغيل/الإيقاف المؤقت.	يتم الضغط على زر التشغيل/الإيقاف المؤقت أثناء الغسيل.	<ul style="list-style-type: none"> <li>عند الضغط على زر التشغيل/الإيقاف المؤقت أثناء الغسيل، يتم فتح الدرج بعد التصريف للأمان.</li> </ul>
صوت الارتجاج والقعقعة	قد توجد أجسام غريبة مثل المفاتيح أو القطع المعدنية أو ببابيس السلامة في حالة الغسل.	<ul style="list-style-type: none"> <li>قم بإيقاف تشغيل الغسالة، وافحص حالة الغسل بحثاً عن أجسام غريبة. إذا استمر صدور صوت الضجيج بعد إعادة تشغيل الغسالة، فاتصل طلب الخدمة.</li> </ul>
الغسالة تصدر صوتاً غير اعتيادي	قد ينبع عن حمولات الغسيل الثقيلة إصدار صوت غير اعتيادي.	<ul style="list-style-type: none"> <li>إذا استمر الصوت، فقد تكون كمية الغسيل غير متوازنة.</li> <li>أوقف وأعد توزيع كمية الغسيل.</li> </ul>
أوضاع الاهتزاز	قد تكون حمولة الغسيل غير متوازنة.	<ul style="list-style-type: none"> <li>قم بإيقاف تشغيل الدورة مؤقتاً وأعد توزيع الحمولة بعد فك قفل الباب.</li> <li>أزل مواد التغليف.</li> </ul>
تسرب الماء مع كل حمولة	لم يتم تركيب الخراطيش بشكل صحيح.	<ul style="list-style-type: none"> <li>قم بإيقاف تشغيل الدورة مؤقتاً وأعد توزيع الحمولة بعد فك قفل الباب.</li> <li>راجع "صيغة مستوى الجهاز" في قسم التركيب.</li> <li>تأكد من أن الأرض صلبة وليس لينة.</li> </ul>
رغوة كثيفة	مقدار كبير من المنظف أو نوعية منظف غير صحيحة.	<ul style="list-style-type: none"> <li>افحص جميع توصيات الماء والتصريف للتأكد من احكام الربط والتوصيل.</li> <li>قلل كمية المنظف للغسيل المتسخ بشكل عادي. في حالة استخدام كمية كبيرة من المنظف، سيطر هناك كمية كبيرة من الفقاعات بعد عملية الشطف.</li> </ul>

الحال	السبب	الأعراض
<ul style="list-style-type: none"> <li>اغسل دوّماً الملابس ذات الألوان الغامقة بشكل مفصّل عن الملابس ذات الألوان الفاتحة والبيضاء لتجنب تغيير اللون.</li> <li>لا تقم أبداً بغسل الأغراض شديدة الاتساخ مع الأغراض قليلة الاتساخ.</li> </ul>	<p>لم يتم فرز الملابس بطريقة صحيحة.</p>	البيع
<ul style="list-style-type: none"> <li>افحص الخراطيم وموصلات خرطوم التصريف للتأكد من عدم وجود تسرب، أو انقسام، أو تشققات.</li> <li>اربط الخراطوم بإحكام.</li> </ul>	<p>إن توصيل خرطوم الإمداد بالصنوبر، أو الغسالة، أو موصل خرطوم التصريف غير محكم.</p>	
<ul style="list-style-type: none"> <li>تقوم الغسالة بضخ الماء بسرعة كبيرة. افحص الماء الذي يتم إخراجه من أنبوب التصريف أثناء عملية التصريف.</li> <li>في حالة مشاهدة الماء يخرج من مخرج التصريف، تتحقق من تثبيت خرطوم التصريف بشكل سليم وتحقق من إصمامات ماء التصريف. اتصل بسيك لإصلاح أنبوب التصريف.</li> </ul>	<p>انسداد أنابيب خرطوم التصريف.</p>	
<ul style="list-style-type: none"> <li>قم بتنشيط خرطوم التصريف في الأنابيب الرأسية لمنعه من الانفصال أثناء عملية التصريف. وبالنسبة لأنابيب التصريف الأصغر حجماً، قم بتركيب خرطوم التصريف في الأنابيب إلى أقصى حد في الحافة الدائرية. أما بالنسبة لأنابيب التصريف الأكبر حجماً، قم بتركيب خرطوم التصريف في الأنابيب بقدر من ٢ إلى ٥ سم من الحافة الدائرية.</li> </ul>	<p>انفال خرطوم التصريف عن موصل التصريف أو لم يتم إدخاله بالمقدار الكافي.</p>	تسرب الماء
<ul style="list-style-type: none"> <li>قلل الحمولة أو استخدم الغسالة الرئيسية.</li> <li>قم بباقي الغسالة وتحقق من الحمولة تأكيداً من عدم تكثيف الحمولة داخل الحلة ومن سهولة إغلاق الياب.</li> </ul>	<p>الحمولة كبيرة جداً على الحلة.</p>	
<ul style="list-style-type: none"> <li>قد ينبع عن الرغوة الكثيفة تسربيات، وربما تحدث بسبب نوع وكمية المنظف المستخدم. قم دوّماً بقليل كمية المنظف إذا كانت الحمولة صغيرة أو تنتهي بشكل خفيف، أو إذا كان الماء يسر للغاية. لا تستخدم أبداً أكثر من الكمية القصوى الموضحة في الموزع المتوفر.</li> <li>أزل دائمًا الأغراض من الغسالة بمجرد اكمال الدورة.</li> </ul>	<p>رغوة كثيفة من المنظف.</p> <p>عدم إفراغ حمولة الغسالة بشكل سريع.</p>	
<ul style="list-style-type: none"> <li>يمكن وضع الحمولة كاملة في الغسالة، ولكن دون تكثيف كمية كبيرة من الأغراض داخل الحلة. ينبغي أن يتم إغلاق باب الغسالة بسهولة.</li> </ul>	<p>وضع حمولة زائدة داخل الغسالة.</p>	الكرمšeة

الحال	السبب	الأعراض
• هذا أمر طبيعي، اضغط على الزر الطاقة لتشغيل الغسالة.	تم إيقاف تشغيل لوحة التحكم بسبب التوقف عن التشغيل.	لن تعمل الغسالة.
• تأكيد من توصيل السلك بأمان في مقبس يعمل.	تم فصل الطاقة عن الغسالة.	
• افتح صنبور المياه الباردة بالكامل.	تم إيقاف إمداد الماء.	
• تأكيد من أن الدورة تم إعدادها بشكل صحيح، أغلق الباب واضغط على زر التشغيل/إيقاف الموقت.	لم يتم ضبط عناصر التحكم بشكل صحيح.	
• أغلق الباب والدرج وتأكد من عدم اتحشار أي من الأغراض تحت الباب مما يمنعه من الإغلاق بشكل كامل.	الباب أو الدرج مفتوح.	
• افحص قواطع التيار/المصهرات. استبدل المصهرات أو أعد ضبط القاطع. رباعي تخصيص دائرة كهربائية فرعية خاصة بالغسالة. ستنشأ غسالة الدورة من حيث توقفت بمجرد استئنادة الطاقة.	قاطع التيار/مصهر مفصول/منصهر.	
• اضغط على زر الطاقة، ثم أعد تحديد البرنامج المرغوب فيه واضغط على زر التشغيل/إيقاف الموقت.	ينبغي إعادة ضبط عنصر التحكم.	
• اضغط على زر التشغيل/إيقاف الموقت باستخدام لوحة تحكم الغسالة الرئيسية أو جهاز التحكم عن بعد بعد إغلاق الدرج.	لم يتم الضغط على "بدء/إيقاف موقت" بعد ضبط الدورة.	
• عند استخدام لوحة تحكم الغسالة الصغيرة، اضغط على زر التشغيل/إيقاف الموقت وأغلق الدرج في غضون ٥ ثوان.		
• افحص صنبور آخر بالمنزل للتأكد من أن ضغط الماء بالمنزل مناسب.	ضغط الماء منخفض للغاية.	
• إذا تم تعريض الغسالة لدرجات حرارة تحت درجة التجمد لفترة ممتدة من الوقت، اسمح لها أن تدفأ قبل الضغط على زر الطاقة.	الغسالة باردة للغاية.	

الأعراض	السبب	الحل
الغسالة غير ممتلئة بشكل صحيح.	الفلتر مسدود.	تأكد من أن فلتر الإدخال الموجودة عند صمامات الماء غير مسدودة. راجع إرشادات تنظيف الفلتر.
	ربما تكون خراطيم الإمداد ملتوية.	تأكد من عدم التواء أو انسداد خراطيم الإمداد.
	إمداد الماء غير كافٍ.	تأكد من أن صنبور المياه الباردة قيد التشغيل طوال الوقت.
	باب والدرج مفتوحان.	لن تعمل الغسالة إذا كان الباب مفتوحاً.أغلق الباب وتأكد من عدم انتشار أي شيء أسفل الباب يمنعه من الإغلاق بشكل كامل.
	مستوى الماء منخفض للغاية.	يتم تحديد أفضل مستوى ملء مناسب لحركة الغسيل لتحقيق أفضل أداء للغسالة.
	لا يتم تصريف الماء الموجود في الغسالة أو يتم تصريفه ببطء	خرطوم التصريف ملتوٍ أو مضغوط أو مسدود.
إزالة ضعيفة للبقع	الحملة شديدة الاتساخ.	استخدم الغسالة الرئيسية.
	البقع قاسية وقديمة.	ربما تكون الأعراض التي تم غسلها سابقاً ملوثة ببقع قاسية. ربما يصعب إزالة هذه البقع وقد يتطلب الأمر غسلها يدوياً أو معالجتها مسبقاً للمساعدة في إزالة البقع.
وقت دورة الغسيل أطول من المعتاد.	تقوم الغسالة بضبط وقت الغسل تلقائياً حسب كمية الغسيل، وضغط الماء، وشروط التشغيل الأخرى.	هذا طبيعي. تقوم الغسالة بضبط وقت دورة الغسيل تلقائياً لتقييم تناول ثلاثة للبرنامج المختار. الوقت المتبقي المبين على شاشة العرض ليس سوى قيمة تقديرية. قد يختلف الوقت الفعلي.
تتبعت رانحة عفونة أو فدارة من الغسالة	تم استخدام المنظف غير المناسب أو كمية كبيرة جداً من المنظف.	لا تحتاج هذه الغسالة إلا لمقدار قليل من المنظف. استخدم كوب عيار المنظف الذي تم تزويده.
تصدر الغسالة صوت جرس بشكك متكرر قبل عملية الشطف الأخيرة.	ليس هذا خطأ.	قم بتشغيل برنامج تنظيف الحلة من الداخل جيداً.
	ليس هذا خطأ.	هذا تحذير للسماح بإضافة منع الأقمشة السائل قبل عملية الشطف الأخيرة.



الحل	السبب	الأعراض
<ul style="list-style-type: none"> <li>ان العملية التلقائية لإعادة توازن الحمولة غير ناجحة. تم إيقاف الدورة مؤقتاً للسماح بضبط الحمولة بدؤينا.</li> </ul>	عملية إعادة توازن UE غير ناجحة.	UE
<ul style="list-style-type: none"> <li>أضفت مزيجاً من الأغراض لتمكن الغسالة من موازنة الأحمال.</li> </ul>	الحمولة صغيرة للغاية.	
<ul style="list-style-type: none"> <li>قم بغضل الأغراض ذات الأوزان المتشابهة.</li> <li>قم بإعادة توزيع الحمولة إذا كانت الأغراض متشابكة.</li> </ul>	تم خلط الأغراض الثقيلة مع الملابس ذات الأوزان الأقل.	E
<ul style="list-style-type: none"> <li>افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.</li> </ul>	عطal في وحدة التحكم.	
<ul style="list-style-type: none"> <li>أغلق صنبور المياه الباردة، افصل الغسالة، واتصل بالخدمة.</li> </ul>	مستوى الماء مرتفع للغاية بسبب صمام ماء معيب.	FE
<ul style="list-style-type: none"> <li>أغلق صنبور المياه الباردة، افصل الغسالة، واتصل بالخدمة.</li> </ul>	لا يعمل مستشعر مستوى الماء بشكل صحيح.	
<ul style="list-style-type: none"> <li>قم بإيقاف تشغيل الغسالة لمدة ٣٠ دقيقة ثم أعد تشغيل الدورة. في حالة استمرار ظهور الخطأ LE، اتصل بالخدمة.</li> </ul>	حدث خطأ في المحرك.	LE
<ul style="list-style-type: none"> <li>حان وقت تشغيل البرنامج "تنظيف الحوض".</li> </ul>	يتم تشغيل الغسالة الصغيرة كوحدة منفصلة. يجب أن يتم رصها ضمن غسالة التحميل الأمامي من LG.	
<ul style="list-style-type: none"> <li>لن تعمل الغسالة الصغيرة بدون غسالة رئيسية.</li> <li>لن يعمل مفتاح التكليس بشكل سليم في حالة وضع الوحدة تحت جهاز ليس من أجهزة LG، أو جهاز LG تم تصنيعه قبل عام ٢٠١٧.</li> </ul>	لا يعمل مفتاح الوحدة بشكل سليم.	E7
<ul style="list-style-type: none"> <li>قم بزيادة التلخ من خرطوم الإمداد باستخدام قطعة قماش مبللة بالماء الساخن.</li> <li>اسكب ماء دافئًا في الخلة.</li> </ul>	خرطوم التصريف خرطوم الإمداد أو مضخة التصريف متجمدة.	
<ul style="list-style-type: none"> <li>للغاء التنشيط، قم بإيقاف قفل الأطفال من لوحة التحكم في الغسالة ذات التحميل الأمامي أو اضغط على زر Child Lock لمدة ثلاثة ثوان في لوحة التحكم في الغسالة ذات القاعدة.</li> </ul>	لا يتعبر CL خطأ. تمنع هذه الخاصية الأطفال من تغيير الدورات أو تشغيل الجهاز.	CL

## مذكرة

## مذكرة