



Life's Good

# SIMPLE MANUAL HIGH POWER SPEAKER SYSTEM

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
FH2



MFL71446047

[www.lg.com](http://www.lg.com)

Copyright © 2016-2019 LG Electronics Inc. All Rights Reserved.

ENGLISH

## Precautions on handling a battery

- This unit has a built-in lead-acid rechargeable battery. (12 V/7.0 Ah)
- Do not use the battery in a closed room or near fire.
- Charge the battery under the charging condition specified.
- If any corrosion of the terminals, leakage or deformation of the case of the battery is found, do not use the battery.
- If the battery leaks, while protecting your hands or clothing, remove the battery from the device and should be extremely careful not to infect the skin or eyes. Please refer to the wiring instructions below.
- If the battery leaks and the liquid inside spills on the skin or clothing, immediately wash it off with plenty of clean water. If the liquid splashes into eyes, immediately flush the eyes with plenty of clean water and consult a doctor.
- Avoid mixed usage of batteries differing in type, manufacturer or history of use.
- Do not throw the battery in fire nor heat the battery.
- Do not short of battery terminals.
- Do not attempt to disassemble, remodel or destroy the battery.
- Do not place the battery near a child.
- The battery can be replaced. If you need to charge your battery more and more frequently, it might be time to replace it. The battery should be serviced by LG Electronics customer care center.
- Charge fully before storing a battery which has not been in use for a long period and turn ON/OFF switch off (OFF). Store the battery in a cool, dry place.
- During storage of the battery, charge it at least once every one month. If the battery is stored for a long period without being charged, its battery life may be shortened.
- The used battery must be recycled or disposed of separately from household waste.

The AUTO POWER On function can be set only when the unit is connected to an AC outlet. When the unit is being powered by the built-in battery only, the AUTO POWER On function is not available.

**POWER:** This unit operates on a mains supply of 100 - 240 V~, 50/60Hz.

**WIRING:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

**WARNING:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  $\frac{1}{2}$  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**IMPORTANT:** The wires in this mains lead are coloured in accordance with the following codes:


- **BLUE: NEUTRAL, BROWN: LIVE:** As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

- During storage of the battery, charge it at least once every one month. If the battery is stored for a long period without being charged, its battery life may be shortened.

The used battery must be recycled or disposed of separately from household waste.



## Top Panel

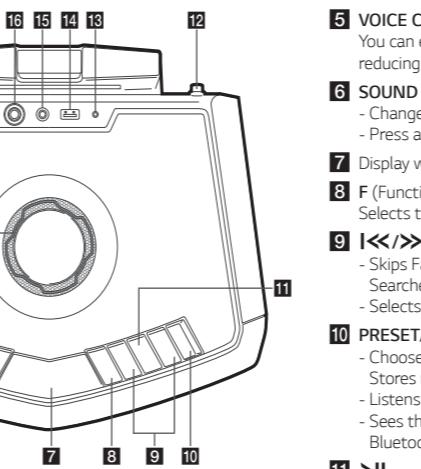

**5 VOICE CANCELLER**  
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

**6 SOUND EFFECT/BASS BLAST**  
- Changes the sound effect.  
- Press and hold to select BASS effect directly.

**7 Display window**

**8 F (Function)**

Selects the function and input source.

**9 I</>I**

- Skips Fast backward or Forward. /  
- Searches for a section within a file by pressing and holding.  
- Selects the radio stations.

**10 PRESET/REPEAT**

- Chooses a preset number for a radio station. /  
- Stores radio stations by pressing and holding.  
- Listens to your files repeatedly or randomly.  
- Sees the name of connected all Bluetooth device in Bluetooth mode.

**11 >/>**

Starts or pauses playback.  
Adjusts speaker or microphone volume.

**12 FM antenna**

**13 CHARGING**

Battery charging indicator

**14 USB port**

You can play sound files by connecting the USB device.


**15 PORT IN**

Connects a portable device.

**16 MIC (Microphone)**

Connects a microphone.

## Rear Panel

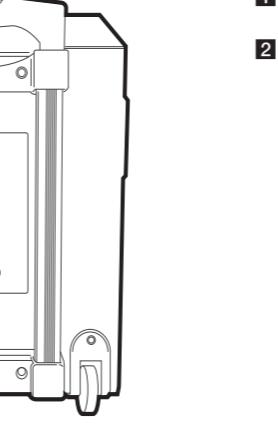

**1 Power ON/OFF switch**  
Switches the unit ON or OFF.

**2 AC in socket**


## Carrying the unit

The unit has wheels and a handle so you can easily move the unit.

- Press the lock button on the handle.



- Pull the handle up.

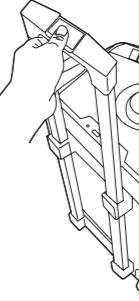

- Release the lock button to lock the handle in place.

### Note

To retract the handle, press the button and push down.

## Additional Information

### Specifications

#### General

**Power Requirements** Refer to the main label of the unit.

**Power Consumption** Refer to the main label of the unit.

**Dimensions (W x H x D)** Approx. 352.5 mm x 149.6 mm x 269.2 mm

**Net Weight** Approx. 9.7 kg

**Operating Temperature** 5 °C to 45 °C

**Operating humidity** 5 % to 100 %

**Bus Power Supply (USB)** 5 V - 500 mA

**Amplifier (Total RMS output power)** 5.0 W

#### Battery

**Battery type** 12V/7.0 Ah (Lead-acid rechargeable battery)

**Operating time** Approx. 15 hours (Based on fully charging the battery and continuous playback using 50 % volume level.) It may vary depending on the battery status and operational conditions.

**Charging time** Approx. 9 hours It may vary depending on the battery status and operational conditions.


**Design and specifications are subject to change without notice.**

# لليل بسيط

# نظام السماعات

# على القدرة

معلومات إضافية	
المواصفات	عام
يرجى الرجوع إلى الملصق الرئيسي	ال يوجد على الوحدة.
يرجى الرجوع إلى الملصق الرئيسي	ال يوجد على الوحدة.
متطلبات الطاقة	ال يوجد على الوحدة.
استهلاك الطاقة	ال يوجد على الوحدة.
الأبعاد الخارجية	حوالى (عرض × الارتفاع × العمق) ٤١٩,٦ مم × ٢٦٩,٢ مم × ٣٥٢,٥ مم
الوزن الصافي	حوالى ٩,٧١ كجم
درجة الحرارة المناسبة	٥ درجة مئوية إلى ٤٥ درجة مئوية
درجة الرطوبة المناسبة	٥٪ إلى ٦٠٪
وحدة التغذية بالطاقة الناقلة (USB)	٥ فولت - ٥٠٠ ملي أمبير
المضخم	الإجمالي طاقة خرج (RMS) ٥٠ وات
البطارية	١٢ فولت / ٧,٠ أمبير ساعة (بطارية حمض الرصاص القابلة لإعادة الشحن)
وقت التشغيل	١٥ ساعة تقريباً (ذلك عند التشغيل المستمر ومستوى صوت ٥٠٪ وشحن البطارية بشكل كامل). قد يختلف وقت التشغيل بناء على حالة البطارية وظروف التشغيل.
وقت الشحن	٩ ساعة تقريباً قد يختلف وقت التشغيل بناء على حالة البطارية وظروف التشغيل.
التصنيمات والمواصفات	عرضة للتغيير دون إشعار مسبق.

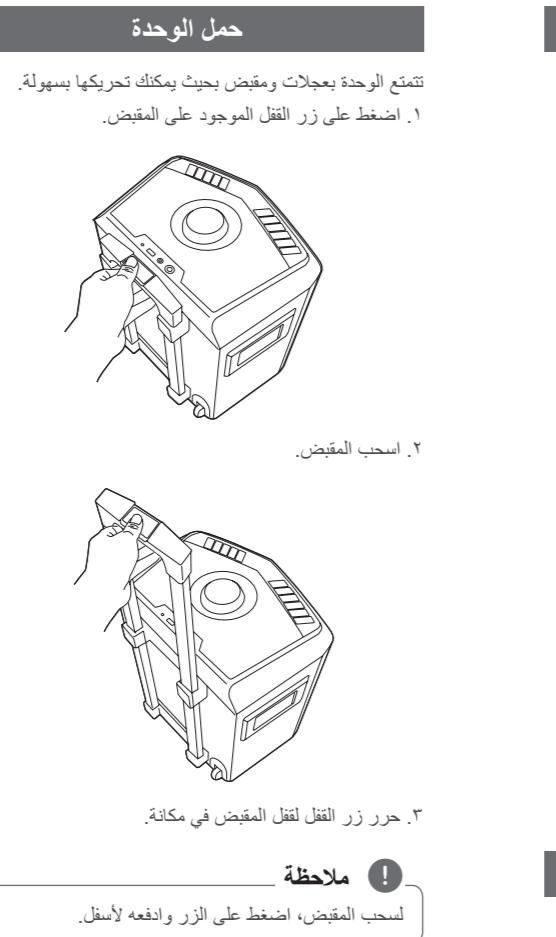

- احتياطات التعامل مع البطارية**
- تتميز هذه الوحدة ببطارية حمض الرصاص قابلة لإعادة الشحن.
  - تزويد هذه الوحدة بقابس تيار كهربائي بجهد ٢٤٠ فولت، ٥٠ هرتز.
  - تزويد هذه الوحدة بقابس تيار كهربائي بجهد ٧٠ / ١٠٠ أمبير ساعة.
  - لا تستخدم البطارية في غرفة ملتهبة أو بجانب الهواء.
  - أشحن البطارية في ظروف الشحن المحددة.
  - لا تستخدم البطارية في حالة تأكل أحد الأطراف أو ظهر تسريب أو تشهق للهرباب الواقي للبطارية.
  - إذا حدث تسريب للبطارية أزل البطارية من الجهاز مع توخي الحذر لعدم تعرض يديك أو ملمسك لسائل التسريب ويجب خلط القابس وتركيب ملامسة السائل الجاف أو عينيك.
  - إذا حدث تسريب وغسل السائل داخل الجلد أو الملابس، أصله على الفور بكمية وفيرة من الماء والصابون.
  - إذا لامس السائل العينين اغسلها بالماء على الفور بكمية وفيرة من الماء النظيف واستشر الطبيب.
  - تجنب الاستخدام المختلط بين أنواع البطاريات المختلفة أو من شركات تصنيع مختلفة.
  - لا تلقي البطاريات في الهباء أو عرضها لمصدر حرارة.
  - لا تقم بتسريب أطراف البطارية.
  - لا تحاول تفكيك البطارية أو تعديلها أو تدميرها.
  - لا تضع البطاريات في التيار الكهربائي.
  - يمكن استبدال البطارية، إذا كانت بطارتك تتحاج إلى إعادة الشحن بشكل متكرر، فقد يكون هذا الوقت مناسب لتغييرها. يجب توصيل السلك المميز قبل مرکز خدمة شريكك (N) أو المميز باللون الأسود. يجب توصيل السلك المميز باللون البني مع طرف التوصيل مفاجأة ON/OFF (L) أو المميز باللون الأحمر.
  - مكن بارد وجاف.
  - خلال تخزين البطارية، اشحها مرة واحدة على الأقل كل شهر.
  - إذا تم تخزين البطارية لفترة طويلة دون شحنها، فمن الممكن أن تضرر مدة خدمتها.
  - يجب استبدال البطارية المستخدمة أو التخلص منها بعيداً عن مخلفات المنزل.
- لا يمكن ضبط وظيفة التشغيل الأوتوماتيكي AUTO POWER إلا عندما تكون الوحدة متصلة بمفدي التيار المتردد "AC". عند تشغيل الوحدة بواسطة البطارية المدمجة فقط، تصبح وظيفة التشغيل الأوتوماتيكي AUTO POWER غير مئحة.

www.lg.com

حقوق النشر والتأليف © لعام ٢٠١٦ - LG Electronics Inc. جميع الحقوق محفوظة.



FH2