

OWNER'S MANUAL

WASHING MACHINE



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

EN ENGLISH

FG1612H2W



MFL69475570
Rev.06_053019



한국어.1463-2556
日本語.1389-2559

www.lg.com

Copyright © 2017-2019 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS	4
IMPORTANT SAFETY INSTRUCTIONS	4
INSTALLATION	10
Parts	10
Accessories	10
Specifications	11
Installation Place Requirements	12
Unpacking and Removing Transit Bolts	13
Using Anti-Slip Sheets (Optional)	14
Wooden Floors (Suspended Floors)	14
Leveling the Appliance	15
Connecting the Water Supply Hose	15
Installing the Drain Hose	18
OPERATION	19
Using the Washing Machine	19
Sorting Laundry	20
Adding Cleaning Products	21
Control Panel	23
Programme Table	24
Option Programme	29
Dry ()	33

SMART FUNCTIONS	35
Using Smart ThinQ Application.....	35
Using Smart Diagnosis™	37
MAINTENANCE.....	38
Cleaning Your Washing Machine.....	38
Cleaning the Water Inlet Filter	38
Cleaning the Drain Pump Filter	39
Cleaning the Dispenser Drawer.....	40
Tub Clean (Optional)	40
Caution on Freezing During Winter	41
TROUBLESHOOTING	43
Diagnosing Problems	43
Error Messages	46
WARRANTY	48

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

 WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

 CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

IMPORTANT SAFETY INSTRUCTIONS

 WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

For use in Europe:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, or rain or temperatures below freezing.
- Tighten the drain hose to avoid separation.
- If the power cord is damaged or the hole of the socket outlet is loose, do not use the power cord and contact an authorized service centre.
- Do not plug multiple socket outlets, an extension power cable or adapter with this appliance.

- This appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the power plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Operation

- Do not attempt to separate any panels or disassemble the appliance. Do not apply any sharp objects to the control panel in order to operate the appliance.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.

- Do not put animals, such as pets into the appliance.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Use new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as waxes, wax removers, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, petrol, spot removers, turpentine, vegetable oil, cooking oil, acetone, alcohol, etc.). Improper use can cause fire or explosion.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- In case of flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Do not push down the door excessively, when the appliance door is open.
- Do not touch the door during a high temperature programme.
- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the appliance.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.

- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.
- Do not wash rugs, mats, shoes or pet blankets, or any other items other than clothes or sheets, in this machine.
- This appliance must only be used for domestic household purposes and should not be used in mobile applications.
- If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately.

Technical Safety for Using the Dryer

- Do not dry unwashed items in the appliance.
- Items that have been soiled with substances such as cooking oil, vegetable oil, acetone, alcohol, petroleum, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- The appliance is not to be used if industrial chemicals have been used for cleaning.


Maintenance

- Securely plug the power plug in the socket outlet after completely removing any moisture and dust.
- Disconnect the appliance from the power supply before cleaning the appliance. Setting the controls to the OFF or stand by position does not disconnect this appliance from the power supply.
- Do not spray water inside or outside the appliance to clean it.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the socket outlet.


Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

Parts

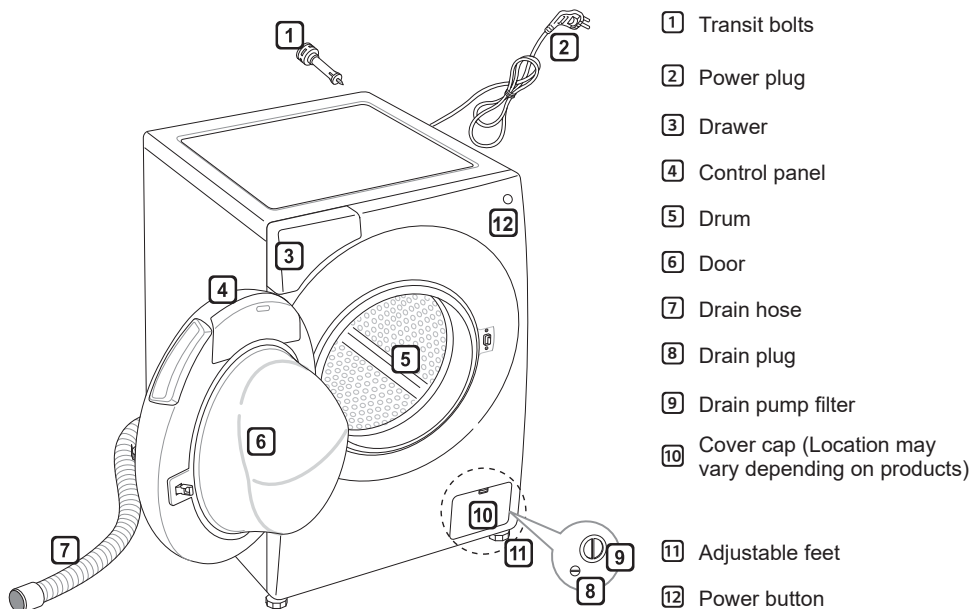

Accessories



Cold supply hose (1 EA)
(Option: Hot (1 EA))



Spanner




Caps for covering
transit bolt holes
(Optional)



Anti-slip sheets (2 EA)
(Optional)

Caution


- Need to use Detachable Hose-sets which come with the new product only.
(Do not use the used Detachable Hose-sets)
- Don't connect hot water because this washing machine don't design for hot water usage.



Elbow bracket for
securing drain hose
(Optional)



Tie strap (Optional)



Stacking holder,
Screws (3 EA)
(Optional)*

- * : Save these accessories for future use. These accessories will be used for stacking with Pedestal washing machine. Refer to the owner's manual for Pedestal washing machine for Installation.


Specifications

Model	FG1612H2W
Wash Capacity	12 kg (Wash) / 8 kg (Dry)
Power Supply	220 V~, 50 Hz
Size	600 mm (W) x 610 mm (D) x 850 mm (H)
Product Weight	76 kg
Permissible Water pressure	0.1 - 1.0 MPa (1.0 - 10.0 kgf / cm ²)

- Appearance and specifications may change without notice to improve the quality of the product.
- No further backflow protection required for connection to the water supply.

Installation Place Requirements

Location

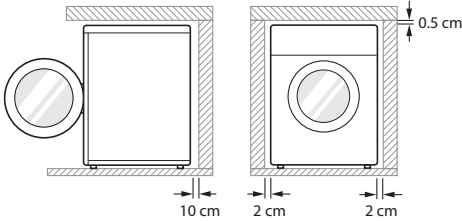

Level floor : Allowable slope under the entire appliance is 1°.

Power outlet : Must be within 1 meter of either side of the location of the appliance.

- Do not overload the outlet with more than one appliance.

Additional Clearance : For the wall, 10 cm: rear/2 cm: right & left side

- Do not place or store laundry products on top of the appliance at any time. These products may damage the finish or controls.

⚠ WARNING

- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Positioning

- Install the appliance on a flat hard floor.
- Make sure that air circulation around the appliance is not impeded by carpets, rugs, etc.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the appliance.

- If it is impossible to avoid positioning the appliance next to a gas cooker or coal burning stove, an insulation (85x60 cm) covered with aluminum foil on the side facing the cooker or stove must be inserted between the two appliances.
- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- With the appliance installed, adjust all four feet using the transit bolt spanner provided to ensure the appliance is stable, and a clearance of approximately 5 mm is left between the top of the appliance and the underside of any worktop
- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.

⚠ WARNING


- This equipment is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc.

Electrical Connection


- Do not use an extension cord or double adapter.
- Always unplug the appliance and turn off the water supply after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.
- Repairs to the appliance must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service centre.

Unpacking and Removing Transit Bolts


- 1 Lift the appliance off the foam base.
 - After removing the carton and shipping material, lift the appliance off the foam base. Make sure the tub support comes off with the base and is not stuck to the bottom of the appliance.
 - If you must lay the appliance down to remove the carton base, always protect the side of the appliance and lay it carefully on its side. Do not lay the appliance on its front or back.

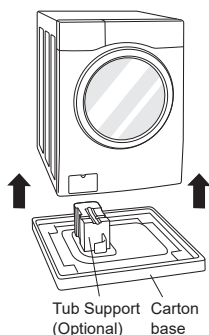

- 2 Remove the bolt assemblies.
 - Starting with the bottom two transit bolts, use the spanner (included) to fully loosen all transit bolts by turning them counterclockwise. Remove the bolt assemblies by wiggling them slightly while pulling them out.

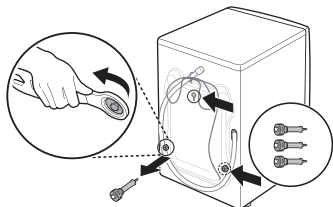

- 3 Install the hole caps.
 - Locate the hole caps included in the accessory pack or attached on the back.

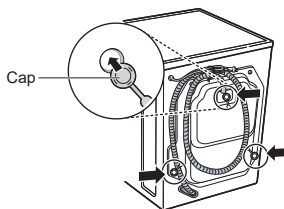



NOTE

- Save the bolt assemblies for future use. To prevent damage to internal components, Do not transport the washing machine without reinstalling the transit bolts.
- Failure to remove transit bolts and retainers may cause severe vibration and noise, which can lead to permanent damage to the washing machine. The cord is secured to the back of the washing machine with a transit bolt to help prevent operation with transit bolts in place.

Using Anti-Slip Sheets (Optional)

If you install the appliance on a slippery surface, it may move because of excessive vibration. Incorrect leveling may cause malfunction through noise and vibration. If this occurs, install the anti-slip sheets under the leveling feet and adjust the level.

- 1 Clean the floor to attach the anti-slip sheets.
 - Use a dry rag to remove and clean foreign objects and moisture. If moisture remains, the anti-slip sheets may slip.
- 2 Adjust the level after placing the appliance in the installation area.
- 3 Place the adhesive side of the anti-slip sheets on the floor.
 - It is most effective to install the anti-slip sheets under the front legs. If it is difficult to place the pads under the front legs, place them under the back legs.

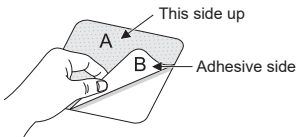


- 4 Ensure the appliance is level.
 - Push or rock the top edges of the appliance gently to make sure that the appliance does not rock. If the appliance rocks, level the appliance again.

NOTE

- You can obtain anti-slip sheets from the LG Service Centre.

Wooden Floors (Suspended Floors)

- Wooden floors are particularly susceptible to vibration.
- To prevent vibration we recommend you place rubber cups at least 15 mm thick of the each foot of the appliance, secured to at least two floor beams with screws.

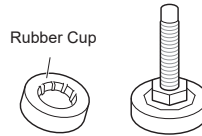

- If possible install the appliance in one of the corners of the room, where the floor is more stable.
- Fit the rubber cups to reduce vibration.


NOTE

- Proper placement and leveling of the washing machine will ensure long, regular, and reliable operation.
- The washing machine must be 100% horizontal and stand firmly in position.
- It must not 'Seesaw' across corners under the load.
- The installation surface must be clean, free from floor wax and other lubricant coatings.
- Do not let the feet of the washing machine get wet. Failure to do so may cause vibration or noise.
- You can obtain rubber cups (p/no.4620ER4002B) from the LG Service Centre.

Leveling the Appliance

If the floor is uneven, turn the adjustable feet as required (Do not insert pieces of wood etc. under the feet). Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (Use a spirit level).

- Once the appliance is level, tighten the lock nuts up towards the base of the appliance. All lock nuts must be tightened.

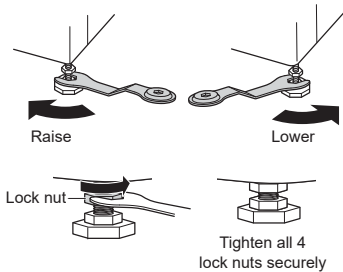

Diagonal Check

- When pushing down the edges of the top plate diagonally, the appliance should not move up and down at all (check both directions). If the appliance rocks when pushing the machine top plate diagonally, adjust the feet again.

NOTE



- Timber or suspended type flooring may contribute to excessive vibration and unbalance.
- If the washing machine is installed on a raised platform, it must be securely fastened in order to eliminate the risk of falling off.

Connecting the Water Supply Hose

- Water pressure must be between 0.1 MPa and 1.0 MPa (1.0–10.0 kgf/cm²).
- Do not strip or crossthread when connecting supply hose to the valve.
- If the water pressure is more than 1.0 MPa, a decompression device should be installed.
- Periodically check the condition of the hose and replace the hose if necessary.

Checking the Rubber Seal on the Water Supply Hose


Two rubber seals are supplied with the water inlet hoses. They are used for preventing water leaks. Make sure the connection to taps is sufficiently tight.

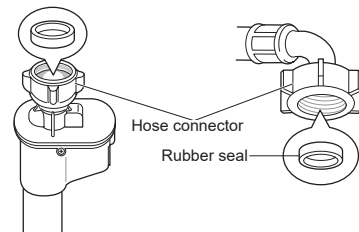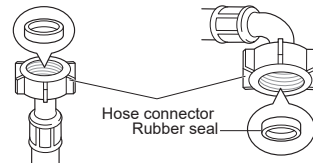

Connecting Hose to Water Tap


Connecting Screw-Type Hose to Tap with Thread

Screw the hose connector onto the water supply tap.

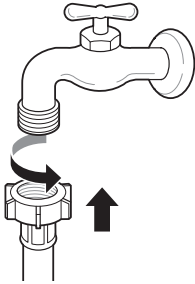


Connecting Screw-Type Hose to Tap Without Thread


- 1 Loose the four fixing screws.

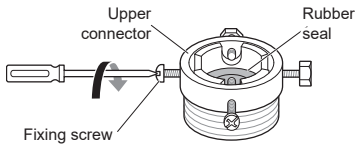


- 2 Remove the guide plate if the tap is too large to fit the adapter.



- 3 Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the four fixing screws.




- 4 Push the supply hose vertically upwards so that the rubber seal within the hose can adhere completely to the tap and then tighten it by screwing it to the right.

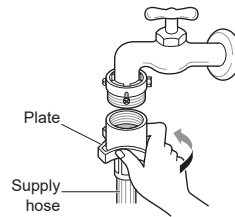

Connecting One Touch Type Hose to Tap Without Thread


- 1 Unscrew the adapter ring plate and loose the four fixing screws.




- 2 Remove the guide plate if the tap is too large to fit the adapter.



- 3** Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the four fixing screws and the adapter ring plate.

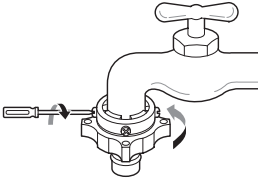

- 4** Pull the connector latch plate down, push the supply hose onto the adapter, and release the connector latch plate. Make sure the adapter locks into place.

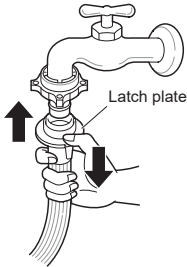


NOTE

- Before connecting the supply hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, and etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

Connecting Hose to Appliance

Attach the hot water line to the hot water supply on the back of the washer. Attach the cold water line to the cold water supply on the back of the washer.

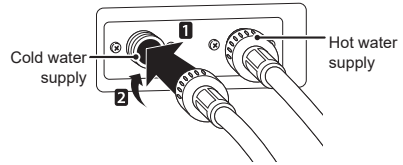

NOTE


- After completing connection, if water leaks from the hose, repeat the same steps. Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the guide plate before inserting the tap into the adaptor.

Using the Horizontal Tap

Horizontal tap



Extension tap




Square tap





Installing the Drain Hose

- The drain hose should not be placed higher than 100 cm above the floor. Water in the appliance may not drain or may drain slowly.
- Securing the drain hose correctly will protect the floor from damage due to water leakage.
- If the drain hose is too long, do not force it back into the appliance. This will cause abnormal noise.

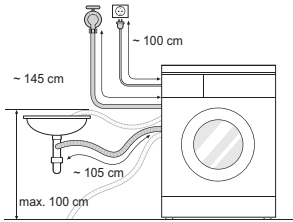

- When installing the drain hose to a sink, secure it tightly with string.
- Securing the drain hose correctly will protect the floor from damage due to water leakage.

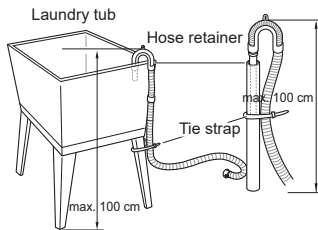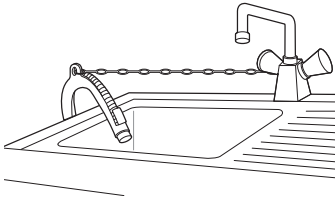


Using the Washing Machine

Before the first wash, select a washing programme, allow the washing machine to wash without clothing. This will remove residue and water from the drum that may have been left during manufacturing.

1 Sort laundry and load items.

- Sort laundry by fabric type, soil level, colour and load size as needed. Open the door and load items into the washing machine.

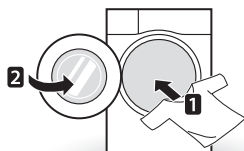


2 Add cleaning products and/or detergent and softener.

- Add the proper amount of detergent to the detergent dispenser drawer. If desired, add bleach or fabric softener to the appropriate areas of the dispenser.




3 Turn on the washing machine.

- Press the **Power** button to turn on the washing machine.

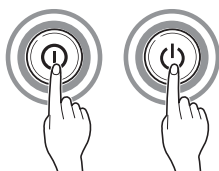

4 Choose the desired washing cycle.

- Press the cycle button repeatedly or turn the cycle selector knob until the desired cycle is selected.

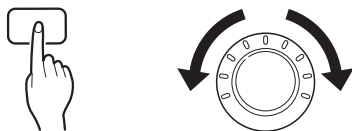

5 Begin cycle.

- Press the **Start/Pause** button to begin the cycle. The washing machine will agitate briefly without water to measure the weight of the load. If the **Start/Pause** button is not pressed within 5 minutes, the washing machine will shut off and all settings will be lost.




6 End of cycle.

- When the cycle is finished, a melody will sound. Immediately remove your clothing from the washing machine to reduce wrinkling. Check around the door seal when removing the load for small items that may be caught in the seal.

NOTE

- The button cannot be recognized when the door is open. Press again after closing the door.

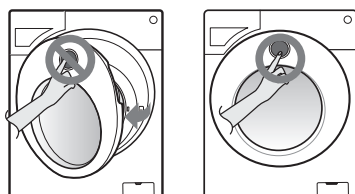

Sorting Laundry

1 Look for a care label on your clothes.

- This will tell you about the fabric content of your garment and how it should be washed.
- Symbols on the care labels.



Wash temperature



Normal machine wash



Permanent press



Delicate



Hand wash



Do not wash

2 Sorting laundry.

- To get the best results, sort clothes into loads that can be washed with the same wash cycle.
- Different fabrics need to be washed at varying temperatures and spin speeds.
- Always sort dark colours from pale colours and whites. Wash separately as dye and lint transfer can occur causing discolouration of white and pale garments. If possible, do not wash heavily soiled items with lightly soiled ones.
- Soil (Heavy, Normal, Light) :
Separate clothes according to amount of soil.
- Colour (White, Lights, Darks):
Separate white fabrics from coloured fabrics.
- Lint (Lint producers, Collectors):
Wash lint producers and lint collectors separately.

3 Caring before loading.


- Combine large and small items in a load. Load large items first.
- Large items should not be more than half the total wash load. Do not wash single items. This may cause an unbalanced load. Add one or two similar items.
- Check all pockets to make sure that they are empty. Items such as nails, hair clips, matches, pens, coins and keys can damage both your washing machine and your clothes.



- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.
- Pre-treat dirt and stains by brushing a small amount of detergent dissolved water onto stains to help lift dirt.

⚠ CAUTION

- Check inside the drum and remove any items from a previous wash.



Adding Cleaning Products

Detergent Dosage

- Detergent should be used according to the instruction of the detergent manufacturer and selected according to type, colour, soiling of the fabric and washing temperature.
- If too much detergent is used, too many suds can occur and this will result in poor washing results or cause heavy load to the motor.
- If you wish to use liquid detergent follow the guidelines provided by the detergent manufacturer.
- You can pour liquid detergent directly into the main detergent drawer if you are starting the cycle immediately.
- Do not use liquid detergent if you are using Time delay, or if you have selected Pre Wash, as the liquid may harden.
- If too many suds occur, reduce the detergent amount.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.
- Refer to the label of the clothes, before choosing the detergent and water temperature.
- When using the washing machine, use designated detergent for each type of clothing only:
 - General powdered detergents for all types of fabric
 - Powdered detergents for delicate fabric
 - Liquid detergents for all types of fabric or designated detergents only for wool
- For better washing performance and whitening, use detergent with the general powdered bleach.
- Detergent is flushed from the dispenser at the beginning of the cycle.

NOTE

- Do not let the detergent harden. Doing so may lead to blockages, poor rinse performance or odour.
- Full load : According to manufacturer's recommendation.
- Part load : 3/4 of the normal amount
- Minimum load : 1/2 of full load

Adding Detergent and Fabric Softener

Adding Detergent


- Main wash only → 
- Pre wash+Main wash →  • 

NOTE

- Too much detergent, bleach or softener may cause an overflow.
- Be sure to use the appropriate amount of detergent.

Adding Fabric Softener

- Do not exceed the maximum fill line. Overfilling can cause early dispensing of the fabric softener, which may stain clothes. Close the dispenser drawer slowly.

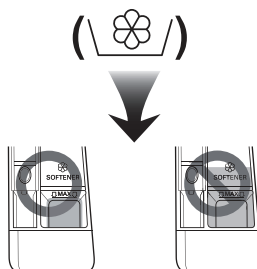


- Do not leave the fabric softener in the detergent drawer for more than 2 days (Fabric softener may harden).
- Softener will automatically be added during the last rinse cycle.
- Do not open the drawer when water is being supplied.
- Solvents (benzene, etc.) must not be used.

NOTE

- Do not pour fabric softener directly on the clothes.


Adding Water Softener

- A water softener, such as anti-limescale can be used to cut down on the use of detergent in areas with high water hardness level.
- Dispense according to the amount specified on the packaging. First add detergent and then the water softener.

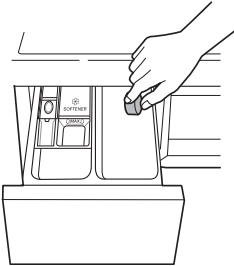


Using Tablet


- 1 Open the door and put tablets into the drum.

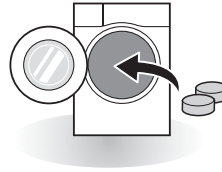

- 2 Load the laundry into the drum and close the door.

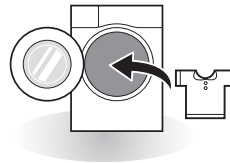

Control Panel

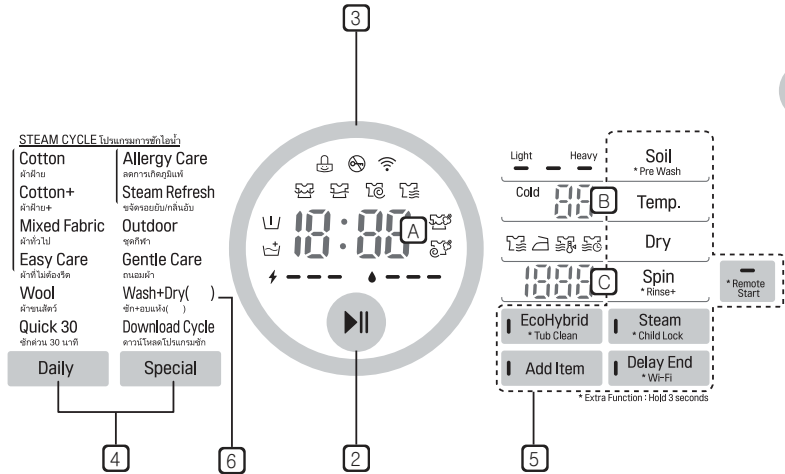

1 Power Button

- Press the **Power** button to turn the washing machine on.

2 Start/Pause Button

- This **Start/Pause** button is used to start the wash cycle or pause the wash cycle.
- If a temporary stop of the wash cycle is needed, press the **Start/Pause** button.

3 Display

- The display shows the settings, estimated time remaining, options, and status messages. When the product is turned on, the default settings in the display will illuminate.
- The estimated energy(⚡) and water(💧) consumptions are displayed before washing and the actual consumptions after washing.

- A** : The display shows estimate time remaining. While the size of the load is being calculated automatically, blinking or 'Detecting' appears.
- B** : The water temperature is displayed when pressing the **Temp.** button.
- C** : The spin speed level is displayed when pressing the **Spin** button.

4 Programme Button

- Programmes are available according to laundry type.
- Lamp will light up to indicate the selected programme.

5 Options

- This allows you to select an additional programme and will light when selected.
- Use these buttons to select the desired programme options for the selected cycle.

6 Wash+Dry()

- () indicates the drying capacity, which varies on the models.

Programme Table

Washing Programme

Programme	Description	Fabric Type	Proper Temp.	Maximum Load
Cotton	Provides better performance by combining various drum motions.	Coloured fast garments (shirts, nightdresses, pajamas, etc.) and normally soiled cotton load (underwear).	40 °C (Cold to 95 °C)	Rating
Cotton+	Provides optimised washing performance for large amount of laundry with less energy consumption.		60 °C (Cold to 60 °C)	
Easy Care	Suitable for casual shirts that do not need ironing after washing.	Polyamide, acrylic, polyester.	40 °C (Cold to 60 °C)	5 kg
Mixed Fabric	Enables various fabrics to be washed simultaneously.	Various kind of fabrics except special garments (silk/delicate, sports wear, dark clothes, wool, duvet/curtains).	40 °C (Cold to 40 °C)	4.5 kg
Allergy Care	Helps to remove allergens such as house mites, pollen, and cat fur.	Cotton, underwear, pillow covers, bed sheets, baby wear	60 °C (60 °C to 95°C)	
Wool	Enables to wash wool fabrics. (Use detergent for machine-washable woolens).	Machine washable woolens with pure new wool only.	30 °C (Cold to 40 °C)	3 kg
Steam Refresh	Helps to remove wrinkles within 20 mins with steam (Clothes may be wet. You can put them on after hang out to dry for 10–30 min).	Cotton mixed, polyester mixed dress shirts, blouses	No choice	3 items

Programme	Description	Fabric Type	Proper Temp.	Maximum Load
Outdoor	Suitable for sports wear such as jogging clothes and running wear.	Coolmax, gore-tex, fleece and sympatex	30 °C (Cold to 40 °C)	3 kg
Quick 30	Provides fast washing time for small loads and lightly soiled clothes.	Lightly soiled colour laundry.	20 °C (Cold to 40 °C)	
Gentle Care	For hand and machine washable delicate clothes such as washable wool, lingerie, dresses etc. (Use detergent for machine washable woolens).	Wool, hand washable clothes, delicate, easily damaged laundry.	20 °C (Cold to 30 °C)	1.5 kg
Wash+Dry	Provides a nonstop process of washing and drying in the same cycle.	A small amount of laundry which can be dried.	40 °C (Cold to 95 °C)	8 kg
Download Cycle	For downloadable programmes. If you did not download any programmes, the default is Rinse+Spin.			

- Water Temperature: Select the appropriate water temperature for chosen wash programme. Always follow garment manufacturer's care label or instructions when washing.

NOTE

- Neutral detergent is recommended.

Drying Programme

Programme	Description	Fabric Type	Maximum Load
Normal ()	For cottons. Select this programme to reduce cycle time and energy usage during the dry cycle.	Cotton or linen fabrics such as cotton towels, t-shirts, and linen laundries.	Rating
Iron ()	For easy iron, finish drying in damp condition.	Cotton or linen fabrics, ready to iron at the end of programme.	Rating
Low Temp. ()	For less clothes damage, it dries in low temperature.	Easy care textiles, synthetic fabrics suitable for Easy Care, Mix programme washable clothes	3.5 kg
Time 30 min. ()	You can change the drying time according to the maximum load.	Cotton, towel	0.5 kg
Time 60 min. ()			1 kg
Time 120 min. ()			3 kg

NOTE

- Select maximum selectable spin speed of washing programme to ensure drying results.
- Where the amount of laundry to be washed and dried in one programme does not exceed the maximum weight permitted for the drying programme, washing and drying in one continuous sequence is recommended.

Extra Options

Programme	Pre Wash	Steam Wash	Steam Softener	Delay End	Rinse+	EcoHybrid	Dry
Cotton	•	•	•	•	•		•
Cotton+	•	•	•	•	•		•
Easy Care	•	•	•	•	•		•
Mixed Fabric	•	•	•	•	•		•
Allergy Care		• ⁺		•	•		•
Wool				•	•		
Steam Refresh		• ⁺					
Outdoor				•	•		•
Quick 30				•	•		•
Gentle Care				•	•		
Wash+Dry	•	•		•	•	•	• ⁺

* : This option is automatically included in the cycle and can not be deleted.

Operating Data

Programme	Max RPM
	1600
Cotton	1600
Cotton+	1600
Easy Care	1200
Mixed Fabric	1600
Allergy Care	1600
Wool	800
Steam Refresh	-
Outdoor	800
Quick 30	1600
Gentle Care	800
Wash+Dry	1600

Option Programme

Delay End

You can set a time delay so that the washing machine will start automatically and finish after a specified time interval.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Delay End** button and set the estimated end time required.
- 4 Press the **Start/Pause** button.

NOTE

- The delay time is the time to the end of the programme, not the start. The actual running time may vary due to water temperature, wash load and other factors.
- To cancel the Time Delay function, the power button should be pressed.
- Avoid using liquid detergent for this option.

EcoHybrid

Use for air condensing dry without water consumption used for condensing.

- 1 Press the **Power** button.
- 2 Select a drying programme.
- 3 Press the **EcoHybrid** button.
- 4 Press the **Start/Pause** button.

NOTE

- Available with the **Normal** or **Iron** programme.

Steam (Optional)

Steam Wash features enhanced washing performance with low energy consumption. Steam Softener sprays steam after a spinning cycle to reduce creases and make the laundry fluffy.

- 1 Press the **Power** button.
- 2 For Steam Wash option, select steam programmes. For Steam Softener option, select Cotton or Cotton+, Mixed Fabric, Easy Care.
- 3 The following programme is selected depending on the number of times you press the **Steam** button.
 - Once: Steam Wash
 - Twice: Steam Softener
 - Three times: Steam Wash and Steam Softener
- 4 Press the **Start/Pause** button.

Steam Wash

- For heavily stained clothes, underwear or baby clothes.
- Available with the Cotton, Cotton+, Mixed Fabric, Easy Care, Allergy Care, Steam Refresh, Wash+Dry programmes.
- Do not use Steam Wash for easily discoloured clothes and delicates such as wool, silk.

Steam Softener

- Good to soften and fluff fabrics after air drying.
- Available with the Cotton, Cotton+, Mixed Fabric, Easy Care programmes.
- Do not use Steam Softener for easily discoloured clothes and delicates such as wool, silk.
- Depending on the kind of fabric, softening performance may be different.

Add Item

Laundry can be added or removed after the washing programme is started.

- 1 Press the **Add Item** button when the LED is turned on.
- 2 Open the door after door lock is released.
- 3 Add or remove laundry.
- 4 Press the **Start/Pause** button again to continue the cycle. The cycle continues automatically.

NOTE

- For safety reasons, the door remains locked when the water level or temperature is high. It is not possible to add laundry during this time.
- If the water temperature in the drum is high, wait until it cools down.

CAUTION

- When adding laundry, make sure to completely push it into the drum. If laundry gets stuck in the door latch hole, the rubber packing may be damaged, causing water leakage and malfunction.
- Forcing the door open may cause part damage, destruction, or safety problems.
- If you open the door while there are a lot of suds and water in the drum, the suds or water may flow, causing burn injury or wet floor.

Remote Start

Use a smart phone to control your appliance remotely. You can also monitor your cycle operation so you know how much time is left in the cycle.

NOTE

- You must first connect to a gateway and register your appliance in order to use the Remote Start function. (Refer to 'SMART FUNCTIONS')

To Use Remote Start:

- 1 Press the **Power** button.
- 2 Put the laundry in drum.
- 3 Press and hold **Remote Start** button for 3 seconds to enable Remote Start function.
- 4 Start a cycle from the LG SmartThinQ application on your smart phone.

NOTE

- If you do not start your appliance, it will wait to start a cycle until you turn off your appliance from the application or disable the Remote Start function.
- When Remote Start is turned on, the door is automatically locked.

To Disable Remote Start:

When the Remote Start is activated, press and hold **Remote Start** button for 3 seconds.

NOTE

- If the door is open, Remote Start is disabled.

Pre Wash (L)

If the laundry is heavily soiled, the Pre Wash programme is recommended.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press and hold the **Pre Wash** button for 3 seconds.
- 4 Press the **Start/Pause** button.

Soil

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Soil** button.
- 4 Press the **Start/Pause** button.

Temp.

The Temp. button selects the wash and rinse temperature combination for the selected programme. Press this button until the desired setting is lit. All rinses use cold tap water.

- Select the water temperature suitable for the type of load you are washing. Follow the garment fabric care labels for best results.

Rinse+ (L+)

Add rinse once.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press and hold the **Rinse+** button for 3 seconds.
- 4 Press the **Start/Pause** button.

Spin

- Spin speed level can be selected by pressing the **Spin** button repeatedly.

- Spin Only

- 1 Press the **Power** button.
- 2 Press the **Spin** button to select RPM.
- 3 Press the **Start/Pause** button.

NOTE

- When you select **No Spin** (0), it will still rotate for a short time to drain quickly.

Child Lock ()

Use this option to disable the controls. This feature can prevent children from changing cycles or operating the appliance

Locking the Control Panel

- 1 Press and hold the **Child Lock** button for three seconds.
- 2 A beeper will sound, and  will appear on the display.
When the Child Lock is set, all buttons are locked except the **Power** button.

NOTE

- Turning off the power will not reset the child lock function. You must deactivate child lock before you can access any other functions.

Unlocking the Control Panel

Press and hold the **Child Lock** button for three seconds.

- A beeper will sound and the remaining time for the current programme will reappear on the display.

Beep On / Off

- 1 Press the **Power** button.
- 2 Press the **Start/Pause** button.
- 3 Press and hold the **Soil** and **Temp.** button simultaneously for 3 seconds to set the Beep on/off function.

NOTE

- Once the Beep on/off function is set, the setting is memorized even after the power is turned off.
- If you want to turn the Beeper off, simply repeat this process.

Wi-Fi()

Set the Wi-fi connection. When Wi-Fi is connected, the Wi-Fi icon on the control panel is lit.

Dry (🌀)

Use your Automatic programmes to dry most loads. Electronic sensors measure the temperature of the exhaust to increase or decrease drying temperatures for faster reaction time and tighter temperature control.

- Cold water tap must be left on during drying programmes.
- This washing machine's automatic process from washing to drying can be selected easily.
- For most even drying, make sure all articles in the clothes load are similar in material and thickness.
- Do not overload the washing machine by stuffing too many articles into the drum. Items must be able to tumble freely.
- If you open the door and remove the load before the washing machine has finished its cycle, remember to press the **Start/Pause** button.
- By pressing the **Dry** button, you can select: Normal-Iron-Low Temp.-Time (30-60-120).
- After the end of dry, '🌀 d' is displayed. '🌀 d' means crease decreasing. The drying cycle is already done. Press any buttons and take out clothes. If you do not press the **Start/Pause** button, the programme ends after about 4 hours.

NOTE

- When you turn the washing machine off of the drying cycle, the drying fan motor can be operated to save itself for 60 seconds. Then the washing machine will display '🌀 F' on the panel. '🌀 F' means cooling fan.
- Be careful when removing your clothing from the washing machine, as the clothing or washing machine may be hot.

Woolen Articles

- Do not tumble dry woolen articles. Pull them to their original shape and dry them flat.

Woven and Loopknit Materials

- Some woven and loopknit materials may shrink, by varying amounts, depending on their quality.
- Always stretch these materials out immediately after drying.

Permanent Press and Synthetics

- Do not overload your washing machine.
- Take out permanent press articles as soon as the washing machine stops to reduce wrinkles.

Baby Clothes and Night Gowns

- Always check the manufacturer's instructions.

Rubber and Plastics

- Do not dry any items made from or containing rubber or plastics, such as:
 - aprons, bibs, chair covers
 - curtains and table cloths
 - bathmats

Fiber Glass

- Do not dry fiberglass articles in your washing machine. Glass particles left in the washing machine may be picked up by your clothes the next time you use the washing machine and cause skin irritation.

Drying Time Guide

- Drying programme can last up to about 7 hours.
- These drying times are given as a guide to help you set your washing machine for manual drying.
- If the temperature of the drying system is not enough to complete to dry, drying time is modified automatically, and inform it by pop-up window.

NOTE

- The estimated drying time varies from the actual drying time during the Automatic programme. The type of fabric, size of the load, and the dryness selected affect drying time.
- When you select drying only, spinning runs automatically for energy efficiency.

Using Smart ThinQ Application

Installing Smart ThinQ

Search for the LG SmartThinQ application from the Google Play Store or Apple App Store on a smart phone. Follow instructions to download and install the application.

Wi-Fi Function

- For appliances with the  or  logo
Communicate with the appliance from a smart phone using the convenient smart features.

Washer Cycle

Set or download any preferred cycle and operate by remote control.

Tub Clean Coach

Check the appropriate Tub Clean period by washing frequency.

Energy Monitoring

Check the energy consumption of the recently used cycles and monthly average.

Smart Diagnosis

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

Settings

Various functions are available.

Push Alert

Turn on the Push Alerts to receive appliance status notifications. The notifications are triggered even if the LG SmartThinQ application is off.

NOTE

- To verify the Wi-Fi connection, check that **Wi-Fi**  icon on the control panel is lit.
- LG SmartThinQ is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- The machine supports 2.4 GHz Wi-Fi networks only.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Smart Diagnosis™ Using a Smart Phone

- For appliances with the  or  logo

Use this function if you need an accurate diagnosis by an LG Electronics customer information centre when the appliance malfunctions or fails.


Smart Diagnosis™ can not be activated unless the appliance is connected to power. If the appliance is unable to turn on, then troubleshooting must be done without using Smart Diagnosis™.

Using Smart Diagnosis™

Smart Diagnosis™ Through the Customer Information Centre

Use this function if you need an accurate diagnosis by an LG Electronics customer information center when the appliance malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

- 1 Press the **Power** button to turn on the washing machine. Do not press any other buttons or turn the programme knob.
- 2 When instructed to do so by the call center, place the mouthpiece of your phone close to the Power button.

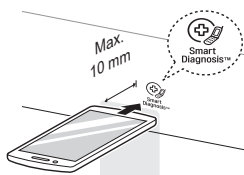

- 3 Press and hold the **Temp.** button for 3 seconds, while holding the phone mouthpiece to the icon or Power button.
- 4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.
 - For best results, do not move the phone while the tones are being transmitted.
 - If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.
- 5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

NOTE

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.


⚠ WARNING

- Unplug the washing machine before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washing machine. They may damage the finish.

Cleaning Your Washing Machine

Care After Wash

- After the cycle is finished, wipe the door and the inside of the door seal to remove any moisture.
- Leave the door open to dry the drum interior.
- Wipe the body of the washing machine with a dry cloth to remove any moisture.

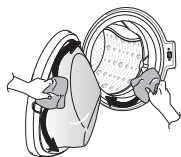

Cleaning the Exterior

Proper care of your washing machine can extend its life.

Door:

- Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

Exterior:

- Immediately wipe off any spills.
- Wipe with a damp cloth.
- Do not press the surface or the display with sharp objects.


Cleaning the Interior

- Use a towel or soft cloth to wipe around the washing machine door opening and door glass.
- Always remove items from the washing machine as soon as the cycle is complete. Leaving damp items in the washing machine can cause wrinkling, colour transfer, and odour.
- Run the Tub Clean programme once a month (or more often if needed) to remove detergent buildup and other residue


Cleaning the Water Inlet Filter

- Turn off the supply taps to the machine if the washing machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
-  icon will be displayed on the control panel when water is not entering the detergent drawer.
- If water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it occasionally.

- 1 Turn off the water tap and unscrew the water supply hose.

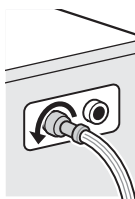


- 2 Clean the filter using a hard bristle brush.

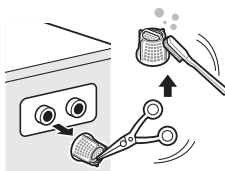


Cleaning the Drain Pump Filter

- The drain filter collects threads and small objects left in the laundry. Check regularly that the filter is clean to ensure smooth running of your washing machine.
- Allow the water to cool down before cleaning the drain pump, carrying out emergency emptying, or opening the door in an emergency.


- 1** Open the cover cap and pull out the hose.

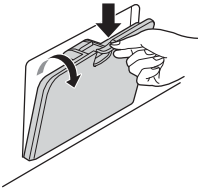


- 2** Unplug the drain plug and open the filter by turning it to the left.

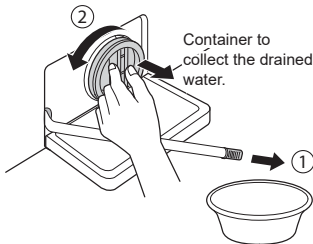


- 3** Remove any extraneous matter from the pump filter.

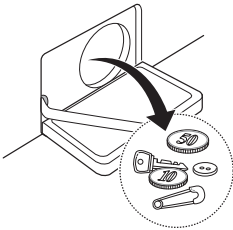

- 4** After cleaning, turn the pump filter and insert the drain plug.

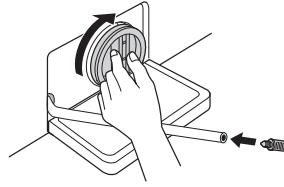

- 5** Close the cover cap.

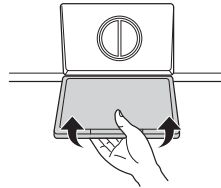


⚠ CAUTION

- First drain using the drain hose and then open the pump filter to remove any threads or objects.
- Be careful when draining, as the water may be hot.

Cleaning the Dispenser Drawer

Detergent and fabric softener may build up in the dispenser drawer. Remove the drawer and inserts and check for buildup once or twice a month.

- 1 Remove the detergent dispenser drawer by pulling it straight out until it stops.
 - Press down hard on the disengage button and remove the drawer.

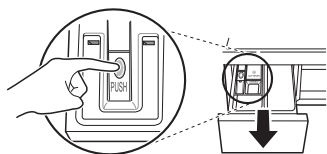

- 2 Remove the inserts from the drawer.
 - Rinse the inserts and the drawer with warm water to remove buildup from laundry products. Use only water to clean the dispenser drawer. Dry the inserts and drawer with a soft cloth or towel.
- 3 To clean the drawer opening, use a cloth or small, non-metal brush to clean the recess.
 - Remove all residue from the upper and lower parts of the recess.
- 4 Wipe any moisture off the recess with a soft cloth or towel.
- 5 Return the inserts to the proper compartments and replace the drawer.

Tub Clean (Optional)

Tub Clean is a special programme to clean the inside of the washing machine.

A higher water level is used in this programme at higher spin speed. Perform this programme regularly.

- 1 Remove any clothing or items from the washing machine and close the door.
- 2 Open the dispenser drawer and add anti-limescale to the main wash compartment.
 - For tablets put into the drum.
- 3 Close the dispenser drawer slowly.
- 4 Power on and then press and hold **Tub Clean** button for 3 seconds. Then **tcL** will be displayed on the display.
- 5 Press the **Start/Pause** button to start.
- 6 After the programme is complete, leave the door open to allow the washing machine door opening, gasket and door glass to dry.

CAUTION

- If there is a child, be careful not to leave the door open for too long.

NOTE


- Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washing machine.

Caution on Freezing During Winter


- When frozen, the product does not operate normally. Make sure to install the product where it will not freeze during winter.
- In case the product must be installed outside on a porch or in other outdoor conditions, make sure to check the following.

How to Keep the Product from Freezing

- After washing, remove water remaining inside the pump completely with the opening hose plug used for removal of residual water. When the water is removed completely, close the hose plug used for removal of residual water and cover cap.

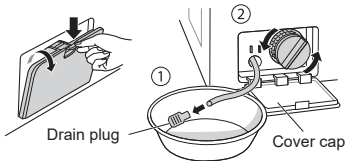


- Hang down drain hose to pull out water inside the hose completely.

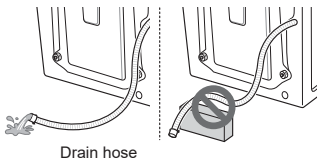

CAUTION


- When the drain hose is installed in a curved shape, the inner hose may freeze.

- After closing the tap, disconnect the cold supply hose from the tap, and remove water while keeping the hose facing downwards.

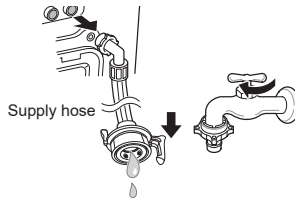


Check for Freezing

- If water does not drain when opening the hose plug used for removal of residual water, check the drainage unit.

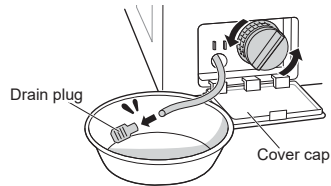

- Turn the power on, choose a washing programme, and press the **Start/Pause** button.

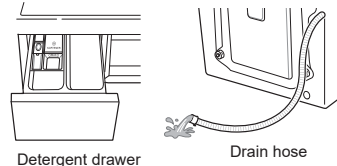


- When 'F F' is shown in display window while the product is in operation, check water supply unit and drainage unit (Some models do not have an alarm function that indicates freezing).

NOTE

- Check that water is coming into the detergent drawer while rinsing, and water is draining through the drain hose while spinning.


How to Handle Freezing

- Make sure to empty the drum, pour warm water of 50–60 °C up to the rubber part inside the drum, close the door, and wait for 1–2 hours.

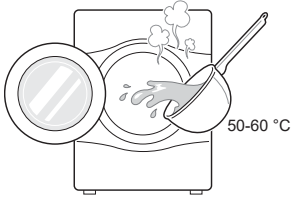

⚠ CAUTION


- When the drain hose is installed in a curved shape, the inner hose may freeze.
- Open the cover cap and hose plug used for removal of residual water to extract water completely.

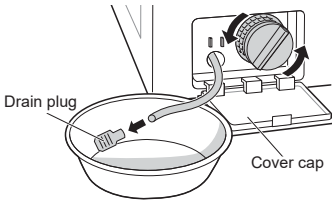

NOTE


- If water does not drain, this means the ice is not melted completely. Wait more.

- When water is removed completely from the drum, close the hose plug used for removal of residual water, choose a washing programme, and press the **Start/Pause** button.

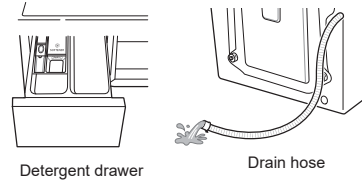

NOTE

- Check that water is coming into the detergent drawer while rinsing, and water is draining through the drain hose while spinning.
- When water supply problems occur, take the following measures.
 - Turn off the tap, and thaw out the tap and both connection areas of inlet hose of the product using a hot water cloth.
 - Take out inlet hose and immerse in warm water below 50–60 °C.

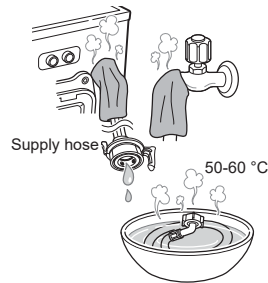

- Your washing machine is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If your washing machine does not function properly or does not function at all, check the following before you call for service:


Diagnosing Problems

Symptoms	Reason	Solution
Rattling and clanking noise	Foreign objects such as coins or safety pins may be in drum or pump.	• Check all pockets to make sure that they are empty. Items such as clips, matches, pens, coins, and keys can damage both your washer and your clothes. • Close zippers, hooks, and drawstrings to prevent these items from snagging or tangling on other clothes.
Thumping sound	Heavy wash loads may produce a thumping sound. This is usually normal.	• If sound continues, washing machine is probably out of balance. Stop and redistribute wash load.
Vibrating noise	Have all the transit bolts and tub support been removed?	• If not removed during installation, refer to Installation guide for removing transit bolts.
	Are all the feet resting firmly on the ground?	• Make sure the washing machine is level and tighten the lock nuts up towards the base of the appliance.
Water leaks	Supply hoses or drain hose are loose at tap or washing machine.	• Check and tighten hose connections.
	House drain pipes are clogged.	• Unclog drain pipe. Contact plumber if necessary.
Oversudsing	Too much detergent or unsuitable detergent may cause excessive foaming which may result in water leaks.	• Make sure that the suggested amount of detergent is used per the manufacturer's recommendations.

Symptoms	Reason	Solution
Water does not enter washing machine or it enters slowly	Water supply is not adequate in that location.	• Check another tap in the house.
	Water supply tap is not completely open.	• Fully open tap.
	Water supply hose(s) are kinked.	• Straighten hose.
	The filter of the supply hose(s) clogged.	• Check the filter of the supply hose.
Water in the washing machine does not drain or drains slowly	Drain hose is kinked or clogged.	• Clean and straighten the drain hose.
	The drain filter is clogged.	• Clean the drain filter.
Washing machine does not start	Electrical power cord may not be plugged in or connection may be loose.	• Make sure plug fits tightly in wall outlet.
	House fuse blown, circuit breaker tripped, or a power outage has occurred.	• Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician.
	Water supply tap is not turned on.	• Turn on water supply tap.
Washing machine will not spin	Check that the door is firmly shut.	• Close the door and press the Start/Pause button. After pressing the Start/Pause button, it may take a few moments before the washing machine begins to spin. The door must be locked before spin can be achieved. Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning.

Symptoms	Reason	Solution
Door does not open	Once washing machine has started, the door cannot be opened for safety reasons.	Check if the 'Door Lock' icon is illuminated. You can safely open the door after the 'Door Lock' icon turns off.
Wash cycle time delayed	If an imbalance is detected or if the suds removing programme is on, the wash time will increase.	This is normal. The time remaining shown in the display is only an estimate. Actual time may vary.
Fabric softener overflow	Too much softener may cause an overflow.	Follow softener guidelines to ensure appropriate amount is used. Do not exceed the maximum fill line.
Softeners dispensed too early	Too much softener may cause an premature dispensing.	- Follow the guidelines provided by the detergent manufacturer. - Close the dispenser drawer slowly. Do not open the drawer during the wash cycle.
The buttons may not function properly.	The button cannot be recognized when the door is open.	Press again after closing the door.
Dry problem	Check water supply tap.	- Do not overload. Check that the washing machine is draining properly to extract adequate water from the load. Clothes load is too small to tumble properly. Add a few towels. - Turn off water supply tap.
Odor	This odor is caused by the rubber attached to the washing machine.	It is the normal odor of new rubber and will disappear after the machine has been run a few times.
	If the rubber door gasket and door seal area are not cleaned regularly, odors can occur from mold or foreign substances.	Be sure to clean the gasket and door seal regularly and check under the door seal for small items when unloading the washer.
	Odors can occur if foreign substances are left in the drainage pump filter.	Be sure to clean the drainage pump filter regularly.
	Odors can occur if the drainage hose is not properly installed, causing siphoning (water flowing back inside the washing machine).	When installing the drainage hose, be sure that it doesn't become kinked or blocked.
	Using the dry function, odors can occur from lint and other laundry matter sticking to the heater. (Dryer model only)	This is not a malfunction.
	A particular odor can occur from drying wet clothes with hot air. (Dryer model only)	The odor will disappear after a short while.

Error Messages


Symptoms	Reason	Solution
 	Water supply is not adequate in area.	• Check another tap in the house.
	Water supply taps are not completely open.	• Fully open tap.
	Water supply hose(s) are kinked.	• Straighten hose(s).
	The filter of the supply hose(s) are clogged.	• Check the filter of the supply hose.
	If water leakage occurred in the aqua stop supply hose, indicator A will become red.  May vary depending on the model.	• Use the aqua stop supply hose.
 	Load is too small.	• Add 1 or 2 similar items to help balance the load.
	Load is out of balance.	• Add 1 or 2 similar items to help balance the load.
	The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (e.g. bath mat, bath robe, etc.) this system may stop spinning or even interrupt the spin cycle altogether.	• Rearrange load to allow proper spinning.
	If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.	• Rearrange load to allow proper spinning.

Symptoms	Reason	Solution
 	Drain hose is kinked or clogged.	• Clean and straighten the drain hose.
	The drain filter is clogged.	• Clean the drain filter.
   	Ensure door is not open.	• Close the door completely. If <i>dE</i>, <i>dE1</i>, <i>dE2</i>, <i>dE4</i> is not released, call for service.
 	Door sensor has malfunctioned.	
 	Control error.	• Unplug the power plug and call for service.
 	Water overfills due to the faulty water valve.	• Close the water tap. • Unplug the power plug. • Call for service.
 	Malfunction of water level sensor.	• Close the water tap. • Unplug the power plug. • Call for service.
 	Over load in motor.	• Allow the washing machine to stand for 30 minutes to allow the motor to cool, then restart the cycle.
 	Water leaks.	• Call for service.
 	Is supply/drain hose or drain pump frozen?	• Supply warm water into the drum and unfreeze drain hose and drain pump. Wet a towel in warm water and apply to supply hose.
 	Does not dry.	• Call for service.


THIS LIMITED WARRANTY DOES NOT COVER:

- Service trips to deliver, pick up, or install or repair the product; instruction to the customer on operation of the product; repair or replacement of fuses or correction of wiring or plumbing, or correction of unauthorized repairs/installation.
- Failure of the product to perform during power failures and interruptions or inadequate electrical service.
- Damage caused by leaky or broken water pipes, frozen water pipes, restricted drain lines, inadequate or interrupted water supply or inadequate supply of air.
- Damage resulting from operating the Product in a corrosive atmosphere or contrary to the instructions outlined in the Product's owner's manual.
- Damage to the Product caused by accidents, pests and vermin, lightning, wind, fire, floods, or acts of God.
- Damage or failure caused by unauthorized modification or alteration, or if it is used for other than the intended purpose, or any water leakage where the product was not properly installed.
- Damage or failure caused by incorrect electrical current, voltage, or plumbing codes, commercial or industrial use, or use of accessories, components, or consumable cleaning products that are not approved by LG.
- Damage caused by transportation and handling, including scratches, dents, chips, and/or other damage to the finish of your product, unless such damage results from defects in materials or workmanship.
- Damage or missing items to any display, open box, discounted, or refurbished Product.
- Products with original serial numbers that have been removed, altered, or cannot be readily determined. Model and Serial numbers, along with original retail sales receipt, are required for warranty validation.
- Increases in utility costs and additional utility expenses.
- Repairs when your Product is used in other than normal and usual household use or contrary to the instructions outlined in the Product's owner's manual.
- Costs associated with removal of your Product from your home for repairs.
- The removal and reinstallation of the Product if it is installed in an inaccessible location or is not installed in accordance with published installation instructions, including LG's owner's and installation manuals.
- Damage resulting from misuse, abuse, improper installation, repair, or maintenance. Improper repair includes use of parts not approved or specified by LG.

Strange vibration or noise caused by not removing transit bolts or tub support.

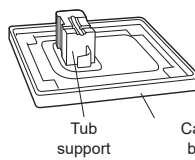


Carton base

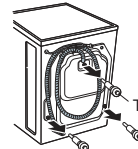


Remove the transit bolts & tub support.

Leakage caused by dirt (hair, lint) on gasket and door glass.

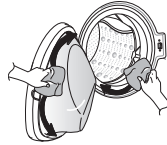


Clean the gasket & door glass.

Not draining caused by clogging of pump filter.




Clean the pump filter.

Water is not coming because water inlet valve filters are clogged or water supply hoses are kinked.

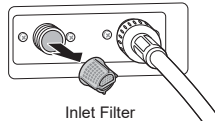


Clean the inlet valve filter or reinstall the water supply hoses.

Water is not coming because too much detergent use.

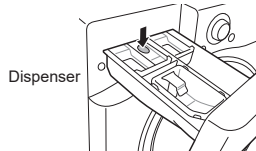


Clean the detergent disperser drawer.

Laundry is hot or warm after finished washing because the supply hoses are installed in reverse.




Reinstall the supply hoses.

Water is not supplied because the water tap is not turned on.

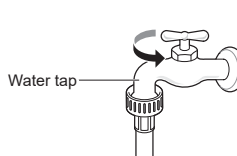


Turn on the water tap.

Leakage caused by improper installation of drain hose or clogged drain hose. ➔

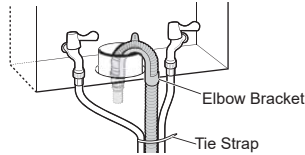


Reinstall the drain hose.

Leakage caused by improper installation of water supply hose or using other brand supply hoses. ➔




Reinstall the supply hose.

No power problem caused by loose connection of power cord or electrical outlet problem. ➔

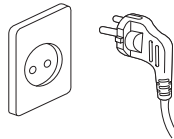


Reconnect the power cord or change the electrical outlet.

Service trips to deliver, pick up, install the product or for instruction on product use. The removal and reinstallation of the product. ➔

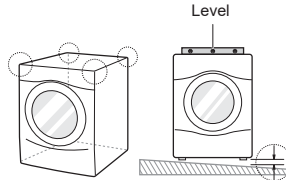


The warranty covers manufacturing defects only. Service resulting from improper Installation is not covered.

If all screws are not installed properly, it may cause excessive vibration (Pedestal model only). ➔



Install 4 screws at each corner (Total 16EA).

Water hammering (banging) noise when washing machine is filling with water. ➔



Adjust the water pressure by turning down the water valve or water tap in the home.

Memo

Memo

Memo

Memo

คู่มือผู้ใช้

เครื่องซักผ้า



ก่อนเริ่มต้นการติดตั้ง โปรดอ่านคำแนะนำเหล่านี้โดยละเอียด ซึ่งจะช่วยให้การติดตั้งง่ายขึ้นและทำให้แน่ใจว่าผลิตภัณฑ์ได้รับการติดตั้งอย่างถูกต้องและปลอดภัย และกรุณาเก็บคำแนะนำเหล่านี้ไว้ใกล้กับผลิตภัณฑ์หลังจากการติดตั้งสำหรับการอ้างอิงในอนาคต

TH THAI

FG1612H2W



MFL69475570
Rev.06_053019



มอก.1463-2556
มอก.1389-2559

www.lg.com

Copyright © 2017-2019 LG Electronics Inc. All Rights Reserved.

สารบัญ

คู่มือฉบับนี้อาจมีรูปภาพหรือเนื้อหาที่แตกต่าง
จากรุ่นที่คุณซื้อ
คู่มือนี้อาจถูกแก้ไขเปลี่ยนแปลงโดยผู้ผลิต

คำแนะนำด้านความปลอดภัย	4
คำแนะนำเพื่อความปลอดภัยที่สำคัญ	4
การติดตั้ง.....	10
ชิ้นส่วน.....	10
อุปกรณ์เสริม.....	10
ข้อมูลจำเพาะ	11
ข้อกำหนดสำหรับสถานที่ติดตั้ง.....	12
การแกะบรรจุภัณฑ์และการถอดสลักขนย้าย	13
การใช้แผ่นกันสั่น (ตัวเลือก)	14
พื้นไม้ (พื้นลอย)	14
การปรับระดับเครื่องใช้	15
การต่อท่อจ่ายน้ำ	15
การติดตั้งท่อระบาย.....	18
การใช้งาน	19
การใช้งานเครื่องซักผ้า.....	19
คัดแยกเสื้อผ้าที่ซัก	20
การใส่ผลิตภัณฑ์ทำความสะอาด	21
แผงควบคุม	23
ตารางโปรแกรม.....	24
โปรแกรมตัวเลือก	29
อบแห้ง (ไอ).....	33

ฟังก์ชันสมารถ.....	35
การใช้แอปพลิเคชัน Smart ThinQ.....	35
การใช้ Smart Diagnosis™	37
การบำรุงรักษา	38
การทำความสะอาดเครื่องซักผ้าของท่าน	38
การทำความสะอาดตัวกรองท่อน้ำเข้า.....	38
การทำความสะอาดตัวกรองบีบระบาย	39
การทำความสะอาดลินชักจ่ายน้ำยา.....	40
ล้างถังซัก (ทางเลือก).....	40
ระวังการเป็นน้ำแข็งในระหว่างฤดูหนาว	41
การแก้ไขปัญหาเบื้องต้น	43
การวินิจฉัยปัญหา	43
ข้อความข้อผิดพลาด	46
การรับประกัน	48

แนวทางปฏิบัติเพื่อความปลอดภัยต่อไปนี้มีจุดมุ่งหมายเพื่อป้องกันความเสี่ยงที่ไม่คาดหมายหรือความเสียหายจากการใช้งานผลิตภัณฑ์ที่ไม่ปลอดภัยหรือไม่ถูกต้อง
แนวทางปฏิบัติได้แยกส่วนเป็น 'คำเตือน' และ 'ข้อควรระวัง' ดังคำอธิบายด้านล่าง



สัญลักษณ์ถูกแสดงสำหรับบ่งบอกรายการหรือการดำเนินการที่สามารถทำให้เกิดความเสี่ยงได้ กรุณาอ่านทำความเข้าใจส่วนของสัญลักษณ์นี้อย่างระมัดระวังและปฏิบัติตามคำแนะนำเพื่อหลีกเลี่ยงความเสี่ยง



คำเตือน

บ่งบอกว่าการไม่ปฏิบัติตามคำแนะนำสามารถทำให้ได้รับบาดเจ็บสาหัสหรือเสียชีวิตได้



ข้อควรระวัง

บ่งบอกว่าการไม่ปฏิบัติตามคำแนะนำสามารถทำให้ได้รับบาดเจ็บเล็กน้อยหรือเกิดความเสียหายต่อผลิตภัณฑ์ได้

คำแนะนำเพื่อความปลอดภัยที่สำคัญ



คำเตือน

สำหรับการลดความเสี่ยงของการระเบิด ไฟไหม้ การเสียชีวิต ไฟฟ้าช็อต การได้รับบาดเจ็บหรือการถูกไอน้ำลวกต่อบุคคลเมื่อใช้งานผลิตภัณฑ์นี้ กรุณาปฏิบัติตามข้อควรระวังเบื้องต้น รวมไปถึงรายการต่อไปนี้:

เด็กเล็กในบ้าน

เครื่องใช้ไม่ได้ออกแบบมาสำหรับการใช้งานโดยบุคคล (รวมไปถึงเด็กเล็ก) ที่มีทักษะทางกายภาพ การรับรู้ หรือทางจิตใจที่บกพร่อง หรือขาดความรู้และประสบการณ์ ยกเว้นแต่ได้รับการควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้นี้โดยบุคคลที่รับผิดชอบความปลอดภัยของพวกเขา เด็กเล็กจะต้องได้รับการควบคุมดูแลเพื่อให้มั่นใจว่าพวกเขาจะไม่เล่นกับเครื่องใช้นี้

สำหรับการใช้งานในยุโรป:

เครื่องใช้ไฟฟ้าสามารถใช้งานโดยเด็กเล็กอายุตั้งแต่ 8 ปีขึ้นไปและบุคคลที่มีทักษะทางกายภาพ การรับรู้ และทางจิตใจที่บกพร่อง หรือขาดความรู้และประสบการณ์ หากว่าพวกเขาได้รับการควบคุมดูแลหรือได้รับคำแนะนำในการใช้งานเครื่องใช้ไฟฟ้าในลักษณะที่ปลอดภัยและเข้าใจในอันตรายที่เกี่ยวข้อง จะต้องไม่让孩子เล็กเล่นกับเครื่องใช้ไฟฟ้า การทำความสะอาดและการบำรุงรักษาโดยผู้ใช้จะต้องไม่กระทำโดยเด็กเล็กโดยปราศจากการควบคุมดูแล

ควรกันเด็กอายุต่ำกว่า 3 ปีให้อยู่ห่างๆ เว้นแต่จะได้รับการกำกับดูแลตลอดเวลา

การติดตั้ง

- หากเครื่องใช้ไฟฟ้าได้รับความเสียหาย ชำรุด ถูกถอดชิ้นส่วนบางส่วน หรือมีชิ้นส่วนแตกหักหรือสูญหาย รวมทั้งสายไฟหรือปลั๊กที่ชำรุด อย่าพยายามใช้งานเครื่องใช้ไฟฟ้า
- เครื่องใช้ไฟฟ้านี้ควรถูกขนย้ายโดยคนสองคนหรือมากกว่าที่จับเครื่องใช้ไฟฟ้าอย่างมั่นคง
- อย่าติดตั้งเครื่องใช้ไฟฟ้าในสถานที่ชื้นหรือมีฝุ่น ห้ามติดตั้งหรือเก็บอุปกรณ์ในพื้นที่กลางแจ้งใด ๆ หรือในพื้นที่ใด ๆ ที่อยู่ภายใต้เงื่อนไขด้านสภาพภูมิอากาศ เช่น ถูกแสงแดด ลม หรือฝนโดยตรงหรืออุณหภูมิที่ต่ำกว่าจุดเยือกแข็ง
- ยึดท่อระบายให้นแน่นเพื่อหลีกเลี่ยงการหลุด
- หากสายไฟได้รับความเสียหายหรือช่องของเต้ารับช็อคเกิดหลวม อย่าใช้งานสายไฟและติดต่อศูนย์บริการที่ได้รับอนุญาต
- อย่าเสียบปลั๊กกับเต้ารับที่มีหลายช็อคเกิด สายไฟต่อพ่วง หรืออะแดปเตอร์กับเครื่องใช้ไฟฟ้านี้

- ต้องไม่ติดตั้งเครื่องใช้ที่ด้านหลังของประตูที่ล็อคได้ ประตูเลื่อนหรือประตูที่มีบานพับที่อยู่ตรงกันข้ามกับของเครื่องใช้ ในลักษณะที่จำกัดการเปิดประตูเครื่องใช้ได้อย่างเต็มที่เต็มที่
- เครื่องใช้ไฟฟ้านี้จะต้องได้รับการต่อสายดิน ในกรณีที่มีการทำงานผิดปกติหรือลัดวงจร การต่อสายดินจะช่วยลดความเสี่ยงต่อการเกิดไฟฟ้าช็อตโดยการให้เส้นทางที่มีความต้านทานต่ำที่สุดสำหรับกระแสไฟฟ้า
- เครื่องใช้ไฟฟ้านี้ได้รับการติดตั้งสายไฟที่มีตัวนำที่ต่อสายดินให้อุปกรณ์และปลั๊กไฟแบบต่อสายดิน สายไฟจะต้องถูกเสียบเข้าในเต้ารับช็อคเก็ตที่เหมาะสมซึ่งถูกติดตั้งและต่อสายดินโดยสอดคล้องกับกฎหมายและข้อบัญญัติท้องถิ่นทั้งหมด
- การต่อตัวนำสายดินกับอุปกรณ์ที่ไม่เหมาะสมสามารถส่งผลให้มีความเสี่ยงต่อการเกิดไฟฟ้าช็อตได้ ตรวจสอบกับช่างไฟฟ้าหรือพนักงานบริการที่ได้รับการรับรอง หากท่านมีข้อสงสัยว่าเครื่องใช้ได้รับการต่อสายดินอย่างเหมาะสมหรือไม่
- ห้ามดัดแปลงปลั๊กไฟที่ให้มาพร้อมกับอุปกรณ์ หากปลั๊กไม่พอดีกับเต้ารับให้ติดตั้งเต้ารับที่เหมาะสมโดยช่างไฟฟ้าที่มีคุณวุฒิ

การใช้งาน

- อย่าพยายามแยกชิ้นแผงหน้าปัดต่าง ๆ หรือถอดประกอบเครื่องใช้ไฟฟ้า อย่าใช้วัตถุมีคมกับแผงควบคุมเพื่อใช้งานเครื่องใช้ไฟฟ้า
- ห้ามซ่อมแซมหรือเปลี่ยนชิ้นส่วนใด ๆ ของอุปกรณ์ การซ่อมแซมหรือการให้บริการทั้งหมดต้องดำเนินการโดยพนักงานบริการที่ได้รับการรับรอง เว้นเสียแต่จะได้รับคำแนะนำโดยเฉพาะในคู่มือสำหรับเจ้าของนี้ ใช้ชิ้นส่วนของโรงงานที่ได้รับอนุญาตเท่านั้น

- ห้ามใส่สัตว์เข้าไป เช่น สัตว์เลี้ยงเข้าในเครื่อง
- รักษาพื้นที่ภายใต้และรอบ ๆ อุปกรณ์ให้ปราศจากจากวัสดุที่ติดไฟต่างๆ เช่น ผ้าสำลี กระดาษ เศษผ้า สารเคมี อื่นๆ
- ห้ามเปิดประตูเครื่องใช้ทิ้งไว้ เด็กอาจโหนฝาหรือคลานเข้าไปในเครื่อง ทำให้เกิดความเสียหายหรือบาดเจ็บ
- ใช้ท่อใหม่หรือชุดท่อที่ให้มาพร้อมกับเครื่องใช้นี้ การนำท่อเก่ากลับมาใช้สามารถทำให้เกิดน้ำรั่วและความเสียหายของทรัพย์สินตามมา
- อย่าใส่ ชักหรืออบแห้งข้าวของที่ได้รับการทำความสะอาด ชัก จุ่มหรือเปื้อนสารที่ติดไฟได้หรือระเบิดได้ (เช่น แวกซ์ นํ้ายาล้างแว็กซ์ นํ้ามัน สี นํ้ามันเบนซิน สารล้างนํ้ามัน สารละลายชักแห้ง เคโรซีน เชื้อเพลิง นํ้ายาขจัดรอยเปื้อน นํ้ามันสน นํ้ามันพืช นํ้ามันปรุงอาหาร อะซิโตน แอลกอฮอล์ ฯลฯ) การใช้งานที่ไม่เหมาะสมสามารถทำให้เกิดไฟไหม้หรือการระเบิดได้
- อย่ายื่นอวัยวะใดๆ เข้าไปภายในเครื่องใช้ในขณะที่กำลังทำงาน รอจนถึงชักผ้าหยุดสนิท
- ในกรณีน้ำท่วม ให้ถอดปลั๊กไฟและติดต่อศูนย์ข้อมูลของลูกค้าของ LG อิเล็กทรอนิกส์
- อย่าออกแรงกดฝามากเกินไป เมื่อฝาเครื่องเปิดอยู่
- ห้ามสัมผัสประตูในช่วงโปรแกรมที่มีอุณหภูมิสูง
- ห้ามใช้ก๊าซไวไฟและสารที่ติดไฟ (เบนซิน ก๊าซโซลีน ทินเนอร์, นํ้ามัน, แอลกอฮอล์ อื่น ๆ) ใกล้กับเครื่องใช้
- หากท่อระบายหรือท่อน้ำเข้าเป็นน้ำแข็งในช่วงฤดูหนาว ใช้งานหลังจากทำการละลายน้ำแข็งแล้วเท่านั้น
- เก็บนํ้ายาซักผ้า นํ้ายาปรับผ้านุ่มและนํ้ายาฟอกขาวทั้งหมดให้ห่างจากมือเด็ก

- ห้ามสัมผัสปลั๊กไฟหรือชุดควบคุมเครื่องใช้ด้วยมือที่เปียก
- ห้ามออสายไฟมากเกินไปหรือวางสิ่งของหนักบนสายไฟ
- ห้ามซักพรมชิ้นเล็ก เสื้อ รองเท้าหรือผ้าห่มของสัตว์เลี้ยง หรือสิ่งอื่น ๆ ยกเว้นเสื้อผ้าหรือผ้าปูที่นอน ในเครื่องใช้นี้
- เครื่องใช้นี้จะต้องใช้เพียงเพื่อวัตถุประสงค์ในครัวเรือนและไม่ควรนำมาใช้ในการใช้งานที่มีการเคลื่อนไหว
- หากมีการรั่วของแก๊ส (ไอโซบิวเทน โพรเพน แก๊สธรรมชาติ ฯลฯ) อย่าสัมผัสเครื่องใช้ไฟฟ้าหรือปลั๊กไฟ และระบายอากาศในพื้นที่ทันที

ความปลอดภัยทางเทคนิคสำหรับการใช้งานเครื่องอบผ้า

- อย่าอบแห้งเสื้อผ้าที่ยังไม่ได้ซักในเครื่อง
- เสื้อผ้าที่เป็นสาร เช่น น้ำมันปรุงอาหาร น้ำมันพืช อะซีโตน แอลกอฮอล์ น้ำมันปิโตรเลียม เคโรซีน สารขจัดคราบ น้ำมันสน แวกซ์หรือสารขจัดแว็กซ์ ควรได้รับการซักในน้ำร้อนโดยใช้น้ำยาซักผ้าในปริมาณที่มากขึ้นก่อนทำการอบแห้งในเครื่อง
- อย่าหยุดผลิตภัณฑ์ก่อนสิ้นสุดโปรแกรมการอบแห้งแต่ผ้าทั้งหมดจะถูกนำออกมาอย่างรวดเร็วและผึ่งออกเพื่อกระจายความร้อน
- สิ่งของ เช่น โฟมยาง (โฟมลาเท็กซ์) หมวกคลุมผมอาบน้ำ ผ้ากันน้ำ สิ่งของที่บิด้วยยาง และเสื้อผ้าหรือหมอนที่มีแผ่นโฟมยางภายใน ไม่ควรนำมาอบในผลิตภัณฑ์
- ควรใช้น้ำยาปรับผ้านุ่ม หรือผลิตภัณฑ์ที่คล้ายคลึงกัน ตามที่กำหนดในคำแนะนำของน้ำยาปรับผ้านุ่ม
- เอาสิ่งของทั้งหมด เช่น ไฟแช็กและไม่ขีดไฟ ออกจากกระเป๋า
- ไม่ควรใช้ผลิตภัณฑ์หากใช้สารเคมีทางอุตสาหกรรมในการทำความสะดวก


การบำรุงรักษา

- เสียบปลั๊กไฟในเต้ารับหลังจากที่ขจัดสิ่งสกปรกและความชื้นหมดแล้ว
- ตัดการเชื่อมต่อของเครื่องใช้ไฟฟ้าจากแหล่งจ่ายไฟก่อนการทำความสะอาดเครื่องใช้ไฟฟ้า การตั้งค่าการควบคุมให้อยู่ในตำแหน่ง ปิด หรือ สแตนด์บายไม่ใช่เป็นการตัดการเชื่อมต่อของเครื่องใช้ไฟฟ้าจากแหล่งจ่ายไฟ
- ห้ามสเปรย์น้ำข้างในหรือข้างนอกเครื่องใช้เพื่อทำความสะอาด
- ห้ามถอดปลั๊กเครื่องใช้ไฟฟ้าโดยการดึงที่สายไฟเคเบิล จับที่ปลั๊กไฟให้แน่น และดึงออกตรง ๆ จากเต้ารับชอคเกิดเสมอ


การกำจัด

- ก่อนทำการทิ้งเครื่องใช้ไฟฟ้าเก่า ให้ถอดปลั๊กก่อน ตัดสายไฟตรงด้านหลังเครื่องใช้ไฟฟ้าเพื่อป้องกันการใช้ที่ผิด
- ทิ้งวัสดุหีบห่อทั้งหมด (เช่น ถังพลาสติกและสไตรโฟม) ให้ห่างจากเด็ก วัสดุบรรจุภัณฑ์สามารถทำให้เกิดการหายใจไม่ออก
- เอาฝาลอกก่อนกำจัดหรือทิ้งเครื่องใช้ขึ้นเพื่อหลีกเลี่ยงอันตรายกับเด็กหรือสัตว์ตัวเล็กที่อาจเข้าไปติดอยู่ข้างใน

ชิ้นส่วน

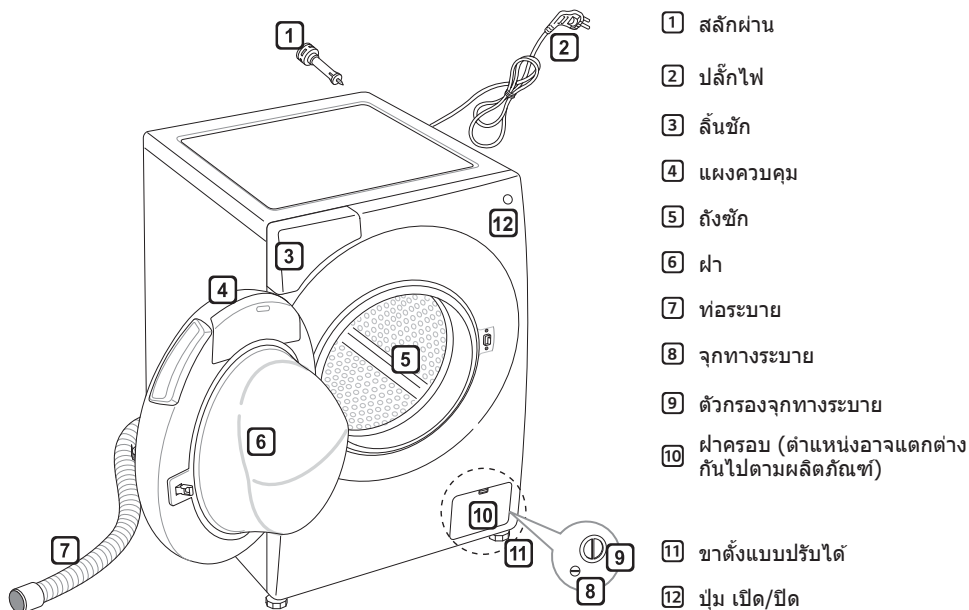

อุปกรณ์เสริม



ท่อจ่ายน้ำเย็น (1 ชิ้น) (ตัวเลือก: ร้อน (1 ชิ้น))



กฏูแจลื่อน




ฝาสำหรับปิดช่องสลักขณย้าย (ทางเลือก)



แผ่นกันลื่น (2 ชิ้น) (ทางเลือก)

คำแนะนำ


- ชุดท่อถอดได้ (Detachable Hose-sets) ต้องใช้ท่อชุดใหม่ที่มีพร้อมกันเครื่องเท่านั้น ไม่ควรนำท่อเก่ามาใช้
- อย่าเชื่อมต่อกับน้ำร้อน เพราะเครื่องซักผ้าไม่ได้ออกแบบมาเพื่อใช้กับน้ำร้อน



แผ่นรองช่องสำหรับการยึดท่อระบาย (ทางเลือก)



สายรัด (ทางเลือก)



แท่นวางชั้นสกรู (3 ชิ้น) (ทางเลือก)*


- * : เก็บอุปกรณ์เสริมเหล่านี้ไว้เพื่อการใช้งานในอนาคต อุปกรณ์เสริมเหล่านี้จะใช้สำหรับตั้งชั้นเครื่องซักผ้าขนาดเล็ก. อ้างอิงคู่มือการใช้งานของเครื่องซักผ้าขนาดเล็กสำหรับวิธีการติดตั้ง

ข้อมูลจำเพาะ

รุ่น	FG1612H2W
ความจุการซัก	12 กก. (ซัก) / 8 กก. (อบแห้ง)
แหล่งจ่ายไฟ	220 โวลต์~, 50 เฮิร์ตซ์
ขนาด	600 มม. (ก.) x 610 มม. (ล.) x 850 มม. (ส.)
น้ำหนักผลิตภัณฑ์	76 กก.
แรงดันน้ำที่รับได้	0.1 - 1.0 MPa (1.0 - 10.0 kgf / cm ²)

- ลักษณะและข้อมูลจำเพาะอาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้าในการปรับปรุงคุณภาพของผลิตภัณฑ์
- ไม่ต้องการป้องกันการไหลย้อนกลับเพิ่มเติมสำหรับการเชื่อมต่อกับน้ำประปา

ข้อกำหนดสำหรับสถานที่ติดตั้ง สถานที่

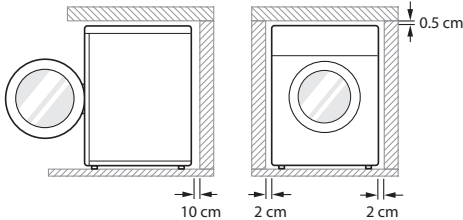

พื้นในระดับ : ความลาดชันใต้ตัวเครื่องใช้ทั้งหมดที่ยอมรับได้เป็น 1°

เต้ารับ : จะต้องอยู่ภายในระยะ 1 เมตรของด้านใดด้านหนึ่งของที่ตั้งของเครื่องใช้ไฟฟ้า

- อย่าทำให้เต้ารับเกิดกระแสไฟฟ้าสูงด้วยเครื่องใช้ไฟฟ้ามากกว่าหนึ่งเครื่อง

ระยะห่างเพิ่มเติม : สำหรับผนัง 10 ซม.: ด้านหลัง/2 ซม.: ด้านขวาและซ้าย

- ห้ามวางหรือเก็บผลิตภัณฑ์ซักผ้าด้านบนของเครื่องใช้ไม่ว่าเวลาใดก็ตาม ผลิตภัณฑ์เหล่านี้อาจสร้างความเสียหายให้กับผิวเคลือบหรือแผงควบคุม

⚠ คำเตือน

- ปลั๊กจะต้องต่อเข้ากับเต้ารับที่เหมาะสมซึ่งได้รับการติดตั้งและต่อสายดินอย่างถูกต้องโดยปฏิบัติตามระเบียบและกฎหมายท้องถิ่นทั้งหมด

การจัดตำแหน่ง

- ติดตั้งเครื่องใช้บนพื้นเรียบแข็ง
- ตรวจสอบให้แน่ใจว่าการไหลเวียนของอากาศรอบ ๆ เครื่องใช้ไม่ได้ถูกขัดขวางโดยพรมปูพื้น พรมผืนเล็ก ฯลฯ
- อย่าพยายามแก้ไขความไม่ในระดับบนพื้นด้วยชิ้นไม้ กระดาษแข็งหรือวัสดุที่คล้ายกันโดยการใส่ใต้เครื่องใช้เป็นอันตราย

- หากเป็นไปไม่ได้ที่จะหลีกเลี่ยงการวางเครื่องใช้ไฟฟ้าติดกับเตาแก๊สหรือเตาถ่าน จะต้องกันฉนวนกันความร้อน (85x60 ซม.) ที่เคลือบด้วยอลูมิเนียมในตำแหน่งที่เห็นเข้าหาเตาแก๊สหรือเตาถ่านระหว่างเครื่องใช้กับเตาดังกล่าว
- ห้ามติดตั้งเครื่องใช้ในห้องที่อาจมีอุณหภูมิที่จุดเยือกแข็งเกิดขึ้น ท่อน้ำที่แข็งตัวอาจแตกเนื่องจากแรงดัน ความน่าเชื่อถือของหน่วยควบคุมอิเล็กทรอนิกส์อาจลดลงถึงอุณหภูมิต่ำกว่าจุดเยือกแข็ง
- ตรวจสอบให้แน่ใจว่าเมื่อมีการติดตั้งเครื่องใช้ วิศวกรสามารถเข้าถึงได้อย่างง่ายดายในกรณีที่เกิดการชำรุด
- เมื่อติดตั้งเครื่องใช้ไฟฟ้าแล้ว ปรับขาทั้งสี่ข้างโดยใช้ประแจเลื่อนสำหรับสลักขมที่ย้ายที่ใหม่ด้วยเพื่อทำให้แน่ใจว่าเครื่องใช้ไฟฟ้ามีความมั่นคง และมีช่องว่างประมาณ 5 มม. ระหว่างด้านบนของเครื่องใช้ไฟฟ้าและด้านล่างของพื้นผิวส่วนบนของเฟอร์นิเจอร์ใดๆ ที่อยู่เหนือเครื่อง
- หากเครื่องใช้ถูกจัดลงในฤดูหนาวและมีอุณหภูมิต่ำกว่าจุดเยือกแข็ง ให้วางเครื่องใช้ไว้ที่อุณหภูมิห้องสองถึงสามชั่วโมงก่อนที่จะนำไปใช้งาน

⚠ คำเตือน

- อุปกรณ์นี้ไม่ได้รับการออกแบบมาสำหรับการทำงานในเรือหรือการติดตั้งแบบเคลื่อนที่ เช่น ขบวนยานพาหนะที่เดินทาง เครื่องบิน ฯลฯ


การเชื่อมต่อทางไฟฟ้า

- อย่าใช้สายไฟที่ต่อพ่วงหรืออะแดปเตอร์สองตัว
- ถอดปลั๊กไฟเครื่องใช้และปิดน้ำประปาหลังการทำงานเสมอ
- เชื่อมต่อเครื่องใช้เข้ากับข้อกั๊กสายดินให้สอดคล้องกับกฎระเบียบการเดินสายไฟฟ้ากระแส
- เครื่องใช้ต้องได้รับการจัดวางให้เข้าถึงปลั๊กได้ง่าย
- การซ่อมแซมเครื่องใช้จะต้องดำเนินการโดยบุคคลากรที่ผ่านการรับรอง การซ่อมแซมที่ดำเนินการโดยบุคคลที่ไม่ใช่ประสบการณ์อาจทำให้เกิดการบาดเจ็บหรือการทำงานผิดปกติที่รุนแรง ติดต่อศูนย์บริการในท้องถิ่นของคุณ

การแกะบรรจุภัณฑ์และการถอดสลักขนย้าย


1 ยกเครื่องไข่ออกจากฐานโฟม

- หลังจากการนำสิ่งบรรจุและวัสดุในการขนย้ายออก ยกเครื่องใช้ไฟฟ้าออกจากฐานโฟม ตรวจสอบให้แน่ใจว่าฐานรองถังชักหลุดออกมาพร้อมกับฐานและไม่ติดกับด้านล่างของเครื่องใช้ไฟฟ้า
- หากคุณต้องวางเครื่องใช้ไฟฟ้าในลักษณะนอนลงเพื่อเอาฐานกล่องกระดาษออก ให้ทำการป้องกันด้านข้างของตัวเครื่องใช้ไฟฟ้าและวางเครื่องใช้ไฟฟ้าลงทางด้านข้างอย่างระมัดระวังเสมอ ห้ามวางเครื่องใช้ไฟฟ้าในลักษณะหงายขึ้นหรือคว่ำลง

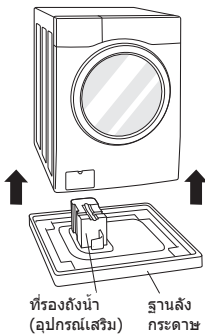


2 ถอดส่วนประกอบสลัก

- เริ่มต้นกับสลักขนย้ายสองตัวที่ด้านล่าง ไขประแจเลื่อน (รวมมาด้วย) เพื่อคลายสลักขนย้ายทั้งหมดออกจนสุดโดยหมุนไปในทิศทางเข็มนาฬิกา ถอดส่วนประกอบสลักโดยการบิดเล็กน้อยในขณะที่กำลังดึงออก

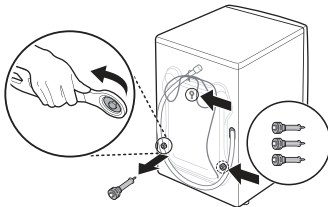

3 ใส่ผ้าปิดช่อง

- มองหาจุกปิดช่องที่ให้มากับชุดอุปกรณ์เสริมหรือติดอยู่ที่ด้านหลัง

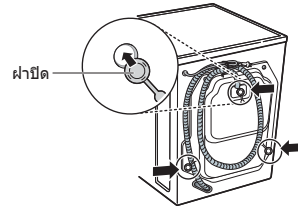

หมายเหตุ

- เก็บชิ้นประกอบสลักไว้สำหรับใช้ในอนาคต เพื่อป้องกันความเสียหายต่อชิ้นส่วนภายใน อย่าขนส่งเครื่องซักผ้าโดยไม่ทำการติดตั้งสลักขนย้ายกลับเข้าไปอีกครั้ง
- การไม่นำสลักขนย้ายและตัวยึดออกอาจทำให้เกิดการสั่นและเสียงรบกวนอย่างรุนแรง ซึ่งอาจนำไปสู่ความเสียหายถาวรต่อเครื่องซักผ้า สายถูกยึดไว้กับด้านหลังของเครื่องซักผ้าด้วยสลักขนย้ายเพื่อช่วยป้องกันการใช้งานโดยมีสลักขนย้ายอยู่

การใช้แผ่นกันลื่น (ตัวล็อก)

หากท่านติดตั้งเครื่องใช้บนพื้นผิวที่ลื่น เครื่องใช้อาจเคลื่อนที่เนื่องจากการสั่นสะเทือนที่มากเกินไป การปรับระดับที่ไม่ถูกต้องอาจทำให้เกิดการทำงานผิดปกติผ่านเสียงและการสั่น หากเกิดกรณีนี้ ติดตั้งแผ่นกันลื่นใต้ขาปรับระดับและปรับระดับ



1 ทำความสะอาดพื้นเพื่อติดแผ่นกันลื่น

- ใช้ผ้าแห้งเพื่อขจัดและทำความสะอาดสิ่งแปลกปลอมและความชื้น ถ้ายังชื้นอยู่ แผ่นกันลื่นอาจลื่น

2 ปรับระดับหลังจากวางเครื่องใช้ในพื้นที่ติดตั้ง

3 วางด้านกาวของแผ่นกันลื่นบนพื้น

- จะให้ผลดีที่สุดหากติดตั้งแผ่นกันลื่นไว้ใต้ขาหน้า หากเป็นการยกที่จะวางแผ่นกันลื่นใต้ขาหน้า ให้วางไว้ใต้ขาหลัง

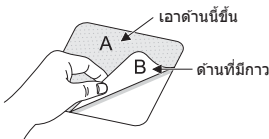

4 ตรวจสอบให้แน่ใจว่าเครื่องใช้อยู่ในระดับที่เสมอ


- ดันหรือโยกขอบด้านบนของเครื่องใช้เบา ๆ เพื่อให้แน่ใจว่าเครื่องใช้ไม่โยก หากตัวเครื่องใช้โยก ปรับระดับเครื่องใช้อีกครั้ง

หมายเหตุ

- ท่านสามารถขอรับแผ่นกันลื่นได้จากศูนย์บริการ LG

พื้นไม้ (พื้นลอย)

- โดยทั่วไป พื้นไม้จะไวต่อการสั่นสะเทือน
- เพื่อป้องกันการลื่น เราแนะนำให้คุณวางถ้วยยางที่มีความหนาอย่างน้อย 15 มม. ของขาแต่ละข้างของเครื่องใช้ไฟฟ้า ยึดไว้กับคานรองพื้นอย่างน้อยสองคานด้วยสกรู

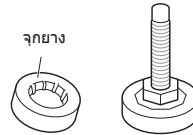

- หากเป็นไปได้ ติดตั้งเครื่องใช้ไฟฟ้าที่มุมหนึ่งของห้อง ที่พื้นมีความมั่นคงมากกว่า
- ใส่จุกยางเพื่อลดการสั่น


หมายเหตุ

- การจัดวางและปรับระดับเครื่องใช้ฝ้าย่างเหมาะสม จะช่วยรับประกันการใช้งานที่ยาวนาน เป็นปกติและเชื่อถือได้
- เครื่องใช้ฝ้ายจะต้องอยู่ในแนวระนาบ 100% และตั้งอยู่ในตำแหน่งอย่างมั่นคง
- เครื่องจะต้องไม่ 'โยกไปมา' ระหว่างมุมต่าง ๆ เมื่อได้รื้อน้ำหนัก
- พื้นผิวที่ติดตั้งจะต้องสะอาด ปราศจากแกรซ์เคลือบพื้นและสารเคลือบหล่อลื่นอื่นๆ
- อย่าให้ขาตั้งของเครื่องใช้ฝ้ายเบียด การไม่ปฏิบัติตาม อาจทำให้เกิดการสั่นหรือเสียงดัง
- คุณสามารถซื้อจุกยาง (หมายเลขชิ้นส่วน 4620ER4002B) จากศูนย์บริการ LG

การปรับระดับเครื่องใช้

หากพื้นไม่เสมอกัน หมุนขาแบบปรับได้ตามต้องการ (อย่าใส่เศษไม้หรืออื่นๆ ได้ขา) ตรวจสอบให้แน่ใจว่าขาตั้งสี่ข้างมั่นคงและแตะกับพื้น และจากนั้นตรวจสอบว่าเครื่องได้ระดับโดยสมบูรณ์ (ใช้เครื่องปรับระดับผิวหน้า)

- เมื่อเครื่องใช้อยู่ในระดับที่เสมอ ขันแป้นเกลียวให้แน่นขึ้นยังฐานของเครื่องใช้ น็อตล็อกทั้งหมดจะต้องถูกขันให้แน่น

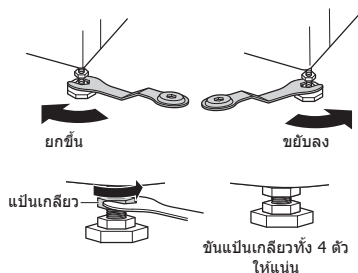

การตรวจสอบแนวทแยง

- เมื่อด้านขอบของแผ่นด้านบนลงในแนวทแยงมุม เครื่องใช้ไม่ควรเคลื่อนขึ้นและเคลื่อนลงทั้งเส้น (ตรวจสอบทั้งสองทิศทาง) หากเครื่องใช้โยกเมื่อดันแผ่นด้านบนบนเครื่องใช้ตามแนวทแยง ให้ปรับขาอีกครั้ง

หมายเหตุ



- ไม้หรือพื้นลื่นชนิดอื่นๆ อาจมีส่วนทำให้เกิดการสั่นและการไม่สมดุลมากเกินไป
- หากติดตั้งเครื่องชักผ่านพื้นที่ยกสูงขึ้น จะต้องได้รับการยึดอย่างแน่นหนาเพื่อกำจัดความเสี่ยงต่อการหล่น

การต่อท่อจ่ายน้ำ

- แรงดันน้ำจะต้องอยู่ระหว่าง 0.1 MPa และ 1.0 MPa (1.0–10.0 kgf/cm²)
- ห้ามตัดเป็นแผ่นยาวหรือพันเป็นเกลียวไปมาเมื่อเชื่อมต่อท่อน้ำประปากับวาล์ว
- หากแรงดันน้ำมากกว่า 1.0 MPa ควรติดตั้งอุปกรณ์ลดแรงดัน
- ตรวจสอบสภาพของท่อน้ำอย่างสม่ำเสมอและเปลี่ยนท่อน้ำหากจำเป็น
- อย่าเชื่อมต่อกับน้ำร้อน เนื่องจากเครื่องชักผ้าไม่ได้ออกแบบให้มีการเชื่อมต่อกับน้ำร้อน

การตรวจสอบซีลยางบนท่อจ่ายน้ำ


มีซีลยางสองชั้นในมาพร้อมท่อน้ำเข้า เอาไว้ใช้สำหรับป้องกันน้ำรั่ว ตรวจสอบให้แน่ใจว่าการต่อก่อน้ำมีความแน่นหนาอย่างเพียงพอ

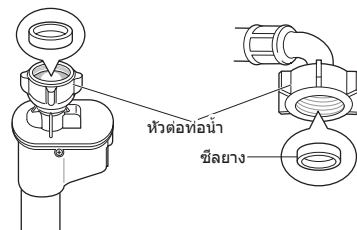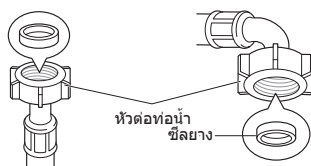

ทำการต่อท่อกับก๊อกน้ำ


การเชื่อมต่อสกรู-ประเภทท่อไปที่ก๊อกด้วยเกลียวหมุน

หมุนตัวต่อท่อน้ำเข้ากับก๊อกจ่ายน้ำ

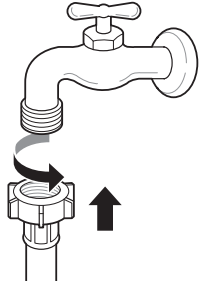


การเชื่อมต่อสกรู-ประเภทท่อไปที่ก๊อกโดยไม่มีเกลียวหมุน


1 คลายสกรูยึดทั้งสี่ตัว

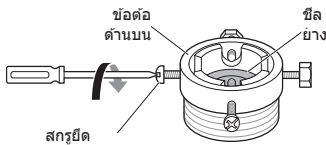


2 ถอดจานน้ำหากก๊อกใหญ่เกินไปที่จะต่อกับอะแดปเตอร์

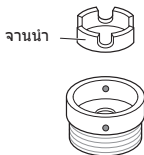

3 กดอะแดปเตอร์เข้ากับหัวก๊อกเพื่อให้ซีลยางรัดกั้นน้ำเข้าออก ชันสกรูยึดทั้งสี่ตัวให้แน่น

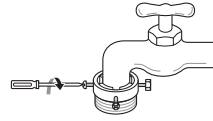


4 ดันท่อประปาขึ้นในแนวตั้งขึ้นเพื่อให้ซีลยางภายในท่อสามารถยึดติดกับก๊อกน้ำได้อย่างสมบูรณ์แล้วทำให้แน่นโดยขันสกรูไปทางขวา

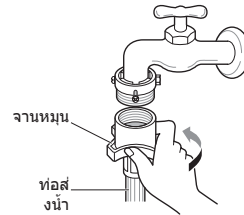


การเชื่อมต่อท่อประเภท One Touch ไปยังก๊อกน้ำโดยไม่มีเกลียวหมุน


1 ขันจานวงแหวนของอะแดปเตอร์ออกและคลายสกรูยึดทั้งสี่ตัว




2 ถอดจานน้ำหากก๊อกใหญ่เกินไปที่จะต่อกับอะแดปเตอร์

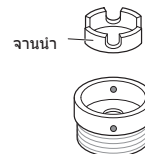

- 3 กุดอะแดปเตอร์เข้ากับหัวก๊อกเพื่อให้ซีลยางรัดกันน้ำเข้าออก ขันสกรูตัวที่ยึดอยู่และแผ่นแหวนอะแดปเตอร์ให้แน่น

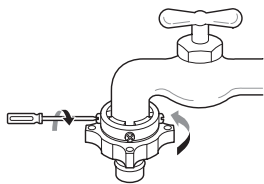

- 4 ดึงข้อต่อแผ่นสลักลง ดันท่อส่งน้ำลงบนอะแดปเตอร์ และปล่อยแผ่นสลักข้อต่อ ตรวจให้แน่ใจว่าอะแดปเตอร์ล็อกอยู่กับที่

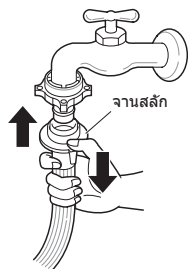


หมายเหตุ

- ก่อนเชื่อมต่อท่อส่งน้ำกับก๊อกน้ำ เปิดก๊อกน้ำเพื่อล้างสิ่งแปลกปลอม (ฝุ่น ทราย ซีลเสีย และอื่น ๆ) ในแนวท่อน้ำ ปล่อยให้ น้ำระบายไล่สิ่ง และตรวจสอบอุณหภูมิของน้ำ

การต่อท่อเข้ากับเครื่องใช้ไฟฟ้า

ต่อสายน้ำร้อนเข้ากับแหล่งจ่ายน้ำร้อนที่ด้านหลังของเครื่องซักผ้า ต่อสายน้ำเย็นเข้ากับแหล่งจ่ายน้ำเย็นที่ด้านหลังของเครื่องซักผ้า

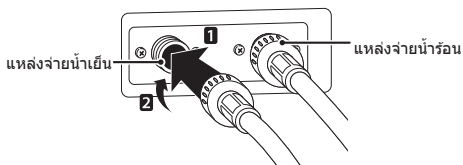

หมายเหตุ


- หลังการต่อจนเสร็จสมบูรณ์ หากน้ำรั่วจากท่อ ให้ทำซ้ำขั้นตอนเดิม ใช้ก๊อคน้ำแบบธรรมดาที่สดสำหรับการจ่ายน้ำ ในกรณีที่ก๊อคน้ำเป็นสีเหลี่ยมหรือใหญ่เกินไป ถอดจานน้ำออกก่อนใส่ก๊อคน้ำเข้ากับอะแดปเตอร์

การใช้น้ำก๊อกแนวนอน

ก๊อคน้ำในแนวนอน



ก๊อกต่อ




ก๊อกสี่เหลี่ยม





การติดตั้งท่อระบาย

- ไม่ควรวางท่อระบายสูงจากพื้นเกินกว่า 100 ซม. น้ำในเครื่องใช้อาจไม่ระบายหรืออาจระบายได้ช้า
- การยึดท่อระบายอย่างถูกต้องจะป้องกันพื้นจากความเสียหายเนื่องจากการรั่วของน้ำ
- หากท่อระบายยาวเกินไป อย่าฝืนใส่กลับเข้าไปในเครื่องใช้ไฟฟ้า การทำเช่นนี้จะทำให้เกิดเสียงที่ผิดปกติ

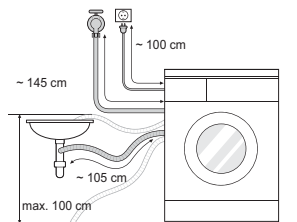

- เมื่อทำการติดตั้งท่อระบายเข้ากับอ่างน้ำ ยึดให้แน่นหนาด้วยสายคล้อง
- การยึดท่อระบายอย่างถูกต้องจะป้องกันพื้นจากความเสียหายเนื่องจากการรั่วของน้ำ

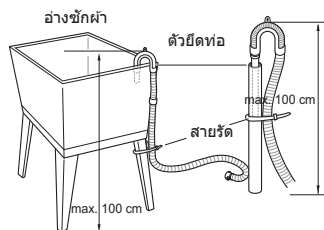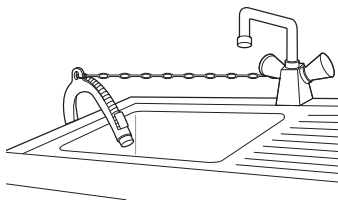


การใช้งานเครื่องซักผ้า

ก่อนการซักครั้งแรก เลือกโปรแกรมการซัก ปล่อยให้เครื่องซักผ้าทำการซักโดยไม่มีเสื้อผ้า การทำเช่นนี้จะขจัดสิ่งตกค้างและนำจากถังซักที่อาจตกค้างในระหว่างการผลิต

1 แยกผ้าและเอาเสื้อผ้าใส่ถัง

- แยกผ้าตามชนิดของผ้า ระดับความสกปรก สีและปริมาณผ้าตามต้องการ เปิดฝาและใส่เสื้อผ้าในเครื่องซักผ้า

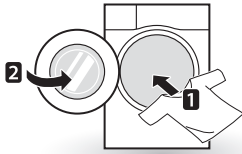


2 ใส่ผลิตภัณฑ์ทำความสะอาด และ/หรือน้ำยาซักผ้า และน้ำยาปรับผ้านุ่ม

- ใส่น้ำยาซักผ้าในปริมาณที่เหมาะสมในลิ้นชักจ่ายน้ำยาซักผ้า หากต้องการ เพิ่มน้ำยาฟอกขาวหรือน้ำยาปรับผ้านุ่มในช่องที่เหมาะสมในตัวจ่ายน้ำยา




3 เปิดใช้งานเครื่องซักผ้า

- กดปุ่ม **เปิด/ปิด** เพื่อเปิดใช้งานเครื่องซักผ้า

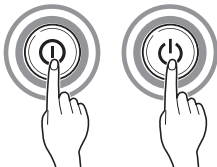

4 เลือกโปรแกรมการซักที่ต้องการ

- กดปุ่มรอบซักผ้าหลาย ๆ ครั้ง หรือหมุนลูกบิดตัวเลือกรอบจนได้รอบซักที่ต้องการ

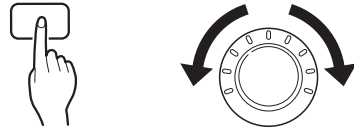

5 เริ่มต้นโปรแกรม

- กดปุ่ม **เริ่ม/พัก** เพื่อเริ่มต้นรอบการใช้งาน เครื่องซักผ้าจะปับเล็กน้อยโดยไม่มีน้ำเพื่อวัดน้ำหนักของผ้าที่จะซัก ถ้าไม่ได้กดปุ่ม **เริ่ม/พัก** ภายใน 5 นาที เครื่องซักผ้าจะปิดการใช้งานและการตั้งค่าทั้งหมดจะหายไป




6 สิ้นสุดโปรแกรม

- เมื่อสิ้นสุดโปรแกรม ทำนองเพลงจะดังขึ้น นำเสื้อผ้าของคุณออกจากเครื่องซักผ้าทันทีเพื่อลดการยับ ตรวจสอบรอบซัลของผ้าปิดเมื่อนำเสื้อผ้าออกมาเพื่อดูว่ามีของขนาดเล็กติดในซัลหรือไม่

หมายเหตุ

- ปุ่มจะไม่ถูกรู้จำเมื่อฝาเครื่องถูกเปิดไว้ กดอีกครั้งหลังจากปิดฝาเครื่อง

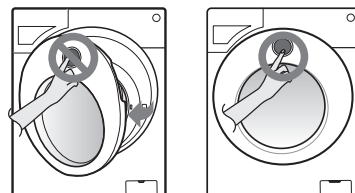

คัดแยกเสื้อผ้าที่ซัก

1 มองหาฉลากการดูแลรักษาบนเสื้อผ้าของคุณ

- ฉลากนี้จะบอกคุณเกี่ยวกับส่วนผสมใยผ้าของเสื้อผ้าของคุณและควรทำการซักอย่างไร
- สัญลักษณ์บนฉลากการดูแลรักษา



อุณหภูมิการซัก



การซักเครื่องปกติ



ผ้ากันยับ



ผ้าอบบาง



การซักมือ



อย่าซัก

2 การแยกผ้า

- เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด ควรแยกเสื้อผ้าออกเป็นกลุ่มที่สามารถซักด้วยโปรแกรมซักเดียวกันได้
- ผ้าที่ต่างกันต้องได้รับการซักที่อุณหภูมิและความเร็วในการปั่นที่แตกต่างกัน
- แยกผ้าที่มีสีเข้มจากผ้าสีอ่อนและสีขาวเสมอ ซักแยกจากกันเนื่องจากการดกสีและการเกาะติดของเศษใยผ้าสามารถเกิดขึ้นได้ ทำให้เกิดการเปลี่ยนสีของเสื้อผ้าสีอ่อนและสีขาว หากเป็นไปได้ อย่าซักผ้าที่สกปรกมากร่วมกับผ้าที่สกปรกน้อย
- รอยเปื้อน (หนัก ปกติ เบา): แยก เสื้อผ้าตามปริมาณรอยเปื้อน
- สี (ขาว สีอ่อน สีเข้ม): แยกผ้าสีขาวออกจากผ้าสี
- ผ้าสำลี (ผ้าสำลีที่มาจากการผลิต ที่มาจากการถัก): ซักผ้าสำลีที่มาจากการผลิตและผ้าสำลีที่มาจากถักแยกออกจากกัน

3 การดูแลรักษาเครื่อง


- รวมเสื้อผ้าชิ้นใหญ่และเล็กเข้าด้วยกัน ใส่เสื้อผ้าชิ้นใหญ่ก่อน
- เสื้อผ้าชิ้นใหญ่ไม่ควรเกินกว่าครึ่งหนึ่งของเสื้อผ้าที่จะซัก อย่าซักเสื้อผ้าชิ้นเดียว การทำเช่นนี้อาจทำให้เกิดภาระที่ไม่สมดุล เพิ่มเสื้อผ้าที่คล้ายคลึงกันหนึ่งหรือสองชิ้น
- ตรวจสอบกระเป๋าทั้งหมดให้แน่ใจว่าไม่มีของอยู่ข้างใน สิ่งของ เช่น เล็บ คลิปหนีบผม ไม่ขัดไฟปากกา เหรียญและกุญแจสามารถสร้างความเสียหายให้กับเครื่องซักผ้าและเสื้อผ้าของคุณได้



- รูดปัดซิป ตะขอและสายรัดเพื่อให้แน่ใจว่าสิ่งเหล่านี้จะไม่เกี่ยวกับเสื้อผ้าอื่นๆ
- จัดการกับสิ่งสกปรกและรอยเปื้อนก่อนโดยการป้ายน้ำที่ละลายน้ำยาซักผ้าไว้เล็กน้อยบนรอยเปื้อนเพื่อช่วยขจัดสิ่งสกปรก

⚠ ข้อควรระวัง

- ตรวจสอบภายในถังซักและนำสิ่งของจากการซักครั้งก่อนออก



การใส่ผลิตภัณฑ์ทำความสะอาด ปริมาณน้ำยาซักผ้า

- ควรใช้น้ำยาซักผ้าโดยปฏิบัติตามคำแนะนำของผู้ผลิตน้ำยาซักผ้าและควรเลือกตามชนิด สี ความสกปรกของผ้าและอุณหภูมิของการซัก
- หากใช้น้ำยาซักผ้ามากเกินไป อาจเกิดฟองมากเกินไปได้และจะส่งผลให้เกิดการซักที่ไม่ดี ส่งผลหรือทำให้เกิดภาระหนักกับมอเตอร์
- หากคุณต้องการใช้น้ำยาซักผ้าแบบเหลว ให้ปฏิบัติตามคำแนะนำที่นำมาโดยผู้ผลิตน้ำยาซักผ้า
- คุณสามารถเทน้ำยาซักผ้าแบบเหลวใส่ในลิ้นชักน้ำยาซักผ้าหลักโดยตรงได้หากคุณเริ่มต้นโปรแกรมทันที
- อย่าใช้น้ำยาซักผ้าหากคุณใช้การหวนเวลา หรือถ้าคุณเลือก โปรแกรมแช่ผ้า เนื่องจากของเหลวอาจแข็งตัว
- หากมีฟองเกิดขึ้นมากเกินไป ลดปริมาณของน้ำยาซักผ้าลง
- ปริมาณการใช้น้ำยาซักผ้าอาจต้องได้รับการปรับสำหรับอุณหภูมิของน้ำ ความกระด้างของน้ำ ปริมาณและระดับความสกปรกของเสื้อผ้าที่ซัก เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด หลีกเลี่ยงการทำให้เกิดฟองมากเกินไป
- ดูที่ป้ายของเสื้อผ้าก่อนเลือกผงซักฟอกและอุณหภูมิของน้ำ
- เมื่อใช้งานเครื่องซักผ้า ใช้น้ำยาซักผ้าที่กำหนดสำหรับเสื้อผ้าแต่ละชนิดเท่านั้น:
 - ผงซักฟอกทั่วไปสำหรับผ้าทุกชนิด
 - ผงซักฟอกสำหรับผ้าที่บอบบาง
 - น้ำยาซักผ้าสำหรับผ้าทุกชนิดหรือน้ำยาซักผ้าสำหรับผ้าขนสัตว์ที่กำหนดไว้เท่านั้น
- เพื่อประสิทธิภาพการซักและการให้ความขาวที่ดีกว่า ใช้น้ำยาซักผ้าร่วมกับสารฟอกขาวแบบผงทั่วไป
- น้ำยาซักผ้าจะถูกล้างออกจากตัวจ่ายในตอนเริ่มต้นของโปรแกรม

หมายเหตุ

- อย่าปล่อยให้ น้ำยาซักผ้าแข็งตัว การกระทำดังกล่าวอาจนำไปสู่การอุดตัน ประสิทธิภาพการล้างน้ำที่ไม่ดี และกลิ่นเหม็น
- ปริมาณซักเต็ม: ตามคำแนะนำของผู้ผลิต
- ปริมาณส่วนเดียว: 3/4 ของปริมาณปกติ
- ปริมาณขั้นต่ำ: 1/2 ของปริมาณซักเต็ม

การใส่น้ำยาซักผ้าและน้ำยาปรับผ้านุ่ม

การใส่ผงซักฟอก


- การซักหลักเท่านั้น → $\frac{1}{1}$
- การซักเตรียม+การซักหลัก → $\frac{1}{1} + \frac{1}{1}$

หมายเหตุ

- น้ำยาซักผ้า น้ำยาฟอกขาวหรือน้ำยาปรับผ้านุ่มที่มากเกินไปอาจทำให้เกิดการสั่น
- ตรวจสอบให้แน่ใจว่าใช้ปริมาณน้ำยาซักผ้าที่เหมาะสม

ใส่น้ำยาปรับผ้านุ่ม

- อย่าใส่เกินกว่าขีดเต็มเต็ม การใส่เกินสามารถทำให้เกิดการจ่ายน้ำยาปรับผ้านุ่มก่อนเวลาได้ ซึ่งอาจทำให้มีรอยเปื้อนเสื้อผ้า ปิดลิ้นชักตัวจ่ายน้ำยาอย่างช้าๆ

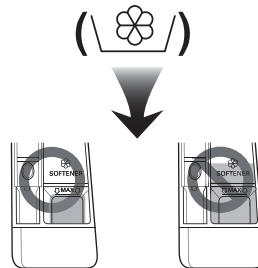


- อย่าทิ้งน้ำยาปรับผ้านุ่มไว้ในลิ้นชักน้ำยาซักผ้าเป็นเวลานานกว่า 2 วัน (น้ำยาปรับผ้านุ่มอาจแข็งตัว)
- น้ำยาปรับผ้านุ่มจะถูกล้างโดยอัตโนมัติในโปรแกรมการล้างน้ำสุดท้าย
- อย่าเปิดลิ้นชักในขณะที่กำลังจ่ายน้ำ
- ห้ามใช้ตัวทำละลาย (เบนซิน ฯลฯ)

หมายเหตุ

- อย่าเทน้ำยาปรับผ้านุ่มใส่ผ้าโดยตรง


การเติมน้ำยาปรับผ้านุ่ม

- สามารถใช้น้ำยาปรับสภาพน้ำ เช่น น้ำยาขจัดหินปูน เพื่อลดการใช้น้ำยาซักผ้าในพื้นที่ที่มีระดับความกระด้างของน้ำสูง
- ใส่ในปริมาณที่กำหนดบนหีบห่อผลิตภัณฑ์ ก่อนอื่นใส่น้ำยาซักผ้าและจากนั้นตามด้วยน้ำยาปรับผ้านุ่ม

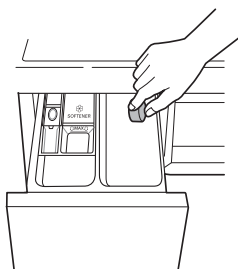


การใช้ผงซักฟอกชนิดเม็ด


1 เปิดฝาและใส่น้ำยาซักผ้าแบบเม็ดในลิ้นชัก

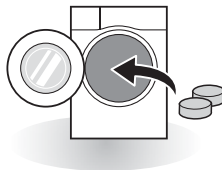

2 ใส่ผ้าที่จะซักในลิ้นชักและปิดฝา

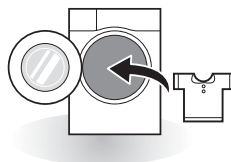

แผงควบคุม

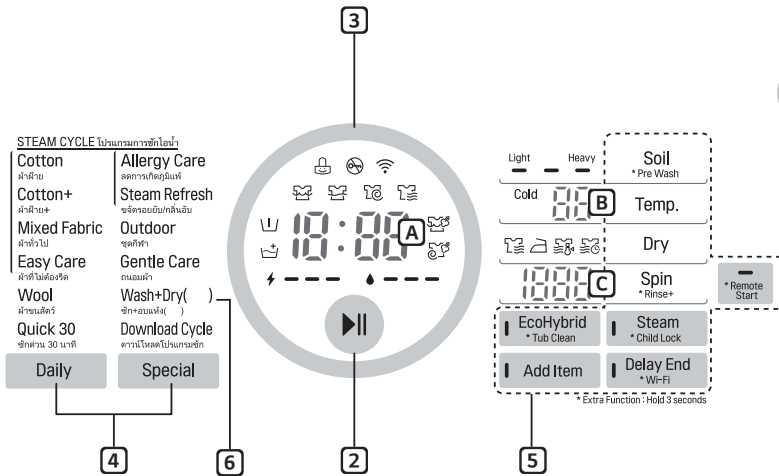

1 ปุ่ม เปิด/ปิด

- กดปุ่ม **เปิด/ปิด** เพื่อเปิดใช้งานเครื่องซักผ้า

2 ปุ่ม เริ่ม/พัก

- ปุ่ม **เริ่ม/พัก** ใช้ในการเริ่มต้นรอบซักหรือหยุดรอบซัก
- หากจำเป็นต้องหยุดรอบการซักชั่วคราว กด ปุ่ม **เริ่ม/พัก**

3 จอแสดงผล

- หน้าจอแสดงการตั้งค่า เวลาที่เหลือโดยประมาณ ตัวเลือก และข้อความสถานะ เมื่อเปิดใช้งานเครื่องซักผ้า การตั้งค่าโดยปริยายในหน้าจอจะสว่างขึ้นมา
- การใช้พลังงาน (⚡) และน้ำ (💧) โดยประมาณ จะถูกแสดงไว้ก่อนที่จะทำการซัก และการใช้จริงหลังการซัก

- A** : หน้าจอแสดงเวลาคงเหลือโดยประมาณ ในขณะที่ขนาดของภาระการซักกำลังถูกคำนวณ โดยอัตโนมัติ สัญลักษณ์ ☀ กะพริบหรือ 'กำลังตรวจสอบ' จะปรากฏขึ้นมา
- B** : อุณหภูมิของน้ำจะแสดงผลออกมาเมื่อกดปุ่ม **Temp.**
- C** : ระดับความเร็วการปั่นหมาดจะแสดงผลออกมาเมื่อกดปุ่ม **Spin**

4 ปุ่ม โปรแกรม

- โปรแกรมต่างๆ มีให้เลือกใช้แบ่งตามชนิดของผ้า
- ไฟจะติดขึ้นมาเพื่อระบุโปรแกรมที่เลือก

5 ตัวเลือก

- ส่วนนี้ช่วยให้คุณเลือกโปรแกรมเพิ่มเติมและจะสว่างขึ้นเมื่อถูกเลือก
- ใช้ปุ่มเหล่านี้เพื่อเลือกตัวเลือกโปรแกรมที่ต้องการสำหรับวงจรที่ถูกเลือกไว้

6 ซัก+อบแห้ง()

- () ระบุถึงความจุการอบแห้ง ซึ่งแตกต่างกันไปตามรุ่น

ตารางโปรแกรม

โปรแกรมการซัก

โปรแกรม	คำอธิบาย	ชนิดของผ้า	อุณหภูมิที่เหมาะสม	ปริมาณการซักสูงสุด
ผ้าฝ้าย	ให้ประสิทธิภาพที่ดีกว่าด้วยการผสมผสานการหมุนถึงซักแบบต่างๆ	ผ้าสีเนื้อแข็งแรง (เชิ้ต กระโปรงนอน ชุดนอน ฯลฯ) และผ้าฝ้ายที่สกปรกแบบทั่วไป (ชุดชั้นใน)	40 °C (เย็นไปจนถึง 95 °C)	การกำหนดอัตรา
ผ้าฝ้าย+	ให้ประสิทธิภาพการซักที่ปรับให้เหมาะสมสำหรับผ้าปริมาณมากด้วยการใช้พลังงานที่น้อยลง		60 °C (เย็นไปจนถึง 60 °C)	
ผ้าที่ไม่ต้องรีด	เหมาะสำหรับเสื้อเชิ้ตลำลองที่ไม่จำเป็นต้องรีดหลังการซัก	โพลีเอไมด์ อะคริลิก โพลีเอสเตอร์	40 °C (เย็นไปจนถึง 60 °C)	5 กก.
ผ้าทั่วไป	ช่วยให้ซักผ้าหลายชนิดพร้อมกันได้	ผ้าหลายชนิดยกเว้นผ้าแบบพิเศษ (ผ้าไหม/ผ้าที่บอบบาง เสื้อผ้ากีฬา ผ้าสีเข้ม ผ้าขนสัตว์ ผ้าไหม/ผ้าไหม)	40 °C (เย็นไปจนถึง 40 °C)	4.5 กก.
ลดการเกิดภูมิแพ้	ช่วยขจัดสารก่อภูมิแพ้ เช่น ไรฝุ่น ละอองเกสร และขนแมว	ผ้าฝ้าย ชุดชั้นใน ผ้าคลุมหมอน ผ้าปูเตียง ชุดเด็กอ่อน	60 °C (60 °C ถึง 95°C)	
ผ้าขนสัตว์	ทำให้สามารถซักผ้าขนสัตว์ได้ (ใช้ผงซักฟอกสำหรับผ้าขนสัตว์ที่ซักด้วยเครื่องได้)	ผ้าขนสัตว์ที่ซักด้วยเครื่องได้ซึ่งมีขนสัตว์ทอใหม่อย่างเดียวนั้น	30 °C (เย็นไปจนถึง 40 °C)	3 กก.
ขจัดรอยยับ/กลิ่นอับ	ช่วยขจัดรอยยับภายใน 20 นาทีด้วยไอน้ำร้อน (ผ้าอาจเปื่อย คุณอาจสามารถสวมใส่ได้หลังจากแขวนผึ่งให้แห้งเป็นเวลา 10–30 นาที)	ผ้าฝ้ายผสม เสื้อเชิ้ตผสม โพลีเอสเตอร์ เสื้อเชิ้ตสตรี	ไม่มีตัวเลือก	3 รายการ

โปรแกรม	คำอธิบาย	ชนิดของผ้า	อุณหภูมิที่เหมาะสม	ปริมาณการซักสูงสุด
ชุดกีฬา	เหมาะสำหรับเสื้อผ้ากีฬา เช่น เสื้อผ้าจ็อกกิ้งและชุดสำหรับวิ่ง	ผ้า Coolmax, gore-tex, ผ้า ฟลีซ และผ้า Sympatex	30 °C (เย็นไปจนถึง 40 °C)	3 กก.
ชุดนอน 30 นาที	ให้เวลาในการซักที่รวดเร็ว สำหรับผ้าที่มีปริมาณน้อย และเปื้อนเล็กน้อย	เสื้อผ้าสีสกปรกน้อย	20 °C (เย็นไปจนถึง 40 °C)	
ถนอมผ้า	สำหรับผ้าอบบางที่ซักด้วยมือหรือซักด้วยเครื่องได้ เช่น ผ้าขนสัตว์ที่ซักได้ ชุดชั้นในสตรี ชุดสตรี ฯลฯ (ใช้ผลิตภัณฑ์ซักผ้าสำหรับผ้าขนสัตว์ที่ซักด้วยเครื่องได้)	ผ้าขนสัตว์ ผ้าที่ซักด้วยมือได้ เสื้อผ้าที่เสียหายได้ง่าย	20 °C (เย็นไปจนถึง 30 °C)	1.5 กก.
ซัก+อบแห้ง	ให้กระบวนการซักและการอบแห้งที่ต่อเนื่องในโปรแกรมเดียวกัน	เสื้อผ้าปริมาณน้อยที่สามารถอบแห้งได้	40 °C (เย็นไปจนถึง 95 °C)	8 กก.
ดาวน์โหลดโปรแกรมซัก	สำหรับโปรแกรมซักที่ดาวน์โหลดได้ หากคุณไม่ได้ดาวน์โหลดโปรแกรมซักใด ๆ ค่าเริ่มต้นจะเป็น ล้าง+ปั่นหมาด			

- อุณหภูมิน้ำ: เลือกอุณหภูมิที่เหมาะสมสำหรับโปรแกรมการซักที่ถูกเลือก ปฏิบัติตามป้ายการดูแลรักษาของผู้ผลิตเสื้อผ้าหรือคำแนะนำเมื่อทำการซักเสมอ

หมายเหตุ

- แนะนำให้ใช้น้ำยาซักผ้าที่เป็นกลาง

โปรแกรมการอบ

โปรแกรม	คำอธิบาย	ชนิดของผ้า	ปริมาณการ ซักสูงสุด
ปกติ (🧺)	สำหรับผ้าฝ้าย เลือกโปรแกรมนี้อเพื่อลดระยะเวลาและการใช้พลังงานของโปรแกรมในระหว่างโปรแกรมอบแห้ง	ผ้าจากผ้าฝ้ายหรือผ้าลินิน เช่น ผ้าขนหนูจากผ้าฝ้าย เสื้อที่เช็ดและเสื้อผ้าจากผ้าลินิน	การกำหนดอัตรา
รีดผ้า (🧺)	เพื่อการรีดผ้าที่ง่าย สิ้นสุดการอบแห้งในสภาวะที่มีความชื้น	ผ้าจากผ้าฝ้ายหรือผ้าลินิน พร้อมสำหรับการรีดผ้าเมื่อสิ้นสุดโปรแกรม	การกำหนดอัตรา
อุณหภูมิต่ำ (🧺)	เพื่อความเสียหายที่น้อยลงของเสื้อผ้าอบแห้งเสื้อผ้าที่อุณหภูมิต่ำ	ผ้าที่ไม่ต้องรีด ผ้าใยสังเคราะห์ที่เหมาะสมสำหรับเสื้อผ้าที่สามารถซักด้วยโปรแกรมเสื้อผ้าที่ไม่ต้องรีด โปรแกรมซักผ้าทั่วไปได้	3.5 กก.
Time 30 min. (🧺)	คุณสามารถเปลี่ยนเวลาในการอบแห้งได้ตามปริมาณผ้าสูงสุด	ผ้าฝ้าย ผ้าขนหนู	0.5 กก.
Time 60 min. (🧺)			1 กก.
Time 120 min. (🧺)			3 กก.

หมายเหตุ

- เลือกความเร็วในการปั่นสูงสุดที่เลือกได้ของโปรแกรมการซักเพื่อรับประกันผลลัพธ์ของการอบแห้ง
- เมื่อปริมาณของผ้าที่จะซักและอบแห้งในโปรแกรมเดียวไม่เกินน้ำหนักสูงสุดที่อนุญาตสำหรับโปรแกรมการอบแห้ง แนะนำให้ทำการซักและอบแห้งแบบต่อเนื่องเพียงครั้งเดียว

ตัวเลือกเพิ่มเติม

โปรแกรม	Pre Wash	ซักด้วยไอน้ำร้อน	ปรับผ้านุ่มด้วยไอน้ำ	ตั้งเวลาล่วงหน้า	ล้าง+	EcoHybrid	อบแห้ง
ผ้าฝ้าย	●	●	●	●	●		●
ผ้าฝ้าย+	●	●	●	●	●		●
ผ้าที่ไม่ต้องรีด	●	●	●	●	●		●
ผ้าทั่วไป	●	●	●	●	●		●
ลดการเกิดภูมิแพ้		●*		●	●		●
ผ้าขนสัตว์				●	●		
ขจัดรอยยับ/กลิ่นอับ		●*					
ชุดกีฬา				●	●		●
ซักด่วน 30 นาที				●	●		●
ถนนผ้า				●	●		
ซัก+อบแห้ง	●	●		●	●	●	●*

* : ตัวเลือกนี้จะถูกรวมไว้ในรอบการซักโดยอัตโนมัติและไม่สามารถลบออกได้

ข้อมูลการทำงาน

โปรแกรม	รอบต่อนาทีสูงสุด
	1600
ผ้าฝ้าย	1600
ผ้าฝ้าย+	1600
ผ้าที่ไม่ต้องรีด	1200
ผ้าทั่วไป	1600
ลดการเกิดภูมิแพ้	1600
ผ้าขนสัตว์	800
ขจัดรอยยับ/กลิ่นอับ	-
ชุดกีฬา	800
ซักด่วน 30 นาที	1600
ถนอมผ้า	800
ซัก+อบแห้ง	1600

โปรแกรมตัวเลือก

Delay End (ตั้งเวลาล่วงหน้า)

คุณสามารถตั้งการหวนเวลาเพื่อให้เครื่องซักผ้าเริ่มทำงานโดยอัตโนมัติและสิ้นสุดหลังจากช่วงเวลาที่กำหนด

- 1 กดปุ่ม **เปิด/ปิด**
- 2 เลือกโปรแกรมการซัก
- 3 กดปุ่ม **Delay End** และตั้งเวลาสิ้นสุดโดยประมาณที่ต้องการ
- 4 กดปุ่ม **เริ่ม/พัก**

หมายเหตุ

- เวลาหน่วงคือเวลาในการสิ้นสุดโปรแกรม ไม่ใช่เริ่มต้นเวลาในการทำงานจริงอาจต่างไปเนื่องจากอุณหภูมิของน้ำ ปริมาณการซักและปัจจัยอื่นๆ
- เพื่อยกเลิกฟังก์ชันการหวนเวลา ควรกดปุ่มเปิดปิด
- หลีกเลี่ยงการใช้น้ำยาซักผ้าสำหรับตัวเลือกนี้

EcoHybrid

ใช้สำหรับการอบแห้งควบแน่นอากาศโดยไม่ต้องใช้น้ำสำหรับการควบแน่น

- 1 กดปุ่ม **เปิด/ปิด**
- 2 เลือกโปรแกรมการอบแห้ง
- 3 กดปุ่ม **EcoHybrid**
- 4 กดปุ่ม **เริ่ม/พัก**

หมายเหตุ

- มีให้เลือกในโปรแกรม **ปกติ** หรือ **รีดผ้า**

Steam (ไอน้ำร้อน) (ทางเลือก)

คุณลักษณะ ซักด้วยไอน้ำร้อน เพิ่มประสิทธิภาพการซักด้วยการใช้พลังงานต่ำ การปรับผ่านนุ่มด้วยไอน้ำ ฟนไอน้ำหลังจากรอบการปั่นหมาดเพื่อลดรอยยับย่น และทำให้เสื้อผ้าฟูนุ่ม

- 1 กดปุ่ม **เปิด/ปิด**
- 2 สำหรับตัวเลือกซักด้วยไอน้ำร้อน ให้เลือกโปรแกรมไอน้ำร้อน สำหรับตัวเลือกปรับผ่านนุ่มด้วยไอน้ำ ให้เลือกโปรแกรม ผ้าฝ้าย ผ้าฝ้าย+ ผ้าทั่วไป ผ้าที่ไม่ต้องรีด
- 3 โปรแกรมต่อไปนี้ถูกเลือกโดยขึ้นอยู่กับจำนวนครั้งที่คุณกดปุ่ม **Steam**
 - หนึ่งครั้ง: ซักด้วยไอน้ำร้อน
 - สองครั้ง: ปรับผ่านนุ่มด้วยไอน้ำ
 - สามครั้ง: ซักด้วยไอน้ำร้อนและปรับผ่านนุ่มด้วยไอน้ำ

- 4 กดปุ่ม **เริ่ม/พัก**

ซักด้วยไอน้ำร้อน (🌀)

- สำหรับเสื้อผ้า ชุดชั้นใน หรือเสื้อผ้าเด็กที่เบื่อนมาก
- มีให้เลือกในโปรแกรม ผ้าฝ้าย ผ้าฝ้าย+ ผ้าทั่วไป ผ้าที่ไม่ต้องรีด ลดการเกิดภูมิแพ้ ขจัดรอยยับ/กลิ่นอับ ซัก+อบแห้ง
- อย่าใช้โปรแกรมซักด้วยไอน้ำร้อนสำหรับเสื้อผ้าที่ขีดไ้ได้ง่าย และผ้าอบบาง เช่น ผ้าขนสัตว์ ผ้าไหม

ปรับผ่านนุ่มด้วยไอน้ำ (🌀)

- เหมาะสำหรับการทำให้ผ้านุ่มและฟูหลังจากการอบแห้งด้วยอากาศ
- มีให้เลือกในโปรแกรม ผ้าฝ้าย ผ้าฝ้าย+ ผ้าทั่วไป ผ้าที่ไม่ต้องรีด
- อย่าใช้โปรแกรมปรับผ่านนุ่มด้วยไอน้ำสำหรับเสื้อผ้าที่ขีดไ้ได้ง่าย และผ้าอบบาง เช่น ผ้าขนสัตว์ ผ้าไหม
- ทั้งนี้ขึ้นอยู่กับชนิดของเสื้อผ้า ประสิทธิภาพการปรับผ่านนุ่มอาจแตกต่างกัน

Add Item (เพิ่มรายการ)

สามารถเพิ่มหรือนำเสื่อผ้าออกหลังจากเริ่มต้นโปรแกรมซักแล้วได้

- 1 กดปุ่ม **Add Item** เมื่อไฟ LED สว่าง
- 2 เปิดฝาเครื่องหลังจากตัวล็อกฝาปลดล็อก
- 3 เพิ่มหรือนำเสื่อผ้าออก
- 4 กดปุ่ม **เริ่ม/พัก** อีกครั้งเพื่อให้โปรแกรมทำงานต่อ โปรแกรมจะทำงานต่อโดยอัตโนมัติ

หมายเหตุ

- เพื่อเหตุผลด้านความปลอดภัย ฝาเครื่องจะยังคงล็อกไว้เมื่อระดับน้ำหรืออุณหภูมิน้ำสูง คุณไม่สามารถเพิ่มเสื่อผ้าในช่วงเวลานี้ได้
- หากอุณหภูมิน้ำในถังซักสูง ให้รอจนกว่าจะเย็นลง

⚠ ข้อควรระวัง

- เมื่อทำการเพิ่มเสื่อผ้า ตรวจสอบว่าได้ดันเข้าไปในถังซักทั้งหมด หากมีเสื่อผ้าติดค้างที่ช่องล็อกประตูเครื่อง ซูดอย่างอัดแน่นอาจเสียหาย และทำให้น้ำรั่วไหลและการทำงานผิดปกติได้
- การบังคับเปิดประตูเครื่องอาจทำให้ชิ้นส่วนเครื่องเสียหาย ถูกทำลาย หรือมีปัญหาด้านความปลอดภัย
- หากคุณเปิดประตูเครื่องในขณะที่ยังมีน้ำผสมฟองปริมาณมากในถังซัก ฟองหรือน้ำอาจไหลออกมาทำให้โดยน้ำร้อนลวกผิว หรือพื้นเปียกได้

Remote Start (การเริ่มทางไกล)

ใช้สมาร์ตโฟนเพื่อควบคุมเครื่องใช้ของคุณจากระยะไกล นอกจากนี้คุณยังสามารถเฝ้าตรวจตราการทำงานของคุณของโปรแกรมเพื่อให้คุณทราบระยะเวลาที่เหลือของโปรแกรมได้อีกด้วย

หมายเหตุ

- คุณต้องเชื่อมต่อกับเกตเวย์และลงทะเบียนเครื่องใช้ไฟของคุณเพื่อให้ใช้งานฟังก์ชัน **Remote Start** (อ้างอิง 'SMART FUNCTIONS')

การใช้การเริ่มทางไกล:

- 1 กดปุ่ม **เปิด/ปิด**
- 2 ใส่เสื่อผ้าลงไปในถังซัก
- 3 กดปุ่ม **Remote Start** ค้างไว้ 3 วินาที เพื่อเปิดใช้งานฟังก์ชัน **Remote Start**
- 4 เริ่มต้นโปรแกรมซักจากแอปพลิเคชัน LG SmartThinQ บนสมาร์ตโฟนของคุณ

หมายเหตุ

- หากคุณไม่ได้เริ่มต้นเครื่องใช้ของคุณ ระบบจะรอเพื่อเริ่มต้นโปรแกรมจนกว่าคุณจะปิดเครื่องใช้ของคุณจากแอปพลิเคชันหรือปิดใช้งานฟังก์ชันการเริ่มทางไกล
- เมื่อเปิดใช้ฟังก์ชันการเริ่มทางไกลแล้ว ฝาเครื่องจะล็อกโดยอัตโนมัติ

การปิดใช้งานการเริ่มทางไกล:

เมื่อเปิด **Remote Start** แล้ว กดปุ่ม **Remote Start** ค้างไว้ 3 วินาที

หมายเหตุ

- หากฝาเครื่องถูกเปิดไว้ ฟังก์ชันการเริ่มทางไกลจะถูกปิดใช้งาน

Pre Wash (\\)

หากเสื้อผ้าเปื้อนอย่างหนัก แนะนำให้ใช้โปรแกรมการซักเตรียม

- 1 กดปุ่ม **เปิด/ปิด**
- 2 เลือกโปรแกรมการซัก
- 3 กดปุ่ม **Pre Wash** ค้างไว้เป็นเวลา 3 วินาที
- 4 กดปุ่ม **เริ่ม/พัก**

Soil (ความสกปรก)

- 1 กดปุ่ม **เปิด/ปิด**
- 2 เลือกโปรแกรมการซัก
- 3 กดปุ่ม **Soil**
- 4 กดปุ่ม **เริ่ม/พัก**

Temp. (อุณหภูมิ)

ปุ่ม **อุณหภูมิ** เลือกการผสมผสานอุณหภูมิการซักและการซักน้ำสำหรับโปรแกรมที่ถูกเลือก กดปุ่มนี้จนการตั้งค่าที่ต้องการสว่างขึ้นมา การล้างน้ำทั้งหมดใช้น้ำเย็นจากก๊อก

- เลือกอุณหภูมิของน้ำที่เหมาะสมสำหรับชนิดของเสื้อผ้าที่คุณจะซัก ปฏิบัติตามฉลากการดูแลรักษาผ้าเพื่อให้ได้ผลลัพธ์ที่ดีที่สุด

Rinse+ (ล้าง+) (\\+)

เพิ่มการล้างอีกรอบ

- 1 กดปุ่ม **เปิด/ปิด**
- 2 เลือกโปรแกรมการซัก
- 3 กดปุ่ม **Rinse+** ค้างไว้เป็นเวลา 3 วินาที
- 4 กดปุ่ม **เริ่ม/พัก**

Spin (ปั่นหมาด)

- ระดับความเร็วการปั่นแห้งสามารถถูกเลือกได้โดยการกดปุ่ม **ปั่นหมาด** ซ้ำหลาย ๆ ครั้ง
- Spin เท่านั้น

- 1 กดปุ่ม **เปิด/ปิด**
- 2 กดปุ่ม **Spin** เพื่อเลือกกรอบตอนที่
- 3 กดปุ่ม **เริ่ม/พัก**

หมายเหตุ

- เมื่อคุณเลือก **No Spin (0)** เครื่องจะยังคงหมุนระยะสั้น ๆ เพื่อระบายน้ำออกอย่างรวดเร็ว

Child Lock (ป้องกันเด็ก) (🔒)

ใช้ตัวเลือกนี้เพื่อปิดการใช้งานการควบคุม คุณสมบัตินี้สามารถป้องกันไม่ให้เด็กทำการเปลี่ยนรอบการซึกหรือใช้งานเครื่องใช้ไฟฟ้าได้

การล๊อคแผงควบคุม

1 กดปุ่ม **Child Lock** ค้างไว้เป็นเวลาสามวินาที

2 เสียงสัญญาณเตือนจะดังขึ้น และ **CL** จะปรากฏบนหน้าจอ
เมื่อระบบป้องกันเด็กถูกตั้งไว้ ปุ่มทั้งหมดจะถูกล๊อค ยกเว้นปุ่ม **เปิด/ปิด**

หมายเหตุ

- การปิดเครื่องจะไม่เป็นรีเซ็ตฟังก์ชัน **ป้องกันเด็ก** ใหม่ คุณจะต้องปิดการทำงานฟังก์ชัน ล็อคป้องกันเด็กก่อนที่คุณจะสามารถเข้าถึงฟังก์ชันอื่นๆ ได้

การคลายล๊อคแผงควบคุม

กดปุ่ม **Child Lock** ค้างไว้เป็นเวลาสามวินาที

- เสียงบีบจะดังขึ้นและเวลาคงเหลือสำหรับโปรแกรม ปัจจุบันจะปรากฏขึ้นบนหน้าจออีกครั้ง

เปิด / ปิด เสียงสัญญาณเตือน

1 กดปุ่ม **เปิด/ปิด**

2 กดปุ่ม **เริ่ม/พัก**

3 กดปุ่ม **Soil** และ **Temp.** ค้างไว้พร้อมกันเป็นเวลา 3 วินาทีเพื่อตั้งค่าฟังก์ชันเปิด/ปิดเสียงเตือน

หมายเหตุ

- เมื่อฟังก์ชันเปิด / ปิด เสียงสัญญาณเตือนถูกตั้งค่า การตั้งค่าจะถูกจดจำไว้แม้หลังจากทำการปิดเครื่อง
- หากคุณต้องการปิดเสียงสัญญาณเตือน เพียงแค่ทำซ้ำตามขั้นตอนนี้

Wi-Fi (📶)

การตั้งค่าการเชื่อมต่อ Wi-Fi เมื่อเชื่อมต่อ Wi-Fi แล้ว สัญลักษณ์ Wi-Fi ที่แผงควบคุมจะสว่างขึ้น

Dry (อบแห้ง) (🔥)

ใช้โปรแกรมอัดโนมัติของคุณเพื่ออบแห้งเสื้อผ้าส่วนใหญ่ เช่น เซอร์อิลิกทรอนิกส์วัดอุณหภูมิของช่องระบายเพื่อเพิ่มหรือลดอุณหภูมิสำหรับเวลาในการทำปฏิกิริยาที่เร็วขึ้นและการควบคุมอุณหภูมิที่รัดกุมขึ้น

- ต้องเปิดก๊อคน้ำเย็นไว้ในขณะที่การอบแห้ง
- สามารถเลือกขั้นตอนอัดโนมัติของเครื่องซักผ้านี้ตั้งแต่การซักไปจนถึงการอบแห้งได้อย่างง่ายดาย
- เพื่อการอบแห้งที่สม่ำเสมอ ตรวจสอบให้แน่ใจว่าของทั้งหมดในเสื้อผ้าที่ซักมีวัสดุและความหนาที่คล้ายคลึงกัน
- อย่าสร้างภาระหนักให้เครื่องซักผ้ามากเกินไปโดยการยัดสิ่งของจำนวนมากเกินไปใส่ในถังซัก ของทั้งหมดจะต้องสามารถขยับพลิกไปมาได้โดยอิสระ
- หากคุณเปิดฝาเครื่องและนำเสื้อผ้าออกก่อนที่เครื่องซักผ้าจะสิ้นสุดโปรแกรมการซัก พึงจำว่าให้กดปุ่ม **เริ่ม/พัก**
- โดยการกดปุ่ม **Dry** คุณสามารถเลือกโปรแกรม: ปกติ-รีดผ้า-อุณหภูมิต่ำ-เวลา (30-60-120)
- หลังจากสิ้นสุดการอบแห้ง 'E' จะแสดงผลขึ้นมา 'E' หมายถึงการลดรอยยับย่น โปรแกรมอบแห้งสิ้นสุดแล้ว กดปุ่มใด ๆ และนำเสื้อผ้าออก หากคุณไม่ได้กดปุ่ม **เริ่ม/พัก** โปรแกรมจะสิ้นสุดการทำงานหลังจากประมาณ 4 ชั่วโมง

หมายเหตุ

- เมื่อคุณเปิดโปรแกรมการอบแห้งของเครื่องซักผ้ามอเตอร์พัดลมอบแห้งสามารถทำงานเพื่อรักษาสภาพตัวเองได้เป็นเวลา 60 วินาที จากนั้นเครื่องซักผ้าจะแสดงผล 'E' บนแผงควบคุม 'E' หมายถึงพัดลมระบายความร้อน
- ระวังเมื่อนำเสื้อผ้าของคุณออกจากเครื่องซักผ้าเนื่องจากเสื้อผ้าหรือเครื่องซักผ้าอาจร้อน

ของที่ทำด้วยขนสัตว์

- อย่าพับและอบแห้งของที่ทำด้วยขนสัตว์ จับกางให้ได้รับตามปกติและอบแห้ง

วัสดุทอและถัก

- วัสดุทอและถักบางชนิดอาจหดตัว ในระดับที่แตกต่างกันไป ขึ้นกับคุณภาพ
- กางวัสดุเหล่านี้ออกทันทีหลังการอบแห้งเสมอ

ผ้ากันยับและผ้าใยสังเคราะห์

- อย่าใส่เสื้อผ้าในเครื่องซักผ้ามากเกินไป
- นำของที่เป็นผ้ากันยับออกให้เร็วที่สุดหลังจากเครื่องซักผ้าหยุดทำงานเพื่อลดรอยยับ

เสื้อผ้าเด็กและชุดคลุมนอน

- ให้ตรวจสอบจากคำแนะนำของผู้ผลิตเสมอ

ยางและพลาสติก

- อย่าอบแห้งของใดๆ ที่มาจากหรือมีส่วนประกอบของยางหรือพลาสติก เช่น:
 - ผ้ากันเปื้อน ผ้ากันเปื้อนเด็ก ที่คลุมเก้าอี้
 - ผ้าปูโต๊ะและผ้าปูโต๊ะ
 - พรมหน้าห้องน้ำ

เส้นใยแก้ว

- อย่าอบแห้งสิ่งของที่เป็นใยแก้วในเครื่องซักผ้าของคุณ เศษละอองแก้วที่ตกค้างในเครื่องซักผ้าอาจติดในเสื้อผ้าของคุณในครั้งถัดไปที่คุณใช้เครื่องซักผ้าและทำให้เกิดการระคายเคืองต่อผิวหนัง

คำแนะนำเวลาในการอบแห้ง

- โปรแกรมการอบแห้งอาจใช้เวลานานสูงสุดถึง 7 ชั่วโมง
- เวลาในการอบแห้งเหล่านี้มีไว้แนวทางเพื่อช่วยให้คุณตั้งค่าเครื่องซักผ้าของคุณสำหรับการอบแห้งแบบกำหนดเอง
- หากอุณหภูมิของระบบการอบแห้งไม่เพียงพอสำหรับการดำเนินการอบแห้งให้เสร็จสมบูรณ์ได้ ระยะเวลาการอบแห้งจะถูกปรับแก้โดยอัตโนมัติ และแจ้งให้ทราบด้วยหน้าต่างป๊อปอัพ

หมายเหตุ

- ระยะเวลาการอบแห้งโดยประมาณจะแตกต่างจากระยะเวลาการอบแห้งจริงในระหว่างโปรแกรมอัตโนมัติ ชนิดของผ้า ปริมาณผ้าที่ซัก และความแห้งที่เลือกก็มีผลต่อเวลาในการอบแห้ง
- เมื่อคุณเลือกการอบแห้งเท่านั้น การปั่นจะทำงานอัตโนมัติเพื่อประสิทธิภาพด้านพลังงาน

การใช้แอปพลิเคชัน Smart ThinQ

การติดตั้ง Smart ThinQ

ค้นหาแอปพลิเคชัน LG SmartThinQ จาก Google Play Store & Apple App Store ในสมาร์ทโฟน ทำตามคำแนะนำเพื่อดาวน์โหลดและติดตั้งแอปพลิเคชัน

ฟังก์ชัน Wi-Fi

- สำหรับเครื่องใช้ไฟฟ้าที่มีโลโก้  หรือ  สื่อสารกับเครื่องใช้ไฟฟ้าได้จากสมาร์ทโฟนโดยใช้ฟีเจอร์อัจฉริยะที่แสนสะดวก

โปรแกรมซักรีด

ตั้งค่าหรือดาวน์โหลดโปรแกรมซักรีดที่ต้องการและสั่งงานผ่านรีโมทคอนโทรล

คำแนะนำเกี่ยวกับการทำความสะอาดถังซัก

ตรวจสอบระยะเวลาการทำความสะอาดถังที่เหมาะสมตามความถี่ของการซัก

ตรวจสอบพลังงาน

ตรวจสอบการใช้พลังงานของโปรแกรมการซักที่ใช้ล่าสุดและค่าเฉลี่ยรายเดือน

Smart Diagnosis

ฟังก์ชันนี้ให้ข้อมูลที่มีประโยชน์สำหรับการวินิจฉัยและการแก้ไขปัญหาที่เกิดขึ้นกับเครื่องใช้ตามแบบแผนการใช้งาน

การตั้งค่า

มีหลายฟังก์ชันให้เลือกใช้งาน

ส่งการแจ้งเตือน

เปิดใช้ฟังก์ชันการแจ้งเตือนแบบพุชเพื่อรับการแจ้งเตือนสถานะของเครื่องใช้ การแจ้งเตือนจะถูกส่งสัญญาณให้ทราบแม้ว่าจะปิดแอป LG SmartThinQ ไว้ก็ตาม

หมายเหตุ

- เพื่อยืนยันการเชื่อมต่อ Wi-Fi ดูที่ไอคอน Wi-Fi  ที่แผงควบคุมว่ามีไฟขึ้นหรือไม่
- LG SmartThinQ ไม่รับผิดชอบปัญหาใดๆ เกี่ยวกับปัญหาในการเชื่อมต่อเครือข่าย หรือความผิดพลาดในการทำงานผิดพลาด หรือข้อผิดพลาดใดๆ ที่เกิดจากการเชื่อมต่อเครือข่าย
- เครื่องนี้รองรับเครือข่าย 2.4 GHz Wi-Fi เท่านั้น
- หากเครื่องใช้ไฟฟ้ามีปัญหาในการเชื่อมต่อเครือข่าย Wi-Fi อาจเป็นเพราะว่าอยู่ห่างจากเราเตอร์มากเกินไป
- การเชื่อมต่อ Wi-Fi อาจจะไม่เกิดขึ้นหรือติดขัดเนื่องจากสภาพแวดล้อมของเครือข่ายในบ้าน
- การเชื่อมต่อเครือข่ายอาจทำงานไม่ถูกต้อง ทั้งนี้ขึ้นอยู่กับผู้ให้บริการอินเทอร์เน็ต
- สภาพแวดล้อมของระบบสัญญาณไร้สายอาจทำให้บริการเครือข่ายไร้สายทำงานช้า
- เพื่อการพัฒนาเครื่องใช้ไฟฟ้าแอปพลิเคชันอาจเปลี่ยนแปลงโดยไม่มีการแจ้งให้ผู้ใช้ทราบ
- คุณสมบัติอาจแตกต่างกันในแต่ละรุ่น

ข้อมูลการแจ้งเตือนซอฟต์แวร์โอเพนซอร์ส

รับซอร์สโค้ด GPL, LGPL, MPL หรือใบอนุญาตโอเพนซอร์สอื่นๆ ที่มีอยู่ในผลิตภัณฑ์นี้ โปรดไปที่ <http://opensource.lge.com>

นอกเหนือจากซอร์สโค้ดแล้ว ผู้ใช้ยังสามารถดาวน์โหลดข้อมูลเงื่อนไขลิขสิทธิ์อ้างอิง การปฏิเสธการรับประกัน และแจ้งเตือนลิขสิทธิ์ได้ด้วย

LG Electronics มีบริการจัดเตรียมซอร์สโค้ดให้กับคุณทาง CD-ROM โดยคิดค่าใช้จ่ายในการดำเนินการแจกจ่ายดังกล่าว (เช่นค่าสื่อบันทึกข้อมูล ค่าจัดส่งและดูแลพัสดุ) โดยคุณสามารถขอรับซอร์สโค้ดได้โดยส่งอีเมลไปที่ opensource@lge.com ข้อเสนอนี้มีผลสาม (3) ปี เริ่มตั้งแต่วันที่คุณซื้อผลิตภัณฑ์

Smart Diagnosis™ การใช้สมาร์ตโฟน

- สำหรับเครื่องใช้ไฟฟ้าที่มีโลโก้  หรือ 

ใช้งานฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์ข้อมูลลูกค้าของ LG Electronics เมื่อผลิตภัณฑ์ทำงานผิดปกติหรือล้มเหลว

Smart Diagnosis™ ไม่สามารถเปิดใช้งานได้เว้นแต่ผลิตภัณฑ์จะเชื่อมต่อกับแหล่งจ่ายไฟ หากผลิตภัณฑ์ไม่สามารถเปิดเครื่องได้ การแก้ไขปัญหาเบื้องต้นจะต้องกระทำโดยไม่ใช้ Smart Diagnosis™


การใช้ Smart Diagnosis™

Smart Diagnosis™ ผ่านศูนย์บริการข้อมูลลูกค้า

ใช้ฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์บริการข้อมูลลูกค้า LG Electronics เมื่อเครื่องใช้ไฟฟ้าทำงานผิดปกติหรือล้มเหลว ใช้ฟังก์ชันนี้เพื่อติดต่อตัวแทนบริการเท่านั้น ไม่ใช่ในระหว่างการใช้งานปกติ

1 กดปุ่ม **เปิด/ปิด** เพื่อเปิดใช้งานเครื่องซักผ้า อย่ากดปุ่มอื่นใด หรือหมุนลูกบิดเลือกโปรแกรม

2 เมื่อได้คำแนะนำให้ดำเนินการดังกล่าวจากศูนย์บริการลูกค้า ให้ถือส่วนรับสัญญาณของโทรศัพท์ของคุณไว้ใกล้กับปุ่มเปิด/ปิด

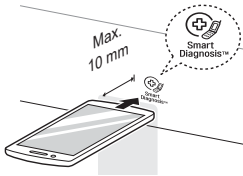

3 กดปุ่ม **Temp.** ค้างเป็นเวลา 3 วินาที ในขณะที่ถือส่วนรับสัญญาณของโทรศัพท์ที่ไว้ที่ไอคอนหรือปุ่มเปิด/ปิด

4 ให้โทรศัพท์อยู่กับที่จนกว่าสัญญาณเสียงจะจบ เวลาคงเหลือสำหรับการส่งข้อมูลจะแสดงขึ้นมา

- เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด อย่าขยับโทรศัพท์ในขณะที่กำลังส่งเสียง
- หากตัวแทนศูนย์บริการไม่สามารถทำการบันทึกข้อมูลที่แม่นยำได้ อาจขอให้คุณลองทำอีกครั้ง

5 เมื่อการนับถอยหลังจบลงและเสียงสัญญาณหยุด ให้ทำการสนทนาของคุณต่อกับตัวแทนศูนย์บริการที่จะสามารถช่วยเหลือคุณได้โดยใช้ข้อมูลที่ส่งไปเพื่อการวิเคราะห์

หมายเหตุ

- ฟังก์ชัน Smart Diagnosis™ ขึ้นอยู่กับคุณภาพการโทรในพื้นที่
- ประสิทธิภาพในการสื่อสารจะดีขึ้นและคุณสามารถรับบริการที่ดีขึ้นได้หากคุณใช้โทรศัพท์บ้าน
- หากการส่งข้อมูล Smart Diagnosis™ ไม่ดีเนื่องจากคุณภาพการโทรที่แย่ คุณอาจไม่ได้รับบริการ Smart Diagnosis™ ที่ดีที่สุด


⚠ คำเตือน

- ถอดปลั๊กเครื่องซักผ้าของคุณก่อนการทำความสะอาดเพื่อหลีกเลี่ยงความเสี่ยงต่อการเกิดไฟฟ้าช็อต การไม่ปฏิบัติตามคำเตือนนี้อาจส่งผลให้เกิดการบาดเจ็บสาหัส ไฟไหม้ ไฟฟ้าช็อตหรือเสียชีวิต
- ห้ามใช้สารเคมีที่มีฤทธิ์แรง สารขัดทำความสะอาดหรือสารทำลายเพื่อทำความสะอาดเครื่องซักผ้า สิ่งเหล่านี้อาจสร้างความเสียหายให้แก่ผิวที่เคลือบได้

การทำความสะอาดเครื่องซักผ้าของท่าน

การดูแลหลังซัก

- หลังจากสิ้นสุดโปรแกรม เช็ดผ้าและภายในของซีลผ้าเพื่อขจัดความชื้น
- เปิดฝาทิ้งไว้เพื่อผึ่งภายในถังซักให้แห้ง
- เช็ดตัวเครื่องซักผ้าด้วยผ้าแห้งเพื่อขจัดความชื้น

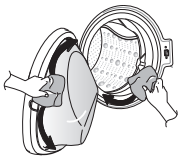

การทำความสะอาดภายนอก

การดูแลเครื่องซักผ้าของคุณอย่างเหมาะสมสามารถยืดอายุของเครื่องได้

ฝา:

- เช็ดด้วยผ้าเปียกทั้งด้านนอกและด้านใน และจากนั้นเช็ดให้แห้งด้วยผ้าแห้ง

ภายนอก:

- เช็ดรอยคราบเปื้อนที่กระเด็นติดตัวเครื่องโดยทันที
- เช็ดด้วยผ้าเปียก
- อยากรดพื้นผิวหรือหน้าจอกด้วยวัตถุมีคม


การทำความสะอาดภายใน

- ใช้ขนหนูหรือผ้านุ่มเพื่อเช็ดช่องเปิดฝาเครื่องซักผ้าและกระจกฝา
- เอาเสื้อผ้าออกจากเครื่องซักผ้าให้เร็วที่สุดเมื่อสิ้นสุดโปรแกรมเสมอ การทิ้งเสื้อผ้าที่เปียกไว้ในเครื่องซักผ้าสามารถทำให้เกิดการยับ การตกของสี และกลิ่นเหม็นได้
- ใช้โปรแกรม ทำความสะอาดถังซักเดือนละครั้ง (หรือบ่อยขึ้นหากจำเป็น) เพื่อเอาผงซักฟอกที่สะสมและสิ่งตกค้างอื่น ๆ ออก


การทำความสะอาดตัวกรองท่อน้ำเข้า

- ปิดก๊อกที่จ่ายน้ำเข้าเครื่องหากเครื่องซักผ้าจะไม่ถูกใช้งานเป็นเวลานาน (เช่น วันหยุด) โดยเฉพาะถ้าไม่มีทางระบายน้ำบนพื้น (รางน้ำ) ในบริเวณใกล้เคียง
- สัญลักษณ์ IE จะปรากฏบนแผงควบคุมเมื่อน้ำไม่เข้าช่องจ่ายผงซักฟอก
- หากน้ำกระด้างมากหรือมีหินปูนผสมในน้ำ ตัวกรองท่อน้ำเข้าอาจอุดตันได้ ดังนั้นจึงเป็นแนวคิดที่ดีที่จะทำความสะอาดอย่างเป็นประจำ

1 ปิดก๊อกน้ำและคลายสกรูของท่อจ่ายน้ำ

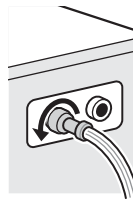


2 ทำความสะอาดตัวกรองโดยใช้แปรงขนสัตว์แบบแข็ง

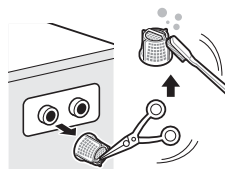

การทำความสะอาดตัวกรองปั๊ม ระบาย

- ตัวกรองทางระบายสะสมเส้นด้ายและวัตถุขนาดเล็กที่ทิ้งไว้ในผ้าที่ซัก ตรวจสอบเป็นประจำว่าตัวกรองสะอาดเพื่อให้มั่นใจในการทำงานที่ราบรื่นของเครื่องซักผ้า
- ปลดปล่อยน้ำเย็นลงก่อนทำความสะอาดปั๊มระบาย ทำการระบายลูกเงิน หรือเปิดฝาในกรณีฉุกเฉิน


1 เปิดฝาดรอมและดึงท่อออกมา

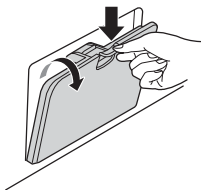


2 ดึงลูกอุดทางระบายออกและเปิดตัวกรองโดยการหมุนไปทางซ้าย




3 เอาสิ่งของที่ติดค้างออกจากตัวกรองปั๊ม

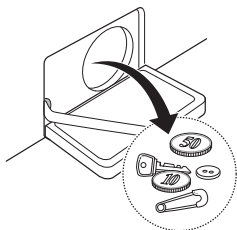

4 หลังจากทำความสะอาด หมุนตัวกรองปั๊มและใส่ลูกอุดทางระบาย

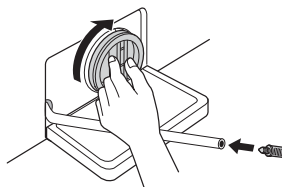

5 ปิดฝาดรอม

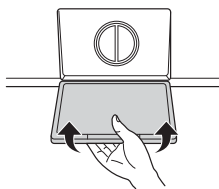


⚠ ข้อควรระวัง

- ก่อนอื่น ระบายน้ำโดยใช้ท่อระบายและจากนั้นเปิดตัวกรองปั๊มเพื่อขจัดเส้นด้ายหรือวัตถุอื่นๆ
- ระวังเมื่อทำการระบายน้ำ เนื่องจากน้ำอาจร้อน

การทำความสะอาดลินชักจ่ายน้ำยา

น้ำยาชักผ้าและน้ำยาปรับผ้านุ่มอาจสะสมในลินชักจ่ายน้ำยา ถอดลินชักและตัวสอตและตรวจสอบการสะสมเดือนละหนึ่งหรือสองครั้ง

- 1 ถอดลินชักจ่ายน้ำยาชักผ้าโดยการดึงออกมาตรงๆ จนสุด
 - กดปุ่มปลดด้วยแรงและถอดลินชัก

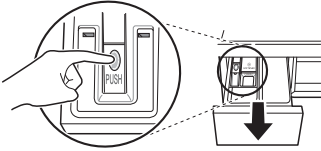

- 2 ถอดตัวสอตออกจากลินชัก
 - ล้างตัวสอตและลินชักด้วยน้ำอุ่นเพื่อขจัดการสะสมของผลิตภัณฑ์ชักผ้าออก ใช้น้ำในการทำความสะอาด ลินชักจ่ายน้ำยาเท่านั้น เช็ดตัวสอตและลินชักแห้งด้วยผ้าขนหนูหรือผ้าเช็ดหน้า
- 3 เพื่อทำความสะอาดช่องเปิดของลินชัก ใช้ผ้าหรือแปรงที่ไม่ใช่โลหะขนาดเล็กเพื่อทำความสะอาดโพรง
 - ขจัดสิ่งตกค้างทั้งหมดจากส่วนบนและส่วนล่างของโพรง
- 4 เช็ดน้ำออกจากโพรงด้วยผ้าขนหนูหรือผ้าเช็ดหน้า
- 5 ใส่ตัวสอตกลับเข้าสู่ช่องแยกที่ถูกต้องและใส่ลินชักกลับที่

Tub Clean (ล้างถังชัก) (ทางเลือก)

การทำความสะอาดถังชักเป็นโปรแกรมพิเศษเพื่อทำความสะอาดภายในเครื่องชักผ้า

ระดับน้ำที่สูงขึ้นจะถูกใช้ในโปรแกรมนี้ที่ความเร็วในการปั่นที่สูงขึ้น ใช้งานโปรแกรมนี้อย่างสม่ำเสมอ

- 1 นำเสื้อผ้าหรือสิ่งของใดๆ ออกจากเครื่องชักผ้าและปิดฝา
- 2 เปิดช่องจ่ายและใส่สารทำความสะอาดตะกรันในช่องการชักหลัก
 - สำหรับชนิดเม็ดให้ใส่ในถังชัก
- 3 ปิดลินชักด้วยน้ำยาอย่างช้าๆ
- 4 เปิดเครื่องแล้วกดปุ่ม **Tub Clean** ค้างไว้เป็นเวลา 3 วินาที จากนั้น *tcL* จะปรากฏขึ้นบนหน้าจอ
- 5 กดปุ่ม **เริ่ม/พัก** เพื่อเริ่มต้น
- 6 หลังจากโปรแกรมทำงานเสร็จสมบูรณ์ เปิดฝาทิ้งไว้เพื่อให้ช่องเปิดของฝาเครื่องชักผ้า ปะเก็นแบบยืดหยุ่น และกระจกบนฝาแห้ง

⚠️ ข้อควรระวัง

- หากมีเด็ก ระวังอย่าเปิดฝาทิ้งไว้นานเกินไป

หมายเหตุ


- อย่าใส่น้ำยาชักผ้าในช่องน้ำยาชักผ้า อาจทำให้เกิดฟองมากเกินไปและรบกวนเครื่องชักผ้า

ระวังการเป็นน้ำแข็งในระหว่างฤดูหนาว


- เมื่อเป็นน้ำแข็ง ผลิตภัณฑ์จะทำงานไม่เป็นปกติ ตรวจสอบให้แน่ใจว่าติดตั้งผลิตภัณฑ์ในตำแหน่งที่จะไม่เป็นน้ำแข็งในระหว่างฤดูหนาว
- ในกรณีที่จะต้องติดตั้งเครื่องภายนอกบนชานบ้านหรือในสภาวะภายนอกอาคารอื่นๆ ให้ตรวจสอบรายการต่อไปนี้

วิธีการป้องกันผลิตภัณฑ์เป็นน้ำแข็ง

- หลังจากการชัก ชักน้ำที่เหลืออยู่ในบิ๊มให้หมดด้วยจุดท่อที่ใช้สำหรับการชักน้ำดักค้าง เมื่อชักน้ำออกหมดแล้ว ปิดจุดท่อที่ใช้สำหรับการชักน้ำดักค้างและฝาครอบ

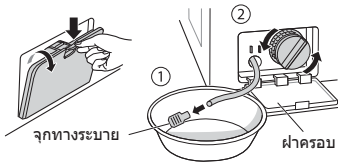


- ปลอยท่อระบายลงมาเพื่อชักน้ำในท่อออกให้หมด

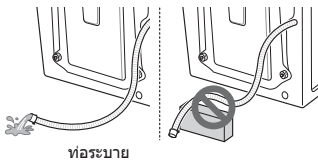

⚠ ข้อควรระวัง


- เมื่อติดตั้งท่อระบายเป็นรูปโค้ง ท่อด้านในอาจเป็นน้ำแข็ง

- หลังจากปิดก๊อกน้ำ ให้ถอดท่อส่งน้ำเย็นออกจากก๊อกน้ำและเอาน้ำออกขณะที่ตัวท่อส่ง

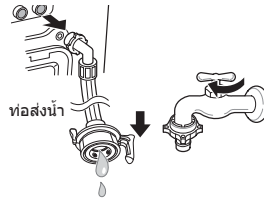


การตรวจสอบสำหรับการเป็นน้ำแข็ง

- หากน้ำไม่ระบายออกเมื่อทำการเปิดจุดท่อที่ใช้สำหรับการชักน้ำดักค้าง ตรวจสอบชุดระบายน้ำ

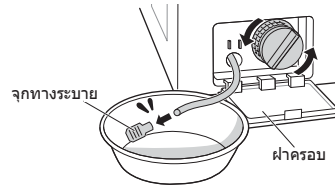

- เปิดเครื่อง เลือกโปรแกรมการชัก และกดปุ่ม เริ่ม/พัก

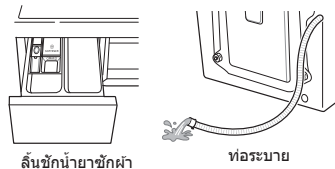


- เมื่อ 'F F' ถูกแสดงขึ้นบนหน้าจอในขณะที่ผลิตภัณฑ์กำลังทำงาน ตรวจสอบชุดแหล่งจ่ายน้ำและชุดระบายน้ำ (บางรุ่นไม่มีฟังก์ชันสัญญาณเตือนที่บ่งชี้การเป็นน้ำแข็ง)

หมายเหตุ

- ตรวจสอบว่าน้ำไหลเข้าสู่สันชักน้ำชักผ้าในขณะล้างน้ำ และน้ำระบายออกผ่านท่อระบายในขณะปั่นแห้ง


วิธีการรับมือการเป็นน้ำแข็ง

- ตรวจสอบให้แน่ใจว่าได้นำสิ่งของออกจากถังซักจนหมด เหนืออุณหภูมิ 50–60 °C จนถึงส่วนที่เป็นยางด้านในถังซัก ปิดฝา และรอ 1-2 ชั่วโมง

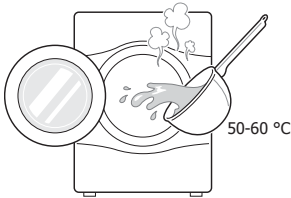

⚠ ข้อควรระวัง


- เมื่อติดตั้งท่อระบายเป็นรูปโค้ง ท่อด้านในอาจเป็นน้ำแข็ง
- เปิดฝาดรอมและจุกอุดท่อที่ใช้สำหรับการขจัดน้ำตกค้างเพื่อขจัดน้ำออกจนหมด

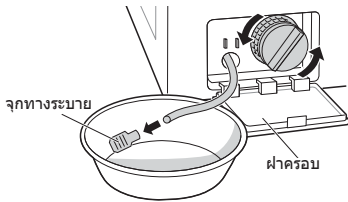

หมายเหตุ


- หากน้ำไม่ระบายออก หมายความว่าน้ำแข็งไม่ถูกละลายโดยสมบูรณ์ รอดต่อไป

- เมื่อน้ำถูกระบายออกจากถังโดยสมบูรณ์ ปิดปลั๊กท่อที่ใช้เพื่อขจัดน้ำตกค้าง เลือกโปรแกรมการซักและกดปุ่ม เริ่ม/พัก

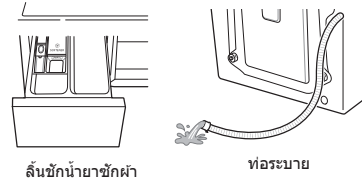

หมายเหตุ

- ตรวจสอบว่าน้ำไหลเข้าสู่ล้นชักน้ำยาซักผ้าในขณะล้างน้ำ และน้ำระบายออกผ่านท่อระบายในขณะที่ปั่นแห้ง
- เมื่อมีปัญหาในการจ่ายน้ำเกิดขึ้น ใช้มาตรการต่อไปนี้
 - ปิดก๊อก และละลายน้ำแข็งที่ก๊อกและส่วนการต่อทั้งสองจุดของท่อน้ำเข้าของผลิตภัณฑ์โดยใช้ผ้าชุบน้ำร้อน
 - ดึงท่อน้ำเข้าออกมาและแช่ในน้ำอุ่นที่ต่ำกว่า 50–60 °C

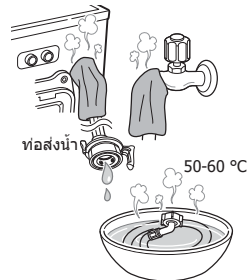

- เครื่องซักผ้าของคุณได้รับการติดตั้งระบบตรวจตราข้อผิดพลาดอัตโนมัติเพื่อตรวจจับและวินิจฉัยปัญหาตั้งแต่ระยะแรก หากเครื่องซักผ้าของคุณไม่ทำงานอย่างถูกต้องหรือไม่ทำงานเลย ตรวจสอบรายการดังต่อไปนี้ก่อนที่จะติดต่อขอรับบริการ:

การวินิจฉัยปัญหา

อาการ	สาเหตุ	การแก้ไข
เสียงกรอกรกแตรกและเสียงโลหะกระทบกัน	วัตถุแปลกปลอม เช่น เหรียญหรือเข็มกลัด อาจติดในถังซักหรือปัม	• ตรวจสอบกระเป๋าทันหมดให้แน่ใจว่าไม่มีของอยู่ข้างใน สิ่งของ เช่น คลิป ไม่ชัตไฟ ปากกา เหรียญ และกุญแจอาจสร้างความเสียหายให้กับทั้งเครื่องซักผ้าและเสื้อผ้าของคุณ • ปิดซีป เกยวตะขอ และสายรัดเพื่อป้องกันสิ่งของเหล่านี้ไม่ให้ขวางหรือพันกับเสื้อผ้าชิ้นอื่น
เสียงกระแทก	ปริมาณการซักที่หนักอาจทำให้เกิดเสียงกระแทก ซึ่งเป็นเรื่องปกติ	• หากยังมีเสียงอยู่ เป็นไปได้ว่าเครื่องซักผ้าไม่สมดุล ให้หยุดและจัดผ้าที่ซักใหม่
เสียงสั่น	สลักขนย้ายและที่รองถังน้ำถูกถอดออกหมดแล้วหรือไม่	• หากไม่ถอดออกในระหว่างการติดตั้ง อาจยังคู่มือการติดตั้งสำหรับการถอดสลักขนย้าย
	ขาตั้งทั้งหมดวางบนพื้นอย่างมั่นคงหรือไม่	• ตรวจสอบให้แน่ใจว่าเครื่องซักผ้าของคุณตั้งอยู่อย่างตรงไถ่ระดับ และขันน็อตที่ส่วนล่างของเครื่อง.
น้ำรั่ว	ท่อจ่ายน้ำหรือท่อระบายน้ำหลวมที่ก๊อกน้ำหรือที่เครื่องซักผ้า	• ตรวจสอบและต่อท่อให้แน่น
	ท่อระบายในบ้านอุดตัน	• แก่การอุดตันของท่อระบาย ติดต่อช่างประปาหากจำเป็น
การเกิดฟองมากเกินไป	น้ำยาซักผ้าที่มากเกินไปหรือน้ำยาซักผ้าที่ไม่เหมาะสมอาจทำให้เกิดฟองมากเกินไปซึ่งอาจส่งผลให้น้ำรั่ว	• ตรวจสอบให้แน่ใจว่าใช้ผงซักฟอกในปริมาณที่แนะนำตามคำแนะนำของผู้ผลิต

อาการ	สาเหตุ	การแก้ไข
น้ำไม่เข้าเครื่องซักผ้าหรือเข้า น้อย	การจ่ายน้ำไม่เพียงพอในจุดตั้ง กลาว	• ตรวจสอบก๊อกอื่นในบ้าน
	ก๊อกน้ำเปิดไม่สุด	• เปิดก๊อกให้สุด
	ท่อจ่ายน้ำหักงอ	• ขยับท่อให้ตรง
	ตัวกรองของท่อจ่ายน้ำอุดตัน	• ตรวจสอบตัวกรองของท่อจ่ายน้ำ
น้ำในเครื่องซักผ้าไม่ระบายหรือ ระบายช้า	ท่อระบายมีการพันงอหรืออุดตัน	• ทำความสะอาดและจับท่อระบาย ให้ตรง
	ตัวกรองทางระบายอุดตัน	• ทำความสะอาดตัวกรองทางระบาย
เครื่องซักผ้าไม่ทำงาน	สายไฟอาจไม่ได้เสียบปลั๊กหรือ การต่ออาจหลวม	• ตรวจสอบให้แน่ใจว่าปลั๊กต่อกับ เต้ารับอย่างแน่นหนา
	ฟิวส์บ้านขาด เบรกเกอร์ตัด หรือ ไฟฟ้าดับ	• สับเบรกเกอร์หรือเปลี่ยนฟิวส์ อย่า เพิ่มขนาดของฟิวส์ หากปัญหาคือ การใช้ไฟฟ้าเกินกำลัง ให้ช่างไฟ ฟ้าที่มีคุณวุฒิทำการแก้ไข
	ไม่ได้เปิดก๊อกน้ำ	• เปิดก๊อกน้ำ
เครื่องซักผ้าไม่ปั่น	ตรวจสอบว่าฝาปิดสนิทดีแล้ว	• ปิดฝาและกดปุ่ม เริ่ม/พัก หลัง การกดปุ่ม เริ่ม/พัก อาจต้องใช้ เวลาครู่หนึ่งก่อนที่เครื่องซักผ้า จะเริ่มปั่น จะต้องล็อกฝาก่อนจะ ทำการปั่น เพิ่มเสื้อผ้า 1 หรือ 2 ชิ้นเพื่อช่วยให้สมดุล ฝาจัดที่ซัก ใหม่เพื่อให้มีการปั่นที่เหมาะสม

อาการ	สาเหตุ	การแก้ไข
ฝาไม่ยอมเปิด	เมื่อเครื่องชักผ้าเริ่มทำงาน ฝาจะไม่สามารถเปิดได้เพื่อความปลอดภัย	ตรวจสอบว่าสัญลักษณ์ 'การล็อกฝา' สว่างหรือไม่ คุณสามารถเปิดฝาได้อย่างปลอดภัยหลังจากสัญลักษณ์ 'การล็อกฝา' ดับลง
เวลาของโปรแกรมการซักล่าช้า	หากมีการตรวจพบความไม่สมดุลหรือหากโปรแกรมกำจัดฟองถูกเปิดไว้ เวลาในการซักจะเพิ่มขึ้น	สิ่งนี้เป็นเรื่องปกติ เวลาที่เหลือที่แสดงในจอแสดงผลเป็นเพียงการประมาณ เวลาที่เกิดขึ้นจริงอาจแตกต่างกัน
น้ำยาปรับผ้านุ่มล้น	น้ำยาปรับผ้านุ่มมากเกินไปอาจทำให้เกิดการล้น	ปฏิบัติตามคู่มือการใช้น้ำยาปรับผ้านุ่มเพื่อให้แน่ใจว่าใช้ในปริมาณที่เหมาะสม อย่าใส่เกินกว่าขีดเต็มเต็ม
จ่ายน้ำยาปรับผ้านุ่มเร็วเกินไป	ปริมาณน้ำยาปรับผ้านุ่มที่มากเกินไปอาจทำให้เกิดการจ่ายก่อนกำหนด	- ปฏิบัติตามคำแนะนำที่นำมาโดยผู้ผลิตผงซักฟอก - ปิดลิ้นชักตัวจ่ายน้ำยาอย่างช้าๆ อย่าเปิดลิ้นชักในระหว่างโปรแกรมการซัก
เพราะปั๊มต่างๆอาจไม่ทำงานอย่างถูกต้อง	ปั๊มจะใช้งานไม่ได้เมื่อประตูเปิดอยู่	กดอีกครั้งหลังจากปิดประตู
ปัญหาการอบแห้ง	ตรวจสอบก๊อกลงหลังจ่ายน้ำ	- อย่าใส่ผ้ามากเกินไป ตรวจสอบว่าเครื่องชักผ้าทำการระบายน้ำอย่างถูกต้องเพื่อขจัดน้ำออกจากผ้าที่ซักได้ดีพอ ปริมาณเสื่อผ้าน้อยเกินไปจะอบอย่างเหมาะสม ใส่ผ้าขนหนูเพิ่มสองสามผืน - ปิดก๊อกลงหลังจ่ายน้ำ
กลิ่น	กลิ่นนี้เกิดจากยางที่ติดอยู่กับเครื่องชักผ้า	เป็นกลิ่นปกติของยางใหม่ ซึ่งจะหายไปหลังจากใช้เครื่องชักผ้าสองสามครั้ง
	หากไม่ทำความสะอาดปะเก็นของประตูและบริเวณเปิดผนึกของประตูเป็นประจำ อาจมีกลิ่นที่เกิดจากเชื้อราหรือสิ่งแปลกปลอมได้	ทำความสะอาดปะเก็นของประตูและบริเวณเปิดผนึกของประตูเป็นประจำ และตรวจสอบว่ามีวัตถุขนาดเล็กติดอยู่ที่ปะเก็นประตูเวลาที่นำผ้าออกจากเครื่องชักผ้า
	อาจเกิดกลิ่นขึ้นได้หากมีสิ่งแปลกปลอมตกค้างอยู่ในฟิลเตอร์ของปั๊มระบายน้ำทิ้ง	ทำความสะอาดฟิลเตอร์ของปั๊มระบายน้ำทิ้งเป็นประจำ
	อาจเกิดกลิ่นขึ้นได้หากติดตั้งท่อระบายน้ำทิ้งอย่างไม่ถูกต้อง ซึ่งทำให้น้ำไหลย้อนกลับเข้าไปในเครื่องชักผ้า	ตรวจสอบให้แน่ใจว่าเมื่อติดตั้งท่อระบายน้ำทิ้ง ท่อไม่พับหรือถูกกดทับ
	การใช้ฟองขึ้นอบแห้งอาจเกิดกลิ่นได้จากเศษผ้าและสิ่งอื่นๆ ที่เข้าไปติดอยู่กับอุปกรณ์ทำความสะอาด (รุ่นที่อบแห้งได้เท่านั้น)	นี่ไม่ใช่การทำงานผิดพลาด
	อาจมีกลิ่นเกิดขึ้นจากการอบผ้าเปียกด้วยลมร้อน (รุ่นที่อบแห้งได้เท่านั้น)	กลิ่นจะหายไปไม่ช้า

ข้อความข้อผิดพลาด



อาการ	สาเหตุ	การแก้ไข
	การจ่ายน้ำไม่เพียงพอในพื้นที่	• ตรวจสอบก๊อกอื่นในบ้าน
	ก๊อกน้ำเปิดไม่สุด	• เปิดก๊อกให้สุด
	ท่อจ่ายน้ำหักงอ	• ขยับท่อให้ตรง
	ตัวกรองของท่อจ่ายน้ำอุดตัน	• ตรวจสอบตัวกรองของท่อจ่ายน้ำ
	หากมีการรั่วของน้ำเกิดขึ้นในท่อจ่ายน้ำที่หยุดการไหลของน้ำ ตัวบ่งชี้ A จะเป็นสีแดง 	• ใช้ท่อจ่ายน้ำที่หยุดการไหลของน้ำ
	อาจแตกต่างกันโดยขึ้นกับรุ่น	
	ปริมาณแผ่นน้อยเกินไป	• เพิ่มแผ่นผ้า 1 หรือ 2 ชิ้นเพื่อช่วยให้สมดุล
	ปริมาณแผ่นไม่สมดุล	• เพิ่มแผ่นผ้า 1 หรือ 2 ชิ้นเพื่อช่วยให้สมดุล
	เครื่องใช้ไฟฟ้ามีการตรวจจับความไม่สมดุลและระบบการแก้ไข หากใส่สิ่งของที่มีน้ำหนักเข้าไป (เช่น พรมห้องน้ำ ชุดอาบน้ำ ฯลฯ) ระบบนี้อาจหยุดการปั่นหรือกระทั่งขัดจังหวะโปรแกรมการปั่นทั้งหมด	• ผ้าจัดที่ซักใหม่เพื่อให้มีการปั่นที่เหมาะสม
	หากแผ่นผ้าที่ซักรับยังเปียกเกินไปเมื่อสิ้นสุดโปรแกรม เพิ่มผ้าชิ้นเล็กๆ เพื่อทำให้ผ้าที่ซักสมดุลและเปิดโปรแกรมการปั่นซ้ำอีกครั้ง	• ผ้าจัดที่ซักใหม่เพื่อให้มีการปั่นที่เหมาะสม

อาการ	สาเหตุ	การแก้ไข
 	ท่อระบายมีการพังหรืออุดตัน	• ทำความสะอาดและจับท่อระบายให้ตรง
	ตัวกรองทางระบายอุดตัน	• ทำความสะอาดตัวกรองทางระบาย
   	ตรวจสอบให้แน่ใจว่าฝาไม่ได้เปิด	• ปิดฝาให้สนิท หาก dE, dE 1, dE 2, dE 4 ไม่ถูกปล่อยออก ให้โทรขอรับบริการ
 	เซนเซอร์ฝาเครื่องทำงานผิดปกติ	
 	ข้อผิดพลาดในการควบคุม	• ถอดปลั๊กไฟและติดต่อขอรับบริการ
 	มีการเติมน้ำมากเกินไปเนื่องจากวาล์วน้ำชำรุด	• ปิดก๊อกน้ำ • ถอดปลั๊กไฟ • ติดต่อขอรับบริการ
 	การทำงานผิดพลาดของเซนเซอร์วัดระดับน้ำ	• ปิดก๊อกน้ำ • ถอดปลั๊กไฟ • ติดต่อขอรับบริการ
 	ภาระเกินในมอเตอร์	• ให้เครื่องซักผ้าพักเป็นเวลา 30 นาทีเพื่อให้มอเตอร์เย็นลง จากนั้นรีสตาร์ทโปรแกรม
 	น้ำรั่ว	• ติดต่อขอรับบริการ
 	ท่อหยางจ่าย/ระบายน้ำ หรือปั๊มระบายน้ำจับตัวเป็นน้ำแข็งหรือไม่	• ถอดน้ำอุ่นเข้าไปในถังซักและละลายน้ำแข็งที่ท่อระบายน้ำและปั๊มระบายน้ำ ใช้ผ้าขนหนูขุบน้ำอุ่นให้ชุ่มและลบไปบนท่อจ่ายน้ำ
 	เส้นผ้าไม่แห้ง	• ติดต่อขอรับบริการ

การรับประกันแบบจำกัดนี้ไม่ครอบคลุม:

- การเดินทางให้บริการเพื่อจัดส่ง รับ หรือติดตั้งหรือซ่อมแซมผลิตภัณฑ์ ค่าแนะนำสำหรับลูกค้าเกี่ยวกับการใช้งานผลิตภัณฑ์ ซ่อมแซมหรือเปลี่ยนฟิวส์ หรือแก้ไขการเดินสายไฟหรือการเดินท่อน้ำ หรือการแก้ไขการซ่อมแซม/การติดตั้งที่ไม่ได้รับอนุญาต
- ความล้มเหลวของผลิตภัณฑ์ที่จะทำงานในระหว่างไฟฟ้าดับและการขัดจังหวะ หรือการดูแลรักษาทางไฟฟ้าที่ไม่เพียงพอ
- ความเสียหายที่เกิดจากท่อน้ำรั่วหรือแตก ท่อน้ำที่เป็นน้ำแข็ง ทางระบายน้ำที่จำกัด การจ่ายน้ำที่ไม่เพียงพอหรือถูกขัดจังหวะ หรือการให้อากาศที่ไม่เพียงพอ
- ความเสียหายที่เป็นผลจากการใช้งานผลิตภัณฑ์สภาพอากาศที่เกิดการกัดกร่อนหรือขัดกับคำแนะนำที่กำหนดในคู่มือผู้ใช้ของผลิตภัณฑ์
- ความเสียหายต่อผลิตภัณฑ์ที่เกิดจากอุบัติเหตุ แมลงและสัตว์รบกวน ไฟผ่า ลม ไฟไหม้ น้ำท่วม หรือเหตุทางธรรมชาติอื่นๆ
- ความเสียหายหรือความล้มเหลวที่เกิดจากการแก้ไขหรือดัดแปลงที่ไม่ได้รับอนุญาต หรือหากถูกนำไปใช้งานอื่นๆ นอกเหนือจากจุดประสงค์การใช้งานที่มุ่งหมาย หรือการรื้อของน้ำเมื่อผลิตภัณฑ์ไม่ได้รับการติดตั้งอย่างเหมาะสม
- ความเสียหายหรือความล้มเหลวที่เกิดจากกระแสไฟฟ้าหรือศัลยกรรมไฟฟ้า หรือการเดินท่อที่ไม่ถูกต้อง การใช้งานเชิงพาณิชย์หรือทางอุตสาหกรรม หรือการใช้งานอุปกรณ์เสริม ชิ้นส่วน หรือผลิตภัณฑ์ทำความสะอาดที่ใช้แล้วหมดที่ไม่ได้รับอนุญาตโดย LG
- ความเสียหายที่เกิดจากการขนส่งหรือการดูแล รวมไปถึงรอยถลอก รอยบุบ การกระแทก และ/หรือความเสียหายอื่นต่อผิวเคลือบของผลิตภัณฑ์ของคุณ เว้นแต่ความเสียหายดังกล่าวเป็นผลจากข้อบกพร่องในวัสดุหรือคุณภาพของงาน
- ความเสียหายหรือการขาดชิ้นส่วนในสินค้าจัดแสดง ที่เปิดแล้ว ลดราคาหรือแก้ไขใหม่
- ผลิตภัณฑ์ที่มีหมายเลขซีเรียลดั้งเดิมที่ถูกถอด เปลี่ยน หรือไม่สามารถระบุได้ทันที รุ่นและหมายเลขซีเรียล พร้อมใบเสร็จรับเงินของร้านค้าปลีก จำเป็นสำหรับการยืนยันความถูกต้องของการรับประกัน
- การเพิ่มขึ้นของค่าสาธารณูปโภคและค่าใช้จ่ายสาธารณูปโภคเพิ่มเติม
- การซ่อมแซมเมื่อผลิตภัณฑ์ของคุณถูกใช้งานนอกเหนือจากการใช้งานในบ้านตามปกติ หรือขัดกับคำแนะนำที่กำหนดในคู่มือผู้ใช้ของผลิตภัณฑ์
- ค่าใช้จ่ายที่เกี่ยวข้องกับการขนย้ายผลิตภัณฑ์ของคุณออกจากบ้านของคุณเพื่อซ่อมแซม
- การถอดและการติดตั้งผลิตภัณฑ์ใหม่ หากถูกติดตั้งไว้ในตำแหน่งที่ไม่สามารถเข้าถึงได้หรือถูกติดตั้งโดยไม่สอดคล้องกับคำแนะนำในการติดตั้งที่พิมพ์เป็นรูปเล่ม รวมไปถึงคู่มือผู้ใช้และคู่มือการติดตั้งของ LG
- ความเสียหายที่เป็นผลจากการใช้ที่ผิด การใช้งานมากเกินไป การติดตั้ง การซ่อมแซมหรือการบำรุงรักษาที่ไม่เหมาะสม การซ่อมแซมที่ไม่เหมาะสมรวมถึงการใช้ชิ้นส่วนที่ไม่ได้รับอนุญาตหรือกำหนดโดย LG

การสั้นหรือเสียงแปลกๆที่เกิดจากการไม่ได้ถอดสลักขนย้ายหรือที่รองถังน้ำ

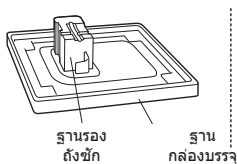


ถอดสลักขนย้ายและที่รองถังน้ำ
สลัก
ขนย้าย

การรั่วที่เกิดจากสิ่งสกปรก (ผงเศษผ้า) ในยางกันรั่วและกระจกฝา



ทำความสะอาดยางกันรั่วและกระจกฝา

การไม่ระบายน้ำที่เกิดจากการอุดตันของตัวกรองบีบ




ทำความสะอาดตัวกรองบีบ

น้ำไม่เข้าเนื่องจากตัวกรองของวาล์วน้ำเข้าอุดตันหรือท่อจ่ายน้ำหักงอ




ทำความสะอาดตัวกรองวาล์วน้ำเข้าหรือติดตั้งท่อจ่ายน้ำใหม่

น้ำไม่เข้าเพราะใช้น้ำยาซักผ้ามากเกินไป

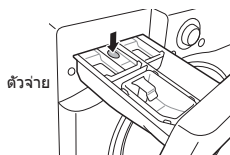


ทำความสะอาดลิ้นชักจ่ายน้ำยาซักผ้า

ผ้าร้อนหรืออุ่นหลังสิ้นสุดการซักเนื่องจากท่อจ่ายน้ำถูกติดตั้งสลับกัน




ติดตั้งท่อจ่ายน้ำใหม่

น้ำไม่ถูกจ่ายเข้าเพราะก๊อกน้ำไม่ได้เปิด

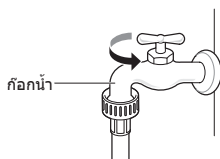


เปิดก๊อกน้ำ

การรั่วที่เกิดจากการติดตั้งท่อระบายไม่เหมาะสมหรือท่อระบายอุดตัน →

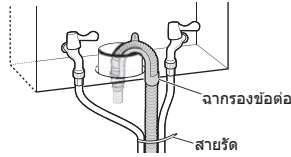


ติดตั้งท่อระบายใหม่

การรั่วที่เกิดจากการติดตั้งท่อจ่ายน้ำที่ไม่ถูกต้องหรือการใช้ท่อจ่ายน้ำยี่ห้ออื่น →




ติดตั้งท่อจ่ายน้ำใหม่

ปัญหาไฟไม่เข้าที่เกิดจากการต่อสายไฟหลวมหรือปัญหาของเต้ารับ →

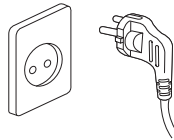


ต่อสายไฟใหม่หรือเปลี่ยนเต้ารับ

การเดินให้บริการเพื่อจัดส่ง รับติดตั้งผลิตภัณฑ์หรือเพื่อให้คำแนะนำในการใช้ผลิตภัณฑ์ การถอดและการติดตั้งผลิตภัณฑ์ใหม่ →

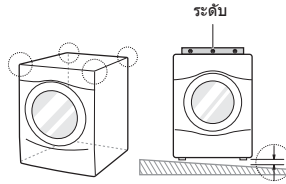


การรับประกันครอบคลุมข้อบกพร่องทางการผลิตเท่านั้น ไม่ครอบคลุมการบริการที่เป็นผลจากการติดตั้งไม่เหมาะสม

หากสกรูทั้งหมดไม่ได้รับการติดตั้งอย่างเหมาะสม อาจก่อให้เกิดการสั่นมากเกินไป (เฉพาะรุ่นมีแท่นเท่านั้น) →



ติดตั้งสกรู 4 ตัวที่แต่ละมุม (รวม 16 ตัว)

เสียงการกระแทกของน้ำ (การชน) เมื่อเครื่องซักผ้ากำลังทำการเติมน้ำ →

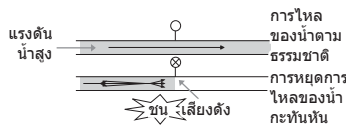

ปรับแรงดันน้ำโดยการหมุนวาล์วน้ำหรือก๊อกน้ำในบ้านให้อ่อนลง

บันทึก

บันทึก

บันทึก

