



ไทย
ENGLISH

คู่มือการใช้
LG-P350



CE 0168

P/N : MFL67159934 (1.0)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินการตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเขาสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ

เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่น ๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบการรองจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message "Your handset is a genuine LG product."

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Bluetooth QD ID B017379

คู่มือการใช้ LG-P350



- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ
- ไม่แนะนำให้ผู้ที่มีความบกพร่องทางสายตาใช้เครื่องรุ่นนี้ เนื่องจากมีปุ่มกดบนหน้าจอแบบสัมผัส
- ลิขสิทธิ์ ©2011 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google search, Maps, Google Mail, YouTube, Talk และ Android Market เป็นเครื่องหมายการค้าของ Google, Inc.



ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น
LG-P350 ของ LG ซึ่งทันสมัยและมีขนาดกะทัดรัด
ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสาร
เคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

ข้อความประกาศสำคัญ

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์ และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การจัดการแอปพลิเคชัน

- 1 บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
- 3 แตะ **ยกเลิกการติดตั้ง** และแตะตกลง เพื่อยกเลิกการติดตั้งแอปพลิเคชันที่คุณต้องการ

2. การยืดอายุแบตเตอรี่

คุณสามารถยืดอายุแบตเตอรี่ได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณยังสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, บลูทูธ หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Google Mail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- บางแอปพลิเคชันที่คุณดาวน์โหลดอาจลดอายุแบตเตอรี่

การตรวจสอบระดับประจุแบตเตอรี่

- 1 บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > สถานะ**
- 2 สถานะแบตเตอรี่ (กำลังชาร์จ, กำลังคายประจุ) และระดับ (เปอร์เซ็นต์เมื่อเทียบกับชาร์จเต็ม) จะแสดงที่ด้านบนของหน้าจอ

ข้อความประกาศสำคัญ

การตรวจสอบและควบคุมการใช้แบตเตอรี่


- 1 บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > การใช้แบตเตอรี่**
- 2 ด้านบนของหน้าจอจะแสดงเวลาที่ใช้แบตเตอรี่ ระยะเวลาจากการเชื่อมต่อกับแหล่งไฟฟ้าครั้งสุดท้ายหรือเชื่อมต่อกับแหล่งไฟฟ้าหรือไม่ ระยะเวลาที่คุณใช้งานไฟฟ้าจากแบตเตอรี่ หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้ไฟฟ้าจากแบตเตอรี่จากมากไปน้อย

3. การติดตั้ง OS โอเพ่นซอร์ส

หากคุณติดตั้ง OS โอเพ่นซอร์สในโทรศัพท์ของคุณ และไม่ใช่ OS จากผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้

คำเตือน:

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากผู้ผลิต โทรศัพท์ของคุณจะไม่ได้รับความคุ้มครองตามการรับประกันอีกต่อไป

 **คำเตือน:** ในการปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market™ เท่านั้น หากแอปพลิเคชันติดตั้งในโทรศัพท์อย่างไม่ถูกต้อง โทรศัพท์อาจทำงานไม่ถูกต้องหรือเกิดข้อผิดพลาดร้ายแรง คุณอาจต้องการยกเลิกการติดตั้งแอปพลิเคชันและข้อมูลและการตั้งค่าจากโทรศัพท์

4. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ บนหน้าจอหลัก แตะแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า > ตำแหน่งและระบบป้องกัน > ตั้งคาล็อคหน้าจอ > รูปแบบ** ทำตามคำแนะนำบนหน้าจอสำหรับการวาดแบบปลดล็อคหน้าจอ เลือก ถัดไป เพื่อดำเนินการต่อไปยังหน้าจอถัดไป

⚠ คำเตือน: ข้อควรระวังเมื่อใช้
ล็อคแบบ สิ่งสำคัญคือคุณต้อง
จำแบบปลดล็อคที่คุณตั้งไว้ได้
คุณมีโอกาสมือเพียง 5 ครั้ง
ในการป้อนแบบการปลดล็อค
PIN หรือรหัสผ่านของคุณ
หากคุณทำการป้อนทั้งหมด 5
ครั้งแล้ว คุณสามารถลองใหม่ได้อีก
ครั้งหลังจากผ่านไป 30 วินาที

**ในกรณีที่คุณลืมแบบการปลดล็อค
PIN หรือรหัสผ่านของคุณ:**
หากคุณสร้างแอคเคาท์ Google
บนโทรศัพท์ ให้แตะที่ปุ่มลืมแบบ จากนั้น
คุณจะต้องเซ็นอินด้วยแอคเคาท์ Google
ของคุณเพื่อปลดล็อคโทรศัพท์ หากคุณ
ไม่ได้สร้างแอคเคาท์ Google
บนโทรศัพท์ หรือคุณลืม
คุณจำเป็นต้องทำ Hard Reset

ข้อควรระวัง: หากคุณทำ Hard
Reset ข้อมูลแอปพลิเคชันผู้ใช้
และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ โปรด
อย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ
Hard Reset

5. การใช้โหมดปลอดภัยและ Hard Reset

การใช้โหมดปลอดภัย

* **การแก้ไขโทรศัพท์จากการทำ
งานผิดพลาด**
ปิดโทรศัพท์และรีบูต
ขณะที่โทรศัพท์กำลังเริ่มทำงาน
ให้กดปุ่มส่งคางไว้ขณะแสดงโลโก้
Android โทรศัพท์จะบูตไปจนถึง
หน้าจอหลัก และแสดง
"โหมดปลอดภัย" ในมุมล่างซ้าย

* **การใช้ Hard Reset
(รีเซ็ตค่าจากโรงงาน)**

- 1 ถอดและใส่แบตเตอรี่อีกครั้ง
- 2 กดปุ่มเหล่านี้ค้างไว้เกิน 10 วินาที:
ปุ่ม **ปุ่มเปิด/ปิดเครื่อง/ล็อค** +
ปุ่ม **ส่ง** + ปุ่ม **ลดระดับเสียง**
- 3 เมื่อโทรศัพท์เปิดเครื่อง
ปล่อยปุ่มเหล่านี้

⚠ คำเตือน

หากคุณทำ Hard Reset
ข้อมูลแอปพลิเคชันผู้ใช้
และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ
โปรดอย่าลืมสำรองข้อมูลสำคัญไว้
ก่อนทำ **Hard Reset**

ข้อความประกาศสำคัญ

6. การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณสามารถเข้าใช้จุดเชื่อมต่อไร้สายหรือ "Hotspot" ได้ จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณสามารถใช้ได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อให้สามารถเชื่อมต่อได้ปิด Wi-Fi เมื่อคุณไม่ใช้ เพื่อยืดอายุแบตเตอรี่

การเปิด Wi-Fi และเชื่อมต่อเครือข่าย Wi-Fi

1 บนหน้าจอหลัก แตะที่แอปพลิเคชัน และเลือก **ตั้งค่า > การเชื่อมต่อไร้สายและเครือข่าย > ตั้งค่า Wi-Fi**

2 แตะ **Wi-Fi** เพื่อเปิดและเริ่มสแกนหาเครือข่าย Wi-Fi

- รายการเครือข่าย Wi-Fi ที่มีอยู่จะปรากฏขึ้น เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ

3 แตะที่เครือข่ายเพื่อเชื่อมต่อ

- หากเครือข่ายเป็นแบบเปิด คุณจะได้รับแจ้งให้ยืนยันว่าคุณต้องการเชื่อมต่อกับเครือข่ายโดยการแตะ

เชื่อมต่อ

- หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)

4 แถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi

7. การใช้การ์ด micro SD

รูปภาพ, ไฟล์เพลง และวิดีโอสามารถบันทึกในหน่วยความจำภายนอกเท่านั้นก่อนการใส่ลงในตัว คุณต้องใส่การ์ดหน่วยความจำ micro SD ในโทรศัพท์ก่อน หากไม่ได้ใส่การ์ดหน่วยความจำ คุณจะไม่สามารถบันทึกภาพและวิดีโอที่ถ่ายได้

คำเตือน:

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ มิเช่นนั้นอาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการดหน่วยความจำอาจเสียหาย

8. การเปิดและการสลับ แอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากแอปพลิเคชันที่เปิดจะทำงาน แม้ว่า คุณจะเปิดแอปพลิเคชันอื่น โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อน เปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช่ทรัพยากรโดยไม่จำเป็น

การหยุดแอปพลิเคชันที่คุณใช้

- 1 บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน > การรัน**
- 2 เลื่อนไปยังแอปพลิเคชันที่ต้องการ และแตะ **บังคับหยุด** เพื่อหยุดใช้

เคล็ดลับ การกลับไปยังแอปพลิเคชันที่ใช้งานล่าสุด

- กดปุ่มหน้าหลักค้างไว้ จากนั้น หน้าจอจะแสดงรายการแอปพลิเคชันที่คุณใช้งานล่าสุด

9. คัดลอก LG PC Suite จากการ์ด SD

LG PC Suite IV เป็นโปรแกรมที่ช่วยให้คุณเชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์โดยใช้สายการสื่อสารข้อมูล USB เพื่อให้คุณสามารถใช้ฟังก์ชันของโทรศัพท์มือถือบนคอมพิวเตอร์ของคุณได้

ฟังก์ชันหลักของ LG PC Suite IV

- สร้าง แก๊จ และลบข้อมูลในโทรศัพท์ได้โดยสะดวก
- ซิงโครไนซ์ข้อมูลระหว่างคอมพิวเตอร์และโทรศัพท์ (รายชื่อ, ปฏิทิน, ข้อความ(SMS), บุคมารค, บันทึกการโทร)
- ถ่ายโอนไฟล์มัลติมีเดีย (ภาพถ่าย, วิดีโอ, เพลง) ได้สะดวกเพียงลากแล้ววางระหว่างคอมพิวเตอร์และโทรศัพท์
- ถ่ายโอนข้อความจากโทรศัพท์ไปยังคอมพิวเตอร์
- ใช้โทรศัพท์เป็นโมเด็ม
- อัปเดตซอฟต์แวร์โดยไม่สูญเสียข้อมูล

ขอความประกาศสำคัญ

การตั้งค่า LG PC Suite

จากการรุดหน่วยความจำ micro SD

- 1 ใส่การ์ดหน่วยความจำ micro SD ในโทรศัพท์ (อาจติดตั้งไว้ในโทรศัพท์ของคุณแล้ว)
- 2 ก่อนเชื่อมต่อสายข้อมูล USB ให้ตรวจสอบว่าเปิดใช้โหมดที่เก็บข้อมูลเท่านั้นในโทรศัพท์ของคุณแล้ว (ในเมนูแอปพลิเคชัน ให้เลือกตั้งค่า > การ์ด SD และพื้นที่จัดเก็บของโทรศัพท์ แล้วเลือกช่องที่เก็บข้อมูลเท่านั้น)
- 3 เชื่อมต่อโทรศัพท์ผ่านสายข้อมูล USB กับคอมพิวเตอร์ของคุณ
- 4 • ในแถบสถานะ ให้ลากไอคอน USB
• เลือกเชื่อมต่อ USB แล้วและเปิดใช้ที่เก็บข้อมูล USB
• คุณสามารถดูเนื้อหาที่จัดเก็บบนคอมพิวเตอร์ของคุณและโอนไฟล์
- 5 • คัดลอกไฟล์เดอร์ 'LGPCSuiteIV' ในที่เก็บข้อมูลไปยังคอมพิวเตอร์ของคุณ
• รันไฟล์ 'LGInstaller.exe' ในคอมพิวเตอร์ และทำตามคำแนะนำ

* เมื่อทำการติดตั้ง LG PC Suite IV เสร็จเรียบร้อยแล้ว ให้ปิดการใช้โหมดที่เก็บข้อมูลเท่านั้น เพื่อเริ่มใช้งาน LG PC Suite IV

หมายเหตุ: โปรดอย่าย้ายหรือลบไฟล์โปรแกรมอื่นที่ติดตั้งในการรุดหน่วยความจำของคุณ เนื่องจากอาจทำให้แอปพลิเคชันที่ติดตั้งไว้วงหน่าในโทรศัพท์เสียหายได้

10. การเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ผ่าน USB

หมายเหตุ:

ในการซิงโครไนซ์โทรศัพท์ผ่านสาย USB กับคอมพิวเตอร์ของคุณ คุณจะต้องติดตั้งโปรแกรม LG PC Suite ในคอมพิวเตอร์ของคุณ คุณสามารถดาวน์โหลดโปรแกรมนี้ได้ จากเว็บไซต์ LG (www.lg.com) ไปที่ <http://www.lg.com> และเลือกภูมิภาค ประเทศ และภาษา ไปที่เว็บไซต์ LG สำหรับข้อมูลเพิ่มเติม เนื่องจาก PC Suite มีอยู่ในการ์ด SD ที่อยู่ภายในกล่อง คุณสามารถคัดลอกไปยังคอมพิวเตอร์ของคุณได้

LG-P350 ไม่สนับสนุน:

- การเชื่อมต่อคอมพิวเตอร์ผ่านบลูทูธ

- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- สิ่งที่ต้องทำในปฏิทิน
- บันทึก
- แอปพลิเคชัน Java

คู่มือผู้ใช้สำหรับ PC Suite IV อยู่ในเมนูวิธีใช้หลังจากการติดตั้ง PCSuite IV

- 1 ใช้สาย USB ที่มาพร้อมกับโทรศัพท์ของคุณเพื่อเชื่อมต่อกับพอร์ต USB ที่คอมพิวเตอร์ คุณจะได้รับการแจ้งว่าเชื่อมต่อ USB แล้ว
- 2 เปิดแถบการแจ้งเตือน และแตะ เชื่อมต่อ USB แล้ว
- 3 แตะ "เปิดใช้ที่เก็บข้อมูล USB" เพื่อยืนยันว่าคุณต้องการถ่ายโอนไฟล์ระหว่างการ์ด micro SD ของโทรศัพท์และคอมพิวเตอร์ เมื่อโทรศัพท์เชื่อมต่อเป็นที่เก็บข้อมูล USB คุณจะได้รับการแจ้งเตือน การด micro SD ของโทรศัพท์จะเชื่อมต่อเป็นไดรฟ์ในคอมพิวเตอร์คุณสามารถคัดลอกไฟล์ระหว่างการ์ด micro SD ได้

11. ปลดล็อคหน้าจอเมื่อใช้การเชื่อมต่อข้อมูล

หน้าจอจะดับลงหากไม่ได้และเป็นระยะเวลาหนึ่งเมื่อใช้การเชื่อมต่อข้อมูลในการเปิดหน้าจอ LCD ให้แตะที่หน้าจอ

หมายเหตุ: เมื่อยกเลิกการติดตั้ง PC Suite IV ไดรเวอร์ของ USB และบลูทูธจะไม่ถูกลบโดยอัตโนมัติ ดังนั้นคุณต้องยกเลิกการติดตั้งด้วยตัวเอง

เคล็ดลับ! ในการใช้การ์ด micro SD ในโทรศัพท์อีกครั้งคุณต้องเปิดแถบการแจ้งเตือน และแตะ "ปิดที่เก็บข้อมูล USB"

ระหว่างเวลานี้ คุณจะไม่สามารถใช้การ์ด micro SD จากโทรศัพท์ คุณจึงไม่สามารถใช้แอปพลิเคชันที่ใช้การ์ด micro SD เช่น กล้อง, คลังภาพ และเพลง

ในการเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ ให้ทำตามคำแนะนำในคอมพิวเตอร์เพื่อยกเลิกเชื่อมต่ออุปกรณ์ USB อย่างถูกต้อง เพื่อหลีกเลี่ยงการสูญเสียข้อมูลในการด

- 1 ยกเลิกการเชื่อมต่ออุปกรณ์ USB ในคอมพิวเตอร์ของคุณอย่างปลอดภัย
- 2 เปิดแถบการแจ้งเตือน และแตะ ปิดที่เก็บข้อมูล USB
- 3 แตะ ปิด ในกล่องโต้ตอบที่เปิดขึ้น

ข้อความประกาศสำคัญ

12. ถี้อโทรศัพท์ตั้งขึ้น

โปรดถือโทรศัพท์ที่ตั้งขึ้นในลักษณะเดียวกับโทรศัพท์ทั่วไป

ในขณะที่ทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล โปรดหลีกเลี่ยงการถือบริเวณส่วนล่างของโทรศัพท์ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ เนื่องจากอาจส่งผลกระทบต่อคุณภาพของสัญญาณ

13. เมื่อนำจอค้าง

หากโทรศัพท์ไม่ตอบสนองการป้อนข้อมูลของผู้ใช้ หรือหน้าจอค้าง:

ถอดแบตเตอรี่ออก
ใส่เข้าไปใหม่อีกครั้ง และเปิดโทรศัพท์
หากยังไม่สามารถแก้ไขปัญหาได้
โปรดติดต่อศูนย์บริการ

14. อย่าเชื่อมต่อโทรศัพท์ ของคุณในขณะที่เปิด/ ปิดคอมพิวเตอร์

โปรดอย่าลืมยกเลิกการเชื่อมต่อโทรศัพท์ของคุณผ่านสายเคเบิลเนื่องคอมพิวเตอร์ของคุณจากอาจเกิดข้อผิดพลาด

ก่อนเริ่มต้นใช้งานโทรศัพท์ โปรดอ่านก่อน!

วิธีบันทึกไฟล์เพลง/ วิดีโอในโทรศัพท์

เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB

แตะและลากแถบสถานะในหน้าจอหลักลง เลือกลง **เชื่อมต่อ USB** แล้ว

> **เปิดใช้ที่เก็บข้อมูล USB** >

เปิดโฟลเดอร์เพื่อดูไฟล์

หากคุณไม่ได้ทำการติดตั้ง

ไดรเวอร์แพลตฟอร์ม LG

Android ในคอมพิวเตอร์ของคุณ

คุณต้องทำการตั้งค่าด้วยตัวเอง

บนหน้าจอหลัก แตะแท็บ

แอปพลิเคชัน และเลือก

ตั้งค่า > **การ์ด SD**

และพื้นที่จัดเก็บของโทรศัพท์ >

เปิดใช้ **ที่เก็บข้อมูลเท่านั้น**

สำหรับข้อมูลเพิ่มเติม โปรดดูที่ 'การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล'

การบันทึกไฟล์เพลงหรือวิดีโอจากคอมพิวเตอร์ไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์

- คุณสามารถคัดลอกหรือย้ายไฟล์จากคอมพิวเตอร์ไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์โดยใช้ตัวอ่านการ์ด

- หากมีไฟล์วิดีโอที่มีไฟล์คำบรรยาย (ไฟล์ .smi หรือ .srt) ที่ใช้ชื่อเดียวกับไฟล์วิดีโอ) ให้วางไฟล์ไว้ในโฟลเดอร์เดียวกันเพื่อให้คำบรรยายปรากฏขึ้นโดยอัตโนมัติในขณะที่เล่นไฟล์วิดีโอ
- เมื่อทำการดาวน์โหลดไฟล์เพลงหรือวิดีโอจะต้องมีลิขสิทธิ์อย่างถูกต้อง โปรดอย่าลืมนำไฟล์ที่เสียหายหรือมีนามสกุลไฟล์ที่ไม่ถูกต้องอาจสร้างความเสียหายให้กับโทรศัพท์ได้

วิธีเล่นไฟล์เพลง/ วิดีโอในโทรศัพท์

การเล่นไฟล์เพลง

จากหน้าจอหลัก ให้แตะแท็บ

แอปพลิเคชัน > **เพลง** ค้นหาไฟล์

ที่ต้องการเล่นจากแท็บศิลปิน อัลบั้ม

เพลง รายการ

การเล่นไฟล์วิดีโอ

จากหน้าจอหลัก ให้แตะแท็บ

แอปพลิเคชัน > **เครื่องเล่นวิดีโอ**

ค้นหาไฟล์ที่ต้องการจากในรายการ

แล้วเลือกไฟล์เพื่อเล่น

ก่อนเริ่มต้นใช้งานโทรศัพท์ โปรดอ่านก่อน!

วิธีย้ายรายชื่อจากโทรศัพท์เก่าไปยังโทรศัพท์ที่ใหม่ในปัจจุบัน

เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากโทรศัพท์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync

- 1 ดาวน์โหลด LG PC Suite IV ที่ www.lg.com และติดตั้งในคอมพิวเตอร์ เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 เลือกไอคอน รายชื่อ ไปที่ เมนู > ไฟล์ > อิมพอร์ต และเลือกไฟล์ CSV ที่บันทึกไว้ในคอมพิวเตอร์
- 3 หากฟิลด์ภายในไฟล์ CSV ที่อิมพอร์ตแตกต่างจากฟิลด์ที่อยู่ใน LG PC Suite IV คุณจำเป็นต้องแมปฟิลด์ หลังจากแมปฟิลด์ให้คลิก ตกลง จากนั้นรายชื่อจะถูกเพิ่มในคอมพิวเตอร์
- 4 หาก LG PC Suite IV ตรวจสอบการเชื่อมต่อของโทรศัพท์ LG-P350 (โดยใช้สายเคเบิล USB) ให้คลิก "ซิงค์" หรือ "ซิงค์รายชื่อ" เพื่อซิงโครไนซ์รายชื่อที่บันทึกไว้ในคอมพิวเตอร์กับโทรศัพท์ของคุณ และทำการบันทึก

วิธีการส่งข้อมูลจากโทรศัพท์ของคุณผ่านบลูทูธ

การส่งข้อมูลผ่านบลูทูธ: คุณสามารถส่งข้อมูลผ่านบลูทูธได้โดยการเปิดแอปพลิเคชันที่เกี่ยวข้อง

ไม่ใช่การเปิดจากเมนูบลูทูธ ซึ่งไม่เหมือนกับโทรศัพท์มือถือทั่วไป

* การส่งรูปภาพ:

เรียกใช้แอปพลิเคชันคลังภาพ และเลือก **รูปภาพ** > **เมนู** คลิก **แบ่งปัน** และเลือก **บลูทูธ** > ให้ตรวจสอบวามบลูทูธเปิดอยู่ และเลือก **สแกนหาอุปกรณ์** > เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ

* เอ็กซ์พอร์ตรายชื่อ:

เรียกใช้แอปพลิเคชันรายชื่อ และที่อยู่ที่คุณต้องการทำการเอ็กซ์พอร์ต กด **เมนู** และเลือก **แบ่งปัน** > **บลูทูธ** > ให้ตรวจสอบวามบลูทูธเปิดอยู่และเลือก **สแกนหาอุปกรณ์** > เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ

* การส่งข้อมูลไปยังรายชื่อ

ที่เลือกหลายรายการ: เรียกใช้แอปพลิเคชัน "รายชื่อ" ในการเลือกมากกว่าหนึ่งรายชื่อ

กดปุ่ม **เมนู** และแตะที่ **เลือกหลายรายการ** แตะที่รายชื่อที่คุณต้องการส่งและกดปุ่ม **เมนู** และแตะ **เลือกทั้งหมด** เลือก **แบ่งปัน** > **บลูทูธ** > ให้ตรวจสอบว่าบลูทูธเปิดอยู่และเลือก **สแกนหาอุปกรณ์** > เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ

- * **การเชื่อมต่อกับ FTP (เครื่องรุ่นนี้รองรับเฉพาะเซิร์ฟเวอร์ FTP):** แตะ "ตั้งค่า" > "การเชื่อมต่อไร้สายและเครือข่าย" > "ตั้งค่าบลูทูธ" จากนั้น ทำเครื่องหมายที่ช่อง "ค้นหาได้" และทำการค้นหาอุปกรณ์อื่น ค้นหาบริการที่คุณต้องการและทำการเชื่อมต่อกับเซิร์ฟเวอร์ FTP

เคล็ดลับ: เวอร์ชันบลูทูธ 2.1 EDR และได้รับการรับรองจาก Bluetooth SIG ซึ่งสามารถทำงานร่วมกับอุปกรณ์อื่นๆ ที่ได้รับการรับรองจาก Bluetooth SIG ได้

- หากคุณต้องการค้นหาโทรศัพท์เครื่องนี้จากอุปกรณ์อื่นๆ ไปที่ "ตั้งค่า" > "การเชื่อมต่อไร้สายและเครือข่าย" > "ตั้งค่าบลูทูธ"

จากนั้น ทำเครื่องหมายที่ช่อง

"ค้นหาได้"

เครื่องหมายที่ช่องนี้จะหายไปหลังจากผ่านไป 120 วินาที

- รูปแบบที่รองรับได้แก่ HFP, HSP, OPP, PBAP (เซิร์ฟเวอร์), FTP (เซิร์ฟเวอร์), A2DP, AVRCP, และ DUN

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หากต้องการเปิดโทรศัพท์ ให้กดปุ่ม เปิด/ปิดเครื่องค้างไว้ 3 วินาที

หากต้องการปิดโทรศัพท์ ให้กดปุ่มเปิด/ปิดเครื่องค้างไว้ 3 วินาที แล้วแตะ ปิดเครื่อง

NOTE : เมื่อลือคหน้าจอ

1. ใช้นิ้วมือของคุณลากจากซ้ายไปขวาเพื่อปลดลือคหน้าจอ
2. หากต้องการปิดโทรศัพท์ ให้กดปุ่มเปิด/ปิดเครื่องค้างไว้ 3 วินาที แล้วแตะ ปิดเครื่อง



⚠ คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้

เคล็ดลับ! การกดปุ่มเมนูในขณะที่คุณแตะแอปพลิเคชันเพื่อตรวจสอบรายการตัวเลือก


เคล็ดลับ! LG-P350 ไม่รองรับการสนทนาทางวิดีโอ

เคล็ดลับ! หาก LG-P350 เกิดข้อผิดพลาดขึ้นจากการใช้งาน หรือคุณไม่สามารถเปิดเครื่องได้ ให้ถอดแบตเตอรี่ ถัดตั้งเข้าไปใหม่ และเปิดเครื่องหลังจากผ่านไป 5 วินาที

ช่องเสียบหูฟังสเตอริโอ



ช่องเสียบอุปกรณ์ชาร์จ,
ช่องเสียบสายเคเบิล
micro USB



ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก: ความคมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ความคมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ความคมระดับเสียงต่อเนื่อง

ไมโครโฟน



เลนส์กล้อง



ฝาครอบด้านหลัง

ช่องเสียบซิมการ์ด

ช่องเสียบการ์ดหน่วย
ความจำ micro SD



แบตเตอรี่

การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ในการใส่ซิมการ์ดและแบตเตอรี่:

- 1 ในการถอดฝาครอบด้านหลัง ให้จับโทรศัพท์ไว้อย่างมั่นคง ใช้นิ้วหัวแม่มือของมืออีกข้างออกแรงกดฝาครอบด้านหลัง ใช้นิ้วชี้กดฝาปิดแบตเตอรี่



- 2 ใส่ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง



- 3 ใส่แบตเตอรี่ให้เข้าที่โดยให้หน้าสัมผัสสีทองในโทรศัพท์และแบตเตอรี่ตรงกัน



- 4 ปิดฝาครอบด้านหลัง



การชาร์จโทรศัพท์

เลื่อนฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านข้างของโทรศัพท์

LG-P350 เสียบอุปกรณ์ชาร์จ

และเสียบปลั๊กไฟเข้ากับเต้าเสียบ

ไฟ คุณต้องชาร์จโทรศัพท์ LG-P350

จนกว่าจะเห็น 



หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่

หมายเหตุ: โทรศัพท์ LG-P350 มีเสาอากาศภายใน โปรดใช้ความระมัดระวังเพื่อไม่ให้ขูดขีดหรือสร้างความเสียหายแก่บริเวณด้านหลังของโทรศัพท์ เนื่องจากจะทำให้สูญเสียประสิทธิภาพในการทำงาน


การติดตั้งการ์ดหน่วยความจำ

ในการจัดเก็บไฟล์มัลติมีเดีย เช่น ภาพที่ถ่ายโดยใช้กล้องถ่ายรูปในตัว คุณต้องใส่การ์ดหน่วยความจำในโทรศัพท์

หมายเหตุ: โทรศัพท์ LG-P350 รองรับการ์ดหน่วยความจำสูงสุดไม่เกิน 32 กิกะไบต์


ในการใส่การ์ดหน่วยความจำ:

- 1 ปิดโทรศัพท์ก่อนใส่หรือถอดการ์ดหน่วยความจำถอดฝาครอบด้านหลัง

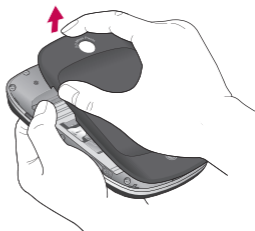

- 2 ใส่การ์ดหน่วยความจำลงในช่องเสียบ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง



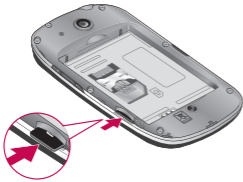

⚠ คำเตือน!

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ มิเช่นนั้น อาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ดหน่วยความจำอาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำก่อนจึงจะสามารถใช้งานการ์ดได้

หมายเหตุ: ไฟล์ทั้งหมดในการ์ดจะถูกลบออกเมื่อคุณฟอร์แมตการ์ด

- 1** บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน เพื่อเปิดเมนูแอปพลิเคชัน
- 2** เลื่อนแล้วแตะ **ตั้งค่า**
- 3** เลื่อนแล้วแตะ **การ์ด SD และพื้นที่จัดเก็บของโทรศัพท์**
- 4** ยกเลิกการเชื่อมต่อการ์ด SD
- 5** แตะ **ฟอร์แมตการ์ด SD** แล้วยืนยันการเลือกของคุณ
- 6** หากคุณตั้งค่าล็อคแบบ ให้ออน ข้อมูลล็อคแบบและเลือก **ลบทุกสิ่ง** การตจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดอร์อาจจะแตกต่างไปจากเดิมภายหลังจากฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

เคล็ดลับ!

หากยกเลิกการเชื่อมต่อการ์ดหน่วยความจำแล้ว คุณสามารถฟอร์แมตได้โดยมีขั้นตอนดังนี้

แตะ **แอปพลิเคชัน > ตั้งค่า > การ์ด SD และพื้นที่จัดเก็บของโทรศัพท์ > ฟอร์แมตการ์ด SD**

หน้าจอหลักของคุณ

ล๊อคโทรศัพท์ของคุณ

ในขณะที่คุณไม่ได้ใช้งาน LG-P350 โทรศัพท์เปิด/ปิดเครื่อง/ ล๊อคเพื่อล๊อคโทรศัพท์ของคุณ ซึ่งจะช่วยป้องกัน การกดปุ่มโดยไม่ได้ตั้งใจและประหยัด พลังงานแบตเตอรี่

นอกจากนี้ หาก你不ใช้โทรศัพท์ชั่วคราว หน้าจอหลักหรือหน้าจออื่นที่คุณ กำลังดูจะเปลี่ยนเป็นหน้าจอล๊อคเพื่อ ประหยัดแบตเตอรี่

หมายเหตุ: หากมีโปรแกรมกำลังเปิด ใช้งานอยู่ในขณะที่คุณตั้งค่าแบบการ ล๊อค โปรแกรมเหล่านั้นอาจจะยังคง ทำงานอยู่ในโหมดล๊อค ขอแนะนำให้ ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งาน โหมดล๊อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าใช้เว็บ และการสื่อสารข้อมูล)

เคล็ดลับ!

การตั้งค่าแบบปลดล๊อค: คุณสามารถวาดแบบปลดล๊อคของคุณได้โดยการ เชื่อมต่อสิ่งจืดหรือมากกว่า หากคุณตั้งค่าแบบไว้ หน้าจอของโทรศัพท์คุณจะถูกล๊อค ในการปลดล๊อคโทรศัพท์ ให้วาด แบบตามที่คุณตั้งไวบนหน้าจอ


เคล็ดลับ! เมื่อคุณจะทำ การตั้งค่าแบบปลดล๊อค คุณจำเป็นต้องสร้างแอคเคาท์ Gmail ก่อน

ข้อควรระวัง:

โทรศัพท์จะล๊อค 30 วินาทีหลังจากการวาด แบบปลดล๊อคไม่ถูกต้อง 5 ครั้ง

ปลดล็อกหน้าจอ

เมื่อไม่มีการใช้งานโทรศัพท์ LG-P350 เครื่องจะกลับไปล็อกหน้าจอ ใช้นิ้วมือของคุณลากจากซ้ายไปขวา เพื่อปลดล็อกหน้าจอ

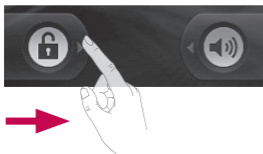

โหมดเงียบ

จากแถบการแจ้งเตือน ให้แตะ  เป็น  หรือหากคุณไม่ต้องการใช้แบบปลดล็อก เพียงลาก  ไปทางขวา



ในการทำให้โทรศัพท์ของคุณใช้งานได้อีกครั้ง กดปุ่ม **ส่ง** หรือ **ปิด/ปิดเครื่อง/ล็อก** หน้าจอจะปรากฏแตะที่ไอคอนล็อกและลากนิ้วไปทางขวาเพื่อปลดล็อกหน้าจอหลัก หน้าจอสุดท้ายที่คุณใช้จะเปิดขึ้น



โฮมเพจ

เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดู นอกจากนี้ คุณยังสามารถปรับแต่งพาเนลด้วย Widget, ข้อความ ซึ่งเป็นข้อความไปยังแอปพลิเคชัน โฟลเดอร์ และภาพพื้นหลังที่ชื่นชอบ

หมายเหตุ: ภาพหน้าจอของภาพอาจแตกต่างกันตามผู้ให้บริการ

เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่มในหน้าจอหลัก

เคล็ดลับ!

- แตะไอคอนนั้นค้างไว้ ไอคอนแอปพลิเคชัน จะเปลี่ยนเป็นไอคอน **ถังขยะ** 
- ลากและดึงไอคอนแอปพลิเคชันไปยังไอคอน **ถังขยะ** 

เคล็ดลับ! คุณไม่สามารถลบแอปพลิเคชันที่โหลดไว้ล่วงหน้าได้ (คุณสามารถลบได้เพียงไอคอนบนหน้าจอเท่านั้น)

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด

แตะปุ่มหน้าหลักค้างไว้ หน้าจอจะแสดงบ๊อบอัปโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด

แถบการแจ้ง

แถบการแจ้งอยู่ด้านบนสุดของหน้าจอ



แตะและเลื่อนแถบการแจ้งลงด้วยนิ้วมือ หรือ ในหน้าจอหลัก แตะปุ่มเมนูแล้วเลือก การแจ้ง ในหน้าจอนี้ คุณจะสามารถตรวจสอบและจัดการกับสถานะของ Wi-Fi, บลูทูธ, GPS รวมถึงการแจ้งอื่นๆ ได้

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะที่ฟิลด์ข้อความที่คุณต้องการป้อนข้อความ

ปุ่มกดโทรศัพท์ (ปุ่มกด Qwerty)

ปุ่ม Shift - แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ แตะสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

ปุ่ม XT9 - เปิดหรือปิดโหมด XT9

ปุ่มตั้งค่า - แตะเพื่อดูเมนูตั้งค่า เลือกจาก ตั้งค่า แก้ไข โครงร่างแป้นพิมพ์, ภาษาที่ใช้, พจนานุกรมผู้ใช้ และ วิธีป้อนข้อมูล

ปุ่มกดตัวเลขและสัญลักษณ์ - แตะเพื่อเปลี่ยนการป้อนข้อมูลเป็นการป้อนตัวเลขและสัญลักษณ์

ปุ่ม Enter - แตะเพื่อขึ้นบรรทัดใหม่ในฟิลด์ข้อความ

ปุ่มภาษา - แตะเพื่อเปลี่ยนภาษาของแป้นพิมพ์บนหน้าจอ



ปุ่มลบ



เลื่อนย้อนกลับหรือ
ไปข้างหน้าระหว่างตัวอักษร

เคล็ดลับ! ในการสลับระหว่างปุ่มกด
Qwerty และปุ่มกดโทรศัพท์ ให้แตะ



แล้วเลือกโครงร่างแป้นพิมพ์

การตั้งค่าแอคเคาท์ Google

ครั้งแรกที่คุณเปิดแอปพลิเคชัน
Google ในโทรศัพท์ คุณจะต้อง
ไชนอินด้วยแอคเคาท์ Google ของ
คุณ หากคุณไม่มีแอคเคาท์ Google
เครื่องจะขอให้คุณสร้างแอคเคาท์

ข้อสำคัญ

- บางแอปพลิเคชันจะสามารถ
ทำงานได้กับแอคเคาท์ Google
แรกที่คุณเพิ่มเท่านั้น หากคุณต้อง
ใช้มากกว่าหนึ่งแอคเคาท์ Google
ในโทรศัพท์ของคุณ โปรดตรวจสอบ
ให้แน่ใจว่าคุณทำการไชนอินด้วย
แอคเคาท์ที่คุณต้องการใช้งานกับ
แอปพลิเคชันนั้นๆ ก่อนการใช้งาน
เมื่อคุณทำการไชนอิน รายชื่อ,
ข้อความ Google Mail,
เหตุการณ์ในปฏิทินของคุณ

และข้อมูลอื่นๆ จากแอปพลิเคชัน
เหล่านี้และบริการบนเว็บจะ
ซิงโครไนซ์กับโทรศัพท์ของคุณ


การโทร

การรับสายและการปฏิเสธสาย เรียกเขา

เมื่อลือคนหน้าจอ/

เมื่อไม่ได้ลือคนหน้าจอ

เมื่อโทรศัพท์ดังขึ้น ให้ลากไอคอน
รับสาย  ไปทางขวา

ลากไอคอน ปฏิเสธ  ไปทาง
ซ้ายเพื่อปฏิเสธสายเรียกเขา
ลากแถบข้อความขอโทษจากด้านล่าง
หากคุณต้องการส่งข้อความให้และ
แถบข้อความขอโทษจากด้านล่าง

ข้อความ

โทรศัพท์ LG-P350
ของคุณได้ผสมผสาน SMS และ MMS
ไว้ในเมนูที่ใช้งานได้เพียงเมนูเดียว

⚠ คำเตือน: การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับวิธีการเข้ารหัสและภาษาของ SMS

⚠ คำเตือน: หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

การเปิดหน้าจอดีเมลและแอคเคาท์

คุณสามารถใช้แอปพลิเคชัน อีเมล เพื่ออ่านอีเมลจากบริการอื่นๆ นอกเหนือจาก Google Mail ได้ แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange

เครือข่ายสังคม

ด้วยโทรศัพท์ของคุณ คุณสามารถใช้งานเครือข่ายสังคมและจัดไม่โครบล็อกของคุณในชุมชนออนไลน์ได้ คุณสามารถอัปเดตสถานะปัจจุบัน อัปโหลดรูปภาพ และดูการอัปเดตสถานะของเพื่อนได้ตามเวลาจริง คุณสามารถเพิ่มแอคเคาท์ Facebook และ Twitter บนโทรศัพท์ของคุณได้ หากคุณไม่มีแอคเคาท์ สามารถเยี่ยมชมไซต์เหล่านั้นได้เพื่อตั้งค่าแอคเคาท์


หมายเหตุ: เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

กล้องถ่ายรูป

ทำความรู้จักกับช่องมองภาพ

ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าไปในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบไปทาง "-" เพื่อให้ได้ภาพที่มีความสว่างน้อยลง หรือไปทาง "+" เพื่อให้ได้ภาพที่มีความสว่างมากขึ้น

ซูม - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้

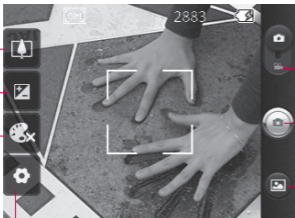

โหมดวิดีโอ - เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ

การถ่ายภาพ

คลังภาพ - คุณสามารถเข้าดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูป เพียงแตะ และคลังภาพของคุณจะปรากฏบนหน้าจอ

ตั้งค่า - แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า โปรดดูที่ การใช้การตั้งค่าขั้นสูง

เอฟเฟกต์ - เลือกโทนสีสำหรับรูปภาพใหม่

หมายเหตุ: คุณต้องใส่การ์ดหน่วยความจำก่อนเพื่อถ่ายภาพ หากไม่ได้ใส่การ์ดหน่วยความจำ คุณจะไม่สามารถถ่ายภาพหรือบันทึกภาพที่ถ่ายได้

เมื่อคุณถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ

แบ่งปัน และเพื่อแบ่งปันรูปภาพของคุณผ่านทาง **บลูทูธ, อีเมล, Facebook, Gmail, ข้อความ, Picasa** หรือ **Twitter**

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

หมายเหตุ: ตัวเลือกแบ่งปันอาจแตกต่างกันไปตามพื้นที่ ผู้ให้บริการ แผนบริการ และเวอร์ชันของซอฟต์แวร์โทรศัพท์ Android

ตั้งเป็น และเพื่อใช้ภาพเป็น **ไอคอนรายชื่อ** หรือ **พื้นหลัง**

แก้ไข และเพื่อแก้ไขชื่อของภาพที่เลือก

แอปพลิเคชันใน Google



แผนที่

ตรวจสอบสถานที่ปัจจุบันของคุณและสภาพการจราจร รวมทั้งรับข้อมูลทิศทางเพื่อไปยังปลายทางของคุณ โทรศัพท์ LG-P350 ต้องเชื่อมต่อกับ Wi-Fi หรือ 3G/GPRS

หมายเหตุ: แผนที่ ไม่ได้ให้บริการครอบคลุมทุกเมืองและทุกประเทศ

กดปุ่มเมนูเพื่อใช้ตัวเลือก:


ค้นหา  - บ่อนสถานที่ที่คุณค้นหา

ทิศทาง  - ช่วยคุณค้นหาเส้นทางไปยังสถานที่ที่คุณบ่อน และ  เพื่อบ่อนข้อมูล เลือกรายชื่อหรือจุดบนแผนที่ หรือตำแหน่งปัจจุบันของฉัน

มุมมอง  - คุณสามารถสลับมุมมองจากการจราจรเป็นดาวเทียมหรือสภาพพื้นที่ได้ และที่ Latitude จากนั้น คุณจะเห็นที่ตั้งของบุคคลในรายชื่อของคุณตามแอคเคาท์ Google

ตำแหน่งของฉัน  - แสดงตำแหน่งปัจจุบันของคุณบนแผนที่

เข้าร่วม Latitude  - แบ่งปันที่ตั้งปัจจุบันของคุณกับเพื่อนๆ ที่คุณเลือก และ Google

อื่นๆ  - ล้างแผนที่ หรือคนหารายการที่ติดตาม และอื่นๆ

Market™

Android Market™ ช่วยให้คุณดาวน์โหลดแอปพลิเคชันและเกมส์ที่มีประโยชน์

Google Mail™

Google Mail™ ได้รับการกำหนดค่าเมื่อคุณตั้งค่าโทรศัพท์เป็นครั้งแรก ขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ Google Mail™ ในโทรศัพท์ของคุณจะทำการซิงโครไนซ์กับแอคเคาท์ Google Mail™ บนเว็บโดยอัตโนมัติ

Talk

Talk เป็นโปรแกรมข้อความโต้ตอบแบบทันทีของ Google ซึ่งช่วยให้คุณติดต่อสื่อสารกับบุคคลอื่นที่ใช้ Talk เช่นกัน

ThinkFree Office

ThinkFree Office ช่วยให้คุณสามารถอ่านเอกสาร และมีฟังก์ชันการแก้ไขแบบจำกัดสำหรับ Microsoft Word, Excel และ PowerPoint อย่างไรก็ตาม คุณไม่สามารถแก้ไขไฟล์ PDF ได้



- 1 แตะที่ไฟล์ค้างไว้ จากนั้นจะสามารถใช้งานตัวเลือก เปิด, อัปโหลด, แก้ชื่อ, ย้าย, คัดลอก, ลบ, ส่ง และคุณสมบัติน้อยกว่าประเภทของไฟล์

เว็บไซต์

เบราว์เซอร์ หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การใช้ตัวเลือก

กดปุ่ม **เมนู** เพื่อดูตัวเลือก

-  **หน้าต่างใหม่** – เปิดหน้าต่างใหม่
-  **บุ๊กมาร์ค** – เพิ่ม/แสดงบุ๊กมาร์ค แสดงไซต์ที่เข้าชมบ่อยสุด และประวัติ



หน้าต่าง –

แสดงหน้าต่างที่เปิดอยู่ทั้งหมด



รีเฟรช – แตะเพื่อรีเฟรชเว็บเพจ




ส่งต่อ – ไปที่เพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบัน ซึ่งแตกต่างปุ่มย้อนกลับที่จะไปยังเพจก่อนหน้า

Wi-Fi


เปิด Wi-Fi

จากหน้าจอหลัก เปิดแถบการแจ้งเตือนและแตะเปิด 

จากเมนู เลือกตั้งค่า > ตั้งค่าการเชื่อมต่อไร้สายและเครือข่าย > Wi-Fi 

การเชื่อมต่อไปยัง Wi-Fi

เลือกเครือข่าย Wi-Fi

ที่คุณต้องการเชื่อมต่อ หากคุณพบ  คุณจะต้องป้อนรหัสผ่านเพื่อทำการเชื่อมต่อ

เคล็ดลับ!

หากคุณอยู่นอกพื้นที่ Wi-Fi และเลือกใช้การเชื่อมต่อ 3G อาจมีค่าใช้จ่ายเพิ่มเติม

การแชร์ USB

คุณสามารถแชร์การเชื่อมต่ออินเทอร์เน็ตให้กับคอมพิวเตอร์ได้

คุณสามารถแชร์โทรศัพท์กับคอมพิวเตอร์ได้โดยใช้สายเคเบิล USB

ตั้งค่า > ตั้งค่าไร้สายและเครือข่าย > **Tethering & portable hotspot** > **USB tethering**

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการแชร์ USB ให้คลิก วิธีใช้

เคล็ดลับ!

ในการใช้การแชร์ USB คุณต้องติดตั้ง PC Suite ในคอมพิวเตอร์ก่อน

การแชร์ Wi-Fi

ใช้ LG-P350 เป็นฮอตสปอต Wi-Fi เคลื่อนที่

ตั้งค่า > ตั้งค่าไร้สายและเครือข่าย > **Tethering & portable hotspot** > **Portable Wi-Fi hotspot**

เคล็ดลับ!

หากโทรศัพท์ของคุณเข้าสู่โหมดปิดถึงแม้ว่าจะมีการเชื่อมต่อ Wi-Fi การเชื่อมต่อ Wi-Fi จะถูกปิดโดยอัตโนมัติในกรณีนี้ หากโทรศัพท์ของ

คุณสามารถเข้าใช้ 3G ได้
อาจจะทำการเชื่อมต่อไปยังเครือข่าย 3G โดยอัตโนมัติ และอาจมีค่าใช้จ่ายเพิ่มเติม

หมายเหตุ: โทรศัพท์ LG-P350 สนับสนุนการรักษาความปลอดภัย WEP, WPA/WPA2-PSK และ 802.1x EAP หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่ายไว้ ต้องป้อนรหัสในหน้าต่างป๊อปอัป หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างป๊อปอัปนี้จะไม่ปรากฏขึ้น คุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ
ถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้
ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> →
เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์
ของโทรศัพท์เป็นเวอร์ชันล่าสุดได้อย่าง
สะดวกจากอินเทอร์เน็ตโดยไม่ต้อง
ไปที่ศูนย์บริการ

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์
มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดต
อย่างระมัดระวัง โปรดตรวจสอบคำแนะนำ
และหมายเหตุที่ปรากฏขึ้น
ในแต่ละขั้นตอนก่อนดำเนินการต่อไป
โปรดทราบว่า การถอดสายข้อมูล USB
หรือแบตเตอรี่ระหว่างการอัปเดตอาจ
ทำให้โทรศัพท์มือถือชำรุดเสียหายได้

ประกาศ

ในการขอรับซอร์สโค้ดที่
เกี่ยวข้องตาม
GPL, LGPL, MPL
และและใบอนุญาต
โอเพ่นซอร์สอื่นๆ โปรด
ไปที่ <http://opensource.lge.com/>
เงื่อนไขใบอนุญาต
การปฏิเสธการรับผิดชอบ
และประกาศที่อ้างอิงถึง
ทั้งหมดสามารถดาวน์โหลด
ได้พร้อมกับซอร์ส
โค้ด

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ LG-P350
(รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล
เชื่อมต่อโทรศัพท์
LG-P350
ของคุณเข้ากับคอมพิวเตอร์



แบตเตอรี่



คู่มือการใช้
เรียนรู้เพิ่มเติม
เกี่ยวกับโทรศัพท์
LG-P350



ชุดหูฟังสเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามดังกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
72/127 ถ.สมเด็จพระเจ้าตากสิน
แขวงบुकโคล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757

LG-P350 User Guide



- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google search, Maps, Google Mail, YouTube, Talk and Android Market are trademarks of Google, Inc.



Congratulations on your purchase of the advanced and compact LG-P350 phone by LG, designed to operate with the latest digital mobile communication technology.

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10%, your phone cannot receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

To manage the application

- 1 On the home screen, touch **Applications** tab and select **Settings> Applications> Manage applications**.
- 2 When all applications appear, scroll and select the application you want to uninstall.
- 3 Tap **Uninstall** and touch OK to uninstall the application you desired.

2. Optimising Battery Life

You can extend your battery's life by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, Calendar, Contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

Important notice

To check the battery charge level


- 1 On the home screen, touch **Applications** tab and select **Settings> About phone > Status**.
- 2 The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.


To monitor and control what uses the battery

- 1 On the home screen, touch **Applications** tab and select **Settings> About phone> Battery use**.
- 2 The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an Open Source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market™. If some applications are not properly installed on your phone, your phone may not work correctly or a serious error could occur. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using Unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.

On the home screen, touch Applications tab and select **Settings > Location & security > Set up screen lock > Pattern.**

Follow the screens to be guided through drawing a screen unlock pattern. Select Next to continue to next screen.



WARNING: Precautions to take when using the Pattern Lock. It is very important that you remember the unlock pattern you set. You have 5 opportunities to enter your unlock Pattern, PIN or Password. If you have used all 5 opportunities, you may attempt again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

1. If you have forgotten pattern:

If you've created a Google account on the phone, tap the Forgot pattern button. Then, you are required to sign in with your Google account to unlock your phone. If you haven't created a Google account on the phone or you forgot it, you need to perform a hard reset.

2. If you have forgotten PIN or Password.

If you forgot your PIN or Password, you need to do Hard Reset.

Caution: If you perform a hard reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a hard reset.

Important notice

5. Using Safe Mode and Hard Reset

Using Safe mode

* To recover the phone from any malfunction

Turn off your phone and reboot. While your phone is powering back on, press and hold the Send key while the Android Logo is displayed. Your phone will boot all the way to the main screen and display "safe mode" in the lower left-hand corner.

* Using Hard Reset (Factory Reset)

If it does not restore to its original state, use **Hard Reset** to initialise your phone.

- 1 Remove and reinsert the battery.
- 2 Press and hold for over 10 seconds: **Power/Lock** key + **Send** key + **Down Volume** key.

- 3 When the power turns on, release these keys.

WARNING

If you perform a Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a **Hard Reset**.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network

- 1 On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
 - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)
- 4 The Status bar displays icons that indicate Wi-Fi status.

7. Using a micro SD card

Pictures, along with Music and Video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a micro SD memory card to your phone first. Without inserting a memory card, you will not be able to save pictures and video you have taken.

WARNING:

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Home Screen > Applications > Settings > SD card & phone storage > Unmount SD card**.

Important notice

8. Opening and Switching Applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

To stop the application you use

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications > Running**.
- 2 Scroll to the desired application and touch **Force stop** to stop using it.

TIP Getting back to recent Apps

- Press and hold Home key, then a screen will display a list of the applications you used recently

9. Copy LG PC Suite from SD Card

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

Major Functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently.
- Synchronise data between a PC and a phone (Contacts, Calendar, Message(SMS), Bookmark, Call log).

- Transfer multimedia files (photos, videos, music) conveniently with a simple drag & drop between a PC and a phone.
- Transfer the messages from a phone to a PC.
- Use your phone as a Modem.
- S/W update without losing your data.

Installing LG PC Suite from your micro SD memory card

- 1 Insert your micro SD memory card on your phone. (It may already be inserted on your phone.)
- 2 Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the applications menu, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)

- 3 Connect your phone through USB data cable to your PC.
- 4
 - In the status bar, drag the USB icon.
 - Choose USB Connected and Turn On USB storage.
 - You can view the mass storage content on your PC and transfer the files.
- 5
 - Copy the '**LGPCSuiteIV**' folder on your mass storage to your PC.
 - Run 'LGInstaller.exe' file on your PC and follow the instructions.

* When LG PC Suite IV installation is completed, disable **Mass storage only** mode to run LG PC Suite IV.

NOTE: Please do not remove or delete other program files installed on your memory card. This may cause damage to your preinstalled applications on the phone.

Important notice

10. Connecting your phone to a computer via USB

NOTE: To synchronise your phone via USB cable with your PC, you need to install the LG PC Suite program on your PC. You can download this program from the LG website (www.lgapplication.com). Go to www.lgapplication.com and select your region, country & language. Visit LG website for more information. As PC Suite is embedded at inboxed SD card, you can simply copy it to your PC.

LG-P350 does not support:

- PC Connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java Application

User's guide for PC Suite IV is in Help menu after the installation

PC Suite IV.

- 1 Use the USB cable with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
- 2 Open the Notification drawer and touch USB connected.
- 3 Touch **"Turn On USB storage"** to confirm that you want to transfer files between your phone's micro SD card and the computer.

When the phone is connected as USB storage, you will receive a notification. Your phone's micro SD card is mounted as a drive on your computer. You can now copy files to and from the micro SD card.

11. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To

turn on your LCD screen, just touch it.

Note: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

Tip! To use a micro SD card on your phone again, you need to open the Notification drawer and touch "**Turn off USB storage**".

During this time, you can't access the micro SD card from your phone, so you can't use applications that rely on the micro SD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card.

- 1 Safely disconnect the USB device on your computer.
- 2 Open the Notification drawer and touch **Turn off USB**

storage.

- 3 Touch **Turn off USB storage** in the dialog that opens.

12. Hold phone up right

Please hold the mobile phone up right as a regular phone.

While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

13. When Screen freezes

If the phone does not respond to user input or the screen freezes:

Remove the battery, insert it again and turn the phone on. If it still does not work, please contact the service centre.

14. Do not connect your phone when turning your PC on/off

Make sure to disconnect your phone and PC via data cable as your PC might have errors.

Before using the mobile phone, please read first!

How to save music/video files to the phone

Connect your phone to the PC using the USB cable.

Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage > Open folder to view files.**

If you didn't install LG Android Platform Driver on your PC, you need to set it manually. On the home screen, touch **Applications** tab and select **Settings > SD card & phone storage > activate Mass storage only.**

Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.

- If there is a video file with a subtitle file (.smi or .srt file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.
- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

How to play music/video files to the phone

Playing music files

From home screen touch **Application** tab > **Music**. Locate the file you want to play from Artist, Albums, Songs, Playlists tabs.

Playing video files

From home screen touch **Application** tab > **Video player**, locate the file you want in the list and select it to play.

How to move the contacts from the old phone to the current phone

Export your contacts as a CSV file from your old phone to the PC using a PC sync program.

- 1 Download LG PC Suite IV at www.lgapplication.com and install it in the PC. Run the program and connect your phone to the PC using the USB cable.
- 2 Select the **Contacts** icon. Go to **Menu > File > Import** and select the CSV file saved in the PC.
- 3 If the fields in the imported CSV file are different from the ones in LG PC Suite IV, you need to map the fields. After mapping the fields, click OK. Then, the contacts are added to the PC.
- 4 If the connection of LG-P350 phone (using the USB cable) is detected by LG PC Suite IV, click "Sync" or "Sync Contacts" to synchronise the contacts saved in the PC to your phone and save them.

How to send data from your phone via Bluetooth

Sending data via Bluetooth:

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- * **Sending pictures:** Run the Gallery application and select **Picture > Menu**. Click **Share** and select **Bluetooth > Check If Bluetooth is turned on** and select **Scan for devices > Choose the device you want to send data from the list**.

Before using the mobile phone, please read first!

* **Exporting contacts:** Run the Contacts application. Touch the address you want to export to. Press **Menu** and Select **Share > Bluetooth >** Check if Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

* **Sending multi-selected contacts:** Run the "Contacts" application. To Select more than one contact press **Menu** key and touch **Multiselect**. Select the contacts you want to send or press **Menu** key and touch **Select all**. Select **Share > Bluetooth >** Check if Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

* **Connecting to FTP (Only the FTP server is supported on this handset):** Select **"Settings" > "Wireless & networks" > "Bluetooth settings"**. Then, select the **"Discoverable"** checkbox and search for other devices. Find the service you want and connect to the FTP server.

TIP: The version is Bluetooth 2.1 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, go to **"Settings" > "Wireless & networks" > "Bluetooth settings"**.

Then, select the **"Discoverable"** checkbox.

The checkbox is cleared after 120 seconds.

- Supported profiles are HFP, HSP, OPP, PBAP (server), FTP (server), A2DP, AVRCP, and DUN.

Getting to know your phone

To turn the phone on, press and hold the Power key for 3 seconds.

To turn the phone off, press the Power key for 3 seconds and touch Power Off.

TIP! When screen is locked

1. Drag your finger from left to right to unlock the screen.
2. To turn the phone off, press the Power key for 3 seconds and touch Power Off.

Earpiece


Home key 

- Returns to the home screen from any screen.

Menu key 

- Check what options are available.

Send key 

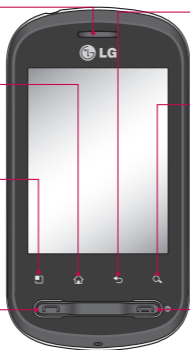

Back key 


- Returns to the previous screen.

Search key 

- Search the web and contents in your phone.

Power/Lock key 

- Powers your phone on/off by pressing and holding the key.
- Turns the screen off and locks the phone.

 **WARNING:** Placing a heavy object on the phone or sitting on it can damage its LCD and touch-screen functionalities.

Tip! Press Menu key whenever you tap an application to check what options are available.

Tip! LG-P350 does not support video call.

Tip! If LG-P350 has errors when you use it or you cannot turn it on, remove battery, install it again and turn it on after 5 seconds.

Stereo earphone connector



Charger, micro USB cable connector



Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume continuously.



Microphone



Camera lens



Back cover

SIM card slot


Battery

micro SD memory card slot

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 To remove the back cover, hold the phone firmly in your hand. With your other hand, firmly press your thumb on the back cover. Lift off the battery cover with your forefinger.

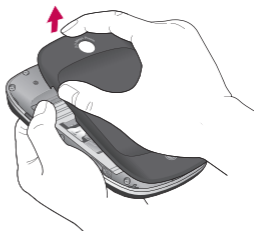

- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.




- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.



- 4 Replace the back cover of the phone.



Charging your phone

Slide back the cover of the charger connector on the side of your LG-P350. Insert the charger, and plug it into an electrical outlet. Your LG-P350 must be charged until you can see .



NOTE: The battery must be initially fully charged to improve battery lifetime.

NOTE: The LG-P350 has an internal antenna. Be careful not to scratch or damage this rear area, as this will cause loss of performance.

Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.


NOTE: The LG-P350 supports up to a 32GB memory card.

NOTE: For accessing Memory card content


1. Configure your Gmail Account.
2. Search & download any file manager application from 'Android Market Place' to access memory card content.

To insert a memory card:

- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.

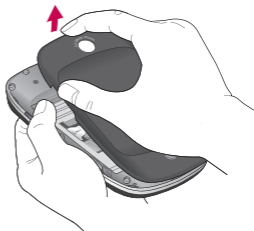

- 2 Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

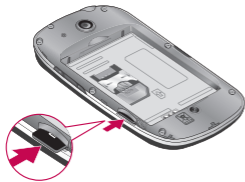

WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

- 1 On the home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Unmount SD card.
- 5 Touch **Format SD card**, then confirm your choice.

- 6 If you set the pattern lock, input the pattern lock and select **Erase everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Tip!

If your memory card is already Unmounted, you can use the following step to format it.

Touch **Applications > Settings > SD card & phone storage > Format SD card**.

Your Home screen

Lock your phone

When you are not using LG-P350, press the Power/Lock key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the home screen or other screen you are viewing is replaced with the lock screen to conserve the battery.

Note: If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid unnecessary charges. (e.g. phone call, web access and data communications).

Tip! Setting unlock pattern:

You can draw your own unlock pattern by connecting four or more dots.


If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

Tip! When you set an unlock pattern, you need to create your Gmail account first.




Caution: The phone will be locked for 30 seconds after 5 incorrect attempts at drawing the unlock pattern.

Unlock screen

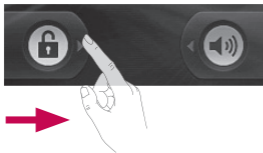Whenever your LG-P350 is not in use, it will return to the lock screen. Drag your finger from left to right to unlock the screen.



Silent Mode

From Notification drawer, touch  to be  or if you don't use an unlock pattern, simply drag  to the left.



To wake up your phone, press **Send** or **Power/Lock** key. The lock screen will appear. Touch the lock icon and drag your finger to the right to unlock your home screen. The last screen

you were working on opens.



Home

Simply swipe your finger to the left or right to view them. You can also customise each panel with widgets, shortcuts, which are shortcuts to your favourite applications, folders and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.

Tip! To add an application icon to the home screen, touch and hold the application you want to add to the home screen.

Tip!

- Touch and hold that icon. The **Applications** icon will be change as the **Trash** icon .
- Drag and drop an application icon to the **Trash** icon .


Tip! You cannot delete the preloaded applications. (Only their icons can be deleted from the screen.)

Getting back to a recently used applications

Touch and hold the Home key. The screen will show you a pop up with icons of applications that you've used recently.

Notification drawer

The notification drawer runs across the top of your screen.

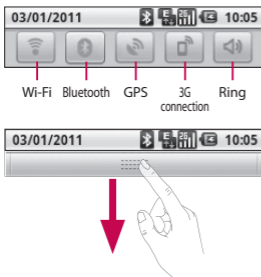


Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can


check and manage Wi-Fi, Bluetooth, GPS status as well as other notifications.


Onscreen Keyboard

You can also enter text using the onscreen keyboard. The onscreen keyboard automatically displays on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Phone Keypad (Qwerty Keypad)

 **Shift Key** - Touch once to capitalise the next letter you type. Double tap for all caps.

 **XT9 Key** - Turn XT9 Mode on or off.

 **Setting key**- Tap to view the settings menu. Choose from Editor settings, Keyboard layout, Writing language, User dictionary and Other input method.



Number and Symbols Key -

Touch to change input to number and symbol entry.



Enter Key - Tap to create a new line in the message field.




Language Key - Tap to change the On-screen Keyboard language.



Delete Key



Go forward or backward between letters.

Tip! To switch between Qwerty Keypad and Phone Keypad, touch  from Phone Keypad and choose Keyboard Layout.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.



IMPORTANT

- Some applications work only with the first Google Account you add. If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Google mail messages, Calendar events, and other information from these applications and services on the web are synchronised with your phone.

Calls

Answering and rejecting a call


When screen is locked/ When screen is unlocked


When your phone rings, drag the **Answer** icon  to the right. Drag **Decline** icon  to the left to reject an incoming call. Drag Excuse msg bar from the bottom

if you want to send one. Or else When your phone rings press the Answer button. Press Decline button to reject the incoming call.Touch the Excuse msg bar from the bottom.

Messaging

Your LG-P350 combines SMS and MMS into one intuitive, easy-to-use menu.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded and in what language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Google Mail. The Email application supports the following account types: POP3, IMAP and Exchange.

Social Networking

With your phone, you can take advantage of social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friends' status updates in real-time.

You can add your Facebook and Twitter accounts to your phone. If you don't have an account, you can visit their sites to set it up.

NOTE: Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Camera

Getting to know the viewfinder

Brightness – This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively, you can use the side volume keys.



Video mode – Slide down this icon to switch to video mode.

Taking a photo

Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Colour effect – Choose a colour tone for your new photo.

NOTE: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to take a picture or save the picture you have taken.

Once you've taken the photo

Your captured photo will appear on the screen.

Share Touch to share your photo as **Bluetooth, Email, Facebook, Gmail, Messaging, Picasa or Twitter.**

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

NOTE: Share option may vary by area, phone, carrier, plan and version of Android Phone Software.

Set as Touch to use the image as **Contact icon or Wallpaper.**

Rename Touch to edit the name of the selected picture.

NOTE: For accessing Memory card content

1. Configure your Gmail Account.
2. Search & download any file manager application from 'Android Market Place' to access memory card content.

Google applications



Maps


Check your current location and traffic and receive directions to your destination. The LG-P350 must be connected to Wi-Fi or 3G/GPRS.

NOTE: Maps does not cover all cities and countries.

Press Menu key to use options:

Search  – Enter the place you are looking for.

Directions  – This will let you find out the route of the place you entered. Touch  to input the data. Choose from Contacts or Point on Map or My current location.

Layers  – You can switch view from Traffic to Satellite or Terrain. Tap Latitude, then you will see the location of your contacts from Google Account.

My Location  – Point your current location on the map.

Join Latitude  – Share your location with friends you choose

and Google.

More  – Clear map or find Starred items and more.

Market™

Android Market™ lets you download useful applications and games.

Gmail™

Gmail™ is configured when you first set up your phone. Depending on your synchronisation settings, Gmail™ on your phone is automatically synchronised with your Gmail™ account on the web.

Talk

Talk is Google's instant messaging program. It lets you communicate with other people who also use Talk.

ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited editing functions for Microsoft Word, Excel and PowerPoint. However, you cannot edit a PDF file.

- 1 Touch and hold a file, then Open, Upload, Rename, Move, Copy, Delete, Send and Properties options are available. This is depending on the file type.

The Web

Browser

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options


Press the **Menu** key to view options.

-  **New window** – Open a new window.

-  **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.


-  **Windows** – Show all your open windows.

-  **Refresh** – Touch to refresh the web page.

-  **Forward** – Goes to the page you connected to after the current page. This is different from the Back key, which goes to the previous page.


Wi-Fi

Turn on Wi-Fi

From Home Screen , open Notification drawer and touch  on.

From Menu, choose Settings > Wireless & network settings > Wi-Fi .

To connect to Wi-Fi

Choose the Wi-Fi network you want to connect with. If you see  , you need to enter a password to connect.

TIP!

If you are out of the Wi-Fi area and choose 3G connection, additional charges may be applied.

USB tethering

You can share your phone's internet connection with your computer.

You can tether your phone to your computer with a USB cable.

Settings > Wireless & network settings > Tethering & portable hotspot > USB tethering.

For more information regarding USB tethering, click Help.

TIP!

To use USB Tethering, you need to install PC Suite onto your PC first.

Wi-Fi Tethering

Use your LG-P350 as a portable Wi-Fi hotspot.

Settings > Wireless & network settings > Tethering & portable

hotspot > Portable Wi-Fi hotspot.

TIP!

If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)

NOTE: The LG-P350 supports WEP, WPA/WPA2-PSK and 802.1x EAP security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to conveniently update the firmware of your phone to the latest version from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the updating process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

Notice

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>. All referred licence terms, disclaimers and notices are available for download with the source code.

Accessories

These Accessories are available for use with the LG-P350.
(Items described below may be optional.)

Charger



Data cable

Connect your LG-P350 and PC.



Battery



User Guide

Learn more about your LG-P350.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sun

07:00 - 19:00

Call center : 0-2878-5757











