



## OWNER'S MANUAL

Safety and Reference

# LED TV\*

---

\* Disclaimer

LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.



\* M F L 7 1 8 0 9 9 0 2 2 3 1 2 R E V 0 5 \*

[www.lg.com](http://www.lg.com)

Copyright © 2021 LG Electronics Inc. All Rights Reserved.

# Table Of Contents

## Warning! Safety Instructions

## Preparing

### Separate Purchase

- 5 LED Clock
- 5 Remote Control
- 5 Magic Remote Control
- 5 Stand
- 6 Wall Mounting Bracket

## Lifting and moving the TV

## Mounting on a Table

- 8 Attaching the TV to a Desk
- 8 Using the Kensington security system
- 8 Securing the TV to a Wall

## Mounting to the Wall

## Connections

- 10 Antenna/Cable
- 10 Satellite dish
- 10 CI module
- 11 Other connections
- 12 External Speakers
- 13 Network

## Using Button

- 14 Basic functions
- 14 Adjusting the menu

## Adjusting the Angle of the TV to suit view

## Using Remote Control

## Troubleshooting

## Specifications

- 21 HDMI-DTV supported Mode
- 21 HDMI-PC supported Mode
- 22 AV supported Mode
- 22 Supported Photo Formats
- 22 Supported Audio Formats
- 23 Supported Video Formats

## Open Source Software Notice Information

## Licenses

## IR Codes

## External Control Device Setup

- 26 RS-232C Setup
- 26 Type of Connector : D-Sub 9-Pin Male
- 27 RS-232C Configurations
- 27 Communication Parameters
- 27 Set ID
- 28 Command Reference List
- 28 Transmission / Receiving Protocol

# Warning! Safety Instructions

ENGLISH



## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
- **Do not place the TV and/or remote control in the following environments:**
  - Keep the product away from direct sunlight.
  - An area with high humidity such as a bathroom.
  - Near any heat source such as stoves and other devices that produce heat.
  - Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
  - An area exposed to rain or wind.
  - Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
  - Near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.
  - Do not install in excessively dusty places.

Otherwise, this may result in fire, electric shock, combustion/explosion, malfunction or product deformation.

## • Ventilation

- Install your TV where there is proper ventilation. Do not install in a confined space such as a bookcase.
- Do not install the product on a carpet or cushion.
- Do not block or cover the product with cloth or other materials while unit is plugged in.
- Take care not to touch the ventilation openings. When watching the TV for a long period, the ventilation openings may become hot.
- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.
- Do not move the TV whilst the Power cord is plugged in.
- Do not use a damaged or loosely fitting power cord.
- Be sure to grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the TV.
- Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock.

## • Disconnecting the Device from the Main Power

- The power plug is the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury.
- **Outdoor Antenna Grounding** (Can differ by country):
  - If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur.

- **Grounding** (Except for devices which are not grounded.)
  - TV with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet. Ensure that you connect the earth ground wire to prevent possible electric shock.
- Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
- Make sure the power cord is connected securely to the TV and wall socket if not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.
- Do not insert metallic or inflammable objects into the product. If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
- Do not touch the end of the power cord while it is plugged in. You may be electrocuted.
- **If any of the following occur, unplug the product immediately and contact your local customer service.**
  - The product has been damaged.
  - If water or another substance enters the product (like an AC adapter, power cord, or TV).
  - If you smell smoke or other odors coming from the TV.
  - When lightning storms or when unused for long periods of time. Even if the TV is turned off by the remote control or power button, AC power source is still connected to the unit if it is not unplugged.
  - Do not use high voltage electrical equipment near the TV (e.g., a bug zapper). This may result in product malfunction.
  - Do not attempt to modify this product in any way without written authorisation from LG Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorised modification could void the user's authority to operate this product.
  - Use only an authorised attachments / accessories approved by LG Electronics. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
  - Never disassemble the AC adapter or power cord. This may result in fire or electric shock.
  - Handle the adapter carefully to avoid dropping or striking it. An impact could damage the adapter.
  - To reduce the risk of fire or electrical shock, do not touch the TV with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.

- **Batteries**

- Store the accessories (battery, etc.) in a safe location out of the reach of children.
- Do not short circuit, disassemble, or allow the batteries to overheat. Do not dispose of batteries in a fire. Batteries should not be exposed to excessive heat.
- Caution : Risk of fire or explosion if the battery is replaced by an incorrect type.

- **Moving**


- When moving, make sure the product is turned off, unplugged, and all cables have been removed. It may take 2 or more people to carry larger TVs. Do not press or put stress on the front panel of the TV. Otherwise, this may result in product damage, fire hazard or injury.
- Keep the packing anti-moisture material or vinyl packing out of the reach of children.
- Do not allow an impact shock, any objects to fall into the product, and do not drop anything onto the screen.
- Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it. It may cause damage to screen.

- **Cleaning**

- When cleaning, unplug the power cord and wipe gently with a soft/dry cloth. Do not spray water or other liquids directly on the TV. Do not clean your TV with chemicals including glass cleaner, any type of air freshener, insecticide, lubricants, wax (car, industrial), abrasive, thinner, benzene, alcohol etc., which can damage the product and/or its panel. Otherwise, this may result in electric shock or product damage.

# Preparing

- If the TV is turned on for the first time after it was shipped from the factory, initialization of the TV may take a few minutes.
- Image shown may differ from your TV.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are using.
- New features may be added to this TV in the future.
- The device must be easily accessed to a location outlet near the access. Some devices are not made by turning on / off button, turning off the device and unplugging the power cord.
- The items supplied with your product may vary depending on the model.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port.

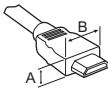

\* A  $\leq$  10 mm

\* B  $\leq$  18 mm

- Use a certified cable with the HDMI logo attached.
- If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI Cable Types
  - Ultra High Speed HDMI®/™ Cable (3 m or less)

# Separate Purchase

Separate purchase items can be changed or modified for quality improvement without any notification. Contact your dealer to buy these items. These devices only work with certain models.

The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.

## LED Clock

(Depending on model)

**LEC-005**

## Remote Control

(Depending on model)

**AM-SR20HB**

## Magic Remote Control

(Depending on model)

**AN-MR18HA**

Check whether your TV model supports Bluetooth in the Wireless Module Specification to verify whether it can be used with the Magic Remote.


## Stand

(Depending on model)

Stand	Model
<b>AM-ST21BA</b>	43UR762H*
<b>AM-ST21BB</b>	50UR762H* 50UR765H*C
<b>AM-ST21BC</b>	55UR762H* 55UR765H*C
<b>AM-ST21BD</b>	65UR762H* 65UR765H*C
<b>AM-ST21BE</b>	75UR762H* 75UR765H*C

## Wall Mounting Bracket

Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

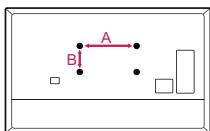

<b>Model</b>	43/50UR76*	55UR76*
<b>VESA (A x B) (mm)</b>	200 x 200	300 x 300
<b>Standard screw</b>	M6	M6
<b>Number of screws</b>	4	4
<b>Wall mount bracket</b>	LSW240B MSW240	OLW480B MSW240
<b>Model</b>	65UR76*	75UR76*
<b>VESA (A x B) (mm)</b>	300 x 300	400 x 400
<b>Standard screw</b>	M6	M6
<b>Number of screws</b>	4	4
<b>Wall mount bracket</b>	OLW480B	LSW440B


## Lifting and moving the TV

Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.

- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to avoid damage.



- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

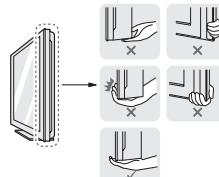

- When transporting a large TV, there should be at least 2 people.
- When transporting the TV by hand, hold the TV as shown in the following illustration.



- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.
- Do not apply excessive pressure to cause flexing / bending of frame chassis as it may damage the screen.
- When handling the TV, be careful not to damage the protruding buttons.



- Avoid touching the screen at all times, as this may result in damage to the screen.
- Do not move the TV by holding the cable holders, as the cable holders may break, and injuries and damage to the TV may occur.
- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches. (Depending on model)

• If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:


- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

## Mounting on a Table

(Depending on model)

**1** Lift and tilt the TV into its upright position on a table.

- Leave a 10 cm (minimum) space from the wall for proper ventilation.

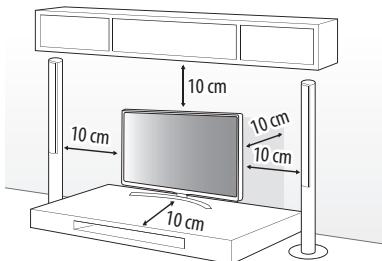

(Depending on model)

**2** Connect the power cord to a wall outlet.




- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury.
- Do not use any unapproved items to ensure the safety and product life span.
- Any damage or injuries caused by using unapproved items are not covered by the manufacturer's warranty.
- Make sure that the screws are inserted correctly and fastened securely. (If they are not fastened securely enough, the TV may tilt forward after being installed.) Do not use too much force and over tighten the screws; otherwise screw may be damaged and not tighten correctly.

## Attaching the TV to a Desk

(Depending on model)


The TV should be attached to a desk so it cannot be pulled in a forward/backward direction, potentially causing injury or damaging the product.

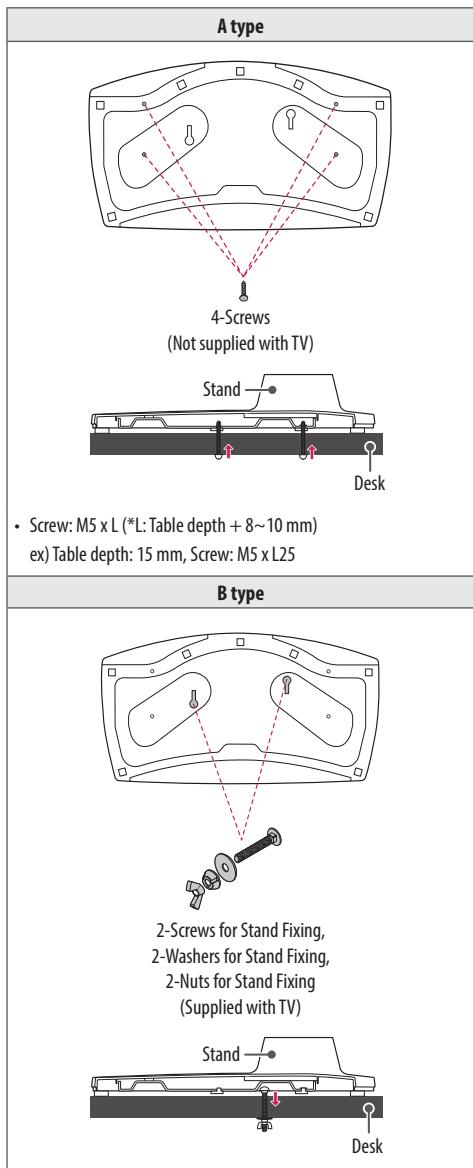

## Using the Kensington security system


(Depending on model)

The Kensington security system connector is located at the rear of the TV. For more information of installation and using, refer to the manual provided with the Kensington security system or visit <http://www.kensington.com>. Connect the Kensington security system cable between the TV and a table.

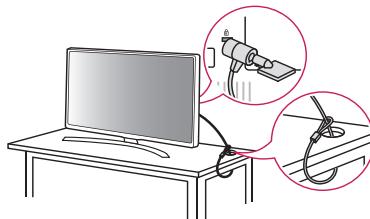

(Depending on model)

## Securing the TV to a Wall

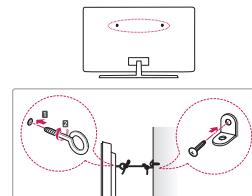

(Depending on model)

**1** Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.

- If there are bolts inserted at the eye-bolts position, remove the bolts first.

**2** Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV.



**3** Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface.

- Use a platform or cabinet that is strong and large enough to support the TV securely.

• Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer.

## Mounting to the Wall

Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel. LG recommends that wall mounting be performed by a qualified professional installer. We recommend the use of LG's wall mount bracket. LG's wall mount bracket is easy to move with cables connected. When you do not use LG's wall mount bracket, please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. It is advised to connect all the cables before installing fixed wall mounts.

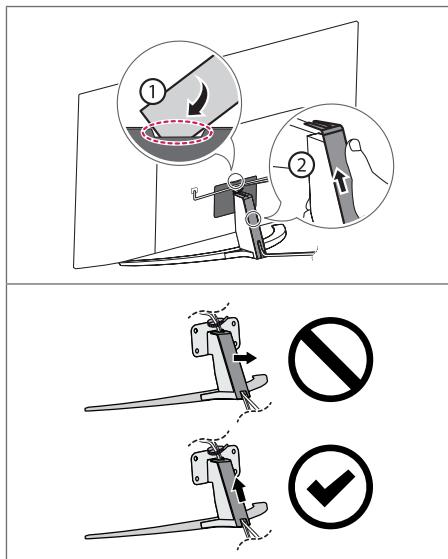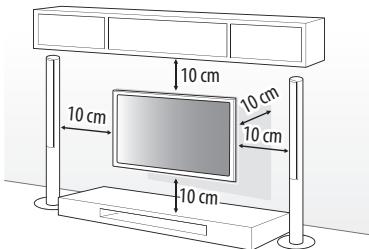

(Depending on model)




- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse. (Depending on model)
- For more information of screws and wall mount bracket, refer to the Separate purchase.
- If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop.
- When mounting a TV on the wall, make sure not to install the TV by hanging the power and signal cables on the back of the TV.
- Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall.



- Do not use a sharp object when you detached the cable cover. This could damage the cable or the cabinet. It may also cause personal harm. (Depending on model)

- When installing the wall mounting bracket, it is recommended to cover the stand hole using tape, in order to prevent the influx of dust and insects. (Depending on model)

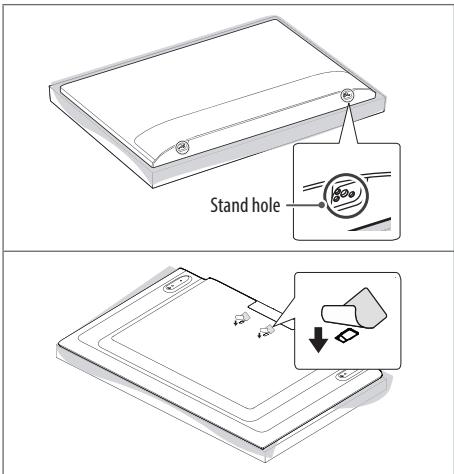

## Connections

Connect various external devices to the TV and switch input modes to select an external device. For more information of external device's connection, refer to the manual provided with each device.

### Antenna/Cable

Connect the TV to a wall antenna socket with an RF cable ( $75\ \Omega$ ).

- Use a signal splitter to use more than 2 TVs.
- If the image quality is poor, install a signal amplifier properly to improve the image quality.
- If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction.
- An antenna cable and converter are not supplied.
- For a location that is not supported with ULTRA HD broadcasting, this TV cannot receive ULTRA HD broadcasts directly. (Depending on model)

### Satellite dish

Connect the TV to a satellite dish to a satellite socket with a satellite RF cable ( $75\ \Omega$ ). (Depending on model)

### CI module

View the encrypted (pay) services in digital TV mode. (Depending on model)

- Check if the CI module is inserted into the COMMON INTERFACE in the right direction. If the module is not inserted properly, this can cause damage to the TV and the COMMON INTERFACE.
- If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Terrestrial/Cable/Satellite Service Operator.

## Other connections

Connect your TV to external devices. For the best picture and audio quality, connect the external device and the TV with the HDMI cable. Some separate cable is not provided.

### HDMI

- Supported HDMI Audio format:

(Depending on model)

Dolby Digital / Dolby Digital Plus (32 kHz / 44.1 kHz / 48 kHz),  
PCM (32 kHz / 44.1 kHz / 48 kHz / 96 kHz / 192 kHz)

- SETTINGS** →  → [Picture] → [Additional Settings] → [HDMI Ultra HD Deep Colour]

Resolution	Frame Rate (Hz)	On	
3840 x 2160p 4096 x 2160p	50	4:4:4	8 bit
		4:2:2	8/10/12 bit
	59.94	4:2:0	10/12 bit
		Off	
	60	4:2:0	8 bit

If the device connected to Input Port also supports ULTRA HD Deep Colour, your picture may be clearer. However, if the device doesn't support it, it may not work properly. In that case, change the TV's [HDMI Ultra HD Deep Colour] setting to Off.

### USB

Some USB Hubs may not work. If a USB device connected through a USB Hub is not detected, connect it directly to the USB port on the TV.

- Use USB 1 port when connecting a webcam. USB 2 port may not support some webcam. (Depending on model)
- It is recommended that you use a USB hub or USB HDD with a power supply. (If the power supplied is not sufficient, the USB storage device may not be detected properly.)
- It is recommended that you use an external USB HDD with a rated voltage of 5 V or less and a rated current of 500 mA or less.


### External Devices

Available external devices are: Blu-ray player, HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices.

- The external device connection may differ from the model.
- Connect external devices to the TV regardless of the order of the TV port.
- Refer to the external equipment's manual for operating instructions.
- If you connect a gaming device to the TV, use the cable supplied with the gaming device.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.
- In PC mode, some resolution settings may not work properly depending on the graphics card.
- If ULTRA HD content is played on your PC, video or audio may become disrupted intermittently depending on your PC's performance. (Depending on model)
- When connecting via a wired LAN, it is recommended to use a CAT 7 cable. (Only when **LAN** port is provided.)

## External Speakers

(Depending on model)

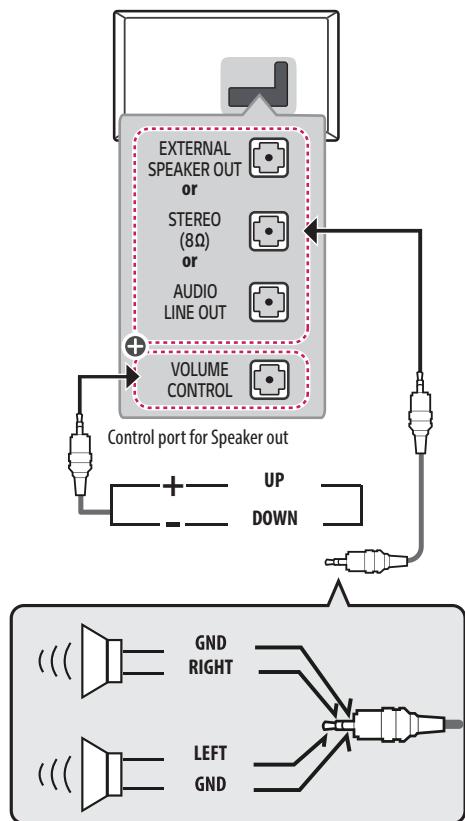


: Depending on model

- Use only with the 3 Pole 3.5 mm Stereo Jack.
- Do not connect your headphones or earphones to the port for connecting an external speaker.

## Method of volume control port

(Depending on model)

- Cable Spec.

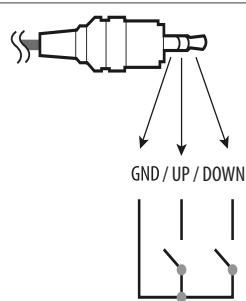

Each up/down pins are connected to CPU with pull up resistor respectively.

CPU detects transition from 3.3 V to GND level for volume control.


## Network

(Depending on model)

### Wired network connection

This TV can be connected to a Pro:Centric server via the **LAN** port. After making the physical connection, the TV needs to be set up for network communication.

Connect the **LAN** port of the Modem or Router from Pro:Centric server to the **LAN** port on the TV.

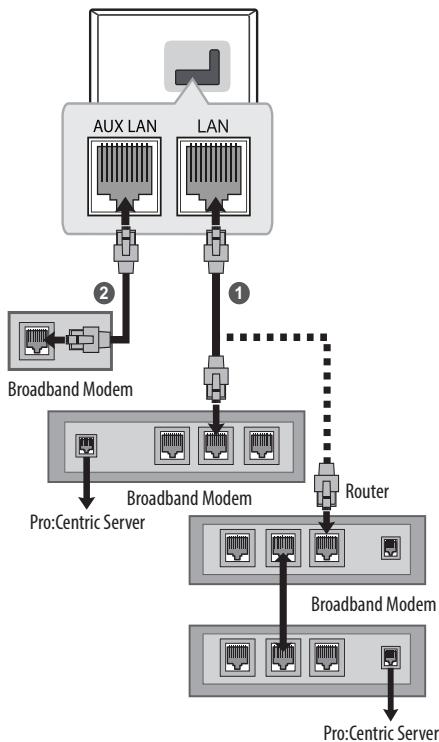

**①** Connect the **LAN** port of the Modem or Router to the **LAN** port on the TV.

**②** Connect the **LAN** port of the PC to the **AUX LAN** port on the TV.  
(Depending on model)

- !**
- Do not connect a modular phone cable to the **LAN** port.
  - Since there are various connection methods, please follow the specifications of your telecommunication carrier or internet service provider.

## Using Button

(Depending on model)

You can simply operate the TV functions, using the button.



## Basic functions

	Power On (Press) Power Off <sup>1)</sup> (Press and Hold) Menu Control (Press <sup>2)</sup> ) Menu Selection (Press and Hold <sup>3)</sup> )
---	---

- 1) All running apps will close.
- 2) You can access and adjust the menu by pressing the button when TV is on.
- 3) You can use the function when you access menu control.

## Adjusting the menu

(Depending on model)


When the TV is turned on, press the  button one time. You can adjust the Menu items using the button.

	Turns the power off.
	Changes the input source.
	Scrolls through the saved programmes.
	Adjusts the volume level.

## Adjusting the Angle of the TV to suit view

(Depending on model)

Swivel 20 degrees to the left or right and adjust the angle of the TV to suit your view.

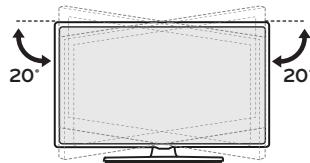


- When adjusting the angle of the product, watch out for your fingers.
- Personal injury may occur if hands or fingers are pinched.  
If the product is tilted too much, it may fall, causing damage or injury.

# Using Remote Control

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the  $(+)$  and  $(-)$  ends to the label inside the compartment, and close the battery cover.

Make sure to point the remote control toward the remote control sensor on the TV.

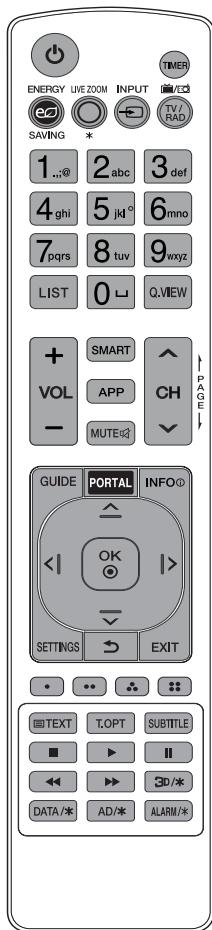

(Some buttons and services may not be provided depending on models or regions.)

\* To use the button, press and hold for more than 3 seconds.

\*\* To use the button, press and hold for more than 5 seconds.  
(Without facing the TV)

POWER Turns the TV on or off.

TIMER Turns the TV off in a set amount of time.

ENERGY SAVING Adjusts the brightness of the screen to reduce energy consumption.

LIVE ZOOM\* This function is not supported.

INPUT Changes the input source.

TV/RAD Selects Radio, TV and DTV programme.

Number buttons Enters numbers.

Alphabet buttons Enters letters.

LIST Accesses the saved programme list.

SPACE Opens an empty space on the screen keyboard.

Q.VIEW Returns to the previously viewed programme.

+ VOL — Adjusts the volume level.

SMART Accesses the Home menu.

SMART\* Shows the previous history.

APP Shows the previous history.

MUTE Mutes all sounds.

MUTE\* Accesses the [Accessibility] menu.

MUTE\*\* Adjusts the Multi IR function.

CH Scrolls through the saved programmes.

PAGE Moves to the previous or next screen.

GUIDE Shows programme guide.

PORTAL Displays and removes hotel interactive menu.

INFO Views the information of the current programme and screen.

Navigation buttons (up/down/left/right) Scrolls through menus or options.

OK Selects menus or options and confirms your input.

SETTINGS Accesses the main menus.

BACK Returns to the previous level.

EXIT Clears on-screen displays and return to TV viewing.

These access special functions in some menus.

Teletext buttons (TEXT, T.OPT) These buttons are used for teletext.

SUBTITLE Recalls your preferred subtitle in digital mode.

Control buttons (■, ▶, □, ▲, ▼) Controls media contents.

3D/\* This function is not supported.

DATA/\* Selects the MHP TV menu source.

AD/\* Audio descriptions function will be enabled.

ALARM/\* Sets the alarm function.



- Do not mix new batteries with old batteries. This may cause the batteries to overheat and leak.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.
- This apparatus uses batteries. In your community there might be regulations that require you to dispose of these batteries properly due to environmental considerations. Please contact your local authorities for disposal or recycling information.
- The product's internal and external batteries should not be exposed to excessive heat such as direct sunlight, fire, or the like.
- In Analogue TV and some countries, some remote control buttons may not work.

## Troubleshooting

The software version can be updated for improvement in performance.

Customer needs to ensure the compatibility of customer's equipment with LGE software. If needed, please consult with LGE and upload revised software version according to the guidance provided by LGE.

Cannot control the TV with the remote control.

- Check the remote control sensor on the product and try again.
- Check if there is any obstacle between the product and the remote control.
- Check if the batteries are still working and properly installed ( $\oplus$  to  $\oplus$ ,  $\ominus$  to  $\ominus$ ).

No image display and no sound is produced.

- Check if the product is turned on.
- Check if the power cord is connected to a wall outlet.
- Check if there is a problem in the wall outlet by connecting other products.

The TV turns off suddenly.

- Check the power control settings. The power supply may be interrupted.
- Check if the auto-off function is activated on the settings related time.
- If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity.

When connecting to the PC (HDMI), no signal is detected.

- Turn the TV off/on using the remote control.
- Reconnect the HDMI cable.
- Restart the PC with the TV on.

## Abnormal display

- If the product feels cold to the touch, there may be a small “flicker” when it is turned on. This is normal, there is nothing wrong with product.
- This panel is an advanced product that contains millions of pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product. This phenomenon also occurs in third-party products and is not subject to exchange or refund.
- You may find different brightness and colour of the panel depending on your viewing position(left/right/top/down).

This phenomenon occurs due to the characteristic of the panel. It is not related with the product performance, and it is not malfunction.

- Displaying a still image for a prolonged period of time may cause image sticking. Avoid displaying a fixed image on the TV screen for a long period of time.

## Generated sound

- “Cracking” noise: A cracking noise that occurs when watching or turning off the TV is generated by plastic thermal contraction due to temperature and humidity. This noise is common for products where thermal deformation is required.
- Electrical circuit humming/panel buzzing: A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product. It varies depending on the product. This generated sound does not affect the performance and reliability of the product.



- When cleaning the product, be careful not to allow any liquid or foreign objects to enter the gap between the upper, left or right side of the panel and the guide panel.  
(Depending on model)



- Make sure to wring any excess water or cleaner from the cloth.
- Do not spray water or cleaner directly onto the TV screen.
- Make sure to spray just enough of water or cleaner onto a dry cloth to wipe the screen.

# Specifications

(Depending on country)

Broadcasting Specifications					
	Digital TV		Analogue TV		
<b>Television system</b>	DVB-T/T2 <sup>1)</sup> DVB-S/S2 <sup>2)</sup> DVB-C <sup>2)</sup>		PAL B/B, B/G, D/K, I SECAM B/G, D/K NTSC-M <sup>3)</sup>		
<b>Channel coverage (Band)</b>	DVB-S/S2 <sup>2)</sup>  950~2,150 MHz	DVB-C <sup>2)</sup>  46 ~ 890 MHz	DVB-T/T2 <sup>1)</sup>  VHF III: 174 ~ 230 MHz UHF IV: 470 ~ 606 MHz UHF V: 606 ~ 862 MHz S Band II: 230 ~ 300 MHz S Band III: 300 ~ 470 MHz		
			46 ~ 862 MHz		
<b>Maximum number of storable programmes</b>	6,000	3,000			
<b>External antenna impedance</b>	75 Ω				
<b>CI Module (W x H x D)</b>	100.0 mm x 55.0 mm x 5.0 mm				

1) Only DVB-T2 support models. (Despite DVB-T Model, DVB-T/T2 does not apply in Philippine.)

2) Only DVB-C/S2 support models.

3) Only NTSC-M support models.

## After Sales Service (Egypt Only)

Shelf Life Time : 3 Years

*LG is committed to providing all spare parts of this device during the shelf life time.*

(Depending on country)

<b>Wireless module (LGSBWAC95) specifications</b>	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency Range	Output Power (Max.)
2,400 to 2,483.5 MHz	19 dBm
5,150 to 5,725 MHz	18 dBm
5,725 to 5,850 MHz	13.5 dBm
Bluetooth	
Frequency Range	Output Power (Max.)
2,400 to 2,483.5 MHz	9 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only Vietnam)

<b>Wireless module (LGSBWAC95) specifications</b>	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency Range	Output Power (Max.)
2,400 to 2,483.5 MHz	17.5 dBm
5,150 to 5,725 MHz	17.5 dBm
5,725 to 5,850 MHz	13.5 dBm
Bluetooth	
Frequency Range	Output Power (Max.)
2,400 to 2,483.5 MHz	9 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only Philippines)

<b>Wireless module (LGSBWAC95) specifications</b>	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency Range	Output Power (Max.)
2,400 to 2,483.5 MHz	18.5 dBm
5,150 to 5,725 MHz	18 dBm
5,725 to 5,850 MHz	18 dBm
Bluetooth	
Frequency Range	Output Power (Max.)
2,400 to 2,483.5 MHz	9 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

FCC ID: BEJLSBWAC95 / IC: 2703H-LGSBWAC95

(Only Nigeria)

**Connection and use of this communications equipment is permitted by the Nigerian Communications Commission**

<b>Environment condition</b>	
<b>Operating Temperature</b>	0 °C to 40 °C
<b>Operating Humidity</b>	Less than 80 %
<b>Storage Temperature</b>	-20 °C to 60 °C
<b>Storage Humidity</b>	Less than 85 %

- The energy information provided with the product is indicated in accordance with the regulations of each country. (Depending on Country)
  - The Energy consumption is measured in accordance with IEC 62087.
  - The recommended 'home viewing' picture mode is initial default picture mode.
- Actual Energy consumption may vary depending on factors such as the type of video content being played and TV settings.

## HDMI-DTV supported Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 x 480p	31.46	59.94
	31.5	60
720 x 480p	31.46	59.94
	31.5	60
720 x 576p	31.25	50
1280 x 720p	44.95	59.94
	45	60
	37.5	50
1920 x 1080i	28.12	50
	33.71	59.94
	33.75	60
1920 x 1080p	26.97	23.97
	27	24
	33.71	29.97
	33.75	30
	56.25	50
	67.43	59.94
	67.5	60
1920 x 1080p	112.5	100
	134.86	119.88
	135	120
3840 x 2160p	53.94	23.97
	54	24
	56.25	25
	67.43	29.97
	67.5	30
	112.5	50
	134.86	59.94
4096 x 2160p	135	60
	53.94	23.97
	54	24
	56.25	25
	67.43	29.97
	67.5	30
	112.5	50
134.86	134.86	59.94
	135	60

## HDMI-PC supported Mode

- PC audio is not supported.
- Use HDMI IN 1 for PC mode. (Depending on model)

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 x 350	31.46	70.09
720 x 400	31.46	70.08
640 x 480	31.46	59.94
800 x 600	37.87	60.31
1024 x 768	48.36	60
1360 x 768	47.71	60.01
1152 x 864	54.34	60.05
1280 x 1024	63.98	60.02
1920 x 1080	67.5	60
	134.86	119.88
	135	120
2560 x 1440	88.78	59.95
3840 x 2160	53.94	23.97
	54	24
	56.25	25
	67.43	29.97
	67.5	30
	112.5	50
	134.86	59.94
4096 x 2160	135	60
	53.94	23.97
	54	24
	56.25	25
	67.43	29.97
	67.5	30
	112.5	50
134.86	134.86	59.94
	135	60

## AV supported Mode

(Depending on country)

ENGLISH

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
720 x 480i	15.73	59.94
	15.75	60
720 x 576i	15.625	50

## Supported Photo Formats

File Format	Format	Resolution
.jpeg, .jpg, .jpe	JPEG	Minimum: 64 (W) x 64 (H) Maximum (Normal Type): 15360 (W) x 8640 (H) Maximum (Progressive Type): 1920 (W) x 1440 (H)
.png	PNG	Minimum: 64 (W) x 64 (H) Maximum: 5760 (W) x 5760 (H)
.bmp	BMP	Minimum: 64 (W) x 64 (H) Maximum: 1920 (W) x 1080 (H)

## Supported Audio Formats

File Format	Item	Info
.mp3	Bit rate	32 Kbps - 320 Kbps
	Sample freq.	16 kHz - 48 kHz
	Support	MPEG1, MPEG2
	Channels	mono, stereo
.wav	Bit rate	-
	Sample freq.	8 kHz - 96 kHz
	Support	PCM
	Channels	mono, stereo
.ogg	Bit rate	64 kbps - 320 kbps
	Sample freq.	8 kHz - 48 kHz
	Support	Vorbis
	Channels	mono, stereo
.wma	Bit rate	128 kbps - 320 kbps
	Sample freq.	8 kHz - 48 kHz
	Support	WMA
	Channels	up to 6 ch
.flac	Bit rate	-
	Sample freq.	8 kHz - 96 kHz
	Support	FLAC
	Channels	mono, stereo

- The number of supported programmes may vary depending on the sample frequency.

## Supported Video Formats

Extension	Codec	
.ASF	Video	VC-1 Advanced Profile (except for WMVA), VC-1 Simple and Main Profiles
	Audio	WMA Standard (except for WMA v1/WMA Speech)
.WMV	Video	Xvid (GMC is not supported), H.264/AVC, Motion Jpeg, MPEG-4
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital, LPCM, ADPCM
.avi	Video	H.264/AVC, MPEG-4, HEVC, AV1
.MP4	Video	Dolby Digital, Dolby Digital Plus, AAC, MPEG-1 Layer III (MP3), Dolby AC-4 <sup>1)</sup>
	Audio	AAC, AMR-NB, AMR-WB
.M4V	Video	H.264/AVC, MPEG-4
	Audio	MPEG-1 Layer III (MP3), Dolby AC-4 <sup>1)</sup>
.MOV	Video	H.264/AVC, MPEG-4
	Audio	MPEG-1 Layer III (MP3), Dolby AC-4 <sup>1)</sup>
.3GP	Video	H.264/AVC, MPEG-4
	Audio	AAC, AMR-NB, AMR-WB
.3G2	Video	H.264/AVC, MPEG-4
	Audio	AAC, AMR-NB, AMR-WB
.MKV	Video	MPEG-2, MPEG-4, H.264/AVC, VP8, VP9, HEVC, AV1
	Audio	Dolby Digital, Dolby Digital Plus, AAC, PCM, MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
.TS	Video	H.264/AVC, MPEG-2, HEVC
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital, Dolby Digital Plus, AAC, PCM, Dolby AC-4 <sup>1)</sup>
.TRP	Video	MPEG-1, MPEG-2
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
.TP	Video	MPEG-1, MPEG-2
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
.MTS	Video	MPEG-1, MPEG-2
	Audio	Dolby Digital, MPEG-1 Layer I, II, DVD-LPCM
.MPG	Video	MPEG-1, MPEG-2
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
.MPEG	Video	MPEG-1, MPEG-2
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
.DAT	Video	MPEG-1, MPEG-2
	Audio	Dolby Digital, MPEG-1 Layer I, II, DVD-LPCM
.VOB	Video	MPEG-1, MPEG-2
	Audio	Dolby Digital, MPEG-1 Layer I, II, DVD-LPCM

1) Dolby AC-4 : This feature is available in certain models only.

## Cautions for Video Playback

- ULTRA HD Video: 3840 x 2160, 4096 x 2160
- Some HEVC encoded ULTRA HD videos other than the content officially provided by LG Electronics may not be played.
- Some codecs can be supported after a software upgrade.

Extension	Codec	
.mkv	Video	H.264/AVC, HEVC
.mp4	Audio	Dolby Digital, Dolby Digital Plus, AAC
.ts		

## Supported External Subtitles

Subtitle	Format
External Subtitle	*.smi, *.srt, *.sub (MicroDVD, SubViewer 1.0/2.0), *.ass, *.ssa, *.txt (TMPlayer), *.psb (PowerDivX), *.dcs (DLP Cinema)
Embedded Subtitle	Matroska(mkv): Sub Station Alpha (SSA), Advanced Sub Station Alpha (ASS), SRT MP4: Timed Text

## Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

## Licenses

Supported licenses may differ by model.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Vision IQ, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

# IR Codes

- This feature is not available for all models.

Code (Hexa)	Function	Code (Hexa)	Function
08	POWER	5B	EXIT
0E	TIMER	72	•
95	ENERGY SAVING	71	..
AF	LIVE ZOOM *	63	••
0B	INPUT	61	•••
F0	TV/RAD 	20	TEXT
10-19	Number Key 0-9		
	Alphabet buttons	21	T.OPT(T.Option)
	□ (SPACE)		
53	LIST	39	SUBTITLE
1A	Q.VIEW	B1	■
02	+ VOL	B0	▶
03	VOL —	BA	
7C	SMART	8F	◀
B5	APP	8E	▶
09	MUTE 	DC	3D/*
00	^ CH		
	PAGE ▲	9F	DATA/*
01	CH ▼	91	AD/*
AB	PAGE ▾		
	GUIDE	E8	ALARM/*
0C	PORTAL		
AA	INFO 		
40	^		
41	▼		
07	<		
06	>		
44	OK 		
43	SETTINGS		
28	⟲ (BACK)		


# External Control Device Setup

## RS-232C Setup


(Depending on model)

- Image shown may differ from your TV.
- Connect the RS-232C (serial port) input jack to an external control device (such as a computer or an A/V control system) to control the product's functions externally.
- Connect the serial port of the control device to the RS-232C jack on the product back panel.
- RS-232C connection cables are not supplied with the product.


► A Type

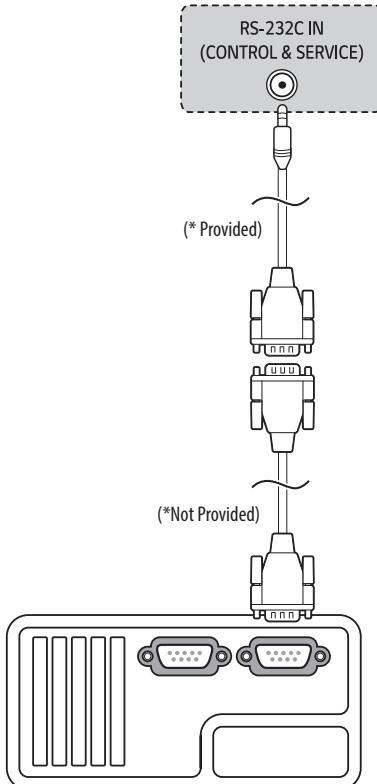

► B Type

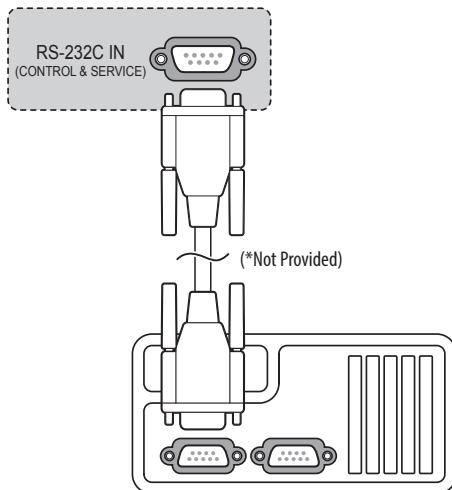

### Type of Connector : D-Sub 9-Pin Male

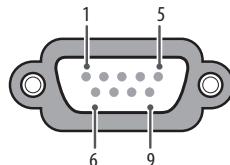

No.	Pin name
1	3.5V
2	RXD (Receive data)
3	TXD (Transmit data)
4	IR OUT from TV
5	GND
6	No Connection
7	No Connection (5 V available in some models)
8	No Connection
9	No Connection (12 V available in some models)

## RS-232C Configurations

**7-Wire Configurations  
(Standard RS-232C cable)**

	<b>PC</b>		<b>TV</b>	
RXD	2		3	TXD
TXD	3		2	RXD
GND	5		5	GND
DTR	4		6	DSR
DSR	6		4	DTR
RTS	7		8	CTS
CTS	8		7	RTS

D-Sub 9

D-Sub 9

**3-Wire Configurations  
(Not standard)**

	<b>PC</b>		<b>TV</b>	
RXD	2		3	TXD
TXD	3		2	RXD
GND	5		5	GND
DTR	4		6	DSR
DSR	6		4	DTR
RTS	7		8	CTS
CTS	8		7	RTS

D-Sub 9

D-Sub 9

## Communication Parameters

- Baud rate: 9,600 bps (UART)
- Data length: 8 bits
- Parity: None
- Stop bit: 1 bit
- Communication code: ASCII code
- Use a crossed (reverse) cable.

### Set ID

For Set ID number, see “**Real Data Mapping**”.

The adjustment range is 1-99.



- Some models support the [Set ID] up to 1000.

## Command Reference List

(Depending on model)

ENGLISH

	Command1	Command2	Data (Hexadecimal)
1 Power	k	a	00 to 01
2 [Aspect Ratio]	k	c	(See p. 29)
3 Screen Mute	k	d	(See p. 29)
4 Volume Mute	k	e	00 to 01
5 Volume Control	k	f	00 to 64
6 [Contrast]	k	g	00 to 64
7 [Brightness]	k	h	00 to 64
8 [Colour]	k	i	00 to 64
9 [Tint]	k	j	00 to 64
10 [Sharpness]	k	k	00 to 32
11 OSD Select	k	l	00 to 01
12 Remote Control Lock Mode	k	m	00 to 01
13 [Balance]	k	t	00 to 64
14 [Colour Temperature]	x	u	00 to 64
15 [Energy Saving]	j	q	(See p. 31)
16 Auto Configuration	j	u	01
17 [Equalizer]	j	v	(See p. 32)
18 Tune Command	m	a	(See p. 32)
19 Programme [Skip] / [Add]	m	b	00 to 01
20 Key	m	c	(See p. 33)
21 Control [Backlight]	m	g	00 to 64
22 Input select	x	b	(See p. 33)
23 Programme block/unblock	m	d	(See p. 34)
24 Fail Over Mode	m	i	(See p. 34)
25 Fail Over Input Select	m	j	(See p. 34)

- During USB operations such as DivX or EMF, all commands except Power(ka) and Key(mc) are not executed and treated as NG.

## Transmission / Receiving Protocol

(Depending on Model)

### Transmission

**(Command1)(Command2)( )(Set ID)( )(Data)(Cr)**

(Command1) : First command to control the TV. (j, k, m or x)

(Command2) : Second command to control the TV.

(Set ID) : You can adjust the set ID to choose desired monitor ID number in option menu. Adjustment range is 1 to 99. When selecting Set ID '0', every connected set is controlled. Set ID is indicated as decimal (1 to 99) on menu and as Hexa decimal (0 x 0 to 0 x 63) on transmission/receiving protocol.

(Data) : To transmit command data. Transmit 'FF' data to read status of command.

(Cr) : Carriage Return

ASCII code '0 x 0D'

( ) : ASCII code 'space (0 x 20)'



- Some models support the [Set ID] up to 1000 (Hexa decimal 0 x 3E8).

### OK Acknowledgement

**(Command2)( )(Set ID)( )(OK)(Data)(x)**

\* The set transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

### Error Acknowledgement

**(Command2)( )(Set ID)( )(NG)(Data)(x)**

\* The set transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

[Data] 00 : Illegal Code

**1 Power** (Command: k a)

- To control Power On/Off of the set.

Transmission

(k)(a)( )([Set ID])( )( )[Data](Cr)

[Data] 00 : [Off]

[Data] 01 : [On]

Ack

(a)( )([Set ID])( )(OK/NG)([Data])(x)

- To Show TV is Power On/Off.

Transmission

(k)(a)( )([Set ID])( )(FF)(Cr)

Ack

(a)( )([Set ID])( )(OK/NG)([Data])(x)

- \* Similarly, if other functions transmit '0 x FF' data based on this format, Acknowledgement data feed back presents status about each function.
- \* OK Ack., Error Ack. and other message may display on the screen when TV is power On.

**2 [Aspect Ratio]** (Command: k c) (Main Picture Size)

- To adjust the screen format. (Main picture format) You can also adjust the screen format using the picture settings.

Transmission

(k)(c)( )([Set ID])( )( )[Data](Cr)

[Data] 01 : [4:3] (Normal screen - [Just Scan] Off)

[Data] 02 : [16:9] (Wide screen - [Just Scan] Off)

[Data] 06 : [Original] ([Just Scan] Off)

[Data] 09 : [Just Scan]

- \* Please make sure that the model doesn't support both Vertical Zoom and All-Direction Zoom mode.

Ack

(c)( )([Set ID])( )(OK/NG)([Data])(x)

- \* Using the PC input, you select either 16:9 or 4:3 screen aspect ratio.

- \* In DTV/HDMI (1080i 50 Hz / 60 Hz, 720p 50Hz / 60 Hz, 1080p 24 Hz / 30 Hz / 50 Hz / 60 Hz), Component (720p, 1080i, 1080p) mode, [Just Scan] is available.

- \* Full Wide is supported only for Digital, Analogue, AV.

**3 Screen Mute** (Command: k d)

- To select screen mute on/off.

Transmission

(k)(d)( )([Set ID])( )( )[Data](Cr)

[Data] 00 : Screen mute off (Picture on) / Video mute off

[Data] 01 : Screen mute on (Picture off)

[Data] 10 : Video mute on

Ack

(d)( )([Set ID])( )(OK/NG)([Data])(x)

- \* In case of video mute on only, TV will display On Screen Display (OSD). But, in case of Screen mute on, TV will not display OSD.

**4 Volume Mute** (Command: k e)

- To control volume mute on/off.  
You can also adjust mute using the mute button on remote control.

Transmission

(k)(e)( )([Set ID])( )( )[Data](Cr)

[Data] 00 : Volume mute on (Volume off)

[Data] 01 : Volume mute off (Volume on)

Ack

(e)( )([Set ID])( )(OK/NG)([Data])(x)

**5 Volume Control** (Command: k f)

- To adjust volume.  
You can also adjust volume with the volume buttons on remote control.

Transmission

(k)(f)( )([Set ID])( )( )[Data](Cr)

[Data] Min : 00 to Max : 64

- \* Refer to "Real data mapping".

Ack

(f)( )([Set ID])( )(OK/NG)([Data])(x)

**6 [Contrast] (Command: k g)**

- To adjust screen contrast.

You can also adjust contrast in the picture settings.

## Transmission

```
(k)(g)( )([Set ID])( )(Data)(Cr)
```

[Data] Min : 00 to Max : 64

\* Refer to "Real data mapping".

## Ack

```
(g)( )([Set ID])( )(OK/NG)([Data])(x)
```

**7 [Brightness] (Command: k h)**

- To adjust screen brightness.

You can also adjust brightness in the picture settings.

## Transmission

```
(k)(h)( )([Set ID])( )(Data)(Cr)
```

[Data] Min : 00 to Max : 64

\* Refer to "Real data mapping".

## Ack

```
(h)( )([Set ID])( )(OK/NG)([Data])(x)
```

**8 [Colour] (Command: k i)**

- To adjust the screen colour.

You can also adjust colour in the picture settings.

## Transmission

```
(k)(i)( )([Set ID])( )(Data)(Cr)
```

[Data] Min : 00 to Max : 64

\* Refer to "Real data mapping".

## Ack

```
(i)( )([Set ID])( )(OK/NG)([Data])(x)
```

**9 [Tint] (Command: k j)**

- To adjust the screen tint.

You can also adjust tint in the picture settings.

## Transmission

```
(k)(j)( )([Set ID])( )(Data)(Cr)
```

[Data] Red : 00 to Green : 64

\* Refer to "Real data mapping".

## Ack

```
(j)( )([Set ID])( )(OK/NG)([Data])(x)
```

**10 [Sharpness] (Command: k k)**

- To adjust the screen sharpness.

You can also adjust sharpness in the picture settings.

## Transmission

```
(k)(k)( )([Set ID])( )(Data)(Cr)
```

[Data] Min : 00 to Max : 32

\* Refer to "Real data mapping".

## Ack

```
(k)( )([Set ID])( )(OK/NG)([Data])(x)
```

**11 OSD Select (Command: k l)**

- To select OSD (On Screen Display) on/off when controlling remotely.

## Transmission

```
(k)(l)( )([Set ID])( )(Data)(Cr)
```

[Data] 00 : [Off]

[Data] 01 : [On]

## Ack

```
(l)( )([Set ID])( )(OK/NG)([Data])(x)
```

**12 Remote Control Lock Mode** (Command: k m)

- To lock the front panel controls on the monitor and remote control.

Transmission

(k)(m)( )([Set ID])( )( )[Data])(Cr)

[Data] 00 : [Off]

[Data] 01 : [On]

Ack

(m)( )([Set ID])( )(OK/NG)([Data])(x)

- \* If you are not using the remote control, use this mode. When main power is on/off, external control lock is released.
- \* In the standby mode, if key lock is on, TV will not turn on by power on key of IR & Local Key.

**13 [Balance]** (Command: k t)

- To adjust balance.

You can also adjust balance in the audio settings.

Transmission

(k)(t)( )([Set ID])( )( )[Data])(Cr)

[Data] L : 00 to R : 64

\* Refer to "Real data mapping".

Ack

(t)( )([Set ID])( )(OK/NG)([Data])(x)

**14 [Colour Temperature]** (Command: x u)

- To adjust Colour Temperature. You can also adjust Colour Temperature in the picture settings.

Transmission

(x)(u)( )([Set ID])( )( )[Data])(Cr)

[Data] Warm: 00 to Cool:64

\* Refer to "Real data mapping".

Ack

(u)( )([Set ID])( )(OK/NG)([Data])(x)

**15 [Energy Saving]** (Command: j q)

- To reduce the power consumption of the TV. You can also adjust Energy Saving in picture settings.

Transmission

(j)(q)( )([Set ID])( )( )[Data])(Cr)

7	6	5	4		Power Saving Function		Level			Description
					3	2	1	0		
0	0	0	0	Low Power	0	0	0	0	[Off]	
0	0	0	0	Low Power	0	0	0	1	[Minimum]	
0	0	0	0	Low Power	0	0	1	0	[Medium]	
0	0	0	0	Low Power	0	0	1	1	[Maximum]	
0	0	0	0	Low Power	0	1	0	1	[Screen Off]	
0	0	0	0	Low Power	0	1	0	0	[Auto]	

- [Auto] is available in TV that supports 'Intelligent Sensor'.

Ack

(q)( )([Set ID])( )(OK/NG)([Data])(x)

**16 Auto Configuration** (Command: j u) (Only RGB support model)

- To adjust picture position and minimize image shaking automatically. It works only in RGB (PC) mode.

Transmission

(j)(u)( )([Set ID])( )( )[Data])(Cr)

[Data] 01 : To set

Ack


(u)( )([Set ID])( )(OK/NG)([Data])(x)

**17 [Equalizer] (Command : j v)**

► To adjust equalizer.

Transmission

(j)(v)( )([Set ID])( )( )[Data])(Cr)

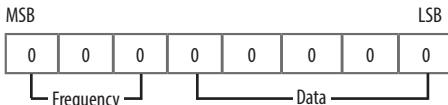

7	6	5	Frequency	4	3	2	1	0	Step
0	0	0	1st Band	0	0	0	0	0	0 (decimal)
0	0	1	2nd Band	0	0	0	0	1	1 (decimal)
0	1	0	3rd Band	...	...	...	...	...	...
0	1	1	4th Band	1	0	0	1	1	19 (decimal)
1	0	0	5th Band	1	0	1	0	0	20 (decimal)

Ack

(v)( )([Set ID])( )(OK/NG)( )[Data])(x)

**18 Tune Command (Command: m a)**

► Select channel to following physical number.

Transmission

(m)(a)( )([Set ID])( )( )[Data] 00)( )( )[Data] 01)( )( )[Data] 02)(Cr)

[Data] 00 : High channel data

[Data] 01 : Low channel data

ex. No. 47 → 00 2F (2FH)

No. 394 → 01 8A (18AH),

DTV No. 0 → Don't care

[Data] 02 : (Antenna)

0 x 00 : Analogue Main

0 x 10 : DTV Main

0 x 20 : Radio

(Cable)

0 x 80 : Analogue Main

0 x 90 : DTV Main

0 x A0 : Radio

(Satellite)

0 x 40 : DTV Main

0 x 50 : Radio Main

Channel data range

Min : 00 Max : 270F (0 to 9999)

Ack

(a)( )([Set ID])( )(OK/NG)( )[Data])(x)

## 19 Programme [Skip] / [Add] (Command: m b)

- To set skip status for the current Programme.

## Transmission

(m)(b)( )( )[Set ID]( )( )[Data])(Cr)

[Data] 00 : [Skip]

[Data] 01 : [Add]

Ack

(b)( )( )[Set ID]( )(OK/NG)( )[Data])(x)

## 20 Key (Command: m c)

- To send IR remote key code.

## Transmission

(m)(c)( )( [Set ID])( )( [Data])(Cr)

[D-4]

**Add:**

## 21 Control [Backlight] (Command: m g)

- To control the backlight.

## Transmission

(m)(g)( )( )[Set ID])( )( )[Data])(Cr)

[Date] Min: 00 to Max: 64

Ans

( $\pi$ ) V V[Set|D] V V[OK/NC]/[Data]/(u)


## **22 Input select** (Command: x b) (Main Picture Input)

- To select input source for main picture.

## Transmission

(x)(b)( )( )[Set ID]( )( )[Data])(Cr)

[Data] Structure

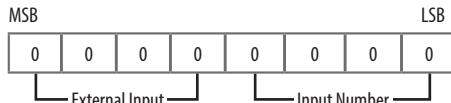

External Input				Data
0	0	0	0	DTV
0	0	0	1	Analogue
0	0	1	0	AV
0	1	0	0	Component
0	1	1	0	RGB
0	1	1	1	HDMI
1	0	0	0	
1	0	0	1	
1	0	1	0	

Input Number				Data
0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4

Ack

(b) ( ) ([Set ID]) ( ) (OK/NG) ([Data]) (x)

**23 Programme block/unblock** (Command: m d)

- This command may work differently depending on model and signal.

## Transmission

```
(m)(d)( )([Set ID])( )(Data 00)( )(Data 01)( )(Data 02)(Data 03)
(Data 04)(Cr)
```

([Data] 00) : Physical Channel Number

([Data] 01)([Data] 02) : Channel Data

- ([Data] 01) : High Channel data
- ([Data] 02) : Low Channel data

00 00 ~ 27 OF (Decimal: 0 ~ 9999)

([Data] 03) : Input Source

- 10 : Antenna TV (DTV)
- 20 : Antenna Radio (Radio)
- 40 : Satellite TV (SDTV)
- 50 : Satellite Radio (S-Radio)
- 90 : Cable TV (CADTV)
- a0 : Cable Radio (CA-Radio)

([Data] 04) : block(01) / unblock(00)

## Ack

```
(d)( )([Set ID])( )(OK/NG)(Data 00)(Data 01)(Data 02)(Data 03)
(Data 04)(x)
```

## \* Block/Unblock Command Examples

Block/Unblock Digital Antenna (DVB-T) Channel 800

([Set ID]) = All = 01

([Data] 00) = Physical Channel Number 30 = 1E

([Data] 01) & ([Data] 02) = Channel Data is 800 = 03 20

([Data] 03) = Digital Antenna TV = 10

([Data] 04) = block/unblock = (01/00)

Result :

```
md 01 1E 03 20 10 (01/00)
```

**24 Fail Over Mode** (Command: m i)

- Selects the Fail Over mode.

## Transmission

```
(m)(i)( )([Set ID])( )(Data)(Cr)
```

[Data] 00 : Off

[Data] 01 : Auto

[Data] 02 : Manual

## Ack

```
(i)( )([Set ID])( )(OK/NG)(Data)(x)
```

**25 Fail Over Input Select** (Command: m j)

- Selects an input source for fail over. (This feature is only available when Fail Over is set to Custom.)

## Transmission

```
(m)(j)( )([Set ID])( )(Data 1)( )(Data 2)( )(Data 3)( )(Data 4)...()
(Data N)(Cr)
```

[Data] 1-N (Input priority 1-N)

[Data] 20 : AV1

[Data] 21 : AV2

[Data] 22 : AV3

[Data] 90: HDMI1

[Data] 91: HDMI2

[Data] 92: HDMI3

[Data] 93: HDMI4

## Ack

```
(j)( )([Set ID])( )(OK/NG)(Data 1)(Data 2)(Data 3)(Data 4)...(Data
N)(x)
```

\* Some input signals may not be available for all models.

\* The data number (N) may vary depending on the model. (The data number depends on the number of supported input signals.)

**\* Real data mapping**

00:	Step 0
:	
A:	Step 10 ([Set ID] 10)
:	
F:	Step 15 ([Set ID] 15)
10:	Step 16 ([Set ID] 16)
:	
64:	Step 100
:	
6E:	Step 110
:	
73:	Step 115
74:	Step 116
:	
CF:	Step 199
:	
FE:	Step 254
FF:	Step 255



The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

Model

Serial no.



تجد طراز المنتج ورقم التسلسلي على الجهة الخلفية منه وعلى أحد جوانبه. دوّنها أدناه في حال احتجت إلى أي خدمة.

الطراز

الرقم التسلسلي



\* رسم خرائط البيانات الحقيقة

0:00 الخطوة

⋮

(10) الخطوة 10 ([معرف الضبط] :A)

⋮

(15) الخطوة 15 ([معرف الضبط] :F)

(16) الخطوة 16 ([معرف الضبط] :10)

⋮

100 الخطوة :64

⋮

110 الخطوة :6E

⋮

115 الخطوة :73

116 الخطوة :74

⋮

199 الخطوة :CF

⋮

254 الخطوة :FE

255 الخطوة :FF

\_\_\_\_\_

\_\_\_\_\_




**22 اختيار المدخلات (الأمر: x) (مدخلات الصورة الرئيسية)**

◀ لتحديد مصدر الإدخال للصورة الرئيسية.

الإرسال

(Cr)(x)(b)(b)(x)([البيانات])([معرف الضبط])()

[البيانات] هيكلا

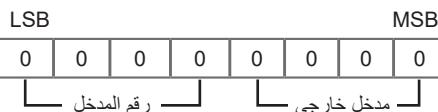

**19 برنامج [خطي] / [اضافة] (الأمر: b m)**

◀ لضبط حالات التخطي من البرنامج الحالي.

الإرسال

(Cr)(x)(b)(b)(x)([البيانات])([البيانات])([معرف الضبط])()

[البيانات] 00: [خطي]

[البيانات] 01: [اضافة]

إشعار

(Cr)(x)(b)(b)(x)([البيانات])([البيانات])([معرف الضبط])()

**20 مفتاح (الأمر: c m)**

◀ لإرسال كود مفتاح IR عن بعد.

الإرسال

(Cr)(c)(m)([البيانات])([البيانات])([معرف الضبط])()

[البيانات] رموز IR

إشعار

(Cr)(x)(c)(m)([البيانات])([البيانات])([معرف الضبط])()

**21 التحكم [إضاءةخلفية] (الأمر: g m)**

◀ للتحكم في الإضاءة الخلفية.

الإرسال

(Cr)(g)(m)([البيانات])([البيانات])([معرف الضبط])()

[البيانات] الحد الأدنى: من 00 إلى الحد الأقصى: 64

إشعار

(Cr)(x)(g)(m)([البيانات])([البيانات])([معرف الضبط])()

بيانات	مدخل خارجي			
التلفاز الرقمي	0	0	0	0
القطاطري	1	0	0	0
AV	0	1	0	0
المكون	0	0	1	0
RGB	0	1	1	0
HDMI	1	1	1	0
	0	0	0	1
	1	0	0	1
	0	1	0	1

بيانات	رقم المدخل			
إدخال1	0	0	0	0
إدخال2	1	0	0	0
إدخال3	0	1	0	0
إدخال4	1	1	0	0

إشعار

(Cr)(x)(b)(b)(x)([البيانات])([البيانات])([معرف الضبط])()

الامر [معادل] (v j) 17

لضبط موازن الصوت

الرسالة

(ج) (ي) (ج) (ج) (ج) (ج)

( ) (Cr) (البيانات [02]) ( ) (البيانات [01]) ( ) (البيانات [00]) ( ) (البيانات [01]) ( ) (البيانات [00]) ( ) (البيانات [01])

٠٠: بيانات الفناة العالمية  
 ٠١: بيانات الفناة المختصة  
 مثلاً رقم 47 ← 2F 00 2F (2FH)  
 رقم 394 ← 01 8A (18AH)  
 رقم 0 ← لا تكرر DTV

البيانات] 02: (هانوي)

- 0 x 00: التناول الرئيسي
- 0 x 10: التلفاز الرقمي الرئيسي
- 0 x 20: الراديو
- (كيل)
- 0 x 80: التناول الرئيسي
- 0 x 90: التلفاز الرقمي الرئيسي
- 0 x A0: الراديو
- (القر الصناعي)
- 0 x 40: التلفاز الرقمي الرئيسي
- 0 x 50: الراديو الرئيسي

طاق بیانات القناة  
لحد الأدنى: 00 الح الأقصى: 270F (من 0 إلى 9999)  
شعاع

لحد الأدنى: 00 الحد الأقصى: 270F (من 0 إلى 9999)  
شعار

اشعار

(v) ((مُعرَفُ الضِّيْط)) ((البِيَانَات)) ((OK/NG))

الخطوة	0	1	2	3	4	التردد	5	6	7
(عشرى) 0	0	0	0	0	0	النطاق الأول	0	0	0
(عشرى) 1	1	0	0	0	0	النطاق الثاني	1	0	0
...	...	...	...	...	...	النطاق الثالث	0	1	0
(عشرى) 19	1	1	0	0	1	النطاق الرابع	1	1	0
(عشرى) 20	0	0	1	0	1	النطاق الخامس	0	0	1

### 15 [توفير الطاقة] (الأمر: j)

◀ لتقليل استهلاك الطاقة للتلفاز، يمكنك أيضًا ضبط توفير الطاقة من إعدادات الصورة.

الإرسال

(Cr)(j)(q) ([معرف الضبط])(x)([البيانات])(x)

الوصف	المستوى				وظيفة موفر الطاقة			
	0	1	2	3	4	5	6	7
[إيقاف]	0	0	0	0	الطاقة المنخفضة	0	0	0
[الحد الأدنى]	1	0	0	0	الطاقة المنخفضة	0	0	0
[متوسط]	0	1	0	0	الطاقة المنخفضة	0	0	0
[الحد الأقصى]	1	1	0	0	الطاقة المنخفضة	0	0	0
[إيقاف الشاشة]	1	0	1	0	الطاقة المنخفضة	0	0	0
[تلכני]	0	0	1	0	الطاقة المنخفضة	0	0	0

◀ "[تلכני]". متاح في التلفاز الذي يدعم خاصية "الاستشعار الذكي".  
إشعار

(q) ([معرف الضبط])(x)(OK/NG)(x)([البيانات])(x)

### 16 [التهيئة الذاتية] (الأمر: j)

◀ (u) (يدعم فقط نموذج الألوان الأحمر والأخضر والأزرق)

◀ لضبط موضع الصورة وتقليل اهتزاز الصورة تلقائيًا. يعمل فقط على وضع نموذج الألوان الأحمر والأخضر والأزرق (المحمول).

الإرسال

(Cr)(j)(u) ([معرف الضبط])(x)([البيانات])(x)

[البيانات] 01: لضبط

إشعار

(u) ([معرف الضبط])(x)(OK/NG)(x)([البيانات])(x)

### 12 وضع قفل الريموت (الأمر: k)

◀ لفقل عناصر التحكم في اللوحة الأمامية على الشاشة والريموت.

الإرسال

(Cr)(k)(m) ([معرف الضبط])(x)([البيانات])(x)

[البيانات] 00: [إيقاف]

[البيانات] 01: [تشغيل]

إشعار

(x)(m) ([معرف الضبط])(x)(OK/NG)(x)([البيانات])(x)

\* إذا لم تكن تستخدم الريموت، فاستخدم هذا الوضع. عندما تكون الطاقة الرئيسية في وضع التشغيل / الإيقاف، فسيتم تحرير قفل التحكم الخارجي.

\* في وضع الاستعداد، إذا كان قفل المفتاح في وضع التشغيل، فلن يتم تشغيل التلفاز بواسطة مفتاح تشغيل IR والمفتاح المحلي.

### 13 [اتزان] (الأمر: t)

◀ لضبط الاتزان.

يمكنك أيضًا ضبط الاتزان من إعدادات الصوت.

الإرسال

(Cr)(t)(k) ([معرف الضبط])(x)([البيانات])(x)

[البيانات] L: من 00 إلى R:

\* تشير إلى "رسم خرائط البيانات الحقيقة".

إشعار

(x)(t) ([معرف الضبط])(x)(OK/NG)(x)([البيانات])(x)

### 14 [درجة حرارة اللون] (الأمر: x)

◀ لضبط درجة حرارة اللون. يمكنك أيضًا ضبط درجة حرارة اللون من إعدادات الصورة.

الإرسال

(Cr)(x)(u)(u) ([معرف الضبط])(x)([البيانات])(x)

[البيانات] الدافع: من 00 إلى البارد: 64

\* تشير إلى "رسم خرائط البيانات الحقيقة".

إشعار

(x)(u) ([معرف الضبط])(x)(OK/NG)(x)([البيانات])(x)

**6 [تبابين] (الأمر: k)**

◀ ضبط تباين الشاشة.

يمكنك أيضًا ضبط التباين من إعدادات الصورة.

الإرسال

(Cr)(g)(k) (][[معلومات الضبط])( )) (][[بيانات])(x)

[بيانات] الحد الأدنى: من 00 إلى الحد الأقصى: 64

\* تشير إلى "رسم خرائط البيانات الحقيقة".

إشعار

(x)(g)(x) (][[معلومات الضبط])( )) (][[بيانات])(OK/NG)(x)

**7 [سطوع] (الأمر: h)**

◀ ضبط سطوع الشاشة.

يمكنك أيضًا ضبط السطوع من إعدادات الصورة.

الإرسال

(Cr)(h)(k) (][[معلومات الضبط])( )) (][[بيانات])(x)

[بيانات] الحد الأدنى: من 00 إلى الحد الأقصى: 64

\* تشير إلى "رسم خرائط البيانات الحقيقة".

إشعار

(x)(h)(x) (][[معلومات الضبط])( )) (][[بيانات])(OK/NG)(x)

**8 [لون] (الأمر: i)**

◀ ضبط لون الشاشة.

يمكنك أيضًا ضبط اللون من إعدادات الصورة.

الإرسال

(Cr)(i)(k) (][[معلومات الضبط])( )) (][[بيانات])(x)

[بيانات] الحد الأدنى: من 00 إلى الحد الأقصى: 64

\* تشير إلى "رسم خرائط البيانات الحقيقة".

إشعار

(i)(x) (][[معلومات الضبط])( )) (][[بيانات])(OK/NG)(x)

**9 [درجة اللون] (الأمر: j)**

◀ ضبط درجة لون الشاشة.

يمكنك أيضًا ضبط درجة اللون من إعدادات الصورة.

الإرسال

(Cr)(j)(k) (][[معلومات الضبط])( )) (][[بيانات])(x)

[بيانات] الحمراء: من 00 إلى الأخضر: 64

\* تشير إلى "رسم خرائط البيانات الحقيقة".

إشعار

(x)(j)(x) (][[معلومات الضبط])( )) (][[بيانات])(OK/NG)(x)

**10 [حدة] (الأمر: k)**

◀ ضبط حدة الشاشة.

يمكنك أيضًا ضبط الحدة من إعدادات الصورة.

الإرسال

(Cr)(k)(x) (][[معلومات الضبط])( )) (][[بيانات])(x)

[بيانات] الحد الأدنى: من 00 إلى الحد الأقصى: 32

\* تشير إلى "رسم خرائط البيانات الحقيقة".

إشعار

(x)(k)(x) (][[معلومات الضبط])( )) (][[بيانات])(OK/NG)(x)

**11 تحديد OSD (الأمر: l)**

◀ تحديد تشغيل/إيقاف تصميم الأنظمة الاختيارية (على شاشة

العرض) عند التحكم بها عن بعد.

الإرسال

(Cr)(l)(k) (][[معلومات الضبط])( )) (][[بيانات])(x)

[بيانات] 00: [إيقاف]

[بيانات] 01: [تشغيل]

إشعار

(l)(x) (][[معلومات الضبط])( )) (][[بيانات])(OK/NG)(x)

**١ الطاقة (الأمر: k)**

◀ للتحكم في تشغيل/إيقاف كتم صوت الشاشة.

الإرسال

(Cr)(a)(k) (([معرف الضبط])( )) ([بيانات]) (x)

[بيانات] 00: [إيقاف]

[بيانات] 01: [تشغيل]

إشعار

((a)) (([معرف الضبط])( )) ([بيانات]) (x)

◀ لعرض التلفاز وهو تشغيل/إيقاف الطاقة.

الإرسال

(Cr)(FF)( ) (([معرف الضبط])( )) ([بيانات]) (x)

إشعار

((a)) (([معرف الضبط])( )) ([بيانات]) (x)

\* وبالمثل، إذا كانت الوظائف الأخرى تنقل بيانات "FF" استناداً

على هذا التسلسل، فإن تقرير بيانات الإشعار بالاستلام يظهر الحالات لكل وظيفة.

\* يمكن لإشعار الشاشة عندما يكون التلفاز قيد التشغيل.

**٢ نسبة طول إلى عرض (الأمر: c)**

◀ لضبط تنسيف الشاشة. (تنسيق الصورة الرئيسية) يمكن أيضًا ضبط

تنسيق الشاشة مستخدماً إعدادات الصورة.

الإرسال

(Cr)(c)(k) (([معرف الضبط])( )) ([بيانات]) (x)

[بيانات] 01: [4:3] (الشاشة العادية - إيقاف [مسح فقط])

[بيانات] 02: [16:9] (الشاشة الواسعة - إيقاف [مسح فقط])

[بيانات] 06: [أصلي] (إيقاف [مسح فقط])

[بيانات] 09: [مسح فقط]

\* يرجى التأكيد من أن النموذج لا يدعم كل من التكبير الأفقي ووضع التكبير لكل الجهات.

إشعار

((c)) (([معرف الضبط])( )) ([بيانات]) (x)

\* باستخدام مدخل PC، فإنه تحدد ما إذا كانت نسبة الطول إلى

العرض للشاشة 9:16 أو 3:4.

\* في DTV/HDMI 50 1080i / 60 هرتز، 50 720p / 60 هرتز / 60 هرتز / 60 هرتز، 24 1080p / 30 هرتز / 50 هرتز / 60 هرتز،

وضع المكون (1080i، 1080p، 720p)، [مسح فقط] هو المتأرجح.

\* العرض بملء الشاشة مدعم في الوضع الرقمي والمتناهري وAV.

**٣ كتم صوت الشاشة (الأمر: d)**

◀ لتحديد تشغيل/إيقاف كتم صوت الشاشة.

الإرسال

(Cr)(d)( ) (([معرف الضبط])( )) ([بيانات]) (x)

[بيانات] 00: إيقاف كتم صوت الشاشة (تشغيل الصورة) / إيقاف كتم

صوت الفيديو

[بيانات] 01: تشغيل كتم صوت الشاشة (إيقاف الصورة)

[بيانات] 10: تشغيل كتم صوت الفيديو

إشعار

((d)) (([معرف الضبط])( )) (OK/NG)(OK)(x)

\* في حالة تشغيل كتم صوت الفيديو فقط، سيتم عرض OSD على التلفاز. ولكن، في حالة تشغيل كتم صوت الشاشة، فلن يتم عرض OSD على التلفاز.

**٤ كتم الصوت (الأمر: e)**

◀ للتحكم في تشغيل/إيقاف حجم كتم الصوت.

يمكنك أيضًا ضبط كتم الصوت مستخدماً زر كتم الصوت أو جهاز التحكم عن بعد.

الإرسال

(Cr)(e)(k) (([معرف الضبط])( )) ([بيانات]) (x)

[بيانات] 00: تشغيل كتم الصوت (إيقاف الصوت)

[بيانات] 01: إيقاف كتم الصوت (تشغيل الصوت)

إشعار

((e)) (([معرف الضبط])( )) (OK/NG)(OK)(x)

**٥ التحكم في الصوت (الأمر: f)**

◀ لضبط الصوت.

يمكنك أيضًا ضبط الصوت مستخدماً زر الصوت أو جهاز التحكم عن بعد.

الإرسال

(Cr)(f)(k) (([معرف الضبط])( )) ([بيانات]) (x)

[بيانات] الحد الأدنى: من 00 إلى الحد الأقصى: 64

\* تشير إلى "رسم خرائط البيانات الحقيقية".

إشعار

((f)) (([معرف الضبط])( )) (OK/NG)(OK)(x)

\* باستخدام مدخل PC، فإنه تحدد ما إذا كانت نسبة الطول إلى

العرض للشاشة 9:16 أو 3:4.

\* في DTV/HDMI 50 1080i / 60 هرتز، 50 720p / 60 هرتز / 60 هرتز،

وضع المكون (1080i، 1080p، 720p)، [مسح فقط] هو المتأرجح.

\* العرض بملء الشاشة مدعم في الوضع الرقمي والمتناهري وAV.

**قائمة إدارة المرجع**  
(حسب الطوارئ)

**بروتوكول الإرسال / الاستلام**  
(حسب الطوارئ)

**الإرسال**

(الأمر1)(الأمر2)([[معرف الضبط]])(())[[بيانات]](Cr)

(الأمر1): الأمر الأول للتحكم في التلفاز. (z أو k أو m أو x)

(الأمر2): الأمر الثاني للتحكم في التلفاز.

([[معرف الضبط]]): يمكنك ضبط التعريف لاختيار رقم المعرف للشاشة المطلوبة في القائمة الاختيارية. نطاق التعديل هو من 1 إلى 99. عند اختيار ضبط التعريف "0"، فإن كل الإعدادات المتصلة سيتم التحكم بها. وشار إلى ضبط التعريف على أنه عشري (من 1 إلى 99) في القائمة وعلى أنه سداسي عشري (من 0 × 0 إلى 63 × 0) في بروتوكول الإرسال/الاستلام.

([[بيانات]]): لاستلام بيانات الأوامر. لاستلام بيانات "FF" لقراءة حالات الأوامر.

(Cr): الإرجاع

كود "0D x 0" ASCII

( ) : كود ASCII "مساحة"(20 x 0)

\* تدعم بعض الطرز [[معرف الضبط]] حتى 1000 (سداسي عشري 3E8 x 0).



**شعار بالموافقة**

(الأمر2)([[معرف الضبط]])(OK)([[بيانات]])(x)

\* يقوم الجهاز بإرسال إشعار الموافقة (ACK) استناداً إلى هذا التنسيق عند تلقي البيانات العادي. وفي ذلك الوقت، إذا كانت البيانات في وضع قراءة البيانات، فإنه يشير إلى بيانات الحالات الحالية. وإذا كانت البيانات في وضع كتابة البيانات، فإنها تُعيد بيانات الكمبيوتر المحمول.

**شعار بحدوث خطأ**

(الأمر2)([[معرف الضبط]])(NG)([[بيانات]])(x)

\* يقوم الجهاز بإرسال إشعار بالاستلام (ACK) استناداً إلى هذا التنسيق عندما يستلم بيانات غير طبيعية من وظائف غير صالحة أو أخطاء بالاتصال.

([[بيانات]]): كود غير قانوني

الأمر	الأمر 1	الأمر 2	بيانات (ال السادس عشرى )
1 الطاقة	k	a	من 00 إلى 01
2 [عرض]	k	c	(راجع الصفحة 28)
3 كتم صوت الشاشة	k	d	(راجع الصفحة 28)
4 كتم الصوت	k	e	من 00 إلى 01
5 التحكم في الصوت	k	f	من 00 إلى 64
6 [تبين]	k	g	من 00 إلى 64
7 [سطوع]	k	h	من 00 إلى 64
8 [لون]	k	i	من 00 إلى 64
9 [درجة اللون]	k	j	من 00 إلى 64
10 [حدة]	k	k	من 00 إلى 32
11 تحديد OSD	k	l	من 00 إلى 01
12 وضع قفل الريموت	k	m	من 00 إلى 01
13 [إنزان]	k	t	من 00 إلى 64
14 [درجة حرارة اللون]	x	u	من 00 إلى 64
15 [ توفير الطاقة ]	j	q	(راجع الصفحة 30)
16 التبينة الذائية	j	u	01
17 [معدل]	j	v	(راجع الصفحة 31)
18 ضبط الأوامر	m	a	(راجع الصفحة 31)
19 برنامج [خطي] / [إضافي]	m	b	من 00 إلى 01
20 المفتاح	m	c	(راجع الصفحة 32)
21 تحكم [إضاءة خلفية]	m	g	من 00 إلى 64
22 اختصار المدخلات	x	b	(راجع الصفحة 32)
23 برنامج حجب/الغاء الحجب	m	d	(راجع الصفحة 33)
24 وضع تجاوز الفشل	m	i	(راجع الصفحة 33)
25 تحديد دخال تجاوز الفشل	m	j	(راجع الصفحة 33)

• أثناء عمليات USB مثل DivX أو EMF، فإن كل الأوامر باستثناء التشغيل (ka) والمفتاح (mc) لا يتم تنفيذها وتعامل على أنها NG.

## مقاييس الاتصال

- معدل الباود: 9600 بت في الثانية (الاستقبال/الإرسال المتزامن العالمي)
- طول البيانات: 8 بت
- النكافؤ: لا يوجد
- بت التوقف: 1 بت
- رمز الاتصال: كود ASCII
- استخدم كبل (عكسى) مقاطع.

## ضبط المعرف

- لرقم ضبط المعرف، انظر "رسم خرائط البيانات الحقيقة".  
نطاق التعديل هو من 1 إلى .99.  
• تدعم بعض الطرز [معرف الضبط] حتى 1000.

## ركوبينات RS-232C

ركوبينات 7-أسلاك  
(كبل RS-232C القياسي)

	التلفاز	الكمبيوتر
TXD	3	RXD
RXD	2	TXD
GND	5	GND
DSR	6	DTR
DTR	4	DSR
CTS	8	RTS
RTS	7	CTS

D-Sub 9    D-Sub 9




ركوبينات 3-أسلاك  
(غير قياسي)

	التلفاز	الكمبيوتر
TXD	3	RXD
RXD	2	TXD
GND	5	GND
DSR	6	DTR
DTR	4	DSR
CTS	8	RTS
RTS	7	CTS


D-Sub 9    D-Sub 9

## ضبط جهاز التحكم الخارجي

◀ النوع

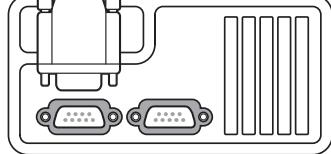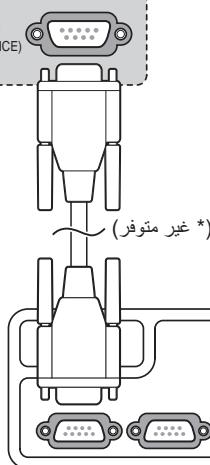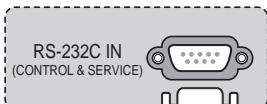

**نوع الموصى: D-Sub 9-سنتون ذكر**

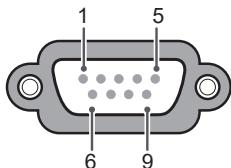

الرقم.	اسم السن
1	3.5 فولت
2	RXD (تلقى البيانات)
3	TXD (نقل البيانات)
4	مخرج IR من التلفاز
5	GND
6	لا يوجد اتصال
7	لا يوجد اتصال (5 فولت متوفّر في بعض النماذج)
8	لا يوجد اتصال
9	لا يوجد اتصال (12 فولت متوفّر في بعض النماذج)

## إعداد RS-232C

(حسب الطراز)


- قد تختلف الصورة المعروضة عن صورة التلفاز لديك.
- قم بتوصيل مقبس المدخل RS-232C (المنفذ التسلسلي) بجهاز التحكم الخارجي (مثل الكمبيوتر أو نظام تحكم A/V) للتحكم بوظائف المنتج الخارجية.

قم بتوصيل المنفذ التسلسلي لجهاز التحكم بمقبس RS-232C

الموجود في اللوحة الخلفية من المنتج.

إن كابلات اتصال RS-232C غير مرفقة مع المنتج.

◀ النوع A

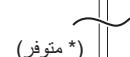

(\*) متوفّر



(\*) غير متوفر

# رموز IR

• هذه الوظيفة غير متوفرة في جميع الطرازات.

الوظيفة	الرمز (سداسي)	الوظيفة	الرمز (سداسي)
EXIT	5B	⊕ (الطاقة)	08
•	72	TIMER	OE
••	71	ENERGY SAVING 	95
•••	63	OLIVE ZOOM*	AF
••••	61	INPUT 	0B
TEXT	20	TV/RAD 	F0
T.OPT(T.Option)	21	مفاتيح الأرقام أزرار الحروف الأبجدية المسافة (—)	9-0 19-10
SUBTITLE	39	LIST	53
■	B1	Q.VIEW	1A
▶	B0	+ VOL	02
	BA	VOL —	03
◀	8F	SMART	7C
▶▶	8E	APP	B5
3D/*	DC	🔇 MUTE	09
DATA/*	9F	CH ⌈ PAGE ⌉	00
AD/*	91	⌄ CH ⌄ PAGE	01
ALARM/*	E8	GUIDE	AB
		PORTAL	0C
		INFO ⓘ	AA
		⌞	40
		⌞	41
		<	07
		>	06
		OK Ⓡ	44
		SETTINGS	43
		↶ (الرجوع)	28

## معلومات حول إشعار البرامج مفتوحة المصدر

قد تختلف التراخيص المدعومة وفقاً للطراز.



مصطلح HDMI و HDMI High-Definition و HDMI Multimedia Interface وشعار HDMI علامات تجارية أو علامات تجارية مسجلة لشركة HDMI Licensing Administrator, Inc. HDMI Licensing, Inc. هي الشركة المسؤولة عن توزيع HDMI. في الولايات المتحدة الأمريكية ودول أخرى.

للحصول على التعليمات البرمجية للمصدر ضمن GPL، LGPL، MPL، والحصول على التراخيص مفتوحة المصدر الأخرى التي لديها التزامات للكشف عن التعليمات البرمجية الخاصة بالمصدر، المصونة في هذا المنتج، والوصول إلى كل أحكام الترخيص المشار إليها، وإشعارات حقوق النشر وكل الوثائق ذات الصلة، يرجى زيارة <https://opensource.lge.com>.

ستوفر LG Electronics أيضاً التعليمات البرمجية المفتوحة المصدر على فرصة CD-ROM مقابل رسوم يغطي تكلفة الفيلم بهذا التوزيع (مثل تكلفة وسائل النقل والشحن والتسلیم) بناءً على طلب [opensource@lge.com](mailto:opensource@lge.com). يُرسل عبر البريد الإلكتروني إلى [opensource@lge.com](mailto:opensource@lge.com) أي شخص يتسلم هذه المعلومات لمدة ثلاثة سنوات بعد آخر عملية شحن لهذا المنتج.

تم التصنيع بمحظ ترخيص من معامل Dolby، Dolby Vision، Dolby Vision IQ، Dolby ورمز Dolby المزدوج جميعها علامات تجارية مسجلة لشركة Dolby Laboratories Licensing Corporation.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.

## تنسيقات الفيديو المدعومة

### تبهات حول تشغيل الفيديو

- فيديو ULTRA HD: 2160 x 4096، 2160 x 3840.
- قد لا يتم تشغيل بعض مقاطع فيديو ذات الترميز HEVC بخلاف المحتوى الذي تم توفيره بشكل رسمي من LG Electronics.
- يمكن دعم بعض الترميزات بعد ترقية البرنامج.

الامتداد	برنامج فك التشفير
.mkv .mp4 .ts	HEVC، H.264/AVC Dolby Digital AAC، Dolby Digital Plus
.avi	WMA Standard (WMA Speech/v1)

### الترجمات الخارجية المدعومة

ترجمة	التنسيق
ترجمة خارجية	*.srt، *.smi .sub (MicroDVD, SubViewer 1.0/2.0) .txt (TMPlayer) *.ssa，*.ass .psb (PowerDivX) .dcs (DLP Cinema)
الترجمة المضمونة	:(mkv) Matroska .Sub Station Alpha (SSA) .Advanced Sub Station Alpha (ASS) SRT نص موقوت:MP4

الامتداد	برنامج فك التشفير
.asf .wmv	ملف التعريف المتقدم VC-1 (باستثناء WMVA والرئيسية VC-1)
.avi	WMA Standard (WMA Speech/v1) (*GMC) Xvid Motion Jpeg，H.264/AVC MPEG-4 ·MPEG-1 Layer I, II ·MPEG-1 Layer III (MP3) ·LPCM ·Dolby Digital ADPCM
.mp4 .m4v .mov	MPEG-4، H.264/AVC AV1، HEVC ·Dolby Digital AAC، Dolby Digital Plus ·MPEG-1 Layer III (MP3) (*Dolby AC-4)
.3gp .3g2	MPEG-4، H.264/AVC AMR-WB، AMR-NB، AAC
.mkv	MPEG-4، MPEG-2 VP9، VP8، H.264/AVC AV1، HEVC ·Dolby Digital AAC، Dolby Digital Plus ·MPEG-1 Layer I, II ·PCM ·MPEG-1 Layer III (MP3)
.ts .trp .tp .mts	MPEG-2، H.264/AVC HEVC ·MPEG-1 Layer I, II ·MPEG-1 Layer III (MP3) ·Dolby Digital AAC، Dolby Digital Plus (*Dolby AC-4) ·PCM
.mpg .mpeg .dat	MPEG-2، MPEG-1 ·MPEG-1 Layer I, II ·MPEG-1 Layer III (MP3)
.vob	MPEG-2، MPEG-1 ·Dolby Digital ·MPEG-1 Layer I, II ·DVD-LPCM

(1) Dolby AC-4: لا تتوفر هذه الميزة إلا في بعض الطرازات.

## الوضع المدعوم AV

(تبعاً للبلد)

المعلومات	العنصر	تنسيق الملف
32 كيلوبت في الثانية - 320 كيلوبت في الثانية	معدل البت	.mp3
16 كيلو هرتز - 48 كيلو هرتز	تردد العينة	
MPEG2, MPEG1	تدعم	
مونو، إستريو	القنوات	
-	معدل البت	
8 كيلو هرتز - 96 كيلو هرتز	تردد العينة	
PCM	تدعم	
مونو، إستريو	القنوات	
64 كيلوبت في الثانية - 320 كيلوبت في الثانية	معدل البت	
8 كيلو هرتز - 48 كيلو هرتز	تردد العينة	
Vorbis	تدعم	.ogg
مونو، إستريو	القنوات	
128 كيلوبت في الثانية - 320 كيلوبت في الثانية	معدل البت	
8 كيلو هرتز - 48 كيلو هرتز	تردد العينة	
WMA	تدعم	
تصل إلى 6 قنوات	القنوات	.wma
-	معدل البت	
8 كيلو هرتز - 96 كيلو هرتز	تردد العينة	
FLAC	تدعم	.flac
مونو، إستريو	القنوات	

الدقة	التردد الرأسى (هرتز)	التردد الأفقي (كيلو هرتز)	الملف
59.94		15.73	480i x 720
60		15.75	
50		15.625	576i x 720

## تنسيقات الصور المدعومة

الملف	التنسيق	الدقة
.jpeg, .jpg, .jpe	JPEG	الحد الأدنى: الحد الأقصى (العرض) 64 x 64 (الارتفاع) الحد الأقصى (النوع العادي): 8640 x 15360 (العرض) (الارتفاع) الحد الأقصى (النوع التقديمي): 1440 (العرض) x 1920 (الارتفاع)
.png	PNG	الحد الأدنى: الحد الأقصى: 5760 (العرض) x 5760 (الارتفاع)
.bmp	BMP	الحد الأدنى: الحد الأقصى: 1920 (العرض) x 1080 (الارتفاع)

قد يختلف عدد البرامج المدعومة حسب تردد العينة.

## الوضع المدعوم HDMI-PC

- صوت الحاسوب الشخصي PC غير مدعوم.
- استخدم 1 HDMI IN لوضع الكمبيوتر. (حسب الطراز)

التردد الرأسى (هرتز)	التردد الأفقي (كيلوهرتز)	الدقة
70.09	31.46	350 x 640
70.08	31.46	400 x 720
59.94	31.46	480 x 640
60.31	37.87	600 x 800
60	48.36	768 x 1024
60.01	47.71	768 x 1360
60.05	54.34	864 x 1152
60.02	63.98	1024 x 1280
60	67.5	
119.88	134.86	1080 x 1920
120	135	
59.95	88.78	1440 x 2560
23.97	53.94	
24	54	
25	56.25	
29.97	67.43	
30	67.5	2160 x 3840
50	112.5	
59.94	134.86	
60	135	
23.97	53.94	
24	54	
25	56.25	
29.97	67.43	
30	67.5	2160 x 4096
50	112.5	
59.94	134.86	
60	135	

## الوضع المدعوم HDMI-DTV

التردد الرأسى (هرتز)	التردد الأفقي (كيلوهرتز)	الدقة
59.94	31.46	480p x 640
60	31.5	
59.94	31.46	480p x 720
60	31.5	
50	31.25	576p x 720
59.94	44.95	
60	45	720p x 1280
50	37.5	
50	28.12	
59.94	33.71	1080i x 1920
60	33.75	
23.97	26.97	
24	27	
29.97	33.71	
30	33.75	1080p x 1920
50	56.25	
59.94	67.43	
60	67.5	
100	112.5	
119.88	134.86	1080p x 1920
120	135	
23.97	53.94	
24	54	
25	56.25	
29.97	67.43	
30	67.5	2160p x 3840
50	112.5	
59.94	134.86	
60	135	
23.97	53.94	
24	54	
25	56.25	
29.97	67.43	
30	67.5	2160p x 4096
50	112.5	
59.94	134.86	
60	135	

مواصفات الوحدة اللاسلكية (LGSBWAC95)	
شبكة LAN اللاسلكية (IEEE 802.11a/b/g/n/ac)	
طاقة الإخراج (الحد الأقصى)	نطاق التردد
19 ديسيل ملي واط	2483.5 ~ 2400 ميجاهرتز
18 ديسيل ملي واط	5725 ~ 5150 ميجاهرتز
13.5 ديسيل ملي واط	5850 ~ 5725 ميجاهرتز
Bluetooth تقنية	
طاقة الإخراج (الحد الأقصى)	نطاق التردد
9 ديسيل ملي واط	2483.5 ~ 2400 ميجاهرتز
يمكن لقوافل النطاق أن تتغير حسب الدولة، فلا يمكن للمستخدم تغيير تردد التشغيل أو تعديله. تم تكوين المنتج لجدول التردد الإقليمي. لا اعتبارات خاصة بالمستخدم، يجب تركيب الجهاز وتشغيله على مسافة 20 سم على الأقل بين الجهاز والجسم.	

( فقط عمان )

OMAN - TRA  
D172249  
TRA/TA-R/9674/20

ظروف بيئية التشغيل	
من 0 إلى 40 درجة مئوية	درجة حرارة التشغيل
أقل من 80 %	نسبة رطوبة التشغيل
من -20- إلى 60 درجة مئوية	درجة حرارة التخزين
أقل من 85 %	نسبة الرطوبة في مكان التخزين

- تحدد معلومات الطاقة المقلمة مع المنتج وفقاً للوائح البلد. (وفقاً للبلد)  
- يُقياس استهلاك الطاقة تبعاً للجنة الكهربائية التقنية الدولية (IEC 62087).
- وضع صورة "عرض الصفحة الرئيسية" الموصى به هو وضع الصورة الافتراضي الأولى.
- قد يختلف استهلاك الطاقة الفعلي تبعاً لعوامل مثل نوع محتوى الفيديو المعروض وإعدادات التلفاز.

المواصفات

(تَبَعًا لِلْبَلَد)

مواصفات البث			
النطاق الناظري	تلفزيون رقمي		
PAL B/B, G/D/K, I SECAM B/G, D/K <sup>(3)</sup> NTSC-M	<sup>(1)</sup> DVB-T/T2 <sup>(2)</sup> DVB-S/S2 <sup>(2)</sup> DVB-C		نظام التلفاز
	<sup>(1)</sup> DVB-T/T2  : VHF III 862 ~ 46 ميجاهرتز : UHF IV 606 ~ 470 ميجاهرتز : UHF V 862 ~ 606 ميجاهرتز : S Band II 300 ~ 230 ميجاهرتز : S Band III 470 ~ 300 ميجاهرتز	<sup>(2)</sup> DVB-C  ~ 46 890 ميجاهرتز	<sup>(2)</sup> DVB-S/S2  ~ 950 2150 ميجاهرتز
	3000	6000	أقصى عدد من البرامج قابلة للتخزين
	75 أوم		مقاومة الهوائي الخارجي
	5.0 x 55.0 x 100.0 مم		x CI (العرض x الارتفاع x العمق)

- (1) **الطرازات التي تدعم DVB-T2 فقط.** (رغم أن ميزة DVB-T2 لا تتطابق في الفلبين).
  - (2) **الطرازات التي تدعم DVB-C/S2 فقط.**
  - (3) **الطرازات التي تدعم NTSC-M فقط.**

خدمة ما بعد البيع (مصر فقط)

العمر الافتراضي : ٣ سنوات

تلزيم شركة LG بتوفير جميع قطع الغيار الخاصة بهذه الأجهزة خلال فترة العمر الافتراضي.


## عرض غير طبيعي

- إذا كان ملمس المنتج بارداً، فقد تنشأ "ومضة" صغيرة عند تشغيله. يُعد ذلك طبيعياً، لا يوجد خطأ في المنتج.
- ثُمَّ هذه اللوحة متقدماً يحتوي على الملايين من وحدات البكسل، قد ترى نقاطاً سوداء صغيرة وأو نقاطاً ملونة بألوان زاهية (أحمر أو أزرق أو أخضر) على جسم جزء واحد في المليون على الشاشة. لا يشير ذلك إلى خلل ولا يؤثر في أداء المنتج ودقةه. تحدث هذه الظاهرة أيضاً مع المنتجات الغير ولا تخضع لاستبدال أو استعادة الأموال.
- قد يختلف لون اللوحة وبريقها حسب الموقع الذي تنظر منه (يسار/يمين/أعلى/أسفل).
- تحت هذه الظاهرة تبعاً لخصائص اللوحة. لا تتعلق بأداء المنتج، ولا تُعد خللاً.
- قد يؤدي عرض صورة ثابتة لفترة طويلة إلى التصاق الصورة. تجنب عرض صورة ثابتة على شاشة التلفاز لمدة طويلة.

## الصوت الصادر

- صوت "كبير": يعود سبب الصوت الصادر عند مشاهدة التلفاز أو إيقاف تشغيله إلى التقclus الحراري للبلاستيك بفعل الحرارة والرطوبة. هذا الصوت شائع في المنتجات التي يكون فيها تغيير الشكل بفعل الحرارة ضروريًا.
- ثنين الدائرة الكهربائية/طنين الشاشة: يصدر صوت خافت من دائرة التبديل ذات السرعة العالية، والتي تند المنتج بقوة تيار عالية لتشغيله. ويختلف ذلك بحسب المنتج. هذا الصوت المولود لا يؤثر في أداء المنتج ودقةه.

- عند تنظيف المنتج، احرص على لا تسمح بدخول أي سائل أو أجسام غريبة إلى الفتحة الموجودة بين الجزء العلوي أو الأسفل أو الأيسر من الشاشة ولوحة التوجيه.  
(حسب المطرار)

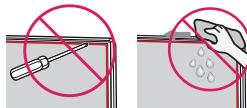

- تأكَّد من إزالة أي ماء أو منظف زائد من قطعة القماش.
- لا ترش الماء أو المنظف مباشرةً على شاشة التلفاز.
- احرص على رش قدر كافٍ فحسب من الماء أو المنظف على قطعة القماش الجافة لمسح الشاشة.

## استكشاف الأخطاء وإصلاحها

- يمكن تحديث إصدارات البرنامج لتحسين الأداء.
- يحتاج العميل لضمان توافق الجهاز الخاص به مع برنامج LGE.
- إذا لزم الأمر، يرجى التشاور مع LGE وتحميل نسخة البرنامج المنقحة وفقاً للتوجيهات المقدمة من قبل LGE.
- يتعذر التحكم في التلفاز باستخدام الريموت.
- أفضل مستشعر الريموت على المنتج وحاول مجدداً.
- تحقق من عدم وجود أي عائق بين المنتج والريموت.
- تحقق مما إذا كانت البطاريات لا تزال تعمل وما إذا كانت مثبتة على نحو صحيح (+ إلى +، - إلى -).
- لا تعرض أي صورة ولا يصدر أي صوت.
- تحقق مما إذا كان المنتج يعمل.
- تحقق مما إذا كان سلك الطاقة متصلًا بمقبس الحائط.
- تحقق مما إذا كان هناك مشكلة في مقبس الحائط من خلال توصيل منتجات أخرى.
- يتوقف تشغيل التلفاز فجأة.
- تحقق من إعدادات التحكم في الطاقة. قد يقطع الإمداد بالطاقة.
- تحقق من عدم تشطيط خاصية الغلق التلقائي في الإعدادات المتعلقة بالوقت.
- في حالة عدم وجود إشارة أثناء تشغيل الجهاز، سيتوقف تشغيل الجهاز تلقائياً بعد مرور 15 دقيقة دون وجود إشارة.
- عند الاتصال بالكمبيوتر الشخصي (HDMI)، لا يُكشف عن أي إشارة.
- شغيل التلفاز أو أوقف تشغيله باستخدام الريموت.
- أعد توصيل كابل HDMI.
- أعد تشغيل الكمبيوتر الشخصي مع تشغيل التلفاز.

- لا تخلط بين البطاريات الجديدة والبطاريات القديمة. لأن هذا قد يؤدي إلى ارتفاع حرارة البطاريات وحدوث تسرب بها.
- قد يتسبب عدم التطابق مع أقطاب البطارية الصحيحة بحدوث انفجار أو تسرب، مما يؤدي إلى شغوب حريق أو حدوث إصابة جسدية أو تلوث البيئة المحيطة.
- يستخدم هذا الجهاز بطاريات. ومن الممكن أن تكون هناك قوانين تنظيمية في م المجتمع تلزمك بالتخليص من هذه البطاريات بشكل صحيح بسبب الاعتبارات البيئية. يرجى الاتصال بالسلطات المحلية للحصول على معلومات حول طريقة التخلص منها أو كافية إعادة تدويرها.
- يجب عدم تعريض بطاريات المنتج الخارجية والداخلية لدرجة حرارة زائدة مثل التعرض لأشعة الشمس المباشرة أو النيران أو ما شابه ذلك.
- في أجهزة التلفاز التناهري وبعض البلدان، قد لا تعمل أزرار الريموت.



## استخدام الريموت

- \* لاستخدام الزر، اضغط باستمرار لأكثر من 3 ثوانٍ.
- \*\* لاستخدام الزر، اضغط مطولاً لأكثر من 5 ثوانٍ.  
(بدون مواجهة التلفاز)

**L** (التشغيل) لتشغيل التلفاز أو إيقاف تشغيله.  
**TIMER** لإيقاف تشغيل التلفاز بعد فترة محددة من الوقت.  
**ECO ENERGY SAVING** يضبط مستوى سطوع الشاشة لتقليل استهلاك الطاقة.


- LIVE ZOOM\*** هذه الوظيفة غير مدعومة.  
**INPUT** لتبديل مصدر الإدخال.  
**TV/RAD** لتحديد برامج الراديو والتلفاز والتلفاز الرقمي.  
 أزرار الأرقام لإدخال الأرقام.  
 أزرار الحروف الأبجدية لإدخال الحروف.  
**LIST** للوصول إلى قائمة البرامج المحفوظة.  
**L (المسافة)** لإدراج مساحة فارغة باستخدام لوحة المفاتيح على الشاشة.

- Q.VIEW** للعودة إلى البرنامج المعروض مسبقاً.  
**+ VOL —** لضبط مستوى الصوت.  
**SMART** للوصول إلى قائمة الصفحة الرئيسية.  
**\* SMART** لعرض السجل السابق.  
**APP** لعرض السجل السابق.  
**MUTE** لكتم جميع الأصوات.  
**\* MUTE** للوصول إلى قائمة [إمكانية الوصول].  
**Multi IR** لضبط وظيفة IR.  
**CH ▲** للتتمرير عبر البرامج المحفوظة.  
**PAGE ▲** للانتقال إلى الشاشة السابقة أو التالية.  
**GUIDE** لعرض دليل البرنامج.  
**PORTAL** لعرض وإزالة قائمة الفدق التفاعلي.  
**① INFO** لعرض معلومات عن البرنامج الحالي والشاشة.  
 أزرار التنقل (**الأعلى/الأسفل/اليسار/اليمين**) للتتمرير بين القوائم أو الخيارات.

- ④ OK** لتحديد القوائم أو الخيارات وتتأكد إدخالك.  
**SETTINGS** للوصول إلى القوائم الرئيسية.  
**⑤ (الرجوع)** للعودة إلى المستوى السابق.  
**EXIT** لمسح شاشات العرض الظاهرة على الشاشة والعودة إلى عرض التلفاز.  
 تتيح هذه الأزرار الوصول إلى الوظائف المميزة في بعض القوائم.  
 أزرار عرض المعلومات (**TEXT, T.OPT**) تُستخدم هذه الأزرار لعرض المعلومات.  
**SUBTITLE** لاستدعاء ترجمتك المفضلة في الوضع الرقمي.  
 أزرار التحكم (**◀, ▶, ▴, △**) للتحكم في محتويات الوسائط.  
**3D/\*** هذه الوظيفة غير مدعومة.  
**DATA/\*** تحديد مصدر قائمة MHP في التلفاز.  
**AD/\*** سيتم تعيين وظيفة الأوصاف الصوتية.  
**ALARM/\*** تشغيل وظيفة المتنبه.

تستند الأوصاف المذكورة في هذا الدليل إلى الأزرار الموجودة في الريموت. يُرجى قراءة هذا الدليل بعناية واستخدام التلفاز استخداماً صحيحاً.

لاستبدال البطاريات، افتح غطاء البطارية، واستبدل البطاريات (5) فولت من نوع AAA ( التي تتضمن فيها الأقطاب + و - مع التسمية الموجودة داخل حجرة البطاريات وأغلق غطاء البطارية. تأكّد من توجيه الريموت إلى مستشعر الريموت في التلفاز.

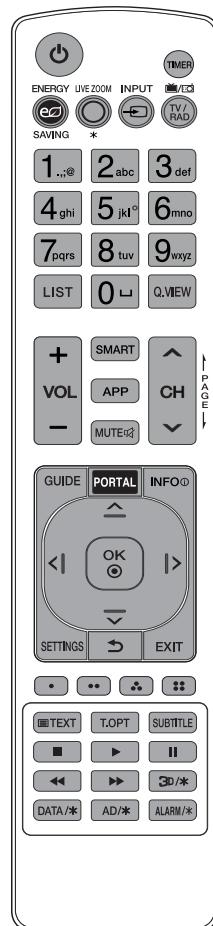


(قد لا تتوفر بعض الأزرار والخدمات بحسب الطرازات أو المناطق.)

## الوظائف الأساسية

### ضبط زاوية التلفاز لتناسب مع طريقة العرض

(حسب الطراز)  
أدر الجهاز 20 درجة إلى اليسار أو اليمين وضبط زاوية التلفاز لتناسب رؤيتك.

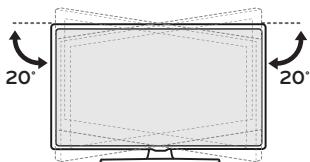

- عند ضبط زاوية المنتج، راقب أصابعك.
- قد تحدث إصابة شخصية إذا تم القرص على الأيدي أو الأصابع، إذا تم إمالة المنتج بشكل كبير فيمكن أن يسقط متسبياً في ضرر أو إصابة.

	التشغيل (ضغط) إيقاف التشغيل <sup>(1)</sup> (ضغط مع الاستمرار) التحكم في القائمة (ضغط <sup>(2)</sup> ) الاختيار من القائمة (ضغط مع الاستمرار <sup>(3)</sup> )
--	---

(1) ستعلق جميع التطبيقات قيد التشغيل.

(2) يمكنك الوصول إلى القائمة وضبطها عن طريق الضغط على الزر عندما يكون التلفاز قيد التشغيل.

(3) يمكنك استخدام الوظيفة عندما تصل إلى عنصر التحكم في القائمة.

### ضبط القائمة

(حسب الطراز)

عند تشغيل التلفاز ، اضغط على زر مرة واحدة. يمكنك ضبط العناصر في القائمة باستخدام الزر.

	لإيقاف التشغيل.
	لتغيير مصدر الإدخال.
	للتمرير عبر البرامج المحفوظة.
	لضبط مستوى الصوت.

## الشبكة

(حسب الطراز)

الاتصال بالشبكة السلكية

## استخدام الزر


(حسب الطراز)

يمكنك تشغيل وتأنف التلفاز ببساطة، باستخدام الزر.



يمكن لهذا التلفاز أن يتم توصيله بخادم Pro:Centric عن طريق منفذ LAN. بعد إجراء اتصال فعلي، فإن التلفاز يحتاج إلى إعداد

للاتصال بالشبكة. قم بتوصيل منفذ LAN بالمودم أو جهاز التوجيه من خادم Pro:Centric إلى منفذ LAN الموجود في التلفاز.

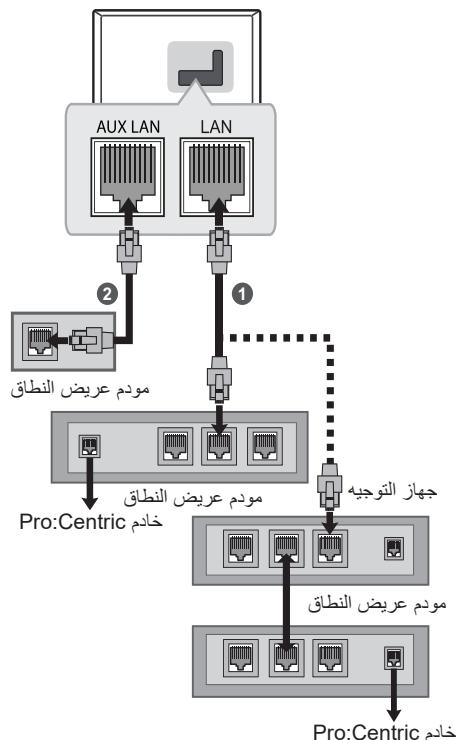

قم بتوصيل منفذ LAN بالمودم أو جهاز التوجيه إلى منفذ LAN الموجود في التلفاز. ①

قم بتوصيل منفذ LAN الموجود في الحاسوب الشخصي بمنفذ AUX LAN الموجود في التلفاز. (حسب الطراز) ②

- لا تقم بتوصيل كابل جوال ذو وحدات بمنفذ LAN المحلي. !  
• وبما أن هناك طرق مختلفة للاتصال، فيرجى اتباع مواصفات متعهد الاتصالات الهاتفية الخاص بك أو مزود خدمة الإنترنت.

## مكبرات الصوت الخارجية


(حسب الطراز)

### طريقة مخرج التحكم في الصوت



(حسب الطراز)

- مواصفات الكابل.

يتصل كل سن أعلى/أسفل  
لـ CPU بمقاومة كهربائي  
للسحب على التوالي.

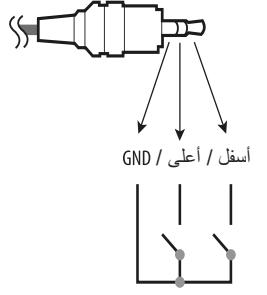

تكتشيف CPU الانتقال من  
فولت إلى المستوى  
3.3 لـ GND  
لـ التحكم في الصوت.

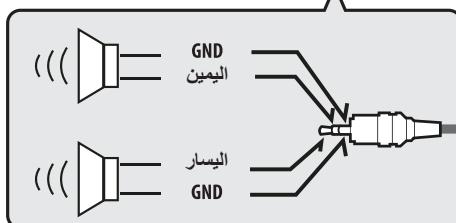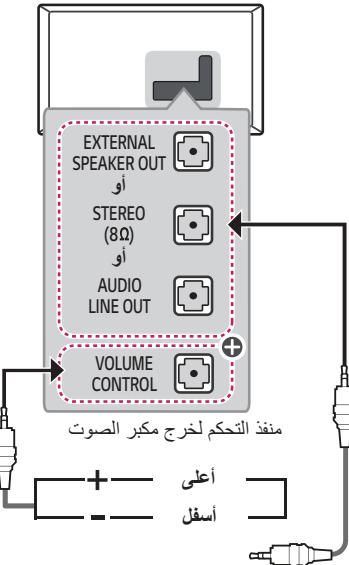

● بحسب الطراز

! • استخدم فقط مع مقبس ستريو 3.5 مم ذو 3 أقطاب.

! • لا توصـل سماعـات الرـأـسـ أو سـمـاعـاتـ الأـذـنـ بـالـمـنـفـذـ لـ تـوصـيلـ مـكـبـرـ صـوتـ خـارـجيـ.

## وصلات أخرى

### الأجهزة الخارجية

- الأجهزة الخارجية المتاحة هي: مشغلات Blu-ray، وأجهزة الاستقبال عالية الدقة، ومشغلات أقراص الفيديو الرقمية (DVD)، وأجهزة VCR، والأنظمة الصوتية، وأجهزة تخزين USB، وأجهزة الكمبيوتر الشخصية، وأجهزة الألعاب، وأجهزة خارجية أخرى.
- قد يختلف توسيل الجهاز الخارجي عن هذا الطراز.
  - وصل الأجهزة الخارجية بالتلفاز بعض النظر عن ترتيب المنافذ في التلفاز.
  - رائع الدليل المرفق مع الجهاز الخارجي للاطلاع على تعليمات التشغيل.
  - إذا وصلت جهاز ألعاب بالتلفاز، فاستخدم الكابل المرفق مع جهاز الألعاب.
  - في وضعية الكمبيوتر، قد يحدث تشويش ذو صلة بالدقة أو النمط الرأسى أو التباين أو السطوع. إذا حدث تشويش، فغير إخراج الكمبيوتر إلى دقة أخرى أو غير معدل الجديد إلى معدل آخر أو اضبط السطوع والتباين على قائمة "الصورة" إلى أن تصبح الصورة واضحة.
  - في وضع الكمبيوتر، قد لا تعمل بعض إعدادات الدقة بشكل صحيح استناداً إلى بطاقة الرسومات.
  - في حالة تشغيل محتوى ULTRA HD على جهاز الكمبيوتر الخاص بك، فقد يصبح الفيديو أو الصوت مشوشًا على فترات متقطعة حسب أداء جهاز الكمبيوتر لديك. (حسب الطراز)
  - عند الاتصال عبر شبكة LAN سلكية، يوصى باستخدام كبل CAT 7 (عند تزويد الجهاز بمنفذ LAN فقط).

وصل تلفازك بأجهزة خارجية، للحصول على أفضل جودة للصور والملفات الصوتية، ووصل الجهاز الخارجي والتلفاز بقابل HDMI. لا تتوفر بعض الكابلات المنفصلة.

### HDMI

- تنسيق صوت HDMI المدعوم : (حسب الطراز)  
Dolby Digital Plus / Dolby Digital 32 كيلو هرتز / 44.1 كيلو هرتز / 48 كيلو هرتز،  
PCM 32 كيلو هرتز / 44.1 كيلو هرتز / 48 كيلو هرتز / 96 كيلو هرتز / 192 كيلو هرتز
- ← [صورة] ← [إعدادات إضافية] ← **SETTINGS** .  
[HDMI ULTRA HD Deep Colour]

تشغيل	معدل الإطار (هرتز)	الدقة
8 بت	4:4:4	
8/10/12 بت	2:2:4	2160p x 3840
10/12 بت	0:2:4	2160p x 4096
إيقاف		
8 بت	0:2:4	

إذا كان الجهاز المتصل بمنفذ الإنبار يدعم ULTRA HD Deep Colour أيضاً، فقد تُصبح الصورة لديك أوضح، ولكن إذا لم يدعمه الجهاز فقد لا يعمل جيداً. في تلك الحالة، قم بتغيير إعداد [HDMI ULTRA HD Deep Colour] في التلفاز إلى وضع إيقاف التشغيل.

### USB

قد لا تعمل بعض موزعات USB. إذا لم يتم اكتشاف جهاز المتصل عبر موزع USB، فقم بتوصيله بمنفذ USB على التلفاز مباشرةً.

- استخدم منفذ 1 USB عند الاتصال بكاميرا ويب. قد لا يدعم USB 2 كاميرات ويب معاييرها. (حسب الطراز)
- يوصى باستخدام موزع USB أو قرص USB HDD مع مصدر تزويذ طاقة. (إذا كانت الطاقة المزودة غير كافية، فقد لا يتم اكتشاف جهاز تخزين USB بشكل صحيح).
- يوصى باستخدام قرص هارد USB ثابت خارجي ذي فولتنية مقدرة بـ 5 فولت أو أقل ونبار مقدر بـ 500 مللي أمبير أو أقل.

## الوصلات

- عند تركيب حامل التثبيت على الحافظ، يوصى بتغطية فتحة الحامل باستخدام شريط لاصق، لمنع دخول الغبار والحشرات.  
(حسب الطراز)

وصل الأجهزة الخارجية المتنوعة بالتلفاز وبديل أوضاع الإدخال لتحديد جهاز خارجي، للحصول على مزيد من المعلومات عن الاتصال بالجهاز الخارجي، راجع الدليل المرفق مع كل جهاز.

### الهوائي/الكابل

وصل التلفاز بمقبس هوائي على الحافظ باستخدام كابل تردد راديو (ي مقاومة قدرها 75 أوم).

- استخدم مجذى الإشارة لاستخدام أكثر من جهازي تلفاز.
- إذا كانت جودة الصورة رديئة، فثبت مكبر الإشارة بشكل صحيح لتحسين جودة الصورة.
- إذا كانت جودة الصورة رديئة مع وجود هوائي متصل، فحاول إعادة توجيه هوائي في الاتجاه الصحيح.
- لا يتوفّر كابل هوائي ومحوّل.
- بالنسبة إلى الموقع غير المدعوم من بث ULTRA HD، فلا يمكن لهذا التلفاز استقبال بث ULTRA HD مباشرةً. (حسب الطراز)


### طبق القمر الصناعي

وصل التلفاز بطبق القمر الصناعي ومقبس القمر الصناعي باستخدام كابل تردد راديو (ي مقاومة قدرها 75 أوم). (حسب الطراز)


### وحدة CI

عرض الخدمات المشفرة (المدفوعة) في وضع التلفاز الرقمي.  
(حسب الطراز)

- تحقق من إدخال وحدة CI في COMMON INTERFACE بالاتجاه الصحيح. فقد يؤدي عدم إدخال الوحدة بالشكل الصحيح إلى إلحاق ضرر بالتلفاز وبـCOMMON INTERFACE.
- إذا لم يتم التلفاز بعرض أي ملف فيديو أو صوت عندما يكون CI+ CAM متصل، يرجى الاتصال بمشغل خدمة نظام البث الأرضي/الكابل/القمر الصناعي.

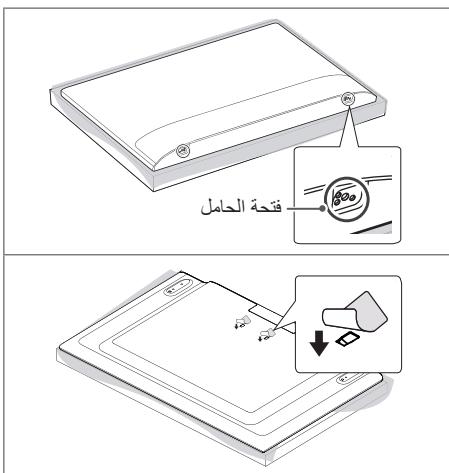


## الثبيت على الحائط

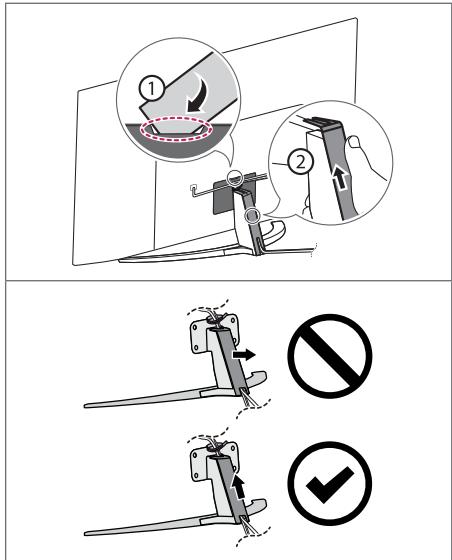

(حسب الطراز)

- لا تستخدم أداة حادة عندما تفصل غطاء الكابل. فقد يسبب ذلك ضرراً بالكابل أو بالهيكل. كما قد يسبب ضرراً شخصياً. (حسب الطراز)

تُنصح بحمل التثبيت الاختياري على الحائط الموجود في الجزء الخلفي من التلفاز بعناية وثبت حامل التثبيت على حائط صلب في اتجاه عمودي على الأرضية. عندما تثبت التلفاز على مواد البناء الأخرى، يُرجى الاتصال بفني مؤهل. تُوصي LG بأن يقوم فني تركيب حامل التثبيت على الحائط بالثبيت على الحائط. تُوصي LG ب باستخدام حامل التثبيت على الكابلات المتصلة. وفي حالة عدم استخدام حامل التثبيت على الحائط من LG، يُرجى استخدام حامل التثبيت على الحائط في المكان الذي يكون فيه الجهاز أمّا تماماً على الحائط مع وجود مساحة كافية تتبع الاتصال بالأجهزة الخارجية. يُنصح بتوصيل جميع الكابلات قبل تركيب أدوات التثبيت المفكرة على الحائط.

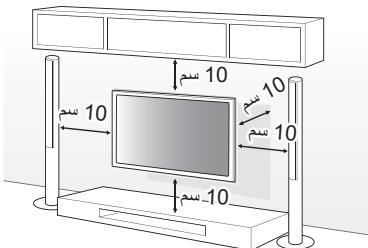


- أزل الحامل قبل تركيب التلفاز على أداة التثبيت على الحائط من خلال جعل أداة التعليق بالحامل في الاتجاه المعاكسي. (حسب الطراز)
- لمزيد من المعلومات حول البراغي وحامل التثبيت على الحائط، يمكنك الرجوع إلى قسم "الشراء المنفصل".
- إذا كنت تنوی تثبيت المنتج على حائط، فثبت واجهة التثبيت المطابقة لمعايير VESA (أجزاء اختيارية) على الجهة الخلفية للمنتج. عند تركيب جهاز التلفاز لاستخدام حامل التثبيت على الحائط (أجزاء اختيارية)، تبّه جيداً حتى لا يسقط.
- عند تثبيت التلفاز على الحائط، تأكد من عدم تركيب التلفاز بطريقة تكون فيها كابلات التشغيل والإشارة معلقة على الجهة الخلفية من التلفاز.
- لا تثبت هذا المنتج على حائط في حال وجود احتمال تعريضه للزيت أو رذاذ الزيت. فقد يلحق هذا ضرراً بالمنتج وسيسبب سقوطه.

## استخدام نظام الأمان كنسينجتون


(حسب الطراز)

يقع موصول نظام الأمان كنسينجتون في الجزء الخلفي من التلفاز. للحصول على مزيد من المعلومات عن التثبيت والاستخدام، راجع الدليل المرفق مع نظام أمان كنسينجتون أو تفضل بزيارة <http://www.kensington.com>. قم بتنصيب قبل نظام الأمان كنسينجتون بين التلفاز والطاولة.

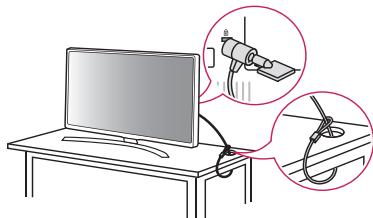

(حسب الطراز)

## تثبيت التلفاز على جدار

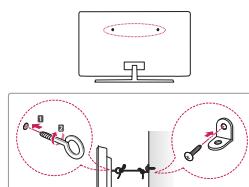

(حسب الطراز)

**1** أدخل المسامير ذات العروة أو قوسى التلفاز والمسامير في جهة التلفاز الخلفية وقم بربطها بإحكام.

أول المسامير التي تم إدخالها في موضع المسامير ذات العروة أو لا في حالة توفرها.

**2** ثنت على الحاطن قوسى التثبيت على الحاطن باستخدام المسامير. طارق موضع قوس التثبيت على الحاطن مع المسامير ذات العروة في جهة التلفاز الخلفية.

**3** قم بتنصيب المسامير ذات العروة وقوسي التثبيت على الحاطن بإحكام بواسطة حبل قوي. تأكيد من المحافظة على الحبل في وضع آمن مع السطح المستوي.

استخدم دعامة أو خزانة قوية وكبيرة بشكل كافٍ لتحمل جهاز التلفاز بشكل آمن.


الحاوامل والمسامير والحبال غير مرفقة. يمكنك الحصول على الملحقات الإضافية من الوكيل المحلي.

## تثبيت التلفاز على مكتب

(حسب الطراز)


يجب تثبيت التلفاز على مكتب بحيث لا يمكن سحبه إلى اتجاه الأمام أو الخلف، فقد يؤدي ذلك إلى حدوث إصابة أو تلف المنتج.

### A النوع

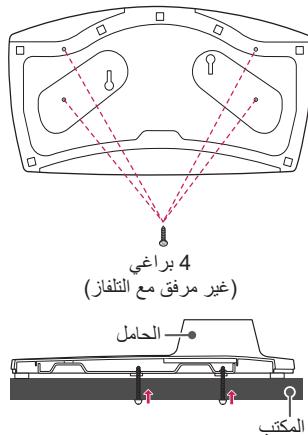


• البرغي: L x M5 (\*: عمق الطاولة + 8 مم)  
مثال: عمق الطاولة: 15 مم، برغي: L25 x M5

### B النوع

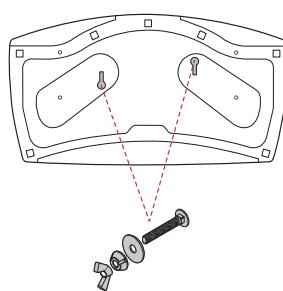

2 براغي لتنبيث الحامل،  
2 حلقة لتنبيث الحامل،  
2 صمولة لتنبيث الحامل  
(مرفق مع التلفاز)

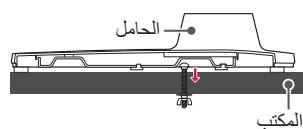

- إذا لم يتم وضع التلفاز في موضع ثابت بشكل كافٍ، فيمكن لهذا أن يشكل خطراً حيث يصبح التلفاز معرضاً للسقوط. يمكن تجنب حوث العيد من الإصابات، خصوصاً للأطفال من خلال اتخاذ إجراءات بسيطة مثل:

- استخدام حزائن أو حاملات توصي بها الجهة المصنعة للتأشير.

- استخدام قطع الأثاث التي تدعم التلفاز بشكل أمن فقط.

- الحرص على وضع التلفاز بموضع لا يتتجاوز طرف قطعة الأثاث الداعمة.

- عدم وضع التلفاز على قطع أثاث طويلة (على سبيل المثال، خزانة أو خزانة كتب) من دون تثبيت الأثاث والتأشير على دعامة مناسبة.

- عدم وضع التلفاز على قطعة قماش أو مواد أخرى تم وضعها بين التلفاز وقطعة الأثاث الداعمة.

- توعية الأطفال حول مخاطر تسليق قطع الأثاث اللوصول إلى التلفاز وأدوات التحكم الخاصة به.


- تجنب لمس سطح الشاشة في كل وقت، إذ قد يؤدي ذلك إلى إلحاق الضرر بها.
- لا تحمل التلفاز عن طريق الإمساك بحامل الكابل، إذ يمكن لهذه العوامل أن تكسر، ومن ثم قد يتسبب هذا في حدوث إصابات وإلحاق الضرر بالتأشير.

• عند توصيل الحامل بالتأشير، وجّه الشاشة إلى الأسفل وضعها على طاولة مسطحة بمقاييس ناعم أو سطح مستوي لحمايتها من الخدوش. (حسب الطراز)

## الثبتت على الطاولة

(حسب الطراز)

- 1 ارفع التلفاز وأملأ إلى الوضع المستقيم على الطاولة.
- أبي مسافة 10 سم (على الأقل) من الحائط للتهوية المناسبة.

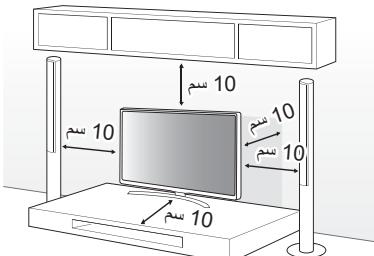

(حسب الطراز)

## 2 قم بتوصيل سلك الطاقة بمصدر الطاقة في الحالط.

- لا تضع مواد غريبة (زيوت وشحوم وما إلى ذلك) على البراغي عند تركيب المنتج. (فقد يلحق ذلك الضرر بالمنتج)

• في حالة تركيب التلفاز على حامل، ستحتاج إلى القيام ببعض الإجراءات لنفادي سقوط المنتج، وإن فقد يسقط المنتج مما قد يتسبب في حدوث إصابة.


• لا تستخدم أي مواد غير معتمدة لضممان السلامة وطول العمر الافتراضي للمنتج.

• لا يعطي الضمان أي أضرار أو إصابات تنتج عن استخدام مواد غير معتمدة.

• احرص على إدخال البراغي بشكل صحيح واربطها بإحكام. (في حال عدم ربطها بإحكام بشكل كافٍ، قد يميل التلفاز نحو الأمام بعد تثبيته). لا تستخدم القرة المفرطة لربط البراغي وإن فقد يؤدي ذلك إلى إلحاق ضرر بالبراغي وارتخائه.

## قوس التثبيت على الحائط


تأكد من استخدام برااغي وحامل تثبيت على الحائط التي توافق معايير VESA. يوفر الجدول التالي وصفاً للأبعاد القياسية لمجموعة قوس التثبيت على الحائط.

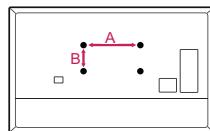

- يرجى قراءة الإرشادات التالية لمنع خدش التلفاز أو إلحاقضرر به ولضمان النقل الآمن بغض النظر عن نوعه وحجمه.
- يُوصى بنقل التلفاز في الصندوق أو مثلكأ بمواد التعبئة التي أرفق بها.
- اصل سلك الطاقة وجميع الكابلات قبل نقل التلفاز أو حمله.
- عند الإمساك بالتلفاز، يجب أن يكون اتجاه الشاشة بعيداً عنك وذلك لتجنب إلحاقضرر بها.



- أمسك الجزء العلوي والسفلي من إطار التلفاز بإحكام. تأكد من عدم الإمساك بالجزء الشفاف أو بمكبر الصوت أو بمنطقة شبكة مكبر الصوت.

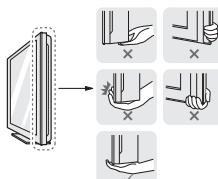

الطراز	43/50UR76*	43/50UR76*
البراغي القياسي	300 x 300	200 x 200 (B x A) VESA
عدد البراغي	M6	M6
حامل التثبيت على الحائط	4	4
OLW480B MSW240	LSW240B MSW240	75UR76*
الطراز	65UR76*	65UR76*
البراغي القياسي	400 x 400	300 x 300 (B x A) VESA
عدد البراغي	M6	M6
حامل التثبيت على الحائط	4	4
LSW440B	OLW480B	75UR76*

- يتطلب نقل جهاز تلفاز كبير 2 أشخاص على الأقل.
- عند نقل التلفاز باليد، يجب الإمساك به كما هو موضح في الصورة التالية.



- عند نقل التلفاز باليد، لا تعرّضه للارتجاج أو الاهتزاز الشديد.
- عند نقل التلفاز، اجعله دوماً مستقيماً، وتتجنب قلبة على جانبه أو إيماته يميناً أو يساراً.
- لا تستخدم القوة الزائدة لدرجة التسبب في إمالة/ثني هيكل الإطار، إذ قد يؤدي هذا إلى إلحاقضرر بالشاشة.
- عند حمل التلفاز، احرص على عدم إلحاق ضرر بالأزرار البارزة.

## التحضير

- يمكن تغيير عناصر الشراء المنفصل أو تعديلاً لتحسين الجودة من دون أي إخطار. اتصل بالبائع لشراء هذه العناصر. لا تعمل هذه الأجهزة إلا مع طرازات معينة.
- قد يتغير اسم الطراز أو تصميمه حسب ترقية وظائف المنتج أو طرائق جهة التصنيع أو سياساتها.

### LED ساعة

(حسب الطراز)

**LEC-005**

### الريموت

(حسب الطراز)

**AM-SR20HB**

### الريموت السحري Magic

(حسب الطراز)

**AN-MR18HA**

تحقق مما إذا كان طراز التلفاز يدعم تقنية Bluetooth في الوحدة اللاسلكية للتحقق من إمكانية استخدامه مع الريموت السحري Magic.


### الحامل

(حسب الطراز)

الطراز	الحامل
43UR762H*	<b>AM-ST21BA</b>
50UR762H* 50UR765H*C	<b>AM-ST21BB</b>
55UR762H* 55UR765H*C	<b>AM-ST21BC</b>
65UR762H* 65UR765H*C	<b>AM-ST21BD</b>
75UR762H* 75UR765H*C	<b>AM-ST21BE</b>

- إذا كانت هذه هي المرة الأولى لتشغيل التلفاز بعد شحنه من المصنع، فقد تستغرق تهيئته عدة دقائق.
- قد تختلف الصورة المعروضة عن صورة التلفاز لديك.
- قد تختلف خيارات العرض على الشاشة الخاصة بكل جهاز تلفاز بشكل بسيط مما هو مبين في هذا الدليل.
- قد تختلف القوائم والخيارات المتوفرة عن مصدر الإدخال أو طراز المنتج الذي تستخدموه.
- يمكن إضافة ميزات جديدة إلى هذا التلفاز في المستقبل.
- يجب توصيل الجهاز بمنفذ تيار سهل الوصول. لم يتم صنع بعض الأجهزة بزر التشغيل / إيقاف التشغيل، إيقاف التشغيل وفصل سلك الطاقة.
- قد تختلف العناصر المرفقة مع المنتج حسب الطراز.
- قد تتغير مواصفات المنتج أو المحتويات في هذا الدليل من دون إخطار مسبق نتيجة ترقية وظائف المنتج.
- للحصول على أفضل اتصال، يجب ألا تتجاوز أطراف كابلات HDMI ووحدات USB 10 مم سمكاً و 18 مم عرضًا. استخدم كابل إطالة يدعم USB 2.0 أو بطاقة ذاكرة USB لا تلائم منفذ USB في التلفاز.

$A \geq 10 \text{ مم}$  \*

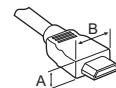

$B \geq 18 \text{ مم}$  \*



- استخدم كابلاً معتمداً مع وجود شعار HDMI عليه.
- إذا لم تستخدم كابل HDMI معتمداً، فقد لا تُعرض الشاشة أي بيانات أو قد يحدث خطأ في الاتصال.
- أنواع كابلات HDMI الموصى بها
- كابل HDMI®/™ فائق السرعة (3 م أو أقل)

- البطاريات**
    - حذن الملحقات (البطاريات وغيرها) في مكان آمن بعيداً عن متناول الأطفال.
    - لا تقم تقتصير الدائرة أو فك البطاريات أو تركها لتسخن أكثر مما ينبغي، لا تخالص من البطاريات في النار. فلا ينبغي أن تتعرض البطاريات للحرارة الزائدة.
    - نتبينه : في حال تم استبدال البطارية بنوع غير صحيح، فسيؤدي ذلك إلى خطر شوب حريق أو حدوث انفجار.
  - التقل**
    - أثناء النقل، تأكد من إيقاف تشغيل المنتج وفصله عن الطاقة وأنه تمت إزالة كل الكابلات. قد يتطلب حمل أحزمة التلفاز الكبيرة 2 أشخاص أو أكثر. لا تضغط على الشاشة الأمامية من جهاز التلفاز. وإلا، فقد يحدث ثلث المنتج أو تتعرض لخطر الحريق أو الإصابة.
    - أيق مواد التغليف المضادة للرطوبة أو المصنوعة من الفينيل بعيدة عن متناول الأطفال.
    - لا تسمح بعرض الجهاز المصممات أو يسقط أي أشياء داخله، ولا تُسْطَع أي شيء على الشاشة.
    - لا تضغط بشدة على الشاشة أو تخشها بيدهك أو بواسطة شيء حاد مثل سمسار أو قلم رصاص أو قلم حبر. قد يتسبب هذا في ثلث الشاشة.
  - التنظيف**
    - عند التنظيف، افصل سلك الطاقة وأمسح برفق بقطعة قماش ناعمة/جافة. لا ترش الماء أو السوائل الأخرى على التلفاز مباشرة. لا تستخدِم مطلاً مواد تنظيف الزجاج ومعطرات الجو ومبيدات الحشرات والشحوم والشموع (الشمع المخصص للسيارات، الشمع الصناعي) والمواد الكاشفة والتتر والبنترين والكحول، إلخ. التي قد تلحق ضرراً بالمنتجات وشاشتها. وإلا، قد يتسبب ذلك في حدوث صدمة كهربائية أو ثلث المنتج.
  - التأريض** (باستثناء الأجهزة التي لا يتم تأريضها).
    - يجب توصيل جهاز التلفاز المزود بمقبس تيار متعدد ثلاثي الأطراف بمقبس تيار متعدد ذو الطرف الأرضي ثلاثي الأطراف. تأكَّد من توسيط سلك التأريض الأرضي لمنع احتمال حدوث صدمة كهربائية.
    - لا تلمس أيَّاً هذا الجهاز أو الهوائي أثناء العاصفة الرعدية. فقد تعرَّض للصعق الكهربائي.
    - تأكَّد من توسيط سلك الطاقة بالتلفاز ومقبس الحاطن بأمان، فقد يحدِث ثلث في القابس أو المقبس وقد ينشب حريق في أصعب الحالات إذا لم يتم توصيله بأمان.
    - لا تدخل أجساماً معدنية أو قابلة للالشتعال في المنتج. إذا سقط جسم غريب في المنتج، فافصل سلك الطاقة واتصل بخدمة العملاء.
    - لا تلمس طرف سلك الطاقة أثناء توصيله بالكهرباء. فقد تعرَّض للصعق الكهربائي.
    - إذا حدث أيِّ مما يلي، فافصل المنتج على الفور واتصل بمركز خدمة العملاء المحلي.
      - في حال ثلث المنتج.
      - في حال تسرُّب المياه أو مادة أخرى إلى المنتج (مثل محول التيار المتعدد أو سلك الطاقة أو التلفاز).
      - إذا شممت رائحة دخان أو رائحة أخرى من التلفاز.
      - عندما تهب عواصف رعدية أو عند عدم استخدامه لفترة زمنية طويلة.
- حتى عند إيقاف تشغيل التلفاز عن طريق الريموت أو زر الطاقة، سيظل مصدر طاقة التيار المتعدد متصلة بالوحدة إذا لم يتم فصلها عن القابس.
- لا تستخدِم منتجات كهربائية ذات فولتية عالية بالقرب من التلفاز (على سبيل المثال صاعق الحشرات). فقد يلحق ذلك ضرراً بالمنتج.
  - لا تحاول تعديل هذا المنتج بأي طريقة من دون الحصول على تصريح مكتوب من LG Electronics. فقد ينشب حريق أو تحدث صدمة كهربائية. اتصل بخدمة العملاء المحلية للحصول على الخدمة أو الإصلاح. قد يؤدي التعديل غير المصرح به إلى إلغاء صلاحية المستخدم لتشغيل هذا المنتج.
  - لا تستخدم سوى المرافقـاتـ المـلـحقـاتـ المعـتمـدةـ منـ شـرـكـةـ LG Electronicsـ.ـ وإلاـ،ـ قدـ يـتـسـبـبـ ذلكـ فيـ شـوبـ حـرـيقـ أوـ حدـوثـ صـدـمةـ كـهـربـائـيـةـ أوـ قـصـورـ وـظـيفـيـةـ أوـ شـتـوـءـ المـنـتجـ.
  - لا تفكك أيَّاً محول التيار المتعدد أو سلك الطاقة. فقد يتسبب ذلك في شوب حريق أو حدوث صدمة كهربائية.
  - توجُّـ الـحـرـصـ عـنـ اـسـتـخـدـامـ المـحـولـ لـجـنـبـ سـقـوطـهـ أوـ وـقـوعـهـ عـلـىـ الـأـرـضـ.ـ فقدـ يـلـحـقـ ذلكـ ضـرـرـاـ بـالـمـحـولـ.
  - للـحـدـ منـ مـخـاطـرـ شـوبـ حـرـيقـ أوـ حدـوثـ صـدـمةـ كـهـربـائـيـةـ،ـ لاـ تـلـمـسـ التـلـفـازـ عـنـدـ تـكـونـ يـدـاكـ مـبـالـيـنـ.ـ إـذـاـ كـانـتـ اـطـرـافـ سـلـكـ الطـاقـةـ رـطـبةـ أوـ يـغـطـيـهاـ غـبارـ،ـ فـاحـرـصـ عـلـىـ تـجـفـيفـ قـابـسـ الطـاقـةـ تـاماـ أوـ اـمـسـحـ الغـبارـ عـنـهـ.

# تحذير! تعليمات الأمان

## • التهوية

- قم بتنبيت جهاز التلفاز لديك في مكان جيد التهوية. لا تقم بتنبيته في مساحة ضيقة مثل خزانة الكتب.
- لا تقم بتنبيت المنتج على سجادة أو وسادة.
- لا تقم بمحجب المنتج أو تغطيته بقطعة قماش أو مواد أخرى أثناء توصيل الوحدة بالكهرباء.
- احرص على عدم لمس فتحات التهوية، أثناء مشاهدة التلفاز لفترة طويلة، قد تصبح فتحات التهوية ساخنة.
- احرص على حماية سلك الطاقة من سوء الاستخدام المادي والميكانيكي، مثل تعرضه للثني أو الانثناء أو الضغط عليه أو إغلاق الباب عليه أو المشي فوقه. انتبه جيداً إلى المقابس والمأخذ في الحاضن وخروج السلك من الجهاز.
- لا تحرك جهاز التلفاز أثناء توصيل سلك الطاقة.
- لا تستخدم سلك الطاقة التالف أو غير محكم التركيب.
- تأكّد من الإمساك بالقبس عند فصل سلك الطاقة. لا تسحب سلك الطاقة لفصل التلفاز.
- لا توصل أجهزة كثيرة جداً بمخرج التيار المتردد نفسه، لأن هذا قد يؤدي إلى نشوء حرائق أو حدوث صدمة كهربائية.

- **فصل الجهاز عن مصدر الطاقة الرئيسي**  
إن قابس الطاقة هو الجهاز المستخدم لفصل الجهاز عن الطاقة. في الحالات الطارئة، يجب أن يبقى قابس الطاقة موضوعاً في مكان يسهل الوصول إليه.
- لا تدع الأطفال يتسلقون التلفاز أو يتعلقون به. وإلا فقد يسقط التلفاز مما يتسبب في حدوث إصابة خطيرة.
- **تاريف الهوائي الخارجي** (يمكن أن يختلف حسب البلد):  
في حال تركيب هوائي خارجي، اتبع الاختيارات الواردة أدناه. ينبغي عدم وضع نظام الهوائي الخارجي بالقرب من خطوط الكهرباء المعلوقة أو الإضافة الكهربائية أو دوائر الطاقة الأخرى أو في الأماكن التي يمكنه فيها أن يلامس خطوط أو دوائر الطاقة هذه، حيث يمكن أن يتسبب هذا في حدوث وفاة أو إصابة خطيرة.



تنبيه : لتقليل خطر الصدمة الكهربائية، لا تقم ب拔掉电线 (أو الجزء الخلفي)، ولا توجد قفل قابلة للصيانة من قبل المستخدم في المنتج. أوكل هذا الأمر إلى فريق الخدمة المؤهل.

يُقصد بهذا الرمز تنبيه المستخدم إلى وجود فولتية خطيرة" غير معزولة داخل المنتج قد تحتوي على مقدار كافٍ لإلحاق خطر الصدمات الكهربائية بالأشخاص.

يُقصد بهذا الرمز تنبيه المستخدم إلى وجود تعليمات مهمة متعلقة ب كيفية تشغيل المنتج وصيانته (خدمته) داخل الدليل المرفق مع الجهاز.

تحذير: للحد من مخاطر نشوب حريق وحدوث صدمات كهربائية، لا تعرض المنتج للنطر أو الرطوبة.

• لمنع انتشار الحرائق، ابق الشموع أو العناصر المشتعلة الأخرى دائعاً بعيدة عن المنتج.

• لا تضع التلفاز / او الريموت في الظروف التالية:

- ابق المنتج بعيداً عن أشعة الشمس المباشرة.

- منطقة ذات رطوبة عالية كالحمام مثلاً.

- بالقرب من مصدر حرارة كالموقد أو الأجهزة الأخرى التي تصدر حرارة.

- بالقرب من طولات المطبخ أو أجهزة ضبط الرطوبة حيث يمكن أن يتعرض بسهولة للخار أو الزيت.

- منطقة معزضة للنطر أو الرياح.

- لا تعرض الجهاز ل قطرات المياه ولا تضع أغراضنا تحتوي على سوائل، مثل المزهريات أو الأكواب وما إلى ذلك عليه (مثلاً على الرفوف الموجودة فوق الوحدة).

- بالقرب من المواد القابلة للاشتغال مثل البنزين أو الشموع أو تعريض التلفاز لتكيف هواء مباشر.

- لا ترتكب الجهاز في أماكن تتعرض للغبار كثيراً.

إلا، فقد يتسبب ذلك في نشوء حرائق أو حدوث صدمة كهربائية أو اختراق/انفجار أو قصور وظيفي أو ش Morrow المنتج.

## جدول المحتويات

ضبط زاوية التلفاز لتناسب مع طريقة العرض

استخدام الريموت

استكشاف الأخطاء وإصلاحها

### المواصفات

HDMI-DTV	الوضع المدعوم	20
HDMI-PC	الوضع المدعوم	20
AV	الوضع المدعوم	21
تنسيقات الصور المدعومة	21	
تنسيقات الصوت المدعومة	21	
تنسيقات الفيديو المدعومة	22	

معلومات حول إشعار البرامج مفتوحة المصدر

### التراخيص

### رموز IR

### ضبط جهاز التحكم الخارجي

RS-232C	إعداد	25
D-Sub	نوع الموصل:	25
RS-232C	تكوينات	26
	مقاييس الاتصال	26
	ضبط المعرف	26
	قائمة إدارة المرجع	27
	بروتوكول الإرسال / الاستلام	27

تحذير! تعليمات الأمان

### التحضير

### الشراء المنفصل

LED	ساعة	5
الريموت	5	
Magic	الريموت السحري	5
الحامل	5	
فوس التثبيت على الحاط	6	

### حمل التلفاز ونقله

الثبيت على الطاولة	
ثبيت التلفاز على مكتب	8
استخدام نظام الأمن كنسينجتون	8
ثبيت التلفاز على جدار	8

### الثبيت على الحاط

الوصيات	
الهواي/الكابل	10
طبق القمر الصناعي	10
وحدة CI	10
وصلات أخرى	11
مكبرات الصوت الخارجية	12
الشبكة	13

### استخدام الزر

الوظائف الأساسية	14
ضبط القائمة	14



دليل المستخدم  
السلامة والمرجع

# \*تلفزيون LED

\* إخلاء المسؤولية

يأتي التلفاز الذي يعمل بتقنية LED من LG مزوداً بشاشة LCD مع تقنية الإضاءة الخلفية LED.  
يرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز والاحتفاظ به للرجوع إليه في المستقبل.