

**Specification****Power consumption**

- Refer to the main label.

**AC adapter**

- Model: A702-230131W-M21
- Manufacturer: Dongguan Aohai Technology Co.,Ltd.
- Input: 100 - 240 V ~ 50 / 60 Hz
- Output: 23.0 V  $\overline{=}$  1.31 A

Soundbar dimensions (W x H x D): Approx. 720.0 mm x

63.0 mm x 87.0 mm

Rear speakers dimensions (W x H x D): Approx. 100.0 mm x

176.5 mm x 120.0 mm

Bus Power Supply (USB): 5 V  $\overline{=}$  500 mA

Amplifier (Total RMS Output power): 400 W RMS

**Open Source Software Notice Information**

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

**מפרט****צריכת חשמל**

- עייין בתווית הראשית.

**מתאם חשמלי AC**

- דגם: A702-230131W-M21
- יצרן: Dongguan Aohai Technology Co.,Ltd.
- הספק חשמל: 100 - 240 V ~ 50 / 60 Hz
- יציאה: 23.0 V  $\overline{=}$  1.31 A
- מידות הסאונד בר (רוחב x גובה x עומק): 720.0 מ"מ x 63.0 מ"מ x 87.0 מ"מ (בקירוב)
- מידות הרמקולים האחוריים (רוחב x גובה x עומק): 100.0 מ"מ x 176.5 מ"מ x 120.0 מ"מ (בקירוב)
- אפיק אספקת חשמל (USB): 5 V  $\overline{=}$  500 mA
- מגבר (סה"כ עוצמת הספק RMS): 400 W RMS

**פרטי הודעה על תוכנת קוד פתוח**

כדי לקבל את קוד המקור תחת GPL, LGPL, MPL ורשיונות קוד פתוח אחרים שיש להם את החובה לחשוף את קוד המקור, הכלול במוצר זה, ולגשת לכל תנאי הרישיון המופנים, הודעות זכויות יוצרים ומסמכים רלוונטיים אחרים אנא בקר ב-  
<https://opensource.lge.com>.

LG Electronics גם תספק לכם קוד מקור פתוח על גבי תקליטור בתמורה לתשלום המכסה את עלות ההפצה (כגון עלות המדיה, המשלוח והטיפול), בתגובה לבקשה בדואר האלקטרוני אל הכתובת [opensource@lge.com](mailto:opensource@lge.com).

הצעה זו תקפה לכל מי שמקבל מידע זה לתקופה של שלוש שנים לאחר המשלוח האחרון של מוצר זה.



## מדריך מהיר מקרון קול אלחוטי

Wireless Soundbar

S45TR  
(SPT8-SPK ,SPT8-S)



MFL72107933

2407\_Rev02

[www.lg.com](http://www.lg.com)

זכויות יוצרים © כל ה זכויות שמורות לחברת  
LG ELECTRONICS INC 2025

**ENGLISH Installing and Using the Product**

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- (A) Soundbar
- (B) Remote Control Receiver
- (C) Status LED (1)(2)(3)
- (D) Rear Speakers
- (E) Wireless Subwoofer - Install it close to the soundbar.
- (F) External Device - (Blu-ray player, game console, etc.)

○ : On / ● : Off / ◐ : Blink

Red blinking	White blinking	White	White	Purple
Power on Power off	Bluetooth ready	Bluetooth	OPTICAL / HDMI ARC	USB

- Connect the soundbar to your TV via an optical cable or an HDMI cable.
- If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the TV via an HDMI cable.
  - If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the soundbar.
- Connect the rear speakers via a speaker cable. When connecting the rear speakers, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
- Connect to power in the following order: wireless subwoofer → rear speakers → soundbar. Then, turn on the soundbar. When the connection is automatically established with the soundbar, the LEDs on the wireless subwoofer and the rear speaker will light up green.
- Connecting the product to your smartphone via Bluetooth
  - Tap the **Settings** button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function. (Off > On)
  - Press the **Bluetooth pair** button. After a moment, LED1 and LED2 blink white.
  - Find and tap the product on your smartphone. The product appears as "LG S45TR(XX)".
  - When the product is connected to your smartphone via **Bluetooth**, LED1 and LED2 light up white.
- Connecting to the LG ThinQ app
  - Find and install the **LG ThinQ app** on Google Play or App Store from your smartphone.
  - You can get more information regarding its use by selecting [Help] in [Setting].

If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

- Press the **Power** button on the soundbar to turn it off.
  - Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.
    - If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.
  - Press the **Power** button on the soundbar to turn it on.
  - When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.
- Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
- Some speakers may not make sound depend on the input source. Select CINEMA sound mode to listen through all speakers.

• Design and specifications are subject to change without notice.  
• Google Play is a trademark of Google LLC.

**עברית התקנה ושימוש במוצר**

אנא קרא מדריך זה בעיון לפני הפעלת המכשיר ושומר אותו לשימוש עתידי. לצפייה בהוראות עבור תכונות מתקדמות, בקר בכתובת <http://www.lg.com>, בקר בכתובת או סרוק את קוד ה-QR והורד את המדריך למשתמש. חלק מתוכן מדריך זה עשוי להיות שונה מהמוצר שלך.



- (A) מקרן קול
- (B) שלט רחוק של רסיבר
- (C) סטטוס לד (1)(2)(3)
- (D) רמקולים אחוריים
- (E) סאבוופר אלחוטי - התקן קרוב למקרן הקול.
- (F) מכשיר חיצוני - (נגן Blu-ray, קונסולת משחקים, וכדומה)

○ : מופעל / ● : כבוי / ◐ : הבהוב



סגול	לבן	לבן	לבן (מהבהב)	אדום מהבהב
USB	אופטי / HDMI ARC	Bluetooth	Bluetooth מוקן	הפעלה כיבוי

- חבר את מקרן הקול לטלוויזיה דרך כבל אופטי או כבל HDMI.
- אם אתה משתמש במכשיר חיצוני (לדוגמה, ממיר, נגן Blu-ray, קונסולת משחקים וכו'), חבר אותו לטלוויזיה באמצעות כבל HDMI.
  - אם נדרש, רכוש כבלי HDMI, כבל אופטי, או כבל הרחבת USB לחיבור אל מקרן הקול.
- חבר את הרמקולים האחוריים באמצעות כבל הרמקול. בעת חיבור הרמקולים האחוריים, חבר את הכבל עם הפסים השחורים למסוף השלילי של כל רמקול ואת הכבל הנותר למסוף החיובי של כל רמקול.
- חברו לחשמל לפי הסדר הבא: סאב וופר אלחוטי ← רמקולים אחוריים ← מקרן קול. לאחר מכן, הפעילו את מקרן הקול. כאשר החיבור נוצר אוטומטית עם מקרן הקול, נורות ה-LED בסאבוופר האלחוטי והרמקול האחורי יידלקו בירוק.
- חיבור המוצר לטלפון נייד דרך Bluetooth
  - הקש על לחצן הגדרות בטלפון הנייד ובחר **Bluetooth**. הפעל את פונקציית **Bluetooth**. (כבוי < מופעל)
  - לחצו על כפתור קישור Bluetooth לאחר רגע, לאחר רגע, LED1 ו-LED2 יבהבו בלבן.
  - מצאו את שם הדגם בטלפון החכם שלכם ובחרו אותו. המוצר מופיע בשם "LG S45TR(XX)".
  - כאשר המוצר מחובר לסמארטפון שלך באמצעות **Bluetooth**, LED1 ו-LED2 נדלקים בלבן.
- מתחבר לאפליקציית LG ThinQ
  - מצאו והתקינו את אפליקציית **LG ThinQ** ב-Google Play או ב-App Store בסמארטפון שלכם.
  - תוכלו לקבל מידע נוסף לגבי השימוש בו על ידי בחירה ב-[עזרה] ב-[הגדרות].

במידה ונדלקת נורת LED אדומה בסאב-וופר האלחוטי או הרמקול האחורי, זה אומר שמקרן הקול אינו מחובר לרמקולים. במקרה זה, חבר אותם בסדר הבא:

- לחץ על לחצן הפעלה/כיבוי במקרן הקול כדי לכבות אותו.
  - יש לחוץ על לחצן **PAIRING** בגב הסאב-וופר האלחוטי או הרמקול האחורי. בדוק באם כל לד מהבהב בירוק.
    - אם עדיין מוצג לד אדום בסאבוופר האלחוטי, לחץ והחזק שוב את הלחצן בגב הסאבוופר.
  - לחץ על לחצן הפעלה/כיבוי במקרן הקול כדי להפעיל אותו.
  - כאשר החיבור נוצר, נורת LED תדלק בירוק בסאב-וופר האלחוטי או ברמקולים אחוריים אלחוטיים.
- יש להרחיק את מקרן הקול, הסאבוופר והרמקולים האחוריים מהמכשיר (למשל נטב אלחוטי, מיקרוגל וכו') מעל ל-1 מטר כדי למנוע הפרעות אלחוטיות.
- רמקולים מסוימים לא יפיקו צליל בהתאם למקרן הכניסה. בחר מצב קול CINEMA להאזנה דרך כל הרמקולים.

• העיצוב והמפרט עשויים להשתנות ללא הודעה מוקדמת.  
• Google Play הוא סימן מסחרי של Google LLC.

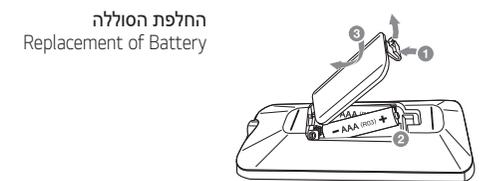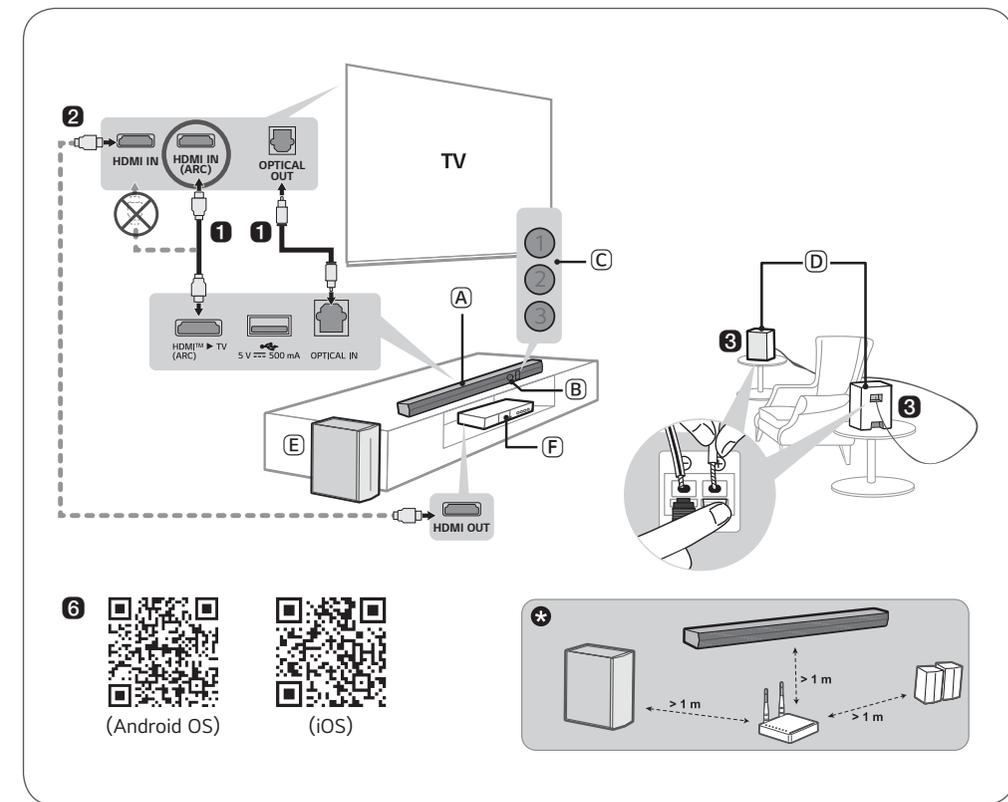

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE