



ENGLISH

ARABIC

# OWNER'S MANUAL REFRIGERATOR

Please read this manual carefully before operating your set and retain it for future reference



MFL71664402

[www.lg.com](http://www.lg.com)


P/NO : MFL71664402

Rev.05\_041021

Copyright © 2019-2021 LG electronics Inc. All rights reserved.

# CONTENTS

IMPORTANT SAFETY INFORMATION .....	3
INSTALLATION .....	12
INNER PARTS .....	13
OPERATIONS.....	15
<b>G*-*4**/ G*-*5**</b>	
Starting	
Before Setting The Temperature	
Door Alarm	
Self Test	
Controls For Freezer Compartment	
Controls For Refrigerator Compartment	
Express Freeze (Optional)	
Child Lock (Optional)	
Wi-Fi (Optional)	
Door Cooling+	
Vegetable Drawer	
Defrosting	
Deodorizer	
Ice Making	
Hygiene Fresh (Optional)	
Water Dispenser (Optional)	
Lamp Replacement	
Inverter-On Feature (Optional)	
Vacation Time	
SMART FUNCTIONS (Only for applied Models).....	22
SUGGESTIONS ON FOOD STORAGE .....	25
CLEANING .....	26
GENERAL INFORMATION.....	27
IMPORTANT WARNINGS .....	28
BEFORE CALLING FOR SERVICE .....	29

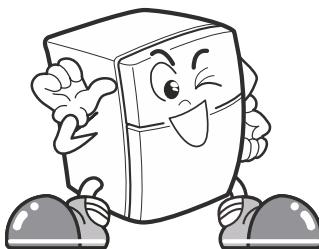

# IMPORTANT SAFETY INFORMATION



## WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

### BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

This is a safety alert symbol. It alerts you to safety messages that inform you of hazards that can hurt or seriously injure or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:



**DANGER** You will be hurt or seriously injured if you don't follow instructions.



**WARNING** To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.



**CAUTION** Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## **IMPORTANT SAFETY INFORMATION**

### **⚠ WARNING**

- ⚠ Keep ventilation openings, in the appliance enclosure or in the built-in-structure, clear of obstruction.
- ⚠ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ⚠ Do not damage the refrigerant circuit.
- ⚠ Do not use electrical appliances inside the food storage compartment, unless they are recommended by the manufacturer.
- ⚠ The refrigerant and insulation blowing gas used in the appliance requires special disposal procedures. When disposal, please consult with services agent or a similarly qualified person.

# **IMPORTANT SAFETY INFORMATION**

## **Risk of Fire and Flammable Materials**



This symbol alerts you to flammable materials that can ignite and cause a fire if you do not take care.


- This appliance contains a small amount of isobutane refrigerant (R600a), but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes. In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance is used should correspond to the amount of refrigerant used. The room must be 1 m<sup>2</sup> in size for every 8 g of R600a refrigerant inside the appliance.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

# IMPORTANT SAFETY INFORMATION

## 1. When connecting the power


Dedicated outlet should be used.

- Using several devices at one outlet may cause fire.

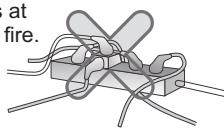

**Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.**

Plug may get damaged, which causes fire or electric shock.

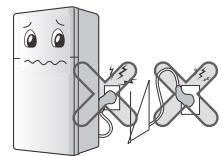

**Do not allow the power cord to bend or pressed by heavy object.**

It may damage the power cord and cause fire or electric shock.



**Do not extend or modify the length of the power plug.**

It damages the power cord and cause electric shock or fire.



## 1. When connecting the power

**Unplug the power plug while cleaning, handling or replacing the interior LED lamp of the refrigerator.**

- It may cause electric shock or injury.




**Remove water or dust from the power plug and insert it with the ends of the pins securely connected.**

Dust, water or unstable connection may cause fire or electric shock.




**Do not pull out the cord or touch the power plug with wet hands.**

- It may cause electric shock or injury.

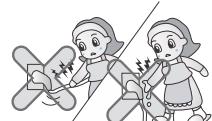

**Make sure of grounding.**


Incorrect grounding may cause breakdown and electric shock.

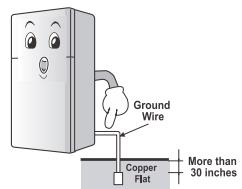

# IMPORTANT SAFETY INFORMATION

**When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.**

It may cause electric shock or short circuit.

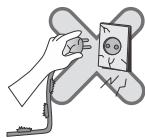

The tempered glass on door can be broken by impact. Do not touch the broken parts, you may be injured.



## 2. When using the refrigerator

**Do not place heavy object or the dangerous object (container with liquid) on the refrigerator.**

It may fall and cause injury, fire or electric shock when opening or closing the door.



**Do not cling to the door or the shelves of the door or home bar of the freezer or the cool chamber.**

It may make the refrigerator fall over or damage the hands. Especially, do not allow the children to do the above.




**Do not install the refrigerator in wet place or place where water or rain splashes.**

Deterioration of insulation of electric parts may cause electric leakage.



**Do not use or store inflammable materials like ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.**


- It may cause explosion or fire.

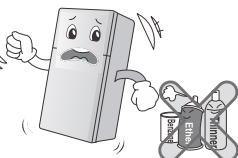

## 2. When using the refrigerator

**Do not use drier to dry the inside, nor light a candle to remove odor.**

It may cause explosion or fire.

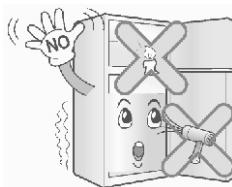

**Do not store medicine or academic materials in the refrigerator.**


When the material with strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.



# IMPORTANT SAFETY INFORMATION


**Do not use the combustible spray near the refrigerator.**

It may cause fire.

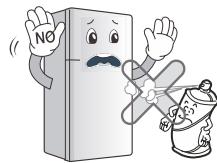


**Install in places away from the fire such as the place where flammable gas is leaked.**

It may cause fire.

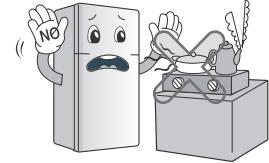

**Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.**

It may cause fire, electric shock or injury by dropping down.

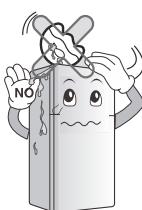


**Use the submerged refrigerator only after checking it.**

It may cause electric shock or fire.




**When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.**

If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately. This appliance uses a refrigerant gas (isobutane, R600a). Although it uses a small amount of the gas, it is still combustible gas. Gas leakage during appliance transport, installation or operation can cause fire, explosion or injury if sparks are caused.

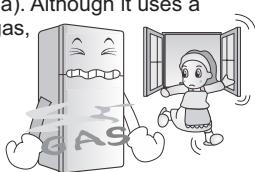


**Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.**

Deterioration of insulation of electric parts may cause electric shock or fire.

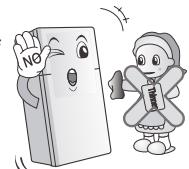

**When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.**

It may cause fire.

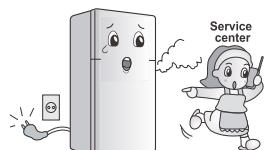


# IMPORTANT SAFETY INFORMATION

## 2. When using the refrigerator

**Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.**

It may cause injury, electric shock or fire.

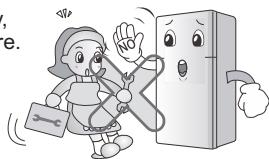


**When disposing the refrigerator, remove the packing materials like gasket from the door.**

It may cause to lock out the child.




**Do not insert hand or metal stick into the exit of cool air, cover, bottom of the refrigerator, heat proof grill (exhaust hole) at backside.**

It may cause electric shock or injury.

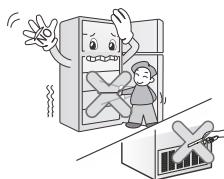

**In case of thunder and lightning, or if not in use for a long period of time, detach the power plug.**

There is a danger of electric shock or fire.

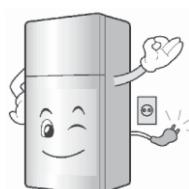


**Do not remove the back cover.**



**Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).**

It may cause unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

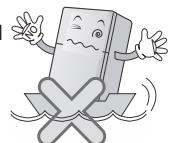

**Install the refrigerator on a solid and level floor.**

Installing it on an unstable place may cause injury by falling down the refrigerator when opening or closing the door.




**What to do with your old refrigerator?**


Your refrigerator contains liquid (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be refused after a specific recycling process.



**Place all the components in the right places before connecting the power.**

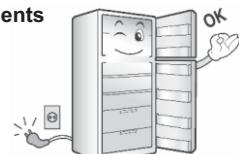

**Never leave lit candles on the fridge, high risk of causing fire or product damage.**

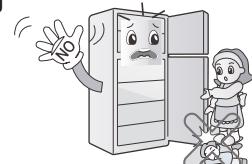

# IMPORTANT SAFETY INFORMATION

## CAUTION

Violating these directions may cause injury or damage to health, house or furniture.  
Always be careful, please.


**Do not touch food or containers at the freezer with wet hands.**

It may cause frostbite.



**Wait for 5 minutes or longer when reconnecting the plug.**

It may cause the operation of the freezer to fail.

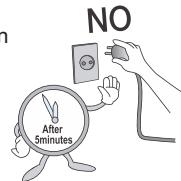

**Do not put bottle in the freezer.**

Do not place glass containers, bottles or cans (especially those containing carbonated drinks) in the freezer compartment, shelves or ice bin that will be exposed to temperatures below freezing.




**Pull out the power plug not by grasping the cord, but by the plug of its end.**

It may cause electric shock or short circuit to fire.



**Carry the refrigerator with the handle bar provided at the bottom-front and top-rear of the refrigerator.**

Otherwise, your hands may be slipped to cause injury.

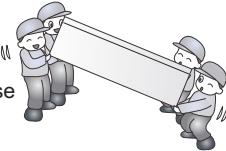

**Do not insert hand into the bottom of the refrigerator.**

The iron plate of the bottom may cause injury.



**Completely empty inside before taking out the container from the door.**



**Opening or closing the door of the refrigerator may cause injury to the person around it., please be careful.**

Opening or closing the door may cause feet or hands to be caught in the chink in door or child hand get hurt by the corner.




# IMPORTANT SAFETY INFORMATION


**Do not put any living animal in the refrigerator.**




**Do not use carbonated water. Gas pressure may cause leakage.**

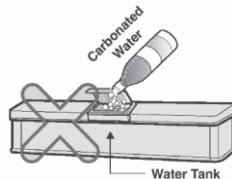

**Do not lean on the doors, Hinges may deregulate themselves, causing air leak and performance deterioration.**

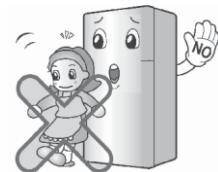


**Clean the water tank according to the instructions.**

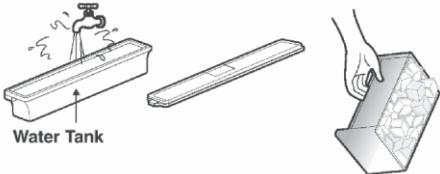

**Movable parts like shelf, basket, etc. should be handled with care.**

May get damaged or break if dropped.

**Use only water. If any other liquid is used, the operation of the system may be deteriorated. If a problem occurs by using any liquid other than water, the manufacturer will not be responsible.**

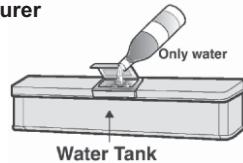

## **WARNING**

- Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.
- If the appliance is equipped with a lock (some countries only), keep the key out of reach of children.

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

**THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.**

**WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.**

**BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY.**

**IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.**

# INSTALLATION

1. Select a good location.  
Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To avoid vibrations, the unit must be level.  
If required, adjust the leveling screws to compensate for unevenness of the floor.  
The front should be slightly higher than the rear to aid in door closing.  
Leveling screws can be turned easily by tipping the cabinet slightly.  
Turn the leveling screws clockwise (➡) to raise the unit, counterclockwise (⬅) to lower it.
4. Don't install this appliance below 5°. It may cause the debasement of the refrigertor.

## NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to storing food, leave your refrigerator on for 2 or 3 hours.  
Check the flow of cold air in the freezer compartment to ensure proper cooling.  
Your refrigerator is now ready for use.
5. After installing the appliance, connect the power plug into a socket outlet. Before moving and discarding the appliance, disconnect the plug from the socket outlet.

## Dimensions and Clearances

Too small of a distance from adjacent items may result in degradation of freezing capability and increased electricity costs. Allow over 50mm clearance from each adjacent wall when installing the appliance.

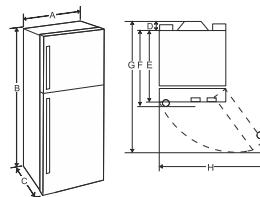


Image for representation purpose only

-	G*-5**	G*-4**
A	700	700
B	1780	1680
C	730	730
D	25	25
E	660	660
F	705	705
G	1331	1331
H	1232	1232

## Ambient Temperature

The appliance is designed to operate within a limited range of ambient temperatures, depending on the climate zone. do not use the appliance at a temperature exceeding the limit. The internal temperatures could be affected by the location of the appliance, the ambient temperature, the frequency of door opening and so on.

The climate class can be found on the rating label.

Climate Class	Ambient Temperature Range (°C)
SN (Extended Temperate)	+10 - +32
N (Temperate)	+16 - +32
ST (Subtropical)	+16 - +38
T (Tropical)	+16 - +43/+10 - +43*

\*Australia, India, Kenya

## NOTE


The appliances rated from SN to T are intended to be used at an ambient temperature between 10°C and 43°C.

## Inverter-On feature (Optional)

Minimum requirement: UPS/ Inverter should be in ON condition having minimum 600VA capacity along with minimum 120Ah capacity battery connected with the refrigerator's power supply socket.

# INNER PARTS

## Water Dispenser Model

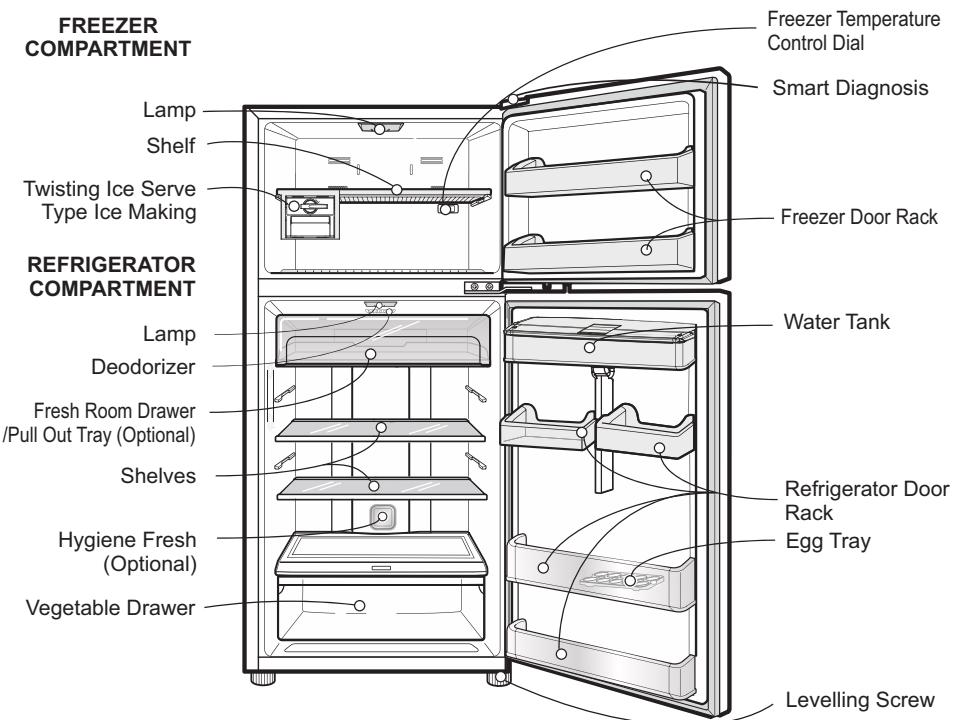

### NOTE


- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

### SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.
- The automatic defrosting system in the appliance ensures that the compartment remains free of ice build up under normal operating conditions.

# INNER PARTS

## Non Water Dispenser Model

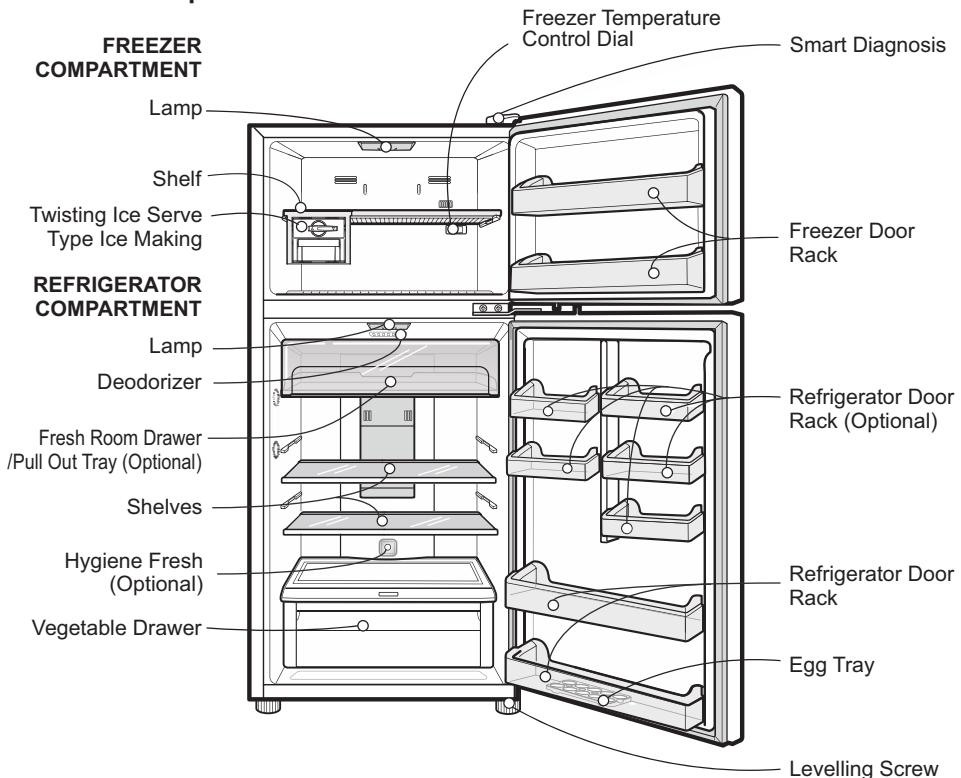

### NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

### SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.
- The automatic defrosting system in the appliance ensures that the compartment remains free of ice build up under normal operating conditions.

# OPERATIONS

## STARTING

When your refrigerator is first installed, allow it (7-8 hours) to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods.  
If operation is interrupted, wait 5 minutes before restarting.

## BEFORE SETTING THE TEMPERATURE

- The temperature of the refrigerator is kept constant regardless of changes in room temperature. It is recommended that, once set, the temperature settings (the controls for the refrigerator and freezer compartments) not be changed unless necessary.
- This refrigerator has one temperature control button for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control button for the refrigerator compartment is '3' or '4'.
- The default setting of the temperature control dial for the freezer compartment is '5'.
- The refrigerator has a temperature sensor in the refrigerator compartment. It will start and stop the compressor automatically as needed.

## DOOR ALARM


When the door of the refrigerator or the freezer is open for 1 minute, an alarm will sound three times. If the door remains open, the alarm will repeat every 30 seconds.

## SELF TEST

- Your refrigerator contains a built in diagnostic capability. If it develops a malfunction in certain areas it will display an error code to assist the repair technician. While an error code is displayed, other control and display functions will not operate.
- If an error code is displayed, contact a service center. Do not disconnect the power cord from the outlet.

## CONTROLS FOR FREEZER COMPARTMENT


- The higher number the control setting is, the lower the temperature of the freezer compartment becomes.
- Since the temperature of the refrigerator and freezer compartments is controlled with a fixed amount of cooled air, the refrigerator compartment will be warmer if the freezer compartment becomes colder.
- When the freezer compartment is not cold enough in winter, adjust the control for the freezer to High (6~8).

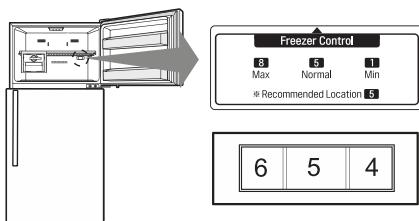

# OPERATIONS

## CONTROLS FOR REFRIGERATOR COMPARTMENT

FOR INTERNAL CONTROLLER MODEL

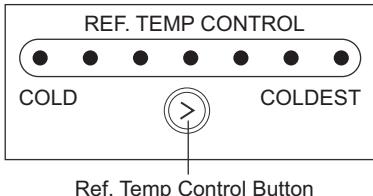


The default setting of the temperature control button for the refrigerator compartment is **NORMAL**.

To control the refrigerator temperature, press the **REF. TEMP CONTROL** button.

Whenever pressing the button, LED emitting the light. The temperature is set in 7 steps, from **COLD** to **COLDEST** cooling. (**COLD** = warmest, **COLDEST** = coldest temperature).

#### **■ FOR EXTERNAL CONTROLLER MODEL**

Display graphic can be different, depend on the type of your refrigerator.

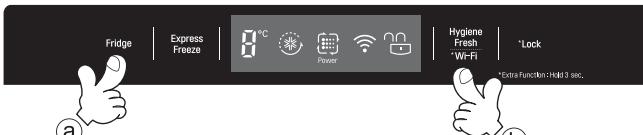

For non-dual display



For dual display

- Press 'FRIDGE' button to control refrigerator temperature.
  - Whenever pressing the button, the LED emits light.
  - Press 'Hygiene Fresh' button to operate hygiene fresh motor (optional).
  - The number showing up on the LED luminescence indicate the temperature of refrigerator compartment.
  - You can select the desired setting point seven steps, from '0°C to '6°C'.
    - Press ① button, Fridge temperature will be down each 1°C.
    - Press ② button, Hygiene Fresh motor will be on, power mode, off.

**EXPRESS FREEZE (OPTIONAL)\***

- When the refrigerator is first turned ON the EXPRESS FREEZE feature can be turn ON. The compressor and circulating fan operate at maximum cooling capacity to quickly lower the refrigerator temperature. It shuts off automatically.



For non-dual display



For dual display

- If warm food is placed into the refrigerator, FAST FREEZING can be started with the button on the control panel. FAST FREEZING will shut off when the temperature reaches the proper level or it can be shut off manually by pressing the FAST FREEZING button.

# OPERATIONS

## CHILD LOCK (OPTIONAL)\*

### • CHILD LOCK

Press and hold the child lock button for 3 seconds to lock the child lock. When it is locked, the Lock LED will be on and the other button will not operate. To unlock, press and hold the CHILD LOCK button for 3 seconds again.




## Wi-Fi (OPTIONAL)\*

This sets the refrigerator to connect to your home's Wi-Fi network.



## DOOR COOLING+

- If water of foreign substances enter the cool air vent while cleaning, efficiency will be lowered.



## VEGETABLE DRAWER

### How to use

- Vegetable drawer can be used through the control of knob.
- Check the position of knob prior to store the food.
- Do not locate the knob on the middle point.



\* This feature will be OFF by itself, if the refrigerator is switched OFF.


# OPERATIONS

## DEFROSTING

- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.


## DEODORIZER

- Unpleasant odor of food in fresh food compartment is deodorized with no harm to the user and the food.

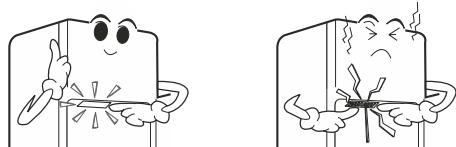

### How to use

- As Deodorizer is located in cooling air inlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air inlet with a sharp tip because Deodorizer may get damaged.
- When storing food with strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.

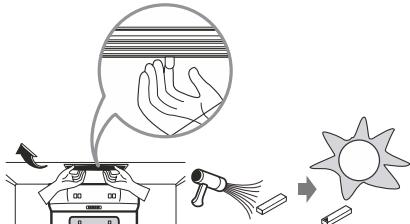

### Re-Using of Deodorizer

- Deodorizer can be revived and re-used.
- Separate the Deodorizer from the refrigerator
- Use hair drier to remove moisture or malodor and oxidize under sunlight to decompose malodor by ultraviolet.

## ICE MAKING

### Twisting Ice Serve Type

- To make ice cubes, fill the ice tray with water and insert in its position.
- To remove ice cubes, hold the lever of the tray and pull turn gently. Then, ice cubes drop in to the ice cube box.




## ⚠ WARNING

Fill with potable water only.

**NOTE** You can disassemble the Ice Maker to secure space in the freezer.


- **Twisting Ice Serve Type:** Remove 1 and 2

1. Ice Tray
2. Ice Cube Box

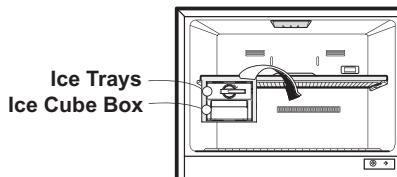

## ⚠ WARNING

- Do not use anything other than water.
- Fill the water up to the marked line.

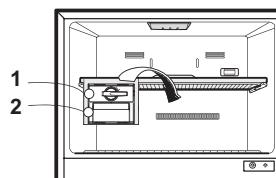

<Twisting Ice Serve Type>

# OPERATIONS

## HYGIENE FRESH (OPTIONAL)


### ⚠ CAUTION

Before installing or using the product, make sure to read the owner's manual carefully to use the product accurately as intended. This HYGIENE FRESH filter has the antibacterial function of removing the virus or bacteria inside the refrigerator and the deodorizer function to remove the scent.

#### • Switch over to use mode

Switch over to use mode.

- To use the HYGIENE FRESH filter, touch the  button on the display panel on the front side of the door and switch over to the AUTO or POWER mode.  
(Whenever you touch the button, the HYGIENE FRESH filter will be switched to AUTO → POWER → OFF → AUTO.)

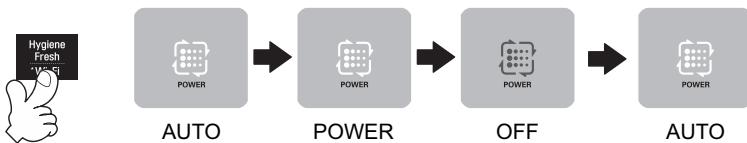

### ⚠ CAUTION

When the user switches to AUTO or POWER mode, the LED around the filter is also turned on. Do not put in your finger or alien particles inside the fan. It can be caused of an injury or malfunction.

### ⚠ CAUTION

- Do not wash the HYGIENE FRESH filter by using water because it can be caused of malfunction
- This filter may not be effective for all types of bacteria and virus.
- This is effective to remove the bacteria which is not on the food in the refrigerator.

You can purchase the HYGIENE FRESH filter at the nearest distributor or the service center.

# OPERATIONS


## WATER DISPENSER (OPTIONAL)

### NOTE


- Pour water after the water tank is in position.
- Necessarily separate the water tank to clean it our when not in use.
- When the water tank is not in position after filling it with water, water can leak out by the valve.

### Pouring water in the water tank


1. Open the cover cap and pour water into the water tank.

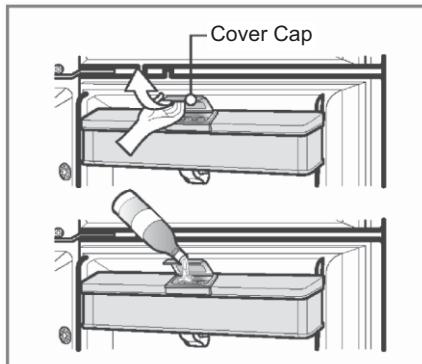

2. Close the cover cap.

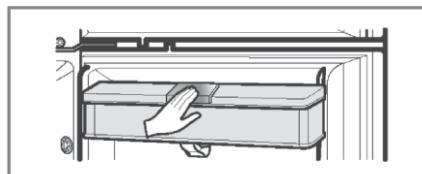

3. The water tank is optional removable part which can be applied to enlarge the storage capacity. You can use the upper basket after removing the water tank and closing up the hole with a plug.

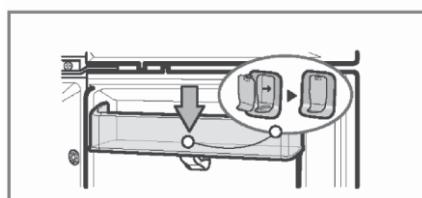

The plug is enclosed with the egg tray.



### CAUTION

Do not use anything other than water, even hot water needs to be cooled before being poured into the water tank.

Do not fill more than the indicated level.

### Drinking Water

1. Press the dispenser pad with cup.
2. The water is released when the dispenser pad is pressed. The pad returns to its original position when the cup is removed and the water stops its flow.



# OPERATIONS

## LAMP REPLACEMENT

**NOTE :** This product applies LED Lamp which cannot be replaced by the user. Please contact authorized service centre for the lamp replacement.

## INVERTER-ON FEATURE (Optional)

1. While using this feature, the refrigerator will work on basic requirement as required by the product.
2. The results of the Inverter-On feature may vary depending on the number of appliances that are running on inverter.
3. For optimum running of refrigerator during Inverter-On mode, it is recommended to switch off the other appliances which are not in use.
4. It is recommended to confirm the quality of food items before consumption.
5. Ice cream etc. may get soften during the use of this feature, if situation arises so, it is recommended to change the setting as per one's choice.

## LED Pattern during INVERTER-ON mode (Optional)

During the use of this feature, you will find this pattern of LED running. It is a symbol that the product is running at basic energy requirement. One can press the button "REF TEMP" to change the LED setting during power cuts, if needed. The LED will then show the setting as desired. When the mode is changed from Normal supply to Inverter mode & vice versa, the LED pattern will take some time to display the change.

## VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life.

If you are leaving the appliance turned off for an extended period of time, remove all food and unplug the power cord. Clean the interior, and leave the doors slightly ajar to prevent mould from growing in the appliance.

# SMART FUNCTIONS (Only for applied Models)

## LG ThinQ Application

This feature is only available on models with Wi-Fi.

The LG ThinQ application allows you to communicate with the appliance using a smartphone.

## LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

## Smart Diagnosis

- If you experience a problem while using the appliance, this smart diagnosis feature will help you diagnose the problem.

## Settings

- Allows you to set various options on the appliance and in the application.


## NOTE

- If you change your wireless router, internet service provider, or password, delete the registered appliance from the LG ThinQ application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.


## Before Using LG ThinQ Application

- Check the distance between the appliance and the wireless router (Wi-Fi network).
  - If the distance between the appliance and the wireless router is too far, the signal strength becomes weak. It may take a long time to register or installation may fail.

- Turn off the **Mobile data** or **Cellular Data** on your smartphone.

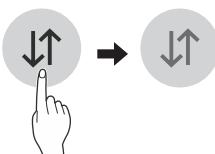

- Connect your smartphone to the wireless router.

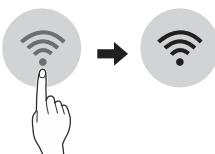

## NOTE

- To verify the Wi-Fi connection, check that the icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- LG ThinQ is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The appliance cannot be registered due to problems with the wireless signal transmission. Unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers.(Do not use special characters.)

# SMART FUNCTIONS (Only for applied Models)

- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the product again.

## Installing the LG ThinQ Application

Search for the **LG ThinQ** application from the Google Play Store or Apple App Store on a smart phone. Follow instructions to download and install the application.

## Connecting to Wi-Fi

The Wi-Fi button, when used with the **LG ThinQ** application, allows the appliance to connect to a home Wi-Fi network. The  icon shows the status of the appliance's network connection. The icon illuminates when the appliance is connected to the Wi-Fi network.

## Initial Appliance Registration

- Run the **LG ThinQ** application and follow the instructions in the application to register the appliance.

## Re-registering the Appliance or Registering Another User

- Press and hold the **Wi-Fi** button for 3 seconds to temporarily turn it off. Run the **LG ThinQ** application and follow the instructions in the application to register the appliance.

## NOTE

- To disable the Wi-Fi function, press and hold the **Wi-Fi** button for 3 seconds.  icon will be turned off.

## Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses that have the obligations to disclose source code, that is contained in this product, and to access all referred license terms, copyright notices and other relevant documents please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

## SMART DIAGNOSIS

This feature is only available on models with the  or  logo.

Use this feature to help you diagnose and solve problems with your appliance.

## NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.
- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

## Using LG ThinQ to Diagnose Issues

If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the **LG ThinQ** application.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions provided in the **LG ThinQ** application.

# SMART FUNCTIONS (Only for applied Models)

## Using Audible Diagnosis to Diagnose Issues

Follow the instructions below to use the audible diagnosis method.


- Launch the **LG ThinQ** application and select the Smart Diagnosis feature in the menu.  
Follow the instructions for audible diagnosis provided in the **LG ThinQ** application.

### Display panel is on the Freezer Door

- 1 Close the freezer and fridge doors, then press and hold the **Lock** button to activate the lock function.
  - If the display has been locked for over 5 minutes, you must deactivate the lock and then reactivate it.



- 2 Press and hold the **Fridge** button for 3 seconds or longer.
  - The control panel will be turned off, and then '3' will be displayed on the fridge temperature display part.
- 3 Open the freezer and fridge door, and then hold the phone on the upper right speaker hole.

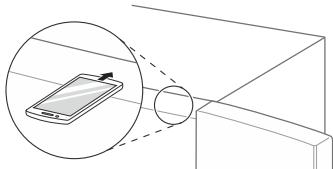


- 4 After the data transfer is complete, the diagnosis will be displayed in the application.

## NOTE

- For best results, do not move the phone while the tones are being transmitted.

### Display panel is inside the Fridge Room

- 1 Open the fridge door.
- 2 Press and hold the **Fridge** button for three seconds or longer.
- 3 If the buzzer sounds 4 times, open the freezer door and hold the phone near the speaker hole.
  - If the display has been locked for over 5 minutes, you must deactivate the lock and then reactivate it.

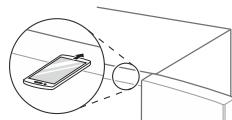

- 4 After the data transfer is complete, the diagnosis will be displayed in the application.


# SUGGESTIONS ON FOOD STORAGE

## STORING FOOD

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!
- When storing the food, cover it with vinyl wrap or store in a container with lid. This prevents moisture from evaporating and helps food to keep its taste and nutrients. This will also prevent transfer of taste and smell from one food to other.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.
- In the event of a blackout, call the electricity company and ask how long it is going to last.
  - You should avoid door openings while the power is off.
  - When the power supply gets back to normal, check the condition of the food.

## FREEZER COMPARTMENT


- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Loading for Freezing - It is recommended to load newly introduced foods on the following positions for freezing:

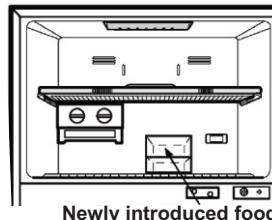

- Freezer Door Basket, marked is - 12°C compartment, that is suitable for short term storage of frozen food (optional).

## REFRIGERATOR COMPARTMENT

- Avoid placing moist food on deep interior refrigerator shelves, it could freeze by direct contact with chilled air. To avoid this it is better to store food in the covered container.
- It is desirable to store moist food (especially vegetable and fruit) in the vegetable storage compartment. If it is necessary to store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in an upright position, which keeps them fresh for longer time.
- If there are chill compartments in the appliance, do not store vegetables and fruits with higher moisture content in the chill compartments as they may freeze due to the lower temperature.

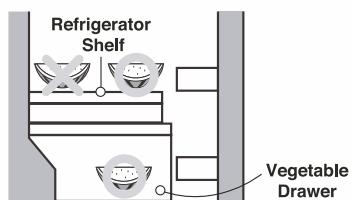


# CLEANING

## WATER DISPENSER

### Grille -

Wipe with a clean, damp cloth and then dry using dry cloth.

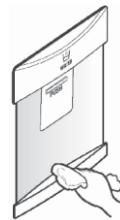


### Water Tank -

#### 1. Water Filling

It is not necessary to remove the water tank in order to fill it (it can be filled by opening the water tank cap).


#### NOTE

- Before closing door, close the cap and clamp lightly.
- Do not use liquids containing sugar or carbonated drinks.

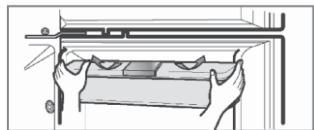


#### 2. Disassembly

Lift the water tank, gripping a side and bottom of water tank

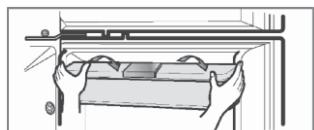


#### NOTE

Before disassembly of water tank, drain all water from the dispenser.

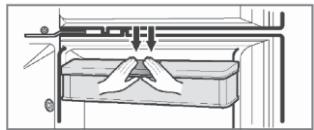


#### 3. Assembly

If by some cause the water tank is dislocated, place it again at its original position. Verify that the valve is assembled correctly in the hole of the door. Once assembled push down and check the tank position with line.

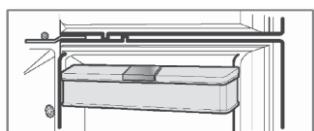


### Water Tank -


#### 1. Remove the tank cover.

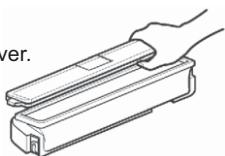

3. Clean the inside and outside of the cover and cap with dishwashing detergent and rinse thoroughly under running water. Dry the water with a cloth.

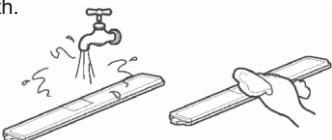

2. Clean the inside and outside of the water tank with dishwashing detergent and rinse thoroughly under running water. Dry the water with a cloth.



4. Assemble the cover with tank and clamp it with the help of snaps provided, further assemble it in refrigerator door.

# CLEANING

It is important that your refrigerator is kept clean to prevent undesirable odors. Spilled food should be wiped immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

**EXTERIOR** - Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

**INTERIOR** - Regular cleaning of the interior and interior parts is recommended. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

**INTERIOR PARTS** - Wash compartment shelves, door racks, storage trays and magnetic door seals etc. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

## WARNING

Always remove power cord from the wall outlet prior to cleaning. Wipe excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning - Not to use : Surface active agent, Car wax, Anti-corrosive, All sorts of oil, Gasoline, Acids, Wax.
- Mild detergents, dish washable solutions and soapy water can be used.
- Careless usage can lead to colour change.

## CAUTION

1. Use lukewarm water when cleaning.
2. Water Tank: Do not use anything other than water. If any other liquid is used, please rinse the tank three to four times with water.

# GENERAL INFORMATION

## POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

## IF YOU MOVE


Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the leveling screw(s), turn them all the way into the base.

## ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

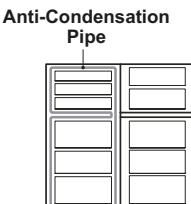

## CAUTION

### Electrical Shock Hazard

Before replacing a burned-out light bulb, either unplug the refrigerator or turn off power at the circuit breaker or fuse box.

**NOTE :** Moving the control to OFF position does not remove power from the light circuit.

# IMPORTANT WARNINGS

## DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

## ACCESSIBILITY OF SUPPLY PLUG

The refrigerator-freezer should in such a position that the supply plug is accessible for quick disconnection when accident happens.

## SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

## VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

## ABOUT GROUNDING (EARTHING)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

## DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH

It will cause electric shock or fire.



This appliance must be grounded (earthed).

## DON'T WAIT! DO IT NOW!

Do not store Inflammable materials, explosives or chemicals In the refrigerator.

## Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance."

# BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	<ul style="list-style-type: none"><li>Has a house fuse blown or circuit breaker tripped?</li><li>Has the power cord plug been removed or loosened from the electrical wall outlet?</li></ul>
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	<ul style="list-style-type: none"><li>Temperature control not set on proper position.</li><li>Appliance is placed close to wall or heat source.</li><li>Warm weather-frequent door openings.</li><li>Door left open for a long time.</li><li>Large amount of foods are kept in the refrigerator.</li></ul>
ABNORMAL NOISE(S)	<ul style="list-style-type: none"><li>Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting.</li><li>Unnecessary objects placed in the back side of the refrigerator.</li></ul>
REFRIGERATOR HAS ODOR	<ul style="list-style-type: none"><li>Foods with strong odors should be tightly covered or wrapped.</li><li>Interior needs cleaning.</li></ul>
DEW FORMS ON THE CABINET SURFACE	<ul style="list-style-type: none"><li>Not unusual during periods of high humidity.</li><li>Door may have been left ajar.</li></ul>

Symptoms	Possible Cause & Solution
There is no refrigeration or freezing.	<p><b>Is there a power interruption?</b></p> <ul style="list-style-type: none"><li>Check the power of other appliances.</li></ul> <p><b>Check the power of other appliances.</b></p> <ul style="list-style-type: none"><li>Plug the power plug in the outlet properly.</li></ul> <p><b>A fuse in your home may be blown or the circuit breaker tripped. Or the appliance is connected to a GFCI (Ground Fault Circuit Interrupter) outlet, and the outlet's circuit breaker has tripped.</b></p> <ul style="list-style-type: none"><li>Check the main electrical box and replace the fuse or reset the circuit breaker. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.</li><li>Reset the circuit breaker on the GFCI. If the problem persists, contact an electrician.</li></ul>

<b>Name of the Importer</b>	<b>Country</b>	<b>Address of the Importer</b>
LG Electronics Gulf FZE	UAE	GF-Jebel Ali Main Warehouse, Jebel Ali Free Zone, P.O. Box : 61445 Dubai, UAE
Al Yousuf Electronics	UAE	AL YOUSUF ELECTRONICS LLC P.O.BOX NO. 25 DUBAI, UAE TEL: +971-4-2957300, FAX: +971-4-2957988
Video Home and Electronics Centre	Qatar	Video Home and Electronics Centre Centre WLL PO BO 4668, Doha Qatar
Oman Gulf Enterprises LLC	Oman	Oman Gulf Enterprises LLC P.O. BOX 421, CODE 118, MUSCAT, SULTANATE OF OMAN, 118 ATTN: Mr. Rajesh Radhakrishnan, +96896372373, rajeshr@otegroup.com C.R. No.: 1/33586/3
Al-Babtain Electronics Company WLL	Kuwait	Al-Babtain Electronics Company WLL Al Babtain, P.O. Box 599, Safat 13006 Kuwait
Salem Mohammed Shammakh & Co.	Yemen	Salem Mohammed Shammakh & Co. P.O. Box 3372, Hodeidah Republic of Yemen
A.J.M. Kooheji Group B.S.C. ©	Bahrain	A.J.M. Kooheji Group B.S.C. © P.O. Box 74, Manama Kingdom of Bahrain
United Yousef Mohammed Naghi Co. Ltd.	Saudi Arabia	United Yousef Mohammed Naghi Co. Ltd. P.O. BOX 453, jeddah 21411 SAUDI ARABIA
UNITED ELECTRONICS CO. (eXtra)	Saudi Arabia	P.O. Box 76688, Khobar 31952 Saudia Arabia





Life's Good



MFL71664402



Life's Good



MFL71664402



عنوان المستورد	البلد	اسم المستورد
- مستودع GF جبل علي الرئيسي منطقة جبل علي الحرة، ص.ب. : 61445 دبي، الإمارات العربية المتحدة	الإمارات العربية المتحدة	LG Electronics Gulf FZE
اليوسف للإلكترونيات الإمارات العربية المتحدة	الإمارات العربية المتحدة	
اليوسف للإلكترونيات د.م م صندوق بريد رقم 25 دبي، الإمارات العربية المتحدة رقم الهاتف: +971-4-2957300 رقم الفاكس: +971-4-2957988	الإمارات العربية المتحدة	
بيت الفيديو والمركز الإلكتروني ذ.م.م ص.ب :- 4668 ، الدوحة قطر	قطر	شركة بيت الفيديو والمركز الإلكتروني ذ.م.م
شركة عمان الخليج ذ.م.م، صندوق بريد 421، الكرد 118، مسقط، سلطنة عمان، العنوان: السيد راجيش راكريشنان رقم تجاري رقم: 1/33586/3 البريد الإلكتروني: rajeshr@otegroup.com ، +96896372373	عمان	المشاريع العمانية الخليجية ش.م.م
شركة إلكترونيات البليطين ذ.م.م، البليطين ص.ب. 599 ، الصفا 13006 الكويت	الكويت	شركة إلكترونيات البليطين ذ.م.م.
سالم محمد شماخ وشركاه ص.ب. 3372 ، الحديدة جمهورية اليمن	اليمن	
مجموعة عبد الجبار الكوهجي ش.م.ب (م) صندوق بريد 74 ، المنامة مملكة البحرين	البحرين	
شركة يوسف محمد ناغي المتحدة ص.ب ٤٥٣ جدة ٢١٤١١ المملكة العربية السعودية	ال سعودية	شركة محمد يوسف ناغي المتحدة
صندوق بريد 76688 الخبر 31952 المملكة العربية السعودية	ال سعودية	الشركة المتحدة للإلكترونيات ( إكسترا )

## قبل الاتصال بالصيانة

كثيراً ما يمكن تجنب الاتصال بالصيانة.  
إذا كنت تشعر أن ثلاجتك لا تعمل على النحو الجيد، عليك فحص هذه الأسباب المحتملة أولاً:

الأسباب المحتملة	المشكلة
<ul style="list-style-type: none"> <li>هل انفجر أحد المنصهرات أو توقف قاطع الدائرة؟</li> <li>هل تم إزالة كابل الطاقة أو تحريره من المنفذ الكهربائي الحاطئ؟</li> </ul>	الثلجة لا تعمل
<ul style="list-style-type: none"> <li>زر التحكم غير مضبوط على الوضع المناسب</li> <li>تم وضع الجهاز بالقرب من الحاطئ أو مصادر الحرارة</li> <li>فتح الباب بشكل متكرر في طقس دافئ</li> <li>تم ترك الباب مفتوحاً لفترة طويلة</li> <li>تم الاحتفاظ بمقادير كبيرة من الأطعمة في الثلاجة</li> </ul>	درجة حرارة مقصورة الثلاجة أو الفريزر دافئة للغاية
<ul style="list-style-type: none"> <li>تم تركيب الثلاجة في مكان ضعيف أو غير مستقر، أو أن مسمار المستوى يحتاج للتعديل</li> <li>تم وضع عناصر غير ضرورية في الجانب الخلفي من الثلاجة</li> </ul>	ضوضاء غير عادية
<ul style="list-style-type: none"> <li>لابد من تعينة الأطعمة ذات الروائح القوية أو تغليفها بإحكام</li> <li>تحتاج الثلاجة للتنظيف من الداخل</li> </ul>	وجود رائحة في الثلاجة
<ul style="list-style-type: none"> <li>لا تعمل على نحو غريب أثناء فترات الرطوبة المرتفعة</li> <li>تم ترك الباب مفتوحاً جزئياً</li> </ul>	تكون رطوبة على أسطح الثلاجة

الأعراض	السبب والحل المحتمل
لا يوجد تبريد أو التجميد	<ul style="list-style-type: none"> <li>هل هناك انقطاع في التيار الكهربائي؟</li> <li>تحقق من قوة الأجهزة الأخرى</li> </ul>
تحقيق من قوة الأجهزة الأخرى	<ul style="list-style-type: none"> <li>قم بتوسيع قابس الطاقة في المنفذ بشكل صحيح</li> </ul>
أو أن الجهاز متصل بماخذ ينفجر أحد المصهرات في منزلك أو قد يتقطع قاطع الدائرة GFCI . وتعطل قاطع دائرة المنفذ ،(قطاع دائرة الأعطال الأرضية)	<ul style="list-style-type: none"> <li>لا تقم بزيادة سعة المصهر. افحص الصندوق الكهربائي الرئيسي واستبدل المصهر أو أعد ضبط قاطع الدائرة.</li> <li>إذا كانت المشكلة عبارة عن حمل زائد للدائرة ، فقم بتخصيصها بواسطة كهربائي مؤهل</li> <li>أعد ضبط قاطع الدائرة على GFCI .. إذا استمرت المشكلة ، فاتصل بفني كهربائي</li> </ul>

## لا تستخدم كابل تمديد

عند الممكن، عليك توصيل الثلاجة بمنفذ كهربائي منفرد لمنع أي أجهزة أخرى أو أصوات منزلية من التسبب في حمل زائد من الممكّن أن يتسبّب في انقطاع الطاقة.

## سهولة الوصول لقبس الطاقة

الفرizer في موضع يسهل الوصول من خلاله/لابد أن تكون الثلاجة قابس الطاقة لفترة سريعاً عند حدوث أي ظرف طارئ.

## استبدال كابل الطاقة

إذا تلف كابل الطاقة، يجب استبداله بمعرفة جهة التصنيع أو وكيل الخدمة أو الأشخاص المؤهلين لتجنب المخاطر

### لا تقم بتعديل أو تمديد طول كابل الطاقة

سيتسبب ذلك في حدوث صدمة كهربائية أو حريق



هذا الجهاز(الأرضي) لابد من تأريض

افعلها الآن! لا تنتظر

لا تخزن مواد قابلة للاشتعال،  
أو منتجات، أو مواد كيميائية في الثلاجة.

## مكان جذب خطير للغاية

الثلاجة المازاغة من الممكن أن تكون مكان جذب خطير على إرادة المزالج، والخشايا، والأغطية، أو الباب للأطفال بالكامل من جهاز الغير مستخدم، أو اتخاذ بعض الإجراءات الأخرى لجعله غير مؤذى.

## التخلص من الجهاز القديم

، وهو مصنوع من أجزاء ومواد(تبريد، تشحيم) هذا الجهاز يحتوي على سوائل أو إعادة تدويرها/يمكن إعادة استخدامها. يجب إرسال جميع المواد الهامة لمركز تجميع مواد النفايات ويمكن إعادة لإعادة، يرجى الاتصال بالوكالة المحلية.(إعادة تدويرها) استخدامها بعد. (إعادة تدويرها) استخدامها بعد.

"للبلدان الأعضاء في اللجنة الأوروبية للمواصفات الكهروتقنية)  
سنوات أو أكثر و ٨ يمكن استخدام هذا الجهاز من قبل الأطفال الذين يبلغون الأشخاص الذين يعانون ضعفاً في القدرات الحسية أو الحسية أو العقلية أو الذين لا يتمتعون بالخبرة والمعرفة الكافية، إلا إذا تمت مرافقتهم أو توجيههم. فيما يتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر المرتبطة عن ذلك. لا يجب على الأطفال أن يقوموا بتنظيف الجهاز أو صيانته من دون إشراف."

:للبلدان الأعضاء في اللجنة الأوروبية للمواصفات الكهروتقنية\* أستراليا و بلجيكا و بلغاريا و كرواتيا و قبرص و جمهورية التشيك و الدنمارك و إستونيا و فنلندا و مقدونيا و فرنسا وألمانيا و قبرص و هنغاريا و إيسلندا و إيرلندا و إيطاليا و لاتفيا و ليتوانيا و لوكسمبورغ و مالطا و هولندا والدنمارك و بولندا والبرتغال و رومانيا و سلوفاكيا و سلوفينيا و إسبانيا و السويد و سويسرا وتركيا و المملكة المتحدة.

**ذوي(بما يشمل الأطفال) هذا الجهاز غير معتمد للاستخدام من قبل الأشخاص"**

الإعاقة البدنية، أو الحسية، أو الذهنية، أو الذين يفتقرن للخبرة والمعرفة، إلا إذا كان ذلك تحت إشراف أو تعليمات شخص استخدام الجهاز من قبل شخص مسئول عن سلامتهم ." يجب الإشراف على الأطفال للتأكد من عدم لعبهم بالجهاز

## ⚠ تحذير

عليك دائمًا إزالة قابس الطاقة من المنفذ الحائطي قبل التنظيف. وعلىك مسح الرطوبة الزائدة بقطعة اسفنج أو قطعة قماش لمنع المياه أو أي سائل آخر من التسرب إلى أي جزء كهربائي والتبسيب في صدمة كهربائية. لا تستخدم سوائل التنظيف القابلة للأشتعال أو السامة.

- تبيهات للتنظيف. لا تستخدم مواد الأسطح النشطة: مثل شمع السيارة، أو مضادات التآكل، وجميع أنواع الزيوت، أو البنزين، أو الأحماض، أو الشمع.
- يمكن استخدام المنظفات الفاترة، أو محليل غسيل الأطباق، أو الماء بالصابون، من الممكن أن يؤدي الإهمال في الاستخدام إلى تغيير اللون.

## ⚠ احذر

1. استخدم مياه فاترة عند التنظيف.
2. خزان المياه: لا تستخدم أي شيء يخالف المياه. فإذا تم استخدام أي سائل آخر، يرجى شطف الخزان ثلاثة أو أربعة مرات بالمياه.

من المستحبيل أن تظل ثلاجتك نظيفة لمنع الروائح الغير مرغوب فيها. يجب مسح الطعام المسكوب في الحال، حيث أنه من الممكن أن ينخض ويولوث الأسطح البلاستيكية إذا تم تركه.

لا تستخدم ألواح تنظيف معدنية، أو فرش، أو أدوات تنظيف حشنة، أو محليل قوية قوية على أي سطح. قبل التنظيف، تذكر أن الأجسام الصلبة قد تلتصق بالأسطح الباردة للغاية. لا تمس الأسطح المجمدة بيديك مبللة أو رطبة.

الخارج. استخدم محلول فاتر من الصابون المعتمل أو محلول غسيل الأطباق لتنظيف ثلاجتك من الخارج. امسحها بقطعة قماش نظيفة، ورطبة، ثم عليك تجفيفها.

الداخل. ينصح بالتنظيف المنتظم للثلاجة من الداخل والأجزاء الداخلية. استخدم محلول فاتر من الصابون المعتمل أو محلول غسيل الأطباق لتنظيف ثلاجتك من الداخل. امسحها بقطعة قماش نظيفة، ورطبة، ثم عليك تجفيفها.

عليك غسل أرفف المقصورة، وحوامل الباب، الأجزاء الداخلية وصواني التخزين، والأقفال المغناطيسية للباب،.. الخ. استخدم محلول فاتر من الصابون المعتمل أو محلول غسيل الأطباق لتنظيف ثلاجتك من الداخل. امسحها بقطعة قماش نظيفة ورطبة، ثم عليك تجفيفها.

## معلومات عامة

### أنبوب مضاد التكتف

قد يصبح الجدار الخارجي للثلاجة دائمًا أحياناً، وبخاصة بعد التركيب مباشرةً. لذلك بسبب أنبوب مضاد التكتف، والذي يضخ المبرد لا تندesh. لذلك بسبب أنبوب مضاد التكتف، والذي يضخ المبرد الحر لمنع "التعرق" على الجدار الخارجي.

### انقطاع الطاقة


يتم تصحيح معظم أعطال الطاقة في حوالي ساعة أو اثنان، ولن تؤثر على درجة حرارة ثلاجتك. ومع ذلك، عليك تخفيف عدد فتحات الباب أثناء انقطاع الطاقة. وعند انقطاع الطاقة لفترات أطول، ضع قطعة من الثلج الجاف أعلى عبواتك المجمدة.

## احذر

### خطر الصدمة الكهربائية

قبل استبدال مصباح الإضاءة المحرق، عليك إما نزع قابس التلاجة أو إيقاف الطاقة من قاطع الدائرة أو صندوق الصمامات.

**ملاحظة:** تحريك زر التحكم إلى وضع الإيقاف لا يزيل الطاقة من دائرة الضوء.

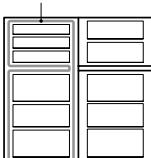



موزع الماء

الشبكة

امسحها بقطعة قماش نظيفة ورطبة، ثم عليك تجفيفها باستخدام قطعة قماش جافة.

خزان المياه -

١. التعينة بالمياه

(يمكن تعبيته بفتح غطاء خزان المياه) من الضروري ازالة خزان المياه لتعبيته بالمياه.

## ملاحظة

قبل إغلاق الباب، أغلق الغطاء والمشبك بالحكام.

لا تستخدم المسوائل التي تحتوي على السكريات أو المشروبات الغازية.

٢. الفك

ارفع خزان المياه، بشد خزان المياه من الجانبين ومن الأسفل.

## ملاحظة

قبل فك خزان المياه، عليك إفراغ جميع المياه من الخزان.



٣. التركيب

إذا تم وضع خزان المياه في موضع غير صحيح لأي سبب، ضعه مرة أخرى في بمجرد. وتأكد من وضع الصمام على النحو الصحيح في فتحة الباب. موضعه الأصلي. التركيب ادفعه وتتحقق موضع خزان المياه مع الخط على الباب.


خزان المياه -

٤. عليك ازالة غطاء الخزان

٣. عليك تنظيف الغطاء من الداخل والخارج بمنظف للأطباق ثم جفف المياه وانشهقه بالكامل تحت مياه جارية . بقطعة قماش.

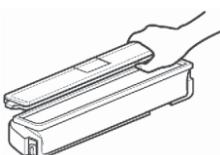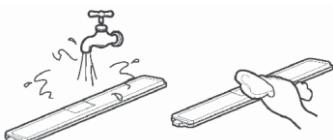

٤. عليك تركيب الغطاء في الخزان وتنبيئه بالمشبك بمساعدة الأطراف الموجودة به، عليك أيضًا تنبيئه في باب الثلاجة.




# اقتراحات بشأن تخزين الأطعمة

## تخزين الأطعمة

- كما أن كثافة تجميد وذوبان الطعام هو عامل هام في الحفاظ على نضارته ونكهته. عليك تخزين الطعام الطازج في مقصورة الثلاجة.
- لا تخزن الطعام الذي يفسد بسهولة في درجات حرارة منخفضة مثل البطيخ واللانanas والموز.
- فوضع الطعام الساخن في الثلاجة من الممكن أن يفسد الأطعمة الأخرى، ويؤدي إلى فواتير. اترك الطعام الساخن ليبرد قبل تخزينه.
- كهرباء أعلى.
- سيمتن ذلك من تبخر الرطوبة ويساعد الطعام، عند تخزين الطعام، عليك تغطيته بغطاء من القينيل أو تخزينه في حاوية ذات غطاء على الحفاظ على نكهته وعناصره الغذائية.
- فالتوسيع السادس للهواء البارد يحافظ على درجة حرارة الثلاجة متساوية لا توجب فتحات لتهوية بالطعام.
- ففتح الباب يؤدي إلى إدخال الهواء الدافئ إلى الثلاجة، ويسبب في ارتفاع درجة الحرارة. لا تفتح الباب على نحو متكرر.
- في حالة حدوث انقطاع التيار الكهربائي، اتصل بشركة الكهرباء وأسأل عن مدة الانقطاع.
- يجب أن تتجنب فتح الأبواب أثناء فصل الطاقة عن الجهاز.
- عندما يعود مصدر الطاقة إلى وضعها الطبيعي، تتحقق من حالة الطعام.


## مقصورة الفريزر

- لا تخزن الزجاجات في مقصورة الفريزر فقد تتكسر عند تجمدها.
- سبب ذلك في فقدان النكهة والقيمة الغذائية. لا تحمد الطعام الذي قد تم إذابته من قبل.
- عند تخزين طعام مجده مثل الأيس كريم لفترة طويلة، ضعه على رف الفريزر، وليس في حامل الباب.
- تحمي الفريزر - ينصح بتحميم الأطعمة التي يتم إدخالها حديثاً في الموضع التالي لتجميدها.

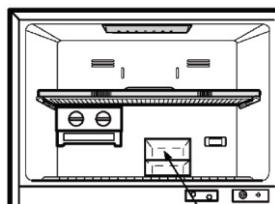

Newly introduced food

- سلة باب الثلاجة، العلامة [ ] هي حجرة بـ 12 درجة مئوية، وهي مناسبة للتخزين على المدى القصير للمواد الغذائية المجمدة (اختياري).

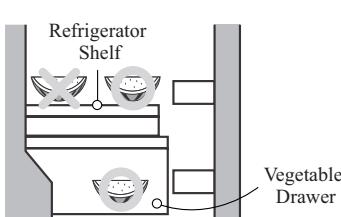


## مقصورة الفريزر

- تجنب وضع الطعام الرطب في العمق الداخلي لأرفف الثلاجة، حيث أنها من لتجنب ذلك، من الأفضل تخزين الممكن أن تتمدد بسبب اتصالها بالهواء البارد. الطعام في حاوية مغلقة.
- في (ب خاصة الخضروات والفواكه) من المرغوب فيه تخزين الطعام الرطب مقصورة تخزين الخضروات.
- وإذا كان من الضروري تخزينها على رف الثلاجة، ضعها بالقرب من الباب. وبعيداً عن الجدار الخلفي للثلاجة لتجنب تجمدها بالاتصال المباشر بالهواء البارد.
- يجب غسل الخضروات، عليك دانياً تنظيف الطعام قبل وضعه في الثلاجة. والفواكه و سبعها، وبالنسبة للطعام المعيناً فيتبيغي أن يتم مسحه لتنظيفه، وذلك لمنع تلف الأطعمة المجاورة.
- عند تخزين البيض في حامل تخزينه، تأكّد من أنه طازج، وعليك دانياً تخزينه في الموضع الأيمن العلوي، مما يحافظ عليه طازجاً لفترة أطول.
- في حال وجود حبوات تبريد في الجهاز، لا تخزن الخضروات والفواكه التي تحتوي على محتوى ذي رطوبة عالية في حجرة التبريد لأنها قد تتمدد بسبب إنخفاض درجة الحرارة.

## استخدام "التخفيص المسموع" بغرض تشخيص المشكلات

### توجد لوحة العرض داخل كابينة الثلاجة

١. افتح باب الثلاجة
٢. اضغط مع الاستمرار على زر Fridge (ثلاجة) لمدة ثلات ثوانٍ أو أكثر
٣. إذا صدر الصوت الطنان 4 مرات، افتح باب المجمد وثبت الهاتف بالقرب من فتحة مكبر الصوت  
• إذا تم إغلاق شاشة العرض لأكثر من 5 دقائق، يجب إلغاء تفعيل القفل وإعادة تفعيله مرة ثانية

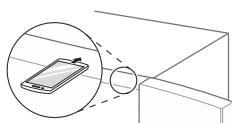

﴿ بعد إتمام نقل البيانات، سيظهر التشخيص على شاشة التطبيق.


- اتبع التعليمات أدناه للاستعانة بطريقة التشخيص المسموع.  
قم بتشغيل تطبيق LG ThinQ واختر ميزة "التخفيص الذكي" من القائمة. اتبع تعليمات استخدام التشخيص المسموع الواردة في تطبيق LG ThinQ
- ١ أغلق باب الثلاجة والفرizer، اضغط على زر Lock لتنشيط وظيفة القفل.
- إذا تم قفل شاشة العرض لمدة تزيد عن ٥ دقائق ، يجب ان تقوم بإلغاء التفليث ثم إعادة تفعيله.



### ٢ اضغط مع الاستمرار على زر Fridge لمدة ٣ ثوانٍ أو أكثر.

- سوف يتم إيقاف تشغيل وحدة التحكم، وسوف يتم عرض الرقم "٣٣" على الجزء الخاص بعرض درجة حرارة الثلاجة.

### ٣ افتح باب الثلاجة والمجمد ثم أمسك الهاتف على فتحة السماعة اليمنى العلوية.

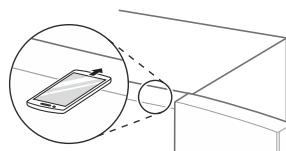

﴿ بعد إتمام نقل البيانات، سيظهر التشخيص على شاشة التطبيق.

#### ملاحظة

- للحصول على أفضل نتائج، تجنب تحريك الهاتف بينما يتم إصدار الأصوات.

## معلومات حول إشعار البرامج مفتوحة المصدر

للحصول على التعليمات البرمجية للمصدر ضمن GPL، LGPL، وMPL، والحصول على التراخيص مفتوحة المصدر الأخرى التي لديها التزامات للكشف عن التعليمات البرمجية الخاصة بالمصدر، المضمنة في هذا المنتج، وللوصول إلى كل أحكام الترخيص المشار إليها، وإشعارات حقوق النشر وكل الوثائق ذات الصلة، يرجى زيارة <https://opensource.lge.com>

ستتوفر LG Electronics أيضاً التعليمات البرمجية المفتوحة المصدر على قرص CD-ROM مقابل رسم يغطي تكلفة القيمة بهذا التوزيع (مثل تكاليف وسائل النقل والشحن والتسلیم) بناءً على طلب يرسل عبر البريد الإلكتروني إلى [opensource@lge.com](mailto:opensource@lge.com). يسري هذا العرض لأي شخص يتسلم هذه المعلومات لمدة ثلاثة سنوات بعد آخر عملية شحن لهذا المنتج.

## التشخيص الذكي

توفر هذه الميزة فقط في الطرز الذي تحمل العلامة  أو . يمكنك الاستعانة بهذه الميزة لتشخيص المشكلات التي تواجهك أثناء استخدام الجهاز وحلها.

### ملاحظة

- قد لا تعمل هذه الخدمة وذلك يعود لعوامل خارجية على سبيل المثال لا الحصر، عدم توفر شبكة Wi-Fi أو انقطاع الاتصال بشبكة Wi-Fi أو السياسة المحلية لمتجر التطبيقات أو عدم توفر التطبيق وهذه أسباب لا تتم عن تقصير من LGE.
- قد تتعرض هذه الميزة للتغيرات دون سابق إنذار وقد يختلف شكلها وفقاً للمنطقة التي تسكن فيها.

## استخدام تطبيق LG ThinQ بغض تشخيص المشكلات

إذا واجهت مشكلة أثناء استخدام الجهاز المزود بشبكة Wi-Fi، فحينها يمكن نقل بيانات استكشاف الأخطاء وإصلاحها إلى هاتف ذكي باستخدام تطبيق LG ThinQ.

- قم بتشغيل تطبيق LG ThinQ واختر ميزة "التشخيص الذكي" من القائمة. اتبع التعليمات الواردة في تطبيق LG ThinQ

## تنبيه تطبيق LG ThinQ

ابحث عن تطبيق LG ThinQ على & Google Play Store من على هاتف ذكي. اتبع التعليمات لتنزيل التطبيق وتنبيه.

### الاتصال بشبكة Wi-Fi

يسمح زر **Wi-Fi**، عندماً يستخدم مع تطبيق LG ThinQ، للجهاز بالاتصال بشبكة Wi-Fi المنزل. يظهر رمز  حالة اتصال شبكة الجهاز. يضيء الرمز عندما يتصل الجهاز بشبكة Wi-Fi.

### التسجيل الأولي للجهاز

- شعل تطبيق LG ThinQ واتبع التعليمات في التطبيق لتسجيل الجهاز.


إعادة تسجيل الجهاز أو تسجيل مستخدم آخر.

- اضغط مع الاستمرار على زر **Wi-Fi** لمدة ٣ ثوان لإيقافه مؤقتاً. شعل تطبيق LG ThinQ واتبع التعليمات في التطبيق لتسجيل الجهاز.

### ملاحظة


- لتعطيل وظيفة Wi-Fi، اضغط مع الاستمرار على زر **Wi-Fi** لمدة ٣ ثوان. سوف يتم إيقاف تشغيل رمز .

قم بإغلاق بيانات الهاتف المحمول أو البيانات الخلوية على هاتف الذكي.

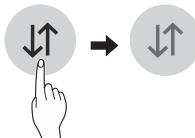

٤

وصل هاتف الذكي بجهاز التوجيه اللاسلكي.

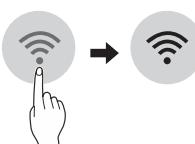

٣

**تطبيق LG ThinQ**  
توفر هذه الميزة فقط في الطرز المزودة بشبكة Wi-Fi.  
يسمح تطبيق **LG ThinQ** لك بالتوصال مع الجهاز باستخدام هاتف ذكي.

## مزايا تطبيق LG ThinQ

تواصل مع الجهاز من هاتف ذكي باستخدام الميزات الذكية المريحة.

### التخفيض الذكي

- تساعدك ميزة التخفيض الذكي على تشخيص أي مشكلة تواجهك أثناء استخدام الجهاز.

### الإعدادات

- يسمح لك بتعيين خيارات متعددة على الجهاز وفي التطبيق.

### ملاحظة

- للتحقق من الاتصال بشبكة Wi-Fi، تأكد أن الرمز على لوحة التحكم مضيء.
- يدعم الجهاز شبكات Wi-Fi بتردد 2,4GHz فقط.
- لمعرفة تردد الشبكة الخاصة بك، اتصل بمزود خدمة الإنترنت أو راجع دليل جهاز التوجيه اللاسلكي.
- تطبيق **LG ThinQ** ليس مسؤولاً عن أي مشاكل الاتصال بالشبكة أو أي أخطاء، أو خلل، أو أخطاء نتجت عن طريق الاتصال بالشبكة.
- إذا كان لدى الجهاز مشكلة اتصال بشبكة Wi-Fi، قد تكون بعيدة كل البعد عن جهاز التوجيه. اشتر جهاز تقوية WiFi (موسع المدى) لتحسين قوة إشارة WiFi.
- قد لا يتم الاتصال بشبكة WiFi أو قد يتم قطع الاتصال حسب جودة بيئة الشبكة المحلية.
- قد لا ي udało الاتصال بالشبكة بشكل صحيح وفقاً لمزود خدمة الإنترن特.
- يمكن أن تجعل البيئة اللاسلكية المحيطة خدمة الشبكة اللاسلكية تعمل ببطء.
- تعذر تسجيل الجهاز بسبب مشكلات في إرسال الإشارة لاسلكياً. افصل قابس الجهاز عن الطاقة وانتظر لمدة دقيقة قبل أن ت嘗م مجدداً.
- إذا كان جدار الحماية الموجود على جهاز التوجيه الخاص بك ممكناً، قم بتعطيله أو أضف إليه استثناء.
- يجب أن يكون اسم الشبكة اللاسلكية (SSID) مكوناً من أحرف وارقام باللغة الإنجليزية. (لا تستخدم رموزاً خاصة)
- قد تختلف واجهة استخدام الهاتف الذكي حسب نظام تشغيل الهاتف وحسب الشركة المصنعة.
- إذا كان بروتوكول الأمان الخاص بجهاز التوجيه مضبوطاً على **WEP**، فقد تعذر عليك إعداد الشبكة. الرجاء تغييره إلى بروتوكول أمان آخر (يُنصح باختيار **WPA2**) ثم أعد تسجيل المنتج.

## قبل استخدام تطبيق LG ThinQ

- تأكد من المسافة بين الجهاز وجهاز التوجيه اللاسلكي (شبكة WiFi).

### ملاحظة

- إذا كانت المسافة بين الجهاز وجهاز التوجيه اللاسلكي بعيدة أكثر من اللازم، ستصبح قوة الإشارة ضعيفة. قد يستغرق التسجيل وقتاً طويلاً أو قد يفشل التثبيت.

## استبدال المصباح

يأتي هذا المنتج مزوًّدًا بمصباح بتقنية LED لا يمكن استبداله من قبل . يرجى الاتصال بمركز الخدمة المعتمد لاستبدال المصباح المستخدم.

## ميزة INVERTER-ON (اختيارية)

١. أثناء استخدام هذه الميزة، سيعمل البراد حسب المتطلبات الأساسية وفقاً لما يتطلبه المنتج
٢. وقد تختلف نتائج ميزة Inverter-On. وفقاً لعدد الأجهزة التي تعتمد على المحول لتعمل
٣. ليعمل البراد بشكل مثالي عندما تكون ميزة Inverter-On قيد التشغيل، يوصى بإيقاف تشغيل الأجهزة الأخرى التي لا تكون قيد الاستخدام
٤. يوصى بالتأكد من جودة الأطعمة قبل استهلاكها
٥. قد يذوب الآيس كريم أثناء استخدام هذه الميزة، في حال حدوث ذلك، يوصى بتغيير الإعداد كما تريده

## نمط ضوء LED في وضع INVERTER-ON (اختيارية)

أثناء استخدام هذه الميزة، سيكون نمط LED . هذا مضاء يرمز إلى أن المنتج يعمل وفقاً لمتطلبات الطاقة الأساسية

يمكن الضغط على الزر "REF TEMP" "درجة حرارة البراد للتغيير إعداد LED . في الوقت الذي تكون فيه الطاقة مقطوعة، إذا لزم الأمر عند تغيير الوضع من التزويد العادي إلى وضع المحول والعكس، سيأخذ نمط LED بعض الوقت لعرض التغيير

## وقت الأجزاء


ضع العناصر القابلة للتجمد في الفريزر. أثناء الأجزاء متوسطة الطول، فنم المحتمل أن يكون أفضل خيار لك أن تترك الثلاجة قيد التشغيل لفترة حياة أطول.

إذا كنت تتوى إيقاف تشغيل الجهاز لفترة طويلة، وقم بتنظيف الجهاز من الداخل، راعي إخراج جميع المواد الغذائية منه، وفصل سلك الطاقة، واترك الأبواب مفتوحة قليلاً لمنع ت تكون العفن في الجهاز.

## موزع المياه (اختياري)


- صب الماء بعد وضع خزان الماء في مكانه .
- عند الضرورة افصل خزان الماء لتنظيفه أو عندما لا يكون قيد الاستخدام.
- عندما لا يكون صندوق الماء في موضعه الصحيح بعد تعبئته بالماء، من الممكن أن تتسرب المياه من الصمام.

**ملاحظة**

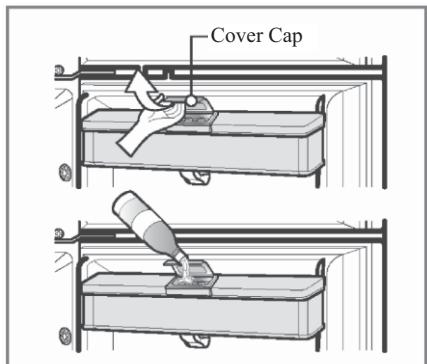


- صب الماء في خزان المياه

### ١. افتح الغطاء وصب المياه في خزان المياه

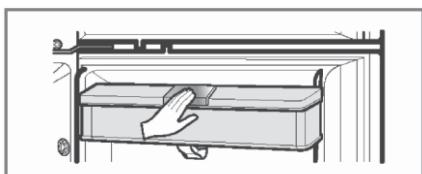

- ٢. أغلق الغطاء

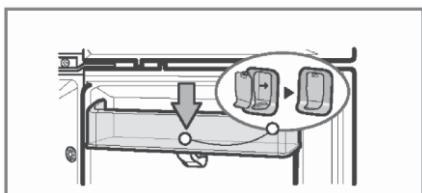

- ٣. خزان المياه هو جزء اختياري قابل للإزالة يمكن تزويده لتكبير يمكنك استخدام السلة الطوربة بعد إزالة خزان سعة التخزين المياه وإغلاق الفتحة بالسدادة . السدادة مرفقة بدرج البيض .



## انتبه !

لا تستخدم أي شيء بخلاف الماء، حتى المياه الساخنة ستكون بحاجة لتبریدها قبل صبها في خزان المياه . لا يملاً بما يزيد على المستوى المحدد .

- مياه الشرب

١. اضغط على لوحة المحفز بالكأس
٢. ستعود اللوحة إلى سنتفقي المياه عند الضغط على لوحة الموزع . موضعها الأصلي عند إزالة الكأس وسيتوقف تدفق المياه .

# التشغيل


## الصحي الطازج (اختياري)

### احذر !

قبل التركيب أو استخدام المنتج، تأكيد من قراءة دليل المالك بعناية لكي تستخدم المنتج بشكل صحيح كما هو محدد.  
مرشح الطازج الصحي لديه وظيفة مضادات الجراثيم بازالة الفيروس أو البكتيريا داخل الثلاجة ووظيفة مزيل الرائحة لإزالة الروائح.

انتقل إلى نمط الاستخدام  
انتقل إلى نمط الاستخدام

- لكي تستخدم مرشح الصحي الطازج، اضغط زر على لوحة العرض على الجانب الأمامي للباب وانتقل إلى نمط ثقافي POWER أو تشغيل AUTO .  
وقد تضطر على الزر، سوف يتحول مرشح الصحي الطازج إلى (AUTO ← OFF ← POWER ← AUTO ← AUTO )

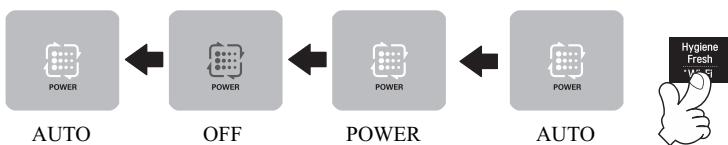

### احذر !

عندما ينتقل المستخدم إلى نمط AUTO أو POWER ، فإن ال LED المرشح سوف تضيء أيضا.

افتح الباب لتتأكد من أن ال LED حول المرشح سوف تضيء أيضا  
قد تسبب لا قم بوضع إصبعك أو الجزيئات الغريبة داخل المروحة

### احذر !



- لا تقوم بغسل مرشح الصحي الطازج باستخدام الماء لأنها قد يسبب التلف
- المرشح قد لا يكون فعال لجميع أنواع الفيروسات والبكتيريا
- هذا النوع فعال في حالة إزالة البكتيريا الغير موجودة على الطعام في

يمكنك شراء مرشح الصحي الطازج من أقرب موزع أو مركز خدمة.

# التشغيل

## ازابة التجمد

- إزابة التجمد يحدث آليا
- المياه المذابة تسير للأسفل إلى مسار التبخير الذي يوجد في الجانب الخلفي المفتوح للثلاجة وتبخر آليا

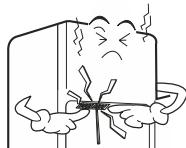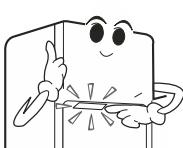


## إزالة الروائح

- الراحة الغير طيبة للطعام في حجارة الأطعمة الطازجة يتم إزالتها بدون أي ضرر على المستخدم أو على الطعام.

## كيفية الاستخدام

- بما أن مزيل الروائح يوجد في مدخل الهواء البارد لتدوير الهواء في حجارة الطعام الطازج، فإنه لا يوجد حاجة لأي إدارة.
- لا توخر مدخل الهواء البارد بأداة حادة لأن مزيل الروائح قد يتلف.
- عند تخزين الطعام ذات الراحة النفاذه، غلقه أو خزنها في وعاء بغضاء لأن الراحة قد تتسرّب إلى الأطعمة الأخرى.

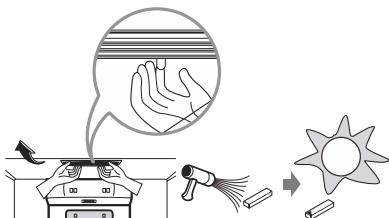

## كيفية الاستخدام


- بالاستعانة ببعض الأطوال و راحة نفاذة، ففي هذه الحالة يمكن إحياء وإعادة استخدام مزيل الراحة.
- افصل مزيل الراحة في سقف حجارة الثلاجة، وباستخدام مجفف الشعر ق بجازة الرطوبة أو الراحة النتفة و تأكدها تحت ضوء الشمس لتخلص الراحة النتفة بواسطة الأشعة فوق البنفسجية.

## صانع مكعبات الثلج صنع الثلج




- لصنع مكعبات الثلج، املأ درج الثلاجة بالماء وأدخله إلى موقعه.

- ثم ستنزلق. لإزالة مكعبات الثلج، أمسك الدرج من أسفل واسحبه برفق.
- مكعبات الثلج في صندوق مكعبات الثلج.

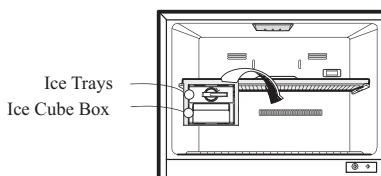

يمكنك فك صانع الثلاج لتوفير المساحة في الفريزر

بملاً بمياه الشرب فقط

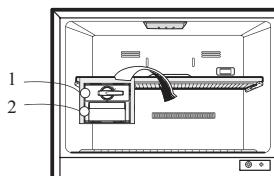

<Twisting Ice Serve Type>

## تحذير !

ملحوظة

- بنوع تقديم الثلاج عن طريق اللي ٢ و ١ أخرج
- 1. صينية الثلاج
- 2. صندوق مكعبات الثلاج

## تحذير !

- لا تستخدم أي شيء بخلاف الماء
- أملا الماء حتى خط العلامة فقط

\*الأطفال اختياري قفل

- قفل الأطفال

عند إيقافه، سيعمل مصباح القفل، ولن تعمل الآذار. ثوان لإيقاف قفل الأطفال ٣ أضغط واستمر بالضغط على زر قفل الأطفال لمدة لالغاء القفل، أضغط واستمر بالضغط على زر قفل الأطفال الآخر (Child Lock). ثانية ثم ثانية لفتحه.

**ملاحظة:** هذه الخاصية سوف تفتح القفل، بنفسها إذا تم اطفاء التلاجة

شآسا ضریغ مر دز جو



ةجودزم ضرعةشاشا



شاشة ضرورة مريغ موجود




جودزم ضرعةشاشا



تہرید الباب +

- إذا دخل هواء أو مواد غريبة إلى فتحة الهواء البارد أثناء التنظيف، سوف يقل مستوى الكفاءة



دراج الخضراءات

مادختسلاة اقیر ط

- يمكن استخدام درج الخضروات من خلال مفتاح التحكم
  - تحقق من وضع مفتاح التحكم قبل حفظ الطعام
  - لا تنسى مفتاح التحكم عند نقطة الـ سط



\* بفوة أجلاثل إيعشم تا تذ، إلإهتاد ذي حة فزيمله اذن هو كف تو سد

# التشغيل

## أدوات التحكم لمقصورة الثلاجة


□ لموديل التحكم الداخلي

الإعدادات الافتراضية لدرجة حرارة زر التحكم لمقصورة الثلاجة هي عادي (Normal).

التحكم في درجة حرارة الثلاجة، اضغط على زر

(Ref. Temp Control Button)


يتم ضبط درجة الحرارة في، وقتما تضغط على الزر، سيومض المصباح خطوات، بدءاً من أدنى ٧ (COLD) حتى أقصى (COLDEST) (أقل درجة حرارة = أكبر درجة حرارة، أقصى = أدنى). تبريد

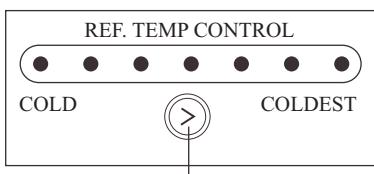

Ref. Temp Control Button

□ لموديل التحكم الخارجي

من الممكن أن تكون الرسوم الظاهرة على الشاشة مختلفة، وفقاً لنوع ثلاجتك

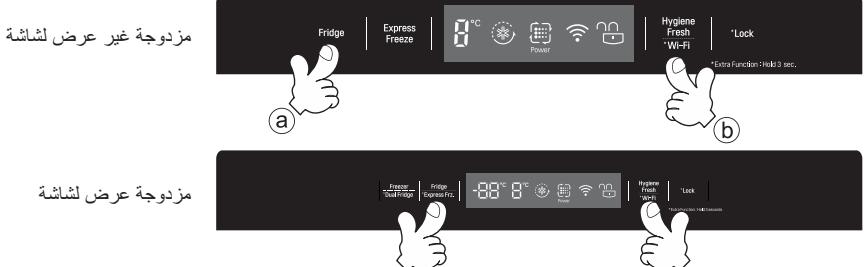

- اضغط زر "FRIDGE" للتحكم في درجة حرارة الثلاجة.
- وقدماً تضغط على الزر، سيومض المصباح
- اضغط زر "Hygiene Fresh" (اختياري) "الطعام الطازج الصحي" للتحكم في محرك.
- يشير الرقم الظاهر على الشاشة إلى درجة حرارة مقصورة الثلاجة
- درجة مئوية ٦ درجة مئوية حتى يمكن تحديد إعدادات درجة الحرارة من بين سبعة خطوات من

### شاشة أ

- اضغط على زر (b) وستختفي درجة حرارة الثلاجة بمقدار 1 درجة مئوية لكل مرة
- اضغط على الزر (a)، 1. يعمل محرك الطازج الصحي (2. سيعمل نمط الطاقة (3. يتوقف عن العمل

\* التجميد السريع (اختياري)\*

المكبس و مروحة الدوران. التبريد العلوي/عندما يتم تشغيل الثلاجة لأول مرة فإنه يمكن أن يتم تشغيل خاصية التجميد السريع ثم تغلق آلياً. يعمل عند أقصى سعة تبريد لتخفيف درجة حرارة الثلاجة سريعاً



التبريد العلوي من خلال الزر على/إذا تم وضع طعام ساخن داخل الثلاجة، فإنه يمكن أن يتم تشغيل خاصية التجميد السريع التبريد العلوي سوف تغلق عندما تصل درجة الحرارة إلى المستوى المناسب أو يمكن/خاصية التجميد السريع لوح التحكم التبريد العلوي/غلقها يدوياً وذلك بالضغط على زر التجميد السريع

## البدء

- ساعة من أجل جعل درجة الحرارة تستقر قبل ملء الثلاجة الأطعمة الطازجة<sup>٤</sup> عند تركيب ثلاجتك أول مرة، اسمع بمرور و المجمدة . دقائق قبل إعادة التشغيل<sup>٥</sup> إذا تم إيقاف التشغيل، انتظر

## قبل ضبط درجة الحرارة

- الحرارة، يوصي بأن، بمجرد ضبط، اعدادات درجة حرارة الثلاجة تبقى ثابتة بغض النظر عن التغيرات في درجة حرارة الغرفة . إلا يتم تغييرها إلا إذا كان ذلك ضروريًا (التحكم الخاص بحبرة الثلاجة والفرizer)
- هذه الثلاجة بها زر واحد للتحكم في درجة حرارة حبرة الثلاجة و قرص واحد للتحكم في درجة حرارة حبرة الفريزر
- الإعداد الافتراضي لزر التحكم في درجة حرارة حبرة الثلاجة هو<sup>٦</sup> أو ٤ درجات مئوية
- الإعدادات الافتراضية المؤشر ضبط درجة الحرارة لمقصورة الفريزر هي<sup>٧</sup>، درجة مئوية
- سوف يشغل و يطفى المكبس أليا حسب الحاجة.هذه الثلاجة بها حساس لدرجة الحرارة في حبرة الثلاجة

## تنبيه الباب


- ٣٠ وإذا ظل الباب مفتوحاً، سينتكرر التنبيه كل دقيقة، سيصدر صوت تنبيه لثلاثة مرات ١ عند يظل باب الثلاجة أو الفريزر مفتوحاً لمدة ثانية.

## الاختبار الذاتي

- عند، فإذا حدث عطل بها في مناطق محددة، سيظهر كود الخطأ المساعدة فني الإصلاح.تحتوي ثلاجتك على قدرة التشخيص الذاتي عرض كود الخطأ، لن تعمل وظائف التحكم والعرض الأخرى
- لا تفصل كابل الطاقة من منفذ الطاقة.إذا تم عرض كود الخطأ، اتصل بمركز الخدمة


## أدوات التحكم لمقصورة الفريزر

- كلما زاد عدد إعدادات التحكم، كلما أصبحت درجة حرارة حبرة الفريزر أقل
- بما أن درجة حرارة حبرة الثلاجة والفرizer يتم التحكم بهما من خلال كمية ثابتة من الهواء المبرد، فإن حبرة الثلاجة سوف تكون أسرع إذا صارت حبرة الفريزر أبرد
- إذا كانت حبرة الفريزر غير باردة بما يكفي في فصل الشتاء، قم بضبط التحكم الخاص بالفرizer ليكون مرتفع (٦~٨).

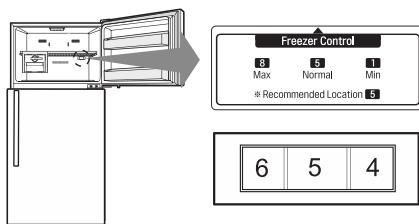

الأجزاء الداخلية

غیر موزع المیاه نموذج

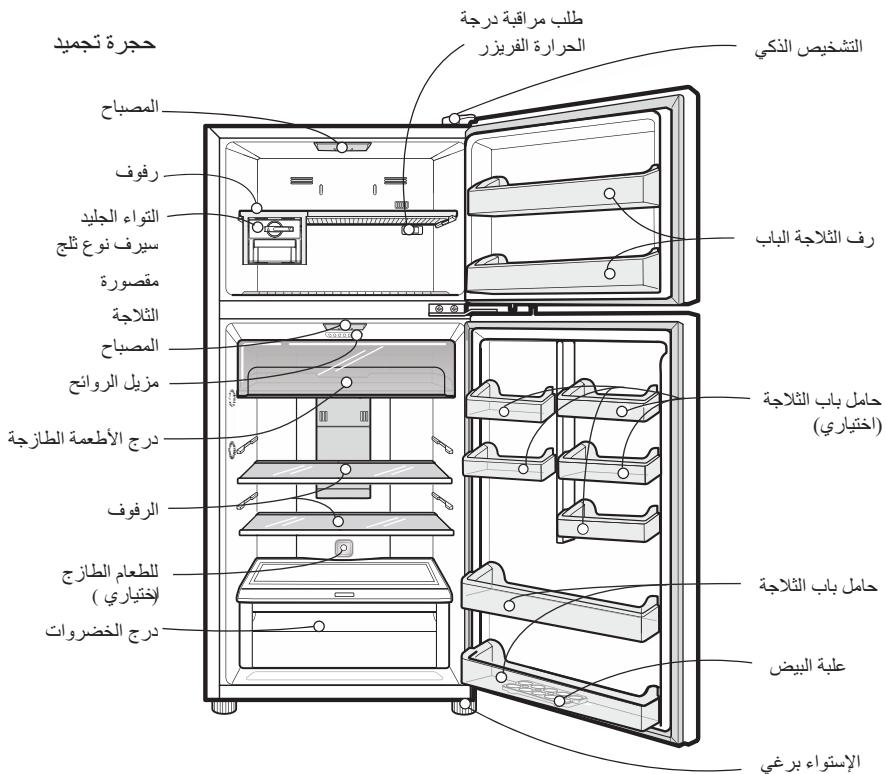

الثلاثة التي قفت بشرانها قد يكون بها بعض أو كل الخصائص الموضحة. هذا الدليل يغطي أنواع مختلفة متعددة في الأعلى للحفظ على مكان الأجزاء الداخلية مثل السلال، الادراج والارفف المتوفرة من قبل المصنع هي الأكثر كفاءة في الاستخدام من أجل توفير الطاقة.


نتيجة للتطور المستمر، مواصفات الآليات قد تتعرض للتغير.

اقتر احات من احل توفر الطاقة

- رجاء لا تترك باب مفتوح لفترة طويلة، أغلق الباب في أفل وقتك
  - لا ينصح بوضع الكثير من الطعام بحيث يجب ترك فراغ كافٍ ليسمح بالهواء البارد الدوران بحرية
  - لا تضع الطعام بالقرب من حساس درجة الحرارة. لا تضيّط درجة حرارة الثلاجة لتكون أقل من الاحتياج
  - الفريزر قد يفسد الطعام الآخر، ويتسرب. وضع الطعام الساخن في الثلاجة. اسمح للطعام الساخن أن يبرد قبل تخزينه في فوایر کھر باهاظة
  - الفريزر مكافحة. الدوران السلس للهواء البارد يعني درجة حرارة الثلاجة. لا تسد فتحات التهوية بالطعام
  - الفريزر، ويسبب ارتفاع. فتح باب الثلاجة يجعل الهواء الساخن يدخل إلى الثلاجة. لا تفتح باب الثلاجة بشكل متكرر
  - درجة الحرارة
  - يضم نظام إزالة الثلوج تلقائياً في الجهاز خلو حبيرة المجمد من تراكم الثلوج في طروف التشغيل العادي
  - في حالة تلف الحشيشة، قد يتم خفض المكاءة بسبب الهروب من الهواء البارد

موزع المياه نموذج

## حرة تجميد

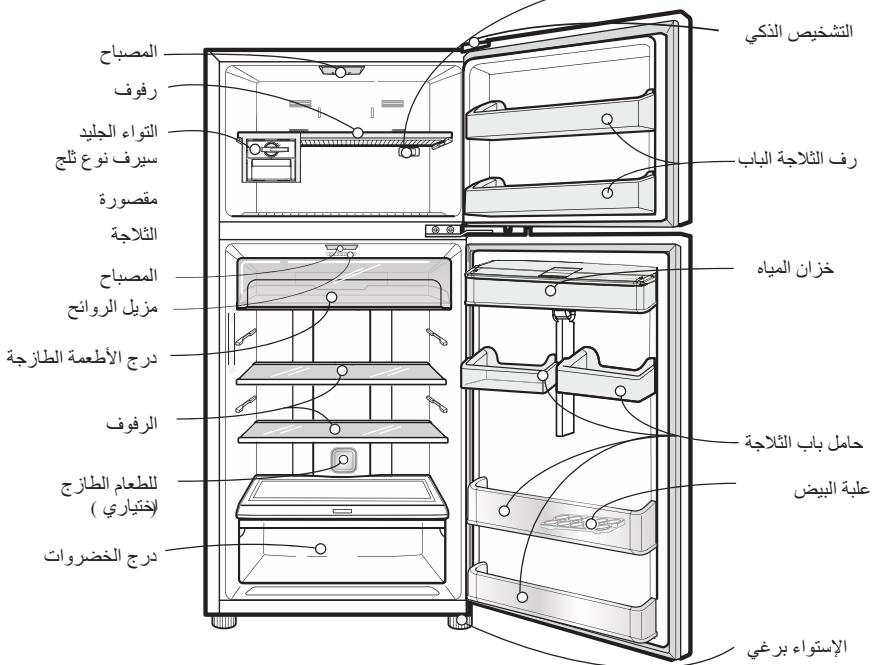

## ملاحظة


- الثلاجة التي قمت بشرائها قد يكون بها بعض أو كل الخصائص الموضحة. هذا الدليل يغطي انواع مختلفة متعددة في الأعلى
- الحفاظ على مكان الأجزاء الداخلية مثل السلاسل، الادراج و الارفف المتوفرة من قبل المصنع هي الأكثر كفاءة في الاستخدام من أجل توفير الطاقة
- نتيجة للتطور المستمر، مواصفات الانواع قد تتعرض للتغير.

## اقتراحات من أجل توفير الطاقة

- رجاءً لا تترك باب مفتوح لفترة طويلة، أغلق الباب في أقل وقت
- لا ينصح بوضع الكثير من الطعام بحيث يجب ترك فراغ كافٍ ليسمح بالهواء البارد التوران بحرية
- لا تضع الطعام بالقرب من حساس درجة الحرارة. لا تضبط درجة حرارة الثلاجة لتكون أقل من الاحتياج
- الفريزر قد يفسد الطعام الآخر، ويسببه. وضع الطعام الساخن في الثلاجة. اسمح للطعام الساخن أن يبرد قبل تخزينه في فواتير كهرباء باطنية
- الفريزر مكافيقة الدوران السادس للهواء البارد يبقى درجة حرارة الثلاجة لا تسد فتحات التهوية بالطعام
- الفريزر، ويسبب ارتفاع. فتح باب الثلاجة يجعل الهواء الساخن يدخل إلى الثلاجة. لا تفتح باب الثلاجة بشكل متكرر درجة الحرارة
- يضمن نظام إزالة التلنج تلقائياً في الجهاز خلو حبيرة المجمد من تراكم الثلوج في طروف التشغيل العادية
- في حالة ثلف الحشيشة، قد يتم خفض الكفاءة بسبب الهروب من الهواء البارد

## الأبعاد والخلوصات

قد تؤدي المسافة الصغيرة جداً بين الجهاز والعناصر المجاورة له إلى تدني قدرته على التبريد وزيادة تكاليف براعي أن تكون المسافة بين الجهاز وأي حاطنـ الكهرباء . مـ عند تركيب الجهاز ٥٠ مجاور له أكثر من

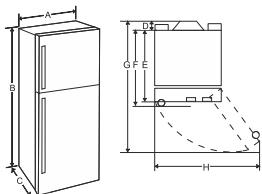

صورة لغرض التمثيل فقط

-	G*.*5**	G*.*4**
A	700	700
B	1780	1680
C	730	730
D	25	25
E	660	660
F	705	705
G	1331	1331
H	1232	1232

## درجة الحرارة المحيطة

تم تصميم الجهاز للعمل ضمن نطاق محدود من درجات تجنب الحرارة المحيطة، وذلك حسب المنطقة المناخية .استخدام الجهاز في درجة حرارة تتجاوز هذا النطاق قد تتأثر درجات الحرارة الداخلية بسبب موقع الجهاز ، درجة الحرارة المحيطة، وبنبرة فتح الباب، وما إلى ذلك يمكن العثور على فئة المناخ في ملخص التصنيف

"درجة منوية" نطاق درجة الحرارة المحيطة	فئة المناخ
+10 - +32	درجة الحرارة الممتدة (SN)
+16 - +32	درجة الحرارة (N)
+16 - +38	(شبه استواني) ST
+16 - +43/+10 - +43*	(استواني) T

أستراليا، الهند، كينيا\*

## ملاحظة

"درجة الحرارة الممتدة" الأجهزة التي تدرج ضمن فئة مصممة (T) "الاستوائية" إلى درجة الحرارة (SN) ٤٣ و ١٠ للاستخدام في درجة حرارة محيطة تتراوح بين درجة منوية

٥ لا تقم بتركيب هذا الجهاز في درجة حرارة أقل من . هذا قد يسبب تدهور الثلاجة. درجات

٦. اختر مكان جيد ضع ثلاجتك بحيث تكون سهلة الاستخدام

٧. الفريزر، - التأكد من الدوران الجيد للهواء حول الثلاجة رجاء حافظ على فراغ كاف على كلا الجانبين وأيضاً على الأقل من (٥ سم) بوصة من الأعلى وحافظ على الحاطنـ الخلفي.

٨. لتفادي الاختزازات، يجب أن تكون الوحدة متساوية إذا لزم الأمر، أضيّط سماكة ضبط المستوى بما ينكافأ مع ثقوب الأرض المقدمة يجب أن تكون أعلى قليلاً من الخلف لأفضل أداء و ليس أسعاف في غلق الباب . مسامير ضبط المستوى يمكن أن يتم تغييرها بسهولة من خلال إمالة الخزانة قليلاً غير مسامير ضبط المستوى في اتجاه عقارب الساعة ( ) لرفع الوحدة، و عكس عقارب الساعة ( ) لخفضها

٩. ضع البراد على مسافة بعيدة عن مقبس الطاقة

## التالي

١. قم بتنظيف ثلاجتك بالكامل و امسح كل التراب المتراكم . إثناء الشحن

٢. في.رك الملحقات مثل صندوق مكعبات الثلاجـ الخ يتم تغليفهم معاً لمنع التلف المحتمل. أماكنهم المناسبة . إثناء الشحن


٣. إلى المخرج (أو قابس) قم بتوصيل كابل مصدر التيار لا تشركه مع الأجهزة الأخرى على نفس المخرج

٤. قبل تخزين الطعام، اترك الثلاجة مشغلة (أفوكول) ساعة ١٢ إلى ٨ لمدة من تأكيد أن سريان الهواء البارد في حجرة الفريزر للتأكد من التبريد الجيد . ثلاجتك الآن جاهزة للاستخدام

٥. بعد تركيب الجهاز، قم بتوصيل قابس الطاقة بماخذ قبل نقل الجهاز وإخراجه، افصل القابس من التوصيل . مأخذ التوصيل

يجب أن يكون: الحد الأدنى للمتطلبات المحمول قيد التشغيل ويجب أن / USP فولت أمبير على الأقل ٦٠٠ ينتمي بطاقة مع بطارية ذات سعة شحن كهربائي تبلغ ساعة موصولة بمقبس- أمبير ١٢٠ التزويد بالطاقة الخاص بالبراد

# معلومات هامة للسلامة

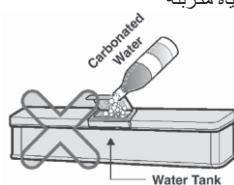


ضغط الغاز قد يسببه. لا تستخدم مياه مكربنة  
تسريب.

لا تستند على الأبواب، المفصلات  
قد تفصل نفسها، مسببة تسرب الهواء  
وتدمر الأداء.




نظف حوض المياه وفقاً للتوجيهات.

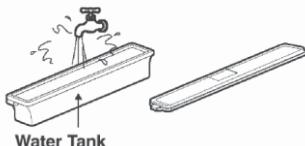

الأجزاء المتحركة مثل الرف،  
السلة، الخ يجب أن يتم  
التعامل معها بعناية.

تأكد من أن سريان الهواء البارد في حجرة الفريزر  
للتأكد من التبريد الجيد.  
ثلاجتك الآن جاهزة للاستخدام.

إذا تم استخدام أي سائل آخر، فإن استخدام المياه فقط  
إذا ظهرت مشكلة باستخدام تشغيل النظام قد يتوقف  
سائل آخر بخلاف الماء، فإن الشركة المصنعة لن  
تكون مسؤولة.

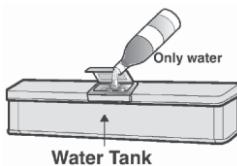

Water Tank

## تحذير !

- درجة الحرارة؛ رجاءً لا تستخدم غسالة الأواني لتنظيف الأدراج السفلية.  
المرتفعة قد تسبب تلف للسلاسل مما يجعلها غير صالحة للاستخدام.
- احتفظ بالمفتاح بعيداً عن (بعض البلدان فقط) إذا كان الجهاز مجهزاً بـ قفل  
متناول الأطفال.

يتمثل الغرض من هذا الجهاز في استخدامه داخل المنازل والاستخدامات المماثلة مثل

- مناطق مطبخ الموظفين في المتاجر والمكاتب وبينات العمل الأخرى؛
- البيوت الريفية ومن قبل العمالء في الفنادق والنزل وبينات الأنواع السكنية الأخرى؛
- بينات نوع المبيت والإفطار؛
- توريد الأطعمة والمشروبات واستخدامات عدم البيع بالتجزئة المماثلة.

هذه الثلاجة تم تصنيعها بعناية كبيرة، و استخدمت الأحدث في التكنولوجيا.

نحن نثق بأنك سوف تكون راضي بالكامل بأدائها و اعتماديتها

قبل أن تشغّل الثلاجة الخاصة بك، رجاءً قم بقراءة الكتيب بعناية

كما يوفر أيضاً بعض التلميحات، انه يقدم تعليمات دقيقة للتركيب، التشغيل و الصيانة  
المفيدة.

# معلومات هامة للسلامة

## تحذير

مخالفة هذه التوجيهات قد يؤدي إلى الإصابة أو تدمير الصحة، المنزل أو الأثاث.  
كن على حذر دائمًا، رجاءً.

انتظر خمس دقائق أو أكثر عند إعادة توصيل المقابس.



قد يؤدي إلى فشل تشغيل الفريزر

لا تلمس الطعام أو الأواني داخل الفريزر  
بأيدي مبللة.

قد تسبب عضة الصقبح



اسحب قابس الكهرباء ليس عن طريق إمساك الكابل  
لكن من نهاية القابس.



قد تسبب صدمة كهربائية أو قصر في  
الدائرة يؤدي إلى الحريق.

لا تضع الزجاجة في الفريزر.




تجنب وضع الحاويات أو القانات  
خاصة تلك أو العلب الزجاجية  
التي تحتوي على مشروبات  
داخل المجمد أو على (غازية)  
الرفوف أو في صندوق الثلاجة  
الذي سيتعرض لدرجات حرارة  
دون التجمد.

لا تدخل يدك في أسفل الثلاجة.




اللوح الحديدي الخاص بالقاعدة قد يسبب  
اصابة.

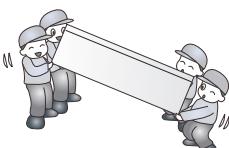

احمل الثلاجة من خلال عمود المقفص المتوفر  
أسفل أمام و أعلى خلف الثلاجة.

و إلا قد تترافق بيديك لتسبب  
الإصابة.

فتح و غلق باب الثلاجة قد يسبب إصابة للشخص  
الموجود حولها، رجاءً كن حذر.

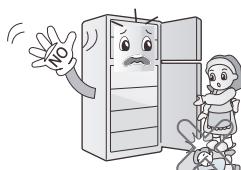

فتح أو غلق الباب قد يسبب  
تعلق القمّ أو اليد في شق الباب  
أو قد تصيب بد الطفّل من  
الأركان.

افرغ الداخل بالكامل قبل خلع الرف الحاوي  
من الباب.



# معلومات هامة للسلامة


## ٢. عند استخدام الثلاجة

ماذا تفعل بثلاجتك القديمة؟



مصنوع من(مبرد، مشتم)ثلاجتك تحتوي سائل مواد إعادة تدوير، كل هذه المواد يجب أن يتم إرسالها إلى موقع إعادة تدوير النفايات التي تم التخلص منها حيث يمكن أن يتم استعمالها مرة أخرى بعد عملية إعادة تدوير محددة.

لا تقم بإدخال يدك أو قضيب معدني في مخرج الهواء البارد، الغطاء، أو أسفل الثلاجة، الشبكة في الخلف(فتحة الانبعاثات) الصامدة للحرارة.

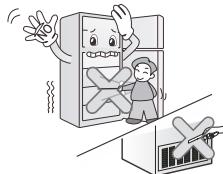

قد تسبب الصدمة الكهربائية أو الإصابة

في حالة الرعد والبرق أو إذا لم يتم الاستخدام لفترة طوية، قم بنزع مقبس الكهرباء.



هناك خطر صدمة كهربائية أو حريق.


ضع كل المكونات في أماكنها الصحيحة قبل توصيل الكهرباء



لا تترك أي شمعون مشتعلة فوق الثلاجة، خطر كبير قد يتسبب في الحريق أو تلف المنتج




لا تقم بنزع الغطاء الخلفي

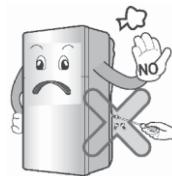


# معلومات هامة للسلامة

## ٢. عند استخدام الثلاجة

قم باستخدام الثلاجة المغمورة فقط بعد فحصها.

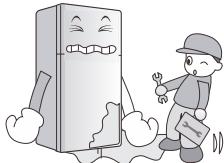

قد تسبب صعق كهربائي أو حريق.

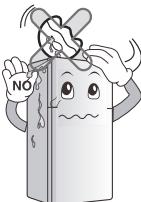

لا تضع فازات الزهور، الأكواب، مستحضرات التجميل، الأدوية أو أي وعاء به ماء على الثلاجة.

قد يسبب حريق، صدمة كهربائية أو الاصابة من السقوط.


لا تقم برش الماء خارج أو داخل الثلاجة أو لا تتطهّرها باستخدام البنزين أو التبن.




تلف عزل الأجزاء الكهربائية قد يسبب صدمة كهربائية أو حريق.

اذا حدث ارتشاح للغاز، لا تلمس الثلاجة أو المخرج و قم بتهوية الغرفة مباشرة.

أسيزوبيوتان، وبروبان، وغاز طبيعي، في حال وجود تسريب غاز ، لا تلمس الجهاز أو مقبس الطاقة وقف بتهوية المنطقة (ما إلى ذلك يستخدم هذا الجهاز غاز تبريد من نوع فورا (isobutane R600a) على الرغم من استخدامه لكمية صغيرة من الغاز، فهو ما زال غاز قابل للاحتراق تسرب الغاز أثناء نقل الجهاز أو تركيه أو تشغيله يمكن أن يتسبب بحرائق أو انفجارات أو إصابة في حال وجود شرر.

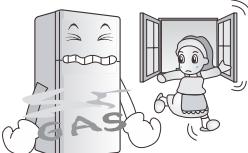


عند اكتشاف أي رائحة غريبة أو دخان من الثلاجة، قم بفصل مقبس الكهرباء في الحال و اتصل بمركز الخدمة.

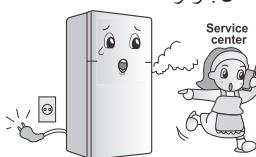

قد يسبب ذلك حريق

يجب أن يتم استخدام المخرج المخصص لذلك.

استخدام عدة أجهزة على مخرج واحد قد يسبب الحرائق.

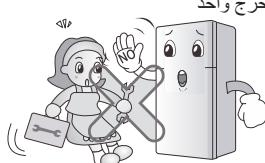

لا تستخدم الثلاجة لأغراض غير منزليّة تخزين الأدوية أو أدوات الاختيار، استخدمها (في الشحن، الخ).




قد تسبب خطورة غير متوقعة مثل الحريق، الصدمة الكهربائية، تلف المواد المخزنة أو تفاعلات كيميائية.

عند القيام بترتيب الثلاجة، أزل مواد التغليف مثل الحشيشة من الباب.

قد تتنبّب في محاصرة الأطفال.



تركيب الثلاجة فوق ارض صلبة ومستوية.

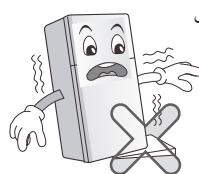

تركيبها في مكان غير مستقر قد يسبب الإصابة من سقوطها عند فتح أو غلق الباب.

# معلومات هامة للسلامة

## ٢. عند استخدام الثلاجة

لا تعلق بالباب أو ارفف الباب أو باب الفريزر  
ويغلق تقليانياً أو الذي يفتح بالدفع من الاتجاهين




غرفة التبريد  
قد يؤدي إلى توقف الثلاجة أو  
خاصية، لا تسمح بتلف اليد  
للأطفال بعمل ما سبق.

لا تقم بوضع أجسام ثقيلة أو أجسام خطيرة  
على الثلاجة (اناء به سائل)



قد تسقط وتسبب الإصابة، الحرائق أو  
الصدمة الكهربائية عند فتح أو غلق الباب.

لا تستخدم أو تخزن مواد قابلة  
للاشتعال مثل الأثير، البنزين، كحول،  
الادوية، الغاز النفطي  
المسال، بخاخ العطر  
او مستحضرات  
التجميل بالقرب من او  
بداخل الثلاجة

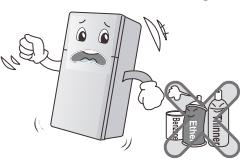

قد يؤدي إلى الانفجار أو الحرائق


لا ترك الثلاجة في مكان ممتد أو تضعها في  
مكان حيث ترش المياه أو الأمطار



لا تستخدم أو تخزن مواد قابلة للاشتعال مثل الأثير، البنزين،  
كحول، الادوية، الغاز النفطي المسال، بخاخ العطر او مستحضرات  
التجميل بالقرب من او بداخل الثلاجة




قد يؤدي إلى الانفجار أو الحرائق

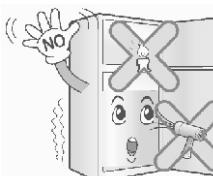


لا تستخدم المجفف لتجفيف  
الداخل، ولا تشنع  
شمعة لإزالة الرائحة  
قد يؤدي إلى الانفجار أو  
الحرائق

قم بالتركيب في الاماكن بعيدة عن اللهب مثل مكان تسرب الغاز  
القابل للاشتعال

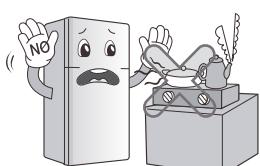


قد يسبب حريق

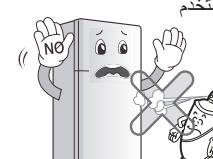

البخاخات القابلة للاشتعال بالقرب لا تستخدم  
من الثلاجة

قد تسبب حريق

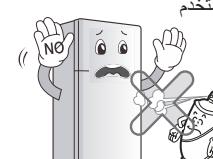


# معلومات هامة للسلامة


## ١. عند توصيل مصدر التيار

يجب أن يتم استخدام المخرج المخصص لذلك.

استخدام عدة أجهزة على مخرج واحد قد يسبب الحرائق.

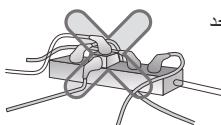

لا تسمح بان يكون مقبس الكهرباء مواجه للأعلى أو أن يكون مضغوط في ظهر الثلاجة.

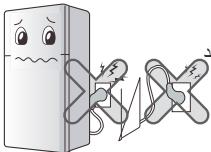

قد يؤدي ذلك إلى تلف المقبس، مما قد يسبب حريق أو صدمة كهربائية.




لا تقم بمد أو تعديل طول سلك التيار.

ذلك يتلف سلك التيار و يسبب صدمة كهربائية أو حريق.




لا تسمح بانتهاء سلك التيار أو ضغطه من قبل الأجسام الثقيلة.

قد يسبب ذلك تلف سلك التيار و يؤدي إلى الحريق أو الصدمة الكهربائية.

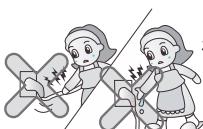


لا تقم بسحب السلك أو لمس مقبس الكهرباء بأيدي مبللة.

قد يسبب ذلك صدمة كهربائية أو إصابة.

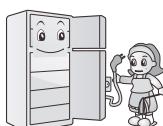

انزع مقبس الكهرباء أثناء التنظيف، تشغيل أو استبدال الخاصة بالثلاجة LED اللامبة الداخلية.

قد يسبب صدمة كهربائية أو إصابة.

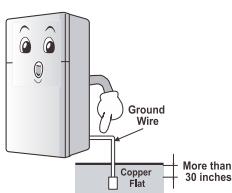


تأكد من التأمين

التأمين الخاطئ قد يؤدي إلى


قم ب拔掉 الماء أو الأتربة من مقبس الكهرباء و ادخله مع توصيل نهايات الدبابيس بدقة.

الأتربة، الماء أو التوصيل الغير ثابت قد يؤدي إلى الحريق أو الصدمة الكهربائية.



الزجاج المقسى على النافذ يمكن ان ينكسر بالتصادم، لا تلمس الاجزاء المكسورة فقد تتجرح

عندما يكون السلك الكهربائي أو مقبس الكهرباء تالف أو فتحات المخرج ضعيفة أو منتككة، لا تستخدمهم.

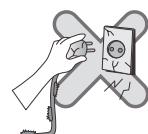

قد تؤدي إلى الصدمة الكهربائية او قصر الدائرة.

## مخاطر الحرائق والمواد القابلة للاشتعال

يحررك هذا الرمز بأن المواد القابلة للاشتعال يمكن أن تشتعل أو أن ينشب عنها حريق في حالة عدم توخي الحذر.



- يحتوي هذا الجهاز على كمية صغيرة من وسيط تبريد الآيزوبوتان (R600a)، عند نقل وتركيب الجهاز، يجب توخي الحذر. ولكنه قابل للاشتعال أيضاً لضمان عدم تعرض أجزاء من دائرة التبريد للتلف.
- في حال اكتشاف تسريب، تجنب أية أنسنة لهب مكشوفة أو مصادر محتملة لكي تتجنب للاشتعال وقم بتهوية الغرفة التي يتواجد بها الجهاز لعدة دقائق تكون خليط هواء غازي قابل للاشتعال في حال حدث تسريب في دائرة التبريد، يجب أن يتماشى حجم الغرفة المستخدم فيها الجهاز مع كمية غاز جرام من  $8\text{ m}^3$  يجب أن تكون مساحة الغرفة متراً مربعاً لكل التبريد المستخدم. غاز التبريد R600a داخل الجهاز.
- تأكد عند وضع الجهاز من أن سلك التيار الكهربائي غير عالق أو تالف لا تضع المأخذ المحمولة متعدد المقابس أو أسلاك التيار الكهربائي المحمولة خلف الجهاز.

- تحذير !**  
ابق فتحات التهوية، في نطاق الجهاز أو في التكوين المدمج، بعيدة عن أي عواقب.
- !**  
لا تقم باستخدام أجهزة ميكانيكية أو وسائل أخرى لتسريع عملية إذابة التجميد، ماعدا الموصى به من قبل المصنع
- !**  
لا تقم بإتلاف دائرة المبرد
- !**  
لا تقم باستخدام أجهزة كهربية داخل حجيرة تخزين الطعام، إلا إذا كان الموصى به من قبل الشركة المصنعة
- !**  
المبرد و غاز العزل المستخدم في الجهاز يتطلب خطوات تصريف في حالة التصريف، برجاء استشارة وكيل الصيانة أو شخص خاص بنفس الكفاءة

## تحذير !

لتقليل خطر الحريق، الصدمة الكهربائية، أو الجروح للأشخاص في حالة استخدام المنتج الخاص بك، يجب أن يتم إتباع احتياطات الأمان .  
اقرأ كل التعليمات قبل استخدام هذا الجهاز. الأساسية، بما يشمل التالي .

### احتياطات الأمان الأساسية

. دائماً قم بقراءة و إتباع كل رسائل الأمان. هذا الدليل يحتوي على الكثير من رسائل الأمان الهامة.

انه ينبهك إلى رسائل الأمان التي تعطيك معلومات عن الأخطار التي قد تؤذى أو تسبب أضرار. هذا يعتبر رمز تنبيه الأمان ! كل رسائل الأمان سوف يسقها رمز تنبيه الأمان و الكلمات التي ترمز للخطر هي خطر، تحذير، جسيمة أو تسبب تلف في المنتج : هذه الكلمات تعني، أو إنذار

خطر ! سوف تؤذى أو تتعرض لأضرار جسيمة إذا لم تتابع التعليمات

تحذير ! لتقليل خطر الحريق، الصدمة الكهربائية، أو الجروح للأشخاص في حالة استخدام المنتج الخاص بك، يجب أن يتم إتباع احتياطات الأمان الأساسية، بما يشمل التالي .  
اقرأ كل التعليمات قبل استخدام هذا الجهاز .

إنذار ! تشير إلى موقف خطر وشيك والذي، إذا لم يتم تفاديه، قد ينتج عنه أصابعه صغرى أو متوسطة، أو قد يتلف المنتج فقط

جميع رسائل الأمان سوف تحدد الخطر، و تخبرك كيف تقلل فرصة الإصابة، و تخبرك عما يمكن أن يحدث إذا لم يتم إتباع التعليمات


## المحتويات

3	معلومات هامة للسلامة
12	التركيب
13	الأجزاء الداخلية
15	التشغيل

G\*-4\*\*/ G\*-5\*\*

البدء
قبل ضبط درجة الحرارة
تنبيه الباب
الاختبار الذاتي
أدوات التحكم لمقصورة الفريزر
أدوات التحكم لمقصورة الثلاجة
التجميد السريع (اختياري)
قفل الأطفال (اختياري)
(اختياري) Wi-Fi
+ تب ريد الباب
درج الخضر أوات
ازابة التجمد
ازالة الروائح
صانع مكعبات الثلوج
الصحي الطازج (اختياري)
موزع المياه (اختياري)
استبدال المصباح
ميزة Inverter-On (اختياري)
وقت الأجزاء

22	الوظائف الذكية (فقط للطرز المطبقة)
25	اقتراحات بشأن تخزين الأطعمة
26	التنظيف
27	معلومات عامة
28	تنبيهات هامة
29	قبل الاتصال بالصيانة

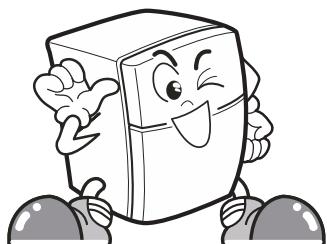



ARABIC

# دلیل مالک ثلاجہ

رجاءً قم بقراءة هذا الدليل جيداً قبل تشغيل جهازك و احتفظ به للرجوع إليه مستقبلاً



MFL71664402

[www.lg.com](http://www.lg.com)