



Pagination & Folding

8 pages

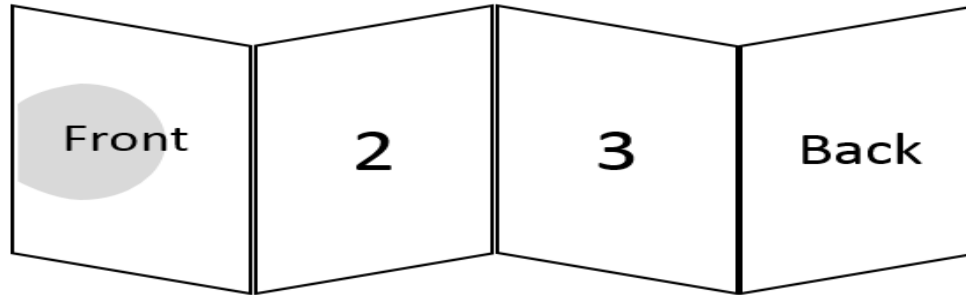

4 pages

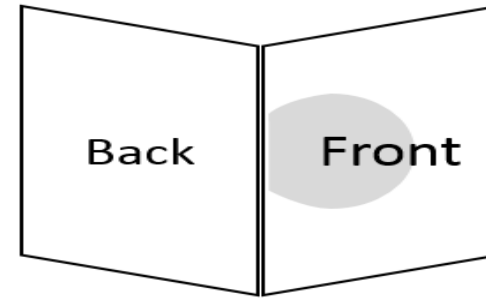

Printing Specifications

Material	Cover	Woodfree 80 g/m²	Note		PARK SEON JUN		
	Inner	Woodfree 80 g/m²					
Coating	Cover	Uncoated			Prepared	Description	Manual
	Inner	Uncoated					
Color	Cover	1 color (Black)			2019-03-25	P/No.	MFL70721707
	Inner	1 color (Black)					
Size		148 x 210 mm (A5 size_Folded size)			Checked	Ver.	1.0
Binding Method		Only folding					
Book Binding		Folding 3 times			Appoved		
Completed total pages		8					



SIMPLE MANUAL

3D Blu-ray™ / DVD Home Theater System

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
LHB655N




www.lg.com

Copyright © 2017-2019 LG Electronics Inc. All Rights Reserved.

ENGLISH



Front Panel




- MIC 1/2 Connects a microphone.
- USB Port Connect a USB device.
- △ Disc Tray Open / Close
- >|| Starts / Pauses playback.
- Stops playback.
- F Changes the input source or function.
- / + Adjusts volume.
- ⏻ / I Power On / Off

Rear Panel




- SPEAKERS Connect to speakers.
- LAN Connect to Internet.
- HDMI OUT TO TV Connect to TV.
- AUX (L/R) INPUT Connect to analogue device.
- OPTICAL IN Connect to digital device.
- ANTENNA FM Connect to radio antenna.

1 Speaker Assembling

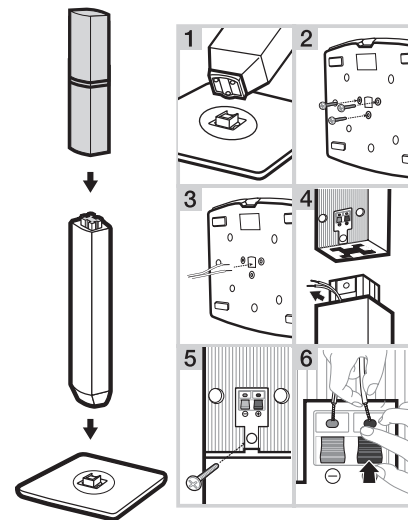

2 Speaker Connection

! Speaker design and connection method may be different according to models.

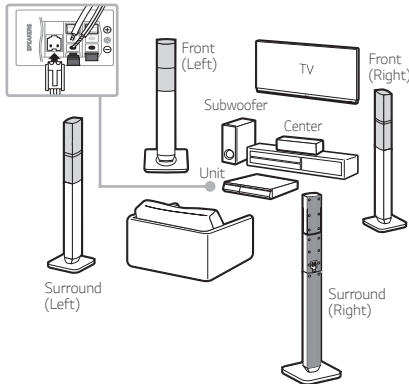


3 TV Connection

Connect with the Player and TV using HDMI ARC (A) or HDMI & Optical (B).


A HDMI(ARC) Connection

- 1 Connect the Player to the TV using HDMI cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (HDMI ARC)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

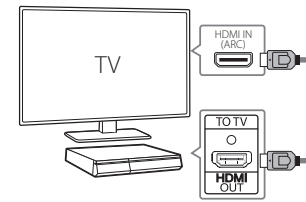

B HDMI & Optical Connection

- 1 Connect the Player to the TV using HDMI & Optical cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (Optical)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

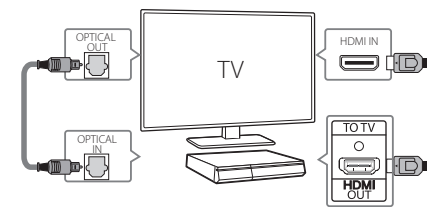

Controller App



Download the LG AV Remote App to your device.

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Private Sound Mode



With MUSICflow



4 Home Menu

After initial setup, Home menu appears on the TV screen. Enjoy various functions on the player.



! To enjoy online services, the player should be connected to internet through wired or wireless connection.


Additional Information

Specification

Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 360 mm x 60.5 mm x 299 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	1,000 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

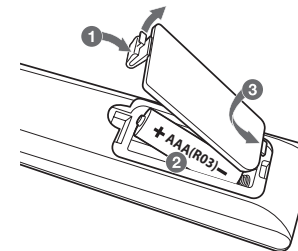

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Customer Support

You can update the Player using the latest software to enhance the products operation and/or add new features. To obtain the latest software for this player (if updates have been made), proceed the software updates or visit <http://www.lg.com> or contact LG Electronics customer care center.

POWER: This unit operates on a mains supply of 200 - 240 V ~ 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



نظام المسرح المنزلي Blu-ray™ / DVD

لعرض إرشادات الخصائص المتقدمة، تفضل زيارة موقعنا الإلكتروني <http://www.lg.com> وقم بتحميل دليل المالك. يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

النموذج
LHB655N



www.lg.com

حقوق النشر والتأليف © لعام ٢٠١٧-٢٠١٩ لـ LG Electronics Inc. جميع الحقوق محفوظة.

الترقية




اللوحة الأمامية



- MIC 1/2
- منفذ USB
- △ فتح / غلق درج الأقراص
- >|| بدء التشغيل / إيقاف الموقت
- إيقاف التشغيل
- F تغيير مصدر أو وظيفة الإدخال
- + / - يضبط مستوى الصوت
- ⏻ / ⏻ تشغيل/إيقاف تشغيل الطاقة

تركيب السماعات

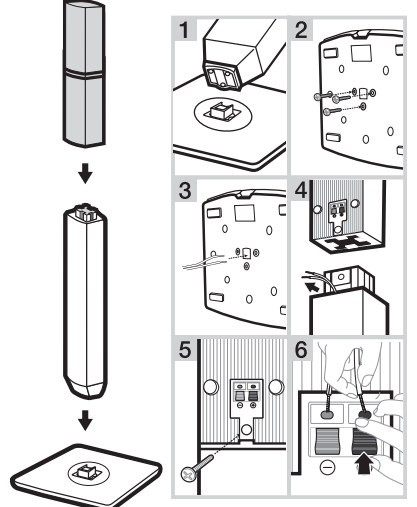


اللوحة الخلفية



- SPEAKERS
- LAN
- HDMI OUT TO TV
- AUX (L/R) INPUT
- OPTICAL IN
- ANTENNA FM

توصيل السماعة

يختلف تصميم السماعة وطريقة توصيلها حسب الطرز.

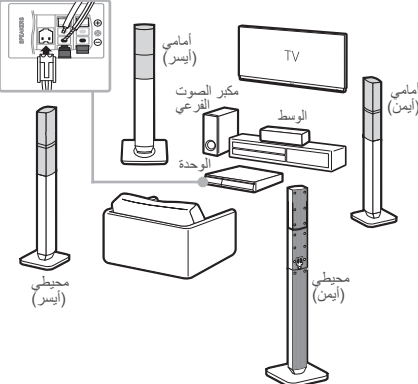


٣

توصيل التلفاز

قم بتوصيل جهاز التشغيل وجهاز التلفاز باستخدام وصلة HDMI ARC (A) أو Optical & HDMI (B).


A HDMI (ARC) اتصال

- قم بتوصيل جهاز التشغيل بالتلفاز باستخدام كبل HDMI.
- اضبط زر تحديد الإدخالات على HDMI في التلفاز.
- قم بإعداد [External Speaker (HDMI ARC)] في قائمة الضبط بالتلفاز.
- اتبع التعليمات التي تظهر على شاشة التلفاز باستخدام جهاز التحكم عن بُعد.

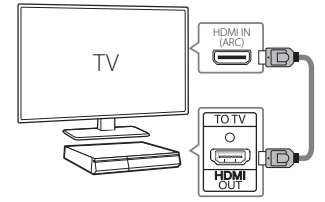

B HDMI والاتصال البصري

- قم بتوصيل جهاز التشغيل بالتلفاز باستخدام كبل HDMI وكابل بصري.
- اضبط زر تحديد الإدخالات على HDMI في التلفاز.
- قم بإعداد [External Speaker (Optical)] في قائمة الضبط بالتلفاز.
- اتبع التعليمات التي تظهر على شاشة التلفاز باستخدام جهاز التحكم عن بُعد.

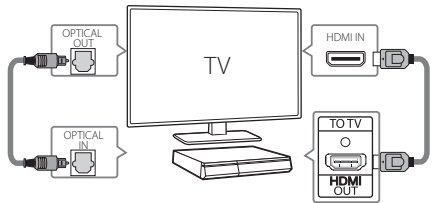

٤

القائمة الرئيسية

بعد الإعداد الأولي، تظهر القائمة الرئيسية على شاشة التلفاز. تمتع بالوظائف المتنوعة في جهاز التشغيل.



للاستمتاع بالخدمات الإلكترونية عبر الإنترنت، ينبغي أن يكون جهاز التشغيل متصلاً بالإنترنت من خلال اتصال سلكي أو لا سلكي.

معلومات إضافية


المواصفات

متطلبات الطاقة	ارجع إلى الملصق الرئيسي.
استهلاك الطاقة	ارجع إلى الملصق الرئيسي.
الأبعاد الخارجية (العرض × الارتفاع × عمق)	حوالي ٣٦٠ مم × ٦٠,٥ مم × ٢٩٩ مم
وحدة التغذية بالطاقة (النافذة USB)	٥ فولت === ٥٠٠ مللي أمبير
مضخم الصوت (إجمالي طاقة مخرج RMS)	١,٠٠٠ وات RMS

التصميمات والمواصفات عرضة للتغيير دون إشعار مسبق.

دعم العملاء

يمكنك تحديث المشغل باستخدام أحدث البرامج لتحسين تشغيل المنتجات و/أو إضافة مزايا جديدة. للحصول على أحدث البرامج الخاصة بهذا المشغل (إذا كان قد تم إجراء التحديثات)، استمر في تنفيذ خطوات تحديثات البرامج أو تفضل بزيارة <http://www.lg.com> أو اتصل بمركز خدمة العملاء في شركة LG Electronics.

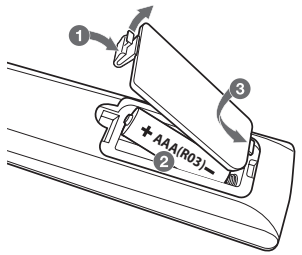

الطاقة: يتم تشغيل هذه الوحدة باستخدام مصدر تيار كهربائي بجهد ٢٤٠-٢٠٠ فولت، ٥٠/٦٠ هرتز.

توصيلات الأسلاك: يتم تزويد هذه الوحدة بقياس تيار BS 1363 معتمد. عند استبدال المصهر، استخدم دائماً مصهرًا له نفس المعايير المقننة المعتمدة في قابس BS 1362. لا تستخدم هذا القابس مطلقاً بدون وجود غطاء المصاهر. للحصول على غطاء مصاهر بديل، يرجى الاتصال بالموزع الذي تتعامل معه. إذا كان نوع القابس المرفق غير مناسب لمقابس التيار الموجودة بمنزلك، يجب خلع القابس وتركيب نوع مناسب. يرجى الرجوع إلى التعليمات الخاصة بتوصيل الأسلاك الموضحة أدناه:

تحذير: يجب تدمير القابس الذي يتم خلع من سلك التيار الكهربائي الخاص بهذه الوحدة. قابس التيار الذي توجد به أسلاك عارية يمثل خطورة في حالة إدخاله في مقبس التيار الكهربائي. لا تقم بتوصيل أي من الأسلاك بالطرف الأرضي، المميز بالحرف (E) أو رمز الأرض لـ أو الملون باللون الأخضر أو اللونين الأخضر والأصفر. في حالة تركيب أي قابس آخر، استخدم نفس المعايير المقننة في مصهر القابس.

ملاحظة هامة: الأسلاك الموجودة في كبل التيار الكهربائي مميزة بالألوان وفقاً للرموز التالية:

- **الأزرق: محايد، البني:** يسري فيه التيار - في حالة عدم توافق ألوان أسلاك التيار الكهربائي الخاص بهذه الوحدة مع الألوان التي تميز أطراف التوصيل في القابس، يرجى اتباع ما يلي: يجب توصيل السلك المميز باللون الأزرق مع الطرف المميز بالحرف (N) أو المميز باللون الأسود. يجب توصيل السلك المميز باللون البني مع طرف التوصيل المميز بالحرف (L) أو المميز باللون الأحمر.

