LG
Life's Good

# SIMPLE MANUAL

# Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
OJ98

*MFL69712115*

www.lg.com

Copyright © 2017 LG Electronics. All Rights Reserved

ENGLISH

**CAUTION**
**RISK OF ELECTRIC SHOCK DO NOT OPEN**

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
CLASSE 1 PRODUIT LASER
**KELAS 1 PRODUK LASER**
UKUCUSHA LASORI KLASI 1

**CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.
Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.
To prevent direct exposure to laser beam, do not try to open the enclosure.

**CAUTION concerning the Power Cord**

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

**CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

**Caution:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.

**RF Radiation Exposure Statement**


This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

LG
Life's Good

OJ98-FB.DAUSLLK_SIM_ENG_2115.indd 1,4
2017-04-05 9:20:04



## Top panel

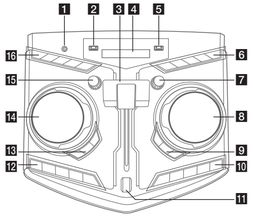


**1** **PORT**(Portable), **IN** jack

**2** USB 1 Port
You can play sound files by connecting the USB device.

**3** **PARTY THRUSTER lever**
Slide the lever to create a party atmosphere.

**4** Display window

**5** USB 2 Port
You can play sound files by connecting the USB device.

**6** **F** (Function)
Selects the function and input source.

**USB REC / DEMO**
- Records to USB.
- In power off status, if you press **USB REC / DEMO**, show demo mode.

**LIGHTING MODE**
Selects the lighting effects.

**LIGHTING ON/OFF**
Turns on/off the lighting effects.

**PARTY LINK**
Press and hold to select the PARTY LINK.

**WIRELESS LINK**
- Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.

**7** **MASTER VOLUME**
Adjust speaker volume.

**8** **SCRATCH / SEARCH & MULTI JOG**
- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file
- Selects lighting mode.

**9** **SEARCH**
Moves to folder or file in selection mode.

**OK**
Selects a folder when searching a file.

**REGION EQ / BASS BLAST**
- Chooses region equalizer.
- Press and hold to select BASS effect directly.

**10** **I<<** (Skip/Search)
- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

**>II** (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.

**>>I** (Skip/Search)
- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations.

□ (Stop)
Stops playback or cancels DELETE function.

⏏ (Open/Close)
Opens and closes the disc tray.

**11** **PARTY THRUSTER** mode
Selects PARTY THRUSTER mode.

**12** **CLUB, DRUM, USER** (DJ PRO)
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

**1, 2, 3** (DJ PRO PAD)
Press a desired sound pad.

**PARTY STARTER**
- In power off state, this function turns on the unit with Party Kick Starter sound.
- In power on state, this function mixes the music with Party Kick Starter sound.

**DJ LOOP**
Selects DJ LOOP mode.
(DJ LOOP mode can use during CD/USB playback.)

**13** **USER EQ**
Selects the sound effect created by your own.

**DJ EFFECT**
Selects a desired DJ effect.

**VOCAL EFFECTS**
Selects VOCAL EFFECTS mode.

**14** **SCRATCH / LEVEL CONTROL**
- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- Selects vocal effects mode.

**15** **MIC** (Microphone) **VOLUME**
Adjust microphone volume.


**16** ⏻ (Standby)
Turns the power on or off.


**VOICE CANCELLER**
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

**KEY CHANGER ( ♭ / # )**
Changes the key to suit your vocal range.

**ECHO**
Selects ECHO mode.

## Front panel / Rear panel

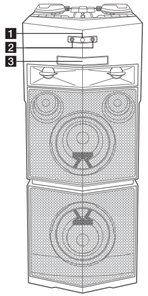

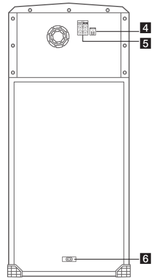
**1** (Remote sensor)

**2** **MIC**(Microphone) **1/2** jack

**3** Disc tray

**4** **ANTENNA** (FM)

**5** **AUX IN / OUT**
Connect an auxiliary device.

**6** AC in socket

### Controller App

Download the **Music Flow Bluetooth** App to your device. (Android only)

### LG Sound Sync (Wireless)




For more information, download the online owner's manual. **http://www.lg.com**

## Additional Information

### Specifications

| | |
|---|---|
| Power Requirements | Refer to the main label on the unit. |
| Power Consumption | Refer to the main label on the unit. |
| Dimensions (W x H x D) | Approx. 380 mm x 1099 mm x 400 mm |
| Bus Power Supply (USB) | 5 V ⎓ 500 mA |
| Amplifier (Total RMS output power) | 1,800 W RMS |

Design and specifications are subject to change without notice.

### Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

### Replacement of battery

