



SIMPLE MANUAL

Wireless Sound Bar


Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
SL6Y




www.lg.com
Copyright © 2019 LG Electronics Inc. All Rights Reserved.

ENGLISH

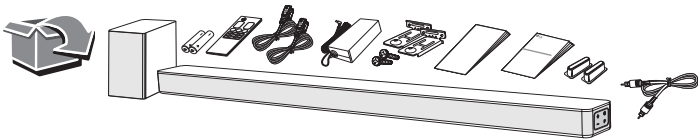


Front Panel

The buttons are located on the side.



- ⏻ (Standby)Switches the unit ON or OFF.
- F (Function)Selects function.
- /+ (Volume) Adjusts volume.

Rear Panel

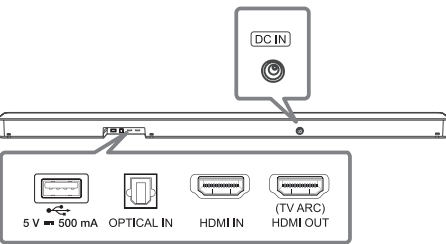

- DC IN Connect to the AC adapter.
- USB PortConnect to a USB device.
- OPTICAL INConnect to an optical device.
- HDMI INConnect to device with HDMI OUT.
- (TV ARC) HDMI OUT..... Connect to a TV.

! It is recommended that you purchase a USB gender separately for the convenience of USB insertion and extraction. (Recommended USB gender type : USB 2.0 extension cable)

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- 2 Turn on the sound bar.
 - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.


Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

- 1 Press **Pairing** on the rear of the wireless subwoofer.
 - The green LED on the rear of the wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the **Pairing**.)
- 2 Turn on the sound bar.
 - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.



Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

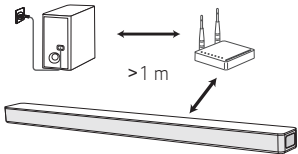


TV Connection

Connect the sound bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

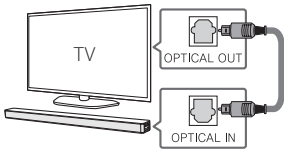

B HDMI (ARC) Connection


- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

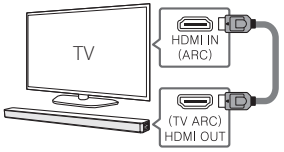

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.


Additional Device Connection

- 1 Connect to the external device like as follow.

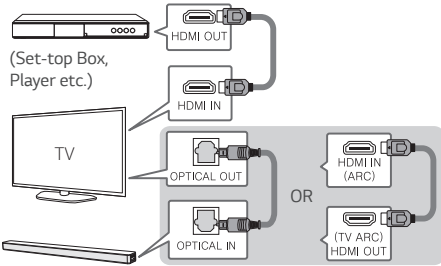


- 2 Set the input source by pressing F repeatedly.

Remote control

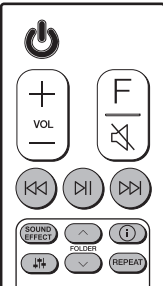

Replacement of Battery

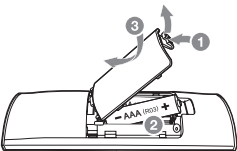

⏮/⏭: Skip/Search

⏸: Play/Pause

- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press **⏸** and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.

- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ^/∨ : Searches a folder.

⌚ : Displays the information of a file, an input source or connected **Bluetooth** device name.

- **Auto Power ON/OFF:** Long press ⌚ and press it again.

🔊 : Adjusts sound level of each speaker.

- **Surround sound:** Long press 🔊 and press it again.

REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power consumption	Refer to the main label.
AC adapter	• Model : DA-50F25 • Manufacturer : Asian Power Devices Inc. • Input : 100 - 240 V ~ 50 - 60 Hz • Output : 25 V $\equiv$ 2 A
Dimensions (W x H x D)	Approx. 1060.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V $\equiv$ 500 mA
Amplifier (Total RMS Output power)	420 W RMS

Design and specifications are subject to change without notice.



Rear Speakers Ready

Ready for surround sound with Rear Speakers Kit sold separately. (SPK8-S)

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

POWER: This unit operates on a mains supply of 100 - 240 V ~ 50 - 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol $\perp$ or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



الدليل البسيط

المكبر الصوتي اللوحي اللاسلكي

يُرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي بحوزتك واحتفظ به للرجوع إليه في المستقبل.

لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا <http://www.lg.com> وقم بتحميل دليل المالك. يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.


الطراز

SL6Y




MFL71440097
1901_Rev01

www.lg.com
حقوق النشر والتأليف © لعام ٢٠١٩ لـ LG Electronics Inc. جميع الحقوق محفوظة.

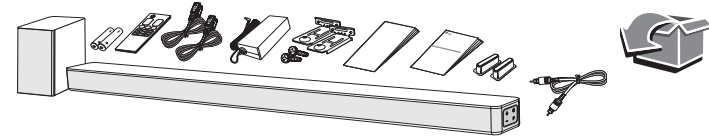

اللوحة الأمامية

الأزرار موجودة على الجانب.



⏻ (استعداد) لتشغيل الوحدة أو إيقاف تشغيلها.
F (الوظيفة) يحدد الوظيفة
+/- (التحكم بالصوت) يضبط مستوى الصوت

اللوحة الخلفية



DC IN
5 V 500 mA OPTICAL IN HDMI IN (TV ARC) HDMI OUT

DC IN قم بتوصيل محول التيار المتردد.
منفذ USB يُستخدم للتوصيل بجهاز USB.
OPTICAL IN يُستخدم للتوصيل بجهاز بصري.
HDMI IN للتوصيل بجهاز به منفذ HDMI OUT.
HDMI OUT (TV ARC) يُستخدم للتوصيل بجهاز التلفزيون.

من المستحسن أن تقوم بشراء USB gender منفصلة لراحة إدخال وإخراج USB. (نوع USB gender الموصى به: سلك تمديد الـ USB 2.0)

توصيل مضخم الصوت

ضع مضخم الصوت بالقرب من مكبر الصوت واتبع الخطوات الواردة أدناه.


1 وصل سلك الطاقة لمكبر الصوت ومضخم الصوت اللاسلكي بماخذ التيار الكهربائي.
2 قم بتشغيل مكبر الصوت.
• سيتم توصيل السماعة اللوحية ومضخم الصوت اللاسلكي تلقائياً. يعمل الضوء الأخضر لمكبر الصوت.

توصيل مكبر الصوت يدوياً

إذا لم يصدر مضخم صوت فحاول التوصيل يدوياً.

1 اضغط **Pairing** على الجزء الخلفي من مضخم الصوت اللاسلكي.
• يومض المصباح الأخضر على الجانب الخلفي من مكبر الصوت بالاتصال اللاسلكي بسرعة.
(إذا لم يظهر المؤشر الأخضر، اضغط مطولاً على **Pairing**).
2 قم بتشغيل مكبر الصوت.
• اكتمل الإقران. يعمل المصباح الأخضر على الجانب الخلفي من مكبر الصوت بالاتصال اللاسلكي.

احفظ مكبر الصوت الأفقي ومكبر الصوت بعيداً عن الأجهزة (مثل: الراوتر اللاسلكي و فرن الميكرويف إلخ) بمسافة ١ متر لمنع التداخل اللاسلكي.

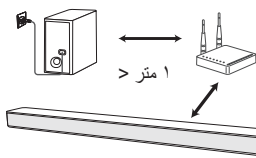


توصيل التلفزيون

وصل مكبر الصوت والتلفاز باستخدام Optical (A) أو HDMI ARC (B).


A التوصيل البصري

1 وصل مكبر الصوت بالتلفاز باستخدام الكابل الضوئي.
2 قم بإعداد [External Speaker (Optical)] في قائمة الضبط بالتلفزيون.

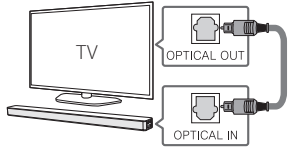

B HDMI (ARC) اتصال


1 وصل مكبر الصوت بالتلفاز باستخدام كابل HDMI.
2 قم بإعداد [External Speaker (HDMI ARC)] في قائمة الضبط بالتلفزيون.

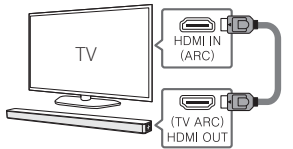

• لن تكون خاصية التوصيل HDMI إذا لم يكن بجهاز التلفاز مقيس HDMI ARC.
• إذا كانت الوحدة متصلة عن طريق OPTICAL و ARC في نفس الوقت، فسيكون إشارة ARC الأولوية.

توصيل الجهاز الإضافي


1 وصله بالجهاز الخارجي كما يلي.

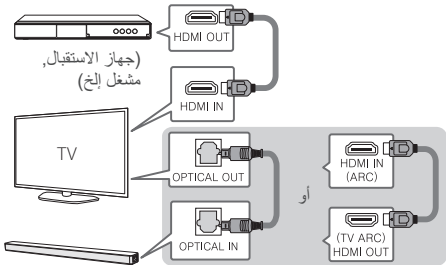

2 قم بضبط مصدر الإدخال بالضغط على F بشكل متكرر.

جهاز التحكم عن بعد

استبدال البطارية

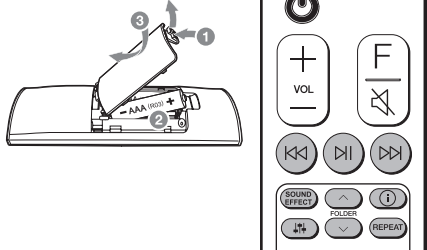

KKI/DA: تخطي/بحث

DA: تشغيل/إيقاف

- قفل اتصال **Bluetooth (BT LOCK)**: اختر وظيفة **Bluetooth** بالضغط على F بشكل متكرر. اضغط مطولاً على DA ثم اضغط مجدداً لتحديد اتصال **Bluetooth** فقط ب BT أو LG TV.
SOUND EFFECT: قم باختيار نمط تأثير الصوت
- **جهاز التحكم في التلفاز**: اضغط مطولاً على **SOUND EFFECT** ثم اضغط مجدداً لاستخدام جهاز التحكم بالتلفاز.
FOLDER ^/∨: قم بالبحث عن ملف.
①: قم بعرض المعلومات الخاصة بالملف، مصدر إدخال، أو اسم جهاز **Bluetooth** متصل.
- **التشغيل التلقائي تشغيل/إيقاف**: اضغط مطولاً على ① ثم اضغط مجدداً.
⏮: قم بتعديل مستوى الصوت لكلا مكبري الصوت.
- **الصوت المجسم**: اضغط مطولاً على ⏮ ثم اضغط مجدداً.
REPEAT: قم بالاستماع لملفاتك بشكل متكرر أو بشكل عشوائي.

معلومات إضافية

المواصفة

استهلاك الطاقة	ارجع إلى الملصق الرئيسي. • الطراز : DA-50F25 • المصنّع : Asian Power Devices Inc. • الدخل : ١٠٠ - ٢٤٠ فولت ~ • ٥٠ - ٦٠ هرتز • الخرج : ٢٥ فولت === ٢ أمبير
محول التيار المتردد AC	تقريباً (العرض × الارتفاع × العمق) ١٠٦,٠٠ مم X ٥٧,٠ مم X ٨٥,٠ مم مع قدم
مصدر طاقة الناقل (USB)	٥ فولت === ٥٠٠ مللي أمبير
مضخم الصوت (إجمالي طاقة خرج RMS)	٢٠ وات RMS

يخضع التصميم والمواصفات للتغيير دون إخطار مسبق.

السماعات الخلفية جاهزة

جاهز للصوت المحيطي باستخدام مجموعة السماعات الخلفية والتي تباع بصورة منفصلة. (SPK8-S)

معلومات حول إشعار البرامج المفتوحة المصدر للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL وتراخيص مفتوحة المصدر أخرى يتضمنها هذا المنتج، يرجى زيارة الموقع <http://opensource.lge.com>. بالإضافة إلى التعليمات البرمجية المصدر، تتوفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتتزيل.

ستوفر LG Electronics أيضاً الكود المفتوح المصدر على قرص CD-ROM مقابل رسم يغطي تكلفة القيام بهذا التوزيع (مثل تكلفة وسائل النقل والشحن والتسليم) بناءً على طلب يُرسل عبر البريد الإلكتروني إلى opensource@lge.com.

إن هذا العرض سار لفترة ثلاث سنوات بعد عملية الشحن الأخيرة لهذا المنتج. يتوفر هذا العرض لأي شخص يتلقى هذه المعلومات.

الطاقة: يتم تشغيل هذه الوحدة باستخدام مصدر تيار كهربى بجهد ١٠٠ - ٢٤٠ فولت، ٥٠ - ٦٠ هرتز.

توصيلات الأسلاك: يتم تزويد هذه الوحدة بقياس تيار BS 1363 معتمد. عند استبدال المصهر، استخدم دائماً مصهرًا له نفس المعايير المقتنة المعتمدة في قياس BS 1362. لا تستخدم هذا القابس مطلقاً بدون وجود غطاء المصاهر. للحصول على غطاء مصاهر بديل، يرجى الاتصال بالموزع الذي تتعامل معه. إذا كان نوع القابس المرفق غير مناسب لمقاييس التيار الموجودة بمنزلك، يجب خلع القابس وتركيب نوع مناسب. يرجى الرجوع إلى التعليمات الخاصة بتوصيل الأسلاك الموضحة أدناه:

تحذير: يجب تدمير القابس الذي يتم خلعه من سلك التيار الكهربى الخاص بهذه الوحدة. قابس التيار الذي توجد به أسلاك عارية يمثل خطورة في حالة إدخاله في مقيس التيار الكهربى. لا تقم بتوصيل أي من الأسلاك بالطرف الأرضى، المميز بالحرف (E) أو رمز الأرض لـ أو الملون باللون الأخضر أو اللونين الأخضر والأصفر. في حالة تركيب أي قابس آخر، استخدم نفس المعايير المقتنة في مصهر القابس.

ملاحظة هامة: الأسلاك الموجودة في كبل التيار الكهربى مميزة بالألوان وفقاً للرموز التالية:

- الأزرق: **محاذي، البني: يسري فيه التيار** - في حالة عدم توافق ألوان أسلاك التيار الكهربى الخاص بهذه الوحدة مع الألوان التي تميز أطراف التوصيل في القابس، يرجى إتباع ما يلي: يجب توصيل السلك المميز باللون الأزرق مع الطرف المميز بالحرف (N) أو المميز باللون الأسود. يجب توصيل السلك المميز باللون البني مع طرف التوصيل المميز بالحرف (L) أو المميز باللون الأحمر.