



Fonctionnalités de base

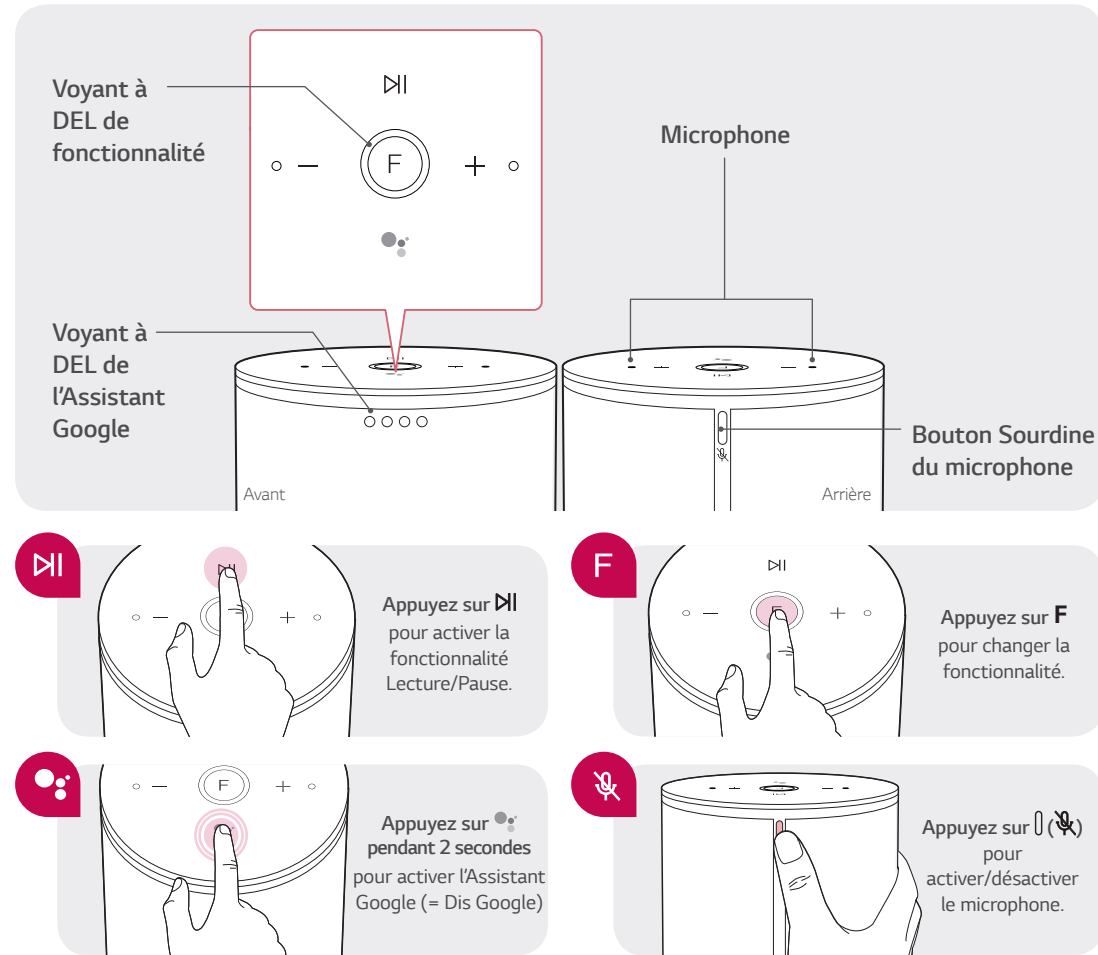

Get Started with **WK7**




Step
01

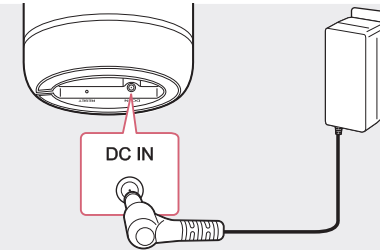

Connect the AC adapter

After connecting the AC adapter, the speaker starts booting. Then Function LED rotates for tens of seconds (Approx. 30 ~ 50 seconds) during booting.


Step
02

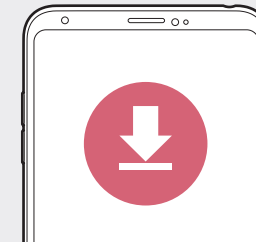

Install "Google Home" App

Download the Google Home App from the Google Play or App Store.

Step
03

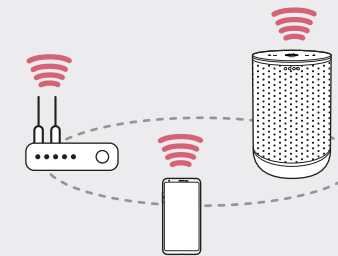


Set up the Wi-Fi connection

Launch the "Google Home" app and Follow the steps for Wi-Fi connection on the app.

① Quick set up
Activate Bluetooth function on smart device → Follow the steps on app → Set up Wi-Fi connection faster


Basic Operation

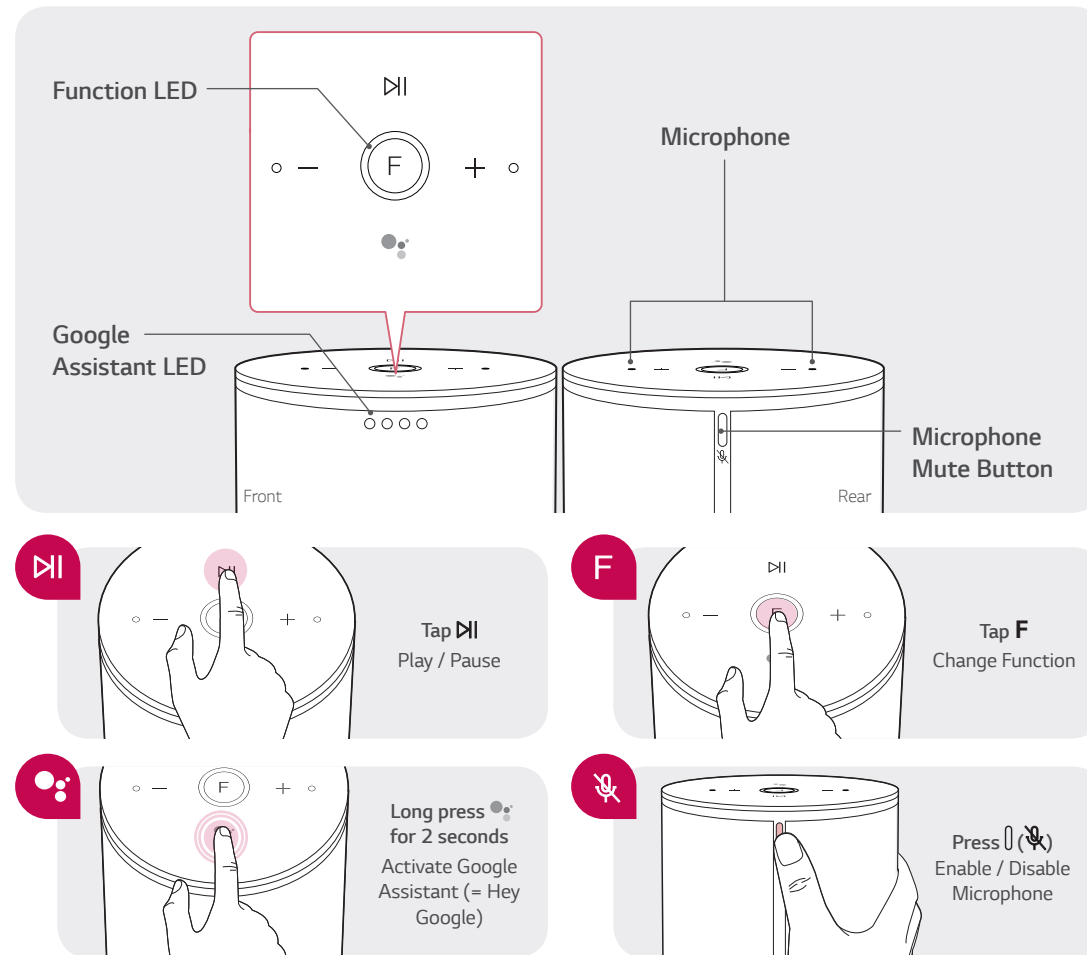

Bien commencer avec le haut-parleur **WK7**




Étape 01

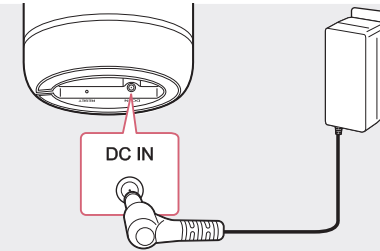

Connexion de l'adaptateur c.a.

Après la connexion de l'adaptateur c.a., le haut-parleur démarre. Le voyant à DEL de fonctionnalité tournera pendant quelques dizaines de secondes (environ 30 à 50 secondes), le temps d'établir la connexion.


Étape 02

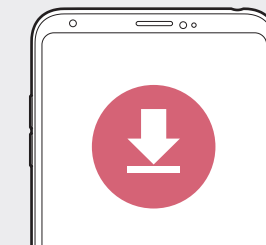

Installation de l'application « Google Home »

Téléchargez l'application Google Home depuis la boutique Google Play ou l'App Store.

Étape 03

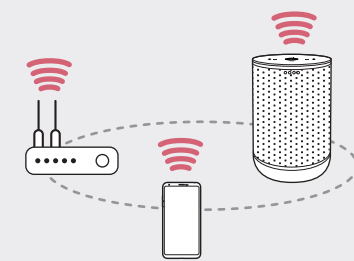

Configuration de la connexion Wi-Fi avec l'application

Lancez l'application « Google Home » et suivez les étapes indiquées dans l'application pour configurer la connexion Wi-Fi.

① Configuration rapide
Activez la fonctionnalité Bluetooth sur l'appareil intelligent → Suivez les étapes indiquées dans l'application → Configurez la connexion Wi-Fi plus rapidement.