
RELEASING THIS DRAWING WITHOUT PERMISSION LG Electronics SHOULD BE ACCUSED ACCORDING TO THE LAWS AND COMPANY RULES.
이 도면은 LG전자의 자산으로 불법 유출시 관계법과 회사규정에 의해 처벌됨.

MFL70280521

SEC. / WORK	가 BRAND	나 MODEL	다 P/NO.	PRINTING DEGREE	MATERIAL AND PRINTING DESCRIPTION	LG MODEL 명	SUFFIX	LANGUAGE	PAGE	REMARK
21	LG	F8K5XNK3 F8K5XNK4	MFL70280521	1	모조지 80g OFFSET 인쇄 (무선제본)	F8K5XNK3.ABWPGST F8K5XNK4.ASSPGST	GST	EN+TH	92	24inch Mini washer 2kg 작업처 : 인쇄물개발파트 양산처 : 국제인쇄

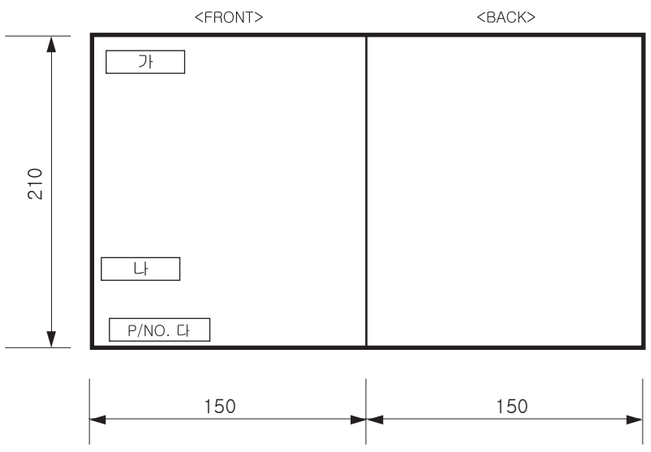

<< 주기 >>

1. 재질, 인쇄방법, 인쇄도수, 외곽치수등은 작업표에 준한다.
2. 인쇄내용, 문자크기 및 형상, 선의 굵기 등은 설계에서 제시된 FILM에 준함.
3. 외곽치수는 절단후 치수임.
4. 양산전에 설계 한도를 득할 것.
5. 본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501-34를 만족할 것

<< NOTES >>

1. Material, printing and exterier size are refer to work tables.
2. Printing, text size and line are based on LG design film.
3. Exterier size on the drawing is cutting line.
4. Before product controlled by criteria sample.
5. The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB,PBDE)♂and details should comply with LG standard of LG(63)-A-5501-34

REV. NO. 기호	REVISION DESCRIPTION 변경 사항	REF. NO. 시방 번호	DATE 년/월/일	PREPARED 시방자	APPROVED 승인자
1					
2					
3					
4					

PDF
ILLUSTRATOR

DR COMPLETED
도면 DR 완료
완료일 :

TRIG.		UNIT	mm	SCALE N/S	TITLE	MANUAL,OWNER'S
MODELING	DESIGNED	REVIEWED	CHECKED	APPROVED		DRUM-EXPORT 1/1
	주연수 17.10.17	전종묵 17.10.17	이갑선 17.10.17	김현석 17.10.17		
LG 전자 (주) LG Electronics Inc.		RELATED DWG.			DWG. No.	MFL70280521

LG
Life's Good

OWNER'S MANUAL


WASHING MACHINE



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

TG2402NTWW

มอก.1463-2556



MFL70280521
Rev.00_101617

www.lg.com

Copyright © 2017 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS 4

IMPORTANT SAFETY INSTRUCTIONS 4

INSTALLATION 10

Parts 10
Accessories 11
Specifications 11
Installation Place Requirements 12
Stacking Mini Washer 13
Connecting the Supply Hose 15
Installing the Drain Hose 18
Leveling the Appliance 19

OPERATION 20

Using the Appliance 20
Sorting Laundry 21
Closing the Door and Drawer 22
Adding Cleaning Products 23
Control Panel 25
Programme Table 26
Option Programme 27

SMART FUNCTIONS 28

Using Smart ThinQ Application 28
Using Smart Diagnosis™ 31

MAINTENANCE 32

Cleaning the Washing Machine 32
Cleaning the Drum 33
Cleaning the Water Inlet Filter 33
Cleaning the Lint Filter 34
Caution on Freezing During Winter 34

TROUBLESHOOTING 36

Diagnosing Problems 36
Error Messages 40

SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.
The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

⚠ This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

⚠ WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

⚠ CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be installed and transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, or rain or temperatures below freezing.
- Tighten the drain hose to avoid separation.

- If the power cord is damaged or the hole of the socket outlet is loose, do not use the power cord and contact an authorized service centre.
- This appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the power plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Operation

- Do not use a sharp object like drill or pin to press or separate an operation unit.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Use new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Do not reach into the appliance if the tub or agitator is moving.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not put animals, such as pets into the appliance.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, vegetable oil, cooking oil, etc.). Improper use can cause fire or explosion.
- In case of flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Do not push down the drawer excessively, when the appliance drawer is open.

- Do not touch the door during a high temperature programme.
- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the appliance.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- When pulling out the power plug from an outlet, hold the power plug, not the cable.
- Do not bend the power cable excessively or place a heavy object on it.
- If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately.
- Do not operate Mini Washer with two or more Mini Washers stacked.
- To avoid breaking the door glass, do not push too hard on the door when closing.
- Do not step on Mini Washer.
- Do not wash rugs, mats, shoes or pet blankets, or any other items other than clothes or sheets, in this machine.
- This appliance must only be used for domestic household purposes and should not be used in mobile applications.
- Do not open or close the door by foot.


Maintenance

- Securely plug the power plug in the socket outlet after completely removing any moisture and dust.
- Disconnect the power cord before cleaning the appliance.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the socket outlet.
- Do not spray water inside or outside the appliance to clean it.

Disposal


- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

Parts

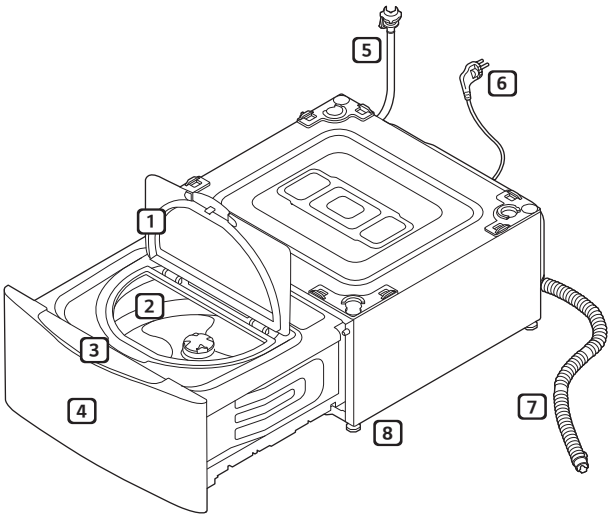

1 Door
2 Drum
3 Control Panel
4 Drawer
5 Water Supply Hose
6 Power Plug
7 Water Drain Hose
8 Leveling Feet

Accessories




Water supply hose (for cold water)




Connecting supply hose



Water drain hose



Water supply hose connector




Water drain hose connector



Anti-slip sheets (2 EA)



Detergent measuring cup




Brackets (front) (2 EA)



Brackets (back) (2 EA)



Spanner



* Screws
Type A (37 EA)
Type B (5 EA)
Type C (11 EA)



Cable ties (2 EA)



Band clamps (3 EA)



Remote control (optional)

* Type A : long sheet metal screw, Type B : short sheet metal screw, Type C : machine screw

NOTE

- Different accessories may apply to each model.
- Depending on the installation environment, you may have to purchase a separate drain hose connector.
- In addition to the screws required for installation, extra screws have been provided.


Specifications

Power supply	220 V~, 50 Hz
Size	600 mm (W) X 700 mm (D) X 365 mm(H)
Product weight	43 kg
Permissible water pressure	0.1 - 0.8 Mpa (1.0 - 8.0 kgf / cm²)
Wash capacity	2 kg

- Appearance and specifications may change without notice to improve the quality of the product.

Installation Place Requirements

Location

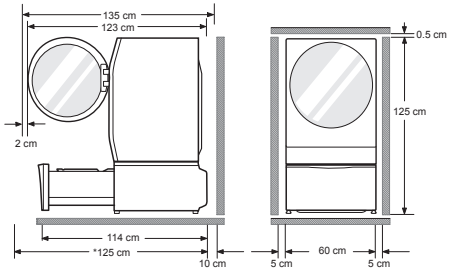

*125 cm: minimum space for installation

Level floor : Allowable slope under the entire appliance is 1°.

Power outlet : Must be within 1.5 meters of either side of the location of the appliance.

- Do not overload the outlet with more than one appliance.

Additional Clearance : 5 cm at the sides and 10 cm behind the unit.

- Do not place or store laundry products on top of the appliance at any time. These products may damage the finish or controls.

⚠ WARNING

- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Positioning

- Install the appliance on a flat hard floor.
- Make sure that air circulation around the appliance is not impeded by carpets, rugs, etc.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the appliance.
- If it is impossible to avoid positioning the appliance next to a gas cooker or coal burning stove, an insulation (85x60 cm) covered with aluminum foil on the side facing the cooker or stove must be inserted between the two appliances.
- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- With the appliance installed, adjust all four feet using a transit bolt spanner to ensure the appliance is stable, and a clearance of approximately 5 mm is left between the top of the appliance and the underside of any work-top.
- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.
- Do not use a drip pan as it can block the drawer. Using the drip pan may result in increased vibration and noise during operation.


⚠ WARNING


- This appliance is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc.

Electrical Connection


- Do not use an extension cord or double adapter.
- Always unplug the appliance and turn off the water supply after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.
- Repairs to the appliance must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service centre.

Stacking Mini Washer

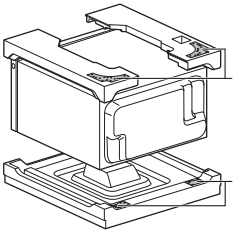




Brackets (front)



Brackets (back)

- The E7 error message appears on the display, if the stacking holder is not attached to the bottom of the Main Washer.

1 Tilt and hold Main Washer.

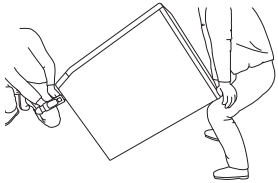


2 Assemble the bracket (front) and stacking holder at the bottom of Main Washer.

NOTE

- The stacking holder and screws needed for assembly are enclosed in the Main Washer, which can be stacked with the Mini Washer.
- If the Main Washer already has a stacking holder, do not install the stacking holder provided with the Mini Washer.


Type 1. The bottom part of the Main Washer is silver in color.

- First assemble the stacking holder using 2 type A screws included in the accessory box of the Mini Washer, then each bracket using 7 type A screws included in the accessory box of the Mini Washer.

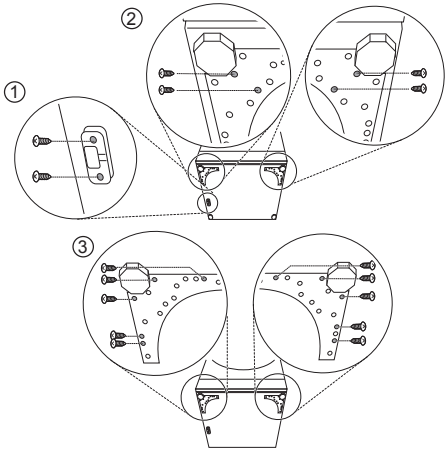


Type 2. The bottom part of the Main Washer is white in color.

- First assemble the stacking holder using 2 type C screws included in the accessory box of the Main Washer, then each bracket using 4 type C screws included in the accessory box of the Mini Washer.

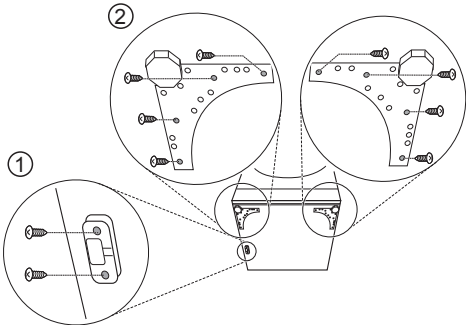

3 Pull and save the foam block for future use.

- If the washing machine must be moved in the future, the foam block will help prevent damage to the washing machine during transportation.

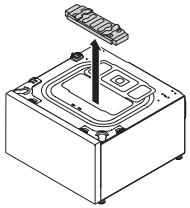


NOTE


- To prevent damage, do not remove the foam block until Mini Washer is at the final location.

4 Turn the top cover about 180 degrees.

Cover the upper hole with the top cover and install 4 type B screws to fix it in place.

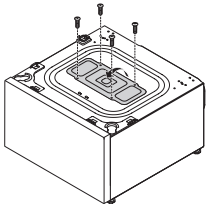


5 Attach the two back brackets on the rear top of the Mini Washer by inserting 4 type A screws in each bracket.

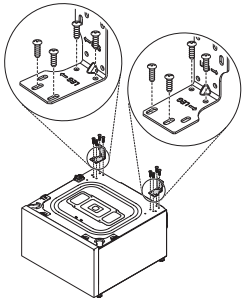

6 Place Main Washer on top of Mini Washer.

- Make sure the 4 legs are totally locked and the holes of Mini Washer align with the holes of Main Washer.

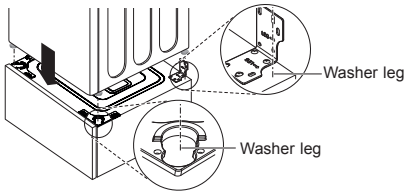


7 Securely attach the two appliances at the corners using 14 type A screws.


- First, insert screws on each side. Then insert screws on the front and back side.

NOTE

- It can be difficult to assemble if it is not assembled in the proper order.
- Use two type C screws to assemble the stacking holder.

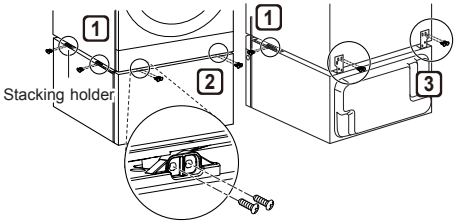

8 Turn the feet of Main Washer slightly until it is snugged up against Mini Washer.

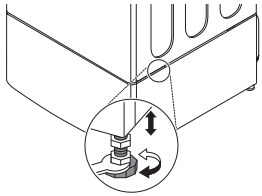

NOTE


- Mini Washer will not work as a standalone unit.


Connecting the Supply Hose

- Water supply pressure must be between 0.1 MPa and 0.8 MPa (1.0–8.0 kgf/cm^2).
- Do not overtighten the water supply hose.
- If the water supply pressure is more than 0.8 MPa, a decompression device should be installed.
- Periodically check the condition of the hose and replace the hose if necessary.
- Contact the service centre if there is no rubber seal.

Checking the Rubber Seal on the Supply Hose

Two rubber seals are supplied with the water supply hoses. They are used for preventing water leaks. Make sure the connection to taps is sufficiently tight.

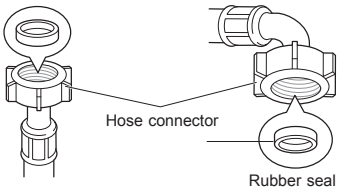


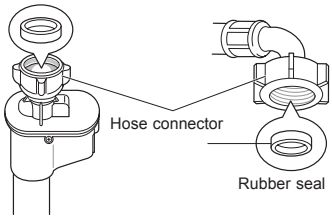

Connecting Hose to Water Tap


Connecting Screw-Type Hose to Tap with Thread

Screw the hose connector onto the water supply tap.

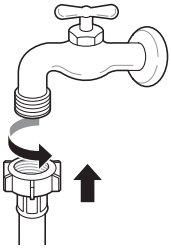


Connecting Screw-Type Hose to Tap Without Thread


1 Loose the four fixing screws.

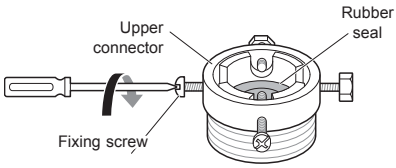


2 Remove the guide plate if the tap is too large to fit the adapter.

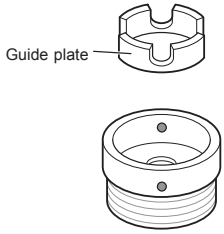

3 Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the four fixing screws.

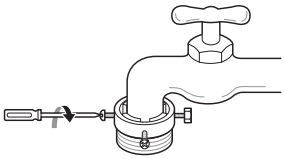


4 Push the supply hose vertically upwards so that the rubber seal within the hose can adhere completely to the tap and then tighten it by screwing it to the right.

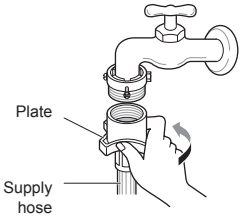


Connecting One Touch Type Hose to Tap Without Thread


1 Unscrew the adapter ring plate and loose the four fixing screws.

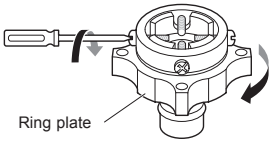


2 Remove the guide plate if the tap is too large to fit the adapter.

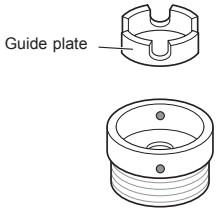

3 Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the four fixing screws and the adapter ring plate.

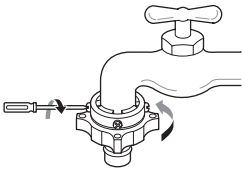

4 Pull the connector latch plate down, push the supply hose onto the adapter, and release the connector latch plate. Make sure the adapter locks into place.

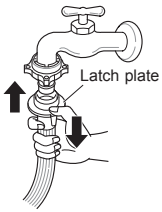


NOTE


- After connecting the supply hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, and etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

Connecting Hose to Two Washing Machines


1 Connect the water supply hose connector to the water supply hose of Main Washer. Open the accessory package for Mini Washer installation.

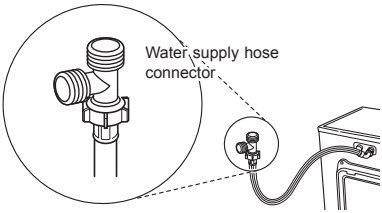

2 Connect the water supply hose of Mini Washer to the water supply hose connector.

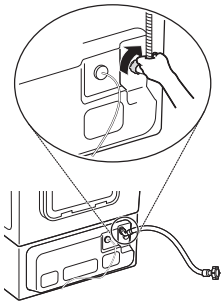

3 Connect the additionally provided water supply hose of Main Washer to the water supply hose connector and water tap.

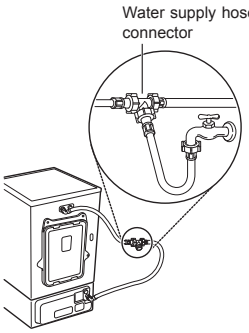


NOTE

- Make sure the water supply hose is not kinked or pinched.


Installing the Drain Hose

- The drain hose should not be placed higher than 100 cm above the floor. Water in the appliance may not drain or may drain slowly.


1 Insert the band clamp onto the drain hose elbow.

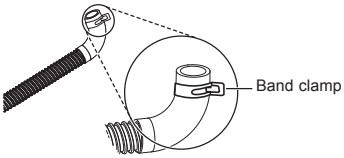

2 With the hose leading up from the elbow, insert the elbow onto the drain outlet on the back of Mini Washer.

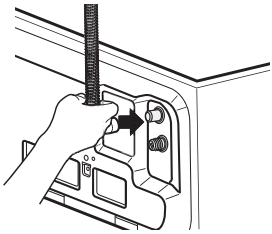

3 Adjust the band clamp with pliers to keep the hose securely in place and prevent leaking.

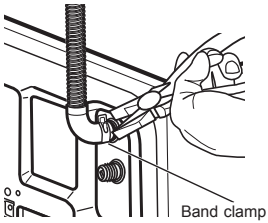


Using the Drain Hose Connector

1 Connect the drain hose of Main Washer and Mini Washer to the drain connector.

2 Attach each drain hose to the double drain hose connector and tie them with the band clamps.

3 Insert the drain hose connector into the drain pipe/hole.

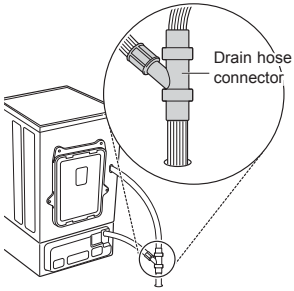

⚠ CAUTION

- Make sure the drain hose is not kinked or pinched. This is a potential cause of drainage problems or noise.


NOTE

- Depending on the installation environment, you may have to purchase a separate drain hose connector.

Leveling the Appliance

If the floor is uneven, turn the adjustable feet as required (Do not insert pieces of wood etc. under the feet). Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (Use a spirit level).

- Once the appliance is level, tighten the lock nuts up towards the base of the appliance. All lock nuts must be tightened.

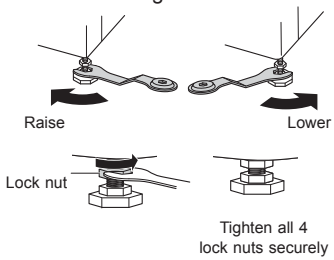

Diagonal Check

- When pushing down the edges of the top plate diagonally, the appliance should not move up and down at all (check both directions). If the appliance rocks when pushing the machine top plate diagonally, adjust the feet again.

⚠ WARNING

- When stacking Main Washer on Mini Washer, use the leveling feet on Mini Washer to level both. Main Washer´s leveling feet should be minimized and the locknuts turned counter-clockwise to secure them.

NOTE

- Timber or suspended type flooring may contribute to excessive vibration and unbalance.
- If Mini Washer is installed on a raised platform, it must be securely fastened in order to eliminate the risk of falling off.

Using Anti-Slip Sheets (Optional)

If you install the appliance on a slippery surface, it may move because of excessive vibration. Incorrect leveling may cause malfunction through noise and vibration. If this occurs, install the anti-slip sheets under the leveling feet and adjust the level.


1 Clean the floor to attach the anti-slip sheets.


- Use a dry rag to remove and clean foreign objects and moisture. If moisture remains, the anti-slip sheets may slip.

2 Adjust the level after placing the appliance in the installation area.

3 Place the adhesive side of the anti-slip sheets on the floor.

- It is most effective to install the anti-slip sheets under the front feet. If it is difficult to place the pads under the front feet, place them under the back feet.

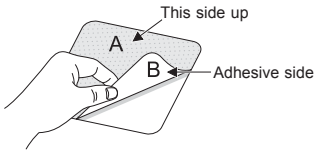



4 Ensure the appliance is level.

- Push or rock the top edges of the appliance gently to make sure that the appliance does not rock. If the appliance rocks, level the appliance again.


NOTE

- You can obtain anti-slip sheets from the LG Service Centre.

Using the Appliance


1 Sort laundry and load items.

- Sort laundry by fabric type, soil level, colour and load size as needed. Open the door and load items into the washing machine.

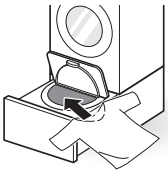

2 Add cleaning products.


- Add the proper amount of detergent with the detergent measuring cup to the washing drum evenly.

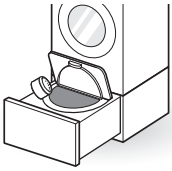

3 Closing the door and drawer.

4 Turn on the washing machine.

- Press the **Power** button to turn on the washing machine.

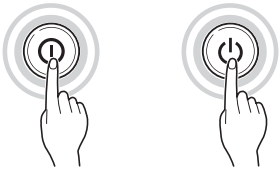

5 Choose the desired washing cycle.

- Press the cycle button repeatedly until the desired cycle is selected.



6 Begin cycle.

- Press the **Start/Pause** button to begin the cycle. The washing machine will agitate briefly without water to measure the weight of the load. If the **Start/Pause** button is not pressed within 15 minutes, the washing machine will shut off and all settings will be lost.



7 Add softener.

- When the machine chimes for about 20 seconds, add the softener and press **Start/Pause** to restart the cycle.

8 End of cycle.

- When the cycle is finished, a melody will sound. Immediately remove your clothing from the washing machine to remove wrinkling and odors.
- After washing is complete, wipe off the washing machine door, gasket and inside the washing drum with a dry towel for clean washing.

Sorting Laundry

1 Look for a care label on your clothes.

- This will tell you about the fabric content of your garment and how it should be washed.
- Symbols on the care labels.



Wash temperature


Normal machine wash


Permanent press


Delicate


Hand wash


Do not wash


2 Sorting laundry.

- To get the best results, sort clothes into loads that can be washed with the same wash cycle.
- Different fabrics need to be washed at varying temperatures and spin speeds.
- Wash two or more towels or knits together. If washed separately, laundry which absorbs a lot of water may not be washed well or abnormal spin-drying may occur due to leaning.
- Always sort dark colours from pale colours and whites. Wash separately as dye and lint transfer can occur causing discolouration of white and pale garments. If possible, do not wash heavily soiled items with lightly soiled ones.

  – Soil (Heavy, Normal, Light) :
  Separate clothes according to amount of soil.
  – Colour (White, Lights, Darks):
  Separate white fabrics from coloured fabrics.
  – Lint (Lint producers, Collectors):
  Wash lint producers and lint collectors separately.

3 Caring before loading.

- Do not wash 'memory wire' on female inner wear (such as a brassiere) as it may damage other clothes or the washing machine and create noise.
- Check all pockets to make sure that they are empty. Items such as nails, hair clips, matches, pens, coins and keys can damage both your washing machine and your clothes.




- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.
- Pre-treat dirt and stains by brushing a small amount of detergent dissolved water onto stains to help lift dirt.
- If an item of clothing has a long lace attached to it, arrange the lace so it cannot be tangled or put it into a washing net.
- Remove the insides of cushions, pillows, or sitting mats and only wash the cover. The insides may protrude, damaging other laundry. Plastic parts may generate abnormal vibrations.

⚠ CAUTION

- Divide laundry in large volume for washing so that the laundry can be submerged under water completely. If laundry expands during washing, it may cause damage to the laundry and parts during washing or spin.

Closing the Door and Drawer

1 Push the washing machine door until it clicks.

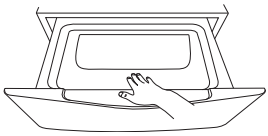

2 Push the drawer completely closed.

⚠ CAUTION

- Do not let your hands get stuck between the door and the washing machine, as this can cause injury.
- Forcing the drawer or the door to open can cause part damages and safety problems.
- Closing the drawer before having closed the door completely may scratch the door glass.
- Ensure the drawer is pulled out completely to prevent the door from contacting the front load washing machine.

NOTE

- Door lock may fail if there is too much laundry in the machine or if the door is not completely closed.
- If the product is operating or the drawer lock 🔒, indicator is displayed, the door cannot open. To open the door, press the **Start/ Pause** button to stop the product, and when drawer lock 🔒,indicator disappears, open the door. Do not force the drawer and door open.
- If dE1, dE2, dO or a warning sign appears on the display, close the drawer and the door completely. After doing so, press the **Start/ Pause** button.
- If the drawer cannot be opened completely, pull the drawer forward with a little force using both hands.
- If power failure occurs during product operation, the door cannot be opened. Provide the power again or contact the LG service centre.
- If the door cannot open due to high temperature, carry out rinsing with cold water using the Rinse+Spin programme or wait a while before opening the door.


Adding Cleaning Products

Detergent Dosage

- Detergent should be used according to the instruction of the detergent manufacturer and selected according to type, colour, soiling of the fabric and washing temperature.
- If too much detergent is used, too many suds can occur and this will result in poor washing results or cause heavy load to the motor.
- If you wish to use liquid detergent follow the guidelines provided by the detergent manufacturer.
- If too many suds occur, reduce the detergent amount.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.
- Refer to the label of the clothes, before choosing the detergent and water temperature.
- When using the washing machine, use designated detergent for each type of clothing only:
  - General powdered detergents for all types of fabric
  - Powdered detergents for delicate fabric
  - Liquid detergents for all types of fabric or designated detergents only for wool
- For better washing performance and whitening, use detergent with the general powdered bleach.

Adding Detergent

Measure the detergent with the detergent dispenser and pour it into the tub.

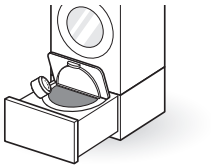

- Use the provided detergent measuring cup to add only one cup of detergent.
- Reduce the amount of detergent for lightly soiled laundry. If you use too much detergent, excessive bubbles will remain after rinsing.

Adding Softeners

Adding Fabric Softener

CASE 1. When the machine chimes:

1 Press **Start/Pause** to pause the cycle.
- It can be paused by pressing the **Start/Pause** button of the Mini Washer or by using the remote control.

2 Slide open the drawer, open the door, and add the liquid fabric softener.

3 Close the door, slide the drawer closed, and press **Start/Pause** to restart the cycle.

NOTE

- To disable or enable the fabric softener alert, press and hold the **Rinse+** button for three seconds.
- The fabric softener can be added within 30 seconds after the signal sounded.

CASE 2. If you miss the softener add point:

1 Press the **Power** button to interrupt the cycle.

2 Slide open the drawer, open the door, and add the liquid fabric softener.

3 Close the door, Slide the drawer, and select the **Rinse+Spin** programme.

4 Press the **Start/Pause** to restart the cycle.

NOTE

- Do not pour fabric softener directly on the clothes.
- The softener can also be diluted with water and added directly into the drum. Do not pour undiluted softener directly onto clothing because it may stain fabrics.


Adding Water Softener

- A water softener, such as anti-limescale (e.g. Calgon) can be used to cut down on the use of detergent in extremely hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.
- Use the quantity of detergent required for soft water.

⚠ CAUTION

- Do not directly put bleach to the laundry. This may cause partial discoloration and severe damage to the laundry.
- Do not use chlorine bleach or acidic cleaner when washing the laundry, as it can cause damage to clothes such as discoloration and decoloration of laundry.

Control Panel

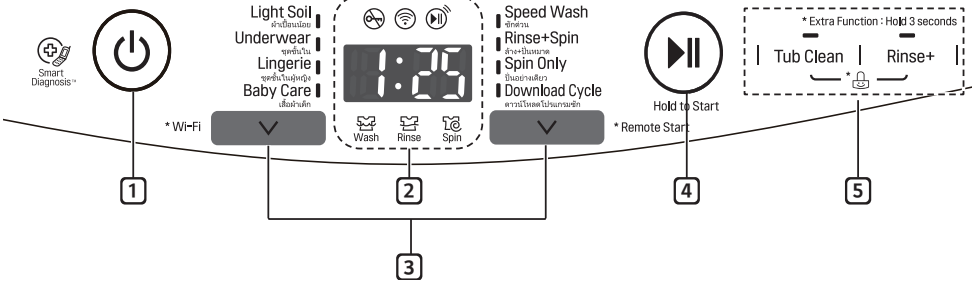

1 Power Button

- Press the **Power** button to turn the washing machine on.

2 Display

- The display shows the cycle status and estimated time remaining.
- : Drawer lock indicator
- : Wi-Fi connect indicator
- : Remote start indicator

3 Programme Button

- Programmes are available according to laundry type.
- In order to use the Download Cycle function, refer to SMART FUNCTIONS.

4 Start/Pause Button

- This **Start/Pause** button is used to start the wash cycle or pause the wash cycle.
- If a temporary stop of the wash cycle is needed, press the **Start/Pause** button.

NOTE

- If you do not press the **Start/Pause** button within 15 minutes of selecting a programme, the washing machine automatically turns off and all cycle settings are lost.

5 Options

- Use these buttons to select the desired options for the selected programme.
- The setting lights above the buttons illuminate to show the current selection.

Programme Table

Washing Programme

Programme	Description	Note	Maximum Load
Light Soil	Use this programme to wash lightly soiled normal items, except delicate fabrics such as wool or silk.	• To change the setting during washing, change the setting after pressing **Start/Pause** button.	2.0 kg
Underwear	Use this programme to wash delicate items such as lingerie or sheer and lacy clothes which could easily be damaged in a normal programme.	• This programme is not for silk items.	1.5 kg
Lingerie	Use this programme to wash textiles, lingerie, or fine clothes likely to shrink or deform.	• To reduce damage to textiles and improve washing performance, use special neutral detergent for wool. • To prevent damage to clothes, the drum spins gently to the left and right for washing.	1.0 kg
Baby Care	Use this programme to wash baby wear hygienically.	• Select a proper type of neutral detergent. • It is more effective to pre-wash laundry stained with food, sweat, urine and feces briefly before washing. • This programme is not recommended for wool, silk or any other delicates.	1.5 kg
Speed Wash	Use this programme to speed up the washing time for small loads and lightly soiled clothes.	• Use very little detergent in this programme.	2.0 kg
Rinse+Spin	Select this programme to rinse and spin a load separately from a regular cycle.	• Add fabric softener only.	1.5 kg

Option Programme

Spin Only

Use this option to spin-dry.

Tub Clean

Use this option to keep the drum clean. For information on using Tub Clean, see the Cleaning the Washing Machine section.

Rinse+

Use this option to increase the number of rinsing programmes.

1 Press the **Power** button.

2 Select a washing programme.

3 Press the **Rinse+** button.
- When you press the **Rinse+** button, the number of rinsing cycles (1 - 5) to be added will be displayed.

4 Press the **Start/Pause** button.

Child Lock

Use this option to disable the controls. This feature can prevent children from changing cycles or operating the appliance.

Locking the Control Panel

1 Press and hold the **Tub Clean** and **Rinse+** button at the same time for three seconds.

2  will appear on the display.
When the Child Lock is set, all buttons are locked except the **Power** button.

NOTE

- Turning off the power or completing all cycles will not reset the child lock function. You must deactivate child lock before you can access any other functions.

Unlocking the Control Panel

Press and hold the **Tub Clean** and **Rinse+** button at the same time for three seconds.

- To change the cycle or option, press the **Start/Pause** button to stop operation, and then choose the cycle or option which you wish to change.

Using Smart ThinQ Application

Installing Smart ThinQ

Search for the LG SmartThinQ application from the Google Play Store or Apple App Store on a smart phone. Follow instructions to download and install the application.

Wi-Fi Function

• For appliances with the  or  logo

Washer Cycle (Remote Start, Download Cycle)

Set or download any preferred cycle and operate by remote control.

Tub Clean Coach

This function shows how many cycles remain before It is time to run the Tub Clean cycle.

Energy Monitoring

Check the energy consupmtion of the recently used cycles and monthly average.

Smart Diagnosis™

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

Settings

Various functions are available.

Push Alert

Turn on the Push Alerts to receive appliance status notifications. The notifications are triggered even if the LG SmartThinQ application is off.

NOTE

- To verify the Wi-Fi connection, check that **Wi-Fi** icon on the control panel is lit.
- LG SmartThinQ is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- The machine supports 2.4 GHz Wi-Fi networks only.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the product again.
- Router SSID, please use only letters, numbers. Other characters may not be supported.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

Using Washer Cycle

Remote Start

Use a smart phone to control your appliance remotely. You can also monitor your cycle operation so you know how much time is left in the cycle.

To Use Remote Start:

1. Press the **Power** button.
2. Put the laundry in drum.
3. Press and hold **Remote Start** button for 3 seconds to enable Remote Start function.
4. Start a cycle from the LG SmartThinQ application on your smart phone.

NOTE

- Once the Remote Start mode is enabled, you can start a cycle from the LG SmartThinQ smartphone application. If the cycle is not started, the machine will wait to start the cycle until it is turned off remotely from the application or the Remote Start mode is disabled.
- When Remote Start is turned on, the door is automatically locked.

To Disable Remote Start:

When the Remote Start is activated, press and hold **Remote Start** button for 3 seconds.

Download Cycle

Download new and special cycles that are not included in the basic cycles on the appliance.

Appliances that have been successfully registered can download a variety of specialty cycles specific to the appliance.

Only one cycle can be stored on the appliance at a time.

Once cycle download is completed in the appliance, the product keeps the downloaded cycle until a new cycle is downloaded.

Open Source Software Notice

Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Smart Diagnosis™ Using a Smart Phone

• For appliances with the or logo

Use this function if you need an accurate diagnosis by an LG Electronics customer information centre when the appliance malfunctions or fails.

Smart Diagnosis™ can not be activated unless the appliance is connected to power. If the appliance is unable to turn on, then troubleshooting must be done without using Smart Diagnosis™.


Using Smart Diagnosis™

Smart Diagnosis™ Through the Customer Information Centre

Use this function if you need an accurate diagnosis by an LG Electronics customer information center when the appliance malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

1 Press the **Power** button after opening the drawer on Mini Washer.

2 When instructed to do so by the call centre, place the mouthpiece of your phone close to the Smart Diagnosis™ icon.

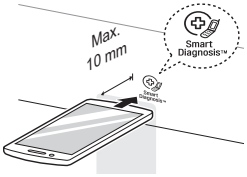

3 Press and hold the **Tub Clean** button for three seconds, while holding the phone mouthpiece to the icon or **Power** button.

4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.

- For best results, do not move the phone while the tones are being transmitted.
- If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.

5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

NOTE

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.


⚠ WARNING

- Unplug the washing machine before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washing machine. They may damage the finish.

Cleaning the Washing Machine

Care After Wash

- After the cycle is finished, wipe the door and the inside of the door seal to remove any moisture.
- Leave the door open to dry the drum interior.
- Wipe the body of the washing machine with a dry cloth to remove any moisture.

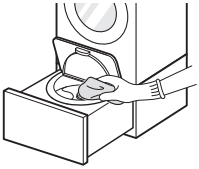

Cleaning the Exterior

Proper care of your washing machine can extend its life.

Door:

- Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

Exterior:

- Immediately wipe off any spills.
- Wipe with a damp cloth.
- Do not press the surface or the display with sharp objects.

Cleaning the Interior

- Use a towel or soft cloth to wipe around the washing machine door opening and door glass.
- Always remove items from the washing machine as soon as the cycle is complete. Leaving damp items in the washing machine can cause wrinkling, colour transfer, and odour.
- Run the Tub Clean programme once a month (or more often if needed) to remove detergent buildup and other residue

Cleaning the Drum

Use the Tub Clean option to keep the drum clean.

1 Press the **Power** button.

2 Dilute 200 ml liquid chlorine bleach in 1 ℓ of water and pour the mixture in the drum.

3 Press the **Tub Clean** button.

4 Press the **Start/Pause** button.


⚠ CAUTION

- If there is a child, be careful not to leave the door open for too long.


Cleaning the Water Inlet Filter

- Turn off the stopclock if the washing machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- 1E icon may blink on the display when the water pressure is weak or an inlet filter is clogged with dirt. Clean the inlet filter.
- The inlet filter screens could be plugged by hard water scale, sediment in the water supply, or other debris.

1 Turn off the water tap and unscrew the water inlet hose.

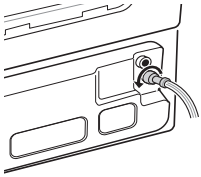


2 Clean the filter using a hard bristle brush.

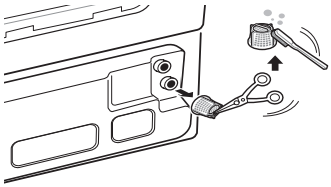


Cleaning the Lint Filter

The filter is an important part for efficient washing performance result, so it needs special care from you. It is recommended that the filter be cleaned regularly.


1 Pull the cap of the lint filter.

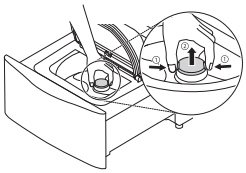

2 Open the cap and remove lint and then wash out.

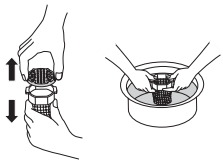

3 Insert the lower part of the filter into the drum and close the cap until you hear a click sound.

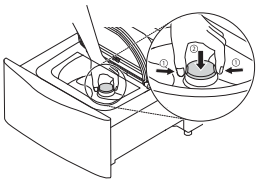

NOTE


- When the lint filter is damaged, contact LG service centre.
- Do not operate the washing machine without the lint filter.
- Do not place the lint filter loosely. Doing so may damage the fabrics or the washing machine.

Caution on Freezing During Winter

- When frozen, the product does not operate normally. Make sure to install the product where it will not freeze during winter.
- In case the product must be installed outside on a porch or in other outdoor conditions, make sure to check the following.

How to Keep the Product from Freezing

- After closing the tap, disconnect the cold supply hose from the tap, and remove water while keeping the hose facing downwards.

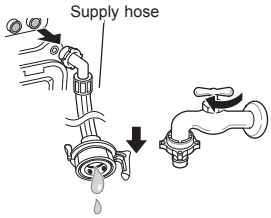


How to Handle Freezing

Step 1. When the Door is Frozen

- Thaw out the door using a hot water cloth.

Step 2. When the Water Supply Hose is Frozen

- 1E icon may blink on the display when water supply problems occur, take the following measures.
  - Take out water supply hose and connect to the tap and check that water comes from the tap and supply hose.
  - Turn off the tap, and thaw out the tap and both connection areas of supply hose of the product using a hot water cloth.
  - Take out supply hose and immerse in warm water below 50–60 °C.

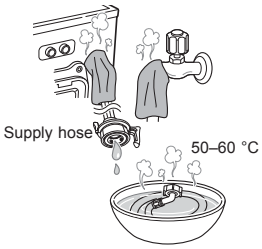

Step 3. When the Drain Pump is Frozen

- FF, OE icon may blink on the display when drain pump problems occur, take the following measures.

1 Pour 15 ℓ warm water below 50–60 °C in the drum until washing machine wing nuts are immersed and wait for an hour.

2 Press the **Power** button and then run the Baby Care programme for an hour.
- When 1E icon appears on the display, repeat steps 1 to 2.

3 Turn off the power when the Baby Care programme is finished. If the drawer is open, select the **Rinse+Spin** programme and press the **Start/Pause** button to check that the washing machine works.

4 When OE icon appears on the display, thaw out the drain hose inner part with the hot water.

TROUBLESHOOTING

The appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If the appliance does not function properly or does not function at all, check the following before you call for service:

Diagnosing Problems

Symptoms	Reason	Solution
The drawer does not open.	**Power failure, or the power cord was pulled out during washing.**	• After providing the power again, press the **Power** button with the control panel of Main Washer or the remote control.
Draining starts when pressing Start/ Pause button.	**The Start/Pause button is pressed during washing.**	• When pressing the **Start/Pause** button during washing, the drawer is unlocked after drainage for safety.
Rattling and clanking noise	**Foreign objects, such as keys, coins, or safety pins may be in drum.**	• Stop washing machine, check drum for foreign objects. If noise continues after washing machine is restarted, call for service.
Thumping sound	**Heavy wash loads may produce a thumping sound.**	• If sound continues, wash load is probably out of balance. Stop and redistribute wash load.
	Wash load may be out of balance.	• Pause the cycle and redistribute the load after the door unlocks.
Vibrating noise	**Packaging materials were not removed.**	• Remove packing materials.
	Wash load may be unevenly distributed in the drum.	• Pause the cycle and redistribute the load after the door unlocks.
	Not all leveling feet are resting firmly and evenly on the floor.	• See Leveling the Appliance in the Installation section.
	Floor not rigid enough.	• Make sure that the floor is solid and does not flex.
Water leaks every load	**Hoses not installed correctly.**	• Check all fill and drain hose connections to ensure that they are tight and secure.
Excessive sudsing	**Too much detergent or incorrect detergent.**	• Reduce the amount of detergent for lightly soiled laundry. If you use too much detergent, excessive bubbles will remain after rinsing.

Symptoms	Reason	Solution
Staining	**Clothes were not properly sorted.**	• Always wash dark colors separately from light colors and whites to prevent discoloration. • Never wash heavily soiled items washed with lightly soiled items.
Water leaking	**Supply hose connection is loose at the tap, washing machine, or drain hose connector.**	• Check hoses and drain hose connectors for leaks, cracks and splits. • Tighten hose connections.
	House drain pipes are clogged.	• The washing machine pumps out water very rapidly. Check for water backing up out of the drain pipe during drain. If water is seen coming out of the drain, check for proper drain hose installation and check for restrictions in the drain. Contact a plumber to repair drain pipe.
	Drain hose has come out of drain connector or is not inserted far enough.	• Tie drain hose to supply hose or standpipe to prevent it from coming out during drain. For smaller drain pipes, insert the drain hose into the pipe as far as the drain hose flange. For larger drain pipes, insert the drain hose into the pipe 2-5 cm past the flange.
	Load is too large for the drum.	• Reduce the load or use Main Washer. • Stop the washing machine and check the load. Make sure the load fits loosely in the drum and the door closes easily.
	Oversudsing of detergent.	• Oversudsing may create leaks, and may be caused by the type and amount of detergent used. Always reduce the amount of detergent if the load is small or lightly soiled, or if your water is very soft. Never use more than the maximum amount shown in the dispenser provided.
Wrinkling	**Washing machine not unloaded promptly.**	• Always remove items from the washing machine as soon as the cycle is complete.
	Washing machine overloaded.	• The washing machine can be fully loaded, but the drum should not be tightly packed with items. The door of the washing machine should close easily.

Symptoms	Reason	Solution
Washing machine will not operate.	**Control panel has powered off due to inactivity.**	• This is normal. Press the **Power** button to turn the washing machine on.
	Washing machine is unplugged.	• Make sure cord is plugged securely into a working outlet.
	Water supply is turned off.	• Turn the cold water tap fully on.
	Controls are not set properly.	• Make sure the cycle was set correctly, close the door and press the **Start/Pause** button.
	Door or drawer is open.	• Close the door and drawer make sure that nothing is caught under the door preventing it from closing completely.
	Circuit breaker/fuse is tripped/blown.	• Check house circuit breakers/fuses. Replace fuses or reset breaker. The washing machine should be on a dedicated branch circuit. The washing machine will resume the cycle where it stopped once power is restored.
	Control needs to be reset.	• Press the **Power** button, then re-select the desired programme and press the **Start/Pause** button.
	Start/Pause was not pressed after a cycle was set.	• Press the **Start/Pause** button with control panel of Main Washer or remote control after closing the drawer. • When using the control panel of Mini Washer, press the **Start/Pause** button and close the drawer within 5 seconds.
	Extremely low water pressure.	• Check another tap in the house to make sure that household water pressure is adequate.
	Washing machine is too cold.	• If the washing machine has been exposed to temperatures below freezing for an extended period of time, allow it to warm up before pressing the **Power** button.

Symptoms	Reason	Solution
Washing machine is not filling properly.	**Filter clogged.**	• Make sure the inlet filters on the fill valves are not clogged. Refer to the filter cleaning instructions.
	Supply hoses may be kinked.	• Check that supply hoses are not kinked or clogged.
	Insufficient water supply.	• Make sure that the cold water tap is turned on all the way.
	door and drawer are open.	• The washing machine will not operate if the door is open. Close the door and make sure that nothing is caught under the door preventing it from closing completely.
	Water level is too low.	• The fill level is optimized for the wash motion to achieve the best wash performance.
Water in the washing machine does not drain or drains slowly.	**Drain hose is kinked, pinched, or clogged.**	• Make sure the drain hose is free of clogs, kinks, etc., and is not pinched behind or under the washing machine.
Poor stain removal	**Heavily soiled load.**	• Use Main Washer.
	Previously set stains.	• Articles that have previously been washed may have stains that have been set. These stains may be difficult to remove and may require hand washing or pre-treating to aid in stain removal.
Wash cycle time is longer than usual.	**The washing machine automatically adjusts the wash time for the amount of laundry, water pressure and other operating conditions.**	• This is normal. The washing machine adjusts cycle time automatically to provide optimal results for the selected programme. The time remaining shown in the display is only an estimate. Actual time may vary.
Musty or mildewy odor in washing machine	**Incorrect or too much detergent has been used.**	• This machine requires very little detergent. Use the provided detergent measuring cup.
	Inside of drum was not cleaned properly.	• Run the Tub Clean programme regularly.
Washing machine chimes repeatedly before final rinse.	**This is not an error.**	• This is an alert to allow the addition of liquid fabric softener before the final rinse.

Error Messages

Symptoms	Reason	Solution
	**Drawer is not closed properly.**	• Close the drawer and press **Start/Pause** button to start the cycle. • If the drawer is closed and the drawer lock error message is displayed, call for service.
	**Door is not closed properly.**	• Open the drawer and make sure the latch area is free of clothing or other obstructions. • Close the door, shut the drawer, and press **Start/Pause** to start the cycle. • If the door is closed and the door error message is displayed, call for service.
	**The cold water tap is not fully open.**	• Make sure that the cold water tap is fully open.
	Water line hoses are kinked, pinched, or crushed.	• Make sure that the hoses are not kinked or pinched. Be careful when moving the washing machine during cleaning and maintenance.
	Water inlet filters are clogged.	• Clean the inlet filters.
	Water supply pressure to tap or house is too low.	• Check another tap in the house to make sure that household water pressure is adequate and flow is not restricted. Disconnect the supply hose from the washing machine and run a few liters of water through the hose to flush the water supply lines. If flow is too low, contact a plumber to have the water lines repaired.
	Water supply connected with leak-limiting hoses.	• Hoses designed to limit leaks can trip falsely and prevent the washing machine from filling. The use of leak limiting hoses is not recommended.
	**Drain hose is kinked, pinched, or clogged.**	• Make sure the drain hose is free of clogs, kinks, etc., and is not pinched behind or under the washing machine.

Symptoms	Reason	Solution
	**UE rebalancing operation is not successful.**	• The automatic attempt to rebalance the load was not successful. The cycle has been paused to allow the load to be manually adjusted.
	The load is too small.	• Add more items to allow the washing machine to balance the loads.
	Heavy articles are mixed with lighter items.	• Wash articles of somewhat similar weight.
	The load is out of balance.	• Manually redistribute the load if articles have become tangled.
	**Control error.**	• Unplug the power plug and call for service.
	**Water level is too high due to a faulty water valve.**	• Close the water taps, unplug the washing machine, and call for service.
	**The water level sensor is not working correctly.**	• Close the water taps, unplug the washing machine, and call for service.
	**A motor error has occurred.**	• Allow the washing machine to stand for 30 minutes and then restart the cycle. If the LE error code persists, call for service.
	**It is time to run the Tub Clean programme.**	• Run the Tub Clean programme.
	**Mini Washer is being operated without a full-size washing machine.**	• Mini Washer will not operate as a standalone unit. It must be stacked under an LG front-loading washing machine.
	Stacking switch is not working properly.	• The product is for use only in combination with LG authorized appliances. Call the customer information centre to check out LG authorized appliances.
	**Drain hose, supply hose or drain pump is frozen.**	• Thaw out the supply hose using a hot water cloth. • Pour warm water in the drum.
	**CL is not an error. This prevents children from changing cycles or operating the appliance.**	• To deactivate, press the **Tub Clean** and **Rinse+** button for three seconds.

Memo

Memo

Memo

คู่มือผู้ใช้

เครื่องซักผ้า



ก่อนเริ่มต้นการติดตั้ง โปรดอ่านคำแนะนำเหล่านี้โดยละเอียด ซึ่งจะช่วยทำให้การติดตั้งง่ายขึ้นและทำให้แน่ใจว่าผลิตภัณฑ์ได้รับการติดตั้งอย่างถูกต้องและปลอดภัย และกรุณาเก็บคำแนะนำเหล่านี้ไว้ใกล้กับผลิตภัณฑ์หลังจากการติดตั้งสำหรับการอ้างอิงในอนาคต

TG2402NTWW

มอก.**1463-2556**

MFL70280521
Rev.00_101617

www.lg.com

Copyright © 2017 LG Electronics Inc. All Rights Reserved.

สารบัญ

คู่มือฉบับนี้อาจมีรูปภาพหรือเนื้อหาที่แตกต่างจากรุ่นที่คุณซื้อ
คู่มือนี้อาจถูกแก้ไขเปลี่ยนแปลงโดยผู้ผลิต

คำแนะนำด้านความปลอดภัย 4
คำแนะนำเพื่อความปลอดภัยที่สำคัญ 4

การติดตั้ง.....10
ชิ้นส่วน.....10
อุปกรณ์เสริม.....11
ข้อมูลจำเพาะ 11
ข้อกำหนดสำหรับสถานที่ติดตั้ง.....12
เครื่องซักผ้าขนาดเล็กชนิดตั้งซ้อน 13
การเชื่อมต่อกับท่อน้ำประปา.....15
การติดตั้งท่อระบาย 18
การปรับระดับเครื่องใช้ 19

การใช้งาน 20
การใช้งานเครื่องใช้.....20
คัดแยกเสื้อผ้าที่ซัก 21
การปิดประตูและลิ้นซัก.....22
การใส่ผลิตภัณฑ์ทำความสะอาด 23
แผงควบคุม 25
ตารางโปรแกรม.....26
โปรแกรมตัวเลือก 27

ฟังก์ชันสมาร์ท.....28
การใช้แอพพลิเคชั่น Smart ThinQ.....28
การใช้ Smart Diagnosis™ 31

การบำรุงรักษา.....32
การทำความสะอาดเครื่องซักผ้า 32
การทำความสะอาดถังซัก 33
การทำความสะอาดตัวกรองท่อน้ำเข้า.....33
ทำความสะอาดตัวกรองผ้าสำลี 34
ระวังการเป็นน้ำแข็งในระหว่างฤดูหนาว 34

การแก้ไขปัญหาเบื้องต้น 36
การวินิจฉัยปัญหา 36
ข้อความข้อผิดพลาด 40

คำแนะนำด้านความปลอดภัย

แนวทางปฏิบัติเพื่อความปลอดภัยต่อไปนี้มีจุดมุ่งหมายเพื่อป้องกันความเสี่ยงที่ไม่คาดหมายหรือความเสียหายจากการใช้งานผลิตภัณฑ์ที่ไม่ปลอดภัยหรือไม่ถูกต้อง
แนวทางปฏิบัติได้แยกส่วนเป็น 'คำเตือน' และ 'ข้อควรระวัง' ดังคำอธิบายด้านล่าง

⚠ สัญลักษณ์ถูกแสดงสำหรับบ่งบอกรายการหรือการดำเนินการที่สามารถทำให้เกิดความเสี่ยงได้ กรุณาอ่านทำความเข้าใจส่วนของสัญลักษณ์นี้อย่างระมัดระวังและปฏิบัติตามคำแนะนำเพื่อหลีกเลี่ยงความเสี่ยง

⚠ คำเตือน

บ่งบอกว่าการไม่ปฏิบัติตามคำแนะนำสามารถทำให้ได้รับบาดเจ็บสาหัสหรือเสียชีวิตได้

⚠ ข้อควรระวัง

บ่งบอกว่าการไม่ปฏิบัติตามคำแนะนำสามารถทำให้ได้รับบาดเจ็บเล็กน้อยหรือเกิดความเสียหายต่อผลิตภัณฑ์ได้

คำแนะนำเพื่อความปลอดภัยที่สำคัญ

⚠ คำเตือน
สำหรับการลดความเสี่ยงของการระเบิด ไฟไหม้ การเสียชีวิต ไฟฟ้าช็อต การได้รับบาดเจ็บหรือการถูกไอน้ำลวกต่อบุคคลเมื่อใช้งานผลิตภัณฑ์นี้ กรุณาปฏิบัติตามข้อควรระวังเบื้องต้น รวมไปถึงรายการต่อไปนี้:

เด็กเล็กในบ้าน

เครื่องใช้ไฟฟ้าไม่ได้ออกแบบมาสำหรับการใช้งานโดยบุคคล (รวมไปถึงเด็กเล็ก) ที่มีทักษะทางกายภาพ การรับรู้ หรือทางจิตใจที่บกพร่อง หรือขาดความรู้และประสบการณ์ ยกเว้นแต่ได้รับการควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้นี้โดยบุคคลที่รับผิดชอบความปลอดภัยของพวกเขา เด็กเล็กจะต้องได้รับการควบคุมดูแลเพื่อให้มั่นใจว่าพวกเขาจะไม่เล่นกับเครื่องใช้นี้

การติดตั้ง

- หากเครื่องใช้ได้รับความเสียหาย ชำรุด ถูกถอดชิ้นส่วนบางส่วน หรือมีชิ้นส่วนแตกหักหรือสูญหาย รวมทั้งสายไฟหรือปลั๊กที่ชำรุด อย่าพยายามใช้งานเครื่องใช้
- เครื่องใช้ไฟฟ้านี้ควรติดตั้งและขนย้ายโดยคนอย่างน้อยสองคนเพื่อให้สามารถจับเครื่องใช้ไฟฟ้าอย่างมั่นคง
- อย่าติดตั้งเครื่องใช้ไฟฟ้าในสถานที่ชื้นหรือมีฝุ่น ห้ามติดตั้งหรือเก็บอุปกรณ์ในพื้นที่กลางแจ้งใด ๆ หรือในพื้นที่ใด ๆ ที่อยู่ภายใต้เงื่อนไขด้านสภาพภูมิอากาศ เช่น ถูกแสงแดด ลม หรือฝนโดยตรงหรืออุณหภูมิที่ต่ำกว่าจุดเยือกแข็ง
- ยึดท่อระบายให้แน่นเพื่อหลีกเลี่ยงการหลุด

- หากสายไฟได้รับความเสียหายหรือช่องของเต้ารับซอคเก็ตหลวม อย่าใช้งานสายไฟและติดต่อศูนย์บริการที่ได้รับอนุญาต
- ต้องไม่ติดตั้งเครื่องใช้นี้ที่ด้านหลังของประตูที่ล็อคได้ ประตูเลื่อนหรือประตูที่มีบานพับที่อยู่ตรงกันข้ามกับของเครื่องใช้ ในลักษณะที่จำกัดการเปิดประตูเครื่องใช้ได้อย่างเต็มที่เต็มที่
- เครื่องใช้ไฟฟ้านี้จะต้องได้รับการต่อสายดิน ในกรณีที่มีการทำงานผิดปกติหรือล้มเหลว การต่อสายดินจะช่วยลดความเสี่ยงต่อการเกิดไฟฟ้าช็อตโดยการให้เส้นทางที่มีความต้านทานต่ำที่สุดสำหรับกระแสไฟฟ้า
- เครื่องใช้ไฟฟ้านี้ได้รับการติดตั้งสายไฟที่มีตัวนำที่ต่อสายดินให้อุปกรณ์และปลั๊กไฟแบบต่อสายดิน สายไฟจะต้องถูกเสียบเข้าในเต้ารับซอคเก็ตที่เหมาะสมซึ่งถูกติดตั้งและต่อสายดินโดยสอดคล้องกับกฎหมายและข้อบัญญัติท้องถิ่นทั้งหมด
- การต่อตัวนำสายดินกับอุปกรณ์ที่ไม่เหมาะสมสามารถส่งผลให้มีความเสี่ยงต่อการเกิดไฟฟ้าช็อตได้ ตรวจสอบกับช่างไฟฟ้าหรือพนักงานบริการที่ได้รับการรับรอง หากท่านมีข้อสงสัยว่าเครื่องใช้ได้รับการต่อสายดินอย่างเหมาะสมหรือไม่
- ห้ามดัดแปลงปลั๊กไฟที่ให้มาพร้อมกับอุปกรณ์ หากปลั๊กไม่พอดีกับเต้ารับ ให้ติดตั้งเต้ารับที่เหมาะสมโดยช่างไฟที่มีคุณวุฒิ

การใช้งาน

- อย่าใช้วัตถุมีคม เช่น สว่านหรือเข็มหมุด ในการกดหรือแยกชุดปฏิบัติการ
- ห้ามซ่อมแซมหรือเปลี่ยนชิ้นส่วนใด ๆ ของอุปกรณ์ การซ่อมแซมหรือการให้บริการทั้งหมดต้องดำเนินการโดยพนักงานบริการที่ได้รับการรับรอง เว้นเสียแต่ว่าได้รับคำแนะนำโดยเฉพาะในคู่มือสำหรับเจ้าของนี้ ใช้ชิ้นส่วนของโรงงานที่ได้รับอนุญาตเท่านั้น
- ใช้ท่อใหม่หรือชุดท่อที่ให้มาพร้อมกับเครื่องใช้นี้ การนำท่อเก่ากลับมาใช้สามารถทำให้เกิดน้ำรั่วและความเสียหายของทรัพย์สินตามมา
- อย่ายื่นอวัยวะใดๆ เข้าไปภายในเครื่องใช้หากอ่างหรือเครื่องกวนน้ำกำลังเคลื่อนไหว
- รักษาพื้นที่ภายใต้และรอบ ๆ อุปกรณ์ให้ปราศจากจากวัสดุที่ติดไฟต่างๆ เช่น ผ้าสำลี กระดาษ เศษผ้า สารเคมี อื่นๆ
- ห้ามใส่สัตว์เข้าไป เช่น สัตว์เลี้ยงเข้าในเครื่อง
- ห้ามเปิดประตูเครื่องใช้ทิ้งไว้ เด็กอาจโหนฝาหรือคลานเข้าไปในเครื่อง ทำให้เกิดความเสียหายหรือบาดเจ็บ
- อย่ายื่นอวัยวะใดๆ เข้าไปภายในเครื่องใช้ในขณะที่กำลังทำงาน รอจนถังซักผ้าหยุดสนิท
- อย่าใส่ ซักหรืออบแห้งวัสดุที่ทำความสะอาด ซัก จุ่มหรือพ่นด้วยสารที่ติดไฟได้หรือระเบิดได้ (เช่น แวกซ์ น้ำมัน สี น้ำมันเบนซิน สารล้างน้ำมัน สารละลายซักแห้ง เคโรซีน น้ำมันพืช น้ำมันปรุงอาหาร ฯลฯ) การใช้งานที่ไม่เหมาะสมสามารถทำให้เกิดไฟไหม้หรือการระเบิดได้
- ในกรณีน้ำท่วม ให้ถอดปลั๊กไฟและติดต่อศูนย์ข้อมูลของลูกค้าของ LG อิเล็กทรอนิกส์
- อย่ากดลิ้นชักลงรุนแรงเกินไปในขณะที่เปิดลิ้นชักของเครื่องใช้ไฟฟ้า

- ห้ามสัมผัสประตูในช่วงโปรแกรมที่มีอุณหภูมิสูง
- ห้ามใช้ก๊าซไวไฟและสารที่ติดไฟ (เบนซิน ก๊าซโซลีน ทินเนอร์, น้ำมัน, แอลกอฮอล์ อื่น ๆ) ใกล้กับเครื่องใช้
- หากท่อระบายหรือท่อน้ำเข้าเป็นน้ำแข็งในช่วงฤดูหนาว ใช้งานหลังจากทำการละลายน้ำแข็งแล้วเท่านั้น
- เก็บน้ำยาซักผ้า น้ำยาปรับผ้านุ่มและน้ำยาฟอกขาวทั้งหมดให้ห่างจากมือเด็ก
- ห้ามสัมผัสปลั๊กไฟหรือชุดควบคุมเครื่องใช้ด้วยมือที่เปียก
- เมื่อทำการถอดปลั๊กไฟจากเต้ารับ จับที่ปลั๊กไฟ ไม่จับที่สายไฟ
- ห้ามงอสายไฟมากเกินไปหรือวางสิ่งของหนักบนสายไฟ
- หากมีการรั่วของแก๊ส (ไอโซบิวเทน โพรเพน แก๊สธรรมชาติ ฯลฯ) อย่าสัมผัสเครื่องใช้ไฟฟ้าหรือปลั๊กไฟ และระบายอากาศในพื้นที่ทันที
- อย่าใช้เครื่องซักผ้าขนาดเล็กที่ตั้งซ้อนกันตั้งแต่สองเครื่องขึ้นไป
- เพื่อหลีกเลี่ยงการทำกระจกประตูแตก ห้ามดันประตูแรงเมื่อปิด
- อย่าเหยียบเครื่องซักผ้าขนาดเล็ก
- ห้ามซักพรมชิ้นเล็ก เสื่อ รองเท้าหรือผ้าห่มของสัตว์เลี้ยง หรือสิ่งอื่น ๆ ยกเว้นเสื้อผ้าหรือผ้าปูที่นอน ในเครื่องใช้นี้
- เครื่องใช้นี้จะต้องใช้เพียงเพื่อวัตถุประสงค์ในครัวเรือนและไม่ควรนำมาใช้ในการใช้งานที่มีการเคลื่อนไหว
- อย่าใช้เท้าปิดประตู

การบำรุงรักษา


- เสียบปลั๊กไฟในเต้ารับหลังจากที่ขจัดสิ่งสกปรกและความชื้นหมดแล้ว
- ถอดสายไฟก่อนทำความสะอาดเครื่องใช้ไฟฟ้า
- ห้ามถอดปลั๊กเครื่องใช้ไฟฟ้าโดยการดึงที่สายไฟเคเบิล จับที่ปลั๊กไฟให้มั่นและดึงออกตรง ๆ จากเต้ารับซอคเก็ตเสมอ
- ห้ามสเปรย์น้ำข้างในหรือข้างนอกเครื่องใช้เพื่อทำความสะอาด

การกำจัด

- ก่อนทำการทิ้งเครื่องใช้ไฟฟ้าเก่า ให้ถอดปลั๊กก่อน ตัดสายไฟตรงด้านหลังเครื่องใช้ไฟฟ้าเพื่อป้องกันการใช้ที่ผิด
- ทิ้งวัสดุหีบห่อทั้งหมด (เช่น ถุงพลาสติกและสไตโรโฟม) ให้ห่างจากเด็ก วัสดุบรรจุภัณฑ์สามารถทำให้เกิดการหายใจไม่ออก
- เอาฝาออกก่อนกำจัดหรือทิ้งเครื่องใช้นี้เพื่อหลีกเลี่ยงอันตรายกับเด็กหรือสัตว์ตัวเล็กที่อาจเข้าไปติดอยู่ข้างใน

การติดตั้ง

ชิ้นส่วน

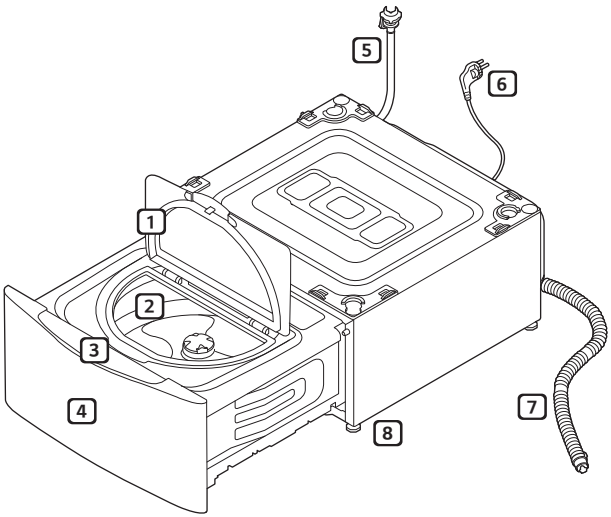

1 ฝา

2 ถังซัก

3 แผงควบคุม

4 ลิ้นซัก


5 ท่อส่งน้ำ

6 ปลั๊กไฟ

7 ท่อระบายน้ำ

8 ขาปรับระดับ

อุปกรณ์เสริม




ท่อส่งน้ำ
(สำหรับน้ำเย็น)




เชื่อมต่อ
ท่อส่งน้ำ



ท่อระบายน้ำ



ข้อต่อ
ท่อส่งน้ำ




ข้อต่อ
ท่อระบายน้ำ



แผ่นกันลื่น
(2 ชิ้น)



ถ้วยวัด
ปริมาณผงซักฟอก




แขนรับ (ด้านหน้า)
(2 EA)



แขนรับ (ด้านหลัง)
(2 EA)



กุญแจเลื่อน



* สกรู
ประเภท A (37 EA)
ประเภท B (5 EA)
ประเภท C (11 EA)



ที่รัดสาย
(2 ชิ้น)



ปลอกรัดท่อ
(3 EA)



รีโมต คอนโทรล
(อุปกรณ์เสริม)

* ประเภท A : สกรูโลหะแผ่นยาว, ประเภท B : สกรูโลหะแผ่นสั้น, ประเภท C : สลักเกลียว

หมายเหตุ

- อุปกรณ์เสริมของแต่ละรุ่นอาจแตกต่างกัน
- ขึ้นอยู่กับสภาพแวดล้อมของการติดตั้ง คุณอาจต้องซื้อข้อต่อท่อระบายน้ำแยกต่างหาก
- นอกจากสกรูที่จำเป็นสำหรับการติดตั้งแล้ว ยังมีสกรูเพิ่มเติมให้มาอีกด้วย


ข้อมูลจำเพาะ

แหล่งจ่ายไฟ	220 โวลต์~, 50 เฮิรตซ์
ขนาด	600 มม. (ก.) x 700 มม. (ล.) x 365 มม. (ส.)
น้ำหนักผลิตภัณฑ์	43 กก.
แรงดันน้ำที่รับได้	0.1 - 0.8 Mpa (1.0 - 8.0 kgf / cm²)
ความจุในการซัก	2 กก.

- ลักษณะและข้อมูลจำเพาะอาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้าในการปรับปรุงคุณภาพของผลิตภัณฑ์

ข้อกำหนดสำหรับสถานที่ติดตั้ง

สถานที่

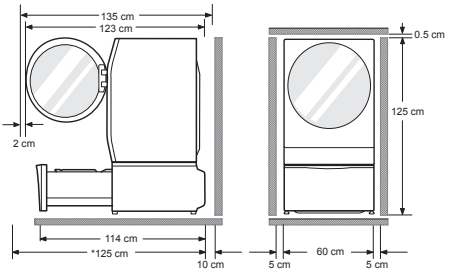

*125 ซม.: พื้นที่ขั้นต่ำสำหรับการติดตั้ง

พื้นไต่ระดับ : ความลาดชันใต้ตัวเครื่องใช้ทั้งหมดที่ยอมได้เป็น 1°

เต้ารับจ่ายไฟ : ต้องอยู่ภายใน 1.5 เมตรของด้านใดด้านหนึ่งของตำแหน่งที่ตั้งของเครื่องใช้

- อย่าทำให้เต้ารับเกิดกระแสไฟฟ้าสูงด้วยเครื่องใช้ไฟฟ้ามากกว่าหนึ่งเครื่อง

พื้นที่ว่างเพิ่มเติม : 5 ซม. สำหรับด้านข้าง และ 10 ซม. ด้านหลังเครื่อง

- ห้ามวางหรือเก็บผลิตภัณฑ์ซักผ้าด้านบนของเครื่องใช้ไม่ว่าเวลาใดก็ตาม ผลิตภัณฑ์เหล่านี้อาจสร้างความเสียหายให้กับผิวเคลือบหรือแผงควบคุม

⚠ คำเตือน

- ปลั๊กจะต้องต่อเข้ากับเต้ารับที่เหมาะสมซึ่งได้รับการติดตั้งและต่อสายดินอย่างถูกต้องโดยปฏิบัติตามระเบียบและกฎหมายท้องถิ่นทั้งหมด

การจัดตำแหน่ง

- ติดตั้งเครื่องใช้บนพื้นเรียบแข็ง
- ตรวจสอบให้มั่นใจว่าการไหลเวียนของอากาศรอบ ๆ เครื่องใช้ไม่ได้ถูกขัดขวางโดยพรมปูพื้น พรมผืนเล็ก ฯลฯ
- อย่าพยายามแก้ไขความไม่ได้ระดับบนพื้นด้วยชิ้นไม้ กระดาษแข็งหรือวัสดุที่คล้ายกันโดยการใส่ใต้เครื่องใช้เป็นอันขาด
- หากเป็นไปไม่ได้ที่จะหลีกเลี่ยงการวางเครื่องใช้ไฟฟ้าติดกับเตาแก๊สหรือเตาถ่าน จะต้องกั้นฉนวนกันความร้อน (85x60 ซม.) ที่เคลือบด้วยอลูมิเนียมในด้านที่หันเข้าหาเตาแก๊สหรือเตาถ่านระหว่างเครื่องใช้นี้กับเตาดังกล่าว
- ห้ามติดตั้งเครื่องใช้ในห้องที่อาจมีอุณหภูมิที่จุดเยือกแข็งเกิดขึ้น ท่อน้ำที่แข็งตัวอาจแตกเนื่องจากแรงดัน ความน่าเชื่อถือของหน่วยควบคุมอิเล็กทรอนิกส์อาจด้อยลงที่อุณหภูมิต่ำกว่าจุดเยือกแข็ง
- ตรวจสอบให้มั่นใจว่าเมื่อมีการติดตั้งเครื่องใช้ วิศวกรสามารถเข้าถึงได้อย่างง่ายดายในกรณีที่เกิดการชำรุด
- เมื่อเครื่องใช้ได้รับการติดตั้งแล้ว ให้ทำการปรับขาทั้งสี่โดยใช้ประแจโบลต์ที่มีอุปกรณ์วัดมุมในแนวนอนเพื่อให้มั่นใจว่าเครื่องใช้ติดตั้งอย่างมั่นคงและควรให้มีระยะห่างประมาณ 5 มม. ระหว่างด้านบนของเครื่องใช้และด้านล่างของผิวด้านบน
- หากเครื่องใช้ถูกจัดส่งในฤดูหนาวและมีอุณหภูมิต่ำกว่าจุดเยือกแข็ง ให้วางเครื่องใช้ไว้ที่ที่อุณหภูมิห้องสองถึงสามชั่วโมงก่อนที่จะนำไปใช้งาน
- อย่าใช้ถาดรองหยดน้ำเพราะถาดอาจไปขวางลิ้นซักได้ การใช้ถามรองหยดน้ำอาจทำให้เกิดการสั่นและเสียงดังเพิ่มขึ้นในระหว่างการใช้งาน


⚠ คำเตือน


- อุปกรณ์นี้ไม่ได้รับการออกแบบมาสำหรับการใช้งานบนเรือ หรือการติดตั้งแบบเคลื่อนที่ เช่น กองคาราวาน เครื่องบิน ฯลฯ

การเชื่อมต่อทางไฟฟ้า


- อย่าใช้สายไฟที่ต่อพ่วงหรืออะแด็ปเตอร์สองตัว
- ถอดปลั๊กไฟเครื่องใช้และปิดน้ำประปาหลังการใช้งานเสมอ
- เชื่อมต่อเครื่องใช้เข้ากับซ็อกเก็ตสายดินให้สอดคล้องกับกฎระเบียบการเดินสายไฟฟ้ากระแส
- เครื่องใช้ต้องได้รับการจัดวางให้เข้าถึงปลั๊กได้ง่าย
- การซ่อมแซมเครื่องใช้จะต้องดำเนินการโดยบุคลากรที่ผ่านการรับรอง การซ่อมแซมที่ดำเนินการโดยบุคคลที่ไม่มีประสบการณ์อาจทำให้เกิดการบาดเจ็บหรือการทำงานผิดปกติที่รุนแรง ติดต่อศูนย์บริการในท้องถิ่นของคุณ

เครื่องซักผ้าขนาดเล็กชนิดตั้งซ้อน

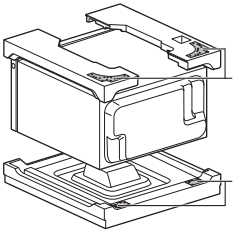




แขนรับ (ด้านหน้า)



แขนรับ (ด้านหลัง)

- ข้อความข้อผิดพลาด E7 จะปรากฏในหน้าจอหากแท่นวางซ้อนไม่ยึดติดกับด้านล่างของเครื่องซักผ้าหลัก

1 จับเอียงเครื่องซักผ้าหลักค้างไว้

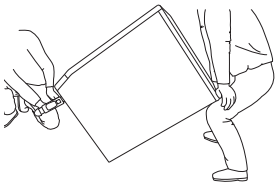


2 ประกอบแท่นยึด (หน้า) และอุปกรณ์กับซ้อนที่ด้านล่างของถังซักหลัก

หมายเหตุ

- แท่นวางซ้อนและสกรูสำหรับการประกอบจะอยู่ข้างในเครื่องซักผ้าหลัก เครื่องซักผ้าหลักซึ่งสามารถนำไปวางซ้อนกับเครื่องซักผ้าขนาดเล็กได้
- หากเครื่องซักผ้าหลักมีตัวยึดซ้อนอยู่แล้วอย่าติดตั้งตัวยึดซ้อนกับเครื่องซักผ้าขนาดเล็ก


ประเภท 1 ด้านล่างของเครื่องซักผ้าหลักเป็นสีเงิน

- อันดับแรกให้ประกอบแท่นวางซ้อนด้วยสกรูประเภท A 2 ตัวที่มาในกล่องอุปกรณ์เสริมของเครื่องซักผ้าขนาดเล็ก แล้วจึงประกอบแขนรับด้วยสกรูประเภท A 7 ตัวที่มาในกล่องอุปกรณ์เสริมของเครื่องซักผ้าขนาดเล็ก

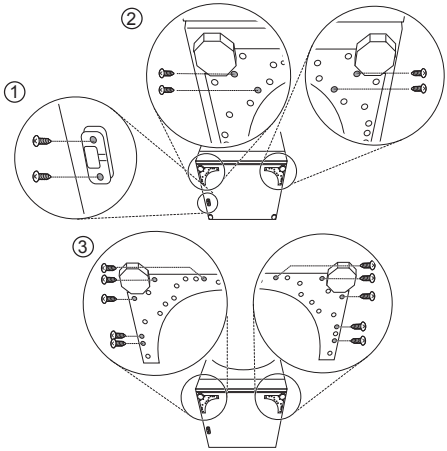


ประเภท 2 ด้านล่างของเครื่องซักผ้าหลักเป็นสีขาว

- อันดับแรกให้ประกอบแท่นวางซ้อนด้วยสกรูประเภท C 2 ตัวที่มาในกล่องอุปกรณ์เสริมของเครื่องซักผ้าหลัก แล้วจึงประกอบแขนรับด้วยสกรูประเภท C 4 ตัวที่มาในกล่องอุปกรณ์เสริมของเครื่องซักผ้าขนาดเล็ก

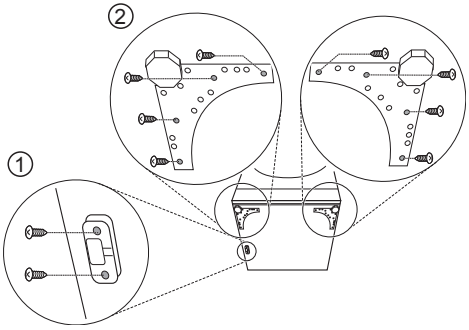

3 ดึงและเก็บรักษาบล็อกโฟมสำหรับการใช้ในอนาคต

- หากเครื่องซักผ้าต้องมีการเคลื่อนย้ายในอนาคต บล็อกโฟมจะช่วยป้องกันความเสียหายให้กับเครื่องซักผ้าในระหว่างการขนส่ง

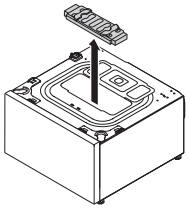


หมายเหตุ


- เพื่อป้องกันความเสียหาย อย่าถอดโฟมกันกระแทกจนกว่าจะวางเครื่องซักผ้าขนาดเล็กในตำแหน่ง

4 เปิดฝาครอบด้านบนประมาณ 180 องศา

ปิดรูด้านบนด้วยฝาปิดด้านบน แล้วใส่สกรูประเภท B 4 ตัวเพื่อยึดเข้าที่

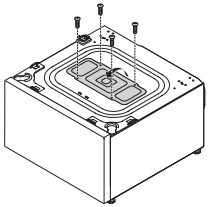


5 ติดแขนรับสองชิ้นที่ด้านบนส่วนหลังของเครื่องซักผ้าขนาดเล็กโดยการใส่สกรูประเภท A 4 ตัวในแขนรับแต่ละชิ้น

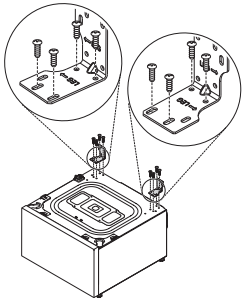

6 ตั้งเครื่องซักผ้าหลักไว้บนเครื่องซักผ้าขนาดเล็ก

- ตรวจดูให้แน่ใจว่าขาทั้ง 4 นั้นล็อกแน่นหนาแล้ว และรูของเครื่องซักผ้าขนาดเล็กนั้นตรงกับรูของถังซักหลัก

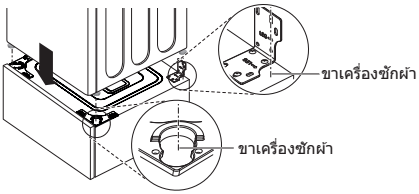


7 ยึดเครื่องใช้ไฟฟ้าทั้งสองเข้าด้วยกับที่มุมโดยใช้สกรูประเภท A 14 ตัว


- อันดับแรก ใส่สกรูที่ด้านข้าง แล้วใส่สกรูที่ด้านหน้าและหลัง

หมายเหตุ

- อาจประกอบได้ยาก หากไม่ทำตามขั้นตอนที่ถูกต้อง
- ใช้สกรูประเภท C เพื่อประกอบแท่นวางซ้อน

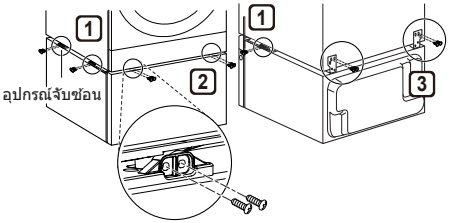

8 ปรับขาตั้งของเครื่องซักผ้าหลักให้เข้ากับเครื่องซักผ้าขนาดเล็ก

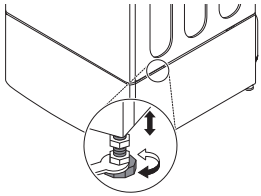

หมายเหตุ


- เครื่องซักผ้าขนาดเล็กไม่สามารถทำงานเครื่องเดียวตามลำพังได้


การเชื่อมต่อกับท่อน้ำประปา

- ความดันน้ำประปาต้องอยู่ระหว่าง 0.1 MPa and 0.8 MPa (1.0–8.0 kgf/cm^2).
- อย่ารัดท่อจ่ายน้ำแน่นเกินไป
- ควรติดตั้งอุปกรณ์ลดความดันหากแรงดันน้ำประปามากกว่า 0.8 Mpa
- ตรวจสอบสภาพของท่อน้ำอย่างสม่ำเสมอและเปลี่ยนท่อน้ำหากจำเป็น
- ติดต่อศูนย์บริการหากไม่มีซีลยาง

การตรวจสอบซีลยางในท่อน้ำประปา

ซีลยาง 2 อัน มาพร้อมกับท่อส่งน้ำ เพื่อเอาไว้ใช้สำหรับป้องกันน้ำรั่ว ตรวจให้แน่ใจว่าการต่อก๊อกน้ำมีความแน่นหนาอย่างเพียงพอ

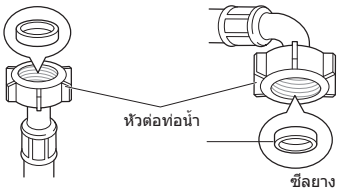


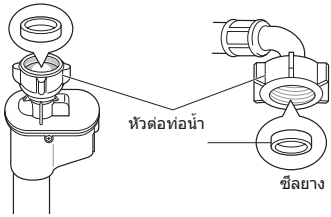

ทำการต่อท่อกับก๊อกน้ำ


การเชื่อมต่อสกรู-ประเภทท่อไปที่ก๊อกด้วยเกลียวหมุน

หมุนตัวต่อท่อน้ำเข้ากับก๊อกจ่ายน้ำ

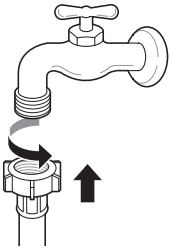


การเชื่อมต่อสกรู-ประเภทท่อไปที่ก๊อกโดยไม่มีเกลียวหมุน


1 คลายสกรูยึดทั้งสี่ตัว

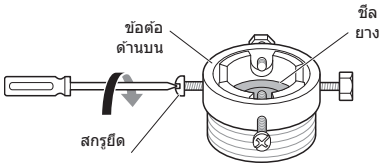


2 ถอดจานนำหากก๊อกใหญ่เกินไปที่จะต่อกับอะแดปเตอร์

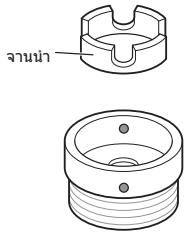

3 กดอะแดปเตอร์เข้ากับหัวก๊อกเพื่อให้ซีลยางรัดกันน้ำเข้าออก ขันสกรูยึดทั้งสี่ตัวให้แน่น

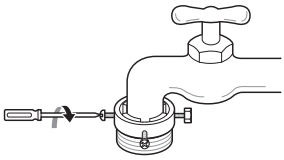


4 ดันท่อประปาขึ้นในแนวตั้งขึ้นเพื่อให้ซีลยางภายในท่อสามารถยึดติดกับก๊อกน้ำได้อย่างสมบูรณ์แล้วทำให้แน่นโดยขันสกรูไปทางขวา

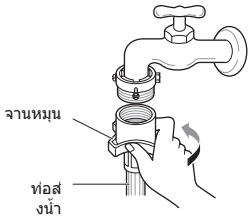


การเชื่อมต่อท่อประเภท One Touch ไปยังก๊อกน้ำโดยไม่มีเกลียวหมุน


1 ขันจานวงแหวนของอะแดปเตอร์ออกและคลายสกรูยึดทั้งสี่ตัว

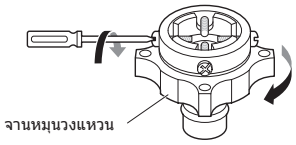


2 ถอดจานนำหากก๊อกใหญ่เกินไปที่จะต่อกับอะแดปเตอร์

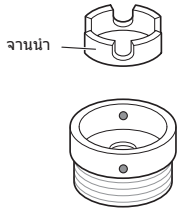

3 กดอะแดปเตอร์เข้ากับหัวก๊อกเพื่อให้ซีลยางรัดกันน้ำเข้าออก ขันสกรูสี่ตัวที่ยึดอยู่และแผ่นแหวนอะแดปเตอร์ให้แน่น

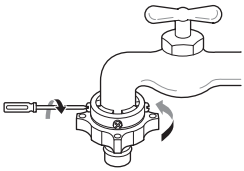

4 ดึงข้อต่อแผ่นสลักลง ดันท่อส่งน้ำลงบนอะแดปเตอร์ และปล่อยแผ่นสลักข้อต่อ ตรวจให้แน่ใจว่าอะแดปเตอร์ล็อกอยู่กับที่

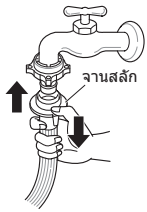


หมายเหตุ


- หลังจากเชื่อมต่อท่อส่งน้ำกับก๊อกน้ำ เปิดก๊อกน้ำเพื่อล้างสิ่งแปลกปลอม (ฝุ่น ทราย ขี้เลื่อย และอื่น ๆ) ในแนวท่อน้ำ ปล่อยให้น้ำระบายใส่ถัง และตรวจสอบอุณหภูมิของน้ำ

การเชื่อมต่อท่อไปยังเครื่องซักผ้า 2 เครื่อง


1 ใส่ข้อต่อท่อส่งน้ำเข้ากับท่อส่งน้ำของถังซักหลัก เปิดแพคเกจเสริมสำหรับการติดตั้งเครื่องซักผ้าขนาดเล็ก

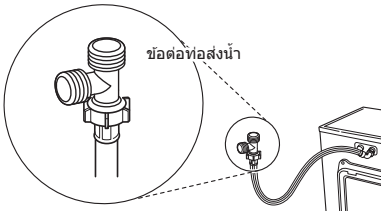

2 ต่อท่อส่งน้ำของเครื่องซักผ้าขนาดเล็กเข้ากับข้อต่อท่อส่งน้ำ

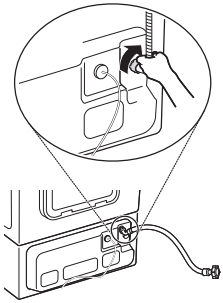

3 เชื่อมต่อท่อส่งน้ำของถังซักหลักที่ให้เพิ่มมากับหน้าโหลดเข้ากับข้อต่อท่อส่งน้ำและก๊อกน้ำ

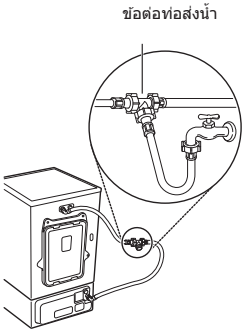


หมายเหตุ

- ตรวจสอบให้แน่ใจว่าท่อส่งน้ำไม่ขดงอ หรือถูกหนีบ


การติดตั้งท่อระบาย

- ไม่ควรวางท่อระบายสูงจากพื้นเกินกว่า 100 ซม. น้ำในเครื่องใช้อาจไม่ระบายหรืออาจระบายได้ช้า


1 ใส่ปลอกรัดท่อเข้ากับข้องอของท่อระบาย

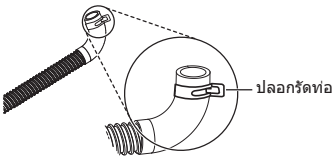

2 จากท่อที่ออกมาจากข้องอ ให้เสียบข้องอเข้ากับช่องระบายน้ำที่อยู่ด้านหลังของเครื่องซักผ้าขนาดเล็ก

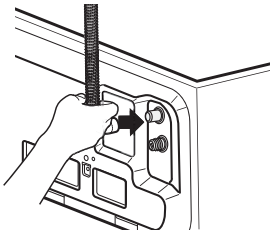

3 ปรับปลอกรัดท่อด้วยคีมเพื่อรัดท่ออย่างแน่นหนาเพื่อป้องกันไม่ให้เกิดการรั่ว

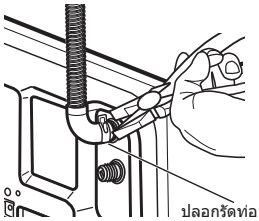


การใช้ข้อต่อท่อระบายน้ำ

1 ขื่อมต่อท่อระบายน้ำทิ้งของถังซักหลักและเครื่องซักผ้าขนาดเล็กเข้ากับข้อต่อท่อระบายน้ำทิ้ง

2 ต่อท่อระบายเข้ากับข้อต่อท่อระบายน้ำสองทางแล้วรัดด้วยปลอกรัดท่อ

3 ใส่ข้อต่อท่อระบายน้ำเข้าในรูท่อระบาย

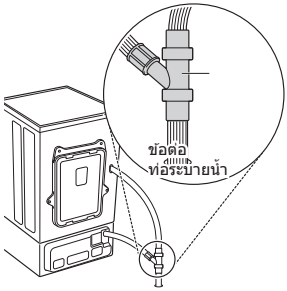

⚠ ข้อควรระวัง

- ตรวจสอบให้แน่ใจว่าท่อส่งน้ำไม่ขดงอ หรือถูกหนีบ ซึ่งอาจทำให้มีปัญหาการระบายน้ำหรือเสียง


หมายเหตุ

- ขึ้นอยู่กับสภาพแวดล้อมของการติดตั้ง คุณอาจต้องซื้อข้อต่อท่อระบายน้ำแยกต่างหาก

การปรับระดับเครื่องใช้

หากพื้นไม่เสมอกัน หมุนขาแบบปรับได้ตามต้องการ (อย่าใส่เศษไม้หรืออื่นๆ ใต้ขา) ตรวจสอบให้แน่ใจว่าขาตั้งสี่ข้างมั่นคงและแตะกับพื้น และจากนั้นตรวจสอบว่าเครื่องได้ระดับโดยสมบูรณ์ (ใช้เครื่องปรับระดับผิวหน้า)

- เมื่อเครื่องใช้อยู่ในระดับที่เสมอ ขันแป้นเกลียวให้แน่นขึ้นยังฐานของเครื่องใช้ น็อตล็อกทั้งหมดจะต้องถูกขันให้แน่น

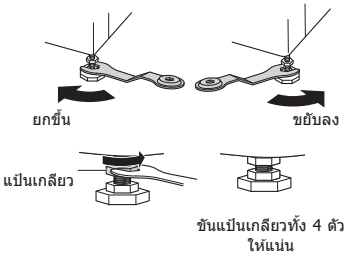

การตรวจสอบแนวทแยง

- เมื่อดันขอบของแผ่นด้านบนลงในแนวทแยงมุม เครื่องใช้ไม่ควรเลื่อนขึ้นและเลื่อนลงทั้งสิ้น (ตรวจสอบทั้งสองทิศทาง) หากเครื่องใช้โยกเมื่อดันแผ่นด้านบนเครื่องใช้ตามแนวทแยง ให้ปรับขาอีกครั้ง

⚠ คำเตือน

- เมื่อวางถังซักหลักลงบนเครื่องซักผ้าขนาดเล็ก ให้ใช้ขาปรับระดับของเครื่องซักผ้าขนาดเล็กเพื่อปรับระดับทั้งสองเครื่อง ควรลดขาปรับระดับของถังซักหลักและหันแป้นเกลียวทวนเข็มนาฬิกาเพื่อยึดขาปรับระดับให้มั่นคง

หมายเหตุ

- ไม้หรือพื้นลอยชนิดอื่นๆ อาจมีส่วนทำให้เกิดการสั่นและการไม่สมดุลมากเกินไป
- หากติดตั้งเครื่องซักผ้าขนาดเล็กบนพื้นที่ยกสูง จะต้องได้รับการยึดอย่างแน่นหนาเพื่อกำจัดความเสี่ยงต่อการหล่น

การใช้แผ่นกันลื่น (ตัวเลือก)

หากท่านติดตั้งเครื่องใช้บนพื้นผิวที่ลื่น เครื่องใช้อาจเคลื่อนที่เนื่องจากการสั่นสะเทือนที่มากเกินไป การปรับระดับที่ไม่ถูกต้องอาจทำให้เกิดการทำงานผิดปกติ ผ่านเสียงและการสั่น หากเกิดกรณีนี้ ติดตั้งแผ่นกันลื่นใต้ขาปรับระดับและปรับระดับ


1 ทำความสะอาดพื้นเพื่อติดแผ่นกันลื่น


- ใช้ผ้าแห้งเพื่อขจัดและทำความสะอาดสิ่งแปลกปลอมและความชื้น ถ้ายังชื้นอยู่ แผ่นกันลื่นอาจลื่น

2 ปรับระดับหลังจากวางเครื่องใช้ในพื้นที่ติดตั้ง

3 วางด้านกาวของแผ่นกันลื่นบนพื้น

- การติดตั้งแผ่นกันลื่นใต้ขาหน้าเป็นวิธีที่มีประสิทธิภาพมากที่สุด หากการติดแผ่นใต้ขาหน้าเป็นเรื่องยุ่งยาก ให้ติดแผ่นดังกล่าวไว้ใต้ขาหลัง

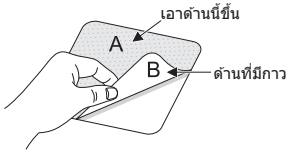



4 ตรวจสอบให้แน่ใจว่าเครื่องใช้อยู่ในระดับที่เสมอ

- ดันหรือโยกขอบด้านบนของเครื่องใช้เบา ๆ เพื่อให้แน่ใจว่าเครื่องใช้ไม่โยก หากตัวเครื่องใช้โยกปรับระดับเครื่องใช้อีกครั้ง


หมายเหตุ

- ท่านสามารถขอรับแผ่นกันลื่นได้จากศูนย์บริการ LG

การใช้งานเครื่องใช้


1 แยกผ้าและเอาเสื้อผ้าใส่ถัง

- แยกผ้าตามชนิดของผ้า ระดับความสกปรก สี และปริมาณผ้าตามต้องการ เปิดฝาและใส่เสื้อผ้าในเครื่องซักผ้า

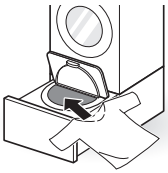

2 ใส่ผลิตภัณฑ์ทำความสะอาด


- ใส่ผงซักฟอกในปริมาณที่เหมาะสมด้วยถ้วยวัดปริมาณผงซักฟอกในถังซักผ้าอย่างสม่ำเสมอ

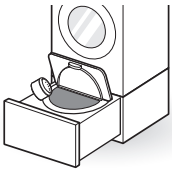

3 ปิดประตูและลิ้นชัก

4 เปิดใช้งานเครื่องซักผ้า

- กดปุ่ม **กำลังไฟ** เพื่อเปิดใช้งานเครื่องซักผ้า

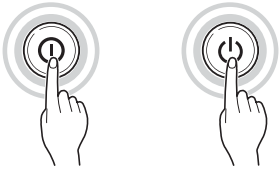

5 เลือกโปรแกรมการซักที่ต้องการ

- กดปุ่มรอบซ้ำจนกระทั่งถึงรอบการใช้งานที่ต้องการ



6 เริ่มต้นโปรแกรม

- กดปุ่ม **เริ่ม/พัก** เพื่อเริ่มโปรแกรมซัก เครื่องซักผ้าจะปั่นเล็กน้อยโดยไม่มีน้ำเพื่อวัดน้ำหนักของผ้าที่จะซัก ถ้าไม่ได้กดปุ่ม **เริ่ม/พัก** ภายใน 15 นาที เครื่องซักผ้าจะปิดการใช้งานและการตั้งค่าทั้งหมดจะหายไป



7 ใส่น้ำยาปรับผ้านุ่ม

- เมื่อเครื่องใช้ส่งเสียงประมาณ 20 วินาที ใส่น้ำยาปรับผ้านุ่มและกด **เริ่ม/พัก** เพื่อเริ่มการทำงานรอบการใช้งาน

8 สิ้นสุดโปรแกรม

- เมื่อสิ้นสุดโปรแกรม ทำนองเพลงจะดังขึ้น เอาเสื้อผ้าของคุณออกจากเครื่องซักผ้าทันทีเพื่อกำจัดรอยย่นและกลิ่นไม่พึงประสงค์
- หลังจากซักเสร็จสมบูรณ์ เช็ดประตูเครื่องซักผ้าปะเก็นและภายในถังซักผ้าด้วยผ้าขนหนูเพื่อการซักผ้าที่สะอาด

คัดแยกเสื้อผ้าที่ซัก

1 มองหาฉลากการดูแลรักษาบนเสื้อผ้าของคุณ
- ฉลากนี้จะบอกคุณเกี่ยวกับส่วนผสมใยผ้าของเสื้อผ้าของคุณและควรทำการซักอย่างไร
- สัญลักษณ์บนฉลากการดูแลรักษา



2 การแยกผ้า
- เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด ควรแยกเสื้อผ้าออกเป็นกลุ่มที่สามารถซักด้วยโปรแกรมซักเดียวกันได้
- ผ้าที่ต่างกันต้องได้รับการซักที่อุณหภูมิและความเร็วในการปั่นที่แตกต่างกัน
- ซักผ้าขนหนูสองผืนหรือมากกว่าหรือผ้าไหมพรมด้วยกัน ถ้าแยกซัก เสื้อผ้าที่ดูดซับน้ำมากอาจไม่สามารถได้รับการซักอย่างสะอาดหรืออาจเกิดความผิดปกติของการปั่นแห้งเนื่องจากการเอียงของถังซัก
- แยกผ้าที่มีสีเข้มจากผ้าสีอ่อนและสีขาวเสมอ ซักแยกจากกันเนื่องจากการตกสีและการเกาะติดของเศษใยผ้าสามารถเกิดขึ้นได้ ทำให้เกิดการเปลี่ยนสีของเสื้อผ้าสีอ่อนและสีขาว หากเป็นไปได้ อย่าซักผ้าที่สกปรกมากร่วมกับผ้าที่สกปรกน้อย

– รอยเปื้อน (หนัก ปกติ เบา):
แยก เสื้อผ้าตามปริมาณรอยเปื้อน

– สี (ขาว สีอ่อน สีเข้ม):
แยกผ้าสีขาวออกจากผ้าสี

– ผ้าสำลี (ผ้าสำลีที่มาจากการผลิต ที่มาจากการถัก):
ซักผ้าสำลีที่มาจากการผลิตและผ้าสำลีที่มาจากการถักแยกออกจากกัน

3 การดูแลรักษาก่อนใส่เครื่อง
- ห้ามซักโครงลวดในชุดชั้นในผู้หญิง (เช่น ยกทรง) เพราะอาจทำให้เกิดความเสียหายกับเสื้อผ้าอื่น ๆ หรือเครื่องซักผ้าและเกิดเสียงรบกวน
- ตรวจสอบกระเป๋าทั้งหมดให้แน่ใจว่าไม่มีของอยู่ข้างใน สิ่งของ เช่น เล็บ คลิปหนีบผม ไม้ขีดไฟ ปากกา เหรียญและกุญแจสามารถสร้างความเสียหายให้กับเครื่องซักผ้าและเสื้อผ้าของคุณได้




- รูดปิดซิป ตะขอและสายรัดเพื่อให้แน่ใจว่าสิ่งเหล่านี้จะไม่เกี่ยวกับเสื้อผ้าอื่นๆ
- จัดการกับสิ่งสกปรกและรอยเปื้อนก่อนโดยการป้ายน้ำที่ละลายน้ำยาซักผ้าไว้เล็กน้อยบนรอยเปื้อนเพื่อช่วยขจัดสิ่งสกปรก
- หากส่วนประกอบของเสื้อผ้ามีดิ้นเงินดิ้นทองยาวแนบกับเสื้อผ้า ควรจัดการกับดิ้นเงินดิ้นทองเพื่อไม่ให้พันกันงหรือใส่เข้าไปในตาข่ายซักผ้า
- เอาส่วนข้างในของหมอนอิง หมอน หรือเสื่อนั่งออกและซักเพียงปลอกเท่านั้น ส่วนข้างในอาจยื่นออกมา ทำให้เสื้อผ้าที่ซักเสียหาย ชิ้นส่วนพลาสติกอาจสร้างแรงสั่นสะเทือนที่ผิดปกติ

⚠ ข้อควรระวัง

- แบ่งเสื้อผ้าที่ซักในปริมาณมากออก เพื่อที่เสื้อผ้าที่ซักจะสามารถจมน้ำได้หมด หากเสื้อผ้าที่ซักขยายตัวระหว่างการซักก็อาจทำให้เกิดความเสียหายต่อเสื้อผ้าที่ซักและชิ้นส่วนในระหว่างการซักผ้าหรือการปั่น

การปิดประตูและลิ้นชัก

1 ดันประตูเครื่องซักผ้าจนกระทั่งคลิก

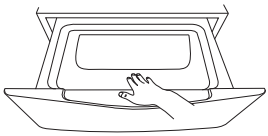

2 ดันลิ้นชักให้ปิดสนิท

⚠ ข้อควรระวัง

- อย่าปล่อยให้มือของคุณติดอยู่ระหว่างประตูและเครื่องซักผ้าเพราะอาจทำให้เกิดการบาดเจ็บ
- การบังคับทำให้ลิ้นชักหรือประตูเปิดสามารถทำให้เกิดความเสียหายต่อชิ้นส่วนและปัญหาด้านความปลอดภัย
- การปิดลิ้นชักก่อนที่จะปิดประตูสนิทอาจเกิดรอยขีดข่วนบนกระจก
- ตรวจสอบให้แน่ใจว่าลิ้นชักถูกดึงออกจนสุดเพื่อป้องกันไม่ให้ประตูสัมผัสโดนกับเครื่องซักผ้าแบบฝาหน้า

หมายเหตุ

- การล็อคประตูอาจทำไม่ได้หากมีเสื้อผ้าที่ซักมากเกินไปในเครื่องหรือหากประตูปิดไม่สนิท
- ถ้าผลิตภัณฑ์กำลังทำงาน หรือตัวแสดงสถานะล็อคลิ้นชัก ⊘ แสดงขึ้น เปิดประตูโดยการกดปุ่ม **เริ่ม/พัก** เพื่อให้เครื่องพักการทำงาน และเมื่อตัวแสดงสถานะล็อคลิ้นชัก ⊘ หายไป เปิดฝาเครื่องซักผ้า อย่าฝืนเปิดลิ้นชักและฝาเครื่องซักผ้า
- หากสัญลักษณ์ dE1, dE2, dO หรือสัญญาณเตือนปรากฏขึ้น ปิดลิ้นชักและฝาเครื่องซักผ้าให้สนิท จากนั้นกดปุ่ม **เริ่ม/พัก**
- หากลิ้นชักไม่สามารถเปิดได้อย่างสมบูรณ์ ให้ดึงลิ้นชักมาข้างหน้าโดยใช้มือทั้งสองข้างออกแรงดึงเล็กน้อย
- ถ้าไฟฟ้าขัดข้องในระหว่างที่ผลิตภัณฑ์กำลังทำงาน ฝาเครื่องซักผ้าจะไม่สามารถเปิดได้
- หากไม่สามารถเปิดประตูได้เนื่องจากอุณหภูมิสูง ดำเนินการล้างด้วยน้ำเย็นโดยใช้โปรแกรม ล้าง+ปั่น หมาดหรือรอสักครู่ก่อนที่จะเปิดประตู


การใส่ผลิตภัณฑ์ทำความสะอาด

ปริมาณน้ำยาซักผ้า

- ควรใช้น้ำยาซักผ้าโดยปฏิบัติตามคำแนะนำของผู้ผลิตน้ำยาซักผ้าและควรเลือกตามชนิด สี ความสกปรกของผ้าและอุณหภูมิของการซัก
- หากใช้น้ำยาซักผ้ามากเกินไป อาจเกิดฟองมากเกินไปได้และจะส่งผลให้เกิดการซักที่ไม่ดี ส่งผลหรือทำให้เกิดภาระหนักกับมอเตอร์
- หากคุณต้องการใช้น้ำยาซักผ้าแบบเหลว ให้ปฏิบัติตามคำแนะนำที่ให้มาโดยผู้ผลิตน้ำยาซักผ้า
- หากมีฟองเกิดขึ้นมากเกินไป ลดปริมาณของน้ำยาซักผ้าลง
- ปริมาณการใช้น้ำยาซักผ้าอาจต้องได้รับการปรับสำหรับอุณหภูมิของน้ำ ความกระด้างของน้ำ ปริมาณและระดับความสกปรกของเสื้อผ้าที่ซัก เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด หลีกเลี่ยงการทำให้เกิดฟองมากเกินไป
- ดูที่ป้ายของเสื้อผ้าก่อนเลือกผงซักฟอกและอุณหภูมิของน้ำ
- เมื่อใช้งานเครื่องซักผ้า ใช้น้ำยาซักผ้าที่กำหนดสำหรับเสื้อผ้าแต่ละชนิดเท่านั้น:
  - ผงซักฟอกทั่วไปสำหรับผ้าทุกชนิด
  - ผงซักฟอกสำหรับผ้าที่บอบบาง
  - น้ำยาซักผ้าสำหรับผ้าทุกชนิดหรือน้ำยาซักผ้าสำหรับผ้าขนสัตว์ที่กำหนดไว้เท่านั้น
- เพื่อประสิทธิภาพการซักและการให้ความขาวที่ดีกว่า ใช้น้ำยาซักผ้าร่วมกับสารฟอกขาวแบบผงทั่วไป

การใส่ผงซักฟอก

วัดปริมาณผงซักฟอกด้วยเครื่องจ่ายผงซักฟอกและเทลงในอ่าง

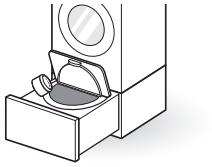

- ใช้ถ้วยวัดปริมาณผงซักฟอกที่ให้มาเพื่อใส่ผงซักฟอกเพียงหนึ่งถ้วย
- ลดปริมาณของผงซักฟอกลงสำหรับเสื้อผ้าที่ซักผ้ามีรอยเปื้อนบางๆ ถ้าคุณใช้ผงซักฟอกมากเกินไป หลังจากการล้าง ฟองที่มากเกินไปจะยังคงอยู่

ใส่น้ำยาทำให้ผ้านุ่ม

ใส่น้ำยาปรับผ้านุ่ม

กรณีที่ 1 เมื่อเครื่องส่งเสียง:

1 กด **เริ่ม/พัก** เพื่อหยุดรอบการทำงาน
- สามารถพักการทำงานได้โดยการใช้ปุ่ม **เริ่ม/พัก** ของเครื่องซักผ้าขนาดเล็กโดยการใช้รีโมต

2 จากนั้นเปิดลิ้นซักและฝาเครื่องซักผ้า แล้วเติมน้ำยาปรับผ้านุ่ม

3 ปิดประตู เลื่อนลิ้นซักปิด และกด **เริ่ม/พัก** เพื่อเริ่มรอบการทำงาน

หมายเหตุ
- เพื่อปิดหรือเปิดการใช้งานสัญญาณเตือนการใช้น้ำยาปรับผ้านุ่ม กดปุ่ม **Rinse+** ค้างไว้สามวินาที
- สามารถเติมน้ำยาซักผ้าได้ภายใน 30 วินาทีหลังจากเสียงสัญญาณ

กรณีที่ 2 หากคุณพลาดช่วงเวลาสำหรับใส่น้ำยาปรับผ้านุ่ม

1 กดปุ่ม **กำลังไฟ** เพื่อหยุดรอบการใช้งาน

2 จากนั้นเปิดลิ้นซักและฝาเครื่องซักผ้า แล้วเติมน้ำยาปรับผ้านุ่ม

3 ปิดฝาเครื่องซักผ้า เลื่อนปิดลิ้นซัก แล้วเลือกโปรแกรม **ล้าง+ปั่นหมาด**

4 กดปุ่ม **เริ่ม/พัก** เพื่อเริ่มไซเคิลอีกครั้ง

หมายเหตุ
- อย่าเทน้ำยาปรับผ้านุ่มใส่ผ้าโดยตรง
- น้ำยาปรับผ้านุ่มสามารถเจือจางด้วยน้ำและใส่ในถังได้โดยตรง ห้ามเทน้ำยาปรับผ้านุ่มที่ยังไม่ได้เจือจางโดยตรงลงบนเสื้อผ้าเพราะอาจเสื้อผ้าเปื้อนได้


การเติมสารแก้น้ำกระด้าง

- สารแก้น้ำกระด้าง เช่น ป้องกันคราบหินปูน (เช่น แคลกอน) สามารถนำมาใช้เพื่อลดการใช้ผงซักฟอกในพื้นที่ที่น้ำกระด้างอย่างหนักมาก ใส่ในปริมาณที่กำหนดบนหีบห่อผลิตภัณฑ์ ก่อนอื่นใส่น้ำยาซักผ้าและจากนั้นตามด้วยน้ำยาปรับผ้านุ่ม
- ใช้น้ำยาซักผ้าในปริมาณที่กำหนดสำหรับน้ำอ่อน

⚠ ข้อควรระวัง

- ห้ามใส่สารฟอกขาวโดยตรงยังเสื้อผ้าที่จะซัก การทำเช่นนี้อาจทำให้เกิดการเปลี่ยนสีบางส่วนและเสียหายอย่างรุนแรงต่อเสื้อผ้าที่จะซัก
- ห้ามใช้สารฟอกขาวคลอรีนหรือน้ำยาทำความสะอาดที่เป็นกรดเมื่อซักเสื้อผ้าที่จะซัก เพราะสามารถทำให้เกิดความเสียหายกับเสื้อผ้า เช่น การเปลี่ยนสีและสีของเสื้อผ้าซีดลง

แผงควบคุม

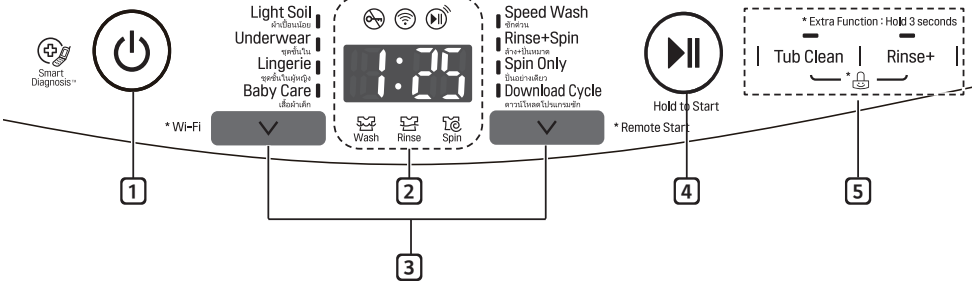

1 ปุ่ม เปิด/ปิด

- กดปุ่ม **แหล่งจ่ายไฟ** เพื่อเปิดใช้งานเครื่องซักผ้า

2 จอแสดงผล

- จอแสดงผลจะแสดงสถานะการทำงานและเวลาที่เหลือโดยประมาณ
- : ตัวแสดงสถานะล็อคลิ้นซัก
- : ตัวระบุการเชื่อมต่อ Wi-Fi
- : ตัวระบุรีโมตสตาร์ท

3 ปุ่ม โปรแกรม

- โปรแกรมต่างๆ มีให้เลือกใช้แบ่งตามชนิดของผ้า
- ในการใช้งานฟังก์ชันโปรแกรมที่ดาวน์โหลดอ้างอิงฟังก์ชันสมาร์ท

4 ปุ่ม เริ่ม/พัก

- ปุ่ม **เริ่ม/พัก** ใช้ในการเริ่มต้นรอบซักหรือหยุดรอบซัก
- หากจำเป็นต้องหยุดรอบการซักชั่วคราว กด ปุ่ม **เริ่ม/พัก**

หมายเหตุ

- หากท่านไม่ได้กดปุ่ม **เริ่ม/พัก** ภายใน 15 นาทีของการเลือกโปรแกรมที่เครื่องซักผ้า เครื่องซักผ้า จะปิดการทำงานโดยอัตโนมัติและการตั้งค่ารอบทั้งหมดจะหายไป

5 ตัวเลือก

- ใช้ปุ่มเหล่านี้เพื่อเลือกตัวเลือกที่ต้องการสำหรับโปรแกรมที่เลือก
- ไฟแสดงการตั้งค่าเหนือปุ่มส่องสว่าง เพื่อแสดงการเลือกในปัจจุบัน

ตารางโปรแกรม

โปรแกรมการซัก

โปรแกรม	คำอธิบาย	หมายเหตุ	ปริมาณการซักสูงสุด
Light Soil (ผ้าเปื้อนน้อย)	ใช้โปรแกรมนี้ในการซักเสื้อผ้าที่มีคราบสกปรกบาง ๆ ยกเว้นผ้าที่ละเอียดอ่อน เช่น ผ้าขนสัตว์หรือผ้าไหม	• หากต้องการเปลี่ยนการตั้งค่าในขณะซัก เปลี่ยนการตั้งค่าได้หลังจากกดปุ่ม**เริ่ม/พัก**	2.0 กก.
Underwear (ชุดชั้นใน)	ใช้โปรแกรมนี้ในการซักเสื้อผ้าที่ละเอียดอ่อน เช่น ชุดชั้นในหรือเสื้อผ้าที่บางเบา และมีลูกไม้ซึ่งอาจจะเสียหายได้ง่ายในโปรแกรมปกติ	• โปรแกรมนี้ไม่ใช้สำหรับชุดผ้าไหม	1.5 กก.
Lingerie (ชุดชั้นในผู้หญิง)	ใช้โปรแกรมนี้เพื่อซักสิ่งทอ ชุดชั้นใน หรือเสื้อผ้าที่ละเอียดปราณีตที่มีแนวโน้มที่จะหดตัวหรือเปลี่ยนรูป	• ใช้ผงซักฟอกที่มีความเป็นกลางเป็นพิเศษสำหรับผ้าขนสัตว์เพื่อลดความเสียหายให้กับสิ่งทอและปรับปรุงประสิทธิภาพการซักผ้า • เพื่อป้องกันความเสียหายกับเสื้อผ้า ถังจะปั่นเบา ๆ ไปทางซ้ายและขวาในการการซักผ้า	1.0 กก.
Baby Care (เสื้อผ้าเด็ก)	ใช้โปรแกรมนี้เพื่อซักเสื้อผ้าเด็กอย่างถูกสุขลักษณะ	• เลือกประเภทของผงซักฟอกที่เป็นกลางอย่างเหมาะสม • การซักล้างเสื้อผ้าที่มีคราบสกปรกของอาหาร เหงื่อ ปัสสาวะและอุจจาระในเวลาสั้น ๆ ก่อนการซัก จะทำให้การซักมีประสิทธิภาพมากขึ้น • โปรแกรมนี้ไม่เหมาะสำหรับผ้าขนสัตว์ ผ้าไหม และผ้าบอบบางอื่นๆ	1.5 กก.
Speed Wash (ซักด่วน)	ใช้โปรแกรมนี้เพื่อเพิ่มความเร็วของเวลาในการล้างสำหรับการซักในปริมาณน้อยหรือเสื้อผ้าที่เปื้อนน้อย	• ใช้ผงซักฟอกในปริมาณที่น้อยมากเมื่อใช้โปรแกรมนี้	2.0 กก.
Rine+ Spin (ล้าง+ปั่นหมาด)	เลือกโปรแกรมนี้เพื่อล้างและปั่นปริมาณเสื้อผ้าที่ซักแยกจากรอบปกติ	• ใส่น้ำยาปรับผ้านุ่มเท่านั้น	1.5 กก.

โปรแกรมตัวเลือก

Spin Only (ปั่นอย่างเดียว)

ใช้ตัวเลือกนี้เพื่อปั่นแห้ง

Tub Clean (ล้างถังซัก)

ใช้ตัวเลือกนี้เพื่อรักษาความสะอาดของถังซัก สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการล้างถังซัก ดูที่ส่วนการทำความสะอาดเครื่องซักผ้า

Rinse+ (ล้าง+)

ใช้ตัวเลือกนี้เพื่อเพิ่มจำนวนโปรแกรมการล้าง

1 กดปุ่ม **กำลังไฟ**

2 เลือกโปรแกรมการซัก

3 กดปุ่ม **Rinse+**
- เมื่อคุณกดปุ่ม **Rinse+** จำนวนของรอบการล้าง (1 - 5) จะปรากฏขึ้น

4 กดปุ่ม **เริ่ม/พัก**

Child Lock (ป้องกันเด็ก)

ใช้ตัวเลือกนี้เพื่อปิดการใช้งานการควบคุม คุณลักษณะนี้สามารถป้องกันเด็กจากการเปลี่ยนแปลงรอบหรือการทำงานของเครื่องใช้

การล็อคแผงควบคุม

1 กดปุ่ม **Tub Clean** และ **Rinse+** พร้อมกันและค้างไว้สามวินาที

2 จะปรากฏบนหน้าจอแสดงผล เมื่อตั้งค่า ฟังก์ชั่นล็อคป้องกันเด็กปุ่มทั้งหมดจะถูกล็อคยกเว้นปุ่ม **กำลังไฟ**

หมายเหตุ

- การปิดเครื่องหรือจบรอบทั้งหมดจะไม่รีเซ็ตฟังก์ชันการล็อคเพื่อให้ปลอดภัยจากเด็ก คุณจะต้องปิดการทำงานฟังก์ชันล็อคป้องกันเด็กก่อนที่คุณจะสามารถเข้าถึงฟังก์ชันอื่นๆ ได้

การคลายล็อคแผงควบคุม

กดปุ่ม **Tub Clean** และ **Rinse+** พร้อมกันและค้างไว้สามวินาที

- ในการเปลี่ยนรอบหรือตัวเลือก กดปุ่ม **เริ่ม/พัก** เพื่อหยุดการทำงานและจากนั้นเลือกรอบหรือตัวเลือกที่คุณต้องการที่จะเปลี่ยน

การใช้แอพพลิเคชั่น Smart ThinQ

การติดตั้ง Smart ThinQ

ค้นหาแอปพลิเคชัน LG SmartThinQ จาก Google Play Store & Apple App Store ในสมารทโฟน ทำตามคำแนะนำเพื่อดาวน์โหลดและติดตั้งแอปพลิเคชัน

ฟังก์ชัน Wi-Fi

• สำหรับเครื่องใช้ไฟฟ้าที่มีโลโก้ Smart ThinQ หรือ Smart ThinQ

รอบการซักผ้า (Remote Start, Download Cycle)

ตั้งค่าหรือดาวน์โหลดโปรแกรมซักที่ต้องการและสั่งงานผ่านรีโมทคอนโทรล

ฟังก์ชันเตือนการทำความสะอาดถัง

ฟังก์ชันนี้จะแสดงให้เห็นว่าเหลือการซักผ้าอีกกี่รอบก่อนที่จะถึงเวลาใช้โปรแกรมทำความสะอาดถังซัก

การตรวจตราด้านพลังงาน

ตรวจสอบการใช้พลังงานของโปรแกรมการซักที่ใช้ล่าสุดและค่าเฉลี่ยรายเดือน

Smart Diagnosis™

ฟังก์ชันนี้ให้ข้อมูลที่มีประโยชน์สำหรับการวินิจฉัยและการแก้ไขปัญหาที่เกิดกับเครื่องใช้ตามแบบแผนการใช้งาน

การตั้งค่า

มีหลายฟังก์ชันให้เลือกใช้งาน

การแจ้งเตือนแบบพุช

เปิดใช้ฟังก์ชันการแจ้งเตือนแบบพุชเพื่อรับการแจ้งเตือนสถานะของเครื่องใช้ การแจ้งเตือนจะถูกส่งสัญญาณให้ทราบแม้ว่าจะปิดแอป LG SmartThinQ ไว้ก็ตาม

หมายเหตุ

- เพื่อยืนยันการเชื่อมต่อ Wi-Fi ดูที่ไอคอน **Wi-Fi** ที่แผงควบคุมว่ามีไฟขึ้นหรือไม่
- LG SmartThinQ ไม่รับผิดชอบปัญหาใดๆ เกี่ยวกับปัญหาในการเชื่อมต่อเครือข่าย หรือความผิดพลาด การทำงานผิดพลาด หรือข้อผิดพลาดใดๆ ที่เกิดจากการเชื่อมต่อเครือข่าย
- เครื่องนี้รองรับเครือข่าย 2.4 GHz Wi-Fi เท่านั้น
- หากโปรโตคอลการรักษาความปลอดภัยของเราเตอร์ถูกตั้งเป็น **WEP** คุณอาจไม่สามารถตั้งค่าเครือข่ายได้ โปรดใช้โปรโตคอลการรักษาความปลอดภัยอื่น (แนะนำให้ใช้ **WPA2**) แล้วลงทะเบียนผลิตภัณฑ์อีกครั้ง
- สำหรับเราเตอร์ SSID โปรดใช้แต่ตัวอักษรและตัวเลขเท่านั้น อาจไม่รองรับอักขระประเภทอื่น
- หากเครื่องใช้ไฟฟ้ามีปัญหาในการเชื่อมต่อเครือข่าย Wi-Fi อาจเป็นเพราะว่าอยู่ห่างจากเราเตอร์มากเกินไป
- การเชื่อมต่อ Wi-Fi อาจจะไม่เกิดขึ้นหรือติดขัดเนื่องจากสภาพแวดล้อมของเครือข่ายในบ้าน
- การเชื่อมต่อเครือข่ายอาจทำงานไม่ถูกต้อง ทั้งนี้ขึ้นอยู่กับผู้ให้บริการอินเตอร์เน็ต
- สภาวะแวดล้อมของระบบสัญญาณไร้สายอาจทำให้บริการเครือข่ายไร้สายทำงานช้า
- เพื่อการพัฒนาเครื่องใช้ไฟฟ้าแอปพลิเคชันอาจเปลี่ยนแปลงโดยไม่มีการแจ้งให้ผู้ใช้ทราบ
- คุณสมบัติอาจแตกต่างกันในแต่ละรุ่น

การใช้โปรแกรมการซักของเครื่องซักผ้า

Remote Start(การเริ่มทางไกล)

ใช้สมาร์ทโฟนเพื่อควบคุมเครื่องใช้ของคุณจากระยะไกล นอกจากนี้คุณยังสามารถเฝ้าตรวจตราการทำงานของโปรแกรมเพื่อให้คุณทราบระยะเวลาที่เหลือของโปรแกรมได้อีกด้วย

การใช้การเริ่มทางไกล:

1. กดปุ่ม **กำลังไฟ**
2. ใส่เสื้อผ้าลงไปในถังซัก
3. กดปุ่ม **Remote Start** ค้างไว้ 3 วินาที เพื่อเปิดใช้งานฟังก์ชัน
4. เริ่มต้นโปรแกรมซักจากแอปพลิเคชั่น LG SmartThinQ บนสมาร์ทโฟนของคุณ

หมายเหตุ

- เมื่อเปิดใช้งานโหมดรีโมทสตาร์ท คุณสามารถเริ่มโปรแกรมซักได้จากแอปพลิเคชัน LG SmartThinQ หากโปรแกรมไม่เริ่มต้น เครื่องซักผ้าจะรอจนกว่าจะปิดผ่านรีโมทในแอปพลิเคชัน หรือเมื่อปิดใช้งานโหมดรีโมทสตาร์ท
- เมื่อเปิดใช้ฟังก์ชันการเริ่มทางไกลแล้ว ฝาเครื่องจะล็อกโดยอัตโนมัติ

การปิดใช้งานการเริ่มทางไกล:

เมื่อเปิด Remote Start แล้ว กดปุ่ม **Remote Start** ค้างไว้ 3 วินาที

Download Cycle (ดาวน์โหลดโปรแกรมซัก)

ดาวน์โหลดโปรแกรมซักผ้าใหม่ที่ไม่รวมอยู่ในโปรแกรมซักผ้าพื้นฐานของเครื่องใช้ไฟฟ้า

เครื่องใช้ไฟฟ้าที่ลงทะเบียนเรียบร้อยแล้วจะสามารถดาวน์โหลดโปรแกรมซักผ้าพิเศษต่างๆ ลงในเครื่องใช้ไฟฟ้านั้น

สามารถเก็บโปรแกรมซักผ้าไว้ในเครื่องใช้ไฟฟ้าครั้งละหนึ่งโปรแกรมเท่านั้น

เมื่อการดาวน์โหลดโปรแกรมซักผ้าเข้าในเครื่องใช้ไฟฟ้าเสร็จสิ้นแล้ว ผลิตภัณฑ์จะเก็บโปรแกรมที่ดาวน์โหลดไว้จนกว่าจะดาวน์โหลดโปรแกรมใหม่

ข้อมูลประกาศของซอฟต์แวร์โอเพ่นซอร์ส

หากต้องการรับซอร์สโค้ดภายใต้ข้อตกลงโอเพนซอร์ส GPL, LGPL, MPL และข้อตกลงโอเพนซอร์สอื่นๆ ที่มีอยู่ในผลิตภัณฑ์นี้ โปรดไปที่ http://opensource.lge.com

นอกเหนือจากซอร์สโค้ดแล้ว เงื่อนไข การปฏิเสธการรับประกัน และการประกาศเกี่ยวกับลิขสิทธิ์ทั้งหมดที่อ้างถึงนั้นสามารถดาวน์โหลดได้

LG Electronics จะยังมอบซอร์สโค้ดแก่คุณบน CD-ROM โดยคิดค่าใช้จ่ายในการแจกจ่าย (เช่น ค่าใช้จ่ายของสื่อบันทึกข้อมูล การจัดส่ง และการจัดการ) หากได้รับการร้องขอทางอีเมลไปยัง opensource@lge.com ข้อเสนอนี้มีผลใช้ได้สาม (3) ปีนับจากวันที่คุณซื้อสินค้า

Smart Diagnosis™ การใช้สมาร์ทโฟน

• สำหรับเครื่องใช้ไฟฟ้าที่มีโลโก้ หรือ

ใช้งานฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์ข้อมูลลูกค้าของ LG Electronics เมื่อผลิตภัณฑ์ทำงานผิดปกติหรือล้มเหลว

Smart Diagnosis™ ไม่สามารถเปิดใช้งานได้เว้นแต่ผลิตภัณฑ์จะเชื่อมต่อกับแหล่งจ่ายไฟ หากผลิตภัณฑ์ไม่สามารถเปิดเครื่องได้ การแก้ไขปัญหาเบื้องต้นจะต้องกระทำโดยไม่ใช้ Smart Diagnosis™


การใช้ Smart Diagnosis™

Smart Diagnosis™ ผ่านศูนย์บริการข้อมูลลูกค้า

ใช้ฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์บริการข้อมูลลูกค้า LG Electronics เมื่อเครื่องใช้ไฟฟ้าทำงานผิดปกติหรือล้มเหลว ใช้ฟังก์ชันนี้เพื่อติดต่อตัวแทนบริการเท่านั้น ไม่ใช่ในระหว่างการใช้งานปกติ

1 กดปุ่ม **กำลังไฟ** หลังจากเปิดลิ้นชักของเครื่องซักผ้าขนาดเล็ก

2 เมื่อตัวแทนศูนย์บริการลูกค้าได้บอกให้ทำเช่นนั้น ให้ถือที่พูดโทรศัพท์ของคุณบนโลโก้ Smart Diagnosis™

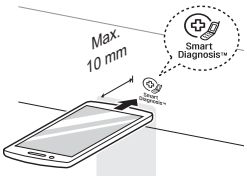

3 กดปุ่ม **Tub Clean** และค้างไว้สามวินาที ในขณะที่ถือช่องสำหรับพูดของโทรศัพท์ไปที่ไอคอนหรือปุ่ม **กำลังไฟ**

4 ให้โทรศัพท์อยู่กับที่จนกว่าสัญญาณเสียงจะจบ เวลาคงเหลือสำหรับการส่งข้อมูลจะแสดงขึ้นมา
- เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด อย่าขยับโทรศัพท์ในขณะที่กำลังส่งเสียง
- หากตัวแทนศูนย์บริการไม่สามารถทำการบันทึกข้อมูลที่แม่นยำได้ อาจขอให้คุณลองทำอีกครั้ง

5 เมื่อการนับถอยหลังจบลงและเสียงสัญญาณหยุด ให้ทำการสนทนาของคุณต่อกับตัวแทนศูนย์บริการที่จะสามารถช่วยเหลือคุณได้โดยใช้ข้อมูลที่ส่งไปเพื่อการวิเคราะห์

หมายเหตุ
- ฟังก์ชัน Smart Diagnosis™ ขึ้นอยู่กับคุณภาพการโทรในพื้นที่
- ประสิทธิภาพในการสื่อสารจะดีขึ้นและคุณสามารถรับบริการที่ดีขึ้นได้หากคุณใช้โทรศัพท์บ้าน
- หากการส่งข้อมูล Smart Diagnosis™ ไม่ดีเนื่องจากคุณภาพการโทรที่แย่ คุณอาจไม่ได้รับบริการ Smart Diagnosis™ ที่ดีที่สุด

การบำรุงรักษา


⚠ คำเตือน

- ถอดปลั๊กเครื่องซักผ้าของคุณก่อนการทำความสะอาดเพื่อหลีกเลี่ยงความเสี่ยงต่อการเกิดไฟฟ้าช็อต การไม่ปฏิบัติตามคำเตือนนี้อาจส่งผลให้เกิดการบาดเจ็บสาหัส ไฟไหม้ ไฟฟ้าช็อตหรือเสียชีวิต
- ห้ามใช้สารเคมีที่มีฤทธิ์แรง สารขัดทำความสะอาดหรือสารทำละลายเพื่อทำความสะอาดเครื่องซักผ้า สิ่งเหล่านี้อาจสร้างความเสียหายให้แก่ผิวที่เคลือบได้

การทำความสะอาดเครื่องซักผ้า

การดูแลหลังซัก

- หลังจากสิ้นสุดโปรแกรม เช็ดฝาและภายในของซีลฝาเพื่อขจัดความชื้น
- เปิดฝาทิ้งไว้เพื่อผึ่งภายในถังซักให้แห้ง
- เช็ดตัวเครื่องซักผ้าด้วยผ้าแห้งเพื่อขจัดความชื้น

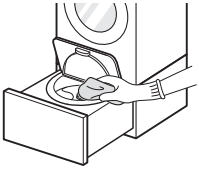

การทำความสะอาดภายนอก

การดูแลเครื่องซักผ้าของคุณอย่างเหมาะสมสามารถยืดอายุของเครื่องได้

ฝา:

- เช็ดด้วยผ้าเปียกทั้งด้านนอกและด้านใน และจากนั้นเช็ดให้แห้งด้วยผ้านุ่ม

ภายนอก:

- เช็ดรอยคราบเปื้อนที่กระเด็นติดตัวเครื่องโดยทันที
- เช็ดด้วยผ้าเปียก
- อย่ากดพื้นผิวหรือหน้าจอด้วยวัตถุมีคม

การทำความสะอาดภายใน

- ใช้ผ้าขนหนูหรือผ้านุ่มเพื่อเช็ดช่องเปิดฝาเครื่องซักผ้าและกระจกฝา
- เอาเสื้อผ้าออกจากเครื่องซักผ้าให้เร็วที่สุดเมื่อสิ้นสุดโปรแกรมเสมอ การทิ้งเสื้อผ้าที่เปียกไว้ในเครื่องซักผ้าสามารถทำให้เกิดการยับ การตกของสี และกลิ่นเหม็นได้
- ใช้โปรแกรม ทำความสะอาดถังซักเดือนละครั้ง (หรือบ่อยขึ้นหากจำเป็น) เพื่อเอาผงซักฟอกที่สะสมและสิ่งตกค้างอื่น ๆ ออก

การทำความสะอาดถังซัก

ใช้ตัวเลือกล้างถังซักผ้าเพื่อรักษาความสะอาดของถังซัก

1 กดปุ่ม **กำลังไฟ**

2 เจือจางคลอรีนบลีชเหลว 200 มล. ในน้ำ 1 ลิตร และเทส่วนผสมลงในถัง

3 กดปุ่ม **Tub Clean**

4 กดปุ่ม **เริ่ม/พัก**


⚠ ข้อควรระวัง

- หากมีเด็ก ระมัดระวังอย่าเปิดฝาทิ้งไว้นานเกินไป


การทำความสะอาดตัวกรองท่อน้ำเข้า

- ปิดนาฬิกาจับเวลาหากทิ้งเครื่องซักผ้าไว้ช่วงเวลาหนึ่ง (เช่น วันหยุด) โดยเฉพาะหากไม่มีช่องระบายบนพื้น (รางระบายน้ำ) ในบริเวณใกล้เคียง
- ไอคอน 1E อาจกะพริบบนจอแสดงผลเมื่อแรงดันน้ำต่ำหรือตัวกรองน้ำเข้าถูกอุดตันด้วยสิ่งสกปรก ทำความสะอาดตัวกรองน้ำเข้า
- ตัวกรองน้ำเข้าอาจจะอุดตันด้วยระดับของน้ำกระด้าง ตะกอนในน้ำประปาหรือเศษอื่น ๆ

1 ปิดก๊อกน้ำและขันท่อน้ำเข้าออก

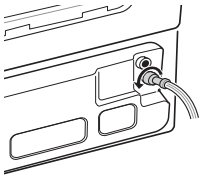


2 ทำความสะอาดตัวกรองโดยใช้แปรงขนสัตว์แบบแข็ง

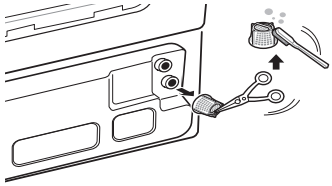


ทำความสะอาดตัวกรองผ้าสำลี

ตัวกรองเป็นส่วนสำคัญสำหรับผลการซักผ้าที่มีประสิทธิภาพดังนั้นท่านต้องดูแลเป็นพิเศษ ขอแนะนำให้ทำความสะอาดตัวกรองอย่างสม่ำเสมอ


1 ดึงฝาตัวกรองผ้าสำลี

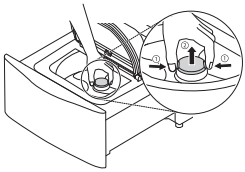

2 เปิดฝาและเอาผ้าสำลีออกและล้าง

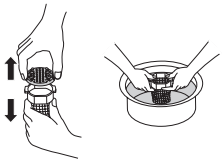

3 ใส่ชิ้นส่วนล่างของตัวกรองลงในถังและปิดฝาจนกระทั่งท่านได้ยินเสียงคลิก

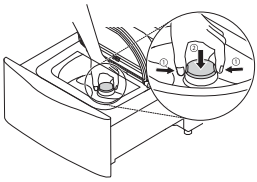

หมายเหตุ


- เมื่อตัวกรองผ้าสำลีได้รับความเสียหาย ให้ติดต่อศูนย์บริการของ LG
- ห้ามใช้งานเครื่องซักผ้าโดยไม่มีตัวกรองผ้าสำลี
- ห้ามใส่ตัวกรองผ้าสำลีไว้หลวมๆ การทำเช่นนั้นอาจเกิดความเสียหายกับผ้าหรือเครื่องซักผ้า

ระวังการเป็นน้ำแข็งในระหว่างฤดูหนาว

- เมื่อเป็นน้ำแข็ง ผลิตภัณฑ์จะทำงานไม่เป็นปกติ ตรวจสอบให้แน่ใจว่าติดตั้งผลิตภัณฑ์ในตำแหน่งที่จะไม่เป็นน้ำแข็งในระหว่างฤดูหนาว
- ในกรณีที่จะต้องติดตั้งเครื่องภายนอกบนชานบ้านหรือในสภาวะภายนอกอาคารอื่นๆ ให้ตรวจสอบรายการต่อไปนี้

วิธีการป้องกันผลิตภัณฑ์เป็นน้ำแข็ง

- หลังจากปิดก๊อกน้ำ ให้ถอดท่อส่งน้ำเย็นออกจากก๊อกน้ำและเอาน้ำออกขณะที่คว่ำท่อลง

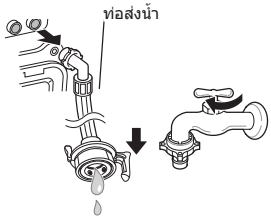

วิธีการรับมือการเป็นน้ำแข็ง

ขั้นที่ 1 เมื่อประตูแข็งตัวเนื่องจากความเย็นจัด

- ทำให้ประตูอุ่นขึ้นโดยใช้ผ้าชุบน้ำร้อน

ขั้นที่ 2 เมื่อท่อส่งน้ำแข็งตัวเนื่องจากความเย็นจัด

- ไอคอน 1E อาจกะพริบบนจอแสดงผลเมื่อมีปัญหาการจ่ายน้ำประปาเกิดขึ้น ใช้มาตรการดังต่อไปนี้
  - เอาท่อส่งน้ำออกและเชื่อมต่อกับก๊อกน้ำและตรวจสอบว่ามีน้ำมาจากก๊อกและท่อส่งน้ำ
  - ปิดก๊อกน้ำและทำให้ก๊อกน้ำและพื้นที่เชื่อมต่อทั้งสองของท่อส่งน้ำของเครื่องใช้อุ่นขึ้นโดยใช้ผ้าชุบน้ำร้อน
  - เอาท่อส่งน้ำออกและแช่ในน้ำอุ่นที่มีอุณหภูมิต่ำกว่า 50-60 องศาเซลเซียส



ขั้นที่ 3 เมื่อปั๊มท่อระบายน้ำแข็งตัวเนื่องจากความเย็นจัด

- ไอคอน FF, 0E อาจกะพริบบนจอแสดงผลเมื่อมีปัญหาปั๊มท่อระบายน้ำเกิดขึ้น ใช้มาตรการดังต่อไปนี้

1 เทน้ำอุ่นที่มีอุณหภูมิต่ำกว่า 50-60 องศาเซลเซียส 15 ลิตรลงในถังจนกระทั่งแป้นเกลียวปีกของเครื่องซักผ้าจมลงและรอเป็นเวลาหนึ่งชั่วโมง

2 กดปุ่ม **กำลังไฟ** แล้วใช้โปรแกรมเสื้อผ้าเด็กหนึ่งชั่วโมง
- เมื่อไอคอน 1E ปรากฏบนจอแสดงผลทำซ้ำขั้นที่ 1 ถึงขั้นที่ 2

3 ปิดพลังงานหลังจากเสร็จสิ้นโปรแกรมเบบี้แคร์ หากลิ้นซักเปิดอยู่ ให้เลือกโปรแกรม **ล้าง+ปั่นหมาด** แล้วกดปุ่ม **เริ่ม/พัก** เพื่อตรวจสอบว่าเครื่องซักผ้าใช้งานได้หรือไม่

4 เมื่อไอคอน 0E ปรากฏบนจอแสดงผล ทำให้ชิ้นส่วนด้านในของท่อระบายน้ำอุ่นขึ้นด้วยน้ำร้อน

การแก้ไขปัญหาเบื้องต้น

เครื่องใช้มีระบบการตรวจสอบข้อผิดพลาดโดยอัตโนมัติในการตรวจสอบและวินิจฉัยปัญหาในระยะเริ่มต้น ถ้าเครื่องใช้ไม่สามารถทำงานได้อย่างเหมาะสมหรือไม่สามารถทำงานได้เลย ก่อนที่ท่านจะเรียกใช้บริการให้ทำการตรวจสอบต่อไปนี้:

การวินิจฉัยปัญหา

อาการ	สาเหตุ	การแก้ไข
หากลิ้นซักไม่เปิด	**ไฟฟ้าขัดข้องหรือปลั๊กถูกถอดออกในขณะซัก**	• หลังจากจ่ายพลังงานอีกครั้ง กดปุ่ม **กำลังไฟ** ที่แผงควบคุมของถังซักหลักหรือรีโมตคอนโทรล
การระบายน้ำจะเริ่มต้นเมื่อกดปุ่ม Start/ Pause	**ปุ่ม Start/ Pause จะถูกกดอยู่ในขณะซัก**	• เมื่อกดปุ่ม **เริ่ม/พัก**ในขณะซัก ลิ้นซักจะปลดล็อกหลังจากระบายน้ำเพื่อความปลอดภัย
เสียงกรอกแกรกและเสียงโลหะกระทบกัน	**วัตถุแปลกปลอม เช่น กุญแจ เหรียญหรือเข็มกลัดอาจอยู่ในถังซัก**	• หยุดการทำงานของเครื่องซักผ้า ตรวจสอบถังซักงเพื่อค้นหาวัตถุแปลกปลอม ถ้ายังคงมีเสียงดังหลังเปิดใช้งานเครื่องซักผ้าใหม่ ให้เรียกใช้บริการ
เสียงกระแทก	**การซักผ้าในปริมาณมากอาจทำให้เกิดเสียงคล้ายเสียงทุบ**	• หากยังมีเสียงอยู่ ผ้าอาจจะไม่สมดุล หยุดเครื่องแล้วจัดผ้าให้สมดุล
	ปริมาณการซักอาจไม่สมดุล	• หยุดรอบการทำงานชั่วคราวและกระจายปริมาณการซักหลังจากปลดล็อคประตู
เสียงสั่น	**วัสดุบรรจุภัณฑ์ที่ยังไม่เอาออก**	• แกะวัสดุบรรจุภัณฑ์ออก
	ปริมาณการซักอาจจะกระจายตัวอยู่ในถังไม่สม่ำเสมอ	• หยุดรอบการทำงานชั่วคราวและกระจายปริมาณการซักหลังจากปลดล็อคประตู
	ไม่ใช่ขาปรับระดับทั้งหมดอาจตั้งได้ไม่มั่นคงและสม่ำเสมอบนพื้น	• ดูการปรับระดับเครื่องใช้ในส่วนของการติดตั้ง
	พื้นไม่แข็งเพียงพอ	• ตรวจสอบให้แน่ใจว่าพื้นเป็นพื้นที่แข็งและไม่โค้งงอ
น้ำรั่วไหลในทุกปริมาณการซัก	**ท่อไม่ได้รับการติดตั้งอย่างถูกต้อง**	• ตรวจสอบการเชื่อมต่อท่อใส่และระบายน้ำทั้งหมดเพื่อให้แน่ใจว่าการเชื่อมต่อเหล่านั้นมีความแน่นหนาและปลอดภัย
ฟองมากเกินไป	**ผงซักฟอกมากเกินไปหรือผงซักฟอกไม่ถูกต้อง**	• ลดปริมาณของผงซักฟอกลงสำหรับเสื้อผ้าที่ซักผ้ามีรอยเปื้อนบางๆ ถ้าคุณใช้ผงซักฟอกมากเกินไป หลังจากการล้าง ฟองที่มากเกินไปจะยังคงอยู่

อาการ	สาเหตุ	การแก้ไข
สีตกใส่ผ้า	**ไม่แยกเสื้อผ้าให้เหมาะสม**	• ซักผ้าสีเข้มแยกต่างหากจากผ้าสีอ่อนและผ้าขาวเพื่อป้องกันการตกสี • ไม่ซักเสื้อผ้าที่มีคราบสกปรกมากรวมกับเสื้อผ้าที่มีคราบสกปรกน้อย
การรั่วไหลของน้ำ	**การเชื่อมต่อท่อส่งน้ำตรงบริเวณก๊อกน้ำ เครื่องซักผ้า หรือข้อต่อท่อระบายน้ำหลวม**	• ตรวจสอบการรั่วไหล รอยร้าวและรอยแตกบริเวณข้อต่อท่อระบายน้ำและท่อ • ขันการเชื่อมต่อให้แน่นหนา
	ท่อระบายในบ้านอุดตัน	• เครื่องซักผ้าปั๊มน้ำออกอย่างรวดเร็ว ตรวจสอบการสำรองน้ำที่ออกจากท่อระบายน้ำในช่วงการระบายน้ำ หากเห็นน้ำออกมาจากท่อระบายน้ำ ตรวจสอบการติดตั้งท่อน้ำเสียที่เหมาะสมและตรวจสอบข้อจำกัดในท่อระบายน้ำ ติดต่อช่างประปาเพื่อซ่อมแซมท่อระบายน้ำ
	ท่อน้ำเสียหลุดออกจากข้อต่อท่อระบายน้ำหรือไม่ได้ใส่ให้ลึกพอ	• มัดท่อน้ำเสียเข้ากับท่อส่งน้ำหรือท่อถ่ายน้ำเพื่อป้องกันไม่ให้หลุดออกในช่วงการระบายน้ำ สำหรับท่อระบายน้ำที่มีขนาดเล็กกว่า ให้ใส่ท่อน้ำทิ้งเข้าไปในท่อระบายน้ำให้ลึกถึงแป้นเกลียวของท่อน้ำทิ้ง สำหรับท่อระบายน้ำขนาดใหญ่กว่า ให้ใส่ท่อน้ำเสียเข้าไปในท่อระบายน้ำโดยผ่านแป้นเกลียว 2-5 ซม.
	ปริมาณการซักในถังมากเกินไป	• ลดปริมาณผ้าหรือใช้ถังซักหลัก • หยุดการทำงานของเครื่องซักผ้า ตรวจสอบปริมาณการซัก ตรวจสอบให้แน่ใจว่าปริมาณการซักพอดีกับถังอย่างหลวม ๆ และปิดประตูได้ง่าย
	ผงซักฟอกที่มีฟองมากเกินไป	• ฟองที่มากเกินไปอาจทำให้เกิดการรั่วไหลและอาจมีสาเหตุมาจากชนิดและปริมาณของผงซักฟอกที่ใช้ ลดปริมาณผงซักฟอกหากปริมาณการซักน้อย หรือคราบสกปรกน้อยหรือหากน้ำของท่านเป็นน้ำที่อ่อนมาก ห้ามใช้เกินปริมาณสูงสุดที่แสดงไว้ในเครื่องจ่ายที่ให้มา
รอยย่น	**ไม่เอาเสื้อผ้าออกจากเครื่องซักผ้าทันที**	• เอาเสื้อผ้าออกจากเครื่องซักผ้าให้เร็วที่สุดเมื่อสิ้นสุดโปรแกรมเสมอ
	ปริมาณการซักในเครื่องซักผ้ามากเกินไป	• เครื่องซักผ้าสามารถใส่ปริมาณการซักได้อย่างเต็มที่ แต่ไม่ควรมีเสื้อผ้าอัดแน่นในถัง ประตูเครื่องซักผ้าควรปิดได้อย่างง่ายดาย

อาการ	สาเหตุ	การแก้ไข
เครื่องซักผ้าจะไม่ทำงาน	**แผงควบคุมปิดเนื่องจากไม่มีการใช้งาน**	• นี่เป็นสิ่งปกติ กดปุ่ม **กำลังไฟ**เพื่อเปิดเครื่องซักผ้า
	เครื่องซักผ้าไม่ได้เสียบปลั๊ก	• ตรวจสอบให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับที่ทำงานได้อย่างแน่นหนา
	ปิดน้ำประปา	• เปิดก๊อกน้ำเย็นให้สุด
	ชุดควบคุมไม่ได้รับการตั้งค่าอย่างเหมาะสม	• ตรวจสอบให้แน่ใจรอบการทำงานได้รับการตั้งค่าอย่างถูกต้อง ปิดฝาและกดปุ่ม **เริ่ม/พัก**
	ประตูหรือลิ้นซักเปิดอยู่	• ปิดประตูและลิ้นซักและตรวจสอบให้แน่ใจว่าไม่มีอะไรดิดอยู่ใต้ประตูที่ขัดขวางไม่ให้ปิดประตูได้สนิท
	เซอร์กิตเบรกเกอร์/ ฟิวส์ ตัดวงจร/ขาด	• ตรวจสอบเซอร์กิตเบรกเกอร์/ ฟิวส์ภายในบ้าน เปลี่ยนฟิวส์หรือรีเซ็ตเบรกเกอร์ เครื่องซักผ้าควรถูกต่ออยู่ในวงจรไฟฟ้าย่อยที่ทำไว้ให้เฉพาะ เครื่องซักผ้าจะทำงานต่อหลังจากหยุดรอบการทำงานทันทีที่ไฟฟ้าดิดอีกครั้ง
	การควบคุมต้องได้รับการตั้งค่าใหม่	• กดปุ่ม **กำลังไฟ**แล้วเลือกโปรแกรมที่ต้องการอีกครั้ง แล้วกดปุ่ม **เริ่ม/พัก**
	ไม่ได้กดปุ่ม เริ่ม/พักหลังตั้งค่ารอบการทำงาน	• กดปุ่ม **เริ่ม/พัก**ที่แผงควบคุมของถังซักหลักหรือรีโมตคอนโทรล • เมื่อใช้งานแผงควบคุมของเครื่องซักผ้าขนาดเล็ก กดปุ่ม **เริ่ม/พัก** แล้วปิดลิ้นซักภายใน 5 วินาที
	แรงดันน้ำต่ำมาก	• ตรวจสอบก๊อกน้ำอื่นในบ้านเพื่อให้แน่ใจว่าแรงดันน้ำที่ใช้ในครัวเรือนเพียงพอ
	เครื่องซักผ้าเย็นมากเกินไป	• หากเครื่องซักผ้าสัมผัสกับอุณหภูมิที่ต่ำกว่าจุดเยือกแข็งเป็นระยะเวลานาน ทำให้เครื่องซักผ้าอุ่นขึ้นก่อนที่จะกดปุ่ม**กำลังไฟ**

อาการ	สาเหตุ	การแก้ไข
น้ำในเครื่องซักผ้าไม่ได้รับการเติมอย่างถูกต้อง	ตัวกรองอุดตัน	• ตรวจสอบให้แน่ใจตัวกรองน้ำเข้าวาล์วเติมไม่ถูกอุดตัน ดูคำแนะนำการทำความสะอาดตัวกรอง
	ท่อส่งน้ำอาจหักงอ	• ตรวจสอบดูว่าท่อส่งน้ำไม่หักงอหรืออุดตัน
	น้ำประปาไม่เพียงพอ	• ตรวจดูให้แน่ใจว่าก๊อกน้ำเย็นเปิดสุดแล้ว
	ประตูและลิ้นซักเปิด	• เครื่องซักผ้าจะไม่ทำงานหากประตูเปิด ปิดประตูและตรวจสอบให้แน่ใจว่าไม่มีอะไรติดอยู่ใต้ประตูที่ขัดขวางไม่ให้ประตูปิดได้สนิท
	ระดับน้ำต่ำมากเกินไป	• การเติมน้ำที่ได้ระดับเป็นการใช้ที่เหมาะที่สุดสำหรับการเคลื่อนไหวในการซักเพื่อให้บรรลุประสิทธิภาพในการซักที่ดีที่สุด
น้ำในเครื่องซักผ้าไม่ระบายหรือระบายช้า	ท่อระบายน้ำหักงอ ถูกบีบอัดหรืออุดตัน	• ตรวจสอบให้แน่ใจว่าท่อระบายน้ำไม่มีการอุดตัน หักงอ และอื่น ๆ และไม่ถูกบีบอัดอยู่ข้างหลังหรือใต้เครื่องซักผ้า
การขจัดคราบสกปรกไท่าดีไม่ดี	เสื้อผ้าที่ซักที่มีคราบสกปรกมาก	• ใช้เครื่องซักผ้าหลัก
	คราบสกปรกที่ทิ้งไว้ก่อนหน้านี้	• เสื้อผ้าที่ซักไปก่อนหน้านี้อาจมีคราบสกปรกที่ถูกทิ้งไว้ การขจัดคราบสกปรกอาจเป็นเรื่องยากและอาจต้องใช้มือซักหรือมีการช่วยจัดการก่อนเพื่อช่วยในการขจัดคราบสกปรก
รอบเวลาในการซักนานกว่าปกติ	เครื่องซักผ้าจะปรับเวลาในการซักตามปริมาณเสื้อผ้าที่ซัก แรงดันน้ำและสภาพการใช้งานอื่น ๆ โดยอัตโนมัติ	• สิ่งนี้เป็นเรื่องปกติ เครื่องซักผ้าปรับรอบเวลาโดยอัตโนมัติเพื่อให้ได้ผลลัพธ์ที่ดีที่สุดสำหรับโปรแกรมที่เลือก เวลาที่เหลือที่แสดงในจอแสดงผล เป็นเพียงการประมาณ เวลาที่เกิดขึ้นจริงอาจแตกต่างกัน
กลิ่นเหม็นอับหรือกลิ่นราน้ำค้างในเครื่องซักผ้า	ใช้ผงซักฟอกไม่ถูกต้องหรือมากเกินไป	• เครื่องใช้นี้ต้องการผงซักฟอกน้อยมาก ควรใช้ถ้วยวัดปริมาณผงซักฟอกที่ให้มา
	ไม่มีการทำความสะอาดภายในถังซักอย่างเหมาะสม	• ใช้โปรแกรมทำความสะอาดถังอย่างสม่ำเสมอ
เครื่องซักผ้าจะส่งเสียงซ้ำ ๆ ก่อนการล้างครั้งสุดท้าย	สิ่งนี้ไม่ใช่เรื่องผิดพลาด	• สิ่งนี้เป็นการแจ้งเตือนเพื่ออนุญาตให้มีการใส่น้ำยาปรับผ้านุ่มก่อนการล้างครั้งสุดท้าย

ข้อความข้อผิดพลาด

อาการ	สาเหตุ	การแก้ไข
	**ลิ้นชักปิดอย่างไม่เหมาะสม**	• ปิดลิ้นชักแล้วกดปุ่ม **เริ่ม/พัก** เพื่อเริ่มรอบการทำงาน • หากปิดลิ้นชักและมีข้อความเกี่ยวกับข้อผิดพลาดในการล็อคลิ้นชักปรากฏขึ้น ให้เรียกใช้บริการ
	**ประตูปิดอย่างไม่เหมาะสม**	• เปิดลิ้นชักและตรวจสอบให้แน่ใจว่าบริเวณสลักไม่มีเสื้อผ้าหรือสิ่งกีดขวางใด ๆ • ปิดฝา ปิดลิ้นชัก แล้วกดปุ่ม **เริ่ม/พัก** เพื่อเริ่มรอบการทำงาน • ถ้าประตูปิดและมีข้อความเกี่ยวกับข้อผิดพลาดของประตูปรากฏขึ้น ให้เรียกใช้บริการ
	**เปิดก๊อกน้ำเย็นไม่สุด**	• ตรวจดูให้แน่ใจว่าก๊อกน้ำเย็นเปิดจนสุดแล้ว
	ท่อสายน้ำหักงอ ถูกบีบอัดหรือบด	• ตรวจสอบให้แน่ใจว่าท่อไม่มีการหักงอหรือถูกบีบอัด โปรดใช้ความระมัดระวังเมื่อมีการย้ายเครื่องซักผ้า ในระหว่างการทำความสะอาดและการซ่อมบำรุง
	ตัวกรองน้ำเข้าถูกอุดตัน	• ทำความสะอาดตัวกรองน้ำขาเข้า
	แรงดันน้ำประปาไปยังก๊อกน้ำหรือบ้านอยู่ในระดับต่ำเกินไป	• ตรวจสอบก๊อกน้ำอื่นในบ้านเพื่อตรวจสอบให้แน่ใจว่าแรงดันน้ำที่ใช้ในครัวเรือนพียงพอและไหลได้ไม่จำกัด ถอดท่อส่งน้ำจากเครื่องซักผ้าและปล่อยน้ำสองถึงสามลิตรไหลผ่านท่อเพื่อล้างสายส่งน้ำ หากการไหลต่ำเกินไป ให้ติดต่อช่างประปาเพื่อซ่อมแซมท่อน้ำ
	น้ำประปาได้รับการเชื่อมต่อกับท่อที่จำกัดการรั่วไหล	• ท่อที่ได้รับการออกแบบเพื่อจำกัดการรั่วไหลสามารถตัดการวงจรการทำงานอย่างผิดพลาดได้และขัดขวางการเติมน้ำลงในเครื่องซักผ้า ไม่แนะนำให้ใช้ท่อที่จำกัดการรั่วไหล
	**ท่อระบายน้ำหักงอ ถูกบีบอัดหรืออุดตัน**	• ตรวจสอบให้แน่ใจว่าท่อระบายน้ำไม่มีการอุดตัน หักงอ และอื่น ๆ และไม่ถูกบีบอัดอยู่ข้างหลังหรือใต้เครื่องซักผ้า

อาการ	สาเหตุ	การแก้ไข
UE	**UE การดำเนินการในการปรับสมดุลไม่ประสบความสำเร็จ**	• ความพยายามเพื่อปรับสมดุลปริมาณการซักโดยอัตโนมัติไม่ประสบความสำเร็จ รอบการทำงานถูกหยุดชั่วคราวเพื่อให้สามารถปรับปริมาณการซักด้วยตนเอง
	ปริมาณการซักน้อยเกินไป	• เพิ่มเสื้อผ้าอื่น ๆ มากขึ้นเพื่อให้เครื่องซักผ้าสามารถปรับสมดุลปริมาณการซัก
	เสื้อผ้าหนักผสมกับเสื้อผ้าที่เบากว่า	• ซักเสื้อผ้าที่มีน้ำหนักใกล้เคียงกัน
	ปริมาณการซักขาดสมดุล	• กระจายปริมาณการซักด้วยตนเองหากเสื้อผ้าพันกัน
tE	**ข้อผิดพลาดในการควบคุม**	• ถอดปลั๊กไฟและติดต่อขอรับบริการ
FE	**ระดับน้ำสูงเกินไปเนื่องจากวาล์วน้ำผิดพลาด**	• ปิดก๊อกน้ำ ถอดปลั๊กเครื่องซักผ้า และเรียกใช้บริการ
PE	**เซ็นเซอร์ระดับน้ำทำงานไม่ถูกต้อง**	• ปิดก๊อกน้ำ ถอดปลั๊กเครื่องซักผ้า และเรียกใช้บริการ
LE	**มีข้อผิดพลาดเกิดขึ้นกับมอเตอร์**	• ให้เครื่องซักผ้าหยุดทำงานเป็นเวลา 30 นาที และจากนั้นเริ่มต้นการทำงานรอบใหม่ หากรหัสข้อผิดพลาด LE ยังคงอยู่ ให้เรียกใช้บริการ
tcL	**ถึงเวลาที่จะใช้โปรแกรมทำความสะอาดถังซัก**	• ใช้โปรแกรม ทำความสะอาดถังซัก
E7	**ใช้งานเครื่องซักผ้าขนาดเล็กโดยไม่มีถังซักหลัก**	• เครื่องซักผ้าขนาดเล็ก ไม่สามารถทำงานเครื่องเดียวตามลำพังได้ ต้องตั้งอยู่ข้างใต้เครื่องซักผ้าแบบฝาหน้าของ LG
	ชุดสวิตช์ที่มีการเรียงสวิตช์แบบซ้อนกันทำงานไม่เหมาะสม	• ผลิตภัณฑ์นี้มีไว้สำหรับใช้งานกับเครื่องใช้ไฟฟ้า LG ที่ได้รับอนุญาตเท่านั้น โทรติดต่อศูนย์บริการข้อมูลลูกค้าเพื่อตรวจสอบรายการเครื่องใช้ไฟฟ้า LG ที่ได้รับอนุญาต
FF	**ท่อระบายหรือปั๊มระบายน้ำเป็นน้ำแข็ง**	• ทำให้ท่อส่งน้ำอุ่นขึ้นโดยใช้ผ้าชุบน้ำร้อน • ใส่น้ำอุ่นลงในถังซัก
CL	**CL ไม่ใช่ข้อผิดพลาด รหัสนี้จะช่วยป้องกันเด็กจากการเปลี่ยนแปลงรอบหรือการทำงานของเครื่อง**	• เพื่อปิดการใช้งาน กดปุ่ม **Tub Clean** และ **Rinse+** ค้างไว้สามวินาที

บันทึก

บันทึก

บันทึก


LG
Life's Good