



TIẾNG VIỆT
ENGLISH

Hướng dẫn sử dụng
User Guide

LG G3
LG-D855

MFL69453901 (1.0)


www.lg.com

Hướng dẫn sử dụng

Sẵn sàng cho 4G LTE*

* Vui lòng kiểm tra với nhà mạng nếu 4G LTE sẵn có trên SIM của bạn

- Hiển thị màn hình và hình minh họa có thể khác với thực tế.
- Một số nội dung trong hướng dẫn này có thể không áp dụng cho điện thoại của bạn, tùy theo phần mềm hoặc nhà cung cấp dịch vụ của bạn. Tất cả các thông tin trong tài liệu này có thể thay đổi mà không cần thông báo.
- Điện thoại này không phù hợp với người khiếm thị do có bàn phím trên màn hình cảm ứng.
- Bản quyền ©2016 LG Electronics, Inc. Bảo lưu mọi quyền. LG và logo LG là thương hiệu đã đăng ký của Tập đoàn LG và các tổ chức có liên quan của tập đoàn. Tất cả thương hiệu khác là tài sản của các chủ sở hữu tương ứng.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ và Play Store™ là các thương hiệu của Google, Inc.

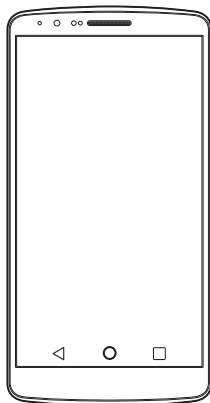

Mục lục

Hướng dẫn sử dụng an toàn và hiệu quả	5	Wi-Fi	41
Thông báo quan trọng	15	Kết nối với mạng Wi-Fi.....	41
Làm quen với điện thoại của bạn	21	Bật Wi-Fi và kết nối với mạng Wi-Fi	41
Tổng quan về điện thoại	21	Bluetooth.....	42
Lắp thẻ SIM và pin	23	Chia sẻ kết nối dữ liệu của điện thoại.....	43
Sạc điện thoại.....	25	Wi-Fi Direct.....	45
Sử dụng thẻ nhớ	26	Sử dụng SmartShare.....	45
Khóa và mở khóa màn hình.....	27	Kết nối máy tính bằng cáp USB	46
Knock Code	28	Cuộc gọi.....	48
KnockON (Nhấn màn hình để mở điện thoại).....	29	Thực hiện cuộc gọi.....	48
Tai nghe Stereo có micrô.....	29	Gọi từ danh bạ	48
Màn hình chủ.....	31	Trả lời và từ chối cuộc gọi	48
Mẹo cho màn hình cảm ứng.....	31	Điều chỉnh âm lượng cuộc gọi.....	48
Màn hình chủ	32	Thực hiện cuộc gọi thứ hai.....	49
Màn hình chủ mở rộng	33	Xem nhật ký cuộc gọi.....	49
Tùy chỉnh Màn hình chủ	34	Cài đặt cuộc gọi.....	50
Quay lại các ứng dụng sử dụng gần đây.....	35	Danh bạ	51
Ô thông báo.....	35	Tìm kiếm liên hệ.....	51
Mở ô thông báo	36	Thêm liên hệ mới.....	51
Biểu tượng chỉ báo trên Thanh Trạng thái	36	Liên hệ yêu thích.....	51
Bàn phím ảo.....	38	Tạo nhóm.....	52
Nhập chữ có dấu	39	Nhắn tin.....	53
Thiết lập tài khoản Google	40	Gửi tin nhắn	53
Kết nối với Mạng và Thiết bị	41	Hộp chuỗi	54
		Thay đổi cài đặt tin nhắn.....	54
		E-mail	55
		Quản lý tài khoản email.....	55

Làm việc với thư mục tài khoản.....	55	Di chuyển con trỏ sử dụng dấu cách	74
Soạn và gửi email.....	56	Nhập từ được gợi ý bằng điều kiển thao tác.....	75
Máy ảnh và Video	57	LG SmartWorld.....	75
Để mở ứng dụng Máy ảnh.....	57	Cách tải LG SmartWorld từ điện thoại.....	75
Làm quen với kính ngắm	57	Đa phương tiện.....	77
Chụp ảnh	58	Nhạc.....	77
Quay Video.....	58	Thêm tệp nhạc vào điện thoại của bạn.....	77
Cài đặt Máy ảnh và Video.....	59	Chuyển nhạc bằng chế độ Thiết bị phương tiện (MTP).....	77
Tự động Lấy nét Nhiều điểm.....	60	Phát bài hát	77
Chế độ kép.....	60	Tiện ích	80
Chụp ảnh bằng cử chỉ tay	61	Đặt báo thức	80
Siêu Thu phóng.....	62	Sử dụng máy tính	80
Xem Ảnh của bạn.....	62	Thêm một sự kiện vào lịch.....	80
Tùy chọn Thư viện.....	62	Máy ghi âm.....	81
Gán ảnh	64	Ghi âm thanh hoặc giọng nói.....	81
Tùy chọn Video.....	64	Gửi bản ghi âm thoại	81
Thu phóng Động.....	65	Công việc.....	82
Dual Play (Phát Hai màn hình).....	66	Google+	82
Thư viện.....	67	Tìm kiếm Thoại.....	82
Làm việc với ảnh.....	67	Tải xuống	83
Để chia sẻ video.....	68	Trang Web	84
Để xóa video	68	Internet.....	84
QSlide trong khi phát video	69	Sử dụng Thanh công cụ web	84
Chức năng.....	70	Xem trang web.....	84
Chụp+	70		
Sử dụng các tùy chọn của Chụp+ ...	71		
Xem Chụp+ đã lưu	71		
QSlide.....	72		
QuickRemote.....	73		
Bàn phím Thông minh	74		

Mục lục

Mở một trang.....	84	Câu hỏi Thường Gặp	116
Tìm kiếm web bằng giọng nói	85		
Chỉ mục.....	85		
Lịch sử	85		
Sử dụng Trình duyệt Bật lên.....	85		
Chrome.....	86		
Xem trang web.....	86		
Mở một trang.....	86		
Đồng bộ hóa với thiết bị khác.....	86		
Cài đặt	87		
Mạng	87		
Âm thanh & Thông báo	90		
Hiển thị	92		
Chung	95		
Phần mềm PC (LG PC Suite)	103		
Cập nhật phần mềm điện thoại	106		
Cập nhật phần mềm điện thoại	106		
Thông tin về hướng dẫn sử dụng			
này	108		
Thông tin về hướng dẫn sử dụng			
này.....	108		
Thương hiệu	109		
DivX HD.....	109		
Dolby Digital Plus	109		
Phụ kiện.....	111		
Sửa lỗi	112		

Hướng dẫn sử dụng an toàn và hiệu quả

Vui lòng đọc các hướng dẫn đơn giản này. Không tuân theo các hướng dẫn này có thể gặp nguy hiểm hoặc vi phạm pháp luật.

Nếu xảy ra lỗi, công cụ phần mềm được tích hợp vào thiết bị của bạn sẽ thu thập nhật ký lỗi. Công cụ này chỉ thu thập dữ liệu cụ thể về lỗi, như cường độ tín hiệu, vị trí ID điện thoại trong cuộc gọi đột xuất và các ứng dụng được tải. Nhật ký lỗi chỉ được sử dụng để giúp xác định nguyên nhân gây ra lỗi. Những nhật ký này được mã hóa và chỉ trung tâm Sửa chữa được ủy quyền của LG mới có thể truy cập nếu bạn cần trả lại thiết bị để sửa chữa.

Tiếp xúc với năng lượng của sóng vô tuyến

Thông tin về tiếp xúc với sóng radio và Mức Hấp thụ Riêng (SAR).

Kiểu điện thoại di động LG-D855 này được thiết kế tuân theo yêu cầu hiện hành về an toàn khi tiếp xúc với sóng vô tuyến. Yêu cầu này được dựa trên các nguyên tắc khoa học bao gồm các giới hạn an toàn được đề ra để đảm bảo an toàn cho tất cả mọi người, bất kể tuổi tác và sức khỏe.

- Các nguyên tắc về tiếp xúc với sóng vô tuyến sử dụng một đơn vị đo được biết đến như là Mức Hấp thụ Riêng, hay SAR. Các thử nghiệm về SAR được thực hiện sử dụng phương pháp được tiêu chuẩn hoá với điện thoại truyền tín hiệu ở mức năng lượng được xác nhận cao nhất trong tất cả các dải tần được sử dụng.
- Có thể có sự khác biệt giữa các mức SAR của các kiểu điện thoại LG khác nhau, nhưng tất cả chúng đều được thiết kế để thoả mãn các nguyên tắc thích hợp đối với tiếp xúc với sóng vô tuyến.
- Giới hạn SAR được khuyến nghị bởi Ủy ban Quốc tế về Bảo vệ Phóng xạ Không ion hóa (ICNIRP) là 2 W/kg tính trung bình trên 10g mô.
- Giá trị SAR cao nhất cho kiểu điện thoại này được kiểm tra để sử dụng gần tai là 0,291 W/kg (10g) và khi đeo trên người là 0,269 W/Kg (10g).

Hướng dẫn sử dụng an toàn và hiệu quả

- Thiết bị này đáp ứng các tiêu chuẩn tiếp xúc RF khi cầm ở vị trí thông thường gần tai hoặc cách xa cơ thể ít nhất 1,5 cm. Khi sử dụng túi đeo, đai đeo hoặc ngăn chứa để mang điện thoại bên mình, bạn cần đảm bảo các thiết bị này không chứa kim loại và cách xa cơ thể ít nhất 1,5 cm. Để truyền các tệp dữ liệu hoặc tin nhắn, thiết bị này cần được kết nối với mạng một cách ổn định. Trong một số trường hợp, việc truyền các tin nhắn hoặc tệp dữ liệu có thể bị chậm trễ cho đến khi có được kết nối tốt. Đảm bảo các hướng dẫn riêng về khoảng cách nêu trên được tuân thủ cho đến khi việc truyền dữ liệu hoàn tất.

Bảo dưỡng và chăm sóc sản phẩm

CẢNH BÁO

Chỉ sử dụng pin, bộ sạc và những phụ kiện được chấp thuận cho sử dụng cùng với kiểu điện thoại cụ thể này. Việc sử dụng bất cứ loại nào khác có thể làm mất hiệu lực bất cứ sự chấp thuận hoặc bảo hành nào áp dụng cho điện thoại này và có thể gây nguy hiểm.

- Không được tháo rời các bộ phận của điện thoại. Mang đến một chuyên gia kỹ thuật dịch vụ đủ khả năng khi cần sửa chữa.
- Sửa chữa theo bảo hành, theo lựa chọn của LG, có thể bao gồm các bộ phận hoặc bảng mạch thay thế hoặc là mới hoặc được sửa lại, miễn là chúng có chức năng tương đương với bộ phận được thay thế.
- Để cách xa các thiết bị điện như là tivi, radio và máy tính cá nhân.
- Nên để điện thoại tránh xa những chỗ nóng như là lò sưởi hoặc bếp.
- Không đánh rơi.
- Không để thiết bị này chịu rung hoặc va đập cơ học.
- Hãy tắt điện thoại ở bất kỳ nơi nào được yêu cầu bởi các quy định đặc biệt. Ví dụ: không sử dụng điện thoại trong bệnh viện, nếu không nó có thể ảnh hưởng đến thiết bị y tế nhạy cảm.

- Không sử dụng điện thoại khi tay còn ướt và điện thoại đang được sạc pin. Nó có thể gây ra điện giật hoặc làm hỏng nặng điện thoại của bạn.
- Không sạc điện thoại gần vật liệu dễ cháy vì điện thoại có thể trở nên nóng và gây ra hỏa hoạn.
- Sử dụng vải khô để lau chùi bên ngoài của thiết bị (không sử dụng dung môi như là benzen, chất pha loãng hoặc rượu).
- Không sạc điện thoại khi đặt trên các vật dụng mềm.
- Nên sạc điện thoại ở những nơi thông gió.
- Không để thiết bị này chịu khói hoặc bụi quá mức.
- Không để điện thoại cạnh thẻ tín dụng hoặc vé tàu, xe; nó có thể ảnh hưởng tới thông tin trên các dải từ.
- Không nhấn lên màn hình bằng các vật cứng vì nó có thể làm hư hại điện thoại.
- Không để điện thoại tiếp xúc với chất lỏng hoặc hơi ẩm.
- Sử dụng các phụ kiện như tai nghe một cách cẩn thận. Không chạm vào anten một cách không cần thiết.
- Không sử dụng, chạm hoặc cố gắng tháo máy hoặc sửa chữa màn hình thủy tinh bị vỡ, mẻ hoặc nứt. Hư hỏng màn hình thủy tinh do lạm dụng hoặc sử dụng không đúng không được bảo hành theo chương trình bảo hành.
- Điện thoại của bạn là thiết bị điện tử có thể tạo nhiệt trong quá trình hoạt động bình thường. Tiếp xúc lâu và trực tiếp với da khi không có thông gió hợp lý có thể gây khó chịu hoặc cháy nhỏ. Vì vậy, hãy sử dụng cẩn thận khi cầm điện thoại hoặc ngay sau khi sử dụng.
- Nếu điện thoại bị ướt, rút điện thoại ngay lập tức để hong khô hoàn toàn. Không cố gắng tăng tốc quá trình hong khô bằng nguồn nhiệt bên ngoài, như lò, lò vi sóng hay máy sấy.
- Chất lỏng trong điện thoại bị ướt sẽ làm thay đổi màu sắc của nhân sản phẩm bên trong điện thoại. Hư hỏng thiết bị do tiếp xúc với chất lỏng sẽ không được bảo hành.

Sử dụng điện thoại hiệu quả

Các thiết bị điện tử

Tất cả điện thoại di động có thể bị nhiễu làm ảnh tới hoạt động của điện thoại.

- Không sử dụng điện thoại di động của bạn gần thiết bị y tế nếu không được phép. Tránh đặt điện thoại gần máy điều hoà nhịp tim, như trong túi ngực của bạn.
- Một số thiết bị trợ thính có thể bị gây nhiễu bởi điện thoại di động.
- Nhiều nhỏ hơn có thể ảnh hưởng tới tivi, đài, máy tính, v.v.
- Sử dụng điện thoại ở nhiệt độ từ 0°C đến 40°C nếu có thể. Để điện thoại tiếp xúc với nhiệt độ quá thấp hoặc quá cao có thể làm hư hỏng, hoạt động sai chức năng hoặc thậm chí nổ.

An toàn Giao thông

Kiểm tra luật và qui định về sử dụng điện thoại di động ở những vùng mà bạn lái xe.

- Không sử dụng điện thoại cầm tay khi lái xe.
- Tập trung hoàn toàn vào việc lái xe.
- Rời khỏi đường và đỗ xe lại trước khi thực hiện hoặc trả lời một cuộc gọi nếu điều kiện lái xe yêu cầu như vậy.
- Năng lượng RF có thể ảnh hưởng tới một số hệ thống điện trên xe của bạn như là dàn âm thanh và thiết bị an toàn.
- Khi xe bạn được trang bị túi khí, không làm cản trở bằng các vật lắp đặt cố định hoặc thiết bị không dây cầm tay hoặc được. Nó có thể làm túi khí không hoạt động hoặc gây ra chấn thương nguy hiểm trọng do hoạt động không đúng.
- Nếu bạn nghe nhạc trong khi ở ngoài, xin nhớ đặt âm lượng ở mức vừa phải để có thể nhận biết được những tiếng động xung quanh. Điều này đặc biệt quan trọng khi gần đường.

Tránh làm hư tai bạn



Để tránh làm hỏng thính giác, không nghe điện thoại ở mức âm lượng cao trong thời gian dài.

Khả năng nghe của bạn có thể bị ảnh hưởng nếu nghe quá to trong thời gian dài. Do vậy, chúng tôi khuyên bạn không bật hoặc tắt điện thoại cầm tay khi gần tai nghe. Chúng tôi cũng khuyên bạn nên đặt âm lượng nhạc và cuộc gọi ở mức vừa phải.

- Khi sử dụng tai nghe, giảm âm lượng nếu bạn không nghe thấy người khác nói gần bạn, hoặc nếu người ngồi cạnh bạn có thể nghe thấy những gì bạn đang nghe.

LƯU Ý: Áp suất âm thanh quá mạnh từ tai nghe trong điện thoại và tai nghe thường có thể gây tổn thương thính giác.

Bộ phận làm bằng thủy tinh

Một số bộ phận của điện thoại di động được làm bằng thủy tinh. Loại thủy tinh này có thể vỡ nếu điện thoại bị rơi trên bề mặt cứng hoặc khi va chạm mạnh. Nếu thủy tinh vỡ, không được chạm hoặc tháo máy. Dừng sử dụng điện thoại di động cho đến khi nhà cung cấp dịch vụ được ủy quyền thay thế thủy tinh đó.

Khu vực phá nổ

Không sử dụng điện thoại nơi có bắn phá bằng thuốc nổ. Tôn trọng các giới hạn và tuân theo các quy định hoặc nguyên tắc.

Hướng dẫn sử dụng an toàn và hiệu quả

Môi trường có khả năng dễ nổ

- Không sử dụng điện thoại ở điểm tiếp nhiên liệu.
- Không sử dụng gần nơi chứa nhiên liệu hoặc hóa chất.
- Không vận chuyển hoặc chứa khí, chất lỏng dễ cháy, hoặc chất nổ trong khoang xe có điện thoại hoặc các thiết bị phụ trợ của bạn.

Trên máy bay

Các thiết bị không dây có thể gây nhiễu trong máy bay.

- Tắt điện thoại di động của bạn trước khi lên máy bay.
- Không sử dụng điện thoại trên đất nếu không được phép.

Trẻ em

Để điện thoại ở một nơi an toàn ngoài tầm với của trẻ em. Điện thoại bao gồm các phần nhỏ nếu bị rời ra có thể gây nguy cơ ngạt thở.

Cuộc gọi Khẩn cấp

Cuộc gọi khẩn cấp có thể không thực hiện được trong tất cả các mạng di động. Do vậy, bạn đừng bao giờ chỉ dựa vào điện thoại di động của bạn để thực hiện các cuộc gọi khẩn cấp. Kiểm tra với nhà cung cấp dịch vụ địa phương của bạn.

Thông tin và chăm sóc pin

- Bạn không cần xả hết pin hoàn toàn trước khi sạc. Không giống các hệ thống pin khác, không có tác động bộ nhớ có thể làm tổn hại tới hoạt động của pin.

- Chỉ sử dụng pin và bộ sạc của LG. Bộ sạc của LG được thiết kế để có tuổi thọ tối đa cho pin.
- Không tháo rời hoặc đoản mạch pin.
- Thay pin khi nó không còn hoạt động ở mức có thể chấp nhận được. Bộ pin có thể được sạc hàng trăm lần trước khi cần thay thế.
- Sạc pin nếu nó đã được sử dụng trong một thời gian dài để làm tăng tối đa khả năng sử dụng.
- Không để bộ sạc pin tiếp xúc trực tiếp với ánh sáng mặt trời hoặc sử dụng nó ở nơi có độ ẩm cao như là bồn tắm.
- Không để pin ở nơi nóng hoặc lạnh, vì những điều kiện này có thể làm giảm hiệu quả hoạt động của pin.
- Có thể xảy ra hiện tượng nổ nếu thay thế không đúng loại pin. Vứt bỏ pin đã sử dụng theo chỉ dẫn.
- Nếu bạn cần thay pin, hãy mang điện thoại đến trung tâm dịch vụ hoặc đại lý được ủy quyền của LG Electronics để được hỗ trợ.
- Luôn rút bộ sạc ra khỏi ổ điện sau khi pin đã sạc đầy để tiết kiệm lượng điện tiêu thụ không cần thiết của bộ sạc.
- Tuổi thọ thực của pin phụ thuộc vào chế độ mạng, cài đặt sản phẩm, kiểu sử dụng, pin và điều kiện của môi trường.
- Không để những vật sắc cạnh như răng hoặc móng động vật tiếp xúc với pin. Làm như vậy có thể gây hỏa hoạn.

Hướng dẫn Chống trộm

Bạn có thể cài đặt thiết bị của mình để ngăn người khác sử dụng thiết bị nếu thiết bị đã được khôi phục cài đặt gốc mà không có sự cho phép của bạn. Ví dụ: nếu bạn bị mất thiết bị, bị ăn trộm hoặc bị xóa, chỉ những người có tài khoản Google hoặc thông tin khóa màn hình của bạn mới có thể sử dụng thiết bị.

Hướng dẫn sử dụng an toàn và hiệu quả

Tất cả những gì bạn cần để đảm bảo thiết bị được bảo vệ là:

- **Đặt khóa màn hình:** Nếu thiết bị của bạn bị mất hoặc bị ăn trộm nhưng bạn đã cài đặt khóa màn hình, thiết bị sẽ không bị xóa dữ liệu bằng cách sử dụng menu Cài đặt trừ khi màn hình của bạn được mở khóa.
- **Thêm tài khoản Google trên thiết bị của bạn:** Nếu thiết bị của bạn bị xóa nhưng bạn đã có tài khoản Google trên thiết bị, thiết bị sẽ không thể hoàn thành quá trình thiết lập cho đến khi bạn nhập lại thông tin tài khoản Google của mình.

Sau khi thiết bị được bảo vệ, bạn sẽ cần mở khóa màn hình hoặc nhập mật khẩu tài khoản Google của mình nếu bạn cần khôi phục cài đặt gốc. Điều này đảm bảo rằng bạn hoặc người mà bạn tin tưởng đang thực hiện việc khôi phục này.

LƯU Ý:

- Không được quên tài khoản và mật khẩu Google mà bạn đã thêm vào thiết bị trước khi thực hiện khôi phục cài đặt gốc. Nếu bạn không thể cung cấp thông tin tài khoản trong quá trình thiết lập, bạn sẽ không thể sử dụng thiết bị sau khi thực hiện khôi phục cài đặt gốc.


Tuyên bố về an toàn Laser

Cảnh báo!

Sản phẩm này sử dụng hệ thống Laser. Để đảm bảo sử dụng sản phẩm này hợp lý, vui lòng đọc hướng dẫn sử dụng này cẩn thận và giữ lại để tham khảo trong tương lai. Nếu thiết bị yêu cầu bảo trì, hãy liên hệ với trung tâm dịch vụ ủy quyền.

Người sử dụng điều khiển, điều chỉnh hoặc hiệu quả của các quy trình ngoài những quy trình được chỉ định ở đây có thể dẫn đến việc phơi nhiễm phóng xạ nguy hiểm.

Để tránh tiếp xúc trực tiếp với tia laser, không cố gắng mở lớp vỏ hoặc tiếp xúc trực tiếp với tia laser.

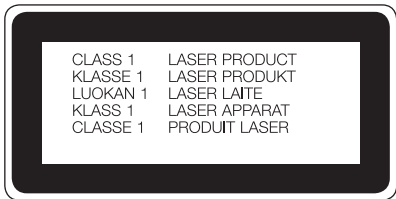

Hướng dẫn sử dụng an toàn và hiệu quả

Hướng dẫn sử dụng Bộ sạc Không dây

Đảm bảo sử dụng bộ sạc không dây chính hiệu hoặc bộ sạc tương thích đã được chứng nhận (theo tiêu chuẩn WPC Qi).

(Bộ sạc không dây được bán riêng.)

TUYÊN BỐ HỢP CHUẨN

Thông qua tài liệu này, **LG Electronics** tuyên bố **LG-D855** tuân thủ các yêu cầu thiết yếu và các quy định có liên quan khác của Chỉ thị **1999/5/EC**. Bạn có thể tìm thấy bản sao của tuyên bố hợp chuẩn này tại

<http://www.lg.com/global/declaration>

Thông báo quan trọng




Vui lòng đọc thông báo này trước khi bắt đầu sử dụng điện thoại của bạn!

Hãy kiểm tra xem các vấn đề bạn gặp phải với điện thoại có được mô tả trong phần này không trước khi mang điện thoại đi bảo hành hoặc gọi điện cho đại diện bán hàng.

1. Bộ nhớ điện thoại

Khi còn dưới 10% dung lượng bộ nhớ, điện thoại không thể nhận tin nhắn mới. Bạn cần kiểm tra bộ nhớ điện thoại và xóa một số dữ liệu, như ứng dụng hoặc tin nhắn, để giải phóng bộ nhớ.

Để gỡ cài đặt ứng dụng:

- 1 Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Chung** > **Ứng dụng**.
- 2 Khi tắt cả ứng dụng xuất hiện, cuộn tới và chọn ứng dụng bạn muốn gỡ cài đặt.
- 3 Nhấn **Gỡ cài đặt**.

2. Tối ưu hóa tuổi thọ của pin

Kéo dài thời gian sử dụng pin bằng cách tắt các tính năng mà bạn không phải chạy liên tục trong nền. Bạn có thể theo dõi cách thức ứng dụng và tài nguyên hệ thống tiêu thụ pin.

Kéo dài thời lượng pin điện thoại của bạn:



- Tắt các giao tiếp vô tuyến khi bạn không sử dụng. Nếu bạn không sử dụng Wi-Fi, Bluetooth® hoặc GPS, hãy tắt chúng.
- Giảm độ sáng màn hình và đặt thời gian khóa màn hình ngắn hơn.
- Tắt tự động đồng bộ hóa cho Gmail, Lịch, Danh bạ và các ứng dụng khác.
- Một số ứng dụng bạn đã tải xuống có thể làm giảm mức pin.

Thông báo quan trọng

- Trong khi sử dụng các ứng dụng đã tải xuống, hãy kiểm tra mức sạc pin.

LƯU Ý: Nếu bạn vô tình nhấn phải Phím Nguồn/Khóa khi để thiết bị trong túi quần, màn hình sẽ tự động tắt để tiết kiệm pin.

Để kiểm tra mức pin:

- Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Chung** > **Giới thiệu về điện thoại** > **Pin**.

Tình trạng của pin (đang sạc hoặc không sạc) và mức pin (phần trăm đã sạc) được hiển thị ở trên cùng của màn hình.

Để theo dõi và kiểm soát mức pin được sử dụng:

- Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Chung** > **Giới thiệu về điện thoại** > **Pin** > **Cách sử dụng pin**.

Thời gian sử dụng pin được hiển thị trên màn hình. Đây là thời gian kể từ lần cuối bạn kết nối điện thoại với nguồn điện, hoặc nếu đang được nối với nguồn, đó là thời gian điện thoại được chạy lần cuối trên nguồn pin. Màn hình hiển thị các ứng dụng hoặc dịch vụ sử dụng nguồn điện từ pin từ mức cao nhất đến thấp nhất.

3. Trước khi cài đặt ứng dụng nguồn mở và hệ điều hành




CẢNH BÁO

Nếu bạn cài đặt và sử dụng hệ điều hành không phải do nhà sản xuất cung cấp, điện thoại của bạn có thể sẽ bị trục trặc. Ngoài ra, điện thoại của bạn sẽ không được bảo hành nữa.

CẢNH BÁO

Để bảo vệ điện thoại và dữ liệu cá nhân của bạn, chỉ tải xuống các ứng dụng từ nguồn tin cậy như Play Store™. Nếu có các ứng dụng được cài đặt không đúng cách trên điện thoại của bạn, điện thoại có thể không hoạt động bình thường hoặc có thể xảy ra lỗi nghiêm trọng. Bạn phải gỡ cài đặt các ứng dụng đó cùng tất cả dữ liệu và cài đặt liên quan khỏi điện thoại.

4. Sử dụng hình mở khóa

Đặt hình mở khóa để đảm bảo an toàn cho điện thoại của bạn. Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Hiển thị** > **Khoá màn hình** > **Chọn khoá màn hình** > **Kiểu mẫu**. Thao tác này sẽ mở ra một màn hình để hướng dẫn bạn vẽ hình mở khóa. Bạn phải tạo PIN Dự phòng để đảm bảo an toàn trong trường hợp bạn quên hình mở khóa.

Cảnh báo: Tạo một tài khoản Google trước khi đặt hình mở khóa và ghi nhớ PIN Dự phòng bạn đã tạo khi tạo hình khóa máy.

CẢNH BÁO

Cẩn trọng khi sử dụng khóa máy bằng hình.

Bạn cần nhớ hình mở khóa bạn đã đặt. Bạn không thể truy cập điện thoại nếu bạn sử dụng hình mở khóa sai 5 lần. Bạn có 5 cơ hội để nhập Hình mở khóa, PIN hoặc mật khẩu. Nếu bạn đã sử dụng hết 5 cơ hội, bạn có thể thử lại sau 30 giây.

Khi bạn không thể nhớ Hình mở khóa, PIN hoặc Mật khẩu:

< **Nếu bạn đã quên hình** >



Nếu bạn đã đăng nhập vào tài khoản Google của mình trên điện thoại nhưng nhập sai hình 5 lần, chạm vào nút **Quên kiểu?** nằm ở cuối màn hình. Sau đó, bạn sẽ được yêu cầu đăng nhập bằng Tài khoản Google của mình hoặc bạn phải nhập PIN Dự phòng mà bạn đã nhập khi tạo Hình khóa máy.

Thông báo quan trọng

LƯU Ý: Nếu bạn chưa đăng nhập Tài khoản Google của mình và quên Hình Mở khóa, bạn cần nhập PIN Dự phòng.

5. Mở và chuyển đổi ứng dụng

Thực hiện đa nhiệm dễ dàng với Android vì bạn có thể chạy nhiều ứng dụng cùng lúc. Không cần thoát ứng dụng trước khi mở ứng dụng khác. Sử dụng và chuyển đổi giữa các ứng dụng đang mở. Android quản lý từng ứng dụng, dừng và khởi động chúng khi cần để đảm bảo các ứng dụng không hoạt động không sử dụng tài nguyên khi không cần thiết.

- 1 Nhấn **Phím Gần đây** . Danh sách các ứng dụng được sử dụng gần đây sẽ hiển thị.
- 2 Chạm vào ứng dụng bạn muốn truy cập. Thao tác này không dừng ứng dụng trước đang chạy dưới nền trên điện thoại. Đảm bảo chạm **Phím Trở về**  để thoát khỏi ứng dụng sau khi sử dụng.
- Để xóa một ứng dụng khỏi danh sách ứng dụng gần đây, gạt hình xem trước ứng dụng sang bên trái hoặc bên phải. Để xóa tất cả các ứng dụng, chạm **Xóa tất cả**.

6. Truyền nhạc, ảnh đã chụp và video bằng cách sử dụng Đồng bộ hóa phương tiện (MTP)

- 1 Kết nối thiết bị với máy tính bằng cáp USB đi kèm với điện thoại.
- 2 Mở ô thông báo và chọn **Thiết bị phương tiện (MTP)**.
- 3 Một cửa sổ bật lên trên máy tính, cho phép bạn truyền dữ liệu mong muốn.

LƯU Ý:

- Trình điều khiển LG Android Platform cần được cài đặt trên máy tính của bạn để phát hiện ra điện thoại.
- Kiểm tra các yêu cầu để sử dụng **Thiết bị phương tiện (MTP)**.

7. Giữ thẳng điện thoại

Giữ thẳng điện thoại di động như với điện thoại thông thường. Điện thoại của bạn có một anten trong. Cần thận để không làm xước hoặc làm hư hỏng bộ phận sau vì sẽ ảnh hưởng đến hiệu suất.

Khi thực hiện/nhận cuộc gọi hoặc gửi/nhận dữ liệu, tránh cắm vào phần dưới của điện thoại vì đó là nơi đặt anten. Làm như vậy có thể ảnh hưởng đến chất lượng cuộc gọi.

8. Không ngắt kết nối điện thoại khi bạn bật/tắt PC

Nhớ ngắt kết nối điện thoại khỏi PC khi bật hoặc tắt PC vì nó có thể gây ra lỗi trên PC.

9. Chế độ điều khiển phím cứng

Nếu màn hình điện thoại bị hỏng hoặc vỡ, bạn có thể trả lời cuộc gọi đến hoặc tắt báo thức bằng phím cứng.

- 1 Tắt điện thoại.
 - 2 Nhấn và giữ đồng thời **Phím Nguồn/Khóa** và **Phím Âm lượng** trong hơn 6 giây để vào chế độ Điều khiển phím cứng.
 - 3 Nhấn **Phím Âm lượng** để di chuyển đến tùy chọn mong muốn, sau đó nhấn **Phím Nguồn/Khóa** để xác nhận.
- **Trả lời cuộc gọi:** Nhấn **Phím Âm lượng** đồng thời.


Thông báo quan trọng

- **Tắt chuông báo:** Khi báo thức kêu, nhấn và giữ **Phím Tăng Âm lượng** hoặc **Phím Giảm Âm lượng** để dừng báo thức.

LƯU Ý: Nếu bạn sử dụng điện thoại bị vỡ màn hình thủy tinh, điện thoại có thể vỡ nhiều hơn hoặc bạn có thể bị thương. Đảm bảo đến trung tâm dịch vụ ủy quyền của LG để sửa điện thoại.

Làm quen với điện thoại của bạn

Tổng quan về điện thoại

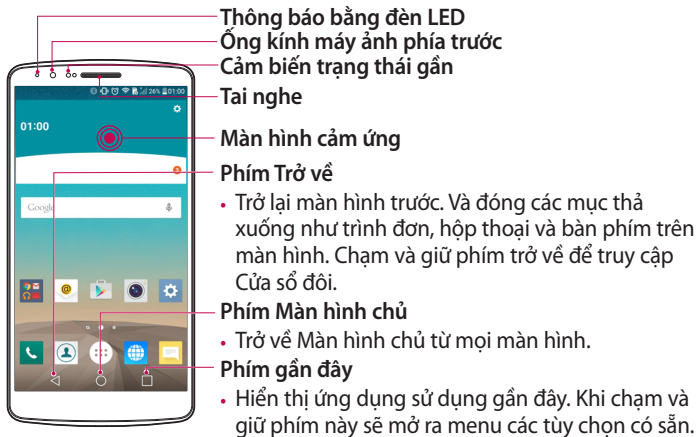


LƯU Ý: Cảm biến trạng thái gần kề

Khi nhận và thực hiện cuộc gọi, cảm biến trạng thái gần kề tự động tắt đèn nền bằng cách cảm biến khi điện thoại ở gần tai. Chức năng này kéo dài tuổi thọ của pin.

Làm quen với điện thoại của bạn

CẢNH BÁO

Đặt một vật nặng lên điện thoại hoặc ngồi lên điện thoại có thể làm hỏng màn hình LCD và các chức năng của màn hình cảm ứng. Không che cảm biến trạng thái gần kề LCD bằng phim bảo vệ. Điều này có thể làm bộ cảm biến hoạt động sai.

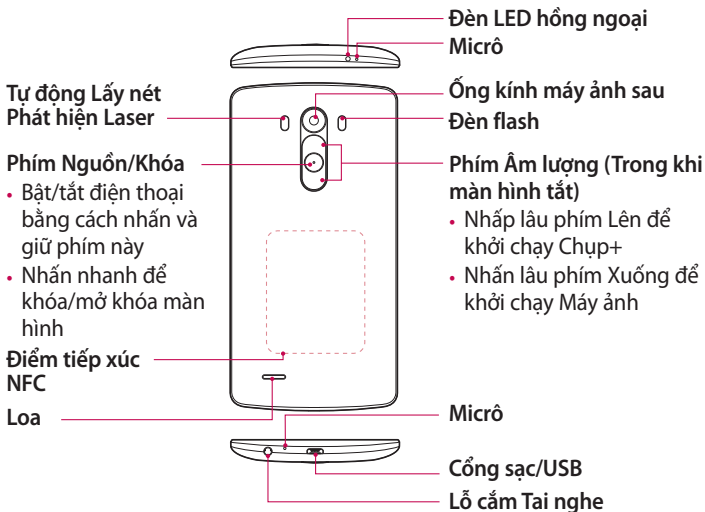


CẢNH BÁO

- Bộ phận này bao quanh ngăn chứa pin.
- Cẩn thận không làm hỏng điểm tiếp xúc NFC trên điện thoại, đây là một bộ phận của anten NFC.


Lắp thẻ SIM và pin

Trước khi bạn có thể bắt đầu khám phá điện thoại mới, bạn cần thiết lập điện thoại.

- 1 Để tháo nắp sau, cầm chặt điện thoại trong tay. Nâng nắp sau lên bằng ngón cái của tay còn lại như minh họa trong hình.

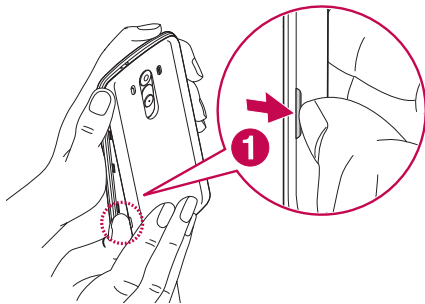


- 2 Trượt thẻ SIM vào khe cắm phía dưới cho thẻ SIM như minh họa trong hình. Đảm bảo vùng tiếp xúc màu vàng trên thẻ quay xuống dưới.

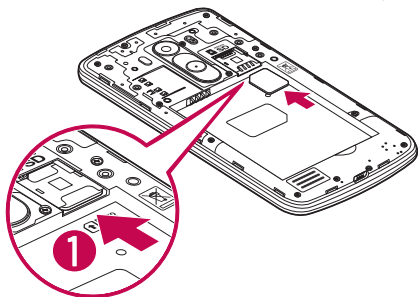


Làm quen với điện thoại của bạn

- 3 Lắp pin vào vị trí bằng cách canh cho các điểm tiếp xúc màu vàng trên điện thoại và pin (1) thẳng hàng và nhấn xuống sao cho pin khớp vào vị trí (2).

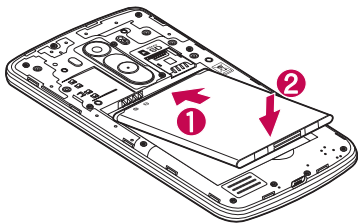

- 4 Canh nắp sau cho thẳng với ngăn chứa pin (1) và nhấn xuống sao cho nắp khớp vào vị trí (2).

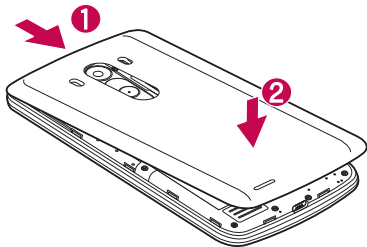


Sạc điện thoại

Hãy sạc đầy pin trước khi sử dụng điện thoại lần đầu tiên. Sử dụng bộ sạc để sạc pin. Cũng có thể sử dụng máy tính để sạc thiết bị bằng cách kết nối chúng bằng cáp USB.

CẢNH BÁO

Chỉ sử dụng bộ sạc, pin và cáp được LG chấp thuận. Nếu bạn sử dụng bộ sạc, pin hoặc cáp không được phê duyệt, việc sạc pin có thể bị trễ hoặc xuất hiện thông báo về việc sạc chậm, hoặc có thể gây nổ pin hoặc gây hư hại thiết bị mà không được bảo hành.

Giắc cắm sạc nằm dưới đáy điện thoại. Lắp bộ sạc và cắm vào ổ cắm điện.

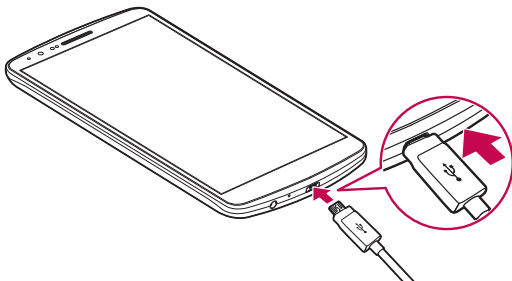

LƯU Ý:

- Pin phải được sạc đầy lần đầu tiên để nâng cao tuổi thọ pin.
- Không mở nắp sau khi đang sạc điện thoại.

Làm quen với điện thoại của bạn



Sử dụng thẻ nhớ


Thiết bị của bạn hỗ trợ sử dụng thẻ nhớ microSD™, microSDHC™ hoặc microSDXC™ tới 2TB. Những thẻ nhớ này được thiết kế dành riêng cho điện thoại di động và các thiết bị cực nhỏ khác và là nơi lý tưởng để lưu trữ các tệp đa phương tiện như nhạc, chương trình, video và ảnh để sử dụng với điện thoại.

Lắp thẻ nhớ:

Lắp thẻ nhớ vào khe cắm phía trên cho thẻ nhớ. Đảm bảo vùng tiếp xúc màu vàng trên Thẻ nhớ quay xuống dưới.

Để tháo thẻ nhớ an toàn:

Chạm  > tab Ứng dụng >  Cài đặt > tab Chung > Bộ lưu trữ & USB > tab  Thẻ SD.

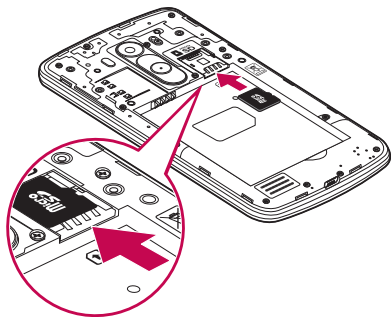




LƯU Ý:

- Chỉ sử dụng thẻ nhớ tương thích với điện thoại của bạn. Sử dụng thẻ nhớ không tương thích có thể làm hỏng thẻ và dữ liệu lưu trữ trong thẻ, cũng như điện thoại.
- Cần ngắt kết nối thẻ nhớ trước khi tháo khỏi điện thoại để tránh hư hỏng hoặc dữ liệu lưu trên thẻ.

Để định dạng thẻ nhớ:


Thẻ nhớ có thể đã được định dạng. Nếu thẻ nhớ chưa được định dạng, bạn phải định dạng thẻ nhớ trước khi bạn có thể sử dụng.

LƯU Ý: Tất cả tệp trên thẻ nhớ đều bị xóa khi định dạng thẻ.

- 1 Chạm  để mở danh sách ứng dụng.
- 2 Di chuyển và chạm  **Cài đặt** > tab **Chung** > **Bộ lưu trữ & USB**.
- 3 Chạm **Thẻ SD**.
- 4 Chạm tùy chọn  > **Cài đặt** > **Định dạng**.


LƯU Ý: Nếu đã có nội dung trong thẻ nhớ, cấu trúc thư mục sẽ khác sau khi định dạng vì tất cả các tệp sẽ bị xóa.

Khóa và mở khóa màn hình

Nếu bạn không sử dụng điện thoại một lúc, màn hình sẽ tự động tắt và khóa. Điều này giúp tránh thao tác nhấn do vô tình nhấn và tiết kiệm pin. Khi bạn không sử dụng điện thoại, nhấn **phím Nguồn/Khóa**  để khóa điện thoại.

Nếu có bất kỳ chương trình nào đang chạy khi bạn khóa màn hình, chúng có thể vẫn chạy trong chế độ Khóa. Bạn nên thoát tất cả chương trình trước khi vào chế độ Khóa để tránh cước phí không cần thiết (ví dụ: cuộc gọi điện thoại, truy cập web và truyền dữ liệu).

Làm quen với điện thoại của bạn



Để đánh thức điện thoại, nhấn **phím Nguồn/Khóa** . Màn hình Khóa xuất hiện. Chạm và trượt màn hình Khóa theo bất kỳ hướng nào để mở khóa Màn hình chủ. Màn hình cuối mà bạn đã xem sẽ mở ra.

Knock Code

Tính năng Knock Code cho phép bạn chạm vào màn hình với hình Knock Code riêng của mình sử dụng màn hình được chia bởi 4 hình vuông để dễ dàng bật hoặc tắt màn hình. Bạn có thể vô hiệu tính năng này trong cài đặt Khóa màn hình.

LƯU Ý:

- Nếu bạn nhập sai Knock Code 6 lần, bạn sẽ bắt buộc được đưa đến phần đăng nhập/PIN dự phòng cho tài khoản google của bạn.
- Sử dụng đầu ngón tay thay vì móng tay để chạm vào màn hình để bật hoặc tắt màn hình.
- Khi không sử dụng Knock Code, bạn có thể sử dụng chức năng Knock On bằng cách chạm vào màn hình.

- 1 Từ Màn hình chủ, chạm  **Phím Ứng dụng** >  **Cài đặt** > tab **Hiển thị**.
- 2 Chạm **Khóa màn hình** > **Chọn khóa màn hình** > **Knock Code**.
- 3 Chạm vào các hình vuông theo một hình để đặt knock code của bạn.



Mở khóa màn hình bằng Knock Code

Bạn có thể mở khóa màn hình bằng cách chạm hình Knock Code mà bạn đã đặt.

- 1 Khi màn hình tắt, nhấn phím Nguồn.
- 2 Chạm hình Knock Code mà bạn đã đặt trước đó.

KnockON (Nhấn màn hình để mở điện thoại)

Bạn có thể khóa hoặc mở khóa màn hình chỉ cần nhấn hai lần.


Nhấn nhanh hai lần vào giữa màn hình để mở khóa màn hình. Để khóa màn hình, nhấn hai lần vào thanh trạng thái trong màn hình bất cứ (ngoại trừ trên kính ngấm của máy ảnh) hoặc một vùng trống trên Màn hình chủ.

LƯU Ý: Khi bật màn hình, đảm bảo bạn không che cảm biến trạng thái gần kề. Khi che như vậy sẽ làm tắt màn hình ngay lập tức sau khi vừa bật lên để tránh lúc bật lên bất thường trong túi quần hoặc túi xách.

Tai nghe Stereo có micrô

Khi đã nối tai nghe, bạn có thể thưởng thức âm nhạc hoặc xem video với âm thanh nổi và dễ dàng chuyển từ nhạc/video sang nhận và kết thúc cuộc gọi.

< Trước >




Các nút Tăng/Giảm âm lượng

Nút Gọi/Kết thúc


- Đối với một cuộc gọi đến, nhấn để nhận hoặc kết thúc cuộc gọi.
- Khi bạn nghe nhạc, nhấn để dừng phát lại hoặc tiếp tục. Nhấn hai lần để phát bản nhạc tiếp theo.


Làm quen với điện thoại của bạn


< Sau >



1 Cắm tai nghe như minh họa bên dưới.

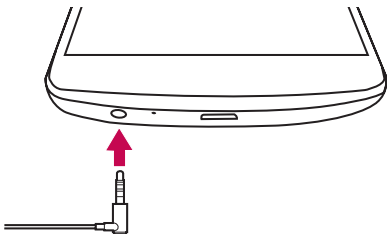

2 Nếu có cuộc gọi đến khi đang cắm tai nghe vào điện thoại, nhấn  để nhận cuộc gọi.

3 Để kết thúc cuộc gọi, nhấn  một lần nữa.

Màn hình chủ

Mẹo cho màn hình cảm ứng

Sau đây là một số mẹo về cách điều hướng trên điện thoại của bạn.

Nhấn hoặc chạm – Nhấn bằng một ngón tay để chọn mục, liên kết, lối tắt và chữ cái ở bàn phím trên màn hình.

Chạm và giữ – Chạm và giữ một mục trên màn hình bằng cách nhấn và không nhấc ngón tay lên cho đến khi tác vụ xuất hiện. Ví dụ: để mở tùy chọn có sẵn của liên hệ, chạm và giữ liên hệ trong Danh bạ cho đến khi menu ngữ cảnh mở ra.

Kéo – Chạm và giữ một mục một lúc, sau đó, không nhấc tay lên, di chuyển ngón tay trên màn hình cho đến khi bạn đến vị trí đích. Bạn có thể kéo các mục trên Màn hình chủ để đặt lại chúng.

Gạt hoặc trượt – Để gạt hoặc trượt, di chuyển nhanh ngón tay qua màn hình mà không dừng lại khi bạn nhấn vào màn hình ngay từ đầu (nên bạn đừng kéo một mục thay thế). Ví dụ, bạn có thể trượt màn hình lên hoặc xuống để cuộn qua một danh sách, hoặc duyệt qua các Màn hình chủ khác nhau bằng cách trượt từ trái sang phải (và ngược lại).

Chạm đúp – Chạm đúp để phóng to trang web hoặc bản đồ. Ví dụ: chạm đúp nhanh một mục của trang web để điều chỉnh mục đó cho vừa với độ rộng của màn hình. Bạn cũng có thể nhấn hai lần để phóng to và thu nhỏ hình ảnh khi đang xem.

Kẹp vào để thu phóng – Sử dụng ngón trỏ và ngón cái kẹp lại hoặc tách ra để phóng to hoặc thu nhỏ khi sử dụng trình duyệt, Bản đồ hoặc khi duyệt hình ảnh.


Xoay màn hình – Từ nhiều ứng dụng và menu, hướng của màn hình điều chỉnh theo hướng thực của thiết bị.


Màn hình chủ

LƯU Ý:

- Để chọn một mục, hãy nhấn vào điểm giữa của biểu tượng.
- Không nhấn quá mạnh; màn hình cảm ứng đủ nhạy cảm để nhận biết được một lần chạm nhẹ nhưng dứt khoát.
- Sử dụng đầu ngón tay để nhấn vào tùy chọn bạn muốn. Hãy cẩn thận không nhấn bất kỳ phím nào khác.

Màn hình chủ

Màn hình chủ là điểm bắt đầu cho nhiều ứng dụng và chức năng và cho phép bạn thêm các mục như phím tắt ứng dụng hoặc các tiện ích của Google để giúp bạn truy cập nhanh vào thông tin và ứng dụng. Đây là trang nền mặc định và có thể truy cập từ bất cứ menu nào bằng cách nhấn .

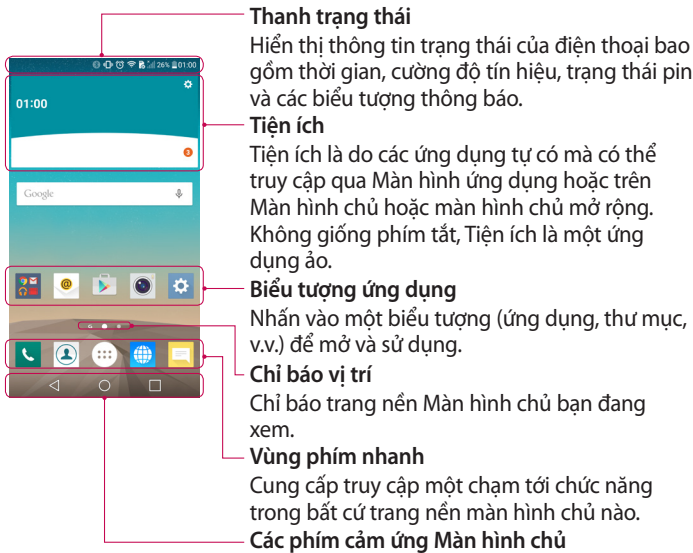

Màn hình chủ mở rộng

Hệ điều hành cung cấp nhiều trang nền Màn hình chủ để cung cấp nhiều không gian hơn để thêm các biểu tượng, tiện ích và hơn thế nữa.

- ▶ Trượt tay của bạn sang trái hoặc phải trên Màn hình chủ.

Màn hình chủ

Tùy chỉnh Màn hình chủ

Bạn có thể tùy chỉnh Màn hình chủ bằng cách thêm ứng dụng, tiện ích hoặc thay đổi hình nền.

Để thêm các mục trên Màn hình chủ

- 1 Bấm và giữ phần còn trống trên Màn hình chủ.
- 2 Trong menu ứng dụng, chọn mục bạn muốn thêm. Bạn sẽ nhìn thấy mục đã thêm này trên Màn hình chủ.
- 3 Kéo mục này đến vị trí bạn muốn và nhấn ngón tay.

MẸO! Để thêm một biểu tượng ứng dụng vào Màn hình chủ từ menu Ứng dụng, chạm và giữ ứng dụng bạn muốn thêm.

Để xóa một mục khỏi Màn hình chủ

- ▶ Màn hình chủ > chạm và giữ biểu tượng bạn muốn xóa > kéo nó đến



Để thêm một ứng dụng như một Phím nhanh

- ▶ Từ menu Ứng dụng hoặc trên Màn hình chủ, chạm và giữ một biểu tượng ứng dụng và kéo tới vùng Phím nhanh. Bạn có thể thêm tối đa 7 ứng dụng.

Để xóa một ứng dụng khỏi vùng phím nhanh

- ▶ Chạm và giữ phím nhanh mong muốn và kéo phím ra

LƯU Ý: Không thể gỡ bỏ phím Ứng dụng.

Để tùy chỉnh biểu tượng ứng dụng trên Màn hình chủ

- 1 Chạm và giữ một biểu tượng ứng dụng đến khi biểu tượng được mở khóa từ vị trí hiện tại. Sau đó thả biểu tượng vào màn hình. Biểu tượng chỉnh sửa sẽ xuất hiện ở góc trên bên phải của ứng dụng.
- 2 Chạm vào biểu tượng ứng dụng một lần nữa và chọn thiết kế và kích thước biểu tượng mong muốn.
- 3 Chạm OK để lưu thay đổi.


Quay lại các ứng dụng sử dụng gần đây

- 1 Nhấn . Danh sách các ứng dụng được sử dụng gần đây sẽ hiển thị.
- 2 Chạm vào một biểu tượng để mở ứng dụng. Hoặc nhấn \triangleleft để quay lại màn hình trước.

Ô thông báo

Thông báo cho bạn biết có tin nhắn mới đến, sự kiện lịch và báo thức cũng như sự kiện sắp diễn ra, chẳng hạn như khi bạn đang đàm thoại. Khi có thông báo, biểu tượng thông báo sẽ xuất hiện ở trên cùng của màn hình. Các biểu tượng dành cho thông báo đang chờ xuất hiện ở bên trái còn các biểu tượng hệ thống như Wi-Fi hay mức pin nằm ở bên phải.


LƯU Ý: Các tùy chọn sẵn có có thể thay đổi tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.

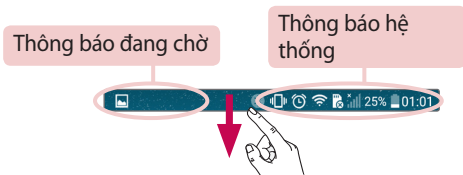


Màn hình chủ

Mở ô thông báo

Gạt xuống từ thanh trạng thái để mở ngăn thông báo.

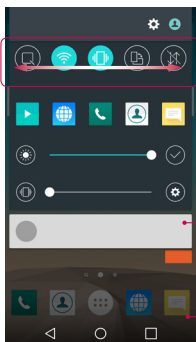

Vùng bật/tắt nhanh

Nhấn vào phím bật/tắt nhanh để bật/tắt. Chạm và giữ phím để truy cập menu cài đặt của chức năng. Để xem nhiều phím bật/tắt hơn, gạt sang trái hoặc phải. Nhấn  để xóa, thêm hoặc sắp xếp lại các phím bật/tắt.

Thông báo

Các thông báo hiện tại được liệt kê, mỗi thông báo có mô tả ngắn gọn. Nhấn một thông báo để xem.

Để đóng ô thông báo, chạm và kéo tab về phía trên cùng của màn hình.













Biểu tượng chỉ báo trên Thanh Trạng thái

Biểu tượng chỉ báo xuất hiện trên thanh trạng thái nằm ở trên cùng của màn hình để báo cáo cuộc gọi nhớ, tin nhắn mới, sự kiện lịch, trạng thái thiết bị và thông tin khác.






Các biểu tượng xuất hiện ở trên cùng của màn hình cung cấp thông tin về trạng thái của thiết bị. Các biểu tượng liệt kê trong bảng dưới đây nằm trong số các biểu tượng phổ biến nhất.

Biểu tượng	Mô tả
	Chưa lắp thẻ SIM
	Không có tín hiệu mạng
	Đang bật chế độ trên máy bay
	Kết nối vào mạng Wi-Fi
	Đã kết nối tai nghe có dây
	Cuộc gọi đang tiến hành
	Cuộc gọi nhớ
	Bluetooth bật
	NFC đang bật
	Cảnh báo hệ thống
	Báo thức đã được đặt
	Có thư thoại mới

Biểu tượng	Mô tả
	Chuong báo tắt
	Đang bật chế độ rung
	Đã sạc đầy
	Đang sạc
	Điện thoại được kết nối với máy tính qua cáp USB
	Đang tải dữ liệu xuống
	Đang tải dữ liệu lên
	GPS bật
	Có thư Gmail mới
	Có tin nhắn Hangouts mới
	Chọn phương thức nhập
	Bật chia sẻ nội dung máy chủ phương tiện truyền thông

Màn hình chủ


Biểu tượng	Mô tả	Biểu tượng	Mô tả
	Văn bản mới		Điểm phát Wi-Fi đang bật
	Một bài hát hiện đang phát		

LƯU Ý: Vị trí của các biểu tượng trong thanh trạng thái có thể khác nhau theo chức năng hoặc dịch vụ.


Bàn phím ảo

Bạn cũng có thể nhập văn bản bằng bàn phím trên màn hình. Bàn phím ảo tự động xuất hiện trên màn hình khi bạn cần nhập văn bản. Để hiển thị bàn phím theo cách thủ công, chỉ cần chạm vào trường văn bản nơi bạn muốn nhập văn bản.


Sử dụng bàn phím & nhập văn bản


 Nhấn một lần để viết hoa chữ cái tiếp theo bạn nhập. Nhấn hai lần để viết hoa tất cả.

 Nhấn chuyển sang bàn phím số và ký hiệu.

 Chạm để truy cập cài đặt bàn phím. Chạm và giữ để truy cập chế độ đầu vào bằng giọng nói, chế độ chữ viết tay hoặc Trang lưu Clip.

 Nhấn để nhập dấu cách.

 Chạm để tạo một dòng mới.

 Nhấn để xóa ký tự đứng trước.

Nhập chữ có dấu

Khi bạn chọn tiếng Pháp hoặc tiếng Tây Ban Nha làm ngôn ngữ nhập văn bản, bạn có thể nhập các ký tự đặc biệt của tiếng Pháp hoặc tiếng Tây Ban Nha (ví dụ: "á").



Ví dụ: để nhập "á", nhấn và giữ phím "a" cho tới khi phím phóng to lớn hơn và hiển thị các ký tự của những ngôn ngữ khác.

Sau đó chọn ký tự đặc biệt mà bạn muốn.

Thiết lập tài khoản Google

Khi bạn bật điện thoại lần đầu, bạn có cơ hội kích hoạt mạng, đăng nhập vào Tài khoản Google của bạn và chọn cách bạn muốn sử dụng một số dịch vụ Google nhất định.

Để thiết lập tài khoản Google:

- Đăng nhập Tài khoản Google từ màn hình thiết lập được nhắc.
HOẶC
- Chạm  >  > tab **Ứng dụng** > chọn một ứng dụng Google như **Gmail** > **HIỂU RÕI** > chọn **Thêm địa chỉ email** để tạo tài khoản mới hoặc thêm tài khoản của bạn.

Khi bạn đã thiết lập tài khoản Google trên điện thoại, điện thoại sẽ tự động đồng bộ hóa với tài khoản Google của bạn trên Web.

Danh bạ, thư Gmail, sự kiện Lịch và những thông tin khác từ các ứng dụng và dịch vụ trên Web này sẽ được đồng bộ hóa với điện thoại của bạn. (Điều này tùy thuộc vào cài đặt đồng bộ hóa của bạn).

Sau khi đăng nhập, bạn có thể sử dụng Gmail™ và tận dụng các dịch vụ của Google trên điện thoại.

Kết nối với Mạng và Thiết bị

Wi-Fi

Với Wi-Fi, bạn có thể sử dụng truy cập Internet tốc độ cao trong vùng phủ sóng của điểm truy cập (AP) không dây. Tận hưởng Internet không dây với Wi-Fi mà không phải trả thêm phí.




Kết nối với mạng Wi-Fi

Để sử dụng Wi-Fi trên điện thoại, bạn cần truy cập điểm truy cập không dây hoặc "điểm phát sóng". Một số điểm truy cập mở và bạn chỉ cần kết nối vào mạng. Một số điểm truy cập khác được ẩn hoặc sử dụng các tính năng bảo mật; bạn phải cấu hình điện thoại sao cho có thể kết nối với chúng.

Tắt Wi-Fi khi không sử dụng để kéo dài tuổi thọ của pin.

LƯU Ý: Nếu bạn nằm ngoài vùng Wi-Fi hoặc đặt Wi-Fi là **TẮT**, nhà điều hành mạng di động có thể tính thêm phí cho việc sử dụng dữ liệu di động.

Bật Wi-Fi và kết nối với mạng Wi-Fi

- 1 Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Mạng** > **Wi-Fi**.
- 2 Đặt **Wi-Fi** thành **BẬT** để bật và bắt đầu dò mạng Wi-Fi có sẵn.
- 3 Nhấn lại vào menu Wi-Fi để xem danh sách các mạng Wi-Fi hoạt động và trong phạm vi.
 - Các mạng an toàn có biểu tượng chiếc khóa.
- 4 Nhấn vào một mạng để kết nối.
 - Nếu mạng được bảo mật, bạn được nhắc nhập mật khẩu hoặc thông tin đăng nhập khác. (Hỏi quản trị mạng để biết thông tin).
- 5 Thanh trạng thái hiển thị các biểu tượng cho biết trạng thái Wi-Fi.

Kết nối với Mạng và Thiết bị

Bluetooth




Bạn có thể sử dụng Bluetooth để gửi dữ liệu bằng cách chạy ứng dụng tương ứng, nhưng không phải từ menu Bluetooth như trên hầu hết các điện thoại di động khác.

LƯU Ý:

- LG không chịu trách nhiệm cho việc mất mát, chặn hoặc sử dụng không đúng dữ liệu được gửi hoặc nhận qua tính năng không dây Bluetooth.
- Luôn đảm bảo rằng bạn chia sẻ và nhận dữ liệu với các thiết bị được tin cậy và bảo vệ phù hợp. Nếu có vật cản giữa các thiết bị, khoảng cách hoạt động có thể bị giảm.
- Một số thiết bị, đặc biệt là những thiết bị chưa được Bluetooth SIG kiểm tra hay chấp thuận, có thể không tương thích với thiết bị của bạn.

Bật Bluetooth và ghép nối điện thoại của bạn với thiết bị Bluetooth

Bạn phải ghép nối thiết bị của mình với thiết bị khác trước khi kết nối với thiết bị đó.

- 1 Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Mạng** > đặt **Bluetooth** thành **BẬT**.
- 2 Chạm lại vào menu **Bluetooth**.
- 3 Chọn thiết bị bạn muốn ghép nối từ danh sách.

Khi ghép nối thành công, thiết bị của bạn sẽ kết nối với thiết bị kia.

LƯU Ý: Một số thiết bị, đặc biệt tai nghe hoặc bộ công cụ rảnh tay trên xe hơi có thể có mã PIN Bluetooth cố định, như 0000. Nếu thiết bị khác có mã PIN, bạn sẽ được yêu cầu nhập mã này.

Gửi dữ liệu bằng tính năng không dây Bluetooth




- 1 Chọn một tệp hoặc một mục, chẳng hạn như liên hệ, sự kiện lịch hoặc tệp đa phương tiện, từ ứng dụng thích hợp hoặc từ **Tải xuống**.

2 Chọn tùy chọn gửi dữ liệu qua Bluetooth.

LƯU Ý: Phương pháp chọn tùy chọn có thể thay đổi theo loại dữ liệu.

3 Tìm kiếm và ghép nối với thiết bị hỗ trợ Bluetooth.

Nhận dữ liệu bằng tính năng không dây Bluetooth

1 Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Mạng** > đặt **Bluetooth** thành **BẬT**.

2 Chọn **GHÉP NỐI** để xác nhận rằng bạn sẵn sàng nhận dữ liệu từ thiết bị.

Chia sẻ kết nối dữ liệu của điện thoại

Truy cập Internet qua USB và điểm phát sóng Wi-Fi di động là những tính năng tuyệt vời khi không có kết nối không dây. Bạn có thể chia sẻ kết nối dữ liệu di động của điện thoại với một máy tính qua cáp USB: USB tethering. Bạn cũng có thể chia sẻ kết nối dữ liệu của điện thoại với nhiều thiết bị cùng lúc bằng cách đưa điện thoại của bạn vào điểm phát sóng Wi-Fi di động.

Khi điện thoại của bạn đang chia sẻ kết nối dữ liệu, một biểu tượng sẽ xuất hiện trong thanh trạng thái và dưới dạng một thông báo tiến trình trong ngăn thông báo.

Để có thông tin mới nhất về điểm truy cập Internet và điểm phát sóng di động, bao gồm cả hệ điều hành được hỗ trợ và các chi tiết khác, truy cập <http://www.android.com/tether>.

Để chia sẻ kết nối dữ liệu của điện thoại dưới dạng điểm phát sóng Wi-Fi di động

1 Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Mạng** > **Điểm truy cập Internet** > chuyển chế độ **Điểm phát Wi-Fi** để kích hoạt.

2 Nhập mật khẩu và nhấn **Lưu**.

Kết nối với Mạng và Thiết bị

MẸO! Nếu máy tính của bạn đang chạy Windows 7 hoặc một phiên bản gần đây mang hơi hướng của Linux (chẳng hạn như Ubuntu), thông thường bạn sẽ không cần phải chuẩn bị máy tính để chia sẻ kết nối. Nhưng nếu bạn đang chạy các phiên bản Windows cũ hơn hoặc một hệ điều hành khác, bạn có thể cần chuẩn bị máy tính để thiết lập kết nối mạng qua USB. Để biết thông tin cập nhật nhất về các hệ điều hành hỗ trợ truy cập Internet qua USB và cách cài cấu hình chúng, truy cập <http://www.android.com/tether>.

Để đổi tên hoặc đảm bảo an toàn cho điểm phát sóng di động

Bạn có thể thay đổi tên của mạng Wi-Fi (SSID) của điện thoại và đảm bảo an toàn cho mạng Wi-Fi.

1 Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Mạng** > **Điểm truy cập Internet** > **Điểm phát Wi-Fi**.

2 Nhấn **Cài đặt điểm phát Wi-Fi**.

- Hộp thoại **Cài đặt điểm phát Wi-Fi** sẽ mở ra.
- Bạn có thể thay đổi **Wi-Fi Tên (SSID)** mà các thiết bị khác nhìn thấy khi quét tìm mạng Wi-Fi.
- Bạn cũng có thể nhấn menu **Bảo Mật** để cấu hình mạng với bảo mật Wi-Fi Protected Access 2 (WPA2) bằng khóa dùng chung trước (PSK).
- Nếu bạn chạm vào tùy chọn bảo mật **WPA2 PSK**, một trường mật khẩu sẽ được thêm vào hộp thoại **Cài đặt hotspot Wi-Fi**. Nếu bạn nhập mật khẩu, bạn cần nhập mật khẩu đó khi bạn kết nối với điểm phát sóng của điện thoại bằng máy tính hoặc thiết bị khác. Bạn có thể đặt **Mở** trong menu **Bảo Mật** để xóa bảo mật khỏi mạng Wi-Fi.





3 Nhấn **Lưu**.

CHÚ Ý! Nếu bạn đặt tùy chọn bảo mật là **Mở**, bạn không thể ngăn việc sử dụng trái phép các dịch vụ trực tuyến của những người khác và bạn có thể phải trả thêm phí. Để tránh việc sử dụng trái phép, bạn nên giữ tùy chọn bảo mật hoạt động.

Wi-Fi Direct



Wi-Fi Direct hỗ trợ kết nối trực tiếp giữa các thiết bị có hỗ trợ Wi-Fi mà không cần điểm truy cập. Do Wi-Fi direct tiêu hao nhiều pin, bạn nên cắm điện thoại vào nguồn điện trong khi sử dụng tính năng Wi-Fi Direct. Kiểm tra trước mạng Wi-Fi & Wi-Fi Directed của bạn và đảm bảo các người dùng được kết nối với cùng mạng.

Để bật Wi-Fi Direct:

- 1 Chạm  >  > tab **Ứng dụng** >  **Cài đặt** > tab **Mạng** > **Wi-Fi**.
- 2 Chạm **Phím Menu**  > **Wi-Fi nâng cao** > **Wi-Fi Direct**.
- 3 Chọn thiết bị để kết nối từ danh sách thiết bị quét được.

Sử dụng SmartShare

SmartShare sử dụng công nghệ DLNA (Digital Living Network Alliance) để chia sẻ nội dung số qua mạng không dây. Cả hai thiết bị phải có chứng nhận DLNA để hỗ trợ tính năng này. Bạn có thể tận hưởng tính năng SmartShare trên Thư viện và Nhạc.


- 1 Trên nội dung bạn muốn phát hoặc truyền, chạm  hoặc **Phím Menu**  > **SmartShare**.
- 2 Nhấn **Play** hoặc **Beam** trong hộp thoại.
 - **Play:** Bạn có thể truyền nội dung qua TV, loa Bluetooth, v.v.
 - **Beam:** Bạn có thể gửi nội dung đến thiết bị Bluetooth hoặc điện thoại hay máy tính bảng LG được hỗ trợ SmartShare Beam*.
*SmartShare Beam sẽ nhanh chóng truyền nội dung đa phương tiện qua Wi-Fi Direct.
- 3 Nhấn vào thiết bị để phát hoặc nhận trên danh sách.
 - Nếu thiết bị không có trong danh sách, đảm bảo trên thiết bị đó đã bật Wi-Fi, Wi-Fi Direct, hoặc kết nối Bluetooth. Và nhấn **Quét lại**
- 4 Nhấn **Gửi**.

Kết nối với Mạng và Thiết bị


Để thưởng thức nội dung trên điện thoại của bạn từ các thiết bị xung quanh như máy tính hoặc một thiết bị di động

1 Để kết nối các thiết bị lân cận với điện thoại của bạn, chạm **Các thiết bị lân cận** trên các ứng dụng **Thư viện**, **Nhạc** như dưới đây.

<Thư viện>

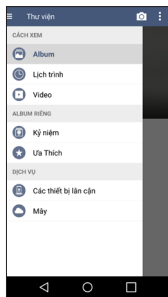

<Nhạc>

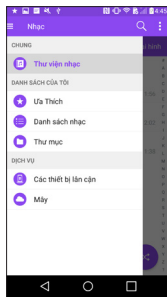

- Đảm bảo điện thoại của bạn và các thiết bị xung quanh được kết nối với cùng một mạng Wi-Fi.
- Đảm bảo đã bật tính năng DLNA trên thiết bị xung quanh.

2 Chạm vào thiết bị cần kết nối.

Nếu thiết bị không có trên danh sách, chạm **Tìm kiếm các thiết bị gần**. Sau khi kết nối, bạn có thể thưởng thức nội dung từ thiết bị xung quanh trên điện thoại của mình.

Kết nối máy tính bằng cáp USB

Tìm hiểu cách kết nối thiết bị với máy tính bằng cáp USB trong chế độ kết nối USB.

Truyền nhạc, ảnh và video bằng chế độ thiết bị lưu trữ dữ liệu USB

- 1 Kết nối thiết bị với máy tính bằng cáp USB đi kèm với điện thoại.
- 2 Mở ô thông báo và chọn **Thiết bị phương tiện (MTP)**.
- 3 Một cửa sổ bật lên trên máy tính, cho phép bạn truyền dữ liệu mong muốn.

LƯU Ý:

- Trình điều khiển LG Android Platform cần được cài đặt trên máy tính của bạn để phát hiện ra điện thoại.
- Kiểm tra các yêu cầu để sử dụng **Thiết bị phương tiện (MTP)**.

Đồng bộ hóa với Windows Media Player

Đảm bảo Windows Media Player đã cài đặt trên máy tính của bạn.





- 1 Sử dụng cáp USB để kết nối điện thoại với máy tính đã cài đặt Windows Media Player.
 - 2 Chọn tùy chọn **Thiết bị phương tiện (MTP)**. Khi đã kết nối, một cửa sổ bật lên sẽ xuất hiện trên máy tính.
 - 3 Mở Windows Media Player để đồng bộ hóa các tệp nhạc.
 - 4 Sửa hoặc nhập tên của thiết bị trong cửa sổ bật lên (nếu cần thiết).
 - 5 Chọn và kéo tệp nhạc bạn muốn tới danh sách đồng bộ hóa.
 - 6 Bắt đầu đồng bộ hóa.
- Cần đáp ứng các yêu cầu sau để đồng bộ hóa với Windows Media Player.


Mục	Yêu cầu
Hệ điều hành	Microsoft Windows XP SP2, Vista hoặc cao hơn
Phiên bản Window Media Player	Windows Media Player 10 trở lên

- Nếu phiên bản Windows Media Player thấp hơn 10, hãy cài đặt phiên bản 10 hoặc cao hơn.



Cuộc gọi

Thực hiện cuộc gọi


- 1 Nhấn  để mở bàn phím.
- 2 Nhập số điện thoại sử dụng bàn phím. Để xóa một chữ số, nhấn .
- 3 Chạm  để thực hiện cuộc gọi.
- 4 Để kết thúc cuộc gọi, nhấn biểu tượng **Kết thúc** .

MẸO! Để nhập "+" để thực hiện cuộc gọi quốc tế, chạm và giữ .

Gọi từ danh bạ

- 1 Nhấn  để mở danh bạ.
- 2 Cuộn qua danh sách liên hệ hoặc nhập các chữ cái đầu tiên của liên hệ bạn muốn gọi bằng cách nhấn **Tìm liên hệ**.
- 3 Trong danh sách, nhấn  bạn muốn gọi.

Trả lời và từ chối cuộc gọi

Khi bạn nhận cuộc gọi ở trạng thái Khóa, gạt  theo hướng bất kỳ để Trả lời cuộc gọi đến.






Gạt  theo hướng bất kỳ để Từ chối cuộc gọi đến.

LƯU Ý: Chạm hoặc vuốt **Từ chối tin nhắn** nếu bạn muốn gửi tin nhắn cho người gọi.

Điều chỉnh âm lượng cuộc gọi

Để điều chỉnh âm lượng trong khi gọi, sử dụng phím Tăng âm lượng và giảm âm lượng ở cạnh bên trái của điện thoại.

Thực hiện cuộc gọi thứ hai

- 1 Trong cuộc gọi đầu tiên, nhấn **phím Menu**  > **Thêm cuộc gọi** và quay số. Bạn cũng có thể vào danh sách các số đã gọi gần đây bằng cách chạm **Nhật ký cuộc gọi** hoặc có thể tìm kiếm liên hệ bằng cách chạm **Liên hệ** và chọn liên hệ bạn muốn gọi. Ngoài ra, bạn có thể tìm kiếm liên hệ bằng cách chạm **Ưu Thích** hoặc **Nhóm**.
- 2 Chạm  để thực hiện cuộc gọi.
- 3 Cả hai cuộc gọi sẽ được hiển thị trên màn hình gọi. Cuộc gọi đầu của bạn sẽ bị khóa và chuyển sang chế độ chờ.
- 4 Nhấn vào số được hiển thị để chuyển đổi giữa hai cuộc gọi. Hoặc nhấn  **Kết hợp cuộc gọi** để bắt đầu cuộc gọi hội nghị.
- 5 Để kết thúc cuộc gọi hiện thời, nhấn **Kết Thúc** hoặc nhấn  trượt thanh thông báo xuống rồi chọn biểu tượng **Kết thúc c.gọi** .


LƯU Ý: Bạn sẽ bị tính cước cho mỗi cuộc gọi bạn thực hiện.

Xem nhật ký cuộc gọi

Trên Màn hình chủ, chạm  và chọn **Nhật ký cuộc gọi**.



Xem danh sách đầy đủ tất cả các cuộc gọi đã gọi, đã nhận và bị nhờ.

MẸO!

- Nhấn bất kỳ mục nhập nhật ký cuộc gọi nào để xem ngày giờ và thời lượng cuộc gọi.
- Chạm phím Menu  sau đó chạm **Xóa tất cả** để xóa tất cả các mục đã lưu.

Cài đặt cuộc gọi

Bạn có thể cài cấu hình cài đặt cuộc gọi trên điện thoại chẳng hạn như chuyển tiếp cuộc gọi, cũng như các tính năng đặc biệt khác mà nhà khai thác mạng cung cấp.


- 1 Trong màn hình chủ, nhấn .
- 2 Nhấn .
- 3 Nhấn **Cài đặt cuộc gọi** và chọn tùy chọn mà bạn muốn điều chỉnh.

Danh bạ



Thêm liên hệ vào điện thoại và đồng bộ hóa chúng với liên hệ trong tài khoản Google hoặc tài khoản khác có hỗ trợ đồng bộ danh bạ.

Tìm kiếm liên hệ

Trên Màn hình chủ

- 1 Nhấn  để mở danh bạ.
- 2 Nhấn **Tim kiếm liên hệ** và nhập tên liên hệ bằng bàn phím.


Thêm liên hệ mới

- 1 Nhấn , nhập số của liên hệ mới, rồi nhấn **phím Menu** . Chạm **Thêm vào Liên Hệ > Liên hệ mới**.
- 2 Nếu bạn muốn thêm ảnh vào liên hệ mới, nhấn vào vùng ảnh. Chọn từ **Chụp ảnh** hoặc **Chọn từ thư viện**.
- 3 Nhấn **Thêm trường khác**, nhập chi tiết về liên hệ của bạn.
- 4 Nhấn **Lưu**.

Liên hệ yêu thích


Bạn có thể phân loại các liên hệ được gọi thường xuyên làm liên hệ ưa thích.

Thêm liên hệ vào liên hệ ưa thích



- 1 Nhấn  để mở danh bạ.
- 2 Bấm vào một liên hệ để xem chi tiết.
- 3 Nhấn vào ngôi sao ở góc bên phải của tên liên hệ. Ngôi sao sẽ chuyển sang màu vàng.

Danh bạ

Xóa liên hệ khỏi danh sách ưa thích

- 1 Nhấn  để mở danh bạ.
- 2 Chạm tab **Ưa Thích** và chọn liên hệ để xem chi tiết.
- 3 Nhấn vào ngôi sao màu vàng ở bên phải của tên liên hệ. Ngôi sao chuyển sang màu trắng và liên hệ được xóa khỏi danh sách ưa thích của bạn.

Tạo nhóm



- 1 Nhấn  để mở danh bạ.
- 2 Nhấn **Nhóm** và nhấn **phím Menu** . Chọn **Nhóm mới**.
- 3 Nhập tên cho nhóm mới. Bạn có thể đặt nhạc chuông cho nhóm mới tạo.
- 4 Chạm **Lưu** để lưu nhóm.

LƯU Ý: Nếu bạn xoá nhóm, các liên hệ được chỉ định vào nhóm đó sẽ không bị mất. Chúng vẫn còn trong danh bạ.


Nhắn tin


Điện thoại của bạn kết hợp SMS, MMS vào trong một trình đơn dễ sử dụng và trực quan.

Gửi tin nhắn

- 1 Nhấn  trên màn hình chủ, và nhấn  để mở tin nhắn trống.
- 2 Nhập tên liên hệ hoặc số điện thoại vào trường **Tới**. Khi bạn nhập tên liên hệ, liên hệ phù hợp sẽ xuất hiện. Bạn có thể chạm vào người nhận được đề xuất. Bạn có thể thêm nhiều liên hệ.

LƯU Ý: Bạn sẽ bị tính phí trên mỗi tin nhắn chữ cho mỗi người mà bạn gửi tin nhắn đến.

- 3 Nhấn vào trường **Viết tin nhắn** và bắt đầu soạn tin nhắn của bạn.
- 4 Nhấn  để mở menu Tùy chọn. Chọn từ **Tin nhắn nhanh**, **Chèn biểu tượng**, **Gửi đi theo lịch trình**, **Thêm chủ đề** và **Hủy**.

MẸO! Bạn có thể nhấn vào biểu tượng  để đính kèm tệp bạn muốn chia sẻ cùng tin nhắn.

- 5 Nhấn **Gửi** để gửi tin nhắn.

CẢNH BÁO:



- Giới hạn 160 ký tự có thể thay đổi theo quốc gia tùy vào ngôn ngữ và cách thức mã hóa SMS.
- Nếu bạn thêm một hình, video hoặc tệp âm thanh vào tin nhắn SMS thì tin nhắn này sẽ tự động được chuyển đổi thành tin nhắn MMS và bạn sẽ bị tính phí tương ứng.

Hộp chuỗi

Tin nhắn (SMS, MMS) trao đổi với bên khác có thể được hiển thị theo trình tự thời gian để bạn có thể xem tổng quan cuộc nói chuyện một cách thuận tiện.

Thay đổi cài đặt tin nhắn

Cài đặt tin nhắn của điện thoại được xác định sẵn để bạn có thể gửi tin nhắn ngay lập tức. Bạn có thể thay đổi cài đặt dựa theo sở thích.

- Chạm  trên màn hình Chủ, chạm  sau đó chạm **Cài đặt**.

E-mail

Bạn có thể sử dụng ứng dụng Email để đọc email từ các dịch vụ như Gmail. Ứng dụng Email hỗ trợ các loại tài khoản sau: POP3, IMAP và Exchange.






Nhà cung cấp dịch vụ hoặc quản trị viên hệ thống của bạn có thể cung cấp các cài đặt tài khoản bạn cần.

Quản lý tài khoản email





Lần đầu bạn mở ứng dụng **Email**, một trình hướng dẫn cài đặt mở ra để giúp bạn thiết lập tài khoản email.

Sau khi thiết lập ban đầu, Email sẽ hiển thị nội dung của hộp thư đến.

Để thêm tài khoản email khác:

- Chạm  >  > tab **Ứng dụng** >  **Email** > chạm  > **Cài đặt** > 
Thêm tài khoản.





Để thay đổi cài đặt chung của email:

- Chạm  >  > tab **Ứng dụng** >  **Email** > chạm  > **Cài đặt** > **Cài đặt chung.**

Để xóa tài khoản email:





- Chạm  >  > tab **Ứng dụng** >  **Email** > chạm  > **Cài đặt** > chạm  > **Xóa tài khoản** > Chọn tài khoản cần xóa > **Gỡ bỏ** > chọn **Có.**

Làm việc với thư mục tài khoản

- Chạm  >  > tab **Ứng dụng** >  **Email** > chạm  và chọn **Thư mục.** Mỗi tài khoản đều có thư mục Hộp thư đến, Hộp thư đi, Thư đã gửi và Nháp. Tùy thuộc vào các tính năng do nhà cung cấp dịch vụ của tài khoản hỗ trợ, bạn có thể có các thư mục bổ sung.

Soạn và gửi email

Để soạn và gửi thư

- 1 Khi đang trong ứng dụng **Email**, nhấn .
- 2 Nhập địa chỉ của người nhận thư. Khi bạn nhập văn bản, các địa chỉ trùng khớp sẽ được gợi ý từ Danh bạ.
- 3 Nhấn  để thêm Cc/Bcc và nhấn  để đính kèm tệp, nếu cần.
- 4 Nhập nội dung của thư.
- 5 Nhấn .

MẸO! Khi có email mới đến Hộp thư đến, bạn sẽ được thông báo bằng âm thanh hoặc rung.

Máy ảnh và Video

Bạn có thể sử dụng máy ảnh hoặc máy quay để chụp và chia sẻ ảnh và video. Điện thoại của bạn trang bị máy ảnh 13 megapixel với tính năng tự động lấy nét cho phép bạn chụp ảnh và quay video sắc nét.



LƯU Ý: Đảm bảo vệ sinh ống kính bảo vệ bằng vải sợi trước khi chụp ảnh. Nắp ống kính bị tẩy làm bẩn có thể làm cho ảnh bị mờ khi sử dụng hiệu ứng "halo".

Để mở ứng dụng Máy ảnh


Từ màn hình Chủ, chạm tab  >  > tab Ứng dụng > Máy ảnh .

HOẶC

Chạm vào biểu tượng Máy ảnh  từ Màn hình chủ.

MEO! Nếu bạn đã đặt điện thoại sử dụng kiểu Gạt để mở khóa, từ màn hình khóa, chỉ cần nhấn Phím Nguồn/Phím Khóa , ở mặt sau điện thoại, sau đó kéo biểu tượng Máy ảnh  lên trên để mở ứng dụng Máy ảnh.

Làm quen với kính ngắm

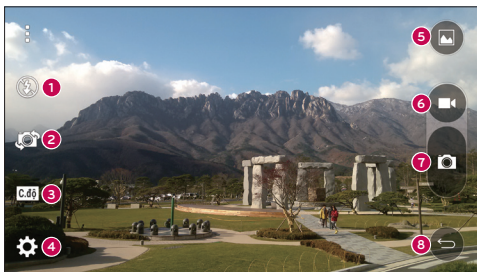

- 1 **Flash** – Chạm để **Bật**, **Tắt** flash hoặc đặt thành **Tự động**.
- 2 **Chuyển đổi máy ảnh** – Chạm để chuyển đổi ống kính máy ảnh phía sau và ống kính máy ảnh phía trước.





Máy ảnh và Video

- 3 C. độ** – Chế độ để chọn chế độ từ **Tự động**, **Lấy nét ma thuật**, **Panorama**, **Chế độ kép** và **Chuyển động chậm**.
- 4 Cài đặt** – Chạm để điều chỉnh các cài đặt máy ảnh và video sau.
- 5 Thư viện** – Chạm để truy cập Thư viện.
- 6 Nút Quay Video** – Chạm để bắt đầu quay video.
- 7 Nút chụp ảnh** – Nhấn để chụp ảnh.
- 8 Thoát** – Chạm để đóng menu đã chọn hoặc thoát ứng dụng Máy ảnh.

Chụp ảnh





Chụp ảnh bằng máy ảnh tích hợp chỉ đơn giản như chọn một đối tượng, hướng ống kính và nhấn một nút.


Để chụp ảnh:



- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Máy ảnh** .
- 2 Đóng khung cho đối tượng trên màn hình.
- 3 Một hình vuông quanh đối tượng cho biết rằng máy ảnh đã lấy nét.
- 4 Chạm  để chụp ảnh. Ảnh của bạn sẽ được tự động lưu vào Thư viện.

Quay Video


Ngoài việc chụp ảnh, bạn có thể quay, xem và gửi video bằng máy ảnh video tích hợp trên điện thoại của mình.

- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Máy ảnh** .
- 2 Đóng khung cho đối tượng trên màn hình.
- 3 Chạm  để bắt đầu quay video.
- 4 Thời lượng quay được hiển thị ở phần trên cùng của màn hình.

LƯU Ý: Chạm  để chụp ảnh trong khi quay video.





5 Nhấn  để tạm dừng quay video. Bạn có thể tiếp tục quay lại bằng cách chạm .

HOẶC

6 Chạm  để dừng ghi hình. Video của bạn sẽ được tự động lưu vào Thư viện.

Cài đặt Máy ảnh và Video

Từ chế độ máy ảnh, chạm vào mỗi biểu tượng để điều chỉnh các cài đặt máy ảnh sau.

- **Flash** : Chạm để **Bật**, **Tắt** flash hoặc đặt thành **Tự động**.
- **Chuyển đổi máy ảnh** : Để chuyển đổi ống kính máy ảnh phía sau và ống kính máy ảnh phía trước.
- **C. độ** : Chế độ để chọn chế độ từ **Tự động**, **Lấy nét ma thuật**, **Panorama**, **Chế độ kép** và **Chuyển động chậm**.
 - ▶ **Tự động**: Chụp một kiểu ảnh tự động.
 - ▶ **Lấy nét ma thuật**: Tiêu điểm ma thuật cho phép bạn chọn lại tiêu điểm sau khi chụp ảnh.
 - ▶ **Panorama**: Tạo một bức ảnh lớn ở chế độ toàn cảnh. Giữ điện thoại nằm ngang, nhấn màn trập để bắt đầu và từ từ quét máy ảnh qua cảnh.
 - ▶ **Chế độ kép**: Chụp ảnh hoặc quay video bằng cả hai ống kính máy ảnh. Chạm và giữ màn hình nhỏ để chỉnh cỡ hoặc di chuyển.
 - ▶ **Chuyển động chậm**: Cho phép bạn quay video ở tỷ lệ khung hình cao để bạn có thể xem video dưới dạng chuyển động chậm.
- **Cài đặt** : Để điều chỉnh các cài đặt máy ảnh và video sau.
 - ▶ **Dynamic Tone (HDR)**: Kết hợp các ảnh được chụp ở nhiều độ phơi sáng vào một ảnh tối ưu để có được một bức ảnh đẹp hơn trong các điều kiện ánh sáng kém.

Máy ảnh và Video

- ▶ **Cỡ hình:** Đặt kích cỡ cho ảnh của bạn. Chọn từ **13M 4160x3120, W10M 4160x2340, 9M 3120x3120** hoặc **3M 2048x1536**. Đặt kích cỡ video. Chọn từ **UHD 3840x2160, FHD 1920x1080** hoặc **HD 1280x720**.
- ▶ **Chụp khi nói Cheese:** Cho phép bạn chụp ảnh bằng khẩu lệnh. Khi bật, bạn chỉ cần nói "Cheese", "Smile", "Whiskey", "Kimchi" hoặc "LG" để chụp ảnh.
- ▶ **Bộ hẹn giờ:** Đặt bộ hẹn giờ cho máy ảnh của bạn. Tính năng này rất lý tưởng nếu bạn muốn có mặt trong bức ảnh.
- ▶ **Lưới:** Tính năng này rất dễ sử dụng để chụp ảnh đẹp hơn theo hướng ngang và dọc.
- ▶ **Thẻ SD:** Đặt vị trí bộ nhớ cho ảnh của bạn. Chọn từ **IN** hoặc **SD**. Menu này chỉ xuất hiện khi thẻ SD được lắp vào.
- ▶ **Trợ giúp:** Cho phép bạn tìm hiểu cách hoạt động của một chức năng. Biểu tượng này cung cấp cho bạn hướng dẫn nhanh.


Tự động Lấy nét Nhiều điểm

Khi bạn chụp ảnh, chức năng Tự động Lấy nét Nhiều điểm (AF) vận hành tự động và sẽ cho phép bạn nhìn thấy một hình ảnh rõ nét.

Chế độ kép

Tính năng Chế độ kép cho phép bạn chụp ảnh hoặc quay video bằng cả máy ảnh phía trước và máy ảnh phía sau cùng lúc.

- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Máy ảnh** .
- 2 Chạm  > .

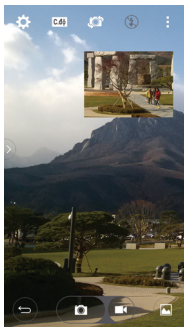

LƯU Ý: Kéo màn hình nhỏ để di chuyển xuống vị trí bạn muốn. Chạm và giữ màn hình nhỏ để chỉnh cỡ. Nhấn vào màn hình nhỏ để chuyển đổi màn hình.

- 3 Chạm  để chụp ảnh. Chạm  để bắt đầu ghi hình kép.
- 4 Chạm  để dừng ghi kép.

Chụp ảnh bằng cử chỉ tay


Chụp ảnh bằng cử chỉ tay. Để chụp ảnh, giơ tay lên cho đến khi máy ảnh phía trước phát hiện tay và một hộp xuất hiện trên màn hình.

Để chụp ảnh

Có hai cách thức để sử dụng tính năng Chụp ảnh bằng cử chỉ tay.

- Giơ tay lên với lòng bàn tay xòe mở cho đến khi máy ảnh trước phát hiện ra và xuất hiện một ô trên màn hình. Sau đó nắm tay lại để bắt đầu bộ hẹn giờ, cho phép bạn có thời gian để sẵn sàng.
- Giơ tay lên với bàn tay nắm chặt cho đến khi máy ảnh trước phát hiện ra và xuất hiện một ô trên màn hình. Sau đó xòe tay ra để bắt đầu bộ hẹn giờ, cho phép bạn có thời gian để sẵn sàng.

Máy ảnh và Video

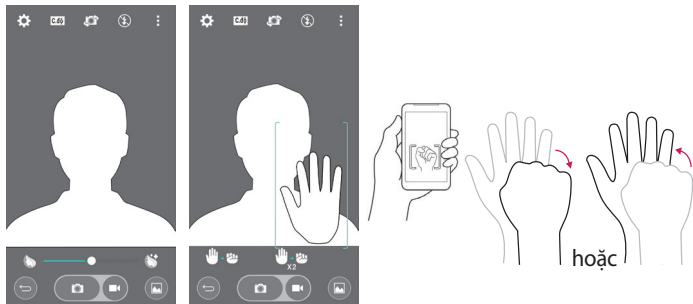

Siêu Thu phóng

Bạn có thể thu phóng lên tới 8 lần trong khi chụp ảnh.

MẸO! Chức năng này vận hành tự động trong khi phóng to và thu nhỏ.

LƯU Ý: Giữ tay ổn định không di chuyển. Tính năng này không hoạt động với một số chức năng Đối tượng có thể bị che khuất khi chụp ảnh các đối tượng di chuyển nhanh.

Xem Ảnh của bạn

Thư viện là nơi bạn có thể truy cập Thư viện các ảnh được lưu trên máy ảnh. Bạn có thể xem ảnh trong một trình chiếu, chia sẻ ảnh với bạn bè và xóa cũng như chỉnh sửa ảnh.




- 1 Từ màn hình Chủ, chạm tab > > tab **Ứng dụng** > **Thư viện** .
- 2 Chọn một vị trí và chạm vào một hình ảnh để xem ảnh của bạn.


Tùy chọn Thư viện






Ứng dụng Thư viện cho bạn xem các ảnh và video trong bộ nhớ, bao gồm những ảnh bạn đã chụp bằng ứng dụng Máy ảnh và những ảnh bạn đã tải

về từ web hoặc các vị trí khác.

Nếu bạn có một Tài khoản Google trên điện thoại, bạn cũng sẽ xem được các album web trong Thư viện.





- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Thư viện**  để xem những ảnh được lưu trong bộ nhớ.
 - ▶ Kéo lên hoặc xuống để xem thêm album.
- 2 Chạm vào một album để mở và xem nội dung. (Các ảnh và video trong album được hiển thị theo trình tự thời gian.)
- 3 Chạm vào một ảnh trong album để xem ảnh đó.



- ▶ Chạm lại vào một nhóm ảnh để hiển thị những biểu tượng sau:
 -  **Máy ảnh:** mở Máy ảnh.
 -  **Chia sẻ:** Bạn có thể chia sẻ ảnh bằng các phương pháp khác nhau như Tin nhắn hoặc Bluetooth.
 -  **Xóa:** Xóa ảnh.
- ▶ Chạm một hình ảnh trong album sau đó chạm  vào những tùy chọn sau: **Đời, Sao chép, Thực hiện cắt dán, Khóa, Hiển thị các tập tin bị khóa, Trình chiếu và Xoay.**
- ▶ Chạm vào **Phím Quay lại**  để quay lại màn hình trước.





Gán ảnh






Sau khi chụp ảnh, gán ảnh làm ID ảnh cho một mục nhập Danh bạ hoặc làm ảnh nền Màn hình chủ (hình nền).

- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Thư viện** .
- 2 Chạm vào một album và chạm vào một hình ảnh để xem.
- 3 Khi ảnh hiển thị, chạm  > **Đặt hình làm**.
- 4 Chọn một tùy chọn.
 - ▶ **Ảnh của liên hệ** để gán ảnh cho một mục nhập Liên hệ làm ID ảnh. Chạm vào một mục nhập từ Danh bạ, cắt ảnh và chạm vào **OK** để gán ảnh.
 - ▶ **Hình nền Khóa màn hình** để gán ảnh làm hình nền cho màn hình khóa của bạn.
 - ▶ **Hình Nền** để gán ảnh làm hình nền, cắt ảnh và chạm vào **ĐẶT HÌNH NỀN** để gán ảnh.
 - ▶ **Hình nền màn hình chính** để gán ảnh làm hình nền, cắt ảnh và chạm vào **OK** để gán ảnh.




Tùy chọn Video

Thư viện là nơi bạn có thể truy cập Thư viện các hình ảnh video được lưu. Bạn có thể xem video, chia sẻ video với bạn bè và xóa cũng như chỉnh sửa video.

- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Thư viện**  để xem các video được lưu trong bộ nhớ.
 - ▶ Cuộn lên hoặc xuống để xem thêm album.
- 2 Chạm vào một album để mở và xem nội dung. (Các ảnh và video trong album được hiển thị theo trình tự thời gian.)
- 3 Chạm vào một video để xem. Bạn có thể truy cập các tùy chọn sau:
 - ▶  **Chỉnh sửa**: Chạm vào đây để chỉnh sửa video của bạn.

- ▶  **QSlide:** Cho phép xếp chồng màn hình điện thoại của bạn để thực hiện đa nhiệm dễ dàng.
- ▶  **SmartShare:** Chia sẻ các tệp đa phương tiện với các thiết bị được DLNA chứng nhận.
- ▶  **Menu:** Chạm để truy cập các tùy chọn **T.ệ m.hình**, **Sub Title**, **Chia sẻ**, **Cài đặt**, **Chi tiết**.
- ▶  **Âm lượng:** Chạm để hiển thị thanh trượt Âm lượng, sau đó điều chỉnh âm lượng phát lại trên thanh trượt.
- ▶  **Khóa/Mở khóa:** Khóa các phím cảm ứng để tránh chạm do vô tình.

Phát Video

- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Thư viện**  để xem các video được lưu trong bộ nhớ.
 - ▶ Cuộn lên hoặc xuống để xem thêm album.
- 2 Chạm vào một album để mở và xem nội dung. (Các ảnh và video trong album được hiển thị theo trình tự thời gian.)
- 3 Chạm vào một video trong album để phát.
 - ▶ Chạm vào video để xem các điều khiển phát lại.


LƯU Ý: Khi một video đang phát, trượt cạnh trái màn hình lên hoặc xuống để điều chỉnh độ sáng màn hình. Khi một video đang phát, trượt cạnh phải màn hình lên hoặc xuống để điều chỉnh âm thanh. Khi đang phát video, chạm vào điểm trình tự thời gian để xem trước phần đó trong video qua một màn hình nhỏ. Chạm vào màn hình nhỏ để nhảy tới phần đó trong video. Khi đang phát video, trượt ngón tay từ trái sang phải (hoặc ngược lại) để tua đi và tua lại.

Thu phóng Động

Thu phóng Động cho phép bạn phóng to hoặc thu nhỏ một phần của video đang được phát để phần mong muốn hiển thị lớn hơn hoặc nhỏ hơn.

Máy ảnh và Video

Khi đang xem video, sử dụng ngón trỏ và ngón cái kẹp lại hoặc tách ra để phóng to hoặc thu nhỏ.

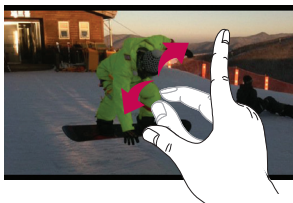

LƯU Ý: Không nhấn quá mạnh; màn hình cảm ứng đủ nhạy cảm để nhận biết được một lần chạm nhẹ nhưng dứt khoát.

Dual Play (Phát Hai màn hình)

Dual Play (được kết nối có dây hoặc không dây đến hai màn hình) có thể chạy trên một màn hình khác.

LƯU Ý: Kết nối hai thiết bị bằng cáp có dây (Slimport-HDMI) hoặc không dây (Miracast). Thiết bị được kết nối có thể là TV hoặc màn hình được hỗ trợ bởi cáp HDMI hoặc Miracast. Các ứng dụng Thư viện và Video được hỗ trợ trên Dual Play. Không phải tất cả các video đều được hỗ trợ bởi Dual Play. Dual Play vận hành ở độ phân giải màn hình 1280X720 hoặc cao hơn.

Thư viện



Mở ứng dụng **Thư viện** để xem album ảnh và video của bạn.

Để mở ứng dụng Thư viện

- Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Thư viện** .




Xem album của bạn

Ứng dụng **Thư viện** cho bạn xem các ảnh và video được lưu trong điện thoại, bao gồm những ảnh và video bạn đã chụp và quay bằng ứng dụng **Máy Ảnh** và những ảnh và video bạn đã tải về từ web hoặc các vị trí khác.

- Chạm vào một album để mở và xem nội dung.
- Chạm vào ảnh hoặc video trong album để xem.
- Chạm vào **Phím Menu**  (ở góc trên cùng bên phải của màn hình) để truy cập **Album mới**, **Xóa**, **Cài đặt album được yêu thích**, **Hiển thị các tập tin bị khóa**, **Cài đặt** và **Trợ giúp**.
- Chạm vào **biểu tượng Máy ảnh**  để quay lại ứng dụng Máy ảnh.

Để chia sẻ một album

Bạn có thể chia sẻ toàn bộ nội dung của một hay nhiều album hoặc ảnh hay video riêng từ một album.

- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Thư viện** .
- 2 Chạm và giữ album mong muốn, chạm **Chia sẻ**, chọn ứng dụng cần sử dụng để chia sẻ ảnh của bạn, sau đó hoàn thành phương pháp gửi nếu cần.


Làm việc với ảnh

Sử dụng ứng dụng **Thư viện** để xem ảnh mà bạn đã chụp bằng ứng dụng **Máy ảnh**, đã tải về.

Để xem và duyệt ảnh

- 1 Từ màn hình Chủ, chạm tab  >  > tab **Ứng dụng** > **Thư viện** .
- 2 Mở một album và chạm vào một ảnh.

Máy ảnh và Video

- 3 Chạm vào **Phím Menu**  (ở góc trên cùng bên phải của màn hình) để truy cập **SmartShare**, **Đặt hình làm**, **Dời**, **Sao chép**, **Sao chép đến trang lưu Clip**, **Khóa**, **Trình chiếu**, **Xoay**, **Cắt**, **Thêm vị trí**, **Đổi tên**, **In** hoặc **Chi tiết**.

Biểu tượng Chế độ Máy ảnh

Chạm vào đây để vào chế độ máy ảnh.

Biểu tượng Mục yêu thích

Chạm để thêm ảnh vào mục ưa thích của bạn.

Biểu tượng Chỉnh sửa


Chạm vào đây để chỉnh sửa ảnh của bạn.

Biểu tượng Chia sẻ

Chạm vào đây để chia sẻ ảnh bằng phương pháp mà bạn chọn.


Biểu tượng Xóa

Chạm vào đây để xóa ảnh.

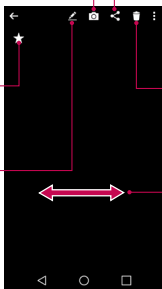


Lướt theo chiều ngang để cuộn qua các ảnh trong album hiện tại.

Để chia sẻ video



- 1 Mở album để xem nội dung, sau đó chạm vào biểu tượng **Chia sẻ**  ở trên cùng của màn hình Thư viện.
- 2 Đánh dấu chọn vào (những) video bạn muốn chia sẻ, chạm **Chia sẻ** ở cuối màn hình, chọn cách chia sẻ (các) tệp, sau đó hoàn tất nếu cần.

Để xóa video

- 1 Mở album để xem nội dung, sau đó chạm vào biểu tượng **Xóa**  ở trên cùng của màn hình Thư viện.
- 2 Đánh dấu chọn vào (những) video bạn muốn xóa, chạm **Xóa** ở cuối màn hình, sau đó chạm **Có** để xác nhận.

QSlide trong khi phát video


Bạn có thể phát video trong cửa sổ QSlide cho phép bạn sử dụng các ứng dụng khác khi đang phát video.

- 1 Mở ứng dụng **Thư viện** và bắt đầu phát video.
- 2 Chạm vào biểu tượng **QSlide**  ở góc trên cùng bên phải màn hình để kích hoạt tính năng QSlide để phát video trong cửa sổ QSlide.
- 3 Để đóng cửa sổ QSlide, chạm vào  ở góc trên cùng bên phải của thanh tiêu đề.


Chức năng

Chụp+

Chức năng **Chụp+** cho phép bạn tạo ghi nhớ và chụp ảnh màn hình. Chụp ảnh màn hình, vẽ trên ảnh và chia sẻ với gia đình và bạn bè với chức năng Chụp+.

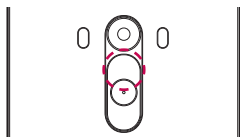


HOẶC

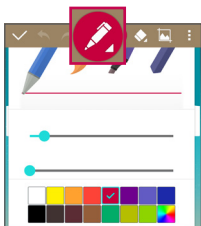




- 1 (Khi màn hình tắt) Chạm và giữ phím Tăng Âm lượng.

HOẶC

Chạm và trượt thanh trạng thái xuống dưới và nhấn .

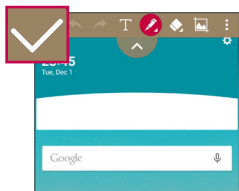- 2 Chọn tùy chọn menu mong muốn từ **Độ dày**, **Trong suốt** và tạo ghi nhớ.










- 3 Chạm  trong menu **Chỉnh sửa** để lưu ghi nhớ kèm màn hình hiện hành. Để thoát Chụp+ bất kỳ lúc nào, chạm .

LƯU Ý: Hãy sử dụng ngón tay trong khi sử dụng chức năng Chụp+. Không sử dụng móng tay.

Sử dụng các tùy chọn của Chụp+

Bạn có thể dễ dàng sử dụng các tùy chọn sửa khi sử dụng Chụp+.

	Lưu ghi nhớ kèm màn hình hiện tại vào Thư viện hoặc Chụp+ .
	Hoàn tác và Làm lại.
	Sử dụng chức năng khái niệm phức tạp.
	Chọn Loại bút , Độ dày , Trong suốt và Màu .
	Xóa ghi nhớ bạn đã tạo.
	Cắt hình theo ý bạn.
	Tùy chọn: Chạm để chọn Chia sẻ , Phong cách giấy cho ghi nhớ.


Xem Chụp+ đã lưu

Chạm **Chụp+**/**Thư viện** và chọn album Chụp+.

Chức năng

QSlide

Từ màn hình bất kỳ, mở notepad, lịch và nhiều ứng dụng khác dưới dạng cửa sổ bên trong màn hình.

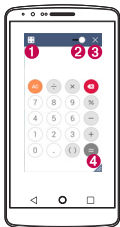

1		Nhấn để thoát chức năng QSlide và quay lại cửa sổ đầy đủ.
2		Nhấn để điều chỉnh độ trong suốt.
3		Nhấn để kết thúc chức năng QSlide.
4		Nhấn để điều chỉnh kích thước.

- 1 Chạm và trượt thanh Trạng thái xuống dưới và chạm QSlide để xem các ứng dụng QSlide khả dụng.



MẸO! Đồng thời, trong khi sử dụng các ứng dụng hỗ trợ QSlide, chạm vào > QSlide. Chức năng sẽ được hiển thị dưới dạng một cửa sổ nhỏ trên màn hình.


- 2 Bạn có thể thực hiện cuộc gọi, duyệt Web hoặc chọn các tùy chọn điện thoại khác. Bạn cũng có thể sử dụng và chạm vào màn hình bên dưới các cửa sổ nhỏ khi thanh độ trong suốt chưa đầy .

LƯU Ý: QSlide có thể hỗ trợ tối đa hai cửa sổ cùng lúc.

QuickRemote

QuickRemote biến điện thoại của bạn thành Phím từ xa vạn năng cho TV tại nhà của bạn, Hộp giải mã tín hiệu, hệ thống âm thanh.

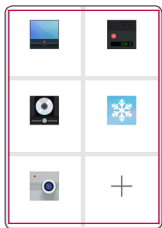

- 1 Chạm và trượt thanh trạng thái xuống dưới và chạm  > Thêm điều khiển từ xa.

HOẶC

Chạm  >  > tab Ứng dụng >  QuickRemote > chạm .

- 2 Chọn loại và nhãn hiệu thiết bị rồi làm theo hướng dẫn trên màn hình để cấu hình (các) thiết bị.

- 3 Chạm và trượt thanh trạng thái xuống dưới và sử dụng chức năng QuickRemote.

Chức năng

LƯU Ý: QuickRemote hoạt động tương tự như tín hiệu hồng ngoại (IR) điều khiển từ xa thông thường. Cần thận để không che cảm biến hồng ngoại ở trên đầu điện thoại khi bạn sử dụng chức năng QuickRemote. Chức năng này có thể không được hỗ trợ tùy thuộc vào kiểu máy, nhà sản xuất hoặc đại lý dịch vụ.


Bàn phím Thông minh

Bàn phím Thông minh nhận dạng thói quen nhập bàn phím của bạn và cung cấp cho bạn cách nhập nhanh bàn phím mà không có lỗi.



Di chuyển con trỏ sử dụng dấu cách

Chạm và giữ dấu cách và trái hoặc phải để di chuyển con trỏ.

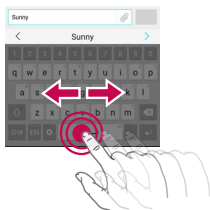



Nhập từ được gợi ý bằng điều khiển thao tác

Nhập văn bản trên bàn phím và các gợi ý từ có liên quan sẽ xuất hiện. Vuốt lên trên ở bên trái để chọn gợi ý ở bên trái. Vuốt lên trên ở bên phải để chọn gợi ý ở bên phải.



LG SmartWorld


LG SmartWorld cung cấp tập hợp nội dung sôi động – phòng chữ, chủ đề, trò chơi, ứng dụng.

Cách tải LG SmartWorld từ điện thoại

- 1 Chạm > > tab **Ứng dụng** > nhấn biểu tượng để truy cập **LG SmartWorld**.
 - 2 Nhấn Đăng nhập và nhập tên đăng nhập/mật khẩu cho LG SmartWorld. Nếu bạn chưa đăng ký, nhấn Đăng ký để trở thành thành viên của LG SmartWorld.
 - 3 Tải xuống nội dung bạn muốn.
- *Khi sử dụng mạng Di động, bạn có thể bị tính phí dữ liệu theo gói dữ liệu mà bạn đã đăng ký với nhà khai thác mạng.
- * LG SmartWorld có thể không khả dụng tại tất cả nhà khai thác mạng hoặc quốc gia.

Chức năng

LƯU Ý: Nếu không có biểu tượng thì sao?




- 1 Sử dụng trình duyệt Web di động, truy cập LG SmartWorld (www.lgworld.com) và chọn quốc gia của bạn.
- 2 Tải xuống Ứng dụng LG SmartWorld.
- 3 Chạy và cài đặt tệp đã tải xuống.
- 4 Truy cập LG SmartWorld bằng cách nhấn biểu tượng .

Lợi ích đặc biệt chỉ có trong LG SmartWorld

- 1 Trang trí theo phong cách riêng của bạn cho Điện thoại thông minh, Sử dụng Chủ đề chính & Phong nền Bàn phím & Phong chữ được cung cấp trên LG SmartWorld. (Tuy nhiên, dịch vụ này dành riêng cho thiết bị cụ thể. Vui lòng đăng nhập vào trang web LG SmartWorld để xem dịch vụ này có khả thi hay không)
- 2 Tận hưởng dịch vụ đặc biệt của LG SmartWorld bằng cách tham gia chương trình khuyến mại được cung cấp phù hợp.

Đa phương tiện

Nhạc

Điện thoại của bạn có trình nghe nhạc tích hợp cho phép bạn phát tất cả các bài hát ưa thích của mình. Để truy cập trình nghe nhạc, chạm  >  > tab **Ứng dụng** >  **Nhạc**.

Thêm tệp nhạc vào điện thoại của bạn




Bắt đầu bằng cách truyền tệp nhạc vào điện thoại:

- Chuyển nhạc bằng chế độ Thiết bị phương tiện (MTP).
- Tải xuống từ Web không dây.
- Đồng bộ hóa điện thoại với máy tính.
- Nhận tệp qua Bluetooth.

Chuyển nhạc bằng chế độ Thiết bị phương tiện (MTP)

- 1 Kết nối điện thoại với PC bằng cáp USB.
- 2 Chọn tùy chọn **Thiết bị phương tiện (MTP)**. Điện thoại của bạn sẽ xuất hiện như một ổ cứng khác trên máy tính. Nhấp vào một ổ cứng để xem. Sao chép các tệp từ PC sang thư mục ổ lưu trữ.
- 3 Khi bạn truyền tệp xong, gạt xuống dưới trên Thanh trạng thái và chạm **Kết nối USB PC** > **Sạc điện thoại**. Bây giờ bạn có thể rút thiết bị một cách an toàn.

Phát bài hát

- 1 Chạm  >  > tab **Ứng dụng** >  **Nhạc**.
- 2 Nhấn **Bài hát**.
- 3 Chọn bài hát mà bạn muốn phát.












Chạm để dừng phát lại.



Chạm để tiếp tục phát lại.

Đa phương tiện

	Chạm để bỏ qua bản nhạc tiếp theo trong album, danh sách nhạc hoặc trộn bài. Chạm và giữ để tua đi.
	Chạm để bắt đầu lại bản nhạc hiện tại hoặc bỏ qua bản nhạc trước trong album, danh sách nhạc hoặc trộn bài. Chạm và giữ để tua lại.
	Chạm để hiển thị thanh trượt Âm lượng, sau đó điều chỉnh âm lượng phát lại trên thanh trượt.
	Chạm để đặt hiệu ứng âm thanh.
	Chạm để mở danh sách nhạc hiện tại.
	Chạm để thêm bài hát vào mục ưa thích.
	Chạm để phát danh sách nhạc hiện tại ở chế độ trộn bài (các bản nhạc được phát theo trình tự ngẫu nhiên).
	Chạm để chuyển đổi giữa các chế độ lặp lại: lặp lại tất cả bài hát, lặp lại bài hát hiện tại hoặc tắt lặp lại.
	Chạm để chia sẻ nhạc qua chức năng SmartShare.

Để thay đổi âm lượng trong khi nghe nhạc, nhấn phím tăng và giảm âm lượng ở mặt sau của điện thoại.

Nhấn và giữ bất kỳ bài hát nào trong danh sách. Các tùy chọn **Phát**, **Thêm vào danh sách nhạc**, **Xóa**, **Chia sẻ**, **Đặt làm nhạc chuông** và **Tim kiếm** sẽ hiển thị.

LƯU Ý:

- Một số định dạng tệp không được hỗ trợ, tùy theo phần mềm thiết bị.
- Nếu kích thước tệp vượt quá bộ nhớ hiện có thì có thể xảy ra lỗi khi bạn mở tệp.





LƯU Ý: Bản quyền của các tệp nhạc được bảo hộ theo các công ước quốc tế và luật bản quyền của các quốc gia.


Do đó, có thể cần xin phép hoặc mua giấy phép để sao chép nhạc.

Luật quốc gia của một số nước cấm sao chép tài liệu được bảo hộ bởi bản quyền cho mục đích cá nhân. Trước khi tải xuống hoặc sao chép tệp, vui lòng kiểm tra luật quốc gia của quốc gia liên quan về việc sử dụng tài liệu như vậy.






Tiện ích

Đặt báo thức





- 1 Chạm  >  > tab **Ứng dụng** >  **Đồng hồ** > .
- 2 Sau khi đặt báo thức, điện thoại cho bạn biết bao lâu nữa báo thức kêu.
- 3 Đặt **Lặp lại**, **Thời gian tạm dừng**, **Rung khi âm thanh báo thức**, **Chuông báo thức**, **Âm lượng báo thức**, **Tự động khởi động ứng dụng**, **Khóa bằng cách di chuyển giữa các ô** và **Ghi nhớ**. Nhấn **LƯU**.

LƯU Ý: Để thay đổi cài đặt báo thức trong màn hình danh sách báo thức, nhấn phím **Menu**  và chọn **Cài đặt**.

Sử dụng máy tính

- 1 Chạm  >  > tab **Ứng dụng** >  **Máy Tính**.
- 2 Chạm các phím số để nhập số.
- 3 Đối với các phép tính đơn giản, nhấn chức năng bạn muốn thực hiện (+, -, x hoặc ÷) sau đó nhấn =.
- 4 Để kiểm tra lịch sử, chạm vào biểu tượng , sau đó chạm **Lịch sử tính toán**.
- 5 Đối với các tính toán phức tạp, nhấn **Phím Menu** , sau đó nhấn **Máy tính bỏ túi**.

Thêm một sự kiện vào lịch







- 1 Chạm  >  > tab **Ứng dụng** >  **Lịch**.
- 2 Trên màn hình, bạn có thể thấy các loại chế độ xem khác nhau của Lịch (Ngày, Tuần, Tháng, Năm, Lịch trình).
- 3 Nhấn vào ngày mà bạn muốn thêm sự kiện và nhấn .
- 4 Nhấn **Tên sự kiện** và nhập tên sự kiện.
- 5 Nhấn **Vị trí** và nhập vị trí. Chọn ngày và nhập thời gian bạn muốn bắt đầu và kết thúc sự kiện.


- 6 Nếu bạn muốn lặp lại báo thức, đặt **LẶP LẠI** và đặt **LỜI NHẮC**, nếu cần.
- 7 Chạm **Lưu** để lưu sự kiện trên lịch.

Máy ghi âm


Sử dụng máy ghi âm để ghi lại các ghi nhớ thoại hoặc các tệp âm thanh khác.

Ghi âm thanh hoặc giọng nói

- 1 Nhấn  >  > tab **Ứng dụng** >  **Ghi âm**.
- 2 Chạm  để bắt đầu ghi.
- 3 Chạm  để kết thúc ghi.
- 4 Chạm  để nghe bản ghi âm.

LƯU Ý: Nhấn  để truy cập album của bạn. Bạn có thể nghe bản ghi âm đã lưu. Thời gian ghi sẵn có thể khác so với thời gian ghi thực tế.

Gửi bản ghi âm thoại




- 1 Khi bạn đã kết thúc ghi âm, bạn có thể gửi clip âm thanh bằng cách nhấn .
- 2 Chọn từ **Email**, **Tin nhắn**, **Chụp+**, **Bluetooth**, **Gmail**, **SmartShare Beam**, **Google Drive** hoặc **Android Beam**. Khi bạn chọn **Email**, **Tin nhắn**, **Chụp+**, **Bluetooth**, **Gmail**, **SmartShare Beam**, **Google Drive** hoặc **Android Beam** bản ghi âm sẽ được thêm vào tin nhắn. Sau đó, bạn có thể soạn và gửi thư/tin nhắn như bình thường.

Tiện ích

Công việc

Công việc này có thể đồng bộ hóa với tài khoản MS Exchange. Bạn có thể tạo công việc, sửa lại và xóa công việc trong MS outlook hoặc MS Office Outlook Web Access.

Để đồng bộ hóa với MS Exchange

- 1 Từ Màn hình chủ, nhấn  >  > tab **Ứng dụng** >  **Cài đặt**.
- 2 Nhấn tab **Cài đặt Chung** > **Tài khoản & đồng bộ hóa** > **Thêm tài khoản**.
- 3 Nhấn **Microsoft Exchange** để tạo Địa chỉ email và Mật khẩu.
- 4 Đảm bảo bạn đã chọn **Đồng bộ hóa công việc**.

LƯU Ý: MS Exchange có thể không được hỗ trợ tùy thuộc vào máy chủ email.

Google+





Sử dụng ứng dụng này để giữ kết nối với mọi người thông qua dịch vụ mạng xã hội của Google.

- Nhấn  >  > tab **Ứng dụng** >  **Google** >  **Google+**.

LƯU Ý: Ứng dụng có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.

Tim kiếm Thoại

Sử dụng ứng dụng này để tìm kiếm các trang web bằng giọng nói.

- 1 Nhấn  >  > tab **Ứng dụng** >  **Google** >  **Tim kiếm thoại**.
- 2 Nói từ khóa hoặc cụm từ khi từ **Đang nghe...** xuất hiện trên màn hình. Chọn một trong các từ khóa gợi ý xuất hiện.

LƯU Ý: Ứng dụng có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.

Tải xuống

Sử dụng ứng dụng này để xem tệp nào đã được tải xuống thông qua ứng dụng.

- Nhấn  >  > tab **Ứng dụng** >  **Tải xuống**.

LƯU Ý: Ứng dụng có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.

Trang Web

Internet







Sử dụng ứng dụng này để duyệt Internet. Trình duyệt mang đến cho bạn một thế giới thân thiện, đa sắc màu về các trò chơi, nhạc, tin tức, thể thao, giải trí và nhiều hơn nữa, ngay trên điện thoại di động của bạn cho dù bạn ở đâu và bạn thích cái gì.

LƯU Ý: Bạn có thể phải trả thêm phí khi kết nối tới các dịch vụ này và tải xuống nội dung. Kiểm tra phí dữ liệu với nhà cung cấp dịch vụ mạng.

1 Nhấn  >  > tab **Ứng dụng** >  **Internet**.

Sử dụng Thanh công cụ web


Nhấn rồi trượt lên bằng ngón tay của bạn để mở.


	Chạm để quay lại một trang.
	Chạm để đi tới một trang, tới trang bạn đã kết nối sau trang hiện tại. Tác vụ này trái ngược với những gì xảy ra khi bạn nhấn  .
	Chạm để vào Trang chủ.
	Chạm để thêm cửa sổ mới.
	Chạm để truy cập chỉ mục.

Xem trang web


Nhấn trường địa chỉ, nhập địa chỉ web và nhấn **Đi**.

Mở một trang

Để vào trang mới, nhấn  → .


Để vào trang web khác, nhấn , cuộn lên hoặc xuống, và nhấn vào trang để chọn trang đó.


Tìm kiếm web bằng giọng nói

Nhấn trường địa chỉ, nhấn , nói từ khóa, sau đó chọn một trong các từ khóa gợi ý xuất hiện.



LƯU Ý: Tính năng này có thể không khả dụng tùy thuộc vào khu vực hoặc nhà cung cấp dịch vụ.

Chỉ mục


Để đánh dấu trang web hiện tại, chạm  > **Thêm Dấu trang** > **LƯU**.

Để mở trang web đã đánh dấu, nhấn  và chọn một trang web.

Lịch sử


Nhấn  > **Lịch sử** để mở một trang web từ danh sách các trang web truy cập gần đây. Để xóa tất cả lịch sử, chạm  → **Có**.

Sử dụng Trình duyệt Bật lên

Sử dụng tính năng này để truy cập Internet mà không cần đóng ứng dụng hiện hành .

Khi xem nội dung, chẳng hạn như liên hệ hoặc ghi chú có bao gồm địa chỉ web, chọn một địa chỉ web, sau đó nhấn Trình duyệt Bật lên để mở trình duyệt bật lên. Chạm và kéo trình duyệt để di chuyển trình duyệt đến vị trí khác.

Để xem trình duyệt toàn màn hình, nhấn .

Để đóng trình duyệt, nhấn .

Chrome

Sử dụng Chrome để tìm kiếm thông tin và duyệt trang web.

1 Chạm  >  > tab **Ứng dụng** >  **Chrome**.


LƯU Ý: Ứng dụng có thể không khả dụng, tùy thuộc vào khu vực và nhà cung cấp dịch vụ.

Xem trang web

Nhấn trường Địa chỉ, sau đó nhập địa chỉ web hoặc tiêu chí tìm kiếm.

Mở một trang

Để vào một trang mới, nhấn **phím Menu** : → **Tab mới**.

Để vào trang web khác, nhấn , cuộn lên hoặc xuống và nhấn vào trang để chọn trang đó.

Đồng bộ hóa với thiết bị khác

Đồng bộ hóa sẽ mở các tab và chỉ mục để sử dụng với Chrome trên thiết bị khác khi bạn đăng nhập với cùng một tài khoản Google.

Để xem các tab đang mở trên thiết bị khác, chạm **phím Menu** : → **Tab gần đây**.

Chọn một trang web để mở.

Để thêm dấu trang, chạm **phím Menu** : → ☆.

Cài đặt

Phần này cung cấp nội dung tổng quan về các mục mà bạn có thể thay đổi bằng các menu cài đặt Hệ thống của điện thoại.

Để truy cập menu Cài đặt:

Chạm  > Chạm và giữ  > Cài đặt hệ thống.

- hoặc -

Chạm  >  > tab Ứng dụng >  Cài đặt.





Mạng

< Wi-Fi >

Wi-Fi – Bật Wi-Fi để kết nối với mạng Wi-Fi có sẵn.

MEO! Cách lấy địa chỉ MAC

Để thiết lập kết nối trong một số mạng không dây có bộ lọc MAC, bạn có thể cần phải nhập địa chỉ MAC của điện thoại vào thiết bị định tuyến.

Bạn có thể tìm địa chỉ MAC trong giao diện người dùng sau: nhấn  >  > tab Ứng dụng >  Cài đặt > tab Mạng > Wi-Fi >  > Wi-Fi nâng cao > địa chỉ MAC.

< Bluetooth >

Bật hoặc tắt tính năng Bluetooth không dây để sử dụng Bluetooth.

< Dữ liệu di động >

Hiển thị sử dụng dữ liệu và đặt giới hạn dữ liệu di động.

< Gọi >

Cài cấu hình cài đặt cuộc gọi trên điện thoại, như chuyển tiếp cuộc gọi và các tính năng đặc biệt khác mà nhà khai thác mạng cung cấp.

Thư Thoại – Cho phép bạn chọn dịch vụ thư thoại của nhà khai thác mạng.

Cài đặt

Quay số cố định – Bật và soạn danh sách các số có thể được gọi đi từ điện thoại của bạn. Bạn sẽ cần mã PIN2, mã này có sẵn từ nhà điều hành của bạn. Chỉ những số trong danh sách quay số cố định mới có thể được gọi đi từ điện thoại của bạn.

Cửa sổ tự động báo cuộc gọi đến – Hiện thị cửa sổ tự động báo cuộc gọi đến khi một ứng dụng được sử dụng.

Từ chối cuộc gọi – Cho phép bạn đặt chức năng từ chối cuộc gọi. Chọn từ **Chế độ từ chối cuộc gọi** hoặc **Từ chối cuộc gọi từ**.

Từ chối có tin nhắn – Khi bạn muốn từ chối một cuộc gọi, bạn có thể gửi một tin nhắn nhanh bằng chức năng này. Chức năng này rất hữu ích nếu bạn cần từ chối một cuộc gọi trong khi đang họp.

Chuyển cuộc gọi – Chọn chuyển hướng tất cả cuộc gọi, khi điện thoại bạn, khi không trả lời hoặc khi bạn bị mất tín hiệu.

Tự động trả lời – Đặt thời gian trước khi thiết bị rảnh tay đã kết nối tự động trả lời cuộc gọi đến. Chọn từ **Tắt, 1 giây, 3 giây** và **5 giây**.

Rung khi kết nối – Điện thoại rung khi đầu dây bên kia trả lời cuộc gọi.

Chặn tiếng ồn – Chặn tiếng ồn nền trong cuộc gọi trên thiết bị của bạn.

Nâng cao chất lượng âm thanh – Nâng cao chất lượng âm thanh trong môi trường ồn để bạn nghe rõ hơn.

Lưu số chưa biết – Thêm số chưa biết vào danh bạ sau cuộc gọi.

Phím nguồn kết thúc cuộc gọi – Cho phép bạn chọn cuộc gọi kết thúc.

Trả lời một cuộc gọi đến – Bật để cho phép tự động trả lời cuộc gọi đến khi bạn đưa thiết bị đến gần tai.

Cuộc gọi đến im lặng – Bật để cho phép tắt tiếng cuộc gọi đến khi bạn lật thiết bị.

Chặn cuộc gọi – Khóa cuộc gọi đến, cuộc gọi đi hoặc cuộc gọi quốc tế.

Thời lượng cuộc gọi – Xem thời lượng của các cuộc gọi bao gồm **Cuộc gọi gần đây, Cuộc gọi đi, Cuộc gọi đến** và **Tất cả cuộc gọi**.

Cài đặt bổ sung – Cho phép bạn thay đổi các cài đặt sau:

ID người gọi – Chọn hiển thị số của bạn khi gọi đi.

Cuộc gọi chờ – Nếu cuộc gọi chờ được kích hoạt, điện thoại sẽ thông báo cho bạn về cuộc gọi đến khi bạn đang đàm thoại (tùy thuộc vào nhà cung cấp dịch vụ mạng).

< Chia sẻ và kết nối >

NFC – Điện thoại của bạn là điện thoại di động hỗ trợ NFC. NFC (Giao tiếp trường gần) là công nghệ kết nối không dây để cho phép giao tiếp hai chiều giữa các thiết bị điện tử. Công nghệ này hoạt động trong khoảng cách vài cm. Bạn có thể chia sẻ nội dung với thẻ NFC hoặc thiết bị hỗ trợ NFC khác bằng cách chạm thiết bị đó với thiết bị của bạn. Nếu bạn chạm thẻ NFC với thiết bị của mình, nội dung thẻ sẽ hiển thị trên thiết bị của bạn.

Để bật hoặc tắt NFC – Từ Màn hình chủ, dùng ngón tay để chạm và trượt ngăn thông báo xuống, sau đó chọn biểu tượng NFC để bật chức năng này.

LƯU Ý: Khi chế độ trên máy bay được kích hoạt, bạn có thể sử dụng ứng dụng NFC.

Sử dụng NFC – Để sử dụng NFC, đảm bảo thiết bị của bạn đã bật và kích hoạt NFC nếu tính năng này đang tắt.

Android Beam – Khi bật tính năng này, bạn có thể phát nội dung ứng dụng sang thiết bị có chức năng NFC khác bằng cách đưa hai thiết bị lại gần nhau.

Chỉ cần đưa thiết bị lại gần nhau (thường là chạm lưng) sau đó chạm vào màn hình. Ứng dụng quyết định nội dung nào sẽ được phát.

SmartShare Beam – Bật để nhận nội dung đa phương tiện qua SmartShare Beam từ điện thoại hoặc máy tính bảng LG.

Cài đặt

Máy chủ phương tiện truyền thông – Chia sẻ nội dung đa phương tiện với các thiết bị lân cận qua DLNA.

Miracast – Màn hình điện thoại gương và âm thanh trên Miracast dongle hoặc TV không dây.

LG PC Suite – Kết nối LG PC Suite với thiết bị để dễ dàng quản lý các nội dung đa phương tiện và các ứng dụng.

In – Cài đặt máy in không dây.

< Điểm truy cập Internet >

Điểm truy cập Internet qua dây USB – Kết nối cáp USB để chia sẻ kết nối internet với máy tính.

Điểm phát Wi-Fi – Bạn cũng có thể sử dụng điện thoại để cung cấp kết nối băng rộng di động. Tạo điểm phát sóng và chia sẻ kết nối của bạn. Hãy xem "**Chia sẻ kết nối dữ liệu của điện thoại**" để biết thêm thông tin.

Điểm truy cập Internet qua Bluetooth – Cho phép bạn đặt điện thoại cho dù bạn có đang chia sẻ kết nối Internet hay không.

Trợ giúp – Nhấn để xem thông tin trợ giúp về các chức năng Điểm phát Wi-Fi và Điểm truy cập Internet qua USB và Bluetooth.

< Khác >

Chế độ trên máy bay – Sau khi chuyển sang Chế độ trên máy bay, tất cả các kết nối không dây sẽ bị tắt.


Mạng di động – Đặt tùy chọn cho chuyển vùng dữ liệu, chế độ mạng & nhà điều hành mạng, tên điểm truy cập (APN), v.v.

VPN – Hiện thị danh sách Mạng Riêng Ảo (VPN) bạn đã đặt cấu hình trước đó. Cho phép bạn thêm các loại VPN khác nhau.

Âm thanh & Thông báo

Cấu hình âm thanh – Chọn **Âm thanh**, có thể là **Chỉ rung** hoặc **Im lặng**.

Âm lượng – Điều chỉnh cài đặt âm lượng của điện thoại cho phù hợp với nhu cầu và môi trường của bạn.

Nhạc chuông – Đặt nhạc chuông cho các cuộc gọi. Bạn cũng có thể thêm nhạc chuông bằng cách chạm  nằm ở góc trên cùng bên phải của màn hình.

Chuông danh bạ – Cho phép tự động soạn nhạc chuông dựa trên số điện thoại của cuộc gọi đến.

Độ mạnh rung – Cho phép đặt cường độ rung cho các cuộc gọi, thông báo và Rung khi chạm vào.

Âm thanh và rung – Đánh dấu để đặt điện thoại rung và đổ chuông khi bạn nhận cuộc gọi.

Kiểu rung – Cho phép bạn đặt kiểu rung cho cuộc gọi đến. Chọn trong **Bền bỉ, Nhanh, Lặp lại nhanh, Chuẩn**, hoặc **Ticktock**.


Không làm phiền – Đặt thời gian và chế độ khi điện thoại của bạn không báo những thông báo đến. Chọn từ **Chỉ những mục được ưu tiên** hoặc **Im lặng hoàn toàn**.

Khoá màn hình – Đặt để hiển thị hoặc ẩn tất cả các thông báo trên màn hình khoá.

Ứng dụng – Đặt thông báo từ Ứng dụng. Chọn từ Không để không hiển thị thông báo nào từ Ứng dụng, và Ưu tiên để hiển thị thông báo được ưu tiên hơn cả và khi Không làm phiền đặt thành Chỉ ưu tiên.

Thông báo bằng đèn LED – Chạm vào công tắc để Bật hoặc Tắt chức năng này. Bật sẽ kích hoạt đèn LED cho thông báo mà bạn chọn, với màu sắc mà bạn cài đặt cho từng thông báo.

< Khác >

Âm thanh thông báo – Cho phép bạn đặt âm thanh thông báo. Bạn cũng có thể thêm âm thanh thông báo bằng cách chạm vào  ở góc trên cùng bên phải của màn hình.

Cài đặt

Rung khi nhấn vào – Đánh dấu chọn để rung khi nhấn vào các nút cảm ứng trên màn hình chủ và giao diện người dùng trong tương tác khác.

Hiệu ứng âm thanh – Chạm để đặt các âm chạm bàn phím quay số và âm thanh khóa màn hình.

Âm thanh cảm ứng bàn phím – Đánh dấu chọn để phát âm khi sử dụng bàn phím quay số.

Âm chạm – Đánh dấu chọn để phát âm thanh khi thực hiện chọn màn hình.

Âm thanh khóa màn hình – Đánh dấu chọn để phát âm thanh khi khóa và mở khóa màn hình.

Các thông báo cuộc gọi/tin nhắn thoại – Chạm vào **Các thông báo cuộc gọi/tin nhắn thoại** để chuyển bật hoặc tắt tính. Bật cho phép thiết bị trả lời cuộc gọi đến và tin nhắn tự động.

Hiển thị

< MÀN HÌNH CHỦ & KHÓA >

Màn hình chủ

Lựa chọn trang chủ – Đặt **Màn hình chủ** hoặc **EasyHome** làm màn hình chủ mặc định.

Smart Bulletin – Chạm vào **công tắc Bảng tin Thông minh** để chuyển Bật hoặc Tắt. Chế độ này bao gồm màn hình Chủ bổ sung hiển thị thông tin tùy chỉnh. Đánh dấu chọn **Lịch, LG Health, Smart Tips, Nhạc** hoặc **QuickRemote**.

Chủ đề – Đặt chủ đề màn hình cho thiết bị của bạn. Bạn có thể tải xuống từ **LG SmartWorld**.

Hình nền – Đặt hình nền để dùng trên Màn hình chủ. Chọn từ **Thư viện, Bộ sưu tập hình nền, Hình nền động, Khung hình có nhiều** hoặc **Ảnh** đã chụp.

Hiệu ứng màn hình – Đặt hiệu ứng khi bạn vuốt để thay đổi màn hình. Chọn từ **Trượt**, **Hiệu ứng thổi nhẹ**, **Accordion**, **Phối cảnh**, **Hiệu ứng xoay tròn**, **Lớp** hoặc **Hiệu ứng domino**.

Cho phép xoay tròn Màn hình chủ – Đánh dấu chọn để cho phép liên tục cuộn Màn hình chủ (xoay tròn quay lại về màn hình đầu tiên sau màn hình cuối cùng).

Trợ giúp – Hiển thị thông tin liên quan đến các mục và chức năng của Màn hình chủ.

Khóa màn hình

Chọn màn hình – Đặt loại màn hình khóa để bảo vệ điện thoại của bạn. Mở hàng loạt các màn hình để hướng dẫn bạn vẽ hình mở khóa. Đặt **Không có**, **Gạt**, **Knock Code**, **Kiểu mẫu**, **PIN** hoặc **Mật khẩu**.

Nếu bạn đã bật loại Khóa máy bằng hình thì khi bạn bật điện thoại hoặc đánh thức màn hình, bạn được yêu cầu vẽ hình mở khóa để mở khóa màn hình.

Smart Lock – Đặt thời gian để tự động mở khóa điện thoại bằng Các thiết bị được tin cậy (thiết bị BT hoặc NFC) hoặc Khuôn mặt được tin cậy. Chức năng này khả dụng khi Khóa màn hình được đặt thành một trong Hình Knock Code, PIN và Mật khẩu.

LƯU Ý: Để kích hoạt tính năng này, Khóa thông minh phải được Bật. Cài đặt > Chung > Bảo Mật > Trust agents > Smart Lock.

Hiệu ứng màn hình – Đặt các tùy chọn hiệu ứng gạt màn hình. Chọn từ **Vòng xoay**, **Hình tròn ghép mảnh**, **Hạt nhẹ**, **Hiệu ứng vòng tròn véc tơ** hoặc **Sô đa**.

LƯU Ý: Tên cài đặt này có thể là hiệu ứng Hình nếu Khóa màn hình được đặt là Hình.

Hình nền – Đặt hình nền cho Màn hình khóa. Chọn từ **Thư viện** hoặc **Bộ sưu tập hình nền**.

Cài đặt

Phím tắt – Cho phép bạn thay đổi lối tắt trên màn hình **Gạt** bằng cách **Gạt**.

Hình động thời tiết – Đánh dấu chọn để hiển thị các hình động thời tiết cho vị trí hiện tại trên màn hình khóa.

Thông tin liên lạc cho điện thoại bị mất – Đánh dấu chọn để cài đặt hiển thị thông tin về chủ sở hữu thiết bị trên Màn hình khóa. Nhập văn bản sẽ hiển thị là thông tin Chủ sở hữu.

Bộ định thời khóa màn hình – Đặt thời gian trước khi màn hình tự động khóa sau khi màn hình hết thời gian chờ.

Nút nguồn khóa ngay lập tức – Đánh dấu để ngay lập tức khóa màn hình khi nhấn phím Nguồn/Khóa. Cài đặt này sẽ ghi đè cài đặt Bộ hẹn giờ khóa bảo mật.

Các phím chạm màn hình chính

Kết hợp phím – Kéo một biểu tượng để sắp xếp lại Các phím chạm màn hình chủ. Bạn có tối đa 5 phím cảm ứng màn hình chủ.

Màu – Đặt màu nền cho Các phím cảm ứng màn hình chủ. Chọn màu giữa Trắng và Đen.

Ẩn các phím chạm màn hình chính – Đặt các Phím Cảm ứng Màn hình chủ hiển thị ở cuối tất cả màn hình. Đặt phím nào sẽ hiển thị, vị trí của phím trên thanh và giao diện của phím. Chọn các phím và thứ tự, chủ đề và hình nền.

< PHÔNG CHỮ >

Kiểu chữ – Đặt kiểu phông chữ mà điện thoại và các menu sẽ sử dụng.

Cỡ chữ – Đặt cỡ chữ cho phông chữ hiển thị trên điện thoại và các menu.

< CÀI ĐẶT CƠ BẢN >

Độ sáng – Điều chỉnh độ sáng của màn hình. Để pin hoạt động tốt nhất, sử dụng độ sáng mờ nhất mà bạn thấy thoải mái.

Tự động xoay màn hình – Đánh dấu để đặt điện thoại tự động xoay màn hình dựa trên hướng của điện thoại (dọc hoặc ngang).

Thời gian chờ của màn hình – Đặt thời gian trước khi màn hình hết thời gian chờ.

Màn hình thông minh – Đánh dấu chọn để cho phép màn hình luôn bật khi điện thoại phát hiện khuôn mặt của bạn.

< Khác >

Mơ tưởng – Chạm nút Daydream để Bật hoặc Tắt chức năng này. Bật cho phép hiển thị hình bảo vệ màn hình đã đặt khi điện thoại đang ngủ trong khi được cắm trên đế và/hoặc đang sạc. Chọn giữa **Đồng hồ** và **Google Photos**.

Hiệu chỉnh cảm biến chuyển động – Cho phép bạn cải thiện độ chính xác về độ nghiêng và tốc độ của cảm biến.

Chung

< Ngôn ngữ & bàn phím >

Sử dụng cài đặt Ngôn ngữ & bàn phím để chọn ngôn ngữ cho văn bản trên điện thoại và để cài cấu hình bàn phím ảo, bao gồm các từ bạn đã thêm vào từ điển.

Ngôn ngữ – Đặt ngôn ngữ để sử dụng trên thiết bị của bạn.

Bàn phím hiện tại – Hiển thị bàn phím hiện tại mà bạn đặt để sử dụng.

Bàn phím LG – Chọn **Bàn phím LG** để nhập dữ liệu.

Nhập giọng nói của Google – Chọn **Nhập bằng giọng nói của Google** để nhập dữ liệu.

Dữ liệu ra của tiện ích đọc văn bản – Đặt công cụ giọng nói và tốc độ của giọng nói ưa thích (rất chậm đến rất nhanh). Đồng thời phát đoạn mẫu ngắn tổng hợp lời nói.

Tốc độ con trỏ – Đặt tốc độ con trỏ trên thanh trượt.

Cài đặt

Đảo ngược các phím – Đảo ngược các nút chuột để sử dụng nút chính bên phải.

< Vị trí >

Bật dịch vụ vị trí, điện thoại của bạn xác định vị trí tương đối của bạn bằng GPS, Wi-Fi và các mạng di động.

CHẾ ĐỘ – Đặt chế độ vị trí.

Độ chính xác cao(GPS và mạng) – Sử dụng GPS, Wi-Fi và mạng di động để ước tính vị trí.


Tiết kiệm pin(Chỉ dùng mạng) – Sử dụng Wi-Fi và mạng di động để ước tính vị trí.

Chỉ có các bộ cảm biến thiết bị(Chỉ dùng GPS) – Sử dụng GPS để xác định vị trí của bạn.

YÊU CẦU ĐỊNH VỊ GẦN ĐÂY – Hiển thị ứng dụng gần đây đã yêu cầu thông tin vị trí.

DỊCH VỤ VỊ TRÍ

Máy ảnh – Đánh dấu chọn để đánh dấu vị trí của các hình ảnh và video.

Lịch sử vị trí của Google – Chọn tắt hay bật các tùy chọn Báo cáo vị trí của Google. Để biết thêm thông tin, chạm  > **Trợ giúp**.

< Tài khoản & đồng bộ hóa >

Cho phép các ứng dụng đồng bộ hóa dữ liệu trong nền, cho dù bạn có đang làm việc tích cực với dữ liệu đó hay không. Bỏ chọn cài đặt này có thể tiết kiệm pin và giảm (nhưng không loại bỏ) sử dụng dữ liệu.

< Mây >

Thêm tài khoản đám mây để có thể sử dụng dịch vụ đám mây một cách nhanh chóng và dễ dàng trên các ứng dụng của LG.

< Người dùng >

Đánh dấu để thêm người dùng khi điện thoại bị khóa.


LƯU Ý: Thêm người dùng để chia sẻ điện thoại với người khác. Mỗi người dùng có thể có ứng dụng và nội dung riêng của mình. Bất kỳ ai sử dụng điện thoại cũng có thể thay đổi các cài đặt như Wi-Fi và chấp nhận cập nhật ứng dụng mà có thể ảnh hưởng đến người khác. Yêu cầu cài đặt ban đầu đối với người dùng mới khi sử dụng điện thoại.

< Khả năng truy cập >

Sử dụng cài đặt **Khả năng truy cập** để cấu hình plug-in truy cập mà bạn đã cài đặt trên điện thoại.

Thị lực

TalkBack – Cho phép bạn thiết lập chức năng TalkBack trợ giúp người khiếm thị bằng cách cung cấp phản hồi bằng lời.

Các thông báo cuộc gọi/tin nhắn thoại – Chạm vào  để Bật hoặc Tắt chức năng này. Bật sẽ cho phép bạn nghe thông báo bằng giọng nói tự động khi có cuộc gọi đến hoặc tin nhắn.

Rèm màn hình – Bật để đặt màn hình về độ tương phản tối hơn.

Cỡ chữ – Đặt cỡ chữ mong muốn.

Zoom bằng cảm ứng – Cho phép bạn phóng to và thu nhỏ bằng cách chạm ba lần vào màn hình.

Đảo ngược màu sắc của màn hình – Bật để đảo màu của màn hình và nội dung.

Điều chỉnh màu sắc của màn hình – Cho phép bạn đảo màu của màn hình và nội dung.

Bộ lọc màu sắc màn hình – Cho phép bạn thay đổi màu của màn hình và nội dung.

Phím nguồn kết thúc cuộc gọi – Bật để bạn có thể kết thúc cuộc gọi thoại bằng cách nhấn Phím Nguồn/Khóa.

Đang nghe

Chú thích – Cho phép tùy chỉnh cài đặt chú thích cho người bị khiếm thính.

Cài đặt

Thông báo bằng đèn LED – Cho phép bạn kích hoạt đèn LED cho các cuộc gọi đến và thông báo.

Các chuông báo flash – Bật để đặt flash nhấp nháy khi có cuộc gọi đến và thông báo.

Tắt tất cả các loại âm thanh – Bật để tắt tất cả âm thanh của thiết bị.

Loại âm thanh – Đặt loại âm thanh.

Cân bằng âm thanh – Đặt tuyến âm thanh. Di chuyển thanh trượt trên thanh trượt để cài đặt.

Khả năng vận động & nhận diện

Thời gian phản hồi cảm ứng – Đặt thời gian phản hồi cảm ứng.

Touch assistant – Hiển thị bảng thao tác chạm giúp dễ dàng truy cập các thao tác thông thường.

Thời gian chờ của màn hình – Đặt lượng thời gian trước khi đèn nền tự động tắt.


Các khu vực điều khiển cảm ứng – Cho phép bạn chọn một khu vực màn hình để giới hạn kích hoạt cảm ứng chỉ ở khu vực màn hình đó.

Phím tắt của tính năng Khả năng truy cập – Cho phép bạn truy cập nhanh các tính năng được chọn khi chạm ba lần vào phím Home.

Tự động xoay màn hình – Bật để cho phép điện thoại xoay màn hình dựa theo hướng của điện thoại (dọc hoặc ngang).

C.đổi truy cập – Cho phép bạn tương tác với thiết bị bằng cách sử dụng một hoặc nhiều công tắc hoạt động như các phím của bàn phím. Menu này có thể hữu ích đối với người dùng bị giới hạn về di động khiến họ không thể họ tương tác trực tiếp với thiết bị của mình.

< Phím tắt >

Truy cập nhanh đến các ứng dụng bằng cách nhấn và giữ các phím Âm lượng khi màn hình tắt hoặc bị khóa. Chạm vào công tắc Phím tắt  ở góc trên bên phải màn hình để **Bật** hoặc **Tắt**.

< Google >

Cho phép bạn quản lý cài đặt cho các ứng dụng và dịch vụ Google.

< Bảo Mật >

Khóa nội dung – Khóa các tập tin cho Thư viện và ghi nhớ cho Chụp+.

Mã hóa điện thoại – Cho phép bạn mã hóa dữ liệu trên điện thoại cho mục đích bảo mật. Bạn sẽ được yêu cầu nhập PIN hoặc mật khẩu để giải mã điện thoại mỗi lần bật nguồn.

Mã hóa bộ nhớ thẻ SD – Cho phép bạn mã hóa dữ liệu trên thẻ SD.

Việc gõ mật khẩu có thể bị nhìn thấy – Hiện thị ký tự cuối của mật khẩu ẩn khi bạn nhập.

Quản trị viên thiết bị – Xem hoặc hủy kích hoạt quản trị viên điện thoại.

Nguồn không xác định – Cài đặt mặc định để cài đặt các ứng dụng không phải của cửa hàng Play.

Xác nhận các ứng dụng – Không cho phép hoặc cảnh báo trước khi cài đặt các ứng dụng có thể gây hại.

Truy cập thông báo – Ứng dụng không thể đọc thông báo.

Loại bộ nhớ – Chỉ có phần mềm.

Quản Lý Chứng Nhận

Tính năng ủy nhiệm được tin cậy – Hiện thị chứng nhận CA đáng tin cậy.

Cài đặt từ bộ lưu trữ – Chọn để cài đặt chứng chỉ đã mã hóa.

Xóa thông tin xác thực – Xóa tất cả các chứng chỉ.

Trust agents – Chọn ứng dụng để sử dụng mà không cần mở màn hình.

Ghim màn hình – Cho phép chỉ một ứng dụng được sử dụng khi bạn ghim Ứng dụng vào màn hình.

Ứng dụng với quyền truy cập việc sử dụng dụng – Cho phép bạn xem thông tin sử dụng ứng dụng trên điện thoại.

< Nấp QuickCircle >

Cài đặt

Kích hoạt để các tính năng như Nhật ký cuộc gọi, Máy ảnh, LG Health, Tin nhắn, Nhạc được hiển thị dạng xem nhỏ khi sử dụng nắp QuickCircle.

< Hai cửa sổ >

Màn hình chia đôi có thể được xem cùng một lúc.

1. Chạm và giữ nút Quay lại để chia màn hình.
2. Nhấn hoặc kéo biểu tượng ứng dụng bạn muốn sử dụng.

 – Chuyển đổi giữa các màn hình phân chia.

 – Xem danh sách ứng dụng.

 – Mở toàn màn hình.

 – Đóng ứng dụng gần nhất.

Chia khung nhìn – Đánh dấu chọn để chạm vào một liên kết trên toàn màn hình hoặc phần đính kèm từ email để tự động mở hai cửa sổ.

Trợ giúp – Hiển thị mẹo để sử dụng hai cửa sổ.

< Ngày & Giờ >

Sử dụng cài đặt **Ngày & Giờ** để cách hiển thị ngày. Bạn cũng có thể sử dụng các cài đặt này để đặt giờ và múi giờ riêng thay vì lấy giờ hiện tại từ mạng di động.

< Bộ nhớ & USB >

BỘ NHỚ TRONG – Xem dữ liệu sử dụng bộ nhớ trong.

THẺ SD – Kiểm tra tổng dung lượng trống trên thẻ SD. Nhấn Tháo thẻ nhớ SD để tháo an toàn.

< Tiết kiệm Pin & Năng nguồn >

THÔNG TIN VỀ PIN

Thông tin Sạc pin được hiển thị trên hình ảnh pin cùng với tỉ lệ phần trăm sạc pin còn lại và tình trạng.

Chạm vào biểu tượng Sạc pin để hiển thị màn hình Sử dụng pin để xem

mức sử dụng pin và chi tiết sử dụng pin. Thông tin này hiển thị các thành phần và ứng dụng đang sử dụng nhiều năng lượng pin nhất. Chạm vào một trong các mục nhập để xem thêm thông tin chi tiết.

Cách sử dụng pin – Hiển thị đồ thị về mức pin còn lại dựa trên cách sử dụng trong 3 giờ gần đây. Thông tin này cũng hiển thị các thành phần và ứng dụng đang sử dụng nhiều năng lượng pin nhất.

Tỷ lệ pin hiện trên thanh trạng thái – Đánh dấu để hiển thị phần trăm mức pin trên Thanh Trạng thái bên cạnh biểu tượng pin.

TIẾT KIỆM PIN

Chạm nút Tiết kiệm pin để Bật hoặc Tắt chức năng này. Chạm Tiết kiệm pin để truy cập các cài đặt sau:


Tiết kiệm pin – Đặt phần trăm mức sạc pin để từ đó chức năng Tiết kiệm pin sẽ tự động bật. Chọn từ **Ngay lập tức**, **5% Pin** và **15% Pin**.

Tối ưu việc trò chơi – Điều chỉnh chất lượng video trong game để tiết kiệm pin.

< Bộ nhớ >

Hiển thị mức sử dụng bộ nhớ trung bình.

< Smart cleaning >

Hiển thị dung lượng đang sử dụng và còn trống trong điện thoại của bạn. Chạm  ở góc trên bên phải màn hình để đặt khoảng thông báo và khoảng thời gian không hoạt động.

< Ứng dụng >

Xem và quản lý các ứng dụng của bạn.

< Ứng dụng tin nhắn mặc định >

Đặt **Tin nhắn** hoặc **Hangouts** làm ứng dụng mặc định.

< Sao lưu & thiết lập lại >

Cài đặt

Thay đổi cài đặt để quản lý cài đặt và dữ liệu của bạn.

Sao lưu dữ liệu của tôi – Đặt để sao lưu cài đặt và dữ liệu ứng dụng của bạn vào máy chủ Google.

Tài khoản dự phòng – Đặt để sao lưu tài khoản của bạn.

Khôi phục tự động – Đặt để khôi phục cài đặt và dữ liệu ứng dụng của bạn khi ứng dụng được cài đặt lại vào thiết bị của bạn.

Cài đặt mạng được thiết lập lại – Tính năng này sẽ xác lập lại tất cả các cài đặt mạng, bao gồm Wi-Fi và Bluetooth.

Xác lập lại dữ liệu gốc – Xác lập lại cài đặt của bạn về giá trị mặc định ban đầu và xóa tất cả dữ liệu của bạn. Nếu bạn xác lập lại điện thoại bằng cách này, bạn được nhắc nhập lại cùng thông tin như khi bạn khởi động Android lần đầu.

< **Giới thiệu về điện thoại** >

Xem thông tin pháp lý và kiểm tra trạng thái của điện thoại cũng như phiên bản phần mềm.

Phần mềm PC (LG PC Suite)

Phần mềm PC "LG PC Suite" là một chương trình giúp bạn kết nối thiết bị với PC thông qua cáp truyền dữ liệu USB và Wi-Fi. Khi đã được kết nối, bạn có thể sử dụng các chức năng của thiết bị trên máy tính.

Với phần mềm PC "LG PC Suite", bạn có thể...

- Quản lý và phát các nội dung đa phương tiện (nhạc, phim, ảnh) trên máy tính.
- Gửi nội dung đa phương tiện tới thiết bị của bạn.
- Đồng bộ hóa dữ liệu (lich biểu, danh bạ, chỉ mục) trong thiết bị và máy tính.
- Sao lưu các ứng dụng trong thiết bị của bạn.
- Cập nhật phần mềm trong thiết bị của bạn.
- Phát nội dung đa phương tiện của máy tính từ thiết bị của bạn.
- Sao lưu và tạo và sửa ghi nhớ trong thiết bị

LƯU Ý: Bạn có thể sử dụng menu Trợ giúp từ ứng dụng để tìm hiểu cách sử dụng ứng dụng PC "LG PC Suite".

Cài đặt phần mềm PC "LG PC Suite"

Bạn có thể tải xuống phần mềm PC "LG PC Suite" từ trang web của LG.

- 1 Truy cập www.lg.com và chọn quốc gia của bạn.
- 2 Vào **Hỗ trợ > HỖ TRỢ DI ĐỘNG > Điện thoại di động LG > Chọn Kiểu máy**
hoặc
Vào **Hỗ trợ > Di động > Chọn Kiểu máy**.
- 3 Bấm **PC Sync** từ **SÁCH HƯỚNG DẪN & TẢI XUỐNG** và bấm **TẢI XUỐNG** để tải xuống phần mềm PC "LG PC Suite".

Phần mềm PC (LG PC Suite)

Yêu cầu hệ thống cho phần mềm PC "LG PC Suite"

- Hệ điều hành: Windows XP (Gói dịch vụ 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: Bộ xử lý 1GHz hoặc cao hơn
- Bộ nhớ: RAM 512MB hoặc cao hơn
- Cạc đồ họa: độ phân giải 1024 x 768, 32 bit màu hoặc cao hơn
- HDD: dung lượng ổ cứng trống 500 MB hoặc cao hơn (Có thể cần nhiều dung lượng ổ cứng trống hơn tùy thuộc vào lượng dữ liệu được lưu trữ.)
- Phần mềm yêu cầu: Các trình điều khiển tích hợp của LG, Windows Media Player 10 hoặc cao hơn

LƯU Ý: Trình điều khiển USB Tích hợp của LG

Yêu cầu trình điều khiển USB tích hợp của LG để kết nối thiết bị LG và máy tính. Trình điều khiển này được cài tự động khi bạn cài đặt ứng dụng phần mềm PC "LG PC Suite".

Đồng bộ hóa thiết bị với máy tính

Dữ liệu từ thiết bị và máy tính có thể đồng bộ hóa dễ dàng với phần mềm PC "LG PC Suite". Danh bạ, lịch biểu và chỉ mục, tất cả đều có thể đồng bộ hóa.

Quy trình như sau:

- 1 Kết nối thiết bị của bạn với máy tính. (Sử dụng cáp USB hoặc kết nối Wi-Fi).
- 2 Gạt thanh trạng thái xuống dưới > chọn **Thiết bị phương tiện (MTP)**.
- 3 Sau khi kết nối, chạy chương trình và chọn mục thiết bị từ danh mục nằm ở bên trái của màn hình.
- 4 Bấm **Thông tin cá nhân** để chọn.
- 5 Chọn hộp kiểm của nội dung muốn đồng bộ hóa và bấm nút **Đồng bộ**.

LƯU Ý: Để đồng bộ hóa điện thoại với máy tính bằng cáp USB, bạn cần cài đặt LG PC Suite trên máy tính của bạn. Vui lòng tham khảo các trang trước để cài đặt LG PC Suite.

Di chuyển danh bạ từ thiết bị cũ sang thiết bị mới

- 1 Xuất danh bạ dưới dạng tệp CSV từ thiết bị cũ sang máy tính bằng chương trình đồng bộ hóa của máy tính.
- 2 Cài đặt "LG PC Suite" trên máy tính trước. Chạy chương trình và kết nối điện thoại di động Android với PC bằng cáp USB.
- 3 Trong menu trên cùng, chọn **điện thoại** > **Nhập/Xuất liên hệ** > **Xuất** sang điện thoại của bạn.
- 4 Một cửa sổ bật lên để chọn loại tệp và một tệp để xuất sẽ xuất hiện.
- 5 Trong cửa sổ bật lên, bấm vào **Chọn tệp** và Windows Explorer sẽ xuất hiện.
- 6 Chọn tệp liên hệ muốn nhập trong Windows Explorer và nhấp **Mở**.
- 7 Bấm **Xuất**.
- 8 Cửa sổ bật lên **Ảnh xạ trường** để liên kết các liên hệ trong thiết bị của bạn và dữ liệu liên hệ mới sẽ xuất hiện.
- 9 Nếu có xung đột giữa dữ liệu trong danh bạ máy tính của bạn và danh bạ trong thiết bị, hãy thực hiện những lựa chọn hoặc sửa đổi cần thiết trong LG PC Suite.
- 10 Nhấp **OK**.

Cập nhật phần mềm điện thoại

Cập nhật phần mềm điện thoại

Cập nhật phần mềm điện thoại di động LG từ Internet

Để biết thêm thông tin về sử dụng chức năng này, vui lòng truy cập <http://www.lg.com/common/index.jsp> → chọn quốc gia và ngôn ngữ.

Tính năng này cho phép bạn cập nhật phần mềm cơ sở của điện thoại lên phiên bản mới hơn một cách thuận tiện từ Internet mà không cần đến trung tâm bảo hành. Tính năng này sẽ chỉ có nếu và khi LG tạo ra phiên bản phần mềm cơ sở mới hơn cho thiết bị của bạn.

Vì cập nhật phần mềm cơ sở dành cho điện thoại di động yêu cầu sự chú ý hoàn toàn của người dùng trong thời gian diễn ra cập nhật, vui lòng đảm bảo bạn đã kiểm tra tất cả các hướng dẫn và chú ý xuất hiện tại mỗi bước trước khi tiếp tục. Chú ý rằng việc tháo rời cáp dữ liệu USB trong quá trình nâng cấp có thể làm hư hỏng điện thoại di động của bạn.

LƯU Ý: LG bảo lưu quyền tạo ra bản cập nhật phần mềm cơ sở cho các kiểu được lựa chọn của riêng hãng và không đảm bảo tính sẵn có của phiên bản phần mềm cơ sở mới hơn cho tất cả các kiểu điện thoại.

Cập nhật Phần mềm Điện thoại Di động LG qua Môi trường không dây (Over-the-Air - OTA)

Tính năng này cho phép bạn cập nhật phần mềm của điện thoại lên phiên bản mới hơn một cách tiện lợi qua OTA mà không cần kết nối bằng cáp dữ liệu USB. Tính năng này sẽ chỉ có nếu và khi LG tạo ra phiên bản phần mềm cơ sở mới hơn cho thiết bị của bạn.

Trước tiên, bạn nên kiểm tra phiên bản phần mềm trên điện thoại di động của mình: **Cài đặt > tab Chung > Giới thiệu về điện thoại > Trung tâm cập nhật > Cài Đặt Phần Mềm > Kiểm tra ngay để cập nhật.**

LƯU Ý: Dữ liệu cá nhân của bạn từ bộ nhớ trong của điện thoại—bao gồm thông tin về tài khoản Google và các tài khoản khác, dữ liệu và cài đặt hệ thống/ứng dụng của bạn, các ứng dụng đã tải về và giấy phép DRM của bạn—có thể bị mất trong quá trình cập nhật phần mềm điện thoại. Do đó, LG khuyên bạn nên sao lưu dữ liệu cá nhân trước khi cập nhật phần mềm điện thoại. LG không chịu trách nhiệm về việc mất mát dữ liệu cá nhân.

LƯU Ý: Tính năng này phụ thuộc vào nhà cung cấp dịch vụ mạng, vùng và quốc gia của bạn.

Thông tin về hướng dẫn sử dụng này

Thông tin về hướng dẫn sử dụng này

- Trước khi sử dụng thiết bị, vui lòng đọc kỹ sách hướng dẫn này. Điều này đảm bảo bạn sẽ sử dụng điện thoại an toàn và đúng cách.
- Một số hình ảnh và ảnh chụp màn hình được cung cấp trong hướng dẫn này có thể khác so với trên điện thoại.
- Nội dung của bạn có thể khác với sản phẩm cuối, hoặc khác với phần mềm mà nhà cung cấp dịch vụ hoặc nhà khai thác mạng cung cấp, Nội dung này có thể thay đổi mà không cần thông báo trước. Để có phiên bản mới nhất của sách hướng dẫn này, vui lòng truy cập trang web của LG tại địa chỉ www.lg.com.
- Các ứng dụng trong điện thoại của bạn và chức năng của chúng có thể thay đổi theo từng quốc gia, vùng hoặc thông số kỹ thuật phần cứng. LG không chịu trách nhiệm đối với bất kỳ sự cố hoạt động nào bắt nguồn từ việc sử dụng các ứng dụng do những nhà cung cấp không phải LG phát triển.
- LG không chịu trách nhiệm đối với sự cố hoạt động hoặc tính tương thích bắt nguồn từ đăng ký bị chỉnh sửa, cài đặt bị chỉnh sửa hoặc phần mềm hệ điều hành bị sửa đổi. Mọi cố gắng tùy chỉnh hệ điều hành của bạn có thể khiến thiết bị hoặc các ứng dụng của thiết bị không hoạt động như bình thường.
- Phần mềm, âm thanh, hình nền, hình ảnh và nội dung đa phương tiện khác cung cấp kèm thiết bị của bạn được cấp phép sử dụng hạn chế. Nếu bạn trích xuất hoặc sử dụng các tài liệu này cho mục đích thương mại hoặc mục đích khác, bạn có thể vi phạm luật bản quyền. Là người dùng, bạn hoàn toàn chịu trách nhiệm đối với việc sử dụng phi pháp nội dung đa phương tiện.
- Bạn có thể phải trả thêm phí cho các dịch vụ dữ liệu, chẳng hạn như nhắn tin, tải lên và tải xuống, tự động đồng bộ hóa hoặc sử dụng dịch vụ vị trí. Để tránh mất thêm phí, chọn gói dữ liệu phù hợp với nhu cầu của bạn. Liên hệ với nhà cung cấp dịch vụ của bạn để biết thêm chi tiết.

Thương hiệu

- LG và biểu trưng LG là thương hiệu đã đăng ký của LG Electronics.
- Bluetooth® là thương hiệu đã đăng ký của Bluetooth SIG, Inc. trên toàn thế giới.
- Wi-Fi® và biểu trưng Wi-Fi là thương hiệu đã đăng ký của Wi-Fi Alliance.
- Tất cả thương hiệu và bản quyền khác là tài sản của các chủ sở hữu tương ứng.

DivX HD

Thiết bị DivX Certified® này đã vượt qua kiểm tra gắt gao để đảm bảo phát được video DivX®.

Để phát các bộ phim DivX đã mua, trước tiên hãy đăng ký thiết bị của bạn tại vod.divx.com. Tìm mã đăng ký trong phần DivX VOD của menu cài đặt thiết bị.

DivX Certified® để phát video DivX® với chất lượng HD 720P, bao gồm cả nội dung phải trả phí.

DivX®, DivX Certified® và các logo liên kết là thương hiệu của DivX, Inc. và được sử dụng theo giấy phép.

Dolby Digital Plus DOLBY. DIGITAL PLUS

Được sản xuất theo giấy phép từ Dolby Laboratories. Dolby, Dolby Digital Plus và biểu tượng chữ D kép là thương hiệu của Dolby Laboratories.

Thông tin về hướng dẫn sử dụng này

Thông tin của thông báo phần mềm nguồn mở

Để nhận mã nguồn theo GPL, LGPL, MPL và các giấy phép nguồn mở khác, được bao gồm trong sản phẩm này, vui lòng truy cập <http://opensource.lge.com>.


Ngoài mã nguồn, tất cả các điều khoản cấp phép, tuyên bố từ chối trách nhiệm và thông báo bản quyền được tham chiếu đều có sẵn để tải xuống.

LG Electronics cũng sẽ cung cấp mã nguồn mở cho bạn trong CD-ROM có mất phí để chi trả cho chi phí phát hành đó (ví dụ như chi phí đĩa, vận chuyển và xử lý) khi nhận được yêu cầu qua email đến opensource@lge.com. Ưu đãi này có thời hạn ba (3) năm kể từ ngày bạn mua sản phẩm.

Phụ kiện

Các phụ kiện này có sẵn để sử dụng với điện thoại của bạn. (Các mục được mô tả bên dưới có thể là tùy chọn).

Bộ sạc du lịch




Tai nghe stereo




Hướng dẫn
bắt đầu nhanh
(HDBĐN)



Cáp dữ liệu



Pin



LƯU Ý:

- Luôn sử dụng các phụ kiện chính hiệu của LG.
- Nếu không, bạn có thể không được bảo hành.
- Phụ kiện có thể khác nhau tùy từng khu vực.

Sửa lỗi

Chương này liệt kê một số vấn đề mà bạn có thể gặp phải khi sử dụng điện thoại của mình. Một số vấn đề buộc bạn phải gọi cho nhà cung cấp dịch vụ nhưng hầu hết các vấn đề đều đơn giản để bạn có thể tự sửa chữa.

Tin nhắn	Nguyên nhân	Biện pháp khắc phục
Lỗi thẻ Micro-SIM	Không có thẻ SIM trong điện thoại hoặc lắp thẻ không đúng.	Đảm bảo rằng thẻ SIM được lắp đúng.
Không có kết nối mạng/ Rớt mạng	Tín hiệu yếu hoặc bạn nằm ngoài vùng phủ sóng của mạng.	Di chuyển tới cửa sổ hoặc vào một khu vực thoáng. Kiểm tra bản đồ phủ sóng của nhà điều hành mạng.
	Nhà điều hành áp dụng các dịch vụ mới.	Kiểm tra xem thẻ SIM đã được sử dụng hơn 6~12 tháng hay chưa. Nếu đã qua thời gian này, thay đổi Micro-SIM của bạn tại chi nhánh gần nhất của nhà cung cấp mạng. Liên hệ với nhà cung cấp dịch vụ.

Tin nhắn	Nguyên nhân	Biện pháp khắc phục
Các mã không khớp	Để thay đổi mã bảo mật, bạn sẽ cần phải xác nhận mã mới bằng cách nhập lại mã đó.	Nếu bạn quên mã này, hãy liên hệ với nhà cung cấp dịch vụ.
	Hai mã mà bạn đã nhập không khớp với nhau.	
Không thể cài đặt ứng dụng nào	Không được nhà cung cấp dịch vụ hỗ trợ hoặc yêu cầu đăng ký.	Liên hệ với nhà cung cấp dịch vụ.
Không thể gọi	Lỗi quay số	Mạng mới không được phép.
	Lắp thẻ Micro-SIM mới.	Kiểm tra các hạn chế mới.
	Đã đạt đến giới hạn cước phí trả trước.	Liên hệ nhà cung cấp dịch vụ hoặc xác lập lại giới hạn bằng PIN2.
Không thể bật điện thoại	Phím On/Off được nhấn quá nhanh.	Nhấn phím Bật/Tắt ít nhất hai giây.
	Pin chưa được sạc.	Sạc pin. Kiểm tra chỉ báo sạc trên màn hình.

Sửa lỗi

Tin nhắn	Nguyên nhân	Biện pháp khắc phục
Lỗi sạc pin	Pin chưa được sạc.	Sạc pin.
	Nhiệt độ bên ngoài quá nóng hoặc quá lạnh.	Đảm bảo điện thoại đang sạc ở nhiệt độ bình thường.
	Vấn đề về tiếp xúc	Kiểm tra bộ sạc và kết nối của bộ sạc với điện thoại.
	Không có điện áp	Cắm bộ sạc vào ổ cắm khác.
	Lỗi bộ sạc	Thay thế bộ sạc.
	Bộ sạc không đúng	Chỉ sử dụng phụ kiện LG chính hãng.
Không cho phép số	Chức năng số quay cố định đang bật.	Kiểm tra menu Cài đặt và tắt chức năng.
Không thể nhận / gửi SMS & ảnh	Bộ nhớ đầy	Xóa một số tin nhắn khỏi điện thoại.
Tệp không mở	Định dạng tệp không được hỗ trợ	Kiểm tra định dạng tệp được hỗ trợ.



Tin nhắn	Nguyên nhân	Biện pháp khắc phục
Màn hình không bật khi tôi nhận cuộc gọi.	Sự cố với cảm biến tình trạng gắn kể	Nếu bạn sử dụng băng dính hay hộp bảo vệ, đảm bảo phần băng dính hay hộp đó không che khu vực xung quanh cảm biến trạng thái gắn kể. Đảm bảo khu vực xung quanh cảm biến được sạch sẽ.
Không có âm thanh	Chế độ rung	Kiểm tra tình trạng cài đặt trong menu âm thanh để đảm bảo bạn không ở chế độ rung hoặc im lặng.
Treo hoặc không hoạt động	Sự cố phần mềm không ổn định	Thử thực hiện cập nhật phần mềm qua trang web.


Câu hỏi Thường Gặp

Loại Loại phụ	Câu hỏi	Trả lời
BT Bluetooth Thiết bị	Các chức năng nào có sẵn qua Bluetooth	Bạn có thể kết nối thiết bị âm thanh Bluetooth như tai nghe Stereo/Mono hoặc Bộ phụ kiện Trên xe. Ngoài ra, khi máy chủ FTP được kết nối với thiết bị tương thích, bạn có thể chia sẻ nội dung được lưu trữ trên phương tiện lưu trữ.
BT Bluetooth Tai nghe	Nếu tai nghe Bluetooth của tôi được kết nối, tôi có thể nghe nhạc qua tai nghe có dây 3,5mm không?	Khi tai nghe Bluetooth được kết nối, tất cả âm thanh hệ thống sẽ được phát qua tai nghe này. Do đó, bạn sẽ không thể nghe nhạc qua tai nghe có dây.
Dữ liệu Danh bạ Sao lưu	Tôi có thể sao lưu Danh bạ bằng cách nào?	Dữ liệu Danh bạ có thể được đồng bộ hóa giữa điện thoại của bạn với Gmail™.
Dữ liệu Đồng bộ hóa	Có thể thiết lập đồng bộ hóa một chiều với Gmail không?	Chỉ có đồng bộ hóa hai chiều.
Dữ liệu Đồng bộ hóa	Có thể đồng bộ hóa tất cả thư mục email không?	Hộp thư đến được đồng bộ hóa tự động. Bạn có thể xem các thư mục khác bằng cách chạm Phím Menu và chọn Thư mục để chọn một thư mục.
Dịch vụ Google™ Đăng nhập Gmail	Tôi có phải đăng nhập vào Gmail mỗi lần tôi muốn truy cập Gmail không?	Khi bạn đã đăng nhập Gmail, bạn sẽ không cần đăng nhập lại Gmail nữa.

Loại phụ	Câu hỏi	Trả lời
Dịch vụ Google™ Tài khoản Google	Có thể lọc email không?	Không, lọc email không được hỗ trợ qua điện thoại.
Chức năng Điện thoại Email	Điều gì sẽ xảy ra khi tôi chạy một ứng dụng khác trong khi viết email?	Email của bạn sẽ được lưu tự động dưới dạng thư nháp.
Chức năng Điện thoại Nhạc chuông	Có giới hạn kích thước tệp khi tôi muốn sử dụng tệp MP3 làm nhạc chuông không?	Không có giới hạn kích thước tệp.
Chức năng Điện thoại Thời gian của tin nhắn	Điện thoại của tôi không hiển thị thời gian nhận các tin nhắn lâu hơn 24 giờ. Làm cách nào để thay đổi điều này?	Bạn sẽ chỉ có thể thay đổi thời gian cho các tin nhắn nhận trong cùng một ngày.
Chức năng Điện thoại Điều hướng	Có thể cài đặt ứng dụng điều hướng khác trên điện thoại của tôi không?	Bất cứ ứng dụng nào có sẵn trên Play Store™ và tương thích với phần cứng đều có thể cài đặt và sử dụng.
Chức năng Điện thoại Đồng bộ	Có thể đồng bộ hóa danh bạ của tôi từ tất cả tài khoản email không?	Chỉ có thể đồng bộ hóa danh bạ trên Gmail và máy chủ MS Exchange (máy chủ email của công ty).

Câu hỏi Thường Gặp

Loại phụ	Câu hỏi	Trả lời
Chức năng Điện thoại Đợi và Tạm dừng	Có thể lưu liên hệ có Đợi và Tạm dừng trong số không?	<p>Nếu bạn truyền một liên hệ có chức năng W & P được lưu trong số, bạn sẽ không thể sử dụng các tính năng đó. Bạn sẽ cần lưu lại từng số.</p> <p>Cách lưu với Đợi và Tạm dừng:</p> <ol style="list-style-type: none">Từ Màn hình chủ, chạm vào biểu tượng Điện thoại .Quay số, sau đó chạm Phím Menu .Chạm Thêm 2 giây tạm dừng hoặc Thêm chờ.
Chức năng Điện thoại Bảo mật	Chức năng bảo mật của điện thoại là gì?	Bạn có thể cài đặt điện thoại yêu cầu nhập Hình Mở khóa trước khi có thể truy cập hoặc sử dụng điện thoại.

Loại phụ	Câu hỏi	Trả lời
<p>Chức năng Điện thoại Mở khoá Hình mở khoá</p>	<p>Làm cách nào để tôi tạo Hình mở khoá?</p>	<ol style="list-style-type: none"> 1. Từ Màn hình chủ, chạm và giữ Phím Menu . 2. Chạm Cài đặt hệ thống > tab Hiển thị > Khóa màn hình. 3. Chạm Chọn khóa màn hình > Kiểu mẫu. Lần đầu tiên bạn thực hiện việc này, đoạn hướng dẫn ngắn về tạo Hình Mở khóa sẽ xuất hiện. 4. Thiết lập bằng cách vẽ hình của bạn một lần và một lần để xác nhận. <p>Cẩn trọng khi sử dụng khoá máy bằng hình.</p> <p>Bạn cần nhớ hình mở khóa bạn đã đặt. Bạn không thể truy cập điện thoại nếu bạn sử dụng hình mở khoá sai 5 lần. Bạn có 5 cơ hội để nhập Hình mở khóa, PIN hoặc Mật khẩu. Nếu bạn đã sử dụng hết 5 cơ hội, bạn có thể thử lại sau 30 giây. (Hoặc, nếu bạn đặt sẵn PIN sao lưu, bạn có thể sử dụng mã PIN để mở khóa kiểu hình.)</p>
<p>Chức năng Điện thoại Mở khoá Hình mở khoá</p>	<p>Tôi nên làm gì nếu tôi quên hình mở khóa và tôi không thể tạo tài khoản Google trên điện thoại?</p>	<p>Nếu bạn đã quên hình:</p> <p>Nếu bạn đã đăng nhập vào tài khoản Google của mình trên điện thoại nhưng nhập sai hình 5 lần, chạm vào nút quên hình. Bạn sẽ được yêu cầu đăng nhập bằng tài khoản Google để mở khóa điện thoại.</p>

Câu hỏi Thường Gặp

Loại Loại phụ	Câu hỏi	Trả lời
Chức năng Điện thoại Bộ nhớ	Tôi sẽ biết khi nào bộ nhớ đầy chứ?	Có, bạn sẽ nhận được thông báo.
Chức năng Điện thoại Hỗ trợ Ngôn ngữ	Có thể thay đổi ngôn ngữ của điện thoại không?	Điện thoại có khả năng song ngữ. Để thay đổi ngôn ngữ: 1. Từ Màn hình chủ, chạm và giữ Phím Menu <input type="checkbox"/> và chạm Cài đặt hệ thống . 2. Chạm tab Chung > Ngôn ngữ & bàn phím > Ngôn ngữ . 3. Chạm ngôn ngữ mong muốn.
Chức năng Điện thoại VPN	Làm cách nào để tôi thiết lập VPN?	Cấu hình truy cập VPN khác nhau theo từng công ty. Để cài cấu hình truy cập VPN từ điện thoại của bạn, bạn phải có thông tin chi tiết từ quản trị viên mạng của công ty của bạn.
Chức năng Điện thoại Thời gian chờ của màn hình	Màn hình của tôi tắt chỉ sau 15 giây. Làm cách nào để tôi thay đổi khoảng thời gian tắt đèn nền?	1. Từ Màn hình chủ, chạm và giữ Phím Menu <input type="checkbox"/> . 2. Chạm Cài đặt hệ thống > tab Hiển thị . 3. Chạm Thời gian chờ của màn hình . 4. Chạm vào thời gian chờ đèn nền màn hình bạn muốn.

Loại phụ	Câu hỏi	Trả lời
Chức năng Điện thoại Wi-Fi & Mạng di động	Khi cả mạng Wi-Fi và Mạng di động đều khả dụng, điện thoại của tôi sẽ sử dụng dịch vụ nào?	<p>Khi sử dụng dữ liệu, điện thoại của bạn có thể mặc định sử dụng kết nối Wi-Fi (nếu kết nối Wi-Fi trên điện thoại của bạn được Bật). Tuy nhiên, sẽ không có thông báo khi điện thoại của bạn chuyển từ dịch vụ này sang dịch vụ khác.</p> <p>Để biết kết nối dữ liệu Wi-Fi đang được sử dụng, chỉ cần xem biểu tượng Wi-Fi ở trên cùng màn hình mà không cần mạng di động.</p>
Chức năng Điện thoại Màn hình chủ	Có thể xóa ứng dụng khỏi Màn hình chủ không?	<p>Có. Chỉ cần chạm và giữ biểu tượng đó cho đến khi biểu tượng thùng rác xuất hiện ở trên cùng và chính giữa màn hình. Sau đó, đừng nhấc tay ra, hãy kéo biểu tượng vào thùng rác.</p>
Chức năng Điện thoại Ứng dụng	Tôi đã tải xuống ứng dụng và việc này đã khiến xảy ra nhiều lỗi. Làm cách nào để tôi xóa nó?	<ol style="list-style-type: none"> 1. Từ Màn hình chủ, chạm và giữ Phím Menu <input type="checkbox"/>. 2. Chạm Cài đặt hệ thống > tab Chung > Ứng dụng > Đã tải. 3. Chạm vào ứng dụng, sau đó chạm Gỡ cài đặt.
Chức năng Điện thoại Bộ sạc	Có thể sạc điện thoại bằng cáp dữ liệu USB mà không cần cài đặt trình điều khiển USB cần thiết không?	<p>Có, điện thoại sẽ được sạc bằng cáp USB bất kể việc các trình điều khiển cần thiết có được cài đặt hay không.</p>

Câu hỏi Thường Gặp

Loại Loại phụ	Câu hỏi	Trả lời
Chức năng Điện thoại Báo thức	Tôi có thể sử dụng tệp âm nhạc làm báo thức không?	<p>Có. Sau khi lưu tệp âm nhạc làm nhạc chuông, bạn có thể sử dụng tệp này làm báo thức.</p> <ol style="list-style-type: none">1. Chạm và giữ một bài hát trong danh sách thư viện. Trong menu mở ra, chạm Đặt làm nhạc chuông > Nhạc chuông điện thoại hoặc Nhạc chuông liên hệ.2. Trong màn hình cài đặt đồng hồ báo thức, chọn bài hát làm nhạc chuông.
Chức năng Điện thoại Báo thức	Báo thức của tôi sẽ kêu hay nó sẽ bị tắt khi tắt thiết bị?	Không, chức năng này không được hỗ trợ.
Chức năng Điện thoại Báo thức	Nếu âm lượng chuông được đặt thành Tắt hoặc Rung, tôi có nghe thấy báo thức của mình không?	Báo thức được lập trình phát âm thanh cả trong những tình huống này.

User Guide

4G LTE* ready

* Please check with your network operator if 4G LTE is available on your SIM

- Screen displays and illustrations may differ from those you see on actual phone.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the tap screen keyboard.
- Copyright ©2016 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

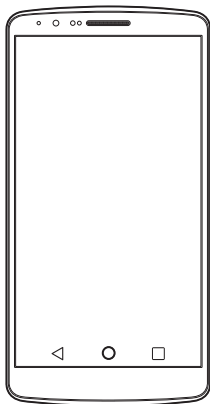


Table of contents

Guidelines for safe and efficient use	5	Bluetooth.....	38
Important notice	14	Sharing your phone's data connection ...	39
Getting to know your phone	19	Wi-Fi Direct.....	41
Phone overview.....	19	Using SmartShare.....	41
Installing the SIM card and battery.....	21	PC connections with a USB cable.....	43
Charging your phone.....	23	Calls	44
Using the memory card.....	24	Making a call.....	44
Locking and unlocking the screen.....	25	Calling your contacts.....	44
Knock Code.....	26	Answering and rejecting a call.....	44
KnockON.....	27	Adjusting the in-call volume.....	44
Stereo headset with microphone.....	27	Making a second call.....	45
Your Home screen	29	Viewing your call logs.....	45
Touch screen tips.....	29	Call settings.....	46
Home screen.....	30	Contacts	47
Extended home screen.....	30	Searching for a contact.....	47
Customizing the Home screen.....	31	Adding a new contact.....	47
Returning to recently-used applications...	32	Favourites contacts.....	47
Notifications panel.....	32	Creating a group.....	48
Opening the notifications panel.....	33	Messaging	49
Indicator icons on the Status Bar.....	33	Sending a message.....	49
On-screen keyboard.....	35	Threaded box.....	50
Entering accented letters.....	35	Changing your message settings.....	50
Google account setup	36	E-mail	51
Connecting to Networks and Devices	37	Managing an email account.....	51
Wi-Fi.....	37	Working with account folders.....	51
Connecting to Wi-Fi networks.....	37	Composing and sending email.....	52
Turning Wi-Fi on and connecting to a Wi-Fi network.....	37	Camera and Video	53
		To open the Camera application.....	53

Getting to know the viewfinder.....	53	How to Get to LG SmartWorld from Your Phone	70
Take Pictures.....	54	Multimedia.....	71
Record Videos.....	54	Music	71
Camera and Video Settings.....	55	Add music files to your phone.....	71
Multi-point Auto Focus	56	Transfer music using Media device (MTP).....	71
Dual.....	56	Playing a song.....	71
Gesture shot.....	57	Utilities	73
Super Zooming.....	58	Setting your alarm	73
View Your Pictures	58	Using your calculator	73
Gallery Options	58	Adding an event to your calendar.....	73
Assign Pictures.....	59	Voice Recorder	74
Video Options	60	Recording a sound or voice	74
Live Zoom	61	Sending the voice recording	74
Dual Play	62	Tasks.....	74
Gallery.....	62	Google+	75
Working with photos	63	Voice Search.....	75
To share a video	64	Downloads	75
To delete a video.....	64	The Web	76
QSlide while playing videos	64	Internet.....	76
Function	65	Using the Web toolbar	76
Capture+	65	Viewing webpages.....	76
Using the Capture+ options.....	66	Opening a page	76
Viewing the saved Capture+	66	Searching the web by voice.....	77
QSlide.....	67	Bookmarks.....	77
QuickRemote.....	68	History	77
Smart Keyboard.....	69	Using Popup Browser.....	77
Move cursor using space bar.....	69	Chrome	78
Enter suggested word using gesture control	69		
LG SmartWorld	70		

Table of contents

Viewing webpages	78
Opening a page	78
Syncing with other devices	78
Settings	79
Networks	79
Sound & notification	82
Display	83
General	86
PC software (LG PC Suite)	93
Phone software update	96
Phone software update	96
About this user guide	98
About this user guide	98
Trademarks	99
DivX HD	99
Dolby Digital Plus	99
Accessories	100
Troubleshooting	101
FAQ	105

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-D855 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.291 W/kg (10 g) and when worn on the body is 0.269 W/Kg (10 g).

Guidelines for safe and efficient use

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

Anti-Theft Guide

You can set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

Guidelines for safe and efficient use

All you need to make sure your device is protected is:

- **Set a screen lock:** If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- **Add your Google account on your device:** If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.

NOTE:

- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.


Laser safety statement

Caution!

This product employs a laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorised service centre.

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure or make direct contact with the laser.

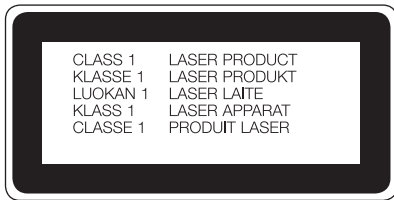

Instructions for Wireless Charger

Be sure to use a wireless charger that is genuine or compatibility-certified (by WPC Qi standards).

(Wireless charger is sold separately.)

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-D855** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

Important notice




Please read this before you start using your phone!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab >  **Settings** > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

2. Optimizing battery life




Extend your battery's power by turning off features that you don't have to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:




- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth® or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.
- While using downloaded applications, check the battery charge level.

NOTE: If you accidentally press the Power/Lock Key while the device is in your pocket, the screen will turn off automatically in order to save battery power.

To check the battery power level:

- Tap  >  > **Apps** tab >  **Settings** > **General** tab > **About phone** > **Battery**. The battery status (charging or discharging) and battery level (percentage charged) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- Tap  >  > **Apps** tab >  **Settings** > **General** tab > **About phone** > **Battery** > **Battery usage**.

Battery usage time is displayed on the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Before installing an open source application and OS

WARNING




If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, the phone may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

Important notice

4. Using an unlock pattern

Set an unlock pattern to secure your phone. Tap  >  > **Apps** tab >  **Settings** > **Display** tab > **Lock screen** > **Select screen lock** > **Pattern**. This opens a screen that will guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure in case you forget your unlock pattern.

Caution: Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.



WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.



When you can't recall your unlock Pattern, PIN or Password:

< If you have forgotten your pattern >

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock.

5. Opening and switching applications

Multi-tasking is easy with Android, you can keep more than one application running at the same time. There is no need to quit an application before opening another one. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

- 1 Tap **Recent Key** . A list of recently used applications will be displayed.
 - 2 Tap the application you want to access. This does not stop the previous app running in the background on the phone. Make sure to tap **Back Key**  to exit an app after using it.
- To remove an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

6. Transferring music, photos and videos using Media device (MTP)

- 1 Connect your device to a PC using the USB cable that came with your phone.
- 2 Open the Notifications panel and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.

NOTE:

- The LG Android Platform Driver is required to be installed on your PC to be able to detect the phone.
- Check the requirements for using **Media device (MTP)**.

Important notice

7. Hold your phone upright

Hold your cell phone vertically, as you would a regular phone. Your phone has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

When making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

8. Do not connect your phone when you power on/off your PC

Make sure to disconnect your phone from the PC when powering your PC on or off as it might result in PC errors.

9. Hardware key control mode


If your phone display is damaged or broken, you can answer an incoming call, or turn off an alarm using the hardware keys.

- 1 Turn your phone off.
- 2 Press and hold the **Power/Lock Key** and the **Volume Keys** at the same time for more than 6 seconds to enter the Hardware key control mode.
- 3 Press the **Volume Keys** to scroll to the desired option, then press the **Power/Lock Key** to confirm.
 - **Answer call:** Press the **Volume Keys** at the same time.
 - **Stop alarm:** When an alarm rings, press and hold the **Volume Up Key** or **Volume Down Key** to stop the alarm.

NOTE: If you use your phone with a broken display glass, your phone can break even more or you can be injured. Make sure to visit the LG authorised service centre to get your phone repaired.

Getting to know your phone

Phone overview

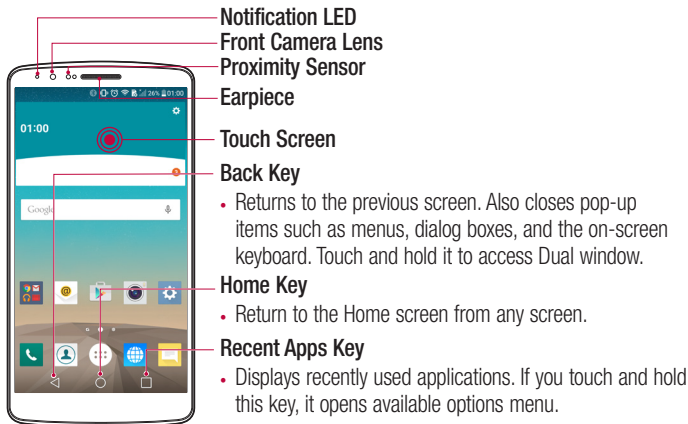


NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off by sensing when the phone is near your ear. This extends battery life.

WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

Getting to know your phone

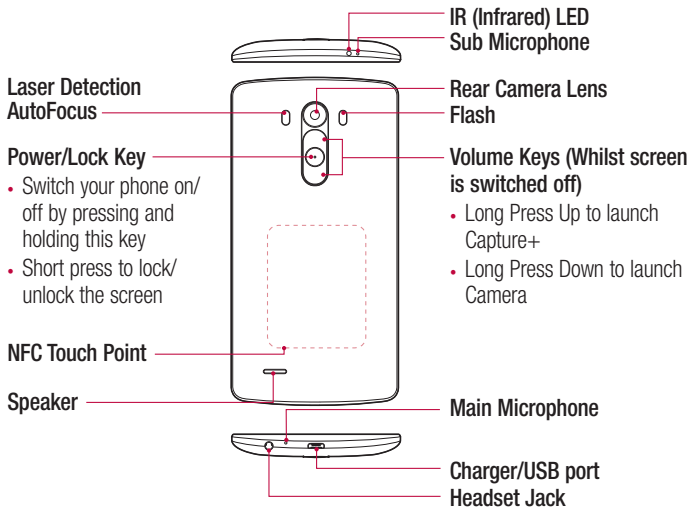


WARNING

- This part encloses the battery compartment.
- Be careful not to damage the NFC touch point on the phone, which is part of the NFC antenna.


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up.

- 1 To remove the back cover, hold the phone firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in figure below.

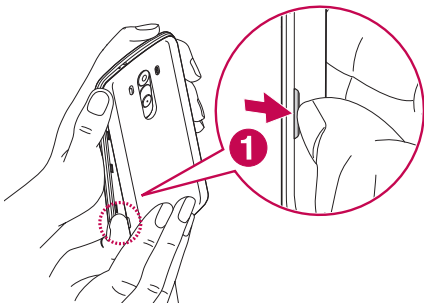


- 2 Slide the SIM card into the lower slot for the SIM card as shown in figure. Make sure the gold contact area on the card is facing downwards.

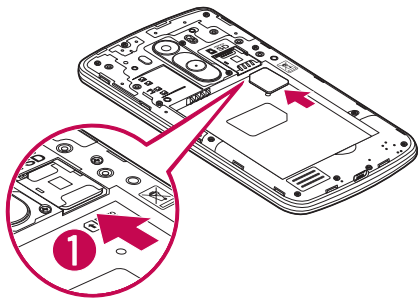


Getting to know your phone

- 3** Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).

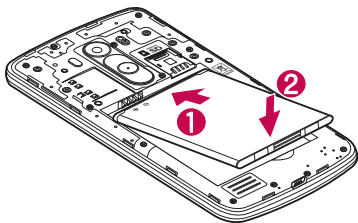

- 4** Align the back cover over the battery compartment (1) and press it down until it clicks into place (2).

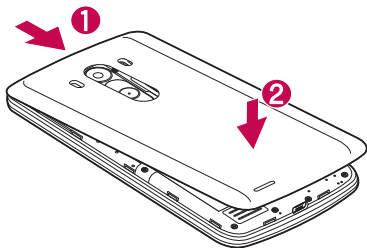


Charging your phone

Charge the battery before using it for the first time. Use the charger to charge the battery. A computer can be also used to charge the device by connecting them via the USB cable.

WARNING

Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay or pop up message regarding slow charging, or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.

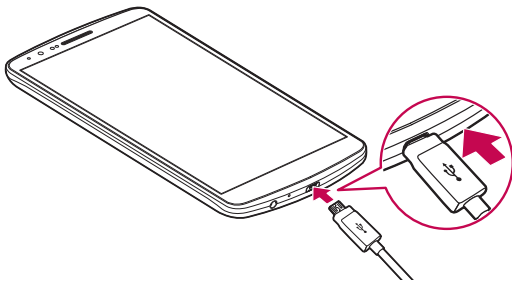

NOTE:

- The battery must be fully charged initially to improve battery lifetime.
- Do not open the back cover while your phone is charging.

Getting to know your phone

Using the memory card


Your phone supports the use of microSD™, microSDHC™ or microSDXC™ memory cards of up to 2TB capacity. These memory cards are specifically designed for mobile phones and other ultra-small devices and are ideal for storing media-rich files such as music, programs, videos, and photographs for use with your phone.

To insert a memory card:

Insert the memory card into the upper slot for the memory card. Make sure the gold contact area of Memory card is facing downwards.

To safely remove the memory card:

Touch  > **Apps** tab >  **Settings** > **General** tab > **Storage & USB** > **SD card**  tab.

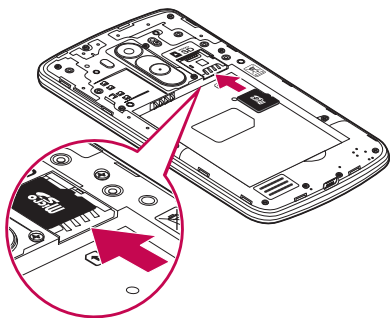




NOTE:

- Use only compatible memory cards with your phone. Using incompatible memory cards may damage the card and data stored on the card, as well as the phone.
- It's important to unmount the memory card prior to removing it from the phone to avoid damage to it or the data saved on the card.

To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.



NOTE: All files on your memory card are deleted when it is formatted.

- 1 Touch  to open the application list.
- 2 Scroll and touch  **Settings** > **General** tab > **Storage & USB**.
- 3 Touch **SD card**.
- 4 Touch  option > **Settings** > **Format**.

NOTE: If there is content on your memory card, the folder structure may be different after formatting, as all the files will have been deleted.

Locking and unlocking the screen

If you do not use the phone for a while, the screen will be automatically turned off and locked. This helps to prevent accidental taps and saves battery power.

When you are not using the phone, press the **Power/Lock key**  to lock your phone. If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications). To wake up your phone, press the **Power/Lock key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

Getting to know your phone


Knock Code

The Knock Code feature allows you to tap the screen with your own Knock Code pattern using the screen divided by 4 squares to easily turn the screen on or off. You can disable this feature in the Lock screen settings.

NOTE:

- If you enter the wrong Knock Code 6 times, it will compulsorily take you to your Google account log in/backup PIN.
- Use the fingertip instead of finger nail to tap the screen for turning it on or off.
- When the Knock Code is not in use, you can use KnockON function by tapping the screen.

- 1 From the Home screen, tap the  **Apps Key** >  **Settings** > **Display** tab.
- 2 Tap **Lock screen** > **Select screen lock** > **Knock Code**.
- 3 Tap the squares in a pattern to set your knock code.

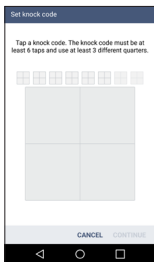

Unlock the screen using the Knock Code

You can unlock the screen by tapping the Knock Code pattern you already set.

- 1 When the screen turns off, press the Power key.
- 2 Tap the Knock Code pattern you set before.

KnockON

You can lock or unlock the screen by just double-tap.


Double-tap the centre screen quickly to unlock the screen. To lock the screen, double-tap the status bar in any screen (except on the camera viewfinder) or empty area on the Home screen.

NOTE: When turning the screen on, make sure you do not cover the proximity sensor. Doing so will turn the screen off immediately after turning it on in order to prevent abnormal turning on in your pocket or bag.

Stereo headset with microphone


With the headset connected, you can enjoy music or video with stereo sound, and easily switch from your music/video to take and end calls.

< Front >




- For an incoming call, press to receive or end a call.
- When you listen to music, press to stop playback or resume. Press twice to play the next track.



< Back >



Getting to know your phone

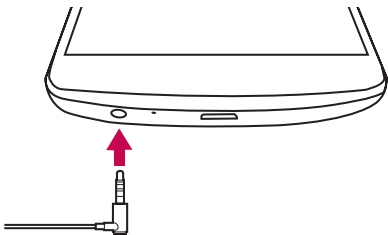- 1 Plug in the headset as shown below.



- 2 If a call is coming when the headset is connected to the phone, press the  to take the call.
- 3 To end the call, press the  again.

Your Home screen

Touch screen tips

Here are some tips on how to navigate on your phone.

Tap or touch – A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold – Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag – Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap – Double-tap to zoom on a webpage or a image. For example, quickly double-tap a section of a webpage to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out while viewing the picture.

Pinch-to-Zoom – Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures.


Rotate the screen – From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.


NOTE:

- To select an item, tap the centre of the icon.
- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys.

Your Home screen

Home screen

The Home screen is the starting point for many applications and functions, and it allows you to add items like application shortcuts, or Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

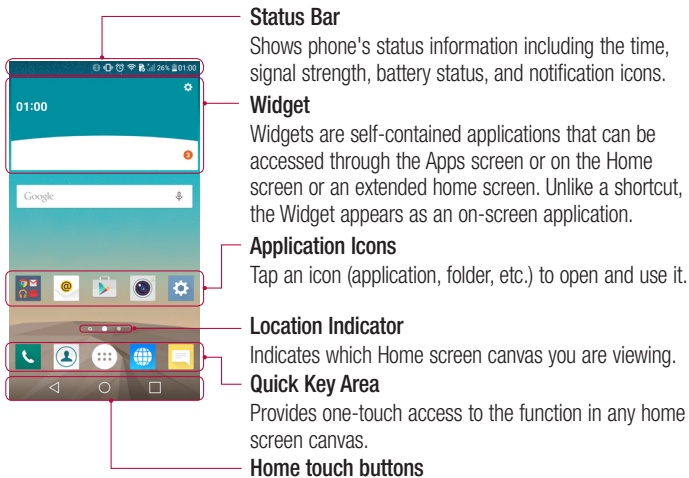

Extended home screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets, and more.

- ▶ Slide your finger left or right across the Home screen.

Customizing the Home screen

You can customize your Home screen by adding apps, widgets or changing wallpapers.

To add items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the apps menu, select the item you wish to add. You will then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

TIP! To add an application icon to the Home screen from the Apps menu, touch and hold the application you want to add.

To remove an item from the Home screen


- ▶ Home screen > touch and hold the icon you want to remove > drag it to .

To add an app as a Quick key


- ▶ From the Apps menu or on the Home screen, touch and hold an application icon and drag it to the Quick key area. Up to 7 apps can be added.

To remove an app from the Quick key area

- ▶ Touch and hold the desired quick key and drag it to .



NOTE:  Apps key cannot be removed.

To customize apps icons on the Home screen

- 1 Touch and hold an application icon until it is unlocked from its current position. Then drop it on the screen. The editing icon  will appear in the upper right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

Your Home screen

Returning to recently-used applications


- 1 Tap . A list of recently used applications will be displayed.
- 2 Tap an icon to open the application. Or tap  to return to your previous screen.

Notifications panel

Notifications alert you the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as when you are on a call.


When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons such as Wi-Fi or battery strength shown on the right.

NOTE: The available options may vary depending on the region or service provider.

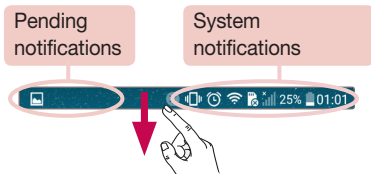


Opening the notifications panel

Swipe down from the status bar to open the notifications panel.

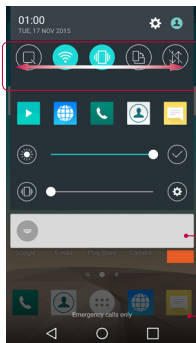

Quick Toggle Area

Tap each quick toggle key to turn it on/off. Touch and hold the key to access the settings menu of the function. To see more toggle keys, swipe left or right. Tap  to remove, add, or rearrange toggle keys.

Notifications

The current notifications are listed, each with a brief description. Tap a notification to view it.

To close the notifications panel, touch and drag the tab toward the top of the screen.













Indicator icons on the Status Bar













Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.






Your Home screen

The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Missed call
	Bluetooth is on
	NFC is on
	System warning
	An alarm is set
	New voicemail available

Icon	Description
	Ringer is silenced
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	New Gmail message available
	New Hangouts message available
	Choose input method
	Media server content sharing on

Icon	Description
	New text
	A song is currently playing







Icon	Description
	Wi-Fi hotspot is active

NOTE: The icons location in the status bar may differ according to the function or service.

On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply tap a text field where you want to enter text.

Using the keypad & entering text

-  Tap once to capitalize the next letter you type. Double-tap for all caps.
-  Tap to switch to the numbers and symbols keyboard.
-  Tap to access the keyboard settings. Touch and hold to access voice input mode, handwriting mode or Clip Tray.
-  Tap to enter a space.
-  Tap to create a new line.
-  Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account setup

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set-up screen.

OR

- Tap  >  > **Apps** tab > select a Google application, such as **Gmail** > **GOT IT** > select **Add an email address** to create a new account or add your account.

Once you have set up your Google account on your phone, your phone automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your phone. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi




With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or 'hotspot'. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them. Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or have set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > **Wi-Fi**.
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap the Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Tap a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The status bar displays icons that indicate Wi-Fi status.

Connecting to Networks and Devices

Bluetooth




You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones.

NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > set **Bluetooth** to **ON**.
- 2 Tap the **Bluetooth** menu again.
- 3 Choose the device you want to pair with from the list.

Once the pairing is successful, your device will connect to the other device.

NOTE: Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you will be asked to enter it.

Send data using the Bluetooth wireless feature

- 1 Select a file or item, such as a contact, calendar event or media file, from an appropriate application or from **Downloads**.
- 2 Select the option for sending data via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

- 3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth wireless feature

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > set **Bluetooth** to **ON**.
- 2 Select **PAIR** to confirm that you are willing to receive data from the device.

Sharing your phone's data connection




USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than one device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

Connecting to Networks and Devices

To share phone's data connection as a portable Wi-Fi hotspot

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > **Tethering** > **Wi-Fi hotspot** switch to activate.
- 2 Enter a password and tap **Save**.

TIP! If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you will not usually need to prepare your computer for tethering. But, if you are running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > **Tethering** > **Wi-Fi hotspot**.
- 2 Tap **Set up Wi-Fi hotspot**.
 - The **Set up Wi-Fi hotspot** dialogue box will open.
 - You can change the **Wi-Fi name (SSID)** that other devices see when scanning for Wi-Fi networks.
 - You can also tap the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Set up Wi-Fi hotspot** dialogue box. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.
- 3 Tap **Save**.

ATTENTION! If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges may be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

Wi-Fi Direct



Wi-Fi Direct supports a direct connection between Wi-Fi enabled devices without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature. Check your Wi-Fi & Wi-Fi Directed network in advance and make sure the users are connected to the same network.

To turn on Wi-Fi Direct:

- 1 Tap  >  > **Apps** tab >  **Settings** > **Networks** tab > **Wi-Fi**.
- 2 Tap the **Menu Key**  > **Advanced Wi-Fi** > **Wi-Fi Direct**.
- 3 Select a device to connect with from the scanned device list.

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature. You can enjoy SmartShare feature on Gallery and Music.

- 1 On the content you want to play or beam, tap  or **Menu Key**  > **SmartShare**.
- 2 Tap **Play** or **Beam** in the dialog box.
 - **Play:** You can stream your content via TV, Bluetooth speaker, etc.
 - **Beam:** You can send your content to Bluetooth devices or SmartShare Beam*-supported LG phones or tablets.
*SmartShare Beam quickly transfers multimedia contents through Wi-Fi Direct.
- 3 Tap the device to play or receive on the list.

Connecting to Networks and Devices


- If the device is not on the list, make sure on the device that Wi-Fi, Wi-Fi Direct, or Bluetooth connection is turned on. And tap **Rescan**.

4 Tap **Send**.


To enjoy content from nearby devices such as a computer or mobile device on your phone

- 1 To connect the nearby devices to your phone, tap **Nearby devices** on **Gallery**, **Music** application as below.

<Gallery>

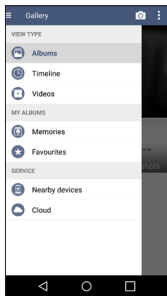

<Music>

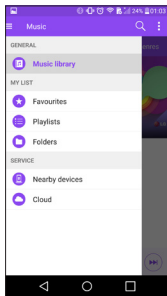

- Ensure that your phone and nearby devices are connected to the same Wi-Fi network.
- Make sure DLNA feature on the nearby device is turned on.

2 Tap the device to connect.

If the device is not on the list, tap **Search nearby devices**.

After connection, you can enjoy the contents from the nearby device on your phone.

PC connections with a USB cable

Learn to connect your device to a PC with a USB cable in USB connection modes.

Transferring music, photos and videos using the USB mass storage mode

- 1 Connect your device to a PC using the USB cable that came with your phone.
- 2 Open the Notifications panel and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.

NOTE:

- The LG Android Platform Driver is required to be installed on your PC to be able to detect the phone.
- Check the requirements for using **Media device (MTP)**.

Synchronize with Windows Media Player

Ensure that Windows Media Player is installed on your PC.





- 1 Use the USB cable to connect the phone to a PC on which Windows Media Player has been installed.
 - 2 Select the **Media device (MTP)** option. When connected, a pop-up window will appear on the PC.
 - 3 Open Windows Media Player to synchronize music files.
 - 4 Edit or enter your device's name in the pop-up window (if necessary).
 - 5 Select and drag the music files you want to the sync list.
 - 6 Start synchronization.
- The following requirements must be satisfied to synchronize with Windows Media Player.


Items	Requirement
OS	Microsoft Windows XP SP2, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

- If the Windows Media Player version is lower than 10, install version 10 or higher.



Calls

Making a call


- 1 Tap  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, tap the .
- 3 Tap  to make a call.
- 4 To end a call, tap the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Tap  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by tapping **Search contacts**.
- 3 In the list, tap  you want to call.

Answering and rejecting a call

When you receive a call in Lock state, swipe the  in any direction to Answer the incoming call.






Swipe the  in any direction to Decline an incoming call.

NOTE: Tap or swipe the **Decline with message** if you want to send a message to the caller.

Adjusting the in-call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the back side of the phone.

Making a second call


- 1 During your first call, tap **Menu key**  > **Add call** and dial the number. You can also go to the recently dialled numbers list by tapping **Call logs** or can search contacts by tapping **Contacts** and selecting the contact you want to call. Also, you can search contacts by tapping **favourites** or **Groups**.
- 2 Tap  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Tap the displayed number to toggle between calls. Or tap  **Merge calls** to start a conference call.
- 5 To end active calls, tap **End** or tap  and slide the notification bar down and select the **END CALL** icon .

NOTE: You are charged for each call you make.

Viewing your call logs



On the Home screen, tap  and choose the **Call logs**.
View a complete list of all dialled, received and missed calls.

TIP!

- Tap any call log entry to view the date, time and duration of the call.
- Tap the **Menu key** , then tap **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding, as well as other special features offered by your carrier.

- 1 On the Home screen, tap .
- 2 Tap .
- 3 Tap **Call settings** and choose the options that you wish to adjust.

Contacts



Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

On the Home screen

- 1 Tap  to open your contacts.
- 2 Tap **Search contacts** and enter the contact name using the keyboard.


Adding a new contact

- 1 Tap , enter the new contact's number, then tap the **Menu key** . Tap **Add to Contacts > New contact**.
- 2 If you want to add a picture to the new contact, tap the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Tap **Add another field** enter the details about your contact.
- 4 Tap **Save**.

Favourites contacts


You can classify frequently called contacts as favourites.

Adding a contact to your favourites



- 1 Tap  to open your contacts.
- 2 Tap a contact to view its details.
- 3 Tap the star to the right corner of the contact's name. The star will turn yellow colour.

Contacts

Removing a contact from your favourites list

- 1 Tap  to open your contacts.
- 2 Tap the **Favourites** tab, and choose a contact to view its details.
- 3 Tap the yellow colour star to the right corner of the contact's name. The star turns grey colour and the contact is removed from your favourites.

Creating a group



- 1 Tap  to open your contacts.
- 2 Tap **Groups** and tap the **Menu key** . Select **New group**.
- 3 Enter a name for the new group. You can also set a ringtone for the newly created group.
- 4 Tap **Save** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.


Messaging


Your phone combines SMS, MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Tap  on the Home screen and tap  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts will appear. You can tap a suggested recipient. You can add more than one contact.

NOTE: You will be charged for a text message for every person to whom you send the message.

- 3 Tap the **Enter message** field and begin composing your message.
- 4 Tap  to open the Options menu. Choose from **Quick message**, **Insert smiley**, **Schedule sending**, **Add subject** and **Discard**.

TIP! You can tap the  icon to attach the file, that you want to share with message.

- 5 Tap **Send** to send your message.

WARNING:

- The 160-character limit may vary from country to country, depending on the language and how the SMS is coded.
- If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Messaging

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Changing your message settings

Your phone message settings are pre-defined, so you can send messages immediately. You can change the settings according to your preferences.

- Tap  on the Home screen, tap  and then tap **Settings**.

E-mail

You can use the E-mail application to read emails from services like Gmail. The E-mail application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide you with the account settings you need.

Managing an email account

The first time you open the **E-mail** application, a set-up wizard opens to help you to set up an email account.

After the initial set-up, E-mail displays the contents of your inbox.

To add another email account:

- Tap  >  > **Apps** tab >  **E-mail** > tap  > **Settings** >  **Add account**.





To change an email general settings:

- Tap  >  > **Apps** tab >  **E-mail** > tap  > **Settings** > **General settings**.

To delete an email account:

- Tap  >  > **Apps** tab >  **E-mail** > tap  > **Settings** > tap  > **Remove account** > Select the account to delete > **Remove** > select **Yes**.





Working with account folders

Tap  >  > **Apps** tab >  **E-mail** > tap  and select **Folders**.

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message

- 1 While in the **E-mail** application, tap the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts.
- 3 Tap the  to add a Cc/Bcc and tap  to attach files, if required.
- 4 Enter the text of the message.
- 5 Tap .

TIP! When a new email arrives in your Inbox, you will be notified by a sound or vibration.

Camera and Video

You can use the camera or camcorder to take and share pictures and videos. Your phone comes with a 13 megapixel camera with an autofocus feature that lets you capture sharp pictures and videos.



NOTE: Be sure to clean the protective lens cover with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.

To open the Camera application


From the Home screen, tap the  >  > **Apps** tab > **Camera** .

OR

Tap the **Camera** icon  from the Home screen.

TIP! If you've set your phone to use the Swipe unlock method, from the locked screen, simply press the Power/Lock Key , on the back of the phone, then drag the Camera icon  upward to open the Camera application.

Getting to know the viewfinder

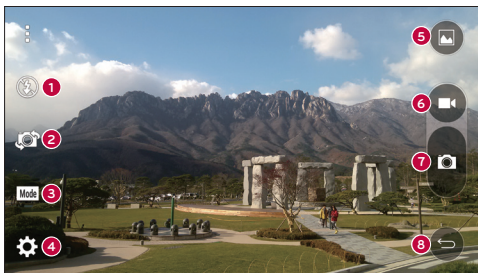

1 Flash – Taps to turn the flash **On**, **Off** or set it to **Auto**.





Camera and Video

- 2 Swap camera** – Tap to swap between the rear camera lens and the front camera lens.
- 3 Mode** – Mode to select the mode from **Auto**, **Magic focus**, **Panorama**, **Dual** and **Slo-mo**.
- 4 Settings** – Tap to adjust the following camera and video settings.
- 5 Gallery** – Tap to access your Gallery.
- 6 Video Recording button** – Tap to start recording a video.
- 7 Capture button** – Tap to take a photo.
- 8 Exit** – Tap to close the selected menu or exit the Camera app.

Take Pictures





Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.


To take a picture:



- 1 From the Home screen, tap the  >  > **Apps** tab > **Camera** .
- 2 Frame your subject on the screen.
- 3 A square around the subject indicates that the camera has focused.
- 4 Tap  to take a photo. Your picture will be automatically saved to the Gallery.

Record Videos


In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

- 1 From the Home screen, tap the  >  > **Apps** tab > **Camera** .
- 2 Frame your subject on the screen.
- 3 Tap  to start recording the video.
- 4 The length of the recording is displayed on the top of the screen.

NOTE: Tap  to take pictures while recording video.

5 Tap  to pause recording video. You can resume recording again tapping .

OR

6 Tap  to stop recording. Your video will be automatically saved to the Gallery.

Camera and Video Settings

From the camera mode, tap each icon to adjust the following camera settings.

- **Flash** : Taps to turn the flash **On**, **Off** or set it to **Auto**.
- **Swap camera** : To swap between the rear camera lens and the front camera lens.
- **Mode** : Mode to select the mode from: **Auto**, **Magic focus**, **Panorama**, **Dual** and **Slo-mo**.
 - ▶ **Auto**: Captures a auto photo shot.
 - ▶ **Magic focus**: Magic focus lets you choose your focus again after taking a photo.
 - ▶ **Panorama**: Creates a wide photo of a panoramic view. Hold the phone horizontally, press the shutter to start and slowly sweep the camera across the scene.
 - ▶ **Dual**: Captures a photo or recording a video using both of camera lens. Touch and hold the small screen to resize or move it.
 - ▶ **Slo-mo**: Allows you to record videos at high frame rate so that you can view the video as slow motion.
- **Settings** : To adjust the following camera and video settings.
 - ▶ **Dynamic tone (HDR)**: Combines photos taken at multiple exposures into one optimal photo to get a better photo in tricky lighting situations.
 - ▶ **Image size**: Set the size of your picture. Choose from **13M 4160x3120**, **W10M 4160x2340**, **9M 3120x3120** or **3M 2048x1536**. Set the size of your video. Choose from **UHD 3840x2160**, **FHD 1920x1080** or **HD 1280x720**.
 - ▶ **Cheese shutter**: Allows you to take pictures with voice commands. When on, you just say "Cheese", "Smile", "Whiskey", "Kimchi", or "LG" to take a picture.
 - ▶ **Timer**: Set your camera's timer. This is ideal if you want to be a part of the picture.

Camera and Video

- ▶ **Grid:** It is easily used to take better pictures to keeping horizontal and verticals.
- ▶ **SD:** Set the storage location for your pictures. Choose from **IN** or **SD**. This menu appears only when the SD card is inserted.
- ▶ **Help:** Allows you to learn how a function works. This icon will provide you with a quick guide.


Multi-point Auto Focus

When you take a picture, the Multi-point Auto Focus (AF) function operates automatically and will allow you to see a clear image.

Dual

The Dual feature allows you to take a picture or record video with the front and rear cameras at the same time.

- 1 From the Home screen, tap the  >  > **Apps** tab > **Camera** .
- 2 Tap  > .

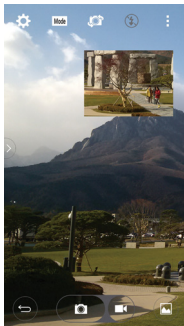

NOTE: Drag the small screen to move it to your desired location. Touch and hold the small screen to resize it. Tap on the small screen to switch screens.

- 3 Tap  to take a picture. Tap  to start dual recording.
- 4 Tap  to stop dual recording.



Gesture shot

The Gesture shot feature allows you to take a picture with a hand gesture using the front camera.

To take photo

There are two methods for using the Gesture shot feature.

- Raise your hand, with an open palm, until the front camera detects it and a box appears on the screen. Then close your hand into a fist to start the timer, allowing you time to get ready.
- Raise your hand, in a clenched fist, until the front camera detects it and a box appears on the screen. Then unclench your fist to start the timer, allowing you time to get ready.

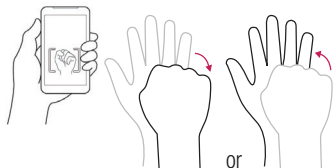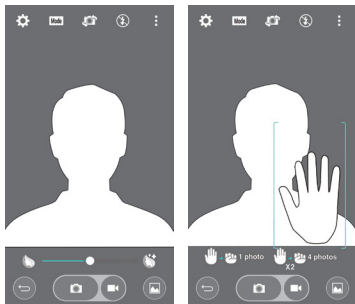

Camera and Video

Super Zooming

You can use a zoom up to 8 times while taking pictures.

TIP! Will two fingers on the screen, and then to close or open has been using the zoom function, this function will automatically run.

NOTE: Use a steady hand. This feature does not work with some functions. Objects can be overlapped when taking a picture of fast-moving subjects.

View Your Pictures




The Gallery is where you can access the Gallery of stored camera images. You can view them in a slideshow, share them with your friends, and delete and edit them.


- 1 From the Home screen, tap the  >  > **Apps** tab > **Gallery** .
- 2 Select a location and tap an image to view your picture.






Gallery Options

The Gallery application presents the pictures and videos in your storage, including those you've taken with the Camera application and those you downloaded from the web or other locations.

If you have one of your phone's Google Accounts, you'll also see your web albums in Gallery.

- 1 From the Home screen, tap the  >  > **Apps** tab > **Gallery**  to view the images stored in the storage.
 - ▶ Drag up or down to view more albums.
- 2 Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
- 3 Tap a picture in an album to view it.



- ▶ Tap a picture group again to reveal the following icons:
 -  **Camera:** Opens the Camera.
 -  **Share:** You can share the picture via various methods such as Messaging or Bluetooth.
 -  **Delete:** Deletes the picture.
- ▶ Tap a picture in an album then tap  for the following options: **Move, Copy, Make collage, Lock, Show locked files, Slideshow** and **Rotate**.
- ▶ Tap the **Back Key**  to return to the previous screen.

Assign Pictures

After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).










- 1 From the Home screen, tap the  >  > **Apps** tab > **Gallery** .
- 2 Tap an album and tap an image to view it.
- 3 With the picture displayed, tap  > **Set image as**.
- 4 Select an option.
 - ▶ **Contact photo** to assign the picture to a Contact entry as a picture ID. Tap an entry from Contacts, crop the image and tap **OK** to assign the picture.

Camera and Video

- ▶ **Lock screen wallpaper** to assign the picture as a background image for your lock screen.
- ▶ **Wallpaper** to assign the picture as a background image, crop the image and tap **SET WALLPAPER** to assign the picture.
- ▶ **Home screen** to assign the picture as a background image, crop the image and tap **OK** to assign the picture.

Video Options

The Gallery is where you can access the Gallery of stored video images. You can view them, share them with your friends, and delete and edit them.

- 1 From the Home screen, tap the  >  > **Apps** tab > **Gallery**  to view the videos stored in storage.
 - ▶ Scroll up or down to view more albums.
- 2 Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
- 3 Tap a video to view it. You can access the following options:
 - ▶  **Edit**: Tap here to edit your video.
 - ▶  **QSlide**: Enables an overlay on your phone's display for easy multitasking.
 - ▶  **SmartShare**: Shares media files with DLNA certified devices.
 - ▶  **Menu**: Tap to access **Screen ratio, Subtitles, Share, Details, Settings** options.
 - ▶  **Volume**: Tap to display the Volume slider bar, then adjust the playback volume on the slider bar.
 - ▶  **Lock/Unlock**: Locks the touch keys to prevent unintentional touches.

Play a Video

- 1 From the Home screen, tap the  >  > **Apps** tab > **Gallery**  to view videos stored in the storage.
 - ▶ Scroll up or down to view more albums.


- 2 Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
- 3 Tap a video in an album to play.
 - ▶ Tap the video to view the playback controls.

NOTE: While a video is playing, slide the left side of the screen up or down to adjust the screen brightness. While a video is playing, slide the right side of the screen up or down to adjust the sound. While playing a video, tap the timeline point to preview that portion of the video via a small screen. Tap the small screen to jump to that part of the video. While playing a video, slide your finger from left to right (or vice versa) to fast-forward and rewind.

Live Zoom

Live Zoom allows you to zoom in or zoom out on a portion of a video that is being played to make the desired section appear larger or smaller.

When viewing a video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.

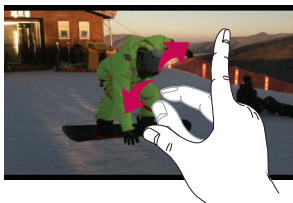

NOTE: Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

Camera and Video

Dual Play

Dual Play (connected wired or wirelessly two displays) can be run on a different screen.

NOTE: Connect devices using wired (Slimport-HDMI) cable or wirelessly (Miracast). The connectable device can be a TV or a monitor supported by an HDMI cable or Miracast. The Gallery and Video apps are supported on Dual Play. Not all videos are supported by Dual Play. Dual Play operates at 1280X720 or higher display resolution.

Gallery



Open the **Gallery** application to view albums of your pictures and videos.

To open the Gallery application

- From the Home screen, tap the  >  > **Apps** tab > **Gallery** .

Viewing your albums

The **Gallery** application presents the pictures and videos saved in your phone, including those you've taken with the **Camera** application and those you downloaded from the web or other locations.

- Tap an album to open it and view its contents.
- Tap a picture or video in an album to view it.
- Tap the **Menu Key**  (at the top right corner of the screen) to access **New Album**, **Delete**, **Set preferred albums**, **Show locked files**, **Settings**, and **Help**.
- Tap the **Camera icon**  to return to the Camera application.

To share an album



You can share the entire contents of one or more albums or individual images or videos from an album.

- 1 From the Home screen, tap the  >  > **Apps** tab > **Gallery** .
- 2 Touch and hold the desired album, tap **Share**, select the application to use to share your images, then complete the sending method as necessary.

Working with photos

Use the **Gallery** application to view pictures that you've taken with the **Camera** application, downloaded.

To view and browse photos

- 1 From the Home screen, tap the  >  > **Apps** tab > **Gallery** .
- 2 Open an album and tap a picture.
- 3 Tap the **Menu Key**  (at the top right corner of the screen) to access **SmartShare**, **Set image as**, **Move**, **Copy**, **Copy to Clip Tray**, **Lock**, **Slideshow**, **Rotate**, **Crop**, **Add location**, **Rename**, **Print**, or **Details**.

Camera Mode Icon

Tap here to go to camera mode.

Favourite Icon

Tap to add the picture to your favourites.

Edit Icon

Tap here to edit your picture.


Share Icon

Tap here to share the photo using the method you select.

Delete Icon


Tap here to delete the photo.

Swipe horizontally to scroll through the photos in the current album.

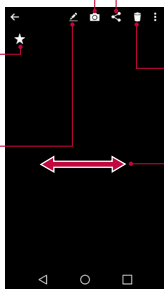


Camera and Video

To share a video



- 1 Open an album to view its contents, then tap the **Share** icon  at the top of the Gallery screen.
- 2 Checkmark the video(s) you want to share, tap **Share** at the bottom of the screen, select how to share the file(s), then complete as necessary.

To delete a video

- 1 Open an album to view its contents, then tap the **Delete** icon  at the top of the Gallery screen.
- 2 Checkmark the video(s) you want to delete, tap **Delete** at the bottom of the screen, then tap Yes to confirm.

QSlide while playing videos


You can play videos in a QSlide window allowing you to use other applications while the video is playing.

- 1 Open the **Gallery** application and begin playing the video.
- 2 Tap the **QSlide** icon  at the top right corner of the screen to activate the QSlide feature to play the video in a QSlide window.
- 3 To close the QSlide window, tap the  in the upper-right corner of its title bar.




Function

Capture+

The **Capture+** allows you to create memos and capture screen shots. Capture screens, draw on them and share them with family and friends with Capture+.

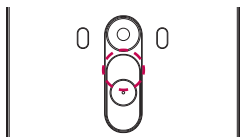

OR

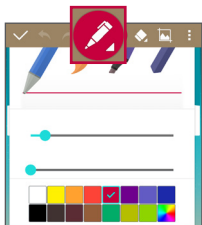


- 1 (While screen is switched off) Press and hold the Volume Up key.



OR

Touch and slide the status bar downward and tap .

- 2 Select the desired menu option from **Size, Transparency** and create a memo.

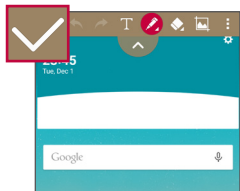Function










- 3 Tap  in the Edit menu to save the memo with the current screen. To exit Capture+ at any time, tap .

NOTE: Please use a fingertip while using the Capture+. Do not use your fingernail.

Using the Capture+ options

You can easily use the editing tools when using the Capture+.

	Save the memo with the current screen in the Gallery or Capture+ .
	Undo or Redo.
	Use complex concept function.
	Select Pen type , Size , Transparency and Colour .
	Erase the memo that you created.
	Slice the image as you want.
	Option: Tap to choose Share , Paper style for the memo.





Viewing the saved Capture+

Tap **Capture+/Gallery** and select the Capture+ album.


QSlide


From any screen, bring up a notepad, calendar, and more as a window inside your screen.



1		Tap to exit the QSlide and return to full window.
2		Swipe to adjust transparency.
3		Tap to end the QSlide.
4		Swipe to adjust the size.

- 1 Touch and slide the Status bar downward and tap **QSlide** to view the available QSlide apps.

TIP! Also, while using applications that support QSlide, tap  > QSlide. The function is displayed as a small window on your screen.



- 2 You can make a call, browse the Web, or choose other phone options. You can also use and tap the screen under the small windows when the transparency bar is not full .


NOTE: The QSlide can support up to two windows at the same time.

Function

QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV, Set top box, audio system.

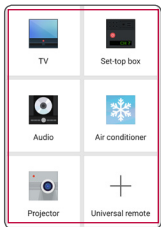

- 1 Touch and slide the status bar downwards and tap  > **ADD REMOTE.**

OR

Tap  >  > **Apps tab** >  **QuickRemote** > tap .

- 2 Select the type and brand of device, then follow the on-screen instructions to configure the device(s).

- 3 Touch and slide the status bar downwards and use QuickRemote functions.

NOTE: The QuickRemote operates the same way as an ordinary remote control infrared (IR) signals. Be careful not to cover the infrared sensor at the top of the phone when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

Smart Keyboard

Smart Keyboard recognizes your keyboard input habit and provide your own keyboard quickly inputting without errors.



Move cursor using space bar

Touch and hold the space bar and left or right to move the cursor.



Enter suggested word using gesture control

Enter text on the keyboard and the related word suggestions appear. Flick upward on the left to select the left-side suggestion. Flick upward on the right to select the right-side suggestion.






Function


LG SmartWorld

LG SmartWorld offers an assortment of exciting content – fonts, themes, games, applications.

How to Get to LG SmartWorld from Your Phone

- 1 Tap  >  > **Apps** tab > tap the  icon to access **LG SmartWorld**.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not signed up yet, tap Register to receive your LG SmartWorld membership.
- 3 Download the content you want.
* When you use Cellular network, data fee could be charged by data plan that you signed-up with carrier.
* LG SmartWorld may not be available from all carriers or in all countries.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

Special benefit only in LG SmartWorld

- 1 Decorate your own style on your Smartphone, use Home Theme & Keyboard Theme & Font that provided on LG SmartWorld. (However this service is available to specific device. Please check in LG SmartWorld website whether it is feasible or not.)
- 2 Enjoy LG SmartWorld's special service by joining promotion that consistently provided.

Multimedia

Music

Your phone has a built-in music player that lets you play all your favourite tracks. To access the music player, tap  >  > **Apps** tab >  **Music**.

Add music files to your phone




Start by transferring music files to your phone:





- Transfer music using Media device (MTP).
- Download from the wireless Web.
- Synchronize your phone to a computer.
- Receive files via Bluetooth.

Transfer music using Media device (MTP)








- 1 Connect the phone to your PC using the USB cable.
- 2 Select the **Media device (MTP)** option. Your phone will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.
- 3 When you're finished transferring files, swipe down on the Status Bar and tap **USB PC connection** > **Charge phone**. You may now safely unplug your device.

Playing a song

- 1 Tap  >  > **Apps** tab >  **Music**.
- 2 Tap **Songs**.
- 3 Select the song you want to play.

	Tap to pause playback.
	Tap to resume playback.
	Tap to skip to the next track in the album, playlist, or shuffle. Touch and hold to fast forward.
	Tap to restart the current track or skip to the previous track in the album, playlist, or shuffle. Touch and hold to rewind.

Multimedia

	Tap to display the Volume slider bar, then adjust the playback volume on the slider bar.
	Tap to set audio effects.
	Tap to open the current playlist.
	Tap to add the song to your favourites.
	Tap to play the current playlist in shuffle mode (tracks are played in random order).
	Tap to toggle through the repeat modes to repeat all songs, repeat current song, or repeat off.
	Tap to share your music via the SmartShare function.

To change the volume while listening to music, press the up and down volume keys on the back side of the phone.

Touch and hold any song in the list. The **Play**, **Add to playlist**, **Delete**, **Share**, **Set as ringtone** and **Search** options will be displayed.

NOTE:





- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.


NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.






In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Setting your alarm





- 1 Tap  >  > **Apps** tab >  **Clock** > .
- 2 After you set the alarm, your phone lets you know how much time is left before the alarm will go off.
- 3 Set **Repeat**, **Snooze duration**, **Alarm with vibration**, **Alarm sound**, **Alarm volume**, **Auto-start app**, **Puzzle lock** and **Memo**. Tap **SAVE**.

NOTE: To change alarm settings in the alarm list screen, tap the **Menu key**  and select **Settings**.

Using your calculator

- 1 Tap  >  > **Apps** tab >  **Calculator**.
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.
- 4 To check the history, tap the icon , then tap **Calculation history**.
- 5 For more complex calculations, tap the **Menu Key** , then tap **Scientific calculator**.

Adding an event to your calendar

- 1 Tap  >  > **Apps** tab >  **Calendar**.
- 2 On the screen, you can find the different view types for the Calendar (Day, Week, Month, Year, Agenda).
- 3 Tap on the date for which you wish to add an event and tap .
- 4 Tap **Event name** and enter the event name.
- 5 Tap **Location** and enter the location. Check the date and enter the time you wish your event to start and finish.
- 6 If you wish to repeat the alarm, set **REPEAT** and set **REMINDERS**, if necessary.







Utilities


7 Tap **SAVE** to save the event in the calendar.

Voice Recorder


Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 Tap  >  > **Apps tab** >  **Voice Recorder**.
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.

NOTE: Tap  to access your Recorded files. You can listen to the saved recording. The available recording time may differ from actual recording time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by tapping .
- 2 Choose from **E-mail, Messaging, Capture+, Bluetooth, Gmail, SmartShare Beam, Drive** or **Android Beam**. or When you select **E-mail, Messaging, Capture+, Bluetooth, Gmail, SmartShare Beam, Drive** and **Android Beam** the voice recording is added to the message. You may then write and send the message as you usually would.

Tasks

This task can be synchronized with MS Exchange account. You can create task, revise it and delete it in MS outlook or MS Office Outlook Web Access.

To Synchronize MS Exchange

- 1 From the Home Screen, tap  >  > **Apps tab** >  **Settings**.

- 2 Tap **General** tab > **Accounts & sync** > **Add account**.
- 3 Tap **Microsoft Exchange** to create Email address and Password.
- 4 Make sure if you checkmark Sync task.

NOTE: MS Exchange may not be supported depending on email server.

Google+





Use this application to stay connected with people via Google's social network service.

- Tap  >  > **Apps** tab >  **Google** >  **Google+**.

NOTE: This application may not be available depending on the region or service provider.

Voice Search

Use this application to search webpages using voice.

- 1 Tap  >  > **Apps** tab >  **Google** >  **Voice Search**.
- 2 Say a keyword or phrase when **Listening...** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded through the applications.

- Tap  >  > **Apps** tab >  **Downloads**.

NOTE: This application may not be available depending on the region or service provider.

The Web

Internet







Use this application to browse the Internet. Browser gives you a fast, full-colour world of games, music, news, sports, entertainment and much more, right on your mobile phone wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

1 Tap  >  > **Apps tab** >  **Internet.**

Using the Web toolbar

Tap slide it downwards with your finger to open.

	Tap to go back one page.
	Tap to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you tap  .
	Tap to go to the Home page.
	Tap to add a new window.
	Tap to access bookmarks.

Viewing webpages

Tap the address field, enter the web address and tap **Go**.

Opening a page

To go to new page, tap  → .

To go to another webpage, tap , scroll up or down, and tap the page to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword, and then select one of the suggested keywords that appear.

NOTE: This feature may not be available depending on the region or service provider.

Bookmarks

To bookmark the current webpage, tap  > **Add bookmark** > **SAVE**.

To open a bookmarked webpage, tap  and select one.

History

Tap  > **History** to open a webpage from the list of recently-visited webpages. To clear all history, tap  → **YES**.

Using Popup Browser

Use this feature to access the Internet without closing the current application .

While viewing content, such as contacts or notes that include web addresses, select a web address and then tap Popup Browser to open the pop-up browser. Touch and drag the browser to move it to another location.

To view the browser in full screen, tap .

To close the browser, tap .

The Web

Chrome

Use Chrome to search for information and browse webpages.

1 Tap  >  > **Apps** tab >  **Chrome**.


NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

Tap the Address field, and then enter a web address or search criteria.

Opening a page

To go to a new page, tap **Menu key** : → **New tab**.

To go to another webpage, tap , scroll up or down and tap the page to select it.

Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.

To view open tabs on other devices, tap **Menu key** : → **Recent tabs**.

Select a webpage to open.

To add bookmarks, tap **Menu key** : → ☆.

Settings

This section provides an overview of items you can change using your phone's System settings menus.

To access the Settings menu:

Tap  > Touch and hold  > **System settings**.

- or -

Tap  >  > **Apps tab** >  **Settings**.





Networks

< Wi-Fi >

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your phone in the router.

You can find the MAC address in the following user interface: tap  >  > **Apps tab** >  **Settings** > **Networks tab** > **Wi-Fi** >  > **Advanced Wi-Fi** > **MAC address**.

< Bluetooth >

Turn the Bluetooth wireless feature on or off to use Bluetooth.

< Mobile data >

Displays the data usage and set mobile data usage limit.

< Call >

Configure phone call settings such as call forwarding and other special features offered by your carrier.

Voicemail – Allows you to select your carrier's voicemail service.

Fixed dialing numbers – Turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Settings

Incoming voice call pop-up – Display incoming voice call pop-up when an app is in use.

Call reject – Allows you to set the call reject function. Choose from **Call reject mode** or **Reject calls from**.

Decline with message – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Call forwarding – Choose whether to divert all calls when the line is busy, when there is no answer or when you have no signal.

Auto answer – Set the time before a connected hands-free device automatically answers an incoming call. Choose from **Off**, **1 sec**, **3 sec** and **5 sec**.

Connection vibration – Vibrates your phone when the other party answers the call.

Noise suppression – Suppresses background noise on your device during a call.

Voice enhancement – Enhances voice quality in noisy environments so you can hear more clearly.

Save unknown numbers – Add unknown numbers to contacts after a call.

Power key ends call – Allows you to select your end call.

Answer an incoming call – Enable to allow you to bring the device to your ear to automatically answer the incoming call.

Silence incoming calls – Enable to allow you to flip the device to silence incoming calls.

Call barring – Lock incoming, outgoing or international calls.

Call duration – View the duration of calls including **Last call**, **Outgoing calls**, **Incoming calls** and **All calls**.

Additional settings – Allows you to change the following settings:

Caller ID: Choose whether to display your number in an outgoing call.

Call waiting: If call waiting is activated, the handset will notify you of an incoming call while you are on a call (depending on your network provider).

< Share & connect >

NFC – Your phone is an NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your content with an NFC tag or another NFC support device by simply tapping it with your device. If you tap an NFC tag with your device, it will display the tag content on your device.

To switch NFC on or off: From the Home screen, touch and slide the notification panel down with your finger, then select the NFC icon to turn it on.

NOTE: When airplane mode is activated, the NFC application can be used.

Using NFC: To use NFC, make sure your device is switched on, and activate NFC if disabled.

Android Beam – When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

Just bring the device together (typically back to back) and then tap your screen. The app determines what gets beamed.

SmartShare Beam – Turn on to receive multimedia content via Smartshare Beam from LG phones or tables.

Media server – Share media content with nearby devices via DLNA.

Miracast – Mirror phone screen and sound onto Miracast dongle or TV wirelessly.

LG PC Suite – Connect LG PC Suite with your phone to easily manage multimedia content and apps.

Printing – Set wireless printer.

< Tethering >

USB tethering – Connect the USB cable to share the internet connection with the computer.

Wi-Fi hotspot – You can also use your phone to provide a mobile broadband connection. Create a hotspot and share your connection. Please "**Sharing phone's data connection**" for more information.

Settings

Bluetooth tethering – Allows you to set your phone whether you are sharing the Internet connection or not.

Help – Tap to view help information on the Wi-Fi hotspot, USB tethering and Bluetooth tethering functions.

<More>

Airplane mode – After switching to Airplane mode, all wireless connections are disabled.


Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) etc.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

Sound & notification

Sound profile – Choose the **Sound**, either **Vibrate only** or **Silent**.

Volume – Adjust the phone's volume settings to suit your needs and your environment.

Ringtone – Set the ringtone for calls. You can also add a ringtone by tapping  at the top right corner of the screen.

Ringtone ID – Allows to compose ringtones automatically based on the phone number of the incoming call.

Vibration strength – Allows you to set the vibrate strength for calls, notifications, and Vibrate on tap.

Sound with vibration – Checkmark to set the phone to vibrate in addition to the ringtone when you receive calls.

Vibration type – Allows you to set the vibration type for incoming calls. Choose from **Long Lasting**, **Rapid**, **Short repeated**, **Standard** or **Ticktock**.


Do not disturb – Set a time and mode when your phone doesn't let you know about notifications coming in. Choose from **Priority only** or **Total silence**.

Lock screen – Set to show or hide all notifications on the lock screen.

Apps – Set notification from Apps. Choose from None to show no notifications from the Apps, and Priority to show notifications with priority on top of others and when Do not disturb set to Priority only.

Notification LED – Tap the switch to toggle it On or Off. On will activate the LED light for the notifications you select, in the colour you set for each one.

<More>

Notification sound – Allows you to set the notification sound. You can also add a notification sound by tapping  in the upper-right corner of the screen.

Vibrate on tap – Checkmark to vibrate when tapping the Home touch buttons and during other UI interactions.

Sound effects – Tap to set the dial pad touch tones, touch sounds, and screen lock sound.

Dialpad touch sounds – Checkmark to play tones while using dial pad.

Touch sound – Checkmark to play sound when making screen selection.

Screen lock sound – Checkmark to play sound when locking and unlocking the screen.

Message/call voice notification – Tap the **Message/call voice notification** switch to toggle it On or Off. On allows your device to read out incoming calls and message events automatically.

Display

< HOME & LOCK >

Home screen

Select Home – Set **Home** or **EasyHome** as default home.

Smart Bulletin – Tap the **Smart Bulletin** switch to toggle it On or Off. It includes an additional Home screen showing customized information. Checkmark Calendar, LG Health, Smart Tips, Music or QuickRemote.

Settings

Theme – Sets the screen theme for your device. You can download it from **LG SmartWorld**.

Wallpaper – Sets the wallpaper to use on your Home screen. Select it from **Gallery, Wallpaper gallery, Live wallpapers, Multi-photo** or **Photos**.

Screen swipe effect – Sets the effect when you swipe to change screens. Choose from **Slide, Breeze, Accordion, Panorama, Carousel, Layer** or **Domino**.

Allow Home screen looping – Checkmark to allow continuous Home screen scrolling (loop back to first screen after last screen).

Help – Displays information regarding the Home screen items and functions.

Lock screen

Select screen lock – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. Set **None, Swipe, Knock Code, Pattern, PIN** or **Password**.

If you have enabled a Pattern lock type when you turn on your phone or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

Smart Lock – Set when to automatically unlock phone by Trusted devices (BT device or NFC) or Trusted face. This function is available when the Lock screen is set to one of the **Knock Code, Pattern, PIN** and **Password**.

NOTE: To activate this function, Smart Lock must be On.

Settings > General > Security > Trust agents > Smart Lock.

Screen swipe effects – Sets the screen swipe effect options. Choose from **Hula hoop, Circle mosaic, Light particle, Vector circle** or **Soda**.

NOTE: This setting name may be Pattern effect if the Screen lock is set to Pattern.

Wallpaper – Sets your Lock screen wallpaper. Select it from **Gallery** or **Wallpaper gallery**.

Shortcuts – Allows you to change the shortcuts on the **Swipe** Lock screen.

Weather animation – Checkmark to show weather animation for current location on lock screen.

Contact info for lost phone – Checkmark to set the device owner's name to be displayed on the Lock screen. Enter the text to be displayed as the Owner info.

Lock timer – Sets the amount of time before the screen automatically locks after the screen has timed-out.

Power button instantly locks – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the Security lock timer setting.

Home touch buttons

Button combination – Drag an icon to rearrange Home touch buttons. You can have up to 5 Home touch buttons.

Colour – Sets the background colour for the Home touch buttons. Select it from White and Black.

Hide Home touch buttons – Set the Home Touch Keys displayed at the bottom of all of the screens. Set which ones are displayed, their position on the bar, and what they look like. Select the keys and order, the theme, and the background.

< FONT >

Font type – Sets the type of font used for the phone and menus.

Font size – Sets the size of the font displayed in the phone and menus.

< BASIC SETTINGS >

Brightness – Adjusts the brightness of the screen. For best battery performance, use the dimmest comfortable brightness.

Auto-rotate screen – Checkmark to set the phone to automatically rotate the screen based on the phone orientation (portrait or landscape).

Screen timeout – Sets the amount of time before the screen times out.

Smart screen – Checkmark to allow the screen to stay on when phone detects your face.

Settings

< More >

Daydream – Tap the Daydream switch to toggle it On or Off. On allows the set screensaver to be displayed when the phone is sleeping while docked or charging. Choose from **Clock** and **Google Photos**.

Motion sensor calibration – Allows you to improve the accuracy of the tilt and speed of the sensor.

General

< Language & keyboard >

Use the Language & keyboard settings to select the language for the text on your phone and to configure the on-screen keyboard, including words you've added to its dictionary.

Language – Sets the language to use on your device.

Current keyboard – Shows the current keyboard which you set to use.

LG Keyboard – Select the **LG Keyboard** to enter data.

Google voice typing – Select **Google voice typing** to enter data.

Text-to-speech output – Sets the preferred speech engine and speech rate (very slow to very fast). Also plays a short demonstration of speech synthesis.

Pointer speed – Sets the pointer speed on a slide bar.

Reverse buttons – Reverse the mouse buttons to use primary button on right.

< Location >

Turn on location service, your phone determines your approximate location using GPS, Wi-Fi and mobile networks.

Mode – Set the location mode.

High accuracy(GPS and networks) – Use GPS, Wi-Fi and mobile networks to estimate location.

Battery saving(Networks only) – Use Wi-Fi and mobile networks to estimate location.

Device sensors only(GPS only) – Use GPS to pinpoint your location.

RECENT LOCATION REQUEST – Display apps that have recently requested location information.

LOCATION SERVICES

Camera – Checkmark to tag photos or videos with their locations.

Google Location History – Select whether to turn on or off Google Location Reporting options. For further information, tap  > **Help**.

< **Accounts & sync** >

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lower (but not eliminate) data usage.

< **Cloud** >

Add a cloud account to quickly and easily use cloud service on LG apps.

< **Users** >

Checkmark to add users when phone locked.

NOTE: Add user to share the phone with other people. Each user can have their own apps and content in their own space. Anyone using the phone can change settings like Wi-Fi and accept app updates that will affect everyone. Initial setup is required for new users to use phone.

< **Accessibility** >

Use the Accessibility settings to configure accessibility plug-ins you have installed on your phone.

Vision

TalkBack – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback.

Message/call voice notifications – Tap  to toggle it On or Off. On allows you to hear automatic spoken alerts for incoming calls and messages.

Settings

Screen shade – Enable to set the screen to a darker contrast.

Font size – Sets the font size.

Touch zoom – Allows you to zoom in and out by triple-tapping the screen.

Screen colour inversion – Enable to invert the colour of the screen and content.

Screen colour adjustment – Allows you to invert the colour of screen and content.

Screen colour filter – Allows you to change the colour of screen and content.

Power key ends call – Enable so that you can end voice calls by pressing the Power/Lock Key.

Hearing

Captions – Allows you to customize caption settings for those with hearing impairments.

Notification LED – Allows you to activate the LED light for incoming calls and notifications.

Flash alerts – Enable to set the flash to blink for incoming calls and notifications.

Turn off all sounds – Enable to turn off all device sounds.

Audio type – Sets the audio type.

Sound balance – Sets the audio route. Move the slider on the slide bar to set it.

Motor & cognition

Touch feedback time – Sets the touch feedback time.

Touch assistant – Show a touch board with easy access to common actions.

Screen timeout – Sets the amount of time before the backlight turns off automatically.

Touch control areas – Allows you to select an area of the screen to limit touch activation to just that area of the screen.

Accessibility features shortcut – Allow you to access selected features quickly when triple-tapping the Home button.

Auto-rotate screen – Enable to allow the phone to rotate the screen depending on the physical phone orientation (portrait or landscape).

Switch Access – Allows you to interact with your device using one or more switches that work like keyboard keys. This menu can be helpful for users with mobility limitations that prevent them from interacting directly with the your device.

< **Shortcut key** >

Get quick access to apps by pressing and holding the Volume keys when screen is off or locked. Tap the Shortcut key switch  at the top right corner of the screen to toggle it **On** or **Off**.

< **Google** >

Allows you to manage settings for Google apps and services.

< **Security** >

Content lock – Lock files for Gallery and memos for Capture+.

Encrypt phone – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

Encrypt SD card storage – Allows you to encrypt SD card storage and keep data unavailable for other devices.

Password typing visible – Show the last character of the hidden password as you type.

Phone administrators – View or deactivate phone administrators.

Unknown source – Default setting to install non-Play store applications.

Verify apps – Disallow or warn before installation of apps that may cause harm.

Storage type – Software only.

Certificate management

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates.

Clear credentials – Remove all certificates.

Trust agents – Select apps to use without unlocking screen.

Screen pin – Allow the app to be the only one used when you pin a screen of an App.

App usage access – Allows you to view usage information of apps on your phone.

Settings

< QuickCircle case >

Activate to make features, such as Call logs, Camera, LG Health, Messaging, Music available in small view when using the QuickCircle case.

< Dual window >

The two split-screen can be viewed at the same time.

1. Touch and hold the Back button to split the screen.
2. Tap or drag app icon you want to use.

 – Switch two screens.

 – View app list.

 – Open full screen.

 – Close most recent app.

Split view – Checkmark to tap a link on the full screen or attachment from emails to run Dual window automatically.

Help – Display tips for using Dual window.

< Date & time >

Use **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< Storage & USB >

INTERNAL STORAGE – View the internal storage usage.

SD CARD – Check total available SD card space. Touch Unmount SD card for safe removal.

< Battery & power saving >

BATTERY INFORMATION

The Battery charge information is displayed on a battery graphic along with the percentage of the remaining charge and its status.

Touch the Battery charge icon to display the Battery use screen to see battery usage level and battery use details. It displays which components and applications are using the most battery power. Tap one of the entries to see more detailed information.

Battery usage – It displays the battery graph which is the remaining level based on recent 3-hour usage pattern. It also displays which components and applications are using the most battery power.

Battery percentage on status bar – Checkmark to display the battery level percentage on the Status Bar next to the battery icon.

BATTERY SAVER

Tap the Battery saver switch to toggle it On or Off. Tap Battery saver to access the following settings:

Battery saver – Sets the battery charge percent level that will automatically turn on Battery saver. Choose from **Immediately**, **5% battery** and **15% battery**.

Game optimizer – Adjust video quality in games to save battery.

< Memory >

Display the average memory use.

< Smart cleaning >

Display the space in use and free in your phone. Tap  at the top right corner of the screen to set notification interval and idle time period.

< Apps >

View and manage your applications.

< Default message app >

Set **Messaging** or **Hangouts** as default app.

< Backup & reset >

Change the settings for managing your settings and data.

Back up my data – Set to backup your settings and application data to the Google server.

Settings

Backup account – Set to backup your account.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

Network settings reset – This will reset all network settings, including Wi-Fi and Bluetooth.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the phone this way, you are prompted to re-enter the same information as when you first started Android.

< About phone >

View legal information and check your phone status and software version.

PC software (LG PC Suite)

"LG PC Suite" PC software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, video, photos) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (calendar, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Play multimedia contents of your PC from your device.
- Backup and create and edit the memos in your device

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.

Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > MOBILE SUPPORT > Mobile Phones > Select the Model**
or
Go to **Support > Mobile > Select the Model.**
- 3 Click **PC SYNC** from **DOWNLOAD** and click **DOWNLOAD** to download "LG PC Suite" PC software.

PC software (LG PC Suite)

System Requirements for "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit colour or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software application.

Synchronizing your Device to a PC

Data from your device and PC can be synchronized easily with "LG PC Suite" PC software for your convenience. Contacts, schedules and bookmarks can be synchronized.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 Slide down the status bar > select **Media device (MTP)**.
- 3 After connection, run the program and select the device section from the category on the left side of the screen.
- 4 Click **Synchronize Personal information** to select.
- 5 Select the checkbox of contents to synchronize and click the **Sync** button.

NOTE: To synchronize your phone with your PC, you need to install LG PC Suite onto your PC. Please refer to previous pages to install LG PC Suite.

Moving contacts from your Old Device to your New Device

- 1 Export your contacts as a CSV file from your old device to your PC using a PC sync program.
- 2 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 3 On the top menu, select **phone > Import/Export contacts > Export** to your phone.
- 4 A popup window to select the file type and a file to export will appear.
- 5 On the popup, click the **Select a file** and Windows Explorer will appear.
- 6 Select the contacts file to export in Windows Explorer and click the Open.
- 7 Click **Export**.
- 8 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 9 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 10 Click **OK**.

Phone software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device. Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your mobile phone: **Settings > General tab > About phone > Update Center > Software Update > Check now for update.**

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature depends on your network service provider, region and country.

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product, or from software supplied by service providers or carriers. This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your phone's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan to is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

DivX HD

This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video. To play purchased DivX movies, first register your device at vod.divx.com. Find your registration code in the DivX VOD section of your device setup menu.

DivX Certified® to play DivX® video up to HD 720p, including premium content. DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.

Dolby Digital Plus DOLBY DIGITAL PLUS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.

Open Source Software Notice Information


To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Accessories

These accessories are available for use with the your phone. (Items described below may be optional.)

Travel adaptor



Stereo headset




Quick Start Guide



Data cable



Battery



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
Micro-SIM card error	There is no Micro-SIM card in the phone or it is inserted incorrectly.	Make sure that the Micro-SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the Micro-SIM card is more than 6~12 months old. If so, change your Micro-SIM card at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	


Troubleshooting

Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorised.
	New Micro-SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.



Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & photos	Memory full	Delete some messages from your phone.
Files do not open	Unsupported file format	Check the supported file formats.


Troubleshooting


Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update via the website.



Category Sub- Category	Question	Answer
BT Bluetooth Devices	What are the functions available via Bluetooth	You can connect a Bluetooth audio device such as a Stereo/Mono headset or Car Kit. Also, when the FTP server is connected to a compatible device, you can share content stored on the storage media.
BT Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5 mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
Data Contacts Backup	How can I backup Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data Synchronization	Is it possible to set up one-way sync with Gmail?	Only two-way synchronization is available.
Data Synchronization	Is it possible to synchronize all email folders?	The Inbox is automatically synchronized. You can view other folders by tapping the Menu Key  and select Folders to choose a folder.
Google™ Service Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you have logged into Gmail, no need to log into Gmail again.

Category Sub- Category	Question	Answer
Google™ Service Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
Phone Function Ringtone	Is there a file size limitation for when I want to use MP3 file as ring tone?	There is no file size limitation.
Phone Function Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I change this?	You will only be able to see the times for messages received the same day.
Phone Function Navigation	Is it possible to install another navigation application on my phone?	Any application that is available at Play Store™ and is compatible with the hardware can be installed and used.
Phone Function Synchronisation	Is it possible to synchronize my contacts from all my email accounts?	Gmail and MS Exchange server (company email server) contacts can be synchronized.

Category Sub- Category	Question	Answer
Phone Function Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact with the W & P functions saved into the number, you will not be able to use those features. You will need to re-save each number.</p> <p>How to save with Wait and Pause:</p> <ol style="list-style-type: none"> 1. From the Home screen, tap the Phone icon . 2. Dial the number, then tap the Menu Key . 3. Tap Add 2-sec pause or Add wait.
Phone Function Security	What are the phone's security functions?	<p>You are able to set the phone to require that an Unlock Pattern be entered before the phone can be accessed or used.</p>

Category Sub- Category	Question	Answer
Phone Function Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none">1. From the Home screen, tap and hold the Recent Key .2. Tap System settings > Display tab > Lock screen.3. Tap Select screen lock > Pattern. The first time you do this, a short tutorial about creating an Unlock Pattern will appear.4. Set up by drawing your pattern once, and once again for confirmation. <p>Precautions to take when using the pattern lock.</p> <p>It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern five times. You have five chances to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds. (Or, if you preset the backup PIN, you can use the backup PIN code to unlock the pattern.)</p>

Category Sub- Category	Question	Answer
Phone Function Unlock Pattern	What should I do if I forget the unlock pattern and I didn't create my Google account on the phone?	If you have forgotten your pattern: If you logged into your Google account on the phone but failed to enter the correct pattern 5 times, tap the forgot pattern button. You are then required to log in with your Google account to unlock your phone.
Phone Function Memory	Will I know when my memory is full?	Yes, you will receive a notification.
Phone Function Language Support	Is it possible to change my phone's language?	The phone has multilingual capabilities. To change the language: 1. From the Home screen, tap and hold the Recent Key  and tap System settings . 2. Tap General tab > Language & keyboard > Language . 3. Tap the desired language.
Phone Function VPN	How do I set up a VPN?	VPN access configuration is different for each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.

Category Sub- Category	Question	Answer
Phone Function Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold the Recent Key . 2. Tap System settings > Display tab. 3. Tap Screen timeout. 4. Tap the preferred screen backlight timeout time.
Phone Function Wi-Fi & mobile network	When Wi-Fi and mobile network are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know Wi-Fi data connection is being used, view only Wi-Fi icon at the top of your screen without mobile network.</p>
Phone Function Home screen	Is it possible to remove an application from the Home screen?	<p>Yes. Just touch and hold the icon until the dustbin icon appears at the top and centre of the screen. Then, without lifting your finger, drag the icon to the trash can.</p>
Phone Function Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> 1. From the Home screen, tap and hold the Recent Key . 2. Tap System settings > General tab > Apps > DOWNLOADED. 3. Tap the application, then tap Uninstall.

Category Sub- Category	Question	Answer
Phone Function Charger	Is it possible to charge my phone using a USB data cable without installing the necessary USB driver?	Yes, the phone will be charged by the USB cable regardless of whether the necessary drivers are installed or not.
Phone Function Alarm	Can I use music files for my alarm?	Yes. After saving a music file as a ringtone, you can use it as your alarm. 1. Touch and hold a song in a library list. In the menu that opens, tap Set as ringtone > Phone ringtone or Contact ringtone . 2. In the alarm clock setting screen, select the song as a ringtone.
Phone Function Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function Alarm	If my ringer volume is set to Off or Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.



CE0168ⓘ