
LG
Life's Good

Quick Start Guide

LED TV
22LH480A
24LH480A

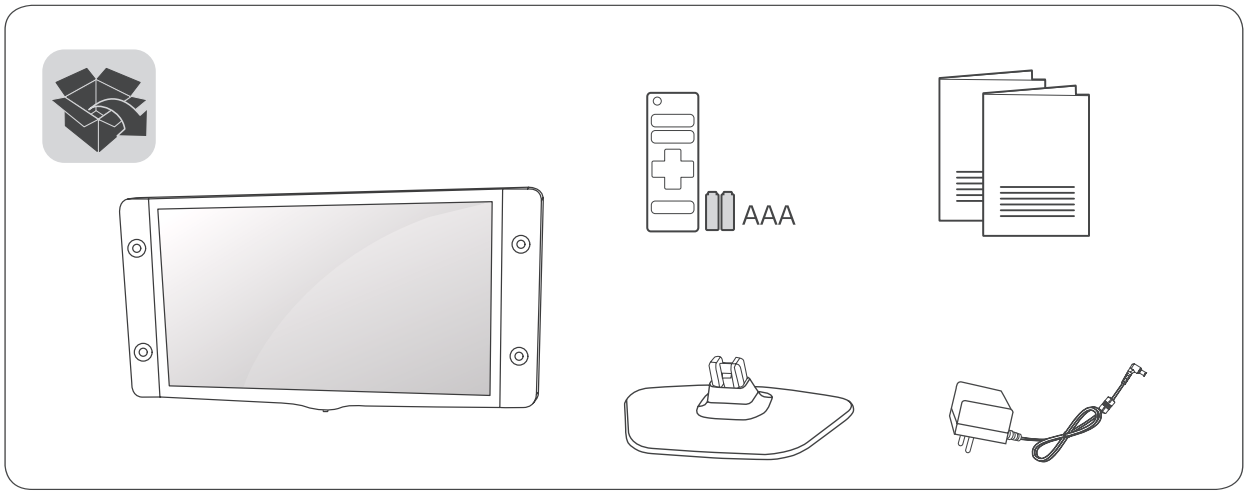

www.lg.com

Read **Safety and Reference**.

*Images may vary depending on models.


Unpacking


Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.


MBM64536724

P/No: MBM64536724 (1601-REV00)

For the power supply and power consumption, refer to the label attached to the product

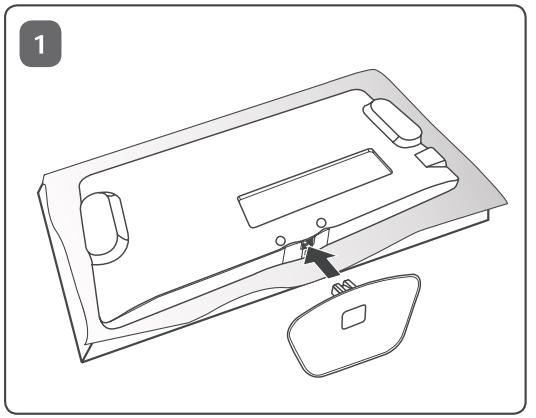

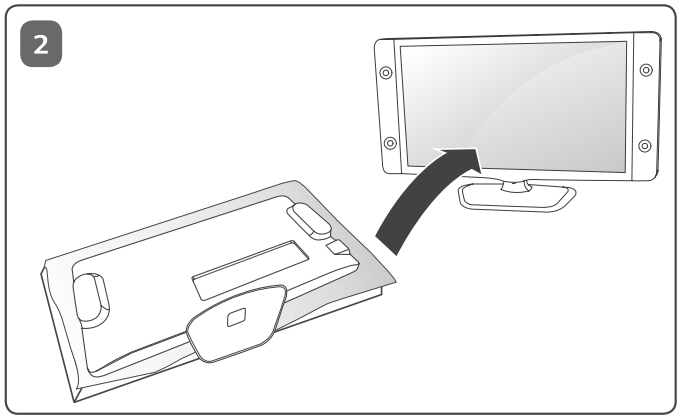

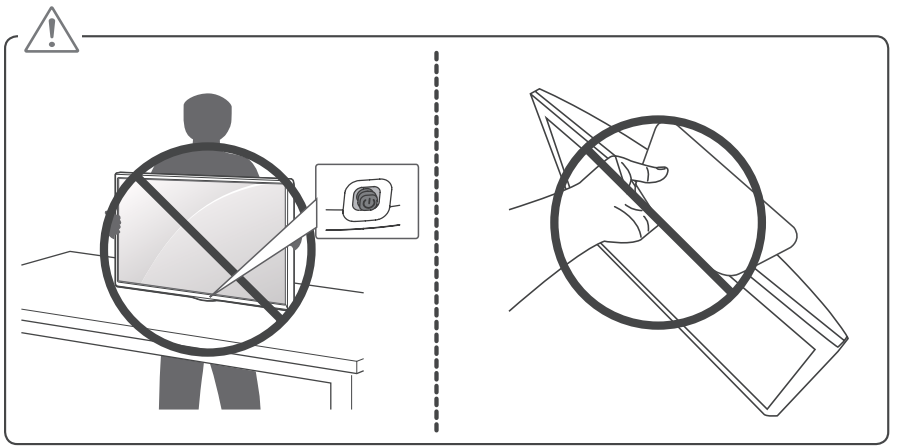


CAUTION


Image shown may differ from your TV


When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.



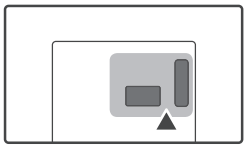


USB Connection
Connect a USB storage device such as a USB flash memory, external hard drive, or a USB memory card reader to the TV and access the Entertainment menu to use various multimedia files.

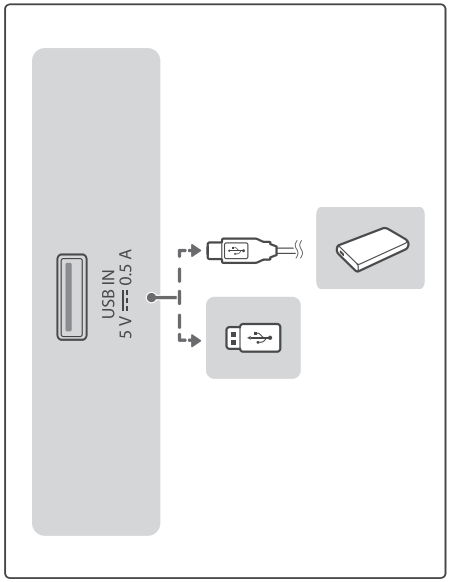


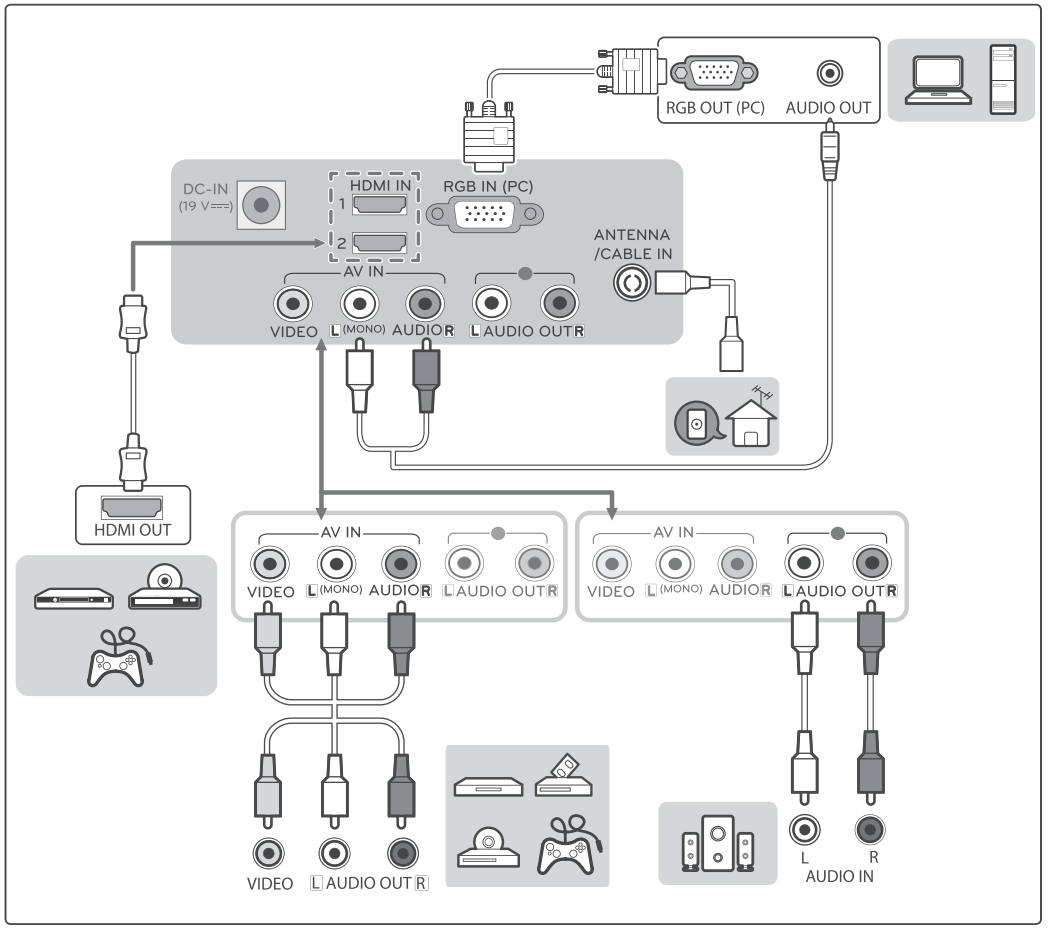


Note: All connection cables shown in the picture are not included along with the TV set

DC-IN
(19 V ⎓)

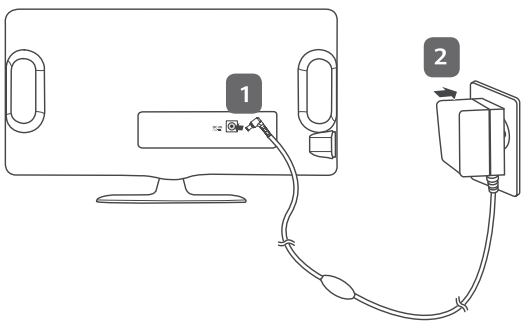

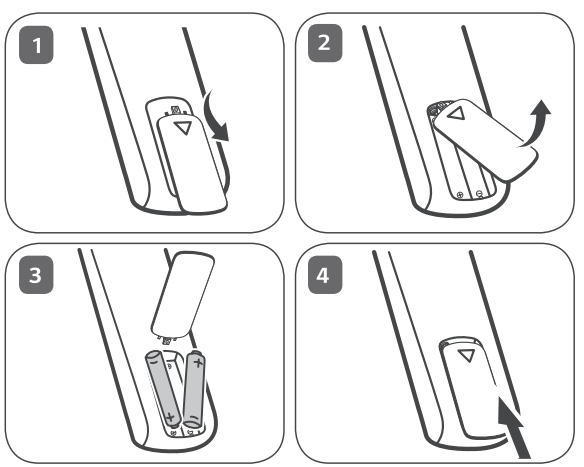

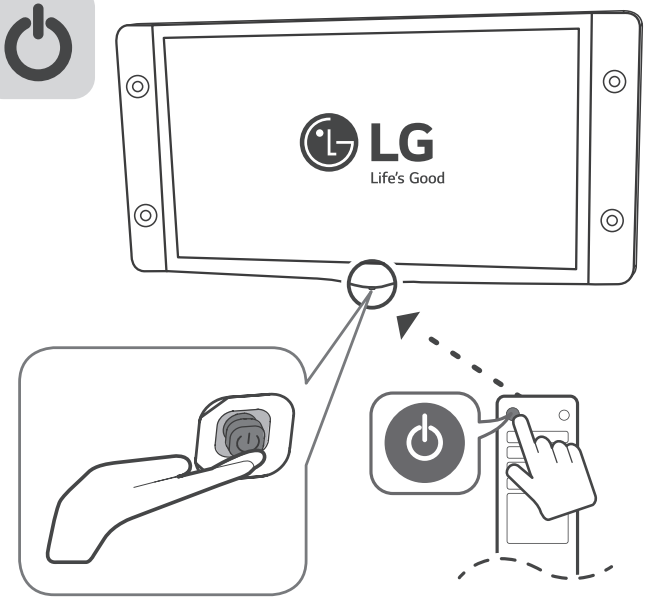

NOTE

Do not use sub standard batteries in TV remote which may lead to leakage & damage the remote control unit permanently. For long unused applications of remote controller it is advisable to remove batteries from remote control unit.

IN020222