

OWNER'S MANUAL

WATER PURIFIER

Please read this manual carefully before operating
your set and retain it for future reference.



Scan QR Code to download
Owner's Manual in Hindi
हिन्दी मैनुअल डाउनलोड करने के लिए
QR कोड स्कैन करें।



MFL66990827
Rev. 19_040823

www.lg.com

Copyright © 2022-2023 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

This manual may contain images or content in addition to the model purchased.

This manual may be subjected to revision by the manufacturer.

- SAFETY INSTRUCTIONS 03
- INSTALLATION 06
 - Parts and Function 06
 - Notes for Installation 08
 - Installing water purifier 08
- OPERATION 09
 - Notes for Operation 09
 - Using Control Panel 09
 - Operation 10
- MANAGEMENT 11
 - Cleaning 11
 - Maintaining the filter..... 12
- TROUBLESHOOTING 14
- WATER PIPING DIAGRAM 15
- PRODUCT SPECIFICATION 16
- WARRANTY CARD 17

SAFETY INSTRUCTIONS

Manufacturer is not responsible for accidents caused by the user as a result of not following the Instruction Manual.

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING -This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION -This indicates that the failure to follow the instructions can cause minor injury or damage the product.



WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

TECHNICAL SAFETY

- Only an authorized person from LG Electronics service center should install the product. Contact LG Electronics service center if you move the product, improper installation/service may cause injury, electric shock or fire.

Power

- Do not modify Power Cord length. Do not use any extension board or multiple socket outlet. Also, Do not share the same power socket outlet with other appliances. Otherwise it will cause electric shock or fire due to heat generation.
- Do not touch the power plug with wet hands, it may cause electric shock
- Plug the power plug in the outlet tightly after removing the moisture and dust completely. It will cause electric shock or fire due to heat generation.
- When pulling out the power plug from an outlet, hold the power plug, not the cable. It will cause electric shock or fire due to heat generation at damaged supply cord area. If the Power cable or Power Plug is damaged, It must be replaced by a Original Spare part provided by the manufacturer or Contact LG Electronics Service.
- Power Supply cord should not be bend or pressed under heavy object. It may damage the power cord to cause Fire or Electric shock.
- Do not plug and unplug the power plug repeatedly It may loosen the holes of Outlet socket to cause Fire or Electric shock.

Operation

- In case of flood, stop using the product and contact LG Electronics service centre.
- Do not place heavy or fragile objects, liquids, combustible substances, or flammable objects (such as lit candles and lamps) on or inside the product. It may cause fire, injury or damage.
- If moisture penetrates inside the product, unplug the power plug and contact LG Electronics service centre. It may cause electric shock.
- Do not move the product while the product is plugged in. It may damage the Power Supply cord and Cause Electric shock or Injury.
- Do not allow anyone to hang from or climb on the product. Be particularly cautious of children operating the product. It may cause injury
- If water is leaking from the inside of the product or water has collected near the product, close the water supply valve, unplug the power plug, and contact LG Electronics service centre. It may cause electric shock.
- When cleaning the product, unplug the power plug. It may cause electric shock.

CAUTION

To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- Connect the input water pipe of the product to tap water only. Water other than tap water is not recommended. It may cause health issues.
- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer. This may cause damage or injury.
- Do not clean the product with brushes, cloths or sponges with rough surfaces or which are made of metallic material. It may cause scratches and cracks on the product.
- There can be sharp edges in a disassembled set, special care to be taken while handling. It may cause injury.
- Do not spray/use or store flammable or combustible substance (ether, benzene, alcohol, chemical, LPG, combustible spray, insecticide, air freshener, cosmetics etc.) near/inside the product, it may cause health related issues.
- For counter-top installation, install the product on a solid and horizontally leveled surface. If the product is installed on a non-horizontally leveled surface, it can generate vibrations and noise or cause misalignment of the product.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. This may cause damage.
- Avoid installing the water purifier in outdoor place, damp area and keep away from direct sunlight, dust and direct water splashing. This could cause product malfunctioning.
- For optimum performance of product, installation condition should be followed as per page no. 16.

- Unplug the power plug during thunder or lightning or when not in use for more than 2 days. This could cause product malfunctioning.
- Immediately unplug the power plug and contact LG Electronics service centre if you detect any abnormal noise, odour or smoke.

Operation

- Replace the filter with a LG standard filter periodically according to the replacement period. Older filters can multiply bacteria or change the taste of the water. The filter replacement period varies according to the usage, place of usage, season, and water quality.



Remarks: Filter to be changed by authorized LG Service personnel only.

- Do not place any article on water tray assembly except water glass. It may fall and cause damage & injury
- Take care against the possibility of damaging the pipe (inlet, outlet) in order to prevent water leakage. It may cause injury or damage to the product and property.

INSTALLATION

Parts and Function (For WW162/172/173/175/182/183/184 Series)

Front & Rear

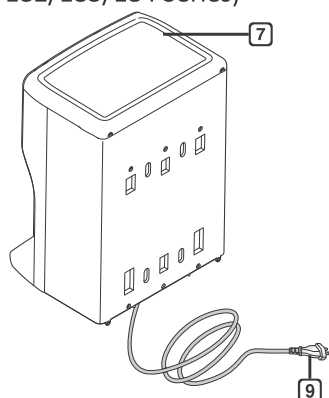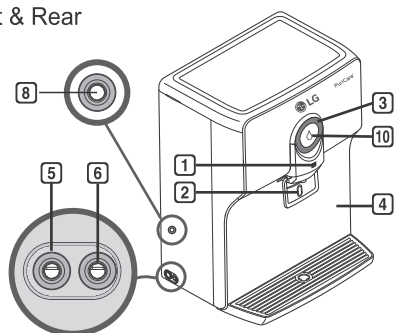

- | | | |
|----------------------------------|--|------------------------------|
| 1 Purified water level indicator | 5 Water supply hose | 9 Power cord |
| 2 Touch lever | 6 Drain hose | 10 Filter change indicator ^ |
| 3 UV Sterilizing indicator * | 7 Top cover (floral pattern*) | |
| 4 Filter cover (floral pattern*) | 8 Cleaning water for fruits & veggies* | |

Accessories

Owner's
Manual

Owners's Manual

Mounting
Guide

Mounting Guide

QRG


Quick Reference Guide



6.35 mm Ø tube*




6.35 mm valve*




Water tray




Water tray cover




Out sediment filter with
anti scalant module

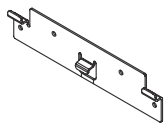


Mount plate (2 nos.)




Screw kit : Screw (6 nos.),
Anchor (6 nos.) & Teflon tape (1 roll)

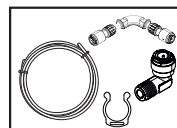

Hose assembly :
Hose (1 no.)
Connectors (2 nos.)
lockers (2 nos.)
Connector Pipe (1 no.)

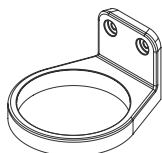

Mounting bracket

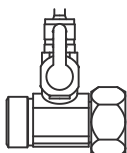


Adaptor

^ Applicable for Out-sediment filter
* For selected models only


INSTALLATION

Parts and Function

Front & Rear
(For WW130/140/142/145/150/151/152/
155/174 Series)

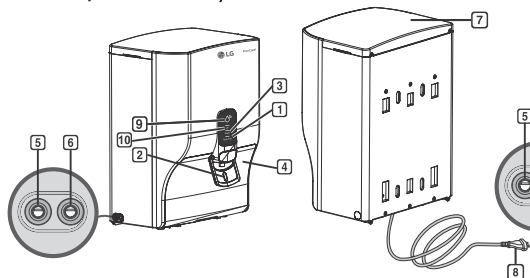

Front & Rear
(For WW136/146/156 Series)

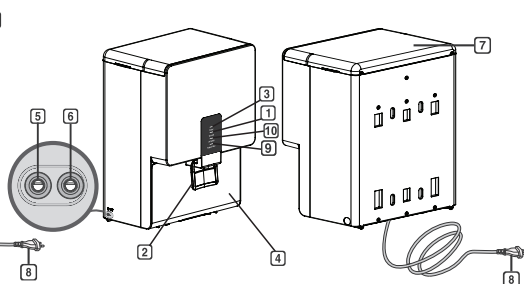

1 Tank full indicator

2 Touch lever

3 Power Indicator

4 Filter cover

5 Water supply hose

6 Drain hose

7 Top cover

8 Power cord

9 Filter change indicator **

10 UV Indicator*

Accessories

Owner's
Manual


Owners's Manual

Mounting
Guide


Mounting Guide

QRG


Quick Reference Guide

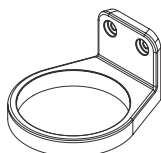


Mounting bracket

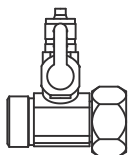


Adaptor




Out sediment filter with
anti scalant module

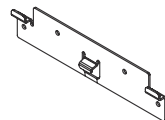

Mount plate (2 nos.)



Screw kit : Screw (6 nos.),
Anchor (6 nos.) &
Teflon tape (1 roll)

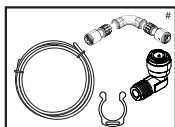

Hose assembly :
Hose (1 no.)
Connectors (2 nos.)
lockers (2 nos.)
Connector Pipe (1 no.)[#]

[^] Applicable for Out-sediment filter

^{*} For selected models only

[#] Only for WW136/146/156/174 Series

Notes for Installation


- Keep a distance of 10cm from all sides of the product.
- When connecting the water hose, do not connect it to the hot water pipe. Doing so may cause malfunctions.
- Check the pipe and hose connection for leaks. Water can leak and cause electric shock or injury.
- When transporting the product, do not tilt the product over 30 degrees. Doing so can cause malfunctions.
- For best usage of product, it is recommended to have surrounding temperature range of (4°C to 45°C). Not doing so can cause product malfunctioning.
- Avoid installing the water purifier in a place with a non-leveled horizontal surface, relative humidity of >85%, direct sunlight, dust and direct water splashing.
- Model nos. WW130NP, WW136RPNB, WW140NP, WW140NPR, WW142NPC, WW145NPW, WW146RPRB, WW146RPRC, WW150NP, WW151NP, WW151NPR, WW152NP, WW155NPB, WW156RPLB, WW156RPLW, WW156RPLC, WW174NPB, WW174NPC can only be wall mounted and should not be installed on a table/ counter top as it may malfunction & warranty may be void.
- Height between immediate Water reservoir tank to Water purifier inlet should be more than 1 meter for effective working of the product.



Important Note: All models can only be installed with water supply from overhead storage tank. No other water supply should be used for installation of these models.

Installing water purifier

- 1 Connect the product hoses as shown below.
 - Cut the Hose roll (5m) into two parts as per required length for IN & OUT(drain) water supply printed in machine .
 - Connect the white IN hose (water supply) to tap water.
 - Install the White OUT hose (drain) on the sink.

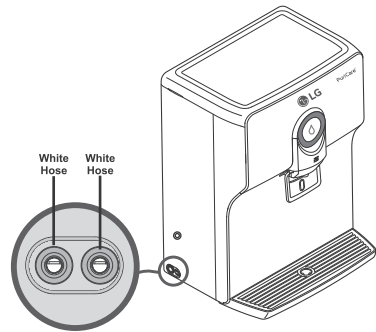

- 2 Connect the power cord to an appropriate socket.
- 3 Open the water supply valve.
- 4 After installation, discharge water for the first time when water tank is full. Same process is to be followed after every filter change or digital sterilization. Appropriate time taken to fill the tank to the fullest is 1 hour, depending on water pressure, temperature etc.

⚠ CAUTION

Handle all packaging materials (such as plastic bags and thermocol) to keep away from children. The packaging materials can cause suffocation.

OPERATION

Notes for Operation

- Open the water supply valve. The water purifier operates normally only when water is supplied properly.
- It is very important to replace the filter periodically in order to drink clean water. When using an expired filter, the performance of water filtration system can deteriorate. Always abide by the filter replacement period.
- If product has not been used for 2 or more days, discharge the stored water from water purifier tank.
- Do not use purified water for replacing water in the humidifier or fishbowl.
- Use the product only after closing the product cover completely. Otherwise, insects or other foreign substances may get in.

Note


- The reverse osmosis contains a replaceable treatment component critical for the effective reduction of total dissolved solids and that product water shall be tested periodically (during service engineer visit) to verify that the system is performing properly.
- Do not use with water that is microbiologically unsafe or of unknown quality, without adequate disinfection before or after the system.

Recommendation (when product not in use)


- If the Product will not be used for 2 or more days, unplug the power plug and close water supply valve before leaving premises and drain the water inside of water filtration(including tank) system completely before consumption of water.

Using Control panel


(For WW162/172/173/175/182/183/184 Series)

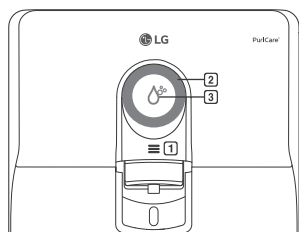

(For WW130/140/142/145/150/151/152/155/174 Series)

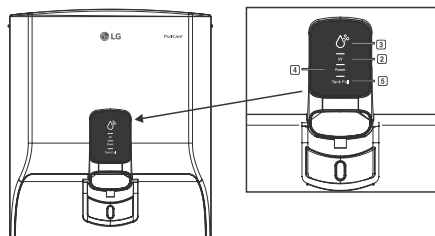

(For WW136/146/156 Series)

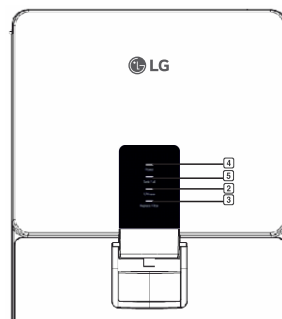

1 Water level indicator

The water level of the storage tank is displayed in 3 levels.

- The icon is divided into 3 levels according to the water level, and as more indication Light turn on, the water level becomes higher. However, the water level cannot be adjusted discretionally.



2 UV Sterilizing indicator*

Purified water is sterilized by the UV LED. Blue color indicates that UV sterilization is ON & White color indicates that UV sterilization is OFF.

For WW136RPNB, WW145NPW, WW146RPRB, WW146RPRC, WW150NP, WW151NP, WW151NPR, WW152NP, WW155NPB, WW156RPLB, WW156RPLW, WW156RPLC, WW174NPC, WW174NPB, UV indicator will glow.

(When tank cover is open, UV LED will be automatically turned OFF for your safety.)

* For selected models only

NOTE

The UV LED operates in any of the following 2 cases.

- It operates for 75 minutes in every 6 hours.
- It operates for 75 minutes after approximately 2 seconds when power is turned on following a power failure.

Disclaimer :

UV nano is a compound word derived from the words UV and its unit, nanometre.

3 Filter Change Indicator **



When the color of indicator changes from blue to amber, this indicates that it is time for preventive maintenance service. Please call LG customer care for service.



When the Filter Change Indicator glows, it indicates that it is time for preventive maintenance service. Please call LG customer care for service.

4 Power Indicator*



The Power LED glows to indicate ON condition of Water Purifier.

5 Tank Full Indicator*



When the water storage tank gets filled up completely then Tank full indicator will turn ON.



Operation

Using purified water

When you press the touch lever, purified water will come out.

NOTE

If you wish to discharge continuously, lift the touch lever upward.

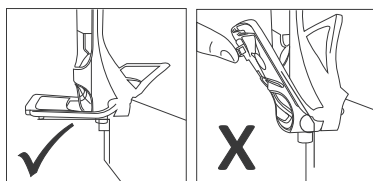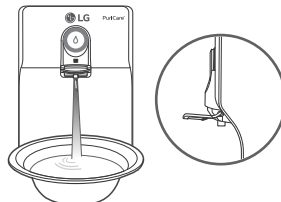


Caution : Open this lever to 90° only.*

*Opening more than 90° may cause it to malfunction/damage.

Using the fruit & vegetable cleaning water *

Open the valve. You can rinse fruits and vegetables and wash the dishes.

The function discharges water while the valve is opened.

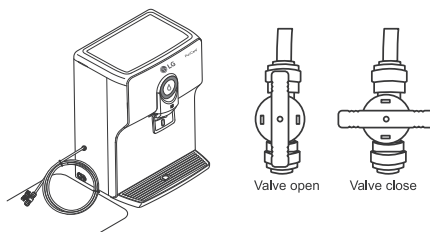

NOTE

Do not use this water for drinking and cooking.

Important note for all models:

All models of water purifier comes with a unique flow sensor (To protect the product from running without water supply) which turns on only if there is running water supply to water purifier. If no/lower water supply than specified limit is available, then water purifier will stop for 15 minutes and later, runs again for few seconds to check water supply.

If water supply is detected, then water purifier will work normally otherwise it will repeat to check cycle again. If water supply is available & you want to start water purifier immediately, just turn off the power supply and wait until the Display gets turned off, and turn on the power again.

^ Applicable for Out Sediment filter


* For selected models only

MANAGEMENT

Cleaning


How to clean the storage tank

- 1 Close the water supply valve.

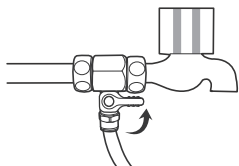


- 2 Drain water inside the storage tank completely using the drain hose and the water outlet.

(For WW162/172/173/175/182/183/184 Series)

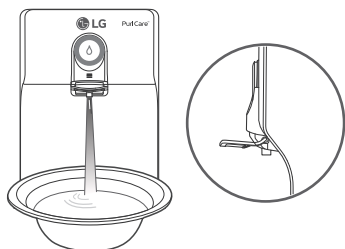


(For WW130/136/140/142/145/146/150/151/152/155/156/174 Series)

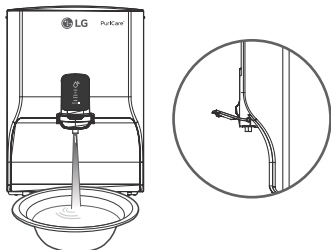


- 3 Unplug the power cord.
- 4 Open the top cover by lifting it upward, and then unlock the storage tank cover.

CAUTION Handle with care, sharp edges may cause injury.

(For WW162/172/173/175/182/183/184 Series)

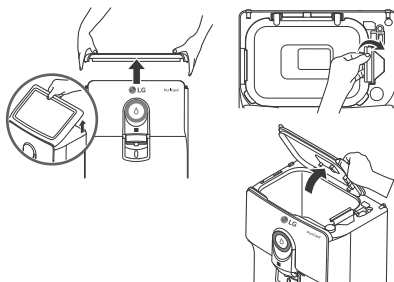


(For WW130/136/140/142/145/146/150/151/152/155/156/174 Series)

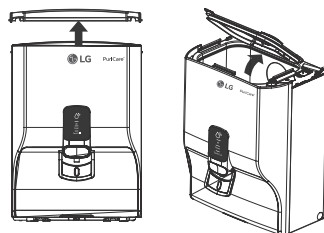

CAUTION Do not put pressure or weight on tank cover, it may cause damage or injury.


- 5 Wipe the surface of the storage tank with soft clean cloth.

CAUTION Avoid touching any interconnecting part inside water tank. It may cause damage to the product.

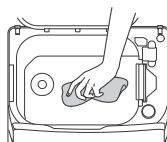


- 6 Rinse the storage tank with purified water / Halogenated Solution (usually chlorine) and drain completely once in four months.


WARNING Take care of water spattering, it may cause electric shock.

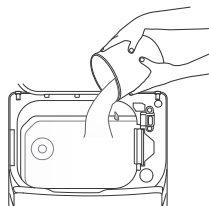

- 7 Insert and lock the storage tank cover.



- 8 Close the top cover, plug in the power cord and open the water supply valve.

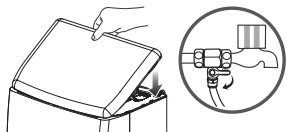


- 9 After installation, filter change or digital sterilization when tank is full, discharge water for the first time. (approximately time taken to fill the tank to fullest is 1 hour, depending on water pressure, temp etc)

NOTE

- **⚠ WARNING:** Unplug the power cord when cleaning the storage tank. It may cause electric shock.
- **⚠ CAUTION:** Clean the tank by only using purified water. Do not use chemical (except chlorine) or detergent for cleaning the storage tank. Chemical or detergent will not be washed away completely, it can be harmful to the human body.

How to clean water outlet

- 1 Clean the water outlet periodically using a soft clean brush. Fur or foreign substances may accumulate in the water outlet

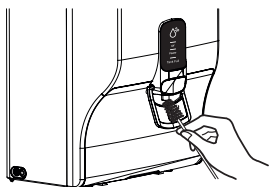


* For selected models only


How to clean water tray assembly

- 1 Separate the Water tray cover by pulling it upwards.

⚠ CAUTION: Handle with care, sharp edges may cause injury.

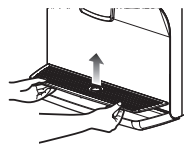

- 2 Separate the Water tray cover by pulling it forward..

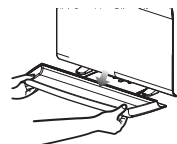


- 3 Clean it with water.

- 4 Wipe the surface of the water tray with a soft clean cloth.

- 5 Install the water tray on the product.

- 6 Place the water tray cover on the water tray and attach it to the front of the product closely, and gently push it to install.

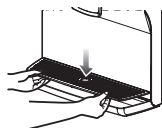

NOTE

- Caution should be taken. If a large amount of water is in the water tray, water can spill out when separating the water tray.

Note- Clean the water tray assembly periodically.

Maintaining the filter

Process of Purification

Drinking water

Step 1:

Out sediment filter with anti scalant module

- Removes big particles, rust stains, mud etc. and reduces input water hardness to enhance filter life.

Step2:

Sedi + Carbon filter

- Removes unseen dregs and other contamination & removes invisible fine particles, residual chlorine, VOC (Volatile Organic Compounds) etc.

Step 3:

RO membrane filter*/RO recovery plus*/RO recovery filter*

- Removes dissolved impurities and removes heavy metals, bacteria, viruses, VOC etc. from water.
- TDS Reduction upto 90% ppm of Source Water.

Step 4:

(For WW130/145/150/152/162 models)


Post-carbon filter

- Removes odour & improves taste of water.

(For WW136/140/142/146/151/155/156/172/173/174/182/183/184 models)

Mineral booster filter

- Removes odour, add minerals in the purified water without mixing impure water.

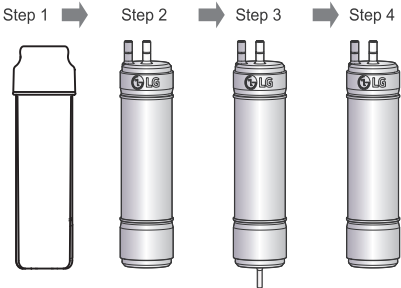

Cleaning water for fruits & veggies*

(Only with WW182EP/WW183EPR/WW184EPB/WW184EPC)

Step 1:


Out sediment Filter with antiscalant module:

- Removes big particles, rust stains, mud etc. and reduces input water hardness to enhance filter life.

Step 2:

UF membrane filter*

- Removes only bacteria and fine particle substance.

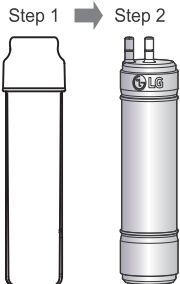

NOTE

- Do not use water drained from the product for drinking or cooking.
- Use the water instead for cleaning the bathroom and house, gardening or for other various purposes.
- Activated carbon inside the filter may sometimes flow in the storage tank. If so, a fine powder of activated carbon used in the post-carbon filter has come out, and it is harmless to the human body. If found, drain out the water from tank completely.

Filter replacement period

The filter replacement period refers to the period that the purification performance of the filter is maintained. And, the replacement period is lesser in the case of a place with poor water quality or a large purification amount.

* For selected models only

** As per LGEIL standard.

Filter name	Recommended purification amount**(in litres)
Out sediment filter Anti scalant module	3000 6000
Sedi + Carbon filter*	6000
RO membrane filter* RO Recovery Plus* RO Recovery Filter*	6000
Post-carbon filter*	6000
Mineral booster filter*	6000
UF membrane filter*	6000

⚠ WARNING-

- Filter replacement and /or AMC request can only be placed via calling LG customer care (Refer last page)
- Warranty shall be void in case of use of Counterfeit (duplicate) filters or replacement of filters from Unauthorized sources.
- Using Counterfeit filters or procuring filters from unauthorized sources may negatively impact or degrade product performance and product life. It may not be safe drinking water and may also impact user's health.
- LG shall not be responsible for any damage arising directly or indirectly out of any defect being noticed in the product due to usage of such Counterfeit filter's.

NOTE


If you wish to replace the filter,contact LG electronics customer care

- After replacing the filter, check if there is a leak from the product.
- After installation, discharge water for the first time when water tank is full. Same process is to be followed after every filter change or digital sterilization. Approximate time taken to fill the tank to the fullest is 1 hour, depending on water pressure, temperature etc.
- For RO Membrane Filter, $\geq 20\%$ of supplied water (based on the tap water pressure of 3.5 kgf/cm^2 (0.34 Mpa) at water temp. of 25°C and Input TDS upto 2000 mg/L will be purified). While for RO Recovery Plus $\geq 50\%$ (WW174NPC/WW174NPB/WW175EPW/WW184EPB/WW184EPC) of supplied water (based on tap water pressure of 1.5 Kgf/cm^2 (0.15 MPa), upto 2000 mg/L TDS at water temp. of 25°C) will be purified and remainder will be drained.
- For RO Membrane Filter, $\geq 40\%$ (WW136RPNB, WW146RPRB, WW146RPRC, WW156RPLB, WW156RPLW, WW156RPLC) of supplied water (based on the tap water pressure of 1.5 Kgf/cm^2 (0.15 MPa), upto 2000 mg/L TDS at water temp. of 25°C) will be purified and remainder will be drained.
- No chemical preservatives used in membrane
- ⚠ CAUTION: Outsediment filter may get choked in abnormal turbidity (Sand & mud) condition, it is suggested to switch ON water purifier after 1-2 hour of overhead tank filling so that sand/mud will get settled. Outsediment filter should be cleaned regularly to prevent choking in above condition for better performance. Life of filter may get affected by high turbidity and hardness of water.


TROUBLESHOOTING

Symptoms	Reason	Solution
Water tastes strange.	Have you left the water purifier for a period of 2 or more days without using it?	The taste of water may change as it ages. Contact LG Service. Use the water purifier after discharging the tank one time in case issue persists please contact LG service.
	Has it been a long time since you installed and replaced the filter?	If an expired filter is used, the purification performance may decline. It is recommended to replace the filter according to the filter replacement period.
The purification amount has reduced suddenly.	Is it time to replace the filter?	Request for filter replacement.
	Is the water supply valve closed?	Open the water supply valve.
Water does not come out.	Did you miss the filter replacement period?	Request filter replacement.
	Is the water supply valve closed?	Open the water supply valve.
	Is the power plug unplugged from the outlet?	Plug the power plug in the outlet correctly.
	Does water not come out when you press the discharge lever?	Contact LG Electronics service centre.
The product is noisy and generates abnormal sounds.	Is the product installed on a weak floor or not installed on a stable surface?	Install the product in a place with horizontally leveled surface.
	Is an article placed on top of the product?	Remove the article placed on top of the product.
Fine particles occur in the purified water.	Did water bubbles form?	- Water bubbles may form in the draining process. It is safe for you to drink. - If fine particles exist continuously after you receive water from the water purifier and several minutes have passed, cut off the tap water supply and power supply and contact LG Electronics service centre.

WATER PIPING DIAGRAM

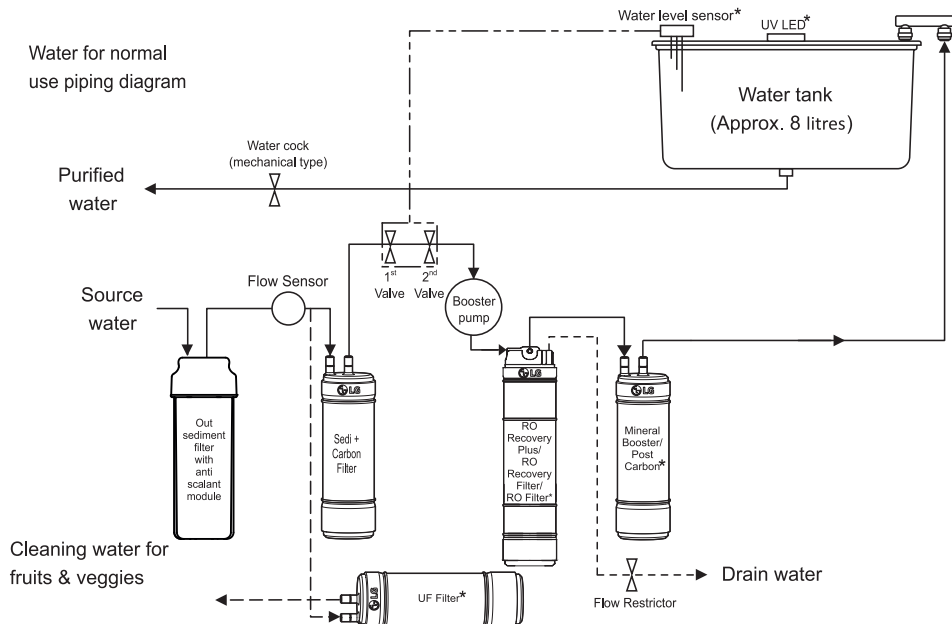

Electrolysis Sterilizing Care Water piping diagram

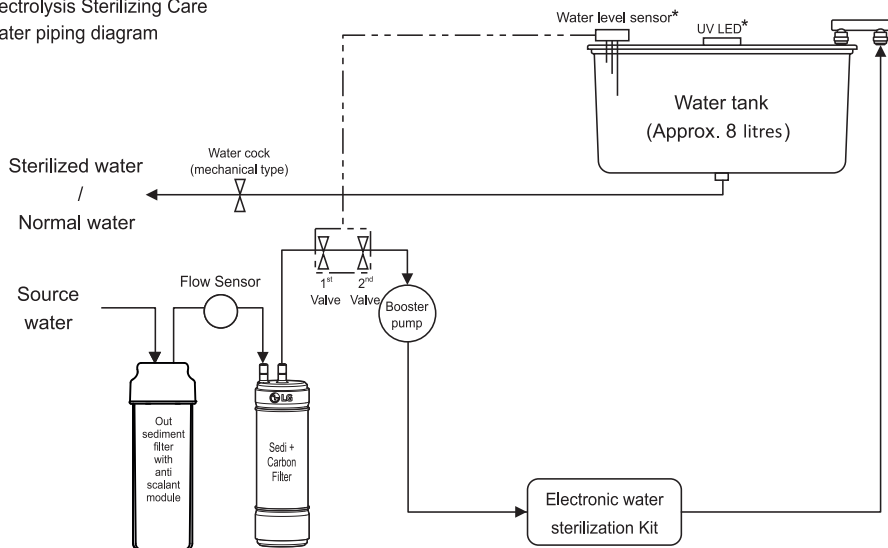

*Features and spec. may vary from model to model.

PRODUCT SPECIFICATION

Model name		WW182EP WW183EPR WW184EPB WW184EPC	WW162EP WW172EP WW173EPB WW175EPW	WW174NPC WW174NPB	WW136 RPNB WW146RPRB WW146RPRC WW156RPLB WW156RPLW WW156RPLC	WW145/ 150/151/ 152/155 Series	WW130NP WW140NP WW142NPC Series
Purification Method	Drinking Water	Reverse Osmosis	Reverse Osmosis	Reverse Osmosis	Reverse Osmosis	Reverse Osmosis	Reverse Osmosis
	Fruit & vegetable cleaning water	Ultra-filtration	-	-	-	-	-
UV Sterilization		Yes	Yes	Yes	Yes	Yes	-
Rated Voltage		230 V - 50 Hz					
Power Rating		Water purifying : 40W					
Volume of Tank		Approx. 8 litres					
Filter Material	Out Sediment Filter* and Anti scalant module	Polypropylene Module Polyphosphate module					
	Sedi + Carbon Filter*	Polypropylene Module + Activated Carbon					
	RO Membrane Filter* RO Recovery Plus* RO Recovery Filter*	Polysulfone + Polyamide					
	Post Carbon Filter*	Activated Carbon					
	Mineral Booster Filter*	Activated Carbon + Mineral Booster					
	UF Membrane Filter*	Polysulfone					
	Dimension	365mm (W) x 295mm (D) x 500mm (H) / without water tray : 365mm (W) x 275mm (D) x 500mm (H)				365mm (W) x 264mm (D) x 508mm (H)	365mm (W) x 283mm (D) x 506mm (H)
Net Weight		10.5 kg	10 kg	10 kg	10 kg	9.2 kg	
Installation water Pressure limit		0.01 – 0.86 MPa (0.1 - 8.8 kgf/cm ²)					
Internal Operating Pressure		Min. 0.140 MPa (Avg. 0.68 MPa) (Before filtration)					
		Recommended input water quality					
Total Dissolved Solids (TDS)		≤ 2000 mg/L					
Total Hardness		≤ 425 mg/L					
Turbidity		≤ 5 NTU					

* For selected models only.

WARRANTY CARD

The Water Purifier (hereinafter referred as product) comes with 1 year warranty on all parts (except Plastic parts, Consumables, Loose Plastic Parts, Filters, RO Filter) and thereafter a 9 years additional warranty only on the stainless steel tank from the date of purchases on producing the tax paid invoice of the product provided always that the warranty card bears the rubber stamp, date and signature of our authorized dealer.

9 YEAR ADDITIONAL WARRANTY ON THE STAINLESS STEEL TANK

The 9 Year warranty on the Stainless Steel Tank will continue even after the expiry of 1 year period from the date of purchase. This warranty covers Stainless Steel Tank only. However the water tank should be used only for purpose as specified in the user manual. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts only under the warranty period. During the additional warranty period, it does not cover parts such as PCB/Controller assembly, booster pump, solenoid valve, flow sensor, UV LED lamp, water level sensor, filters, consumable parts, etc. The standard visiting charges will be applicable within municipal limit of town where LG Electronics India Pvt. Ltd. (LGEIL) has its Authorized Service Centre, Service Outside municipal limit will attract to and fro travelling, other incidental expense in addition to standard visiting charges, as per the prevailing from time to time. During the additional warranty period only the parts replaced or repaired shall be free of costs, but service charges shall always be payable by the customer.

Common TERMS & CONDITIONS applicable for warranties as mentioned above:

1. The warranty is confined to the first purchaser of the Water Purifier only & is non-transferable.
2. Repairs & replacements will be carried out through the Authorized Service Centres of LG Electronics India Pvt Ltd. (hereinafter referred as LG or LGEIL). Customer may place their service call through the LG customer care or through the dealer from whom the product has been purchased. In case the customer shifts the place of residence during warranty period, it is advised to contact our helpline.
3. Repair under warranty shall be carried out by an authorized service personnel only. The details of centralized helplines are attached.
4. For units installed beyond municipal limits of the jurisdiction of company's Authorized Service Centre, it is responsibility of the purchaser to contact the nearest authorized service centre and bring the unit to the authorized service at its own cost and risk. All expense incurred in collecting the units or parts thereof from the company's authorized service centre, as well as expenses incurred with deputing of service personnel/technician toward conveyance and other incidentals etc. will be borne by the customer. Local charges for transportation and handling charges may vary from location to location. Customers are advised to verify before. In case the customer desires to bring the unit on its own to the Authorized Service Centre, the same shall be at its own risks & consequences.
5. The concerned authorized service centre will advise the customer whether to effect the repairs at site or at the authorized service centre.
6. Call registered with the centralized helpline/Authorized service centre, wherein only cleaning of the unit/parts in the unit due to dust accumulation on portions of the units are not to be

considered as defects.

7. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. LGEIL may use parts that are new or refurbished and equivalent to new in performance and reliability. Replacement of parts would be purely at the discretion of LGEIL alone. In case the replacement of the entire unit is being made, (subject to the sole discretion of LGEIL), the same model shall be replaced and in the event such model has been discontinued, it shall be replaced with the model price equivalent at the time of purchase.
8. In case of any damage to the product/customer abuse/repairs by un-authorized personnel's/ misuse detected/ by the Authorized Service Centre personnel, the warranty conditions are not applicable and repairs will be done subject to availability of parts and on a chargeable basis only.
9. This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect being noticed in the equipment during warranty period of the Water Purifier. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts only under the warranty period.
10. The company or its Authorized Service Centre reserves the right to retain any part/s or component replaced its discretion, in the event of defect being noticed in the equipment during warranty period.
11. While the company will make every effort to carry out repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
12. Warranty does not cover accessories external to the equipment supplied by the dealer
13. In the event of any unforeseen circumstance, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
14. If any coloured internal or external components are replaced, there will be commitment to ensure that the shades match with the original or other components. The replaced shades, patterns, tints may vary from the customer's unit due to continuous usage of the unit. Any matching components changed at customer's request will be chargeable basis except the component which actually needed.
15. Free Installation or Demo of the product, can be availed only once & within 3 months from the date of purchase.
16. Any extended warranty offered by LGEIL has to be supported by relevant proof.
17. During 1st year warranty LGEIL recommend hygiene maintenance, provides 3/2* free scheduled Visits depending upon model for service of the product, for which customer has to connect LG customer care or to confirm in case call received from LGEIL.
18. Warranty shall expire after the warranty period as mentioned above even if the Water Purifier may not be in use for any time during the warranty period for any reason.
19. Only courts in state of Delhi and places where LGEIL has its branch office shall have the

*For WW142NPC/WW136RPNB/WW146RPRB/WW146RPRC/WW156RPLB/WW156RPLW/WW156RPLC

- jurisdiction for settling any claims, disputes arising under the warranty.
20. Warranty is not applicable in any of the following cases where :
- a) the warranty card is not completed properly at the time of purchase.
 - b) the completed warranty card is not presented to authorized service personnel at the time of service of the product.
 - c) the product is not operated according to instructions given in the Operating Instruction Booklet/Owner's Manual.
 - d) the product is used for commercial purposes
 - e) the input TDS of source water is more than the specifications as mentioned in the owner's manual.
 - f) the product has failed under certain conditions like water logging , flood , fire , misuse etc.
 - g) defects/malfunction are caused by improper or reckless use, which shall be determined by the company personnel.
 - h) any repair work is carried out by persons other than authorized service personnel.
 - i) defect/malfunction are caused which are beyond control like lightening, abnormal voltage, Acts of God, virus etc.
 - j) defects/malfunction caused while in transit to service centre or purchaser's residence.
 - k) defects caused by rodents bite or by pests and vermin ants/Insects/animals/birds etc.
 - l) the serial number is deleted, defected or altered.
 - m) damage is caused to the product or any part/s due to transportation or shifting.
 - n) any accessory external to the equipment are supplied by dealer or LG.
 - o) any issue is caused by usage of 3rd party product like voltage stabilizer, power outlet socket, MCB, extension board etc.

CUSTOMER DETAILS :


MODEL No. :

SERIAL No. :

DATE OF PURCHASE :

CUSTOMER'S NAME & ADDRESS

TEL. _____

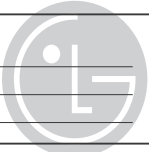

DEALER'S NAME & ADDRESS

TEL. _____



Customer's Signature

Dealer's Signature

विषय सूची

इस मैनुअल में खरीदे गये मॉडल के अलावा चित्र या आकृति हो सकते हैं।

इस गाइड में निर्माता द्वारा संशोधन किया जा सकता है।

सुरक्षा निर्देश 02

स्थापना 04

पार्टस व फंक्शन..... 04

स्थापना के लिए नोट..... 06

जल शुद्धिकारक को स्थापित करना..... 06

प्रचालन 07

प्रचालन के लिए नोट..... 07

कंट्रोल पैनल का उपयोग 07

प्रचालन 08

प्रबंधन 09

सफाई..... 09

फिल्टर की देखभाल 10

समस्या निवारण 12

पानी का पाईपिंग डायग्राम..... इसके लिए अंग्रेजी मैनुअल का पेज 15 देखें

उत्पाद विनिर्देश..... इसके लिए अंग्रेजी मैनुअल का पेज 20 देखें

वारंटी कार्ड..... इसके लिए अंग्रेजी मैनुअल का पेज 21 देखें

सुरक्षा निर्देश

अनुदेश मैनुअल का पालन ना करने की वजह से उपभोक्ता को होने वाले दुर्घटनाओं के लिए निर्माता जिम्मेदार नहीं है।

निम्नलिखित सुरक्षा निर्देश अप्रत्याशित खतरे या उत्पाद के असुरक्षित या गलत प्रचालन से होने वाले नुकसान को रोकने के लिए अभिप्रेत हैं।

सुरक्षा निर्देशों को 'चेतावनी' और 'सावधानी' में विभाजित किया गया है।

⚠ यह निशान उन मामलों को दर्शाता है जो खतरे का कारण बन सकता है। इस निशान वाले भाग को ध्यान से पढ़ें और खतरे से बचने के लिए निर्देशों का पालन करें।

⚠ चेतावनी—यह दर्शाता है कि सही ढंग से निर्देश का पालन करने में विफलता से मृत्यु हो सकती है या गम्भीर चोट लग सकती है।

⚠ सावधानी—यह दर्शाता है कि सही ढंग से निर्देश का पालन करने में विफलता से मामूली चोट लग सकती है या उत्पाद को नुकसान हो सकता है।

⚠ चेतावनी

अपने उत्पाद का प्रयोग करते हुए आग लगने, बिजली का झटका लगने या लोगों के चोटग्रस्त होने के खतरे को कम करने के लिए सावधानियों का पालन किया जाना चाहिए, जिसमें निम्नलिखित शामिल हैं।

तकनीकी सुरक्षा

- LG इलैक्ट्रॉनिक्स सर्विस सेंटर से अधिकतम व्यक्ति ही उत्पाद को संशोधन करने के लिए मान्य है। उत्पाद की स्थिति बदलने के लिए इलैक्ट्रॉनिक्स सर्विस सेंटर से संपर्क करें। अनुचित सर्विस से चोट लगने, बिजली के झटके तथा आग लगने का खतरा है।

पॉवर

- पावर कॉर्ड की लम्बाई को संशोधित न करें। किसी भी एक्स्टेंशन बोर्ड या मल्टीपल सॉकेट आउटलेट का उपयोग न करें। इसके अलावा अन्य उपकरणों के साथ एक ही पावर सॉकेट आउटलेट को साझा न करें अन्यथा यह गरमी उत्पन्न होने के कारण झटका या आग का कारण होगा।
- गीले हाथों से बिजली के प्लग को ना छुएं, इससे बिजली का झटका लग सकता है।
- पॉवर प्लग से नमी एवं धूल हटा कर आउटलेट में लगाएं। यह गरमी के कारण बिजली के झटके या आग का कारण हो सकता है।
- पॉवर प्लग को आउटलेट से निकालने के लिए प्लग को पकड़ें न कि केबल को। यदि पावर केबल या पावर प्लग क्षत्रिग्रस्त हो गया है, तो इसे निर्माता द्वारा प्रदान किये गये मूल उपकरण से बदला जाना चाहिए या **LG Electronics service** से सम्पर्क करें। यह क्षत्रिग्रस्त कार्ड एरिया गरमी के कारण बिजली के झटके या आग का कारण हो सकता है।
- बिजली की सप्लाई कार्ड को भारी वस्तु के नीचे मोड़ा या दबाया नहीं जाना चाहिए। यह पॉवर कार्ड आग या बिजली के झटके को नुकसान पहुंचा सकता है।
- पावर प्लग को अनप्लग न करें बार-बार यह आउटलेट सॉकेट के छेद को ढीला कर सकता है जिससे आग या बिजली का झटका लग सकता है।

प्रचालन

- बाढ़ आने के स्थिति पर उपकरण का उपयोग ना करें और LG Electronics Service Centre से सम्पर्क करें।
- उत्पाद के ऊपर या अंदर भारी या नाजुक वस्तु, तरल पदार्थ, खाने योग्य पदार्थ या ज्वलनशील वस्तुएं (जैसे— जली हुई मोमबत्तियां और लैम्प) न रखें। यह आग चोट या क्षति का कारण बन सकता है।
- यदि नमी उत्पाद के अंदर प्रवेश कर जाएं तो प्लग को हटा दें इससे बिजली के झटके का कारण बन सकता है। और LG Electronics Service Centre से सम्पर्क करें।

- जब उत्पाद का कनेक्शन लगा हो, तब उसको स्थान्तरित ना करें। यह विद्युत आपूर्ति कौर्ड को नुकसान पहुंचा सकता है और बिजली के झटके या चोट का कारण बन सकता है।
- किसी को उत्पाद पर चढ़ने या लटकने की अनुमति ना दें उत्पाद का संचालन करने वाले बच्चों से सावधान रहें इससे चोट लग सकती है।
- यदि उत्पाद के अंदर से पानी का रिसाव हो या उत्पाद के पास पानी जमा हो जाए तो पानी के आपूर्ति वाल्व को बंद कर दें, पॉवर प्लग को निकाल दें, और LG Electronics Service Centre से सम्पर्क करें।
- उत्पाद को साफ करते समय, बिजली प्लग को अनप्लग करें। इससे बिजली का झटका लग सकता है।

⚠ सावधानी

अपने उत्पाद का प्रयोग करते हुए विस्फोट होने, आग लगने, जान जाने, बिजली का झटका लगने, जलने या किसी व्यक्ति एवं जीवित जन्तु को चोट लगने के खतरे को कम करने के लिए सावधानियों का पालन किया जाना चाहिए जिसमें निम्नलिखित शामिल हैं ।

स्थापना



- उत्पाद के इनपुट पानी के पाइप को नल के पानी से ही जोड़े। नल के पानी के अलावा अन्य पानी की सिफारिश नहीं की जा सकती है इससे स्वास्थ्य सम्बंधी समस्याएँ हो सकती है।
- किसी भी प्रकार के नुकसान होने के लक्षण पर उपकरण को शुरु न करें और समस्या होने पर डीलर से सम्पर्क करें। इससे क्षति या चोट लग सकती है।
- उपकरण को ब्रश, खुरदरा सतह वाले स्पंज या धातु से बने ब्रश या स्पंज से साफ न करें। इससे उत्पाद पर खरोंच और दरारें पैदा हो सकती है।
- खुले हुए उत्पाद में तेज किनारे हो सकते हैं, हाथ से पकड़ते समय विशेष ध्यान रखें। क्षति का कारण हो सकता है।
- ज्वलनशील पदार्थों (ईथर, बेंजीन, शराब, रसायन, कीटनाशक, रसोई गैस, एयर फ्रैशनर, कॉस्मेटिक्स इत्यादि) का छिड़काव/प्रयोग उत्पाद के पास/अन्दर न करें। इससे स्वास्थ्य सम्बंधी समस्याएँ हो सकती है।
- काउंटर-टॉप स्थापना के लिए, उपकरण को ठोस और बराबर सतह वाले स्थान पर स्थापित करें। अस्थिर स्थान पर स्थापित करने से शोर और कंपन उत्पन्न हो सकता है या उत्पाद का संरेखण बिगड़ सकता है।
- उपकरण के घेराव या निर्माण ढाँचे में वायुसंचार द्वार खुला रखें। अन्यथा इससे नुकसान हो सकता है।
- बाहरी जगह, नम क्षेत्र में Water Purifier स्थापित करने से बचें और सीधी धूप, धूल और सीधे पानी के छोटें से दूर रखें। यह उत्पाद की खराबी का कारण बन सकता है।
- उत्पाद के इष्टतम प्रदर्शन के लिए संस्थागत शर्त का पालन पेज संख्या-20 के अनुसार किया जाना चाहिये।
- गड़गड़ाहट एवं आकाशीय विद्युत चालान या दो दिनों के दौरान उपयोग में ना आने पर पावर प्लग को अलग कर दें। यह उत्पाद की खराबी का कारण बन सकता है।
- जब उपकरण से किसी अजीब गंध या धुआं निकलने का पता चले, तो तुरंत पॉवर प्लग को अलग कर दें और LG इलैक्ट्रॉनिक्स सर्विस सेंटर से संपर्क करें।

प्रचालन

- फिल्टर को प्रतिस्थापन अवधि के अनुसार LG के मानक फिल्टर से ही बदलें। पुराने फिल्टर बैटरीरिया को बड़ा सकते हैं या पानी का स्वाद बदल सकते हैं। फिल्टर की प्रतिस्थापन अवधि पानी की गुणवत्ता, उपयोग करने के स्थान और मौसम पर निर्भर करती है।
टिप्पणी— फिल्टर केवल LG के अधिकृत सेवा कर्मियों द्वारा बदला जाना चाहिए।
- पानी के गिलास को छोड़कर पानी ट्रे पर कोई वस्तु ना रखें, यह गिर सकता है क्षति और चोट का कारण बन सकता है।
- पानी के रिसाव को बचाने के लिए पाइप (इनलेट, आउटलेट) को नुकसान पहुँचाने से बचाएँ। इससे उत्पाद और सम्पत्ति को क्षति हो सकती है।

स्थापना

पार्ट्स व फंक्शन (For WW162/172/173/175/182/183/184 श्रेणी के लिए)
आगे व पीछे

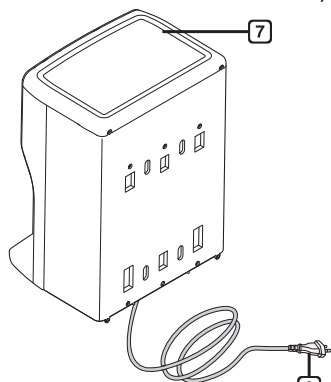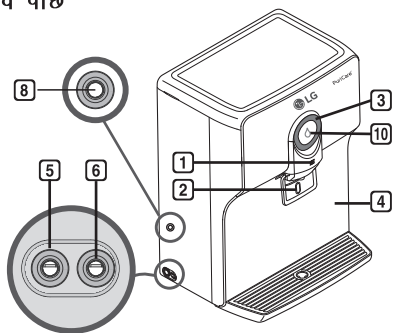

- | | | |
|-------------------------------|-------------------------------|-------------------------------|
| 1 शुद्ध पानी क स्तर का सूचक | 5 पानी की आपूर्ति की नली | 9 पावर काड |
| 2 टच लीवर | 6 ड्रेन नली | 10 फिल्टर बदलने का निर्देशक ^ |
| 3 यूवी स्टेरलाइजिंग का सूचक * | 7 टॉप कवर (फ्लोरल पैटर्न*) | |
| 4 फिल्टर कवर (फ्लोरल पैटर्न*) | 8 फल व सब्जियाँ धोने का पानी* | |

सहायक उपकरण

Owner's
Manual

ऑनर्स मैनुअल



6.35mm Ø टयूब*

Mounting
Guide


माउन्टिंग गाइड




6.35mm Ø वाल्व*

QRG


त्वरित संदर्भ निर्देशिका




पानी की ट्रे




पानी की ट्रे का कवर




आउट सेडीमेंट फिल्टर
एंटी स्केलेन्ट मॉड्यूल के साथ

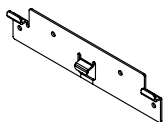


माउन्ट प्लेट (2)




स्कू किट : स्कू (6)
एन्कर (6) एवं टैफलॉन टेप (1 रोल)

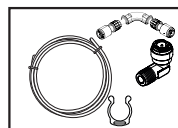

हॉज असेम्बली :
हॉज (1)
कनेक्टर (2)
लॉक्स (2)
एवं कनेक्टर पाइप (1)

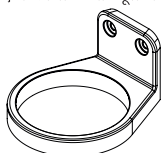

माउन्टिंग ब्रैकेट

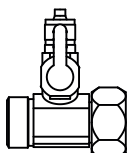


एडेप्टर

^ आउट सेडीमेंट फिल्टर के लिए लागू
* केवल चुनिंदा मॉडलों के लिए

स्थापना

पार्टस व फंक्शन(WW130/140/142/145/150/151/152/155/174 श्रेणी के लिए)
आगे व पीछे
(WW130/140/142/145/150/151/152/
155/174 श्रेणी के लिए)

आगे व पीछे
(WW136/146/156 श्रेणी के लिए)

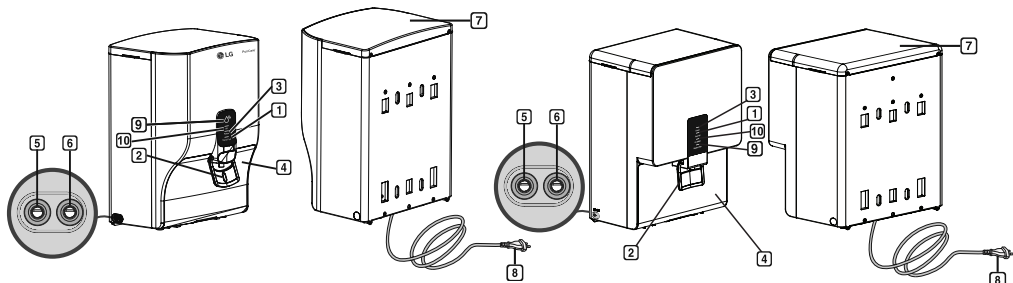

1 टैंक पूर्ण संकेतक

2 टच लीवर

3 विद्युत संकेतक

4 फिल्टर कवर

5 पानी की आपूर्ति की नली

6 ड्रेन नली

7 टॉप कवर

8 पॉवर कॉर्ड

9 फिल्टर बदलने का निर्देशक ^

10 यूवी स्टेरलाइजिंग का सूचक *

सहायक उपकरण


Owner's
Manual

Mounting
Guide


QRG

माउन्टिंग गाइड


त्वरित संदर्भ निर्देशिका

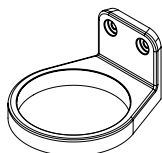


माउन्टिंग ब्रेकेट

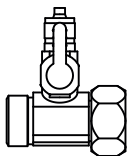


एडप्टर




आउट सेडीमेंट फिल्टर
एंटी स्केलेन्ट मॉड्यूल के साथ



माउन्ट प्लेट (2)



स्कू किट : स्कू (6)
एन्कर (6) एवं
टैफ्लॉन टेप (1 रोल)

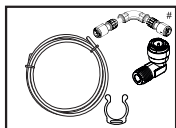

हॉज असेम्बली :

हॉज (1)
कनेक्टर (2)
लॉकर्स (2)

एवं कनेक्टर पाइप(1)*

^ आउट सेडीमेंट फिल्टर के लिए लागू

* केवल चुनिंदा मॉडलों के लिए

केवल WW136/146/156 श्रेणी के लिए


स्थापना के लिए नोट

- उत्पाद के सभी पक्षों से 10 सेमी की दूरी रखें।
- उत्पाद के पानी के पाइप को गर्म पानी के पाइप से न जोड़ें। ऐसा करने से उत्पाद विफल हो सकता है।
- पाइप और होज के कनेक्शन को पानी के रिसाव के लिए जाँच लें। पानी के रिसाव से बिजली का झटका एवम चोट लग सकती है।
- परिवहन के समय उत्पाद को 30 डिग्री से अधिक न झुकाएं। ऐसा करने से उत्पाद विफल हो सकता है।
- उत्पाद के सर्वोत्तम उपयोग के लिए, ये सिफारिश की जाती है कि आसपास के तापमान 4°C और 45°C के बीच हो। ऐसा ना होना पर उत्पाद में खराबी हो सकती है।
- Water Purifier को ऐसी जगह स्थापित करने से बचे जहाँ पर गैर समतल क्षैतिज सतह, Relative Humidity > 85% हो या प्रत्यक्ष सूर्य का प्रकाश, धूल और प्रत्यक्ष पानी की छीटें हो।
- मॉडल WW130NP, WW136RPNB, WW140NP, WW140NPR, WW142NPC, WW145NPW, WW146RPRB, WW146RPRC, WW150NP, WW151NP, WW151NPR, WW152NP, WW155NPB, WW156RPLB, WW156RPLW, WW156RPLC, WW174NPB, WW174NPC को केवल दीवार पर लटकाया जा सकता है और इसे किसी टेबल/काउंटर टॉप पर स्थापित नहीं किया जा चाहिए क्योंकि यह खराब हो सकता है और वॉरंटी रद्द हो सकती है।
- उत्पाद के सही से काम करने के लिए वाटर प्यूरीफायर इनलेट और वॉटर टैंक के बीच की ऊँचाई 1 मीटर से ज्यादा होनी चाहिए।



जल शुद्धिकारक को स्थापित करना

- 1 उत्पाद की होज नीचे दिखाई गए ढंग से जोड़ें
मशीन में मुदित पानी की आपूर्ति के लिए आवश्यक लम्बाई के अनुसार होज रोल (5 मीटर) को दो भागों में काट लें।
 - सफेद इन होज (पानी की आपूर्ति) को नल के पानी से कनेक्ट करें।
 - सिक पर आउट होज (ड्रेन) स्थापित करें।

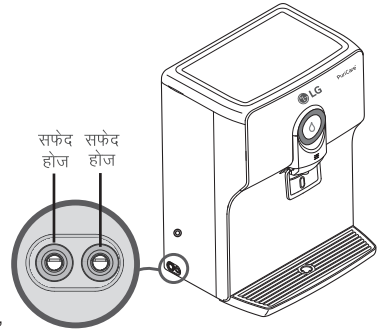

- 2 पॉवर प्लग को उचित सॉकेट से जोड़ें।
- 3 पानी के आपूर्ति वाल्व को खोलें।
- 4 स्थापना के बाद, पानी की टंकी भर जाने पर एक बार पानी निकाल दें। प्रत्येक फिल्टर बदलने या डिजिटल स्केअरलाइजेशन के सामान प्रक्रिया का पालन किया जाना है। टैंक पूरा भरने में लगभग 1 घंटे का समय लगेगा, पर ये समय पानी के दबाव, तापमान आदि पर निर्भर करता है।

सावधानी

सभी पैकेजिंग सामग्री (जैसे—प्लास्टिक बैग और थर्मोकॉल) को बच्चों से दूर और सम्माल कर रखें। पैकेजिंग सामग्री घुटन का कारण बन सकता है।

महत्वपूर्ण नोट: सभी मॉडलों को केवल ओवर हेड स्टोरेज टैंक के पानी की आपूर्ति के साथ ही स्थापित किया जा सकता है। इन मॉडलों की स्थापना के लिए किसी अन्य जल आपूर्ति का उपयोग नहीं किया जाना चाहिए।

प्रचालन

प्रचालन के लिए नोट

- पानी के आपूर्ति वाल्व को खोलें। पानी की ठीक से आपूर्ति होने पर उत्पाद सामान्य रूप से चलता है।
- स्वच्छ पानी प्राप्त करने के लिए समय-समय पर फिल्टर को बदलना बहुत महत्वपूर्ण है। गतावधिक फिल्टर का प्रयोग करने से उत्पाद की कार्यक्षमता में कमी आ सकती है। हमेशा फिल्टर प्रतिस्थापन अवधि का प्रयोग करें।
- यदि उत्पाद 2 या अधिक दिनों के लिए उपयोग नहीं किया गया है, तो पानी शुद्ध टैंक से संग्रहित पानी को निकालें।
- झमिडिफॉयर या किशबाऊल पानी की जगह शुद्ध पानी का उपयोग ना करें।
- उत्पाद का कवर पूर्ण रूप से बंद करने के बाद ही उत्पाद का उपयोग करें। अन्यथा कीड़े या वाहय पदार्थ उत्पाद में जा सकते हैं।


नोट—

- रिवर्स ऑस्मोसिस में टीडीएस की प्रभावी कमी के लिए एक बदली जाने वाली उपचार घटक महत्वपूर्ण होता है और यह सुनिश्चित करने के लिए किउत्पाद ठीक से काम कर रहा है, (इंजिनियर विजिट के दौरान) उत्पाद का पानी समय-समय पर परीक्षणकिया जाना चाहिए।
- उस पानी के साथ प्रयोग ना कर किटाणुशोधन के कारण असुरक्षित है या अज्ञात गुणवत्ता का है।
- यदि उत्पाद 2 या अधिक दिनों के लिए उपयोग नहीं किया जाएगा, तो पॉवर प्लग को अनप्लग करें और परिसर छोड़ने से पहले पानी की आपूर्ति वाले वाल्व को बंद करें और पानी की खपत से पहले पानी के निस्पंदन(टैंक सहित) सिस्टम के अन्दर पानी को पूरी तरह से सूखा दें।

(For WW162/172/173/175/182/183/184 Series)

कन्ट्रोल पैनल का उपयोग करना


(WW162/172/173/175/182/183/184 मॉडल के लिए)

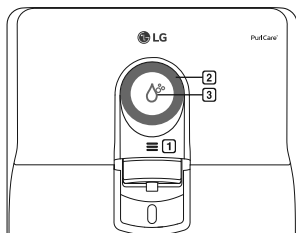


* केवल बुनिंदा मॉडलों के लिए

कन्ट्रोल पैनल का उपयोग

(मॉडल WW130/140/142/145/150/151/152/155/174 श्रेणी के लिए)

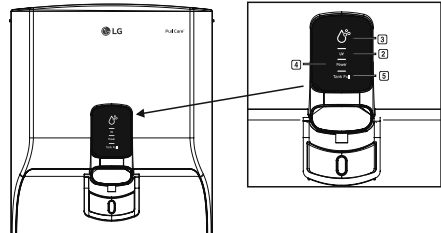


मॉडल WW136/146/156 श्रेणी के लिए

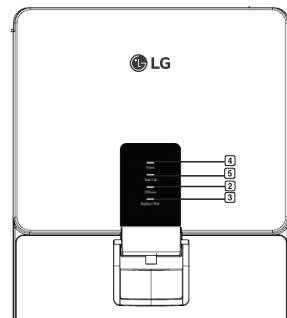

1 पानी के स्तर का सूचक

टैंक में पानी का स्तर 3 स्तर तक दिखाई देता है।

- यह आइकॉन पानी के स्तर के अनुसार 3 स्तरों में विभाजित है। जितने लैम्प जलते जाएंगे, पानी का स्तर भी बढ़ता जायेगा। यह मनमाने ढंग से समायोजित नहीं किया जा सकता।

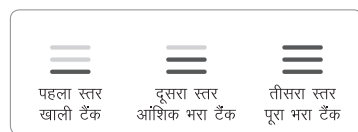

2 यूवी स्टेरलाइजिंग का सूचक *

स्वच्छ पानी यूवी LED के द्वारा स्टेरलाइज किया जाता है। नीला रंग दर्शाता है की यूवी स्टेरलाइजेशन प्रयोग में हैं और सफेद रंग दर्शाता है की यूवी स्टेरलाइजेशन बंद है।

सफेद केवल WW145NPW, WW150NP, WW151NP, WW151NPR, WW152NP, WW155NPB, WW156RPLB, WW156RPLW, WW156RPLC, WW174NPC, WW174NPB, के लिए यूवी सूचक चमकेगा।

(टैंक कवर खोलने पर, यूवी LED स्वयं से आपकी सुरक्षा के लिए बंद हो जाएगी।)

नोट

यूनी LED 2 स्थिति में प्रचलित होता है।

- हर 6 घंटे पश्चात 75 मिनट तक प्रचलित होता है।
- पॉवर जाने के बाद, पुनः आने पर 2 सेकेंड के पश्चात 75 मिनट तक प्रचलित होता है।

3 फिल्टर बदलने का निर्देशक * ^



निर्देशक का रंग नीले से एम्बर होना दर्शाता है कि प्रिवेंटिव मेंटेनेंस का समय हो चुका है। कृपया LG कस्टमर केयर पर कॉल लगाएँ।

फिल्टर बदलने का निर्देशक * ^ (WW136/146/156)



जब फिल्टर संकेतक चमकता है, तो यह इंगित करता है कि यह निवारक रख-रखाव सेवा का समय है कृपया सेवा के लिए LG ग्राहक सेवा को कॉल करें।

4 विद्युत संकेतक



उपकरण की चालू स्थिति को इंगित करने के लिए पॉवर एल.ई.डी. निर्देशक।

5 टैंक पूर्ण संकेतक





जब पानी का टैंक पूरी तरह से भर जाता है तब टैंक पूर्ण सूचक चालू हो जाता है।

प्रचालन

स्वच्छ पानी का प्रयोग

NOTE

लगातार पानी प्राप्त करने के लिए लीवर को ऊपर खींचें।

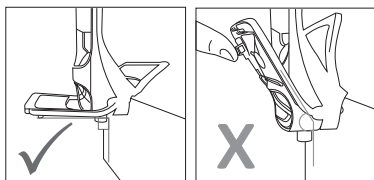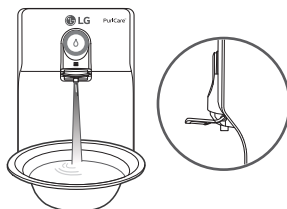


चेतावनी : इस लीवर को केवल 90° तक ही खोलें।[#]

[#]90 डिग्री से अधिक खुलने से इसमें खराबी/क्षति हो सकती है।

फल और सब्जियाँ धोने का पानी प्रयोग करने के लिए *

आप फल, सब्जियाँ, बर्तन धो सकते हैं।

जब तक वाल्व खुला है यह फंक्शन पानी को निकालता रहेगा।

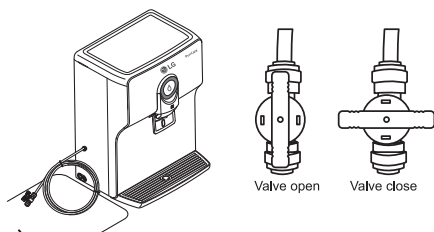

नोट

इस पानी का उपयोग पीने और खाना बनाने के लिए न करें।

सभी मॉडलों के लिए महत्वपूर्ण नोट:

Water Purifier के सभी मॉडल एक अद्वितीय प्रवाह संवेदक के साथ आते हैं (पानी की आपूर्ति के बिना चलने से उत्पाद की रक्षा के लिए) जो केवल तभी चालू होता है जब Water Purifier का चल रहे पानी की आपूर्ति हो रही है। यदि पानी की आपूर्ति नहीं है/निर्दिष्ट सीमा से कम पानी की आपूर्ति उपलब्ध है, तो Water Purifier 15 मिनट के लिए बन्द हो जाएगा और बाद में, पानी की आपूर्ति की जाँच के लिए कुछ सेकेंड में फिर से चल जाता है।

यदि पानी की आपूर्ति है, तो Water Purifier सामान्यतः काम करेगा अन्यथा यह फिर से चक्र की जाँच करने के लिए प्रक्रिया दोहराएगा। अगर पानी की आपूर्ति उपलब्ध है और आप तुरंत Water Purifier शुरू करना चाहते हैं, तो बस बिजली की आपूर्ति बन्द कर दें और डिस्ले बंद होने तक प्रतीक्षा करें और पॉवर को फिर से चालू कर दें।

*आउट सेडीमेंट फिल्टर के लिए लागू


* केवल चुनिंदा मॉडलों के लिए

प्रबंधन

सफाई


टैंक को साफ कैसे करें

- 1 पानी आपूर्ति वाल्व को बंद करें।

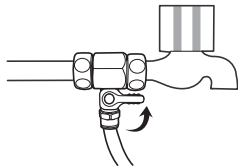


- 2 ड्रेन होज और पानी के आउटलेट के प्रयोग से टैंक को पूरा खाली करें। इस पानी को गिराएं नहीं।

(WW162/172/173/175/182/183/184 श्रेणी के लिए)

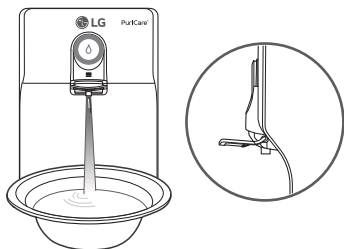


(WW130/136/140/142/145/146/150/151/152/155/156/174 श्रेणी के लिए)

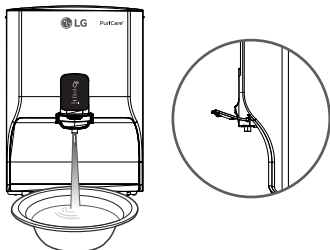


- 3 पॉवर प्लग बाहर निकालें।

- 4 टॉप कवर को ऊपर की ओर उठाएँ, भंडारण टैंक कवर को अनलॉक करें।

- 4 टॉप कवर को ऊपर उठाकर हटा दें, और टैंक के कवर को खोल दें। सावधानी : ध्यान से पकड़ें, तेज किनारों से चोट लग सकती है।
(WW162/172/173/175/182/183/184 श्रेणी के लिए)

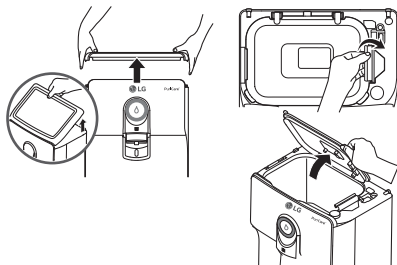

(WW130/136/140/142/145/146/150/151/152/155/156/174 श्रेणी के लिए)

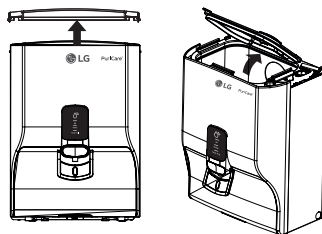


⚠ सावधानी : टैंक के कवर पर दबाव या वजन न डालें, इससे नुकसान या चोट लग सकती है।

- 5 मुलायम साफ कपड़े से टैंक की सतह को साफ करें।


सावधानी

पानी की टंकी के अन्दर किसी भी इंटरकनेक्टिंग हिस्से को छूने से बचे। इससे उत्पाद को नुकसान हो सकता है।

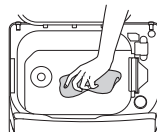


- 6 निकाले गए स्वच्छ पानी/हैलोजेनेटेड घोल(आमतौर पर क्लोरिन) से टैंक को अच्छी तरह खंगाले और चार महीने में एक बार पूरी तरह से पानी को निकालें।

⚠ चेतावनी- पानी को छलकने से बचाएँ, इससे बिजली के झटके लगने का खतरा हो सकता है।

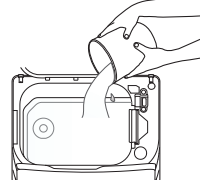


* केवल चुनिंदा मॉडलों के लिए

- 7 टैंक कवर लगाकर उसे लॉक कर दें।



- 8 टॉप कवर को बंद करें, पॉवर कार्ड को लगाएं एवम पानी के आपूर्ति वाल्व को खोल दें।

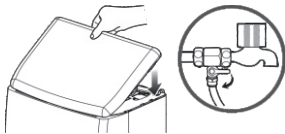


- 9 स्थापना के बाद, पानी की टंकी भर जाने पर एक बार पानी निकाल दें। प्रत्येक फिल्टर बदलने या डिजिटल स्केअरलाइजेशन के सामान प्रक्रिया का पालन किया जाना है। टैंक पूरा भरने में लगभग 1 घंटे का समय लगेगा, पर ये समय पानी के दबाव, तापमान आदि पर निर्भर करता है।

नोट

- ⚠ **चेतावनी** — केवल शुद्ध पानी का उपयोग करके टैंक को साफ करें। इससे बिजली का झटका लग सकता है।
- ⚠ **सावधानी**— टैंक साफ करने के लिए केवल वॉटर प्यूरिफायर के स्वच्छ पानी का ही प्रयोग करें। टैंक साफ करने के लिए किसी भी रसायन (क्लोरीन छोड़कर) या डिटर्जेंट का प्रयोग न करें। रसायन या डिटर्जेंट पूरी तरह से नहीं निकलेगा, यह मानव शरीर के लिए हानिकारक हो सकता है।

पानी के आउटलेट को कैसे साफ करें


- 1 आउटलेट को साफ नरम ब्रश से नियमित रूप से साफ करें। बाहरी सामग्री आउटलेट पर जमा हो सकती है।

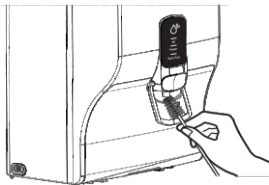

वाटर ट्रे असेम्बली को कैसे साफ करें

- 1 पानी की ट्रे—कवर को ऊपर की ओर खींच कर अलग करें।

⚠ **सावधानी**—ध्यान से पकड़ें, तेज किनारों से चोट लग सकती है।

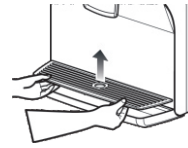

- 2 पानी की ट्रे—कवर को आगे की ओर खींच कर अलग करें।




- 3 पानी से साफ करें।

- 4 वाटर—ट्रे सतह को मुलायम साफ कपड़े से साफ करें।

- 5 उत्पाद पर वाटर—ट्रे लगाएं।

- 6 वाटर—ट्रे कवर को वाटर—ट्रे पर रखें, उत्पाद के सामने की ओर संलग्न करें, और फिर स्थापित करने के लिए हल्का सा धकेलें।

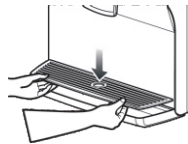

नोट

- यदि वाटर—ट्रे में अधिक मात्रा में पानी है तो, वाटर—ट्रे निकालने पर पानी बिखर सकता है, सावधानी बरतें।

नोट: वाटर—ट्रे असेम्बली को समय—समय पर साफ करें।

फिल्टर की देखभाल

साफ करने की प्रक्रिया

पीने का पानी

चरण 1:

आउट सेडीमेंट फिल्टर एटी स्केलेन्ट माइयूल के साथ

- बड़े कणों, जंग के दाग, कीचड़ आदि को हटा देता है और फिल्टर जीवन को बढ़ाने के लिए पानी की कठोरता को कम करता है।

चरण 2:

सेडी + कॉर्बन फिल्टर

- अनदेखे ड्रेक्स और अन्य मलिन कणों और सूक्ष्म कण, अवशिष्ट क्लोरीन, वी.ओ.सी., (वाष्पशील कार्बनिक यौगिकों) को हटाता है।

चरण 3:

RO मेमब्रेन फिल्टर* /RO रिकवरी प्लस* /RO रिकवरी फिल्टर*

- घुली हुई अशुद्धियां, भारी धातु पदार्थ, बैक्टीरिया, वायरस, VOC इत्यादि को पानी से निकालता है।
- यह स्रोत पानी के 90% पीपीएम तक टीडीएस कटौती करता है।

चरण 4:

(WW130/136/145/150/152/162 मॉडलों के लिए)


पोस्ट-कार्बन फिल्टर

- दुर्गंध निकालता है और पानी के स्वाद को बढ़ाता है।

* केवल चुनिंदा मॉडलों के लिए

मिनरल बूस्टर फिल्टर

- गंध को हटाता है, अशुद्ध पानी को मिलाये बिना, शुद्ध हुए पानी में मिनरल्स को मिलाता है।

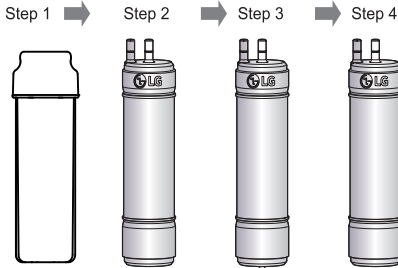

फल और सब्जियां धोने का पानी*

केवल WW182EP/WW183EPR/WW184EPB/WW184EPC के लिए
चरण 1:

- आउट सेडीमेंट फिल्टर एटी स्केलेन्ट मॉडयूल के साथ
- बड़े कणों, जंग के दाग, कीचड़ आदि को हटा देता है और फिल्टर जीवन को बढ़ाने के लिए पानी की कठोरता को कम करता है।


आउट सेडीमेंट फिल्टर

- बड़े कणों, जंग के दाग, कीचड़ आदि को हटा देता है

चरण 2:

UF मेमब्रेन फिल्टर*

- बैक्टीरिया, और महीन कणों को निकालता है।

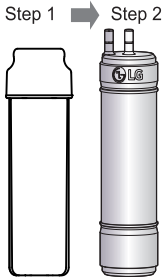

नोट

- ड्रेन पानी का उपयोग पीने और खाना बनाने के लिए न करें।
- इस पानी का उपयोग बाथरूम, घर की सफाई और बागबानी के लिए या कपड़े धोने के लिए करें।
- कार्बन के कण कभी-कभी फिल्टर से निकल कर टैंक में जा सकते हैं। यदि ऐसा हो, तो कार्बन के बारीक कण पोस्ट-कार्बन फिल्टर से निकल गए हैं और यह मानव शरीर के लिए हानिकारक नहीं हैं। ऐसा होने पर टैंक से पूरा पानी निकाल दें।

* केवल चुनिंदा मॉडलों के लिए

** LGEIL स्टैंडर्ड के अनुसार

फिल्टर को बदलने की अवधि

फिल्टर बदलने की अवधि उस अवधि को दर्शाती है जिसमें फिल्टर का शुद्धिकरण प्रदर्शन बना रहे, और यह अवधि ऐसी जगहों पर कम रहती है जहाँ पानी की गुणवत्ता खराब हो या उत्पाद का उपयोग 10 ली. से अधिक हो।

फिल्टर का नाम	संस्तुत शुद्धिकरण मात्रा** (लीटर में)
आउट सेडीमेंट फिल्टर एटी स्केलेन्ट मॉडयूल	3000 6000
सेडी + कार्बन फिल्टर*	6000
RO मेमब्रेन फिल्टर* RO रिकवरी प्लस* RO रिकवरी फिल्टर	6000
पोस्ट-कार्बन फिल्टर*	6000
मिनरल बूस्टर फिल्टर*	6000
UF मेमब्रेन फिल्टर*	6000

चेतावनी –

- फिल्टर प्रतिस्थापन और/या AMC अनुरोध केवल एलजी कस्टमर केयर को कॉल करके किया जा सकता है (अंतिम पृष्ठ देखें)
- नकली (डुप्लिकेट) फिल्टर के उपयोग या अनाधिकृत स्रोतों से फिल्टर के प्रतिस्थापन के मामले में वारंटी शून्य होगी।
- नकली (डुप्लिकेट) फिल्टर के उपयोग करना या अनाधिकृत स्रोतों से फिल्टर प्राप्त करना उत्पाद के जीवन को नकारात्मक रूप से प्रभावित या खराब कर सकता है और उपयोगकर्ता के स्वास्थ्य को प्रभावित कर सकता है।
- ऐसे नकली (डुप्लिकेट) फिल्टर के उपयोग के कारण उत्पाद में किसी भी दोष के कारणप्रत्यक्ष या अप्रत्यक्ष रूप से होने वाली किसी भी क्षति के लिए LG जिम्मेदार नहीं होगा।

नोट

- फिल्टर बदलवाने के लिए LG इलैक्ट्रॉनिक्स सर्विस सेंटर से सम्पर्क करें।
- फिल्टर बदलने के बाद यह जाँच लें कि पानी का रिसाव ना हो।
- स्थापना के बाद, पानी की टंकी भर जाने पर एक बार पानी निकाल दें। प्रत्येक फिल्टर बदलने या डिजिटल स्केलरलाइजेशन के सामान प्रक्रिया का पालन किया जाना है। टैंक पूरा भरने में लगभग 1 घंटे का समय लगेगा, पर ये समय पानी के दबाव, तापमान आदि पर निर्भर करता है।
- RO मेमब्रेन फिल्टर के लिए, आपूर्ति किए गये पानी का लगभग 20% भाग (25 डिग्री सेल्सियस के पानी के तापमान पर 3.5 kgf/cm² (0.34s MPA) के नल के पानी के दबाव के आधार पर और 2000 mg/L के इनपुट टीडीएस को शुद्ध किया जाएगा) जबकि RO रिकवरी प्लस के 50% ≥ लिए(WW174NPP/WW174NPPB/WW175EPW /WW184EPB /WW184EPC) आपूर्ति किये जाने पर पानी (1.5 kgf/cm² (0.15MPa) के दबाव के आधार पर 25 डिग्री सेल्सियस के पानी के तापमान पर 2000 mg/L TDS तक को शुद्ध किया जाएगा और शेष की निकासी की जाएगी।
- RO रिकवरी फिल्टर के लिए, आपूर्ति किये गये पानी के ≥40% (WW136RPNB, WW146RPRB, WW146RPRC,WW156RPLB, WW156RPLW, WW156RPLC) आपूर्ति किये गये पानी (1.5 kgf/cm² (0.15MPa) के दबाव के आधार पर 25 डिग्री सेल्सियस के पानी के तापमान पर 2000 mg/L TDS तक को शुद्ध किया जाएगा और शेष की निकासी की जाएगी।
- मेमब्रेन को कोई रासायनिक परिरक्षकों का उपयोग नहीं किया गया है।

- **सावधानी**—आउटसेडिमेंट फिल्टर असामान्य टर्बिडिटी (रेत और कीचड़) की स्थिति में चोक हो सकता है, ओवरहेड टैंक भरने के 1-2 घंटे के बाद water purifier चालू करने का सुझाव दिया जाता है ताकि रेत / मिट्टी व्यवस्थित हो जाए। बेहतर प्रदर्शन के लिए उपरोक्त स्थिति में चोकिंग को रोकने के लिए नियमित आउटसेडिमेंट फिल्टर को साफ किया जाना चाहिए। उच्च मैतापन और पानी की कठोरता से फिल्टर का जीवन प्रभावित हो सकता है।

समस्या निवारण

लक्षण	कारण	समाधान
पानी का स्वाद असामान्य	क्या आपने इसका उपयोग किये बिना 2 या अधिक दिनों के लिए water purifier छोड़ा है।	पानी का स्वाद असामान्य हो जाए तो LG service से कान्टैक्ट करें। टैंक को डिस्चार्ज करने के बाद Water Purifier का उपयोग करें अगर यही समस्या जारी रहती है तो LG service centre को कान्टैक्ट करें।
	क्या उत्पाद को स्थापित किये हुए या फिल्टर बदले हुए लंबा समय हो गया है?	पुराने फिल्टर का प्रयोग करने से उत्पाद की कार्य क्षमता में कमी आ सकती है। हमेशा फिल्टर प्रति-स्थापन अवधि का पालन करें।
शुद्ध पानी की मात्रा में एकाएक कमी।	क्या फिल्टर बदलने का समय हो गया है?	फिल्टर बदलने के लिए अनुरोध करें।
	क्या पानी का आपूर्ति का वाल्व बंद है?	पानी के वाल्व को खोल दें।
पानी बाहर नहीं आ रहा।	क्या आपने फिल्टर समय पर नहीं बदले हैं?	फिल्टर बदलने के लिए अनुरोध करें।
	क्या पानी का आपूर्ति का वाल्व बंद है?	पानी के वाल्व को खोल दें।
	क्या पॉवर प्लग को निकाला हुआ है?	पॉवर प्लग को ठीक से लगाएं।
	क्या लीवर दबाने पर उत्पाद से पानी नहीं निकल रहा?	LG इलैक्ट्रॉनिक्स सर्विस सेंटर पर सम्पर्क करें।
उत्पाद असामान्य ध्वनि या शोर उत्पन्न करता है।	क्या उत्पाद एक स्थिर सतह पर स्थापित है?	उत्पाद को स्थिर सतह पर ही स्थापित करें।
	क्या उत्पाद के ऊपर सामान रखा हुआ है?	उत्पाद के ऊपर रखा सामान हटा दें।
शुद्ध पानी में बारीक कण पाए जाते हैं।	क्या पानी में बुलबुले उत्पन्न हो रहे हैं?	- पानी निकलते समय बुलबुले बन सकते हैं। पानी पीने के लिए सुरक्षित है। - यदि बारीक कण लगातार दिखाई देते हैं तब पानी के वाल्व और पॉवर को बंद कर दें और LG इलैक्ट्रॉनिक्स सर्विस सेंटर पर सम्पर्क करें।



Note for SVC Engineer:
Scan QR code to download
Installation Kit Guide

एसवीसी इंजीनियर के लिए नोट—
इन्स्टालेशन किट गाइड को डाउनलोड
करने के लिए QR कोड स्कैन करें।

LG 24 x 7 CUSTOMER CARE

08069379999
1800 315 9999 (Toll Free)
www.lg.com/in/support

LG WhatsApp No.
9711709999

LG Service India Mobile App
Available at Google Play

www.facebook.com/lgindiapage/

www.twitter.com/LGIndia

To know more about LG,
visit www.lg.com/in
For Corporate/institutional enquiries,
please write to corp.enquiries@lge.com