

مكبر صوت يعمل بتقنية Wi-Fi

Wi-Fi SOUND BAR

SC9S



MFL70269690

2211_Rev01

www.lg.com
حقوق النشر والتأليف © لعام ٢٠٢٣-٢٠٢٥ لـ LG Electronics Inc. جميع الحقوق محفوظة.

العربية

المواصفة

استهلاك الطاقة

- ارجع إلى الملصق الرئيسي.

محول التيار المتردد AC

- الطراز: MS-Z2610R230-065E0-P

- المصنع: MOSO POWER SUPPLY TECHNOLOGY CO., LTD.

- الدخل: ١٠٠ - ٢٤٠ فولت ~ ٥٠ / ٦٠ هرتز

- الخرج: ٢٣ فولت --- ٢,٦١ أمبير

الأبعاد (العرض × الارتفاع × العمق): تقريبًا ٩٧٥,٠ مم × ٦٣,٠ مم × ١٢٥,٠ مم

مصدر طاقة الناقل (USB): ٥ فولت --- ٥٠٠ مللي أمبير

مكبر (إجمالي طاقة خرج (RMS): ٤٠٠ وات RMS

معلومات حول إشعار البرامج مفتوحة المصدر

للحصول على التعليمات البرمجية للمصدر ضمن GPL، و LGPL، و MPL،

والحصول على التراخيص مفتوحة المصدر الأخرى التي لديها التزامات للكشف

عن التعليمات البرمجية الخاصة بالمصدر، المضمنة في هذا المنتج، وللوصول

إلى كل أحكام الترخيص المشار إليها، وإشعارات حقوق النشر وكل الوثائق ذات

الصلة، يرجى زيارة <https://opensource.lge.com>.

ستوفر LG Electronics أيضاً التعليمات البرمجية المفتوحة المصدر على

قرص CD-ROM مقابل رسم يغطي تكلفة القيام بهذا التوزيع (مثل تكلفة وسائل

النقل والشحن والتسليم) بناءً على طلب يُرسل عبر البريد الإلكتروني إلى

opensource@lge.com

يسري هذا العرض لأي شخص يتسلم هذه المعلومات لمدة ثلاث سنوات بعد آخر

عملية شحن لهذا المنتج.

ملاحظة سلامة هامة

كلية الوصلة للقياس مزودة مع هذا المنتج وتم تثبيتها داخل
الوصلة الكهربائية الموجودة التي تم تزويدها ، إذا كان لأي سبب

احتجبت لتقصير الوصلة.

لا تستعمل مرة أخرى هذا القابس

يجب استعمال قابس جديد للتأكد على سلامتك بصورة

متواصلة وذلك عن طريق إحكام إدخال القابس إلى الوصلة

الكهربائية طبقا لوائح القابس والمقيس للعام 1994.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built
into the existing power cord as supplied. If, for any
reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued

safety by securing the plug to the power cord in

accordance with Plug & Socket Regulations 1994.

ENGLISH

Specification

Power consumption

- Refer to the main label.

AC adapter

- Model: MS-Z2610R230-065E0-P

- Manufacturer: MOSO POWER SUPPLY TECHNOLOGY CO., LTD.

- Input: 100 - 240 V ~ 50/60 Hz

- Output: 23 V --- 2.61 A

Dimensions (W x H x D): Approx. 975.0 mm x 63.0 mm x 125.0

mm

Bus Power Supply (USB): 5 V --- 500 mA

Amplifier (Total RMS Output power): 400 W RMS

Open Source Software Notice Information

To obtain the source code that is contained in this product, under

GPL, LGPL, MPL, and other open source licenses that have the

obligation to disclose source code, and to access all referred

license terms, copyright notices and other relevant documents,

please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on

CD-ROM for a charge covering the cost of performing such

distribution (such as the cost of media, shipping, and handling)

upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a

period of three years after our last shipment of this product.

تحذير من أجل السلامة

يجب فصل هذا الجهاز عن مخرج التيار الكهربائي الرئيسي أثناء عدم استخدامه. لا تسمح لهذا الجهاز بالتعرض

للأمطار أو الرطوبة.

تحذير

من أجل منع وقوع الصدمة الكهربائية، لا تسحب عنه الغطاء. لا يوجد في الداخل أجزاء للاستخدام. التصليح يجب أن

يقوم به الشخص المختص.

تحذيرات للوقاية

اقرأ هذه التعليمات قبل تشغيل الجهاز

- تجنب درجات الحرارة أو البرودة العالية والرطوبة والغبار.

- تجنب الاستخدام قريباً من حقل مغناطيسي (سيؤثر سلبياً على إنجاز الجهاز).

- حاذر عند مسح الغطاء بمادة متطايرة كالبنزين والكحول إلخ أو قطعة قماش معالجة بمواد كيميائية. ربما يؤدي

ذلك إلى إتلاف سطح الغطاء أو تقشير الطلاء.

- استخدم هذا الجهاز فقط بوضع أفقي ولا تضع فوقه أي شيء ثقيل.

- حافظ على وضع الجهاز بعيداً عن أحواض الزهور وأنباب الماء وحوض الغسيل، إذا سقط عليه أي مادة سائلة

فقد يحدث تلف كبير للجهاز. في مثل هذه الحالة قم بعرضه على خبير فني متخصص.

- لا تحجز منطقة التهوية، ثقوب التهوية تمنع زيادة السخونة. وحتى المواد الخفيفة أو الناعمة كالورق أو القماش

قد تسد ثقوب التهوية.

- لا يوجد أجزاء للاستخدام من الداخل. من أجل الإصلاح والصيانة اعرضه على الفني المتخصص.

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER

SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE

EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO

USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO

QUALIFIED PERSONNEL.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.

- Avoid using near a magnetic field. (This will adversely affect the units

performance.)

- Be careful when the surface of the case is wiped with a volatile agent

such as benzene, alcohol, thinner, etc. or a chemically processed cloth,

the surface finish may deteriorate or its coating may peel.

- Use the unit only in a horizontal position, and do not place anything

heavy on it.

- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids

should spill into unit, serious damage could occur. In that case, please

consult qualified service personnel.

- Do not obstruct the ventilation holes: they prevent overheating. Even soft

materials such as paper and cloth may prevent proper ventilation of the

unit.

- There are no serviceable parts inside. For service, please contact

your service centre.

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- A Sound bar
B Remote Control Receiver
C Status LED (1 2 3)
D Rear Speakers / Wireless Receiver (Sold separately, SPQ8-S)
E Wireless Subwoofer - Install it close to the sound bar.
F External Device - (Blu-ray player, game console, etc.)

○ : On / ● : Off / ◐ : Blink							
Red blinking	White blinking	White	Blue blinking	Blue	White	White	Purple
Power on Power off	Wi-Fi ready	Wi-Fi	Bluetooth ready	Bluetooth	OPTICAL / HDMI ARC	HDMI IN	USB

1 Connect the sound bar to your TV via an optical cable or an HDMI cable.

2 If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the sound bar or to the TV via an HDMI cable.
① If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the sound bar.

3 If you purchased the rear speakers and wireless receiver separately, connect the rear speakers to the wireless receiver via a speaker cable. When connecting the rear speakers to the wireless receiver, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.

4 Connect to power in the following order: wireless subwoofer → wireless receiver → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LEDs on the wireless subwoofer and the wireless receiver will light up green.

5 Using the product with your TV

- ① Press the **Function** button repeatedly until LED1 and LED2 light up white. If you are using an external device that is connected to HDMI™ IN on the sound bar, press the **Function** button repeatedly until LED1 and LED3 light up white.
② On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
① You can enjoy the sound by connecting LG WOWCAST (Sold separately, WTP3) to the sound bar wirelessly.

6 Connecting the product to your smartphone via Wi-Fi

- ① Connect your smartphone to Wi-Fi.
② Install the **LG Sound Bar app** on Google Play or the App Store.
③ Run the **LG Sound Bar app** and follow the instructions.
④ The product will connect to your smartphone and you can control the product with **LG Sound Bar app**.

7 Connecting the product to your smartphone via Bluetooth

- ① Tap the **Settings** button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function. (Off > On)
② Press the **Bluetooth pair** button. After a moment, LED2 blinks blue.
③ Find and tap "LG_Speaker_SC9S_XXXX" or the name you registered on the Google Home app.
④ When the product is connected to your smartphone via **Bluetooth**, all LEDs light up blue.



If you see a red LED on the wireless subwoofer or on the front of the wireless receiver, it means that the sound bar is not connected to the speakers. If this is the case, connect them in the following order.

- ① Press the **Power** button on the sound bar to turn it off.
② Press the **Pairing (PAIRING)** button on the back of the disconnected wireless subwoofer or wireless receiver. Check if each LED blinks green.
- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.
③ Press the **Power** button on the sound bar to turn it on.
④ When the connection is established, you will see a green LED light on the wireless subwoofer or on the front of the wireless receiver light up green.

- Keep the sound bar, the subwoofer and wireless receiver away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
• Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.



إذا رأيت مؤشر LED الموجود في مضخم الصوت اللاسلكي أو في الجزء الأمامي من جهاز الاستقبال اللاسلكي بضئ باللون الأحمر، فهذا يعني أن مكبر الصوت غير متصل بالسماعات. في هذه الحالة، قم بتوصيلهم بالترتيب التالي.

- ① اضغط على زر الطاقة button on the sound bar to turn it off.
② اضغط على زر الـ (PAIRING) Pairing في الجزء الخلفي من مضخم الصوت اللاسلكي أو جهاز الاستقبال اللاسلكي غير المتصل. تحقق مما إذا كان مؤشر LED يومض باللون الأخضر.
- إذا كنت لا تزال ترى مؤشر LED الموجود في مضخم الصوت اللاسلكي بضئ باللون الأحمر، فانضغط مطولاً على الزر الموجود في الجزء الخلفي من مضخم الصوت مجدداً.
③ اضغط على زر الطاقة button on the sound bar to turn it on.
④ عند إنشاء الاتصال، سترى مؤشر LED الموجود في مضخم الصوت اللاسلكي أو في الجزء الأمامي من جهاز الاستقبال اللاسلكي بضئ باللون الأخضر.

- أبعد مكبر الصوت ومضخم الصوت وجهاز الاستقبال اللاسلكي عن الأجهزة (مثل الموجة اللاسلكي، فرن الميكروويف، وما إلى ذلك) بمسافة 1 م لمنع التداخل اللاسلكي.
• قد لا تجعل بعض المكبرات الصوت تعتمد على مصدر الإدخال. حدد وضع صوت BASS BLAST (BASS BLAST+) للاستماع عبر كافة مكبرات الصوت.

- يخضع التصميم والموصفات للتغيير دون إشعار مسبق.
- Google Play هي العلامة التجارية لشركة Google LLC.

العربية تركيب المنتج واستخدامه



نُرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز، والاحتفاظ به للرجوع إليه فيما بعد.
للعرض إرشادات الميزات المتقدمة، قم بزيارة <http://www.lg.com> أو قم بمسح رمز الاستجابة السريعة ضوئياً ثم قم بتنزيل دليل المالك. قد تختلف بعض محتويات هذا الدليل عن منتجك.

- A مكبر الصوت
B جهاز استقبال التحكم عن بعد
C حالة مصباح LED (1 2 3)
D السماعات الخلفية / جهاز استقبال لا سلكي (يباع بشكل منفصل، SPQ8-S)
E مضخم صوت لا سلكي - قم بتركيبه بجوار مكبر الصوت.
F جهاز خارجي- (مشغل أقراص بلو راي، جهاز ألعاب، وما إلى ذلك)

○ : تشغيل / ● : إطفاء / ◐ : وميض							
وميض أحمر	وميض أبيض	أبيض	وميض أزرق	أبيض	وميض أزرق	أبيض	أرجواني
التشغيل إيقاف التشغيل	Wi-Fi جاهز	Wi-Fi	Bluetooth جاهز	Bluetooth	OPTICAL / HDMI ARC	HDMI IN	USB

1 قم بتوصيل مكبر الصوت بجهاز التلفزيون عبر كبل بصري أو كبل HDMI.

2 إذا كنت تستخدم جهاز خارجي (مثل جهاز فك التشفير، مشغل Blu-ray، وحدة التحكم في الألعاب، وما إلى ذلك)، قم بتوصيلهم بمكبر الصوت أو بالتلفزيون باستخدام كابل HDMI.

① إذا لزم الأمر، قم بشراء كبلات HDMI أو كبل بصري أو كابل تمديد USB لتوصيل مكبر الصوت.
3 إذا قمت بشراء السماعة الخلفية وجهاز الاستقبال اللاسلكي بشكل منفصل، قم بتوصيل السماعات الخلفية بجهاز الاستقبال اللاسلكي عبر كبل السماعة. عند توصيل السماعات الخلفية بجهاز الاستقبال اللاسلكي، قم بتوصيل الكبل المخطط باللون الأسود بالطرف السالب لكل سماعة وقم بالتوصيل الكبل الآخر بالطرف الموجب لكل سماعة.

4 قم بتوصيل الطاقة بالترتيب التالي: مضخم الصوت اللاسلكي ← جهاز الاستقبال اللاسلكي ← مكبر الصوت. ثم قم بتشغيل مكبر الصوت. عند إنشاء اتصال تلقائياً بمكبر الصوت، ستضيء مؤشرات LED الموجودة على مضخم الصوت اللاسلكي وجهاز الاستقبال اللاسلكي باللون الأخضر.

5 استخدام المنتج مع التلفزيون




- ① اضغط على زر وظيفة button بشكل متكرر حتى يضيء LED1 وLED2 باللون الأبيض. إذا كنت تستخدم جهازاً خارجياً متصلاً بـ HDMI™ IN على مكبر الصوت، فانضغط على زر وظيفة button بشكل متكرر حتى يضيء LED1 وLED3 باللون الأبيض.
② من إعدادات التلفزيون، قم بضبط سماعة الإخراج على [HDMI ARC] أو [بصري] أو [السماعة الخارجية].
① بوسعه الاستمتاع بالصوت من خلال توصيل LG WOWCAST (يُباع بشكل منفصل، WTP3) بمكبر الصوت لاسلكياً.

6 توصيل المنتج بهاتفك الذكي عبر Wi-Fi

- ① قم بتوصيل هاتفك الذكي بشبكة Wi-Fi.
② قم بتنصيب تطبيق **LG Sound Bar** من Google Play أو متجر التطبيقات.
③ قم بتشغيل تطبيق **LG Sound Bar** واتبع الإرشادات.
④ سيُتصل المنتج بهاتفك الذكي ويمكنك التحكم في المنتج باستخدام تطبيق **LG Sound Bar**.

7 توصيل الوحدة بهاتفك الذكي عبر Bluetooth

- ① انقر فوق زر الإعدادات button على هاتفك الذكي وحدد **Bluetooth**. قم بتشغيل وظيفة **Bluetooth**. (إيقاف تشغيل < تشغيل)
② انقر على زر إقران **Bluetooth**. بعد لحظة، يومض LED2 باللون الأزرق.
③ ابحث وانقر فوق "LG_Speaker_SC9S_XXXX" أو الاسم الذي قمت بتسجيله على تطبيق Google Home.
④ عندما يكون المنتج متصلاً بهاتفك الذكي عبر **Bluetooth**، تضيء جميع مصابيح LED باللون الأزرق.

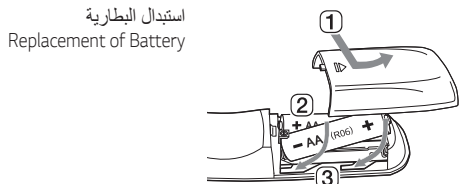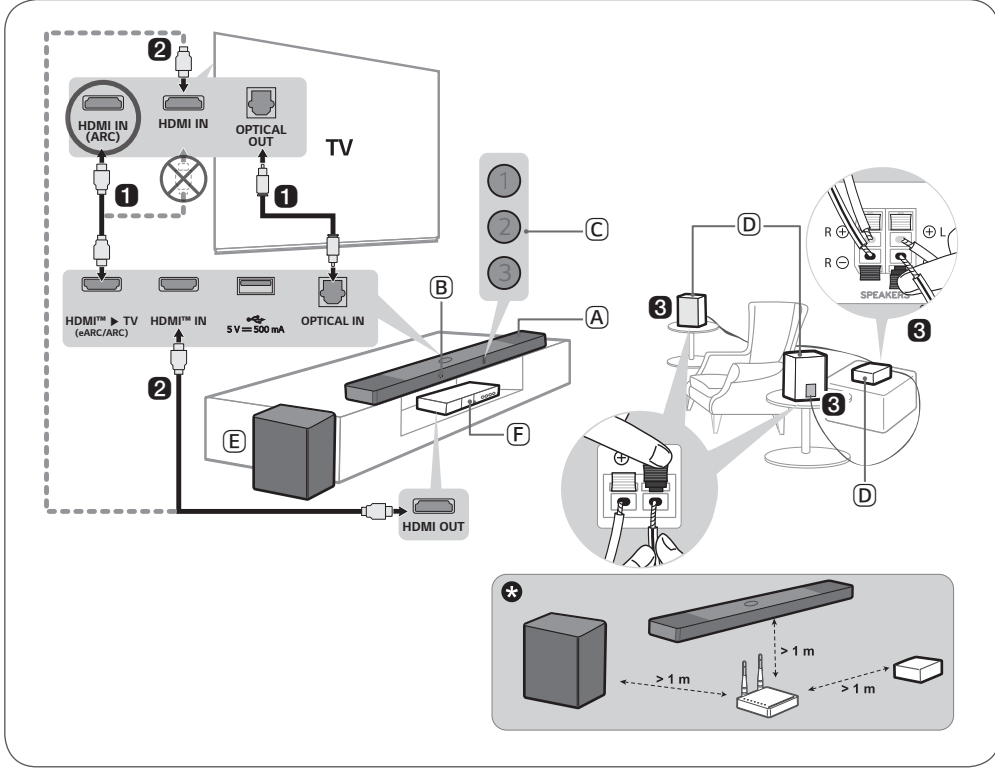

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE