LG
Life's Good

OWNER'S MANUAL

# DRYER



**Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.**

**EN ENGLISH**

RC7066A1F
RC7066G2F

www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved

# TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased. This manual is subject to revision by the manufacturer.


**SAFETY INSTRUCTIONS ..... 3**
- IMPORTANT SAFETY INSTRUCTIONS ..... 3

**INSTALLATION ..... 8**
- Specifications ..... 8
- Accessories (Optional) ..... 8
- Installation Place Requirements ..... 9
- Stacking Installation Instructions ..... 10

**OPERATION ..... 13**
- Using the Appliance ..... 13
- Sorting Laundry ..... 14
- Control Panel ..... 15
- Programme Table ..... 16
- Option Programme ..... 18

**SMART FUNCTIONS ..... 20**
- Using the Tag On Function ..... 20
- Using the Appliance ..... 20
- Using the Smart Diagnosis™ Function ..... 21

**MAINTENANCE ..... 22**
- Cleaning the Lint Filter ..... 22
- Emptying the Water Container ..... 23
- Cleaning the Cool Air Inlet Grill ..... 23
- Wiping the Moisture Sensor ..... 23
- Cleaning the Condenser ..... 24

**MAINTENANCE ..... 25**
- Diagnosing Problems ..... 25
- Error Codes ..... 28

**WARRANTY ..... 29**

# SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into ‘WARNING’ and ‘CAUTION’ as described below.

⚠ This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

⚠ **WARNING**

This indicates that the failure to follow the instructions can cause serious injury or death.

⚠ **CAUTION**

This indicates that the failure to follow the instructions can cause the minor injury or damage to the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

⚠ **WARNING**

**To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this appliance, follow basic precautions, including the following:**

### Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## Installation

- Make sure the appliance is properly installed, grounded, and adjusted by qualified service personnel according to the installation instructions.
- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, or rain or temperatures below freezing.
- Tighten the drain hose to avoid separation.
- If the power cord is damaged or the hole of the socket outlet is loose, do not use the power cord and contact an authorized service centre.
- Do not plug multiple socket outlets, an extension power cable or adapter with this appliance.
- This appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.

- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the power plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

## Operation

- Do not attempt to separate any panels or disassemble the appliance. Do not apply any sharp objects to the control panel in order to operate the appliance.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not put animals, such as pets into the appliance.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, vegetable oil, cooking oil, etc.). Improper use can cause fire or explosion.
- In case of flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Do not push down the door excessively, when the appliance door is open.

- Use new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Do not touch the door during a high temperature programme.
- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the appliance.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.

## Maintenance

- Securely plug the power plug in the socket outlet after completely removing any moisture and dust.
- Disconnect the appliance from the power supply before cleaning the appliance. Setting the controls to the OFF or stand by position does not disconnect this appliance from the power supply.
- Do not spray water inside or outside the appliance to clean it.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the socket outlet.

## Technical Safety for Using the Dryer


- Do not dry unwashed items in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

- The appliance is not to be used if industrial chemicals have been used for cleaning.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- Do not drink the condensed water. Failure to do so may result in food-borne illnesses.
- The lint filter has to be cleaned frequently.
- Lint must not to be allowed to accumulate around the appliance.
- Do not spray dry cleaning detergent directly onto the appliance or use the appliance to dry clothes left with dry cleaning detergent.
- Do not dry clothes stained with oil substances. Oil substances (including edible oils) stained on clothes cannot be completely removed even after washing with water.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Remove clothes from the appliance immediately when drying is complete or the power is turned off during the drying process. Leaving clothes that have been dried in the appliance unattended could result in fire. Clothes removed from the appliance after drying could result in fire. Remove clothes immediately after drying, and then hang or lay the clothes flat to cool.

## Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

## Specifications

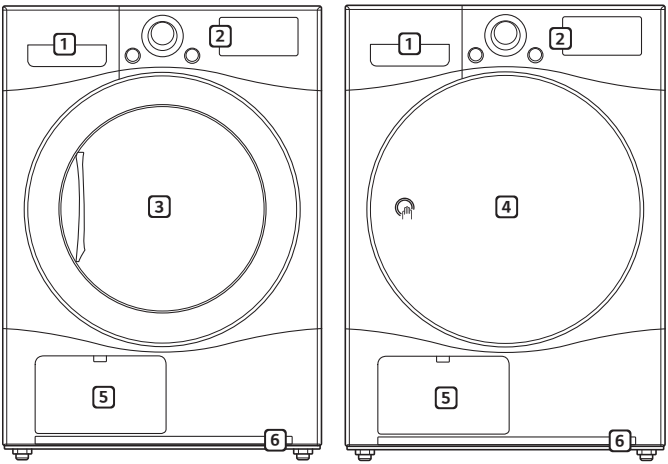


1. Water container
2. Control panel
3. Glass door
4. Opaque door
5. Condenser cover
6. Air ventilation grill

| Model | RC7066A1F / RC7066G2F |
|---|---|
| Power supply | 220 V~, 60 Hz |
| Size | 600 mm (W) X 640 mm (D) X 850 mm(H) |
| Product weight | 43 - 46 kg |
| **Max. capacity** | **7 kg** |
| Rated power | 2,200 W |
| Annual energy consumption | 504 kWh |
| Country of origin | MADE IN KOREA |


- Appearance and specifications may vary without notice to improve the quality of the appliance.

## Accessories (Optional)

Please contact the LG Electronics Customer Information Centre for purchase.




Condensing Drain Hose and Hose Holder



Stacking Kit

# Installation Place Requirements

## Location

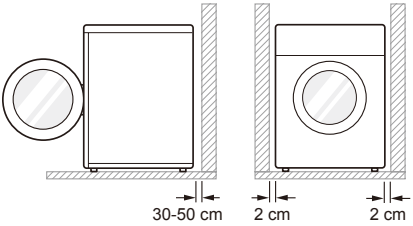


**Level floor** : Allowable slope under the entire appliance is 1°.

**Power outlet** : Must be within 1.5 meters of either side of the location of the appliance.

- Do not overload the outlet with more than one appliance.

**Additional Clearance** : For the wall, 30 - 50 cm: rear /2 cm: right & left side

- Do not place or store laundry products on top of the appliance at any time. These products may damage the finish or controls.

### NOTE

- For better drying performance, please keep the rear of the appliance away from wall.
- Do not install the appliance where there is a risk of frost or dust.
- The appliance may not be able to operate properly or may be damaged by freezing of condensed water in the pump and drain hose.
- Do not install the appliance next to a high-temperature appliance like refrigerator, oven or stove etc, which can cause poor drying performance and programme duration, and adversely affect the proper functioning of the compressor. The appliance performs best at a room temperature of 23 °C.

## Positioning

- Install the appliance on a flat hard floor.
- Make sure that air circulation around the appliance is not impeded by carpets, rugs, etc.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the appliance.
- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.
- Please ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- With the appliance installed, adjust all four feet using a transit bolt spanner to ensure the appliance is stable, and a clearance of approximately 20 mm is left between the top of the appliance and the underside of any work-top.

## Ventilation Requirement

- Alcove or under counter
  - Ensure air flow of 3.17 $m^3$/min through the appliance
- Closet
  - Closet door must have 2 (louvered) openings, each having a minimum area of 387 $cm^2$, located 8 cm from bottom and top of door.

## ⚠ WARNING

- Avoid installing the appliance around a heat source. The rear side of the appliance must be well ventilated. Failure to follow these instructions may result in problems.
- The appliance should not be installed next to a refrigeration appliance.
- The appliance is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc.

## Electrical Connection

- Do not use an extension cord or double adapter.
- Always unplug the appliance after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.


# Stacking Installation Instructions

Your dryer can be placed on top of an LG washing machine and securely fixed with a stacking kit. This installation must be conducted by qualified service personnel to ensure it has been installed correctly.



The qualified service personnel will ensure you have the correct stacking kit for your model of washing machine and will ensure it is firmly fixed. For these reasons, expert fitting is essential.

## Stacking Kit

In order to stack this dryer an LG stacking kit is required.

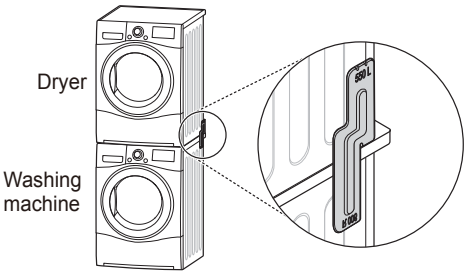



This dryer may only be stacked on top of an LG washing machine. Do not attempt to stack this dryer on any other washing machine, as damage, injury or property damage could result.
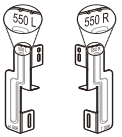
| | Washing Machine Top plate size | |
|---|---|---|
| | 550 mm | 600 mm |
| **Shape and assembly direction** |   |   |

## Installation Procedure


**1** Place the LG dryer on the LG washing machine.

**2** Remove the two screws from the bottom of the rear cover on each side as illustrated below.

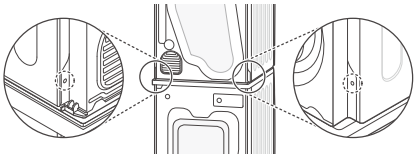


**3** Align the stacking kit holes and the rear cover holes.

- 3-1) 600 mm

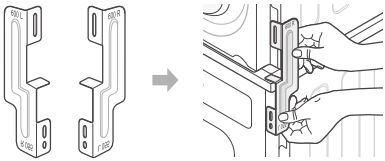

- 3-1) 550 mm

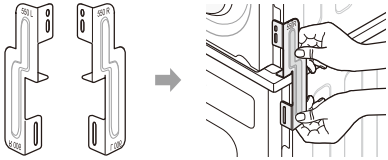

**4** Fasten the two screws that were removed earlier from the dryer to the stacking kit.

**5** Use the four screws in the accessory box (16 mm) to assemble the washing machine rear cover and stacking kit.

**6** The procedure for the opposite side will be the same.


## ⚠ WARNING

- Incorrect installation can cause serious accidents.
- The weight of the appliance and the height of installation make the stacking procedure too risky for one person. This procedure should be performed by two or more qualified service personnel.
- The appliance is not suitable for a built-in installation. Please do not install as a built-in appliance.
- Do not operate if the appliance is not properly stacked.


## Condensed Water Drain-out

Normally, condensed water is pumped up to the water container where water is collected until manually emptied. Water can also be drained out directly to a mains drain, especially when the dryer is stacked on top of a washing machine. With a connecting kit for the mains drain hose, simply change the water path and re-route to the drainage facility as below:


**1** Take the connecting kit out.

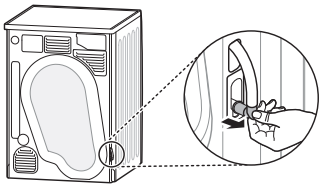

**2** Separate the water container hose from the kit.

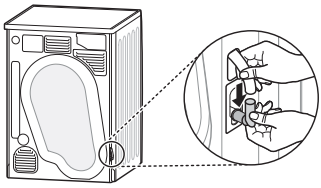

**3** Connect the drain hose to the kit.

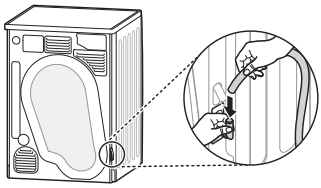



## Leveling the appliance

Leveling the appliance prevents unnecessary noise and vibration. Place the appliance on a solid, level floor.

If the appliance is not properly level, adjust the front leveling feet as necessary.

Turn them clockwise to raise and counter-clockwise to lower until the appliance no longer wobbles, both front-to-back and side-to-side and corner-to-corner.

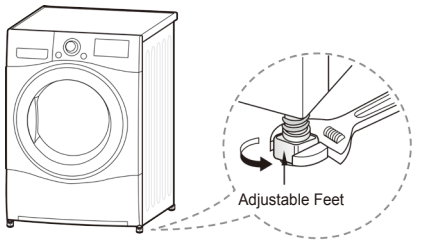

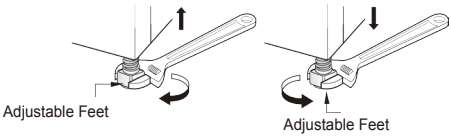
### Diagonal Check


When pushing down the edges of the top plate diagonally, the appliance should not move up and down at all (Check both directions). If the appliance rocks when pushing the top plate diagonally, adjust the feet again.

## Using the Appliance


Before the first cycle, set the appliance to dry for five minutes to warm up the drum. Open the door between loads the first few times you use the appliance to allow any odours from the interior of the appliance to disperse.

1 Ensure the lint filter and water container are clean.

- The lint filter is inside the door rim. It needs to be cleaned before each drying cycle.
- Open the door and ensure the lint filter is clean. If it is not, please clean the lint filter.

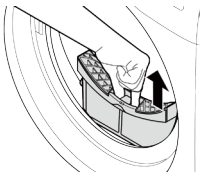

- Also check if the water container needs to be emptied for optimum drying results.

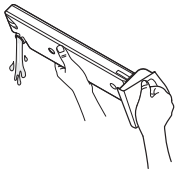

### ⚠ WARNING

- Do not drink the condensed water.

**NOTE**

- In some instances, LED window may display (Empty water symbol) and the appliance may stop because the water container is full.

2 Place laundry into the drum after sorting.

- The clothes should be sorted by fabric type and dryness level and all the strings and belts of clothes should be well tied and fixed before being put into the drum. Push the laundry to the back to keep it away from the door seal. Otherwise, the door seal and clothes may be damaged. Close the door.

### ⚠ CAUTION

- Be careful not to trap laundry between the door and rubber seal.


3 Turn the power on.

- Press the **Power** button. The indicator icon above the button will become illuminated, indicating that the appliance is all set to run.



4 Select the drying programme you want.

- You can choose a programme by turning the programme selector knob until the required programme is indicated.
- If you press the **Start/Pause** button without choosing a programme, the appliance will proceed with the **Cotton** programme. Please refer to the programme table for the detailed information.

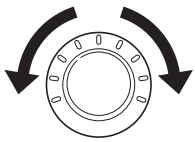

5 Press the **Start/Pause** button.



6 After the cycle has finished, open the door and remove the laundry.

7 Turn off the appliance.

- Press the **Power** button.

## ⚠ CAUTION

- Be careful! The drum inside may still be hot.
- The appliance must not be used for purposes other than those for which it was designed.

### NOTE

- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that laundry is left at a temperature that ensures the laundry will not be damaged.
- A high atmospheric temperature and a small room may both increase drying time as well as energy consumption.

# Sorting Laundry

Clothes have their own wash care labels, so drying according to the wash care label is recommended.

Not only that, the laundry must be sorted according to size and type of fabric.

For the best drying performance and most efficient energy usage, do not overload the appliance.

### Woollens

Dry woollens on the Wool programme. Be sure to follow fabric care label symbols first. Wool may not be completely dried from the cycle, so do not repeat drying. Pull woollens to their original shape and dry them flat.

### Woven and Loopknit Materials

Some woven and loopknit materials may shrink, depending on quality.

### Permanent Press and Synthetics

Do not overload the appliance. Take out permanent press items as soon as the appliance stops to reduce creases.

### Baby Clothes and Night Gowns

Always check fabric care labels.

### Rubber and Plastics


- Do not dry any items made from or containing rubber or plastics such as:
  - Aprons, Bibs and Chair Covers
  - Curtains and Table Clothes
  - Bathmats

### Fiberglass

- Do not dry fiberglass items in the appliance. Glass particles left in the appliance may be subsequently picked up by your clothes in later cycles.

| Icon | Description |
|---|---|
|  | Dry |
|  | Tumble dry |
|  | Permanent Press / Crease resistant |
|  | Gentle / Delicate |
|  | Do not tumble dry |
|  | Do not dry |
|  | High heating |
|  | Medium heating |
|  | Low heating |
|  | No Heating / Air |
|  | Line dry / Hang to dry |
|  | Drip dry |
|  | Dry flat |
|  | In the shade |

# Control Panel

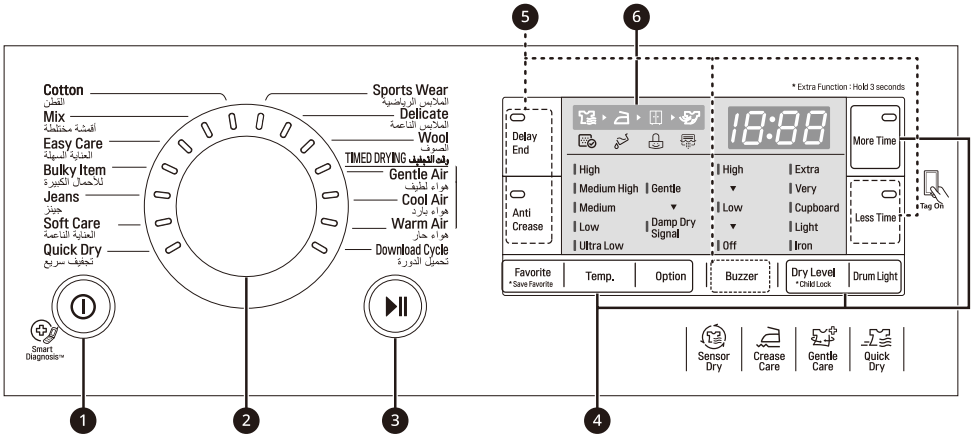


❶ **Power Button**

- Press the **Power** button to turn power on and off.
- Press the **Power** button to cancel the Time Delay function.

❷ **Programme Selector**

- Programmes are available according to the laundry type.
- The lamp will light up to indicate the selected programme.

❸ **Start/Pause Button**

- This **Start/Pause** button is used to start or pause a dry cycle.
- When in Pause, the power is turned off automatically after 60 minutes.

❹ **Additional Programme Buttons**

- Use these buttons to select the desired options for the selected programme.

❺ **Options**

- This allows you to select additional options and will illuminate when selected.

❻ **Display**

- : This icon indicates that the lint filter should be cleaned or is clogged.
  - Cleaning notice: When you press the **Power** button, the icon will become displayed.
  - Clogging notice: This icon will become displayed with a buzzer sound whilst the appliance is in operation.
- : This icon indicates that the water container needs to be emptied or is full.
  - Emptying notice: When you press the **Power** button, this icon will become displayed.
  - Full water notice: The icon will become displayed and a buzzer will sound while the appliance is in operation.
- : This icon indicates that the condenser should be cleaned. If the icon is displayed, clean the condenser promptly.

# Programme Table

## Drying Programme

| Sensor Dry Programmes | | | |
|---|---|---|---|
| **Programme** | **Laundry Type** | **Detail** | **Drying Level** |
| **Cotton** | Towels, dressing gowns and bed linen | For thick and quilted fabrics | Extra |
| | Terry towels, tea towels, towels and bed linen | For thick and quilted fabrics that do not need to be ironed | Very |
| | Bath towels, tea towels, underwear and cotton socks | For fabrics that do not need to be ironed | Cupboard |
| | Sheets, pillowcase and towels | For fabrics that do not need to be ironed | Light |
| | Bed linen, table linen, towels, T-shirts, polo shirts and work clothes | For fabrics that need to be ironed | Iron |
| **Mix** | Bed linen, table linen, tracksuits, anoraks and blankets | For thick and quilted fabrics that do not need to be ironed | Very |
| | Shirts and blouses | For fabrics that do not need to be ironed | Cupboard |
| | Trousers, dressers, skirts and blouses | For fabrics that need to be ironed | Iron |
| **Easy Care** | Shirts, T-shirts, trousers, under-wear and socks | For polyamide, acrylic, and polyester that do not need to be ironed | Cupboard |
| | Shirts, T-shirts, under-wear, anoraks and socks | For polyamide, acrylic, polyester that do need to be ironed | Iron |
| **Bulky Item** | Bed clothes, sheets | For bulky items | - |
| **Jeans** | Jeans and colour fading garments. | For jeans which do not need to be ironed | - |

| Sensor Dry Programmes | | | |
|---|---|---|---|
| **Programme** | **Laundry Type** | **Detail** | **Drying Level** |
| **Soft Care** | T-shirts, pillowcase, and towels | For cotton fabrics which do not need to be ironed | - |
| **Quick Dry** | Linen and towels (excluding delicate fabrics) sports wear, bulky Item cycle. | For small loads of suitable fabrics with short drying times | - |
| **Sports Wear** | Soccer kit and training wear | For polyester material | - |
| **Delicate** | Silk, fine fabrics and lingerie | For fabrics that are heat-sensitive, such as synthetic fabrics | - |
| **Wool** | Wool | For wool fabrics | - |

| Timed Drying Programmes | | | |
|---|---|---|---|
| **Programme** | **Laundry Type** | **Detail** | **Drying Level** |
| **Gentle Air** | Silk, wool, delicate lingerie | Refreshes clothes without tumble drying | - |
| **Cool Air** | All fabrics that need refreshing | Tumbles without heat | - |
| **Warm Air** | Bath towels, bath robes, dishclothes and acrylic quilted fabrics | Small Items & damp clothing, Everyday items suitable for heat drying | - |

## ⚠ CAUTION

- If the load is less than 1 kg, please use the **Warm Air** programme in Timed Drying programmes. Wool items should be dried using the **Wool** programme and heat-sensitive fabrics including silk, underwear and lingerie should be dried using the **Delicate** programme. Please comply with the recommended laundry load when you select your desired programme. Otherwise, your clothes may be damaged.

### NOTE

- Set programme at “Cotton Light High (Full & Half Load)” for test in accordance in conformity with SASO 2883.
- Standard Cotton programme : Cotton + Light + High Option
  - (This is the most efficient programmes in terms of the test conditions proposed by SASO 2883.)
  - (They are suitable to dry normal wet cotton laundry.)
  - (They are the most efficient programme in terms of energy consumption for drying wet cotton laundry.)
- The test results depend on room temperature, type and amount of load, water hardness and water inlet temperature.
- If the appliance is installed as built under, it may cause performance degradation.
- If the laundry is not spun at a high speed during washing, energy consumption and drying time will increase.

# Option Programme

## Delay End

You can use the Delay End option to delay the finishing time of the drying cycle. Maximum Delay End is 19 hours. Minimum Delay End is 3 hours.

1 Turn the appliance on.

2 Select a programme.

3 Press the **Delay End** button.

4 Set time delay hour(s) by pressing the **More Time** or **Less Time** button.

5 Press the **Start/Pause** button.

## Anti Crease (  )

The Anti Crease option prevents creases that are formed when the laundry is not unloaded promptly at the end of the drying cycle. When **Anti Crease** is selected, the appliance repeatedly runs and pauses, giving you two hours to unload the laundry. If the door is opened during the Anti Crease option, the option is cancelled.

## Favorite

The Favorite option allows you to store a customized dry programme for future use.

1 Turn the appliance on.

2 Select a programme.

3 Select the option or additional programme. (Anti Crease, Temp. etc.)

4 Press and hold the **Favorite** option button for three seconds.

The Favorite option is now stored for future use. To reuse the stored programme, select the **Favorite** option and press the **Start/Pause** button.

## Drum Light

Whilst the appliance is running it is possible to see inside the drum if you select the **Drum Light** function.

- Light on : Door is opened.
- Light off : Door is closed. The light is turned off automatically.

## Temp.

Adjusts the temperature setting from Ultra Low to High. This allows precise care of your fabrics and garments.

- Press the **Temp.** button repeatedly to scroll through available settings.

## Option

### Gentle

This function keeps the garments more moist than the standard Iron dry level.

1 Turn the appliance on.

2 Select a programme.

3 Press the **Dry Level** button and select **Iron**.

4 Press the **Option** button and select **Gentle**.

5 Press the **Start/Pause** button.

Gentle is available to programmes specified in the table below.

| Programme | Dry Level |
|---|---|
| Cotton | Iron |
| Mix | |
| Easy Care | |

## Damp Dry Signal

With this option, the appliance will beep when the load is ready for ironing.

This allows you to remove faster-drying lightweight items or items that you would like to iron or hang while still slightly damp.

1. Turn the appliance on.
2. Select a programme.
3. Press the **Dry Level** button and select a level.
4. Press the **Option** button and select **Damp Dry Signal**.
5. Press the **Start/Pause** button.
6. When the laundry is ready for ironing, the buzzer will sound for approximately one minute.
7. Press the **Start/Pause** button and open the door.
8. Take out laundry which you wish to iron. (Leave the other laundry in the appliance.)
9. Close the door and press the **Start/Pause** button.

Damp Dry Beep is available to programmes specified in the table below.

| Programme | Dry Level |
|---|---|
| Cotton | Extra/Very Cupboard/Light |
| Mix | Very/Cupboard |
| Easy Care | Cupboard |

## Child Lock (🔒)

Select this function to lock the buttons on the control panel to prevent tampering.

### Locking the Control Panel

1. Press and hold the **Dry Level** button for three seconds.
2. A beeper will sound, and CL will appear on the display.
   - When the **Child Lock** is set, all buttons are locked except the **Power** button.

**NOTE**

- Turning off the power or completing all cycles will not reset the child lock function. You must deactivate child lock before you can access any other functions.

### Unlocking the Control Panel

Press and hold the **Dry Level** button for three seconds.

- A beeper will sound and the remaining time for the current programme will reappear on the display.

## Buzzer

This option enables you to adjust the volume of the beeper sound.


## Using the Tag On Function

Conveniently use the Smart Diagnosis™ to communicate with the appliance directly from a smart phone.

- The Tag On function can only be used with most smart phones equipped with the NFC (Near Field Communication) function and based on the Android OS (operating system).

### Installation of the Application

- Search LG SmartThinQ application on the Google Play Store from your smart phone.

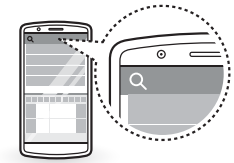

**NOTE**

- Press ? in the LG SmartThinQ application for a more detailed guide on how to use the Tag On function.
- Depending on the smart phone manufacturer and Android OS version, the NFC activation process may differ. Refer to the manual of your smart phone for details.
- Because of the characteristics of NFC, if the transmission distance is too far, or if there is a metal sticker or a protective case on the phone, transmission will not be good. In some cases, NFC-equipped phones may be unable to transmit successfully.
- The content found in this manual may differ depending on the version of LG SmartThinQ application, and it may be modified without informing customers.

## Using the Appliance

LG SmartThinQ application allows you to use various features for your convenience.

- Cycle Download
- Smart Diagnosis™
- Tag On Cycle Set
- Laundry Stats


# Using the Smart Diagnosis™ Function

Use this function if you need an accurate diagnosis by an LG Electronics customer information centre when the appliance malfunctions or fails.

Smart Diagnosis™ can not be activated unless the appliance is connected to power. If the appliance is unable to turn on, then troubleshooting must be done without using Smart Diagnosis™.

1 Press the **Power** button to turn on the washing machine. Do not press any other buttons or turn the programme selector knob.


2 When instructed to do so by the call centre, place the mouthpiece of your phone close to the **Power** button.

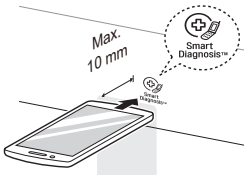


3 Press and hold the **More Time** button for three seconds, while holding the mouthpiece of your phone close to the Smart Diagnosis™ icon and **Power** button.

4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.

- For best results, do not move the phone while the tones are being transmitted.
- If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.

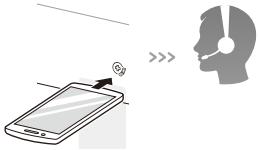

5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

**NOTE**

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.

## ⚠ WARNING

Remove the power plug when you clean the appliance. Not removing the plug may result in electric shock.


## Cleaning the Lint Filter

Clean the lint filter before each drying cycle. It should also be cleaned if the icon becomes illuminated and the buzzer sounds while the appliance is in operation.


Cleaning the lint filter will reduce drying time and energy consumption.

1 Open the door.


2 Remove the lint filter.

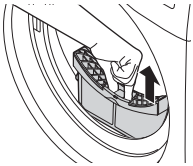


3 Open the lint filter and remove all the lint.

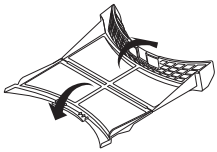

4 Rinse away the lint under warm, running water.

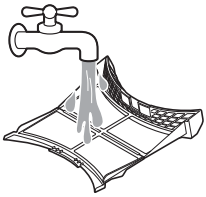

5 Dry the lint filter completely, close and reinsert the lint filter.

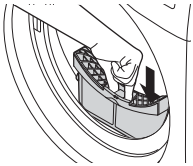

**NOTE**

- Remove moisture from the mesh. Otherwise, the lint filter may be clogged due to water film and the appliance may not operate.
- If the lint filter is not in the appliance, you can not operate the appliance.


# Emptying the Water Container

Condensed water is collected in the water container.


Empty the water container after every use. Not doing so will affect the drying performance.

If the water container is full, the icon glows and the buzzer sounds while the appliance is operating. If this should occur, the water container needs to be emptied within the next hour.

1 Pull out the water container.

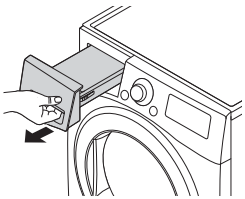

2 Empty the water container in the sink.

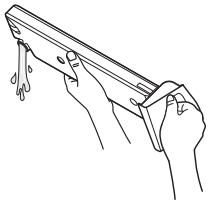


3 Push it back into the appliance.

4 Press the **Start/Pause** button.

# Cleaning the Cool Air Inlet Grill

Vacuum the Cool Air Inlet grill 3 – 4 times a year to make sure there is no build up of lint or dirt that may cause improper air flow.

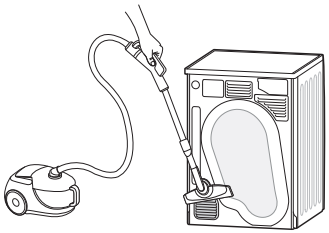


**NOTE**

- Warm air is exhausted through the ventilation grill.
- Adequate ventilation should be provided to avoid the back flow of gases into the room from units burning other fuels, such as open fires.

# Wiping the Moisture Sensor

This device senses the moisture level of the laundry during operation, which means it must be cleaned regularly to remove any build up of lime scale on the surface of the sensor.

Wipe the sensors inside the drum.

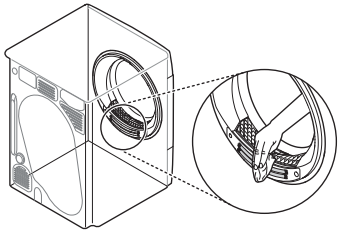


## ⚠ CAUTION

- Do not wipe the moisture sensor with abrasive materials. Always clean the sensor with a rough sponge.


# Cleaning the Condenser

The condenser is also a very important part for efficient drying performance result, so it needs special care from you. It is recommended that the condenser be cleaned three or four times a year or when the icon blinks.


**1** Push the cap and open the condensing cover.

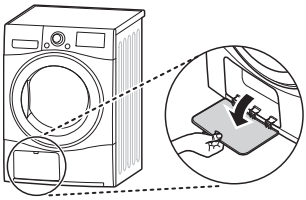

**2** Open the seal by turning the locking lever.

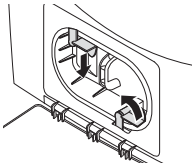


**3** Pull the condenser out by inserting a finger into the tab at the front of the condenser. (Do not force the condenser).

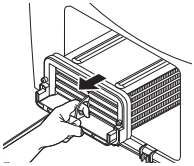


**NOTE**


- If the icon is displayed, clean the condenser promptly.

**4** Clean the condenser thoroughly under a tap, letting the water flow through.



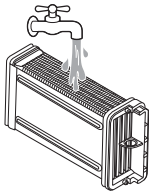

**5** Put everything back together by following the instructions in reverse order.

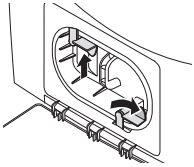

## ⚠ CAUTION

- The locking lever must be closed after cleaning the condenser as illustrated above.
- Operating when the condenser is clogged with lint can damage the appliance. This also increases energy consumption.
- Do not use sharp objects to clean the heat exchanger. This could cause damage and leaking.
- Never operate the appliance without the heat exchanger.

The appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If the appliance does not function properly or does not function at all, check the following before you call for service:

## Diagnosing Problems

| Symptoms | Reason | Solution |
|---|---|---|
| **Appliance will not turn on.** | **Power cord is not properly plugged in.** | • Make sure that the plug is securely plugged into a grounded outlet matching the appliance's rating plate. |
| | **House fuse is blown, circuit breaker has tripped, or power outage has occurred.** | • Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. |
| **Appliance does not heat.** | **House fuse is blown, circuit breaker has tripped, or power outage has occurred.** | • Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. |
| **Clothes take too long to dry.** | **Load is not properly sorted.** | • Separate heavy items from lightweight items. Larger and heavier items take longer to dry. Light items in a load with heavy items can fool the sensor because the light items dry faster. |
| | **Large load of heavy fabrics.** | • Heavy fabrics take longer to dry because they tend to retain more moisture. To help reduce and maintain more consistent drying times for large and heavy fabrics, separate these items into smaller loads of a consistent size. |
| | **Appliance controls are not set properly.** | • Use the appropriate control settings for the type of load you are drying. Some loads may require an adjustment of the dry level setting for proper drying. |
| | **Lint filter needs to be cleaned.** | • Remove the lint from the lint filter before every cycle. With the lint removed, hold the lint filter up to a light to see if it is dirty or clogged. With some loads that produce high amounts of lint, such as new bath towels, it may be necessary to pause the cycle and clean the filter during the cycle. |
| | **House fuse is blown, circuit breaker has tripped, or power outage has occurred.** | • Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. |
| | **Appliance is overloaded.** | • Divide extra large loads into smaller loads for better drying performance and efficiency. |

| Symptoms | Reason | Solution |
|---|---|---|
| **Clothes take too long to dry.** | **Appliance is underloaded.** | • If you are drying a very small load, add a few extra items to ensure proper tumbling action. If the load is very small and you are using Sensor Dry programmes, the electronic control cannot properly sense the dryness of the load and may shut off too soon. Use Timed Drying programmes or add some extra wet clothes to the load. |
| **Drying time is not consistent.** | **Heat settings, load size, or dampness of clothing is not consistent.** | • The drying time for a load will vary depending on the type of heat used (electric), the size of the load, the type of fabrics, the wetness of the clothes, and lint filter. Even an unbalanced load in the appliance can cause poor spinning, resulting in wetter clothes which will take longer to dry. |
| **Greasy or dirty spots are left on clothes.** | **Fabric softener is used incorrectly.** | • When washing laundry that is to be dried in the appliance, use the correct amount of fabric softener as recommended by the manufacturer of the fabric softener. |
| | **Clean and dirty clothes are being dried together.** | • Use the appliance to dry only clean items. Soil from dirty clothes can transfer to the clean clothes in the same or later loads. |
| | **Clothes were not properly cleaned or rinsed before being placed in the appliance.** | • Stains on dried clothes could be stains that were not removed during the washing process. Make sure that clothes are being completely cleaned or rinsed according to the instructions for your washing machine and detergent. Some difficult soils may require pre-treating prior to washing. |
| **Clothes are wrinkled.** | **Clothes have dried too long (overdried).** | • Over drying a load of laundry can lead to wrinkled clothes. Try a shorter drying time. |
| | **Clothes have been left in the appliance for too long after cycle ends.** | • Use the Anti crease option. |
| **Clothes are shrinking.** | **Garment care instructions are not being followed.** | • To avoid shrinking your clothes, always consult and follow fabric care instructions. Some fabrics will naturally shrink when washed. Other fabrics can be washed but will shrink when dried in the appliance. Use a low or no heat setting. |
| **Lint is left on clothes.** | **Lint filter has not been cleaned properly.** | • Remove the lint from the lint filter before every cycle. With the lint removed, hold the lint filter up to a light to see if it is dirty or clogged. If it looks dirty, follow the cleaning instructions. With some loads that produce high amounts of lint, it may be necessary to clean the lint filter during the cycle. |


| Symptoms | Reason | Solution |
|---|---|---|
| **Lint is left on clothes.** | **Laundry has not been sorted properly.** | • Some fabrics are lint producers (i.e., a fuzzy white cotton towel) and should be dried separately from clothes that are lint trappers (i.e., a pair of black linen pants). |
| | **Appliance is overloaded.** | • Divide extra large loads into smaller loads for drying. |
| | **Tissue, paper, etc., has been left in pockets.** | • Check pockets thoroughly before drying clothes. |
| **Excess static in clothes after drying.** | **Clothes have dried for too long (overdried).** | • Overdrying a load of laundry can cause a buildup of static electricity. Adjust settings and use a shorter drying time, or use Sensor Dry programmes. |
| | **Drying synthetics, permanent press, or synthetic blends.** | • These fabrics are naturally more prone to static buildup. Try using fabric softener, or use shorter Timed Drying time settings. |
| **Water leaks.** | **The water container hose or the drain hose is not connected correctly.** | • Connect the water container hose or the drain hose correctly. |
| | **The door is closed while laundry or foreign substance is caught in the door.** | • Check if laundry or foreign substance is caught in the door before using the appliance. If water leaks continuously, contact the LG Electronics Customer Information Centre. |
| **Clothes have damp spots after a Sensor Dry programme.** | **Very large load or very small load. Single large item such as a blanket or comforter.** | • If items are too tightly packed or too sparse the sensor may have trouble reading the dryness level of the load. Use a Timed Drying programme for very small loads.<br>• Large, bulky items such as blankets or comforters can sometimes wrap themselves into a tight ball of fabric. The outside layers will dry and register on the sensors, while the inner core remains damp. When drying a single bulky item, it may help to pause the cycle once or twice and rearrange the item to unwrap and expose any damp areas.<br>• To dry a few remaining damp items from a very large load or a few damp spots on a large item after a Sensor Dry programme has completed, empty the lint filter, then set a Timed Drying programme to finish drying the item(s). |

# Error Codes

| Symptoms | Reason | Solution |
|---|---|---|
| dE | **The door has been opened while the appliance is in operation or the appliance is being operated without the door being closed properly.** | • Close the door completely. |
| | | • If dE is not released, call for service. |
| tE1 | **Temperature Sensor has malfunctioned.** | • Unplug the power plug and call for service. |
| tE3 | | |

## THIS LIMITED WARRANTY DOES NOT COVER:

- Service trips to deliver, pick up, or install or repair the product; instruction to the customer on operation of the product; repair or replacement of fuses or correction of wiring or plumbing, or correction of unauthorized repairs/installation.
- Failure of the product to perform during power failures and interruptions or inadequate electrical service.
- Damage caused by leaky or broken water pipes, frozen water pipes, restricted drain lines, inadequate or interrupted water supply or inadequate supply of air.
- Damage resulting from operating the Product in a corrosive atmosphere or contrary to the instructions outlined in the Product's owner's manual.
- Damage to the Product caused by accidents, pests and vermin, lightning, wind, fire, floods, or acts of God.
- Damage or failure caused by unauthorized modification or alteration, or if it is used for other than the intended purpose, or any water leakage where the product was not properly installed.
- Damage or failure caused by incorrect electrical current, voltage, or plumbing codes, commercial or industrial use, or use of accessories, components, or consumable cleaning products that are not approved by LG.
- Damage caused by transportation and handling, including scratches, dents, chips, and/or other damage to the finish of your product, unless such damage results from defects in materials or workmanship.
- Damage or missing items to any display, open box, discounted, or refurbished Product.
- Products with original serial numbers that have been removed, altered, or cannot be readily determined. Model and Serial numbers, along with original retail sales receipt, are required for warranty validation.
- Increases in utility costs and additional utility expenses.
- Repairs when your Product is used in other than normal and usual household use or contrary to the instructions outlined in the Product's owner's manual.
- Costs associated with removal of your Product from your home for repairs.
- The removal and reinstallation of the Product if it is installed in an inaccessible location or is not installed in accordance with published installation instructions, including LG's owner's and installation manuals.
- Damage resulting from misuse, abuse, improper installation, repair, or maintenance. Improper repair includes use of parts not approved or specified by LG.
- Noise or vibration that is considered normal, for example, water drain sound, spin sound or warning beeps.

| | | |
|---|---|---|
| Filter is clogged.<br>– Not heating, long dry time |  | Clean the lint filter. |
| Improperly connected power cord or electrical outlet issue.<br>– No power<br>– Not heating | | Reconnect power cord, replace house fuse or reset breaker. If outlet is issue, electrician may be required. |

## Memo

## Memo

## Memo

مذكرة


مذكرة

مذكرة

# الضمان

**لا يغطي هذا الضمان المحدود ما يلي:**

- رحلات الخدمة لتوصيل المنتج، أو نقله، أو تركيبه، أو إصلاحه؛ تعليمات للمستهلك حول طريقة تشغيل المنتج؛ إصلاح المصهر أو استبداله، أو تصحيح الأسلاك أو السباكة، أو تصحيح عمليات الإصلاح/التركيب غير المصرح بها.
- فشل تشغيل المنتج عند انقطاع التيار الكهربائي أو ضعف في الخدمة الكهربية.
- التلف الناتج عن أنابيب الماء المكسورة أو المرشحة، أو أنابيب الماء المجمدة، أو خطوط التصريف المسدودة، أو إمداد الماء غير الكافي أو المتقطع، أو إمداد الهواء غير الكافي.
- التلف الناتج عن تشغيل المنتج في مناخ مسبب للتآكل أو مخالف للتعليمات المذكورة في دليل مالك المنتج.
- تلف الجهاز الناتج عن طريق الحوادث، أو الآفات والحشرات، أو البرق، أو الرياح، أو النار، أو الفيضانات، أو الكوارث الطبيعية.
- التلف أو العُطل الناتج عن التعديلات أو البدائل غير المصرح بها، أو إذا تم استخدامه لغرض غير المخصص له، أو أي تسريب للماء نظرًا لعدم تركيب المنتج بشكل صحيح.
- التلف أو العطل الناتج عن تيار كهربي أو جهد غير صحيح، أو أعمال السباكة. أو الاستخدام التجاري أو الصناعي، أو استخدام الملحقات، أو المكونات، أو مواد التنظيف المستهلكة غير المعتمدة من شركة LG.
- التلف الناتج عن النقل والتوصيل، بما في ذلك الخدوش، والاعوجاج، والشرائح، و/أو أي تلف آخر في تشطيب المنتج، ما لم تكن هذه التلفيات ناتجة عن عيوب المواد الخام أو التصنيع.
- تلف أو فقدان أي منتج مخصص للعرض، أو فُتح صندوقه، أو كان بسعر مخفض، أو تم تجديده.
- المنتجات التي لها أرقام تسلسلية أصلية وتم إزالتها، أو تغيرها، أو لا يمكن تحديدها بسهولة. رقم الطراز والأرقام التسلسلية، وفقًا لفاتورة مبيعات التجزئة الأصلية، مطلوبة للتحقق من الضمان.
- الزيادة في تكاليف المرافق ونفقاتها الإضافية.
- الإصلاحات عند استخدام المنتج بخلاف الاستخدام المنزلي العادي والمعتاد أو مخالفة التعليمات المذكورة في دليل المالك.
- التكاليف المتعلقة بنقل المنتج الخاص بك من المنزل لإصلاحه.
- إزالة المنتج وإعادة تركيبه إذا تم تركيبه في مكان لا يمكن الوصول إليه أو لم يتم تركيبه وفقًا لتعليمات التركيب المنشورة، في كل من دليل مالك LG وكتيبات دليل التركيب.
- التلف الناتج عن سوء الاستعمال، أو سوء الاستخدام، أو التركيب، أو الإصلاح، أو الصيانة. يتضمن الإصلاح غير المناسب استخدام أجزاء غير معتمدة أو محددة من قبل شركة LG.
- الضوضاء والاهتزاز الذي يعتبر طبيعيًا، على سبيل المثال: صوت تصريف الماء، أو صوت الدوران أو صوت صفافير الإنذار.

| | | |
|---|---|---|
| الفلتر مسدود<br>– عدم التسخين، وقت تجفيف طويل. |  | نظف فلتر الوبر. |
| توصيل سلك الطاقة بشكل غير صحيح أو وجود مشكلة في منفذ الكهرباء.<br>– لا يوجد طاقة<br>– التدفئة منعدمة | | أعد توصيل سلك الطاقة، أو استبدل مصهر المنزل أو أعد تعيين قواطع التيار. إذا وجدت مشكلة في منفذ الكهرباء، فقد تكون بحاجة إلى كهربائي. |

# رموز الخطأ

| الأعراض | السبب | الحل |
|---|---|---|
| dE | **تم فتح الباب في أثناء تشغيل الجهاز أو تم تشغيل الجهاز بدون أن يتم غلق الباب بشكل صحيح.** | • أغلق الباب تمامًا.<br>• في حال عدم تحرير dE اتصل بمركز الخدمة للحصول على المساعدة. |
| tE1 | **تعطل جهاز استشعار درجة الحرارة** | • افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة. |
| tE3 | | |

| الأعراض | السبب | الحل |
|---|---|---|
| **تسريبات الماء.** | **لم يتم توصيل خرطوم درج خزان الماء أو خرطوم التصريف بشكل صحيح.** | • قم بتوصيل خرطوم درج خزان الماء أو خرطوم التصريف بشكل صحيح. |
| | **تم إغلاق الباب في أثناء وجود غسيل أو مادة غريبة عالقة في الباب.** | • تحقق من وجود غسيل أو مادة غريبة عالقة في الباب قبل استخدام الجهاز. إذا كان الماء يتسرب باستمرار، اتصل بمركز معلومات عملاء LG Electronics. |
| **يوجد بقع رطبة على الملابس بعد استخدام برنامج جهاز استشعار التجفيف.** | **وجود حمولة كبيرة جدًا أو حمولة صغيرة جدًا. عنصر كبير مفرد مثل: بطانية أو لحاف.** | • قد يتعذر المستشعر في قراءة مستوى جفاف الحمولة إذا كانت الأغراض متماسكة بشدة أو متناثرة بشكل كبير. استخدم برنامج "التجفيف الموقوت" للحمولات الصغيرة جدًا.<br>• يمكن في بعض الأحيان أن تلف الأغراض ذات الأحجام الكبيرة والعريضة مثل البطّانيّات أو الألحفة حول بعضها داخل كرة محكمة من القماش. ستجف الطبقات الخارجية وستسجل على أجهز الاستشعار، في حين أن الجزء الداخلي سيظل رطبًا. عند تجفيف أغراض ذات أحجام كبيرة، فقد يساعد ذلك في إيقاف الدورة بشكل مؤقت مرة واحدة أو مرتين وإعادة ترتيب الغرض لكشف أي مناطق رطبة وإظهارها.<br>• لتجفيف قليل من الأغراض الرطبة من حمولة كبيرة الحجم أو قليل من البقع الرطبة على أغراض كبيرة بعد اكتمال برنامج جهاز استشعار التجفيف، قم بتفريغ فلتر الوبر، ثم اضبط برنامج التجفيف الموقوت لإنهاء تجفيف قطعة من الأغراض (الأغراض). |

| الأعراض | السبب | الحل |
|---|---|---|
| **وقت التجفيف ليس متوافق.** | **إعدادات التدفئة، أو حجم الحمولة، أو رطوبة الملابس غير متوافقة.** | • سوف يتغير وقت التجفيف للحمولة حسب نوع التدفئة المستخدمة (كهربيًا)، وحجم الحمولة، ونوع الأقمشة، ومستوى بلل الأقمشة، وفلتر الوبر. يمكن أن يسبب حتى عبئ غير متوازن يضعف الدوران، مما يسبب ملابس أكثر بللاً سوف تأخذ وقتًا أطول لتجف. |
| **البقع المكرمشة أو المتسخة المتروكة على الملابس.** | **عند استخدام المواد المنعمة للأقمشة بشكل غير صحيح.** | • عند غسل الغسيل الذي سيتم تجفيفه في الجهاز، استخدم الكمية الصحيحة من المواد المنعمة للأقمشة كما أوصت الشركة المصنعة لها. |
| | **عند تجفيف الملابس النظيفة والمتسخة معًا.** | • عند استخدام الجهاز في تجفيف الأغراض النظيفة فقط. يمكن نقل البقع من الملابس المتسخة إلى الملابس النظيفة في الحمولات نفسها أو في الحمولات اللاحقة. |
| | **عند تنظيف الملابس أو شطفها بشكل غير صحيح قبل وضعها في الجهاز.** | • يمكن أن تكون البقع الموجودة على الملابس الجافة هي نفسها البقع التي لم يتم إزالتها في أثناء عملية الغسيل. تأكد من أن الملابس تم تنظيفها أو شطفها بالكامل وفقًا لتعليمات الغسالة والمنظف الخاصين بك. قد تتطلب بعض البقع الصعبة معالجة مسبقة قبل الغسيل. |
| **كرمشة الملابس.** | **تم تجفيف الملابس لفترة طويلة جدًا (الإفراط في التجفيف).** | • يمكن أن يؤدي الإفراط في تجفيف حمولة الغسيل إلى ملابس مكرمشة. جرب وقت تجفيف أقصر. |
| | **تم ترك الملابس في الجهاز لفترة طويلة جدًا بعد نهاية الدورة.** | • استخدم خيار مقاوم الكرمشة. |
| **انكماش الملابس.** | **لم يتم اتباع تعليمات العناية بالملابس.** | • لتجنب انكماش ملابسك، استشر واتبع دائمًا تعليمات العناية بالقماش. سوف تنكمش بعض الأقمشة بطبيعة الحال عند غسلها. يمكن أن يتم غسل أقمشة أخرى ولكنها ستنكمش عند تجفيفها في الجهاز. استخدم إعداد التدفئة المنخفضة أو المعدومة. |
| **الوبر المتروك على الملابس.** | **لم يتم تنظيف فلتر الوبر بشكل صحيح.** | • قم بإزالة الوبر من فلتر الوبر قبل كل دورة. بإزالة الوبر، ابق فلتر الوبر مرتفعًا للإضاءة لترى إذا كان متسخًا أو مسدودًا. إذا كان يبدو متسخًا، اتبع تعليمات التنظيف. مع بعض الحمولات التي تنتج كمية كبيرة من الوبر، فيمكن أن يكون من الضروري تنظيف فلتر الوبر في أثناء الدورة. |
| **الوبر المتروك على الملابس.** | **لم يتم فرز الغسيل بشكل صحيح.** | • بعض المنتجات منتجة للوبر (أي: منشفة قطنية بيضاء مجعدة) ويجب تجفيفها بشكل منفصل عن الملابس التي يلتصق الوبر بها (أي: بنطلون كتان أسود). |
| | **الجهاز محمل بشكل مفرط.** | • قم بتقسيم الحمولات الكبيرة إلى حمولات صغيرة للتجفيف. |
| | **المناديل، والورق، وغيرها من الأشياء المتروكة في الجيوب.** | • تحقق من الجيوب جيدًا قبل تجفيف الملابس. |
| **الركود الزائد للملابس بعد التجفيف.** | **تم تجفيف الملابس لفترة طويلة جدًا (الإفراط في التجفيف).** | • يمكن أن يسبب الإفراط في تجفيف حمولة الغسيل في تراكم الكهرباء الساكنة. اضبط الإعدادات واستخدم أقصر وقت تجفيف، أو استخدم برامج جهاز استشعار التجفيف. |
| | **تجفيف المواد التركيبية، أو الضغط الدائم، أو المزيج الاصطناعي.** | • هذه الأقمشة بطبيعة الحال أكثر عرضة للتراكم الكهربي. جرب استخدام المواد المنعمة للأقمشة، أو استخدم إعدادات وقت تجفيف موقوتة أقصر. |

تم تزويد الجهاز بنظام رصد الخطأ آليًا لكشف المشكلات وتشخيصها في مرحلة مبكرة. وإذا لم يعمل الجهاز بشكل صحيح أو لم يعمل على الإطلاق، فتحقق من التالي قبل الاتصال بالخدمة:


## تشخيص المشكلات

| الأعراض | السبب | الحل |
|---|---|---|
| **الجهاز لا يعمل.** | **قد يكون سلك الطاقة غير موصل بشكل صحيح.** | • تأكد أن السلك موصل بشكل أمن في منفذ مؤرض متوافق مع لوحة بيانات الجهاز. |
| | **قد يكون ذلك نتيجة لتلف مصهر المنزل، أو فصل قاطع التيار في الدائرة أو انقطاع التيار الكهربي.** | • أعد ضبط قاطع التيار في الدائرة أو استبدل المصهر. لا تزد من مقدار التيار في المصهر. إذا كانت المشكلة هي الحمل الزائد على الدائرة الكهربية، فيجب تصحيح ذلك من قبل كهربائي مؤهل. |
| **الجهاز لا يسخن.** | **قد يكون ذلك نتيجة لتلف مصهر المنزل، أو فصل قاطع التيار في الدائرة أو انقطاع التيار الكهربي.** | • أعد ضبط قاطع التيار في الدائرة أو استبدل المصهر. لا تزد من مقدار التيار في المصهر. إذا كانت المشكلة هي الحمل الزائد على الدائرة الكهربية، فيجب تصحيح ذلك من قبل كهربائي مؤهل. |
| **الملابس تستغرق وقتًا طويلاً جدًا لتجف.** | **لا يتم فرز الحمولة بشكل صحيح.** | • افصل الأغراض الثقيلة عن الأغراض الخفيفة. الأغراض الأكبر والأثقل تأخذ وقتًا أطول لتجف. يمكن أن تخدع الأغراض الخفيفة المحملة مع الأغراض الثقيلة أجهزة الاستشعار نظراً لأن الأغراض الخفيفة تجف بشكل أسرع. |
| | **حمولة كبيرة من الأقمشة الثقيلة.** | • تستغرق الأقمشة الثقيلة وقتًا أطول لتجف لأنها تميل إلى الاحتفاظ أكثر بالرطوبة. للمساعدة في تقليل والمحافظة أكثر على اتساق أوقات التجفيف للأقمشة الكبيرة والثقيلة، افصل هذه الأغراض إلى حمولات أصغر من حجم متسق. |
| | **لم يتم تعيين عناصر التحكم في الجهاز بشكل صحيح.** | • استخدم إعدادات عناصر التحكم المناسبة لنوع الحمولة التي تجففها. قد تتطلب بعض الحمولات ضبط لإعداد مستوى التجفيف للحصول على التجفيف المناسب. |
| | **يحتاج فلتر الوبر إلى أن يتم تنظيفه.** | • قم بإزالة الوبر من فلتر الوبر قبل كل دورة. بإزالة الوبر، ابق فلتر الوبر مرتفعًا للإضاءة لترى إذا كان متسخًا أو مسدودًا. مع بعض الحمولات التي تنتج كمية كبيرة من الوبر، مثل مناشف الحمام الجديدة، فيمكن أن يكون من الضروري أن تتوقف الدورة بشكل مؤقت وتنظف الفلتر في أثناء الدورة. |
| | **قد يكون ذلك نتيجة لتلف مصهر المنزل، أو فصل قاطع التيار في الدائرة أو انقطاع التيار الكهربي.** | • أعد ضبط قاطع التيار في الدائرة أو استبدل المصهر. لا تزد من مقدار التيار في المصهر. إذا كانت المشكلة هي الحمل الزائد على الدائرة الكهربية، فيجب تصحيح ذلك من قبل كهربائي مؤهل. |
| | **الجهاز محمل بشكل مفرط.** | • قم بتقسيم الحمولات الكبيرة إلى حمولات صغيرة لأداء وكفاءة أفضل في التجفيف. |
| **الملابس تستغرق وقتًا طويلاً جدًا لتجف.** | **الجهاز تحت الحمولة المسموح بها.** | • إذا كنت تجفف حمولة صغيرة جدًا، قم بإضافة أغراض إضافية لضمان عمل الدوران بشكل صحيح. إذا كانت الحمولة صغيرة جدًا وكنت تستخدم برامج جهاز استشعار التجفيف، فيتعذر على التحكم الإلكتروني استشعار درجة الجفاف بشكل صحيح ويمكن أن يتوقف في وقت قريب جدًا. استخدم برامج التجفيف الموقوتة أو أضف بعض الملابس المبللة الإضافية إلى الحمولة. |


## تنظيف المكثف

يُعد المكثف أيضًا جزءًا مهمًا جدًا حيث أنه يؤثر على نتيجة كفاءة أداء التجفيف، ولذلك يحتاج إلى عناية خاصة منك. يوصى بأن يتم تنظيف المكثف ثلاث أو أربع مرات في السنة أو عندما يومض الرمز .


١ ادفع الغطاء وافتح غطاء التكثيف.

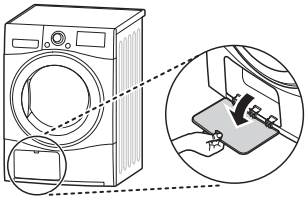

٢ افتح السدادة عن طريق تحويل رافعة التأمين.

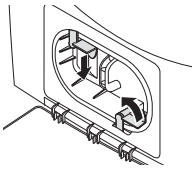

٣ اسحب المكثف إلى الخارج عن طريق إدخال أحد أصابعك داخل المقبض الصغير الموجود في الجزء الأمامي من المكثف. (يجب عدم استخدام القوة في أثناء سحب المكثف)

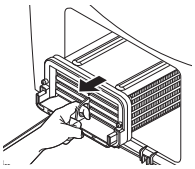


**ملاحظة**


- في حال ظهور الرمز  على شاشة العرض، قم بتنظيف المكثف في الحال.

٤ قم بتنظيف المكثف جيدًا تحت صنبور الماء، واحرص على أن يتدفق الماء داخله.



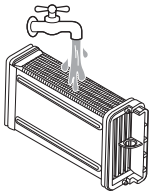

٥ ضع كل شيء في مكانه عن طريق اتباع التعليمات الموضحة بترتيب عكسي.

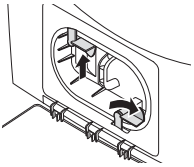

### تنبيه

- يجب أن يتم إغلاق رافعة التأمين بعد تنظيف المكثف كما هو موضح أعلاه.
- قد يتسبب التشغيل عندما يكون المكثف مسدود بالوبر في تلف الجهاز. يزيد ذلك أيضًا من استهلاك الطاقة.
- يجب عدم استخدام الأدوات الحادة لتنظيف المبادل الحراري. قد يتسبب ذلك في إلحاق الضرر أو في حدوث تسرب.
- يجب عدم تشغيل الجهاز مطلقًا بدون وجود مبادل حراري.


## تفريغ درج خزان الماء

يتم تجميع الماء المكثف في درج خزان الماء.


قم بتفريغ درج خزان الماء بعد كل عملية استخدام. عدم القيام بذلك سيؤثر على أداء عملية التجفيف.

إذا كان درج خزان الماء ممتلئ، فسيضيئ الرمز وسيصدر الجرس صوتًا في أثناء تشغيل الجهاز. إذا كان يجب أن يحدث ذلك، فيجب أن يتم تفريغ درج خزان الماء في غضون الساعة القادمة.

١ اسحب درج خزان الماء إلى الخارج.

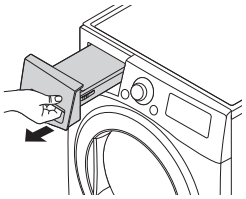

٢ قم بتفريغ درج خزان الماء في الحوض.

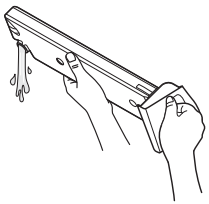


٣ ادفع الخزان مرة أخرى داخل الجهاز.

٤ اضغط على الزر **بدء/إيقاف مؤقت**.

## تنظيف شبكة الهواء البارد الداخلية

قم بتنظيف شبكات الهواء البارد الداخلية من ٣ إلى ٤ مرات في السنة للتأكد من عدم وجود تراكمات وبر أو أوساخ والتي قد تتسبب في تدفق الهواء بشكل غير صحيح.

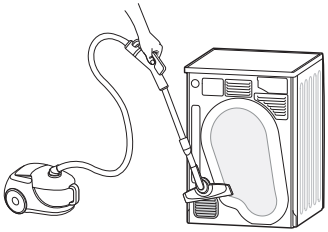


**ملاحظة**

- يتم التخلص من الهواء الدافئ من خلال شبكة التهوية.
- يجب أن يتم توفير التهوية الكافية لتجنب تدفق الغازات بشكل عكسي داخل الغرفة من وحدات حرق أنواع الوقود الأخرى، مثل إشعال النيران.

## مسح جهاز استشعار الرطوبة

يستشعر هذا الجهاز مستوى رطوبة الغسيل في أثناء التشغيل، وذلك يعني أنه يجب أن يتم تنظيفه بشكل منتظم لإزالة أي تراكم للرواسب الكلسية على سطح جهاز الاستشعار.

مسح أجهزة الاستشعار داخل حلة الغسل.

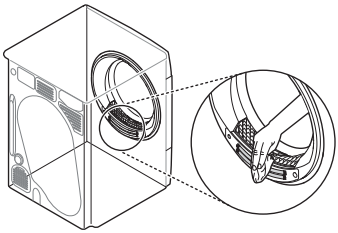

### تنبيه

- يجب عدم مسح جهاز استشعار الرطوبة باستخدام مواد كاشطة. قم دائمًا بتنظيف جهاز الاستشعار باستخدام الإسفنج الناعم.

## تحذير

يجب نزع قابس الطاقة عند تنظيف الجهاز. يمكن أن ينتج عن عدم إزالة القابس التعرض لصدمة كهربية.


## تنظيف فلتر الوبر

قم بتنظيف فلتر الوبر قبل كل دورة تجفيف. ويجب أيضًا أن يتم تنظيفه إذا أصبح الرمز مضيء وأصدر الجرس صوتًا في أثناء تشغيل الجهاز.


ستقلل عملية تنظيف فلتر الوبر من وقت التجفيف واستهلاك الطاقة.

١ افتح الباب.


٢ أزل فلتر الوبر.

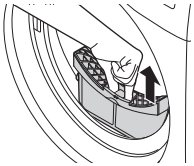


٣ افتح فلتر الوبر وقم بازالة جميع الوبر.

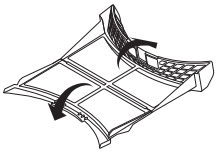

٤ اشطف الفلتر من الوبر باستخدام صنبور ماء دافئ.

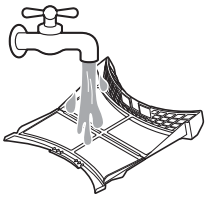

٥ جفف فلتر الوبر بشكل تام، وأغلق فلتر الوبر وأعد تركيبه.

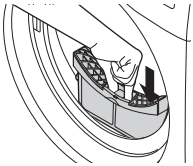

**ملاحظة**

- يجب تجفيف الرطوبة من الشبكة. خلاف ذلك، قد ينسد فلتر الوبر بسبب الغشاء المائي وقد لا يعمل الجهاز.
- إذا لم يكن فلتر الوبر مثبت بالجهاز، فلن تتمكن من تشغيل الجهاز.


# استخدام وظيفة Smart Diagnosis™

استخدم هذه الوظيفة إذا كنت بحاجة إلى تشخيص دقيق من مركز معلومات عملاء LG Electronics عند تعطل المنتج أو توقفه عن العمل.

يتعذر تنشيط Smart Diagnosis™ إلا عند توصيل الجهاز بالطاقة. إذا تعذر تشغيل الجهاز، فينبغي تنفيذ استكشاف المشكلات وإصلاحها باستخدام Smart Diagnosis™.

١ اضغط فوق زر **الطاقة** لتشغيل الغسالة. لا تضغط على أي أزرار أخرى ولا تقم بتدوير مقبض تحديد البرنامج.


٢ إذا تم توجيهك إلى القيام بذلك من خلال مركز الاتصال، فضع صوان التكلم في هاتفك بالقرب من زر **الطاقة**.

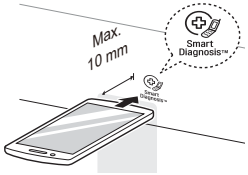


٣ اضغط مع الاستمرار على الزر **More Time (وقت أكثر)** لمدة ثلاث ثوانٍ، مع الاحتفاظ بجزء التحدث على الهاتف نحو الرمز Smart Diagnosis™ والزر **الطاقة**.

٤ أبق الهاتف في مكانه حتى تنتهي نغمة النقل. ويتم عرض الوقت المتبقي لنقل البيانات.

- للحصول على أفضل النتائج، لا تحرك الهاتف في أثناء نقل النغمات.
- إذا لم يتمكن موظف مركز الاتصال من الحصول على تسجيل دقيق للبيانات، فقد يطلب منك إعادة المحاولة.

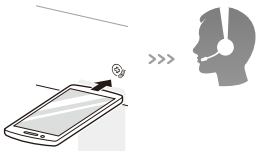

٥ بمجرد انتهاء العد التنازلي وتوقف النغمات، تابع محادثتك مع وكيل مركز الاتصال الذي سيتمكن من مساعدتك باستخدام المعلومات المرسلة للتحليل.

**ملاحظة**

- تعتمد وظيفة Smart Diagnosis™ على جودة المكالمة المحلية.
- سوف يتحسن أداء الاتصال ويمكنك تلقي خدمة أفضل في حالة استخدام هاتف المنزل.
- إذا كان نقل بيانات Smart Diagnosis™ رديئًا بسبب تدني جودة المكالمة، فقد لا تتلقى أفضل خدمة Smart Diagnosis™.


## استخدام وظيفة Tag On

يمكنك بسهولة استخدم وظيفة Smart Diagnosis™ للاتصال بوكيل الجهاز مباشرة بواسطة الهاتف الذكي.

- يمكن استخدام وظيفة Tag On مع معظم الهواتف الذكية المزودة بوظيفة NFC (الاتصال بالحقل القريب) وتعمل بنظام التشغيل Android OS فقط.

**تثبيت التطبيق**

- ابحث عن تطبيق LG SmartThinQ في متجر Google Play على هاتفك.

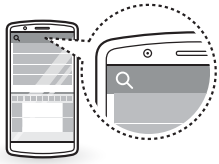

**ملاحظة**

- اضغط على ? في تطبيق LG SmartThinQ للحصول على دليل أكثر تفصيلاً بشأن كيفية استخدام وظيفة Tag On.
- قد تختلف عملية تنشيط NFC، وفقًا للشركة المصنعة للهاتف الذكي وإصدار نظام التشغيل Android. راجع دليل الهاتف الذكي للحصول على التفاصيل.
- بسبب خصائص NFC، إذا كانت مسافة الإرسال بعيدة جدًا، أو في حالة وجود ملصق معدني أو غلاف واقٍ على الهاتف، فلن يكون الإرسال جيدًا. في بعض الحالات، قد لا تتمكن الهواتف المزودة بخاصية NFC من الإرسال بنجاح.
- قد يختلف المحتوى الموجود في هذا الدليل وفقًا لإصدار تطبيق LG SmartThinQ، وقد يتم تعديله دون إبلاغ العملاء.

## استخدام الجهاز

يتيح لك تطبيق LG SmartThinQ استخدام ميزات مختلفة لضمان راحتك.

- تحميل الدورة
- Smart Diagnosis™
- تعيين دورة Tag On
- إحصائيات الغسيل

## Damp Dry Signal (اشارة التجفيف الرطب)

باستخدام هذا الخيار، سيصدر الجهاز صوت جرس عندما تصبح الحمولة جاهزة للكي.
يتيح لك ذلك إزالة الأغراض ذات الوزن الخفيف التي يتم تجفيفها بشكل أسرع أو الأغراض التي ستحتاج إلى كيها أو تعليقها بينما تكون هذه الأغراض مبتلة قليلاً.

١ قم بتشغيل الجهاز.

٢ حدد برنامج.

٣ اضغط على زر **Dry Level (مستوى التجفيف)** وحدد مستوى.

٤ اضغط على الزر **Option (اختيار)** وحدد **Damp Dry Signal (اشارة التجفيف الرطب)**.

٥ اضغط على الزر **بدء/إيقاف مؤقت**.

٦ عندما يصبح الغسيل جاهزًا للكي، سيصدر الجرس صوتًا لمدة دقيقة واحدة تقريبًا.

٧ اضغط على الزر **بدء/إيقاف مؤقت** وافتح الباب.

٨ أخرج الغسيل الذي تريد أن تقوم بكيه. (اترك الغسيل الآخر في الجهاز.)

٩ أغلق الباب ثم اضغط على الزر **بدء/إيقاف مؤقت**.

يتوفر جرس للغسيل الرطب الجاف في برامج تم تحديدها في الجدول أدناه.

| البرنامج | مستوى الجفاف |
|---|---|
| Cotton (القطن) | Extra (عالي)/Very (اكثر) Cupboard(عادي)/Light(اقل) |
| Mix (أقمشة مختلطة) | Very(اكثر)/Cupboard(عادي) |
| Easy Care (العناية السهلة) | Cupboard (عادي) |

## Child Lock (قفل الأطفال) (🔒)

حدد هذه الوظيفة لقفل الأزرار في لوحة التحكم لمنع التلاعب بها.

### قفل لوحة التحكم

١ اضغط مع الاستمرار على الزر **Dry Level (مستوى التجفيف)** لمدة ٣ ثوانٍ.

٢ سيصدر صوت صافرة، وسيظهر L على شاشة العرض.

- عند ضبط **Child Lock (قفل الأطفال)**، يتم قفل جميع الأزرار باستثناء الزر **الطاقة**.

### ملاحظة

- لن يؤدي إيقاف تشغيل الطاقة أو إكمال جميع الدورات إلى إعادة ضبط وظيفة قفل الأطفال. يجب إلغاء تفعيل القفل للأطفال لتتمكن من الوصول إلى أي وظائف أخرى.

### إلغاء قفل لوحة التحكم

اضغط مع الاستمرار على الزر **Dry Level (مستوى التجفيف)** لمدة ٣ ثوانٍ.

- سيصدر صوت جهاز الإخطار وسيظهر الوقت المتبقي للبرنامج الحالي على شاشة العرض.

## Buzzer (إشارة)

يتيح لك هذا الخيار ضبط مستوى صوت جهاز الإخطار.

# خيارات البرامج

## Delay End (تأخير الوقت)

يمكنك استخدام خيارات "تأخير" لتأخير انتهاء دورة التجفيف، مع العلم أن أقصى مدة تأخير هي ١٩ ساعة وأقل مدة تأخير هي ٣ ساعات.

١ قم بتشغيل الجهاز.

٢ حدد برنامج.

٣ اضغط على الزر **Delay End (تأخير الوقت)**.

٤ اضبط ساعة (ساعات) التأخير بالضغط على الزر **More Time (وقت أكثر)** أو الزر **Less Time (وقت أقل)**.

٥ اضغط على الزر **بدء/إيقاف مؤقت**.

## Anti Crease (إزالة التجاعيد) ( )

يمنع خيار "ضد التجاعيد" الكرمشة التي تحدث عندما لا يتم تفريغ الغسيل بشكل سريع في نهاية الدورة. عندما يتم اختيار خيار **Anti Crease (إزالة التجاعيد)**، يعمل الجهاز ويتوقف مؤقتًا بشكل متكرر، مما يعمل على توفير ساعتين لتفريغ الغسيل. إذا تم فتح الباب في أثناء تشغيل خيار ضد التجاعيد، فسيتم إلغاء الخيار.

## Favorite (PGM مخصص)

يسمح لك الخيار المفضل بتخزين برنامج تجفيف مخصص للاستخدام المستقبلي.

١ قم بتشغيل الجهاز.

٢ حدد برنامج.

٣ حدد الخيار أو البرنامج الإضافي (Anti Crease (إزالة التجاعيد), Temp. (درجة الحرارة) إلخ.)

٤ اضغط مع الاستمرار على زر الخيار **Favorite (PGM مخصص)** لمدة ٣ ثوانٍ.

تم تخزين الخيار المفضل الآن للاستخدام المستقبلي. لإعادة استخدام البرنامج المخزن، حدد الخيار **Favorite (PGM مخصص)** واضغط على زر **بدء/إيقاف مؤقت**.

## Drum Light (ضوء الحوض)

في أثناء تشغيل الجهاز من الممكن أن تقوم بالنظر داخل حلة الغسل إذا قمت بتحديد الوظيفة **Drum Light (ضوء الحوض)**.

- تشغيل الضوء : الباب مفتوح.
- إيقاف تشغيل الضوء : الباب مغلق. تم غلق الضوء تلقائيًا.

## Temp. (درجة الحرارة)

يضبط إعداد درجة الحرارة من "منخفض للغاية" إلى "مرتفع". وهذا يسمح بوجود رعاية فائقة للأقمشة والملابس.

- اضغط على الزر **Temp. (درجة الحرارة)** بشكل متكرر للتمرير عبر الإعدادات المتاحة.

## Option (اختيار)

### Gentle (ناعم)

تحافظ هذه الوظيفة على الملابس في حالة رطبة بشكل أكثر من مستوى تجفيف الكي القياسي.

١ قم بتشغيل الجهاز.

٢ حدد برنامج.

٣ اضغط على الزر **Dry Level (مستوى التجفيف)** وحدد **Iron (رطب)**.

٤ اضغط على الزر **Option (اختيار)** وحدد **Gentle (ناعم)**.

٥ اضغط على الزر **بدء/إيقاف مؤقت**.

يتوفر الكي اللطيف في برامج تم تحديدها في الجدول أدناه.

| البرنامج | مستوى الجفاف |
|---|---|
| Cotton (القطن) | Iron (رطب) |
| Mix (أقمشة مختلطة) | |
| Easy Care (العناية السهلة) | |

| برامج جهاز استشعار الجفاف | | | |
|---|---|---|---|
| **البرنامج** | **نوع الغسيل** | **التفاصيل** | **مستوى التجفيف** |
| **Quick Dry (تجفيف سريع)** | الملاءات والمناشف (باستثناء غسيل ناعم) والملابس الرياضية ودورة غسيل الأحجام الكبيرة. | مناسب للحمولات الصغيرة من الأقمشة التي تتناسب مع أوقات التجفيف القصيرة | - |
| **Sports Wear (الملابس الرياضية)** | طقم كرة القدم وملابس التدريب | مناسب للملابس المصنوعة من البوليستر | - |
| **Delicate (الملابس الناعمة)** | الحرير والأقمشة الناعمة والملابس الداخلية للسيدات | مناسب للأقمشة التي تتأثر بالحرارة، مثل الأقمشة الصناعية | - |
| **Wool (الصوف)** | Wool (الصوف) | مناسب للأقمشة الصوفية | - |

| برامج التجفيف الموقوت | | | |
|---|---|---|---|
| **البرنامج** | **نوع الغسيل** | **التفاصيل** | **مستوى التجفيف** |
| **Gentle Air (هواء لطيف)** | الحرير والصوف والملابس الداخلية الناعمة الخاصة بالسيدات | يعمل على ترطيب الملابس بدون استخدام التجفيف | - |
| **Cool Air (هواء بارد)** | جميع الأقمشة التي تحتاج إلى ترطيب | يستخدم بدون حرارة | - |
| **Warm Air (هواء حار)** | مناشف الحمام وبرانس الحمام وفوطة الصحون والأقمشة المبطنة الأكريليكة | يستخدم للأغراض الصغيرة والملابس المبللة والأغراض اليومية المناسبة للتجفيف الحراري | - |

## تنبيه

- إذا كانت الحمولة أقل من ١ كجم، الرجاء استخدام برنامج **Warm Air (هواء حار)** في برامج التجفيف الموقوت. يجب أن يتم تجفيف الأغراض الصوفية باستخدام برنامج **Wool (الصوف)** ويجب أن يتم تجفيف الأقمشة التي تتأثر بدرجة الحرارة بما في ذلك الحرير، والملابس الداخلية والملابس الداخلية للسيدات باستخدام برنامج **Delicate (الملابس الناعمة)**. الرجاء الالتزام بحمولة الغسيل الموصى بها عند تحديد البرنامج الذي ترغب في تشغيله. خلاف ذلك، قد تتلف ملابسك.

**ملاحظة**


- قم بضبط البرنامج على "Cotton (القطن) Light (اقل) High (عالي) (بحمولة كاملة أو بنصف حمولة)" لإجراء الاختبار بموجب الاتساق مع المواصفة القياسية السعودية رقم SASO ٢٨٨٣.
- برنامج القطن القياسي: خيار Cotton (القطن) + Light (اقل) + High (عالي)
  - (تُعد هذه البرامج أكثر فاعلية من حيث ظروف الاختبار المقترحة من المواصفة القياسية السعودية رقم SASO ٢٨٨٣).
  - (تُناسب تجفيف الغسيل القطني متوسط البلل).
  - (تُعد أكثر البرامج فاعلية من حيث استهلاك الطاقة لتجفيف الغسيل القطني المبلل).
- تعتمد نتائج الاختبار على درجة حرارة الغرفة، ونوع الحمولة وحجمها، وعسر الماء ودرجة حرارة الماء المدخلة.
- إذا تم تركيب الجهاز بطريقة مدمجة، فقد يتسبب ذلك في ضعف الأداء.
- في حال عدم دوران الغسيل عند سرعة عالية أثناء الغسيل، فسيزداد استهلاك الطاقة ووقت التجفيف.

# جدول البرامج

## برنامج التجفيف

| برامج جهاز استشعار الجفاف | | | |
|---|---|---|---|
| البرنامج | نوع الغسيل | التفاصيل | مستوى التجفيف |
| Cotton (القطن) | المناشف والبشاكير وملاءات الأسرة | مناسب للأقمشة السميكة والمبطنة | Extra (عالي) |
| | الفوط ومناشف الشاي والمناشف وملاءات الأسرة | مناسب للأقمشة السميكة والمبطنة التي لا تحتاج إلى أن يتم كيها | Very (اكثر) |
| | مناشف الحمام ومناشف الشاي والملابس الداخلية والجوارب القطنية | مناسب للأقمشة التي لا تحتاج إلى أن يتم كيها | Cupboard (عادي) |
| | الأغطية، وأكياس الوسادات والمناشف | مناسب للأقمشة التي لا تحتاج إلى أن يتم كيها | Light (اقل) |
| | ملاءات الأسرة، ومفارش المائدة، والمناشف، والقمصان الخارجية، وقمصان البولو وملابس العمل | مناسب للأقمشة التي تحتاج إلى أن يتم كيها | Iron (رطب) |
| Mix (أقمشة مختلطة) | ملاءات السرير ومفارش المائدة والملابس الخاصة برياضة الجري والملابس الرياضية والبطانيات | مناسب للأقمشة السميكة والمبطنة التي لا تحتاج إلى أن يتم كيها | Very (اكثر) |
| | القمصان والبلوزات | مناسب للأقمشة التي لا تحتاج إلى أن يتم كيها | Cupboard (عادي) |
| | البنطلونات والفساتين والتنورات والبلوزات | مناسب للأقمشة التي تحتاج إلى أن يتم كيها | Iron (رطب) |
| Easy Care (العناية السهلة) | القمصان والتي شيرتات والبنطلونات والملابس الداخلية والجوارب | مناسب للأقمشة النايلون والأكليرك والمصنوعة من البوليستر التي لا تحتاج إلى أن يتم كيها | Cupboard (عادي) |
| | القمصان والتي شيرتات، والملابس الداخلية والملابس الرياضية والجوارب | مناسب للأقمشة النايلون والأكليرك والمصنوعة من البوليستر التي تحتاج إلى أن يتم كيها | Iron (رطب) |
| Bulky Item (للأحمال الكبيرة) | ملابس النوم الأغطية | مناسب للأغراض ذات الأحجام الكبيرة | - |
| Jeans (جينز) | جينز والملابس ذات الألوان الخافتة. | مناسب للجينز الذي لا يحتاج إلى أن يتم كيه | - |
| Soft Care (العناية الناعمة) | التي شيرتات وأكياس الوسادات والمناشف | مناسب للأقمشة القطنية التي لا تحتاج إلى أن يتم كيها | - |

# لوحة التحكم

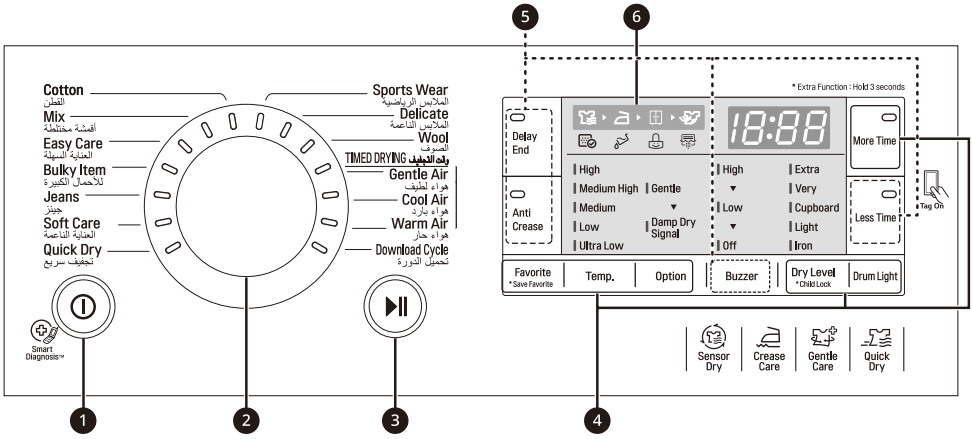


**1 زر الطاقة**

- اضغط على زر **الطاقة** للتشغيل وإيقاف التشغيل.
- اضغط على زر **الطاقة** لإلغاء وظيفة تأخير الوقت.

**2 محدد البرنامج**

- تتوفر البرامج وفقًا لنوع الغسيل.
- سيضيئ المصباح للإشارة إلى البرنامج المحدد.

**3 زر بدء/إيقاف مؤقت**

- يُستخدم الزر **بدء/إيقاف مؤقت** مؤقت هذا لبدء دورة تجفيف أو لإيقافها مؤقتًا.
- عندما يكون الجهاز في وضع إيقاف مؤقت، يتم فصل الطاقة تلقائيًا بعد ٦٠ دقيقة.

**4 أزرار برامج إضافية**

- استخدم هذه الأزرار في تحديد خيارات الدورة المطلوبة للبرنامج المحدد.

**5 الخيارات**

- يسمح لك هذا بتحديد خيارات إضافية وسيضيئ عندما يتم تحديده.

**6 شاشة العرض**

- : يشير هذا الرمز إلى وجوب تنظيف فلتر الوبر أو إنه مسدود.
  - إشعار التنظيف: عند الضغط على زر **الطاقة**، فإنه سيتم عرض الرمز.
  - إشعار الانسداد: سيتم عرض هذا الرمز مع سماع صوت الجرس بينما يكون الجهاز قيد التشغيل.
- : يشير هذا الرمز إلى أن درج خزان الماء يحتاج إلى أن يتم تفريغه أو أنه ممتلئ.
  - إشعار التفريغ: عندما تضغط على زر **الطاقة**، فإنه سيتم عرض هذا الرمز.
  - إشعار الامتلاء بالماء: سيتم عرض هذا الرمز وسيصدر الجرس صوتًا أثناء تشغيل الجهاز.
- : يشير هذا الرمز إلى أنه يجب تنظيف المكثف. إن تم عرض الرمز، فقم بتنظيف المكثف في الحال.

٧ أغلق الجهاز.

- اضغط على الزر **الطاقة**.

## تنبيه

- كن حذرًا! قد تظل حلة الغسيل من الداخل ساخنة.
- لا يجب أن يتم استخدام الجهاز لأغراض أخرى غير تلك التي تم تصميمه من أجلها.

**ملاحظة**

- يحدث الجزء الأخير في دورة تجفيف الملابس بدون تسخين (دورة تبريد) لضمان أن الغسيل تم تركه في درجة حرارة تضمن عدم إتلافه.
- قد يزيد كلاً من مناخ درجة الحرارة العالي وغرفة صغيرة من وقت التجفيف بالإضافة إلى استهلاك الطاقة.

# فرز الغسيل

تُعد الملابس مزودة ببطاقات عناية بالغسيل الخاصة بها، ولذا يوصي بالتجفيف وفقًا لبطاقات العناية بالغسيل.

ليس هذا فقط، يجب فرز الغسيل وفقًا لنوع الألياف وحجمها.

لأفضل أداء تجفيف ولأكثر كفاءة في استخدام الطاقة، لا تفرط في حمولة الجهاز.

### الملابس الصوفية

قم بتجفيف الملابس الصوفية على برنامج الصوف. تأكد من اتباع رموز ملصق العناية بالألياف أولاً. قد يتم تجفيف الصوف بالكامل في الدورة، لذا لا تقم بتكرار التجفيف. اسحب الملابس الصوفية إلى شكلها الأصلي وجففها على سطح مستوٍ.

### المواد المنسوجة والمحيكة

يمكن أن تنكمش بعض الأغراض المنسوجة والمحيكة، وفقًا لجودتها.

### الطبعة الدائمة والألياف الصناعية

لا تزيد من حمولة الجهاز. أخرج الأغراض ذات الطبعات الدائمة بمجرد توقف الجهاز للحد من الكرمشة.

### ملابس الأطفال وقمصان النوم

تحقق دائمًا من بطاقات العناية بالقماش

### الأغراض المطاطية والبلاستيكية

- لا تجفف أي أغراض مصنوعة من مطاط أو بلاستيك أو تحتوي عليهما مثل:
  - الأغطية الواقية، والمرايل، وأغطية الكراسي
  - الستائر ومفارش المائدة
  - سجاد الحمام

### الأقمشة المصنوعة من الألياف الزجاجية

- يجب عدم تجفف أغراض الأقمشة المصنوعة من الألياف الزجاجية في الجهاز. يمكن أن تلتقط ملابسك جزيئات الزجاج المتروكة في الجهاز في وقتٍ لاحق في دورات لاحقة.


| الرمز | الوصف |
|---|---|
|  | Dry (التجفيف) |
|  | مجفف الملابس |
|  | الطبعة الدائمة / مقاوم الكرمشة |
|  | لطيف / غسيل ناعم |
|  | لا تستخدمي التنظيف الجاف |
|  | لا تجفف |
|  | تدفئة عالية |
|  | تدفئة متوسطة |
|  | تدفئة منخفضة |
|  | لا يوجد تدفئة / هواء |
|  | الخط الجاف / التعليق الجاف |
|  | التنقيط الجاف |
|  | التجفيف على سطح مستوٍ |
|  | في الظل |

## استخدام الجهاز


قبل الدورة الأولى، قم بضبط الجهاز على التجفيف لمدة خمس دقائق لتهيئة حلة الغسيل. افتح الباب بين عدد مرات التحميل في المرات الأولى القليلة التي تستخدم فيها الجهاز لتساعد في تبديد الروائح الكريهة من داخل الجهاز.

١ تأكد من نظافة فلتر الوبر ودرج خزان الماء.

- يوجد فلتر الوبر داخل حافة الباب. يحتاج إلى التنظيف قبل كل دورة تجفيف.
- افتح الباب وتأكد أن فلتر الوبر نظيف. إذا لم يكن كذلك، الرجاء تنظيف فلتر الوبر.

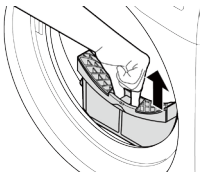

- تحقق أيضًا إذا كان درج خزان الماء يحتاج إلى أن يتم تفريغه للحصول على أفضل نتائج تجفيف.

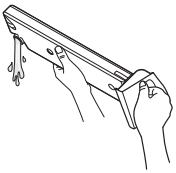

### تحذير

- لا تشرب الماء المكثف

**ملاحظة**

- في بعض الحالات، قد تعرض LED نافذة (رمز المياه فارغة) وقد يتوقف الجهاز لأن درج خزان الماء ممتلئ.

٢ ضع الغسيل داخل الحلة بعد الفرز.

- يجب فرز الملابس حسب نوع الألياف ومستوى التجفيف ويجب ربط جميع السلاسل والأحزمة وتثبيتها بشكل جيد قبل وضعها في الحلة. ادفع الغسيل إلى الخلف لتجعله بعيدًا عن سدادة الباب. خلاف ذلك، قد تتلف سدادة الباب والملابس. أغلق الباب.

### تنبيه

- احرص على عدم وضع الغسيل في مكان يحجز بين الباب والسدادة المطاطية.


٣ قم بتشغيل الطاقة.

- اضغط على الزر **الطاقة**. سوف يضيء رمز المؤشر فوق الزر، مما يشير إلى أن الجهاز تم تعيينه على التشغيل.



٤ حدد برنامج التجفيف الذي تريده.

- يمكنك اختيار برنامج عن طريق تحويل مقبض تحديد البرنامج حتى تتم الإشارة إلى البرنامج المطلوب.
- إذا قمت بالضغط على الزر **بدء/إيقاف مؤقت** مؤقت بدون تحديد برنامج، فسوف يعمل الجهاز على برنامج **Cotton (القطن)**. الرجاء مراجعة جدول البرنامج للحصول على معلومات مفصلة.

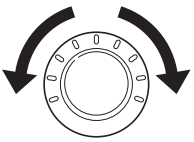

٥ اضغط على الزر **بدء/إيقاف مؤقت**.




٦ بعد انتهاء الدورة، افتح الباب وقم بإزالة الغسيل.


## تصريف الماء المكثف

عادةً، يتم ضخ الماء المكثف إلى درج خزان الماء حيث يتم تجميع الماء إلى أن يتم تفريغه يدويًا. يمكن أيضًا أن يتم تصريف الماء مباشرةً إلى أنابيب المياه، خاصةً عندما يتم وضع المجفف أعلى الغسالة. باستخدام مجموعة توصيل لخرطوم أنابيب التصريف، ببساطة قم بتغيير مسار الماء وإعادة توجيه مرفق الصرف الصحي كما هو موضح أدناه:


١ قم بإخراج مجموعة التوصيل.

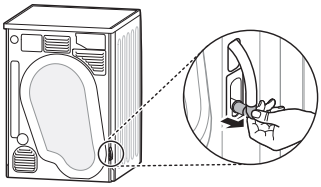

٢ افصل خرطوم درج خزان الماء من المجموعة.

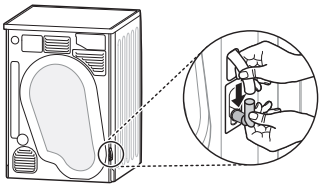

٣ وصّل خرطوم التصريف بالمجموعة.

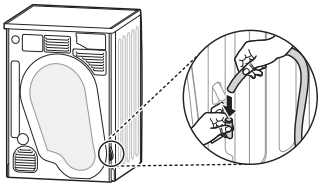



## ضبط مستوى الجهاز

يمنع ضبط مستوى الجهاز الضوضاء والاهتزاز غير الضروري. ضع الجهاز على أرضٍ صلبة ومستوية.

إذا كان الجهاز غير مستوٍ بشكل صحيح، فقم بضبط أقدام التسوية الأمامية حسب الضرورة.

قم بلفها في اتجاه عقارب الساعة للرفع وعكس اتجاه عقارب الساعة للخفض حتّى يختفي تأرجح الجهاز، في كل الاتجاهات من الأمام إلى الخلف وجنبًا إلى جنب ومن الزاوية إلى الزاوية.

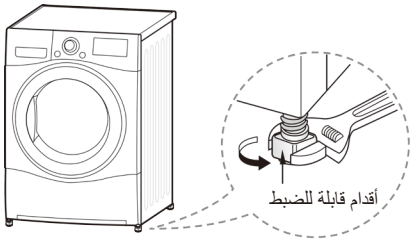

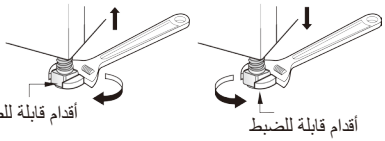

### الفحص القطري

عند الضغط على حواف اللوحة العلوية للجهاز بشكل قطري لأسفل، يجب ألا يتحرك الجهاز لأعلى ولأسفل على الإطلاق (افحص كلا الاتجاهين). وفي حالة اهتزاز الجهاز عند دفع اللوحة العلوية بشكل قطري، قم بضبط الأقدام مرة أخرى.

## طريقة التركيب


١ ضع مجفف LG فوق غسالة LG.

٢ قم بإزالة المسمارين من قاعدة الغطاء الخلفي من كل جانب كما هو موضح أدناه.

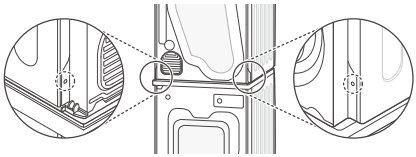


٣ قم بمحاذاة ثقوب رف التجميع وثقوب الغطاء الخلفي.

- ٣-١) ٦٠٠ ملم

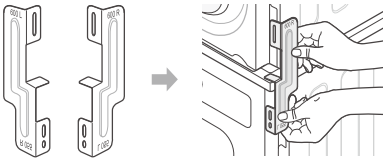

- ٣-١) ٥٥٠ ملم

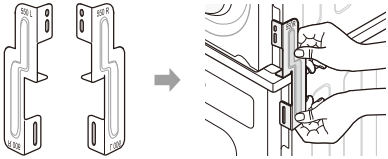

٤ قم بربط المسمارين الذين قمت بإزالتهم مؤخرًا من المجفف لرف التجميع.

٥ استخدم المسامير الأربعة الموجودة في صندوق الملحقات [٠,٦ بوصة (١٦ ملم)] لتركيب غطاء الجزء الخلفي للغسالة ورف التجميع.

٦ ستكون طريقة تركيب الجانب المقابل هي الطريقة نفسها.

## ⚠ تحذير

- يمكن أن يسبب التركيب الخاطئ حوادث خطيرة.
- يجعل وزن الجهاز وارتفاع التركيب إجراء عملية التجميع خطير جدًا لشخص واحد. يجب تنفيذ هذا الإجراء بواسطة اثنين أو أكثر من الموظفين المؤهلين.
- الجهاز غير مناسب للتركيب المدمج. الرجاء عدم التركيب كجهاز مدمج.
- لا تقم بالتشغيل إذا لم يتم وضع الجهاز بشكل صحيح.

## تحذير

- تجنب تركيب الجهاز بالقرب من مصدر حرارة. يجب أن تكون التهوية جيدة في الجزء الخلفي للجهاز. قد ينتج عن الفشل في اتباع هذه التعليمات حدوث مشكلات.
- يجب ألا يتم تركيب الجهاز بجانب جهاز تبريد.
- لم يتم تصميم الجهاز للاستخدام البحري أو للاستخدام في المنشآت المتنقلة مثل القوافل والطائرات وما إلى ذلك.

### التوصيلات الكهربائية

- لا تستخدم سلك إطالة ولا محولاً مزدوجًا.
- قم دائمًا بفصل الجهاز بعد الاستخدام.
- يتعين توصيل الجهاز بمقبس مؤرض وفقًا للوائح توصيل الأسلاك الكهربائية.
- يجب وضع الجهاز بحيث يمكن الوصول إلى القابس بسهولة.


## تعليمات تركيب رف التجميع

يمكن وضع المجفف الخاص بك أعلى غسالة LG وتثبيته بأمان باستخدام رف التجميع. يجب أن يتم القيام بهذا التركيب من قبل موظفي خدمة مؤهلين لضمان أنه تم التركيب بشكل صحيح.



سيضمن لك موظفو الخدمة المؤهلين أن لديك رف التجميع الصحيح المناسب لطراز غسالتك وسيضمنون أنه تم تثبيتها بقوة. لهذه الأسباب، يُعد قيام الخبير بالتركيب أمرًا ضروريًا.

### رف التجميع

للتجميع، يلزم رف تجميع LG.

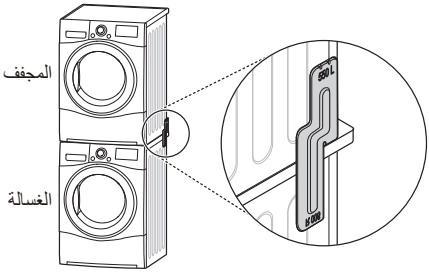



قد يتم وضع هذا المجفف أعلى غسالة LG فقط. لا تحاول أن تضع هذا المجفف أعلى أي غسالة أخرى، لأنه قد يقع ضرر أو إصابة أو تلف ممتلكات.
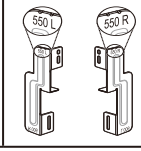
| | حجم اللوحة العلوية للغسالة | |
|---|---|---|
| | ٥٥٠ ملم | ٦٠٠ ملم |
| **اتجاه الشكل والتركيب** |   |   |

# تركيب مكان التركيب

## الموقع

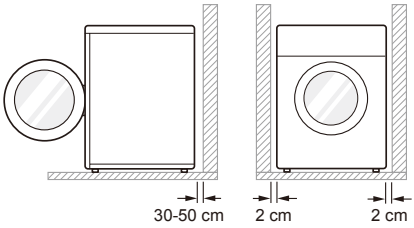


**أرضية مستوية**: المنحدر المسموح به تحت الجهاز بأكمله يكون بدرجة ١°.

**مأخذ الطاقة**: يجب أن يكون بطول ١,٥ متر على أحد جانبي موقع الجهاز.

- لا تزد الحمل على مأخذ الطاقة باستخدام أكثر من جهاز.

**المساحة الإضافية**: البُعد عن الحائط، من ٣٠ إلى ٥٠ سم: الجهة الخلفية /٢ سم: الجانبان الأيمن والأيسر

- لا تضع منتجات الغسيل ولا تخزنها فوق الجهاز في أي وقت. قد تُتلف هذه المنتجات تشطيب الغسالة أو عناصر التحكم.

**ملاحظة**

- للحصول على أداء تجفيف أفضل، يُرجى جعل الجزء الخلفي للجهاز بعيدًا عن الحائط.
- لا تقم بتركيب الجهاز في مكان يوجد به خطر التعرض للصقيع والغبار.
- قد لا يكون الجهاز قادرًا على العمل بشكل صحيح أو قد يتلف بسبب تجمد الماء المكثف في خرطوم التجفيف والمضخة.
- لا تقم بتركيب الجهاز بجانب جهاز ذو درجة حرارة عالية مثل الثلاجة أو الفرن أو الموقد إلخ، والتي يمكن أن تتسبب في إضعاف أداء التجفيف ومدة البرنامج وتؤثر بالسلب على الأداء السليم للضاغط. ويُعد أفضل أداء للجهاز في غرفة درجة حرارتها ٢٣ درجة مئوية.


## تحديد المكان

- قم بتركيب الجهاز على أرضية صلبة ومسطحة.
- تأكد من عدم إعاقة السجاد أو البُسُط أو ما إلى ذلك لدوران الهواء حول الجهاز.
- لا تحاول أبدًا تصحيح أي عدم استواء في الأرضية باستخدام قطع من الخشب أو الورق المقوى أو مواد مشابهة تحت الجهاز.
- لا تركب الجهاز في غرف يمكن أن تصل درجة حرارتها إلى التجمد، حيث يمكن أن تنفجر الخراطيم المتجمدة تحت الضغط. يمكن أن تقل كفاءة وحدة التحكم الإلكترونية في ظل درجات الحرارة الأقل من درجة التجمد.
- في حالة الحصول على الجهاز في الشتاء وكانت درجات الحرارة أقل من درجة التجمد، فضع الجهاز في درجة حرارة الغرفة لبضع ساعات قبل تشغيله.
- يرجى التأكد عند تركيب الجهاز من سهولة وصول المهندس إليه في حالة تعطله.
- عند تركيب الجهاز، يتعين عليك تعديل الأقدام الأربعة مستخدمًا مفتاح ربط لمسامير النقل للتأكد من استقرار الجهاز، ووجود مسافة بمقدار ٢٠ مم بين قمة الجهاز والجزء السفلي لأي سطح عمل أعلاها.

## متطلبات التهوية

- القبو أو تحت العداد
  - التأكد من تدفق الهواء بمعدل ٣,١٧ م٣/دقيقة عبر الجهاز
- الخزانة
  - يجب أن يكون للخزنة فتحتان (مائلتان)، وكل واحدة منها بها مساحة ٣٨٧ سم٢ وتكون موجودة على بعد ٨ سم من أسفل وأعلى الباب.

## المواصفات

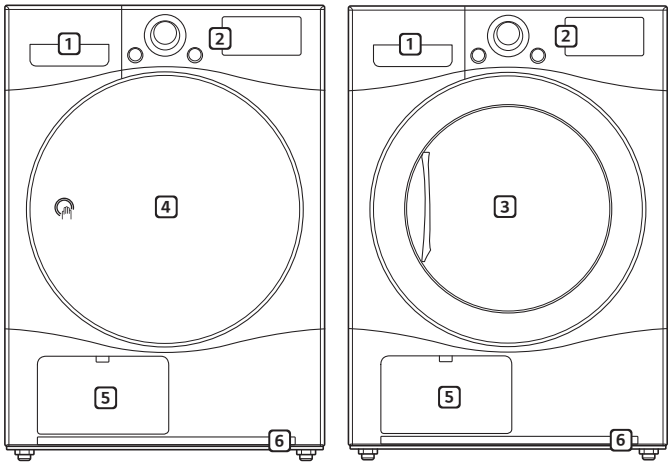


1. درج خزان الماء
2. لوحة التحكم
3. باب زجاجي
4. باب غير شفاف
5. غطاء المكثف
6. شبكة التهوية

| الطراز | RC٧٠٦٦A١F / RC٧٠٦٦G٢F |
|---|---|
| مصدر الطاقة | ٢٢٠ فولت~، ٦٠ هرتز |
| الحجم | ٦٠٠ مم (عرض) × ٦٤٠ مم (عمق) × ٨٥٠ مم (ارتفاع) |
| وزن المنتج | ٤٣ - ٤٦ كجم |
| **الحد الأقصى للسعة** | **٧ كجم** |
| الطاقة المقدرة | ٢,٢٠٠ واط |
| استهلاك الطاقة السنوي | ٥٠٤ كيلو واط/ساعة |
| بلد المنشأ | صنع في كوريا |


- يمكن تغيير الشكل والمواصفات دون إخطار لتحسين جودة الجهاز.

## الملحقات (اختياري)

الرجاء الاتصال بمركز معلومات عملاء LG Electronics للشراء.



خرطوم تصريف الماء المكثف
وحامل الخرطوم



رف التجميع

**التخلص**

- قبل التخلص من جهاز قديم، قم بفصله. اقطع الكابل الموجود خلف الجهاز مباشرةً لمنع سوء استخدامه.
- تخلص من جميع مواد التعبئة (مثل أكياس البلاستيك ومادة الستايروفوم) بعيدًا عن متناول الأطفال، إذ يمكن لمواد التغليف أن تسبب الاختناق.
- قم بإزالة الباب قبل التخلص من هذا الجهاز تفاديًا لخطر احتباس الأطفال أو الحيوانات الصغيرة بداخله.

- افصل الطاقة عن الجهاز قبل تنظيفه. لا يؤدي ضبط عناصر التحكم إلى إيقاف أو إلى وضع الاستعداد إلى فصل الطاقة عن هذا الجهاز.
- لا تقم برش الماء داخل الجهاز أو خارجه لتنظيفه.
- احرص دائمًا على عدم فصل الطاقة عن الجهاز من خلال شد كابل الطاقة. ولإخراج قابس الطاقة من مقبس الخرج احرص دائمًا على الإمساك به بإحكام قبل أن تقوم بجذبه في وضعية مستقيمة.

**السلامة الفنية لاستخدام مجفف**

- لا تجفف الأغراض غير المغسولة في الجهاز.
- يجب استخدام المواد المنعمة للقماش أو للمنتجات المشابهة كما هو محدد بتعليمات المواد المنعمة للقماش.
- أفرغ جميع الأغراض من الجيوب مثل القداحات والثقاب.
- لا توقف أبدًا الجهاز قبل انتهاء دورة التجفيف ما لم يتم إزالة جميع الأغراض بسرعة ونشرها بحيث تتبدد الحرارة.
- لا يتم استخدام الجهاز في حالة استعمال المواد الكيميائية الصناعية في التنظيف.
- لا يجب تنظيف الأغراض مثل المطاط الرغوي (رغوة مطاطية) أو قبّاعات الاستحمام أو المنسوجات المضادة للمياه أو الأغراض والملابس المدعومة بالمطاط أو الوسائد المزودة بحشيات المطاط الرغوي في الجهاز.
- لا تشرب الماء المكثف فقد يؤدي شربها إلى الإصابة بالأمراض التي تنقلها الأغذية.
- يجب أن يتم تنظيف فلتر الوبر بشكل متكرر.
- يجب عدم السماح للوبر بالتجمع حول الجهاز.
- لا تقم برش سائل التنظيف الجاف مباشرة في الجهاز أو تستخدم الجهاز في تجفيف الملابس التي بها آثار لسائل التنظيف الجاف.
- لا تقم بتجفيف الملابس الملوثة ببقع لمواد زيتية. لا يمكن التخلص نهائيًا من البقع الناتجة عن مواد زيتية (بما فيها زيوت الطعام) حتى بعد أن يتم غسلها بالماء.
- لا ينبغي إمداد الجهاز بالطاقة عن طريق جهاز فصل ووصل خارجي، مثل المؤقت، أو توصيله بدائرة كهربائية يتم تشغيلها وإيقاف تشغيلها بواسطة أداة.
- أخرج الملابس من الجهاز فورًا عند اكتمال عملية التجفيف أو عند فصل الطاقة عن الجهاز أثناء عملية التجفيف. قد يتسبب ترك الملابس التي تم تجفيفها في الجهاز دون مراقبة في حدوث حريق. قد تتسبب الملابس التي تم إخراجها بعد التجفيف في حدوث حريق. أخرج الملابس فورًا بعد تجفيفها، ثم قم بتعليقها أو ضع الملابس على سطح مستو لتجف.

- تجنب إصلاح أو استبدال أي جزء من الجهاز. يجب إجراء جميع التصليحات والخدمة من خلال موظف خدمة مؤهل إلا إذا أوصى دليل المالك الحالي بغير ذلك بشكل محدد. استخدم فقط أجزاء المصنع المعتمدة.
- حافظ على المنطقة الموجودة أسفل الجهاز وحوله خالية من المواد القابلة للاحتراق مثل الوبر، والورق، وقطع القماش، والمواد الكيميائية، وما إلى ذلك.
- لا تضع الحيوانات الحية مثل الحيوانات الأليفة داخل الجهاز.
- لا تترك باب الجهاز مفتوحًا. حيث يمكن أن يتعلق الأطفال بالباب أو يزحفوا إلى داخل الجهاز، مما قد يسبب التلف أو التعرض للإصابة.
- لا تقترب أبدًا من الجهاز في أثناء تشغيله. انتظر حتى تتوقف حلة الغسل تمامًا.
- لا تضع أو تغسل أو تجفف الأغراض النظيفة، أو المغسولة، أو المنقوعة، أو الملطخة بالمواد المتفجرة أو القابلة للاحتراق (مثل الشمع، والبنزين، والطلاء، والجازولين، ومزيل الشحوم، ومذيبات التنظيف الجاف، والكيروسين، والزيوت النباتية، وزيوت الطهي، وما إلى ذلك.). حيث يمكن أن يتسبب الاستخدام غير السليم في نشوب حريق أو وقوع انفجار.
- في حال حدوث فيضان، افصل مقبس الطاقة واتصل بمركز LG Electronics لمعلومات العملاء.
- لا تضغط على الباب للأسفل بشدة عندما يكون باب الجهاز مفتوحًا.
- استخدم الخرطوم الجديد أو مجموعة الخراطيم الجديدة المرفقة مع الجهاز. علمًا بأن إعادة استخدام الخراطيم القديمة قد يؤدي إلى تسرب المياه وبالتالي تلف الممتلكات.
- يجب عدم لمس الباب أثناء البرامج ذات درجة الحرارة المرتفعة.
- لا تستخدم غازًا قابلاً للاشتعال أو مواد قابلة للاحتراق (البنزين، والجازولين، وسائل تخفيف الدهان "التنر"، والمواد البترولية، والكحول، وما إلى ذلك) بالقرب من الجهاز.
- لا يمكنك استخدام خرطوم التصريف أو خرطوم الإدخال في حالة تجمدهما خلال فصل الشتاء إلا بعد الذوبان.
- احفظ جميع منظفات الغسيل، والمواد المنعمة، والمبيضات بعيدًا عن متناول الأطفال.
- تجنب لمس قابس الطاقة أو عناصر التحكم في الجهاز بيدين مبتلتين.
- احرص على عدم ثني كابل الطاقة بشكل مفرط أو وضع شيء ثقيل عليه.

**الصيانة**

- أدخل قابس الطاقة بإحكام في مقبس الخرج بعد إزالة أي رطوبة أو غبار بشكل كامل.

**التركيب**

- تأكد من تركيب الجهاز، وتأريضه، وضبطه بشكل صحيح، عن طريق موظفي الخدمة المؤهلين وفقًا لتعليمات التركيب.
- لا تحاول أبدًا تشغيل هذا الجهاز إذا كان تالفًا، أو به عطل، أو مفككًا بشكل جزئي، أو به أجزاء مفقودة أو محطمة، بما في ذلك سلك أو قابس تالف.
- عند نقل هذا الجهاز ، ينبغي توفر شخصين أو أكثر للإمساك به بإحكام.
- تجنب تركيب الجهاز في أماكن الرطوبة والغبار. تجنب تركيب أو تخزين الجهاز في الهواء الطلق أو في مساحة معرضة للتأثيرات الجوية كضوء الشمس المباشر أو الرياح أو المطر أو درجات الحرارة دون درجة التجمد.
- أحكم ربط خرطوم التصريف لتجنب فصله.
- في حالة تلف سلك الطاقة أو ارتخاء فتحة المقبس، لا تستخدم سلك الطاقة واتصل بمركز خدمة معتمد.
- لا تقم بتوصيل مقابس متعددة أو كبل تمديد للطاقة أو محول بهذا الجهاز.
- يجب عدم تركيب هذا الجهاز خلف باب قابل للقفل، أو باب منزلق، أو باب مزود بمفصلة على الجانب المقابل للجهاز، حيث يؤدي هذا إلى إعاقة فتح باب الجهاز بالكامل.
- يجب تأريض هذا الجهاز. في حالة حدوث أي خلل أو عطل، سيحد التأريض من خطر التعرض لصدمة كهربائية من خلال توفير مسار أقل مقاومة للتيار الكهربائي.
- يأتي هذا الجهاز مزودًا بسلك طاقة يحتوي على موصل تأريض للجهاز وقابس طاقة بوصلة تأريض. يجب توصيل قابس الطاقة بمقبس تيار مناسب مثبت ومؤرض وفقًا لجميع القوانين واللوائح المحلية.
- يمكن أن يؤدي توصيل موصل حماية غير مناسب إلى خطر التعرض لصدمة كهربائية. استشر كهربائيًا أو موظف خدمة مؤهلاً إذا كان لديك أي شك حول ما إذا كان الجهاز مؤرضًا بشكل صحيح أم لا.
- لا تقم بتعديل قابس الطاقة المتوفر مع الجهاز. إذا لم يكن القابس مناسبًا لمأخذ التيار، فيمكنك تثبيت مأخذ تيار مناسب من خلال كهربائي مؤهل.

**التشغيل**

- لا تحاول فصل أي لوح من الألواح أو فك الجهاز. لا تستخدم أي أدوات حادة على لوحة التحكم لتشغيل الجهاز.

# إرشادات السلامة

يتمثل الغرض من إرشادات السلامة التالية في الحيلولة دون وقوع المخاطر غير المتوقعة أو الأضرار الناجمة عن التشغيل غير الآمن أو غير الصحيح للمنتج.
يتم تقسيم الإرشادات إلى "تحذير" و"تنبيه" على النحو الموضح أدناه.

⚠ يتم عرض هذا الرمز للإشارة إلى الأمور وعمليات التشغيل التي يمكن أن تسبب مخاطر، فاحرص على قراءة الجزء الذي يحمل هذا الرمز بعناية واتبع الإرشادات لتجنب المخاطر.

⚠ **تحذير**

يشير هذا إلى أن عدم اتباع الإرشادات قد يسبب وقوع إصابة خطيرة أو الوفاة.

⚠ **تنبيه**

يشير هذا إلى أن عدم اتباع الإرشادات قد يتسبب في وقوع إصابة طفيفة أو تلف الجهاز.

## إرشادات السلامة الهامة

⚠ **تحذير**

**لتقليل مخاطر وقوع انفجار، أو نشوب حريق، أو حدوث وفاة، أو التعرض لصدمة كهربية، أو حدوث إصابة، أو حروق للأشخاص عند استخدام الجهاز، يجب اتباع احتياطات السلامة الأساسية، بما فيها ما يلي:**

### الأطفال بالمنزل

هذا الجهاز غير مخصص لاستخدام الأفراد (بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية، أو ليس لديهم خبرة ومعرفة، ما لم يتم الإشراف عليهم أو تقدم لهم الإرشادات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم، كذلك يجب الإشراف على الأطفال للتأكد من عدم عبثهم بالجهاز.

# جدول المحتويات

قد يحتوي هذا الدليل على صور أو محتوى يختلف عن الطراز الذي قمت بشرائه.
يخضع هذا الدليل للمراجعة من الشركة المصنّعة.


**إرشادات السلامة ..... ٣**
إرشادات السلامة الهامة ..... ٣

**التركيب ..... ٨**
المواصفات ..... ٨
الملحقات (اختياري) ..... ٨
تركيب مكان التركيب ..... ٩
تعليمات تركيب رف التجميع ..... ١٠

**التشغيل ..... ١٣**
استخدام الجهاز ..... ١٣
فرز الغسيل ..... ١٤
لوحة التحكم ..... ١٥
جدول البرامج ..... ١٦
خيارات البرامج ..... ١٨

**الوظائف الذكية ..... ٢٠**
استخدام وظيفة Tag On ..... ٢٠
استخدام الجهاز ..... ٢٠
استخدام وظيفة ™ Smart Diagnosis ..... ٢١

**الصيانة ..... ٢٢**
تنظيف فلتر الوبر ..... ٢٢
تفريغ درج خزان الماء ..... ٢٣
تنظيف شبكة الهواء البارد الداخلية ..... ٢٣
مسح جهاز استشعار الرطوبة ..... ٢٣
تنظيف المكثف ..... ٢٤

**الصيانة ..... ٢٥**
تشخيص المشكلات ..... ٢٥
رموز الخطأ ..... ٢٨

**الضمان ..... ٢٩**

LG
Life's Good

دليل المالك

# المجفف



**قبل البدء في تركيب الجهاز، اقرأ هذه التعليمات بعناية. حيث سيبسط ذلك عملية التركيب ويضمن تركيب الجهاز بشكل صحيح وآمن. واحتفظ بهذه التعليمات بالقرب من المنتج بعد التركيب للرجوع إليها في المستقبل.**

**AR** العربية **EN** **ENGLISH**

RC7066A1F
RC7066G2F



MFL70442614
Rev.02_040419

www.lg.com

حقوق النشر ٢٠١٩ إل جي للالكترونيات. كل الحقوق محفوظة