LG
Life's Good

ENGLISH

SIMPLE MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit
http://www.lg.com and then download Owner's Manual.
Some of the content in this manual may differ from your unit.


MODEL

SL4

MFL71380165
2105_Rev02

www.lg.com

Copyright © 2020-2021 LG Electronics Inc. All Rights Reserved.




Front Panel



⏻ (Standby) ····· Switches the unit ON or OFF.
F (Function) ····· Selects function.
−/+ (Volume) ····· Adjusts volume.

Rear Panel

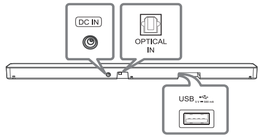

DC IN ····· Connect to the AC adapter.
OPTICAL IN ····· Connect to an optical device.
USB Port ····· Connect to a USB device.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.


1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
2. Turn on the sound bar.
   - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's yellow - green LED turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.


1. Press **PAIRING** on the rear of the wireless subwoofer.
   - The yellow - green LED on the front of the wireless subwoofer blinks quickly. (If the yellow - green LED does not blink, press and hold the **PAIRING**.)
2. Turn on the sound bar.
   - Pairing is completed. The yellow - green LED on the front of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.




TV Connection

1. Connect the sound bar to the TV using Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.



Additional Device Connection

1. Connect to the external device like as follow.

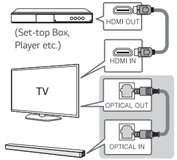


2. Set the input source by pressing **F** repeatedly.

Remote control



Replacement of Battery



⏮/⏭: Skip/Search
⏯: Play/Pause
- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press ⏯ and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.
- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ∧/∨: Searches a folder.
⏻**:** Displays the information of a file, an input source or connected **Bluetooth** device name.
- **Auto Power ON/OFF:** Long press ⏻ and press it again.

: Adjusts sound level of each speaker.
REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power consumption	Refer to the main label.
AC adapter	• Model : DA-38A25 • Manufacturer : Asian Power Devices Inc. • Input : 100 - 240 V ~ 50 - 60 Hz • Output : 25 V ⎓ 1.52 A • Model : MS-Z1520R250-038A0-P • Manufacturer : MOSO POWER SUPPLY TECHNOLOGY CO., LTD. • Input : 100 - 240 V ~ 50/60 Hz • Output : 25 V ⎓ 1.52 A
Dimensions (W x H x D)	Approx. 890.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS Output power)	300 W RMS

Design and specifications are subject to change without notice.

Declaration of Conformity

CE

Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://www.lg.com/global/support/cedoc/cedoc≡

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

LG
Life's Good

簡易手冊

無線 Sound Bar


操作播放器前，請細心閱讀本說明書並予以保留作日後參考之用。
要查看進階功能，請瀏覽 http://www.lg.com 並下載使用者手冊。
本手冊中的某些內容可能不適用於此裝置上。

型號
SL4


MFL71380165
2105_Rev02

www.lg.com
版權所有 © 2020-2021 LG Electronics Inc. 保留一切權利。

中文




前面板



⏻ (待命) ····· 待機/啟動。
F (功能) ····· 選擇功能。
—/+ (音量) ····· 調節音量。

後面板

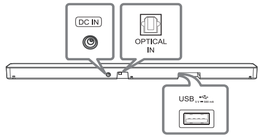

DC IN ····· 連接 AC 電源轉接器。
OPTICAL IN ····· 連接至光纖裝置。
USB 連接埠 ····· 連接至 USB 裝置。

無線超低音揚聲器連接

把無線超低音揚聲器放置在Sound Bar附近並按照以下步驟操作。

❶ 把Sound Bar及無線超低音揚聲器的電源線連接到電源插座。
❷ 開啓Sound Bar。
- 音響與無線超低音揚聲器將**自動**連接。超低音揚聲器黃色-綠色 LED 燈會亮起。


無線超低音揚聲器手動連接

若無線超低音揚聲器未能發出聲響，嘗試手動連接。

❶ 按下無線超低音揚聲器後方 **PAIRING** 按鈕。
- 無線超低音揚聲器前方黃色-綠色 LED 燈快速閃動。（如黃色-綠色 LED 燈無閃動，按住 **PAIRING** 按鈕。）


❷ 開啓Sound Bar。
- 配對完成。無線超低音揚聲器前方黃色-綠色 LED 燈會亮起。

請將 Sound Bar 和無線超低音揚聲器放置在離其他裝置（例如無線路由器、微波爐等等）1米以上的位置，避免無線干擾。




電視連接

❶ 透過光纖將 Sound Bar 連接至電視。
❷ 在您的電視設定功能表上設定 [外置揚聲器（光纖）]。



額外裝置連接

❶ 依照下圖連接外接裝置。

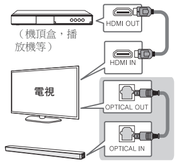

❷ 重複按下 **F** 設定輸入資源。

遙控器




⏮/⏭: 跳過/搜索
⏯: 播放/暫停
- **藍牙連接鎖 (BT LOCK):** 重複按 **F** 可選擇 **Bluetooth** 功能。 長時間按下 ⏯ 並再次按下，以限制 Bluetooth 連結 BT 與 LG TV。

SOUND EFFECT: 選擇音效模式。
- **電視遙控:** 先按住**SOUND EFFECT** 鍵並再次按下，以使用電視遙控。

FOLDER ∧/∨: 搜索資料夾。
ⓘ: 顯示檔案資訊、輸入資源或已連結**Bluetooth** 設備名稱。
- **自動開機/關機:** 先按住 ⓘ 並再次按下。

🔊: 調校每個揚聲器的音量。
REPEAT: 重複或隨機播放你的檔案。

更換電池



其他資訊

規格

耗電	請參閱主標籤。
AC 轉接器	• 型號：DA-38A25 • 製造商：Asian Power Devices Inc. • 電源輸入：100 - 240 V ~ 50 - 60 Hz • 電源輸出：25 V ⎓ 1,52 A
	• 型號：MS-Z1520R250-038A0-P • 製造商：MOSO POWER SUPPLY TECHNOLOGY CO., LTD. • 電源輸入：100 - 240 V ~ 50/60 Hz • 電源輸出：25 V ⎓ 1,52 A
尺寸 (寬 x 高 x 深)	大約 890.0 mm X 57.0 mm X 85.0 mm 連腳
匯流排電源供應 (USB)	5 V ⎓ 500 mA
擴音器（總RMS輸出功率）	300 W RMS

設計和規格如有任何變更，恕不另行通知。

符合性聲明

CE

在此，LG電子聲明 無線Sound Bar類型的的無線電設備符合 2014/53/EU指令。你可以從以下互聯網地址獲得歐盟符合性聲明的全文：

http://www.lg.com/global/support/cedoc/cedoc#

為使用者著想，安裝和使用設備時，設備須和身體之間保持最少20厘米距離。

安全注意事項

本機的插頭握柄是專爲本產品所設計,且與附設的電源線為一體,若您因爲任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定,將插頭確實地與電源線結合。