

SIMPLE MANUAL

HIGH POWER SPEAKER
SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
RL2




Precautions on handling a battery

- This unit has a built-in valve regulated lead-acid rechargeable battery (12 V/7.0 Ah)
- Do not use the battery in a closed room or near fire.
- Charge the battery under the charging condition specified.
- If any corrosion of the terminals, leakage or deformation of the case of the battery is found, do not use the battery.
- If the battery leaks, while protecting your hands or clothing, remove the battery from the device and should be extremely careful not to infect the skin or eyes.
- If the battery leaks and the liquid inside spills on the skin or clothing, immediately wash it off with plenty of clean water. If the liquid splashes into eyes, immediately flush the eyes with plenty of clean water and consult a doctor.
- Avoid mixed usage of batteries differing in type, manufacturer or history of use.
- Do not throw the battery in fire nor heat the battery.
- Do not short of battery terminals.
- Do not attempt to disassemble, remodel or destroy the battery.
- Do not place the battery near a child.
- The battery can be replaced. If you need to charge your battery more and more frequently, it might be time to replace it. The battery should be serviced by LG Electronics customer care center.
- Charge fully before storing a battery which has not been in use for a long period and turn ON/OFF switch off (OFF). Store the battery in a cool, dry place.
- During storage of the battery, charge it at least once every three months. If the battery is stored for a long period without being charged, its battery life may be shortened.
- The used battery must be recycled or disposed of separately from household waste.




Top Panel

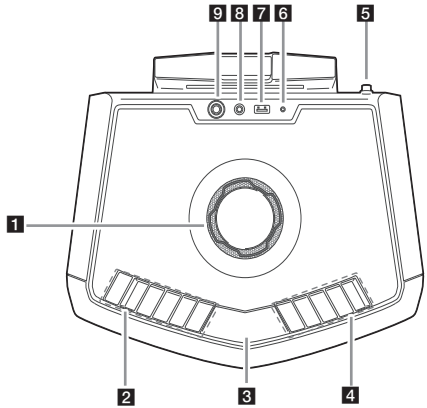

- 1 MASTER VOLUME / MULTI JOG**
- Adjusts speaker volume.
- Selects vocal effects.
- 2** (Standby)
Turns the power on or off.
- MIC (Microphone) VOL. (Volume)**
Adjusts microphone volume with **MASTER VOLUME / MULTI JOG**.
- VOCAL EFFECTS**
Selects various vocal effects mode.
- MIC ECHO / VOICE CANCELLER**
- Selects ECHO mode.
- You can reduce the vocal tones during music playback from various input sources by pressing and holding.

- KEY CHANGER**
Changes the key to suit your vocal range with **MASTER VOLUME / MULTI JOG**.
- LIGHTING**
Selects the lighting mode.
- 3** Display window
- 4 F (Function)**
Selects the function and input source.
- KK/FF** (Skip/Search)
- Skips Fast backward or Forward.
- Searches for a section within a file.
- Selects the radio stations.
- II** (Play/Pause) **PRESET**
- Starts or pauses playback.
- Chooses a preset number for a radio station.
- Stores radio stations.
- SOUND EFFECT / REPEAT**
- Chooses sound impressions.
- Listens to your files repeatedly or randomly by pressing and holding.
- 5** FM antenna
- 6 BATTERY**
Battery charging indicator
- 7** USB port
You can play sound files by connecting the USB device.
- 8 AUX IN**
Connects a portable device.
- 9 MIC (Microphone) jack**
Connects a microphone.

Rear Panel

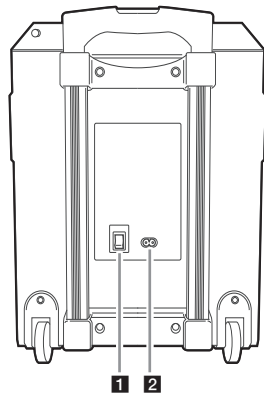


- 1** Power ON/OFF switch
Switches the unit ON or OFF.
(Battery can be charged even when this unit is in off (OFF) status.)
- 2** AC in socket
- ! Fully charge the device before using.


Carrying the unit

The unit has wheels and a handle so you can easily move the unit.

1. Press the lock button on the handle.

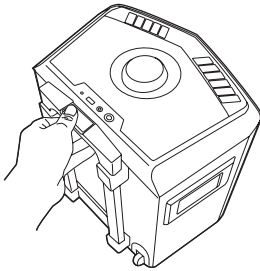

2. Pull the handle up.

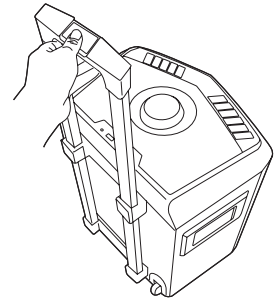

3. Release the lock button to lock the handle in place.

! To retract the handle, press the button and push down.

Additional Information

Specifications

General

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 353 mm x 420 mm x 292 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	50 W RMS

Battery

Battery type	12 V/7.0 Ah (Valve Regulated Lead-Acid rechargeable battery)
Operating time	Approx. 15 hours (Based on fully charging the battery and continuous playback using 50 % volume level.) It may vary depending on the battery status and operational conditions.
Charging time	Approx. 9 hours It may vary depending on the battery status and operational conditions.

Design and specifications are subject to change without notice.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

MANUAL SIMPLE

SISTEMA DE ALTAVOZ DE ALTA POTENCIA

Lea este manual detenidamente antes de utilizar su equipo y guárdelo para futuras consultas.
Para ver las instrucciones de las características avanzadas, visite <http://www.lg.com> y descargue el Manual del propietario. Ciertos contenidos de este manual pueden no coincidir con los de su unidad.

MODELO
RL2




Precauciones para la manipulación de baterías

- Esta unidad incluye una batería recargable con ácido de plomo regulada por una válvula. (1.2 Vcc 7,0 A/h)
- No utilice la batería en una habitación cerrada o cerca del fuego.
- Cargue la batería bajo las condiciones de carga especificadas.
- Si observa corrosión de los terminales, fugas o deformación de la carcasa de la batería, no la utilice.
- Si la batería tiene fugas, al tiempo que protege sus manos o ropa, retire la batería del dispositivo y tenga mucho cuidado de no infectar la piel o los ojos.
- Si la batería tiene fugas y el líquido del interior se vierte sobre la piel o la ropa, lávela inmediatamente con abundante agua limpia.
- Si el líquido salpica a los ojos, lávese inmediatamente los ojos con agua abundante y consulte a un médico.
- Evite la mezcla de baterías de diferentes tipos, fabricantes o historial de uso.
- No arroje la batería al fuego ni la caliente.
- No cortocircuite los terminales de las baterías.
- No intente desensamblar, modificar o destruir la batería.
- No coloque la batería cerca de los niños.
- La batería puede cambiarse. Si necesita cargar la batería más y con más frecuencia, quizás debería reemplazarla. El servicio de la batería deberá realizarlo el servicio técnico de LG Electronics.
- Cargue completamente una batería antes de guardar una batería que no se ha utilizado por un periodo de tiempo prolongado y apague el interruptor ON/OFF (OFF). Guarde la batería en un lugar fresco y seco.
- Durante el almacenamiento de la batería, cárguela al menos una vez cada tres meses. Si la batería está almacenada sin ser cargada, su vida puede acortarse.
- La batería utilizada debe reciclarse o eliminarse por separado de los residuos domésticos.




Panel superior

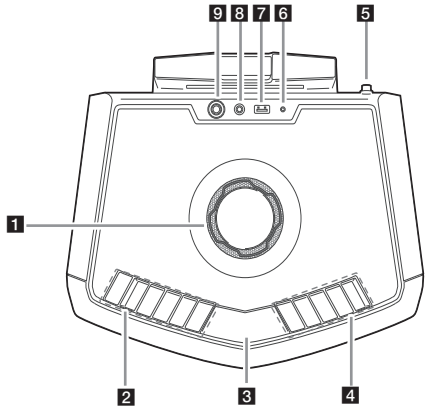

- 1 MASTER VOLUME / MULTI JOG**
- Ajusta el volumen del altoparlante.
- Selecciona los efectos vocales.
- 2** (Reposo)
Enciende o apaga la alimentación.
- MIC** (Micrófono) **VOL.** (Volumen)
Ajusta el volumen del micrófono con **MASTER VOLUME / MULTI JOG**.
- VOCAL EFFECTS**
Selecciona el modo de varios efectos modales.
- MIC ECHO / VOICE CANCELLER**
- Selecciona el modo ECHO.
- Puede reducir los tonos vocales durante la reproducción de música desde varias fuentes de entrada.
- 3** Ventana de visualización
- 4 F** (Función)
Selecciona la función y fuente de entrada.
KK/▷ (Saltar/Buscar)
- Avanza o retrocede rápidamente.
- Busca una sección dentro de un archivo.
- Selecciona las estaciones de radio.
▷ (Reproducción/Pausa) **PRESET**
- Inicia la reproducción o la pone en pausa.
- Escoge un número preconfigurado para una estación de radio.
- Almacena las estaciones de radio.
- SOUND EFFECT/REPEAT**
- Elige impresiones de sonido.
- Escucha sus archivos repetida o aleatoriamente al presionar y mantener presionado.
- 5** Antena FM
- 6 BATTERY**
Indicador de carga de la batería
- 7** Puerto USB
Puede reproducir archivos conectando el dispositivo USB.
- 8 AUX IN**
Conecta a un dispositivo portátil.
- 9** Toma del **MIC** (Micrófono)
Conecte un micrófono.

Panel posterior

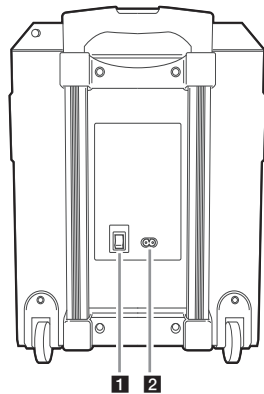


- 1** Interruptor de encendido/apagado
Enciende o apaga la unidad.
(La batería se puede cargar incluso cuando la unidad está apagada (OFF).)
- 2** Toma de entrada corriente alterna
- ! Cargue el dispositivo completamente antes de usarlo.


Transporte de la unidad

La unidad tiene ruedas y un asa para que pueda moverla con facilidad.

1. Pulse el botón de bloqueo del asa.

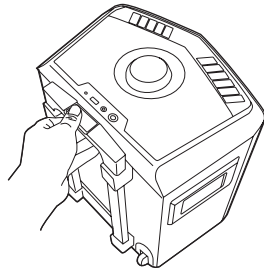

2. Tire del asa.

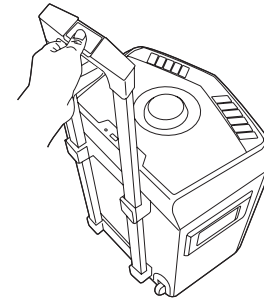

3. Suelte el botón de bloqueo para fijar el asa.

! Para retraer el asa, pulse el botón y apriete.

Información adicional

Especificación

General

Requisitos de alimentación	Consulte la etiqueta principal de la unidad.
Consumo de energía	Consulte la etiqueta principal de la unidad.
Dimensiones (A x Alt x F)	Aprox. 353 mm x 420 mm x 292 mm
Alimentación bus (USB)	5 V 500 mA
Amplificador (potencia de salida valor cuadrático medio total)	50 W RMS

Batería

Tipo de batería	1.2 Vcc 7,0 A/h (Batería recargable de ácido de plomo regulada por válvula)
Tiempo de funcionamiento	Aprox. 1.5 horas. (Con la batería totalmente cargada y reproducción continua con un nivel de volumen del 50 %.) Puede variar dependiendo del estado de la batería y las condiciones de funcionamiento.
Tiempo de carga	Aprox. 9 horas. Puede variar dependiendo del estado de la batería y las condiciones de funcionamiento.

El diseño y las especificaciones están sujetas a cambio sin previo aviso.

Nota

- No mire directamente a la parte de emisión de luz con LIGHTING encendida.
- Si el brillo de la iluminación deslumbra, prenda las luces de la habitación, o apague la LIGHTING de la unidad.