



OWNER'S MANUAL

WASHING MACHINE



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH

FT018TGES



MFL1774488
Rev.02_041622

www.lg.com

Copyright © 2021-2022 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.....	3
WARNING	3

INSTALLATION

Parts and Specifications	8
Installation Place Requirements	10
Stacking Mini Washer and Main Washer	11
Connecting the Water Supply Hose	13
Installing the Drain Hose	14
Levelling the Appliance	15

OPERATION

Operation Overview.....	18
Preparing the Wash Load	18
Adding Detergents and Softeners	19
Control Panel and Programme Table.....	22
Extra Options and Functions	26

SMART FUNCTIONS

Using LG ThinQ Application.....	27
Smart Diagnosis	29

MAINTENANCE

Cleaning After Every Wash.....	31
Cleaning the Appliance Periodically	31

TROUBLESHOOTING

Before Calling for Service.....	34
---------------------------------	----

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING



WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

4 SAFETY INSTRUCTIONS

- Children should be supervised to ensure that they do not play with the appliance.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use a new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Ventilation openings must not be obstructed by a carpet.
- This appliance is intended to be used in household applications only.
- The inlet water pressure must be between 50 kPa and 800 kPa.

Maximum Capacity

The maximum capacity in some cycles for dry clothes to be washed is **2.5 kg**.

Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, rain, or temperatures below freezing.
- Make sure the power plug is completely pushed into the power outlet.
- Do not plug the appliance into multiple outlet sockets, power boards, or an extension power cable.
- Do not modify the power plug provided with the appliance. If it does not fit the power outlet, have a proper outlet installed by a qualified electrician.

- This appliance is equipped with a power cord having an equipment-earthing / grounding conductor (earthing pin) and a grounding power plug. The power plug must be plugged into an appropriate outlet socket that is installed and earthed / grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Tighten and secure the drain hose at connecting ends to avoid separation.

Operation

- The Mini Washer is designed to wash lightly soiled and delicate items, and then do not wash normally or heavy soiled clothes or other items such as rugs, mats, shoes, sheets, towels, rugs, jeans, or pet blankets.
- Do not install the Mini Washer on top of another Mini Washer or Pedestal or elevated surface or stand.
- To avoid breaking the door glass, do not push too hard on the door when closing.
- Do not open or close the door by foot and step on Mini washer.
- Do not apply any sharp objects to the control panel in order to operate the appliance.
- Do not attempt to separate any panels or disassemble the appliance.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Do not push down the door excessively, when the appliance door is open.
- Do not put animals, such as pets into the appliance.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.

6 SAFETY INSTRUCTIONS

- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as waxes, wax removers, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, petrol, spot removers, turpentine, vegetable oil, cooking oil, acetone, alcohol, etc.). Improper use can cause fire or explosion.
- Do not use or store flammable or combustible substances (ether, benzene, alcohol, chemical, LPG, combustible spray, gasoline, thinner, petroleum, insecticide, air freshener, cosmetics, etc.) near the appliance.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- Do not touch the door during a high temperature programme.
- In case of a water leak from the appliance or flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Turn off water taps to relieve pressure on hoses and valves and to minimize leakage if a break or rupture should occur. Check the condition of the fill hoses; they should be replaced after 5 years.
- If there is a gas leakage (isobutane, propane, natural gas, etc.) within the home, do not touch the appliance or power plug and ventilate the area immediately.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.
- Avoid touching any water that is drained from the appliance during the wash.

- Make sure that drainage is working properly. If water is not drained properly, your floor may get flooded.
- Wipe off dirt or dust on the contacts of the power plug.

Maintenance

- Disconnect the appliance from the power supply before cleaning the appliance. Setting the controls to the OFF or stand by position does not disconnect this appliance from the power supply.
- Securely plug the power plug in the outlet socket after completely removing any moisture and dust.
- Do not spray water inside or outside the appliance to clean it.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the outlet socket.
- Only qualified service personnel from LG Electronics service centre should disassemble, repair, or modify the appliance. Contact an LG Electronics customer information centre if you move and install the appliance in a different location.

Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

8 INSTALLATION


INSTALLATION

Parts and Specifications

NOTE


- Appearance and specifications may change without notice to improve the quality of the appliance.

Front View

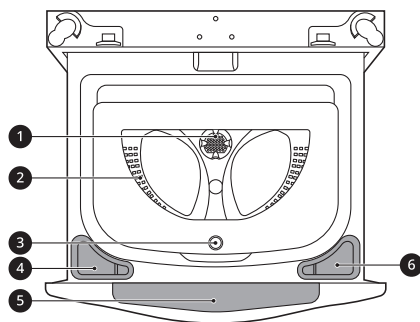

- ❶ Lint Filter
- ❷ Drum
- ❸ Door Open/Close Button
- ❹ Liquid Detergent Dispenser
- ❺ Control Panel
- ❻ Liquid Softener Dispenser

Rear View

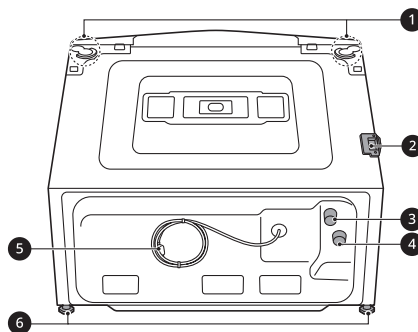


- ❶ Main Washer Leg Hole
- ❷ Stacking Switch
- ❸ Drain Hole
- ❹ Water Inlet (Cold Only)
- ❺ Power Plug
- ❻ Levelling Feet

Specifications

Model	FT018TGES
Power Supply	220 - 240 V~, 50 Hz
Dimension (Width X Depth X Height)	635 mm X 755 mm X 365 mm
Product Weight	45 kg

Accessories

*1 The included accessories vary depending on the model you purchased.

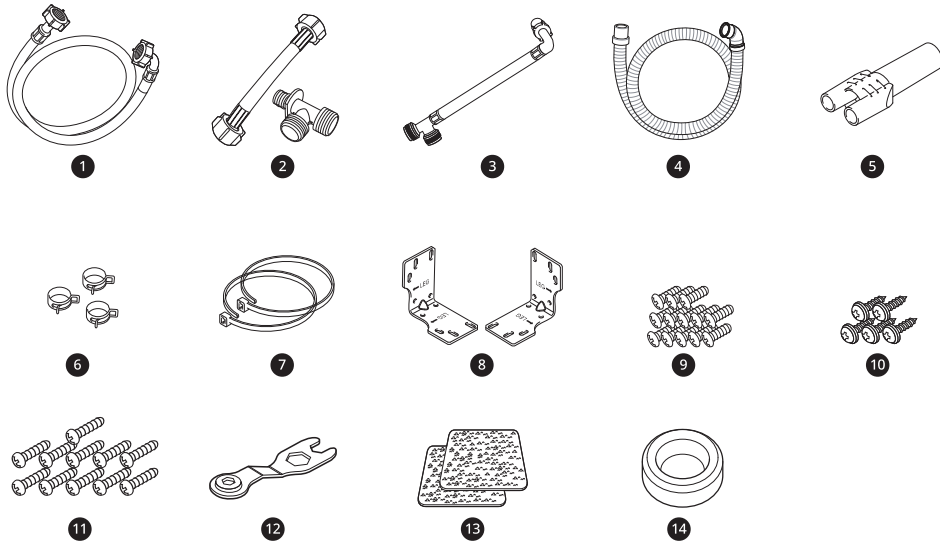

ENGLISH

1	Water supply hose(for cold water)	2	Connecting Supply Hose and Disassembled Connector *1	3	Connecting Supply Hose with Assembled Connector *1
4	Water Drain Hose	5	Water Drain Hose Connector	6	Band Clamps (3 EA)
7	Cable Ties (2 EA)	8	Back Brackets (2 EA)	9	Machine Screw (13 EA)
10	Short Sheet Metal Screw (5 EA)	11	Long Sheet Metal Screw (11 EA)	12	Spanner
13	Anti-slip Sheets	14	Detergent Measuring Cup		

NOTE

- The images in this manual may be different from the actual components and accessories that are subject to change by the manufacturer without prior notice for product improvement purposes.

10 INSTALLATION

Installation Place Requirements


Installation Location

- This appliance must be installed on firm flooring to minimize vibration during the spin cycle. Concrete flooring is best, being far less prone to vibration during the spin cycle than wooden floorboards or a carpeted surface.
- If it is impossible to avoid positioning the appliance next to a gas cooker or coal burning stove, an insulation (850 X 600 mm) covered with aluminum foil on the side facing the cooker or stove must be inserted between the two appliances.
- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- When installing the appliance, adjust all four feet using the transit bolt spanner provided to ensure the appliance is stable.

Floor Installation

*1 minimum space for installation

To ensure sufficient clearance for water inlet hoses, drain hose and airflow, allow minimum clearances of at least 2 cm at the sides and 10 cm behind the appliance. Be sure to allow for wall, door, or floor moldings that may increase the required clearances.

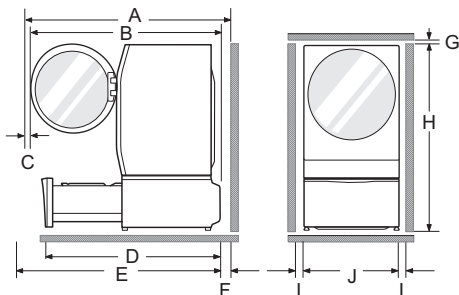

A	140 cm
B	127 cm
C	2 cm

D	120 cm
E	130 cm ^{*1}
F	10 cm
G	0.5 cm
H	130 cm
I	5 cm
J	64 cm

⚠ WARNING

- This appliance must only be used for domestic household purposes and should not be used in mobile applications.

NOTE

- Never try to level any uneven floor by putting pieces of wood, cardboard or similar materials under the appliance.

Ventilation

- Make sure that air circulation around the appliance should not be impeded by carpets, rugs, etc.

Ambient Temperature

- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.

Electrical Connection

- Do not use an extension cord or double adapter.
- Always unplug the appliance and turn off the water supply after use.


- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.
- Power outlet must be within 1 meter of either side of the appliance.

⚠ WARNING

- Repairs to the appliance must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local authorised LG repaire.
- The power plug must be plugged into an appropriate outlet socket that is installed and grounded/earthed in accordance with all local codes and ordinances.

Stacking Mini Washer and Main Washer

Needed Accessories

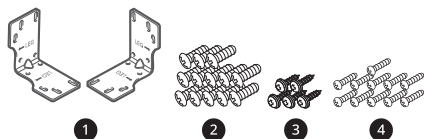


- ① Back Brackets (2EA)
- ② Machine Screw (13EA)
- ③ Short Sheet Metal Screw (5 EA)
- ④ Long Sheet Metal Screw (11 EA)

NOTE


- Accessories are subject to change by the manufacturer without prior notice for product improvement purposes.

Attaching Brackets on Mini Washer

- 1 After removing the carton and shipping material, lift the Mini Washer off the foam base, and keep 2 brackets on the foam base.
 - Make sure the plastic tub support comes off with the base and is not stuck to the bottom of the Mini Washer.

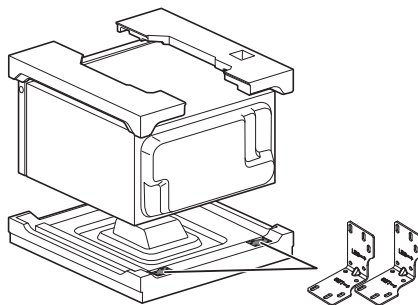


- 2 Remove and save the foam block for future use.
 - If the Mini Washer must be moved in the future, the foam block will help prevent damage to the Mini Washer during transportation.
 - To prevent damage, do not remove the foam block until the Mini Washer is at the final location.
- 3 Turn the top cover about 180 degrees, cover the opening in the top with the top cover and install 4 short sheet metal screw.

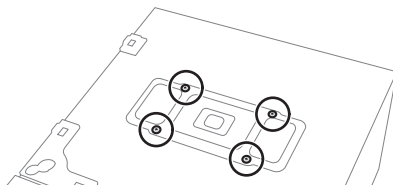


12 INSTALLATION

- 4** Attach the two back brackets on the rear top of the Mini Washer by inserting 4 machine screws in each bracket.

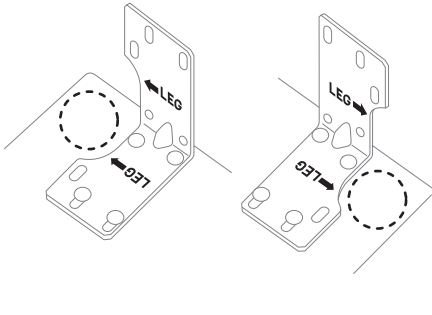


- First, insert screws on each side. Then insert screws on the front and back side.

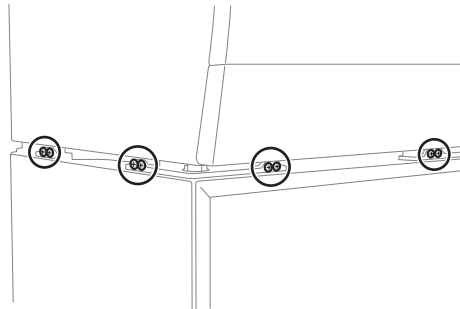


Stacking Main Washer on Mini Washer

- 1** Place the Main Washer on top of the Mini Washer.
- Place the leveling feet of the Main Washer inside the bracket openings on the Mini Washer, and align the bracket screw holes.

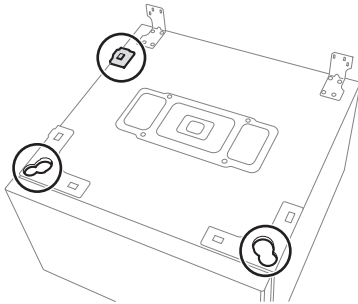

- 2** Securely attach the two washer at the corners using screws.

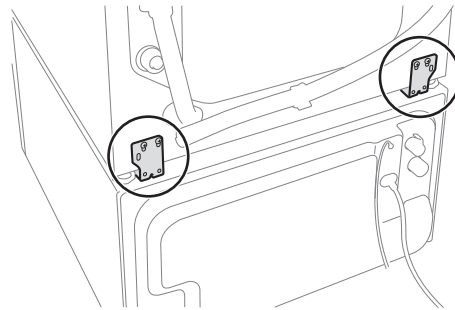


NOTE

- It can be difficult to assemble if it is not assembled in the proper order, or if the Mini washer has not been leveled prior to placing the Main washer on top.

- 3** Turn the feet of the Main Washer slightly until they are firmly snug up against the Mini Washer. Loosen the adjustable feet by turning them clockwise for a half turn with a spanner.

Then tighten the four lock nuts. All lock nuts must be tightened.

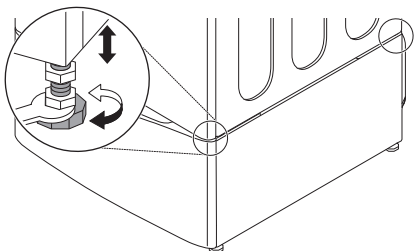


NOTE

- The Mini Washer will not work as a stand-alone unit.

Connecting the Water Supply Hose

Needed Accessories

*1 The included accessories vary depending on the model you purchased.

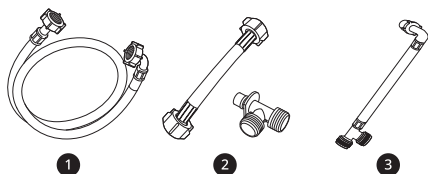

- 1 Water Supply Hose(for cold water)
- 2 Connecting Supply Hose and Disassembled Connector^{*1}
- 3 Connecting Supply Hose with Assembled Connector^{*1}

Note for Connection

- Water pressure must be between **50 kPa** and **800 kPa** (0.5 – 8.0 kgf/cm²). If the water pressure

is more than **800 kPa**, a decompression device should be installed.

- Periodically check the condition of the water supply hose and replace the water supply hose if necessary.


NOTE

- If the water pressure is near or over 800 kPa, a water pressure reduction device should be installed to both taps.
- Exceeding 65 °C can damage some clothes.
- Temperatures below 4 °C can cause hoses to freeze and burst and unfavourable wash results due to undissolved detergent.
- Cold inlet Water Temperatures over 25 °C can cause damage to clothes such as delicate Woollens
- Do not overtighten the water supply hose or use mechanical devices to tighten onto the inlet valves.
- No further backflow protection is required for connection to the water inlet.

Checking the Rubber Seal

Two rubber seals ① are supplied with the water supply hose. They are used to prevent water leaks. Connection to taps is sufficiently tight.

- Do not use mechanical devices such as multi grips to tighten the water supply hose. Ensure that the curved end of the water supply hose is connected to the appliance.

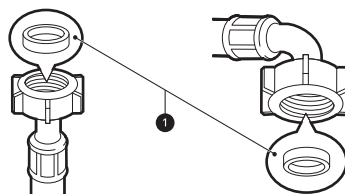


14 INSTALLATION

Connecting the Hose to the Water Tap

Connecting Screw-Type Hose to Tap with Thread


Screw the supply hose connector onto the water supply tap. Hand tighten only with the aid of a soft cloth. Do not overtighten the supply hose with any mechanical device.

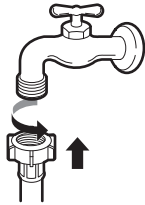


NOTE

- After connecting the water inlet hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, and etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

- 3 Connect one end of the cold water supply hose connector ❶ to the cold water supply hose of the Main Washer first.

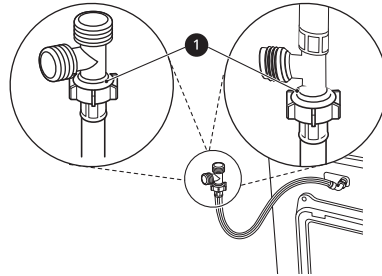

- 4 Connect the additionally provided water supply hose of Main Washer to the cold water supply hose connector and cold water tap.

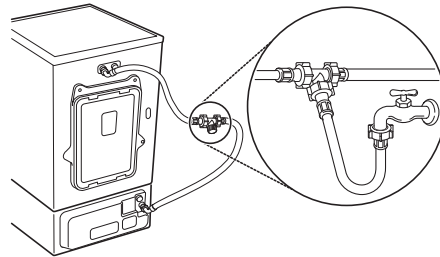


NOTE

- Make sure the water supply hose is not kinked or pinched.


Connecting the Cold Supply Hoses to Both Washing Machines

- 1 Open the accessory package for the Mini Washer installation accessories.
- 2 Connect the water supply hose of Mini Washer to the COLD water supply hose connector.

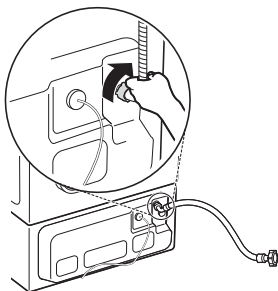

Installing the Drain Hose

Needed Accessories

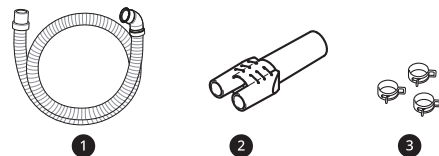


- ❶ Water Drain Hose
- ❷ Water Drain Hose Connector
- ❸ Band Clamps (3 EA)

Connecting the Drain Hose to the Mini Washer

The drain hose should not be placed higher than **100 cm** above the floor. Water in the appliance may not drain or may drain slowly.


- 1 Insert the band clamp onto the drain hose elbow. Pliers may be required to open the clamp so it can be fitted to the rubber end of the hose.
- 2 With the hose leading up from the elbow, firmly insert the elbow onto the drain outlet on the back of Mini Washer.

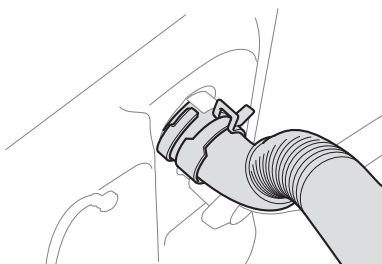

- 3 Adjust the band clamp with pliers to keep the hose securely in place and prevent leaking.

Connecting the Drain Connector

- 1 Insert the included band clamps on to the ends of the two drain hoses.
- 2 Connect the drain hose of Main Washer and Mini Washer to the drain connector.

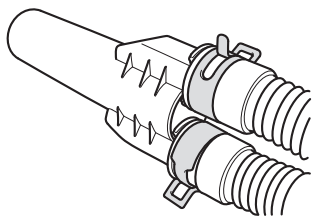

- 3 Connect the drain hose to the drain spigot on the laundry sink or bench top fitting.

CAUTION

- Adjust the band clamps to prevent the hoses from coming loose or leaking. Failure to do so could result in flooding. Use of the drain connector helps avoid siphoning, odors, or improper draining.
- Make sure the drain hoses are not kinked or pinched. This is a potential cause of drainage problems or noise.

NOTE

- Depending on the installation environment, you may have to purchase a separate drain hose connector. The connector supplied will suit a standard laundry tub side drain hole.

Levelling the Appliance

Checking the Level

When pushing down the edges of the top plate diagonally, the appliance should not move up and down at all (check both directions).

- If the appliance rocks when pushing the top plate of the appliance diagonally, adjust the feet again.
- Check whether the appliance is perfectly level after installation.

NOTE

- Timber or suspended type flooring may contribute to excessive vibration and unbalance. Reinforcement or bracing of the timber floor may need to be considered to stop or reduce excessive noise and vibration.



Adjusting and Levelling the Feet

When installing the appliance, the appliance should be aligned and perfectly level. If the appliance is not aligned and level properly, the

16 INSTALLATION

appliance may be damaged or may not operate properly.


- 1 Turn the levelling feet as required if the floor is uneven.
 - Do not insert pieces of wood etc. under the feet.
 - Make sure that all four feet are stable and resting on the floor.

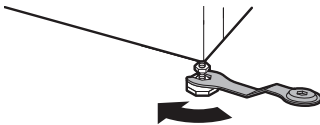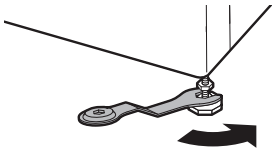


NOTE

- Do not install the washing machine on a plinth, stand or elevated surface unless it is manufactured by LG Electronics for use with this model.

- 2 Check if the appliance is perfectly level using a spirit level ①.

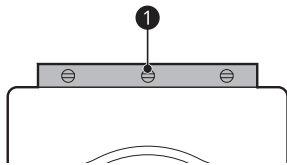

- 3 Secure the levelling feet with the lock nuts ② by turning anti-clockwise against the bottom of the appliance.

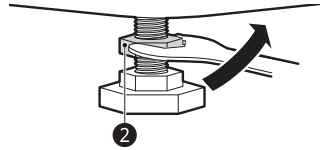

- 4 Check if all lock nuts at the bottom of the appliance are secured properly.

⚠ WARNING

- After stacking the Main Washer on to the Mini Washer, use the leveling feet on Mini Washer to level both. Main Washer's leveling feet should be already be firmly snug against the Mini Washer and the locknuts turned counter-clockwise to secure them.

NOTE

- Proper placement and levelling of the appliance will ensure long, regular, and reliable operation.
- The appliance must be 100% horizontal and stand firmly in position on a hard flat floor.
- It must not 'Seesaw' across corners under the load.
- Do not let the feet of the appliance get wet. Failure to do so may cause vibration or noise.


Using Anti-Slip Sheets

This feature may vary depending on the model purchased.

If you install the appliance on a slippery surface, it may move because of excessive vibration. Incorrect levelling may cause malfunction through noise and vibration. If this occurs, install the anti-slip sheets under the levelling feet and adjust the level.

- 1 Clean the floor to attach the anti-slip sheets.

- Use a dry rag to remove and clean foreign objects and moisture. If moisture remains, the anti-slip sheets may slip.
- 2 Adjust the level after placing the appliance in the installation area.
 - 3 Place the adhesive side ❶ of the anti-slip sheets on the floor.
 - The most effective way is to install the anti-slip sheets under the front feet. If it is difficult to place the sheets under the front feet of the appliance, attach them under the rear feet.

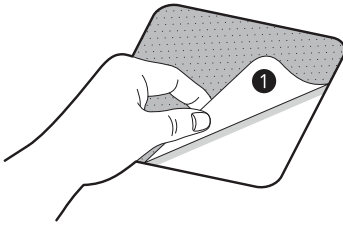

- 4 Put the appliance on the anti-slip sheets.
 - Do not attach the adhesive side ❶ of anti-slip sheets to the feet of the appliance.

NOTE

- Additional anti-slip sheets are available at LG Electronics service centre.

18 OPERATION

OPERATION

Operation Overview

Using the Appliance

- 1 Sort clothes and load items.
 - Sort clothes by fabric type, soil level, colour and load size as needed. Open the door and load items into the appliance.
- 2 Add cleaning products or detergent and softener.
 - Add the proper amount of detergent with the detergent measuring cup to the washing drum evenly.
- 3 Closing the door and drawer.
- 4 Turn on the appliance.
 - Press the **Power** button to turn on the appliance.
- 5 Choose the desired cycle.
 - Press the cycle button repeatedly until the desired cycle is selected.
- 6 Begin cycle.
 - Press the **Start/Pause** button to begin the cycle. The appliance will agitate briefly without water to measure the weight of the load. If the **Start/Pause** button is not pressed within a certain time, the appliance will shut off and all settings will be lost.
- 7 End of cycle.
 - When the cycle is finished, a melody will sound. Immediately remove your clothing from the appliance to reduce wrinkling. Check around the door seal when removing the load for small items that may be caught in the seal.
 - After washing is complete, wipe off the washing machine door, gasket and inside

the washing drum with a soft dry towel for clean washing.

Preparing the Wash Load

Sorting the Clothes

- For best washing results, sort your clothes according to the care label stating fabric type and washing temperature.
- Soil level (Heavy, Normal, Light): Separate clothes according to soil level. Wash lightly soiled items to the Mini Washer, and then wash heavily or normally soiled items to LG Main Washer.
- Colour (White, Lights, Darks): Wash dark or dyed clothes separately from whites or light colours. Mixing dyed clothes with light clothes can result in dye transfer or discolouration of lighter clothes.
- Lint (Lint producers, Collectors): Wash separately lint producing fabrics from lint collecting fabrics. Lint producers can result in pilling and linting on the lint collectors.

Checking the Clothes Care Label

The symbols tell you about the fabric content of your garment and how it should be washed.

Symbols on the Care Labels

Symbol	Wash / Fabric type
	<ul style="list-style-type: none"> • Normal Wash • Cotton, Mixed Fabrics
	<ul style="list-style-type: none"> • Easy Care • Synthetic, Mixed Fabrics
	<ul style="list-style-type: none"> • Special Delicate Wash • Delicates
	<ul style="list-style-type: none"> • Hand Wash Only • Wool, Silk


Symbol	Wash / Fabric type
	<ul style="list-style-type: none"> Do not wash

NOTE

- The dashes under the symbol give you information about the type of fabric and the maximum allowance of mechanical stress.

Checking the Clothes before Loading

- Combine large and small items in a load. Load large items first.
- Large items should not be more than half of the total wash load. Do not wash single items. This may cause an unbalanced load. Add one or two similar items.
- Check all pockets to make sure that they are empty. Items such as nails, hair clips, matches, pens, coins and keys can damage both your appliance and clothes.

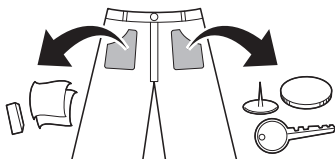

- Wash delicates (stockings, underwired bras) in a wash net.
- Close zippers, hooks and strings to make sure that these items do not snag on other clothes.
- Pre-treat dirt and stains by brushing a small amount of detergent dissolved water onto stains to help lift dirt.

Closing the Door and Drawer

- 1 Gently push down on the Mini Washer's Lid until it clicks.
- 2 Push the drawer until it has completely closed.

CAUTION

- Do not let your hands get stuck between the door and the washing machine, as this can cause injury.
- Forcing the drawer or the Lid to open can cause parts to be damaged and safety problems.
- Closing the drawer before having closed the Lid completely may scratch the Lid glass.
- Ensure the drawer is pulled out completely to prevent the Lid from contacting the front of the Main Washer.

NOTE

- The Lid lock may fail if there is too much clothes in the mini washer or if the Lid is not completely closed.
-  lights up when the programme starts and the door is locked. To open the drawer, press the **Start/Pause** button to stop the washer.
- If **dE 1**, **dE2** or **dE** appears on the display, close the drawer and the Lid completely. After doing so, press the **Start/Pause** button again.
- If the drawer cannot be opened completely, pull the drawer forward with a little force using both hands.
- If power failure occurs during product operation, the door cannot be opened. Restore the power again or contact the LG service centre.
- The Lid may not open due to high ambient temperatures, if this occurs after a wash and there are no error codes on the display, select the **Rinse+Spin** programme or wait until temperatures drop so that the Lid can be released.

Adding Detergents and Softeners

Detergent Dosage

- Detergent should be used according to the instruction of the detergent manufacturer and selected according to type, colour, soiling of the

20 OPERATION

fabric and the washing temperature. Use only detergents that are suitable for Drum (front load) type washers.

- If too many suds occur, reduce the detergent amount.
- If too much detergent is used, too many suds can occur and this will result in poor washing results or cause heavy load to the motor.
- If you wish to use liquid detergent, follow the guidelines provided by the detergent manufacturer.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid overdosing the detergent. Failing to do so will cause oversudsing.
- Refer to the label of the clothes, before adding the detergent and choosing the water temperature.
- Use only suitable detergents for the respective type of clothing:
 - Liquid detergent is often designed for special applications, e.g. for coloured fabric, wool, delicate or dark clothes.
 - Powdered detergent is suitable for all types of fabric.
 - For better washing results of white and pale garments, use powdered detergent with bleach.
 - Detergent is flushed from the dispenser at the beginning of the wash cycle.

NOTE


- Do not let the detergent harden. Doing so may lead to blockages, poor rinse performance or odour.

Adding Detergent and Softener

Using the Dispenser

- 1 Slide open the drawer.

- 2 Add the detergent and softener into the appropriate compartments.

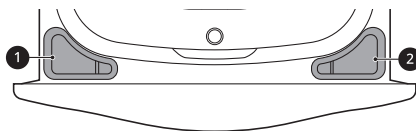

- 1 Liquid detergent compartment
- 2 Liquid fabric softener compartment


NOTE

- Pour detergent and fabric softer to the maximum fill line. Pouring excessive them over the maximum fill line can cause it to dispense too early, which may stain the clothes.

- 3 Gently slide the drawer closed before starting the washing programme.

Using the Detergent Measuring Cup

- 1 Slide open the drawer, open the door.
- 2 Measure the detergent with the detergent measuring cup and pour it into the drum.
 - Use the provided detergent measuring cup to add only one cup of detergent.

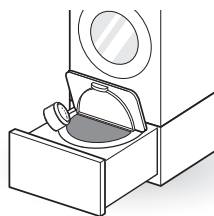

- 3 Close the door, slide the drawer closed before starting the washing programme.

NOTE

- Less detergent is required for lightly soiled items. Please use appropriate amount of detergent in the Mini Washer. If you use too much detergent, excessive bubbles will remain after rinsing.

OPERATION 21


ENGLISH

- Do not pour liquid detergent and fabric softener directly onto the clothes in the wash drum, doing so will cause dark staining on the clothes that will be difficult to remove.
- Do not leave the liquid detergent and liquid fabric softener in the dispenser for more than 1 day. Detergent and softener may harden. They may remain in the dispenser if it is too thick. They should be diluted if the consistency is too thick so that it can flow easily.
- Do not open the drawer when water is being supplied during the wash.
- Solvents (benzene, etc.) must never be used.

22 OPERATION


Control Panel and Programme Table

Control Panel Features

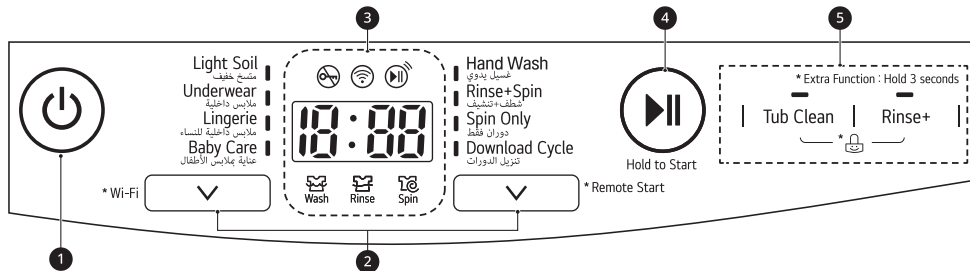

	Description
1	Power On/Off Button <ul style="list-style-type: none"> Press this button to turn the washing machine on.
2	Programme Button <ul style="list-style-type: none"> Programmes are available according to the clothes type. The lamp will light up to indicate the selected programme.
3	Display <ul style="list-style-type: none"> The display shows the settings, estimated remaining time, options, and status messages. When the appliance is turned on, the default settings in the display will illuminate. While the load weight is sensed automatically, the display on the control panel blinks.
4	Start/Pause Button <ul style="list-style-type: none"> This button is used to start the wash cycle or pause the wash cycle. If a temporary stop of the wash cycle is needed, press this button. <p>NOTE</p> <ul style="list-style-type: none"> If you do not press the Start/Pause button within a certain time, the Mini Washer automatically turns off and all cycle settings are lost.
5	Extra Options and Functions <ul style="list-style-type: none"> To use the extra functions, press and hold the corresponding button for 3 seconds. The corresponding symbol lights up in the display. This allows you to select an additional programmes and will light when selected. <p>Remote Start</p> <p>With the LG ThinQ app, you can use a smartphone to control your appliance remotely.</p> <ul style="list-style-type: none"> In order to use this function, refer to SMART FUNCTIONS. <p>Wi-Fi</p> <p>Press and hold the ✓ button for 3 seconds to initiate the connection of the appliance to the LG ThinQ application.</p>

Time and Status Display

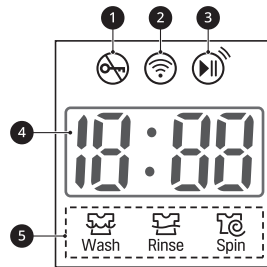

ENGLISH

	Description
①	🔒 lights up when the programme starts and the door is locked.
②	📶 lights up when the appliance is connected to Wi-Fi network at home.
③	🔊 lights up when the remote control feature is activated.
④	Estimated Time Remaining <ul style="list-style-type: none"> When a washing programme is selected, the default time for that programme is displayed. This time will change as options are selected. If the display shows ---, then the time will be displayed after the load sensing has detected the load size. This is normal. The time shown is only an estimate. This time is based on normal operating conditions. Several external factors (load weight, room temperature, incoming water temperature, etc.) can affect the actual time.
⑤	Programme Status Indicators <ul style="list-style-type: none"> When a washing programme is running, LED for the active stage will blink, and the LEDs for the remaining stages will remain steady. Once a stage is complete, the LED will turn off. If a cycle is paused, the active stage LED will stop blinking.

24 OPERATION

Washing Programme

Light Soil		Max. Load: Rating
Description	Washes small loads of lightly soiled clothes, except delicate fabrics such as wool or silk. <ul style="list-style-type: none"> Pressing the Start/Pause button without selecting a programme will cause the Light Soil programme to begin immediately, using the default settings. 	
Underwear		Max. Load 1.5 kg
Description	Washes underwear, transparent clothes, and lace clothes that are easily damaged. <ul style="list-style-type: none"> This programme is not suitable for washing silk clothing. 	
Lingerie		Max. Load: 1 kg
Description	Washes machine-washable lingerie, sheer and lacy clothes.	
Baby Care		Max. Load 1.5 kg
Description	Washes baby clothes with gentle motion and better performance.	
Hand Wash		Max. Load: 1 kg
Description	Washes hand-washable and machine-washable delicate clothes such as washable wool, lingerie, dresses etc. <ul style="list-style-type: none"> Use detergent for machine washable woolens. 	
Rinse+Spin		Max. Load 1.5 kg
Description	Rinses and spins clothes. Use fabric softener if needed.	
Spin Only		Max. Load 1.5 kg
Description	Spin a hand washed clothes that may not have been washed in the machine.	
Download Cycle		-
Description	This programme allows you to download a new and special washing programme to your appliance with a smartphone.	

NOTE

- Always follow garment manufacturer's care label or instructions when washing to avoid damage to clothes.

OPERATION 25

- Neutral detergent is recommended.

ENGLISH

26 OPERATION

Extra Options and Functions

- 2** Press and hold the **Tub Clean** and **Rinse+** buttons at the same time for 3 seconds to activate/deactivate this function.

Adjusting the Number of Rinse

Press the **Rinse+** button to increase the number of rinse.

- 1** Prepare the clothes and load the drum.
- 2** Press the **Power** button.
- 3** Add detergent.
- 4** Select a washing programme.
- 5** Press the **Rinse+** button as necessary, and then the number of rinsing cycles will be displayed. (1 up to 5 rinses can be selected depending on the programme.)
- 6** Press the **Start/Pause** button.

Locking/Unlocking the Control Panel for Safety

Use the **Child Lock** option to disable the controls. This function can prevent children from changing cycles or operating the appliance.

NOTE

- Once this function is set, all buttons are locked except the **Power** button.
- When the controls are locked, **CL** and the remaining time are alternatively shown on the display during the wash while this function is engaged.
- Turning off the power will not reset this function. You must deactivate this function before you can access any other functions.

Locking/Unlocking the Control Panel

- 1** Turn on the power.

SMART FUNCTIONS

Using LG ThinQ Application

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Remote Start

It allows you to control the appliance remotely from the **LG ThinQ** application.

Download Cycle

You can download new and special cycles that are not included in the basic cycles on the appliance.

A variety of specialty cycles specific to the appliance can be downloaded to the successfully registered appliances.

Once cycle download is completed in the appliance, the appliance keeps the downloaded cycle until a new cycle is downloaded.

NOTE

- Only one downloaded cycle can be stored on the appliance at a time.

Tub Clean Coach

This function shows how many cycles remain before it is time to run the **Tub Clean** function.

Energy Monitoring

This function checks the energy consumption of the recently used cycles and monthly average.

Smart Diagnosis

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

Settings

Allows you to set various options on the appliance and in the application.

Push Alert

When the cycle is complete or the appliance has problems, you have the option of receiving push notifications on a smartphone. The notifications are triggered even if the **LG ThinQ** application is off.


NOTE

- If you change your wireless router, Internet service provider, or password, delete the registered appliance from the **LG ThinQ** application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.


ENGLISH

Before Using LG ThinQ Application

- Check the distance between the appliance and the wireless router (Wi-Fi network).
 - If the distance between the appliance and the wireless router is too far, the signal strength becomes weak. It may take a long time to register or installation may fail.
- Turn off the **Mobile data** or **Cellular Data** on your smartphone.

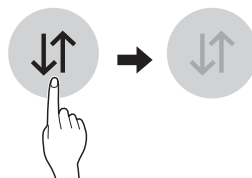

- Connect your smartphone to the wireless router.

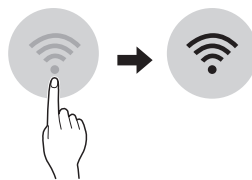

28 SMART FUNCTIONS

NOTE

- To verify the Wi-Fi connection, check that  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- **LG ThinQ** is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The appliance cannot be registered due to problems with the wireless signal transmission. Unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the product again.

smartphone. Follow instructions to download and install the application.

Using the Appliance Remotely

Remote Start

Use a smartphone to control your appliance remotely. You can also monitor your cycle operation so you know how much time is left in the cycle.

Using this function

- 1 Put the clothes into the drum.
 - If desired, add bleach or fabric softener to the appropriate areas of the dispenser.
- 2 Press the **Power** button.
- 3 Press and hold the **▼** button for 3 seconds to enable the remote control function.
- 4 Start a cycle from the **LG ThinQ** application on your smartphone.

NOTE

- Once this function is enabled, you can only start a cycle from the **LG ThinQ** smartphone application. If the cycle is not started, the appliance will wait to start the cycle until it is turned off remotely from the application or this function is disabled.
- If the door has been opened, you can not start a cycle remotely.

Disable this function manually

When this function is activated, press and hold the **▼** button for 3 seconds.

Installing the LG ThinQ Application

Search for the **LG ThinQ** application from the Google Play Store or Apple App Store on a

Wireless LAN Module Specifications

Model	LCW-007
Frequency Range	2412 to 2472 MHz
Output Power (Max.)	IEEE 802.11b: 17.859dBm
	IEEE 802.11g: 17.39 dBm
	IEEE 802.11n (HT20): 16.64 dBm
	IEEE 802.11n (HT40): 17.05 dBm

Wireless function S/W version: V 1.0

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Smart Diagnosis

This feature is only available on models with the  or  logo.

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external

factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.

- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

Using LG ThinQ to Diagnose Issues

If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the **LG ThinQ** application.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions provided in the **LG ThinQ** application.

Using Audible Diagnosis to Diagnose Issues


Follow the instructions below to use the audible diagnosis method.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions for audible diagnosis provided in the **LG ThinQ** application.

- Press the **Power** button to turn on the appliance.

- Do not press any other buttons.

- Place the mouthpiece of your smartphone close to the  or  logo.

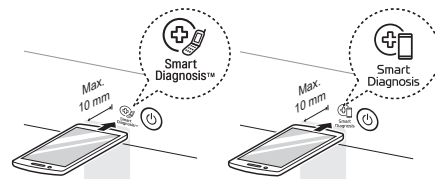

- Press and hold the **Tub Clean** button for 3 seconds or longer while holding the smartphone mouthpiece to the logo until the data transfer is complete.

30 SMART FUNCTIONS

- Keep the smartphone in place until the data transfer has finished. Time remaining for data transfer is displayed.

4 After the data transfer is complete, the diagnosis will be displayed in the application.

NOTE

- For best results, do not move the smartphone while the tones are being transmitted.

MAINTENANCE

⚠ WARNING

- Unplug the appliance before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the appliance. They may damage the finish.

Cleaning After Every Wash

What to Clean

Always remove items from the washing machine as soon as the cycle is complete. Leaving damp items in the washing machine can cause wrinkling, colour transfer, and odour.

- After the wash cycle is finished, wipe the door and door seal to remove any moisture.
- Leave the door slightly open to dry the drum.
- Wipe the appliance with a dry cloth to remove any moisture.

⚠ WARNING

- Leave the door open to dry inside of the appliance only if the children are supervised at home.

Cleaning the Exterior

Proper care of your appliance can extend the service life.

Exterior

- Immediately wipe off any spills.
- Wipe with a damp cloth and then again with a dry cloth ensuring there is no moisture in cabinet joints or crevices.
- Do not press on the surface or the display with sharp objects.

Door

- Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

⚠ WARNING

- Do not attempt to separate any panels or disassemble the appliance. Do not apply any sharp objects to the control panel in order to operate the appliance.

Cleaning the Appliance Periodically

Tub Clean

This is a special function to help clean the inside of the appliance by soaking, washing, rinsing and spinning.

Run this function **once a month** (or more often if needed) to reduce build-up of detergent and softener and other residue.

- If there is a bad smell or mildew inside the appliance, run this function **once a week for 3 weeks** in addition to the regularly prompted intervals.

NOTE

- The **EcL** message will be displayed to alert to the recommendation of operating this function.

- 1 Remove any clothing or items from the appliance.

32 MAINTENANCE


- 2 Dilute 200 ml liquid chlorine bleach in 1 liter of water and pour the mixture in the drum.
- 2 Open the cap and remove any lint before washing it.

- 3 Close the door and drawer.


- 4 Turn on the power, and then select the **Tub Clean**.

- 5 Press the **Start/Pause** button to start.

- 6 Leave the door open to dry the inside of the appliance completely.
 - When the inside of the appliance is not dried completely, it may cause a bad smell or mildew.

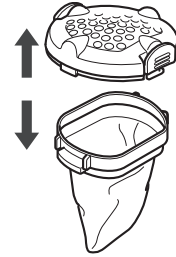

- 3 Wash the filter with a soft brush.
- 4 Insert the lower part of the filter into the drum and close the cap until you hear a click sound.

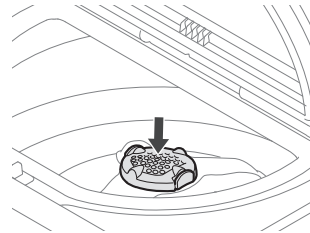

⚠ WARNING


- Leave the door open to dry inside of the appliance only if the children are supervised at home.

Cleaning the Lint Filter

The filter is an important part for an efficient washing performance result, so take a special care. Clean the filter regularly.

- Clean the lint filter after at least 2 - 3 washes.

- 1 Squeeze the side tabs and lift out the filter.

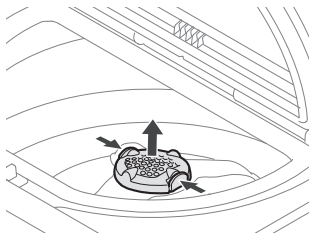

⚠ CAUTION

- Do not leave iron objects (such as clothes pins, hairpins, etc.) in the lint filter as they promote rust.
- Do not leave the lint filter loosely or poorly fitted. Doing so may damage the fabrics or the washing machine.
- Do not operate the washing machine without the lint filter.

NOTE

- When the lint filter is damaged, contact an LG service centre.

Cleaning the Water Inlet Filter


The water inlet filter collects lime or any sediment that may be in water that is supplied to the appliance. Clean the inlet filter every six months or

so, or more often if the water is very hard or contains traces of limescale.

- Turn off the water supply taps to the appliance if the appliance is to be left for a certain period of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- IE error message will be displayed on the control panel when the water is not entering the detergent drawer.

1 Turn off the power and the water tap and then unscrew the water inlet hose.

2 Remove the water inlet filter with small pliers and then clean the filter using a medium bristle tooth brush.

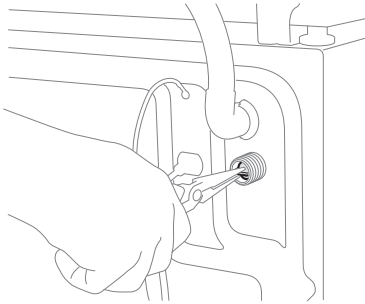

34 TROUBLESHOOTING

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to LG Electronics service centre.

Before Calling for Service

Your appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If the appliance does not function properly or does not function at all, check the following tables before calling to LG Electronics service centre.

Error Messages

Symptoms	Possible Cause & Solution
IE INLET ERROR	Water supply is not adequate in that location. Water does not enter appliance or it enters slowly. <ul style="list-style-type: none"> Check another tap in the house.
	Water supply tap is not completely open. Water does not enter the appliance or it enters slowly. <ul style="list-style-type: none"> Open fully tap.
	Water supply hose(s) are kinked. <ul style="list-style-type: none"> Straighten hose or reinstall the water inlet hose.
	The filter of the supply hose(s) are clogged. <ul style="list-style-type: none"> Check and clean the inlet valve filter after turning off the taps and removing the hose connections to the washing machine.
UE UNBALANCE ERROR	Rebalancing operation is not successful. <ul style="list-style-type: none"> The automatic attempt to rebalance the clothes was not successful. The cycle has been paused to allow the laundry to be manually adjusted.
	The load is too small. <ul style="list-style-type: none"> Add more items to allow the appliance to balance the clothes.
	Heavy items are mixed with lighter items. <ul style="list-style-type: none"> Wash items of somewhat similar weight.
	The load is out of balance. <ul style="list-style-type: none"> Manually redistribute the clothes if laundry have become tangled.
DE WATER OUTLET ERROR	Drain hose is kinked or clogged. Water in the appliance does not drain or drains slowly. <ul style="list-style-type: none"> Clean and straighten the drain hose.

Symptoms	Possible Cause & Solution
dE dE2 Drawer ERROR	Drawer is not closed properly. <ul style="list-style-type: none"> Close the drawer and press Start/Pause button to start the cycle. This error message is displayed though the drawer is closed, call for service.
d0 DOOR ERROR	Door is not closed properly. <ul style="list-style-type: none"> Open the drawer and make sure the latch area is free of clothing or other obstructions. Close the door, shut the drawer, and press Start/Pause to start the cycle. This error message is displayed though the drawer is closed, call for service.
EE CONTROL ERROR	This is a control error. <ul style="list-style-type: none"> Unplug the power plug and call for service.
LE MOTOR LOCKED ERROR	Over load in motor. <ul style="list-style-type: none"> Let the appliance wait for 30 minutes until the motor is cooled down and then, restart the cycle.
FE OVERFLOW ERROR	Water overfills due to a possible faulty water valve. <ul style="list-style-type: none"> Close the water tap. Unplug the power plug. Call for service.
PE PRESSURE SENSOR ERROR	Water level sensor malfunctions. <ul style="list-style-type: none"> Close the water tap. Unplug the power plug. Call for service.
E7 STACKING ERROR	You may operate the Mini Washer without stacking a full-size washing machine. <ul style="list-style-type: none"> Mini Washer will not operate as a standalone unit. It must be stacked under a suitable LG front-loading washing machine.
	Stacking switch is not working properly. <ul style="list-style-type: none"> The product is for use only in combination with LG authorized appliances. Call the customer information centre to check out LG authorized appliances.
FF FROZEN FAILURE	Is supply/drain hose or drain pump frozen? <ul style="list-style-type: none"> Supply warm water into the drum in order to unfreeze the drain hose and the drain pump. Cover the supply hose with wet and warm towel.
tcL TUB CLEAN ALARM	The programme has run more than 30 times. <ul style="list-style-type: none"> Run the Tub Clean function.
CL CHILD LOCK FUNCTION	CL is not an error. This prevents children from changing cycles or operating the appliance. <ul style="list-style-type: none"> Turn off the Child Lock function in the control panel.

36 TROUBLESHOOTING

Noises You Might Hear

Symptoms	Possible Cause & Solution
Rattling and clanking noise	Foreign objects, such as keys, coins, or safety pins may be in the drum. <ul style="list-style-type: none"> Stop the appliance, check the drum for foreign objects. If the noise continues after the appliance is restarted, call for service.
Thumping sound	Heavy clothes may produce a thumping sound. This is usually normal. <ul style="list-style-type: none"> If the sound continues, the appliance is probably out of balance. Stop and redistribute the clothes.
	The clothes may be out of balance. <ul style="list-style-type: none"> Pause the programme and redistribute the clothes after the door unlocks.
Vibrating noise	Package materials are not removed. <ul style="list-style-type: none"> Remove package materials.
	The clothes may be unevenly distributed in the drum. <ul style="list-style-type: none"> Pause the programme and redistribute the clothes after the door unlocks.
	Not all levelling feet are resting firmly and evenly on the floor. <ul style="list-style-type: none"> See the Levelling the Appliance instruction to adjust the levelling of the appliance.
	Floor not rigid enough. <ul style="list-style-type: none"> Check if the floor is solid and does not flex. See the Installation Place Requirements to select the proper location.

Operation

Symptoms	Possible Cause & Solution
Water is leaking.	House drain pipes are clogged. <ul style="list-style-type: none"> Unclog waste pipes. Contact plumber if necessary.
	Leakage is caused by improper installation of drain hose or clogged drain hose. <ul style="list-style-type: none"> Clean and straighten the drain hose. Check and clean the drain filter regularly.

Symptoms	Possible Cause & Solution
Appliance does not operate.	Control panel has powered off due to inactivity. <ul style="list-style-type: none"> This is normal. Press the Power button to turn the appliance on.
	Appliance is unplugged. <ul style="list-style-type: none"> Make sure that the cord is plugged securely into a working outlet.
	Water supply is turned off. <ul style="list-style-type: none"> Turn the water supply tap completely.
	Controls are not set properly. <ul style="list-style-type: none"> Make sure that the programme is correctly set. Close the door and press the Start/Pause button.
	Door or Drawer is open. <ul style="list-style-type: none"> Close the door/drawer and make sure that nothing is caught under the door preventing it from closing completely.
	Circuit breaker/fuse is tripped/blown. <ul style="list-style-type: none"> Check house circuit breakers/fuses. Replace fuses or reset breaker. The appliance should be on a dedicated branch circuit. The appliance will resume the programme where it stopped once power is restored.
	Control needs to be reset. <ul style="list-style-type: none"> Press the Power button, then reselect the desired programme and press the Start/Pause button.
	Start/Pause was not pressed after a programme was set. <ul style="list-style-type: none"> Press the Power button, then reselect the desired programme and press the Start/Pause button. The appliance is turned off if the Start/Pause button is not pressed within a certain time.
	Extremely low water pressure. <ul style="list-style-type: none"> Check another tap in the house to make sure that household water pressure is adequate.
The drawer does not open.	Washing machine is too cold. <ul style="list-style-type: none"> If the washing machine has been exposed to temperatures below freezing for an extended period of time, allow it to warm up before pressing the Power button.
	The drawer cannot be opened for safety reasons once the appliance starts. <ul style="list-style-type: none"> This is normal. You can safely open the drawer after  turns off.

38 TROUBLESHOOTING

Symptoms	Possible Cause & Solution
Appliance is not filling properly.	Inlet filter clogged. <ul style="list-style-type: none"> Make sure the inlet filters on the fill valves are not clogged.
	Inlet hoses may be kinked. <ul style="list-style-type: none"> Check that inlet hoses are not kinked or clogged.
	Insufficient water supply. <ul style="list-style-type: none"> Make sure that both hot and cold water taps are turned on all the way.
	The door and drawer are open. <ul style="list-style-type: none"> The Mini Washer will not operate if the lid is open. Close the lid and make sure that nothing is caught under the lid preventing it from closing completely.
	Water level in the tub appears to be too low. <ul style="list-style-type: none"> The fill level is optimized for the wash motion to achieve the best wash results.
Appliance does not drain water.	Drain hose is kinked, pinched, or clogged. <ul style="list-style-type: none"> Make sure the drain hose is free of blockages, kinks, etc., and is not pinched behind or under the washing machine.
Cycle time is longer than usual.	The load is too small. <ul style="list-style-type: none"> Add more items to allow the appliance to balance the loads.
	Heavy articles are mixed with lighter items. <ul style="list-style-type: none"> Always try to wash articles with similar weight in order to allow the appliance to evenly distribute the weight of the load for spinning.
	The load is out of balance. <ul style="list-style-type: none"> Manually redistribute the load if articles have become tangled.
Cycle end is delayed	Unbalance is detected or suds removing programme is on. <ul style="list-style-type: none"> This is normal. The time remaining shown on the display is only an estimated duration. Actual time may vary.

Performance

Symptoms	Possible Cause & Solution
Poor stain removal	Heavily soiled clothes <ul style="list-style-type: none"> Use Main Washer
	Previously set stains. <ul style="list-style-type: none"> Articles that have been previously washed may have stains which have been set. These stains may be difficult to remove and may require hand washing or pre-treating to aid in stain removal.

Symptoms	Possible Cause & Solution
Staining	Clothes were not properly sorted. <ul style="list-style-type: none"> Always wash dark colours separately from light colours and whites to prevent discoloration. Never wash heavily soiled items with lightly soiled items.
	Appliance is not unloaded promptly. <ul style="list-style-type: none"> Always remove items from the appliance as soon as the programme is complete.
Wrinkling	Appliance is overloaded. <ul style="list-style-type: none"> The appliance can be fully loaded, but the drum should not be tightly packed with items. The door of the appliance should be closed easily.
	Inside of drum is not cleaned properly. <ul style="list-style-type: none"> Run the Tub Clean function regularly.
Musty or mildewy odour in appliance	Odours can occur if the drain hose is not properly installed, causing siphoning (water flowing back inside of the appliance). <ul style="list-style-type: none"> When installing the drain hose, make sure that it does not get kinked or blocked.

Wi-Fi

Symptoms	Possible Cause & Solution
Your home appliance and smartphone are not connected to the Wi-Fi network.	The password for the Wi-Fi that you are trying to connect to is incorrect. <ul style="list-style-type: none"> Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG ThinQ.
	Mobile data for your smartphone is turned on. <ul style="list-style-type: none"> Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network.
	The wireless network name (SSID) is set incorrectly. <ul style="list-style-type: none"> The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters).
	The router frequency is not 2.4 GHz. <ul style="list-style-type: none"> Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your internet service provider or the router manufacturer.
	The distance between the appliance and the router is too far. <ul style="list-style-type: none"> If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.

After Sales Service (Egypt Only)

- Shelf Life Time: 6 Years
- LG is committed to providing all spare parts of this appliance during the shelf life time.

استكشاف الأعطال وإصلاحها 33

ملاحظة

الأعراض	السبب المحتمل والحل
الكرمشة	<ul style="list-style-type: none"> لا يتم تفريغ حمولة الغسيل بسرعة. لذا احرص دائماً على إخراج الأغراض من الجهاز بمجرد اكتمال البرنامج.
تتبعث رائحة عفنة أو كريهة من الجهاز	<ul style="list-style-type: none"> الجهاز محمل بشكل مفرط. يمكن وضع الحمولة كاملة في الجهاز، ولكن لا يجب تكديس كمية كبيرة من الأغراض داخل حوض الغسل. ينبغي أن يتم إغلاق باب الغسالة بسهولة. لم يتم تنظيف حوض الغسل من الداخل بطريقة صحيحة. قم بتشغيل وظيفة Tub Clean (تنظيف الحوض) بانتظام. قد تتبعث الروائح الكريهة عندما لا يتم تركيب خرطوم التصريف بشكل صحيح، مما يسبب حدوث شفق (ارتجاع الماء مرة أخرى إلى الجهاز). عند تركيب خرطوم التصريف، احرص على عدم التواءه أو انسداد.

Wi-Fi (واي فاي)

الأعراض	السبب المحتمل والحل
جهازك المنزلي أو هاتفك الذكي غير متصل بشبكة Wi-Fi.	<ul style="list-style-type: none"> كلمة المرور للاتصال بشبكة Wi-Fi التي تحاول الاتصال بها غير صحيحة. اعثر على شبكة Wi-Fi المتصلة بهاتفك الذكي ثم قم بإزالتها، بعد ذلك سجل جهازك على LG ThinQ.
	<ul style="list-style-type: none"> بيانات الهاتف المحمول في هاتفك الذكي مفعلة. أوقف بيانات الهاتف المحمول على هاتفك الذكي وسجل الجهاز باستخدام شبكة Wi-Fi.
	<ul style="list-style-type: none"> لم يتم إعداد اسم الشبكة اللاسلكية (SSID) بشكل صحيح. يجب أن يكون اسم الشبكة اللاسلكية (SSID) مكوناً من أحرف وأرقام باللغة الإنجليزية. (لا تستخدم رموزاً خاصة).
	<ul style="list-style-type: none"> تردد جهاز التوجيه ليس 2.4 غيغا هرتز. يتم دعم جهاز التوجيه بتردد 2.4 غيغا هرتز فقط. اضبط جهاز التوجيه اللاسلكي على 2.4 غيغا هرتز ثم وصل الجهاز بجهاز التوجيه اللاسلكي. للتحقق من تردد جهاز التوجيه، راجع مزودي خدمة الإنترنت الخاص بك أو مصنع جهاز التوجيه.
	<ul style="list-style-type: none"> المسافة بين الجهاز وجهاز التوجيه أبعد من اللازم. إذا كانت المسافة بين الجهاز وجهاز التوجيه أبعد من اللازم، قد تكون الإشارة ضعيفة وقد يتعذر تكوينه بشكل صحيح. انقل جهاز التوجيه من مكانه حتى يصبح أقرب إلى الجهاز.

خدمة ما بعد البيع (مصر فقط)

- العمر الافتراضي : ٦ سنوات
- تلتزم شركة LG بتوفير جميع قطع الغيار الخاصة بهذه الأجهزة خلال فترة العمر الافتراضي.

32 استكشاف الأعطال وإصلاحها

الأعراض	السبب المحتمل والحل
لا يتم ملء الجهاز بطريقة صحيحة.	انسداد فلتر الإدخال. • تأكد من أن فلتر إدخال المياه الموجودة عند صمامات الماء غير مسدودة.
	قد تكون خراطيم إدخال المياه ملتوية. • تأكد من عدم التواء أو انسداد خراطيم إدخال المياه.
	إمداد الماء غير كافٍ. • تأكد من فتح صنبوري الماء الساخن والبارد بشكل كامل.
	الباب والدرج مفتوحان. • لن تعمل الغسالة الصغيرة إذا كان الغطاء مفتوحًا. أغلق الغطاء وتأكد من عدم انحراف أي شيء أسفل الغطاء يمنع من الإغلاق بشكل كامل.
	يبدو أن مستوى الماء في الحوض منخفض جدًا. • يتم تحديد أفضل مستوى ملء مناسب لحركة الغسيل للحصول على أفضل كفاءة غسيل.
لا يقوم الجهاز بتصريف المياه.	خرطوم التصريف ملتوٍ أو مضغوط أو مسدود. • تأكد من عدم انسداد خرطوم التصريف، ومن عدم التواءه، وإلخ، ومن عدم الضغط عليه خلف الغسالة أو تحتها.
وقت الدورة أطول من المعتاد.	الحمولة صغيرة للغاية. • أضف مزيدًا من الأغراض كي يتمكن الجهاز من موازنة الحمولة.
	تم خلط الأغراض الثقيلة مع الملابس ذات الأوزان الأقل. • حاول دائمًا غسل قطع الملابس ذات الأوزان المتشابهة معًا حتى يتمكن الجهاز من توزيع وزن الحمولة بالتساوي في مرحلة العصر.
	الحمولة ليست متوازنة. • قم بإعادة توزيع الحمولة إذا كانت الأغراض متشابكة.
تم إلغاء نهاية الدورة.	تم الكشف عن وجود خلل في التوازن أو تم تشغيل برنامج إزالة رغوة الصابون. • هذا أمر طبيعي، فالوقت المتبقي الظاهر على شاشة العرض ما هو إلا مدة تقديرية. ومن ثم قد يختلف الوقت الفعلي.

الأداء

الأعراض	السبب المحتمل والحل
إزالة ضعيفة للبقع	الملابس شديدة الاتساخ • استخدم الغسالة الرئيسية
	البقع قاسية وقديمة. • ربما تكون الأغراض التي تم غسلها سابقًا ملوثة ببقع قاسية. ربما يصعب إزالة هذه البقع وقد يتطلب الأمر غسلها يدويًا أو معالجتها مسبقًا للمساعدة في إزالة البقع.
البقع	لم يتم فرز الملابس بطريقة صحيحة. • احرص دائمًا على غسل الملابس ذات الألوان الغامقة بشكل منفصل عن الملابس ذات الألوان الفاتحة والبيضاء لتجنب تغير ألوانها. • لا تقم أبدًا بغسل الأغراض شديدة الاتساخ مع الأغراض قليلة الاتساخ.

استكشاف الأعطال وإصلاحها 31

م
ع
ي

الأعراض	السبب المحتمل والحل
الجهاز لا يعمل.	<p>تم إيقاف تشغيل لوحة التحكم بسبب التوقف عن التشغيل.</p> <ul style="list-style-type: none"> هذا أمر طبيعي، اضغط على الزر الطاقة لتشغيل الجهاز.
	<p>الجهاز غير متصل بالتيار الكهربائي.</p> <ul style="list-style-type: none"> تأكد من توصيل السلك بأمان في مقبس يعمل.
	<p>تم إيقاف إمداد الماء.</p> <ul style="list-style-type: none"> أدر صنبور المياه بالكامل.
	<p>لم يتم ضبط عناصر التحكم بشكل صحيح.</p> <ul style="list-style-type: none"> تأكد من أن البرنامج مضبوط بشكل صحيح. أغلق الباب واضغط على الزر بدء/إيقاف مؤقت.
	<p>الباب أو الدرج مفتوح.</p> <ul style="list-style-type: none"> أغلق الباب/الدرج وتأكد من عدم احتشار أي من الأغراض تحت الباب مما يمنع من الإغلاق بشكل كامل.
	<p>قاطع التيار/مصرف موصول/منصهر.</p> <ul style="list-style-type: none"> افحص قواطع التيار/المصهرات بالمنزل. استبدل المصهرات أو أعد ضبط القاطع. ينبغي تخصيص دائرة كهربائية فرعية خاصة بالجهاز. سيستأنف الجهاز البرنامج من حيث توقف بمجرد استعادة الطاقة.
	<p>ينبغي إعادة ضبط عنصر التحكم.</p> <ul style="list-style-type: none"> اضغط على زر الطاقة، ثم أعد تحديد البرامج المرغوب فيها واضغط على زر بدء/إيقاف مؤقت.
	<p>بدء/إيقاف مؤقت لم يتم الضغط عليه بعد تحديد البرنامج.</p> <ul style="list-style-type: none"> اضغط على الزر الطاقة، ثم أعد تحديد البرنامج المطلوب واضغط على الزر بدء/إيقاف مؤقت. سوف يتوقف الجهاز عن التشغيل إذا لم يتم الضغط على الزر بدء/إيقاف مؤقت خلال وقت معين.
	<p>ضغط الماء منخفض للغاية.</p> <ul style="list-style-type: none"> افحص صنبور آخر بالمنزل للتأكد من أن ضغط الماء بالمنزل مناسب.
	<p>الغسالة باردة للغاية.</p> <ul style="list-style-type: none"> إذا تم تعريض الغسالة لدرجات حرارة تحت درجة التجمد لفترة ممتدة من الوقت، اسمح لها بأن تدفأ قبل الضغط على زر الطاقة.
الدرج لا يفتح.	<p>لا يمكن فتح الدرج بمجرد تشغيل الجهاز لأسباب تتعلق بالسلامة.</p> <ul style="list-style-type: none"> هذا أمر طبيعي. يمكنك فتح الدرج بأمان بعد إيقاف تشغيل (5).

30 استكشاف الأعطال وإصلاحها

الأعراض	السبب المحتمل والحل
ضوضاء الاهتزاز	لم تتم إزالة مواد التغليف.
	• قم بإزالة مواد التغليف.
	قد تكون الملابس موزعة بشكل غير متساوي في حوض الغسيل.
	• قم بإيقاف تشغيل الدورة مؤقتًا وأعد توزيع الملابس بعد فك قفل الباب.
	جميع أرجل الاستواء غير مستقرة على الأرض بالتساوي وغير ثابتة.
	• انظر إلى تعليمات ضبط مستوى الجهاز لضبط مستواه.
	الأرض ليست صلبة بما يكفي.
	• تحقق من صلابة الأرض وعدم ليونتها. انظر متطلبات مكان التركيب لتحديد المكان المناسب لوضع الجهاز.

التشغيل

الأعراض	السبب المحتمل والحل
تسرّب الماء	انسداد أنابيب خرطوم التصريف.
	• أزل العوائق من أنابيب التصريف. اتصل بالسباك إذا لزم الأمر.
	حدوث تسريب بسبب التركيب غير الصحيح لخرطوم التصريف أو بسبب انسداده.
	• قم بتنظيف خرطوم التصريف وتسويته. افحص فلتر التصريف وقم بتنظيفه بانتظام.

استكشاف الأعطال وإصلاحها 29

م

الأعراض	السبب المحتمل والحل
E خطأ في وحدة التحكم	ثمة خطأ في وحدة التحكم. • افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
LE خطأ توقف المحرك	حمولة زائدة على المحرك. • اترك الجهاز لمدة 30 دقيقة حتى يبرد المحرك، بعد ذلك أعد تشغيل الدورة.
FE خطأ زيادة التدفق	يتدفق الماء نظراً إلى وجود عيب محتمل في صمام الماء. • أغلق صنبور الماء. افصل قابس الطاقة. اتصل بالخدمة.
PE خطأ في مستشعر الضغط	تعطل مستشعر منسوب الماء. • أغلق صنبور الماء. افصل قابس الطاقة. اتصل بالخدمة.
E خطأ في الرص	قد تقم بتشغيل الغسالة الصغيرة بدون رص الغسالة الرئيسية. • لن تعمل الغسالة الصغيرة كوحدة منفصلة. يجب أن يتم رصها ضمن غسالة تحميل أمامي مناسبة من LG. لا يعمل مفتاح الوحدة بشكل سليم. • لا يُستخدم هذا الجهاز إلا مع الأجهزة المعتمدة من LG. اتصل بمركز معلومات العملاء للتحقق من الأجهزة المعتمدة من LG.
FF خطأ بسبب التجمد	هل خرطوم الإمداد/التصريف أو مضخة التصريف متجمدة؟ • قم بإضافة ماء دافئ إلى حوض الغسل لفك التجميد الذي يعترض خرطوم التصريف ومضخة التصريف. قم بتغطية خرطوم الإمداد بمنشفة مبللة بالماء الدافئ.
EC إنذار تنظيف الحوض	تم تشغيل البرنامج لأكثر من 30 مرة. • قم بتشغيل وظيفة Tub Clean (تنظيف الحوض).
EL وظيفة القفل ضد عبث الأطفال	لا يعتبر EL خطأ. تمنع هذه الخاصية الأطفال من تغيير الدورات أو تشغيل الجهاز. • قم بإيقاف تشغيل وظيفة القفل ضد عبث الأطفال في لوحة التحكم.

ضوضاء يُحتمل سماعها

الأعراض	السبب المحتمل والحل
صوت الارتجاج والقفزة	قد توجد أجسام غريبة في حوض الغسل مثل المفاتيح أو القطع المعدنية أو دبابيس الأمان. • قم بإيقاف تشغيل الجهاز، وافحص حوض الغسل بحثاً عن أجسام غريبة. إذا استمر صدور صوت الضجيج بعد إعادة تشغيل الجهاز، فاتصل لطلب الخدمة.
الغسالة تصدر صوتاً غير اعتيادي	قد ينتج عن الملابس الثقيلة إصدار صوت غير اعتيادي. هذا أمر طبيعي عادة. • في حالة استمرار إصدار الصوت، فمن المحتمل أن يكون الجهاز مثبتاً بشكل غير متوازن. قم بإيقاف التشغيل وأعد توزيع الملابس. قد تكون الملابس غير متوازنة. • قم بإيقاف تشغيل الدورة مؤقتاً وأعد توزيع الملابس بعد فك قفل الباب.

استكشاف الأعطال وإصلاحها

قد يؤدي تشغيل جهازك إلى حدوث أخطاء وأعطال. تحتوي الجداول التالية على الأسباب المحتملة والملاحظات التي تقوم بمعالجة أي رسالة خطأ أو عطل. يُوصى بقراءة الجداول التالية بعناية توفيرًا للوقت والمال الذي قد تنكبه عند التواصل مع مركز خدمة LG Electronics.

قبل الاتصال بمركز الخدمة

تم تزويد الجهاز بنظام رصد الخطأ آليًا لكشف المشكلات وتشخيصها في مرحلة مبكرة. وإذا لم يعمل الجهاز بشكل صحيح أو لم يعمل على الإطلاق، فتتحقق من الجداول التالية قبل الاتصال بمركز خدمة LG Electronics.

رسائل الخطأ

الأعراض	السبب المحتمل والحل
IE خطأ في خرطوم إدخال الماء	إمداد الماء غير كافٍ في هذا الموقع. لا يدخل الماء إلى الجهاز أو يدخل ببطء. • استخدم صنبورًا آخر في المنزل.
	صنبور الإمداد بالماء غير مفتوح بالكامل. لا يدخل الماء إلى الجهاز أو يدخل ببطء. • افتح صنبور الماء بالكامل.
	خرطوم (خراطيم) الإمداد بالماء ملتو. • قم بتسوية الخرطوم أو أعد تركيب خرطوم إدخال الماء.
	فلتر خرطوم (خراطيم) الإمداد بالماء مسدود. • افحص فلتر صمام إدخال الماء ونظفه بعد إغلاق الصنابير وإزالة وصلات الخرطوم من الغسالة.
	عملية إعادة توازن غير ناجحة. • إن العملية التلقائية لإعادة توازن الملابس غير ناجحة. تم إيقاف الدورة مؤقتًا للسماح بضبط الغسيل يدويًا.
UE خطأ في عدم التوازن	الحمولة صغيرة للغاية. • أضف مزيدًا من الأغراض ليتمكن الجهاز من موازنة الملابس.
	تم خلط الأغراض الثقيلة مع الأغراض ذات الأوزان الأقل. • قم بغسل الأغراض ذات الأوزان المتشابهة.
	الحمولة ليست متوازنة. • قم بإعادة توزيع الملابس يدويًا إذا كان الغسيل متشابكًا.
	خرطوم التصريف ملتو أو مسدود. لا يتم تصريف الماء الموجود في الجهاز أو يتم تصريفه ببطء. • قم بتنظيف خرطوم التصريف وتسويته.
	لم يتم إغلاق الدرج بشكل صحيح • أغلق الدرج واضغط على زر التشغيل/الإيقاف المؤقت لبدء الدورة. • عند عرض رسالة الخطأ هذه على الرغم من إغلاق الدرج، اتصل بمركز الخدمة.
dE1 dE2 خطأ في الدرج	لم يتم إغلاق الباب بشكل سليم • افتح الدرج وتأكد من عدم وجود ملابس أو عوائق أخرى عند مكان المزلاج. • أغلق الباب، أغلق الدرج، واضغط على التشغيل/الإيقاف المؤقت لبدء الدورة. • عند عرض رسالة الخطأ هذه على الرغم من إغلاق الدرج، اتصل بمركز الخدمة.

الصيانة 27

- لا تقم بتشغيل الغسالة بدون فلتر الوبر.

ملاحظة

- عند حدوث تلف بفلتر الوبر، اتصل بمركز خدمة LG.


تنظيف فلتر إدخال الماء

يعمل فلتر إدخال المياه على جمع ترسيب الجير أو أي رواسب قد تكون في المياه المدخلة إلى الجهاز. قم بتنظيف مرشح المدخل كل ستة أشهر أو نحو ذلك، أو أكثر إذا كان الماء عسراً جداً أو يحتوي على آثار من الترسبات الكلسية.

- أغلق صنبور إدخال الماء إلى الجهاز إذا كنت ستترك الجهاز دون استخدام لفترة زمنية (على سبيل المثال عطلة)، لاسيما عند عدم وجود صرف في الأرضية (مصرف) في مكان مجاور مباشرة.
- سوف تظهر رسالة الخطأ [E] على لوحة التحكم عند عدم دخول الماء إلى درج منظفات الغسيل.

- 1 أغلق التيار الكهربائي وصنبور الماء ثم فك خرطوم إدخال الماء.

- 2 أزل مصفاة المياه المدخلة باستخدام زراية صغيرة ثم نظف المصفاة باستخدام فرشاة أسنان ذات شعيرات متوسطة.

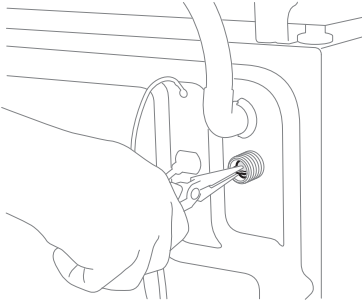


تنظيف فلتر الوبر


يُعد الفلتر من الأجزاء الهامة لتحقيق فعالية أداء الغسيل، لذلك فهو يحتاج منك إلى عناية خاصة. نوصي بتنظيف الفلتر بصفة منتظمة.

- نظف مصفاة الوبر بعد كل عمليتي غسيل أو ثلاث عمليات غسيل على الأقل.

- 1 اضغط على أزرار الإفلات الجانبية وارفع الفلتر.

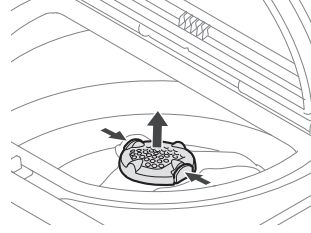


- 2 افتح الغطاء وأزل أي وبر قم بغسله.

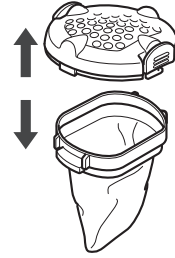

- 3 قم بغسيل الفلتر بفرشاة ناعمة.

- 4 قم بتركيب الجزء السفلي من الفلتر في الحلة وأغلق الغطاء حتى تسمع صوت طقطقة.

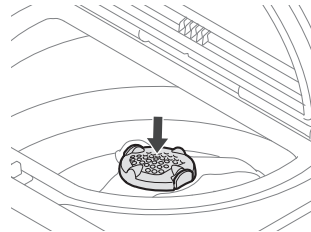

تنبيه

- تجنب ترك الأشياء المعدنية (مثل دبائيس الملابس، ودبائيس الشعر، وما إلى ذلك) والتي تصدأ بسرعة في مصفاة الوبر.
- لا تقم بتركيب فلتر الوبر دون إحكام أو يصبح سائباً. قد يؤدي ذلك إلى إتلاف الأقمشة أو الغسالة.

الصيانة

⚠ تحذير

- افصل الجهاز قبل التنظيف لتجنب خطر التعرض لصدمة كهربائية. قد يؤدي عدم اتباع هذا التحذير إلى التعرض إلى إصابة خطيرة، أو نشوب حريق، أو التعرض لصدمة كهربائية، أو حدوث وفاة.
- لا تستخدم أبداً مواداً كيميائية مركزة، أو منظفات كاشطة، أو مذيبات لتنظيف الجهاز. قد يتسبب ذلك في تلف تشطيب الغسالة.

التنظيف بعد كل غسلة

ما الذي يجب غسله

- أزل دائماً الأغراض من الغسالة بمجرد اكتمال الدورة. قد يتسبب ترك الملابس مبللة داخل الغسالة في كرمشتها، وفقدان لونها، وتغير رائحتها.
- بعد انتهاء دورة الغسيل، امسح الباب وسدادة مانع التسرب في الباب لإزالة أي آثار للرطوبة.
- اترك الباب مفتوحاً جزئياً لتجفيف حوض الغسل.
- امسح الجهاز بقطعة قماش جافة لإزالة أي آثار للرطوبة.

⚠ تحذير

- اترك الباب مفتوحاً حتى يجف الجهاز من الداخل، فقط في حالة مراقبة الأطفال بالمنزل عند القيام بذلك.

تنظيف الهيكل الخارجي

تساعد العناية الجيدة بالجهاز على إطالة العمر الافتراضي.

الهيكل الخارجي

- امسح أي تسريبات على الفور.
- امسح بقطعة قماش مبللة ثم مرة أخرى بقطعة قماش جافة لضمان عدم وجود رطوبة في مفاصل الكابينة أو الشقوق.
- لا تضغط على السطح أو على شاشة العرض باستخدام أدوات حادة.

الباب

- امسح الجزء الداخلي والخارجي باستخدام قطعة قماش مبللة ثم جفف باستخدام قطعة قماش ناعمة.

⚠ تحذير

- لا تحاول فصل أي لوح من الألواح أو فك الجهاز. لا تستخدم أي أدوات حادة على لوحة التحكم لتشغيل الجهاز.

تنظيف الجهاز بصورة دورية

Tub Clean (تنظيف الحوض)

- وهي خاصية مميزة للمساعدة في تنظيف الجهاز من الداخل بالنقع والغسل والشطف والعصر.
- قم بتشغيل هذه الوظيفة مرة في الشهر (أو أكثر إذا لزم الأمر) للحد من تركم أجزاء المنظف والمنعم والرواسب الأخرى.
- إذا انبعتت من الجهاز رائحة كريهة أو عفنة، قم بتشغيل هذه الوظيفة مرة في الأسبوع لمدة 3 أسابيع إلى جانب الفترات العادية لتشغيل هذه الوظيفة.

ملاحظة

- ستظهر رسالة ECL لتنبيه المستخدم إلى تشغيل الوظيفة الموصى بها.

1

أخرج أي ملابس أو أغراض من الجهاز.

2

قم بتخفيف 200 مليلي من مبيض الكلور السائل في لتر من الماء وقم بسكب المزيج داخل الحلة.

3

أغلق الباب والدرج.

4

اضغط زر الطاقة للتشغيل، ثم حدد Tub Clean (تنظيف الحوض).

5

اضغط على الزر بدء/إيقاف مؤقت للبدء.

6

- اترك الباب مفتوحاً حتى يجف الجزء الداخلي من الجهاز تماماً.
- قد تنبتت من الجهاز رائحة كريهة أو عفنة ما لم يجف الجزء الداخلي منه تماماً.

⚠ تحذير

- اترك الباب مفتوحاً حتى يجف الجهاز من الداخل، فقط في حالة مراقبة الأطفال بالمنزل عند القيام بذلك.

الوظائف الذكية 25

- قد تتعرض هذه الميزة لتغيرات دون سابق إنذار وقد يختلف شكلها وفقًا للمنطقة التي تسكن فيها.

استخدام تطبيق LG ThinQ بغرض تشخيص المشكلات

إذا واجهت مشكلة أثناء استخدام الجهاز المزود بشبكة Wi-Fi، فحينها يمكن نقل بيانات استكشاف الأخطاء وإصلاحها إلى هاتف ذكي باستخدام تطبيق LG ThinQ.

- قم بتشغيل تطبيق LG ThinQ واختر ميزة "Smart Diagnosis" من القائمة. اتبع التعليمات الواردة في تطبيق LG ThinQ.

استخدام "التشخيص المسموع" بغرض تشخيص المشكلات


اتبع التعليمات أدناه للاستعانة بطريقة التشخيص المسموع.

- قم بتشغيل تطبيق LG ThinQ واختر ميزة "Smart Diagnosis" من القائمة. اتبع تعليمات استخدام التشخيص المسموع الواردة في تطبيق LG ThinQ.

1 اضغط على الزر الطاقة لتشغيل الجهاز.

- لا تضغط على أي أزرار أخرى.

2 ضع صوان التكلم في هاتفك الذكي بالقرب من الرمز  أو .

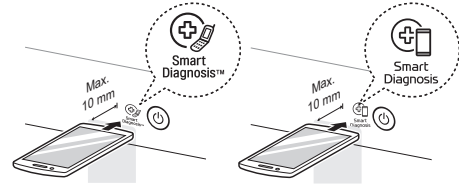

3 اضغط مع الاستمرار على الزر Tub Clean (تنظيف الحوض) لمدة 3 ثوانٍ أو أكثر مع الاستمرار في الإمساك بصوان التكلم في هاتفك الذكي من الرمز حتى انتهاء نقل البيانات.

- أبقِ الهاتف في مكانه حتى انتهاء نقل البيانات. ويتم عرض الوقت المتبقي لنقل البيانات.

4 بعد إتمام نقل البيانات، سيظهر التشخيص على شاشة التطبيق.

ملاحظة

- للحصول على أفضل النتائج، لا تحرك الهاتف الذكي أثناء نقل النغمات.

تعطيل هذه الوظيفة يدويًا

عندما يتم تفعيل هذه الوظيفة، اضغط مع الاستمرار على زر **V** لمدة 3 ثوانٍ.

مواصفات وحدة الشبكة المحلية اللاسلكية (LAN)

الطراز	LCW-007
النطاق الترددي	من 2412 إلى 2472 ميغا هرتز
قدرة الخرج (الحد الأقصى)	IEEE 802.11b: 17.59 dBm
	IEEE 802.11g: 17.39 dBm
	IEEE 802.11n (HT20): 16.64 dBm
	IEEE 802.11n (HT40): 17.05 dBm

وظيفة الشبكة اللاسلكية S/W الإصدار: V 1.0

مراعاة للمستخدم، يجب تثبيت الجهاز وتشغيله بحيث يوجد مسافة 20 سم بين الجهاز والجسم.

معلومات حول إشعار البرامج مفتوحة المصدر

للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL وتراخيص مفتوحة المصدر أخرى يتضمنها هذا المنتج، يرجى زيارة الموقع <http://opensource.lge.com>.

بالإضافة إلى التعليمات البرمجية المصدر، تتوفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتنزيل.

ستوفر LG Electronics أيضاً التعليمات البرمجية المفتوحة المصدر على قرص CD-ROM مقابل رسم يغطي تكلفة القيام بهذا التوزيع (مثل تكلفة وسائل النقل والشحن والتسليم) بناءً على طلب يُرسل عبر البريد الإلكتروني إلى opensource@lge.com. إن هذا العرض سار لفترة ثلاث سنوات بعد عملية الشحن الأخيرة لهذا المنتج. يتوفر هذا العرض لأي شخص يتلقى هذه المعلومات.

Smart Diagnosis (التشخيص الذكي)

تتوفر هذه الميزة فقط في الطرز التي تحمل العلامة  أو . يمكنك الاستعانة بهذه الميزة لتشخيص المشكلات التي تواجهك أثناء استخدام الجهاز وحلها.

ملاحظة

- قد لا تعمل هذه الخدمة وذلك يعود لعوامل خارجية على سبيل المثال لا الحصر، عدم توفر شبكة Wi-Fi أو انقطاع الاتصال بشبكة Wi-Fi أو السياسة المحلية لمزج التطبيقات أو عدم توفر التطبيق وهذه أسباب لا تتم عن تقصير من LGE.

ملاحظة

- إذا كان جدار الحماية الموجود على جهاز التوجيه الخاص بك مُمكنًا، قم بتعطيله أو اضيف إليه استثناء.
- يجب أن يكون اسم الشبكة اللاسلكية (SSID) مكوناً من أحرف وأرقام باللغة الإنجليزية. (لا تستخدم رموزاً خاصة)
- قد تختلف واجهة استخدام الهاتف الذكي حسب نظام تشغيل الهاتف وحسب الشركة المصنعة.
- إذا كان بروتوكول الأمان الخاص بجهاز التوجيه مضبوطاً على WEP، فقد يتعذر عليك إعداد الشبكة. الرجاء تغييره إلى بروتوكول أمان آخر (يُنصح باختيار WPA2) ثم أعد تسجيل المنتج.

تثبيت تطبيق LG ThinQ

ابحث عن تطبيق LG ThinQ على Google App Store أو Apple أو Play Store من على هاتف ذكي. اتبع التعليمات لتنزيل التطبيق وتثبيته.

استخدام الجهاز عن بعد

Remote Start (التشغيل عن بعد)

استخدم هاتفًا ذكيًا للتحكم في جهازك عن بعد. يمكنك أيضاً مراقبة تشغيل الدورة للتعرف على الوقت المتبقي للدورة.

استخدام هذه الوظيفة

- ضع الملابس في حوض الغسل.
 - أضف المبيض أو منعم القماش إلى المنطقة المناسبة في الموزع عند الحاجة.
- اضغط على الزر الطاقة.
- اضغط مع الاستمرار على الزر **V** لمدة 3 ثوانٍ لتمكين وظيفة التحكم عن بعد.
- ابدأ إحدى الدورات من التطبيق LG ThinQ على هاتفك الذكي.

ملاحظة

- بمجرد أن يتم تشغيل هذه الوظيفة، يمكنك أن تبدأ دورة من تطبيق الهاتف الذكي LG ThinQ. في حال لم تبدأ الدورة، فسينتظر الجهاز لبدء تشغيل الدورة حتى يتم إيقاف تشغيلها عن بُعد من التطبيق أو تعطيل هذه الوظيفة.
- إذا كان الباب مفتوحاً، فلن تستطيع بدء تشغيل الدورة عن بُعد.

الوظائف الذكية 23


الوظائف الذكية

قبل استخدام تطبيق LG ThinQ


ملاحظة

- 1 تأكد من المسافة بين الجهاز وجهاز التوجيه اللاسلكي (شبكة Wi-Fi).
• إذا كانت المسافة بين الجهاز وجهاز التوجيه اللاسلكي بعيدة أكثر من اللازم، ستصبح قوة الإشارة ضعيفة. قد يستغرق التسجيل وقتًا طويلاً أو قد يفشل التثبيت.

- 2 قم بإغلاق بيانات الهاتف المحمول أو البيانات الخلوية على هاتفك الذكي.

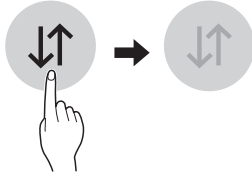

- 3 وصل هاتفك الذكي بجهاز التوجيه اللاسلكي.

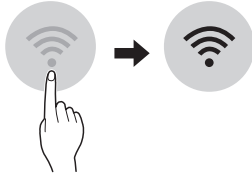

ملاحظة

- للتحقق من اتصال Wi-Fi، قم بفحص رمز  على لوحة التحكم ما إذا كان مضيئاً.
- يدعم الجهاز شبكات Wi-Fi بتردد 2.4 جيجاهرتز فقط. لمعرفة تردد الشبكة الخاصة بك، اتصل بمزود خدمة الإنترنت أو راجع دليل جهاز التوجيه اللاسلكي.
- تطبيق LG ThinQ ليس مسؤولاً عن أي مشاكل الاتصال بالشبكة أو أي أعطال، أو خلل، أو أخطاء نتجت عن طريق الاتصال بالشبكة.
- إذا كان لدى الجهاز مشكلة اتصال بشبكة Wi-Fi، قد يكون بعيداً جداً عن جهاز التوجيه. اشتر جهاز تقوية Wi-Fi (موسع المدى) لتحسين قوة إشارة Wi-Fi.
- قد لا يتم الاتصال بشبكة Wi-Fi أو قد يتم قطع الاتصال حسب جودة بيئة الشبكة المحلية.
- قد لا يعمل الاتصال بالشبكة بشكل صحيح وفقاً لمزود خدمة الإنترنت.
- يمكن أن تجعل البيئة اللاسلكية المحيطة خدمة الشبكة اللاسلكية تعمل ببطء.
- تعثر تسجيل الجهاز بسبب مشكلات في إرسال الإشارة لاسلكياً. أفضل قابس الجهاز عن الطاقة وانتظر لمدة دقيقة قبل أن تحاول مجدداً.

استخدام تطبيق LG ThinQ

مزايا تطبيق LG ThinQ

تواصل مع الجهاز عبر هاتف ذكي باستخدام الخصائص الذكية الملائمة.

Remote Start (التشغيل عن بعد)

يتيح لك التحكم في الجهاز عن بعد من خلال تطبيق LG ThinQ.

تنزيل الدورات

يمكنك تنزيل الدورات الجديدة والخاصة التي لم يتم تضمينها في الدورات الأساسية على الجهاز.

يمكن للأجهزة التي تم تسجيلها بنجاح تنزيل مجموعة متنوعة من الدورات المتخصصة المصممة للجهاز.

بمجرد اكتمال تنزيل الدورة في الجهاز، يحتفظ الجهاز بالدورة التي تم تنزيلها حتى يتم تنزيل دورة جديدة.

ملاحظة

- يمكن تخزين دورة واحدة في الجهاز في كل مرة.

التدريب على تنظيف الحوض

تُظهر هذه الوظيفة عن عدد الدورات المتبقية قبل تشغيل وظيفة Tub Clean (تنظيف الحوض).

مراقبة الطاقة

تتحقق هذه الوظيفة من استهلاك الطاقة للدورات التي تم استخدامها مؤخراً ومتوسط الاستهلاك الشهري.

Smart Diagnosis (التشخيص الذكي)

توفر هذه الوظيفة معلومات مفيدة حول تشخيص مشكلات الجهاز وحلها حسب نمط الاستخدام.

الإعدادات

يسمح لك بتعيين خيارات متعددة على الجهاز وفي التطبيق.

إرسال التنبيهات

عند الانتهاء من الدورة أو حدوث عطل في الجهاز، يمكنك استلام إشعارات على هاتفك الذكي. تنطلق هذه الإشعارات حتى لو كان تطبيق LG ThinQ مغلقاً.

ملاحظة

- إذا غيرت جهاز التوجيه اللاسلكي الخاص بك، أو مزود الخدمة، أو كلمة المرور، قم بتمسح الجهاز المسجل من تطبيق LG ThinQ وسجله من جديد.
- يخضع التطبيق للتغيير لأغراض تحسين الجهاز بدون إشعار المستخدمين.
- قد تتغير الميزات حسب الطراز.

خيارات ووظائف إضافية

ضبط عدد مرات الشطف

اضغط على زر **Rinse+** (شطف+) لزيادة عدد مرات الشطف.

1 جهّز الملابس وضعها داخل حوض الغسل.

2 اضغط على الزر الطاقة.

3 أضف المنظف.

4 حدد برنامج الغسيل.

5 اضغط على زر **Rinse+** (شطف+) عند الحاجة، وبعد ذلك سيتم عرض عدد دورات الشطف. (يمكن اختيار 1 حتى 5 من مرات الشطف حسب البرنامج.)

6 اضغط على الزر بدء/إيقاف مؤقت.

قفل/إلغاء قفل لوحة التحكم للأمان

استخدم خيار **القفل ضد عبث الأطفال** لتعطيل أدوات التحكم. يمكن أن تمنع هذه الميزة الأطفال من تغيير الدورات أو تشغيل الجهاز.

ملاحظة

- بمجرد أن يتم تعيين هذه الوظيفة، يتم قفل جميع الأزرار باستثناء زر الطاقة.
- عند إغلاق وسائل التحكم، L و الوقت المتبقي يظهران بالتناوب على الشاشة أثناء الغسيل وتشغيل هذه الوظيفة.
- لن يؤدي إيقاف تشغيل الطاقة إلى إعادة تعيين هذه الوظيفة. يجب إلغاء تفعيل هذه الوظيفة لتتمكن من الوصول إلى أي وظائف أخرى.

قفل/إلغاء قفل لوحة التحكم

1 اضغط زر الطاقة للتشغيل.

2 اضغط مع الاستمرار على زر **Tub Clean** (تنظيف الحوض) وزر **Rinse+** (شطف+) معاً لمدة ثلاث ثوانٍ لتفعيل/إيقاف تفعيل هذه الوظيفة.

التشغيل 21

برنامج الغسيل


ملاحظة

متسخ خفيف	الحد الأقصى للحمولة: مقنن
الوصف	يغسل كميات صغيرة من الملابس المتسخة قليلاً، ما عدا الأقمشة الحساسة مثل الصوف والحرير. • الضغط على الزر بدء/إيقاف مؤقت دون تحديد برنامج للعمل يتسبب في بدء تشغيل البرنامج متسخ خفيف على الفور باستخدام الإعدادات الافتراضية.
ملابس داخلية	الحد الأقصى للحمولة 1.5 كجم
الوصف	يغسل الملابس الداخلية والملابس الشفافة والملابس المصنوعة من الدانتيل التي تتلف بسهولة. • هذا البرنامج غير مناسب لغسيل الملابس المصنوعة من الحرير.
ملابس داخلية للنساء	الحد الأقصى للحمولة 1 كجم
الوصف	مناسبة لغسيل الملابس الداخلية والشفافة والمخرمة.
عناية بملابس الأطفال	الحد الأقصى للحمولة 1.5 كجم
الوصف	يقوم بغسل ملابس الأطفال بحركات بسيطة وأداء أفضل.
غسيل يدي	الحد الأقصى للحمولة 1 كجم
الوصف	مناسب للملابس الرقيقة التي يمكن غسلها باليد أو داخل الغسالة، مثل الصوف والملابس الداخلية والفساتين وغيرها من الملابس القابلة للغسيل. • يُنصح باستخدام المنظف الخاص بالصوف القابل للغسيل في الغسالة.
شطف+تشفيف	الحد الأقصى للحمولة 1.5 كجم
الوصف	مناسبة لشطف ودوران الغسيل. استخدم منعم للأقمشة حسب الحاجة.
دوران فقط	الحد الأقصى للحمولة 1.5 كجم
الوصف	يعصر الملابس المغسولة يدوياً والتي ربما لم يتم غسلها في الغسالة.
تنزيل النورات	-
الوصف	يسمح لك هذا البرنامج بتنزيل برنامج غسيل جديد وخاص يناسب جهازك وذلك باستخدام الهاتف الذكي.

ملاحظة

- احرص دائماً على اتباع ملصق أو تعليمات العناية الخاصة بالشركة المُصنَّعة للملابس عند الغسيل لتجنب تلف الملابس.
- يوصى باستخدام منظف محايد.

شاشة الوقت والحالة

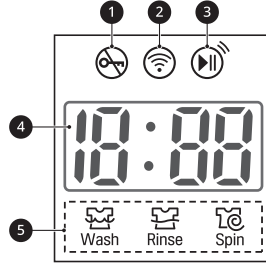


الوصف	
1	يكون قيد الإضاءة عند بدء البرنامج وإغلاق الباب.
2	يكون قيد الإضاءة عند توصيل الجهاز بشبكة Wi-Fi في المنزل.
3	يكون قيد الإضاءة عند تنشيط ميزة التحكم عن بعد.
4	<p>الوقت التقديري المتبقي</p> <ul style="list-style-type: none"> • عند تحديد برنامج الغسيل، يتم عرض الوقت الافتراضي المحدد لهذا البرنامج. سيتغير هذا الوقت تبعاً للخيارات المحددة. • إذا ظهر --- على الشاشة، فسيظهر الوقت بعدما يكشف خيار استشعار الحمولة عن حجمها. هذا الأمر طبيعي. • الوقت الظاهر هو وقت تقديري فحسب. إذ يتوقف الوقت على ظروف التشغيل الطبيعية. قد تؤثر عوامل خارجية كثيرة (وزن الحمولة، ودرجة حرارة الغرفة، ودرجة حرارة الماء الداخل وغيرها) في الوقت الحقيقي.
5	<p>مؤشرات حالة البرنامج</p> <ul style="list-style-type: none"> • سيومض مصباح LED للمرحلة النشطة عند تشغيل برنامج الغسيل بينما ستظل مصابيح LED للمراحل الأخرى في وضعية الاستقرار. بعد استكمال المرحلة، سيغلق مصباح LED. إذا تم إيقاف الدورة مؤقتاً، فسيتم إيقاف مصباح LED للمرحلة النشطة عن الوميض.

التشغيل 19

لوحة التحكم وجدول البرنامج

خواص لوحة التحكم

الرمز

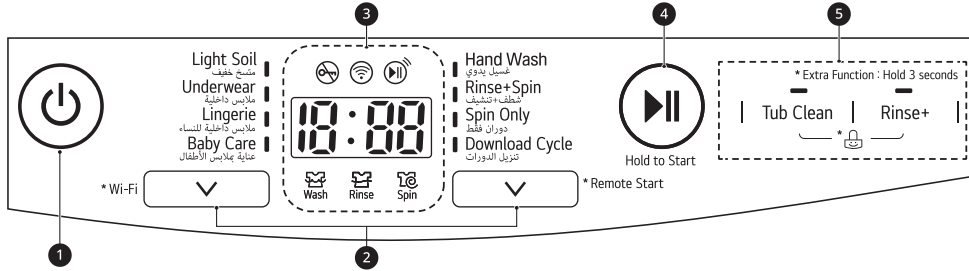

الوصف	
<p>1</p> <p>الطاقة زر التشغيل/إيقاف التشغيل</p> <ul style="list-style-type: none"> • اضغط على هذا الزر لتشغيل الغسالة. 	
<p>2</p> <p>زر البرامج</p> <ul style="list-style-type: none"> • تتوفر البرامج وفقاً لنوع الملابس. • سيضيئ المصباح للإشارة إلى البرنامج المحدد. 	
<p>3</p> <p>شاشة العرض</p> <ul style="list-style-type: none"> • تعرض شاشة العرض الإعدادات، والوقت المتبقي المقدّر، والخيارات، ورسائل الحالة. عندما يتم تشغيل الجهاز، ستضيء الإعدادات الافتراضية في شاشة العرض. • بينما يتم استشعار وزن الحمولة تلقائياً، تومض الشاشة الموجودة على لوحة التحكم. 	
<p>4</p> <p>زر بدء/إيقاف مؤقت</p> <ul style="list-style-type: none"> • يُستخدم هذا الزر لبدء دورة الغسيل أو إيقافها مؤقتاً. • في حالة الحاجة إلى إيقاف دورة الغسيل مؤقتاً، اضغط على هذا الزر. <p>ملاحظة</p> <ul style="list-style-type: none"> • إذا لم تضغط على زر بدء/إيقاف مؤقت في غضون فترة زمنية معينة، سيتم إيقاف تشغيل الغسالة الصغيرة تلقائياً وستفقد جميع إعدادات الدورة. 	
<p>5</p> <p>خيارات ووظائف إضافية</p> <ul style="list-style-type: none"> • لاستخدام الوظائف الإضافية، اضغط مع الاستمرار على الزر المقابل لمدة 3 ثوانٍ. وعندها سوف يضيئ الرمز المقابل على شاشة العرض. • يسمح لك هذا الخيار بتحديد برنامج إضافي وسيضيئ عندما يتم تحديده. <p>Remote Start (التشغيل عن بعد)</p> <ul style="list-style-type: none"> • يمكنك استخدام تطبيق LG ThinQ في أي هاتف ذكي للتحكم في جهازك عن بعد. • لاستخدام هذه الوظيفة، راجع الوظائف الذكية. <p>Wi-Fi</p> <ul style="list-style-type: none"> • اضغط مع الاستمرار على الزر V لمدة 3 ثوانٍ لبدء توصيل الجهاز بتطبيق LG ThinQ. 	


- لا تصف المنظف ومنعم القماش السائل إلى الملابس مباشرة داخل حوض الغسل، فقد يؤدي ذلك إلى تكوين بقع على الملابس يصعب إزالتها.
- لا تترك المنظف ومنعم القماش السائل في الموزع لأكثر من يوم. حيث يمكن أن يتصلب المنظف ومنعم القماش. فقد يظنون داخل الموزع إذا كانوا بسمكة شديدة. ينبغي تخفيف المنظف والمنعم إذا كان قوامهما كثيفاً للغاية حتى يتسنى التدفق بسهولة.
- بينما يباشر الغسيل، لا تفتح الدرج في أثناء الإمداد بالماء.
- يجب عدم استخدام المذيبات (البنزين، وما إلى ذلك).

إضافة المنظف والمنعم

استخدام الموزع

1 افتح الدرج.

2 أضف المنظف والمنعم داخل الحجيرات الملائمة.

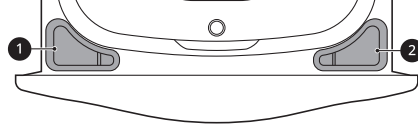

1 وحدة المنظف السائل

2 حجيرة منعم القماش السائل

ملاحظة

- اسكب المنظف ومنعم القماش إلى أن يصل إلى خط أقصى حد للملء. سكب المنظف ومنعم القماش بحيث يتجاوز خط أقصى حد للملء قد يتسبب في توزيعه قبل أوانه وبالتالي ظهور بقع على الملابس.


3 أغلق الدرج برفق قبل بدء برنامج الغسيل.

استخدام كوب قياس المنظفات

1 افتح الدرج وافتح الباب.

2 قم بقياس المنظف باستخدام كوب توزيع المنظف واسكبه في الحلة.

- استخدم كوب عيار المنظف المزود لإضافة كوب واحد فقط من المنظف.

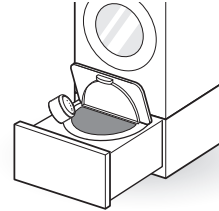

3 أغلق الباب، وأغلق الدرج قبل بدء برنامج الغسيل.


ملاحظة

- يتعين إضافة منظفات غسيل أقل للأغراض ذات الأوساخ الخفيفة. ويرجى استخدام كمية المنظفات المناسبة في الغسالة الصغيرة. ففي حال استخدام منظفات كثيرة جداً، سوف تبقى الفقاعات الزائدة بعد الشطف.

التشغيل 17

- في حالة تعذر فتح الدرج بشكل كامل، اسحب الدرج إلى الأمام ببعض القوة مستخدماً كلتا يديك.
- إذا حدث انقطاعاً للتيار الكهربائي أثناء عملية تشغيل المنتج، فلا يمكن فتح الباب. استعد الطاقة مرة أخرى أو اتصل بمركز خدمة شركة LG.
- قد لا يفتح الغطاء بسبب درجات الحرارة المحيطة المرتفعة، إذا حدث ذلك بعد الغسيل ولم تكن هناك رموز خطأ على الشاشة، فحدد برنامج شطف+تشفيف أو انتظر حتى تنخفض درجات الحرارة حتى يمكن تحرير الغطاء.

- لا يجب أن تزيد الأغراض الكبيرة عن نصف إجمالي الحمولة. ولا تغسل أغراضاً فردية. حيث قد يؤدي هذا إلى عدم التوازن في الحمولة. وأضف قطعة أو قطعتين متشابهتين.
- افحص جميع الجيوب للتأكد من أنها فارغة. فقد تؤدي أشياء مثل المسامير، ومشابك الشعر، والتقاب، والأقلام، والقطع المعدنية، والمفاتيح إلى إحداث ضرر في كل من الجهاز وملابسك.

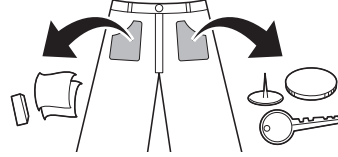

إضافة المنظفات والمواد المنعمة

مقدار المنظف

- يجب استخدام المنظف وفقاً لتعليمات الشركة المصنعة للمنظف، واختياره وفقاً لنوع النسيج ولونه ومدى اتساخه ودرجة حرارة الغسل. استخدم المنظفات المناسبة فقط حوض الغسل (التحميل الأمامي) لهذا النوع من الغسلات.
- في حالة حدوث الكثير من الرغوي، يتعين عليك تقليل كمية المنظف.
- عند استخدام مقدار كبير من المنظف، فقد تحدث رغوة كثيرة جداً وهذا يقلل من كفاءة الغسيل أو يؤدي إلى ثقل الحمولة على المحرك.
- إذا كنت ترغب في استخدام منظف سائل، فاتبع الإرشادات التي توفرها الشركة المصنعة للمنظف.
- قد تحتاج إلى تعديل مقدار استخدام المنظف حسب درجة حرارة الماء، وعسر الماء، وحجم الحمولة، ومستوى الأوساخ. للحصول على أفضل النتائج، تجنب الإفراط في استخدام المنظف. التفاعس عن فعل ذلك يؤدي إلى حدوث رغوا زائدة عن الحد.
- راجع ملصق الملابس، قبل إضافة المنظف واختيار درجة حرارة الماء.
- استخدم المنظفات المخصصة لكل نوع من الملابس:
 - غالباً ما يتم تصنيع المنظف السائل لاستخدامات محددة، على سبيل المثال، للأنسجة الملونة والصوف أو الملابس الحساسة أو الغامقة.
 - مسحوق الغسيل يكون ملائماً لجميع أنواع الأنسجة.
 - للحصول على نتائج غسيل أفضل للملابس البيضاء وذات الألوان الفاتحة، استخدم مسحوق غسيل يحتوي على مبيض.
 - يتدفق المنظف من الموزع في بداية دورة الغسيل.

- اغسل الأقمشة الحساسة (الجوارب أو حمالات الصدر المزودة بأسلاك داخلية) في شبكة الغسيل.
- أغلق السحابات والخطافات والسلاسل للتأكد من أن هذه الأشياء لن تعلق بالملابس الأخرى.
- امسح الأوساخ والبقع من خلال وضع مقدار صغير من المنظف المذاب في الماء على البقع وغسلها للمساعدة في إزالة الأوساخ.

إغلاق الباب والدرج

- 1 اضغط برفق على غطاء الغسالة الصغيرة حتى تسمع صوت طقطقة.
- 2 اضغط على الدرج حتى يتم إغلاقه بشكل كامل.

تنبيه

- لا تدع يديك تعلق بين الباب والغسالة، فقد يتسبب ذلك في حدوث إصابة.
- قد يؤدي فتح الدرج أو الغطاء عنوة إلى حدوث تلف بأجزاء الغسالة ويعرض سلامتك للخطر.
- قد يؤدي إغلاق الدرج قبل إغلاق الغطاء بشكل كامل إلى إحداث خدوش بباب الغطاء الزجاجي.
- تأكد من أن الدرج تم سحبه للخارج بالكامل لمنع الغطاء من ملامسة الجزء الأمامي من الغسالة الرئيسية.

ملاحظة

- لا تترك المنظفات تتصلب. حيث يمكن أن يؤدي ذلك إلى حدوث انسداد، أو ضعف في أداء الشطف، أو رائحة.

ملاحظة

- قد تعذر تأمين قفل الغطاء إذا كانت هناك كمية كبيرة من الغسيل في الغسالة الصغيرة أو إذا لم يتم إغلاق الغطاء بإحكام.
- يضيء عند بدء البرنامج وتأمين قفل الباب. لفتح الدرج، اضغط على زر بدء/إيقاف مؤقت لإيقاف الغسالة.
- إذا ظهرت **dE**، **dE2**، **dE** أو **dE** على الشاشة، فأغلق الدرج والغطاء تماماً. بعد القيام بهذا، اضغط على زر بدء/إيقاف مؤقت مرة أخرى.

التشغيل

نظرة عامة على التشغيل

استخدام الجهاز

- درجة الانساخ (شديدة، عادية، خفيفة): افزر الملابس حسب درجة الانساخ. اغسل الملابس المتسخة قليلاً في الغسالة الصغيرة، ثم اغسل الملابس شديدة الانساخ أو المتسخة بشكل عادي في غسالة LG الرئيسية.
- اللون (أبيض، فاتح، غامق): اغسل المنسوجات الغامقة أو المصبوغة بشكل منفصل عن المنسوجات البيضاء أو الفاتحة. يمكن أن ينتج عن خلط المنسوجات الفاتحة بالمنسوجات المصبوغة انتقال اللون أو تغيير لون الملابس الأفتح لوناً.
- الكتان (منتجات كتانية، منتجات تجمع الكتان): قم بفصل المنتجات الكتانية والمنتجات التي تجمع الكتان. يمكن أن تعمل المنتجات الكتانية إلى تراكم الكتان على المواد المجمعة للكتان.

التحقق من ملصق العناية بالملابس

ستوضح لك الرموز مكونات نسيج الملابس وطريقة غسلها.

الرموز الموجودة على ملصقات العناية

الرمز	الغسيل/نوع النسيج
	• غسيل عادي • قطن، أنسجة مختلطة
	• عناية سهلة • صناعي، أنسجة مختلطة
	• غسيل حساس خاص • ملابس حساسة
	• غسيل يدوي فقط • صوف، حرير
	• ممنوع الغسل

ملاحظة

- تعطيك الشُرط الموضوعه أسفل الرمز المعلومات المتعلقة بنوع النسيج وكذلك مقدار الضغط الميكانيكي الأقصى المسموح.

فحص الملابس قبل وضع الحمولة

- اجمع بين الأغراض الكبيرة والصغيرة في الحمولة. وضع الأغراض الكبيرة أولاً.

1 افزر الغسيل وضع الملابس.

- قم بتصنيف الغسيل حسب نوع النسيج، ودرجة الانساخ، ولون وحجم جمل الغسيل حسب الحاجة، وافتح الباب وحمل الأغراض في الغسالة.

2

- أضف منتجات التنظيف أو المنظف والمنعم.
- أضف الكمية المناسبة من المنظف باستخدام كوب عيار المنظف إلى حلة الغسيل بهدوء.

3

أغلق الباب والدرج.

4

- قم بتشغيل الجهاز.
- اضغط على الزر الطاقة لتشغيل الجهاز.

5

- اختر دورة الغسيل المطلوبة.
- اضغط زر اختيار الدورات بشكل متكرر حتى يتم تحديد الدورة المطلوبة.

6

- بدء الدورة.
- اضغط على الزر **بدء/إيقاف مؤقت** لبدء الدورة. ستتحرك الغسالة لفترة وجيزة بدون مياه لقياس وزن الحمولة. إذا لم يتم الضغط على الزر **بدء/إيقاف مؤقت** خلال وقت معين، فسيتم إيقاف تشغيل الغسالة وستفقد جميع الإعدادات.

7

- إنهاء الدورة.
- سيصدر صوت نغمة عند إنهاء الدورة. على الفور، أخرج الملابس من الجهاز لتقليل التجاعيد. افحص مانع التسرب في الباب عند إخراج حمولة ملابس صغيرة يمكن أن تعلق في مانعة التسريب.
- بعد اكتمال عملية الغسيل، امسح باب الغسالة، والحشية وداخل حلة الغسيل باستخدام منشفة جافة ناعمة للحصول على غسيل نظيف.


تجهيز حمولة الغسيل

تصنيف الملابس

- للحصول على أفضل النتائج، قم بتصنيف الغسيل وفقاً للمكتوب على الملصق الذي يحتوي على نوع النسيج ودرجة حرارة الغسل.

التركيب 15

- إذا كان من الصعب وضع الشرائح المانعة للانزلاق تحت الأرجل الأمامية، فضعها تحت الأرجل الخلفية. يعد تثبيت الشرائح المانعة للانزلاق تحت الأقدام الأمامية هو الخيار الأكثر فعالية.

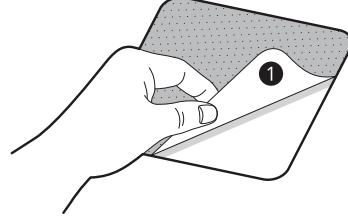

4 ضع الجهاز على الشرائح المانعة للانزلاق.

- لا تلتصق للشرائح المانعة للانزلاق ❶ بأرجل الجهاز.

ملاحظة

- يمكن الحصول على شرائح مانعة للانزلاق من مركز خدمة LG Electronics.

4 تحقق من إحكام جميع صواميل القفل الموجودة في الجزء السفلي من الجهاز بشكل صحيح.

⚠ تحذير

- عند رص الغسالة الرئيسية فوق الغسالة الصغيرة، استخدم قدم التسوية على الغسالة الصغيرة لتسوية كل منها. يجب أن تكون قدم تسوية الغسالة الرئيسية محكمة الربط في مقابل الغسالة الصغيرة وأن تتم إدارة براغي التثبيت بعكس اتجاه عقارب الساعة لتثبيتها.

ملاحظة

- يضمن تحديد المكان والمستوى المناسبين للغسالة تشغيل لفترة طويلة، ومنظمة، وفعالة.
- يجب أن يكون الجهاز في وضع أفقي 100% ومنصوبًا بثبات في مكانه على أرضية صلبة ومسطحة.
- ويجب ألا يكون "متأرجحًا" بين الزوايا وهو محمل.
- لا تدع أقدام الغسالة تبتل. قد يؤدي عدم القيام بذلك إلى الاهتزاز أو الضوضاء.

استخدام شرائح مانعة للانزلاق

تختلف هذه الخاصية وفقًا لنوع الطراز الذي تم شراؤه. عند تركيب الجهاز على سطح زلق، قد تتحرك الغسالة نتيجة للاهتزاز الشديد. ويمكن أن تؤدي التسوية غير الصحيحة إلى حدوث عطل من خلال الضوضاء والاهتزاز. في حالة حدوث ذلك، يتعين عليك تركيب شرائح مانعة للانزلاق أسفل أرجل الاستواء وضبط المستوى.

- 1 نظّف الأرضية لوضع الشرائح المانعة للانزلاق.
 - استخدم قطعة قماش جافة لإزالة الأجسام الغريبة والرطوبة وتنظيفها. وإذا ظل بالمكان بعض الرطوبة، فقد تنزلق الشرائح المانعة للانزلاق.



- 2 اضبط المستوى بعد وضع الجهاز في منطقة التركيب.

- 3 ضع الجانب اللاصق ① للشرائح المانعة للانزلاق على الأرض.

ضبط وتسوية الأقدام

عند تركيب الجهاز، يجب أن تكون أرجل الجهاز متحاذية وفي وضع استواء تام. قد يتعرض الجهاز للتلف أو قد لا يعمل بشكل صحيح إذا لم تكن أرجل الجهاز متحاذية وفي وضع استواء سليم.


- 1 قم بتسوية الأرجل حسب الحاجة إذا كانت الأرضية غير مستوية.
 - لا تضع قطع الخشب وما إلى ذلك تحت أرجل الجهاز.
 - تأكد من استقرار الأرجل الأربعة وثباتها على الأرضية.

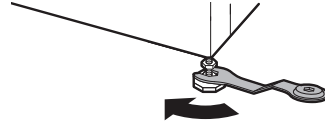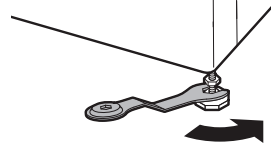


ملاحظة

- لا تقم بتركيب الغسالة على قاعدة عمود أو منصة أو سطح مرتفع ما لم تقم LG Electronics بصناعته ليستخدم مع هذا الطراز.

- 2 تأكد من استواء الجهاز على الأرض تمامًا مستخدمًا ميزان الماء ①.

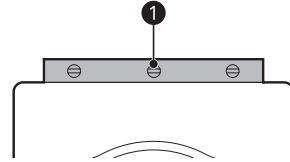


- 3 احكم ضبط الأرجل باستخدام صواميل القفل ② عن طريق تدويرها عكس اتجاه عقارب الساعة باتجاه الجزء السفلي من الجهاز.

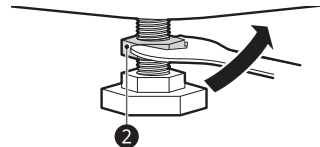

التركيب 13

2 صل خرطوم التصريف الخاص بالغسالة الرئيسية والغسالة الصغيرة بموصل التصريف.

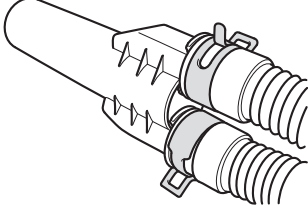

ملاحظة:

3 قم بتوصيل خرطوم التصريف بحنفية التصريف الموجودة في حوض الغسيل أو تركيب سطح الطاولة.

⚠ تنبيه

- اضبط مشابك الخرطوم السلكي لمنع الخراطيم من الانفكاك أو التسرب. قد يتسبب القتل في القيام بذلك في حدوث فيضان. يساعد استخدام موصل التصريف في تجنب الشفط، أو الروائح، أو تصريف المياه غير الصحيح.
- تأكد من أن خرطوم التصريف ليس ملتويًا أو مشدوبًا. فهذا هو السبب المحتمل لمشاكل التصريف أو الضوضاء.

ملاحظة

- اعتمادًا على بيئة التثبيت، قد تضطر إلى شراء وصلة خرطوم تصريف منفصلة. سوف يتناسب الموصل المرفق مع فتحة تصريف جانبية قياسية لحوض الغسيل.

ضبط مستوى الجهاز

التحقق من ضبط المستوى


- عند الضغط على حواف اللوحة العلوية للجهاز بشكل قطري، فيجب ألا يتحرك الجهاز لأعلى ولأسفل على الإطلاق (افحص كلا الاتجاهين).
- في حالة تأرجح الجهاز عند الضغط على اللوحة العلوية للجهاز بشكل قطري، قم بتعديل الأقدام مرة أخرى.
- تحقق من وضع الجهاز في وضعية مستوية على نحو صحيح بعد تركيبه.

ملاحظة

- يمكن أن تحدث الأرضيات الخشبية أو المعلقة اهتزازًا عنيفًا وعدم اتزان. تعزيز الأرضيات الخشبية أو تثبيتها قد يؤدي إلى إيقاف أو تقليل الضوضاء الشديدة أو الاهتزاز.

تركيب خرطوم التصريف

الملحقات اللازمة

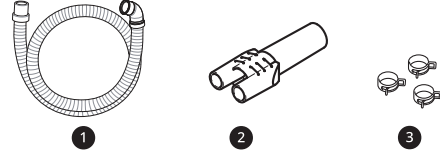

1 خرطوم تصريف الماء

2 موصل خرطوم تصريف الماء


3 مشابك شريطية (3 عدد)

توصيل خرطوم التصريف بالغسالة الصغيرة

يجب عدم وضع خرطوم التصريف أعلى من 100 سم من مستوى الأرض. قد لا يتم تصريف الماء في الجهاز أو يتم تصريفه ببطء.

1 أدخل القامطة يسير في كوع خرطوم التصريف. قد تكون هناك حاجة إلى زرادية لفتح القامطة بحيث يمكن تثبيتها على الطرف المطاطي للخرطوم.

2 باستخدام الخرطوم الذي يبدأ من الكوع، أدخل الكوع في منفذ التصريف على الجزء الخلفي من الغسالة الصغيرة.

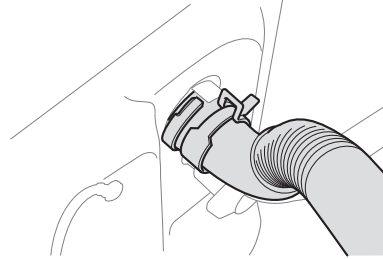


3 اضبط المشبك المشترك باستخدام الكماشة لتأمين الخرطوم في مكانه ومنع التسريب.


توصيل وصلة التصريف

1 أدخل مشابك الخرطوم السلكي المرفق إلى نهايات خرطومي التصريف


2 صل خرطوم الإمداد الخاص بالغسالة الصغيرة بموصل خرطوم إمداد المياه الباردة.

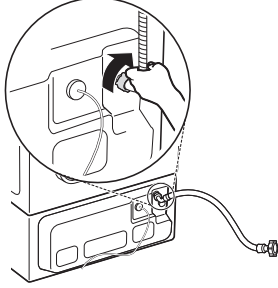

3 صل أحد طرفي موصل خرطوم إمداد الماء البارد ① بخرطوم إمداد المياه الباردة للغسالة الرئيسية أولاً.

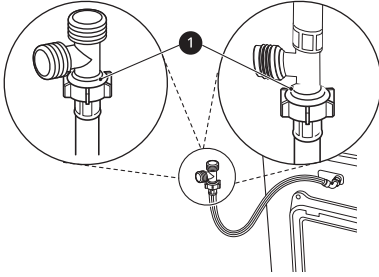

4 صل موصل خرطوم الإمداد المُقدم الإضافي الخاص بالغسالة الرئيسية بموصل خرطوم إمداد المياه الباردة وصنبور المياه الباردة.

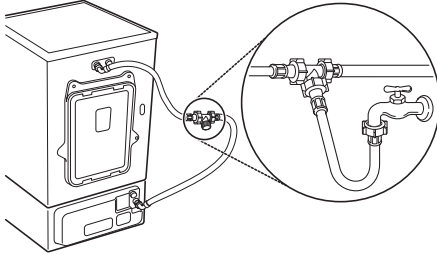


ملاحظة

- تأكد من أن خرطوم الإمداد بالمياه غير متشابكة أو ممزعة.

التحقق من السدادة المطاطية


تتوفر اثنتان من السدادات المطاطية ① مع خراطيم إدخال المياه بالصمام. تستعملان في منع تسريب الماء. يتم إحكام التوصيل بالصنابير.

- لا تستخدم المعدات الآلية مثل الكماشة لإحكام ربط خراطيم الإدخال. تحقق من توصيل الطرف المنحني في خرطوم إدخال المياه بالجهاز.

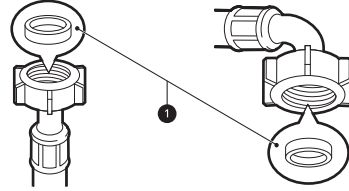

توصيل الخرطوم بصنبور الماء

توصيل الخرطوم اللولبي بالصنبور المزود بأسنان. ثبت موصل خرطوم الإمداد بصنبور إمداد الماء. أحكم الربط باليد فقط بمساعدة قطعة قماش ناعمة. لا تبذل في إحكام ربط خرطوم الإمداد باستخدام المعدات الآلية.

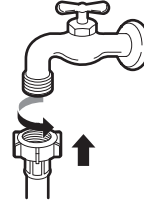

ملاحظة

- بعد توصيل خرطوم إدخال الماء، قم بتشغيل صنبور الماء لطرد المواد الغريبة (الغبار، والرمل، ونشارة الخشب، وما إلى ذلك) الموجودة في خطوط الماء. واجعل الماء يتم تصريفه في دلو، وتحقق من درجة حرارة الماء.

توصيل خراطيم إمداد الماء البارد بالغسالتين

1 افتح حزمة الملحقات الخاصة بملحقات تركيب الغسالة الصغيرة.


التركيب 11

ملاحظة

- لن تعمل الغسالة الصغيرة كوحدة قائمة بذاتها.

توصيل خرطوم إمداد الماء الملحقات اللازمة

- * 1 تختلف الملحقات المرفقة تبعاً للموديل الذي اشتريته.

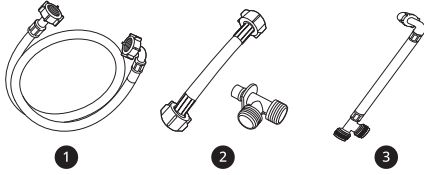

① خرطوم إمداد الماء (خاص بالماء البارد)

② توصيل خرطوم الإمداد والموصل المفكك^{1*}

③ توصيل خرطوم الإمداد باستخدام الموصل المربوط^{1*}



ملحوظة للتوصيل

- يجب أن يكون ضغط المياه بين 50 كيلو باسكال و 800 كيلو باسكال (0.5 - 8.0 كجم/سم²). إذا كان ضغط المياه أكثر من 800 كيلو باسكال، يجب تركيب جهاز تخفيف الانضغاط.
- تحقق من حالة خرطوم إمداد الماء بصورة دورية واستبدله إذا لزم الأمر.

ملاحظة

- إذا كان ضغط الماء يقترب من 800 كيلو باسكال أو يزيد عن ذلك، فيجب تركيب جهاز للحد من ضغط الماء على كلتا الصنابير.
- يمكن أن يؤدي تجاوز درجة حرارة 65 درجة مئوية إلى إتلاف بعض الملابس.
- يمكن أن تتسبب درجات الحرارة التي تقل عن 4 درجات مئوية في تجميد الخراطيم وانفجارها والتقليل من كفاءة الغسيل بسبب إضافة منظفات غير مذبذبة.
- قد تتسبب درجات حرارة إدخال الماء البارد التي تزيد عن 25 درجة مئوية في تلف الملابس مثل المنسوجات الصوفية الحساسة.
- لا تبالغ في إحكام ربط خراطيم إدخال المياه بالصمام أو استخدم المعدات الآلية لربطها بصمام الإدخال.
- ليس هناك حاجة لمزيد من الحماية ضد التنفق الارتجاعي لوصلة إدخال الماء.

- أولاً، أدخل البراغي على كل جانب. ثم أدخل البراغي على الجانب الأمامي والخلفي.

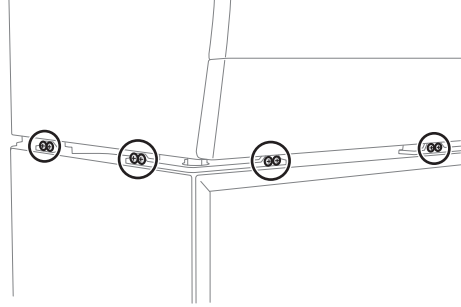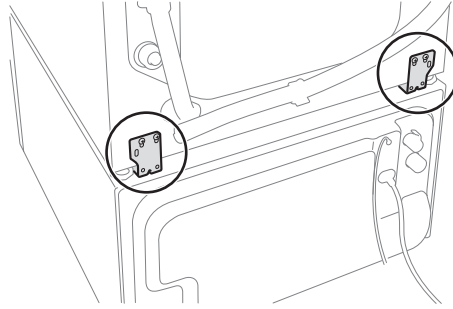


ملاحظة

- قد يصعب التجميع ما لم يتم بالترتيب الصحيح، وما لم تُثبَّت الغسالة الصغيرة على سطح مستوي قبل وضع الغسالة الكبيرة فوقها.


3

أدر أرجل الغسالة الرئيسية قليلاً حتى يتم إحكام ربطها بالغسالة الصغيرة. قم بفك الأرجل القابلة للضبط عن طريق تدويرها في اتجاه عقارب الساعة لمدة نصف دورة باستخدام مفتاح ربط. ثم أحكم ربط صواميل القفل الأربعة. يجب إحكام ربط جميع صواميل القفل.

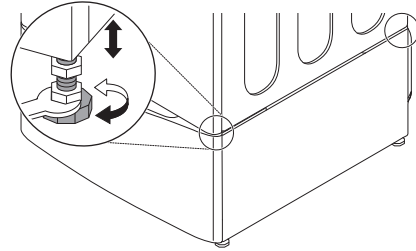


3 رصّ الغسالة الصغيرة والغسالة الأساسية

اقلب الغطاء العلوي حوالي 180 درجة، وقم بتغطية الفتحة الموجودة في الأعلى بالغطاء العلوي وقم بتثبيت 4 براغي صفائح معدنية قصيرة.

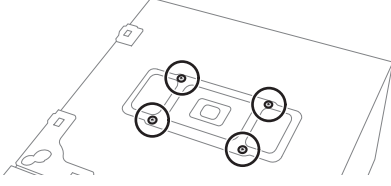


4 ثبت الدعامتين الخلفيتين على الجانب العلوي الخلفي للغسالة الصغيرة عن طريق تركيب 4 براغي في كل دعامّة.

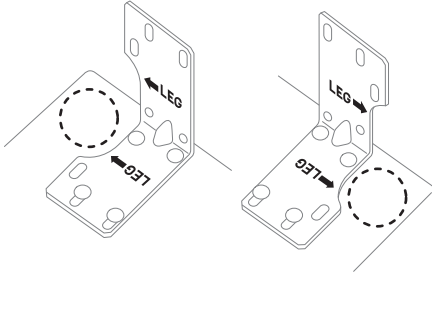


رصّ الغسالة الرئيسية على الغسالة الصغيرة.

1 ضع الغسالة الرئيسية على الجزء العلوي من الغسالة الصغيرة.
• ضع أرجل التسوية للغسالة الرئيسية داخل فتحات الدعامات في الغسالة الصغيرة، وقم بمحاذاة فتحات براغي الدعامات.

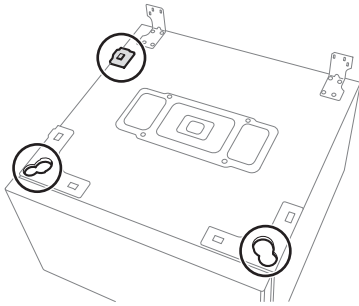

2 اربط الغسالتين بإحكام في الزوايا باستخدام البراغي.

الملحقات اللازمة

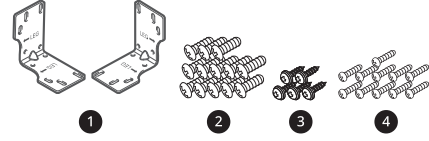

1 الدعامات الخلفية (2 عدد)

2 برغي الماكينة (13 عدد)

3 برغي الصفائح المعدنية القصير (5 عدد)


4 برغي الصفائح المعدنية الطويل (11 عدد)

ملاحظة

- تخضع الملحقات للتغيير من قبل الشركة المصنّعة دون إشعار مسبق لأغراض تحسين المنتج.

تثبيت الدعامات في الغسالة الصغيرة

1 بعد إزالة الكرتون ومواد الشحن، ارفع الغسالة الصغيرة من على قاعدة الفلين، وانتبه إلى وجود دعامتين على قاعدة الفلين.
• تأكد من أن دعامّة الحوض البلاستيكية بعيدة عن القاعدة وغير ملتصقة بأسفل الغسالة الصغيرة.

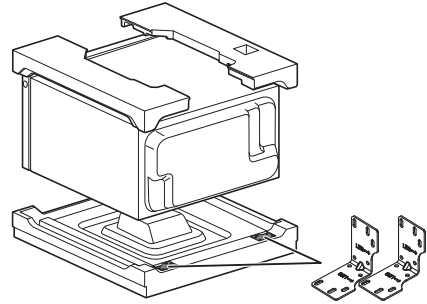

2 انزع كتلة الفلين واحتفظ بها للاستفادة منها في المستقبل.

- إذا كان من الضروري أن يتم نقل الغسالة الصغيرة مستقبلاً، ستساعد كتلة الفلين على منع تلف الغسالة الصغيرة أثناء عملية النقل.
- لمنع التلف، لا تقم بإزالة كتلة الفلين حتى تستقر الغسالة الصغيرة في موقعها الأخير.

9 التركيب

I	5 مم
J	64 سم

تحذير

⚠ تحذير

- لا يستخدم هذا الجهاز إلا للأغراض المنزلية فقط ولا ينبغي استخدامه في الاستخدامات المتعددة.

ملاحظة

- لا تحاول أبدًا تسوية أي أرضية غير مستوية بوضع قطع من الخشب أو الورق المقوى أو مواد مشابهة تحت الجهاز.

التهيئة

- تأكد من عدم إعاقة السجاد أو البساط أو ما إلى ذلك لدوران الهواء حول الجهاز.

درجة الحرارة المحيطة

- لا تتركب الجهاز في غرف يمكن أن تصل درجة حرارتها إلى التجمد، حيث يمكن أن تنفجر الخراطيم المتجمدة تحت الضغط. يمكن أن تقل كفاءة وحدة التحكم الإلكترونية في ظل درجات الحرارة الأقل من درجة التجمد.
- في حالة الحصول على الجهاز في الشتاء وكانت درجات الحرارة أقل من درجة التجمد، فضع الجهاز في درجة حرارة الغرفة لبضع ساعات قبل تشغيله.

التوصيلات الكهربائية

- لا تستخدم سلك إطالة ولا محولاً مزدوجاً.
- احرص دائماً على فصل الجهاز وإيقاف إمداد الماء بعد الاستخدام.
- يتعين توصيل الجهاز بمقبس مؤرض وفقاً للوائح توصيل الأسلاك الكهربائية.
- يجب وضع الجهاز بحيث يمكن الوصول إلى القابس بسهولة.
- يجب أن يكون مأخذ التيار الكهربائي بطول 1 متر من كلا جانبي الجهاز.

⚠ تحذير

- يجب عدم إصلاح الجهاز إلا بواسطة شخص مؤهل، حيث يمكن أن تؤدي الإصلاحات التي تتم من قبل أشخاص ليس لديهم خبرة إلى التعرض إلى إصابة أو عطل خطير. اتصل بفني الإصلاح المحلي المعتمد من LG.
- يجب توصيل قابس الطاقة بمقبس تيار كهربائي مناسب مرگب ومؤرض وفقاً لجميع القوانين واللوائح المحلية.

تركيب مكان التركيب


مكان التركيب

- يجب تركيب هذا الجهاز على أرضية ثابتة وذلك للحد من حدوث اهتزاز أثناء دورة التنشيف. الأرضية الخرسانية هي أفضل اختيار، فهي أقل عرضة للاهتزاز الذي يحدث أثناء دورة التنشيف مقارنةً بالألواح الأرضية أو الأسطح المغطاة بالسجاد.
- إذا كان من المستحيل تجنب وضع الجهاز بجانب موقد غاز أو موقد يعمل بالفحم، فيجب وضع عازل (600 × 850 مم) مغطى برفائق الألومنيوم على الجانب المواجه للفرن أو الموقد بين الجهازين.
- تأكد عند تركيب الجهاز من سهولة وصول المهندسين إليه في حالة تعطله.
- عند تركيب الجهاز، اضبط كل الأقدام الأربعة باستخدام مفتاح صواميل النقل الموفرة لضمان استقرار الجهاز.

التركيب الأرضي

*1 حد أدنى للمساحة للتثبيت


لضمان وجود مسافة كافية لخراطيم إدخال المياه بالصمام وخرطوم التصريف وتدفق الهواء، اترك مسافة لا تقل عن 2 سم كحد أدنى عند الجوانب و10 سم خلف الجهاز. يتطلب الحائط، والباب، والقبو الأرضية زيادة المسافة، لذا تأكد من توفرها.

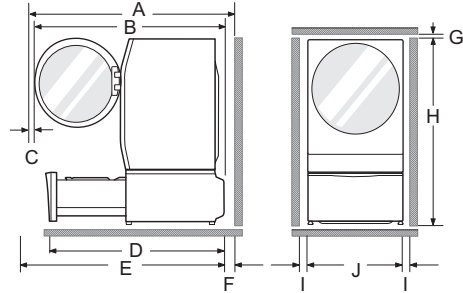

A	140 سم
B	127 سم
C	2 سم
D	120 سم
E	130 سم*1
F	10 ملم
G	0.5 سم
H	130 سم

الملحقات

1* تختلف الملحقات المرفقة تبعاً للموديل الذي اشتريته.

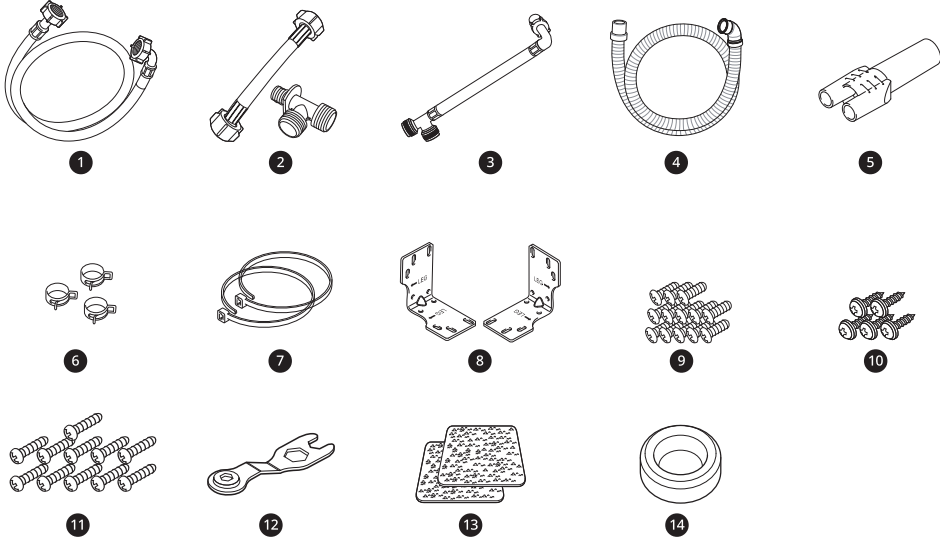

خرطوم إمداد الماء (خاص بالماء البارد)	2	توصيل خرطوم الإمداد والموصل المفكك 1*	3	توصيل خرطوم الإمداد باستخدام الموصل المربوط 1*
خرطوم تصريف الماء	5	موصل خرطوم تصريف الماء	6	مشابك شريطية (3 عدد)
أشرطة ربط الكابلات (2 عدد)	8	الدعامات الخلفية (2 عدد)	9	برغي الماكينة (13 عدد)
برغي الصفائح المعدنية القصير (5 عدد)	11	برغي الصفائح المعدنية الطويل (11 عدد)	12	مفتاح ربط
شرائح مائعة للأنزلاق	14	كوب عيار المنظف		

ملاحظة

- قد تختلف الصور الموجودة في هذا الدليل عن المكونات الفعلية والملحقات التي تخضع للتغيير من قبل الشركة المُصنعة دون إشعار مسبق لأغراض تحسين المنتج.

7 التركيب


التركيب

الأجزاء والمواصفات

ملاحظة


- يُمكن تغيير الشكل والمواصفات دون الإخطار بذلك من أجل تحسين جودة الجهاز.

شكل الجهاز من الخلف

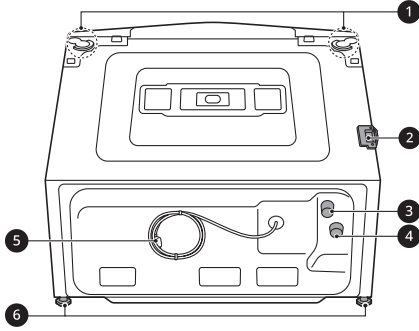

- 1 فتحة قدم الغسالة الرئيسية
- 2 مفتاح الرصد
- 3 فتحة التصريف
- 4 مدخل الماء (البارد فقط)
- 5 قابس الطاقة
- 6 أقدام التسوية

الشكل الأمامي

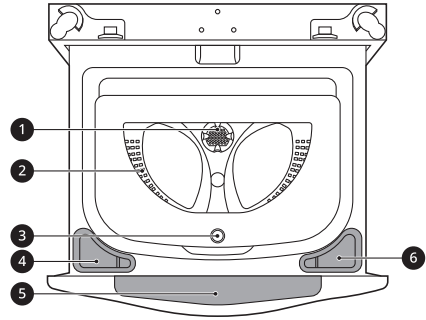

- 1 فلتر الوبر
- 2 الحوض
- 3 زر فتح/إغلاق الباب
- 4 موزع منظفات الغسيل السائلة
- 5 لوحة التحكم
- 6 موزع منعم القماش السائل

المواصفات

الطراز	FT018TGES
مصدر الطاقة	220-240 فولت، 50 هرتز
الأبعاد (العرض × العمق × الارتفاع)	635 مم × 755 مم × 365 مم
وزن المنتج	45 كجم

- امسح الغبار أو الأتربة من على أجزاء تلامس قابس الطاقة.

الصيانة

- افصل الطاقة عن الجهاز قبل تنظيفه. لا يؤدي ضبط عناصر التحكم إلى إيقاف أو إلى وضع الاستعداد إلى فصل الطاقة عن هذا الجهاز.
- أدخل قابس الطاقة بإحكام في مأخذ التيار الكهربائي بعد الإزالة الكاملة لأي رطوبة أو غبار.
- لا تقم برش الماء داخل الجهاز أو خارجه لتنظيفه.
- احرص دائمًا على عدم فصل الطاقة عن الجهاز من خلال شد كابل الطاقة. احرص دائمًا على الإمساك به بإحكام وقم بجذبه من مأخذ التيار الكهربائي في وضعية مستقيمة.
- يجب أن يقوم فقط موظف خدمة مؤهل من مركز خدمة شركة LG Electronics بتفكيك الجهاز أو إصلاحه أو تعديله. تواصل مع مركز معلومات العملاء في شركة LG Electronics في حال كنت تنقل الجهاز وتقوم بتركيبه في موقع مختلف.

التخلص

- قبل التخلص من جهاز قديم، قم بفصله. اقطع الكابل الموجود خلف الجهاز مباشرةً لمنع سوء استخدامه.
- تخلص من جميع مواد التعبئة (مثل أكياس البلاستيك ومادة الستايروفوم) بعيدًا عن متناول الأطفال، إذ يمكن لمواد التغليف أن تسبب الاختناق.
- قم بإزالة الباب قبل التخلص من هذا الجهاز تفاديًا لخطر احتباس الأطفال أو الحيوانات الصغيرة بداخله.

5 إرشادات السلامة

- لا تحاول فصل أي لوح من الألواح أو فك الجهاز.
- تجنب إصلاح أو استبدال أي جزء من الجهاز. يجب إجراء جميع التصليحات والخدمة من خلال موظف خدمة مؤهل إلا إذا أوصى دليل المالك الحالي بغير ذلك بشكل محدد. استخدم فقط أجزاء المصنع المعتمدة.
- لا تضغط على الباب للأسفل بشدة عندما يكون باب الجهاز مفتوحًا.
- لا تضع الحيوانات الحية مثل الحيوانات الأليفة داخل الجهاز.
- حافظ على المنطقة الموجودة أسفل الجهاز وحوله خالية من المواد القابلة للاحتراق مثل الورق، وقطع القماش، والمواد الكيميائية، وما إلى ذلك.
- لا تترك باب الجهاز مفتوحًا. حيث يمكن أن يتعلق الأطفال بالباب أو يزحفوا إلى داخل الجهاز، مما قد يسبب التلف أو التعرض للإصابة.
- لا تضع أو تغسل أو تجفف الأغراض التي تم تنظيفها أو غسلها أو نقعها أو اتسخت بمواد قابلة للاشتعال أو قابلة للاحتراق (مثل الشمع ومزيلات البقع الشمعية والزيوت والطلاء والجازولين ومزيلات الشحوم ومذيبات التنظيف الجاف والكبروسين والبنزين ومزيلات البقع وزيت التربنتين والزيوت النباتية وزيوت الطهي والأسيتون والكحول، وما إلى ذلك). فقد يتسبب الاستخدام غير السليم في نشوب حريق أو وقوع انفجار.
- لا تستخدم مواد قابلة للاحتراق أو قابلة للاشتعال (مثل الإيثانول، والبنزين، والكحول، والمواد الكيميائية، والغاز النفطي المسال، والرادز قابل للاحتراق، والجازولين، ومخفف الدهان "النتنر"، والمواد البترولية، ومبيد الحشرات، ومعطر الهواء، ومستحضرات التجميل، وما إلى ذلك) أو تخزينها بالقرب من الجهاز.
- لا تقترب أبدًا من الجهاز في أثناء تشغيله. انتظر حتى تتوقف حلة الغسل تمامًا.
- يجب عدم لمس الباب أثناء البرامج ذات درجة الحرارة المرتفعة.
- في حال تسرب المياه أو فيضها من الجهاز، افصل مقبس الطاقة واتصل بمركز LG Electronics لتقديم المعلومات إلى العملاء.
- أغلق صناديق المياه لتحرير الضغط عن الخراطيم والصمامات والحد من التسرب عند حدوث قطع أو تمزق. تأكد من حالة خراطيم تغذية الماء حيث يجب استبدالها بعد 5 سنوات.
- في حالة وجود تسرب غاز (أيسوبيوتين، أو البروبان، أو الغاز الطبيعي، أو ما إلى ذلك) في المنزل، لا تلمس الجهاز أو قابس الطاقة وقم بتهوية المنطقة على الفور.
- لا يمكنك استخدام خرطوم التصريف أو خرطوم الإدخال في حالة تجمدهما خلال فصل الشتاء إلا بعد الذوبان.
- احفظ جميع منظفات الغسيل، والمواد المنعمة، والمبيضات بعيدًا عن متناول الأطفال.
- تجنب لمس قابس الطاقة أو عناصر التحكم في الجهاز بيدين مبتلئين.
- احرص على عدم ثني كابل الطاقة بشكل مفرط أو وضع شيء ثقيل عليه.
- تجنب لمس أي مياه تم تصريفها من الجهاز أثناء الغسل.
- تأكد من عمل التصريف بشكل صحيح. في حال عدم التصريف بشكل صحيح، قد يؤدي ذلك إلى غمر أرضيتك بالمياه.

- هذا الجهاز غير مخصص إلا للاستخدام في التطبيقات المنزلية فقط.
- يجب أن يتراوح ضغط إدخال المياه ما بين 50 كيلو باسكال و 800 كيلو باسكال.

السعة القصوى

تبلغ السعة القصوى في بعض دورات الملابس الجافة المقرر غسلها **2.5 كجم**.

التركيب

- لا تحاول أبدًا تشغيل هذا الجهاز إذا كان تالفًا، أو به عطل، أو مفككًا بشكل جزئي، أو به أجزاء مفقودة أو محطمة، بما في ذلك سلك أو قابس تالف.
- عند نقل هذا الجهاز، ينبغي توفر شخصين أو أكثر للإمساك به بإحكام.
- تجنب تركيب الجهاز في أماكن الرطوبة والغبار. تجنب تركيب أو تخزين الجهاز في الهواء الطلق أو في مساحة معرضة للتأثيرات الجوية كضوء الشمس المباشر أو الرياح أو المطر أو درجات الحرارة دون درجة التجمد.
- تأكد من أن قابس الطاقة موصل بشكل كامل بمأخذ التيار الكهربائي.
- لا تقم بتوصيل الجهاز بمقابس متعددة أو لوحات تحكم بالكهرباء أو كبل تمديد للطاقة.
- لا تقم بتعديل قابس الطاقة المتوفر مع الجهاز. إذا لم يكن القابس مناسبًا لمأخذ التيار، فيمكنك تثبيت مأخذ تيار مناسب من خلال كهربائي مؤهل.
- يأتي هذا الجهاز مزودًا بسلك طاقة يحتوي على موصل تأريض للجهاز (مسار تأريض) وقابس طاقة بوصلة تأريض. يجب توصيل قابس الطاقة بمأخذ تيار كهربائي مناسب مثبت ومؤرض وفقًا لجميع القوانين واللوائح المحلية.
- يمكن أن يؤدي توصيل موصل حماية غير مناسب إلى خطر التعرض لصدمة كهربائية. استشر كهربائيًا أو موظف خدمة مؤهلًا إذا كان لديك أي شك حول ما إذا كان الجهاز مؤرضًا بشكل صحيح أم لا.
- أحكم ربط وضبط خرطوم التصريف مع أطراف التوصيل لتجنب فصله.

التشغيل

- صُممت الغسالة الصغيرة لغسل الأغراض المتسخة قليلاً والحساسة، كما لا تغسل الملابس المتسخة بشكل طبيعي أو شديدة الاتساخ أو غيرها من الأغراض مثل السجاد أو الألبسة أو الأحذية أو الملاءات أو المناشف أو السجاد أو الجينز أو بطانيات الحيوانات الأليفة.
- لا تقم بتركيب الغسالة الصغيرة فوق غسالة صغيرة أخرى أو قاعدة أو سطح مرتفع أو حامل.
- لتجنب كسر الباب الزجاجي، لا تضغط بقوة على الباب عند إغلاقه.
- لا تستخدم القدم في فتح الباب أو إغلاقه ولا تخطو على الغسالة الصغيرة.
- لا تستخدم أي أدوات حادة مع لوحة التحكم لتشغيل الجهاز.

إرشادات السلامة

اقرأ جميع الإرشادات قبل الاستخدام

ع

يتمثل الغرض من إرشادات السلامة التالية في الحيلولة دون وقوع المخاطر غير المتوقعة أو الأضرار الناجمة عن التشغيل غير الآمن أو غير الصحيح للمنتج. يتم تقسيم الإرشادات إلى "تحذير" و"تنبيه" على النحو الموضح أدناه.

رسائل السلامة

يتم عرض هذا الرمز للإشارة إلى الأمور وعمليات التشغيل التي يمكن أن تسبب مخاطر، فاحرص على قراءة الجزء الذي يحمل هذا الرمز بعناية واتبع الإرشادات لتجنب المخاطر.



تحذير



يشير هذا إلى أن عدم اتباع الإرشادات قد يسبب وقوع إصابة خطيرة أو الوفاة.

تنبيه



يشير هذا إلى أن عدم اتباع الإرشادات قد يتسبب في وقوع إصابة طفيفة أو تلف المنتج.

تحذير



- لتقليل مخاطر وقوع انفجار، أو نشوب حريق، أو حدوث وفاة، أو التعرض لصدمة كهربائية، أو حدوث إصابة، أو حروق للأشخاص عند استخدام المنتج، يجب اتباع احتياطات السلامة الأساسية، بما فيها ما يلي:

السلامة الفنية

- هذا الجهاز غير مخصص لاستخدام الأفراد (بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية، أو ليس لديهم خبرة ومعرفة، ما لم يتم الإشراف عليهم أو تقدم لهم الإرشادات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
- كذلك يجب الإشراف على الأطفال للتأكد من عدم عبثهم بالجهاز.
- في حالة تلف سلك توصيل الطاقة الكهربائية، يجب استبداله بواسطة الشركة المصنعة أو وكيل الخدمة التابع لها أو أشخاص مؤهلين بنفس القدر لتجنب المخاطر.
- استخدم خرطومًا جديدًا أو مجموعة الخرطوم المرفقة مع الجهاز. علمًا بأن إعادة استخدام الخرطوم القديمة قد تؤدي إلى تسرب المياه وبالتالي تلف الممتلكات.
- يجب عدم إعاقة فتحات التهوية بوضع سجادة.

جدول المحتويات

قد يحتوي هذا الدليل على صور أو محتوى يختلف عن الطراز الذي قمت بشرائه.
يخضع هذا الدليل للمراجعة من الشركة المصنعة.

إرشادات السلامة

- 3.....اقرأ جميع الإرشادات قبل الاستخدام.
3.....تحذير

التركيب

- 7.....الأجزاء والمواصفات
9.....تركيب مكان التركيب
10.....رصّ الغسالة الصغيرة والغسالة الأساسية.
11.....توصيل خرطوم إمداد الماء
13.....تركيب خرطوم التصريف
13.....ضبط مستوى الجهاز

التشغيل

- 16.....نظرة عامة على التشغيل
16.....تجهيز حمولة الغسيل
17.....إضافة المنظفات والمواد المنعمة
19.....لوحة التحكم وجدول البرنامج
22.....خيارات ووظائف إضافية

الوظائف الذكية

- 23.....استخدام تطبيق LG ThinQ
24.....Smart Diagnosis (التشخيص الذكي).

الصيانة

- 26.....التنظيف بعد كل غسلة
26.....تنظيف الجهاز بصورة دورية

استكشاف الأعطال وإصلاحها

- 28.....قبل الاتصال بمركز الخدمة



دليل المالك غسالة الملابس

قبل البدء في تركيب الجهاز، اقرأ هذه التعليمات بعناية. حيث سييسط ذلك عملية التركيب ويضمن تركيب الجهاز بشكل صحيح وآمن. واحتفظ بهذه التعليمات بالقرب من المنتج بعد التركيب للرجوع إليها في المستقبل.

العربية



FT018TGES

www.lg.com

حقوق النشر 2021-2022 إل جي للإلكترونيات. كل الحقوق محفوظة



MFL71774488
Rev.02_041622