


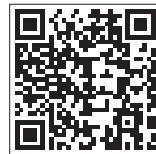

Scan the QR code to see the manual.



OWNER'S MANUAL

AIR CONDITIONER



Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

TYPE: WALL MOUNTED

EN ENGLISH

AR العربية



MFL72154704
Rev.00_100424

www.lg.com
Copyright © 2024 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS	3
IMPORTANT SAFETY INSTRUCTIONS.....	3
OPERATION	11
Notes for Operation	11
Parts and Functions.....	11
Wireless Remote Control.....	12
Using the Comfort Sleep Function (Optional).....	16
SMART FUNCTIONS	17
LG ThinQ Application.....	17
Smart Diagnosis	19
MAINTENANCE.....	20
Clean the Air Filter	22
TROUBLESHOOTING	23

SAFETY INSTRUCTIONS

EN

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

⚠ This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

⚠ WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

⚠ CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Installation

- Do not install the air conditioner on an unstable surface or in a place where there is danger of it falling.
- Contact an authorized service center when installing or relocating the air conditioner.
- Install the panel and the cover of the control box safely.
- Do not install the air conditioner in a place where flammable liquids or gases such as gasoline, propane, paint thinner, etc., are stored.
- Make sure that the pipe and the power cable connecting the indoor and outdoor units are not pulled too tight when installing the air conditioner.
- Use standard circuit breaker and fuse that conform to the rating of the air conditioner.
- Do not input air or gas into the system except with the specific refrigerant.
- Use non-flammable gas (nitrogen) to check for leak and to purge air; using compressed air or flammable gas may cause fire or explosion.
- The indoor/outdoor wiring connections must be secured tightly, and the cable should be routed properly so that there is no force pulling the cable from the connection terminals. Improper or loose connections can cause heat generation or fire.

- Install dedicated electric outlet and circuit breaker before using the air conditioner.
- Do not connect the ground wire to a gas pipe, a lightning rod, or a telephone ground wire.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- Do not install the unit in potentially explosive atmospheres.

Operation

- Be sure to use only those parts listed in the service parts list. Never attempt to modify the equipment.
- Make sure that children do not climb on or hit the outdoor unit.
- Dispose of the batteries in a place where there is no danger of fire.
- Use only the refrigerant specified on the air conditioner label.
- Cut off the power supply if there is any noise, smell, or smoke coming from the air conditioner.
- Do not leave flammable substances such as gasoline, benzene, or thinner near the air conditioner.
- Contact an authorized service center when the air conditioner is submerged by flood waters.
- Do not use the air conditioner for an extended period of time in a small place without proper ventilation.
- In the event of a gas leak (such as Freon, propane gas, LP gas, etc.) ventilate sufficiently before using the air conditioner again.
- Be sure to ventilate sufficiently when the air conditioner and a heating appliance such as a heater are used simultaneously.

- Do not block the inlet or outlet of air flow.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating.
- Make sure that the power cable is neither dirty, loose, nor broken.
- Never touch, operate, or repair the air conditioner with wet hands.
- Do not place any objects on the power cable.
- Do not place a heater or other heating appliances near the power cable.
- Do not modify or extend the power cable. Scratches or peeling insulation on the power cables may result in fire or electric shock, and should be replaced.
- Cut off the power supply immediately in the event of a blackout or a thunderstorm.
- Take care to ensure that power cable could not be pulled out or damaged during operation.
- Do not touch refrigerant pipe, water pipe and any internal parts while the unit is operating or immediately after operation.
- Do not try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, oil and other parts must comply with applicable legislation.

Maintenance

- Do not clean the appliance by spraying water directly onto the product.
- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.

Technical Safety

- Installation or repairs made by unauthorized persons can pose hazards to you and others.
- The information contained in the manual is intended for use by a qualified service technician who is familiar with the safety procedures and equipped with the proper tools and test instruments.
- Failure to read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.
- The appliance shall be installed in accordance with national wiring regulations.
- When the power cord is to be replaced, the replacement work shall be performed by authorized personnel using only genuine replacement parts.
- This appliance must be properly grounded to minimize risk of electric shock.
- Do not cut or remove the grounding prong from the power plug.
- Attaching the earth wire to the power outlet cover screw does not ground the appliance unless the cover screw is metal, uninsulated, and the power outlet is grounded through house wiring.
- If you have any doubt whether the air conditioner is properly grounded, have the power outlet and circuit checked by a qualified electrician.
- The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult a service agent or a similarly qualified person before disposing of them.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

⚠ CAUTION

To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- Do not install the air conditioner in an area where it is directly exposed to sea wind (salt spray).
- Install the drain hose properly for the smooth drainage of water condensation.
- Exercise caution when unpacking or installing the air conditioner.
- Do not touch the leaking refrigerant during installation or repair.
- Transport the air conditioner with two or more people or use a forklift.
- Install the outdoor unit such that it is protected from direct sunlight. Do not place the indoor unit in a place where it is directly exposed to sunlight via the windows.
- Safely dispose of packing materials such as screws, nails, plastic bag or batteries using proper packaging after installation or repair.
- Install the air conditioner in a place where the noise from the outdoor unit or the exhaust fumes will not inconvenience the neighbors. Failure to do so may result in conflict with the neighbors.

Operation

- Remove the batteries if the remote control is not to be used for an extended period of time.
- Make sure that the filter is installed before operating the air conditioner.
- Be sure to check if there is a refrigerant leak after installing or repairing the air conditioner.
- Do not place any object on the air conditioner.
- Never mix different types of batteries, or old and new batteries for the remote control.
- Do not let the air conditioner run for a long time when humidity is very high or when a door or a window has been left open.
- Stop using the remote control if there is a fluid leak in the battery. If your clothes or skin are exposed to the leaking battery fluid, wash off with clean water.
- Do not expose people, animals, or plants to the cold or hot wind from the air conditioner for extended periods of time.
- If the leaking battery fluid has been swallowed, rinse the inside of the mouth thoroughly and consult a doctor.
- Do not drink the water drained from the air conditioner.
- Do not use the product for special purposes, such as preserving foods, works of art, and etc. It is an air conditioner for consumer purposes, not a precision refrigeration system. There is risk of damage or loss of property.
- Do not recharge or disassemble the batteries.
- This appliances is accessible to the general public.

Maintenance

- Never touch the metal parts of the air conditioner when removing the air filter.
- Use a sturdy stool or ladder when cleaning, maintaining, or repairing the air conditioner at a height.
- Never use strong cleaning agents or solvents when cleaning the air conditioner or spray water. Use a smooth cloth.
- To clean the interior, contact an authorized service center or dealer. Using harsh detergents may cause corrosion or damage to the unit.

Operating Temperatures

Cooling	Max	Min
Indoor	32 °C	18 °C
Outdoor	54 °C	18 °C

Heating	Max	Min
Indoor	30 °C	16 °C
Outdoor	24 °C	-5 °C

Disposal of Waste Batteries

- All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health.
- For more detail information about disposal of your old batteries, please contact your city office, waste disposal service or the shop where you purchased the product.
Also You can contact our LG Support Representative Call center from below Link
https://www.lg.com/sa_en/support/contact/telephone



OPERATION

EN


Notes for Operation

Suggestion for Energy Saving

- Do not over-cool the space. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, within a short period of time.
- Open windows regularly for ventilation. The indoor air quality may deteriorate if the air conditioner is used for long durations.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or reduce the unit performance.

Parts and Functions

Indoor Unit

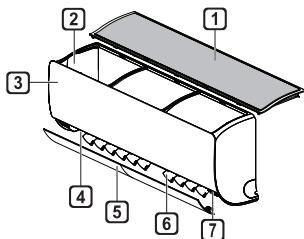

① Air Filter

② Air Intake

③ Front Cover


④ Air Outlet

⑤ Air Deflector (Horizontal Vane)

⑥ Air Deflector (Vertical Louver)

⑦ On/Off Button

Outdoor Unit

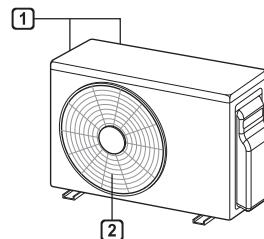

① Air Intake Vents

② Air Outlet Vents

NOTE

- The number and location of operation lamps may vary according to the model of the air conditioner.
- The feature may be changed according to the type of model.


Wireless Remote Control

Operating the Air Conditioner without the Remote Control


You can use the **ON/OFF** button of the indoor unit to operate the air conditioner when the remote control is unavailable.

- 1** Open the front cover (Type2) or horizontal vane (Type1).
- 2** Press the **ON/OFF** button.

Type1

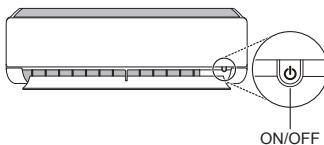

Type2

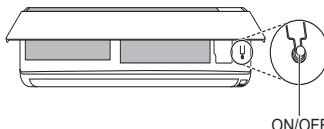


NOTE

- The stepping motor may be broken, if the horizontal vane opens rapidly.
- The fan speed is set to high.
- The feature may be changed according to the type of model.
- The temperature cannot be altered when using this emergency **ON/OFF** button.
- For cooling-only models, the temperature is set to 22 °C
- For cooling & heating models, the temperature is set from 22 °C to 24 °C

Using Wireless Remote Control


You can operate the air conditioner more conveniently with the remote control.

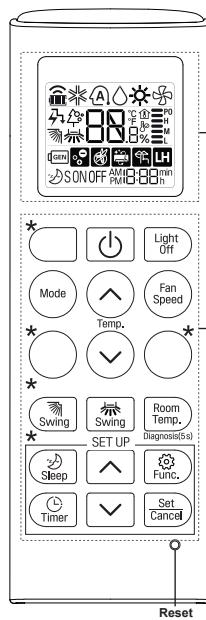


① Button	② Display Screen	Description
	-	To turn on/off the air conditioner.
		To adjust the desired room temperature in cooling, heating or auto changeover mode.
		To select the cooling mode.
		To select the heating mode.
		To select the dehumidification mode.
		To select the fan mode.
		To select the auto changeover/auto operation mode.
		To change room temperature & humidity quickly.
		To adjust the fan speed.
		To adjust the air flow direction vertically or horizontally.

NOTE

- * buttons may be changed according to the type of model.

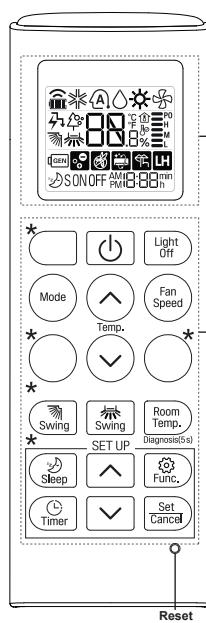

① Button	② Display Screen	Description
	SONOFF	To turn on/off air conditioner automatically at desired time.
Set/ Cancel	-	To set/cancel the special functions and timer.
	-	To adjust time.
Light Off	-	To set the brightness of the display on the indoor unit.
Room Temp.		To display the room temperature.
*°C↔°F(5 s)		To change unit between °C and °F
*Comfort Air		To adjust the air flow to deflect wind.
*kW(3 s)	-	To set whether or not to display information regarding energy.
*Ampere Ctrl.		To bring the effect of the power saving.
*Comfort Sleep		To make a comfortable sleeping environment.
		To make a comfortable sleeping environment.
Diagnosis (5 s)	-	To conveniently check maintenance information of a product.

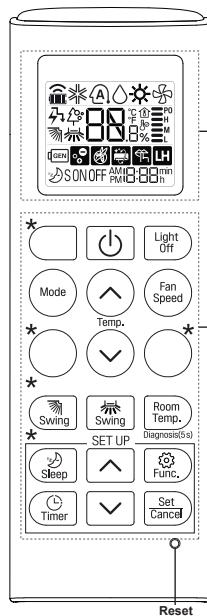

① Button	② Display Screen	Description
		The Ion generator uses millions of ions to help improve indoor air quality.
		To reduce noise from outdoor units.
		To maintain a minimum room temperature and prevent objects in the room from freezing.
		To scare away a mosquito.
		To remove moisture generated inside the indoor unit.
Reset	-	To initialize the remote control settings.

NOTE

- Some functions may not be supported, depending on the model.
- * buttons may be changed according to the type of model.
- Press the **Set/Cancel** button to operate the selected **Func..**

Using the Comfort Sleep Function (Optional)

This function operates the air conditioner automatically to make the comfortable sleep environment.

- 1 Turn the appliance on.
- 2 Press  button.
 -   are displayed on the display screen.

NOTE

- This function is available with Cooling Mode.
- The vane stops swing and sets indirect airflow angle, after 30 minutes from start even though the room temperature doesn't decrease to optimal temperature to sleep.
- It is possible that a comfortable sleep environment is different according to the people.
- Only  is displayed on the display screen when setting the comfort sleep function during Energy Control / I-Control Ampere function.

SMART FUNCTIONS

EN

LG ThinQ Application

This feature is only available on models with the  or ThinQ logo.

The **LG ThinQ** application allows you to communicate with the appliance using a smartphone.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Smart Diagnosis

If you experience a problem while using the appliance, this smart diagnosis feature will help you diagnose the problem.

Settings

Allows you to set various options on the appliance and in the application.


NOTE

- If you change your wireless router, internet service provider, or password, delete the registered appliance from the **LG ThinQ** application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.


Before Using LG ThinQ Application

- 1 Check the distance between the appliance and the wireless router (Wi-Fi network).
 - If the distance between the appliance and the wireless router is too far, the signal strength becomes weak. It may take a long time to register or installation may fail.

- 2 Turn off the **Mobile data** or **Cellular Data** on your smartphone.

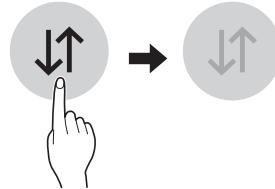

- 3 Connect your smartphone to the wireless router.

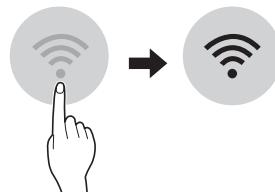

NOTE

- To verify the Wi-Fi connection, check that  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- **LG ThinQ** is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.

- The appliance cannot be registered due to problems with the wireless signal transmission. Unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the product again.

Installing the LG ThinQ Application

Search for the **LG ThinQ** application from the Google Play Store or Apple App Store on a smartphone. Follow instructions to download and install the application.

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

Smart Diagnosis

This feature is only available on models with the  or  logo.

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.
- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

Using LG ThinQ to Diagnose Issues

If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the **LG ThinQ** application.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions provided in the **LG ThinQ** application.

Using Audible Diagnosis to Diagnose Issues

Follow the instructions below to use the audible diagnosis method.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions for audible diagnosis provided in the **LG ThinQ** application.
- 1 Plug the power plug in the outlet properly.
 - 2 Place the mouthpiece of your smartphone close to the  or  logo.
 - 3 Press and hold the **Diagnosis (5 s)** button for 5 seconds or longer while holding the smartphone mouthpiece to the logo until the data transfer is complete.
Keep the smartphone in place until the data transfer has finished. Time remaining for data transfer is displayed.
 - 4 After the data transfer is complete, the diagnosis will be displayed in the application.

NOTE

- For best results, do not move the phone while the tones are being transmitted.
- Be sure to keep ambient noise to a minimum or the phone may not correctly receive the buzzer beeps from the indoor unit.



MAINTENANCE


EN

⚠ WARNING

- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition. Clean the product regularly to maintain optimal performance and to prevent possible breakdown.

- Dry the air conditioner in Fan mode for 3 to 4 hours and disconnect the power. There may be internal damage if moisture is left in its components.
- Before using the air conditioner again, dry the inner components of the air conditioner in Fan mode for 3 to 4 hours. This will help to remove the odor generated from moisture.

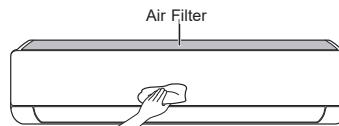

- The feature may be changed according to the type of model.



Type	Description	Interval
Air Filter	Clean with a vacuum or hand wash.	2 weeks
Triple Filter	Clean with a vacuum or brush.	Every 3 months
Micro Dust Filter	Clean with a vacuum or brush.	Once a month
Allergy Filter	Clean with a vacuum or brush.	Every 6 months
Ionizer (Optional)	Use dry cotton bud to remove any dust.	Every 6 months
Indoor Unit	Clean the indoor unit surface by using a soft, dry cloth.	Regularly
	Have a professional clean the condensate drain pan.	Once a year
	Have a professional clean the condensate drain pipe.	Every 4 months
	Replace the remote control batteries.	Once a year
Outdoor Unit	Have a professional clean the heat exchanger coils and the panel vents. (Consult with technician.)	Once a year
	Have a professional clean the fan.	Once a year
	Have a professional clean the condensate drain pan.	Once a year
	Have a professional verify that all the fan assembly is firmly tightened.	Once a year
	Clean the electric components with air.	Once a year

NOTE

- Never use water that is higher than 40 °C when you clean the filters. It may cause deformation or discoloration.
- Never use volatile substances when you clean the filters. They may damage the surface of the product.
- Do not wash the micro dust filter with water, because the filter can be damaged (Optional).
- Do not wash the triple filter with water, because the filter can be damaged (Optional).
- Do not wash the allergy filter with water, because the filter can be damaged (Optional).

Clean the Air Filter

Clean the air filters once every 2 weeks, or more, if necessary.


NOTE

- The air filter can be broken when it is bent.
- When the air filter is not assembled correctly, dust and other substances can enter into the indoor unit.


Type1

If you look at the indoor unit from above it, can assemble the top filter easily.


- 1 Turn off the power to the unit.
- 2 Hold the knobs of the air filter, lift it up slightly.

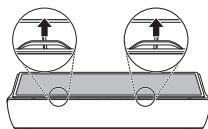


- 3 Remove it from the indoor unit.



- 4 Clean the filter with a vacuum cleaner or with lukewarm water with neutral detergent.
- 5 Dry the filter in the shade.
- 6 Insert the hooks of the air filter into the front cover.

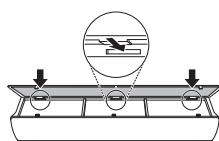


- 7 Push down hooks to assemble the air filter.

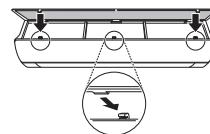


- 8 Check the side of the front cover for correct assembly of the air filter.

Type2

- 1 Turn off the power to the unit.
- 2 Open the front cover.
 - Lift up both sides of the cover slightly.
- 3 Hold the knobs of the air filters, pull them down slightly and remove them from the indoor unit.

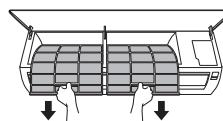

- 4 Clean the filters with a vacuum cleaner or with lukewarm water with neutral detergent.
- 5 Dry the filters in the shade.
- 6 Insert the hooks of the air filters into the front cover.

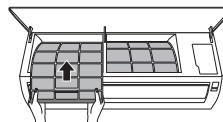

- 7 Check the side of the front cover for correct assembly of the air filters.



TROUBLESHOOTING

EN

Self-diagnosis Function

This product has a built-in self-diagnosis function. If an error occurs, the lamp of the indoor unit will blink in 2 second intervals. If this occurs, contact your local dealer or service center.

Before Calling for Service

Please check the following before you contact the service center. If the problem persists, contact your local service center.

Symptoms	Possible Causes & Solution
The air conditioner does not work normally.	Burning smell and strange sounds are coming from the unit. <ul style="list-style-type: none">Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	Water leaks from the indoor unit even when the humidity level is low. <ul style="list-style-type: none">Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	The power cable is damaged or it is generating excessive heat. <ul style="list-style-type: none">Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	A switch, a circuit breaker (safety, ground), or a fuse is not operated properly. <ul style="list-style-type: none">Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	The unit generates an error code from its self-diagnosis. <ul style="list-style-type: none">Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
The air conditioner does not work.	The air conditioner is unplugged. <ul style="list-style-type: none">Check whether the power cord is plugged into the outlet or the power isolators are switched on.
	A fuse exploded, or the power supply is blocked. <ul style="list-style-type: none">Replace the fuse or check if the circuit breaker has tripped.
	A power failure has occurred. <ul style="list-style-type: none">Turn off the air conditioner when a power failure occurs.When the power is restored, wait 3 minutes, and then turn on the air conditioner.
	The voltage is too high or too low. <ul style="list-style-type: none">Check if the circuit breaker has tripped.
	The air conditioner was turned off automatically at a preset time. <ul style="list-style-type: none">Turn the air conditioner on.
	The battery setting in the remote controller is incorrect. <ul style="list-style-type: none">Make sure that the batteries are inserted correctly in your remote controller.If the batteries are placed correctly, but the air conditioner still does not operate, replace the batteries and try again.



Symptoms	Possible Causes & Solution
The air conditioner does not emit cool air.	<p>Air is not circulating properly.</p> <ul style="list-style-type: none"> • Make sure that there are no curtains, blinds, or pieces of furniture blocking the front of the air conditioner. <p>The air filter is dirty.</p> <ul style="list-style-type: none"> • Clean the air filter once every 2 weeks. • See "Clean the Air Filter" for more information. <p>The room temperature is too high.</p> <ul style="list-style-type: none"> • In summer, cooling the indoor air fully may take some time. In this case, select the Jet Mode to cool the indoor air quickly. <p>Cold air is escaping from the room.</p> <ul style="list-style-type: none"> • Make sure that no cold air is escaping through the ventilation points in the room. <p>The desired temperature is higher than the current temperature.</p> <ul style="list-style-type: none"> • Set the desired temperature to a level lower than the current temperature. <p>There is a heating source nearby.</p> <ul style="list-style-type: none"> • Avoid using heat generators like electric ovens or gas burners while the air conditioner is in operation. <p>Fan Mode is selected.</p> <ul style="list-style-type: none"> • During Fan Mode, air blows from the air conditioner without cooling or heating the indoor air. • Switch the operation mode to cooling operation. <p>Outside temperature is too high.</p> <ul style="list-style-type: none"> • The cooling effect may not be sufficient.
The fan speed cannot be adjusted.	<p>The Jet Mode, or Auto Operation Mode is selected.</p> <ul style="list-style-type: none"> • In some operation modes, you cannot adjust the fan speed. Select an operation mode in which you can adjust the fan speed.
The temperature cannot be adjusted.	<p>The Fan Mode or Jet Mode is selected.</p> <ul style="list-style-type: none"> • In some operation modes, you cannot adjust the temperature. Select an operation mode in which you can adjust the temperature.
The air conditioner stops during operation.	<p>The air conditioner is suddenly turned off.</p> <ul style="list-style-type: none"> • The Timer Function may have timed out, which turns the unit off. Check the timer settings. <p>A power failure has occurred during operation.</p> <ul style="list-style-type: none"> • Wait for the power to come back. If you have the Auto Restart function enabled, your unit will resume its last operation several minutes after power is restored.

Symptoms	Possible Causes & Solution
The indoor unit is still operating even when the unit has been turned off.	<p>The Auto Clean function is being operated.</p> <ul style="list-style-type: none"> Allow the Auto Clean function to continue since it removes any remaining moisture inside the indoor unit. If you do not want this feature, you can turn the unit off.
The air outlet on the indoor unit is discharging mist.	<p>The cooled air from the air conditioner makes mist.</p> <ul style="list-style-type: none"> When the room temperature decreases, this phenomenon will disappear.
Water leaks from the outdoor unit.	<p>In the heating operations, condensed water drops from the heat exchanger.</p> <ul style="list-style-type: none"> This symptom requires installing a drain hose under the base pan. Contact the installer.
There is noise or vibration.	<p>A clicking sound can be heard when the unit starts or stops due to movement of the reversing valve.</p> <p>Creaking sound: The plastic parts of the indoor unit creak when they shrink or expand due to sudden temperature changes.</p> <p>Flowing or Blowing sound: This is the flow of refrigerant through the air conditioner.</p> <ul style="list-style-type: none"> These are normal symptoms. The noise will stop.
The indoor unit gives off an odor.	<p>Odors (such as cigarette smoke) may be absorbed into the indoor unit and discharged with airflow.</p> <ul style="list-style-type: none"> If the smell does not disappear, you need to wash the filter. If this does not work, contact the service center to clean your heat exchanger.
The air conditioner does not emit warm air.	<p>When Heating Mode starts, the vane is almost closed, and no air comes out, even though the outdoor unit is operating.</p> <ul style="list-style-type: none"> This symptom is normal. Please wait until the unit has generated enough warm air to blow through the indoor unit.
	<p>The outdoor unit is in Defrosting Mode.</p> <ul style="list-style-type: none"> In Heating Mode, ice/frost is built up on the coils when the outside temperature falls. This function removes a layer of frost on the coil, and it should finish in approximately 15 minutes. <p>Outside temperature is too low.</p> <ul style="list-style-type: none"> The heating effect may not be sufficient.

Symptoms	Possible Causes & Solution
Your home appliance and smartphone is not connected to the Wi-Fi network.	<p>The password for the Wi-Fi that you are trying to connect to is incorrect.</p> <ul style="list-style-type: none"> Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG ThinQ. <p>Mobile data for your smartphone is turned on.</p> <ul style="list-style-type: none"> Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network. <p>The wireless network name (SSID) is set incorrectly.</p> <ul style="list-style-type: none"> The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.) <p>The router frequency is not 2.4 GHz.</p> <ul style="list-style-type: none"> Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your Internet service provider or the router manufacturer. <p>The distance between the appliance and the router is too far.</p> <ul style="list-style-type: none"> If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.

NOTE

- Some functions may not be supported, depending on the model.

الأسباب المحتملة والحلول	الأعراض
<p>كلمة المرور للاتصال بشبكة Wi-Fi التي تحاول الاتصال بها غير صحيحة.</p> <ul style="list-style-type: none"> اعثر على شبكة Wi-Fi المتصلة بهاتفك الذكي ثم قم بازالتها، ثم سجل جهازك على LG ThinQ. 	
<p>بيانات الهاتف المحمول في هاتفك الذكي مقطعة.</p> <ul style="list-style-type: none"> أوقف بيانات الهاتف المحمول على هاتفك الذكي وسجل الجهاز باستخدام شبكة Wi-Fi. 	
<p>لم يتم إعداد اسم الشبكة اللاسلكية (SSID) بشكل صحيح.</p> <ul style="list-style-type: none"> يجب أن يكون اسم الشبكة اللاسلكية (SSID) مكوناً من أحرف وارقام باللغة الإنجليزية. (لا تستخدم رموزاً خاصة) 	
<p>تردد جهاز التوجيه ليس 2.4 غيغا هرتز.</p> <ul style="list-style-type: none"> يتم دعم جهاز التوجيه بتردد 2.4 غيغا هرتز فقط. اضبط جهاز التوجيه اللاسلكي على 2.4 غيغا هرتز ثم وصل الجهاز بجهاز التوجيه اللاسلكي. للتحقق من تردد جهاز التوجيه، راجع مزودو خدمة الإنترنت الخاص بك أو مصنعي جهاز التوجيه. 	<p>جهازك المنزلي أو هاتفك الذكي غير متصل بشبكة Wi-Fi.</p>
<p>المسافة بين الجهاز وجهاز التوجيه أبعد من اللازم.</p> <ul style="list-style-type: none"> إذا كانت المسافة بين الجهاز وجهاز التوجيه أبعد من اللازم، قد تكون الإشارة ضعيفة وقد يتعرّض تكوينه بشكل صحيح. انقل جهاز التوجيه من مكانه حتى يصبح أقرب إلى الجهاز. 	

ملاحظة

- قد تكون بعض الوظائف غير مدرومة حسب نوع الطراز.

الأعراض المحمولة والحلول	الأعراض
<p>تشغيل وظيفة التنظيف الذاتي.</p> <ul style="list-style-type: none"> دع وظيفة التنظيف الذاتي تستمر في العمل لأنها تزيل الرطوبة المتبقية داخل الوحدة الداخلية، فإذا كنت لا ترغب في استخدام هذه الميزة، فلماكانت لابق تشغيل الوحدة. 	لا تزال الوحدة الداخلية تعمل حتى بعد فصل التيار الكهربى.
<p>الهواء البارد الناتج من مكيف الهواء يعمل على إخراج ضباب.</p> <ul style="list-style-type: none"> في حالة انخفاض درجة حرارة الغرفة، فستختفي هذه الظاهرة في عمليات التدفئة، ينطرى الماء المكتثف من المبادل الحراري. 	منفذ الهواء الموجود على الوحدة الداخلية يعمل على إخراج الضباب.
<ul style="list-style-type: none"> تتطلب هذه الأعراض تركيب خرطوم تصريف تحت حوض القاعدة، لذا اتصل بعامل بالمنصب يامكاك سماع صوت نقر عند بداية تشغيل الوحدة أو عند توقيتها عن العمل بسبب حركة الصمام العائش. 	تسرب المياه من الوحدة الخارجية.
صوت الصرير: تصدر الأجزاء البلاستيكية الخاصة بالوحدة الداخلية صريراً عند انكماسها أو امتدادها بسبب تغيرات درجة الحرارة المفاجئة. صوت التدفئة أو التفخ: يُعد ذلك الصوت تدفق غاز التبريد عبر مكيف الهواء. سيتوقف الضرجيج هذه أعراض طبيعية. ستتوقف الضوضاء.	الجهاز يصدر ضوضاء أو اهتزازاً.
قد يتم امتصاص بعض الروائح (مثل دخان السجائر) في الوحدة الداخلية ثم نفاثها مع تدفق الهواء. إذا لم تختفي الرائحة، فانت بحاجة إلى غسل الفنير. إذا كان ذلك لا يُجدي، فاتصل بمركز الخدمة لتنظيف مبادل الحرارة الخاص بك.	صدور رائحة عن الوحدة الداخلية.
عندما يبدأ وضع التدفئة في العمل، تكون الريشة مغلقة تقريباً، ولا يخرج الهواء منها، حتى لو كانت الوحدة الخارجية تعمل. يُعد هذا العرض أمراً طبيعياً. برجاء الانتظار حتى تقوم الوحدة بإصدار هواء دافئ بشكلٍ كافٍ ليتبعد من خلال الوحدة الداخلية.	لا يقوم مكيف الهواء بإصدار هواء دافي.
تعمل الوحدة الخارجية في وضع إزالة التجمد. في وضع التدفئة، يتم تجميع الملاط / المصiqu على الملفات عند انخفاض درجة الحرارة في الخارج. حيث تقوم هذه الوظيفة بازالة طبقة الجليد المتراكمة على الملف، وينبغي أن تنتهي خلال 15 دقيقة تقريباً. الحرارة الخارجية منخفضة جداً. قد لا يكون تأثير التدفئة كافياً.	

الأسباب المحتملة والحلول	الأعراض
<p>عدم دوران الهواء بشكل صحيح.</p> <ul style="list-style-type: none"> تأكد من عدم وجود أغطية، أو ستائر، أو قطع من الأثاث تحجب الجزء الأمامي من مكيف الهواء. <p>فلتر الهواء متاخم.</p> <ul style="list-style-type: none"> نظف فلتر الهواء مرة كل أسبوعين. راجع "تنظيف فلتر الهواء" للحصول على مزيد من المعلومات. 	درجة حرارة الغرفة مرتفعة جداً.
<ul style="list-style-type: none"> أثناء فصل الصيف، قد تستغرق عملية تبريد الهواء كلية داخل الغرفة بعض الوقت، في هذه الحالة، حدد "وضع فانق السرعة" لتبريد الهواء داخل الغرفة بشكل سريع. <p>هروب الهواء البارد من الغرفة.</p> <ul style="list-style-type: none"> تأكد من عدم هروب الهواء البارد من خلال نقاط التهوية الموجودة في الغرفة. 	لا يصدر مكيف الهواء هواء بارداً.
<p>درجة الحرارة المطلوبة أعلى من الدرجة الحالية.</p> <ul style="list-style-type: none"> قم بضبط درجة الحرارة المطلوبة على مستوى أقل من درجة الحرارة الحالية. <p>وجود مصدر تدفئة بالقرب من الجهاز.</p> <ul style="list-style-type: none"> تجنب وضع أي أجهزة تولد الحرارة مثل الأفران الكهربائية أو الأفران التي تعمل بالغاز عندما يكون مكيف الهواء قيد التشغيل. 	تم تحديد وضع المروحة.
<ul style="list-style-type: none"> أثناء تشغيل وضع المروحة، يجب الهواء من المكيف بدون تبريد الهواء داخل الغرفة أو تسخينه. قم بضبط وضع التشغيل على تبريد. <p>الحرارة الخارجية مرتفعة جداً.</p> <ul style="list-style-type: none"> قد لا يكون تأثير التبريد كافياً. 	يتعذر تحديد سرعة المروحة.
<p>تم اختيار وضع فانق السرعة، أو وضع التشغيل الثنائي.</p> <ul style="list-style-type: none"> في بعض أوضاع التشغيل، يتغير عليك ضبط سرعة المروحة. حدد أحد أوضاع التشغيل، التي يمكنك ضبط سرعة المروحة خلالها. 	يتعذر ضبط سرعة المروحة.
<p>تم تحديد وضع المروحة، أو "وضع فانق السرعة".</p> <ul style="list-style-type: none"> في بعض أوضاع التشغيل، يتغير عليك ضبط درجة الحرارة. حدد أحد أوضاع التشغيل، التي يمكنك ضبط درجة الحرارة خلالها. 	يتغير ضبط درجة الحرارة.
<p>توقف مكيف الهواء بشكل مفاجئ.</p> <ul style="list-style-type: none"> قد يكون انتهاء وقت وظيفة المؤقت، مما تسبب في إيقاف الوحدة عن العمل. تحقق من إعدادات المؤقت. <p>حدث عطل في التيار الكهربائي في أثناء التشغيل.</p> <ul style="list-style-type: none"> انتظر حتى يعود التيار الكهربائي، إذا قمت بتنكين وظيفة إعادة التشغيل الثنائي، فستقوم الوحدة لديك باستئناف آخر عملية تشغيل بعد دقائق بعد رجوع التيار الكهربائي. 	يتوقف مكيف الهواء أثناء تشغيله.

استكشاف الأعطال وإصلاحها

وظيفة التشخيص الذاتي

ينتبيز هذا الجهاز بوظيفة التشخيص الذاتي. فإذا حدث عطل ما، فإن مصباح الوحدة الداخلية سيسقط على فترات زمنية مدة كل منها ثانيةين. إذا حدث ذلك، فاتصل بالموزع المحلي التابع لك أو مركز الخدمة الخاص بك.

قبل الاتصال للحصول على الخدمة

يرجى التتحقق من العناصر التالية قبل الاتصال بمركز الخدمة، وفي حال استمرار العطل يرجى الاتصال بمركز الخدمة المحلي الخاص بك.

الأسباب المحتملة والحلول	الأعراض
<p>الوحدة تصدر راحة احتراق وأصوات غريبة.</p> <ul style="list-style-type: none"> قم بإيقاف تشغيل مكيف الهواء، وافصل كيل الطاقة أو افصل مصدر الطاقة، ثم اتصل بمركز الخدمة. 	
<p>قد يكون هناك تسرب من الوحدة الداخلية حتى عندما يكون مستوى الرطوبة منخفضاً.</p> <ul style="list-style-type: none"> قم بإيقاف تشغيل مكيف الهواء، وافصل كيل الطاقة أو افصل مصدر الطاقة، ثم اتصل بمركز الخدمة. 	
<p>قد يكون كيل الطاقة تالفاً أو يصدر حرارة شديدة الطاقة أو يصدر حرارة شديدة.</p> <ul style="list-style-type: none"> قم بإيقاف تشغيل مكيف الهواء، وافصل كيل الطاقة أو افصل مصدر الطاقة، ثم اتصل بمركز الخدمة. 	لا يعمل مكيف الهواء بشكل طبيعي.
<p>قد لا يعمل أحد المفاتيح أو أحد قواعض الدائرة الكهربائية (الأمان، والأرضي) أو أحد المصهرات بشكل صحيح.</p> <ul style="list-style-type: none"> قم بإيقاف تشغيل مكيف الهواء، وافصل كيل الطاقة أو افصل مصدر الطاقة، ثم اتصل بمركز الخدمة. 	
<p>تصدر الوحدة رمز عطل من خلال عنصر التشخيص الذاتي.</p> <ul style="list-style-type: none"> قم بإيقاف تشغيل مكيف الهواء، وافصل كيل الطاقة أو افصل مصدر الطاقة، ثم اتصل بمركز الخدمة. 	
<p>تم فصل التيار الكهربائي عن مكيف الهواء.</p> <ul style="list-style-type: none"> تحقق مما إذا كان كيل الطاقة متصلة بمفتاح التيار الكهربائي أو ما إذا كانت مفاتيح عزل الطاقة مفتوحة. 	
<p>انفجار أحد المصهرات، أو حدوث ما يعيق مصدر الطاقة.</p> <ul style="list-style-type: none"> استبدل المصهر أو تحقق مما إذا حدث تعثر في قاطع الدائرة الكهربائية. 	
<p>حدث عطل في التيار الكهربائي.</p> <ul style="list-style-type: none"> قم بإيقاف تشغيل مكيف الهواء عند حدوث عطل في التيار الكهربائي. 	
<p>انتظر لمدة 3 دقائق، ندد إعادة توصيل التيار الكهربائي، ثم بعد ذلك قم بتشغيل مكيف الهواء.</p> <ul style="list-style-type: none"> ارتفاع الجهد الكهربائي أو انخفاضه للغاية. 	لا يعمل مكيف الهواء.
<p>تحقق مما إذا تم التعرّض في قاطع الدائرة الكهربائية.</p> <ul style="list-style-type: none"> تم إيقاف تشغيل مكيف الهواء تلقائياً في وقت تم تحديده بشكل سابق. 	
<p>وضع البطارية في وحدة التحكم عن بعد غير صحيح.</p> <ul style="list-style-type: none"> تأكد من وضع البطاريات بشكل صحيح في جهاز التحكم عن بعد لديك. 	
<ul style="list-style-type: none"> إذا تم وضع البطاريات بشكل صحيح، وظل مكيف الهواء لا يعمل، فقم باستبدال البطاريات وحاول مرة أخرى. 	

تنظيف فلتر الهواء

نظف فلاتر الهواء مرة كل أسبوعين، أو أكثر، إذا تطلب الأمر ذلك.

ملاحظة

- يمكن أن ينكسر فلتر الهواء إذا تم ثنيه.
- في حالة عدم تركيب فلتر الهواء بشكل صحيح، فإن الأتربة والمواد الأخرى تتجمع داخل الوحدة الداخلية.

الطراز 1

إذا نظرت إلى الوحدة الداخلية من أعلى، فيمكنك تركيب الفلتر العلوي بسهولة.

1 قم بإيقاف تشغيل الطاقة وفصل سلك الطاقة.


الطراز 2

1 قم بإيقاف تشغيل الطاقة وفصل سلك الطاقة.

2 افتح الغطاء الأمامي.

- أرفع طرف الغطاء قليلاً.


3 أمسك مقابض فلاتر الهواء، ثم اسحبها لأسفل قليلاً وقم بازالتها من الوحدة الداخلية.



4 قم بتنظيف الفلتر بمكنسة كهربائية أو باستخدام خليط من المياه الفاترة وسائل تنظيف متعادل.


5 جفف الفلتر في الظل.

6 أدخل خطافات فلاتر الهواء في الغطاء الأمامي.




7 تحقق من جانب الغطاء الأمامي للتأكد من تركيب فلتر الهواء بشكل صحيح.

2 امسك مقبض فلتر الهواء، وارفعه لأعلى قليلاً.

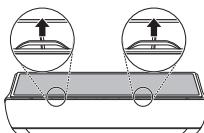


3 قم بازالتها من الوحدة الداخلية.



4 قم بتنظيف الفلتر بمكنسة كهربائية أو باستخدام خليط من المياه الفاترة وسائل تنظيف متعادل.

5 جفف الفلتر في الظل.

6 أدخل خطافات فلاتر الهواء في الغطاء الأمامي.

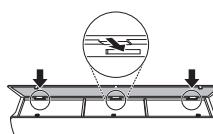



الفترة	الوصف	النوع
كل سبعين	قم بتنظيفه باستخدام مكنسة كهربائية أو يدوياً.	فلتر الهواء
كل 3 شهور	قم بتنظيفه باستخدام مكنسة كهربائية أو بفرشاة.	فلتر ثلاثي
مرة كل شهر	قم بتنظيفه باستخدام مكنسة كهربائية أو بفرشاة.	فلتر الغبار الدقيق
كل 6 شهور	قم بتنظيفه باستخدام مكنسة كهربائية أو بفرشاة.	فلتر المواد المسببة للحساسية
كل 6 شهور بشكل منتظم	نظف باستخدام عود قطني جاف لإزالة أية أتربة. نظف سطح الوحدة الداخلية باستخدام قطعة قماش جافة وناعمة.	المؤين (اختياري)
مرة في السنة	نظف شبكة تصريف وحدة التكيف بشكل احترافي.	وحدة داخلية
كل 4 شهور	نظف أنبوبة تصريف وحدة التكيف بشكل احترافي.	
مرة في السنة	استبدل بطاريات وحدة التحكم عن بُعد.	
مرة في السنة	نظف ملفات البادل المماري وفتحات اللوحة بشكل احترافي (تواصل مع المختصين).	وحدة خارجية
مرة في السنة	نظف المرروحة بشكل احترافي.	
مرة في السنة	نظف شبكة تصريف وحدة التكيف بشكل احترافي.	
مرة في السنة	تأكد من إحكام تثبيت مجموعة تركيب المرروحة بشكل احترافي.	
مرة في السنة	نظف المكونات الكهربائية بالهواء.	

ملاحظة

- لا تستخدم أبداً ماء تصل درجة حرارته أكثر من 40 درجة مئوية عند تنظيف الفلتر، فقد يسبب تشوهًا أو فقدان اللون.
- لا تستخدم المواد المتطايرة أبداً عند تنظيف الفلتر، فقد تتسبب في الإضرار بسطح المنتج.
- لا تقم بغسل فلتر الغبار الدقيق بالماء، فقد يتلف (اختياري).
- لا تقم بغسل فلتر ثلاثي بالماء، فقد يتلف (اختياري).
- لا تقم بغسل فلتر المواد المسببة للحساسية بالماء، لأن ذلك يؤدي إلى تلف الفلتر (اختياري).

تحذير !

- قبل التنظيف أو إجراء الصيانة، افصل مصدر الطاقة وانتظر حتى تتوقف المروحة.

إذا كنت تجوي عدم استخدام مكيف الهواء لفترة طويلة من الزمن، فقم بتجفيفه للحفاظ عليه في أفضل حال، قم بتنظيف الجهاز بشكل منتظم للحفاظ على الأداء الأمثل ومنع حدوث أعطال محتملة.

• قم بتجفيف مكيف الهواء باستخدام وضع المروحة من 3 إلى 4 ساعات ثم فصل الطاقة، فقد تقع أضرار داخلية إذا تراكمت الرطوبة داخل مكونات الجهاز.

• قبل استخدام مكيف الهواء مجدداً، قم بتنظيف مكوناته الداخلية في وضع المروحة لمدة 3 أو 4 ساعات، حيث سيساعدك هذا الأمر في القضاء على الروائح التي تنتاب بسبب الرطوبة.



- قد تتغير الخاصية حسب نوع الطراز.



استخدام «التشخيص المسموع» بغرض تشخيص المشكلات

تابع التعليمات أدناه للاستعانة بطريقة التشخيص المسموع.

- قم بتشغيل تطبيق **Smart LG ThinQ** واختر ميزة **Diagnosis** من القائمة. اتبع تعليمات استخدام التشخيص المسموع الواردة في تطبيق **LG ThinQ**.

1 قم بتوصيل قابس الطاقة في مأخذ التيار الكهربائي بشكل سليم.

2 ضع صوان التكلم في هاتفك الذكي بالقرب من الرمز أو .

3 اضغط مع الاستمرار على الزر (5 s) لمدة 5 ثوان أو أكثر مع الاستمرار في الإمساك بصوان التكلم في هاتفك الذكي من الرمز حتى انتهاء نقل البيانات.

أيقون الهاتف في مكانه حتى انتهاء نقل البيانات. ويتم عرض الوقت المتبقى لنقل البيانات.

4 بعد إتمام نقل البيانات، سيظهر التشخيص على شاشة التطبيق.

ملاحظة

- للحصول على أفضل النتائج، لا تحرك الهاتف في أثناء نقل النغمات.
- تأكد من تقليل الأصوات المحيطة لأدنى مستوى حتى يتلقى الهاتف صوت صفير الوحدة الداخلية بشكل صحيح.

Smart Diagnosis (التشخيص الذكي)

توفر هذه الميزة فقط في الطرز التي تحمل العلامة أو . يمكنك الاستعانة بهذه الميزة لتشخيص المشكلات التي تواجهك أثناء استخدام الجهاز وحلها.

ملاحظة

- قد لا تعمل هذه الخدمة وذلك يعود لعوامل خارجية على سبيل المثال لا الحصر، عدم توفر شبكة Wi-Fi أو انقطاع الاتصال بشبكة Wi-Fi أو السياسة المحلية لمتجر التطبيقات أو عدم توفر التطبيق وهذه أسباب لا تتم عن تقصير من LG.

قد تتعرض هذه الميزة لتغيرات دون سابق إنذار وقد يختلف شكلها وفقاً للمنطقة التي تسكن فيها.

استخدام تطبيق LG ThinQ بغرض تشخيص المشكلات

إذا واجهت مشكلة أثناء استخدام الجهاز المزود بشبكة Wi-Fi، ففيها يمكن نقل بيانات استكشاف الأخطاء وإصلاحها إلى هاتف ذكي باستخدام تطبيق **LG ThinQ**.

- قم بتشغيل تطبيق **Smart LG ThinQ** واختر ميزة **Diagnosis** من القائمة. اتبع تعليمات المواردة في تطبيق **LG ThinQ**.



معلومات حول إشعار البرامج مفتوحة المصدر

للحصول على التعليمات البرمجية للمصدر ضمن GPL، LGPL، وMPL، والحصول على التراخيص مفتوحة المصدر الأخرى التي لديها التزامات للكشف عن التعليمات البرمجية الخاصة بالمصدر، المضمنة في هذا المنتج، وللحصول إلى كل أحكام الترخيص المشار إليها، وإشعارات حقوق النشر وكل الوثائق ذات الصلة، يرجى زيارة <https://opensource.lge.com>

ستتوفر LG Electronics أيضاً التعليمات البرمجية المفتوحة المصدر على فرنس CD-ROM مقابل رسم يغطي تكلفة القيام بهذا التوزيع (مثل تكلفة وسائل النقل والشحن والتسلیم) بناءً على طلب يُرسل عبر البريد الإلكتروني إلى opensource@lge.com.


يسري هذا العرض لأي شخص يتسلم هذه المعلومات لمدة ثلاثة سنوات بعد آخر عملية شحن لهذا المنتج.

- تعرّف تسجيل الجهاز بسبب مشكلات في إرسال الإشارة لاسلكياً. افضل قايس الجهاز عن الطاقة وانتظر لمدة دقيقة قبل أن تحاول مجدداً.
- إذا كان جدار الحماية الموجود على جهاز التوجيه الخاص بك ممكناً، قم بتعطيله أو اضف إليه استثناء.
- يجب أن يكون اسم الشبكة اللاسلكية (SSID) مكوناً من أحرف وأرقام باللغة الإنجليزية. (لا تستخدم رموزاً خاصة)
- قد تختلف واجهة استخدام الهاتف الذكي حسب نظام تشغيل الهاتف وحسب الشركة المصنعة.
- إذا كان بروتوكول الأمان الخاص بجهاز التوجيه مضبوطاً على **WEP**، فقد يتعرّف عليك إعادة الشبكة. الرجاء تغييره إلى بروتوكول أمان آخر (يُنصح بالختيار **WPA2**) ثم أعد تسجيل المنتج.


تثبيت تطبيق LG ThinQ

ابحث عن تطبيق **LG ThinQ** على Apple App Store أو Google Play Store من على هاتف ذكي. اتبع التعليمات لتنزيل التطبيق وتثبيته.

- 2** قم بإغلاق بيانات الهاتف المحمول أو البيانات الخلوية على هاتفك الذكي.

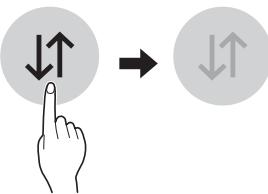

- 3** وصل هاتفك الذكي بجهاز التوجيه اللاسلكي.

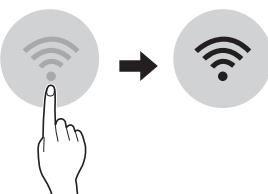

ملاحظة

- للتحقق من اتصال Wi-Fi، قم بفحص رمز على لوحة التحكم ما إذا كان مضيئاً.
- يدعم الجهاز شبكات Wi-Fi بتردد 2.4 GHz فقط لمعرفة تردد الشبكة الخاصة بك، اتصل بمزود خدمة الإنترنت أو راجع دليل جهاز التوجيه اللاسلكي.
- تطبيق LG ThinQ ليس مسؤولاً عن أي مشاكل الاتصال بالشبكة أو أي أخطاء، أو خلل، أو أخطاء تنتج عن طريق الاتصال بالشبكة.
- إذا كان لدى الجهاز مشكلة اتصال بشبكة Wi-Fi، قد تكون بعيدة كل البعد عن جهاز التوجيه. اشتري جهاز تقوية Wi-Fi (موسع المدى) لتحسين قوة إشارة Wi-Fi.
- قد لا يتم الاتصال بشبكة Wi-Fi أو قد يتم قطع الاتصال حسب جودة بيئه الشبكة المحلية.
- قد لا يعمل الاتصال بالشبكة بشكل صحيح وفقاً لمزود خدمة الإنترنت.
- يمكن أن تجعل البيئة اللاسلكية المحيطة خدمة الشبكة اللاسلكية تعمل ببطء.

توفر هذه الميزة فقط في الطرز الذي تحمل العلامة أو **ThinQ**. يسمح لك تطبيق **LG ThinQ** التواصل مع الجهاز بواسطة هاتفك الذكي.

تطبيق LG ThinQ

MZIA تطبيق **LG ThinQ** متاحة مجاناً على متجر Google Play.

Smart Diagnosis (التخمين الذكي) تساعدك ميزة التخمين الذكي على تشخيص أي مشكلة تواجهك أثناء استخدام الجهاز.

الإعدادات

يسمح لك بتغيير خيارات متعددة على الجهاز وفي التطبيق.

ملاحظة

- إذا غيرت جهاز التوجيه اللاسلكي الخاص بك، أو مزود خدمة الإنترنت أو كلمة المرور، قم بمسح الجهاز المسجل من تطبيق **LG ThinQ** وسجله من جديد.
- يخضع التطبيق للتغيير لأغراض تحسين الجهاز بدون إشعار المستخدمين.
- قد تتغير الميزات حسب الطراز.

قبل استخدام تطبيق LG ThinQ

- تأكد من المسافة بين الجهاز وجهاز التوجيه اللاسلكي (شبكة Wi-Fi).
- إذا كانت المسافة بين الجهاز وجهاز التوجيه اللاسلكي بعيدة أكثر من اللازم، ستصبح قوة الإشارة ضعيفة. قد يستغرق التسجيل وقتاً طويلاً أو قد يفشل التثبيت.

استخدام وظيفة النوم المريح (اختياري)

تقوم هذه الوظيفة بتشغيل مكيف الهواء تلقائياً لضبط وضع نوم مريح.

1 قم بتشغيل الجهاز.


2 اضغط على زر  **Sleep**.

• يظهر كل من   على شاشة العرض.

ملاحظة

- تتوفر هذه الوظيفة مع وضع التبريد.
- تتوقف الريشة عن الحركة وتقوم بضبط زاوية تدفق الهواء في وضع غير مباشر، بعد 30 دقيقة من البدء حتى لو لم تخضن درجة حرارة الغرفة إلى درجة الحرارة المثالية للنوم.
- ومن المحتمل أن يختلف وضع النوم المريح من شخص لأخر.
- يظهر  فقط على الشاشة عند تفعيل خاصية النوم المريح أثناء استخدام خاصية التحكم في الطاقة / التحكم في الأمير.


الوصف	شاشة عرض [2]	زر [1]
يستخدم مولد الأيونات ملابس الأيونات المساعدة في تحسين جودة الهواء الداخلي.		
للحد من الضوضاء الصادرة عن الوحدة الخارجية.		
للحفاظ على الحد الأدنى لدرجة حرارة الغرفة ومنع تجمد الأشياء الموجودة في الغرفة.		
للخلاص من الناموس.		
للخلاص من الرطوبة المتولدة داخل الوحدة الداخلية.		
لضبط إعدادات وحدة التحكم عن بعد.	-	Reset

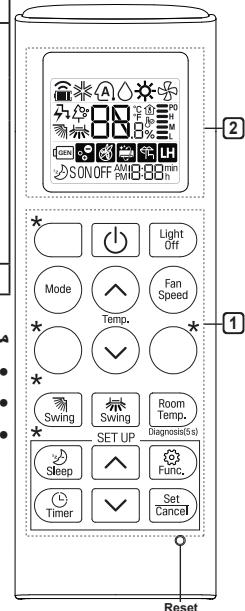

ملاحظة

- قد تكون بعض الوظائف غير مدرومة حسب نوع الطراز.
- يمكن تغيير الأزرار المميزة بالعلامة * طبقاً لنوع الطراز.
- اضغط على زر **Func.** لتشغيل **Set/Cancel** التي تم اختيارها.


الوصف	شاشة عرض [2]	زر [1]
تشغيل/إيقاف تشغيل مكيف الهواء تلقائياً في الوقت المطلوب.	SONOFF	(Timer)
تحديد/إلغاء الوظائف الخاصة والمؤقت.	-	Set/Cancel
ضبط الوقت.	-	[▼] [▲]
ضبط درجة سطوع الشاشة في الوحدة الداخلية.	-	Light Off
عرض درجة حرارة الغرفة.	°C	Room Temp.
تغيير درجة حرارة الوحدة بين منوية وفهريات.	°F	*°C↔°F(5 s)
ضبط تدفق الهواء لنقادي الرياح.	风速	*Comfort Air
ضبط عرض المعلومات الخاصة بالطاقة أو عدم عرضها.	-	*kW(3 s)
إظهار تأثير توفير الطاقة.	耗电	*Ampere Ctrl.
ضبط وضع نوم مريح.	睡眠	*Comfort Sleep
ضبط وضع نوم مريح.	睡眠	(Sleep)
مراجعة معلومات الصيانة الخاصة بالمنتج بشكل ملائم.	-	Diagnosis (5 s)

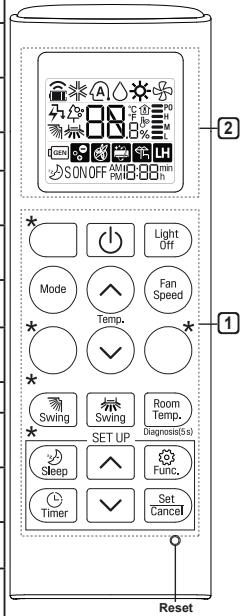

استخدام وحدة التحكم عن بعد اللاسلكية

بإمكانك تشغيل مكيف الهواء بشكل أكثر سهولة باستخدام وحدة التحكم عن بعد.

الوصف	شاشة عرض ②	زر ①
لتشغيل/إيقاف تشغيل مكيف الهواء.	-	
لضبط درجة حرارة الغرفة المطلوبة على وضع التبريد، أو التدفئة، أو التغيير التقاني.	88 °C	Temp.
لاختيار وضع التبريد.	*	Mode
لاختيار وضع التدفئة.	:-	
لاختيار وضع إزالة الرطوبة.	💧	
لاختيار وضع تشغيل المروحة.	☴	
لاختيار وضع التغيير التقاني/وضع التشغيل التقاني.	A	
لتغيير درجة الحرارة والرطوبة في الغرفة بسرعة.	Po	
لضبط سرعة المروحة.	H M L	
لضبط اتجاه تدفق الهواء عمودياً أو أفقياً.		

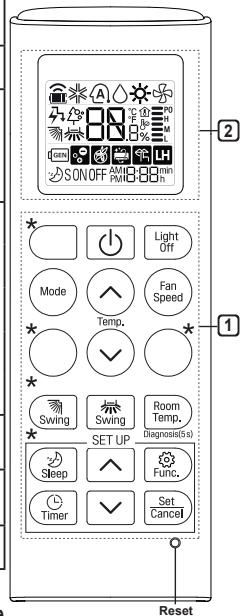

ملاحظة

- يمكن تغيير الأزرار المميزة بالعلامة * طبقاً لنوع الطراز.

وحدة تحكم عن بعد لاسلكية


تشغيل مكيف الهواء بدون استخدام جهاز التحكم عن بعد.

يمكنك استخدام زر **ON/OFF** الخاص بالوحدة الداخلية لتشغيل مكيف الهواء عندما تكون وحدة التحكم عن بعد غير موجودة.


1 افتح الغطاء الأمامي (الطراز 2) أو الريشة الأفقية (الطراز 1).

2 اضغط على زر **ON/OFF**.

الطراز 1

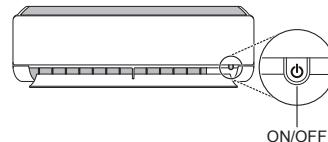

الطراز 2

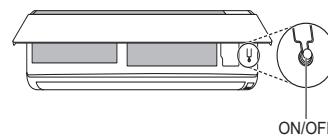

ملاحظة

- إذا تم فتح الريشة بسرعة، فقد يتعرض محرك التدرج للكسر.
- يتم ضبط سرعة المروحة على درجة عالية.
- قد تتغير الخاصية حسب نوع الطراز.
- قد تتغير درجة الحرارة عند استخدام زر **ON/OFF** التشغيل في حالة الطوارئ.
- لأنماط التبريد فقط، يتم ضبط درجة الحرارة على 22 درجة مئوية.
- لنمطي التبريد والتدفئة، يتم ضبط درجة الحرارة من 22 درجة مئوية إلى 24 درجة مئوية.



ملاحظات التشغيل

اقتراح توفير الطاقة

- يرجى الحرص على عدم زيادة درجة التبريد بشكل مفرط داخل المكان، فقد يشكل هذا خطراً على صحتك وقد يستهلك المزيد من الكهرباء.
- قم بحجب دخول أشعة الشمس باستخدام الستائر العاديّة أو الحاجبة للضوء أثناء تشغيل مكيف الهواء.
- قم بإغلاق الأبواب والنوافذ بلحكام أثناء تشغيل مكيف الهواء.
- قم بضبط اتجاه تدفق الهواء بشكل عمودي أو أفقي لتوزيع الهواء داخل الغرفة.
- قم بتغيير سرعة المروحة لتبريد الهواء الداخلي أو تدفّقها بسرعة خلال فترة زمنية قصيرة.
- قد يقل معدل تجديد الهواء داخل الأماكن المغلقة عند فتح النوافذ وذلك اذا تم تشغيل مكيف الهواء لفترات طويلة.
- نظف فلتر الهواء مرة كل أسبوعين. قد يمنع الغبار والشوائب التي يتم جمعها في فلتر الهواء بسد الهواء أو تقليل من أداء الوحدة.

الأجزاء والوظائف

وحدة خارجية

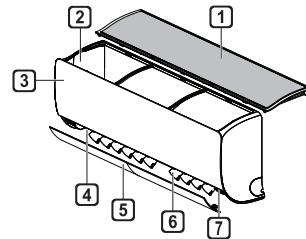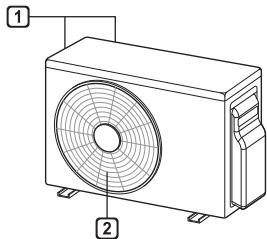

فتحات دخول الهواء **1**

فتحات خروج الهواء **2**

فلتر الهواء **1**

مدخل الهواء **2**

غطاء أمامي **3**

مخرج الهواء **4**

عاكس الهواء (ريشة أفقية) **5**

عاكس الهواء (فتحة تهوية عمودية) **6**

زر تشغيل/إيقاف التشغيل **7**

ملاحظة

- قد يختلف عدد مصابيح التشغيل وأماكنها وفقاً لطراز مكيف الهواء.
- قد تتغير الخاصية حسب نوع الطراز.

الصيانة

- يُحظر بشدة ملامسة الأجزاء المعدنية الخاصة بمكيف الهواء عند نزع فلتر الهواء.
- استخدم مقعد متين أو سلم عند تنظيف مكيف الهواء، أو صيانته، أو إصلاحه على ارتفاع ما.
- يُحظر بشدة استخدام مواد تنظيف قوية أو مذيبات عند تنظيف مكيف الهواء ويُحظر رش الماء ، ثم استخدم قطعة قماش ناعمة.
- ولتنظيف الجزء الداخلي لمكيف الهواء، اتصل بمركز الخدمة أو الموزع المعتمد. فقد يؤدي استخدام المنظفات القوية إلى تأكل الوحدة أو تلفها.

درجة حرارة

التبديد	الأعلى	دقيقة
داخل	°C 32	°C 18
في الخارج	°C 54	°C 18

التدفئة	الأعلى	دقيقة
داخل	°C 30	°C 16
في الخارج	°C 24	°C 5-

التخلص من مخلفات البطاريات

- يجب التخلص من جميع البطاريات بشكل منفصل عن مجاري النفايات البلدية عن طريق مرافق الجمع المعينة التي تعينها الحكومة أو السلطات المحلية.
- يساعد التخلص الصحيح من البطاريات القديمة في منع الآثار السلبية المحتملة على البيئة وصحة الحيوان والبشر.
- لمزيد من المعلومات التفصيلية حول التخلص من البطاريات القديمة ، يرجى الاتصال بمكتب خدمة التخلص من النفايات في مدينتك أو المتجر الذي اشتريت منه المنتج.
- كما يمكنك الاتصال بمركز دعم LG عن طريق الدخول على الرابط التالي
https://www.lg.com/sa_en/support/contact/telephone

التشغيل

- احرص على التخلص من البطاريات إذا لم يتم استخدام وحدة التحكم عن بعد لفترة زمنية طويلة.
- تأكد من تركيب الفلتار قبل تشغيل مكيف الهواء.
- تأكد من عدم وجود تسريب لغاز التبريد بعد تركيب مكيف الهواء أو إصلاحه.
- تجنب وضع أي شيء على مكيف الهواء.
- تجنب مطلقاً الجمع بين أنواع مختلفة من البطاريات، أو جمع البطاريات القديمة مع الجديدة في وحدة التحكم عن بعد.
- تجنب تشغيل مكيف الهواء لفترة طويلة إذا كانت درجة الرطوبة مرتفعة للغاية أو عند ترك الباب أو النافذة مفتوحة.
- توقف عن استخدام وحدة التحكم عن بعد في حالة وجود تسرب للمادة السائلة في البطارية، وفي حال ملامسة ثوبك أو جلدك للمادة السائلة المسرية من البطارية، فقم بغسله بماء نظيف.
- تجنب تعريض الأشخاص، أو الحيوانات، أو النباتات للهواء البارد أو الساخن الصادر من مكيف الهواء لفترات زمنية طويلة.
- في حالة ابتلاع سائل البطارية المتتسرب، فقم بغسل الجزء الداخلي من الفم بالكامل جيداً ثم إستشر الطبيب.
- يُحظر شرب الماء الذي تم تصريفه من مكيف الهواء.
- تجنب استخدام الجهاز لأغراض خاصة، مثل الاحتفاظ بالأطعمة، والأعمال الفنية، وما شابه ذلك، فهو مكيف هواء مخصص لـأغراض استهلاكية وليس نظام تبريد دقيق، فقد يؤدي ذلك إلى وقوع أضرار أو خسائر في الممتلكات.
 - لا تقم بشحن البطاريات أو فكهها.
 - هذه الأجهزة متاحة لعامة الناس.

تنبيه !

للحد من مخاطر حدوث إصابات طفيفة للأشخاص، أو حدوث عطل، أو تلف المنتج أو الممتلكات عند استخدام المنتج، يجب اتباع احتياطات السلامة الأساسية، بما فيها ما يلي:

التركيب

- تجنب تركيب مكيف الهواء في إحدى المناطق التي تتعرض مباشرة للرياح البحرية (رذاذ الملح).
- قم بتركيب خرطوم التصريف بشكل صحيح لتصريف الماء المكثف بسهولة ويسر.
- توخِّ الحذر عند فك مكيف الهواء أو تركيبه.
- تجنب تركيب ملامسة غاز التبريد المتتسرب أثناء التركيب أو الإصلاح.
- انقل مكيف الهواء بمساعدة شخصين أو أكثر أو باستخدام الرافعة الشوكية.
- قم بتركيب الوحدة الخارجية بحيث يكون مكيف الهواء محمياً من أشعة الشمس المباشرة، تجنب وضع الوحدة الداخلية في مكان تكون معرضة فيه مباشرةً لأنشدة الشمس عبر النوافذ.
- تخلص بشكل آمن من مواد التغليف مثل البراغي، أو المسامير، أو الأكياس البلاستيكية، أو البطاريات باستخدام عملية التغليف المناسبة بعد التركيب أو التصليب.
- قم بتركيب مكيف الهواء في مكان بحيث لا تتسرب الضوضاء الصادرة عن الوحدة الخارجية أو أدخنة العادم في إزعاج الجيران، فيمكن أن يؤدي عدم القيم بذلك إلى حدوث خلافات مع الجيران.

السلامة الفنية

- يمكن أن تشكل عمليات التركيب أو الإصلاح التي يجريها أشخاص غير معتمدين خطراً عليك وعلى الآخرين.
- المعلومات الواردة في هذا الدليل مخصصة لاستخدامها من قبل فني صيانة مؤهل، وعلى دراية بإجراءات السلامة، ومزود بالأدوات ومعدات الاختبار المناسبة.
- عدم قراءة جميع التعليمات الواردة في هذا الدليل واتباعها قد يؤدي إلى حدوث عطل في الجهاز، أو تلف الممتلكات، أو الإصابة الشخصية وأو الوفاة.
- يتبعن تركيب الجهاز وفقاً للوائح الوطنية الخاصة بتوصيل الأسلامك.
- في حالة استبدال سلك الطاقة، يجب إجراء الاستبدال من قبل موظفين معتمدين ممن يقومون باستخدام قطع الغيار الأصلية فقط.
- يجب تأريض هذا الجهاز بشكل صحيح للحد من مخاطر حدوث صدمات كهربائية.
- تجنب قطع طرف التأريض أو نزعه من مقبس الطاقة.
- لن يعمل توصيل الطرف الأرضي للمحول بمسمار غطاء مقبس الحائط على تأريض الجهاز إلا إذا كان مسمار الغطاء معدن، وغير معزول، وتم تأريض مقبس الحائط من خلال أسلاك المنزل.
- إذا كان لديك أي شك حول ما إذا تم تأريض مكيف الهواء بشكل صحيح أم لا، فيجب فحص مقبس الحائط والدائرة الكهربائية من قبل كهربائي مختص.
- يجب اتباع إجراءات خاصة عند التخلص من غاز التبريد وغاز المادة العازلة القابل للاشتعال من قبل مستخدمي الجهاز استشر وكيل الخدمة أو شخصاً مؤهلاً يماثله قبل التخلص منهم.
- في حالة تلف السلك الكهربائي، يجب استبداله من قبل الشركة المصنعة أو وكلاء الصيانة التابعين لها أو شخص مؤهل بصورة مماثلة لتجنب أي مخاطر.



- تجنب عرقلة فتحة مدخل تدفق الهواء أو مخرجه.
- تجنب إدخال يديك أو أشياء أخرى داخل مدخل الهواء أو مخرجه أثناء تشغيل مكيف الهواء.
- تأكد من أن كبل الطاقة غير متسلخ، أو ضعيف، أو مكسور.
- يحظر ملامسة مكيف الهواء، أو تشغيله، أو إصلاحه إذا كانت يداك مبتلتين.
- تجنب وضع أي أجسام على كبل الطاقة.
- تجنب وضع مدفأة أو أي أجهزة تسخين أخرى بالقرب من كبل الطاقة.
- لا تقوم بتعديل طول كابل الطاقة أو تمديده. عند تعرض الطبقة العازلة للكابلات الطاقة للخدش أو التقشر، فقد يؤدي ذلك إلى نشوب حريق أو حدوث صدمة كهربائية، وحينئذ يجب استبداله على الفور.
- افصل مصدر الطاقة على الفور في حالة انقطاع التيار الكهربائي أو حدوث عاصفة رعدية.
- تأكد من أن كابل الطاقة بعيد عن الأماكن التي يمكن أن يتعرض فيها للشد أو التلف أثناء التشغيل.
- لا تلمس أنابيب غاز التبريد أو أنبوب الماء أو أي من الأجزاء الداخلية أثناء تشغيل الجهاز أو بعد إيقاف تشغيل الجهاز مباشرة.
- لا تقوم بتفكيك الجهاز بنفسك: تفكيك الجهاز والتعامل مع غاز التبريد والزيوت وباقى القطع يجب أن يراعي القوانين المطبقة.

الصيانة

- تجنب تنظيف الجهاز عن طريق رش المياه مباشرة على الجهاز.
- قبل التنظيف أو إجراء الصيانة، افصل مصدر الطاقة وانتظر حتى تتوقف المروحة.





- قم بتركيب المأخذ الكهربائي المخصص وقاطع التيار قبل استخدام مكيف الهواء.
- لا تقم بتوصيل السلك الأرضي بثوب الغاز، أو مانع الصواعق، أو السلك الأرضي الخاص بالهاتف.
- لابد من دمج وسائل قطع التوصيل في الأسلاك الثابتة وفقاً لقواعد تمديد الأسلاك.
- لا تركب الوحدة في أحوااء قابلة للانفجار.

التشغيل

- تأكد من استخدام قطع الغيار المدرجة في قائمة قطع غيار الخدمة فقط، ويحظر بشدة تعديل المعدات.
- تأكد من عدم تسلق الأطفال على الوحدة الخارجية أو الاصطدام بها.
- تخالص من البطاريات في مكان لا يتعرض لخطر نشوب حريق.
- استخدم فقط غاز التبريد المحدد في الملصق الموضوع على مكيف الهواء.
- افصل مصدر الطاقة في حالة وجود أي ضوضاء، أو رائحة، أو دخان صادر عن مكيف الهواء.
- تجنب ترك أي مواد قابلة للاشتعال مثل الجازولين، أو البنزين، أو سائل تخفيف الدهان بالقرب من مكيف الهواء.
- اتصل بمركز الخدمة المعتمد إذا غمرت مياه الفيضانات مكيف الهواء.
- تجنب استخدام مكيف الهواء لفترة زمنية طويلة في مكان صغير دون وجود تهوية مناسبة.
- وفي حالة وجود تسريب غاز (مثل غاز الفريون، والبروبان، والغاز النفطي السائل وما شابه ذلك)، قم بتهوية المكان بالقدر الكافي قبل تشغيل مكيف الهواء مرة أخرى.
- تأكد من تهوية المكان تهوية كافية عند استخدام مكيف الهواء وأحد أجهزة التسخين مثل المدفأة في وقت واحد.



التركيب

- تجنب تركيب مكيف الهواء على سطح غير مستوي أو في مكان خطر يتداعى للسقوط.
- اتصل بمركز الخدمة المعتمد عند تركيب مكيف الهواء أو نقله إلى مكان آخر.
- قم بتركيب لوحة صندوق التحكم وتغطيتها بشكل آمن.
- تجنب تركيب مكيف الهواء في مكان تخزن فيه السوائل القابلة للاشتعال أو الغازات مثل البنزين، والبروبان، وسائل تخفيف الدهان، وما إلى ذلك.
- تأكد من عدم شد الأنابيب وكبل الطاقة الرابطين للوحتين الداخلية والخارجية بشكلٍ بالغ عند تركيب مكيف الهواء.
- استخدم مصهرًا وقاطع تيار من النوع القباسي بما يتوافق مع فئة مكيف الهواء.
- تجنب إدخال الهواء أو الغاز في الجهاز باستثناء غاز التبريد المحدد.
- استخدم غاز غير قابل للاشتعال (النيتروجين) للتأكد من عدم وجود أي تسريب ولتنقية الهواء؛ حيث إن استخدام الهواء المضغوط أو الغاز القابل للاشتعال قد يتسبب في نشوب حريق أو حدوث انفجار.
- يجب أن تكون توصيلات الأسلاك داخلياً/خارجياً آمنة تماماً، وينبغي تحديد مسار الكابل بشكل صحيح بحيث لا توجد قوة تسحب الكابل من أطراف التوصيل، فمن الكيل أن تتسبب التوصيلات الخاطئة أو الضعيفة في توليد الحرارة أو نشوب حريق.

يتمثل الغرض من إرشادات السلامة التالية في الحيلولة دون وقوع المخاطر غير المتوقعة أو الأضرار الناجمة عن التشغيل غير الآمن أو غير الصحيح للمنتج.

يتم تقسيم الإرشادات إلى "تحذير" و"تنبيه" على النحو الموضح أدناه.

تحذير ! يتم عرض هذا الرمز للإشارة إلى الأمور وعمليات التشغيل التي يمكن أن تسبب مخاطر، فاحرص على قراءة الجزء الذي يحمل هذا الرمز بعناية واتبع الإرشادات لتجنب المخاطر.

تحذير ! يشير هذا إلى أن عدم اتباع الإرشادات قد يسبب وقوع إصابة خطيرة أو الوفاة.

تنبيه ! يشير هذا إلى أن عدم اتباع الإرشادات قد يتسبب في وقوع إصابة طفيفة أو تلف المنتج.

إرشادات السلامة الهامة

تحذير ! لتقليل مخاطر وقوع انفجار، أو نشوب حريق، أو حدوث وفاة، أو التعرض لصدمة كهربية، أو حدوث إصابة، أو حروق للأشخاص عند استخدام المنتج، يجب اتباع احتياطات السلامة الأساسية، بما فيها ما يلي:

الأطفال بالمنزل

هذا الجهاز غير مخصص لاستخدام الأفراد (بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية، أو ليس لديهم خبرة ومعرفة، ما لم يتم الإشراف عليهم أو تقدم لهم الإرشادات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم، كذلك يجب الإشراف على الأطفال للتأكد من عدم عبثهم بالجهاز.

جدول المحتويات

قد يحتوي هذا الدليل على صور أو محتوى يختلف عن الطراز

الذى قدمت بشرائه.

يخصم هذا الدليل للمراجعة من الشركة المصنعة.

3.....	إرشادات السلامة
3.....	إرشادات السلامة الهامة
11.....	التشغيل
11.....	ملاحظات التشغيل
11.....	الأجزاء والوظائف
12.....	وحدة تحكم عن بعد لاسلكية
16.....	استخدام وظيفة النوم المريح (اختياري)
17.....	الوظائف الذكية
17.....	تطبيق LG ThinQ
19.....	Smart Diagnosis (التشخيص الذكي)
20.....	الصيانة
22.....	تنظيف فانر الهواء
23.....	استكشاف الأعطال وإصلاحها



امسح كود QR للإطلاع على الدليل.



دليل المالك

مكيف الهواء

يرجى قراءة دليل المالك هذا بالكامل قبل تشغيل الجهاز والاحتفاظ به في متناول اليد للرجوع إليه في جميع الأوقات.



النوع: مثبت على الحائط

ENGLISH EN

العربية AR