


# SPECIFICATIONS

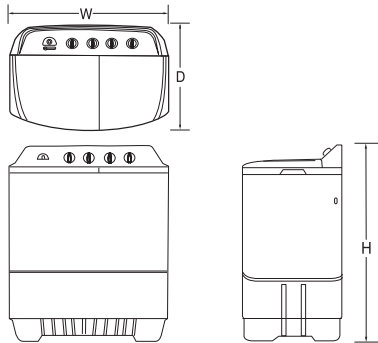

| Power source            | On specification label                                     |        |
|-------------------------|------------------------------------------------------------|--------|
| Water Level             | H : 84 Litres, L : 72 Litres, M : 60 Litres, S : 50 Litres |        |
| Water Pressure          | Less than 100 kPa (1 kgf/cm <sup>2</sup> )                 |        |
| Dimension               | 905 x 545 x 1025 mm. (W x D x H)                           |        |
| Weight                  | 32.0 kg.                                                   |        |
| Wash Capacity           | 10.0 kg (Dry Clothes)                                      |        |
| Drying Capacity         | 10.0 kg (Dry Clothes)                                      |        |
| Spin Drying Performance | RMC (%)                                                    | 62.9   |
|                         | Class                                                      | 3 Star |



## OWNER'S MANUAL WASHING MACHINE

Please read this manual carefully before operating your set and retain it for future reference

MODEL : P1460RWNL



MFL68505585  
Rev.00\_200820

www.lg.com

Copyright © 2020 LG Electronics Inc. All Rights Reserved.

### Importer

| Country      | Trade Name                           | Importer's Address                                                                                                                                                       |
|--------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| UAE          | LG Electronics Gulf FZE              | GF-Jebel Ali Main Warehouse, Jebel Ali Free Zone, P.O. Box : 61445 Dubai, UAE                                                                                            |
|              | Al Yousef Electronics                | AL YOUSUF ELECTRONICS LLC P.O. BOX NO 25 DUBAI, UAE TEL: +971-4-2957300 FAX: 971-4-2957988                                                                               |
| Bahrain      | A.J.M. Kooheji Group B.S.C. ©        | A.J.M. Kooheji Group B.S.C. © P.O. Box74, Manama kingdom of Bahrain                                                                                                      |
| Oman         | Oman Gulf Enterprises LLC            | OMAN GULF ENTERPRISES LLC P.O. BOX 421, CODE 118, MUSCAT, SULTANATE OF OMAN, 118, ATTN: Mr. Rajesh Radhakrishnan, +96896372373, rajeshr@olegroup.com C.R. No.: 1/33586/3 |
| Qatar        | Video Home and Electronics Centre    | Video Home and Electronics Centre WLL PO BO 4668, Doha Qatar                                                                                                             |
| Kuwait       | AL-Babtain Electronics Company WLL   | Al-Babtain Electronics COMPANY WLL Al Babtain P.O Box 599, Safat 13006 Kuwait                                                                                            |
| Yemen        | Salem Mohammed Shammakh & Co.        | Salem Mohammed Shammakh & CO. PO Box 3372, Hodeidah Republic of Yemen                                                                                                    |
| Saudi Arabia | United Yousef Mohammed Naghi Co Ltd. | UNITED YOUSEF M. NAGHI CO. LTD. P.O BOX 45, JEDDAH 21411 SAUDI ARABIA                                                                                                    |
|              | UNITED ELECTRONICS CO                | P.O. Box 76688 Khobar 31952, Saudi Arabia                                                                                                                                |

# SAFETY MEASURE

## WARNING

### Installation Area

- Avoid area exposed to snow, rain, or where humidity is high. It may cause electric shock.

### Switch Area

- Avoid watering on the switch area. It may cause electric shock or fire.

### Volatile Material

- Do not use volatile material such as Benzene, Gasoline, bug killer.
- Do not leave strong alkaline substance such as bleach inside the tub. Damage on plastic surface and rubber parts may occur.

### Installation

- Install the washing machine on a horizontal support. Otherwise, it may cause vibration and noise.

- Be sure to disconnect the power cord from the electric outlet before starting care and maintenance. It may cause electric shock.

- Be sure to earth the washer to prevent electric shock. To reduce the risk of electric shock, do not install the washer in humid spaces.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

### Heat

- Avoid electric heater, candle light, cigarette light, bug smoker, etc. near the machine. It may ignite or deform plastic part.

### Hot water

- Avoid using hot water over 50°C. It may deform plastic parts or cause malfunction.

### In Operation

- Do not insert the hand inside the spin dryer basket while the machine is in operation (Do not let children climb on the machine or climb into the tub. Injury may occur.)
- Do not drain the water out of the wash tub while the spin dryer basket is in operation. Otherwise the spin motor could be damaged.

### Power Cord

- If the power supply cord is damaged, it must only be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.


- Do not treat the power supply cord with your wet hand. It may cause electric shock.

### Electric Outlet


- Avoid connecting several electric devices to single outlet. It may cause fire.

- If this product is used for commercial purpose, it is not warranted. (Example : Public places such as public bathroom, lodging house, training center, dormitory)
- If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product or the replacement of a defective part, shall be borne by the owner.

# FEATURES

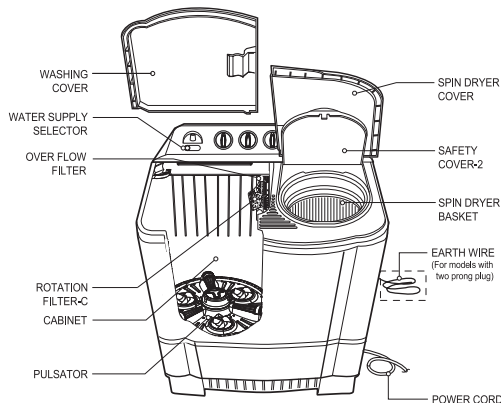

(Please do not match this figure with model as it may be different from your model. These are schematic diagrams only.)

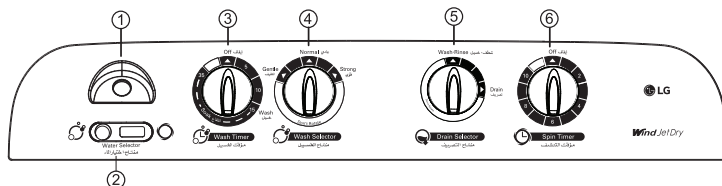

#### 1. Water Supply Inlet

Connect here with the inlet hose from the water faucet to feed water to the tub.

#### 2. Water Selector

Select "WASH" to supply water for washing and rinsing and "SPIN" for spin shower rinse.

#### 3. Wash Timer

Select the desired time for soaking washing or rinsing.

#### 4. Wash Selector

Set the program to "Gentle", "Normal", "Strong" according to kind and quantity of the laundry.

#### 5. Drain Selector

Select "Wash-Rinse" for washing and rinsing and "Drain" to drain the water out of the tub.

#### 6. Spin Timer

Select the desired time for spinning. The maximum limit is 10min, but shall not be continued over 3 cycle. Don't rotate the knob more than prescribed limit. \*\* After 3 times continuous spinning, please stop spinning more than 1 hour, otherwise the spin motor may be damaged or fire or stop operation.

# INSTALLATION

## Installation area

- Set on flat and firm floor.
- Incorrect installation may cause severe noise and break down.




- Maintain more than 10 cm. between the side of drain hose and the wall.
- A carpet must not obstruct the ventilation openings.



## Connecting the earth wire (only for models with two prong plug)


- Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer. Connect it to the metal water pipe. If the water pipe is made of plastic, it does not have the earth effect.
- Do not connect the earth wire to the gas pipe, lightning arrester, telephone connector, etc.



Warning-the appliance with two-pronged plug must be grounded


## Connecting the power plug

- Insert the power plug into the outlet.
- Before connecting the power plug, check if the voltage setting of the washer matches the outlet voltage.
- If AC outlet with ground terminal is used, grounding is not needed. If not, never forget earthing (earthing method above).
- The appliance must be positioned so that the plug is accessible




## Other earthing method


- After connecting the earth wire to the earth copper plate, bury it at least 75cm deep under the wet ground.



- Connect to the earthing-only outlet.



- If grounding methods as described are not possible, a separate circuit-breaker should be employed and installed by a qualified electrician.



## Connecting the drain hose

- Push the clamp toward the body of the washing machine as shown in the figure.
- Be sure to reroute the hose so that it is not kinked; kinks or sharp bending in the hose will prevent proper drainage.
- Make sure water is drained smoothly by placing a base under the machine or by applying other appropriate mean.



4

# INSTALLATION & HOW TO WASH

## Before washing

- Check the washing instruction labels on the clothing to be washed.
- Remove all objects from the pockets of the clothing. Objects left in the pockets may damage clothing or break the washing machine (could cause the drain hose to clog).
- Wash after separating oiled or dyed clothing.
- For your convenience hang up the wash cover on the right side of the washing machine tub when not in use.

## Remove this before washing



## How to wash

1 Set the drain selector  
Set as "Wash-Rinse" position.  
  
Drain Selector

2 Set the water selector to "WASH"  
  
Water Selector

3 Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level which you want. (Refer to Table 2)  
  
Wash Tub

4 Open water supply and fill water till your desired level of tap mark. That is because clothes can absorb adequate amount of water and water will not short.  
  
Water Level

5 Select the wash selector to "Gentle", "Normal" or "Strong" according to the kinds and quantity of the laundry. (Refer to Table 2)  
  
Wash Selector

6 Set the desired wash time.  
  
Wash Timer  
In the period 0~15 min.  
The machine will run the washing function.  
In the period 16~35 min.  
The machine will switch between washing and soaking.

7 When washing is finished, locate the drain selector to "Drain" position and drain the water out.  
  
Drain Selector

8 Spinning in the spin dryer basket.  
Move the laundry into spin dryer basket. Put the laundry down lightly. Place the safety cover horizontally on the laundry. Set the desired spin time with the spin timer.  
  
Spin Dryer Basket

5

# HOW TO RINSE & HOW TO SPIN

## Interim spin rinse

- Interim spin rinse prior to regular rinsing helps removing sudsy water from the laundry and improve rinsing efficiency. Also is helpful to water saving.

1 After washing.  
• Move the laundry into the spin dryer basket.  
• Place the safety cover horizontally on the laundry.  
  
Spin Dryer Basket

2 Set the water selector to "SPIN".  
  
Water Selector

3 Set the desired water flow and spin time appropriately.  
  
Spin Timer

4 After interim spin rinse, move the laundry into the wash tub for rinsing.  
  
Wash Tub

## Note for spinning

- Put the laundry evenly into the spin dryer basket.
- Put the laundry down lightly.
- Place the safety cover horizontally over the laundry, washing machine may get damage if the safety cover is not placed.
- Close the spin dryer cover.
- Do not drain the water out of the wash tub while the spin dryer basket is in operation.
- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly and then resume spinning.
- If the spinning fail to stop when the spin dryer cover is opened, the brake is out of order. Immediately stop using the machine and request repair service.

# CARE & MAINTENANCE

## Overflow filter & Rotation filter-C

- Lift up the area (A) of the over flow filter and take out the rotation filter-C by pulling in direction as shown.
- Pull the overflow filter forward from the wash tub in the direction of the arrow.
- Turn the net over and rinse in water.
- Use a brush or hand to remove all of the lint which has adhered to the overflow filter.
- Insert the overflow filter back into the wash tub.
- Insert the rotation filter-C back into the overflow filter.

6

# REFERENCE

TABLE 1. WEIGHT GUIDE FOR CLOTHES

| Type of clothing         | Type of fabric | Weight per piece |
|--------------------------|----------------|------------------|
| Under shirt              | Cotton         | 150g (5.3oz)     |
| Handkerchief             | Cotton         | 50g ( 1.8oz)     |
| Bath towel               | Cotton         | 300g(10.6oz)     |
| Shirt                    | Mixed fabric   | 200g( 7.1oz)     |
| Socks (1 pair)           | Mixed fabric   | 50g( 1.8oz)      |
| Pajama (shirt and pants) | Cotton         | 500g(17.6oz)     |
| Winter undershirt        | Woolen         | 600g(21.2oz)     |
| Workclothes              | Mixed fabric   | 800g(28.2oz)     |
| Blouse                   | Mixed fabric   | 200g( 7.1oz)     |

TABLE 2. GUIDE FOR WASHING

| Type of Fabric               | Wash Selector | Wash Time    | Water Level | Amount of Laundry (kg) | Amount of Water (Ltr) | Amount of Detergent (gms) |
|------------------------------|---------------|--------------|-------------|------------------------|-----------------------|---------------------------|
| Woolen, Knits                | GENTLE        | ~5 min.      | H           | 0.5 ~ 2.0              | 84                    | 84                        |
|                              |               |              | S           | 0.5 ~ 5.0              | 50                    | 50                        |
| Synthetics, Silk             | GENTLE        | ~5 min.      | L           | 5.0 ~ 6.0              | 60                    | 60                        |
|                              |               |              | M           | 6.0 ~ 7.0              | 72                    | 72                        |
|                              |               |              | H           | 7.0 ~                  | 84                    | 84                        |
|                              |               |              | S           | 0.5 ~ 5.0              | 50                    | 50                        |
| Cotton, Linen                | NORMAL        | 5 ~ 10 min.  | L           | 5.0 ~ 6.0              | 60                    | 60                        |
|                              |               |              | M           | 6.0 ~ 7.0              | 72                    | 72                        |
|                              |               |              | H           | 7.0 ~                  | 84                    | 84                        |
|                              |               |              | S           | 0.5 ~ 5.0              | 50                    | 50                        |
| Very soiled cotton and linen | STRONG        | 10 ~ 15 min. | L           | 5.0 ~ 6.0              | 60                    | 60                        |
|                              |               |              | M           | 6.0 ~ 7.0              | 72                    | 72                        |
|                              |               |              | H           | 7.0 ~                  | 84                    | 84                        |
|                              |               |              | S           | 0.5 ~ 5.0              | 50                    | 50                        |

Notes :

- Amount of laundry is a weight of dry laundry.
- Detergent is a general synthetic detergent.

CAUTION : Fill in wash to height 20mm above the level you desire. When washing starts water level will automatically come to level you desire.

# TROUBLESHOOTING GUIDE

## Before Requesting Service

| Problem                             | Checking point                                                                                                                                                                                                                            |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Motor does not operate,             | <ul style="list-style-type: none"><li>Is the power cord firmly plugged in?</li><li>Is the timer turned to a suitable point except "Off" ?</li></ul>                                                                                       |
| Spin dryer basket does not operate. | <ul style="list-style-type: none"><li>Is there any clothing dropped between the basket and tub?</li><li>Is the spin dryer cover closed?</li><li>Is the laundry gathered to one side of the spin dryer basket?</li></ul>                   |
| Water does not enter washer         | <ul style="list-style-type: none"><li>Is the water faucet hooked up?</li><li>Is the water faucet frozen?</li></ul>                                                                                                                        |
| No draining                         | <ul style="list-style-type: none"><li>Is there lint stuck in the plunger valve?</li><li>Is the end of the drain hose guide located at an exceed height?</li><li>Is the drain hose laid down?</li><li>Is the drain hose twisted?</li></ul> |

7

# دليل المستخدم جهاز الغسالة

الرجاء قراءة إرشادات التشغيل بعناية وبصورة  
كاملة قبل تركيب وتشغيل الغسالة الخاصة بك.


طراز : P1460RWNL



MFL68505585  
Rev.00\_200820

www.lg.com

حقوق النشر ٢٠٢٠ إلى جي للالكترونيات. كل الحقوق محفوظة

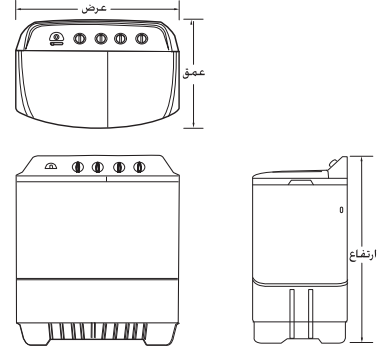

| مصدر الطاقة          | مكتوب على بطاقة المواصفات                              |
|----------------------|--------------------------------------------------------|
| مستوى الماء          | مرتفع: ٨٤ لتر متوسط: ٧٢ لتر منخفض: ٦٠ لتر ري.س. ٥٠ لتر |
| نقاط الفحص           | أقل من ١٠٠ ك باسكال (١ كغم قوة/سم <sup>٢</sup> )       |
| الأبعاد              | ٩٠٥ × ٥٤٥ × ١٠٢٥ م (عرض × عمق × ارتفاع)                |
| الوزن (الصافي)       | ٣٢,٠ كغم                                               |
| سعة الغسيل           | ١٠٠٠ كغم (الملابس الجافة)                              |
| سعة التجفيف          | ١٠٠٠ كغم (الملابس الجافة)                              |
| أداء الدوران للتجفيف | نسبة الرطوبة المتبقية (%) 62.9<br>درجة التصنيف 3 نجوم  |

## المستورد

| الدولة                   | الإسم التجاري                                            | عنوان المستورد                                                                                                                 |
|--------------------------|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| الإمارات العربية المتحدة | ال جي الكترونيكس الخليج (م.م.ج)                          | مستودع GF جبل علي الرئيسي، منطقة جبل علي الحرة، ص.ب. 61445 دبي، الإمارات العربية المتحدة                                       |
| سلطنة عمان               | شركات خليج عمان (ش. ذ. م. م.)                            | الغرفة للتكنولوجيا ذ.م.م صندوق بريد رقم 25 دبي، الإمارات العربية المتحدة رقم الهاتف: +971-4-2957300 رقم الفاكس: +971-4-2957988 |
| قطر                      | شركة بيت القينيو والمركز الإلكتروني ذ.م.م                | مجموعة عبد الجبار الكوهي ش.م.ب (م) مجموعة عبد الجبار الكوهي ش.م.ب صندوق بريد 74، المنطقة مسلكة البحرين                         |
| الكويت                   | شركة الإلكترونيات الهابطين ذ.م.م                         | شركة عن الطخ ذ.م.م صندوق بريد 421، الكود 118، سبط سلطة عمان، 118، غابة البند راجش رانكيشن 1/33586/3                            |
| اليمن                    | سالم محمد شماخ وشركاه                                    | بيت القينيو والمركز الإلكتروني ذ.م.م ص.ب - 4668، الدوحة قطر                                                                    |
| المملكة العربية السعودية | شركة محمد يوسف ناغي المتحدة، الشركة المتحدة للإلكترونيات | شركة الإلكترونيات الهابطين ذ.م.م الهابطين ص.ب. 599، الصفاة 13006 الكويت                                                        |
|                          |                                                          | سالم محمد شماخ وشركاه، 3372، الحديدة جمهورية اليمن                                                                             |
|                          |                                                          | شركة يوسف محمد ناغي المتحدة ص.ب. ٤٥ جدة ٢١٤١١ المملكة العربية السعودية                                                         |
|                          |                                                          | صندوق بريد 76688 الخبر 31952 المملكة العربية السعودية                                                                          |

٨

## المزايا



- مدخل تزويد الماء  
صل خرطوم تزويد الماء من هذا المدخل إلى حنفية الماء لتزويد الحوض بالماء.
- منتقى الماء  
اختر "غسيل" لتزويد الماء للغسيل والشطف واختر "التدوير" للشطف الدوار بالرش المائي.
- موقت الغسيل  
اختر الوقت المناسب للغسيل أو التفتح.
- برنامج الغسيل  
قم بضبط برنامج الغسيل على "هادئ"، أو "عادي"، أو "قوي". طبقاً لنوع وكمية الغسيل.
- مفتاح اختيار التصريف  
اختر "غسيل شطف" للغسيل والشطف واختر "تصريف" لتصريف الماء من الحوض.
- موقت التشفيف  
اختر الوقت المناسب للتشفيف أقصى وقت هو ١٠ دقائق ولكن لا يجب أن يستمر ذلك لثلاث دورات متتالية. ولا تد المفتاح لأثر من الوقت المقرر.
- بعد ٣ مرات من الدوران المتواصل. يرجى إيقافه لأكثر من ساعة وإلا فقد يتضرر محرك الدوران أو يحترق أو يتوقف عن التشغيل.

## تنبيه

### تنبيه!

- الحرارة
  - جنب أجهزة التدفئة الكهربائية أو ضوء الشموع أو ضوء الولاعات أو الدخان الطارد للحشرات... إلخ بالقرب من الجهاز لأن ذلك قد يؤدي إلى إشعال أو تشويه الجزء البلاستيكي.
- الماء الساخن
  - تجنب استخدام الماء الساخن. هذا قد يؤدي إلى حدوث تشويه في الأجزاء البلاستيكية أو حدوث عطل في الجهاز.
- المواد الخطيرة
  - لا تستخدم المواد الخطيرة مثل البنزين، والجارولين، والبهدات الحشرية في تنظيف الغسالة. لا تترك مواد شديدة القلوية مثل البياضات داخل حوض الغسيل. فقد يحدث تلف في الأسطح البلاستيكية والأجزاء المطاطية.
- كابل الطاقة
  - إذا تعرض كابل إمداد الطاقة للتلف، يجب استبداله من قبل المنتج أو مركز الخدمات له.أو الشخص المؤهل المثل من أجل تجنب الخطر.
  - انزع كابل الكهرباء، خلال التنظيف أو عند عدم استعمال المغسلة لمدة طويلة.
- توصيل خرطوم التصريف
  - اضغط الملزم نحو جسم جهاز الغسالة كما هو موضح في الشكل.
  - تأكد من تيسير مجرى الخرطوم كي لا يحدث به التواء. حيث سيمنع الالتواء أو الثني الحاد في الخرطوم التصريف بشكل صحيح.
  - تأكد من أن تصريف الماء يتم بسلاسة عن طريق وضع قاعدة أسفل الغسالة أو عن طريق وضع أية وسائل أخرى مخصصة لذلك.

- منطقة التركيب
  - جنب تركيب الغسالة في مكان معرض لسقوط النخل أو المطر والرطوبة العالية لأن ذلك يؤدي إلى صدمة كهربائية.
- منطقة الفتح الكهربائي
  - جنب رش الماء فوق المفتاح الكهربائي. الأمر قد يؤدي إلى صدمة كهربائية أو حريق.
- أثناء عملية الغسيل
  - لا نعم بإدخال بيديك داخل حلة الجفف أثناء عملية الغسيل (لا تدع الأطفال يتسلقوا فوق الغسالة أو داخل حوض الغسيل).
  - قد يحدث إصابات.
  - لا تقوم بصرف المياه من حوض الغسيل أثناء عملية التجفيف لأن ذلك يؤدي إلى تلف المحرك.
- التركيب
  - ركب جهاز الغسالة على أرض مستوية ولا تصدر ضوضاء وتحدث اهتزاز.
- تأكد من فصل سلك التيار من مصدر التيار الكهربائي قبل بدء عملية العناية والصيانة.
- تأكد من توصيل سلك الغسالة الأرضي لتجنب حدوث صدمة كهربائية، ولتقليل خطر التعرض لحدوث صدمة كهربائية. تجنب أيضا وضع الغسالة في أماكن رطبة.

\* إذا استخدم هذا الجهاز للعرض التجاري، لا تغطي الضمانة ضرره.  
(على سبيل المثال : الأماكن العامة مثل الحمامات العامة ، مركز التدريب ، الفنادق والخ.  
إذا تم تركيب الجهاز خارج منطقة الخدمات العادية، يتحمل مالك الجهاز نفقات إصلاح الجهاز أو نفقات تبديل الجزء المتضرر مع أية تكلفة النقل.

## التركيب

### منطقة التركيب

- ركب الجهاز على أرضية مستوية وثابتة.
- التركيب غير الصحيح ربما يؤدي إلى إحداث ضجيج شديد وتعطل الجهاز.



### توصيل السلك الأرضي (للطرازات المزودة بمقبس ذي ستين)

- ركب السلك الأرضي لمنع حدوث قطع كهربائي نتيجة لتسرب التيار والصدمة الكهربائية.
- السلك الأرضي مركب في ظهر الغسالة. أوصل السلك إلى أنبوب الماء المعدني. وإذا كان أنبوب الماء مصنوعاً من البلاستيك فليس لديه توصيل أرضي.
- لا توصل السلك الأرضي مطلقاً إلى أنبوب الغاز أو واقية الصواعق أو وصلة التلفزيون إلخ.

⚠ خذير – أوصل السلك الأرضي أولاً قبل توصيل قابس الطاقة إلى مخرج التيار في الجدار.

### توصيل القابس

- أوصل قابس الطاقة إلى مأخذ التيار.
- قبل توصيل قابس الطاقة، افحص إذا كان ضبط فولتية الغسالة يتطابق مع فولتية مخرج التيار.
- إذا تم استخدام مصدر للتيار المتردد ذا طرف أرضي، فلن تكون هناك حاجة إلى توصيل السلك الأرضي. وإذا لم يتوفر ذلك، فلا تنس أبداً عملية توصيل السلك الأرضي (ارجع إلى طريقة توصيل السلك الأرضي أعلاه).
- يجب أن يتم وضع الغسالة في مكان يسمح بالوصول إلى القابس.

### طريقة تأريض أخرى

- بعد توصيل السلك الأرضي إلى اللوح النحاسي الأرضي، ادفنه بعمق لا يقل عن ٧٥ سم تحت الأرض المبلولة.
- أوصل إلى مأخذ التيار الأرضي الوحيد.
- عند تركيب السلك في أرض غير قابلة للتأريض قم بشراء قاطع الدائرة الكهربائية وأوصله إلى مأخذ التيار.



٤

## التركيب / كيفية الغسيل

### قبل الشروع في الغسيل

١. اقرأ تعليمات الغسيل المكتوبة على البطاقات الملصقة على الملابس المعدة للغسيل.
٢. أخرج الأشياء الموجودة في جيوب الملابس. الأشياء الموجودة في الجيوب ربما تحدث تلفاً في الملابس أو الغسالة. (هذا قد يؤدي إلى انسداد خرطوم التصريف)
٣. ابدأ عملية الغسيل بعد فصل الملابس المتعجة بالزيت أو المصبوغة.
٤. لتوفير مزيد من الراحة، علّق غطاء الغسل على الجهة اليمنى من حوض الغسالة عندما لا يكون قيد الاستخدام.

### قم بإزالة هذه الأشياء قبل عملية الغسيل



### عملية الغسيل

١

قم بضبط مؤشر الصرف

قم بالضبط على وضع "غسل-شطف" (نظف جيد)

مفتاح التصريف

٢

ضع مفتاح تزويد المياه في حوض الغسيل.

مفتاح اختيار الماء

٥

حدد برنامج الغسيل على "هادي"، أو "عادي"، أو "قوي". طبقاً لنوع وكمية الغسيل. (ارجع إلى الجدول رقم ٢)

عادي

قوي

لطيف

تسوية الغسيل

٣

ضع كمية مناسبة من المنظفات والملابس في حوض الغسيل.

أضف الماء حتى يصل إلى مستوى الماء المرغوب فيه إذا أردته.

افتح مصدر الماء واملأ الغسالة إلى أن يصل الماء إلى مستوى علامة الصنبور المطلوب. يتيح ذلك الفرصة للملابس لامتصاص كمية كافية من الماء وكذلك عدم حدوث نقص في الماء.

٦

اضبط وقت الغسيل المرغوب فيه.

مؤقت الغسيل

٨

الدوران في سلة التجفيف. ضع ملابس الغسيل في سلة التجفيف.

ضع غطاء السلامة أفقياً فوق الغسيل. اضبط وقت الدوران مع مؤقت الدوران

٥

## المرجع

### الجدول ١. دليل وزن الملابس

| نوع الملابس          | نوع القماش      | وزن القطعة         |
|----------------------|-----------------|--------------------|
| قميص ختاني           | الملابس القطنية | ١٥٠ غ (٥,٣ وقيّة)  |
| منديل                | الملابس القطنية | ٥٠ غ (١,٨ وقيّة)   |
| منشفة                | الملابس القطنية | ٣٠٠ غ (١٠,١ وقيّة) |
| قميص                 | أقمشة متنوعة    | ٢٠٠ غ (٧,١ وقيّة)  |
| جوارب (زوج)          | أقمشة متنوعة    | ٥٠ غ (١,٨ وقيّة)   |
| بيجاما (قميص وبنطال) | الملابس القطنية | ٥٠٠ غ (١٧,١ وقيّة) |
| قميص ختاني شتوي      | الملابس الصوفية | ١٠٠ غ (٢,١ وقيّة)  |
| تياب العمل           | أقمشة متنوعة    | ٨٠٠ غ (٢٨,٢ وقيّة) |
| قميص                 | أقمشة متنوعة    | ٢٠٠ غ (٧,١ وقيّة)  |

### الجدول ٢. دليل الغسيل

| نوع القماش            | مؤشر الغسيل | مؤقت الغسيل | كمية الماء (لتر) | كمية مادة التنظيف (غرام) |
|-----------------------|-------------|-------------|------------------|--------------------------|
| الصوف، الأقمشة الجيدة | خفيف        | ٥-١٠ دقيقة  | H                | ٢٠-٥٠                    |
| اصطناعي، مبروك        | خفيف        | ٥-١٠ دقيقة  | S                | ٥٠-١٠٠                   |
| القطن الكثان          | عادي        | ١٠-١٥ دقيقة | L                | ١٠٠-١٥٠                  |
| القماش المنسج         | قوي         | ١٥-٢٠ دقيقة | M                | ١٥٠-٢٠٠                  |

- يتم تحديد كمية الغسيل طبقاً لكمية الغسيل الجاف.
- يتم تحديد كمية المنظف طبقاً للمنظفات الصناعية العادية.

⚠ تنبيه: املاً الغسيل لارتفاع ٢٠ مم فوق المستوى الذي تريد. عندما يبدأ الغسل سوف يأتي مستوى الماء تلقائياً للمستوى الذي تريد.

## دليل تحري الخلل وإصلاحه

### قبل طلب الخدمة

| الأعطال                 | نقاط الفحص                                                                                                                                                                                                                        |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| الحرك (الموتور) لا يعمل | <ul style="list-style-type: none"><li>• هل كابل الطاقة موصل إلى القابس بصورة محكمة؟</li><li>• هل ساعة التوقيت موجهة إلى نقطة مناسبة غير موضع "إيقاف"؟</li></ul>                                                                   |
| سلة التجفيف لا تعمل     | <ul style="list-style-type: none"><li>• هل هناك أية ملابس ملقاة بين السلة وحوض الغسيل؟</li><li>• هل غطاء اسطوانة التجفيف مثبت؟</li><li>• هل الغسيل محشور إلى جانب واحد من سلة اسطوانة التجفيف؟</li></ul>                          |
| الماء لا يدخل المغسلة   | <ul style="list-style-type: none"><li>• هل صنبور الماء معاق؟</li><li>• هل صنبور الماء في وضع تجمد؟</li></ul>                                                                                                                      |
| لا يوجد تصريف           | <ul style="list-style-type: none"><li>• هل قطعة من القماش تكون بصمام الحوض؟</li><li>• هل نهاية دليل خرطوم التصريف موضوعة في ارتفاع عال جداً؟</li><li>• هل تم بسط خرطوم التصريف لأسفل؟</li><li>• هل خرطوم التصريف ملتوي؟</li></ul> |

٧

## كيفية الشطف وكيفية الدوران

### الشطف بإمداد الماء الاقتصادي

- الشطف الدور المتوسط قبل الشطف المنتظم يساعد في إزالة الماء الرغوي من الملابس وتحسين كفاءة الشطف. كما هو يساعد في توفير الماء.

١

بعد الغسيل، ضع الغسيل في سلة الدوارة.

ضع غطاء السلامة على الملابس بشكل أفقي.

٢

قم بتحديد وضع مفتاح ضبط الماء على "دوران"

٣

قم بضبط تدفق الدوران المرغوب فيه بصورة مناسبة.

### ملاحظة حول الدوران

١. ضع الغسيل بهدوء في سلة اسطوانة التجفيف.
٢. ضع الملابس في قعر حوض الغسيل بخفة.
٣. ضع غطاء السلامة أفقياً فوق الغسيل.
٤. أقلل غطاء اسطوانة التجفيف.
٥. لا تقوم بصرف المياه من حوض الغسيل أثناء عملية التجفيف

- إذا لم يتم وضع الملابس المتوازن في سلة التجفيف، يحدث اهتزاز للغاية، وفي هذه الحالة أوقف التجفيف وأعد وضع الملابس متساوياً. ثم قم بالتجفيف مرة أخرى.
- إذا لم يتمكن التجفيف بالدوار من التوقف عند فتح غطاء التجفيف بالدوار، فالمكبج قد تلف. وقف تشغيل المغسلة فوراً وأطلب خدمة الإصلاح.

## العناية

### مصفاة الفائض مصفاة الدوران-C

١. قم برفع الجزء # الخاص بمصفاة الفائض. وقم بجذب مرشح الدوران C باتجاه السهم كالمبين.
٢. قم بجذب مصفاة الفائض إلى الأمام من حوض الغسيل باتجاه السهم.
٣. قم بتحريك الشبكة وغسلها بالماء.
٤. استخدم يدك أو الفرشاة لإزالة النسالة التي التصقت بمصفاة الفائض.
٥. أدخل مصفاة الفائض مرة أخرى في حوض الغسيل.

١. أدخل مصفاة الدوران C مرة أخرى في مصفاة الفائض.

٦