



SIMPLE MANUAL

Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download
Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
SK1D




MFL71698925

www.lg.com


Copyright © 2020 LG Electronics Inc. All Rights Reserved.

1806_Rev01

ENGLISH




Front Panel



- ϕ /I Standby/ON
F Selects Function.
- / + Adjusts Volume.


Rear Panel

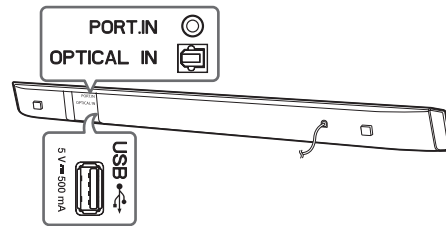

- PORT.IN Connect to a Portable device
OPTICAL IN Connect to an Optical device
USB Connect to a USB device


TV Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

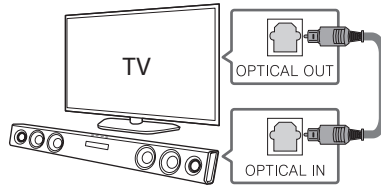


Additional Device Connection

- 1 Connect to the external device as follows.

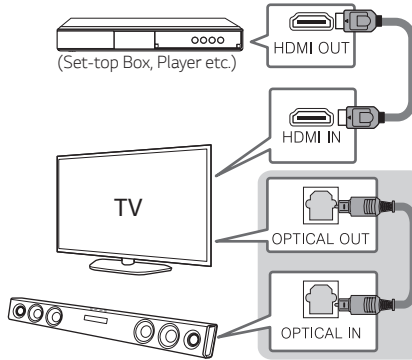


- 2 Set the input source by pressing F on the remote control or unit repeatedly.

Remote control

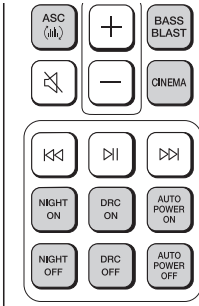

- ASC/BASS BLAST/CINEMA: Selects the sound effect.
NIGHT ON/OFF: Turns down the volume at night.
DRC ON/OFF: Dynamic Range Control optimizes the volume level of compatible Dolby Digital content.
AUTO POWER ON/OFF: Automatically turns on by an input source.

Replacement of battery

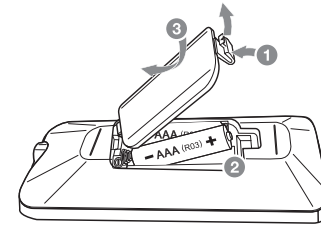

Additional Information

Specification

Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 950 mm x 71 mm x 47 mm
Bus Power Supply (USB)	5 V \equiv 500 mA
Amplifier (Total RMS Output power)	100 W RMS

Design and specifications are subject to change without notice.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The working life of this set is 7 years since the date of delivery to consumer. Upon the expiry of the said period, it might be unsuitable for the use according to their designation.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

JEDDAH MAIN SERVICE CENTER
P.O.BOX 704, JEDDAH 21421 KINGDOM OF SAUDI ARABIA
TEL) 02-629-2929

JEDDAH QUICK SERVICE CENTER
TEL) 02-663-3888 EXT. 340,343

RIYADH BRANCH SERVICE CENTER
TEL) 01-461-5559

AL KHOBAR BRANCH SERVICE CENTER
TEL) 03-857-2629/2637

دليل بسيط

سوند بار

يرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي بحوزتك واحتفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا الإلكتروني <http://www.lg.com> وقم بتحميل دليل المالك.
قد تختلف بعض المحتويات الواردة في هذا الدليل عن مكونات وحدتك.

النموذج
SK1D

www.lg.com

حقوق النشر والتأليف © لعام ٢٠٢٠ لـ LG Electronics Inc. جميع الحقوق محفوظة.


1806_Rev01



MFL71698925




اللوحة الأمامية

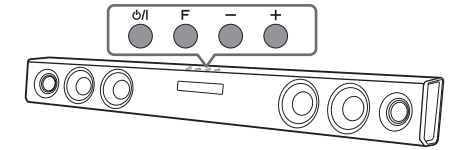

● تشغيل/استعداد
● F
● + / -
● ضبط مستوى الصوت


اللوحة الخلفية

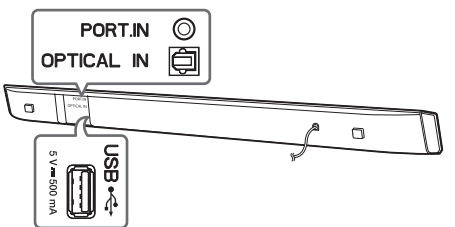

● PORT.IN
● OPTICAL IN
● USB
● ٥V=500mA


توصيل التلفاز

- ١ قم بتوصيل المكبر الصوتي اللوحي بالتلفاز باستخدام كبل بصري.
- ٢ قم بإعداد [السماعة الخارجية (بصرية)] في قائمة الضبط بالتلفاز.

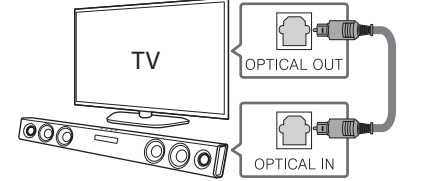


وصلة جهاز إضافي

- ١ قم بالتوصيل بجهاز خارجي على النحو التالي.

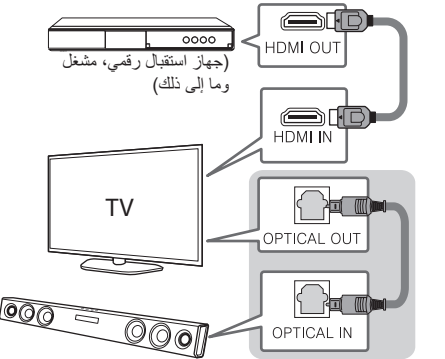

- ٢ اضبط مصدر الدخل بالضغط على F بجهاز التحكم عن بعد أو الوحدة بشكل متكرر.

جهاز التحكم عن بعد

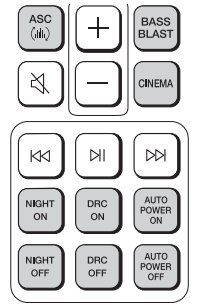


ASC/BASS BLAST/CINEMA: لتحديد المؤثر الصوتي.

NIGHT ON/OFF: يخفض الصوت في الليل.

DRC ON/OFF: يحسن التحكم الديناميكي بالنطاق من مستوى الصوت للمحتوى المتوافق مع Dolby Digital.

AUTO POWER ON/OFF: يشغل تلقائياً بمصدر منخل.

استبدال البطارية

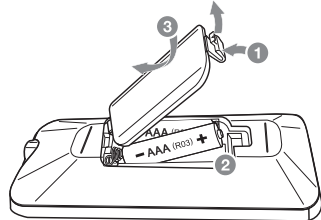

معلومات إضافية

المواصفات

متطلبات الطاقة	ارجع إلى الملصق الرئيسي.
استهلاك الطاقة	ارجع إلى الملصق الرئيسي.
الأبعاد (العرض × الارتفاع × العمق)	تقريباً ٩٥٠ مم × ٧١ مم × ٤٧ مم
مصدر طاقة الناقل (USB)	٥ فولت == ٥٠٠ مللي أمبير
مضخم الصوت (إجمالي طاقة مخرج (RMS))	١٠٠ وات RMS

يخضع التصميم والمواصفات للتغيير دون إخطار مسبق.

ملاحظة سلامة هامة

كلابة الوصلة للقباس مزودة مع هذا المنتج وتم تشيبتها داخل الوصلة الكهربائية الموجودة التي تم تزويدها ، إذا كان لأي سبب

احتجبت لتقصير الوصلة.

لا تستعمل مرة أخرى هذا القاباس يجب استعمال قابس جديد للتأكد على سلامتك بصورة متواصلة وذلك عن طريق إحكام إدخال القاباس إلى الوصلة الكهربائية طبقا للوائح القاباس والمقياس للعام 1994.

تحذير من أجل السلامة

يجب فصل هذا الجهاز عن مخرج التيار الكهربائي الرئيسي أثناء عدم استخدامه. لا تسمح لهذا الجهاز بالتعرض للأمطار أو الرطوبة.

تحذير تحذير

من أجل منع وقوع الصدمة الكهربائية، لا تسحب عنه الغطاء. لا يوجد في الداخل أجزاء للاستخدام. التصليح يجب أن يقوم به الشخص المختص.

فترة تشغيل هذا الجهاز سبع سنوات من تاريخ التسليم إلى الزبون. عند انتهاء الفترة المحددة أعلاه ربما لا تعود صالحة للاستخدام تبعاً للمواصفات.

تحذيرات للوقاية

اقرأ هذه التعليمات قبل تشغيل الجهاز

- تجنب درجات الحرارة أو البرودة العالية والرطوبة والغبار.
- تجنب الاستخدام قريباً من حقل مغناطيسي (سيوتر سلبياً على إنجاز الجهاز).
- حاذر عند مسح الغطاء بمادة متطايرة كالبنزين والكحول إلخ أو قطعة قماش معالجة بمواد كيميائية. ربما يؤدي ذلك إلى إتلاف سطح الغطاء أو تقشير الطلاء.
- استخدم هذا الجهاز فقط بوضع أفقي ولا تضع فوقه أي شيء ثقيل.
- حافظ على وضع الجهاز بعيداً عن أحواض الزهور وأنبابيب الماء وحوض الغسيل، إذا سقط عليه أي مادة سائلة فقد يحدث تلف كبير للجهاز. في مثل هذه الحالة قم بعرضه على خبير فني متخصص.
- لا تحجز منطقة التهوية، ثقب التهوية تمنع زيادة السخونة. وحتى المواد الخفيفة أو الناعمة كالورق أو القماش قد تسد ثقب التهوية.
- لا يوجد أجزاء للاستخدام من الداخل. من أجل الإصلاح والصيانة اعرضه على الفني المختص.

مركز جدة الرئيسي للخدمات

ص. ب ٧٠٤ جدة ٢١٤٢١، المملكة العربية السعودية
هاتف: ٢٢٩-٢٩٢٩ (٠٢)

مركز جدة للخدمات السريعة

هاتف: ٣٨٨٨-٣٦٣-٠٢/تحويل ٣٤٠، ٣٤٣

مركز الرياض الفرعي للخدمات

هاتف: ٥٥٥٩-٤٦١-٠١

مركز الخبر الفرعي للخدمات

هاتف: ٢٦٣٧/٢٦٢٩-٨٥٧-٠٣