


SEC. WORK	적용모델	재 질	인쇄방법	인쇄도수		PAGE	REMARK
				표 지	내 지		
35	Cloud-I 이란향	모조지 80g OFFSET 인쇄	OFFSET 인쇄	1도	1도	40, A5	이란향

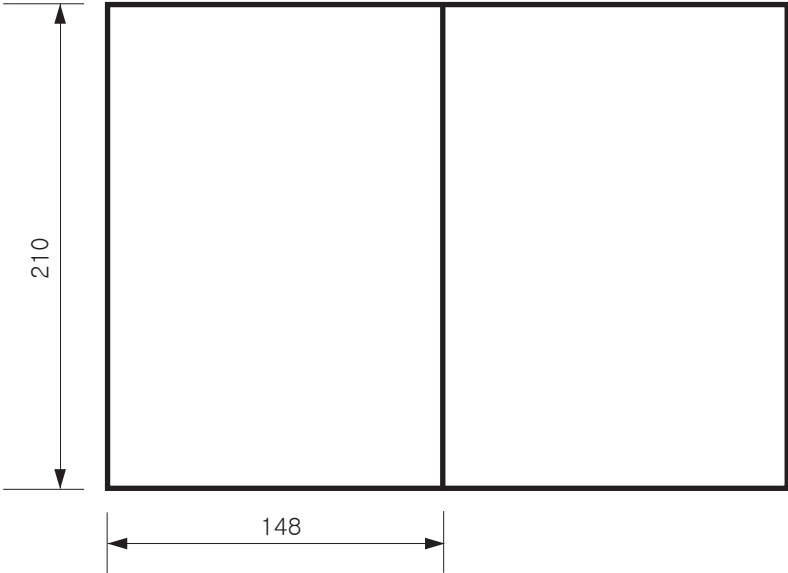

<< 주기 >>

- 1. 재질, 인쇄방법, 인쇄도수, 외곽치수등은 작업표에 준한다.
- 2. 인쇄내용, 문자크기 및 형상, 선의 굵기 등은 설계에서 제시된 도면에 준함.
- 3. 외곽치수는 절단후 치수임.
- 4. 양산전에 설계 한도를 득할 것.
- 5. 본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501-34를 만족할 것.

<< NOTES >>

- 1. Material, printing and exterior size are refer to work tables.
- 2. Printing, text size and line are based on LG design drawing.
- 3. Exterior size on the drawing is cutting line.
- 4. Before product controlled by criteria sample.
- 5. The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB, PBDE) and details should comply with LG standard of LG(63)-A-5501-34

△					
△					
△					
△					
△					
△					
△					
△					
REV. NO. 기호	REVISION DESCRIPTION 변경 사항	REF. NO. 시방 번호	DATE 년/월/일	PREPARED 시방자	APPROVED 승인자

PDF
ILLUSTRATOR

DR COMPLETED
도면 DR 완료
완료일: 16.09.19

TRIG.	UNIT	mm	SCALE	1/1	T I T L E	MANUAL, OWNER'S	
MODELING	DESIGNED	REVIEWED	CHECKED	APPROVED		Cloud-I-이란향	1/1
	서범교 16.11.04			이창훈 16.11.04			
LG 전자 (주) LG Electronics Inc.			RELATED DWG.		DWG. No.	MFL67983135	



OWNER'S MANUAL

LG CORDLESS HANDY-STICK CLEANER

This manual contains important information and instructions for the safe use and maintenance of the vacuum cleaner. Please read all of the information on page 3, 4, 5 for your safety. Please keep this manual in an easily accessible place for future reference.

VZ9100

VZ9200



MFL67983135

www.lg.com

Table of contents

Important safety instructions 3~5

Components and functions..... 6

How to use 7~15

 Assembling vacuum cleaner 7

 Assembling Charger 8

 Using the Product 9~11

 Charging 12

 Cleaning Dust bin 13

 Assembling Dust bin 14

 Cleaning Nozzle 15

Troubleshooting Guide 16

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electrical shock, personal injury, or damage when using the vacuum cleaner. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION." These words mean:



WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.



WARNING

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by LG Electronics Service Agent in order to avoid a hazard.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IMPORTANT SAFETY INSTRUCTIONS

WARNING


- **This appliance is designed for normal indoor domestic use only. It is not to be used for any office or commercial application.**
- **No one other than a repair technician shall disassemble or modify the product.**
It may cause fire or electrical shock.
- **Do not spray combustible materials such as gasoline or solvents, or surfactants such as detergents or bathing goods, or drinks near the cleaner and its charging stand.**
It can cause an explosion or fire.
- **Do not allow the power cord to be crushed, kinked or cut by heavy objects.**
Using a damaged cord or plug could cause fire or electrical shock. When the power cord is damaged, it is dangerous, so please have the cord replaced by an authorised service center.
- **Do not let liquid such as water enter the product, and do not use the unit to pick up liquids, sharp pointy objects, or hot embers.**
It causes fire or electrical shock.
If water accidentally enters the unit, immediately turn off the power switch of the main body, pull out the power plug, and contact LG Electronics Service Agent to avoid hazard.
- **Do not insert pins or sharp pointy utensils into or around the cleaner or its charging stand.**
There is a risk of electrical shock.
- **Do not use the appliance if gas odors can be detected. Unplug the unit and provide ventilation to avoid possible dangers.**
There is a risk of fire or explosion.
- **Make sure that the unit is plugged into a wall socket over 10amp and not overloaded.**
Overloading of any wall socket can cause fires and product malfunction.
- **Do not use the appliance if the power cord or socket is in any way loose or damaged.**
It can cause fire or electrical shock.
- **Do not operate the appliance with the suction inlet or outlet blocked.**
It may cause deformation of main body or fire by overheating.
- **Do not operate the cleaner while dust bin is taken out.**
There is a risk of product damage or electrical shock injury.
- **Do not place power cord and the product near heating devices.**
It can cause deformation of main body, malfunction, or fire.
- **Be careful that your fingers do not touch the pins when you pull out the plug from the mains outlet.**
It can cause electrical shock.
- **Do not allow children or pets to play with the product or use the product as a toy.**
It can cause personal injury and damage to the unit.
- **Do not handle the plug with wet hands.**
It may cause electrical shock.
- **Do not clean the inlet with water and then use immediately without sufficiently drying the components first.**
It may cause electrical shock and malfunction.
- **When you clean the exterior, make sure to pull out the power plug, and do not wash with harsh or abrasive solutions.**
It can cause electrical shock and exterior damage.
- **Do not place hands into the intake while the appliance is operating. Allow the unit to stop operating and disconnect from the wall socket to avoid any personal injury.**
- **Do not wash the exterior of inlet or bottom surface with water or detergent. Use only a damp cleaning cloth.**
It may damage product or cause electrical shock.
- **If the supply cord is damaged, it must be replaced by the manufacturer, its authorised service agent or similarly qualified persons in order to avoid a hazard.**
- **Do not use the product at a place subject to lots of industrial oil fumes or metal particulates.**
Doing so can cause fire or product failure.
- **Do not use the product at a place subject to leakage or probable leakage of combustible gases.**
It may result in fire or explosion.
- **Do not disassemble the battery.**
There is a risk of fire or electric shock.
- **Do not expose product to heat or fire. Do not expose product direct sunlight.**
There is a risk of fire and explosion.
- **Do not physically impact the battery.**
There is a risk of fire and explosion.
- **Charge the unit only with the specified Charging Station. Do not use the Charging Station for any other purpose other than its intended purpose.**
Failing to do so can result in a fire or serious damage.
- **If any liquid leaks from the batteries, avoid contact with the skin or eyes. If you touched the liquid, wash contact area with plenty of water and get medical attention.**
There is a risk of burns and blindness.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION


- **Do not use this cleaner on anything other than rated voltage.**
It may cause fire and unrepairable product damage.
- **If the product is not in use for a long period of time, pull out the power plug.**
- **Static Electricity may be generated at main body during the cleaning.**
Cleaner may malfunction due to electrostatic energy, so pull out the power cord and put it back in again.
- **Big objects such as socks, stocking, tissues, etc., may block the inlet during the cleaning, so please remove them before starting the cleaning.**
This appliance must be used to remove dust only.
- **Do not stop on one spot or use it on the same spot repeatedly for a long time.**
The surface may be damaged by the friction and vibration.
- **Do not touch the bottom surface with hand or foot while the appliance is in operation.**
- **Do not operate the appliance without the dust bin and its covers in place. Always ensure the dust bin is cleaned when it reaches its limit or beforehand.**
If it is used continuously while dust bin is full, it will cause malfunction and overheating.
- **To avoid the risk of fire or electric shock, always grip it from the plug when removing. And never pull on the power cord when removing it from the wall socket.**
- **If a foreign object is attached to the bottom surface of dust bin, remove it before using the product.**
It could compromise the suction motor and cause malfunction and damage.
- **Never use the product for removing toxic gases.**
The product may fail, and toxic gases will not be removed.
- **Use or place the unit on a level surface and area and do not apply undue force to the unit when using it.**
Doing so can cause fire or product failure.
- **If disposing the unit, it must be done correctly as it contains battery cells that can cause fire or explode if not disposed of correctly.**
- **All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.**
- **For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.**
- **All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.**
- **For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.**

Components and functions

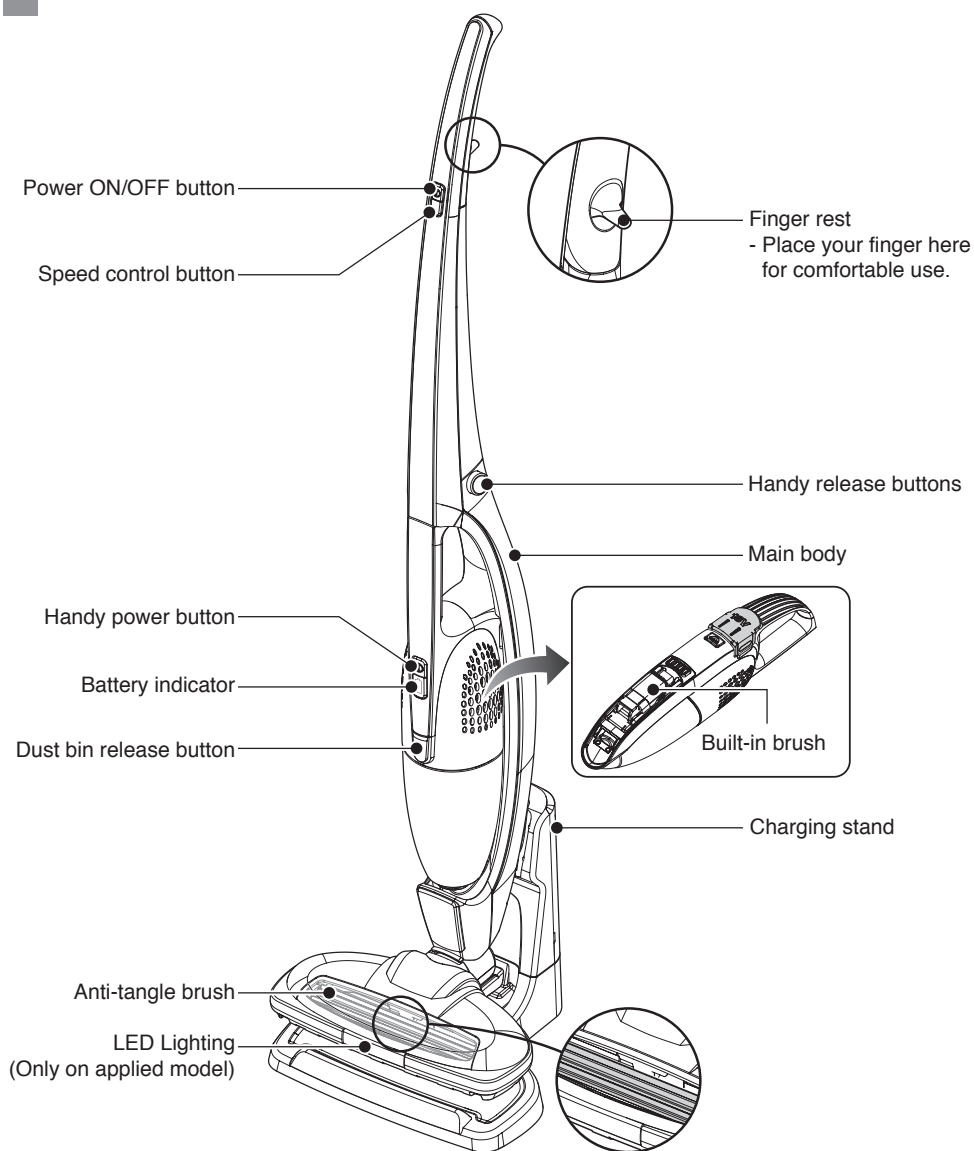



Components:

Charger, Handle holding screw



How to use

Assembling vacuum cleaner

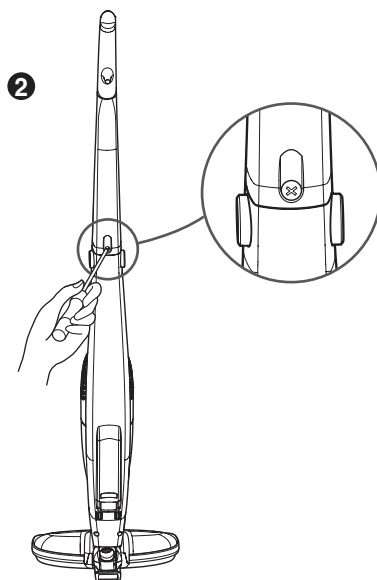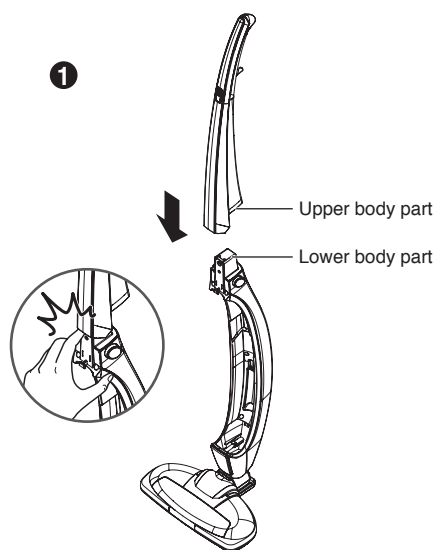


① Assembling the Upper and Lower body parts ② Fasten the fixing screw

Attach upper body part to the lower body part in arrow direction as shown in the figure.
(When assembling the product, make sure not to get your finger stuck.)

There is a fixing hole on the rear side the product.
Use the fixing screw provided with the product to assemble and secure upper and lower parts.

How to use


Assembling Charger

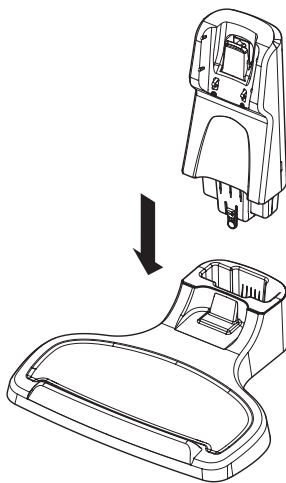

Insert the upper part of the charging stand to the base until you hear a “click” sound.

How to use

Using the Product

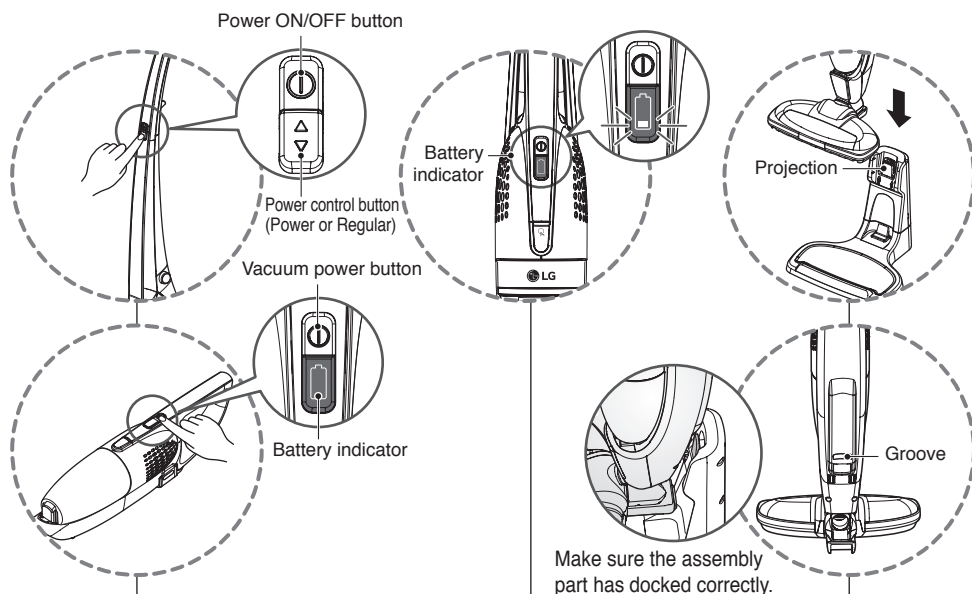

Press the power button to turn on the product.

- When you use the vacuum cleaner, select the motor speed with the speed control button.
- If the product doesn't work, check the battery indicator for a visual display.

Place the rear bottom of the main body on the charger as shown on the figure.

Make sure the assembly part has docked correctly.

Battery indicator shows remaining charge.

- A fully charged battery can last up to 20 minutes on the Power mode and up to 30 minutes on the Regular mode (depending on the floor type).
- When the battery power level is low, the battery indicator shows one blinking light, and then the power turns off soon after.

WARNING

Do not use this cleaner to vacuum liquids. Vacuuming liquids will cause the unit to malfunction.

How to use

Using the Product



The anti-tangle brush is ideal for cleaning short-furred carpet or a normal timber floor surface.



- ① It is not recommended to vacuum a carpet with long fur.
- ② If you vacuum a long piled carpet, it may cause the anti-tangle brush to stop rotating.
 - When the anti-tangle brush stops due to a motor overload, turn the vacuum cleaner off and on again to allow it to work again.
- ③ After you have finished using the vacuum, place the vacuum cleaner on the floor or on the charging stand.
 - If the product falls over due to improper placement when not in use, it may damage the unit or harm children or pets.

The Anti-hair brush motor is fitted with overload protection which stops the motor from rotating, to help prevent accidental injury or damage to tangled threads and fabrics.

How to use

Using the Product

For the convenience of the user, a built-in brush is attached to the hand held cleaner. When using the hand held cleaner alone, refer to the following instructions.

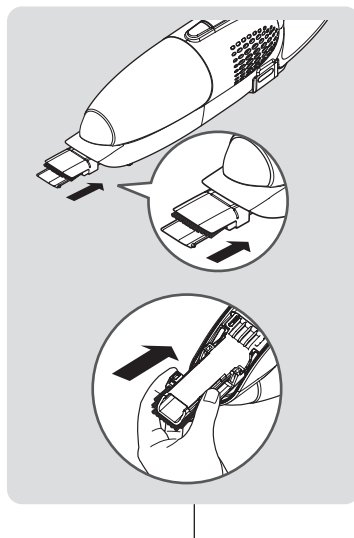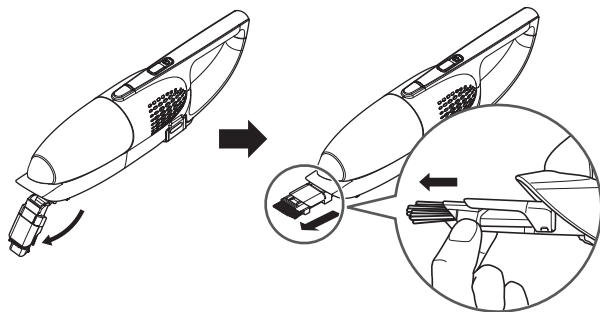

Using built-in brush

Pull out the built-in brush until it secures into place at the bottom of the vacuum cleaner in the arrow direction.

Move the brush in the arrow direction until it is locked into place.


Retracting the built-in brush

Firmly slide the built-in brush in the arrow direction.

Fold the built-in brush body back into the enclosure in the arrow direction.

How to use

Charging

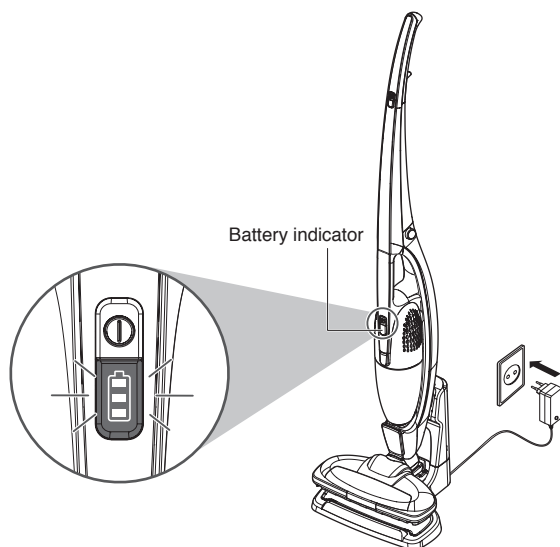

- ❶ If the voltage gets low during operation, the power is automatically turned off to protect the battery.

You must then recharge the battery.

Before beginning the recharge, check that the hand held cleaner is properly docked to the main body, and then place it on the charging stand.

- ❷ The charging time may vary depending on the battery condition. When the minimum amount of charge is left, it takes about 4.5 hours to fully charge the battery. (Charging one battery)

- While the hand held cleaner is charging, the battery indicator light blinks to show the charge amount.
- When the battery is fully charged, the hand held battery status indicator stays on.
- If the vacuum is not used for a long period of time, it is recommended to, remove the charging adaptor plug from the wall socket.

How to use

Cleaning Dust bin

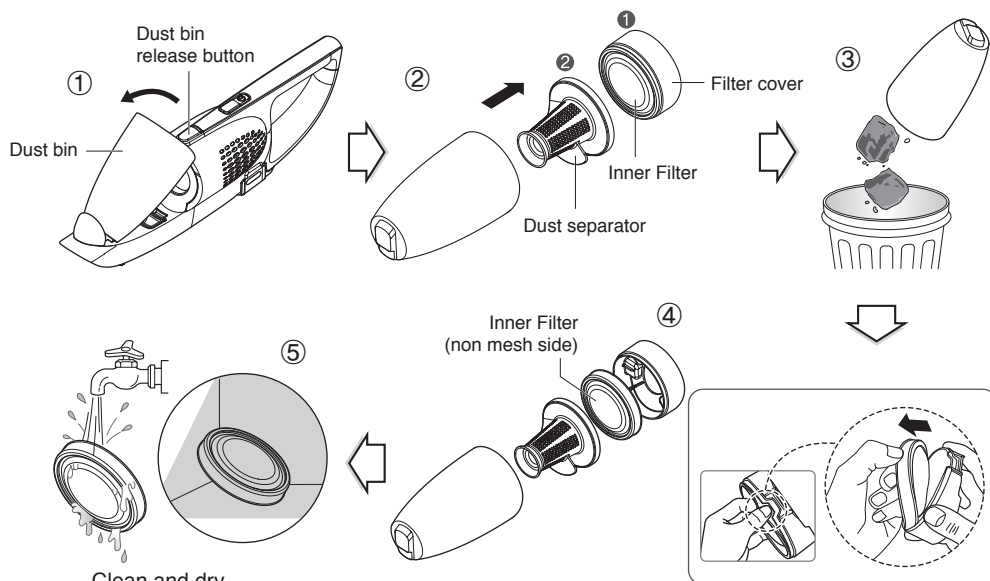


Fig.1


- ① To detach the dust bin, push and hold the release button and pull it in arrow direction.
- ② Remove the filter cover assembly in the direction indicated by the arrow, then remove the dust separator from the dust bin.
(Beware that the dust that may fall from the filter in the process.)
- ③ Empty the dust bin.
- ④ Separate the inner filter from the filter cover as shown in Fig.1.
- ⑤ Rinse the detached filter under water until the water runs clear and completely dry the filter in the shade.
(Do not use hot water or detergent. They may cause deformation to the filter.)

Helpful tip

- To maintain the vacuum cleaner, clean the filter once a week with a cleaning brush or by using another vacuum cleaner, and at least twice a month with water.
(Frequent cleaning of the filter can help maintain its performance.)
- To maintain the best performance of your vacuum cleaner, empty the dust bin after every use.
- After cleaning the dust separator, be sure to put it back into the dust bin.
- Always use the vacuum cleaner with the dust separator assembled. If not, dust will be sucked into the main body and motor, causing a malfunction and damage to the vacuum cleaner.

How to use


Assembling Dust bin

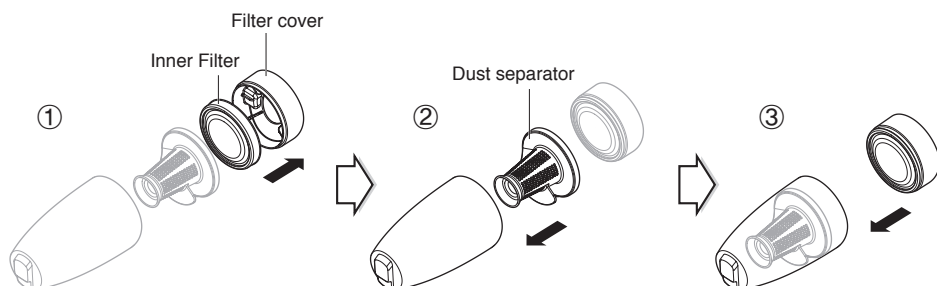

- ① Attach the inner filter back onto the filter cover.
- ② Put the dust separator back into the dust bin.
- ③ Assemble the filter cover back onto the dust separator in the direction indicated by the arrow.


Helpful tip

- Refer to the following figure to assemble the filter cover, filter holder and dust bin by aligning in the right direction.

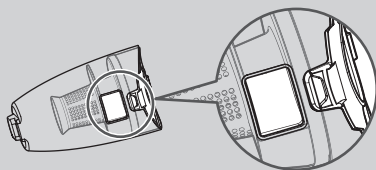

How to use

Cleaning Nozzle

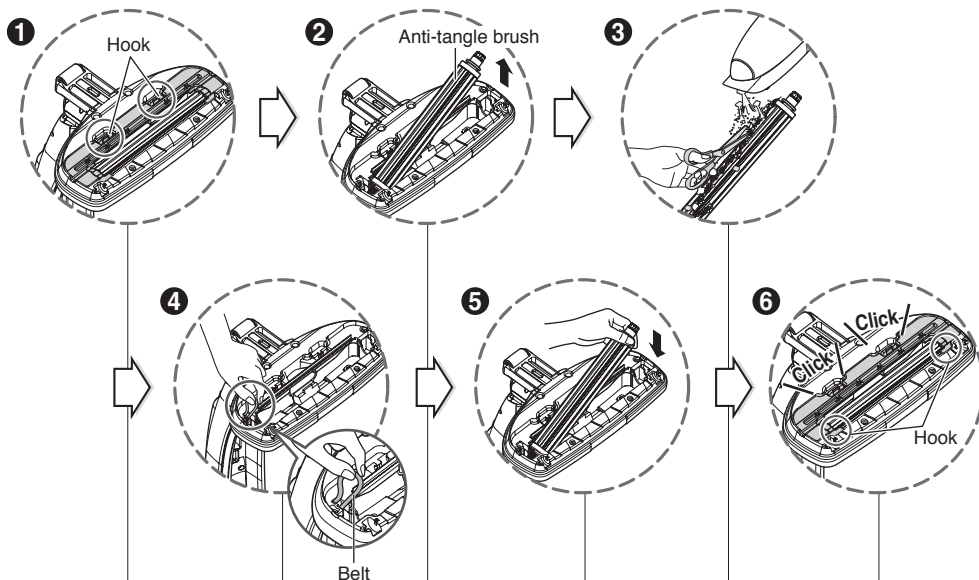

1 As showing in the figure, press the hook to release the anti-tangle brush cover.

2 Lift the anti-tangle brush in the arrow direction and detach it from the drive belt.

3 Clean the brush when brush is tangled with hairs and threads.
- Use another vacuum cleaner to remove the hair and threads from the anti-tangle brush.
- Use a pair of scissors to cut the hairs, threads etc. that have collected around the brush.
(Do not use water to clean the brush.)

4 Put the anti-tangle brush back onto the belt inside the vacuum nozzle.

5 Secure the brush into the vacuum nozzle.

6 Refit the brush cover until you hear a “click” sound.

Helpful tip

- After cleaning or for replacement, assemble the anti-tangle brush properly in the opposite way of removal.
- Before beginning your cleaning, check the nozzle wheels and brush to see if other foreign objects are stuck in them.
- Remove the objects to protect the floor surface.

Troubleshooting Guide

If there is an abnormality in the product, check the following items first before requesting for a service center or calling the store.

A service cost will be charged if the appliance has a user related malfunction, or no malfunction is found.

Following simple actions in the user manual may solve the problem.

CHECK	PLEASE PERFORM THE FOLLOWING ACTIONS
Weak or no suction and vibration noise.	• Check if inlet or dust bin is blocked by any foreign objects or debris that weaken the suction. • Separate dust bin from the main body, and check if the filters are dirty.
Cleaner is not working at all?	• Check that the switch is turned on. • Check if battery level is low. • Check if the operation procedure is correct according to the instructions within this manual.
Odor comes out of the cleaner?	• Some odors are normal when the product is first operated and will diminish within 3 months of normal operation. • Odors can also be caused by old dust in the dust bin and filters that has not been cleaned for some time. Empty, clean and wash the dust bin and filters thoroughly before reusing the appliance.
Hot air comes out, and main body is hot?	• The air coming out of the outlet holes may be warm because it is coming out after cooling the motor. This is normal.
It only vibrates, and there is no suction.	• Because of the suction motor overheat prevention device, this may occur when 1) dust bin is full, 2) filter or inlet is blocked, or 3) it is used for a long time. Allow the unit to rest and cool for at least 40 minutes before attempting to operate again. – Before using it again, clean the filter and dust bin. – If the inlet is blocked, please remove the foreign object.
Adaptor cord is defective	• The defective plug should be replaced by a qualified electrician.

دفترچه راهنمای

جاروی شارژی دسته بلند ال جی

این دفترچه راهنما حاوی اطلاعات و توصیه های مهمی به منظور استفاده ی صحیح و نگهداری از جاروبرقی می باشد. لطفاً تمامی اطلاعات مندرج در صفحات ۳، ۴، ۵ را به منظور ایمنی خود مطالعه کنید. این دفترچه را برای استفاده های بعدی در دسترس نگه دارید.

VZ9100
VZ9200



۵-۳.....	توصیه های ایمنی مهم.....
۶.....	قطعات و عملکردها.....
۱۵-۷.....	نحوه ی استفاده.....
۷.....	روش اتصال اجزای جاروبرقی.....
۸.....	روش اتصال اجزای شارژر.....
۱۱-۹.....	استفاده از دستگاه.....
۱۲.....	شارژ کردن.....
۱۳.....	تمیز کردن مخزن زباله.....
۱۴.....	نحوه ی اتصال مخزن زباله.....
۱۵.....	تمیز کردن نازل.....
۱۶.....	راهنمای عیب یابی.....

توصیه های ایمنی مهم

پیش از استفاده از جاروبرقی به منظور پیشگیری از خطر آتش سوزی، برق گرفتگی، آسیب جانی یا خرابی دستگاه در هنگام استفاده از آن، لطفاً تمامی دستورالعمل های زیر را مطالعه کرده و اجرا کنید. این راهنما تمامی شرایط احتمالی را پوشش نمی دهد. برای مشکلاتی که آنها را درک نمی کنید با مرکز خدمات مجاز تماس بگیرید.

این علامت هشدار ایمنی است.

این علامت بیانگر خطرات بالقوه ای است که می تواند باعث مرگ یا آسیب شما و دیگران شود. تمامی پیام های ایمنی به همراه علامت هشدار ایمنی و در ادامه ی کلمات «اخطار» یا «هشدار» است. این دو عبارت به معنای:



این علامت به شما می گوید که احتمال خطر و موارد غیر ایمنی وجود دارد که می تواند باعث آسیب شدید جانی یا مرگ شود.

هشدار !

این علامت بیانگر خطرات و شرایط غیر ایمنی است که می تواند باعث آسیب جانی یا خسارت مالی شود.

اخطار !

هشدار !

۱. استفاده از این دستگاه برای افراد (از جمله کودکان) دارای ناتوانی جسمی، حسی یا ذهنی یا افراد بی تجربه و بی اطلاع مجاز نیست مگر با نظارت افراد بزرگسال یا آموزش نحوه ی استفاده ایمن از دستگاه.

۲. مراقب کودکان باشید تا با دستگاه بازی نکنند.

۳. در صورت آسیب دیدن سیم برق، تعویض آن باید توسط شرکت مشتریان گلديران صورت بگیرد تا خطری متوجه کاربر نباشد.

۴. استفاده از این دستگاه توسط کودکان ۸ سال و بالاتر و افراد دارای مشکلات جسمی، حسی یا ذهنی یا افراد بی تجربه و بی اطلاع فقط در صورتی مجاز است که تحت نظارت افراد بزرگسال بوده یا آموزش های مربوط به استفاده ی صحیح و خطرات احتمالی را دیده باشند. انجام امور تمیز کردن و نگهداری از دستگاه برای کودکان مجاز نیست مگر با نظارت افراد بزرگسال.

توصیه های ایمنی مهم

⚠ هشدار


- این دستگاه فقط برای استفاده ی عادی خانگی طراحی شده است. از این دستگاه نباید برای امور اداری یا تجاری استفاده کرد.
- هیچکس به جز پرسنل شرکت مشتریان گلدیران مجاز به به باز کردن یا تعمیر دستگاه نیست.
در غیر اینصورت منجر به آتش سوزی یا شوک الکتریکی می شود.
- در نزدیکی دستگاه یا شارژر آن مواد قابل اشتعال نظیر بنزین یا انواع حلال یا مواد شوینده فوری یا جرم گیر یا نوشیدنی نپاشید.
این مواد می توانند موجب انفجار یا آتش سوزی شوند.
- از خم کردن، تا کردن یا قرار دادن اشیاء سنگین بر روی سیم برق خودداری کنید.
استفاده از سیم یا دوشاخه ی معیوب منجر به آتش سوزی یا شوک الکتریکی می شود. سیم معیوب خطرناک بوده و فقط باید توسط شرکت مشتریان گلدیران تعویض شود.
- اجازه ندهید آب وارد دستگاه شود و از دستگاه برای جمع آوری مایعات، اشیاء نوک تیز یا اشیاء داغ استفاده نکنید.
در غیر اینصورت منجر به آتش سوزی یا شوک الکتریکی می شود.
در صورت ورود آب به داخل دستگاه بلافاصله دستگاه اصلی را خاموش کرده، دوشاخه را از پریز بیرون بکشید و با شرکت مشتریان گلدیران تماس بگیرید.
- از قرار دادن سوزن یا اشیاء نوک تیز در داخل جاروبرقی یا اطراف آن یا شارژر آن خودداری کنید.
در غیر اینصورت خطر شوک الکتریکی وجود دارد.
- در صورت استنشام بوی گاز از دستگاه استفاده نکنید.
دوشاخه ی دستگاه را از پریز خارج کرده و هوای اتاق را تهویه کنید.
در غیر اینصورت خطر آتش سوزی یا انفجار وجود دارد.
- مطمئن شوید که دستگاه به پریز برق بیش از ۱۰ آمپر متصل است و دستگاه دیگری به پریز متصل نیست.
اتصال بیش از یک دستگاه به پریز موجب آتش سوزی و خرابی دستگاه می شود.
- اگر سیم برق دستگاه یا پریز شل یا معیوب هستند، از دستگاه استفاده نکنید.
در غیر اینصورت منجر به آتش سوزی یا شوک الکتریکی می شود.
- در صورت انسداد روزنه ورودی یا خروجی هوای جاروبرقی از دستگاه استفاده نکنید.
در غیر اینصورت منجر به تغییر شکل بدنه دستگاه یا آتش سوزی بر اثر افزایش حرارت خواهد شد.
- هرگز از جاروبرقی فاقد مخزن زباله استفاده نکنید.
در غیر اینصورت منجر به خرابی دستگاه یا آسیب ناشی از شوک الکتریکی خواهد شد.
- از قرار دادن دستگاه و سیم برق آن در نزدیکی دستگاه های حرارتی خودداری کنید.
در غیر اینصورت منجر به تغییر شکل دستگاه اصلی، خرابی آن یا آتش سوزی می شود.
- هنگام بیرون کشیدن دوشاخه از پریز مراقب باشید، انگشتان تان با قسمت های فلزی آن تماس نداشته باشد.
در غیر اینصورت منجر به شوک الکتریکی می شود.
- اجازه ندهید کودکان یا حیوانات خانگی با دستگاه بازی کرده یا آن به عنوان اسباب بازی استفاده کنند.
در غیر اینصورت منجر به خرابی دستگاه یا آسیب جانی می شود.
- هرگز با دستان مرطوب به دوشاخه دست نزنید.
در غیر اینصورت منجر به شوک الکتریکی می شود.
- پس از تمیز کردن محل ورودی برق با آب، بلافاصله دوشاخه را به پریز متصل نکنید و صبر کنید تا کاملاً خشک شود.
در غیر اینصورت منجر به شوک الکتریکی و خرابی می شود.
- پیش از تمیز کردن قسمت بیرون دستگاه، دوشاخه را از پریز خارج کنید و هرگز با شوینده های زیر دستگاه را تمیز نکنید.
در غیر اینصورت منجر به شوک الکتریکی و خرابی سطح بیرون دستگاه می شود.
- وقتی دستگاه در حال کار است، دست تان را در مقابل روزنه ی ورودی هوا قرار ندهید. برای اجتناب از آسیب صبر کنید تا دستگاه متوقف شود و سپس دوشاخه را از پریز بیرون بکشید.
- هرگز با آب و شوینده قسمت ورودی برق و زیر دستگاه را نشویید. فقط از پارچه مرطوب استفاده کنید.
در غیر اینصورت منجر به خرابی دستگاه یا شوک الکتریکی می شود.
- اگر سیم برق معیوب است، باید توسط شرکت مشتریان گلدیران یا نمایندگی های مجاز تعویض شود تا خطری متوجه کاربر نباشد.
- از قرار دادن دستگاه در مکان هایی که در معرض بخار روغن یا ذرات فلز است خودداری کنید.
در غیر اینصورت منجر به آتش سوزی یا خرابی دستگاه می شود.
- دستگاه در محلی که در معرض گازهای قابل اشتعال یا حتی احتمال نشتی آن وجود دارد قرار ندهید.
در غیر اینصورت منجر به آتش سوزی یا انفجار می شود.
- از باز کردن باتری خودداری کنید.
چرا که خطر آتش سوزی یا شوک الکتریکی وجود دارد.
- دستگاه را در معرض حرارت یا آتش قرار ندهید.
دستگاه در معرض نور مستقیم آفتاب قرار ندهید.
چرا که احتمال آتش سوزی یا انفجار وجود دارد.
- دستگاه را فقط با شارژر ارائه شده شارژ کنید. از شارژر فقط برای شارژ کردن استفاده کنید.
در غیر اینصورت موجب آتش سوزی یا آسیب شدید می شود.
- در صورت نشتی باتری مراقب باشید به پوست یا چشم تان برخورد نکند.
در صورت تماس با مایع نشتی شده از باتری، محل را شسته و به پزشک مراجعه کنید.
خطر سوختگی یا نابینا شدن وجود دارد.

توصیه های ایمنی مهم

⚠️ خطر

- این دستگاه را فقط به ولتاژ توصیه شده متصل کنید. در غیر اینصورت منجر به آتش سوزی یا عیوب غیر قابل تعمیر دستگاه می شود.
- اگر از دستگاه برای مدت زمان طولانی استفاده نمی کنید، دوشاخه ی آن را از پریز خارج کنید.
- هنگام جارو کشی ممکن است در دستگاه الکتریسته ساکن ایجاد شود. الکتریسته ساکن موجب اختلال در عملکرد دستگاه می شود در چنین مواقعی دوشاخه برق دستگاه را از پریز خارج کرده و دوباره به پریز متصل کنید.
- اشیاء بزرگی چون جوراب، ساق، دستمال کاغذی، غیره در صورت ورود به دستگاه موجب انسداد ورودی دستگاه می شوند، بنابر این پیش از شروع به نظافت آنها را از روی زمین بردارید. از این دستگاه فقط برای جمع آوری گرد و غبار و خرده ریز استفاده کنید.
- از قرار دادن طولانی مدت بر روی یک نقطه یا جارو کشی مکرر یک نقطه خودداری کنید. چرا که احتمال مخدوش شدن آن سطح بر اثر اصطکاک و ارتعاش وجود دارد.
- وقتی که دستگاه در حال کار است، دست یا پای تان را به زیر دستگاه نزنید.
- هرگز از دستگاه بدون وجود مخزن زباله و روکش هایش استفاده نکنید. همواره مخزن زباله را بررسی کنید تا پر نشده باشد. چنانچه پس از پر شدن مخزن همچنان به نظافت ادامه دهید منجر به خرابی دستگاه و افزایش حرارت آن می شود.
- به منظور پیشگیری از خطر آتش سوزی یا شوک الکتریکی، هنگام خارج کردن دوشاخه از پریز، از خود دوشاخه بگیرید. هرگز سیم آن را نکشید.
- اگر چیزی به سطح زیر دستگاه چسبیده است، پیش از استفاده از دستگاه آن را از محل جدا کنید. در غیر اینصورت در موتور مکش اختلال ایجاد کرده و منجر به خرابی دستگاه می شود.
- هرگز از دستگاه برای از بین بردن گازهای سمی استفاده نکنید. دستگاه توانایی این کار را نداشته و گازهای سمی از بین نخواهند رفت.
- دستگاه را در سطوح صاف قرار داده یا استفاده کنید و هنگام استفاده از آن از وارد آوردن فشار خودداری کنید. در غیر اینصورت منجر به آتش سوزی یا خرابی دستگاه می شود.
- در هنگام معدوم کردن دستگاه آن را به طور صحیح معدوم کنید چرا که دستگاه دارای باتری است و در صورت عدم رعایت این نکته منجر به آتش سوزی یا انفجار می شود.
- تمامی لوازم برقی و الکترونیکی باید جدا از زباله های عادی و خانگی و مطابق با قوانین اداره بازیافت محلی معدوم شوند.
- برای اطلاع از جزئیات بیشتر پیرامون نحوه معدوم نمودن سایل قدیمی، لطفاً با اداره بازیافت منطقه خود تماس بگیرید.
- تمامی باتری ها باید جدا از زباله های عادی و خانگی و مطابق با قوانین اداره بازیافت منطقه معدوم شوند.
- برای اطلاعات بیشتر پیرامون جزئیات معدوم نمودن باتری های کهنه با اداره بازیافت منطقه تماس بگیرید.

قطعات و عملکردها

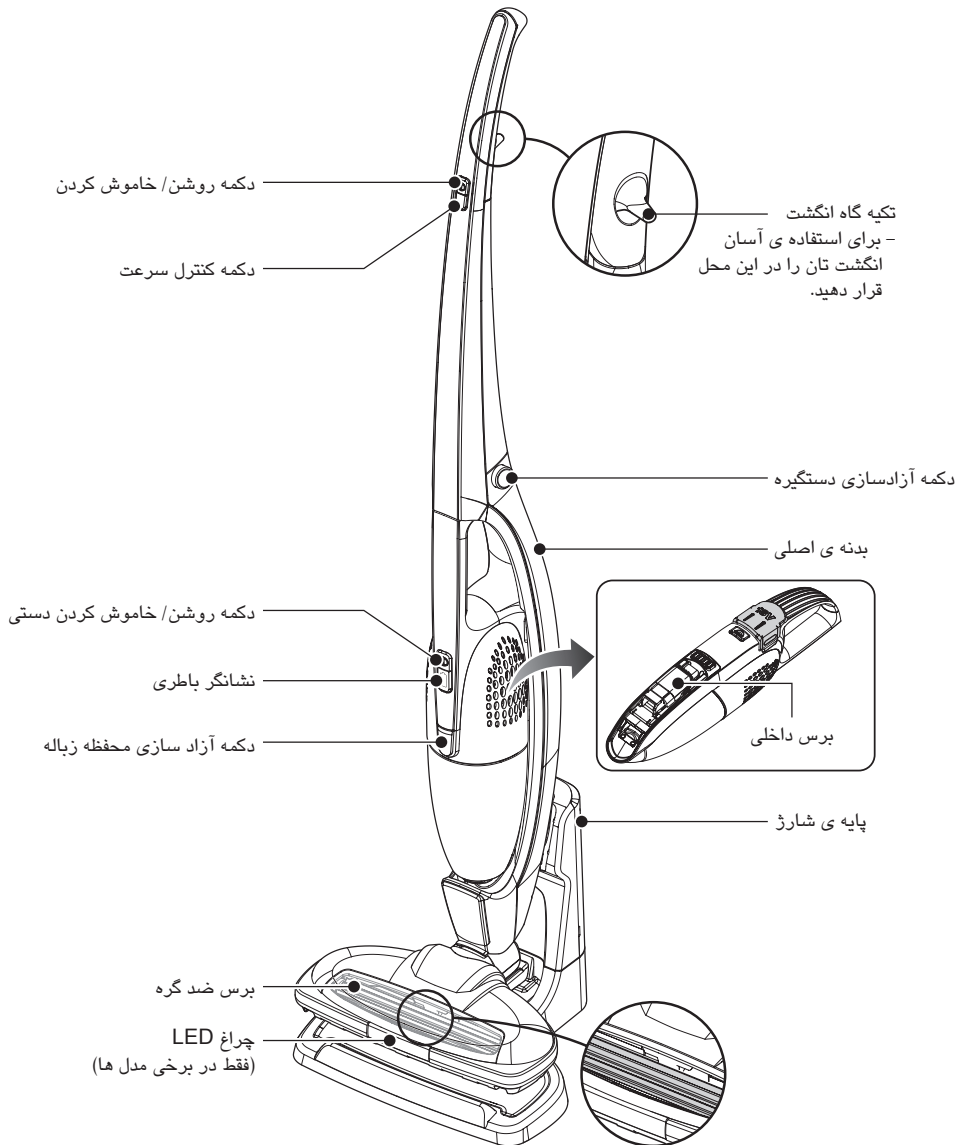


قطعات :

شارژر، پیچ نگهدارنده دستگیره

نحوه ی استفاده

روش اتصال اجزای جاروبرقی

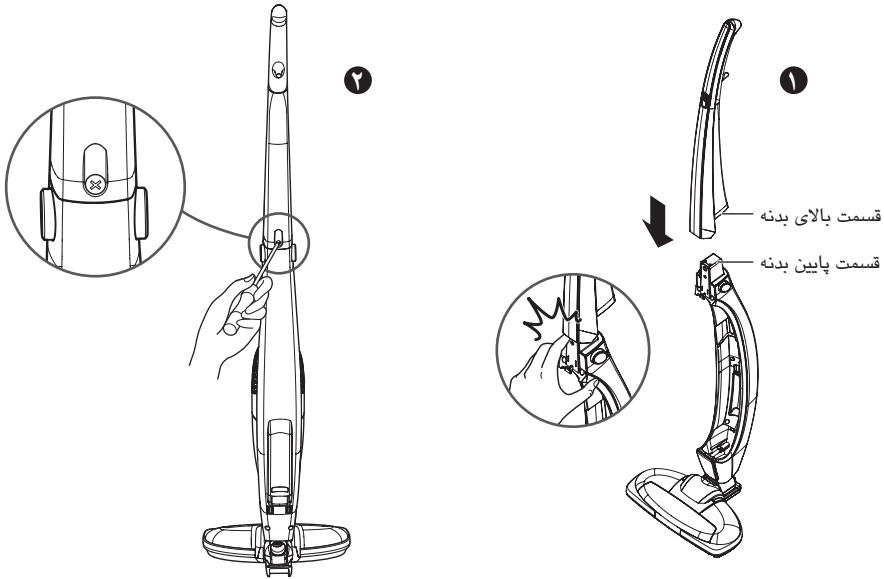

۱ روش اتصال قسمت بالا و پایین بدنه


قسمت بالای بدنه را در جهت فلش به قسمت پایین بدنه متصل کنید، مانند شکل بالا.
(هنگام اتصال اجزای دستگاه مراقب باشید انگشت تان گیر نکند.)

۲ سفت کردن پیچ

در قسمت پشت دستگاه، یک روزنه برای بستن پیچ وجود دارد.
با استفاده از پیچ ارائه شده همراه دستگاه، قسمت بالای بدنه را به قسمت پایین محکم کنید.

نحوه ی استفاده

روش اتصال اجزای شارژر

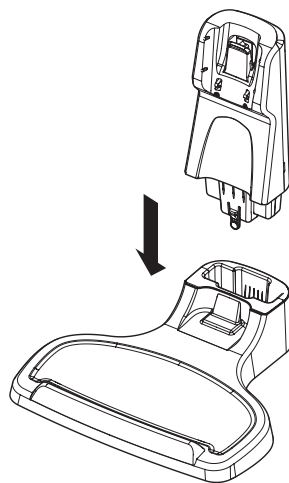


قسمت بالای پایه ی شارژر را مقابل قسمت
پایین قرار داده و فشار دهید تا صدای کلیک
شنیده شود.

نحوه ی استفاده

استفاده از دستگاه

دکمه ی روشن / خاموش کردن

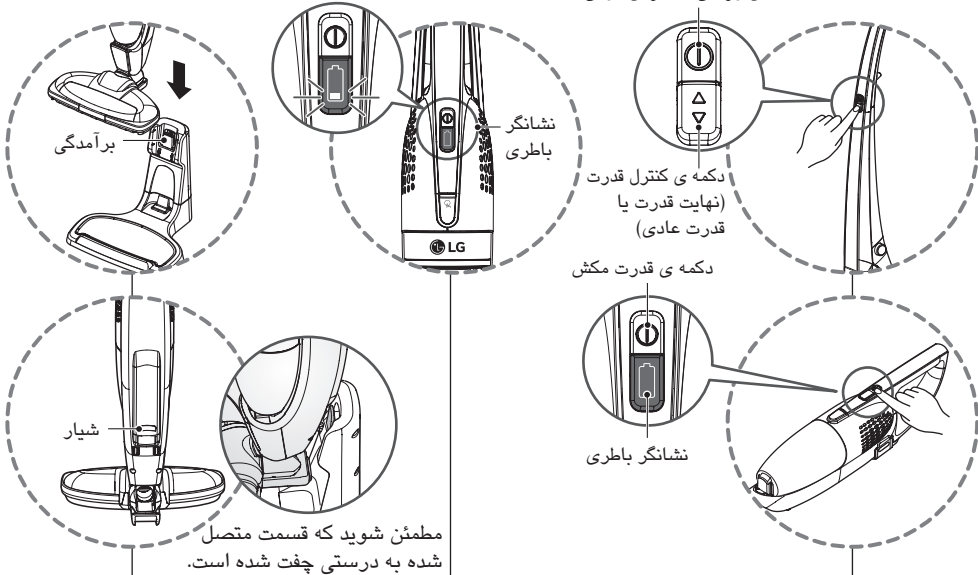

دکمه ی پشت بدنه ی اصلی را بر روی شارژر در وضعیت نشان داده شده در شکل قرار دهید. مطمئن شوید که اتصال قطعات به درستی انجام شده است.

برای روشن شدن دستگاه، دکمه روشن / خاموش شدن را فشار دهید.

- هنگام استفاده از جاروبرقی، با دکمه ی کنترل سرعت، سرعت موتور را انتخاب کنید.
- اگر دستگاه کار نمی کند، نشانگر باتری را بررسی کنید.

نشانگر باتری میزان شارژ باقیمانده را نشان می دهد.

- یک باتری کاملاً شارژ شده می تواند تا ۲۰ دقیقه در حالت نهایت قدرت و تا ۳۰ دقیقه در حالت قدرت عادی (با توجه به نوع سطح زمین) کار کند.
- وقتی میزان شارژ باتری کم شود، نشانگر باتری یک چراغ چشمک زدن نشان می دهد و سپس خاموش می شود.

هشدار

برای جمع کردن مایعات از این دستگاه استفاده نکنید. جارو کردن مایعات موجب خرابی دستگاه می شود.

نحوه ی استفاده

استفاده از دستگاه



برس ضد گره برای نظافت فرش پرز کوتاه یا سطوح چوبی معمولی بسیار مناسب است.


- ① نظافت فرش با پرزهای بلند توصیه نمی شود.
- ② اگر فرش پرز بلند را جاروبرقی بکشید، ممکن است چرخش برس ضد گره متوقف شود.
- چنانچه چرخش برس ضد گره به دلیل فشار موتور متوقف شود، دستگاه را خاموش و دوباره روشن کنید.
- ③ پس از اتمام کار جاروکشی، جاروبرقی را بر روی زمین یا بر روی پایه شارژ قرار دهید.
- چنانچه زمانی که از دستگاه استفاده نمی کنید جاروبرقی به دلیل قرارگیری نادرست زمین بیفتد علاوه بر خرابی دستگاه موجب آسیب کودکان یا حیوانات خانگی خواهد شد.

موتور برس ضد مو مجهز به محافظ در برابر فشار است که گردش موتور را متوقف می کند، تا مانع از آسیب تصادفی یا خسارت به نخ ها و کرک های گره خورده شود.

نحوه ی استفاده

استفاده از دستگاه

به منظور راحتی کاربر، یک برس داخلی (توکار) به قسمت دستی جاروبرقی ملحق شده است. وقتی از جاروبرقی به صورت دستی استفاده می کنید، به دستورالعمل زیر مراجعه کنید.

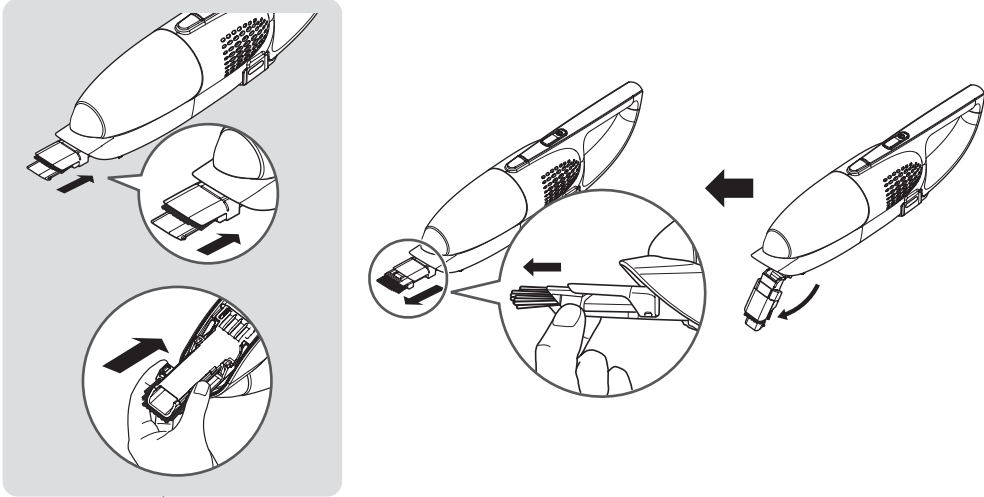

جمع کردن برس داخلی (توکار)


برس داخلی (توکار) را در مسیر فلش حرکت دهید.
بدنه برس داخلی (توکار) را در مسیر فلش به طرف محفظه تا کنید.

استفاده از برس داخلی (توکار)

برس داخلی را در جهت فلش بیرون بکشید تا از زیر جاروبرقی به طور کامل بیرون بیاید.
برس را در مسیر فلش حرکت دهید تا در محل قفل شود.

نحوه ی استفاده

شارژ کردن

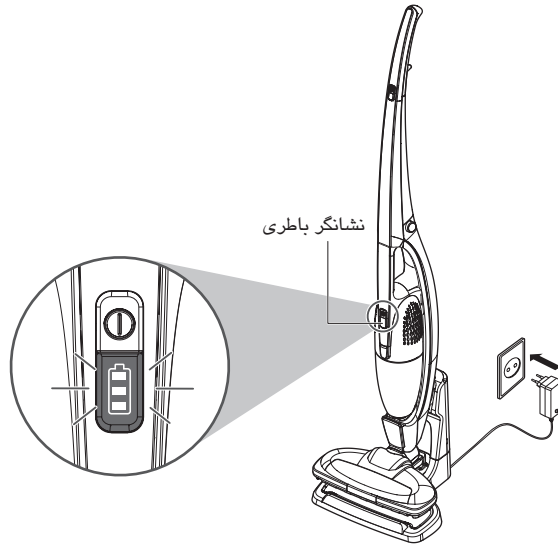


۱ چنانچه شارژ دستگاه در هنگام کار کم شود، به منظور محافظت از باتری، دستگاه به طور خودکار خاموش می شود. شما باید اقدام به شارژ باتری نمایید. پیش از شروع شارژ مجدد، کنترل کنید که قسمت دستی جارو به طور صحیح به بدنه اصلی وصل شده باشد، سپس آن را بر روی شارژر قرار دهید.

۲ با توجه به وضعیت باتری، مدت زمان شارژ متغیر است. وقتی میزان شارژ باتری به حداقل برسد، مدت زمان شارژ کامل باتری ۴/۵ ساعت به طول می انجامد. (شارژ یک باتری)

- زمانی که قسمت دستی جارو در حال شارژ است، نشانگر باتری با چشمک زدن میزان شارژ را نشان می دهد.
- وقتی باتری به طور کامل شارژ شود، نشانگر باتری قسمت دستی جارو روشن باقی می ماند.
- اگر برای مدت زمان طولانی از جاروشاژری استفاده نمی کنید، توصیه می شود دوشاخه ی آداپتور شارژر را از پریز خارج کنید.

نحوه ی استفاده

تمیز کردن مخزن زباله

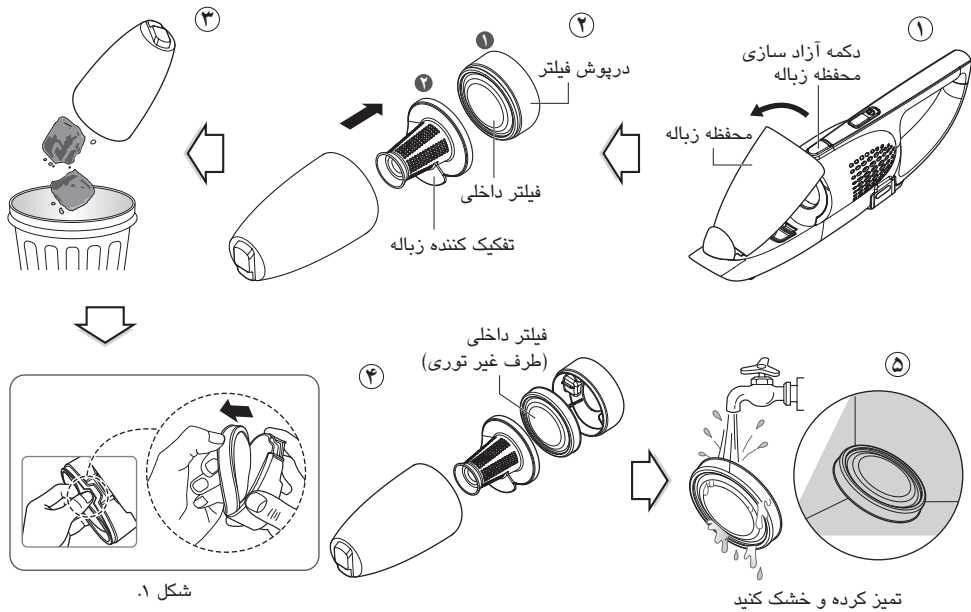


- ۱ برای جدا کردن مخزن زباله، دکمه آزاد سازی را فشار داده و نگهدارید و در جهت فلش بکشید.
- ۲ درپوش فیلتر را در مسیر فلش بیرون کشیده و جدا کنید، سپس تفکیک کننده زباله را از مخزن زباله خارج کنید.
- ۳ (مراقب باشید زباله از فیلتر جدا نشود) مخزن زباله را تخلیه کنید.
- ۴ مطابق شکل ۱، فیلتر داخلی را از درپوش فیلتر جدا کنید.
- ۵ تا زمانی که آب خارج شده از فیلتر شفاف نشده فیلتر جدا شده را در زیر آب بشویید و سپس آن را به طور کامل در سایه خشک کنید.
- (از آب داغ یا مواد شوینده استفاده نکنید. در غیر اینصورت موجب تغییر شکل فیلتر می شود.)

نکات سودمند

- به منظور امور نگهداری، فیلتر را یک بار در هفته با استفاده از برس یا یک جاروبرقی دیگر تمیز کنید، و حداقل دو بار در ماه آن را با آب بشویید.
- (تمیز کردن منظم فیلتر به حفظ عملکرد آن کمک می کند.)
- برای آنکه جارو شارژی تان عملکرد مطلوبی داشته باشد، محفظه زباله را پس از هر بار استفاده تخلیه کنید.
- پس از تمیز کردن تفکیک کننده زباله، آن را به داخل مخزن زباله بازگردانید.
- هیچوقت از جارو شارژی بدون وجود تفکیک کننده مخزن زباله استفاده نکنید. در غیر اینصورت زباله به داخل موتور و بدنه اصلی مکیده شده و موجب خرابی و اختلال در جارو شارژی می شود.

نحوه ی استفاده


نحوه ی اتصال مخزن زباله

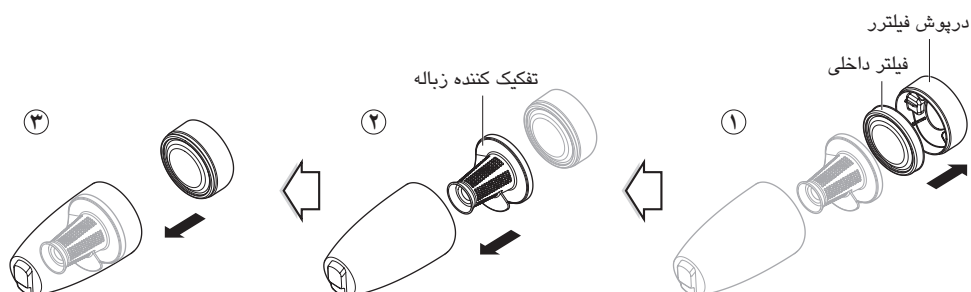

- ۱ فیلتر داخلی را به درپوش فیلتر متصل کنید.
- ۲ تفکیک کننده ی زباله را داخل مخزن زباله قرار دهید.
- ۳ درپوش فیلتر را در جهت فلش بر روی تفکیک کننده ی زباله نصب کنید.


نکات سودمند

- با مراجعه به شکل زیر، درپوش فیلتر، نگهدارنده فیلتر و مخزن زباله را با میزان کردن در مسیر صحیح ، نصب کنید.

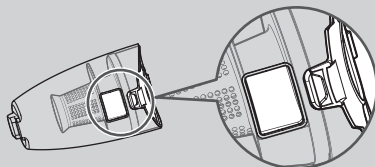

نحوه ی استفاده

تمیز کردن نازل

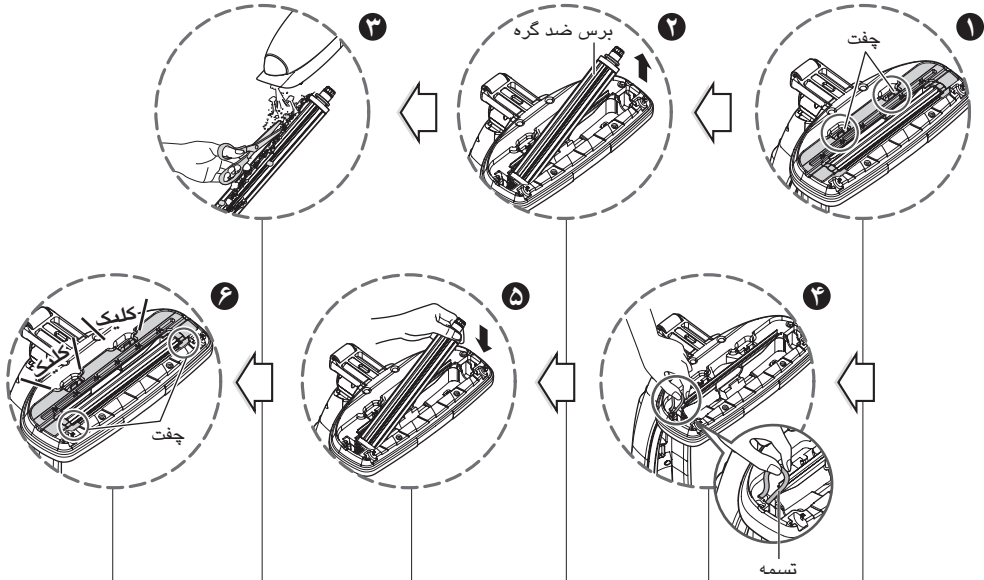

۱ مطابق شکل، برای آزاد سازی روکش برس ضد مو چفت را فشار دهید.

۲ در جهت فلش برس ضد مو را بلند کنید و آن را از تسمه درایو جدا کنید.

۳ وقتی کرک و مو در برس گیر می کند، آن را تمیز کنید. - برای جدا کردن کرک و مو از برس ضد مو، از یک جاروبرقی دیگری استفاده کنید. - برای بریدن نخ و کرک جمع شده در اطراف برس از قیچی استفاده کنید. (برای تمیز کردن برس از آب استفاده نکنید.)

۴ برس ضد مو را به داخل تسمه درون نازل جارو شارژی بازگردانید.

۵ برس را در داخل نازل جارو شارژی تثبیت کنید.

۶ روکش برس را در محل قرار داده و فشار دهید تا صدای کلیک شنیده شود.

نکات سودمند

- پس از تمیز کردن یا تعویض برس ضد گره، آن را عکس جهت باز کردن، نصب کنید.
- پیش از شروع تمیز کردن، برس و چرخ های نازل را بررسی کنید و ببینید اشیاء خارجی به آن گیر نکرده باشند.
- به منظور حفظ سطح مورد جارو کشی، اشیاء گیر کرده را جدا کنید.

راهنمای عیب یابی

در صورت مشاهده عملکرد غیر عادی از دستگاه، پیش از تماس با شرکت مشتریان گلدیران موارد زیر را بررسی کنید.

اگر اختلال دستگاه مربوط به کاربر باشد یا اصلاً خرابی مشاهده نشود، کاربر باید هزینه ای را پرداخت کند.

اقدامات ساده ی زیر می تواند مشکل را برطرف کنند.

ایراد	موارد زیر را لطفاً انجام دهید
مکش ضعیف بوده یا اصلاً نیست و صدای لرزش شنیده می شود.	• ببینید آیا مجرای ورودی هوا یا مخزن زباله بر اثر گیر کردن شیء مسدود شده است یا وجود ضایعات ریز موجب ضعیف شدن مکش شده اند. • مخزن زباله را از بدنه جدا کنید و ببینید آیا فیلترها کثیف هستند.
جارو شارژی به طور کلی کار نمی کند؟	• ببینید آیا دستگاه روشن است. • ببینید آیا میزان شارژ باتری کم است. • ببینید آیا روند عملکرد مطابق با توصیه های این دفترچه ی راهنما است.
از دستگاه بویی استشمام می شود؟	• وقتی از دستگاه تازه ای استفاده می کنید، یک سری بوها عادی هستند اما پس از گذشت ۳ ماه کم کم این بوها از بین می روند. • در صورتی که زباله برای مدت زمانی در مخزن مانده باشد یا فیلترها مدتی تمیز نشده باشند بو ایجاد می شود. پیش از استفاده از دستگاه، مخزن زباله و فیلترها را به طور کامل تخلیه، تمیز کرده و بشویید.
هوای داغ از دستگاه خارج شده و بدنه دستگاه داغ است؟	• هوای خروجی از روزنه های خروجی پس از خنک شدن موتور، گرم می شود. این گرم شدن عادی است.
دستگاه فقط لرزش داشته و هیچ مکشی ندارد.	• به دلیل وجود قطعه ای که مانع از گرم شدن موتور مکنده می شود، اشکال می تواند به دلیل (۱) پر بودن مخزن زباله (۲) انسداد فیلتر یا ورودی هوا، یا (۳) استفاده طولانی مدت دستگاه باشد. حداقل مدت ۴۰ دقیقه صبر کنید تا دستگاه خنک شود سپس دوباره اقدام کنید. - پیش از استفاده ی مجدد، فیلتر و مخزن زباله را تمیز کنید. - اگر مجرای ورودی هوا مسدود شده است، لطفاً اشیاء خارجی را خارج کنید.
سیم آداپتور معیوب است.	• دوشاخه ی معیوب باید توسط شرکت مشتریان گلدیران تعویض شود.

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۴۴۳۳۸۵۹۹	آباده
۳۳۶۲۳۶۷۹	آبدانان
۴۴۴۶۳۳۲۳	آبش احمد
۳۲۸۲۴۷۰۵	آبیک
۳۴۲۲۳۸۸۲	آذر شهر
۵۴۷۳۶۶۱۵	آران و بیدگل
۳۵۷۳۹۳۷۰	آزادشهر
۴۴۸۱۲۶۲۳	آستارا
۴۲۱۲۴۳۹۱	آستانه اشرفیه
۳۲۹۲۵۶۵۵	آشخانه
۳۴۵۲۸۷۲۰	آق قلا
۴۳۲۹۲۷۰۷ ۴۴۲۲۳۳۶۸	آمل
۰۲۱-۸۴۷۳۳	بابل
۳۵۲۵۶۶۲۰	بابلسر
۴۳۷۲۱۹۴۴	باغملک
۴۲۴۲۴۴۴۰	بافت
۳۲۲۲۷۰۲۲ ۳۲۲۶۳۵۹۷	بجنورد
۳۴۲۲۱۸۴۴	برازجان
۵۵۴۲۰۲۸۱	بردسکن
۴۲۶۲۵۹۴۵ ۴۲۴۶۰۹۲۲ ۴۲۶۲۳۵۷۵	بروجرد
۳۴۲۳۸۹۲۴	بروجن
۳۲۷۷۶۶۶۰	بشرویه
۴۲۲۱۴۷۸۴	بم
۴۴۴۲۶۱۳۵ ۴۴۵۳۲۰۵ ۴۴۵۴۵۰۲۶	بندر انزلی
۳۴۴۸۰۰۶۳	بندر ترکمن
۳۳۳۵۴۰۰۲	بندر عباس

۳۲۸۲۹۲۸۸	ابركوه
۳۵۲۷۷۷۱۱	ابهر
۳۲۲۲۵۸۲۴ ۳۳۶۸۸۴۴۰	اراك
۳۳۶۱۷۸۱۴ ۳۳۷۱۰۰۹۴ ۳۳۴۴۰۰۴۲	اردبیل
۳۲۳۱۶۱۷	اردكان
۴۳۵۲۵۷۷۵	ارسنجان
۳۲۲۴۰۹۲۰ ۳۳۴۴۷۳۹۵	ارومیه
۳۳۲۲۴۱۶۱	اسدآباد
۳۷۲۲۲۶۶۹	اسفراین
۴۵۲۲۲۱۸۲	اسلام آباد غرب
۵۶۳۶۶۸۷۷ ۵۶۳۴۱۲۶۷	اسلامشهر
۳۷۲۲۳۴۹۰	استهارد
۰۲۱-۸۴۷۳۳	اصفهان
۴۴۵۲۲۹۵۳	اقلید
۴۳۳۳۱۳۵۵	الیگودرز
۴۲۷۲۴۹۹۵	املش
۵۴۶۵۹۸۸۷	امیدیه
۳۲۳۵۵۰۲۵	امیرکلا
۳۴۳۸۲۴۵۶	انار
۴۲۶۲۸۱۲۴ ۴۲۶۲۰۸۱۴	اندیمشك
۳۵۲۲۵۴۷۴	اهرم
۰۲۱-۸۴۷۳۳	اهواز
۴۳۶۳۱۲۱۱ ۴۳۶۳۳۸۸۶	ایذه
۳۷۲۳۰۱۳۷	ایران شهر
۳۳۳۶۷۳۰ ۳۳۳۴۱۲۳۴	ایلام
۳۳۲۳۹۷۱۱	ایوان
۵۳۳۲۱۲۰۵ ۵۳۳۳۳۲۱۲	آبادان

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۵۴۲۲۵۳۸۲ ۵۴۲۳۷۳۳۲ ۵۴۲۲۹۹۷۸ ۵۴۲۳۴۳۶۴	تنکابن
۰۲۱-۸۴۷۳۳	تهران
۳۴۹۲۴۳۸	تویسرکان
۳۲۲۷۵۵۵۳	جاجرم
۵۴۴۴۵۷۴۷ ۵۴۲۶۲۷۵۷	جهرم
۴۶۲۲۲۵۱۲	جوانرود
۴۲۵۴۵۴۱۱	جویبار
۴۵۲۲۱۳۳۶	جوین
۳۲۳۱۶۶۳۱	جیرفت
۴۲۶۶۳۶۶۴	چابکسر
۳۵۳۸۷۵۱۷	چابهار
۵۲۲۲۴۰۲۶	چالوس
۴۴۶۶۹۲۷۳	چمستان
۴۶۱۲۶۴۴۶	چناران
۳۵۴۲۴۲۵۰	حاجی اباد
۳۴۲۲۰۹۰۷	خداآبنده (قیدار)
۳۳۳۰۲۷۵۲ ۳۳۲۳۲۶۱۳	خرم آباد
۴۴۴۵۱۳۰۸	خرم بید
۳۵۵۲۳۷۳۵	خرمدره
۵۳۵۴۰۳۸۲	خرمشهر
۳۲۴۴۳۷۵۰	خسروشهر
۳۴۴۶۱۲۸۴	خشکبیجار
۳۲۴۴۱۴۲۰	خلخال
۵۷۷۲۳۲۵۲	خلیل آباد
۳۴۴۲۳۵۵۵ ۳۴۴۲۰۸۷۱ ۳۴۴۲۶۴۴۰	خمام
۴۶۲۲۴۴۱۰	خمین

۴۲۸۲۷۶۶۶	بندر کیشهر
۳۳۱۲۰۰۰۵	بندر گناوه
۵۲۷۲۴۴۳۵ ۵۲۷۲۴۴۳۵ ۵۲۸۲۳۳۱۱	بهبهان
۳۴۵۲۷۸۱۷ ۳۴۵۶۳۳۸۷	بهبهر
۳۲۵۳۰۰۱۳ ۳۳۵۶۲۱۷۸	بوشهر
۴۶۲۲۴۶۲۰	بوکان
۳۴۲۲۵۲۳۵	بوئین زهرا
۳۲۸۲۵۰۰۱	بيله سوار
۳۸۱۲۳۰۰۰	بیجار
۳۲۴۴۵۸۳۷ ۳۲۴۴۴۴۴۰	بیرجند
۳۶۷۹۵۲۹۰	بیضاء
۳۲۷۳۰۰۰۱ ۳۲۷۸۵۶۶۲	پارس آباد مغان
۳۶۰۴۴۴۵۰	پاکدشت
۷۶۲۹۳۴۳۲	پردیس
۳۲۲۲۴۴۰۲	پلدختر
۴۴۲۲۹۹۱۸	پیرانشهر
۳۵۲۲۸۲۳۹	تاکستان
۴۴۲۳۱۶۱۷ ۴۴۲۳۹۸۸۱	تالش
۵۴۵۳۰۵۶۹ ۵۴۵۳۲۹۰۰	تایباد
۰۲۱-۸۴۷۳۳	تبریز
۵۲۵۲۴۲۱۱	تربت جام
۵۲۳۱۳۴۷۷ ۵۲۳۳۰۰۰۱	تربت حیدریه
۴۵۵۲۴۳۱۰	تکاب

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۴۲۶۲۷۸۴۴ ۴۲۶۳۲۴۵۰	رودسر
۴۴۵۴۵۱۹۵	رویان
۳۲۲۲۵۹۱۹	زابل
۳۳۲۳۱۸۵۰	زاهدان
۳۳۴۳۶۴۷۹ ۳۳۴۲۱۵۶۸	زرنند
۴۵۲۲۰۵۸۹	زرنندیه
۳۳۷۷۵۹۲۲ ۳۳۴۶۷۶۰۸	زنجان
۵۴۳۴۰۶۱	زواره
۳۳۳۶۳۵۳۵ ۳۳۲۱۳۰۴۸ ۳۳۳۵۹۴۰۴	ساری
۴۲۲۲۴۶۵۴ ۴۲۴۷۱۵۸۰	ساوه
۴۴۲۲۵۸۵۵ ۴۴۲۲۹۵۶۰	سبزوار
۴۳۲۲۴۴۹۹ ۴۳۲۳۲۶۷۰	سراب
۳۴۲۲۳۸۰۰ ۳۴۲۲۵۵۸۳	سرابله
۳۷۵۴۴۱۹۸	سراوان
۴۲۲۲۱۴۰۶	سرپل ذهاب
۴۴۸۸۶۲۵۲	سرخرود
۳۴۵۲۳۵۹۲	سرخس
۳۶۲۳۸۸۱۲	سقز
۳۵۲۳۳۷۵۸	سلماس
۳۳۳۳۸۵۱۴	سمنان
۳۳۲۳۷۷۰۶ ۳۳۱۶۷۰۳۵ ۳۳۲۴۱۴۹۲	سنندج
۴۲۴۲۱۶۰۰	سوادکوه
۴۲۳۲۱۵۱۴	سیاهکل

۵۲۶۲۳۴۹۵	خنج
۵۴۲۲۷۳۶۳ ۵۴۲۳۱۳۸۴	خواف
۵۷۲۳۳۶۶۵	خوانسار
۳۵۲۲۱۲۱۳	خورموج
۳۶۴۴۴۵۰۸	خوی
۵۳۵۴۴۵۶۲ ۵۳۵۴۸۲۵۹	داراب
۵۷۲۲۸۴۲۱	داران
۳۵۲۴۳۶۱۵	دامغان
۳۴۵۳۳۴۶۲	دانسفهان
۴۶۲۲۶۰۱۵	درگز
۳۵۲۲۵۵۵۸	دره شهر
۴۲۲۴۲۲۲۰ ۴۲۲۳۷۳۹۹	دزفول
۴۴۲۲۸۱۹۰	دلیجان
۳۲۲۶۳۸۳۳	دهدشت
۳۳۷۲۹۶۶۸	دهلران
۴۳۲۲۹۸۳۱	دورود
۵۵۲۵۹۹۵۸	رامسر
۴۳۵۲۰۴۱۵ ۴۳۵۳۹۲۵۸	رامهرمز
۵۶۴۳۷۰۵۵	رباط کریم
۳۴۶۷۳۴۲۴	رستم آباد رودبار
۰۲۱-۸۴۷۳۳	رشت
۴۴۶۲۰۹۴۴ ۴۴۶۲۸۴۰۰	رضوانشهر
۳۴۲۵۸۴۶۹ ۳۴۲۵۰۹۵۹ ۳۴۲۲۶۳۷۷	رفسنجان
۴۶۵۲۳۲۹۲	روانسر
۴۲۸۸۷۰۵۲	رودان
۳۴۶۲۲۹۹۸	رودبار

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۳۸۷۵۲۱۴۳	فراشیند
۳۲۷۲۱۱۰۱	فردوس
۳۵۶۵۱۴۵۰ ۳۵۶۵۴۳۰۹	فریدونکنار
۳۴۶۲۲۶۷۹	فریمان
۵۳۳۳۶۰۱۰ ۵۳۳۱۵۴۲۱	فسا
۳۴۷۲۰۳۱۰ ۳۴۷۳۶۹۸۱	فومن
۳۸۷۳۲۱۸۳	فیروز آباد
۷۶۴۰۲۹۹۱	فیروز کوه
۴۲۰۷۲۷۲۹	قائم شهر
۳۶۷۲۶۶۸۶	قره ضیاء الدین
۳۵۲۲۸۴۵۱	قروه
۳۳۶۶۷۰۷۵ ۳۳۲۲۸۴۶۶ ۳۳۳۳۵۶۶۶	قزوین
۳۵۲۵۹۰۴۷	قشم
۳۲۹۲۶۰۰۴ ۳۸۱۱۹۳۵۶	قم
۴۷۲۴۳۵۱۵	قوچان
۵۴۵۲۳۹۳۶	قیرو کارزین
۴۲۲۲۵۴۶۳	کازرون
۵۵۳۳۱۳۱۰	کاشان
۵۵۲۳۳۸۵۵	کاشمر
۳۵۵۲۲۸۶۸	کامیاران
۳۵۲۲۶۹۹۶	کیبدر آهنگ
۳۲۲۳۳۴۴۲	کرج
۳۳۴۴۶۶۷۱	کرد کوی
۳۲۵۲۱۸۴۶ ۳۲۷۲۴۹۳۹	کرمان

۴۲۲۰۱۶۹۸	سیرجان
۵۳۷۲۰۰۶۸	شادگان
۳۲۳۳۴۷۱۷ ۳۲۲۴۰۹۶۷	شاهرود
۴۶۳۲۲۱۳۳	شاهین دژ
۴۵۳۰۳۰۰۸	شاهین شهر
۴۲۴۲۰۲۰۲	شبستر
۳۴۷۸۴۸۵۲	شفت
۳۴۱۱۱۰۰۸	شهر بابک
۴۶۸۸۸۹۹۶	شهر قدس
۳۴۵۷۳۵۹۰	شهرستانک
۵۳۲۲۰۶۱۹	شهرضا
۴۶۸۳۳۱۷۴	شهر قدس
۳۳۳۵۱۶۶۶ ۳۳۳۳۹۰۴۲	شهر کرد
۶۵۲۷۶۴۵۲	شهریار
۴۲۸۲۷۱۲۱	شوش دانیال
۳۶۲۰۵۲۰۷ ۳۶۲۱۱۳۲۱	شوستر
۰۲۱-۸۴۷۳۳	شیراز
۳۶۲۲۷۸۵۴ ۳۶۲۲۲۷۰۰	شیروان
۳۵۶۲۳۵۲۰	صائین قلعه
۴۸۳۲۷۰۳۲	صحنه
۴۴۳۲۴۲۳۱ ۴۴۳۲۷۰۷۷	صومعه سرا
۳۲۸۳۴۰۴۶	طبرس
۵۴۶۲۶۶۱۵	عباس آباد
۳۷۶۲۳۸۱۵ ۳۷۶۳۴۴۵۲	عجبشیر
۳۵۲۳۰۰۰۴	علی آباد کتول
۳۶۴۲۶۲۱۷	فاروج

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۴۲۲۸۲۴۵ ۴۲۲۷۷۲۶ ۴۲۳۴۲۶۹ ۴۲۲۶۷۳۰	لاهیجان
۳۴۴۰۲۶۵۱	لشت نشاء
۴۲۵۴۴۲۳۶ ۴۲۵۵۳۷۷۹	لنگرود
۴۴۶۶۴۹۵۶	ماسال
۳۴۲۴۵۹۰۰	ماکو
۵۲۳۳۳۵۳۰ ۵۲۳۲۳۷۲۸ ۵۲۳۴۲۴۴۵	ماهشهر
۵۲۴۱۵۰۰۰	مبارکه
۴۳۲۲۲۶۶۲	محلات
۴۴۷۴۶۰۸۳ ۴۴۷۴۵۹۵	محمود آباد
۳۷۲۲۰۰۶۶ ۳۷۲۳۹۲۴۱	مراغه
۴۲۳۳۱۲۲۳	مرند
۴۳۲۳۰۳۵۲	مرودشت
۳۴۵۲۱۹۴۸	مریوان
۳۲۵۴۰۸۸۸	مشکین شهر
۰۲۱-۸۴۷۳۳	مشهد
۳۲۲۲۸۹۰۰	ملایر
۳۷۸۲۳۶۶۵	ملکان
۴۲۲۴۰۳۸۱ ۴۲۳۳۱۷۷۸	مهاباد
۳۳۶۲۵۹۹۶	مهدیشهر
۳۲۵۲۹۳۹۹	مهریز
۴۵۲۴۸۰۵۰	میاندو آب
۵۲۲۲۲۰۲۲ ۵۲۳۳۸۱۵۳	میانه

۳۷۲۵۶۲۷ ۳۸۱۲۰۰۰ ۳۷۲۲۷۱۰۳ ۳۸۲۱۲۲۴۰	کرمانشاه
۴۲۶۸۵۰۶۶	کلاچای
۵۲۶۲۰۰۵۵ ۵۲۶۲۹۰۸۴	کلاردشت
۳۵۴۴۸۲۱۴	کلاله
۴۴۴۰۴۴۷	کلبر
۳۴۷۱۳۷۲۳	کمالشهر
۴۸۲۲۴۴۰۳	کنگاور
۴۳۲۰۶۵۱۱	کهنوج
۴۶۴۲۲۱۶۶	کوهپایه
۳۲۶۳۸۳۱۰	کوهدشت
۴۴۴۶۲۶۷۴	کیش
۳۲۳۲۶۵۵۶	گچساران
۳۲۲۶۱۴۱۰ ۳۲۲۴۹۵۰۹ ۳۲۲۲۹۷۹۵	گرگان
۳۴۲۲۵۷۶۷	گرمسار
۳۲۵۰۳۹۹۰	گره
۳۲۶۴۱۸۶۴	گرمی
۵۳۲۲۸۹۸۹ ۵۷۴۵۰۰۰۳	گلپایگان
۳۴۶۶۲۷۹۳	گلوگاه
۳۴۴۶۲۱۲۲	گمیشان
۵۷۲۲۱۶۶۲ ۵۷۲۵۱۸۶۲	گناباد
۳۳۲۲۲۹۵۳	گنبد کاووس
۵۲۴۴۶۰۲۲ ۵۲۳۳۶۶۶۷	لار
۵۲۷۲۴۰۵۴	لامرد

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۳۲۳۳۰۹۱۳	مبید
۳۵۲۲۸۱۷۷	مینو دشت
۴۶۲۵۱۳۲۷	نائین
۴۲۷۴۷۰۰۷	نجف آباد
۳۵۶۳۱۳۳۲	نقده
۳۴۷۲۴۲۲۰ ۳۴۷۲۵۷۲۲	نکاء
۳۳۲۴۶۰۶۷ ۳۳۲۲۰۷۰۴	نهایوند
۳۲۶۲۲۵۷۰	نهبندان
۴۴۶۵۳۳۶۶	نور
۴۲۵۲۳۷۸۷	نور آباد ممسنی
۵۲۳۳۶۲۲۱ ۵۲۳۳۷۱۱۷	نوشهر
۵۳۸۳۱۵۸۸	نیریز
۴۳۳۳۰۳۰۰ ۴۲۲۲۴۹۵۰	نیشابور
۳۲۵۷۲۰۰۹	هرات
۴۴۲۳۹۵۰۰	هشتگرد
۳۲۵۶۲۶۷ ۳۴۴۲۵۲۱۸ ۳۸۲۴۴۴۴۴	همدان
۳۷۶۲۳۹۰۲	ولایت جم
۳۳۲۳۰۶۲۱	یاسوج
۳۸۲۸۹۰۷۵ ۳۷۲۴۹۹۱۴ ۳۵۲۱۶۲۹۵	یزد

مرکز ارتباط مشتریان (۲۴ ساعته)

خط ویژه ۸۴۷۳۳-۰۲۱



