

OWNER'S MANUAL

WASHING MACHINE

Please read this manual carefully before operating your washing machine and retain it for future reference.

FC1408S4W
FC1409S4W



MFL67584586



บริการ 1463-2556

www.lg.com

P roduct Features



■ Protection against creases

With the alternate rotation of the drum, creasing in the laundry is minimized.



■ Built-in heater

Internal heater automatically heats the water to the best temperature on selected cycles.



■ More economical by Intelligent Wash System

Intelligent Wash System detects the amount of load and water temperature, and then determines the optimum water level and washing time to minimize energy and water consumption.



■ Child Lock

The Child lock prevents children from changing the settings, if they press any button during operation.



■ Low noise speed control system

By sensing the amount of load and balance, it evenly distributes load to minimize the spinning noise level.



■ Auto Restart

Auto Restart allows the program to restart all by itself in case of power failure. It does from the stage where it stopped.



MOTION

■ 6 Motion

Washer is able to perform various drum actions or a combination of different actions depending on the wash program selected. Combined with a controlled spin speed and the ability of the drum to rotate both left and right, the wash performance of the machine is greatly improved, giving you perfect results every time.



■ Direct Drive System

The advanced Brushless DC motor directly drives the drum without belt and pulley.

* This Manual may contain images or content different from the model you purchased.

* This Manual is subject to revision by the manufacturer.

C ontents

Safety Information	3
Specifications	4
Installation	5
Care before washing	11
Adding detergent	12
Function	14
How to use washer	15
Smart Functions	22
Maintenance	23
Troubleshooting guide	27



safety Information

READ ALL INSTRUCTIONS AND EXPLANATION OF THE INSTALLATION BEFORE USE



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury, or loss of life.

⚠ WARNING

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- **Before installation, check exterior damages. If it has, do not install.**
- **Do not install or store the washer where it will be exposed to the weather (Rain / Water Splash).**
If the product is exposed to such conditions, electric shock, fire, break down or deformation may occur.
- **Do not tamper with controls.**
It may lead to electric shock, fire, break down or deformation.
- **Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or published user-repair instructions that you understand and have the skills to carry out.**
Operating the machine with improperly replaced parts may be a cause for fire or electric shock.
- **Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc.**
Operating with such materials around the machine may trigger explosion or fire.
- **Close supervision is necessary if this appliance is used by or near children. Do not allow children to play on, with, or inside this or any other appliance.**
There is a potential danger that children might drown in the tub.
- **Keep small animals away from the appliance.**
- **Do not leave the washer door open. An open door could entice children to hang on the door or crawl inside the washer.**
- **Never reach into washer while it is moving. Wait until the drum has completely stopped.**
Even slow rotation can cause injury.
- **The laundry process can reduce the flame retardant of fabrics. To avoid such a result, carefully follow the garment manufacturer's wash and care instructions.**
- **Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.).**
It may ignite or explode. Oil may remain in the tub after a whole cycle resulting in fire during drying.
So, do not load oiled clothes.
- **Do not slam the washer door closed or try to force the door open when locked.**
This could result in damage to the washer.
- **When the machine runs high temperature, the front door may be very hot. Don't touch it.**
- **To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer from the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.**
- **When unplugging power cord, do not pull out by grasping the cord.**
Otherwise, the power cord may be damaged.
- **Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.**
Operating with a damaged plug may cause electric shock.
- **Before discarding an old machine unplug it. Render the plug useless. Cut off the cable directly behind the appliance to prevent misuse.**
- **When a product was under water, Please call service center. The risk of electric shock and fire.**
- **When washer door is opened, do not push down the door excessively.**
This could topple over the washer.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes & ordinance.


- Do not use an adapter or otherwise defect the grounding plug.
- If you don't have the proper outlet, consult an electrician.



WARNING

Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt the plug provided with the appliance-if it does not fit the outlet, have a proper outlet installed by a qualified electrician as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance-if it does not fit the outlet, have a proper outlet installed by a qualified electrician.


S pecifications

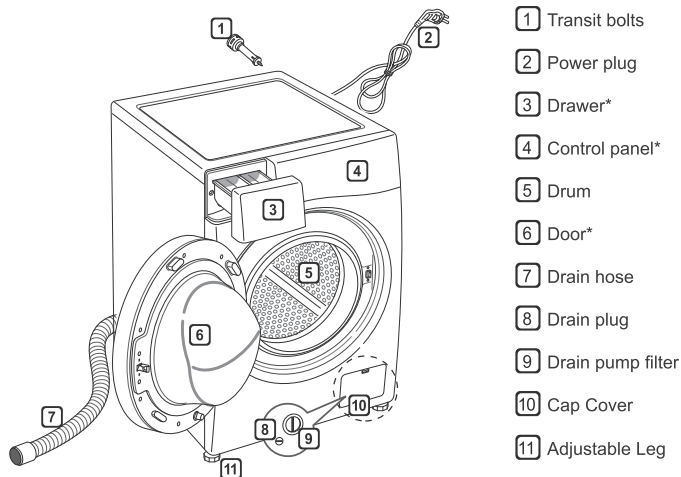


- Name : Front loading washing machine
- Power supply : 220V~,50Hz
- Size : 600mm(W) x 560mm(D) x 850mm(H)
- Weight/Electric Power : 62kg / 2000W
- Wash capacity : 9.0 kg [FC1409S4W]
8.0 kg [FC1408S4W]
- Spin speed : No/400/800/1000/1200/1400:[FC1409S4W, FC1408S4W]
- Permissible water pressure :100-1000kPa (1.0-10kg/cm²)

- The appearance and specifications may be varied without notice to raise the product quality.

■ Accessories



Inlet hose*(1EA)



Spanner(1EA)

* Part can be different according to different models.

Install or store where it will not be exposed to temperatures below freezing or exposed to the weather. Properly ground washer to conform with all governing codes and ordinances.

The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.



In countries where there are areas which may be subjected to infestation by cockroaches or other vermin, pay particular attention in keeping the appliance and its surroundings in clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the appliance guarantee.

■ Transit bolts

The appliance is fitted with transit bolts to prevent internal damage during transport.


- Packing and all transit bolts must be removed before using the Machine.

■ Removing transit bolts

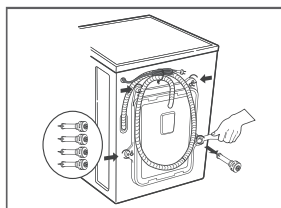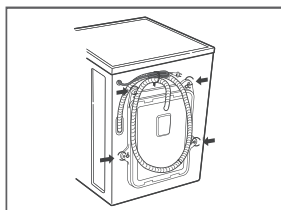

1. To prevent internal damage during transport, the special 4 bolts are locked. Before operating the washer, remove the bolts along with the rubber bungs.
 - If they are not removed, it may cause heavy vibration, noise and malfunction.
2. Unscrew the 4 bolts with the spanner supplied.
3. Take out the 4 bolts along with the rubber bungs by slightly twisting the bung. Keep the 4 bolts and the spanner for future use.
 - Whenever the appliance is transported, the transit bolts must be refitted.
4. Close the holes with the caps supplied.

■ Installation place requirement

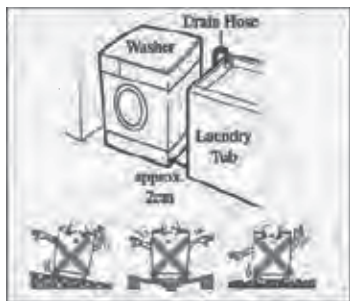

Level floor :

Allowable slope under entire washer is 1°

Power outlet :

Must be within 1.5 meters of either side of location of washer. Do not overload the outlet with more than one appliance.

Additional Clearance :

For wall, door and floor modeling is required.

(10cm : rear /2cm:right & left side)

Do not place or store laundry products on top of washer at any times.

They can damage the finish or controls.

■ Positioning

Install the washer on a flat hard floor.

Make sure that air circulation around the washer is not impeded by carpets, rug etc.

- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the washer.
- If it is impossible to avoid positioning the washer next to a gas cooker or coal burning stove, an insulation (85x60cm) covered with aluminum foil on the side facing the cooker or stove, must be inserted between the two appliances.
- The washer must not be installed in rooms where the temperature can drop below 0°C.
- Please ensure that when the washer is installed, it is easily accessible for the engineer in the event of a breakdown.
- With the washer installed adjust all four adjustable legs using the transit bolt spanner provided ensuring the appliance is stable, and a clearance of approximately 20mm is left between the top of the washer and the underside of the work-top.

⚠ WARNING

It is advisable to avoid, the usage of trolley & the movement of Washing Machine after installation, As it may disturb the levelling of washer, which can create excessive noise & vibration.

■ Electrical connection

1. Do not use an extension cord or double adapter.
 2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or equally qualified person in order to avoid a hazard.
 3. Always unplug the machine and turn off the water supply after use.
 4. Connect the machine to an earthed socket in accordance with current wiring regulations.
 5. The appliance must be positioned so that the plug is easily accessible.
- Repairs to the washing machine must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service center.
 - Do not install your washing machine in rooms where temperature below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
 - If the appliance is delivered in the winter months and temperatures are below freezing : Place the washing machine at room temperature for a few hours before putting it into operation.

⚠ CAUTION

The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with appliance.

⚠ CAUTION

CAUTION concerning the Power Cord


Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service Centre.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

■ Washing Machine is to be connected to the water mains using new hose-sets and old hose-sets should not be used.

■ Connecting water supply hose*

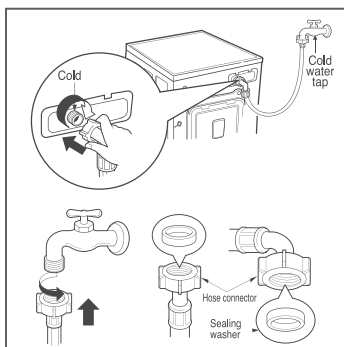


- ▶ Water supply pressure must be between 100kPa and 1000kPa (1.0~10kg/cm²)
- ▶ Don't strip or crosstread when connecting Inlet hose to the valve.
- ▶ If the water supply pressure is more than 1000kPa, a decompression device should be installed.
- Two rubber seals are supplied with the water inlet hoses. They are used for preventing water leaks.
- Make sure the connection to taps is tight enough.
- Periodically check the condition of the hose and replace the hose if necessary.
- Make sure that there is no kink on the hose and that it is not crushed.

NOTE After completing connection, if water leaks from the hose, repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the adaptor.


* Part can be different according to different models.

■ Normal Tap without thread & screw type inlet hose


1. Unscrew the fixing screw to attach the tap.



2. Push the connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.




3. Push the water supply hose vertically upwards so that the rubber packing within the hose can adhere completely to the tap and then tighten it by screwing it to the right.

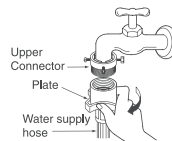


■ Normal Tap without thread & one touch type inlet hose (Single inlet models)


1. Untighten the upper connector screw.




2. Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.

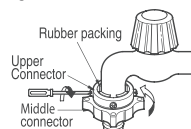


3. Connect the water supply hose to the middle connector, pushing the plate down.

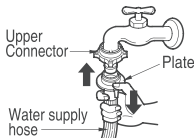


• In case the diameter of the tap is large remove the guide plate.



• Turn the middle connector not to have water leaked.
• Make sure that the rubber seal is inside the hose connector.

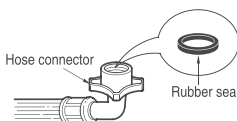

• To separate the water supply hose from the middle connector shut off the tap. Then pull the inlet hose down, pushing the plate down.

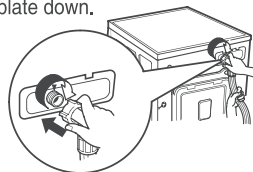

• Your machine comes with only cold water connection.
• Make sure that there are no kinks in the hose and that it is not crushed.

Use the horizontal tap

Horizontal tap



Extension tap




Square tap




■ Tap with thread & screw type inlet hose

1. • Two rubber seals are provided with inlet hose connectors.
• These are used to prevent water leakage.
• Make sure the connection to tap is sufficiently tight.

2. Check rubber seals in inlet hose connectors.

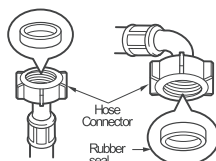

3. Screw the hose connector onto water supply tap.

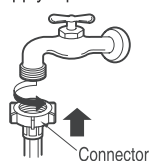

Installation

This equipment is not designed for maritime use or for use mobile installations such as caravans, aircraft etc.




Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain(gully) in the immediate vicinity.

When disposing of the appliance, cut off the mains cable and destroy the plug. Break the door lock to prevent young children being trapped inside.


Packaging material (e.g. Films, Styrofoam, PE Bags) can be dangerous for children. There is a risk of suffocation !

Keep all packaging well away from children.

■ Installation of drain hose

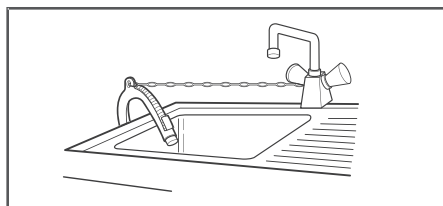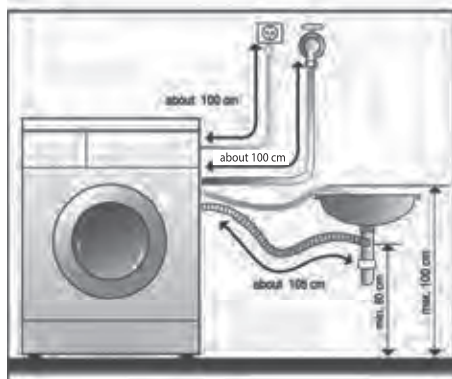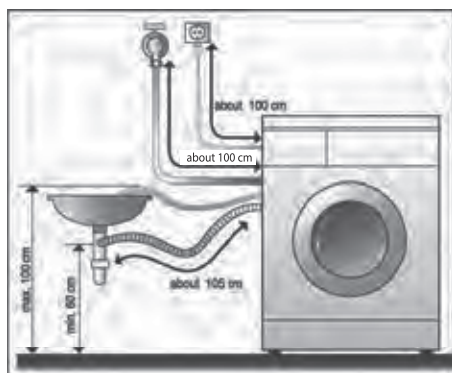

- When installing the drain hose in the sink, secure it tightly with a string.
- Proper securing of the drain hose will protect the floor from getting wet due to water leakage.

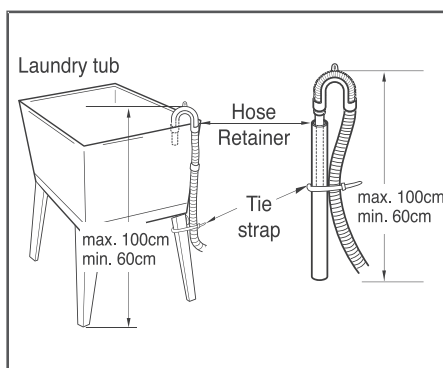


- The drain hose should not be placed higher than 100 cm above the floor.
- Proper securing of the drain hose will protect the floor from getting wet due to water leakage.
- When the drain hose is too long, do not force back into the washer. This will cause abnormal noise/leakage.

■ Level adjustment



1. Adjusting the washing machine level properly prevents excessive noise and vibration.
Install the appliance on a solid and level floor surface, preferably in a corner of the room.

NOTE Timber or suspended type flooring may contribute to excessive vibration and unbalance errors.

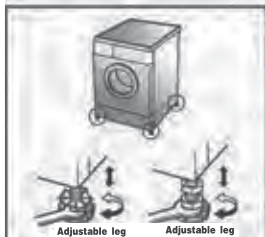

2. If the floor is uneven, adjust the adjustable leg as required. (do not insert pieces of wood etc. under the legs)
Make sure that all four legs are stable and resting on the floor and then check that the appliance is perfectly level. (use a spirit level)

※ *After the washer is levelled, tighten all lock nuts up towards the base of the washer.*

NOTE In the case the washing machine is installed on a raised platform, it must be securely fastened in order to eliminate the risk that it might fall off.



※ Diagonal Check

When pushing down the edges of the washing machine top plate diagonally, the machine should not move up and down at all. (Please, check both of two directions)

If machine rocks when pushing the machine top plate diagonally, adjust the legs again.

■ Concrete floors

- The installation surface must be clean, dry and level.
- Install washer on a flat hard floor.

■ Tile floors (Slippery floors)

- Position each leg on the Tread Mate and level the machine to suit. (Cut Tread Mate into 70x70 mm sections and stick the pieces on to the dry tile where machine is to be placed.)

※ *Tread Mate is a self adhesive material used on ladders & steps that prevents slipping.*

■ Wooden floors (Suspended floors)

- Wooden floors are particularly susceptible to vibration.
- To prevent vibration we recommend you place rubber cups under each leg, at least 15mm thick under the washer, secured to at least 2 floor beams with screws.
- If possible, install the washer in one of the corners of the room, where the floor is more stable.

※ *Insert the rubber cups to reduce vibration.*

※ *You can obtain the rubber cups (p/no.4620ER4002B) from the LG spares dept.*



Important!

- Proper placement and levelling of the washer ensure long, regular and reliable operation.
- The washer must be absolutely horizontal and stand firmly in position.
- It must not "Seesaw" across corners under load.
- The installation surface must be clean, free from floor wax and other lubricant coatings.
- Do not let the legs of the washer get wet. If legs of the washer get wet, slipping may occur.

Care before washing

■ Before the first washing

Select a cycle (Cotton 60°C, add a half load of detergent) allow the unit to wash without clothing. This will remove residues and water from the drum that may have been left during manufacturing.

■ Caring before washing

1. Care Labels

Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed.

2. Sorting

To get the best results, Sort clothes into loads that can be washed with the same wash cycle. Water temperature and spin speed and different fabrics need to be washed in different ways. Always sort dark colors from pale colors and whites. Wash separately as dye and lint transfer can occur causing discoloration of white etc. If possible, do not wash heavily soiled items with lightly soiled one.

Soil (Heavy, Normal, Light)	Separate clothes according to amount of soil.
Color (White, Lights, Darks)	Separate white fabrics from colored fabrics.
Lint (Lint producers, Collectors)	Wash lint producers and lint collectors separately.

3. Caring before loading

- Combine large and small items in a load. Load large items first. Large items should not be more than half the total wash load.

Do not wash single items. This may cause an out-of-balance load. Add one or two similar items.




- Check all pockets to make sure that they are empty. Items such as nails, hair clip, matches, pens, coins and keys can damage both your washer and your clothes.



- Pre treat dirt and stains by brushing a little detergent dissolved in water onto stains like collars and cuffs to help shift dirt.



- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.

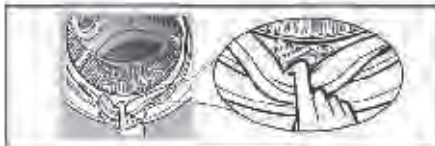

- Check the folds of the flexible gasket (gray) and remove any small articles, if any.
- Check inside of the drum and remove any left items in it for next wash cycle.




- Remove any clothing or items on the flexible gasket to prevent clothing and the gasket damages.

A dding detergent

■ Adding detergent and fabric softener

1. The Dispenser Drawer

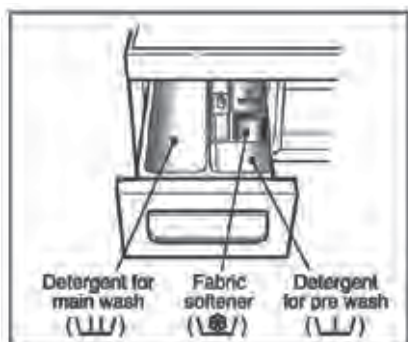


- Main wash only →
- Pre Wash + Main Wash → •

⚠ WARNING

Keep all washing detergents away from children as there is danger of poisoning. Too much detergent, bleach or softener may cause an overflow. Be sure to use the appropriate amount of detergent.

2. Adding Fabric Softener

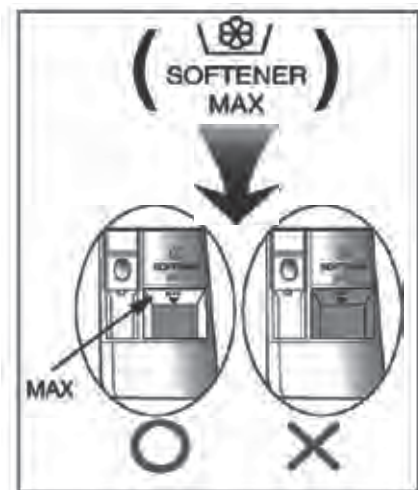

- Do not exceed the maximum fill line. Close the dispenser drawer slowly. Overfilling can cause early dispensing of the fabric softener which could stain clothes.
- Do not leave the fabric softener in the detergent drawer for more than 2 days. (Fabric softener could harden)
- Softener will be automatically added during the last rinse cycle.
- Do not open the drawer when water is supplied.
- Solvents(benzene etc) are not allowable.

NOTE Do not pour fabric softener directly on the cloths

A dding detergent

3. Detergent dosage

- The detergent should be used according to the instruction of the detergent manufacturer.
- If too much detergent is used, too many suds can occur and this will decrease the washing result or cause heavy load to the motor.
- It is recommended that you use powdered detergent for best results.
- If you wish to use liquid detergent follow guidelines provided by the detergent manufacturer.
- You can pour liquid detergent directly in to the main detergent drawer if you are starting the cycle immediately.
- Please do not use liquid detergent if you are using 'Delay end' as the liquid may harden, or if you have selected 'Pre-Wash'.
- ※ If suds occur too much, please reduce the detergent amount.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.

⚠ WARNING

Do not let the detergent harden.
Doing so may lead to blockages, poor rinse performance or bad odor.

NOTE

- Full load : according to manufacturer's recommendation.
- Part load : 3/4 of the normal amount.
- Minimum load : 1/2 of full load.


- Detergent is flushed from the dispenser at the beginning of the cycle.

4. Adding water softener




- A water softener, such as Anti limescale can be used to cut down on the use of detergent in extremely hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.
- Use the quantity of detergent as for soft water.

5. Using the Tablets

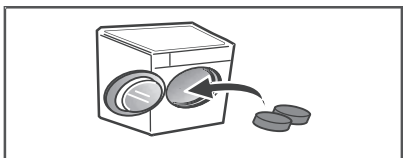

- 1) Open the door and put tablets into the drum.

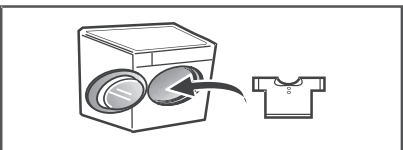

- 2) Load the laundry into the drum and close the door.

■ Recommended courses according to the laundry type

Program	Description	Fabric Type	Proper Temp.	Maximum Load
Cotton ผ้าฝ้าย	Provides better performance by combining various drum motions.	Coloured fast garments (shirts, night-dresses, pajamas, etc.) and normally soiled cotton load (underwear).	40 °C (Cold to 95 °C)	Rating
Cotton+ ผ้าฝ้าย+ □	Provides optimised washing performance for large amount of laundry with less energy consumption.		60 °C (Cold to 60 °C)	
Easy Care ผ้าที่ไม่ต้องรีด	Suitable for casual shirts that do not need ironing after washing.	Polyamide, acrylic, polyester.	40 °C (Cold to 60 °C)	3 kg
Mix ผ้าทั่วไป	Enables various fabrics to be washed simultaneously.	Various kind of fabrics except special garments (silk/delicate, sports wear, dark clothes, wool, duvet/curtains).	40 °C (Cold to 40 °C)	
Allergy Care ลดการเกิดภูมิแพ้	Helps to remove allergens such as house mites, pollen and cat fur.	Cotton, underwear, pillow covers, bed sheets, baby wear.	60 °C	
Duvet ชุดเครื่องนอน	For large items such as bed covers, pillows, sofa covers, etc.	Cotton bedding except special garments (delicates, wool, silk, etc.) with filling: duvets, pillows, blankets, sofa covers with light filling.	40°C (Cold to 40°C)	1 single size
Sports Wear ชุดกีฬา	Suitable for sports wear such as jogging clothes and running wear.	Coolmax, gore-tex, fleece and sympatex	40°C (Cold to 40°C)	2 kg
Baby Steam Care ซักเสื้อผ้าเด็กด้วยไอน้ำร้อน	Removes solid and protein stains, provides better rinse performance.	Lightly soiled baby wear.	60 °C	4 kg
Silent Wash ซักกลางคืน	Provides less noise and vibration and saves money by using overnight electricity.	Coloured fast garments (shirts, night-dresses, pajamas, etc.) and lightly soiled white cotton (underwear).	40 °C (Cold to 60 °C)	4.5 kg
Dark Wash ผ้าสี	Helps to prevent decolorization (Use detergent for colored fabrics).	Dark garments made from cotton or mixed fabrics.	20 °C (Cold to 40 °C)	2 kg
Quick 30 ซักด่วน 30 นาที	Provides fast washing time for small loads and lightly soiled clothes.	Lightly soiled colour laundry.	20 °C (Cold to 40 °C)	
Gentle Care ถนอมผ้า	For hand and machine washable delicate clothes such as washable wool, lingerie, dresses etc. (Use detergent for machine washable woolsens).	Wool, hand washable clothes, delicate, easily damaged laundry.	20 °C (Cold to 30 °C)	1.5 kg
Stain Care ผ้าสกปรกมาก	Wash off several kinds of stain such as wine, juice, dirt, etc. (Water temperature is increased step by step for washing various stains).	Cotton blended fabrics, no delicate clothes.	40 °C (30°C to 60°C)	3 kg
Download Cycle ดาวน์โหลดโปรแกรมซัก	For downloadable programs. If you did not download any program, the default is Rinse+Spin.			

* Water Temperature: Select the water temperature to the wash cycles.

Always follow garment manufacturer's care label or instructions when laundering.

* Notes: Neutral detergent is recommended.

**Extra Options


Program	Time Save	Intensive	Rinse+	Delay End	Crease Care	Pre Wash
Cotton (ผ้าฝ้าย)	•	•	•	•	•	•
Cotton+ (ผ้าฝ้าย+ □)	•	•	•	•	•	•
Easy Care (ผ้าที่ไม่ค่อยซัก)	•	•	•	•	•	•
Mix (ผ้าทั่วไป)	•	•	•	•	•	•
Allergy Care (อาการแพ้สิ่งสกปรก)	•	•	•	•	•	•
Baby Steam Care (ซักผ้าสำหรับเด็กทารก)	•	•	•	•	•	•
Silent Wash (ซักแบบเงียบ)	•	•	•	•	•	•
Duvet (ซักผ้าห่ม)	•	•	•	•	•	•
Sports Wear (ชุดกีฬา)	•	•	•	•	•	•
Dark Wash (ผ้าสีเข้ม)	•	•	•	•	•	•
Quick 30 (ซักเร็ว 30 นาที)	•	•	•	•	•	•
Gentle Care (นุ่มนวล)	•	•	•	•	•	•
Stain Care (กำจัดคราบ)	•	•	•	•	•	•

** Extra Options selection can vary depending on different models.

How to use washer

*Part can be different according to different models.

Control Panel

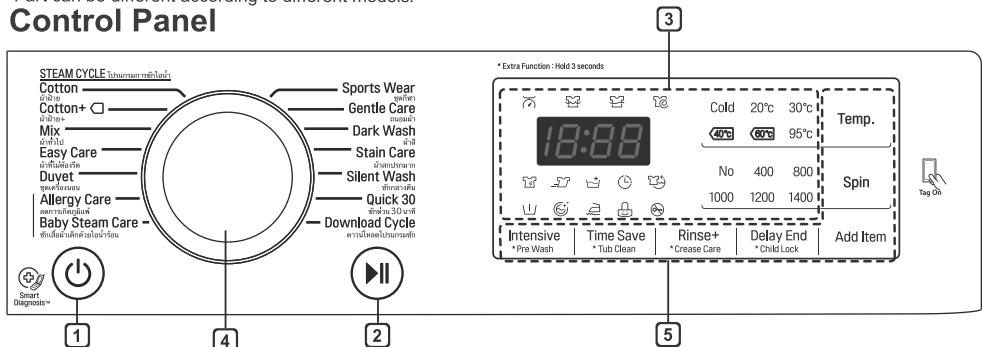

1 Power Button

- Press the **Power** button to turn the washing machine on.

2 Start/Pause Button

- This **Start/Pause** button is used to start the wash cycle or pause the wash cycle.
- If a temporary stop of the wash cycle is needed, press the **Start/Pause** button.

3 Display

- The display shows the settings, estimated time remaining, options, and status messages. When the product is turned on, the default settings in the display will illuminate.
- The display shows estimate time remaining. While the size of the load is being calculated automatically, blinking [] or 'Detecting' appears.
- The RPM may differ depending on the models.

4 Program Knob

- Programs are available according to the laundry type.
- The lamp will light up to indicate the selected program.

5 Options

- This allows you to select an additional program and will light when selected.
- Use these buttons to select the desired program options for the selected cycle.

Beep On / Off


- Press the **Power** button.
- Press the **Start/Pause** button.
- Press and hold the **Temp.** and **Delay End** button simultaneously for 3 seconds to set the Beep on/off function.

NOTE

- Once the Beep on/off function is set, the setting is memorized even after the power is turned off.
- If you want to turn the Beeper off, simply repeat this process.

How to use washer

*Part can be different according to different models.

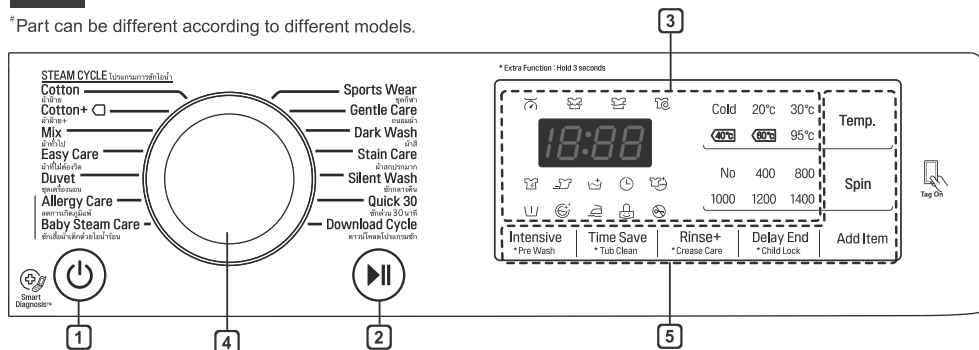

(1) Button : Power

(2) Button : Start / Pause

(3) Display

(4) Dial : Program

(5) Options

Power



1. Power

- Press the Power button to turn the washing machine ON/OFF.
- To cancel the Time Delay function, the power button should be pressed.

2. Initial Program


- When the Power button is pressed, the washer is ready for Cotton program and the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

■ Initial program

[FC1409S4W, FC1408S4W]

Cotton Program/Main Wash/
Normal Rinse/1400rpm/40°C

Program

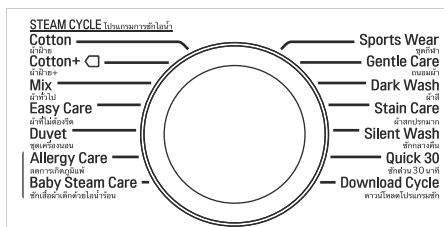

- 14 programs are available according to the laundry type.

- Lamp will light up to indicate selected program.

- When **Start/Pause** button is pressed, the Cotton program is automatically selected.

- By turning the Program dial, the program is selected in order of

“Cotton (ผ้าฝ้าย)-Cotton+ (ผ้าฝ้าย+)- Mix (ผ้าทั่วไป)-Easy Care (ผ้าไม่ต้องรีด)-Duvet (ชุดเครื่องนอน)-Allergy Care (ลดการเกิดภูมิแพ้)-Baby Steam Care (ซักเสื้อผ้าเด็กด้วยไอน้ำร้อน)-Download Cycle (ดาวน์โหลดโปรแกรมซัก)-Quick 30 (ซักด่วน 30 นาที)-Silent Wash (ซักกลางคืน)-Stain Care (ผ้าสกปรกมาก)-Dark Wash (ผ้าสี)-Gentle Care (ถนอมผ้า) -Sports Wear (ชุดกีฬา)”

Regarding to the laundry type for each program Please refer to the page 14.

How to use washer

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in Pause, the power is turned off automatically after 4 minutes approx.

Door Lock (🔒)



- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the Start/Pause button to stop the washer.
- The door can be opened after a short delay.

Detecting (🌀)



- While the "🌀" is shown in the display the machine rotates slowly and detects how much laundry is loaded in the drum. It will take a few seconds.

Option

Intensive	Time Save	Rinse+	Delay End	Add Item
*Pre Wash	*Tub Clean	*Crease Care	*Child Lock	

- By Pressing the Option Button, all Option functions may be selected.

1. Intensive (👕)

- If the laundry is heavily soiled "Intensive" option is effective.
- By selecting the intensive option, the wash time may be extended, depending on the program selected.

2. Time Save (💧)

- This option can be used to reduce the time of a wash program. It is best used on lightly soiled loads.

3. Rinse+ (👕+)

- Additional Rinse for better washing quality.

4. Delay End (🕒)

- You can set a time delay so that the washing machine will start automatically and finish after a specified time interval.

5. Add Item (👕+)

Laundry can be added or removed after the washing program is started.

1. Press the **Add Item** button when the LED is turned on.
2. Add or remove laundry.
3. Close the door and Press the **Start/Pause** button.

NOTE

- For safety reasons, the door remains locked when the water level or temperature is high. It is not possible to add laundry during this time.
- If the water temperature in the drum is high, wait until it cools down.

⚠ CAUTION

- When adding laundry, make sure to completely push it into the drum. If laundry gets stuck in the door latch hole, the rubber packing may be damaged, causing water leakage and malfunction.
- Forcing the door open may cause part damage, destruction, or safety problems.
- If you open the door while there are a lot of suds and water in the drum, the suds or water may flow, causing burn injury or wet floor.

The required lamp will light up for identification.

Pre Wash (👕)

- If the laundry is heavily soiled, the Pre Wash program is recommended (Press for about three seconds).

How to use washer

Tub Clean (☺)

Time Save

* Tub Clean

Tub Clean course can be set by pressing ***Tub Clean** (About three seconds)

When Tub Clean course is set, display “**ε c L**” .



TUB CLEAN is special cycle to clean inside of the washer. This cycle uses higher water level with higher spin speed. Perform this cycle regularly.

How to use the Tub Clean cycle:

1. Remove any clothing or items from the washer and close the door.
2. Open the dispenser drawer and add Anti limescale powder to the main wash compartment.

NOTE : Do not add any detergent to the detergent compartments. Excessive suds may generate & leak from the washer.

3. Close the dispenser drawer slowly.
4. Power On and then press and hold ***Tub Clean** for 3 seconds. then “**ε c L**” is displayed in LED.
5. Press the Start/Pause button to start.
6. After the cycle is complete, leave the door open so that moisture present inside the washer can dry.

⚠ CAUTION

If there is a small child, be careful not to leave the door open for too long.

Crease Care (☺)

- If you want to prevent creasing, the Crease Care program is recommended (Press for about three seconds).

Child Lock (☺)

Delay End

* Child Lock

If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.

- Child Lock can be set by pressing the ***Child Lock** (About three seconds)

Delay End

* Child Lock



- To deactivate Child Lock system, press ***Child Lock** again. (About three seconds)

Delay End

* Child Lock



- To change to the desired program, whilst in child lock mode.
1. Press ***Child Lock** once again. (About three seconds)
 2. Press the **Start/Pause** button.
 3. Select the desired program and press the **Start/Pause** button again.

Delay End

* Child Lock



Change the desired program



The child lock can be set at any time and it can be deactivated only by using child lock cancel process. Turning the power off and operational errors will not affect child lock.

H ow to use washer

Spin

No	400	800	Spin	FC1409S4W FC1408S4W
1000	1200	1400		

- After selecting the spin course, the spin speed can be chosen by pressing the spin button.

1. Spin selection

- Spin Speed is available according to the program as follows

[FC1409S4W, FC1408S4W]

Cotton (ผ้าฝ้าย)-Cotton+ □(ผ้าฝ้าย+ □)-
Mix (ผ้าทั่วไป)-Allergy Care (ลดการเกิดภูมิแพ้)
-Stain Care (ผ้าสกปรกมาก)-Dark Wash
(ผ้าสี)-Quick 30 (ซักด่วน 30 นาที)-Download
Cycle (ดาวน์โหลดโปรแกรมซัก)

No-400-800-1000-1200-1400

Silent Wash (ซักกลางคืน)-Easy Care
(ผ้าสกปรกมาก)-Duvet (ชุดเครื่องนอน)-Baby
Steam Care (ซักเสื้อผ้าเด็กด้วยไอน้ำร้อน)

No-400-800-1000

Sports Wear (ชุดกีฬา)-Gentle Care
(ถนอมผ้า)

No-400-800

2. No spin

- If No spin is selected, the washer stops after draining water.

The required lamp will light up for identification.

H ow to use washer

Water Temp.




- By pressing the Temp. button, the water temperature can be selected.
- **Cold**
- **20°C / 30°C / 40°C / 60°C / 95°C**
- Water temperature can be selected according to the program.

The required temperature lamp will light up for identification.

For the more detailed information, please refer to the page 14.

Delay End



Preparing washing before starting "Delay End"

- Turn on the water tap.
- Load laundry and close the door.
- Place the detergent and fabric softener in the drawer.
- How to set " Delay End "
 - Press **Power** button.
 - Turn the **Program** dial to select the program you require.
 - Press **Delay End** button and set the desired time.
 - Press the **Start/Pause** button. ("." blinks.)
- If **Delay End** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.
- Each pressing of the button advances on time delay by one hour.
- To cancel the **Delay End**, press the **Power** button.
- **Delay End** is 'expected time' from the present to the completion of washing cycle or selected process (Wash, Rinse, Spin).
- **According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.**

H ow to use washer

Display



1. Special function display

- When child lock is selected, the “**CL**” is displayed.
- When time delay is selected, it shows the remaining time to finish the selected program.

2. Self diagnosis display

- If the machine encounters a fault during operation, the associated fault will be displayed.
 - “**PE**” : Water pressure sensing error
 - “**FE**” : Problem of overfilling water
 - “**DE**” : Door is not closed
 - “**LE**” : Over load in motor
 - “**IE**” : Water inlet trouble
 - “**OE**” : Drainage trouble
 - “**UE**” : Unbalanced load
 - “**TE**” : Water temperature trouble
 - “**FF**” : Supply/Drain hose or drain pump frozen
 - “**RE**” : Water Leaks
 - “**dHE**” : Does not dry

If these error letters are displayed, please refer to the troubleshooting page and follow the guide.

3. Completion of washing

- When washing cycle is completed, “**End**” is displayed on the “*Multi display*”.

4. Time left

- During washing cycle, the remaining washing time is displayed.
- The washing time may vary by the amount of laundry, water pressure, water temperature and other washing conditions.
- If an unbalanced load is detected or if the suds removing program operates, the wash time may be extended.

Using the Tag On Function

Conveniently use the Smart Diagnosis™ to communicate with the appliance directly from a smart phone.

- The Tag On function can only be used with most smart phones equipped with the NFC (Near Field Communication) function and based on the Android OS (operating system).

Installation of the Application

- Search LG SmartThinQ application on the Google Play Store or Apple App Store from your smart phone.



Using the Application

LG SmartThinQ application allows you to use various features for your convenience.

- Cycle Download
- Smart Diagnosis™
- Tag On Cycle Set
- Laundry Stats

NOTE

- Press **[?]** in the LG SmartThinQ application for a more detailed guide on how to use the Tag On function.
- Depending on the smart phone manufacturer and Android OS version, the NFC activation process may differ. Refer to the manual of your smart phone for details.
- Because of the characteristics of NFC, if the transmission distance is too far, or if there is a metal sticker or a protective case on the phone, transmission will not be good. In some cases, NFC-equipped phones may be unable to transmit successfully.
- The content found in this manual may differ depending on the version of LG SmartThinQ application, and it may be modified without notice to users.

Download Cycle

Download new and special cycles that are not included in the basic cycles on the appliance.

Appliances that have been successfully registered can download a variety of specialty cycles specific to the appliance.


Only one cycle can be stored on the appliance at a time.

Once cycle download is completed in the appliance, the product keeps the downloaded cycle until a new cycle is downloaded.


- * Before cleaning the washer interior, unplug the electrical power cord to avoid electrical shock to avoid electrical shock hazards.
- * When disposing of the appliance, cut off the mains cable, and destroy the plug. Disable the door lock to prevent young children being trapped inside.

■ The water inlet filter


- " **IE** " error message will blink on the control panel when water does not enter the detergent drawer.
- If water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.
It is therefore a good idea to clean it from time to time.

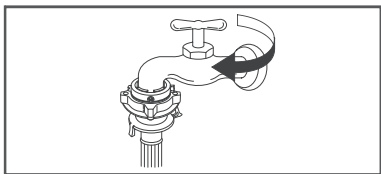


1. Turn off the water tap.

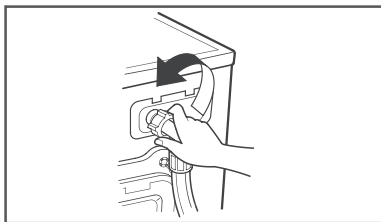

2. Unscrew the water inlet hose.

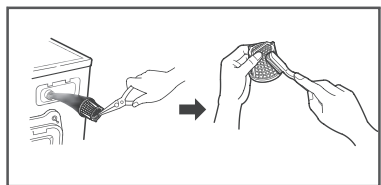

3. Clean the filter using a hard bristle brush.

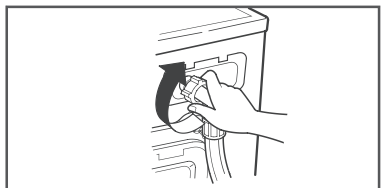

4. Tighten up the inlet hose.

■ The drain pump filter


* The drain filter collects threads and small objects left in the laundry.

Check regularly that the filter is clean to ensure smooth running of your machine.

⚠ CAUTION First drain using the drain hose and then open the pump filter to remove whatever any threads or objects.


Be careful when draining if the water is hot.

* Allow the water to cool down before cleaning the drain pump, carrying out emergency emptying or opening the door in an emergency.

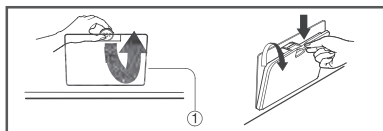


1. Open the lower cover cap (①) by using a coin.


Drain plug (②) to pull out the hose.

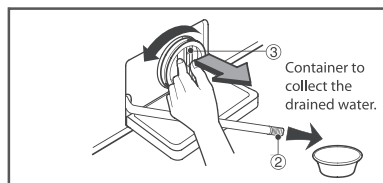


2. Unplug the drain plug (②), allowing the water to flow out. At this time use a vessel to prevent water flowing on to the floor. When water does not flow any more, turn the pump filter (③) open to the left.

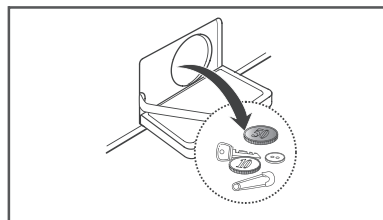

3. Remove out any foreign material from the pump filter (③).

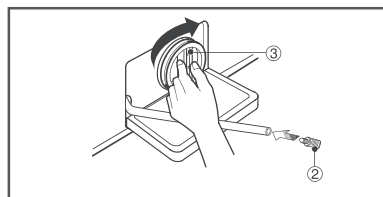


4. After cleaning, turn the pump filter (③) clockwise and insert the drain plug (②) to the original place. Close the lower cover cap.

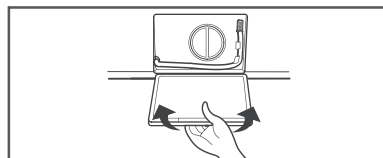


■ Dispenser drawer

- * After a while detergents and fabric softeners leave a deposit in the drawer.
- It should be cleaned from time to time with a jet of running water.
- If necessary it can be removed completely from the machine by pressing the latch downwards and by pulling it out.
- To facilitate cleaning, the upper part of the fabric softener compartment can be removed.

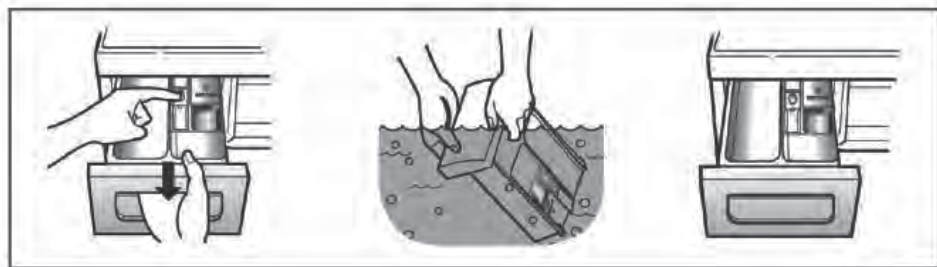

■ The drawer recess

- * Detergent can also accumulate inside the recess which should be cleaned occasionally with an old toothbrush.
- Once you have finished cleaning, replace the drawer and run a rinse cycle without laundry.

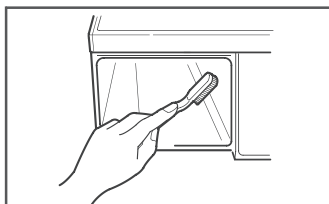

■ The washing drum

- If you live in a hard water area, limescale may continuously build up in places where it cannot be seen and thus not easily removed.
Over time the build up of scale clogs appliances, and if it is not kept in check these may have to be replaced.
- Although the washing drum is made of Stainless steel, specks of rust can be caused by small metal articles (paper clips, safety pins) which have been left in the drum.
- The washing drum should be cleaned from time to time.
- If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use.
- * Descaler may contain chemicals that may damage part of your washing machine.
- * Remove any spots with a stainless steel cleaning agent.
- * Never use steel wool.

■ Cleaning your washer

1. Exterior

Proper care of your washer can extend its life.

The outside of the machine can be cleaned with warm water and a neutral non abrasive household detergent.

Immediately wipe off any spills. Wipe with damp cloth.

Try not to hit surface with sharp objects.

* IMPORTANT: Do not use methylated spirits, diluents or similar products.

2. Interior

Dry around the washer door opening, flexible gasket and door glass.

Run washer through a complete cycle using hot water.

Repeat process if necessary.

NOTE Remove hard water deposits using only cleaners labeled as washer safe.

■ Cold condition

If the washer is stored in an area where freezing may occur or moved in freezing temperatures, follow these instructions to prevent damage to the washer:

1. Turn off water supply tap.
2. Disconnect hoses from water supply and drain water from hoses.
3. Plug electrical cord into a properly grounded electrical outlet.
4. Add 1gallon(3.8L) of nontoxic recreational vehicle(RV) antifreeze into an empty wash drum.
Close the door.
5. Set spin cycle and let washer spin for 1minute to drain out all water.
Not all of the RV antifreeze will be expelled.
6. Unplug electrical power cord, dry the drum interior, and close the door.
7. Remove dispenser drawer drain and dry excessive water from the compartments.
8. Store washer in an upright position.
9. To remove antifreeze from washer after storage, run empty washer through a complete cycle using detergent. Do not add wash load.

Troubleshooting guide

* This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately
When the machine does not function properly or does not function at all, check the following points before you contact your service provider.

Symptom	Possible Cause	Solution
Rattling and clanking noise	Foreign objects such as coins or safety pins maybe in drum or pump.	Stop washer and check drum and drain filter. If noise continues after washer is restarted, call your authorised service centre.
Thumping sound	Heavy wash loads may produce a thumping sound. This is usually normal.	If sound continues, washer is probably out of balance. Stop and redistribute wash load.
Vibrating noise	- Have all the transit bolts and packing been removed? - Are all the feet resting firmly on the ground?	If not removed during installation. Refer to Installation guide for removing transit bolts. Wash load may be unevenly distributed in drum. Stop washer and rearrange wash load.
Water leaks	- Fill hoses or drain hose are loose at tap or washer. - House drain pipes are clogged.	Check and tighten hose connections. Unclog drain pipe. Contact plumber if necessary.
Oversudsing		Too much detergent or unsuitable detergent may cause excessive foaming which may result in water leaks.
Water does not enter washer or it enters slowly	- Water supply is not adequate in area. - Water supply tap is not completely open. - Water inlet hose(s) are kinked. - The filter of the inlet hose(s) clogged.	Check another tap in the house. Fully open tap. Straighten hose. Check the filter of the inlet hose.
Water in the washer does not drain or drains slowly	- Drain hose is kinked or clogged. - The drain filter is clogged.	Clean and straighten the drain hose. Clean the drain filter

Troubleshooting guide

Symptom	Possible Cause	Solution
Washer does not start	• Electrical power cord may not be plugged in or connection may be loose. • House fuse blown, circuit breaker tripped, or a power outage has occurred. • Water supply tap is not turned on.	Make sure plug fits tightly in wall outlet. Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician. Turn on water supply tap.
Washer will not spin	• Check that the door is firmly shut.	Close the door and press the Start/Pause button. After pressing the Start/Pause button, it may take a few moments before the clothes washer begins to spin. The door must lock before spin can be achieved. Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning
Door does not open		Once machine has started, the door can not be opened for safety reasons. Check if the "Door Lock" icon is illuminated. You can safely open the door after the "Door Lock" icon turns off.
Wash cycle time delayed		The washing time may vary by the amount of laundry, water pressure, water temperature and other usage conditions. If the imbalance is detected or if the suds removing program works, the wash time shall be increased.
Fabric softener overflow	• Too much softener may cause an overflow.	Follow softener guidelines to ensure appropriate amount is used. Do not exceed the maximum fill line.
Softeners dispensed too early		Close the dispenser drawer slowly. Do not open the drawer during the wash cycle.
Dry problem	Check water supply tap.	• Do not overload. Check that the washing machine is draining properly to extract adequate water from the load. Clothes load is too small to tumble properly. Add a few towels. • Turn off water supply tap.

Troubleshooting guide

Symptoms	Reason	Solution
 	Water supply is not adequate in area.	• Check another tap in the house.
	Water supply taps are not completely open.	• Fully open tap.
	Water supply hose(s) are kinked.	• Straighten hose(s).
	The filter of the supply hose(s) are clogged.	• Check the filter of the supply hose.
 	Load is too small.	• Add 1 or 2 similar items to help balance the load.
	Load is out of balance.	• Add 1 or 2 similar items to help balance the load.
	The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (e.g. bath mat, bath robe, etc.) this system may stop spinning or even interrupt the spin cycle altogether.	• Rearrange load to allow proper spinning.
	If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.	• Rearrange load to allow proper spinning.
 	Drain hose is kinked or clogged.	• Clean and straighten the drain hose.
	The drain filter is clogged.	• Clean the drain filter.
 	Ensure door is not open.	• Close the door completely. If dE, dE1, dE2 is not released, call for service.
 	Control error.	• Unplug the power plug and call for service.
 	Water overfills due to the faulty water valve.	• Close the water tap. • Unplug the power plug. • Call for service.
 	Malfunction of water level sensor.	• Close the water tap. • Unplug the power plug. • Call for service.
 	Over load in motor.	• Allow the washing machine to stand for 30 minutes to allow the motor to cool, then restart the cycle.
 	Is supply/drain hose or drain pump frozen?	• Supply warm water into the drum and unfreeze drain hose and drain pump. Wet a towel in warm water and apply to supply hose.
 	Water leaks.	• Call for service.
 	Does not dry	• Call for service.

Troubleshooting guide

NOTE

- SMARTDIAGNOSIS™ function is available only for the products with a SMARTDIAGNOSIS™ mark. In case of a mobile phone with static option, the SMARTDIAGNOSIS™ function might not operate.

■ Using SMARTDIAGNOSIS™

- Only use this feature when instructed to do so by the call center.


The transmission sounds similar to a fax machine, and so has no meaning except to the call center.

- SMARTDIAGNOSIS™ cannot be activated if the washer does not power up.


If this happens, then troubleshooting must be done without SMARTDIAGNOSIS™.

If you experience problems with your washer, call to Customer Information Center.


Follow the call center agent's instructions, and do the following steps when requested:

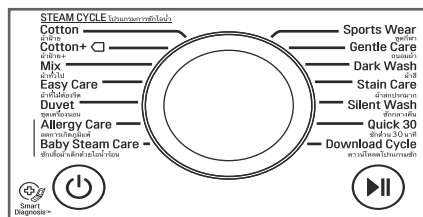

1. Press the Power button to turn on the washer. Do not press any other buttons or turn the cycle selector knob.

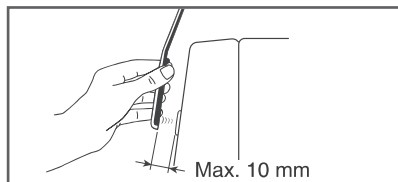

2. When instructed to do so by the call center, place the mouthpiece of your phone very close to the Power button.



3. Press and hold the "Temp." button for six seconds, while holding the phone mouthpiece to the icon or Power button.
4. Keep the phone in place until the tone transmission has finished. This takes about 6 seconds, and the display will count down the time.
 - For best results, do not move the phone while the tones are being transmitted.
 - If the call center agent is not able to get an accurate recording of the data, you may be asked to try again.
 - Pressing the Power button during the transmission will shut off the SMARTDIAGNOSIS™.
5. Once the countdown is over and the tones have stopped, resume your conversation with the call center agent, who will then be able to assist you using the information transmitted for analysis at the call to Customer Information Center.

Memo



MFL67584586

คู่มือผู้ใช้ เครื่องซักผ้า

โปรดอ่านคู่มือนี้อย่างละเอียดก่อนใช้งานเครื่องซักผ้าของคุณ
และเก็บคู่มือนี้ไว้เพื่ออ้างอิงในอนาคต

FC1408S4W
FC1409S4W



MFL67584586



มอก. 1463-2556

www.lg.com

P/NO : MFL67584586

Rev. No.: 00_01/06/2019

ลิขสิทธิ์ © 2018 LG Electronics Inc. สงวนลิขสิทธิ์ทั้งหมด

คุณสมบัติของผลิตภัณฑ์



- ป้องกันรอยยับ
ด้วยการหมุนสลับของถังซักจึงช่วยลดรอยยับของผ้า



- เครื่องทำความร้อนในตัว
เครื่องทำความร้อนภายในจะทำให้ผ้าร้อนจนถึงอุณหภูมิที่เหมาะสมกับโปรแกรมซักที่เลือกโดยอัตโนมัติ



- ประหยัดกว่าด้วยระบบซักรีดอัจฉริยะ
ระบบซักรีดอัจฉริยะจะตรวจวัดปริมาณผ้า กำหนดอุณหภูมิ น้ำ ระดับน้ำ และเวลาซักที่เหมาะสมเพื่อประหยัดพลังงานและการใช้น้ำ



- ป้องกันเด็ก
ป้องกันเด็กจะป้องกันมิให้เด็กเปลี่ยนการตั้งค่าหากเด็กกดปุ่มในขณะที่เครื่องกำลังทำงาน



- เสียเบาะและระบบควบคุมความเร็ว
การตรวจวัดปริมาณและความสมดุลของผ้าทำให้สามารถกระจายผ้าได้อย่างสมดุล ซึ่งจะช่วยลดระดับเสียงในขณะที่หมุน



- เริ่มต้นใหม่อัตโนมัติ
เริ่มต้นใหม่อัตโนมัติทำให้โปรแกรมซักเริ่มต้นใหม่โดยอัตโนมัติในกรณีที่ไฟฟ้าขัดข้อง โดยจะเริ่มต้นในจุดที่หยุดทำงาน



- การเคลื่อนไหว 6 แบบ
เครื่องซักผ้ามีรูปแบบการเคลื่อนไหวของถังซักอยู่หลายแบบ โดยจะใช้รูปแบบการเคลื่อนไหวต่างๆ รวมกันตามโปรแกรมซักที่เลือก เมื่อรวมกับระบบควบคุมความเร็วในการหมุนและถังซักที่หมุนได้ทั้งซ้ายและขวาจึงทำให้ประสิทธิภาพการซักของเครื่องนี้พัฒนาขึ้นมาก ซึ่งทำให้ซักผ้าได้อย่างสมบูรณ์แบบทุกครั้ง



- ระบบขับเคลื่อนโดยตรง
มอเตอร์ DC ไร้แปรงรูล่าสุดนี้จะขับเคลื่อน ถังซักโดยไม่ต้องใช้สายพานและรอก

* คู่มือฉบับนี้อาจมีภาพประกอบหรือเนื้อหาที่แตกต่างจากรุ่นที่คุณซื้อ

* คู่มือฉบับนี้อาจมีการแก้ไขโดยผู้ผลิต

เนื้อหา

ข้อมูลความปลอดภัย	3
ข้อมูลจำเพาะ	4
การติดตั้ง	5
การดูแลก่อนซัก	11
การใส่น้ำยาซักผ้า	12
ฟังก์ชัน	14
วิธีใช้เครื่องซักผ้า	15
ฟังก์ชันสมาร์ท	22
การดูแลรักษา	23
แนวทางการแก้ปัญหา	27

ข้อมูลความปลอดภัย

อ่านคำแนะนำและคำอธิบายทั้งหมดเกี่ยวกับการติดตั้งก่อนใช้งาน



คำเตือน

เพื่อความปลอดภัยของคุณ คุณต้องทำตามคำแนะนำในคู่มือนี้เพื่อลดความเสี่ยงในการเกิดเพลิงไหม้ การระเบิด หรือไฟฟ้าช็อต รวมถึงป้องกันการเกิดความเสียหายกับทรัพย์สิน การบาดเจ็บ หรือการเสียชีวิต

คำเตือน

คำแนะนำด้านความปลอดภัยที่สำคัญ

เพื่อลดความเสี่ยงในการเกิดเพลิงไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บในขณะที่ใช้งานเครื่องซักผ้านี้ ควรทำการป้องกันพื้นฐานดังต่อไปนี้:

- ตรวจสอบความเสียหายภายนอกก่อนทำการติดตั้ง หากพบความเสียหาย อย่าทำการติดตั้ง
- อย่าติดตั้งหรือเปลี่ยนชิ้นส่วนใดๆ ของเครื่องซักผ้า หรือทำการซ่อมบำรุงเองเว้นเป็นการทำตามคำแนะนำในการบำรุงรักษาของผู้ใช้หรือคำแนะนำในการซ่อมแซมโดยผู้ใช้ที่เผยแพร่ โดยที่คุณมีความเข้าใจและมีทักษะเพียงพอในการดำเนินการดังกล่าว การใช้งานเครื่องนี้ด้วยอะไหล่ที่เปลี่ยนอย่างไม่ถูกต้องอาจทำให้เกิดเพลิงไหม้หรือไฟฟ้าช็อตได้
- รักษาความสะอาดบริเวณด้านล่างและรอบๆ เครื่องใช้ไฟฟ้าของคุณให้มีวัตถุติดไฟได้เช่นขุยผ้า กระดาษ ผ้าขี้ริ้ว สารเคมี ฯลฯ การใช้งานโดยมีวัตถุดังกล่าวอยู่รอบเครื่องอาจทำให้เกิดการระเบิดหรือเพลิงไหม้ได้
- ต้องทำการกักกันดูแลอย่างใกล้ชิดหากเด็กเป็นผู้ใช้งานหรืออยู่ใกล้เครื่องใช้ไฟฟ้านี้ อย่าให้เด็กเล่นกับ หรือในเครื่องใช้ไฟฟ้านี้หรือเครื่องใช้ไฟฟ้าอื่นๆ
- มีโอกาสที่เด็กอาจจมน้ำในถังซักได้
- อย่าให้สิ่งของขนาดเล็กเข้าไปใกล้เครื่องใช้ไฟฟ้านี้
- อย่าเปิดประตูเครื่องซักผ้านี้ทิ้งไว้ ประตูที่เด้งค้างอยู่อาจทำให้เด็กอยากโหนประตูหรือเข้าไปเล่นข้างในเครื่องซักผ้า
- อย่าย้ายมือเข้าไปในเครื่องซักผ้าในขณะที่เครื่องกำลังเคลื่อนไหว ให้รอนจนกว่าถังซักจะหยุดสนิท
- แม้แต่การหมุนที่ความเร็วต่ำก็อาจทำให้เกิดการบาดเจ็บได้
- กระบวนการซักผ้าอาจทำให้คุณสัมผัสกับไฟของผ้าเสื่อมลง หลีกเลี่ยงผลิตภัณฑ์ดังกล่าวโดยการปฏิบัติตามคำแนะนำในการดูแลและทำความสะอาดผ้าโดยผู้ผลิต
- อย่าซักหรืออบแห้งเสื้อผ้าที่ผ่านการทำความสะอาด ล้างด้วย แช่ใน หรือต้มด้วยสารไวไฟหรือสารที่ระเหยได้ (เช่นโซ โนมัน สีก โซลิน สารชนิดคราน้ำมัน น้ำมันซักผ้าแห้ง น้ำมันก๊าด ฯลฯ) เนื่องจากผ้าอาจลุกไหม้หรือระเบิดได้ หลังจากการอบซักเสร็จสิ้นอาจมีน้ำมันตกค้างอยู่ในถังซักซึ่งอาจทำให้เกิดเพลิงไหม้ในขณะอบแห้ง ดังนั้นอย่าซักเสื้อผ้าที่เปื้อนน้ำมัน
- อย่าเปิดประตูเครื่องซักผ้าโดยแรงหรือพยายามไขแรงเปิดประตูในขณะที่ล็อกอยู่
- เนื่องจากอาจทำให้เครื่องซักผ้าเสียหายได้
- เมื่อเครื่องซักผ้ากำลังใช้อุณหภูมิที่สูง ประตูหน้าอาจจะร้อนมาก อย่าสัมผัสมัน
- ลดความเสี่ยงในการเกิดไฟฟ้าช็อตได้โดยการถอดปลั๊กเครื่องใช้ไฟฟ้านี้จากแหล่ง จ่ายไฟหรือตัดเครื่องซักผ้าออกจากแผงควบคุมไฟฟ้าในบ้าน โดยการถอดฟิวส์หรือสวิตช์ตัววงจรไฟฟ้าในที่นี้จะทำการซ่อมแซมหรือทำความสะอาด
- ในการถอดปลั๊ก อย่าถอดโดยการดึงที่สายไฟ
- มิฉะนั้นสายไฟอาจเกิดความเสียหายได้
- อย่าพยายามไขเครื่องใช้ไฟฟ้านี้ในขณะที่มีความเสียหาย ทำงานผิดพลาด ยังประกอบไม่สมบูรณ์ หรือมีส่วนที่ขาดหายหรือเสียหาย รวมถึงสายไฟหรือปลั๊กที่เสียหาย
- การใช้งานในขณะที่ปลั๊กเสียหายอาจทำให้เกิดไฟฟ้าช็อตได้
- ถอดปลั๊กออกก่อนที่จะกำจัดเครื่องซักผ้าเก่า ทำให้ปลั๊กใช้งานไม่ได้ ตัดสายไฟที่ด้านหลังเครื่องใช้ไฟฟ้าเพื่อป้องกันการใช้งานอย่างไม่ถูกต้อง
- หากผลิตภัณฑ์เคยจมน้ำ โปรดติดต่อศูนย์บริการ ความเสี่ยงในการเกิดไฟฟ้าช็อตและเพลิงไหม้
- ในขณะที่ประตูเครื่องซักผ้าเปิดอยู่ อย่ากดประตูลงแรงเกินไป
- เนื่องจากอาจทำให้เครื่องซักผ้าล้มลงได้

เก็บคำแนะนำเหล่านี้ไว้

คำแนะนำในการต่อสายดิน


เครื่องใช้ไฟฟ้านี้จำเป็นต้องต่อสายดิน ในกรณีที่มีการทำงานผิดพลาดหรือเสียหาย การต่อสายดินจะช่วยลดความเสี่ยงในการเกิดไฟฟ้าช็อตโดยการสร้างเส้นทางที่ต้านทานกระแสไฟฟ้าน้อยที่สุด เครื่องใช้ไฟฟ้านี้มาพร้อมกับสายไฟที่มีสายดินและปลั๊กสายดิน ปลั๊กนี้ต้องเสียบเข้ากับเต้ารับที่เหมาะสม ซึ่งต้องมีการติดตั้งอย่างถูกต้องและต่อสายดินแล้วตามกฎระเบียบท้องถิ่น

- อย่าใช้อะแดปเตอร์หรือทำให้ปลั๊กสายดินใช้งานไม่ได้
- หากคุณไม่มีเต้ารับที่เหมาะสม โปรดติดต่อช่างไฟฟ้า

คำเตือน

การเชื่อมต่อกับสายดินอย่างไม่ถูกต้องอาจทำให้เกิดไฟฟ้าช็อตได้ตรวจสอบกับช่างไฟฟ้าหรือช่างที่มีคุณสมบัติเหมาะสมหากคุณไม่แน่ใจเกี่ยวกับปลั๊กไฟที่มาพร้อมกับเครื่องใช้ไฟฟ้านี้หากปลั๊กไฟไม่ตรงกับขนาดของเต้ารับให้ช่างไฟฟ้าที่มีคุณสมบัติที่เหมาะสมติดตั้งเต้ารับที่เหมาะสมเพื่อให้เครื่องใช้ไฟฟ้าของคุณปลอดภัยอย่างเหมาะสม ห้ามดัดแปลงปลั๊กไฟไม่มาพร้อมกับกล่องปลั๊ก หากปลั๊กไฟไม่พอดีกับขนาดของเต้ารับ ให้ช่างไฟฟ้าที่มีคุณสมบัติที่เหมาะสมติดตั้งเต้ารับที่เหมาะสม

ข้อมูลจำเพาะ

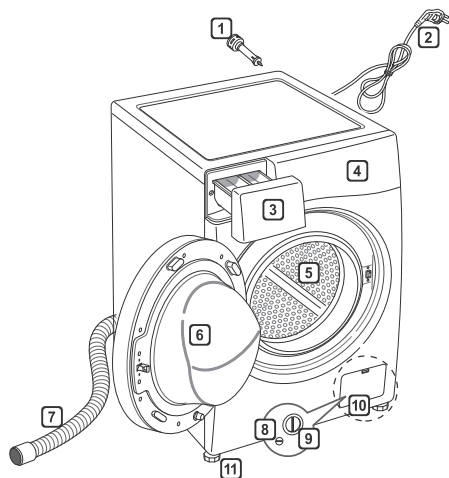


- 1 สลักเกลียวขนส่ง
- 2 ปลั๊กไฟ
- 3 ล้นชัก*
- 4 แผงควบคุม
- 5 ถังซัก
- 6 ประตู*
- 7 ท่อระบายน้ำ
- 8 จุกทางระบาย
- 9 ฟیلเตอร์ปั๊มระบาย
- 10 ฝาปิด
- 11 ขาปรับระดับ

- ชื่อ : เครื่องซักผ้าฝาหน้า
- แหล่งพลังงาน : 220V ~, 50Hz
- ขนาด : 600 มม. (ก.) x 560 มม. (ล.) x 850 มม. (ส.)
- น้ำหนัก/กำลังไฟฟ้า : 62 กิโลกรัม/2000W
- ความจุการซัก : 9.0 กก. [FC1409S4W]
8.0 กก. [FC1408S4W]
- ความเร็วการหมุน : No/400/800/1000/1200/1400:[FC1409S4W, FC1408S4W]
- แรงดันที่อนุญาต : 100-1000kPa (1.0-10kgf/cm²)

-รูปลักษณ์หรือข้อมูลจำเพาะอาจแตกต่างกันไปโดยไม่มีการแจ้งให้ทราบ
เพื่อปรับปรุงคุณภาพของผลิตภัณฑ์

อุปกรณ์เสริม



ท่อน้ำเข้า*(1 ชิ้น)



ประแจ (1 ชิ้น)

* ชิ้นส่วนอาจแตกต่างกันไปในแต่ละรุ่น

การติดตั้ง



ติดตั้งหรือจัดเก็บไว้ในบริเวณที่ไม่ต้องรับอุณหภูมิต่ำกว่าจุดเยือกแข็งหรือสภาพอากาศภายนอก ต่อเครื่องซักผ้าเข้ากับสายดินอย่างถูกต้องเพื่อปฏิบัติตามกฎระเบียบท้องถิ่นทุกข้อ ช่องเปิดที่ฐานจะต้องไม่ถูกพรมปิดกั้นในขณะที่ติดตั้งเครื่องซักผ้าบนพื้นที่ปูพรม ในประเทศที่มีแมลงสาปหรือสัตว์ประเภทหนูชุกชุมเป็นพิเศษ ควรรักษาความสะอาดของเครื่องใช้ไฟฟ้าและบริเวณโดยรอบให้สะอาดอยู่ตลอดเวลา ความเสียหายที่เกิดจากแมลงสาปหรือสัตว์ประเภทหนูจะไม่ใช่ภายใต้ ความคุ้มครองของการรับประกันเครื่องใช้ไฟฟ้า

■ สลักเกลียวขนส่ง

เครื่องใช้ไฟฟ้านี้มีสลักเกลียวขนส่งเพื่อป้องกันความเสียหายภายในเครื่องในขณะที่ทำการขนส่ง

- ต้องนำวัสดุหีบห่อและสลักเกลียวขนส่งออกก่อนที่จะใช้งานเครื่อง


■ การถอดสลักเกลียวขนส่ง

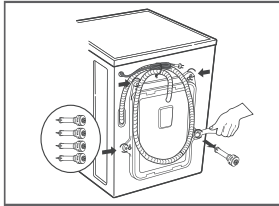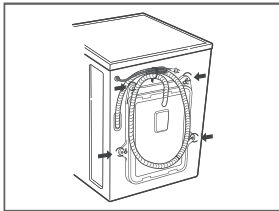

1. สลักเกลียวพิเศษ 4 ตัว จะถูกล็อกเพื่อป้องกันความเสียหายในขณะที่ทำการขนส่ง ถอดสลักเกลียวและจุกยางออกให้หมดก่อนที่จะใช้งานเครื่องซักผ้า
- หากไม่ถอดออกอาจจะทำให้มีการสั่นสะเทือนอย่างรุนแรงเสียงดัง และเกิดการทำงานผิดพลาด
2. ขันสลัก 4 ตัวออกด้วยประแจที่มาพร้อมกับผลิตภัณฑ์
3. ถอดสลักเกลียว 4 ตัว และจุกยางออกโดยการหมุนจุกยางเล็กน้อย เก็บรักษาสลักเกลียว 4 ตัว และประแจไว้เพื่อใช้งานในอนาคต
- ทุกครั้งที่ทำการเคลื่อนย้ายเครื่องใช้ไฟฟ้านี้ จะต้องใส่สลักเกลียวขนส่ง
4. ปิดรูด้วยฝาปิดที่มาพร้อมกับผลิตภัณฑ์

การติดตั้ง

■ ข้อกำหนดด้านสถานที่ติดตั้ง

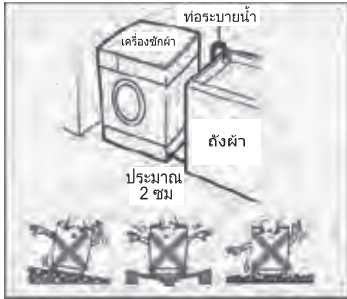

พื้นได้ระดับ:

ความลาดเอียงของพื้นภายใต้เครื่องซักผ้าต้องไม่เกิน 1°

เต้ารับ:

จะต้องอยู่ภายใน 1.5 เมตรทางด้านข้างของตำแหน่งเครื่องใช้ไฟฟ้า
อย่าต่อเครื่องใช้ไฟฟ้ามากกว่าหนึ่งเครื่องกับเต้ารับดังกล่าว

ระยะห่างเพิ่มเติม:

สำหรับผนัง ประตู และพื้นต้องมีระยะห่าง

(10 ซม.: หลัง / 2 ซม.: ด้านขวาและซ้าย)

อย่าวางหรือเก็บผลิตภัณฑ์ซักผ้าบนเครื่องซักผ้า

เนื่องจากอาจสร้างความเสียหายให้กับผิวหรือแผงควบคุม

■ การจัดตำแหน่ง

ติดตั้งเครื่องซักผ้าบนพื้นที่เรียบและแข็ง

ตรวจสอบให้แน่ใจว่าไม่มีสิ่งใดกีดขวางช่องทางระบายอากาศของ เครื่องซักผ้าอย่างเช่นพรม ฯลฯ

- อย่าแก้ไขความไม่เรียบของพื้นโดยใช้เศษไม้ แผ่นกระดาษ หรือวัสดุอื่นๆ มารองข้างใต้เครื่องซักผ้า
- หากไม่สามารถหลีกเลี่ยงการติดตั้ง เครื่องซักผ้าถัดจากเตาแก๊สหรือเตา
ถ่าน จะต้องติดตั้งแผ่นฉนวน (80x60 ซม.) ที่หุ้มด้วยแผ่นอลูมิเนียมฟอยล์
ในด้านที่ติดกับเตาโดยใส่ให้ขึ้นระหว่างเตากับเครื่องใช้ไฟฟ้า
- ต้องไม่ติดตั้งเครื่องซักผ้าในห้องที่อุณหภูมิสามารถลดลงต่ำกว่า 0°C
- โปรดทำให้แน่ใจว่าติดตั้งเครื่องซักผ้าให้มีพื้นที่เพียงพอสำหรับข้างให้เข้าไปซ่อมในกรณีที่เครื่องเสีย
- เมื่อติดตั้งเครื่องซักผ้าแล้ว ให้ปรับขาปรับระดับทั้งสี่ด้วยประแจ สลัก เกสียขนสงที่มาพร้อมกับผลิตภัณฑ์เพื่อทำ
ใจว่าเครื่องใช้ไฟฟ้าตั้งอย่างมั่นคงและมีพื้นที่ว่างระหว่างด้านบนของเครื่องซักผ้าและ
ด้านล่างของหน้าเคาเตอร์ด้านบนอยู่ประมาณ 20 มม.

⚠ คำเตือน

แนะนำให้หลีกเลี่ยงการใช้รถเข็นหรือเคลื่อนย้ายเครื่องซักผ้าหลังทำการติดตั้ง

เนื่องจากอาจทำให้เครื่องซักผ้าไม่ได้ระดับ ซึ่งอาจทำให้เกิดเสียงดังและการสั่นสะเทือนมากเกินไป

การติดตั้ง

■ การเชื่อมต่อไฟฟ้า

1. อย่าใช้สายพ่วงหรืออะแดปเตอร์สองอัน
 2. หากสายไฟเสียหาย จะต้องให้ผู้ผลิตหรือเจ้าหน้าที่ซ่อมบำรุงของผู้ผลิต หรือผู้ที่มีความสัมพันธ์ที่ติดเทียมกันเปลี่ยนอะไหล่เพื่อหลีกเลี่ยงการเกิดอันตราย
 3. ถอดปลั๊กของเครื่องและปิดแหล่งจ่ายน้ำทุกครั้งหลังใช้งาน
 4. เชื่อมต่อเครื่องเข้ากับเต้ารับที่ต่อสายดินเพื่อปฏิบัติตามกฎระเบียบด้านไฟฟ้าในปัจจุบัน
 5. ต้องจัดตำแหน่งของเครื่องใช้ไฟฟ้าเพื่อให้สามารถเข้าถึงปลั๊กได้อย่างสะดวก
- การซ่อมแซมเครื่องซักผ้านี้จะต้องดำเนินการโดยผู้ที่มีความสัมพันธ์เหมาะสมเท่านั้น การซ่อมแซมโดยผู้ที่ไม่ผ่านการฝึกอบรมอาจทำให้เกิดการบาดเจ็บหรือการทำงานผิดพลาดอย่างรุนแรง ติดต่อศูนย์บริการในท้องถิ่นของคุณ
 - อย่าติดตั้งเครื่องซักผ้าของคุณในห้องที่อุณหภูมิอาจลดลงต่ำกว่าจุดเยือกแข็ง ท่อที่เป็นน้ำแข็งอาจจะระเบิดภายใต้แรงดัน ความเสียหายของของอุปกรณ์อิเล็กทรอนิกส์อาจจะไม่ทำงานในอุณหภูมิที่ต่ำกว่าจุดเยือกแข็ง
 - หากการจัดส่งอุปกรณ์อยู่ในช่วงฤดูหนาวและมีอุณหภูมิต่ำกว่าจุดเยือกแข็ง: จัดวางเครื่องซักผ้าไว้ในอุณหภูมิห้องประมาณสองสามชั่วโมงก่อนนำไปใช้งาน

⚠ ข้อควรระวัง

เครื่องใช้ไฟฟ้านี้ไม่ได้มีไว้สำหรับใช้งานโดยเด็กหรือผู้ที่มีความบกพร่องทางสติปัญญาโดยไม่มีผู้กำกับดูแล ควรดูแลเด็กเพื่อให้แน่ใจว่าเด็กจะไม่เล่นกับเครื่องใช้ไฟฟ้านี้

⚠ ข้อควรระวัง

ข้อควรระวังในการเชื่อมต่อสายไฟ

เครื่องใช้ไฟฟ้าส่วนมากจะแนะนำให้ใช้วงจรไฟฟ้า ซึ่งก็คือวงจรไฟฟ้าที่มีเต้ารับเดียวที่ส่งกระแสไฟฟ้าไปยังเครื่องใช้ไฟฟ้าชิ้นเดียวโดยที่ไม่มีเต้ารับอื่นหรือมีวงจรที่แตกออกไป ตรวจสอบหน้าข้อมูลจำเพาะในคู่มือผู้ใช้เพื่อให้ง่าย


ใช้ไฟฟ้ามากเกินไปกับเต้ารับบนผนัง เต้ารับบนผนังที่มีการใช้ไฟฟ้ามากเกินไป เต้ารับที่หลวม สายไฟพ่วง สายไฟหลุดลุ่ย ฉนวนหุ้มสายไฟที่ร้าวหรือเสียหายเป็นสิ่งที่อันตราย สภาพเหล่านี้อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้ได้ ตรวจสอบสายไฟของเครื่องใช้ไฟฟ้าของคุณเป็นระยะๆ

และหากพบว่าอาจมีความเสียหายหรือเสื่อมสภาพ ให้ถอดปลั๊กแล้วหยุดใช้งานเครื่องใช้ไฟฟ้านี้ แล้วให้เปลี่ยนด้วยอะไหล่ที่ถูกต้องจากศูนย์บริการ

ควรปกป้องสายไฟจากความรุนแรงเช่นการบิด การพับ การหนีบ การถูกประทุหมัน หรือการถูกเหยียบ ควรพิจารณาปลั๊ก เต้ารับ และจุดที่สายไฟโผล่ออกมาจากเครื่องใช้ไฟฟ้า

- เครื่องซักผ้านี้ควรใช้ชุดท่อใหม่ต่อเข้ากับท่อน้ำในบ้านและไม่ควรใช้ชุดท่อน้ำเก่า

■ การเชื่อมต่อท่อแหล่งน้ำ*

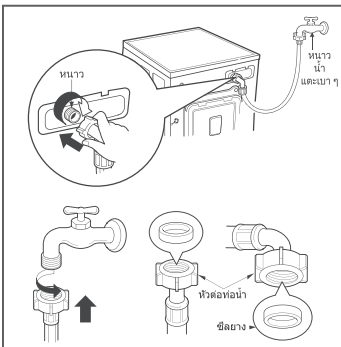

- ▶ แรงดันน้ำของแหล่งน้ำต้องอยู่ระหว่าง 100kPa และ 1000kPa (1.0-10kgf/cm²)
- ▶ อย่าปกหรือบีบเกลียวในขณะทำการต่อเข้ากับวาล์ว
- ▶ หากแรงดันของแหล่งน้ำมากกว่า 1000kPa ควรมีการติดตั้งอุปกรณ์ลดแรงดัน
- มีซีลยางสองชั้นที่มากับท่อน้ำเข้า ซึ่งมีหน้าที่ป้องกันน้ำรั่ว
- ตรวจสอบให้แน่ใจว่าการเชื่อมต่อต่อแน่นหนาเพียงพอ
- ตรวจสอบสภาพของท่อเป็นระยะๆ และเปลี่ยนท่อหากจำเป็น
- ทำให้แน่ใจว่าท่อไม่พับและไม่ถูกทับ




หมายเหตุ หลังจากติดตั้งแล้ว หากมีน้ำรั่วไหลจากท่อให้ทำตามขั้นตอนเดิมอีกครั้ง ใช้ก๊อคน้ำชนิดธรรมดาที่สุดในการเชื่อมต่อกับแหล่งจ่ายน้ำ ในกรณีที่ก๊อคน้ำเป็นทรงเหลี่ยมหรือมีขนาดใหญ่เกินไป ให้ถอดแหวนออกก่อนที่จะสวมก๊อคน้ำเข้ากับข้อต่อ

* ชิ้นส่วนอาจแตกต่างกันไปในแต่ละรุ่น

การติดตั้ง


■ ก๊อกน้ำธรรมดาที่ไม่มีเกลียวและท่อน้ำประเภทมีเกลียว

1. คลายสกรูยึดเพื่อสวมเข้ากับก๊อกน้ำ
2. ดันข้อต่อขึ้นไปจนยางกันรั่วสัมผัสกับก๊อกน้ำอย่างแน่นหนา จากนั้นให้ขันสกรูทั้ง 4 ตัว
3. ดันท่อแหล่งน้ำขึ้นไปด้านบนในแนวตั้งเพื่อย่างกันรั่วภายในท่อสามารถติดกับก๊อกน้ำอย่างสนิท จากนั้นให้ขันให้แน่นโดยการขันไปด้านขวา

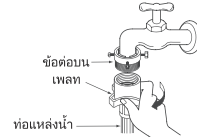



■ ก๊อกน้ำธรรมดาที่ไม่มีเกลียวและท่อน้ำเข้าชนิดวันท์ซ(รุ่นมีท่อเข้าอันเดียว)


1. คลายสกรูเชื่อมต่อด้านบน
2. ดันข้อต่อขึ้นไปจนยางกันรั่วสัมผัสกับก๊อกน้ำอย่างแน่นหนา จากนั้นให้ขันสกรูทั้ง 4 ตัว
3. ต่อกท่อแหล่งน้ำเข้ากับข้อต่อกลางแล้วดันเพลาทลง




- ในกรณีที่ เส้นผ่าศูนย์กลางของก๊อกน้ำมีขนาดใหญ่ ให้นำโค้ดเพลาทออก

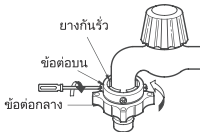

- หมุนข้อต่อกลางเพื่อมิให้น้ำรั่วไหล
- ทำให้แน่ใจว่าซิลยางอยู่ข้างในท่อ

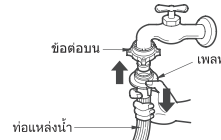

- ถอดท่อแหล่งน้ำออกจากข้อต่อกลางโดยการปิดก๊อกน้ำ จากนั้นให้ดึงท่อลงแล้วดันเพลาทลง

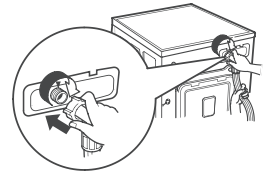

- เครื่องของคุณมาพร้อมกับการต่อน้ำเย็นเท่านั้น
- ทำให้แน่ใจว่าท่อไม่พับและไม่ถูกสิ่งใดทับ

ใช้ก๊อกน้ำแวนอน


ก๊อกแวนอน



ก๊อกต๋อยาว





ก๊อกสี่เหลี่ยม

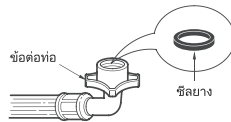

■ ก๊อกน้ำมีเกลียวและท่อน้ำเข้า

1. • มีซิลยางสองชิ้นที่มาพร้อมกับข้อต่อท่อเข้า
2. ตรวจสอบซิลยางข้างในข้อต่อท่อเข้า
3. หมุนข้อต่อท่อเข้ากับก๊อกแหล่งน้ำ

- ใช้สำหรับป้องกันมิให้น้ำรั่วไหล
- ตรวจสอบให้แน่ใจว่าการเชื่อมต่อก๊อกน้ำแน่นหนาเพียงพอ

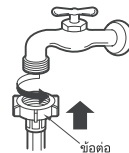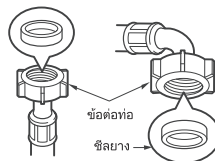




การติดตั้ง

อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานในท้องทะเลหรือใช้ในการติดตั้งแบบเคลื่อนที่เช่นในรถ เครื่องบิน ฯลฯ ปิดก๊อกน้ำหากจะไม่ใช้งานเครื่องเป็นเวลานาน (เช่นไปพักร้อน) โดยเฉพาะอย่างยิ่งหากไม่มีช่องระบายน้ำบนพื้นในบริเวณที่ติดตั้ง


ในการกำจัดเครื่องใช้ไฟฟ้านี้ให้ตัดสายไฟหลักและทำลายปลั๊กไฟเสีย ทำให้ล๊อคของประตูใช้งานไม่ได้เพื่อป้องกันมิให้เด็กเข้าไปติดอยู่ข้างใน

วัสดุบรรจุหีบห่อ (เช่นแผ่นฟิล์ม โฟม) อาจเป็นอันตรายต่อเด็ก เนื่องจากมีความเสี่ยงที่จะทำให้หายใจไม่ออก! เก็บวัสดุหีบห่อให้ห่างจากเด็ก

■ การติดตั้งท่อระบาย

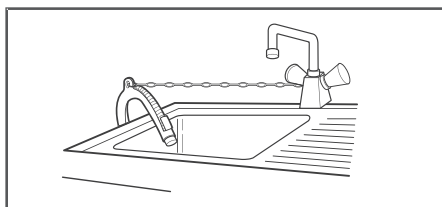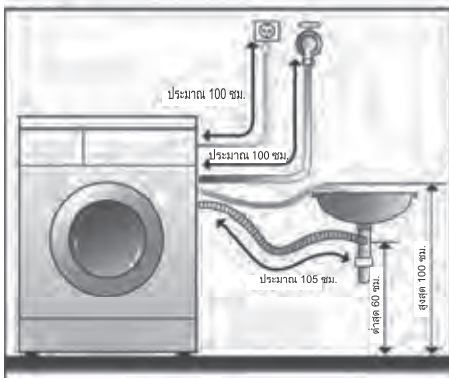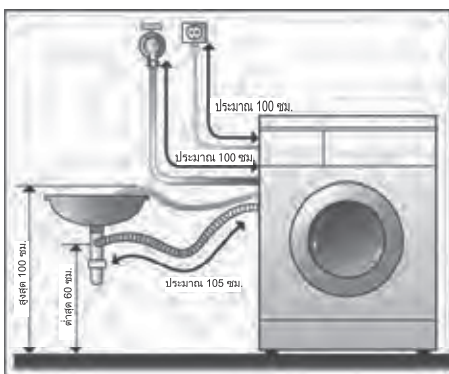

- ในการติดตั้งท่อระบาย ให้มัดให้แน่นด้วยเชือก
- การติดตั้งท่อระบายอย่างถูกต้องจะช่วยป้องกันมิให้พื้นเสียหายจากน้ำที่รั่วไหล

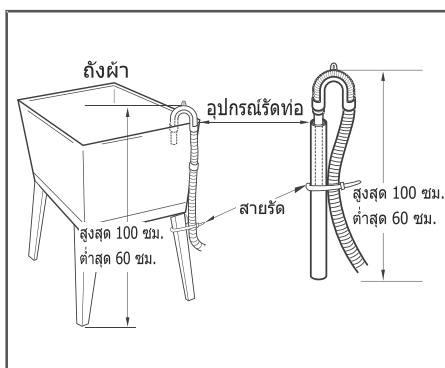

- ไม่ควรวางท่อระบายสูงจากพื้นเกินกว่า 100 ซม.
- การติดตั้งท่อระบายอย่างถูกต้องจะช่วยป้องกันมิให้พื้นเปียกน้ำที่รั่วไหล
- หากท่อระบายยาวเกินไป อย่าใช้แรงดันสไลกลับเข้าไปในเครื่องซักผ้า การทำเช่นนั้นจะทำให้เกิดเสียงที่ผิดปกติ/การรั่วไหล

■ การปรับระดับ



■ พื้นคอนกรีต

- พื้นที่ตั้งติดตั้งจะต้องสะอาด แห้ง และเรียบได้ระดับ
- ติดตั้งเครื่องซักผ้าที่เรียบและแข็ง

■ พื้นกระเบื้อง (พื้นลื่น)

- จัดวางขาตั้งแต่ละอันบนแผ่นกันลื่น แล้วปรับระดับเครื่องให้เหมาะสม (ตัดแผ่นกันลื่นเป็นชิ้นขนาด 70x70 มม. แล้วแปะลงบนพื้นกระเบื้องที่แห้งในจุดที่จะตั้งเครื่อง)
- ※ แผ่นกันลื่นคือวัสดุที่ใช้ติดบนชั้นบันไดเพื่อป้องกันการลื่น

■ พื้นไม้ (พื้นยก)

- พื้นไม้มักจะทำให้เกิดการลื่นสะเทือนมากเป็นพิเศษ
- เพื่อป้องกันการลื่นสะเทือนเราแนะนำให้คนใส่จุกยางที่มีความหนาอย่างน้อย 15 มม. ไว้ข้างใต้ขาตั้งของเครื่องซักผ้าทุกอัน และต้องใช้สกรูยึดกับตงพื้นอย่างน้อย 2 ตัว
- หากเป็นไปได้ควรติดตั้งเครื่องซักผ้าที่มุมห้อง ซึ่งเป็นจุดที่พื้นมีความมั่นคงกว่า
- ※ ใส่จุกยางเพื่อลดแรงสั่นสะเทือน
- ※ คุณสามารถซื้อจุกยาง (p/no. 4620ER4002B) ได้จากศูนย์อะไหล่ของ LG



พลา์คัญ

- การจัดวางและตั้งระดับของเครื่องซักผ้าอย่างเหมาะสมจะช่วยให้สามารถใช้งานได้อย่างยาวนานและเสถียร
- เครื่องซักผ้าจะต้องได้ระดับแนวระนาบและตั้งอยู่อย่างมั่นคง
- เครื่องจะต้องไม่โยกเยกในแนวทแยงในขณะที่มีผ้า
- พื้นที่ตั้งติดตั้งจะต้องสะอาด ไม่มีแว็กซ์พื้นหรือน้ำยาเคลือบพื้นที่ทำให้พื้นลื่นอื่นๆ
- อย่าให้ขาของเครื่องซักผ้าเบียด หากขาของเครื่องซักผ้าเบียด อาจจะทำให้เครื่องไถลลื่นได้

การดูแลก่อนซัก

■ ก่อนที่จะซักครั้งแรก

เลือกโปรแกรมซัก (ผ้าฝ้าย 60°C และใส่น้ำยาซักผ้าสำหรับผ้าเครื่องดัง) แล้วทำการซักโดยไม่มีเสื้อผ้าในเครื่อง การทำเช่นนี้จะขจัดสิ่งตกค้างต่างๆ และนำจากถังซักที่อาจตกค้างในระหว่างการผลิต

■ การดูแลก่อนซัก

1. ป้ายการดูแลรักษา

ตรวจสอบป้ายการดูแลรักษานบนเสื้อผ้าของคุณ ซึ่งจะบอกถึงชนิดของผ้าและวิธีการซักทำความสะอาดที่เหมาะสม

2. การแยกผ้า

เพื่อให้ผลลัพธ์การซักดีที่สุด ควรแยกผ้าเป็นกลุ่มที่สามารถใช้โปรแกรมเดียวกันซักได้

ชนิดผ้าที่แตกต่างกันจะต้องใช้อุณหภูมิและความเร็วในการหมุนที่แตกต่างกัน

ควรแยกผ้าสีเข้มออกจากผ้าสีอ่อนและผ้าสีขาวทุกครั้ง ควรซักแยกจากกัน

เนื่องจากสีผ้าอาจตกและขยู่ผ้าอาจติดผ้าอื่น ซึ่งจะทำให้ผ้าสีขาวติดสีอื่น

ไม่ควรซักผ้าที่สกปรกมากรวมกับผ้าที่เปราะบางเล็กน้อยหากเป็นไปได้

ความสกปรก (มาก กลาง น้อย)..... แยกเสื้อผ้าตามระดับความสกปรก

สี (สีขาว สีอ่อน สีเข้ม) แยกผ้าขาวออกจากผ้าสี

ขยู่ผ้า (ผ้าขยู่หลุดง่าย ผัดติดขยู่ง่าย) ซักผ้าที่ขยู่หลุดง่ายแยกจากผ้าที่ติดขยู่ง่าย

3. การดูแลก่อนใส่ผ้า

- เลือกผ้าที่มีทั้งผ้าชั้นใหญ่และเล็กรวมกัน ใส่ผ้าชั้นใหญ่ก่อน ผ้าชั้นใหญ่ไม่ควรมีขนาดเก้กังหนึ่งของผ้าทั้งหมด อย่าซักเสื้อผ้าเพียงชั้นเดียว เนื่องจากอาจทำให้ผ้าเสียสมดุล ให้ใส่ผ้าที่คล้ายกันเพิ่มอีกหนึ่งหรือสองชั้น



- ตรวจสอบกระเป๋าทั้งหมดว่าไม่มีอะไรอยู่ข้างใน สิ่งของเช่นเล็บ กิ๊บติดผม ไม่ขีด ปากกา เหรียญ และกุญแจอาจทำให้ทั้งเครื่องซักผ้าและเสื้อผ้าของคุณเสียหาย



- โปรดจัดการกับคราบเปื้อนโดยการเติมน้ำยาซักผ้าเจือจางด้วยน้ำตรงจุดที่มีคราบเปื้อน เช่น ปกเสื้อและข้อมือเสื้อเพื่อช่วยกำจัดคราบ



- รูดซิป เขียวตะขอ และรัดสายให้เรียบร้อยเพื่อทำให้แน่ใจว่าสิ่งเหล่านี้ไม่ ไปติดกับเสื้อผ้าชั้นอื่น



- ตูรอยพับของแผ่นกันรั่ว (สืเทา)และนำสิ่งแปลกปลอมออกหากมี




- ตรวจสอบข้างในถังซักแล้วนำสิ่งตกค้างก่อนที่จะทำการซักครั้งต่อไป

- นำเสื้อผ้าและสิ่งตกค้างออกจากแผ่นกันรั่วเพื่อป้องกันไม่ให้เสื้อผ้าและแผ่น กันรั่วเสียหาย

การใส่น้ำยาซักผ้า

■ การใส่น้ำยาซักผ้าและน้ำยาปรับผ้านุ่ม

1. ช่องใส่น้ำยาซักผ้า

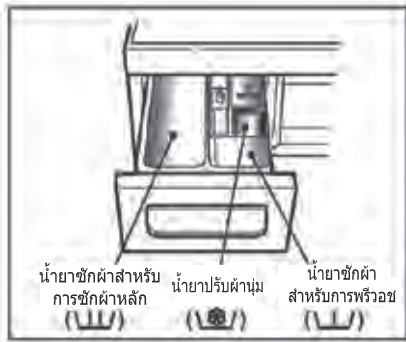


- การซักหลักเท่านั้น → Ⅲℓ
- ฟรียอช + ซักผ้าหลัก → Ⅲℓ + Ⅲℓ

⚠ คำเตือน

เก็บยาซักผ้าทั้งหมดให้ห่างจากเด็กเนื่องจากมีความเสี่ยงในการได้รับสารพิษ การใส่น้ำยาซักผ้า น้ำยาฟอกขาว หรือน้ำยาปรับผ้านุ่มมากเกินไปอาจทำให้กลิ่นได้ ทำให้แน่ใจว่าใช้ปริมาณน้ำยาซักผ้าที่เหมาะสม

2. การใส่น้ำยาปรับผ้านุ่ม

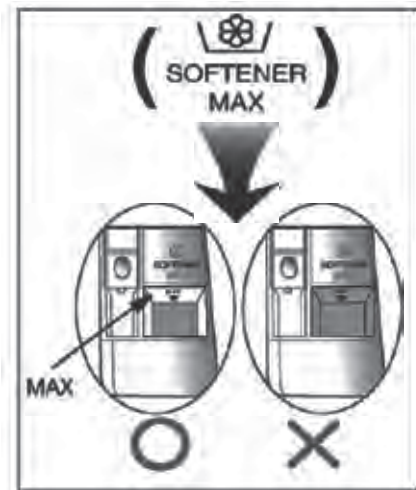

- อย่าเติมจนเกินเส้นระดับสูงสุด ปิดลิ้นชักช่องใส่น้ำยาซักผ้าอย่างช้า ๆ การเติมน้ำยาปรับผ้านุ่มมากเกินไปและเร็วเกินไปอาจทำให้เกิดคราบเยื่อบนเสื้อผ้าได้
- อย่าทิ้งน้ำยาปรับผ้านุ่มไว้ข้างในลิ้นชักนานเกิน 2 วัน (น้ำยาปรับผ้านุ่มอาจแข็ง)
- น้ำยาปรับผ้านุ่มจะถูกเติมโดยอัตโนมัติในรอบซักสุดท้าย
- อย่าเปิดลิ้นชักในขณะที่กำลังจ่ายน้ำ
- อย่าใส่สารทำลาย (น้ำมันเบนซิน ฯลฯ)

หมายเหตุ อย่าเทน้ำยาปรับผ้านุ่มลงบนเสื้อผ้าโดยตรง

การใส่น้ำยาซักผ้า

3. ปริมาณน้ำยาซักผ้า

- ควรใช้น้ำยาซักผ้าในปริมาณที่ผู้ผลิตน้ำยาซักผ้าแนะนำ
- หากใช้น้ำยาซักผ้าปริมาณมากเกินไปจะทำให้เกิดฟองมากเกินไป ซึ่งจะทำให้ลดประสิทธิภาพการซักและทำให้มอเตอร์ทำงานหนัก
- แนะนำให้ใช้ผงซักฟอกเพื่อผลลัพธ์ที่ดีที่สุด
- หากคุณต้องการจะใช้น้ำยาซักผ้า ให้ทำตามคำแนะนำของผู้ผลิตน้ำยาซักผ้า
- คุณสามารถใส่น้ำยาซักผ้าลงในลิ้นชักน้ำยาซักผ้าได้โดยตรงหากคุณจะเริ่มซักในทันที
- โปรดอย่าใส่น้ำยาซักผ้าหากคุณใช้โปรแกรม 'ตั้งเวลาเสร็จ' เนื่องจากน้ำยาอาจจะแข็ง หรือเมื่อคุณเลือกโปรแกรม 'พรีวอช'

※ หากเกิดฟองมากเกินไป โปรดลดปริมาณน้ำยาซักผ้า

- ควรปรับปริมาณน้ำยาซักผ้าให้เหมาะสมกับอุณหภูมิ น้ำ ความกระด้างของน้ำ ขนาด และระดับความสกปรกของผ้า เพื่อผลลัพธ์ที่ดีที่สุด ให้หลีกเลี่ยงการเกิดฟองมากเกินไป

⚠ คำเตือน

อย่าปล่อยให้ใส่น้ำยาซักผ้าแข็ง

การทำเช่นนั้นอาจทำให้เกิดการอุดตัน ประสิทธิภาพการล้างผ้าลดลง

- | หมายเหตุ |
|------------------------------------|
| • เต็มถึง: ตามคำแนะนำของผู้ผลิต |
| • ไม่เต็มถึง: 3/4 of ของปริมาณปกติ |
| • ปริมาณผ้าต่ำสุด: 1/2 ถึง |


- น้ำยาซักผ้าจะไหลออกมาจากอุปกรณ์จ่ายในช่วงแรกของรอบซัก

4. การใส่น้ำยาปรับผ้านุ่ม




- สามารถใช้สารทำน้ำอ่อนเช่นแอนด์โลมสเกล เพื่อลดปริมาณการใช้น้ำยาซักผ้าในพื้นที่ที่มีน้ำกระด้างมาก ใส่ในปริมาณที่ระบุไว้บนบรรจุภัณฑ์
- ใส่ในน้ำยาซักผ้าก่อนแล้วจึงใส่สารทำน้ำอ่อน
- ใช้ปริมาณน้ำยาซักผ้าที่เหมาะสมกับน้ำอ่อน

5. การใช้สารซักฟอกชนิดเม็ด

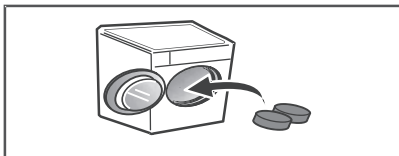

- 1) เปิดประตูแล้วใส่เม็ดสารลงไปในถังซัก

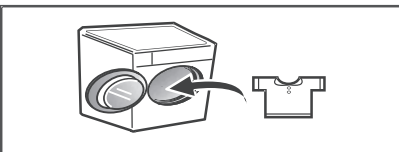

- 2) ใส่ผ้าลงในถังซักแล้วปิดประตู

ฟังก์ชัน

■ โปรแกรมซักที่แนะนำตามประเภทของผ้า

โปรแกรม	รายละเอียด	ประเภทผ้า	อุณหภูมิที่เหมาะสม	ปริมาณผ้าสูงสุด
Cotton ผ้าฝ้าย	ประสิทธิภาพการทำงานที่สูงขึ้นจากกา รผสมผสานการเคลื่อนไหวถึงซักรูปแบบต่างๆ	ผ้าย้อมสี (เสื้อเชิ้ต ชุดนอนผู้หญิง ชุดนอน ฯลฯ) และผ้าฝ้ายที่เบื่อนตามธรรมชาติ (ชุดชั้นใน)	40°C (เย็นถึง 95°C)	การสั้น
Cotton+  ผ้าฝ้าย+ 	ประสิทธิภาพการซักสูงสำหรับผ้าปริมาณมากและ ใช้พลังงานน้อย		60°C (เย็นถึง 60°C)	
Easy Care ผ้าที่ไม่ต้องรีด	เหมาะสำหรับเสื้อผ้าลองที่ไม่ต้องรีดหลังซัก	โพลีไมด์ อะคริลิก โพลีเอสเตอร์	40°C (เย็นถึง 60°C)	3 กก.
Mix ผ้าทั่วไป	ทำให้สามารถซักเสื้อผ้าหลายชนิดรวมกันได้	ผ้าชนิดต่างๆ ยกเว้นผ้าพิเศษ (ผ้าไหม ชุดกีฬา เสื้อผ้าสีเข้ม ผ้าขนสัตว์ เครื่องนอน ผ้าไหม)	40°C (เย็นถึง 40°C)	
Allergy Care ลดการเกิดภูมิแพ้	ช่วยกำจัดสารก่อภูมิแพ้เช่นไร เกสร และขนแมว	ผ้าฝ้าย ชุดชั้นใน ปลอกหมอน ผ้าปูเตียง เสื้อผ้าเด็กอ่อน	60°C	
Duvet ชุดเครื่องนอน	สำหรับผ้าชั้นใหญ่เช่นผ้าปูที่นอน หมอน ผ้าคลุมโซฟา ฯลฯ	เครื่องนอนผ้าฝ้ายยกเว้นผ้าพิเศษ (ผ้าอบบาง ผ้าขนสัตว์ ผ้าไหม) ที่มีไส้ข้างใน: เครื่องนอน หมอน ผ้าคลุมโซฟาที่มีไส้บาง	40°C (เย็นถึง 40°C)	ไซส์ 1 เดียว
Sports Wear ชุดกีฬา	เหมาะสำหรับชุดกีฬาเช่นเสื้อสำหรับวิ่ง	คูลแมกซ์ กอร์เท็กซ์ ผ้าขนแกะ ผ้าชีมปาเท็กซ์	40°C (เย็นถึง 40°C)	2 กก.
Baby Steam Care ซักเสื้อผ้าเด็กด้วยไอน้ำร้อน	กำจัดคราบโปรตีนและมีประสิทธิภาพการฟอก ที่ดียิ่งกว่า	เสื้อผ้าเด็กอ่อนที่เปื้อนเล็กน้อย	60°C	4 กก.
Silent Wash ซักกลางคืน	ลดเสียงและการสั่นสะเทือนรวมถึงช่วยประหยัดค าใช้จ่ายโดยการใช้อิฟไฟในช่วงกลางคืน	ผ้าย้อมสี (เสื้อเชิ้ต ชุดนอนผู้หญิง ชุดนอน ฯลฯ) และผ้าฝ้ายสีขาวที่เปื้อนเล็กน้อย (ชุดชั้นใน)	40°C (เย็นถึง 60°C)	4.5 กก.
Dark Wash ผ้าสี	ช่วยป้องกันสีก (ใช้น้ำยาสักผ้าสำหรับผ้าสี)	ผ้าสีฝ้ายหรือผ้าผสมสีเข้ม	20°C (เย็นถึง 40°C)	2 กก.
Quick 30 ซักด่วน 30 นาที	ซักผ้าอย่างรวดเร็วสำหรับผ้าจำนวนน้อยที่สกปร กเพียงเล็กน้อย	ผ้าสีที่เปื้อนเล็กน้อย	20°C (เย็นถึง 40°C)	
Gentle Care ถนอมผ้า	สำหรับเสื้อผ้าที่บอบบางเช่นผ้าขนสัตว์ ชุดชั้นใน ชุดเดรส ฯลฯ (ใช้น้ำยาสักผ้าสำหรับผ้าขนสัตว์ที่ซักได้)	ผ้าขนสัตว์ ผ้าอบบาง และผ้าที่เสียดง่าย	20°C (เย็นถึง 30°C)	1.5 กก.
Stain Care ผ้าสกปรกมาก	ทำความสะอาดคราบหลายชนิดเช่นคราบไวน์ น้ำผลไม้ ฯลฯ (อุณหภูมิน้ำจะสูงขึ้นเป็นระดับเพื่อกำจัดคราบชนิด ต่างๆ)	ผ้าฝ้ายผสม มีผ้าอบบาง	40°C (30°C ถึง 60°C)	3 กก.
Download Cycle ดาวน์โหลดโปรแกรมซัก	สำหรับโปรแกรมที่ดาวน์โหลดได้ หากคุณไม่ได้ดาวน์โหลดโปรแกรมใดๆ ค่าเริ่มต้นคือ ล้าง + บั่น			

* อุณหภูมิของน้ำ: เลือกอุณหภูมิน้ำสำหรับรอกซัก

ปฏิบัติตามคำแนะนำในป้ายการดูแลรักษาจากผู้ผลิตผ้าเสมอเวลาซักผ้า

*หมายเหตุ: แนะนำให้ใช้น้ำยาสักผ้าที่เป็นกลาง

**ตัวเลือกเพิ่มเติม


โปรแกรม	Time Save ประหยัดเวลา	Intensive หนักหน่วง	Rinse + ล้าง+	Delay End ตั้งเวลาเสร็จ	Crease Care ลดรอยยับ	Pre Wash พรีวอช
Cotton (ผ้าฝ้าย)	•	•	•	•	•	•
Cotton+□ (ผ้าฝ้าย+□)	•	•	•	•	•	•
Easy Care (ผ้าไม่หด)	•	•	•	•	•	•
Mix (ผ้าทั่วไป)	•	•	•	•	•	•
Allergy Care (ลดการเกิดภูมิแพ้)	•	•	•	•	•	•
Baby Steam Care (ซักเสื้อผ้าเด็กด้วยไอน้ำ)	•	•	•	•	•	•
Silent Wash (ซักเงียบ)	•	•	•	•	•	•
Duvet (ชุดเครื่องนอน)	•	•	•	•	•	•
Sports Wear (ชุดกีฬา)	•	•	•	•	•	•
Dark Wash (ผ้าสี)	•	•	•	•	•	•
Quick 30 (ซักด้วย 30 นาที)	•	•	•	•	•	•
Gentle Care (ขนอ่อนนุ่ม)	•	•	•	•	•	•
Stain Care (ผ้าสกปรกมาก)	•	•	•	•	•	•

** การเลือกตัวเลือกเพิ่มเติมอาจแตกต่างกันไปในแต่ละรุ่น

วิธีใช้เครื่องซักผ้า

* ชิ้นส่วนอาจแตกต่างกันไปในแต่ละรุ่น

แผงควบคุม

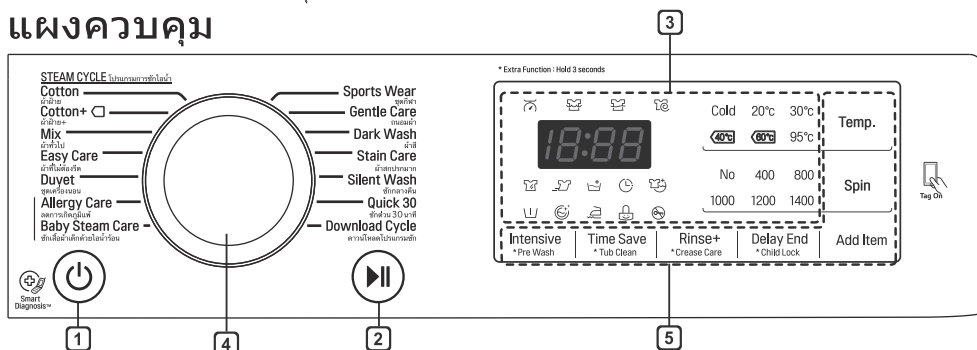

1 Power Button (ปุ่มพลังงาน)

- กดปุ่มพลังงานเพื่อเปิดใช้งานเครื่องซักผ้า

2 Start/Pause Button (ปุ่มเริ่ม/หยุด)

- ปุ่ม เริ่ม/หยุด ใช้ในการเริ่มต้นรอบซักหรือหยุดรอบซัก
- หากจำเป็นต้องหยุดรอบซักชั่วคราว ให้กดปุ่ม เริ่ม/หยุด

3 Display (หน้าจอ)

- หน้าจอจะแสดงการตั้งค่า เวลาที่เหลือโดยประมาณ ตัวเลือก และข้อความสถานะ เมื่อเปิดพลังของผลิตภัณฑ์ การตั้งค่าเริ่มต้นในหน้าจอจะสว่างขึ้น
- หน้าจอแสดงเวลาที่เหลือโดยประมาณ ในขณะที่เครื่องกำลังคำนวณปริมาณผ้าโดยอัตโนมัติ 'กำลังตรวจสอบ' จะกะพริบ
- รอบหมุนต่อเนื่องที่อาจแตกต่างกันไปในแต่ละรุ่น

4 Program Knob (ปุ่มโปรแกรม)

- มีโปรแกรมซักตามประเภทของผ้าต่างๆ
- ไฟจะสว่างขึ้นเพื่อระบุโปรแกรมที่เลือก

5 Options (ตัวเลือก)

- ให้คุณเลือกโปรแกรมเพิ่มเติมซึ่งจะสว่างขึ้นเมื่อคุณเลือก
- ใช้ปุ่มเหล่านี้เพื่อเลือกตัวเลือกโปรแกรมที่ต้องการสำหรับรอบซักที่เลือก

เปิด/ปิด เสียงแจ้งเตือน


- กดปุ่มพลังงาน
- กดปุ่ม เริ่ม/หยุด
- กดปุ่มออกหมุมและปุ่มตั้งเวลาเสร็จพร้อมกันค้างไว้ 3 วินาที เพื่อตั้งฟังก์ชันเปิด/ปิดเสียงแจ้งเตือน

หมายเหตุ

- เมื่อคุณตั้งฟังก์ชันเปิด/ปิดเสียงแจ้งเตือนแล้ว ระบบจะจำการตั้งค่านั้นไว้แม้ว่าจะปิดพลังงานแล้วก็ตาม
- หากคุณต้องการจะปิดเสียงแจ้งเตือน ให้ทำตามขั้นตอนนี้อีกครั้ง

วิธีใช้เครื่องซักผ้า

** ส่วนนี้อาจแตกต่างกันไปในแต่ละรุ่น

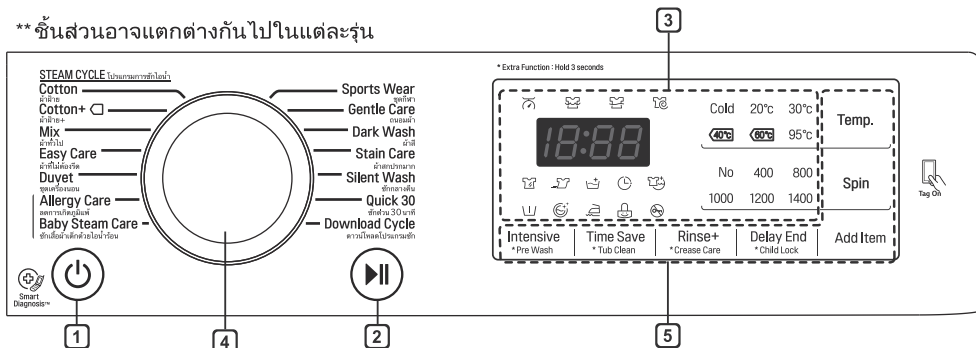

(1) ปุ่ม: พลังงาน

(3) หน้าจอ

(5) ตัวเลือก

(2) ปุ่ม: ปุ่มเริ่ม/หยุด

(4) ปุ่ม: โปรแกรม

พลังงาน



1. พลังงาน

- กดปุ่มพลังงานเพื่อเปิด/ปิดเครื่องซักผ้า
- ยกเลิกฟังก์ชันตั้งเวลาเสร็จได้โดยการกดปุ่มพลังงาน

2. โปรแกรมตั้งต้น


- เมื่อกดปุ่มพลังงาน เครื่องซักผ้าจะตั้งไปที่โปรแกรมผ้าฝ้ายและมีสภาพตั้งต้นอื่นๆดังต่อไปนี้
- ดังนั้นหากคุณต้องการจะเริ่มรอบซักโดยไม่เปลี่ยนโปรแกรม ให้กดปุ่มเริ่ม/หยุดแล้วเครื่องซักผ้าจะเริ่มทำงาน

■ โปรแกรมตั้งต้น

[FC1409S4W, FC1408S4W]

โปรแกรมผ้าฝ้าย/ซักผ้าหลัก/
ล้างปกติ/1400rpm/40°C

โปรแกรม

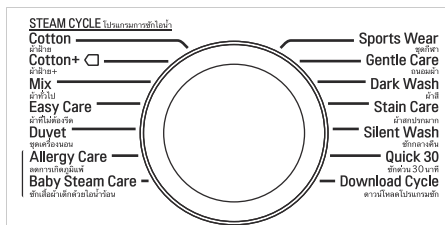

- มีโปรแกรมซักอยู่ 14 โปรแกรมสำหรับผ้าประเภทต่างๆ
- แสงไฟจะสว่างขึ้นเพื่อระบุโปรแกรมที่เลือก
- เมื่อกดปุ่มเริ่ม/หยุด โปรแกรมผ้าฝ้ายจะถูกเลือกโดยอัตโนมัติ
- เมื่อหมุนปุ่มโปรแกรม โปรแกรมจะถูกเลือกตามลำดับจาก:

“Cotton (ผ้าฝ้าย)-Cotton+ (ผ้าฝ้าย+)- Mix (ผ้าทั่วไป)-Easy Care (ผ้าที่ไม่ต้องรีด)-Duvet (ชุดเครื่องนอน)-Allergy Care (ลดการเกิดภูมิแพ้) -Baby Steam Care (ซักเสื้อผ้าเด็กด้วยไอน้ำร้อน) -Download Cycle (ดาวน์โหลดโปรแกรมซัก)- Quick 30 (ซักด่วน 30 นาที)-Silent Wash (ซักกลางคืน)-Stain Care (ผ้าสกปรกมาก)- Dark Wash (ผ้าสี)-Gentle Care (ถนอมผ้า) -Sports Wear (ชุดกีฬา)”

สำหรับประเภทของผ้าสำหรับแต่ละโปรแกรมโปรดอ้างอิงหน้า 14

วิธีใช้เครื่องซักผ้า

ปุ่มเริ่ม/หยุด



1. เริ่ม

- ปุ่มเริ่ม/หยุด ใช้ในการเริ่มต้นรอบซักหรือหยุดรอบซัก

2. หยุด

- หากจำเป็นต้องหยุดรอบซักชั่วคราว ให้กดปุ่มเริ่ม/หยุด
- ในขณะที่เครื่องหยุดอยู่ พลังงานจะปิดลงโดยอัตโนมัติในเวลาประมาณ 4 นาที

ประตูล็อก (🔒)



- จะสว่างขึ้นเมื่อประตูของเครื่องซักผ้าล็อก
- ปลดล็อกประตูได้โดยการกดปุ่มเริ่ม/หยุดเพื่อหยุดเครื่องซักผ้า
- สามารถเปิดประตูได้หลังจากระยะเวลาสั้นๆ

กำลังตรวจสอบ (🔍)



- ในขณะที่ แสดงขึ้นในหน้าจอ เครื่องจะหมุนช้าๆ และตรวจสอบปริมาณผ้าในถังซัก ซึ่งจะใช้เวลาสองสามวินาที

ตัวเลือก

Intensive	Time Save	Rinse+	Delay End	Add Item
*Pre Wash	*Tub Clean	*Crease Care	*Child Lock	

- เมื่อกดปุ่มตัวเลือก จะสามารถเลือกตัวเลือกฟังก์ชันได้ทั้งหมด

1. Intensive (หนักหน่วง) (🔒)

- สำหรับผ้าที่สกปรกมาก ตัวเลือก 'หนักหน่วง' จะมีประสิทธิภาพดี
- เมื่อเลือกตัวเลือกหนักหน่วง ระยะเลาการซักอาจจะนานขึ้น ทั้งนี้ขึ้นอยู่กับโปรแกรมที่เลือก

2. Time Save (ประหยัดเวลา) (🔒)

- สามารถใช้ตัวเลือกนี้เพื่อย่นเวลาของโปรแกรมซัก เหมาะสำหรับผ้าที่สกปรกเล็กน้อย

3. Rinse+ (ล้าง+) (🔒)

- ทิ้งไว้เพิ่มเติมเพื่อคุณภาพการซักที่สูงขึ้น

4. Delay End (ตั้งเวลาเสร็จ) (🕒)

- คุณสามารถตั้งเวลาเสร็จสิ้นการซักผ้าได้ เพื่อให้เครื่องซักผ้าเริ่มซักโดยอัตโนมัติและซักเสร็จในระยะเวลาที่กำหนด

5. Add Item (เพิ่มเสื้อผ้า) (🔒)

สามารถเพิ่มเสื้อผ้าหรือน้ำเลื้อผ้าออกหลังจากเริ่มโปรแกรมไปแล้ว

1. กดปุ่มเพิ่มเสื้อผ้าได้เมื่อไฟแอลอีดีเปิดขึ้น
2. เพิ่มเสื้อผ้าหรือน้ำเลื้อผ้าออก
3. ปิดประตูแล้วกดปุ่มเริ่ม/หยุด

หมายเหตุ

- เพื่อความปลอดภัยประตูจะล็อกในขณะที่ระดับน้ำหรืออุณหภูมิสูง ไม่สามารถเพิ่มเสื้อผ้าได้ในขณะนี้
- หากอุณหภูมิของน้ำในถังซักสูง ให้อรอนกว่าน้ำจะเย็นลง

⚠️ ข้อควรระวัง

- ในการเพิ่มผ้า ทำให้แน่ใจว่าได้ใส่ผ้าลงไปในถังอย่างเรียบร้อย หากมีผ้าติดอยู่ที่รูล็อกของประตู แผนอย่างอื่นอาจเสียหาย ซึ่งจะทำให้ น้ำรั่วและเครื่องทำงานผิดพลาด
- การใช้แรงบังคับให้ประตูเปิดอาจทำให้ชิ้นส่วนเสียหาย เครื่องพัง หรือเกิดปัญหาด้านความปลอดภัยอื่นๆ
- หากคุณเปิดประตูในขณะที่มีฟองและน้ำอยู่ในถังซักเป็นจำนวนมาก น้ำหรือฟองอาจส่นออกมาซึ่งอาจทำให้เกิดการบาดเจ็บจากน้ำร้อนหรือทำให้พื้นเปียก

ไฟที่เกี่ยวข้องจะสว่างขึ้นเพื่อระบุ

Pre Wash (พรีวอช) (🔒)

- หากเสื้อผ้าสกปรกมาก แนะนำให้ใช้โปรแกรมพรีวอช (กดปุ่มค้างไว้ประมาณสามวินาที)

วิธีใช้เครื่องซักผ้า

Tub Clean (ล้างถังซัก) (☺)

Time Save

* Tub Clean

สามารถตั้งโปรแกรมล้างถังซักได้โดยการกดปุ่ม
* Tub Clean (ประมาณสามวินาที)
เมื่อเปิดโปรแกรมล้างถังซักแล้ว หน้าจอจะแสดง "t c l "

t c l

Tub Clean

เป็นโปรแกรมพิเศษสำหรับทำความสะอาดด้านในของเครื่องซักผ้า
โปรแกรมซักนี้ใช้ระดับน้ำสูงและความเร็วในการปั่นสูง
เปิดใช้งานโปรแกรมนี้เป็นประจำ

วิธีการใช้โปรแกรมล้างถังซัก :

1. นำเสื้อผ้าทุกชิ้นออกจากเครื่องซักผ้าแล้วปิดประตู
2. เปิดลิ้นชักจ่ายน้ำยาและใส่สารป้องกันตะกรันหินปูน
ในช่องการซักหลัก

หมายเหตุ: อย่าใส่น้ำยาซักผ้าในช่องน้ำยาซักผ้า
อาจทำให้เกิดฟองมากเกินไปและล้นออกจากเครื่องซักผ้า

3. ปิดลิ้นชักช่องใส่ น้ำยาซักผ้าอย่างช้า ๆ
4. เปิดพลังงานแล้วกดปุ่ม *Tub Clean ค้างไว้ 3 วินาที จากนั้น
" t c l " จะปรากฏในจอแอลอีดี
5. กดปุ่มเริ่ม/หยุด เพื่อเริ่ม
6. หลังจากการอบซักเสร็จแล้วให้เปิดประตูทิ้งไว้เพื่อให้ความชื้น
ภายในเครื่องซักผ้าระเหยออกจนแห้ง



ข้อควรระวัง

หากมีเด็กเลือกอยู่ในบ้าน ระวังอย่าเปิดประตูทิ้งไว้นานเกินไป

Crease Care (ลดรอยยับ) (☹)

* หากคุณต้องการจะป้องกันรอยยับแนะนำให้ใช้โปรแกรม
ลดรอยยับ (กดปุ่มค้างไว้ประมาณสามวินาที)

Child Lock (ป้องกันเด็ก) (🔒)

Delay End

* Child Lock

หากคุณเลือกที่จะล็อกปุ่มบนแผงควบคุมเพื่อป้องกันการ
ให้ผู้อื่นไปกดปุ่มใดๆ สามารถล็อกฟังก์ชันนี้ได้

- สามารถตั้งค่าป้องกันเด็กได้โดยการกดปุ่ม * Child Lock
(ประมาณสามวินาที)

Delay End

* Child Lock



- ปิดระบบป้องกันเด็กได้โดยการกดปุ่ม * Child Lock ครั้ง
(ประมาณสามวินาที)

Delay End

* Child Lock



- วิธีการเปลี่ยนโปรแกรมในขณะที่เปิดโหมดป้องกันเด็ก

1. กดปุ่ม * Child Lock ครั้ง
(ประมาณสามวินาที)
2. กดปุ่ม เริ่ม/หยุด
3. เลือกโปรแกรมที่ต้องการ แล้วกดปุ่มเริ่ม/หยุดอีกครั้ง

Delay End

* Child Lock



สามารถเปิดโหมดป้องกันเด็กได้ทุกเมื่อ
และสามารถปิดโหมดได้โดยทำตามขั้นตอนการยกเลิกโหมด
ป้องกันเด็ก ปิดพลังงานแล้วข้อผิดพลาดในการทำงานจะ
ไม่มีผลกับโหมดป้องกันเด็ก

วิธีใช้เครื่องซักผ้า

ปั่น

No 400 800
1000 1200 1400

Spin

FC1409S4W
FC1408S4W

- หลังจากเลือกคอร์สปั่น สามารถเลือกความเร็วในการปั่นได้โดยการกดปุ่มปั่น

1. เลือกการปั่น

- มีความเร็วในการปั่นตามโปรแกรมดังต่อไปนี้
[FC1409S4W, FC1408S4W]

Cotton (ผ้าฝ้าย)-Cotton+ □(ผ้าฝ้าย+ □)-
Mix (ผ้าทั่วไป)-Allergy Care (ลดการเกิดภูมิแพ้)
-Stain Care (ผ้าสกปรกมาก)-Dark Wash
(ผ้าสี)-Quick 30 (ซักด่วน 30 นาที)-Download
Cycle (ดาวน์โหลดโปรแกรมซัก)

No-400-800-1000-1200-1400

Silent Wash (ซักกลางคืน)-Easy Care
(ผ้าสกปรกมาก)-Duvet (ชุดเครื่องนอน)-Baby
Steam Care (ซักเสื้อผ้าเด็กด้วยไอน้ำร้อน)

No-400-800-1000

Sports Wear (ชุดกีฬา)-Gentle Care
(ถนอมผ้า)

No-400-800

2. ไม่ปั่น

- หากคุณเลือกไม่ปั่น เครื่องซักผ้าจะหยุดหลังจากระบายน้ำออก
ไฟที่เกี่ยวข้องจะสว่างขึ้นเพื่อระบุ


วิธีใช้เครื่องซักผ้า

อุณหภูมิน้ำ

Cold 20°C 30°C
40°C **60°C** 95°C Temp.

- เมื่อกดปุ่มอุณหภูมิ น้ำ จะสามารถเลือกอุณหภูมิ น้ำ ได้
 - Cold
 - 20°C / 30°C / 40°C / 60°C / 95°C
- สามารถเลือกอุณหภูมิ น้ำ ได้ตามโปรแกรมแสงไฟอุณหภูมิ ที่เกี่ยวข้องจะสว่างขึ้นเพื่อระบุสำหรับรายละเอียดเพิ่มเติมโปรดอ้างอิงหน้า 14

Delay End (ตั้งเวลาเสร็จ)



- การเตรียมการซักก่อนเริ่มโปรแกรม " Delay End "

- เปิดก๊อกน้ำ

- ใส่ผ้าแล้วปิดประตู

- ใส่ยาซักผ้าและน้ำยาปรับผ้านุ่มในลิ้นชัก

• วิธีการตั้ง " Delay End "

- กดปุ่มพลังงาน

- หมุนปุ่มโปรแกรมเพื่อเลือกโปรแกรมที่ต้องการ

- กดปุ่มตั้งเวลาเสร็จ แล้วตั้งเวลาที่คุณต้องการ

- กดปุ่ม เริ่ม/หยุด (":") กะพริบ)

- หากปุ่มตั้งเวลาเสร็จถูกกด "3:00" จะแสดงขึ้นสามารถตั้งเวลาเสร็จได้นานที่สุด 19 ชั่วโมงและขั้นต่ำ 3 ชั่วโมง
- ทุกครั้งที่กดปุ่มเวลาจะเพิ่มขึ้นหนึ่งชั่วโมง
- ยกเลิกการตั้งเวลาเสร็จได้โดยการกดปุ่มพลังงาน
- การตั้งเวลาปิดคือเวลานับจากปัจจุบันจนถึงเวลาที่รอบซักหรือกระบวนการที่เลือกเสร็จสิ้น (ซัก ล้าง ปั่น)
- เวลาในการซักจริงอาจแตกต่างกันไปโดยขึ้นอยู่กับสภาพของน้ำ อุณหภูมิ และระยะเวลาที่กำหนด

หน้าจอ



1. หน้าจอฟังก์ชันพิเศษ

- เมื่อเลือกโหมดป้องกันเด็ก
“*LL*” จะแสดงขึ้น
- ในขณะเลือกการตั้งเวลาเสร็จ
หน้าจอจะแสดงเวลาที่เหลือสำหรับโปรแกรมที่เลือก

2. หน้าจอวินิจฉัยตนเอง

- หากเครื่องพบความผิดพลาดในการทำงาน
ข้อผิดพลาดดังกล่าวจะถูกแสดงขึ้น
- “*PE*” : ข้อผิดพลาดการตรวจจับแรงดันน้ำ
- “*FE*” : ปัญหาการเติมน้ำจนล้น
- “*dE*” : ประตูไม่ปิด
- “*LE*” : มอเตอร์โอเวอร์โหลด
- “*lE*” : น้ำเข้าขัดข้อง
- “*OE*” : การระบายน้ำขัดข้อง
- “*UE*” : ผ้าไม่สมดุล
- “*LE*” : อุณหภูมิน้ำขัดข้อง
- “*FF*” : ท่อน้ำเข้า/ระบายหรือปั๊มระบายน้ำเป็นน้ำแข็ง
- “*RE*” : น้ำรั่ว
- “*dHE*” : ไม่แห้ง

หากข้อความข้อผิดพลาดเหล่านี้ถูกแสดงขึ้น
โปรดอ้างอิงหน้าการแก้ไขปัญหาแล้วทำตาม
คำแนะนำ

3. เมื่อซักเสร็จ

- เมื่อการซักผ้าเสร็จสิ้นแล้ว “*End*”
จะแสดงขึ้นในหน้าจอผลลัพธ์

4. เวลาที่เหลือ

- ในขณะที่กำลังอยู่ในรอบซัก
เวลาซักที่เหลือจะแสดงขึ้น
- เวลาซักอาจแตกต่างกันไปโดย
ขึ้นอยู่กับปริมาณผ้า แรงดันน้ำ
อุณหภูมิน้ำ
และสภาพการซักอื่นๆ
- หากมีการตรวจพบผ้าขาดสมดุ
ลหรือโปรแกรมกำจัดฟองทำงาน
เวลาซักอาจจะนานขึ้น

ฟังก์ชันสมาร์ท

การใช้ฟังก์ชันแท็กออน

ใช้ Smart Diagnosis™

เพื่อสื่อสารกับเครื่องใช้ไฟฟ้าโดยตรงได้อย่างสะดวกโดยใช้สมาร์ทโฟน

- สามารถใช้ฟังก์ชันแท็กออนได้กับสมาร์ทโฟนรุ่นที่มีฟังก์ชัน NFC (การสื่อสารสนามใกล้) และใช้ระบบ Android OS (ระบบปฏิบัติการ)

การติดตั้งแอปพลิเคชัน

- ค้นหาแอปพลิเคชัน LG SmartThinkQ ใน Google Play Store หรือ Apple App Store ในสมาร์ทโฟนของคุณ



การใช้งานแอปพลิเคชัน

แอปพลิเคชัน LG SmartThinkQ

ทำให้คุณสามารถใช้งานคุณสมบัติต่างๆ ได้อย่างสะดวก

- การดาวน์โหลดโปรแกรม
- Smart Diagnosis™
- การตั้งโปรแกรมแท็กออน
- สถานะผ้า

หมายเหตุ

- แต่ที่ [?] ในแอปพลิเคชัน LG SmartThinQ
- เพื่อเรียนรู้เพิ่มเติมเกี่ยวกับการใช้งานฟังก์ชันแท็กออน
- กระบวนการเปิดใช้งาน NFC อาจแตกต่างกันไปโดยขึ้นอยู่กับผู้ผลิตสมาร์ทโฟนและเวอร์ชันของ Android OS
- อ้างอิงคู่มือการใช้งานสมาร์ทโฟนของคุณเพื่อดูรายละเอียด
- เนื่องจากคุณสมบัติของ NFC หากกระบวนการส่งสัญญาณห่างเกินไป หรือที่โทรศัพท์ที่มีสติกเกอร์โลหะหรือใส่เคสโทรศัพท์ การส่งสัญญาณอาจจะไม่ดี ในบางกรณี โทรศัพท์ที่มีอุปกรณ์ NFC อาจส่งสัญญาณไม่สำเร็จ
- เนื้อหาในคู่มือนี้อาจแตกต่างกันไปโดยขึ้นอยู่กับเวอร์ชันของแอปพลิเคชัน LG SmartThinkQ ซึ่งอาจมีการเปลี่ยนแปลงโดยไม่แจ้งให้ผู้ใช้ทราบ

ดาวน์โหลดโปรแกรม

ดาวน์โหลดโปรแกรมใหม่หรือโปรแกรมพิเศษที่ไม่รวมอยู่ในโปรแกรมพื้นฐานของเครื่องใช้ไฟฟ้านี้ เครื่องใช้ไฟฟ้าที่ลงทะเบียนสำเร็จแล้วจะสามารถดาวน์โหลดโปรแกรมพิเศษสำหรับเครื่องใช้ไฟฟ้านี้ได้มากมาย

สามารถบันทึกโปรแกรมในเครื่องใช้ไฟฟ้านี้ได้คราวละหนึ่งโปรแกรมเท่านั้น

เมื่อเสร็จสิ้นการดาวน์โหลดโปรแกรมเข้าในเครื่องใช้ไฟฟ้านี้


ผลิตภัณฑ์จะเก็บบันทึกโปรแกรมที่ดาวน์โหลดจนกว่าจะดาวน์โหลดโปรแกรมใหม่

การดูแลรักษา


- * ก่อนที่จะทำความสะอาดภายใน เครื่องซักผ้า ให้ถอดปลั๊กออกก่อนเพื่อป้องกันการเกิดไฟฟ้าช็อตและอันตรายจากการเกิดไฟฟ้าช็อต
- * ในการกำจัดเครื่องใช้ไฟฟ้านี้ให้ตัดสายไฟหลักและทำลายปลั๊กไฟเสีย ทำให้ล๊อคของประตูใช้งานไม่ได้เพื่อป้องกันมิให้เด็กเข้าไปติดอยู่ข้างใน

■ ฟิลเตอร์กรองน้ำเข้า


- " IE " ข้อความข้อผิดพลาดจะกะพริบบนแผงควบคุมหากมีน้ำเข้าไปในช่องใส่น้ำยาซักผ้า
- หากน้ำกระด้างมากและมีตะกอน ฟิลเตอร์กรองน้ำเข้าอาจอุดตันได้ ดังนั้นจึงควรทำความสะอาดฟิลเตอร์เป็นครั้งคราว

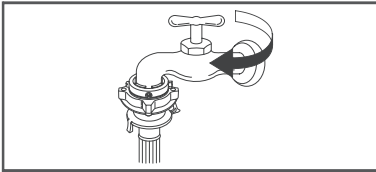


1. ปิดก๊อกน้ำ

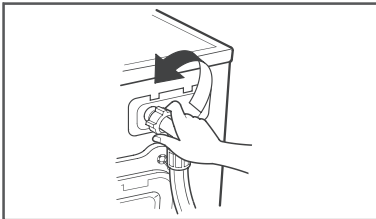

2. ถอนสกรูของท่อน้ำเข้า

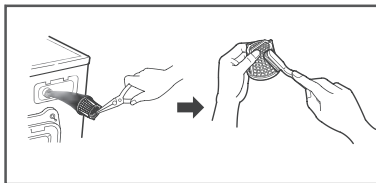

3. ทำความสะอาดฟิลเตอร์โดยใช้แปรงขนแข็ง

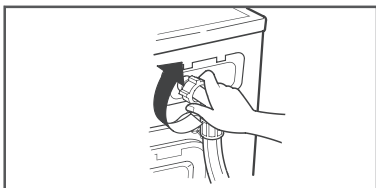

4. รัດท่อน้ำเข้า


การดูแลรักษา

■ ฟิลเตอร์บี้มระบาย


- * ฟิลเตอร์ระบายน้ำจะกักเศษด้ายและวัตถุขนาดเล็กที่ตกค้างจากผ้า ควรตรวจสอบความสะอาดของฟิลเตอร์เป็นประจำเพื่อให้เครื่องของคุณทำงานได้อย่างมีประสิทธิภาพ

⚠ ข้อควรระวัง ขั้นแรกให้ระบายน้ำโดยใช้ท่อระบาย จากนั้นให้เปิดฟิลเตอร์บี้มเพื่อกำจัดเศษด้ายหรือวัตถุต่างๆ ระวังเมื่อทำการระบายน้ำหากน้ำร้อน


- * ปลอยให้น้ำเย็นลงก่อนที่จะทำความสะอาดบี้มระบาย การระบายฉุกเฉิน หรือเปิดประตูในกรณีฉุกเฉิน

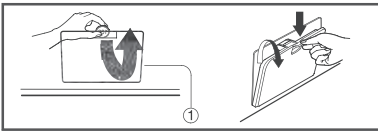


1. เปิดฝาปิดด้านล่าง (1) โดยใช้เหรียญ จุกทางระบาย (2) สำหรับดึงท่อออก

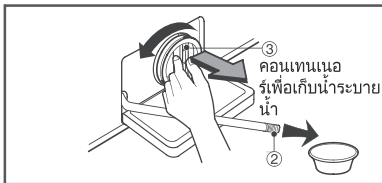


2. ดึงจุกทางระบายออก (2) แล้วปล่อยให้ระบาย ในขั้นตอนนี้ให้ใช้ภาชนะรองน้ำเพื่อป้องกัน น้ำล้นลงบนพื้น เมื่อน้ำหยุดไหลแล้ว ให้เปิดฟิลเตอร์บี้ม (3) ไปทางซ้าย

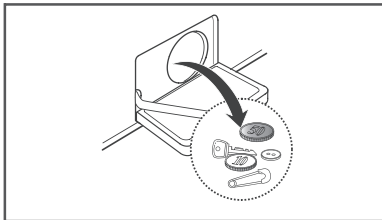

3. น้ำวัตถุแปลกปลอมออกจากฟิลเตอร์บี้ม (3)

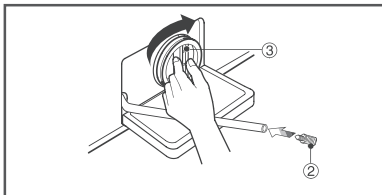


4. หลังจากทำความสะอาดแล้ว ให้หมุนฟิลเตอร์บี้ม (3) ตามเข็มนาฬิกาแล้วใส่จุกทางระบาย (2) กลับเข้าที่ ปิดฝาปิดด้านล่าง

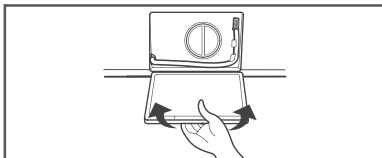

การดูแลรักษา


■ ช่องใส่น้ำยาซักผ้า

- * หลังจากระยะเวลาหนึ่งจะมีคราบน้ำยาปรับผ้านุ่มสะสมอยู่ในลิ้นชัก
- ควรทำความสะอาดลิ้นชักเป็นครั้งคราวโดยการใช้น้ำฉีด
- หากจำเป็นก็สามารถถอดมันออกจากเครื่องโดยการกดกลอนลงแล้วดึงออก
- เพื่อความสะดวกในการทำทำความสะอาด สามารถเปิดส่วนบนของช่องใส่น้ำยาปรับผ้านุ่มได้

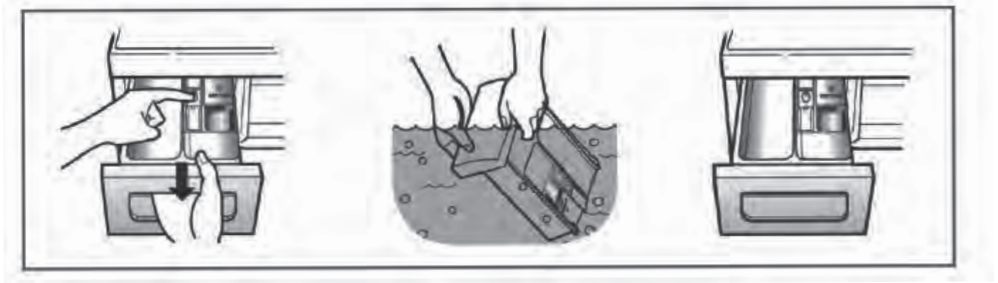

■ ช่องลิ้นชัก

- * น้ำยาซักผ้าอาจติดสะสมอยู่ในช่อง จึงควรทำความสะอาดเป็นครั้งคราวด้วยแปรงสีฟัน
- หลังจากทำความสะอาดเสร็จ ให้ใส่ลิ้นชักกลับเข้าที่แล้วเปิดโปรแกรมล้างหนึ่งรอบโดยไม่ใส่ผ้า

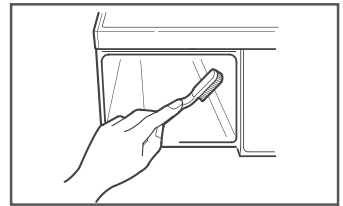

■ ถังซักผ้า

- หากคุณอาศัยอยู่ในพื้นที่น้ำกระด้าง อาจมีตะกอนสะสมอยู่ในบริเวณที่มองไม่เห็น ซึ่งกำจัดได้ยาก เมื่อนานไปตะกอนที่สะสมจะอุดตันเครื่องใช้ไฟฟ้า และถ้าหากไม่รักษาความสะอาดอย่างเหมาะสมอาจจะต้องเปลี่ยนเครื่องใหม่
- แม้ว่าถังซักจะทำมาจากสแตนเลส จุดสนิมอาจเกิดขึ้นได้จากโลหะชั้นเล็กๆ (คลิปปินิบกระดาศ เข็มกลัด) ที่ตกค้างอยู่ในถังซัก
- ควรทำความสะอาดถังซักเป็นครั้งคราว
- หากคุณใช้สารกำจัดตะกอนหรือน้ำยาฟอกขาว ตรวจสอบให้แน่ใจว่าเหมาะกับการใช้งานในเครื่องซักผ้าหรือไม่
- * สารกำจัดตะกอนอาจมีสารเคมีที่อาจก่อให้เกิดอันตรายกับชิ้นส่วนของเครื่องซักผ้าของคุณ
- * กำจัดรอยจุดด้วยสารทำความสะอาดสแตนเลส
- * อย่าใช้ฟอยขัดโดยเด็ดขาด

■ การทำความสะอาดเครื่องซักผ้าของคุณ

1. ภายนอก

การดูแลรักษาเครื่องซักผ้าของคุณอย่างเหมาะสมจะช่วยยืดอายุการใช้งาน สามารถทำความสะอาดภายนอกเครื่องด้วยน้ำอุ่นและน้ำยาทำความสะอาดที่เป็นกลางและไม่กัดกร่อน เช็ดน้ำยาที่หกทันที เช็ดด้วยผ้าเปียดหมาด

อย่ากระแทกพื้นผิวด้วยวัตถุแหลมคม

* สำคัญ: อย่าใช้เมธิลแอลกอฮอล์ สารละลาย หรือผลิตภัณฑ์อื่นที่คล้ายกัน

2. ภายใน

เช็ดบริเวณประตูของเครื่องซักผ้า ยางกันรั้ว และกระจกของประตู

เปิดโปรแกรมซักด้วยน้ำร้อนหนึ่งรอบ

ทำตามขั้นตอนเดิมซ้ำอีกหากจำเป็น

หมายเหตุ กำจัดคราบตะกอนด้วยสารทำความสะอาดที่มีป้ายระบุว่าปลอดภัยกับเครื่องซักผ้าเท่านั้น

■ สภาพอากาศเย็น

หากตั้งเครื่องซักผ้าไว้ในบริเวณที่อาจเกิดอุณหภูมิเยือกแข็งหรือถูกย้ายเข้าไปในอุณหภูมิเยือกแข็ง ให้ทำตามขั้นตอนต่อไปเพื่อป้องกันความเสียหายกับเครื่องซักผ้า

1. ปิดก๊อกน้ำเข้า
2. ถอดท่อออกจากก๊อกน้ำแล้วระบายน้ำออกจากท่อ
3. เสียบปลั๊กเข้ากับเต้ารับที่ต่อสายดินอย่างถูกต้อง
4. เติมน้ำยาแอนตี้ฟรีซประเภทไม่เป็นพิษสำหรับรถบ้าน 1 แกลลอน (3.8 ล.) เข้าไปในถังซักที่ว่างเปล่า ปิดประตู
5. เปิดโปรแกรมปั่นแล้วปล่อยให้เครื่องซักผ้าปั่น 1 นาที เพื่อระบายน้ำออกให้หมด น้ำยาแอนตี้ฟรีซ RV อาจยังออกไปไม่หมด
6. ถอดปลั๊กแล้วเช็ดภายในถังซักให้แห้งแล้วปิดประตู
7. นำท่อระบายของช่องใส่น้ำยาออก แล้วเช็ดชิ้นส่วนให้แห้ง
8. เก็บเครื่องซักผ้าไว้ในแนวตั้ง
9. กำจัดน้ำยาแอนตี้ฟรีซออกจาก เครื่องซักผ้าหลังจากจัดเก็บ
ได้โดยการใส่น้ำยาซักผ้าแล้วเปิดรอบซักหนึ่งรอบโดยใช้เครื่องเปล่า อย่าใส่ผ้าเข้าไป

แนวทางการแก้ปัญหา

- * เครื่องซักผ้านี้มีฟังก์ชันความปลอดภัยอัตโนมัติในตัว ซึ่งจะตรวจจับและวินิจฉัยข้อผิดพลาดในช่วงแรกและทำการตอบสนองอย่างเหมาะสมเมื่อเครื่องทำงานไม่เหมาะสมหรือไม่ทำงานเลย ให้ตรวจสอบประเด็นต่อไปนี้ก่อนที่จะติดต่อผู้ให้บริการของคุณ

อาการ	สาเหตุที่เป็นไปได้	การแก้ไข
สั่นสะเทือนและมีเสียงก้องแกง เสียงตุบๆ เสียงสั่น	- มีสิ่งแปลกปลอมอย่างเช่นเหรียญหรือเข็มกลัดอยู่ในถังซักหรือปั้มน้ำ - การซักเสื้อผ้าปริมาณมากอาจทำให้เกิดเสียงตุบๆ ซึ่งเป็นเรื่องปกติ - ได้นำสแล็กเกลียวขนสงและวัสดุหีบห่อออกหมดแล้วหรือไม่ - ขาตั้งทั้งหมดตั้งอยู่บนพื้นอย่างแน่นหนาดีหรือไม่	หยุดเครื่องซักผ้าแล้วตรวจถังซักและฟิลเตอร์ทางระบายน้ำ หากยังเกิดเสียงอยู่หลังจากเริ่มใช้งานเครื่องซักผ้าอีกครั้ง ให้โทรติดต่อศูนย์บริการที่ได้รับการอนุมัติในท้องถิ่นของคุณ หากยังคงเกิดเสียงต่อไป เครื่องซักผ้าจะเสียสมดุล หยุดเครื่องแล้วจัดเรียงเสื้อผ้าอีกครั้ง หากมิได้นำออกในขณะที่ทำการติดตั้ง อ้างอิงคำแนะนำในการติดตั้งสำหรับวิธีการถอดสแล็กเกลียวขนสง เสื้อผ้าในถังซักอาจถูกจัดเรียงอย่างไม่สมดุลหยุดเครื่องซักผ้าแล้วจัดเรียงเสื้อผ้าอีกครั้ง
น้ำรั่ว เกิดฟองมากเกินไป น้ำไม่เข้าเครื่องซักผ้าหรือน้ำไหลเข้าช้า น้ำในเครื่องซักผ้าไม่ระบายออกหรือระบายออกช้า	- ท่อน้ำเข้าหรือท่อระบายหลวมที่บริเวณก๊อกน้ำหรือเครื่องซักผ้าหรือไม่ - ท่อระบายน้ำในบ้านอุดตัน - ในท้องถิ่นมีปริมาณน้ำไม่เพียงพอ - เปิดก๊อกน้ำไม่สุด - ท่อน้ำเข้าพับอยู่ - ฟิลเตอร์ท่อน้ำเข้าอุดตัน - ท่อระบายพับอยู่หรืออุดตัน - ฟิลเตอร์ทางระบายน้ำอุดตัน	ตรวจสอบและรัดข้อต่อท่อให้แน่น กำจัดสิ่งอุดตันในท่อระบาย ติดต่อช่างประปาหากจำเป็น การใส่น้ำยาซักผ้ามากเกินไปหรือการใช้ น้ำยาซักผ้าที่ไม่เหมาะสมอาจทำให้เกิดฟองมากเกินไปซึ่งอาจทำให้น้ำรั่ว ตรวจสอบก๊อกน้ำอื่นในบ้าน เปิดก๊อกน้ำให้สุด จัดวางท่อให้ตรง ตรวจสอบฟิลเตอร์ท่อน้ำเข้า ทำความสะอาดและจัดท่อระบายให้ตรง การทำความสะอาดตัวกรองท่อระบาย

แนวทางการแก้ปัญหา

อาการ	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องซักผ้าไม่เริ่มทำงาน เครื่องซักผ้าไม่ปั่น	• อาจจะได้ไม่ได้เสียบปลั๊กหรือปลั๊กอาจหลวม • ฟิวส์ในบ้านขาด • เครื่องตัดกระแสไฟฟ้าตัดกระแสไฟฟ้า • หรือเกิดปัญหาไฟฟ้าขัดข้อง • ไม่ได้เปิดก๊อกน้ำ • ตรวจสอบว่าประตูปิดแน่นดีหรือไม่	ทำให้แน่ใจว่าปลั๊กเสียบเข้ากับเต้ารับอย่างแน่นหนา สับสวิตช์เครื่องตัดกระแสไฟฟ้าหรือเปลี่ยนฟิวส์ อย่าเพิ่มวิสัยความสามารถของฟิวส์ หากปัญหาคือกระแสไฟฟ้าเกินในวงจรให้ติดต่อช่างไฟฟ้าที่มีคุณสมบัติเหมาะสมมาทำการแก้ไข ปิดก๊อกน้ำเข้า ปิดประตูแล้วกดปุ่มเริ่ม/หยุด หลังจากกดปุ่มเริ่ม/หยุด อาจจะต้องรอเวลาเล็กน้อยก่อนที่เครื่องซักผ้าจะเริ่มปั่น ประตูจะต้องล็อกก่อนที่เครื่องจะสามารถปั่นได้ เพิ่มเสื้อผ้าที่คล้ายกัน 1 หรือ 2 ชิ้นเพื่อทำให้ผ้าสมดุล จัดผ้าใหม่เพื่อให้เครื่องสามารถปั่นได้อย่างเหมาะสม
ประตูไม่เปิด		เมื่อเครื่องเริ่มทำงานจะไม่สามารถเปิดประตูได้เพื่อความปลอดภัย ตรวจสอบว่าไอคอน "ประตูล็อก" สว่างขึ้น คุณสามารถเปิดประตูได้อย่างปลอดภัยหลังจากไอคอน "ประตูล็อก" ดับลง
เวลารอบซักนานเกินไป		เวลาซักอาจแตกต่างกันไปโดยขึ้นอยู่กับปริมาณผ้า แรงดันน้ำ อุณหภูมิ น้ำ และสภาพการใช้งานอื่นๆ หากมีการตรวจพบการขาดสมดุลหรือโปรแกรมกำลังทำงานเวลารอบซักจะเพิ่มขึ้น
น้ำยาปรับผ้านุ่มล้น		ทำตามคำแนะนำของน้ำยาปรับผ้านุ่มเพื่อทำให้แน่ใจว่าใช้น้ำยาในปริมาณที่เหมาะสม อย่าเติมจนเกินเส้นระดับสูงสุด
จ่ายน้ำยาปรับผ้านุ่มเร็วเกินไป	• การใส่น้ำยาปรับผ้านุ่มมากเกินไปอาจทำให้น้ำล้นได้	ปิดลิ้นชักช่องใส่น้ำยาซักผ้าอย่างช้า ๆ อย่าเปิดลิ้นชักนี้ในขณะที่กำลังอยู่ในรอบซัก
ปัญหาด้านความแห้ง	• ตรวจสอบก๊อกแหล่งน้ำ	• อย่าใส่มากเกินไป ตรวจสอบว่าเครื่องชำระบายน้ำได้อย่างเหมาะสมในการระบายน้ำออกจากผ้าหรือไม่ • ปริมาณผ้าน้อยเกินไปสำหรับภาระปั่นอย่างเหมาะสม • เพิ่มผ้าเช็ดตัวสักสองสามผืน • ปิดก๊อกน้ำเข้า

แนวทางการแก้ปัญหา

อาการ	สาเหตุ	การแก้ไข
	ในห้องที่มีปริมาณน้ำไม่เพียงพอ	• ตรวจสอบก๊อกน้ำอื่นในบ้าน
	เปิดก๊อกน้ำไม่สุด	• เปิดก๊อกน้ำให้สุด
	ท่อน้ำเข้าตันอยู่	• จัดท่อให้ตรง
	ฟิลเตอร์ท่อน้ำเข้าอุดตัน	• ตรวจสอบฟิลเตอร์ท่อน้ำเข้า
	ปริมาณฝ้าน้อยเกินไป	• เพิ่มเสื้อผ้าที่คล้ายกัน 1 หรือ 2 ชิ้นเพื่อทำให้ผ้าสมดุล
	ผ้าไม่สมดุล	• เพิ่มเสื้อผ้าที่คล้ายกัน 1 หรือ 2 ชิ้นเพื่อทำให้ผ้าสมดุล
	เครื่องใช้ไฟฟ้าไม่มีระบบตรวจจับและแก้ไขการขาดสมดุล หากใส่ผ้าหนักสูงเพียงชั้นเดียว (เช่น ผ้าเช็ดเท้า ผ้าคลุม ฯลฯ) ระบบอาจหยุดปั่นหรือหยุดโปรแกรมปั่น	• จัดผ้าใหม่เพื่อให้เครื่องสามารถปั่นได้อย่างเหมาะสม
	ากผ้าเปียกเกินไปหลังเสร็จสิ้นโปรแกรมซัก ให้ใส่ผ้าชั้นเล็กเพิ่มสองสามชั้นเพื่อสร้างความสมดุล ให้ผ้าแล้วเปิดโปรแกรมปั่นอีกครั้ง	• จัดผ้าใหม่เพื่อให้เครื่องสามารถปั่นได้อย่างเหมาะสม
	ท่อบายบายตันหรืออุดตัน	• ทำความสะอาดและจัดท่อบายบายให้ตรง
	ฟิลเตอร์ทางระบายน้ำอุดตัน	• การทำความสะอาดตัวกรองท่อบายบาย
	ทำให้แน่ใจว่าประตู ไม่เปิดอยู่	• ปิดฝาให้สนิท หาก dE , $dE1$, $dE2$ ยังไม่หายไปให้โทรขอรับบริการ
	ข้อผิดพลาดการควบคุม	• ถอดปลั๊กเครื่องซักผ้าแล้วโทรแจ้งขอรับบริการ
	น้ำล้นเนื่องจากวาล์วน้ำบกพร่อง	• ปิดก๊อกน้ำ • ถอดปลั๊ก • ติดต่อขอรับบริการ
	เซ็นเซอร์ระดับน้ำทำงานผิดพลาด	• ปิดก๊อกน้ำ • ถอดปลั๊ก • ติดต่อขอรับบริการ
	มอเตอร์โอเวอร์โหลด	• ให้เครื่องซักผ้าหยุดทำงานเป็นเวลา 30 นาทีเพื่อให้มอเตอร์เย็นลงแล้วจึงเริ่มต้นรอบซักอีกครั้ง
	ท่อน้ำเข้า/ระบายหรือปั๊มระบายน้ำเป็นน้ำแข็งหรือไม	• เติมน้ำอุ่นลงในถังซักแล้วละลายน้ำแข็งในท่อบายบายและปั๊มระบายน้ำผ่านหนูซึมน้ำอุ่นไปหุ่มท่อน้ำเข้า
	น้ำรั่ว	• ติดต่อขอรับบริการ
	ไม่แห้ง	• ติดต่อขอรับบริการ

แนวทางการแก้ปัญหา

หมายเหตุ

- ฟังก์ชัน SMARTDIAGNOSIS™ จะใช้ได้ในผลิตภัณฑ์ที่มีสัญลักษณ์ SMARTDIAGNOSIS™ เท่านั้น สำหรับสมาร์ตโฟนที่มีตัวเลือกน้อย ฟังก์ชัน SMARTDIAGNOSIS™ อาจไม่ทำงาน

■ การใช้งาน SMARTDIAGNOSIS™


ใช้คุณสมบัตินี้เมื่อได้รับคำแนะนำจากศูนย์บริการทางโทรศัพท์เท่านั้น

เสียงสัญญาณจะคล้ายกับเสียงเครื่องโทรสาร จึงไม่มีความหมายใดๆ ยกเว้นกับศูนย์บริการทางโทรศัพท์

- จะไม่สามารถใช้งาน SMARTDIAGNOSIS™ ได้หากยังไม่เปิดพลังงานของเครื่องซักผ้า
- ในกรณีดังกล่าว ต้องทำการแก้ปัญหาโดยไม่ใช้ SMARTDIAGNOSIS™



หากคุณพบปัญหากับ เครื่องซักผ้าของคุณ โปรดติดต่อศูนย์บริการข้อมูลลูกค้า

ปฏิบัติตามคำแนะนำของเจ้าหน้าที่ศูนย์บริการ แล้วทำตามขั้นตอนต่อไปนี้เมื่อได้รับค่าขอ:

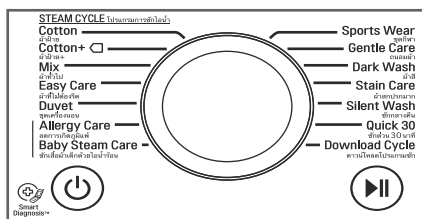

1. กดปุ่มพลังงานเพื่อเปิดใช้งานเครื่องซักผ้า
อย่ากดปุ่มใดๆ ยกเว้นปุ่มเลือกโปรแกรม

2. เมื่อได้รับคำแนะนำจากศูนย์บริการ
ให้เอาบริเวณไม้ค้ำของโทรศัพท์เข้าไปใกล้กับปุ่มพลังงาน

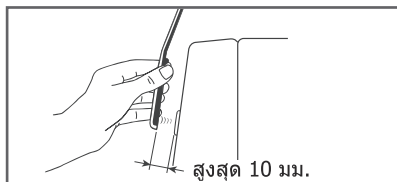

3. กดปุ่มอุณหภูมิค้างไว้หกวินาทีในขณะที่กำลังจ่อไม้ค้ำโทรศัพท์เข้ากับไอคอนหรือปุ่มพลังงาน
4. ให้โทรศัพท์อยู่กับที่จนกว่าสัญญาณเสียงจะจบ
ใช้เวลาประมาณ 6 วินาที จากนั้นหน้าจอจะเริ่มนับถอยหลัง
 - เพื่อผลลัพธ์ที่ดีที่สุด อย่าขยับโทรศัพท์ในขณะที่กำลังส่งเสียงสัญญาณ
 - หากเจ้าหน้าที่ของศูนย์บริการไม่สามารถบันทึกสัญญาณได้อย่างชัดเจน คุณอาจถูกขอให้ลองอีกครั้ง
 - การกดปุ่มพลังงานในขณะที่ส่งสัญญาณจะปิด SMARTDIAGNOSIS™
5. เมื่อการนับถอยหลังสิ้นสุดลงและเสียงสัญญาณหยุดลง ให้สนทนากับเจ้าหน้าที่ศูนย์บริการต่อ
ซึ่งเจ้าหน้าที่จะสามารถช่วยเหลือคุณโดยการใช้ข้อมูลที่ถูกส่งไปเพื่อการวิเคราะห์โดยศูนย์บริการข้อมูลลูกค้า

บันทึก



MFL67584586