



دلیل المستخدم LG Hi-Fi Plus with B&O PLAY

AFD-1200

User Guide

LG Hi-Fi Plus with B&O PLAY

AFD-1200

Compatible with G5 worldwide except Korea

 ϵ

REV 1.0 GCC

All rights reserved. LG Electronics Inc., 2016

Note: Please read all information carefully prior to
using the LG Hi-Fi Plus in order to enjoy the best
performance and prevent damage to the product.

REVIOGE

جميع الحقوق محفوظة. 10.4 LG Electronics Inc., 2016 ملحظة: يرجى قراءة كل المعلومات بعناية قبل استخدام LG Hi-Fi Plus لتجنب الحاق ضرر بالمنتج وللاستمتاع بأفضل أداء.

نظرة عامة على المنتج

DAC بعمق 32 بت هذه.

صوت أصلي أكثر.

- إن LG Hi-Fi Plus عبارة عن وحدة لتحويل صوت Hi-Fi بعمق 32 بت من رقمي إلى تناظري (DAC)، كما يمكن توصيلها بأسفل جهاز G5.
- يمكنك الاستمتاع بصوت Hi-Fi غنى بتوصيل أجهزة الصوت، مثل سماعات الرأس ومكبرات الصوت، بوحدة


بمكن لـ LG Hi-Fi Plus زيادة بتات محتوى الصوت الذي يقل عمقه عن 32 بت وزيادة استيفائه بهدف إنشاء

يمكن تشغيل محتوى الصوت العالى الجودة بعمق 32 بت بجودة الصوت الأصلى.

معلومات هامة حول السلامة

- استخدم دائمًا المنتجات الأصلية. لا تستخدم هذا المنتج لأي غرض غير مخصص له.
 قد بؤدى استخدام المنتجات غير الأصلية أو توصيلها إلى تقصير عمر المنتج أو التسبب بحدوث انفجار. وقد يؤدى
- القيام بذلك إلى إلحاق ضرر بالمنتج وبالتالي إلى إبطال ضمان الخدمة. • إذا تم إدخال وحدة غير متوافقة مع موفر الخدمة لديك، على سبيل المثال، وحدة تم شراؤها من موفر خدمة أخر أو
- · إذا نم إنخال وحدة غير منوافقه مع موفر الخدمة لذيك، على سبيل المنال، وحدة نم شراؤها من موفر خدمة لخر او من منطقة لا يغطيها موفر الخدمة، فقد لا يعمل الجهاز بشكل صحيح.
- لا تفكك المنتج أن تسمح لأن يتعرّض لصدمة. فقد يؤدي القيام بذلك آلى حدوث صدمة كهر بانية أو قصر في الدائرة أو نشوب حريق.
 - يؤدي الضغط بقوة على المنتج إلى إلحاق الضرر به.
 - ووجي المتعط بنواء على العلم إلى المنتج أو قد يتغير شكله أو يتعطل في حال تم ثنيه أو سحقه ولم يتم تصليحه على
 - ر... • بهدف منع إلحاق الضرر بالمنتج، انتبه لعدم إسقاط المنتج على سطح قاس أو تعرّضه لصدمة قوية.
 - .» • ابق المنتج بعيدًا عن المياه أو الكحول أو البنزين الخ.
 - لا تُستخدم المنتج أو تخزّنه في مكان ذي درجات حرارة شديدة. لا تترك المنتج في مكان يتعرّض فيه لأشعة
 - الشمس المباشرة لفترات طويلة من الوقت. فقد يؤدي ذلك إلى الحاق ضرر به أو حدوث انفجار. لا تستخدم الكحول أو البنزين أو الثنر أو المنظفات لتنظيف المنتج. فقد يؤدي ذلك إلى نشرب حريق.
 - لا تستخدم المحول او البنزين او النتر او المنطقات التنظيف المنتج. فقد يؤدي دلك إلى نشوب حريق.
 استخدم قطعة قماش ناعمة أمسح المنتج.
 - المسلم سنة عند القرب من أغراض معنية مثل القلائد أو المفاتيح أو العملات المعنية أو المسامير أو الساعات.
- في حال حدوث قصر في الدائرة الكهربائية، سيكون هناك أيضًا خطر حدوث انفجار.
 ابق المنتج بعيدًا عن متناول الأطفال الصغار والحيوانات الأليفة. لا تضع المنتج في فعك أو تعرضه لصدمة قوية.
 - يوَجد خطّر حدوث صدمة كهربانية أو انفجار أو اختناق.
 - لا تقم بتوصيل مواد موصلة (قطع معننية، رصاصات أقلام وغيرها) أو إدخالها في الموصلات.
 - لا تغطُ المنتج أو تغلفه ببطانية عند استخدامه.
 - قد يصبح المنتَج ساختًا بعد استخدامه لقرّ ات طويلة. تجنب لمس المنتَج عندما يصبح ساختًا، فقد يؤدي ذلك إلى التعرض لحروق بسبب انخفاض درجات الحرارة.
 - لا تتخلص من المنتج كمهملات منزلية. فقد يؤدى ذلك إلى نشوب حريق أو إلحاق ضرر بالبيئة.

مكونات المنتج

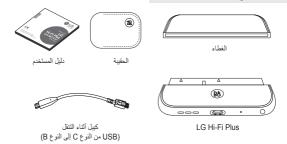

- تم توصيل غطاء LG Hi-Fi Plus بالوحدة الرئيسية لـ Hi-Fi Plus عند التغليف
 - فقدان أي مكونات؛ اتصل بالبائع بالتجزئة الذي التتريت منه المنتج.
 - تَتَغَيِّر بعض العناصر من دون إشعار مسبق بحسب الظُروف.
 - يتغيّر شكل المنتج ومواصفاته من دون إشعار مسبق لتحسين الأداء.

3

وصف المنتج





قد لا تتوفر بعض الوظائف وفقًا لمواصفات المنتج.

4

التوصيلات

تثبيت البطارية

1 قم بمحاذاة الأسهم على كل من البطارية والوحدة وقم بتوصيل أطراف البطارية بالوحدة بإحكام.



2 قم بمحاذاة البطارية مع الحافة السفلي وأعِد إدخال الوحدة في الجهاز بعناية.



- لا تضغط على مفتاح إخراج الوحدة مطلقًا أثناء إدخال الوحدة في الجهاز.
 - عند إدخال البطارية في الجهاز، تأكد من أن البطارية مرفقة بالوحدة.

إزالة البطارية



2 امسك وسط الوحدة التي تم إخراجها واسحبها إلى الخارج.



3 امسك البطارية والوحدة بينيك الانتئين وافصلهما عن بعضهما بشكل نصف دائري نحو الخارج (كما هو مُشار إليه أدناه) لفصل أطراف البطارية.



- لا تفصل الوحدة عندما تكون قيد الاستخدام.
- قم فورًا بتوصيل الوحدة بالوحدة الرئيسية إذا أصبحت مرتخية أو إذا انفصلت أثناء الاستخدام.
 تجنب الحاق الأذى بيديك أو أصابحك عند توصيل الوحدة أو فصلها.
 - تجنب رسان ۱۵۰۰ بیوت او الصحات سان المحدة.
- تعبت جرح تعست بعوات المسلج أو موضا.
 احرص على إدخال البطارية والوحدة بشكل صحيح. وإلا، فقد يتعرّض المنتج للتلف أو قد تقشل عملية التشغيل.
 - قد يؤدي عدم اتباع الإرشادات المذكورة في دليل المستخدم هذا إلى إلحاق ضرر بالمنتج.

التعليمات

- لن يعمل هذا المنتج بشكل طبيعي إذا كان جهازا G5 وLG Hi-Fi Plus مدعومين في بلدان مختلفة أو من قبل مشغلان مختلفان.
- عندما تكون سماعات الأذن موصولة بـ LG Hi-Fi Plus، يتعذر ضبط الصوت في إعدادات > عامة > إمكانية الوصول > السمع.
- عندماً يكون LG Hi-Fi Plus موصولاً بجهاز G5، فسيساعد فصل سماعات الأذن عن LG Hi-Fi Plus عند
 عدم استخدامه في الحدّ من استهلاك الطاقة.
- إن صوت Hi-Fi بسرعة 384 كيلوبت في الثانية مدعوم. سيزيد استهلاك الطاقة بشكل بسيط أثناء استخدام هذه المدنة
- سيتم حظر كل الأصوات باستثناء نغمة الرئين والتنبيه أثناء تشغيل ملفات DSD (dsf ، dff).). سيهتز الجهاز في
 حال تلقى أي إشعارات.
- إذا كانت مساعة رأس Bluetooth® موصولة اثناء مكالمة فسيتر استخدام جهاز "Bluetooth® لإخراج الصوت. إذا لم يكن أي جهاز "Bluetooth® موسولة فسيتم استخدام أي سماعات أنن موصولة بلهلفت لإخراج الصوت. إذا كانت سماعات الأون موصولة بـ Hi-Fi Plus إلى المحالة المتخدام إلى الإمار الصوت
 - لتشغيل رانبو FM أو DMB (إذا كان طراز متوافق مع DMB متوفرًا)، قم بتوصيل سماعات أذن بمقبس
- سماعات الأذن في الجزء العلوي من جهاز B5 لاستخدامه كهوائي. • عندما يكن جهاز Hi-Fi Plus مرصو لأ يجهاز B5 عندما تكون سماعات الأذن موصولة، سيتم تسجيل
- عدما پدون چهار All-FIMIS من 12 موصور : بجهار 60 عدما ندون مساعت ، دس موصوب، سبم مسجد آي صوت وصوت خارجي عبر الميكور وفن على Hi-Fi Plus في على عند تسجيل الصوت أو مقاطع الفيديو. المن من مستوصر المستورين المستورين على المستورين المستورين المستورين المستورين المستورين المستورين المستورين ا
 - ليست ميزة الاتصال مدعومة أثناء استخدمك سماعات الأذن بـ 3 أقطاب.

يمكنك استخدام ميزة Hi-Fi على هواتف غير هواتف G5 بواسطة الكيبلات المستخدمة أثناء التنقل، الخ.



إذا قمت بتوصيل الأجهزة المحمولة (OTG) بـ LG Hi-Fi Plus الموصول بهاتف G5، ظن يتم التعرف إلى أجهزة OTG (ليست تقنية OTG مدعومة).

إذا كان LG Hi-Fi Plus موصولاً بهاتف G5 تم بيعه في أمريكا الشمالية أو كندا، فلن يعمل الهاتف.

تنزيلات برنامج تشغيل الكمبيوتر الشخصي

يمكن توصيل LG Hi-Fi Plus بكمبيوتر شخصي عند تنزيل "Hi-Fi Plus PC Driver.exe" من موقع ويب
 ين موقع ويب (www.lq.com إلى الموقع العاج) (www.lq.co.kr الموقع العاج)

ترقيات البرامج الثابتة

- فَعُ بِسَرِقِيَّة البَرامِية الثابَة عبر تنزيل "Hi-Fi Plus Manager.exe" من موقع ويب LG Electronics (في كو را كو ربا www.lgr.com؛ الهو قم العامر (www.lgr.com) وتثبيته
 - تتوفر ترقيات البرامج الثابتة أيضًا عبر تطبيق LG Friends Manager.

المواصفات والميزات	
نوع USB	(C النوع USB 2.0)
الفولتية	5 فولت ± %10
الاستهلاك الحالي	220 ميلي أمبير (مع مأخذ سماعة أذن)، 3 ميلي أمبير (من دون مأخذ سماعة أذن)
مقبس سماعة الأذن	4 أقطاب/3 أقطاب مع ثابت دائرة يساوي 3.5
الصوت	مكبر الصوت والميكروفون الرقمي
ضغط الصوت	يبلغ ضغط الصوت على بُعد متر واحد 60 ديسييل أو أكثر (100%) *بالاستناد إلى الشحن الكامل
الهواني	GSM/CDMA وLTE WCDMA
درجة حرارة التشغيل	من 20- درجة مئوية إلى 40 درجة مئوية
الأبعاد/الوزن	7.4 x 43.9 x 73.9 غ غ

معلومات اضافية

رحم التخلص من الأجهزة القديمة الخاصة بك

ك جميع الأجيزة الكبرياتية و الإلكترونية بجب التخلص منها بشكل منفصل عن النفايات المنزلية عير
 منشات التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
 ك سيساعد التخلص من جهازك القديم بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة

 ميساعد التخلص من جهازك القديم بشكل صحيح في الحد من اسبعات السبيه المحتملة لسبيته وصحه الإنسان.

3 لمزيد من المعلومات المفصلة حول التخلص من جهازك القديم، يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي المتربت منه المنتج.


بيان التوافق


ين الرحق نطن LG Electronics بمرجبه أن المنتج LG AFD-1200 يترافق مع المنطلبات الأساسية والأحكام الأخرى ذات الصلة الخاصة بالترجبه 2014/30/EU يمكن العثور على نسخة من إعلان التوافق على العنوان التالي http://www.lg.com/global/declaration

الضمان المحدود

تبعًا لشروط هذا الضمان المحدود، تضمن شركة LG ELECTRONICS أن يكون هذا المنتج خاليًا من أي عوب غوب غير المحدود، تضمن شركة LG ELECTRONICS أن يكون هذا المنتبطّك، ولمدة سنة (1) لاحقة. وذا كان المنتبطّك، ولمدة سنة (1) لاحقة. وذا كان المنتبع بحلجة إلى خدمة الضمان، يرجى إعادته إلى الباتم الذي الشتريقة منه أو الاتصال بمركز الاتصال المحلى النابع منابع من من من المعلومات.

شركة إل جي للإلكترونيات – المشرق العربي منطقة مشروع العبدلي- جادة رفيق الحريري- الطابق الخامس

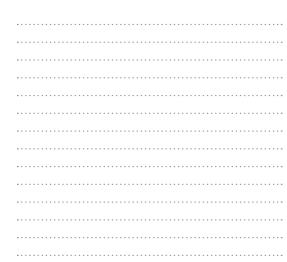

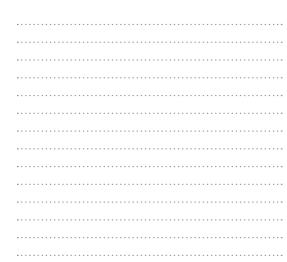

Product Overview

The LG Hi-Fi Plus is a 32-bit hi-fi digital-to-analogue converter (DAC) module that can be attached to the bottom of your LG GS.

You can enjoy a rich hi-fi sound by connecting your audio devices, such as headsets and

- You can enjoy a rich ni-n sound by connecting your audio devices, such as neadsets a speakers, to this 32-bit DAC.
- 32-bit high-quality audio content can be played in its original sound quality.
- The LG Hi-Fi Plus can upbit and upsample your existing audio content with less than 32-bit quality so that it plays closer to the originally intended sound.

ı

Important Safety Information

- · Always use genuine products. Do not use this product for any unintended purpose.
- Using or connecting products that are not genuine may shorten the product's longevity or cause an explosion. Doing so may also damage the product and thereby void the service warranty.
- If you insert a module that is not compatible with your service provider (for example, a module bought from another service provider or in an area that is not covered by your service provider), your device does not operate normally.
- Do not disassemble the product or allow anything to impact it. Doing so may cause an electric shock, short circuit, or fire.
- · Applying heavy pressure to the product may damage it.
- Some functions of this product may be damaged, or its appearance may become altered
 or impaired if it is bent or crushed and not repaired immediately.
- In order to prevent any damage, be careful to not drop the product on a hard surface or subject it to a severe shock.
- · Keep the product away from water, alcohol, benzene, etc.
- Do not use or store the product in environments with extreme temperatures. Do not leave the product in direct sunlight for long periods of time. Doing so may cause damage or an explosion.
- Do not use alcohol, benzene, thinners, or detergents to clean the product. Doing so may cause a fire.
- · Use a soft cloth to wipe the product.
- Do not place the product near metal objects, such as necklaces, keys, coins, nails, or clocks. In the case of a short circuit, there is also a risk of explosion.

- Keep the product out of the reach of small children and pets. Do not put the product in your mouth or subject it to a severe shock. There is a risk of electric shock, explosion, or suffocation.
- Do not connect or insert conductive materials (metal pieces, pencil leads, etc.) into the connectors.
- · Do not cover or wrap the product with a blanket while in use.
- The product may become hot after long periods of use. Avoid touching the product when it becomes hot as it may cause a low-temperature burn.
- Do not dispose of the product as household waste. Doing so may cause a fire or damage the environment




Excessive sound pressure from earphones and headphones can cause hearing loss. To prevent possible hearing damage, do not listen at high volume levels for long periods.

Product Components





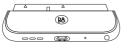

Cap




LG Hi-Fi Plus

OTG Cable (USB Type-C to Type-B)

- The cap of the LG Hi-Fi Plus is attached to the main unit of the LG Hi-Fi Plus when packaged.
- If there are any missing components, contact the retailer where you purchased the product.
- Some items are subject to change without prior notice depending on the circumstances.
- The appearance and specifications of the product are subject to change without prior notice to improve performance.

Product Description

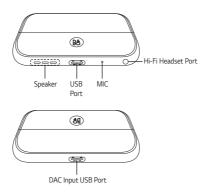

Some functions may not be available depending on the product specifications.

5

Connections

Inserting the Battery

1 Align the arrows on both the battery and the module and firmly connect the battery terminals to the module.




2 Align the battery with the lower edge and carefully slide the module back into the device.



- · Never press the Module Eject Key when inserting the module into the device.
- When inserting the battery into the device, make sure the battery is attached to the module

Removing the Battery

1 Press the Module Eject Key to partly eject the module from the device.

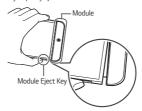

2 Grip the middle of the ejected module and pull it out.



7

3 Hold the battery and the module with both hands and separate them from one another in an outward arc (as indicated below) to disconnect the battery terminals.



- Do not detach the module while it is in use.
- Immediately attach the module to the main unit if it becomes loose or detached during use.
- · Be careful to not hurt your hands or fingers when attaching or detaching the module.
- · Be careful to not be injured by the edges of the product or the module.
- Make sure the battery and the module are properly inserted. Otherwise, the product may be damaged or fail to turn on.
- Failing to follow the instructions in this user guide may result in damage to the product.

Instructions

- This product will not operate normally if your G5 and LG Hi-Fi Plus are supported by different countries or operators.
- While your earphones are connected to the LG Hi-Fi Plus, USB data communication is not available. (Hi-Fi features and charging are available. High-speed charging is not available.)
- While your earphones are connected to the LG Hi-Fi Plus, the audio cannot be adjusted in Settings > General > Accessibility > Hearing.
- While the LG Hi-Fi Plus is attached to your LG G5, unplugging your earphones from the LG Hi-Fi Plus while it is not in use will help reduce power consumption.
- 384 kbps hi-fi audio is supported. Power consumption will increase slightly when this feature is in use.
- All sounds except for the ringtone and alarm will be blocked while playing DSD files (.dff, .dsf). Your device will vibrate if you receive any notifications.
- If a Bluetooth® headset is connected during a call, the Bluetooth® device will be used
 for the audio output. If there is not a Bluetooth® device connected, then any earphones
 connected to your phone will be used for the audio output. If your earphones are
 connected to only the Hi-Fi Plus, then those earphones will be used for the audio output.
- To play FM radio or DMB (if it is a DMB-compatible model), connect your earphones to the earphone jack on the upper part of the LG G5 to serve as an antenna.
- When your LG Hi-Fi Plus is attached to your G5 while your earphones are connected, any voice or external audio will be recorded via the microphone on your LG Hi-Fi Plus when recording voice or videos.
- The call feature is not supported while you are using 3-pole earphones.

· You can use the hi-fi feature on phones other than the LG G5 using OTG cables.



If you connect OTG devices to an LG Hi-Fi Plus that is attached to an LG GS, the OTG devices will not be recognised (OTG is not supported).

 If the LG Hi-Fi Plus is attached to a an LG G5 that was sold in North America, the phone will not turn on.

PC Driver Downloads

 The LG Hi-Fi Plus can be connected to a PC once you download and install "Hi-Fi Plus PC Driver.exe" from the LG Electronics website (Korea: www.lgmobile.co.kr, or global: www.lg.com).

About Firmware Upgrades

- Firmware upgrades are available by downloading and installing "Hi-Fi Plus Manager.exe" from the LG Electronics website (Korea: www.lgmobile.co.kr, or global: www.lg.com).
- Firmware upgrades are also available using the LG Friends Manager app.

Specifications and Features

USB Type	USB 2.0 (Type-C)
Voltage	5 V ± 10%
Current Consumption	220 mA (with earphone jack), 3 mA (without earphone jack)
Headphone Jack	4 Pole / 3 Pole 3.5 mm
Audio	Speaker and digital MIC
Sound Pressure	1 m sound pressure 60 dB ↑ (100%) *based on a full charge
Antenna	GSM/CDMA, WCDMA, LTE™
Operating Temperature	-20 °C - 40 °C
Dimensions/Weight	73.9 mm x 43.9 mm x 7.4 mm / 23.6 g

Additional Information



Disposal of your old appliance

- 1 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 3 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

DECLARATION OF CONFORMITY

Hereby, LG Electronics declares that this LG AFD-1200 product is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU. A copy of the Declaration of Conformity can be found at http://www.lg.com/global/declaration

Limited Warranty

SUBJECT TO THE CONDITIONS OF THIS LIMITED WARRANTY, LG ELECTRONICS WARRANTS THIS PRODUCT TO BE FREE FROM DEFECTS IN DESIGN, MATERIAL AND WORKMANSHIP AT THE TIME OF ITS ORIGINAL PURCHASE BY A CONSUMER, AND FOR A SUBSEQUENT PERIOD OF ONE (1) YEAR SHOULD YOUR PRODUCT NEED WARRANTY SERVICE, PLEASE RETURN IT TO THE DEALER FROM WHOM IT WAS PURCHASED OR CONTACT YOUR LOCAL LG ELECTRONICS CONTACT CENTRE TO GET FURTHER INFORMATION.

LG Electronics (Levant) - Jordan

Abdali Project, Rafik Al-Hariri Avenue, The Boulevard, Central Square, 5th Floor

