


SPECIFICATIONS

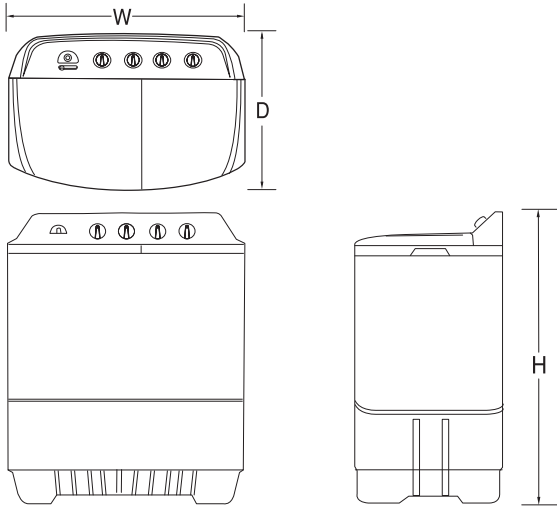

Power source	On specification label
Water Level	H : 84 Litres, L : 72 Litres, M : 60 Litres, S : 50 Litres
Water Pressure	Less than 100 kPa (1 kgf/cm ²)
Dimension	905 x 545 x 1025 mm. (W x D x H)
Weight	32.0 kg.
Wash Capacity	13.0 kg. (Dry Clothes)
Drying Capacity	10.0 kg. (Dry Clothes)



Scan the QR code to see the manual.



ENGLISH
ARABIC

OWNER'S MANUAL WASHING MACHINE

Please read this manual carefully before operating washing machine and retain it for future reference

MODEL : P1761RWNBL



MFL71743327
Rev.00_290324

www.lg.com

Copyright © 2024 LG Electronics Inc. All Rights Reserved.

8

SAFETY MEASURE

WARNING

Installation Area

- Avoid area exposed to snow, rain, or where humidity is high. It may cause electric shock or fire.



Switch Area

- Avoid watering on the switch area. It may cause electric shock or fire.



Volatile Material

- Do not use volatile material such as Benzene, Gasoline, bug killer.
- Do not leave strong alkaline substance such as bleach inside the tub. Damage on plastic surface and rubber parts may occur.



Installation

- Install the washing machine on a horizontal support. Otherwise, it may cause vibration and noise.



- Be sure to disconnect the power cord from the electric outlet before starting care and maintenance. It may cause electric shock.



- Be sure to earth the washer to prevent electric shock. To reduce the risk of electric shock, do not install the washer in humid space.



Heat

- Avoid electric heater, candle light, cigarette light, bug smoker, etc. near the machine. It may ignite or deform plastic part.



Hot water

- Avoid using hot water over 50°C. It may deform plastic parts or cause malfunction.



In Operation

- Do not insert the hand inside the spin dryer basket while the machine is in operation (Do not let children climb on the machine or climb into the tub. Injury may occur.)
- Do not drain the water out of the wash tub while the spin dryer basket is in operation. Otherwise the spin motor could be damaged.



Power Cord

- If the power supply cord is damaged, it must only be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not treat the power supply cord with your wet hand. It may cause electric shock.



Electric Outlet

- Avoid connecting several electric devices to single outlet. It may cause fire.




- This washing machine is intended to be used in household and similar applications only.
- If this product is used for commercial purpose, it is not warranted. (Example : Public places such as public bathroom, lodging house, training center, dormitory)


If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product or the replacement of a defective part, shall be borne by the owner.

2

FEATURES

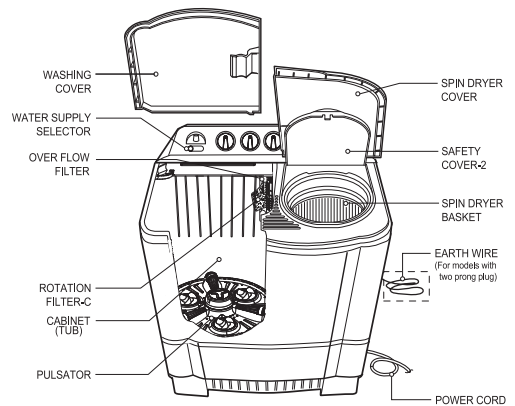

(Please do not match this figure with model as it may be different from your model. These are schematic diagrams only.)

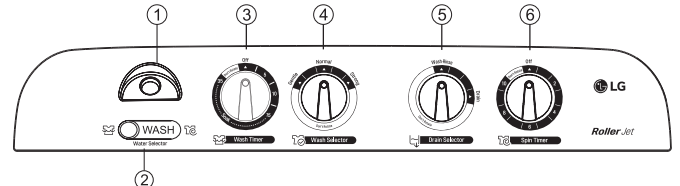

1. Water Supply Inlet

Connect here with the inlet hose from the water faucet to feed water to the tub.

2. Water Selector

Select "WASH" to supply water for washing and rinsing and "SPIN" for spin shower rinse.

3. Wash Timer

Select the desired time for soaking washing or rinsing.

4. Wash Selector

Set the program to "Gentle", "Normal", "Strong" according to kind and quantity of the laundry.

5. Drain Selector

Select "Wash-Rinse" for washing and rinsing and "Drain" to drain the water out of the tub.

6. Spin Timer

Select the desired time for spinning. The maximum limit is 10min, but shall not be continued over 3 cycle. Don't rotate the knob more than prescribed limit. ** After 3 times continuous spinning, please stop spinning more than 1 hour, otherwise the spin motor may be damaged or fire or stop operation.

3

INSTALLATION

Installation area

- Set on flat and firm floor.
- Incorrect installation may cause severe noise and break down.




- Maintain more than 10 cm. between the side of drain hose and the wall.
- A carpet must not obstruct the ventilation openings.



Connecting the earth wire (only for models with two prong plug)


- Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer. Connect it to the metal water pipe. If the water pipe is made of plastic, it does not have the earth effect.
- Do not connect the earth wire to the gas pipe, lightning arrester, telephone connector, etc.

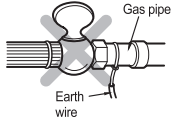

⚠ Warning-the appliance with two-pronged plug must be grounded


Connecting the power plug

- Insert the power plug into the outlet.
- Before connecting the power plug, check if the voltage setting of the washer matches the outlet voltage.
- If AC outlet with ground terminal is used, grounding is not needed. If not, never forget earthing (earthing method above).
- The appliance must be positioned so that the plug is accessible




Other earthing method


- After connecting the earth wire to the earth copper plate, bury it at least 75cm deep under the wet ground.



- Connect to the earthing-only outlet.



- If grounding methods as described are not possible, a separate circuit-breaker should be employed and installed by a qualified electrician.



Connecting the drain hose

- Push the clamp toward the body of the washing machine as shown in the figure.
- Be sure to reroute the hose so that it is not kinked; kinks or sharp bending in the hose will prevent proper drainage.
- Make sure water is drained smoothly by placing a base under the machine or by applying other appropriate mean.



INSTALLATION & HOW TO WASH

Before washing

- Check the washing instruction labels on the clothing to be washed.
- Remove all objects from the pockets of the clothing. Objects left in the pockets may damage clothing or break the washing machine (could cause the drain hose to clog)
- Wash after separating oiled or dyed clothing.
- For your convenience hang up the wash cover on the right side of the washing machine tub when not in use.

Remove this before washing



How to wash

1 Set the drain selector Set as "Wash-Rinse" position. 	5 Select the wash selector to "Gentle", "Normal" or "Strong" according to the kinds and quantity of the laundry. (Refer to Table 2) 	7 When washing is finished, locate the drain selector to "Drain" position and drain the water out.
2 Set the water selector to "WASH" 	6 Set the desired wash time. 	8 Spinning in the spin dryer basket. Move the laundry into spin dryer basket. Put the laundry down lightly. Place the safety cover horizontally on the laundry. Set the desired spin time with the spin timer.
3 Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level which you want. (Refer to Table 2) 	4 Open water supply and fill water till water level mark "H". That is because clothes can absorb adequate amount of water and water will not short. 	

HOW TO RINSE & HOW TO SPIN


Interim spin rinse

- Interim spin rinse prior to regular rinsing helps removing sudsy water from the laundry and improve rinsing efficiency. Also is helpful to water saving.

1 After washing. • Move the laundry into the spin dryer basket. • Place the safety cover horizontally on the laundry. 	2 Set the water selector to "SPIN". 	4 After interim spin rinse, move the laundry into the wash tub for rinsing.
	3 Set the desired water flow and spin time appropriately. 	

Note for spinning


- Put the laundry evenly into the spin dryer basket.
- Put the laundry down lightly.
- Place the safety cover horizontally over the laundry, washing machine may get damage if the safety cover is not placed.
- Close the spin dryer cover.
- Do not drain the water out of the wash tub while the spin dryer basket is in operation.
- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly and then resume spinning.
- If the spinning fail to stop when the spin dryer cover is opened, the brake is out of order. Immediately stop using the machine and request repair service.

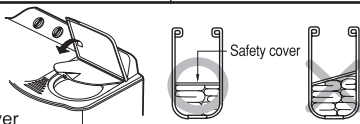

CARE & MAINTENANCE

Overflow filter & Rotation filter-C

- Lift up the area (A) of the over flow filter and take out the rotation filter-C by pulling in direction as shown.
- Pull the overflow filter forward from the wash tub in the direction of the arrow.
- Turn the net over and rinse in water.
- Use a brush or hand to remove all of the lint which has adhered to the overflow filter.
- Insert the overflow filter back into the wash tub.
- Insert the rotation filter-C back into the overflow filter.

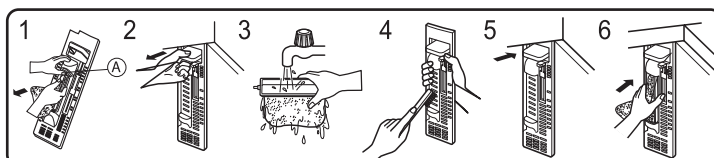

REFERENCE

TABLE 1. WEIGHT GUIDE FOR CLOTHES

Type of clothing	Type of fabric	Weight per piece
Under shirt	Cotton	150g (5.3oz)
Handkerchief	Cotton	50g (1.8oz)
Bath towel	Cotton	300g(10.6oz)
Shirt	Mixed fabric	200g(7.1oz)
Socks (1 pair)	Mixed fabric	50g(1.8oz)
Pajama (shirt and pants)	Cotton	500g(17.6oz)
Winter undershirt	Woolen	600g(21.2oz)
Workclothes	Mixed fabric	800g(28.2oz)
Blouse	Mixed fabric	200g(7.1oz)

TABLE 2. GUIDE FOR WASHING

Type of Fabric	Wash Selector	Wash Time	Water Level	Amount of Laundry (kg)	Amount of Water (Ltr)	Amount of Detergent (gms)
Woolen, Knits	GENTLE	~5 min.	H	0.5 ~ 2.0	84	84
Synthetics, Silk	GENTLE	~5 min.	S	0.5 ~ 5.0	50	50
			L	5.0 ~ 6.0	60	60
			M	6.0 ~ 7.0	72	72
			H	7.0 ~	84	84
Cotton, Linen	NORMAL	5 ~ 10 min.	S	0.5 ~ 5.0	50	50
			L	5.0 ~ 6.0	60	60
			M	6.0 ~ 7.0	72	72
			H	7.0 ~	84	84
Very soiled cotton and linen	STRONG	10 ~ 15 min.	S	0.5 ~ 5.0	50	50
			L	5.0 ~ 6.0	60	60
			M	6.0 ~ 7.0	72	72
			H	7.0 ~	84	84

Notes :

- Amount of laundry is a weight of dry laundry.
- Detergent is a general synthetic detergent.

⚠ CAUTION : Fill in wash to height 20mm above the level you desire. When washing starts water level will automatically come to level you desire.

TROUBLESHOOTING GUIDE

Before Requesting Service

Problem	Checking point
Motor does not operate,	- Is the power cord firmly plugged in? - Is the timer turned to a suitable point except "Off" ?
Spin dryer basket does not operate.	- Is there any clothing dropped between the basket and tub? - Is the spin dryer cover closed? - Is the laundry gathered to one side of the spin dryer basket?
Water does not enter washer	- Is the water faucet hooked up? - Is the water faucet frozen?
No draining	- Is there lint stuck in the plunger valve? - Is the end of the drain hose guide located at an exceed height? - Is the drain hose laid down? - Is the drain hose twisted?



دليل المستخدم جهاز الغسالة

الرجاء قراءة إرشادات التشغيل بعناية وبصورة
كاملة قبل تركيب وتشغيل الغسالة الخاصة بك.

طراز P1761RWNBL





MFL71743327
Rev.00_290324

www.lg.com




حقوق النشر 2024 إل جي للإلكترونيات. كل الحقوق محفوظة

المزايا

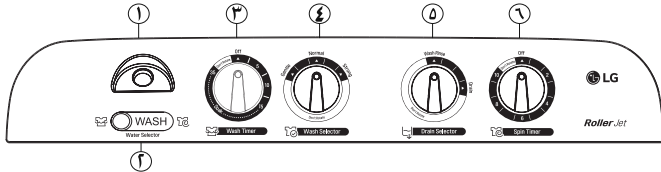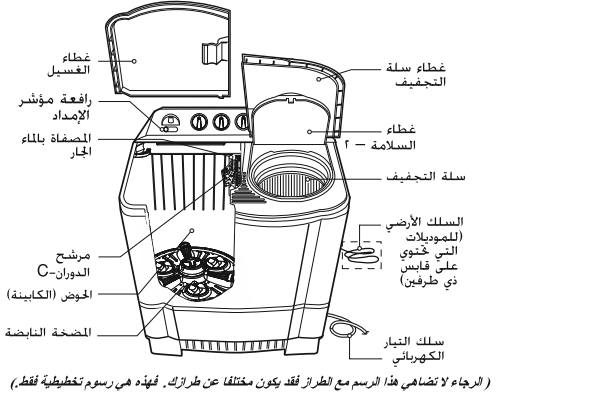

- مدخل تزويد الماء
صل خرطوم تزويد الماء من هذا المدخل إلى حنفية الماء لتزويد الحوض بالماء.
- مفتاح اختيار الماء
اختر "غسيل" لتزويد الماء للغسيل والشطف واختر "التدوير" للشطف الدوار بالرش المائي.
- موقت الغسيل
اختر الوقت المناسب للغسيل أو التفع.
- برنامج الغسيل
قم بضبط برنامج الغسيل على "هادئ" أو "عادي" أو "قوي".
طبقاً لنوع وكمية الغسيل.
- مفتاح اختيار التصريف
اختر "غسل-شطف" للغسيل والشطف و اختر "تصريف" لتصريف الماء من الحوض.
- حدد الوقت المطلوب للتجفيف. الحد الأقصى المسموح به هو ١٠ دقائق - لا تقم بتدوير المقيض أكثر من الحد المسموح به.
- بعد ٣ مرات من التدوير المتواصل يرجى إيقاف موتور التجفيف لمدة ساعة والألا أكثر من ساعة والألا فقد يتضرر محرك الدوران أو يحترق أو يتوقف عن التشغيل.

المواصفات

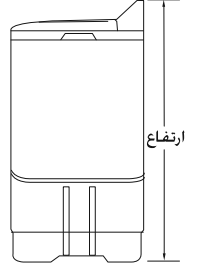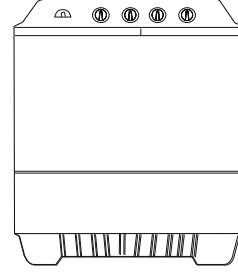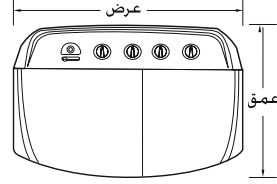

مصدر الطاقة	مكتوب على بطاقة المواصفات
مستوى الماء	أقصى ارتفاع ٨٤ لتر، متوسط ٧٢ لتر، أقل ارتفاع ٦٠ لتر، الإنسب ٥٠ لتر
ضغط الماء	أقل من ١٠٠ ك باسكال (١ كغم قوة/سم ^٢)
الأبعاد	٩٠٥ × ٥٤٥ × ١٠٢٥ م (عرض × عمق × ارتفاع)
الوزن (الصافي)	٣٢٠ كغم
سعة الغسيل	١٣ كيلو (ملابس جافة)
سعة التجفيف	١٠ كيلو (ملابس جافة)

٨

تنبيه

تنبيه! منطقة التركيب جنب تركيب الغسالة في مكان معرض لسقوط الثلج أو المطر والرطوبة العالية لأن ذلك يؤدي إلى صدمة كهربائية.	الحرارة جنب أجهزة التدفئة الكهربائية أو ضوء الشموع أو ضوء الولاعات أو الدخان الطارد للحشرات... إلخ بالقرب من الجهاز لأن ذلك قد يؤدي إلى إشعال أو نشوبه في الجزء البلاستيكي.
منطقة المفاتيح الكهربائية جنب رش الماء فوق المفاتيح الكهربائية. الأمر قد يؤدي إلى صدمة كهربائية أو حريق.	الماء الساخن تجنب استخدام الماء الساخن. هذا قد يؤدي إلى حدوث تشويه في الأجزاء البلاستيكية أو حدوث عطل في الجهاز.
المواد الحادة لا تستخدم المواد الطيارة مثل البنزين. والجارولين. والمبيدات الحشرية في تنظيف الغسالة. لا تترك مواد شديدة الفلوية مثل المبيضات داخل حوض الغسيل. فقد يحدث تلفاً في الأسطح البلاستيكية والأجزاء المطاطية.	كابيل الطاقة إذا تعرض كابل إمداد الطاقة للتلف. يجب استبداله من قبل المنتج أو مركز الخدمات له.أو الشخص المؤهل الممثل من أجل تجنب الخطر. انزع كابل الكهرباء، خلال التنظيف أو عند عدم استعمال الغسالة لمدة طويلة.
التركيب ركب جهاز الغسالة على أرض مستوية ولا تصدر ضوضاء وتحدث اهتزاز.	تأكد من فصل سلك التيار من مصدر التيار الكهربائي قبل بدء عملية العناية والصيانة.
تأكد من توصيل سلك الغسالة الأرضي لتجنب حدوث صدمة كهربائية. ولتقليل خطر التعرض لحادث صدمة كهربائية. تجنب أيضاً وضع الغسالة في أماكن رطبة.	تجنب توصيل الأجهزة الكهربائية العديدة إلى مخرج التيار الواحد. والأمر قد يؤدي إلى إحداث حريق.
توصيل خرطوم التصريف اضغط المزلاج نحو جسم جهاز الغسالة كما هو موضح في الشكل. تأكد من تبسير مجرى الخرطوم كي لا يحدث به التواء. حيث سيمنع الالتواء أو الثني الماء في الخرطوم التصريف بشكل صحيح. تأكد من أن تصريف الماء يتم بسلاسة عن طريق وضع قاعدة أسفل الغسالة أو عن طريق وضع أية وسائل أخرى مخصصة لذلك.	تأكد من تبسير مجرى الخرطوم كي لا يحدث به التواء. حيث سيمنع الالتواء أو الثني الماء في الخرطوم التصريف بشكل صحيح. تأكد من أن تصريف الماء يتم بسلاسة عن طريق وضع قاعدة أسفل الغسالة أو عن طريق وضع أية وسائل أخرى مخصصة لذلك.

- هذه الغسالة مخصصة للإستخدام المنزلي والمنشآت المماثلة لها فقط.
- * إذا استخدم هذا الجهاز للغرض التجاري، لا تغطي الضمانة ضرره. (على سبيل المثال : الأماكن العامة مثل الحمامات العامة ، مركز التدريب ، الفنادق والنخ.
- إذا تم تركيب الجهاز خارج منطقة الخدمات العادية، يتحمل مالك الجهاز نفقات إصلاح الجهاز أو نفقات تبديل الجزء المتضرر مع أية تكلفة النقل.

التركيب

منطقة التركيب

- ركب الجهاز على أرضية مستوية وثابتة.
- التركيب غير الصحيح ربما يؤدي إلى إحداث ضجيج شديد وتعطل الجهاز.



توصيل السلك الأرضي (للطرازات المزودة بمقبس ذي ستين)

- ركب السلك الأرضي لمنع حدوث قطع كهربائي نتيجة لتسرب التيار والصدمة الكهربائية.
- السلك الأرضي مركب في ظهر الغسالة. أوصل السلك إلى أنبوب الماء المعدني. وإذا كان أنبوب الماء مصنوعاً من البلاستيك فليس لديه توصيل أرضي.
- لا توصل السلك الأرضي مطلقاً إلى أنبوب الغاز أو واقية الصواعق أو وصلة التليفون إلخ.

⚠ خذير — أوصل السلك الأرضي أولاً قبل توصيل قابس الطاقة إلى مخرج التيار في الجدار.

توصيل القابس

- أوصل قابس الطاقة إلى مأخذ التيار.
- قبل توصيل قابس الطاقة، افحص إذا كان ضبط فولتية الغسالة يتطابق مع فولتية مخرج التيار.
- إذا تم استخدام مصدر للتيار المتردد ذا طرف أرضي، فلن تكون هناك حاجة إلى توصيل السلك الأرضي. وإذا لم يتوفر ذلك، فلا تنس أبداً عملية توصيل السلك الأرضي (ارجع إلى طريقة توصيل السلك الأرضي أعلاه).
- يجب أن يتم وضع الغسالة في مكان يسمح بالوصول إلى القابيس.

طريقة تأريض أخرى

• بعد توصيل السلك الأرضي إلى اللوح النحاسي الأرضي، ادفعه بعمق لا يقل عن ٧٥ سم تحت الأرض المبلولة.

• أوصل إلى مأخذ التيار الأرضي الوحيد.

• عند تركيب السلك في أرض غير قابلة للتأريض قم بشراء قاطع الدائرة الكهربائية وأوصله إلى مأخذ التيار.

٤

التركيب / كيفية الغسيل

قبل الشروع في الغسيل

١. اقرأ تعليمات الغسيل المكتوبة على البطاقات الملصقة على الملابس المعدة للغسيل.
٢. أخرج الأشياء الموجودة في جيوب الملابس. الأشياء الموجودة في الجيوب قد تحدث تلفاً في الملابس أو الغسالة. (هذا قد يؤدي إلى انسداد خرطوم التصريف).
٣. ابدأ عملية الغسيل بعد فصل الملابس المعالجة بالزيت أو المصبوغة.
٤. لتوفير مزيد من الراحة، علّق غطاء الغسل على الجهة اليمنى من حوض الغسالة عندما لا يكون قيد الاستخدام.

قم بإزالة هذه الأشياء قبل عملية الغسيل



عملية الغسيل

١. قم بضبط مؤشر الصرف قم بالضبط على وضع "غسل - شطف"

٢. ضع مفتاح تزويد المياه في حوض الغسيل.

٣. ضع كمية مناسبة من المنظفات والملابس في حوض الغسيل. وأضف الماء حتى يصل إلى مستوى الماء المرغوب فيه إذا أردته.

٤. افتح مصدر الماء وأملأ الغسالة إلى أن يعرض مستوى الماء العلامة "H". وذلك لإتاحة الفرصة للملابس لامتناس كمية كافية من الماء وكذلك عدم حدوث عجز في الماء.

٥. حدد برنامج الغسيل على "هادي" أو "عادي" أو "فوي". طبقاً لنوع وكمية الغسيل. (ارجع إلى الجدول رقم ٢)

٦. اضبط وقت الغسيل المرغوب فيه.

٧. عند الانتهاء من الغسيل، اضبط مفتاح اختيار التصريف على موضع "صرف" لتصريف الماء إلى الخارج.

٨. الدوران في سلة التجفيف. ضع ملابس الغسيل في سلة التجفيف.

• ضع الملابس في قاع حوض الغسيل بخفة

• ضع غطاء السلامة أفقياً فوق الغسيل. اضبط وقت الدوران مع مؤقت الدوران

٥

المرجع

الجدول ١. دليل وزن الملابس

نوع الملابس	نوع القماش	وزن القطعة
قميص ختاني	الملابس القطنية	١٥٠ غ (٥,٣ رتيّة)
منديل	الملابس القطنية	٥٠ غ (١,٨ رتيّة)
منشفة	الملابس القطنية	٣٠٠ غ (١٠,٦ رتيّة)
قميص	أقمشة متنوعة	٢٠٠ غ (٧,١ رتيّة)
جوارب (زوج)	أقمشة متنوعة	٥٠ غ (١,٨ رتيّة)
بيجاما (قميص وبنطال)	الملابس القطنية	٥٠٠ غ (١٧,٦ رتيّة)
قميص ختاني شتوي	الملابس الصوفية	١٠٠ غ (٢,٢ رتيّة)
ثياب العمل	أقمشة متنوعة	٨٠٠ غ (٢٨,٢ رتيّة)
قميص	أقمشة متنوعة	٢٠٠ غ (٧,١ رتيّة)

الجدول ٢. دليل الغسل

نوع القماش	مؤشر الغسيل	مؤقت الغسيل	كمية الغسيل (كغم)	كمية الماء (لتر)	كمية مادة التنظيف (غرام)
الصوف الأقمشة الخفيفة	خفيف	٥- دقيقة	H	٢٠٠ - ٥٠٠	٨٤
اصطناعية محبوكة	خفيف	٥- دقيقة	S	٥٠٠ - ٥٠٠	٥٠
			L	١٠٠ - ٥٠٠	١٠
			M	٧٠ - ١٠٠	٧٢
			H	٧٠ - ١٠٠	٨٤
			S	٥٠٠ - ٥٠٠	٥٠
			L	١٠٠ - ٥٠٠	١٠
			M	٧٠ - ١٠٠	٧٢
			H	٧٠ - ١٠٠	٨٤
			S	٥٠٠ - ٥٠٠	٥٠
			L	١٠٠ - ٥٠٠	١٠
			M	٧٠ - ١٠٠	٧٢
			H	٧٠ - ١٠٠	٨٤

- يتم تحديد كمية الغسيل طبقاً لكمية الغسيل الجاف.
- يتم تحديد كمية التنظيف طبقاً للمنظفات الصناعية العادية.

⚠ تنبيه: املا الغسيل لارتفاع ٢٠ سم فوق المستوى الذي تزيده. عندما يبدأ الغسل سوف يأتي مستوى الماء تلقائياً للمستوى الذي تزيده.

دليل تحري الخل و اصلاحه

قبل طلب الخدمة


الأعطال	نقاط الفحص
الحرك (الموتور) لا يعمل	• هل كابيل الطاقة موصل إلى القابيس بصورة محكمة؟ • هل ساعة التوقيت موجهة إلى نقطة مناسبة غير موضع "إيقاف"؟
سلة التجفيف لا تعمل	• هل هناك أية ملابس ملقاة بين السلة وحوض الغسيل؟ • هل غطاء اسطوانة التجفيف مثبت؟ • هل الغسيل متجمع إلى جانب واحد من سلة اسطوانة التجفيف؟
الماء لا يدخل المغسلة	• هل هناك ما يعيق صنوبر الماء؟ • هل صنوبر الماء في وضع تجمد؟
لا يوجد تصريف	• هل هناك قطعة من القماش عالقة بصمام الحوض؟ • هل نهاية خرطوم التصريف موضوعة في ارتفاع عال جداً؟ • هل تم بسط خرطوم التصريف لأسفل؟ • هل خرطوم التصريف ملئ؟

٧

العناية

مصفاء الفائض مصفأة الدوران-C

١. قم برفع الجزء # الخاص بمصفاء الفائض. وقم بجذب مرشح الدوران C باتجاه السهم كالمبين.
٢. قم بجذب مصفأة الفائض إلى الأمام من حوض الغسيل باتجاه السهم.
٣. قم بتحريك الشبكة وغسلها بالماء.
٤. استخدم ديتك أو الفرشاة لازالة النفق الملتصق بمصفاء الفائض.
٥. أدخل مصفأة الفائض مرة أخرى في حوض الغسيل.
٦. أدخل مصفأة الدوران C مرة أخرى في مصفأة الفائض.

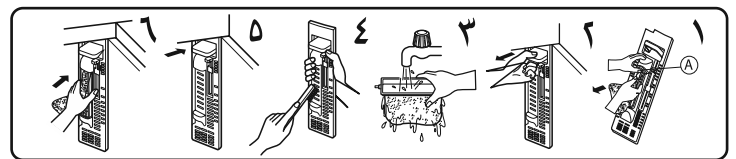

٦