



SIMPLE MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.


To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL


SNH5



ENGLISH

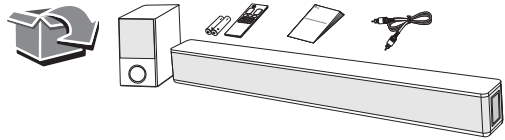

Front Panel

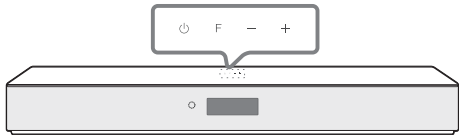


⏻ (Standby)Switches the unit ON or OFF.

F (Function)Selects function.

—/+ (Volume) Adjusts volume.

Rear Panel

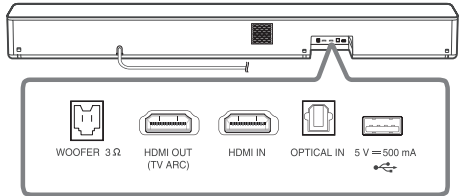

WOOFER 3 Ω Connect to a Subwoofer.

HDMI OUT (TV ARC) Connect to a TV.

HDMI INConnect to device with HDMI OUT.

OPTICAL INConnect to an optical device.


USB PortConnect to a USB device.

! Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the subwoofer near the sound bar and follow steps below.

- 1 Connect a subwoofer cord to the sound bar.
 - When connecting a Subwoofer cord to the unit, insert the connector until it clicks.
- 2 Turn on the sound bar.

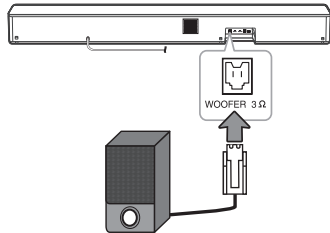


TV Connection

Connect the sound bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

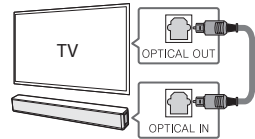

B HDMI (ARC) Connection


- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

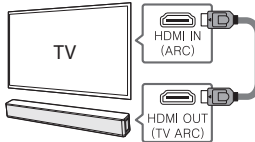

- ! • HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.


Additional Device Connection

- 1 Connect to the external device like as follow.

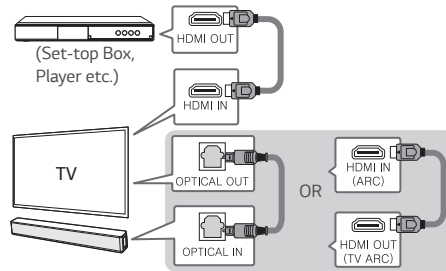


- 2 Set the input source by pressing F repeatedly.

Remote control

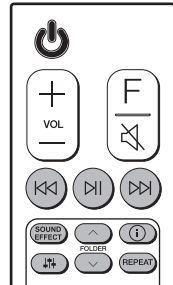

Replacement of Battery

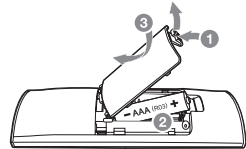

K/I: Skip/Search

I: Play/Pause

- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press **I** and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.

- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ^/∨: Searches a folder.

⌚: Displays the information of a file, an input source or connected **Bluetooth** device name.

- **Auto Power ON/OFF:** Long press ⌚ and press it again.

🔊: Adjusts the sound level of the adjustable speakers.

REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power Requirements	Refer to the main label.
Power consumption	Refer to the main label. Networked standby: 1.5 W
Dimensions (W x H x D)	Approx. 990.0 mm X 97.0 mm X 125.0 mm With foot
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS Output power)	600 W RMS

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.


This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.




אנא קרא מדריך זה בעיון לפני הפעלת המכשיר ושמור אותו לשימוש עתידי.
לצפייה בהוראות עבור תכונות מתקדמות, בקר בכתובת
<http://www.lg.com> והורד את המדריך למשתמש.
חלק מתוכן מדריך זה עשוי להיות שונה מהיחידה שלך.

דגם
SNH5

עברית

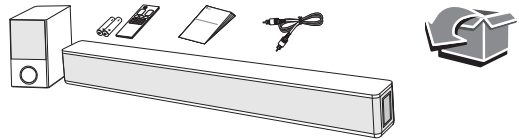


פנל קדמי

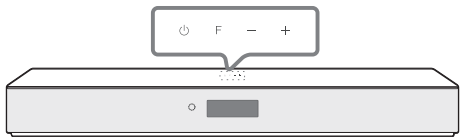

⏻ (מצב המתנה) הפעלת או כיבוי היחידה.
F (פונקציה) בחר פונקציות.
+/- (עוצמת קול) כיוון עוצמת קול.

פנל אחורי

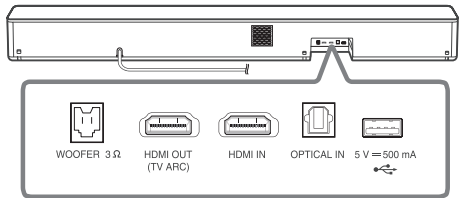


WOOFER 3 Ω חיבור לסאב וופר.
HDMI OUT (TV ARC) חיבור לטלוויזיה.
HDMI IN חבר את התקן עם HDMI OUT.
OPTICAL IN חיבור להתקן אופטי.
כניסת USB חיבור מכשיר USB.

יש לוודא חיבור נכון של הכבל האופטי ליציאה האופטית, אם הכבל האופטי אינו מחובר בכיוון הנכון, הוא עלול לגרום נזק לשקע אופטי.

חיבור סאבוופר

הנח את הסאב וופר ליד הסאונדבר ובצע את השלבים שלהלן.

- 1 חבר כבל סאבוופר לסאונדבר.
- 2 בעת חיבור כבל הסאבוופר ליחידה, הכנס את המחבר עד שישמע קליק.

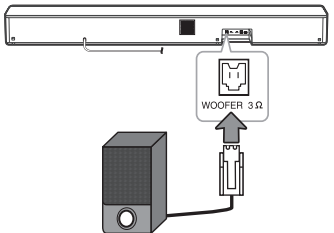


חיבור לטלוויזיה

חבר את מקרן הקול אל הטלוויזיה באמצעות חיבור אופטי (A) או HDMI ARC (B).


A חיבור אופטי

- 1 חבר את מקרן הקול אל הטלוויזיה בעזרת כבל אופטי.
- 2 מתוך תפריט ההגדרות בטלוויזיה שלך, קבע את תפריט [External Speaker (Optical)] למצב מופעל.

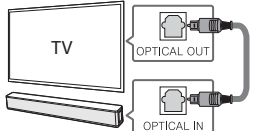

B חיבור HDMI (ARC)


- 1 חבר את מקרן הקול לטלוויזיה בעזרת כבל HDMI.
- 2 מתוך תפריט ההגדרות בטלוויזיה שלך, קבע את תפריט [External Speaker (HDMI ARC)] למצב מופעל.

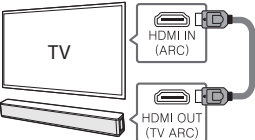

- חיבור HDMI אינו זמין אם הטלוויזיה שלך אינה תומכת ב-HDMI ARC.
- אם יחידה זו מחוברת באמצעות חיבור OPTICAL וחיבור ARC בו זמנית, אות ה-ARC מקבל קדימות.


חיבור התקן נוסף

- 1 חבר אל התקן חיצוני כמתואר להלן.

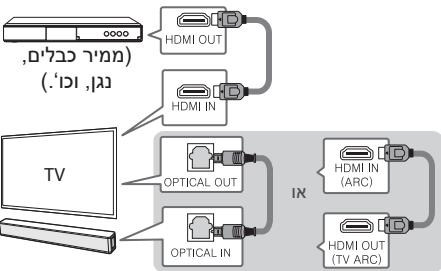

- 2 בחר במקור השמע באמצעות לחיצה על כפתור F באופן חוזר.

שלט רחוק

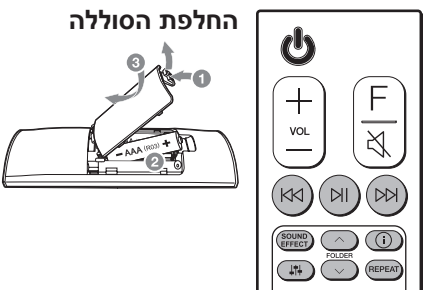

⏻ / ⏮ / ⏭ / ⏩ : דלג / חפש
⏻ : הפעל / עצור

נעילת פונקציית Bluetooth (BT LOCK)

בחר באפשרות Bluetooth באמצעות לחיצה על F באופן חוזר. לחץ לחיצה ארוכה DI ולאחריה לחיצה נוספת בכדי להגביל את תקשורת Bluetooth עבור התקן BT וטלוויזיה של LG בלבד.

SOUND EFFECT : בחר אפקט מצב שמע.

- שלט טלוויזיה: שלט הטלוויזיה: לחץ לחיצה ארוכה על כפתור SOUND EFFECT בשלט ואז לחץ לחיצה נוספת בכדי להשתמש בשלט של הטלוויזיה.

FOLDER ^ / v : מחפש את התיקיה.

Ⓜ : מציג מידע של קובץ, מקור שידור או מכשיר המחובר באמצעות Bluetooth.

- הפעלה אוטומטית ON/OFF : לחיצה ארוכה על כפתור Ⓜ ולחיצה נוספת לאחר מכן.

⏮ : מכוון את רמת הקול של הרמקולים המתכווננים.

REPEAT : האזנה לתכנים באופן רציף או רנדומלי.

מידע נוסף

מפרט

דרישות חשמל	עיון בתווית הראשית.
צריכת חשמל	עיון בתווית הראשית.
מידות (רוחב x גובה x עומק)	בקיורב 990.0 מ"מ x 97.0 מ"מ x 125.0 מ"מ עם רגל
אפיק אספקת חשמל (USB)	5 V --- 500 mA
מגבר (סה"כ עוצמת הספק (RMS))	600 W RMS

העיצוב והמפרט עשויים להשתנות ללא הודעה מוקדמת.

כיצד לנתק את החיבור לרשת האלחוטי או את המכשיר האלחוטי

הגדר את הפונקציה כיבוי אוטומטי הפעלה/כיבוי לכיבוי וכבה את היחידה.

פרטי הודעה על תוכנת קוד פתוח

כדי לקבל את קוד המקור תחת GPL, LGPL, MPL, ורשימות קוד פתוח אחרים שיש להם את החובה לחשוף את קוד המקור, הכלול במוצר זה, ולגשת לכל תנאי הרישיון המופנים, הודעות זכויות יוצרים ומסמכים רלוונטיים אחרים אנא בקר ב-
<https://opensource.lge.com>

LG Electronics גם תספק לכם קוד מקור פתוח על גבי תקליטור בתמורה לתשלום המכסה את עלות ההפצה (כגון עלות המדיה, המשלוח והטיפול), בתגובה לבקשה בדואר האלקטרוני אל הכתובת opensource@lge.com.

הצעה זו תקפה לכל מי שמקבל מידע זה לתקופה של שלוש שנים לאחר המשלוח האחרון של מוצר זה.