ENGLISH

www.lg.com

Copyright © 2026 LG Electronics Inc.
All Rights Reserved.

# LG OLED TV

## OWNER'S MANUAL

Safety and Reference

Please read this manual carefully before operating your set and retain it for future reference.

The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

Model _____

Serial No. _____

*MFL05814019207REV01*

# Warning! Safety instructions



| CAUTION |
| --- |
| RISK OF ELECTRIC SHOCK |
| DO NOT OPEN |



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this apparatus.

WARNING : TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
- **Do not place the product and/or remote control in the following environments:**
  - Keep the product away from direct sunlight.
  - An area with high humidity such as a bathroom.
  - Near any heat source such as stoves and other devices that produce heat.
  - Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
  - An area exposed to rain or wind.
  - Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
  - Near flammable objects such as gasoline or candles, or expose the product to direct air conditioning.
  - Do not install in excessively dusty places.
  - On unsecured or high furniture, such as shelves or bookshelves.

  Otherwise, this may result in fire, electric shock, combustion/explosion, malfunction or product deformation.
- **Ventilation**
  - Install your product where there is proper ventilation. Do not install in a confined space such as a bookcase.
  - Do not install the product on a carpet or cushion.
  - Do not block or cover the product with cloth or other materials while unit is plugged in.
- Take care not to touch the ventilation openings. When watching the product for a long period, the ventilation openings may become hot.
- Keep a distance of at least 10 cm away from other objects so that the vents of the Zero Connect Box are not blocked.
  - An increase in the internal temperature of the product may result in fire and product failure.
- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.
- Do not move the product while the Power cord is plugged in.
- Do not use a damaged or loosely fitting power cord.
- Be sure to grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the product.
- Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock.
- **Disconnecting the Device from the Main Power**
  - The power plug is the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the product. Otherwise, the product may fall over, which may cause serious injury.
- **Outdoor Antenna Grounding** (Can differ by country):
  - If an outdoor antenna is installed, follow the precautions below.

    An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur.

- Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
- Make sure the power cord is connected securely to the product and wall socket. If not secured, damage to the Plug and socket may occur and in extreme cases a fire may break out.
- Do not insert metallic or inflammable objects into the product. If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
- Do not touch the end of the power cord while it is plugged in. You may be electrocuted.
- **If any of the following occur, unplug the product immediately and contact your local customer service.**
  - The product has been damaged.
  - If water or another substance enters the product (like an AC adapter, power cord, or product).
  - If you smell smoke or other odors coming from the product.
  - When lightning storms or when unused for long periods of time.

  Even when the product is turned off by remote control or button, the unit remains connected to the AC power source if plugged in.
- Do not use high voltage electrical equipment near the product (e.g., a bug zapper). This may result in product malfunction.
- Do not attempt to modify this product in any way without written authorization from LG Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorised modification could void the user's authority to operate this product.
- Use only authorised attachments / accessories approved by LG Electronics. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
- Never disassemble the AC adapter or power cord. This may result in fire or electric shock.
- Handle the adapter carefully to avoid dropping or striking it. Do not subject the adaptor to external shock. An impact could damage the adapter.
- To reduce the risk of fire or electrical shock, do not touch the product with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.
- **Batteries**
  - Store the accessories (battery, etc.) in a safe location out of the reach of children.
  - Do not short circuit, disassemble, or allow the batteries to overheat. Do not dispose of batteries in a fire. Batteries should not be exposed to excessive heat.
  - Caution: Use the correct batteries for the product. Risk of fire or explosion if the battery is replaced by an incorrect type.
  - It is recommended, to use alkaline batteries.
- **Moving**
  - When moving, make sure the product is turned off, unplugged, and all cables have been removed. It may take 2 or more people to carry larger products. Do not press or put stress on the front panel of the product. Otherwise, this may result in product damage, fire hazard or injury.
- Keep the packing anti-moisture material or vinyl packing out of the reach of children.
- Do not allow an impact shock or any objects to fall into the product, and do not drop anything onto the screen.
- Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it. It may cause damage to screen.
- Do not hold the product screen, scratch the surface with a metal object, or apply impact to it.
  - The screen may break, resulting in personal injury or malfunction of the product.
- Do not push or kick the product.
- Do not place heavy objects on top of the product.
- Be careful if you have pets
- **Cleaning**
  - When cleaning, unplug the power cord and wipe gently with a soft/ dry cloth. Do not spray water or other liquids directly on the product. Do not clean your product with chemicals including glass cleaner, any type of air freshener, insecticide, lubricants, wax (car, industrial), abrasive, thinner, benzene, alcohol etc., which can damage the product and/or its panel. Otherwise, this may result in electric shock or product damage.

# Note

## Reading the User Guide

The user guide consists of a 'Quick User Guide,' enclosed with your TV purchase, and an 'Electronic User Guide,' stored as a programme on the TV.

## Quick User Guide

Contains safety precautions that must be complied with when using the TV, component installation methods, and external device connection methods.

- You can also download or view the Quick User Guide on digital devices such as PCs and mobile phones. Search for the model name in the user guide search bar on the LG Electronics website.
- If you lose or damage the Quick User Guide, call the LG Electronics Customer Centre to request a replacement.
- ⊕ : This icon indicates that application may depend on model in Quick Setup Guide.

## Electronic User Guide

To learn how to use various product features, press the remote control **Q.Settings button** (⚙) and see the Electronic User Guide stored on the TV.

- LG Electronics is not responsible for any damage to the product or injuries caused by using non-genuine LG products.
- TV components are subject to change without prior notice for performance upgrades. The model name or design may also be changed according to the circumstances or policies of the manufacturer.
- Images shown in this manual may differ from the actual product.

## Separate Purchase

**Magic Motion Remote Control**: A Magic motion remote control with smart features such as voice recognition and motion control

**External device connection cable**: Cables for connecting external devices such as antennas to the TV

- To make separate purchases, contact the LG Electronics Customer Service Centre.

## Before reading this manual


**Understanding 60 GHz wireless**

- Wireless TVs use 60 GHz radio waves to transmit high-quality video and audio wirelessly.
- The high bandwidth of 60 GHz frequencies is advantageous for large data transmission and has strong linearity but is greatly affected by obstacles.
- For the best TV viewing experience, the transmitting and receiving antennas should face each other, and there should be no obstacles in the transmission path.
- Transmission errors caused by obstacles are not malfunctions. Use the TV after properly installing it according to the recommended installation method.
- This product satisfies the standards for protecting the human body against electromagnetic waves*. (* Meets IEC 62311 standards)

# Installing and Using


## Examining the Appearance and Component Names of the Wireless TV (TV Screen + Zero Connect Box)

### TV Screen

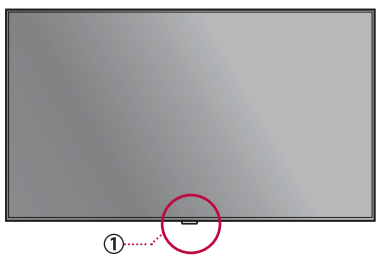



### Zero Connect Box (WM26GA)

It is a device that wirelessly transmits video and audio signals to the TV screen by connecting an external antenna or set-top box.

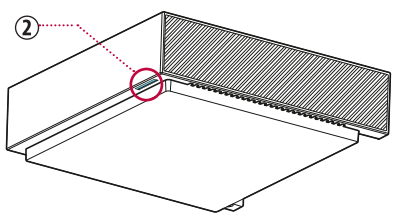


Front and bottom views




Rear view

① **Wireless signal receiver**

This part receives the video and audio signals sent by the Zero Connect Box.

**Power button**

The power button is used to turn the TV screen on, switch to Always Ready mode.

**Mic switch**

You can turn the TV-embedded microphone on and off by controlling the microphone switch at the bottom of the TV.

② **Front LED**

Indicates the power or operation status of the Zero Connect Box.

③ **External connection terminal**


You can connect the Zero Connect Box's power cord and external video/audio devices such as external antennas and set-top boxes.


# Installing Zero Connect Box


## 1. Choosing the Installation Location

The Zero Connect Box can be installed in front, beside or below the TV screen. Follow the user guide for proper installation.

- Do not place obstacles between the TV Screen and Zero Connect Box. Doing so may interfere with wireless signal transmission.
- Install the Zero Connect Box lower than the wireless signal receiver of the TV screen.
- The transmission range of the Zero Connect Box varies depending on the direction in which it faces the TV screen. Refer to the figure below and install it within the appropriate distance.

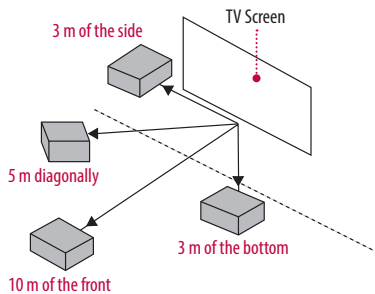

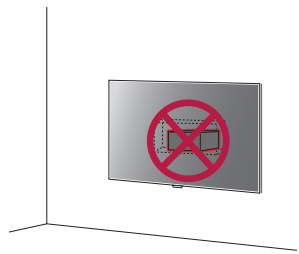

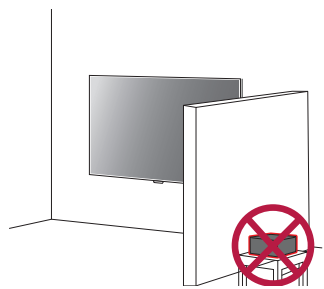
## 2. Performing Antenna Auto-Tuning


Please run the antenna auto-tuning for optimal wireless environment settings.


**Note**

- Do not install two wireless TVs or Zero Connect Boxes in the same room. They may interfere with one another.
- Do not place electronic devices or objects on top of the Zero Connect Box. Doing so may cause interference in transmission, resulting in screen display failure.
- When using a sound bar, ensure that it does not obstruct the wireless signal receiver of the TV screen.

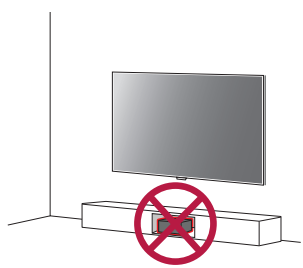

**⚠ Caution**

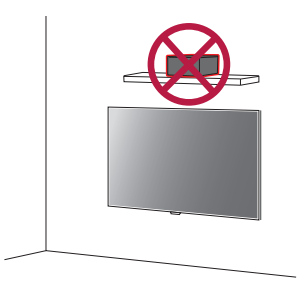

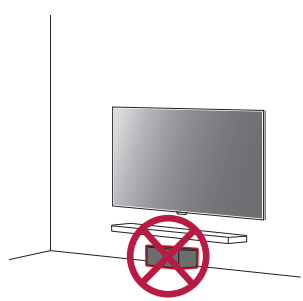

## Installing the TV Screen

### Installing as a wall mount

This method involves installing the TV screen horizontally on the wall using a wall mount. Refer to the wall-mounting bracket guide provided separately for detailed information.

- To install the support, ensure that the wall is made of a material that can endure the weight of the TV Screen, such as concrete, natural stone, or masonry brick.
- Leave sufficient space around the product so that the ventilation vents of the TV screen are not blocked.

**Note**

- In the case of adhesive wall mounts, the TV screen may not adhere to the wall, depending on the condition of the wall.
- LG wall mount products are recommended. If you use a wall mount not provided by LG, ensure that it provides sufficient distance from the wall.
- When using a fixed wall mount, connect the cables before installing the TV screen.
- The screws (4 screws x 2) that secure the built-in wall mount assembly to the back of the product are M3 x L3.5 mm.
- You can organise the TV screen power cord using the dedicated cable management.

**⚠ Caution**

- When installing the TV screen, ensure that you wear work gloves. Installing with unprotected hands may result in injury.
- If you installed your TV screen with an adhesive wall mount, ensure that it is used only when adhered to the wall. The TV screen may wobble or tilt, causing damage.
- Do not install the wall mount in a place where it may come into contact with oil or oil vapour. Doing so may damage the TV screen.
- Since the TV screen is heavy, at least two people should lift it vertically when unpacking or moving it.
- Do not move while holding the cable holder or cable organisation band. Doing so may damage parts or the TV screen, or may cause injury. (Depending on model)
- Do not forcibly tilt the TV screen. Doing so may cause it to fall and result in damage or injury.
- Take care to avoid getting your hands or fingers caught in the wall mount and injuring yourself.
- Any damage or injuries caused by using unapproved items are not covered by the manufacturer's warranty.

**⚠ Warning**

- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. Doing so may cause damage to the product.
- Tightening the screws with excessive force may cause them to come off due to abrasion of the screw joint.

- Use the cable management on the back of the product, to organise the cables. (Depending on model)

## Connecting External Terminals

You can connect external devices such as cables, HDMI, and set-top boxes to the TV. For more information of external device's connection, refer to the manual provided with each device.

- When used with an external device using a 60 GHz frequency, the screen may fail to display due to mutual interference.
- Set the appropriate resolution and frequency for the connected device. Failure to do so may cause straining of the eyes.
- The detailed installation method may vary depending on the TV model.

### Installing Antenna/Cable

- Insert the coaxial cable that transmits audio/video signals into the antenna/cable input terminal or antenna input terminal on the back of the Zero Connect Box.
- Be careful not to bend the copper wire when connecting the coaxial cable.
- Use a signal amplifier if the signal is weak.
- When using one antenna for two or more TVs, use a signal splitter.

**Note**

- Do not apply oil or lubricant to the screws used during installation. Doing so may cause the TV to malfunction.

### Satellite dish

Connect the TV to a satellite dish to a satellite socket with a satellite RF cable (75 Ω). (Depending on model)

### HDMI

- Use an HDMI certified cable (less than 3 m) with the HDMI logo (Ultra High Speed HDMI®/™ cable).
- Turn off the power of the TV and all connected devices, and unplug them from the socket before connecting the HDMI cable.
- Connecting a device that supports the HDMI Ultra HD Deep Colour feature to the TV will provide a clearer image. If you connect a device that does not support this feature and enable the feature, it may not work properly. If problems arise, change the settings.

**Note**

- HDMI audio support formats may vary depending on the TV model.
- HDMI devices should have bezels less than 10 mm thick and 18 mm width.

### USB / USB Hub

If the USB hub connected to the TV does not recognise USB devices, connect the USB directly to the TV terminal.

**Note**

- If the shapes of the TV terminal and the USB device do not match, use an extension cable that supports USB 2.0.
- USB devices should have bezels less than 10 mm thick and 18 mm width.

### IR Blaster

This is an infrared transmitter that allows smoother control of devices such as set-top boxes, Blu-ray players, DVD players, sound bars, and gaming consoles.

- If the Zero Connect Box is installed in a location other than the bottom of the TV, external devices may not be controlled smoothly with the TV remote control; therefore, connecting an IR blaster is recommended.
- Controlling the IR blaster requires an integrated remote control setting.
- Secure both ends of the IR blaster to the front (receiver) of the external device remote control using the tape provided.

### Adapter

⚠ **Caution**

- Please be sure to connect the TV to the AC-DC power adapter before connecting the TV's power plug to a wall power outlet. (Depending on model)

### Wired LAN

- TV audio can be transmitted to the sound bar (external audio device). When transmitting via wired methods (optical digital, HDMI ARC), connect to the rear external terminal of the Zero Connect Box, and when transmitting wirelessly (LG soundbar supporting the WOWCAST feature), use the WOWCAST feature. (Depending on country)

## Using the TV

### Using the power button

Press the **Power button** (⏻) located on the bottom of the TV briefly to turn the screen on and hold it to turn off all functions and the screen.

- Only use the power button when the TV screen and the Zero Connect Box are connected.
- The shape and location of the power button may vary depending on the TV model.
- When you turn on the power for the first time after purchasing the product, it may take about 1 minute for the screen to turn on due to initialisation.
- For models with motion sensors, if you set screen on with the motion sensor, the TV will turn on by recognising the motion. (Depending on model)

### Using hands-free voice control

Press the remote control **Q.Settings button** (⚙) to turn on hands-free voice control. The feature settings path may vary depending on the TV model.

# Managing

## Protecting the OLED TV Screen

- Unlike general LED/LCD TVs, OLED TVs can display perfect black and produce clear images without light blurring.
- Due to the characteristics of OLED materials that provide high-resolution display, image retention may occur or persist, leaving an afterimage on the screen.
- Image retention is a common phenomenon in all OLED panels. Using the recommended viewing mode can minimise image retention.
- Avoid displaying images that are likely to cause image retention, and follow the recommendations.

## Images that are likely to cause image retention

- Screen with black areas on one or more sides on the top, bottom, left or right.
- Images whose aspect ratio is 4:3 or 21:9.
- Screens with images fixed for a long time, such as programme numbers, broadcast station logos, game console icons, or set-top box menus.
- Other static screens or screens that repeat the same scene.

## Recommendations for Minimising Image Retention

- If there are black areas on one or more of the top, bottom, left, or right sides of the screen, press the remote control **Q.Settings button** (⚙) to remove the black areas before watching.
- Turn off the menu for setting up external devices such as set-top boxes so that it is not displayed on the screen for a prolonged period.

**Note**

- OLED TVs automatically lower screen brightness when a fixed image is received for an extended period and restore brightness once the fixed image is gone.
- This is one of the features of the TV for minimising image retention and is not a malfunction.

## Running Pixel Cleaning

OLED TVs are equipped with a pixel cleaning feature that detects screen conditions on its own to prevent retention.

- Pixel cleaning automatically calculates the optimal execution time based on cumulative viewing time and runs automatically when you turn off the TV.
- Horizontal lines may appear at the top and bottom of the screen during pixel cleaning.
- The pixel cleaning feature works when the TV is connected to the power cord and main power.
- Pixel cleaning can also be run manually by pressing the remote control **Q.Settings button** (⚙).

# Troubleshooting

- If you notice any of the problems below while using the product, please check again. It may not be a fault.
- Before contacting the LG Electronics Service Centre, press the (⚙) button on the remote control three times in TV/HDMI input mode to check the product model name and serial number. You will be able to receive faster assistance.

## Power and Screen

| | |
|---|---|
| **The product does not turn on.** | **» Is the power cord plugged in properly?**<br>Check if the power cord is plugged properly into the product and socket.<br>**» Is there a problem with the socket?**<br>Plug the power plug of another device into the socket where the product was plugged in to check if the socket is functioning properly. |
| **The product turns off suddenly.** | **» Is the sleep timer set?**<br>Check if the auto-off function is activated on the settings related time.<br>**» Check if the external devices are working together.**<br>Stop using the external devices you are using together and check if the TV is working normally.<br>**» Did the auto-off feature work?**<br>This product is equipped with an auto-off function that automatically turns off the power if the remote control is not used for 15 minutes without an input signal. |
| **Dots on the screen.** | **» Do you see white dots, bright dots, dark dots, or flickering dots on the screen?**<br>This product is an advanced product containing millions of pixels. You may see flickering dots of about 1/1,000,000 (1 PPM). These are not considered product defects or malfunctions.<br>• White Dots: dots that appear bright<br>• Bright Dots: dots that appear brighter than normal image<br>• Dark Dots: dots which part of a letter or an object is invisible or blurry<br>• Flickering Dots: Dots that flicker |

## Zero Connect Box Connection

| | |
|---|---|
| **A power connection image appears on the screen.** | **» Is the Zero Connect Box connected properly?**<br>Ensure that the Zero Connect Box power cord is plugged firmly into the socket. |
| **A Zero Connect Box connection image appears on the screen.** | **» Are there any objects interfering with the wireless signal transmission?**<br>Clear any objects between the TV screen and the Zero Connect Box.<br>**» Follow the on-screen instructions to auto-tune the antenna or reconnect the Zero Connect Box.** |

## Hands-free Voice Control

| | |
|---|---|
| **Voice recognition is not working well.** | **» Is the Hands-free Voice Control feature turned on?**<br>Press the remote control **Q.Settings button** (⚙) to turn on hands-free voice control. (Depending on model) |

## Motion Detection

| | |
|---|---|
| **In Always Ready mode, the motion sensor activates unnecessarily or fails to activate.**<br>(Depending on model) | **» Is the motion sensor clean?**<br>The motion sensor is located at the bottom centre of the TV screen and may not function properly if covered with foreign substances. Wipe it clean with a soft cloth.<br>**» Is there an object interfering with the motion sensor detection?**<br>Clear any objects in front of the TV screen.<br>**» Is the motion sensor too sensitive or insensitive?**<br>The motion sensor can activate when detecting movements of pets, robot vacuum cleaners, and other objects as they are recognised as motions. |

## Noise

| | |
|---|---|
| **There is noise coming from the product.** | **» Do you hear a "ticking" sound?**<br>This is the sound of the plastic deforming due to temperature and humidity. It is a common phenomenon in plastic products like furniture and cars; therefore, it is not a cause for concern.<br>**» Is the noise related to electricity?**<br>The sound is caused by the high-speed switching circuit that supplies current to the product, and it does not affect the functionality of the product.<br>**» Do you hear the fan noise from the Zero Connect Box?**<br>This is a normal sound created to dissipate heat generated inside the product.<br>* LG Electronics manages product production with strict standards, and noise below a certain level is not considered a product defect or malfunction. |

## Magic Motion Remote Control

| | |
|---|---|
| **The remote control is not working.** | **» Is there a connection problem with the product?**<br>Press and hold the ⌂ button and ⚙ button in the middle of the Magic Motion Remote Control simultaneously for more than 5 seconds to re-register.<br>**» Are there any objects interfering with the wireless signal transmission?**<br>Clear any objects between the TV screen and the remote control.<br>**» Are the batteries inserted correctly?**<br>Ensure that the ⊕ side and ⊖ side of the battery are in the correct position. Replace both batteries with new ones when they run out. |

## Other

If any of the following issues occur, turn off the product, unplug the power plug from the socket and contact the LG Electronics Service Centre for inspection. Do not repair the product yourself.

- **If the product fails to display images or produce sound, even when the power is turned on**
- **If the product continues to display images or produce sound, even when the power is turned off**
- **If there is smoke or a burning smell coming from the product**
- **If water or a foreign substance gets into the product**
- **If the screen image appears to be cut off**
- **If the product makes repetitive sounds, such as a "buzzing" or "cracking" noise**
- **If there is any other problem or malfunction with the product**

## Product information

| | | |
|---|---|---|
| **Broadcasting Specifications** (Depending on country) | Television system | Terrestrial / Cable / Satellites Digital TV |
| | External antenna impedance | 75 Ω |
| **Environment Condition** | Operating Temperature | 0 ℃ to 40 ℃ |
| | Operating Humidity | Less than 80 % |
| | Storage Temperature | -20 ℃ to 60 ℃ |
| | Storage Humidity | Less than 85 % |
| **Wireless Reception Conditions** | Distance | 3 - 10 m (Only under conditions with no obstacles) |
| **Power requirement** | | AC 100-240 V~ 50/60 Hz |
| **Adapter** | Zero Connect Box | Manufacturer : Shenzhen Honor Electronic Co., Ltd.<br>Model : ADT-65AI-D00-3 |

- Climate Class T1 : equipment is designed to operated on moderate climate.

- The energy information provided with the product is indicated in accordance with the regulations of each country. (Depending on country)
  - The Energy consumption is measured in accordance with IEC 62087.

- Actual Energy consumption may vary depending on factors such as the type of video content being played and TV settings.
- For information of the power supply and power consumption, refer to the label attached to the product. (Depending on country)
  - The typical power consumption is measured in accordance with IEC 62087 or each country's energy regulations.
  - See the label on the bottom of the product for power source, power ratings and product information.
    * On some models, the label is inside the external device connection terminal cover.
    * Depending on the model or country, the typical power consumption may not be on label.

## Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices, please visit *https://opensource.lge.com*.

LG Electronics will also provide open source code to you for a charge covering the cost of performing such distribution upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

## Licenses

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

QuickSet®
(Magic Motion Remote Control supported models only)

HEVC Advance™
Covered by patents at patentlist.accessadvance.com

# Regulatory

### WARNING! (STABILITY HAZARD)

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

### Symbols


| | | | |
|---|---|---|---|
| ~ | Refers to alternating current (AC). | ⏻ | Refers to stand-by. |
| ⎓ | Refers to direct current (DC). | \| | Refers to "ON" (power). |
| ⧈ | Refers to class II equipment. | ⚡ | Refers to dangerous voltage. |

# Using Magic Motion Remote Control

## Short press

### Basic Guide

| | |
|---|---|
| | **Power**: Turns the TV On or Off. |
| | Select **Custom Menu**. (Set the key to the user's preference such as Mute/Input/HDMI) |
| | Displays the **Home Hub**. |
| | Accesses the **TV Guide**. |
| | Check for recommended content. (Some recommended services may not be available in some countries.) |
| | Displays the **Home Menu**. |
| | Displays more remote control functions. |
| ❷ | **Press** to select menu and operate device. (play/pause, etc.)<br>**Scroll up and down** Scrolls the screen or change programmes. |
| ❸ | **Up, Down, Left, Right** Navigation buttons. |
| | Move to the **Previous Step**. |
| | Displays the **Quick Settings Menu**. |
| ❹ | Various content service buttons. |
| ❹ | **Mutes** all sounds. |
| ❹ | Accesses the **User Guide**. |
| ❹ FAV | Accesses your favorite programmes list. |
| ❹ ▷,II | Controls media contents. |

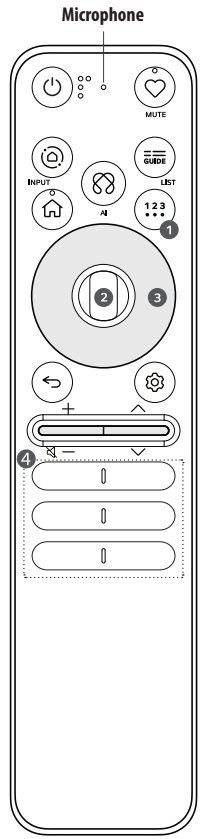


## Long press

### Extension Guide

| | |
|---|---|
| | Accesses the **Accessibility Shortcuts**. |
| | Changes the **Input Source**. |
| | Accesses the saved **Programmes List**. |
| | Speak to the remote control while pressing and holding the button to use the **Voice Recognition** feature. |
| | To enable the **Screen Zoom**. |
| ❶ | To enable **Voice Guidance** for screen content or to set up multi-audio options. |
| | The screen displayed on the TV is closed and the **Home Menu** appears. |
| | Displays the **All Settings Menu**. |
| ❹ | Accesses the **Accessibility Shortcuts**. |

| | |
|---|---|
| + / — | Push up and down to **Adjust the Volume**. |
| ^ / v | Push up and down to **Change Programmes**. |
| — | Push down long press to **Mute**. |

**Note**

- The terms in this manual are used in general terms to help users understand and may not match the displayed term icons on the screen.

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

(Some buttons and services may not be provided depending on models or regions.)

## How to register the Magic Motion Remote Control

To use the Magic Motion Remote Control, first pair it with your TV.

1. Put batteries into the Magic Motion Remote Control and turn the TV on.
2. Point the Magic Motion Remote Control at your TV and press the **Wheel (OK)** on the remote control.

* If the TV fails to register the Magic Motion Remote Control, try again after turning the TV off and back on.

## How to deregister the Magic Motion Remote Control

Press the **(Back)** and **(Home)** buttons at the same time, for five seconds, to unpair the Magic Motion Remote Control with your TV.

* Press and hold the **(Home)** and **(Q. Settings)** buttons for more than 5 seconds to disconnect and re-register the Magic Motion Remote Control at the same time.

**⚠ Caution**

- It is recommended that an Access Point (AP) be located more than 0.2 m away from the TV. If the AP is installed closer than 0.2 m, the Magic Motion Remote Control may not perform as expected due to frequency interference.

## Using Always Ready

(Depending on model)

You can operate the TV and connect to Bluetooth with direct voice recognition while the power is off.

* Pressing the **(Power)** button while watching TV switches the screen to [Always Ready] that is turned on, and pressing the **(Power)** button once more turns the screen to [Always Ready] that is turned off.

* Press the **(Home)** button or the **(Back)** button to watch TV when the screen is in [Always Ready] that is turned on.

* Press the **Wheel (OK)** button to display the wallpaper when the screen is in [Always Ready] that is turned off, and press the **(Power)** button to watch TV.

**Note**

- Using Always Ready may increase energy consumption.

## Regulatory

### 1) Algeria

| agréé par l'ANF | |
|---|---|
| MR26GA | 431/H/ANF/2025 |
| MR26GA | 432/H/ANF/2025 |
| MR26GA | 433/H/ANF/2025 |
| MR26GA | 434/H/ANF/2025 |
| MR26GA | 435/H/ANF/2025 |
| MR26GA | 436/H/ANF/2025 |
| Homologué le July 8, 2026 par ANF | |
| LGMR1 | N° du certificat de conformité 032/CC/ANF/2026 |
| LGMR1 | N° du certificat de conformité 033/CC/ANF/2026 |
| LGMR1 | N° du certificat de conformité 034/CC/ANF/2026 |
| LGMR1 | N° du certificat de conformité 035/CC/ANF/2026 |

### 2) Ghana

| | |
|---|---|
| MR26GA | NCA APPROVED : SRH-7E9-1E3-VH |
| LGMR1 | NCA APPROVED : SRH-7EA-XCC-7MS |

### 3) Morocco

| | |
|---|---|
| MR26GA | anrt MR00004133ANRT2025 |
| LGMR1 | anrt MR00002822ANRT2026 |

### 4) Zambia

| | |
|---|---|
| MR26GA | ZICTA ZMB/ZICTA/TA/2025/7/123 |
| LGMR1 | ZICTA ZMB/ZICTA/TA/2026/5/7 |

### 5) Senegal

| | |
|---|---|
| MR26GA | AGREE PAR ARTP SENEGAL<br>Numéro d'agrément : 073289/AG/ER |
| LGMR1 | AGREE PAR ARTP SENEGAL<br>Numéro d'agrément : 073513/AG/ER |

### 6) Tanzania

| | |
|---|---|
| MR26GA | TCRA Approved<br>TECESRD/0168/2025 |
| LGMR1 | TCRA Approved<br>TECESRD/0110/2026 |

### 7) UAE

MR26GA

TDRA

ER51891/25
United Arab Emirates

LGMR1

TDRA

ER61359/26
United Arab Emirates

تستند الأوصاف المذكورة في هذا الدليل إلى الأزرار الموجودة في الريموت. يُرجى قراءة هذا الدليل بعناية واستخدام التلفاز استخدامًا صحيحًا.
(قد لا تتوفر بعض الأزرار والخدمات بحسب الطرازات أو المناطق.)

### كيفية تسجيل جهاز التحكم عن بعد Magic Motion

لاستخدام جهاز التحكم عن بعد Magic Motion، قم أولاً بإقرانه بالتلفزيون الخاص بك.

1. قم بوضع البطاريات في جهاز التحكم عن بعد Magic Motion ثم قم بتشغيل التلفزيون.
2. وجّه الريموت السحري Magic Motion إلى تلفازك واضغط على ▯ **العجلة (موافق)** الموجودة على الريموت.

* إذا فشل التلفزيون في تسجيل جهاز التحكم عن بعد Magic Motion، فحاول مرة أخرى بعد إيقاف تشغيل التلفزيون ثم تشغيله مرة أخرى.

### كيفية إلغاء تسجيل جهاز التحكم عن بعد Magic Motion

اضغط على أزرار ↩ **(الرجوع)** و ⌂ **(الصفحة الرئيسية)** في نفس الوقت، لمدة 5 ثوان، لإلغاء اقتران الريموت السحري Magic Motion مع التلفاز.

* اضغط مع الاستمرار على ⌂ **(الصفحة الرئيسية)** و ⚙ **(الإعدادات السريعة)** لأكثر من 5 ثوانٍ لفصل الريموت السحري Magic Motion وإعادة تسجيله في الوقت نفسه.

**⚠ تنبيه**

- يوصى بوضع نقطة وصول (AP) على بُعد أكثر من 0.2 متر عن التلفاز. إذا تم تثبيت نقطة الوصول على بُعد أقرب من 0.2 متر، فقد لا يعمل الريموت السحري Magic Motion على النحو المتوقع نظرًا لتداخل الترددات.

**استخدام "الاستعداد الدائم"**

(حسب الطراز)

يمكنك تشغيل التلفزيون والاتصال بالـ Bluetooth من خلال التعرف المباشر على الصوت عندما تكون الطاقة قيد إيقاف التشغيل.

* الضغط على زر ⏻ **(التشغيل)** أثناء مشاهدة التلفزيون، يقوم بتشغيل وضع [الاستعداد الدائم] في الشاشة، والضغط على زر ⏻ **(التشغيل)** مرة أخرى يقوم بإيقاف تشغيل وضع [الاستعداد الدائم] في الشاشة.
* اضغط على زر ⌂ **(الصفحة الرئيسية)** أو زر ↩ **(الرجوع)** لمشاهدة التلفزيون عندما يكون وضع [الاستعداد الدائم] في الشاشة قيد التشغيل.
* اضغط على زر ▯ **العجلة (موافق)** لعرض خلفية الشاشة عندما يكون وضع [الاستعداد الدائم] في الشاشة قيد إيقاف التشغيل، واضغط على زر ⏻ **(التشغيل)** لمشاهدة التلفزيون.

---

**ملاحظة**

- قد يؤدي استخدام "الاستعداد الدائم" إلى زيادة استهلاك الطاقة.

---


# استخدام جهاز التحكم عن بعد Magic Motion

## الضغط القصير

### الدليل الأساسي

- **التشغيل**: تشغيل التلفاز أو إيقاف تشغيله.
- حدد **القائمة المخصصة**. (اضبط المفتاح حسب تفضيل المستخدم مثل كتم الصوت/المدخل/HDMI)
- عرض **موزع الصفحة الرئيسية**.
- للوصول إلى **دليل التلفاز**.
- تحقق من المحتوى الموصى به. (قد لا تتوفر بعض الخدمات الموصى بها في بعض البلدان.)
- يعرض **القائمة الرئيسية**.
- عرض المزيد من وظائف الريموت.
- ❷ **اضغط** لتحديد القائمة وتشغيل الجهاز. (تشغيل/إيقاف مؤقت، إلخ.) **التمرير لأعلى ولأسفل** يقوم بالتمرير عبر الشاشة أو تغيير البرامج.
- ❸ **أعلى، أسفل، يسار، يمين** أزرار التنقل.
- انتقل إلى **الخطوة السابقة**.
- يعرض **قائمة الإعدادات السريعة**.
- ❹ أزرار خدمة المحتوى المتنوعة.
- ❹ **لكتم** جميع الأصوات.
- ❹ للوصول إلى **دليل المستخدم**.
- ❹ FAV للوصول إلى قائمة البرامج المفضلة لديك.
- ❹ للتحكم في محتويات الوسائط.

**الميكروفون**

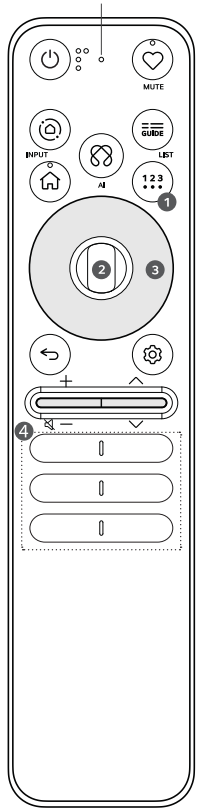


## الضغط لفترة طويلة

### دليل التمديد

- للوصول إلى **اختصارات إمكانية الوصول**.
- لتغيير **مصدر الإدخال**.
- للوصول إلى **قائمة البرامج** المحفوظة.
- تحدث إلى جهاز التحكم عن بعد أثناء الضغط مع الاستمرار على الزر لاستخدام ميزة **التعرف على الصوت**.
- لتفعيل **تكبير الشاشة**.
- ❶ لتفعيل **التوجيه الصوتي** لمحتوى الشاشة أو لإعداد خيارات الصوت المتعددة.
- الشاشة المعروضة على التلفاز مغلقة، **القائمة الرئيسية** ظاهرة.
- لعرض قائمة **جميع الإعدادات**.
- ❹ للوصول إلى **اختصارات إمكانية الوصول**.

— / + اضغط لأعلى ولأسفل **لضبط مستوى الصوت**.

— اضغط لأسفل لفترة طويلة لـ **كتم الصوت**.

∧ / ∨ ادفع لأعلى ولأسفل لـ **تغيير البرامج**.

**ملاحظة**

• تُستخدم المصطلحات الواردة في هذا الدليل بشكل عام لمساعدة المستخدمين على الفهم وقد لا تتطابق مع أيقونات المصطلحات المعروضة على الشاشة.

# معلومات تنظيمية

**تحذير! (خطر الثبات)**

قد يقع جهاز التلفاز مسببًا إصابات خطيرة أو الوفاة. يمكن تجنب حدوث العديد من الإصابات، خصوصًا للأطفال من خلال اتخاذ إجراءات بسيطة مثل:

- استخدم دائمًا هياكل أو حوامل أو طرق تركيب توصي بها الجهة المصنعة للتلفاز.
- استخدم دائمًا قطعة الأثاث التي يمكنها تحمّل وزن التلفاز بشكل آمن.
- تأكد دائمًا أن التلفاز في موضع لا يتجاوز فيه طرف قطعة الأثاث الموضوع عليها.
- قم دائمًا بتوعية الأطفال بمخاطر تسلّق قطعة الأثاث للوصول إلى التلفاز أو عناصر التحكم الخاصة به.
- قم دائمًا بتوجيه الأسلاك والكابلات المتصلة بالتلفاز الخاص بك بحيث لا يتم التعثر فيها أو سحبها أو الإمساك بها.
- لا تضع التلفاز في موقع غير ثابت أبدًا.
- لا تضع التلفاز على قطعة أثاث طويلة أبدًا (على سبيل المثال، خزانات أو خزانات كُتب) من دون تثبيت قطعة الأثاث والتلفاز بدعامة مناسبة.
- لا تضع التلفاز على قماش أو مواد أخرى قد تكون بين التلفاز وقطعة الأثاث الحاملة له.
- لا تضع العناصر التي قد تغري الأطفال بالتسلق أبدًا، مثل الألعاب والريموت، فوق التلفاز أو قطعة الأثاث الموضوع عليها التلفاز.

إذا كان سيتم الاحتفاظ بجهاز التلفاز الحالي ونقله، يجب تطبيق الاعتبارات الواردة أعلاه نفسها.

**الرموز**

| | | | |
|---|---|---|---|
| ~ | يشير إلى التيار المتردد (AC). | ⏻ | يشير إلى وضع الاستعداد. |
| ⎓ | يشير إلى التيار المستمر (DC). | \| | يشير إلى "تشغيل" (الطاقة). |
| ⧈ | يشير إلى أجهزة الفئة II. | ϟ | يشير إلى الفولتية الخطيرة. |

**معلومات حول إشعار البرامج مفتوحة المصدر**

للحصول على التعليمات البرمجية للمصدر ضمن GPL، وLGPL، وMPL، والحصول على التراخيص مفتوحة المصدر الأخرى التي لديها التزامات للكشف عن التعليمات البرمجية الخاصة بالمصدر، المضمنة في هذا المنتج، وللوصول إلى كل أحكام الترخيص المشار إليها، وإشعارات حقوق النشر، يرجى زيارة *https://opensource.lge.com*.

ستوفر LG Electronics أيضًا رمز المصدر المفتوح لك مقابل رسوم تغطي تكلفة إجراء هذا التوزيع عند إرسال طلب عبر البريد الإلكتروني إلى opensource@lge.com.

يسري هذا العرض لأي شخص يتسلم هذه المعلومات لمدة ثلاث سنوات بعد آخر عملية شحن لهذا المنتج.

**التراخيص**

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

QUICKSET®
(الموديلات التي تدعم جهاز التحكم عن بعد Magic Motion فقط)

HEVC Advance™
Covered by patents at patentlist.accessadvance.com

**أخرى**

في حالة حدوث أي من المشاكل الآتية، أوقف تشغيل المنتج، وافصل قابس الطاقة عن المقبس، واتصل بمركز صيانة LG Electronics للفحص.
لا تصلح المنتج بنفسك.

- **في حالة تعطل عرض المنتج لصور أو إصداره صوتًا، حتى في حالة تشغيل المنتج**
- **في حالة استمرار عرض المنتج لصور أو إصداره صوتًا، حتى في حالة إيقاف تشغيل المنتج**
- **في حالة وجود دخان أو رائحة حريق خارجة من المنتج**
- **في حالة دخول مياه أو مادة غريبة في المنتج**
- **في حالة ظهور صورة الشاشة مقطوعة**
- **في حالة إصدار المنتج أصوات متكررة مثل "صوت الطنين" أو "صوت التكسير"**
- **في حالة وجود أي مشكلة أخرى أو عطل في المنتج**

**معلومات المنتج**

| | | |
|---|---|---|
| **مواصفات البث** (تبعًا للبلد) | نظام التلفاز | خدمة نظام البث الأرضي / خدمة البث بالكابل / التلفاز الرقمي بالقمر الصناعي |
| | مقاومة الهوائي الخارجي | 75 أوم |
| **ظروف بيئة التشغيل** | درجة حرارة التشغيل | من 0 إلى 40 درجة مئوية |
| | نسبة رطوبة التشغيل | أقل من 80 % |
| | درجة حرارة التخزين | من 20- إلى 60 درجة مئوية |
| | نسبة الرطوبة في مكان التخزين | أقل من 85 % |
| **شروط الاستقبال اللاسلكي** | المسافة | من 3 - 10 أمتار (عند عدم وجود أي عوائق) |
| **متطلبات الطاقة** | | التيار المتردد بقوة من 100 إلى 240 فولت وبتردد 60/50 هرتز تقريبًا |
| **المحوّل** | جهاز Zero Connect Box | جهة التصنيع : Shenzhen Honor Electronic Co., Ltd.<br>الطراز : ADT-65AI-D00-3 |

- فئة المناخ T1 : الجهاز مصمم للعمل في مناخ معتدل.

- تُحدَّد معلومات الطاقة المقدَّمة مع المنتج وفقًا للوائح البلد. (تبعًا للبلد)
  - يُقاس استهلاك الطاقة تبعًا للَّجْنة الكهربائية التقنية الدولية (IEC 62087).

- قد يختلف استهلاك الطاقة الفعلي تبعًا لعوامل مثل نوع محتوى الفيديو المعروض وإعدادات التلفاز.
- لمعلومات عن تزويد الطاقة واستهلاكها، راجع الملصق الموجود على المنتج. (تبعًا للبلد)
  - يتم قياس استهلاك الطاقة المُعتاد وفقًا لمعيار IEC 62087 أو للوائح الطاقة في كل بلد.
  - انظر الملصق الموجود على الجزء السفلي من المنتج لمعرفة بيانات مصدر الطاقة وقدرات الطاقة ومعلومات المنتج.
    * في بعض الطرازات، يوجد الملصق داخل غطاء طرف توصيل الجهاز الخارجي.
    * حسب الطراز أو البلد، قد لا يكون استهلاك الطاقة المُعتاد على الملصق.

## كشف الحركة

| | |
|---|---|
| **في وضع "الاستعداد الدائم"، ينشط مستشعر الحركة بشكل لا حاجة له أو يفشل في التنشيط.**<br>(حسب الطراز) | **» هل مستشعر الحركة نظيف؟**<br>يقع مستشعر الحركة في منتصف الجزء السفلي من شاشة التلفاز، وقد لا يعمل بشكل صحيح في حالة التغطية بمواد غريبة. نظّفه بقطعة من القماش الناعم.<br>**» هل يوجد جسم يتداخل مع كشف مستشعر الحركة؟**<br>أزل أي أجسام أمام شاشة التلفاز.<br>**» هل مستشعر الحركة حساس جدًا أم غير حساس؟**<br>يمكن لمستشعر الحركة أن ينشط عند اكتشاف حركات الحيوانات الأليفة، والمكانس الكهربائية الروبوتية، وغيرها من الأشياء حيث يتم التعرف عليها كحركات. |

## الضوضاء

| | |
|---|---|
| **يصدر عن المنتج ضوضاء.** | **» هل تسمع صوت "الدق"؟**<br>هذا هو صوت تشوه البلاستيك بسبب درجة الحرارة والرطوبة. إنها ظاهرة شائعة في المنتجات البلاستيكية مثل الأثاث والسيارات، ولذلك هي ليست أمرًا يدعو للقلق.<br>**» هل ترتبط الضوضاء بالكهرباء؟**<br>يصدر الصوت من دائرة التبديل ذات السرعة العالية التي تمد المنتج بتيار، ولا تؤثر على وظيفة المنتج.<br>**» هل تسمع ضوضاء المروحة من Zero Connect Box؟**<br>هذا صوت طبيعي نشأ لتبديد الحرارة الناتجة داخل المنتج.<br>* تدير LG Electronics إنتاج المنتج بمعايير صارمة، ولا يُنظر إلى الضوضاء تحت مستوى معين على إنه عيب في المنتج أو عطل فيه. |

## جهاز التحكم عن بعد Magic Motion

| | |
|---|---|
| **الريموت لا يعمل.** | **» هل هناك مشكلة في توصيله بالمنتج؟**<br>اضغط مع الاستمرار على زر ⌂ وزر ⚙ الموجودين في منتصف جهاز التحكم عن بعد Magic Motion في نفس الوقت لأكثر من 5 ثوانٍ لإعادة التسجيل.<br>**» هل توجد أي أجسام تتداخل مع إرسال الإشارة اللاسلكية؟**<br>أزل أي أجسام بين شاشة التلفاز والريموت.<br>**» هل تم إدخال البطاريات بشكل صحيح؟**<br>تحقق من أن الجانب ⊕ والجانب ⊖ من البطارية في وضع صحيح. استبدل كلا البطاريتين ببطاريات جديدة عندما ينفدون. |

# استكشاف الأخطاء وإصلاحها

- إذا لاحظت أيًا من المشكلات الواردة أدناه أثناء استخدام المنتج، يُرجى التحقق مرة أخرى. فقد لا يكون عيبًا.
- قبل الاتصال بمركز صيانة LG Electronics، اضغط على الزر ⚙ في الريموت ثلاث مرات في إدخال التلفاز/HDMI للتحقق من اسم طراز المنتج والرقم التسلسلي. وستتمكن من تلقي مساعدة بشكل أسرع.

### الطاقة والشاشة

| | |
|---|---|
| **المنتج لا يعمل.** | **» هل سلك الطاقة موصل بشكل صحيح؟**<br>تحقق من توصيل سلك الطاقة بشكل صحيح في المنتج والمقبس.<br>**» هل هناك مشكلة في المقبس؟**<br>وصّل قابس الطاقة الخاص بجهاز آخر في المقبس في نفس المكان الذي تم توصيل المنتج فيه للتحقق مما إذا كان المقبس يعمل بشكل صحيح أم لا. |
| **يتوقف المنتج فجأة عن التشغيل.** | **» هل تم ضبط مؤقت النوم؟**<br>تحقق من تنشيط خاصية الغلق التلقائي في الإعدادات المتعلقة بالوقت.<br>**» تحقق مما إذا كانت الأجهزة الخارجية تعمل معًا أم لا.**<br>توقف عن استخدام الأجهزة الخارجية التي تستخدمها مع بعضها وتحقق مما إذا كان التلفاز يعمل بصورة طبيعية أم لا.<br>**» هل كانت تعمل ميزة الغلق التلقائي؟**<br>هذا المنتج مزود بوظيفة الغلق التلقائي التي تقوم بإيقاف تشغيل الطاقة تلقائيًا إذا لم يتم استخدام الريموت لمدة 15 دقيقة بدون إشارة إدخال. |
| **نقاط على الشاشة.** | **» هل ترى نقاط بيضاء أو نقاط زاهية اللون أو نقاط داكنة أو نقاط وامضة على الشاشة؟**<br>يُعد هذا المنتج منتجًا متقدمًا يحتوي على الملايين من وحدات البيكسل. قد ترى نقاط وامضة بحجم حوالي 1/1000000(1 جزء في المليون). لا تعد هذه عيوب في المنتج أو أعطال فيه.<br>• نقاط بيضاء: نقاط تظهر زاهية اللون،<br>• نقاط زاهية اللون: نقاط تظهر أكثر سطوعًا من صورة عادية<br>• نقاط داكنة: نقاط يكون فيها جزء من النص أو شيء غير مرئي أو مشوش<br>• نقاط وامضة: نقاط تومض |

### توصيل Zero Connect Box

| | |
|---|---|
| **تظهر صورة توصيل الطاقة على الشاشة.** | **» هل Zero Connect Box موصل بشكل صحيح؟**<br>تحقق من توصيل سلك الطاقة الخاص بـ Zero Connect Box بإحكام في المقبس. |
| **تظهر صورة توصيل Zero Connect Box على الشاشة.** | **» هل توجد أي أجسام تتداخل مع إرسال الإشارة اللاسلكية؟**<br>أزل أي أجسام بين شاشة التلفاز وZero Connect Box.<br>**» اتبع التعليمات التي تظهر على الشاشة لضبط الهوائي تلقائيًا أو إعادة توصيل Zero Connect Box.** |

### نظام التحكم الصوتي عن بعد

| | |
|---|---|
| **التعرف على الصوت لا يعمل جيدًا.** | **» هل تم تشغيل ميزة التحكم الصوتي عن بعد؟**<br>اضغط على زر **الإعدادات السريعة** (⚙) لتشغيل التحكم الصوتي عن بعد. (حسب الطراز) |

# الإدارة

### حماية شاشة تلفاز OLED

- على عكس أجهزة تلفاز LCD/LED العامة، يمكن لأجهزة تلفاز OLED عرض صور باللون الأسود المثالي وواضحة دون تشويش الضوء.
- نظرًا لخصائص مواد OLED التي توفر عرضًا عالي الدقة، فقد تحدث مشكلة الاحتفاظ بالصورة أو تستمر، ما يتسبب في ظهور صورة بعدية على الشاشة.
- يُعد الاحتفاظ بالصورة ظاهرة شائعة في جميع شاشات OLED. قد يؤدي استخدام وضع العرض الموصى به إلى الحد من ظاهرة الاحتفاظ بالصورة.
- تجنب عرض الصور التي من المحتمل أن تسبب الاحتفاظ بالصورة، واتبع التوصيات.

### الصور التي من المحتمل أن تسبب الاحتفاظ بالصورة

- شاشة تحتوي على بقع سوداء على جانب واحد أو أكثر في الأعلى أو الأسفل أو اليسار أو اليمين.
- الصور ذات نسبة العرض إلى الطول فيها هي 3:4 أو 9:21.
- شاشات تحتوي على صور ثابتة لفترة طويلة، مثل أرقام القنوات أو شعارات محطات البث أو أيقونات وحدة التحكم في الألعاب أو قوائم أجهزة فك التشفير.
- شاشات أو شاشات ثابتة أخرى تكرر المشهد نفسه.

### توصيات لتقليل الاحتفاظ بالصورة

- إذا كانت هناك بقع سوداء على جانب أو أكثر من الجوانب العلوية أو السفلية أو اليسرى أو اليمنى للشاشة، فاضغط على **زر الإعدادات السريعة** (⚙) في الريموت لإزالة البقع السوداء قبل المشاهدة.
- أوقف تشغيل القائمة الخاصة بإعداد الأجهزة الخارجية مثل أجهزة فك التشفير بحيث لا يتم عرضها على الشاشة لفترة طويلة.

**ملاحظة**

- تعمل أجهزة تلفاز OLED على خفض سطوع الشاشة تلقائيًا عند تلقي صورة ثابتة لفترة طويلة واستعادة السطوع بمجرد اختفاء الصورة الثابتة.
- هذه واحدة من ميزات التلفاز للحد من ظاهرة الاحتفاظ بالصورة ولا تُعد خللاً.

### تشغيل مسح البيكسل

أجهزة تلفاز OLED مزودة بميزة مسح البيكسل التي تكتشف ظروف الشاشة من تلقاء نفسها لمنع الاحتفاظ بها.

- يحسب مسح البيكسل تلقائيًا وقت التنفيذ الأمثل بناءً على وقت المشاهدة التراكمي ويعمل تلقائيًا عند إيقاف تشغيل التلفاز.
- قد تظهر الخطوط الأفقية في أعلى الشاشة وأسفلها في أثناء مسح البيكسل.
- تعمل ميزة مسح البيكسل عند توصيل التلفاز بسلك الطاقة ومصدر التيار الرئيسي.
- يمكن أيضًا تشغيل مسح البيكسل يدويًا بالضغط على **زر الإعدادات السريعة** (⚙) في الريموت.

## USB / موزع USB

إذا كان موزع USB الموصل بالتلفاز لا يمكنه التعرف على أجهزة USB، قم بتوصيل USB بطرف التلفاز مباشرة.

**ملاحظة**

- إذا لم يتطابق شكل طرف التلفاز وجهاز USB، استخدم كابل تمديد يدعم USB 2.0.
- يجب ألا تتجاوز أطراف أجهزة USB 10 مم سمكًا و 18 مم عرضًا.

## مكبر IR

هذا جهاز إرسال أشعة تحت حمراء يسمح بالتحكم في الأجهزة بسلاسة مثل أجهزة فك التشفير، ومشغلات Blu-ray، ومشغلات DVD، وأشرطة الصوت، ووحدات التحكم في الألعاب.

- إذا تم تثبيت Zero Connect Box في مكان سوى أسفل التلفاز، قد لا يتم التحكم في الأجهزة الخارجية بسلاسة بريموت التلفاز؛ لذلك يوصى بتوصيل مكبر IR.
- يتطلب التحكم في مكبر IR إعداد ريموت متكامل.
- قم بتأمين كلا طرفي مكبر IR بمقدمة (جهاز الاستقبال) ريموت الجهاز الخارجي باستخدام الشريط المرفق.

## المحوّل

**⚠ تنبيه**

- يُرجى التأكد من توصيل التلفاز بمحول طاقة التيار المتردد/المستمر قبل توصيل قابس الطاقة المرفق بالتلفاز بمقبس الطاقة الموجود في الحائط. (حسب الطراز)

## شبكة LAN سلكية

- يمكن نقل صوت التلفاز إلى شريط الصوت (جهاز صوت خارجي). عند الإرسال بالطرق السلكية (بصرية رقمية، جهاز HDMI ARC)، وصل بالطرف الخارجي في الجزء الخلفي من Zero Connect Box، وعند الإرسال بطرق لاسلكية (شريط صوت LG الذي يدعم ميزة WOWCAST)، استخدم ميزة WOWCAST. (تبعًا للبلد)

# استخدام التلفاز

## استخدام زر الطاقة

اضغط على **زر التشغيل** (⏻) الموجود بأسفل التلفاز لمدة قصيرة لتشغيل الشاشة واضغط لمدة أطول لإغلاق جميع الوظائف والشاشة.

- استخدم زر الطاقة فقط عندما يكون كل من شاشة التلفاز و Zero Connect Box متصلين.
- قد يختلف شكل وموقع زر الطاقة بناءً على طراز التلفاز.
- عندما تشغل الطاقة لأول مرة بعد شراء المنتج، قد تستغرق الشاشة حوالي دقيقة واحدة للتشغيل بسبب البدء.
- بالنسبة إلى الطرازات المزودة بمستشعرات الحركة، إذا قمت بتشغيل الشاشة باستخدام مستشعر الحركة، فسيتم تشغيل التلفزيون من خلال التعرف على الحركة. (حسب الطراز)

## استخدام التحكم الصوتي عن بعد

اضغط على **زر الإعدادات السريعة** (⚙) لتشغيل التحكم الصوتي عن بعد. قد يختلف مسار إعدادات الميزة حسب طراز التلفاز.

## تثبيت شاشة التلفاز

### التثبيت على الحائط

تتضمن هذه الطريقة تثبيت شاشة التلفاز أفقيًا على الحائط باستخدام مُثبّت على الحائط. راجع دليل حامل التثبيت على الحائط المتوفر بشكل منفصل للحصول على معلومات مُفصّلة.

- لتثبيت عامل الدعم، تأكد من أن الحائط مصنوع من مادة يمكنها تحمل وزن شاشة التلفاز، مثل الخرسانة أو الصخور الطبيعية أو طوب البناء.
- اترك مساحة كافية حول المنتج حتى لا تسد فتحات التهوية الخاصة بشاشة التلفاز.

**ملاحظة**

- في حالة استخدام الحوامل اللاصقة للتثبيت على الحائط، قد لا تلتصق شاشة التلفاز بالحائط، وذلك حسب حالة الحائط.
- يُوصى باستخدام منتجات التثبيت على الحائط من LG. إذا كنت تستخدم حامل تثبيت على الحائط غير تابع لشركة LG، فتأكد من أنه يسمح بتوفير مسافة كافية من الحائط.
- عند استخدام حامل مثبت على الحائط، وصّل الكابلات قبل تثبيت شاشة التلفاز.
- البراغي (4 براغي x 2) التي تثبت مجموعة التثبيت على الحائط المدمجة في الجزء الخلفي من المنتج هي M3 x L3.5 مم.
- يمكنك تنظيم سلك طاقة شاشة التلفاز باستخدام القطع المخصصة لإدارة الكابلات.

**⚠ تنبيه**

- عند تثبيت شاشة التلفاز، تأكد من ارتداء قفازات العمل. قد يؤدي التثبيت بدون حماية الأيدي إلى إصابة.
- إذا ثبّت شاشة التلفاز بحامل لاصق على الحائط، فتأكد من استخدامه فقط عند لصقها بالحائط. قد تتأرجح شاشة التلفاز أو تميل، ما يتسبب في تلفها.
- لا تركّب حامل التثبيت على الحائط في مكان قد يلامس فيه الزيت أو بخار الزيت. فقد يؤدي القيام بذلك إلى تلف شاشة التلفاز.
- نظرًا لأن شاشة التلفاز ثقيلة، يجب أن يرفعها شخصان على الأقل عموديًا عند إخراجها من العلبة أو تحريكها.
- لا تتحرك أثناء حمل حامل الكابل أو شريط تنظيم الكابل. فقد يؤدي القيام بذلك إلى تلف الأجزاء أو شاشة التلفاز أو حدوث إصابة. (حسب الطراز)
- لا تقم بإمالة شاشة التلفاز مستخدمًا القوة. قد يؤدي القيام بذلك إلى سقوطها والتسبب في حدوث تلف أو إصابة.
- احرص على تجنب انحشار يديك أو أصابعك في حامل الحائط وإصابتك.
- لا يغطي الضمان أي أضرار أو إصابات تنتج عن استخدام مواد غير معتمدة.

**⚠ تحذير**

- لا تضع مواد غريبة (زيوت وشحوم وما إلى ذلك) على البراغي عند تركيب المنتج. قد يؤدي القيام بذلك إلى تلف المنتج.
- قد يؤدي إحكام ربط البراغي بقوة مفرطة إلى انفصاله بسبب تآكل مفصل البراغي.
- استخدم إدارة الكابلات في الجزء الخلفي من المنتج لتنظيم الكابلات. (حسب الطراز)

## توصيل الأطراف الخارجية

يمكنك توصيل الأجهزة الخارجية بالتلفاز مثل أجهزة الكابلات، وأجهزة HDMI، وأجهزة فك التشفير. للحصول على مزيد من المعلومات عن الاتصال بالجهاز الخارجي، راجع الدليل المرفق مع كل جهاز.

- عند استخدام الشاشة مع جهاز خارجي بتردد 60 جيجاهرتز، قد تفشل في العرض بسبب التدخل المشترك.
- اضبط الدقة والتردد المناسبين للجهاز المتصل. قد يتسبب عدم فعل ذلك في إرهاق العينين.
- قد تختلف طريقة التثبيت المفصلة بناءً على طراز التلفاز.

### تثبيت الهوائي/الكابل

- أدخل الكابل المحوري الذي يرسل إشارات الصوت/الفيديو في طرف إدخال الهوائي/الكابل أو طرف إدخال الهوائي خلف Zero Connect Box.
- احرص على ألا تثني السلك النحاسي عند توصيل الكابل المحوري.
- استخدم مقوي إشارة إذا كانت الإشارة ضعيفة.
- عند استخدام هوائي واحد لتلفازين أو أكثر، استخدم مجزئ إشارة.

**ملاحظة**

- لا تضع زيت أو مادة تشحيم على البراغي المستخدمة أثناء التثبيت. فقد يتسبب فعل ذلك في تعطل التلفاز.

### طبق القمر الصناعي

وصّل التلفاز بطبق القمر الصناعي ومقبس القمر الصناعي باستخدام كابل تردد راديوي (بمقاومة قدرها 75 أوم). (حسب الطراز)

### HDMI

- استخدم كابل HDMI معتمد (أقصر من 3 أمتار) ويحمل شعار HDMI (كابل HDMI®/™ فائق السرعة).
- افصل الطاقة عن التلفاز وجميع الأجهزة المتصلة، وافصل أسلاكهم من المقبس قبل توصيل كابل HDMI.
- سيوفر توصيل جهاز يدعم ميزة HDMI Ultra HD Deep Colour بالتلفاز صورة أوضح. إذا وصلت جهاز لا يدعم هذه الميزة وفعّلت الميزة، قد لا تعمل بشكل صحيح. غيّر الإعدادات إذا واجهتك مشاكل.

**ملاحظة**


- قد تختلف صيغ الصوت الذي يدعمها HDMI بناءً على طراز التلفاز.
- يجب ألا تتجاوز أطراف أجهزة HDMI 10 مم سمكًا و 18 مم عرضًا.


# تثبيت Zero Connect Box


## 1. اختيار موقع التثبيت

يمكن تثبيت جهاز Zero Connect Box في مواجهة شاشة التلفاز أو بجانبها أو أسفلها. اتبع دليل المستخدم للتثبيت بشكل صحيح.

- يلزم عدم وجود عوائق بين شاشة التلفاز وZero Connect Box. قد يؤدي القيام بذلك إلى التداخل مع نقل الإشارة اللاسلكية.
- ثبّت Zero Connect Box في مكان على مستوى أقل من جهاز استقبال الإشارة اللاسلكية لشاشة التلفاز.
- يختلف نطاق الإرسال الخاص بـ Zero Connect Box حسب الاتجاه الذي يواجه فيه شاشة التلفاز. راجع الشكل أدناه وقم بالتثبيت على المسافة المناسبة.

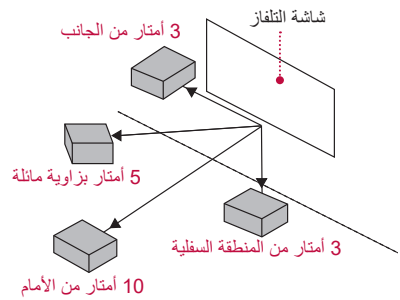

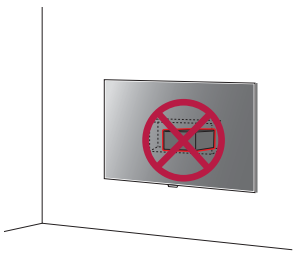

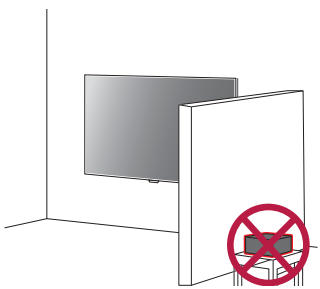
## 2. إجراء الضبط التلقائي للهوائي


يرجى تشغيل الضبط التلقائي للهوائي للحصول على إعدادات بيئة لاسلكية مثالية.


**ملاحظة**

- لا تثبت جهازي تلفاز لاسلكيين أو جهازي Zero Connect Box في نفس الغرفة. فقد يتداخلون مع بعضهم.
- لا تضع أجهزة أو أجسام إلكترونية أعلى Zero Connect Box. قد يؤدي القيام بذلك إلى حدوث تداخل في الإرسال، ما يتسبب في فشل عرض الشاشة.
- عند استخدام شريط صوت، تأكد من أنه لا يعيق جهاز استقبال الإشارة اللاسلكية لشاشة التلفاز.

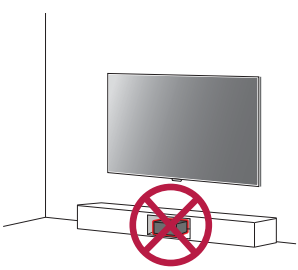


**⚠ تنبيه**

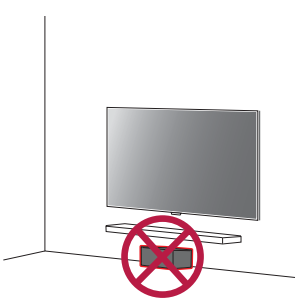

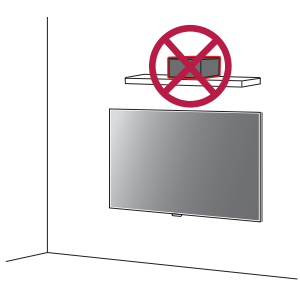

## فحص مظهر وأسماء مكونات التلفاز اللاسلكي (شاشة التلفاز + Zero Connect Box)

**شاشة التلفاز**

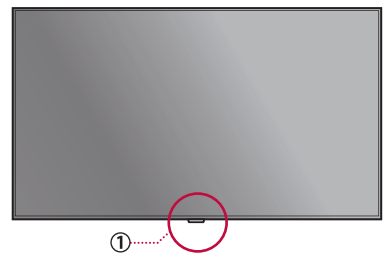



① **مستقبل الإشارة اللاسلكية**
يستقبل هذا الجزء إشارات الفيديو والصوت التي يرسلها Zero Connect Box.

**زر الطاقة**
يُستخدم زر الطاقة لتشغيل شاشة التلفزيون، والتبديل إلى وضع الاستعداد الدائم.

**مفتاح الميكروفون**
يمكنك تشغيل وإيقاف الميكروفون المدمج في التلفزيون من خلال التحكم في مفتاح الميكروفون الموجود أسفل التلفزيون.


### (WM26GA) Zero Connect Box

إنه جهاز ينقل إشارات الفيديو والصوت لاسلكيًا إلى شاشة التلفاز من خلال توصيل هوائي خارجي أو جهاز فك التشفير.

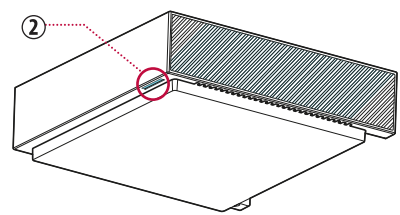


منظر أمامي وسفلي

② **مؤشر LED الأمامي**
يشير إلى حالة الطاقة أو التشغيل لـ Zero Connect Box.




المنظر الخلفي

③ **طرف التوصيل الخارجي**
يمكنك توصيل سلك الطاقة الخاص بجهاز Zero Connect Box وأجهزة الفيديو/الصوت الخارجية مثل هوائي خارجي وأجهزة فك التشفير.

# ملاحظة

**قراءة دليل المستخدم**

يتكون دليل المستخدم من "دليل المستخدم السريع" المرفق مع التلفاز عند شراؤه، و"دليل المستخدم الإلكتروني" المخزن على التلفاز كبرنامج.

**دليل المستخدم السريع**

يحتوي على احتياطات السلامة التي يجب الامتثال لها عند استخدام التلفاز، وطرق تثبيت المكونات، وطرق توصيل الأجهزة الخارجية.

- يمكنك أيضًا تنزيل أو عرض دليل المستخدم السريع على الأجهزة الرقمية مثل أجهزة الكمبيوتر الشخصية والهواتف المحمولة. ابحث عن اسم الطراز في شريط البحث الخاص بدليل المستخدم على موقع LG Electronics.
- إذا فقدت دليل المستخدم السريع أو أتلفته، اتصل بمركز خدمة عملاء LG Electronics لطلب دليل بديل.
- ⊕ : يشير هذا المؤشر إلى أن التطبيق قد يعتمد على الطراز الموجود في دليل الإعداد السريع.

**دليل المستخدم الإلكتروني**

لتعلم كيفية استخدام مختلف مزايا المنتج، اضغط على **زر الإعدادات السريعة** (⚙) الموجود في الريموت واطلع على دليل المستخدم الإلكتروني المخزن على التلفاز.

- LG Electronics غير مسؤولة عن أي تلف يلحق بالمنتج أو إصابة بسبب استخدام منتجات LG غير أصلية.
- مكونات التلفاز خاضعة للتغيير دون إخطار مسبق بغرض ترقية الأداء. قد يتغير اسم الطراز أو التصميم أيضًا حسب الظروف أو سياسات الجهة المصنعة.
- قد تختلف الصور الموضحة في هذا الدليل عن المنتج الفعلي.

**الشراء المنفصل**

**جهاز التحكم عن بعد Magic Motion**: جهاز التحكم عن بعد Magic Motion مع مزايا ذكية مثل التعرف على الصوت والتحكم بالحركة.
**كابل توصيل الأجهزة الخارجية**: كابلات لتوصيل الأجهزة الخارجية بالتلفاز مثل الهوائيات

- للشراء بشكل منفصل، تواصل مع مركز خدمة عملاء LG Electronics.

**قبل قراءة هذا الدليل**

**فهم تردد 60 جيجاهرتز اللاسلكي**

- تستخدم أجهزة التلفاز اللاسلكية موجات راديو بتردد 60 جيجاهرتز لإرسال الفيديو والصوت عاليا الجودة لاسلكيًا.
- يفيد النطاق الترددي العالي لترددات 60 جيجاهرتز في إرسال البيانات كبيرة الحجم كما يتميز بخواص خطية قوية لكنه يتأثر بالعوائق بشكل كبير.
- لأفضل تجربة لمشاهدة التلفاز، يجب أن تواجه هوائيات الإرسال والاستقبال بعضها، ويجب ألا تعترض طريق الإرسال أي عوائق.
- لا تعد أخطاء الإرسال التي تحدث بسبب العوائق أعطالًا. استخدم التلفاز بعد تثبيته بشكل صحيح وفقًا لطريقة التثبيت الموصى بها.
- يستوفي هذا المنتج المعايير لحماية جسم الإنسان ضد الموجات الكهرومغناطيسية*. (* يفي بمعايير IEC 62311)

- لا تلمس أبدًا هذا الجهاز أو الهوائي أثناء العاصفة الرعدية. فقد تتعرض للصعق الكهربائي.
- تأكد من توصيل سلك الطاقة بالمنتج ومقبس الحائط بأمان. فقد يحدث تلفٌ في القابس أو المقبس وقد ينشب حريق في أصعب الحالات إذا لم يتم توصيله بأمان.
- لا تُدخل أجسامًا معدنية أو قابلة للاشتعال في المنتج. إذا سقط جسم غريب في المنتج، فافصل سلك الطاقة واتصل بخدمة العملاء.
- لا تلمس طرف سلك الطاقة أثناء توصيله بالكهرباء. فقد تتعرض للصعق الكهربائي.
- **إذا حدث أي مما يلي، فافصل المنتج على الفور واتصل بمركز خدمة العملاء المحلي.**
  - في حال تلف المنتج.
  - في حال تسرب المياه أو مادة أخرى إلى المنتج (مثل محوّل التيار المتردد أو سلك الطاقة أو المنتج).
  - إذا شممتَ رائحة دخان أو رائحة أخرى من المنتج.
  - عندما تهب عواصف رعدية أو عند عدم استخدامه لفترة زمنية طويلة.

  حتى عند إيقاف تشغيل المنتج عن طريق الريموت أو الزر، يتم توصيل مصدر طاقة التيار المتردد بالوحدة إذا لم يتم فصلها عن المقبس.
- لا تستخدم منتجات كهربائية ذات فولتية عالية بالقرب من المنتج (على سبيل المثال صاعق الحشرات). فقد يلحق ذلك ضررًا بالمنتج.
- لا تحاول تعديل هذا المنتج بأي طريقة من دون الحصول على تصريح مكتوب من LG Electronics. فقد ينشب حريق أو تحدث صدمة كهربائية. اتصل بخدمة العملاء المحلية للحصول على الخدمة أو الإصلاح. قد يؤدي التعديل غير المصرح به إلى إلغاء صلاحية المستخدم لتشغيل هذا المنتج.
- لا تستخدم سوى المرفقات/الملحقات المعتمدة من شركة LG Electronics. وإلا، فقد يتسبب ذلك في نشوب حريق أو حدوث صدمة كهربائية أو عطل أو تشوّه المنتج.
- لا تفكك أبدًا محوّل التيار المتردد أو سلك الطاقة. فقد يتسبب ذلك في نشوب حريق أو حدوث صدمة كهربائية.
- توخَّ الحذر عند استخدام المحول لتجنب سقوطه أو وقوعه على الأرض. لا تُعرّض المحوّل لصدمة خارجية. فقد يلحق ذلك ضررًا بالمحول.
- للحد من مخاطر نشوب حريق أو حدوث صدمة كهربائية، لا تلمس المنتج عندما تكون يداك مبللتين. إذا كانت أطراف سلك الطاقة رطبة أو يغطيها الغبار، فاحرص على تجفيف قابس الطاقة تمامًا أو امسح الغبار عنه.
- **البطاريات**
  - خزِّن الملحقات (البطاريات وغيرها) في مكان آمن بعيدًا عن متناول الأطفال.
  - لا تقم بتقصير الدائرة أو فك البطاريات أو تركها لتسخن أكثر مما ينبغي. لا تتخلص من البطاريات في النار. فلا ينبغي أن تتعرض البطاريات للحرارة الزائدة.
  - تنبيه: استخدم البطاريات الصحيحة للمنتج. في حال تم استبدال البطارية بنوع غير صحيح، فسيؤدي ذلك إلى خطر نشوب حريق أو حدوث انفجار.
  - ينصح باستخدام بطاريات الكالين (قلوية).
- **النقل**
  - أثناء النقل، تأكد من إيقاف تشغيل المنتج وفصله عن الطاقة وأنه تمت إزالة كل الكابلات. قد يتطلب حمل المنتجات الكبيرة شخصين أو أكثر. لا تضغط على الشاشة الأمامية للمنتج. وإلا، فقد يحدث تلف للمنتج أو تتعرض لخطر الحريق أو الإصابة.
- أبقِ مواد التغليف المضادة للرطوبة أو المصنوعة من الفينيل بعيدة عن متناول الأطفال.
- لا تسمح بتعرض الجهاز للصدمات أو بسقوط أي أشياء داخله، ولا تُسقط أي شيء على الشاشة.
- لا تضغط بشدّة على الشاشة أو تخدشها بيَدك أو بواسطة شيء حاد مثل مسمار أو قلم رصاص أو قلم حبر. قد يتسبب هذا في تلف الشاشة.
- لا تحمل المنتج من الشاشة أو تخدش السطح بأي غرض معدني أو تضع عليه أي ضغط.
  - قد تنكسر الشاشة، ما من شأنه أن يؤدي إلى إصابات بشرية أو تلف المنتج.
- لا تدفع المنتج ولا تركله.
- لا تضع أشياء ثقيلة أعلى المنتج.
- انتبه إذا كانت لديك أي حيوانات أليفة
- **التنظيف**
  - عند التنظيف، افصل سلك الطاقة وامسح برفق بقطعة قماش ناعمة/جافة. لا ترش الماء أو أي سوائل أخرى مباشرة على المنتج. ولا تنظفه باستخدام مواد كيميائية، بما في ذلك مواد تنظيف الزجاج أو أي نوع من معطرات الجو أو مبيدات الحشرات أو الشحوم أو الشمع (الشمع المخصص للسيارات، الشمع الصناعي) أو المواد الكاشطة أو التنر أو البنزين أو الكحول إلخ التي يمكن أن تلحق ضررًا بالمنتج و/أو شاشته. وإلا، فقد يتسبب ذلك في حدوث صدمة كهربائية أو تلف المنتج.

# تحذير! تعليمات الأمان



تنبيه
خطر التعرض لصدمة كهربائية
لا تفتحه



تنبيه : لتقليل خطر الصدمة الكهربائية، لا تقم بإزالة الغطاء (أو الجزء الخلفي). ولا توجد قطع قابلة للصيانة من قِبل المستخدم في المنتج. أوكل هذا الأمر إلى فريق الخدمة المؤهل.

يُقصد بهذا الرمز تنبيه المستخدم إلى وجود "فولتية خطيرة" غير معزولة داخل المنتج قد تحتوي على مقدار كافٍ لإلحاق خطر الصدمات الكهربائية بالأشخاص.

يُقصد بهذا الرمز تنبيه المستخدم إلى وجود تعليمات مهمة متعلقة بكيفية تشغيل المنتج وصيانته (خدمته) داخل الدليل المرفق مع الجهاز.

تحذير : للحد من مخاطر نشوب حريق وحدوث صدمات كهربائية، لا تعرّض المنتج للمطر أو الرطوبة.

- لمنع انتشار الحريق، ابق الشموع أو العناصر المشتعلة الأخرى دائمًا بعيدة عن المنتج.
- **لا تضع المنتج و/أو الريموت في الظروف التالية:**
  - أبق المنتج بعيدًا عن أشعة الشمس المباشرة.
  - منطقة ذات رطوبة عالية كالحمّام مثلاً.
  - بالقرب من مصدر حرارة كالمواقد أو الأجهزة الأخرى التي تُصدر حرارة.
  - بالقرب من طاولات المطبخ أو أجهزة ضبط الرطوبة حيث يمكن أن يتعرض بسهولة للبخار أو الزيت.
  - منطقة معرّضة للمطر أو الرياح.
  - لا تعرّض الجهاز لقطرات المياه ولا تضع أغراضًا تحتوي على سوائل، مثل المزهريات أو الأكواب وما إلى ذلك عليه (مثلاً على الرفوف الموجودة فوق الوحدة).
  - بالقرب من المواد القابلة للاشتعال مثل البنزين أو الشموع أو تعريض المنتج لتكييف هواء مباشر.
  - لا تركّب الجهاز في أماكن تتعرض للغبار كثيرًا.
  - على أثاث غير مؤمَّن أو مرتفع مثل الأرفف أو رفوف الكتب.

  وإلا، فقد يتسبب ذلك في نشوب حريق أو حدوث صدمة كهربائية أو احتراق/انفجار أو عطل أو تشوّه المنتج.
- **التهوية**
  - قم بتثبيت منتجك في مكان جيد التهوية. لا تقم بتثبيته في مساحة ضيقة مثل خزانة الكتب.
  - لا تقم بتثبيت المنتج على سجادة أو وسادة.
  - لا تقم بحجب المنتج أو تغطيته بقطعة قماش أو مواد أخرى أثناء توصيل الوحدة بالكهرباء.
- احرص على عدم لمس فتحات التهوية. أثناء مشاهدة المنتج لفترة طويلة، قد تصبح فتحات التهوية ساخنة.
- أبق مسافة لا تقل عن 10 سم عن الأغراض الأخرى حتى لا تنسد فتحات جهاز Zero Connect Box.
  - من شأن ارتفاع درجة الحرارة الداخلية للمنتج أن يؤدي إلى احتراق المنتج أو تلفه.
- احرص على حماية سلك الطاقة من سوء الاستخدام المادي والميكانيكي، مثل تعرضه للثني أو الالتواء أو الضغط عليه أو إغلاق الباب عليه أو المشي فوقه. انتبه جيدًا إلى المقابس والمآخذ في الحائط ومخرج السلك من الجهاز.
- لا تحرّك المنتج أثناء توصيل سلك الطاقة.
- لا تستخدم سلك الطاقة التالف أو غير محكم التركيب.
- تأكد من الإمساك بالقابس عند فصل سلك الطاقة. لا تسحب سلك الطاقة لفصل المنتج.
- لا توصل أجهزة كثيرة جدًا بمخرج التيار المتردد نفسه، لأن هذا قد يؤدي إلى نشوب حريق أو حدوث صدمة كهربائية.
- **فصل الجهاز عن مصدر الطاقة الرئيسي**
  - إن قابس الطاقة هو الجهاز المستخدم لفصل الجهاز عن الطاقة. في الحالات الطارئة، يجب أن يبقى قابس الطاقة موضوعًا في مكان يسهل الوصول إليه.
- لا تدع الأطفال يتسلقون المنتج أو يتشبثون به. وإلا فقد يسقط المنتج مما قد يتسبب في حدوث إصابة خطيرة.
- **تأريض الهوائي الخارجي** (يمكن أن يختلف حسب البلد):
  - في حال تركيب هوائي خارجي، اتبع الاحتياطات الواردة أدناه. ينبغي عدم وضع نظام الهوائي الخارجي بالقرب من خطوط الكهرباء العلوية أو الإضاءة الكهربائية أو دوائر الطاقة الأخرى أو في الأماكن التي يمكنه فيها أن يلامس خطوط أو دوائر الطاقة هذه، حيث يمكن أن يتسبب هذا في حدوث وفاة أو إصابة خطيرة.

www.lg.com

حقوق النشر والتأليف © لعام 2026 لـ LG Electronics Inc.
جميع الحقوق محفوظة.

العربية

# LG OLED TV

## دليل المالك

السلامة و المرجع

يرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز والاحتفاظ به للرجوع إليه في المستقبل.

تجد طراز المنتج ورقمه التسلسلي على الجهة الخلفية منه وعلى أحد جوانبه. دوّنهما أدناه في حال احتجت إلى أي خدمة.

الطراز

الرقم التسلسلي.