

OWNER'S MANUAL

MICROWAVE

OVEN

Please read this manual carefully before operating your set and retain it for future reference.

MC2846SL

"User can refer user manual on the website "<https://www.lg.com/in/support/manuals>"



MFL63289536

Rev.03_05082020



www.lg.com

Copyright © 2017-2020 LG Electronics. All Rights Reserved.

How the Microwave Function Works

Microwaves are a form of energy similar to radio, television waves, and ordinary daylight. Normally, microwaves spread outwards as they travel through the atmosphere and disappear without effect. This oven, however, has a magnetron that is designed to make use of the energy in microwaves. Electricity, supplied to the magnetron tube, is used to create microwave energy.

These microwaves enter the cooking area through openings inside the oven. A tray is located inside the oven. Microwaves cannot pass through metal walls of the oven, but they can penetrate such materials as glass, porcelain and paper, the materials out of which microwave-safe cooking dishes are constructed.

Microwaves do not heat cookware, though cooking vessels will eventually get hot from the heat generated by the food.

Contents

3	IMPORTANT SAFETY INSTRUCTIONS
6	SAFETY PRECAUTIONS
7	BEFORE USE
7	Unpacking & Installing
9	Method To Use Accessories As Per Mode
10	Microwave-Safe Utensils
11	Control Panel
12	Child Lock
12	+ 30 seconds
12	BEFORE USE/HOW TO USE
12	Micro Power Cooking
13	Micro Power Level
14	Grill Cooking
14	Grill Combi Cooking
15	Convection Preheat
15	Convection Cooking
16	Convection Combi Cooking
16	More Or Less Cooking
17	Energy Saving
18	To Clean Your Oven
18	Questions & Answers
19	TWO RECIPES
19	Two Recipe For Starters

A very safe appliance

Your Microwave oven, is one of the safest of all home appliances. When the door is opened, the oven automatically stops producing microwaves. Microwave energy is converted completely to heat when it enters food, leaving no "left over" energy to harm you when you eat your food.

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the oven. This guide does not cover all possible conditions that may occur. Always contact your LG service technician or manufacturer about problems that you do not understand.

WARNING

This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION." These word means:

WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious body harm or death.

CAUTION

This symbol will alert you to hazards or unsafe practices which could cause body injury or property damage.

WARNING

- 1 Do not attempt to tamper with, or make any adjustments or repairs to the door, door seals, control panel, safety interlock switches or any other part of the oven which would involve the removal of any cover protecting against exposure to microwave energy. Do not operate the oven if the door seals and adjacent parts of the microwave oven are faulty. Repairs should only be undertaken by a qualified LG service technician.
- Unlike other appliances, the microwave oven is a high-voltage and a high electrical-current equipment. Improper use or repair could result in harmful exposure to excessive microwave energy or in electric shock.
- 2 Do not use the oven for the purpose of dehumidification. (ex. Operating the microwave oven with wet newspapers, clothes, toys, electric devices, pet or child etc.)
- It can be the cause of serious damage to safety such as a fire, a burn or a sudden death due to an electric shock.

WARNING

- 3 The appliance is not intended for use by young children or elderly persons. Only allow elderly & children (8 years and above) to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Improper use may cause damage such as a fire, electric shock or burn.
- 4 Accessible parts may become hot during use. Young children should be kept away.
- They may get a burn.

WARNING

- 5 Liquids or other foods must not be heated in sealed containers since they are liable to explode. Remove the plastic wrapping from food before cooking or defrosting. Please note that in some cases food should be covered with plastic film, for heating or cooking.
- They could burst.

WARNING

- 6 Do not operate your oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door(bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- It could result in harmful exposure to excessive microwave energy.

- 7 Be certain to use proper accessories on each operation mode, refer to the guide on page 9.
 - Improper use could result in damage to your oven and accessories, or could make spark and a fire.
- 8 The children should not allow to play with accessories or hang down from the door handle.
 - They may get hurt.
- 9 It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.




CAUTION

- 1 You cannot operate your oven with the door open due to the safety interlocks built into the door mechanism. It is important not to tamper with the safety interlocks.
 - It could result in harmful exposure to excessive microwave energy. (Safety interlocks automatically switch off any cooking activity when the door is opened.)
- 2 Do not place any object (such as kitchen towels, napkins, etc.) between the oven front face and the door or allow food or cleaner residue to accumulate on sealing surfaces.
 - It could result in harmful exposure to excessive microwave energy.
- 3 Please ensure cooking times are correctly set, small amounts of food require shorter cooking or heating time.
 - Over cooking may result in the food catching fire and subsequent damage to your oven.
- 4 When heating liquids, e.g. soups, sauces and beverages in your microwave oven,
 - * Avoid using straight sided containers with narrow necks.
 - * Do not overheat.
 - * Stir the liquid before placing the container in the oven and again halfway through the heating time.
 - * After heating, let it stand in the oven for a short time; stir or shake it again carefully and check the temperature of it before consuming to avoid burns (especially, contents of feeding bottles and baby food jars).
- Be careful when handling the container. Microwave heating of beverages can result in delayed eruptive boiling without evidence of bubbling. This could result in hot liquids suddenly boiling over.
- 5 An exhaust outlet is located on the top, bottom or side of the oven. Don't block the outlet.
 - It could result in damage to your oven and poor cooking results.
- 6 Do not operate the oven when empty. It is best to leave a glass of water in the oven when not in use. The water will safely absorb all microwave energy, if the oven is accidentally started.
 - Improper use could result in damage to your oven.
- 7 Do not cook food wrapped in paper towels, unless your cook book contains instructions for the food you are cooking. And do not use newspaper in place of paper towels for cooking.
 - Improper use can cause an explosion or a fire.
- 8 Do not use wooden containers and ceramic containers that have metallic (e.g. gold or silver) inlays. Always remove metal twist ties. Check that the utensils are suitable for use in microwave ovens before use.
 - They may heat-up and char. Metal objects in particular may arc in the oven, which can cause serious damage.
- 9 Do not use recycled paper products.
 - They may contain impurities which may cause sparks and/or fires when used in cooking.
- 10 **Do not rinse the glass tray by placing it in water just after cooking. This may cause breakage or damage.**
 - Improper use could result in damage to your oven.
- 11 Be certain to place the oven so the front of the door is 8 cm or more behind the edge of the surface on which it is placed, to avoid accidental tipping of the appliance.
 - Improper use could result in bodily injury and oven damage.
- 12 Before cooking, pierce the skin of potatoes, apples or any such fruit or vegetables.
 - They could burst.

- 13 **Do not cook eggs in their shell. Eggs in their shell and whole hardboiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.**
 - Pressure will build up inside the egg which will burst.
- 14 **Do not attempt deep fat frying in your oven.**
 - This could result in a sudden boil over of the hot liquid.
- 15 **If smoke is observed, switch off or disconnect the oven from the power supply and keep the oven door closed in order to stifle any flames.**
 - It can cause serious damage such as a fire or electric shock.
- 16 **When food is heated or cooked in disposable containers made of plastic, paper or other combustible materials, keep an eye on the oven and check it frequently.**
 - Your food may be poured due to the possibility of container deterioration, which also can cause a fire.
- 17 **The temperature of accessible surfaces maybe high when the appliance is operating. Do not touch the oven door, outer cabinet, rear cabinet, oven cavity during micro mode, grill mode, convection mode, combination mode & auto cook operations (feature are model specific). Before clearing utensils make sure they are not hot.**

For accessories & dishes touch them using hand gloves. Adults should supervise their children during every mode of operation as temperature may be high.

 - As they will become hot, there is the danger of a burn unless wearing thick culinary gloves.
- 18 **The oven should be cleaned regularly and any food deposits should be removed.**
 - Failure to maintain the oven in a clean condition could lead to deterioration of the surface. This could adversely affect the life of the appliance and possibly result in a hazardous situation.
- 19 **If there are heating elements, the appliance becomes hot during use. Care should be taken to avoid touching the heating elements inside the oven.**
 - There is danger of a burn.
- 20 **Follow exact directions given by each manufacturer for their popcorn product. Do not leave the oven unattended while the corn is being popped. If corn fails to pop after the suggested times, discontinue cooking. Never use a brown paper bag for popping corn. Never attempt to pop leftover kernels.**
 - Overcooking could result in the corn catching a fire.
- 21 **Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass.**
 - They can scratch the surface, which may result in the glass shattering.
- 22 **This oven should not be used for commercial catering purposes.**
 - Improper use could result in damage to your oven.
- 23 **The connection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules.**
 - Using improper plug or switch can cause an electric shock or a fire
- 24 **The microwave oven shall be used freestanding. Microwave oven must not be placed inside cabinet.**
- 25 **This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved.**
- 26 **Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 year and above and supervised.**
- 27 **Oven Lamp power rating is 35W/25W.**
- 28 **If the supply cord is damaged, it must be replaced by the manufacturer or LG service technician or similarly qualified person in order to avoid a hazard.**
- 29 **The appliance is not intended to be operate by means of an external timer or separate remote-control system.**
- 30 **The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns.**
- 31  **Caution, hot surface.**

When the symbol is used, it means that the surfaces are liable to get hot during use.

- ✦ Use exclusive 230 V socket with earth.
- ✦ Do not bend power cord forcefully or break.
- ✦ Do not pull out power cord.
- ✦ Do not use several power plug in one socket at the same time.
- ✦ Do not plug in or pull out power cord with wet hand.
- ✦ Do not spray water inside and outside of microwave oven.
- ✦ Plug out power cord during cleaning or maintenance of set.
- ✦ Do not heat up the food more than necessary.
- ✦ Do not use microwave oven other than cooking or sterilization such as cloth drying etc.
- ✦ Do not insert pin or steel wire etc. into inside/out side of case.
- ✦ Please be careful during taking the food since high temp. water or soup may overflow to cause burn.
- ✦ Do not plug in power cord when socket hole is loose or plug is damaged.
- ✦ Do not use oven while some foreign material is attached on the door.
- ✦ Do not place the water container on the set.
- ✦ Do not place heavy things on the set & do not cover the set with cloth while using.
- ✦ Do not install the set in the damp space or water sputtering area.
- ✦ Do not let children hang onto oven door.
- ✦ Do not heat the unpeeled fruit or bottle with lid.
- ✦ Do not hold food or accessories as soon as cooking is over.
- ✦ Plug out oven if it is not used for long duration.
- ✦ Install microwave oven in the well ventilated, flat place.

There is danger of blast if covered bottle, sealed food, egg, and chestnut etc. are cooked inside oven.

Unpacking & Installing

By following the basic steps on these two pages you will be able to quickly check that your oven is operating correctly. Please pay particular attention to the guidelines on where to install your oven. When unpacking your oven make sure you remove all accessories and packing materials. Check to make sure that your oven has not been damaged during shipping.

- 1 Unpack your oven and place it on a flat level surface.

Cooking Accessories



HIGH RACK



LOW RACK





GLASS TRAY



ROTATING RING

Disclaimer : This is only graphical representation of actual product

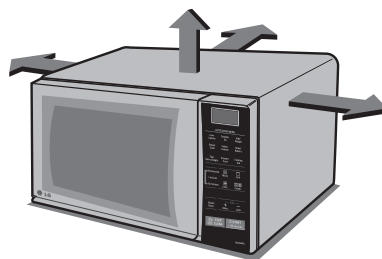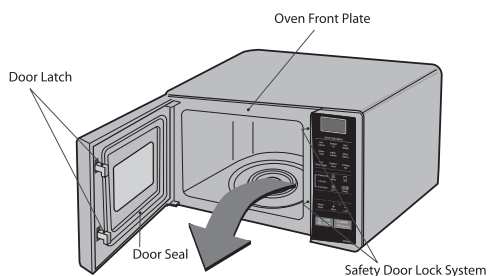

- 2 Place the oven on the level location of your choice with more than 85 cm height but make sure there is at least 20 cm of space on the top and 10 cm at the rear for proper ventilation.
The front of the oven should be at least 8 cm from the edge of the surface to prevent tipping.
An exhaust outlet is located on bottom or side of the oven.
Blocking the outlet can damage the oven.

! NOTE

- THIS OVEN SHOULD NOT BE USED FOR COMMERCIAL CATERING PURPOSES.

BEFORE USE

- 3 Plug your oven into a standard household socket. Make sure your oven is the only appliance connected to the socket.
If your oven does not operate properly, unplug it from the electrical socket and then plug it back in.
- 4 Open your oven door by pulling the door pocket. Place the rotating ring inside the oven and place the glass tray on it.
- 5 Fill a **microwave safe container** with 300 mL of water.
Place on the glass tray and close the oven door.
If you have any doubts about what type of container to use please refer to Page 9.



- 6 Press the **STOP/CLEAR** button, and press the **START/+30 seconds** button one time to set 30 seconds of cooking time.






- 7 The **DISPLAY** will count down from 30 seconds.
When it reaches 0 it will sound BEEPS. Open the oven door and test the temperature of the water.
If your oven is operating the water should be warm.
Be careful when removing the container it may be hot.



YOUR OVEN IS NOW INSTALLED

- 8 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns.
- 9 If oven gets overheated the display will be turned off for safety purpose, give it sometime to cool and then operate.

Method To Use Accessories As Per Mode

	Microwave	Grill	Convection	Grill combi	Conv combi
 High rack	✗	✓	✓	✓	✓
 Low rack	✗	✓	✓	✓	✓
 Glass tray	✓	✓	✓	✓	✓

Caution : Do not operate rack empty (without food) in combi mode.

Caution: Use accessories in accordance with cooking guides!

✓ Acceptable
✗ Not Acceptable

Microwave-Safe Utensils

Metallic containers for food and beverages are not allowed during microwave cooking

Microwaves cannot penetrate metal. They will bounce off any metal object in the oven and cause arcing, an alarming phenomenon that resembles lightning. Most heat resistant non metallic cooking utensils are safe for use in your oven. However, some may contain materials that render them unsuitable as microwave cookware. If you have any doubts about a particular utensil, there's a simple way to find out if it can be used in the microwave. Place the utensil in question next to a glass bowl filled with water in using microwave function. Microwave at power HIGH for 1 minute. If the water heats up but the utensil remains cool to the touch, the utensil is microwave-safe. However, if the water does not change temperature but the utensil becomes warm, microwaves are being absorbed by the utensil and it is not safe for use in using microwave function. You probably have many items on hand in your kitchen right now that can be used as cooking equipment in the microwave. Just read through the following checklist.

Dinner plates

Many kinds of dinnerware are microwave-safe. If in doubt consult the manufacturer's literature or perform the microwave test.

Glassware

Glassware that is heat-resistant is microwave-safe. This would include all brands of oven tempered glass cookware. However, do not use delicate glassware, such as tumblers or wine glasses, as these might shatter as the food warms.

Plastic storage containers

These can be used to hold foods that are to be quickly reheated. However, they should not be used to hold foods that will need considerable time in the oven as hot foods will eventually warp or melt plastic containers.

Paper

Paper plates and containers are convenient and safe to use in using microwave function, provided that the cooking time is short and foods to be cooked are low in fat and moisture. Paper towels are also very useful for wrapping foods and for lining baking trays in which greasy foods such as bacon are cooked. In general, avoid coloured paper products as the colour may run. Some recycled paper products may contain impurities which could cause arcing or fires when used in the microwave.

Plastic cooking bags

Provided they are made specially for cooking, cooking bags are microwave safe. However, be sure to make a slit in the bag so that steam can escape. Never use ordinary plastic bags for cooking in using microwave function, as they will melt and rupture.

Plastic microwave cookware

A variety of shapes and sizes of microwave cookware are available. For the most part, you can probably use items you already have on hand rather than investing in new kitchen equipment.

Pottery, stoneware and ceramic


Containers made of these materials are usually fine for use in using microwave function, but they should be tested to be sure.



CAUTION

- Some items with high lead or iron content are not suitable as cooking utensils.
- Utensils should be checked to ensure that they are suitable for use in the microwave.

Control Panel

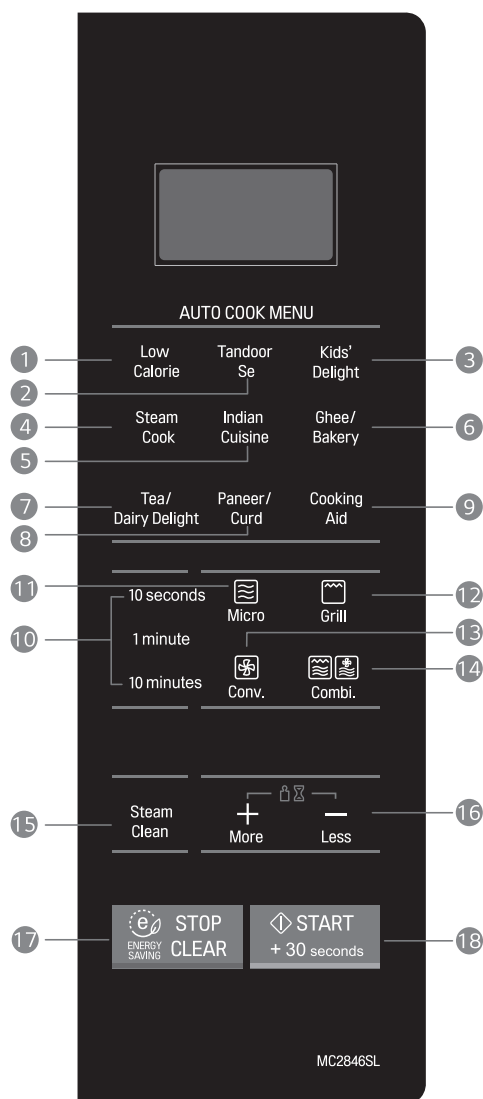

Disclaimer: The control panel printing may differ from actual product.

Part	
1	Low Calorie Cook your favorite recipe using this function.
2	Tandoor Se Cook your favorite recipe using this function.
3	Kids' Delight Cook your favorite recipe using this function.
4	Steam Cook Cook your favorite recipe using this function.
5	Indian Cuisine Cook your favorite recipe using this function.
6	Ghee/ Bakery Cook your favorite recipe using this function.
7	Tea/ Dairy Delight Cook your favorite recipe using this function.
8	Paneer/ Curd Cook your favorite recipe using this function.
9	Cooking Aid Cook your favorite recipe using this function.
10	For Selecting the cooking time
11	Micro Use to select the power level for microwave cooking
12	Grill Use to select Grill cooking
13	Conv. Use to select Convection cooking
14	Combi. Use to select Combination cooking
15	Steam Clean Use this feature to aid in cavity cleaning
16	+More / - Less For decreasing/increasing the cooking time & selecting auto cook weight limit.
17	STOP/CLEAR (ENERGY SAVING) Used to stop oven and clear all entries
18	START/+30 seconds <ul style="list-style-type: none"> In order to start cooking which is selected, press START/+30 seconds button one time. The START/+30 seconds feature allows you to set 30 seconds intervals of HIGH power cooking with a press of the +30 seconds button

Child Lock

In the following example, show you how to set the child lock.

- 1 Press STOP/CLEAR



- 2 Press and hold STOP/CLEAR until "L" appears on the display and BEEP sounds



- 3 To cancel CHILD LOCK press and hold STOP/CLEAR until "L" disappears



NOTE

Your oven has a safety feature that prevents accidental running of the oven. Once the child lock is set, you will be unable to use any functions and no cooking can take place.

+ 30 seconds

In the following example, show you how to set 2 minutes of cooking on 900 W power.

- 1 Press STOP/CLEAR



- 2 Press START/+30 seconds four times to select 2 minutes on 900 W power.

Your oven will start before you have finished the fourth press.



- 3 During START/+30 seconds cooking, you can extend the cooking by repeatedly pressing the START/+30 seconds button.



NOTE

The START/+ 30 seconds feature allows you to set 30 seconds intervals of HIGH power cooking with a touch of the START/+ 30 seconds button.

HOW TO USE

Micro Power Cooking

In the following example, show you how to cook some food on 720W power for 5 minutes 30 seconds


- 1 Press STOP/CLEAR



- 2 Press Micro twice the display shows "720".



- 3 Press **1 minute** five times, press **10 seconds** three times



- 4 Press START/+30 seconds



NOTE

- Your oven has 5 microwave power setting. High power is automatically selected and different power level are selected by pressing Micro button.
- Food to be cooked should be placed in a microwave-safe utensils.
- Please do not use the following accessories in **MICRO MODE**.



High rack



Low rack

Micro Power Level

This oven is equipped with 5 power levels to give you maximum flexibility and control over cooking.

The table below shows some examples of food and their recommended cooking power levels for use with this oven.

POWER LEVEL	OUTPUT	USE	ACCESSORY
HIGH	900 W	<ul style="list-style-type: none"> • Boil water • Brown minced beef • Cook poultry pieces, fish, vegetables • Cook tender cuts meat 	Microwave Safe Plate/ Microwave Safe Bowl/ Microwave Safe Glass Bowl
MEDIUM HIGH	720 W	<ul style="list-style-type: none"> • All reheating • Roast meat and poultry • Cook mushrooms and shellfish • Cook foods containing cheese and eggs 	
MEDIUM	540 W	<ul style="list-style-type: none"> • Bake cakes and scones • Prepare eggs • Cook custard • Prepare rice, soup 	
MEDIUM LOW	360 W	<ul style="list-style-type: none"> • All thawing • Melt butter and chocolate • Cook less tender cuts of meat 	
LOW	180 W	<ul style="list-style-type: none"> • Soften butter & cheese • Soften ice cream • Raise yeast-based dough 	

Grill Cooking

In the following example, show you how to use the Grill to cook some food for 12 minutes.

- 1 Press **STOP/CLEAR**




- 2 Press **Grill** one time.

The following indication is displayed: 



- 3 Press "10 minutes" one time.
Press "1 minute" two time.



- 4 Press **START/+ 30 seconds**



CAUTION

Always use oven gloves when removing the food and accessories after cooking as the oven & accessories will be very hot.

NOTE

- This feature will allow you to brown and crispy food quickly.
- **For the best result use the following accessories.**



High rack

Grill Combi Cooking

In the following example, show you how to program your oven with micro power 360 W and grill for a cooking time of 25 minutes.

- 1 Press **STOP/CLEAR**.




- 2 First press **Combi** & then **Grill** one time each.



- 3 Press **Micro** button until display shows "360"



- 4 Press "**10 minutes**" 2 times, press **1 minute** 5 times.



- 5 Press **START/+ 30 seconds**



NOTE

- Your oven has a combination cooking feature which allows you to cook food with **Heater** and **Microwave**. This generally means it takes less time to cook your food.
- You can set three kinds of micro power level (180 W, 360 W, 540 W) in grill combi mode.
- **This feature will allow you to brown and crispy food quickly.**

Convection Preheat

In the following example, show you how to preheat the oven to a temperature of 190 °C


- 1 Press STOP/CLEAR.



- 2 Press Conv. one time



- 3 Press "+" one time



- 4 Press START/+ 30 seconds.
Preheating will be started with displaying "Pr-H"



NOTE

- The convection oven has a temperature range of 40 °C and 100~230 °C.
- The oven has a ferment function at the oven temperature of 40 °C. You may wait until the oven is cool because you cannot use a ferment function if the oven temperature is over 40 °C.
- Your oven will take a few minutes to reach the selected temperature.
- Once it has reached correct temperature, your oven will BEEP to let you know that it has reached the correct temperature.
- Then place your food in your oven and to start cooking.

Convection Cooking

In the following example, show you how to cook some food at a temperature of 190 °C for 50 minutes. During convection cooking use multi cook tawa and low rack


- 1 Press STOP/CLEAR.




- 2 Press Conv. one time



- 3 Press "+" one times till '190°C is displayed.



- 4 Press "10 minutes" five times.



- 5 Press START/+ 30 seconds.



CAUTION

Always use oven gloves when removing the food and accessories after cooking as the oven & accessories will be very hot.

NOTE

If you do not set a temperature your oven will automatically select 180 °C, the cooking temperature can be changed by + More / - Less button.

For the best result please use the following accessory.



Low rack

Convection Combi Cooking

In the following example, show you how to program your oven with micro power 540 W and at a convection temperature 200 °C for a cooking time of 25 minutes.

- 1 Press **STOP/CLEAR**.




- 2 Press **Combi**. one time.



- 3 Press **Conv.** one time




- 4 Press "+" two times.



- 5 Press Micro three time



- 6 Press "10 minutes" 2 times and Press "1 minute" 5 times



- 7 Press **START/+30 seconds**.



CAUTION

Always use oven gloves when removing the food and accessories after cooking as the oven & accessories will be very hot.



NOTE

You can set three kinds of micro power level (180 W, 360 W and 540 W)

More Or Less Cooking

In the following example, show you how to change the preset COOK programs for a longer or shorter cooking time.

- 1 Press **STOP/CLEAR**



- 2 Set the required preset **COOK** program.
Select weight of food.

Low Calorie	Tandoor Se	Kids' Delight
Steam Cook	Indian Cuisine	Ghee/ Bakery
Tea/ Dairy Delight	Paneer/ Curd	Cooking Aid

- 3 Press **START/+30 seconds**.

Press + More / - Less.

The cooking time will increase or decrease.



NOTE

- If you find that your food is over or undercooked when using the preset COOK program, you can increase or decrease cooking time by pressing + More / - Less button.
- You can lengthen or shorten the cooking time at any point by pressing + More / - Less button. Do not increase or decrease the time during defrost mode. It may affect the performance of defrost mode.

Energy Saving/

The microwave oven allows you to save energy by switching off lamp and display when not cooking in oven.

Door open condition (Lamp & Display on):

Press STOP/CLEAR key one time

Lamp & Display is turned off (Both together)

Press any key on keypad, display shows that key related display & lamp is turned on.

If door remains open for 5 minutes, lamp & display are auto cut off.

Press any key on keypad, display shows that key related display & lamp is turned on.



Door close condition (Lamp off & Display on):

Press STOP/CLEAR key one time

Display is turned off (Lamp remains turned off)

Press any key on keypad, display shows that key related display (lamp remains turned off).

If door remains closed for 5 minutes, display is auto cut off.

(Lamp remains turned off)

Press any key on keypad, display shows that key related display (lamp remains turned off).



To Clean Your Oven

1 Keep the inside of the oven clean

Food spatters or spilled liquids stick to oven walls and between the seal and door surfaces. It is best to wipe up spillovers with a damp cloth right away. Crumbs and spillovers will absorb microwave energy and lengthen cooking times. Use a damp cloth to wipe out crumbs that fall between the door and the frame. It is important to keep this area clean to assure a tight seal. Remove greasy spatters with a soapy cloth then rinse and dry.

Do not use harsh detergent or abrasive cleaners.

The multi cook tawa (model specific) can be washed by hand or in the dishwasher.

2 Keep the outside of the oven clean

Clean the outside of your oven with soap and water then with clean water and dry with a soft cloth or paper towel. To prevent damage to the operating parts inside the oven, the water should not be allowed to seep into the ventilation openings. To clean control panel, open the door to prevent the oven from accidentally starting, and wipe a damp cloth followed immediately by a dry cloth. Press STOP/CLEAR after cleaning.

3 If steam accumulates inside or around the outside of the oven door, wipe the panels with a soft cloth. This may occur when the oven is operated under high humid conditions and in no way indicates a malfunction of the unit.

4 The door and door seals should be kept clean. Use only warm, soapy water, rinse then dry thoroughly.

DO NOT USE ABRASIVE MATERIALS, SUCH AS CLEANING POWDER OR STEEL AND PLASTIC PADS.

Metal parts will be easier to maintain if wiped frequently with a damp cloth.

5 Do not use steam cleaners.


6 Unplug your oven from the electrical socket when you clean control panel with wet cloth or spray water on control glass to clean. If it is not unplugged, this product can be operated by touching the START/+ 30 seconds button.

Questions & Answers

FAQ	Answer
What's wrong when the oven light will not glow?	There may be several reasons why the oven light will not glow. Either the light bulb has blown or the electric circuit has failed.
Does microwave energy pass through the viewing screen in the door?	No. The holes, or ports, are made to allow light to pass; they do not let microwave energy through.
Why does the BEEP tone sound when a button on the control panel is touched?	The BEEP tone sounds to assure that the setting is being properly entered.
Will the microwave function be damaged if it operates empty?	Yes. Never run it empty.
Why do eggs sometimes pop?	When baking, frying, or poaching eggs, the yolk may pop due to steam build up inside the yolk membrane. To prevent this, simply pierce the yolk before cooking. Never microwave eggs in the shell.
Why is standing time recommended after microwave cooking is over?	After microwave cooking is finished, food keeps on cooking during standing time. This standing time finishes cooking evenly throughout the food. The amount of standing time depends on the density of the food.
Why doesn't my oven always cook as fast as the cooking guide says?	Check your cooking guide again to make sure you've followed directions correctly, and to see what might cause variations in cooking time. Cooking guide times and heat settings are suggestions, chosen to help prevent overcooking, the most common problem in getting used to this oven. Variations in the size, shape, weight and dimensions of the food require longer cooking time. Use your own judgment along with the cooking guide suggestions to test food conditions, just as you would do with a conventional cooker.

Two Recipe for starters

NOTE : The time variation during cooking of recipe depends upon the ingredients, method adopted & type of food menu



1. ROASTED PAPAD

Procedure :

Papad:

1. Place the raw papad at the centre of Glass Tray, as shown in the picture above.
2. Select Micro-100% Power Level and Cook time.
Press START/+ 30 seconds
3. After Papad cooking give standing time of 30-45 seconds.

To Cook Multiple Papads :


*Place Multiple papads over one another, as shown in the picture above.

Crispy Papad :

1. Press START/+ 30 seconds once without papad.
2. Sprinkle little water or oil over the papad.
3. After beep, place the papad at the centre and press START/+ 30 seconds

*Note : The cooking time may vary –

- a. As per the composition of the papad material.
- b. As per the Quantity of papad used.



2. POP CORN : Place the pop corn bag to the glass tray properly as instructed on packing. Use seconds START/+30 seconds set 3~4 minutes or set time as instructed on the packed. Remove the bag after popping sound has stopped. Take care that bag corners do not touch sides while rotating.

Note : Attend popping process carefully. Do not overheat as it may cause fire.



Importer

Country	Trade Name	Importer's Address
UAE	LG Electronics Gulf FZE	GF-Jebel Ali Main Warehouse, Jebel Ali Free Zone, P.O. Box : 61445 Dubai, UAE
	Al Yousuf Electronics	AL YOUSUF ELECTRONICS LLC P.O.BOX NO 25 DUBAI, UAE TEL: +971-4-2957300 FAX: 971-4-2957988
Bahrain	A.J.M. Kooheji Group B.S.C. ©	A.J.M. Kooheji Group B.S.C. © P.O. Box74, Manama kingdom of Bahrain



المستورد

الدولة	الإسم التجاري	عتوان المستورد
الإمارات العربية المتحدة	ال جي الكترونيكس الخليج (م.م.ح)	- مستودع GF جبل علي الرئيسي، منطقة جبل علي الحرة، ص.ب.: 61445 دبي، الإمارات العربية المتحدة
	اليوسف للإلكترونيات	اليوسف للإلكترونيات ذ م م صندوق بريد رقم 25 دبي، الإمارات العربية المتحدة رقم الهاتف: +971-4-2957300 رقم الفاكس: +971-4-2957988
مملكة البحرين	مجموعة عبد الجبار الكوهجي (ش. م. بد.) (م)	مجموعة عبد الجبار الكوهجي ش م ب © صندوق بريد 74، المنامة مملكة البحرين

وصفتا طعام للمبتدئين

ملاحظة: يتوقف اختلاف فترة طهي الوصفة على المكونات والطريقة المعتمدة ونوع قائمة الطعام

1. وجبة باباد مشوي
إجراءات:

باباد:

1. ضع باباد الغير المطبوخ في وسط صينية من الزجاج، كما هو مبين في الصورة أعلاه.
2. اختر وضع مستوى الطاقة ميكرو- ١٠٠٪ وزمن الطهي.
3. اضغط على وضع بدء / + ٣٠ ثانية.
3. بعد الانتهاء من طهي باباد قم بالانتظار من ٣٠-٥٠ ثانية.

من أجل طهي عدة وجبات من باباد:

* ضع عدة وجبات من باباد فوق بعضها البعض، كما هو مبين في الصورة أعلاه.

باباد مقرقش:

1. اضغط على وضع بدء / + ٣٠ ثاني دون وضع باباد في الفرن.
2. رش القليل من الماء أو الزيت فوق باباد.
3. ضع باباد في وسط الصينية واضغط على وضع بدء / + ٣٠ ثانية

* "ملاحظة": قد يختلف وقت الطهي

a. تبعاً للمواد المكونة لوجبة باباد.

b. وفقاً لكمية وجبة باباد المستخدمة.

2. الفوشار: ضع كيس حبات الذرة في علبة زجاجية بشكل صحيح وفقاً للتعليمات المذكورة على كيس التعبئة. استخدام الثواني أثناء الضغط على وضع بدء / + ٣٠ ثانية. حدد فترة ٣-٤ دقائق أو اضبط الوقت وفقاً للتعليمات على العبوة. أزل الكيس بعد الانتهاء من سماع صوت الفرقعة. احرص على ألا يلمس الكيس جانبي الفرن أثناء الحركة.

ملاحظة: يجب توخي الحذر أثناء تواجدك خلال عملية فرقة الفوشار. لا تقم بالإفراط في الحرارة إذ أن ذلك قد يتسبب بحصول الحريق.

من أجل تنظيف الفرن الخاص بك

1 حافظ على داخل الفرن نظيفاً

تقوم رشات الطعام أو السوائل المنسكبة بالالتصاق بجدران الفرن وفيما بين الختم وسطح الباب. ويفضل إجراء التنظيف مباشرة باستخدام قطعة قماش مبللة على الفور. حيث أن الفتات والسوائل المنسكبة تمتص طاقة الميكروويف وتطيل فترة الطهي مرات عديدة. استخدم قطعة قماش مبللة لإزالة الفتات الذي يسقط بين الباب والإطار. ومن الهام الحفاظ على هذه المنطقة نظيفة من أجل ضمان الإغلاق الجيد. قم بإزالة الرشات دهنية بقطعة من القماش المشبعة بالصابون ومن ثم اسكب عليها الماء وقم بتجفيفها. لا تستخدم المنظفات القاسية أو المنظفات الكاشطة. بالإمكان تنظيف عدد الطبخ المتنوع (نموذج محدد) باليد أو في غسالة الصحون.

2 حافظ على خارج الفرن نظيفاً

قم بتنظيف خارج الفرن بالماء المخلوط بالصابون ثم بالماء النظيف ثم جففه بقطعة قماش ناعمة أو بمنشفة ورقية. من أجل منع تلف الأجزاء العاملة داخل الفرن، يجب عدم السماح للماء بالتسرب إلى داخل فتحات التهوية. من أجل تنظيف لوحة التحكم، افتح الباب لمنع الفرن من بدء التشغيل عن طريق الخطأ، وامسح اللوحة باستعمال قطعة قماش مبللة يتليها على الفور المسح بقطعة قماش جافة. اضعف وضع إيقاف / مسح بعد التنظيف.

3 في حال تراكم البخار داخل أو حول السطح الخارجي لباب الفرن، امسح الألواح بقطعة قماش ناعمة. قد يحدث هذا عندما تشغيل الفرن تحت ظروف

عالية الرطوبة وهذا لا يعني بأي حال من الأحوال إلى وجود خلل في الوحدة.

4 يجب أن يبقى الباب واحكام الباب نظيفاً. استخدم الماء المخلوط بالصابون فقط، ثم الماء النظيف وبعد ذلك جففه بالكامل. لا تستخدم المواد الكاشطة، مثل مسحوق التنظيف أو الخرق المصنوعة من البلاستيك أو الحديد. سيكون من الأسهل الحفاظ على الأجزاء المعدنية إذا تم مسحها بانتظام بقطعة من القماش المبلل.

5 لا تستخدم التنظيف بالبخار.

6 افصل الفرن الخاص بك من المقيس الكهربائي عند تنظيف لوحة التحكم باستعمال قطعة قماش مبللة أو رذاذ الماء على زجاج اللوحة للتنظيف. في حال كان المقيس موصولاً، هناك إمكانية لتشغيل المنتج عن طريق لمس وضع

بدء / + ٣٠ ثانية

أسئلة وأجوبة

الجواب	أسئلة شائعة
قد يكون أمر عدم اضاءة المصباح عائدا الى العديد من الأسباب، إما أن تكون لمبة المصباح قد احترقت أو أن هناك فشلاً في الدوائر الكهربائية.	ما هو السبب عندما لا يضيئ ضوء الفرن ؟
الجواب هو لا. وذلك لأن الثقوب أو المنافذ مصنوعة بحيث تقوم بالسماح للضوء بالمرور. غير أنها لا تسمح لطاقة الميكروويف بالمرور من خلالها.	هل تمر طاقة الميكروويف من خلال لوحة عرض الباب؟
نسمع صوت الصغير للتأكد من أن الإعداد يتم إدخاله بشكل صحيح.	لماذا نسمع صوت صغير عند لمس زر على لوحة التحكم؟
نعم. لا تقم بتشغيله فار غا مطلقاً.	هل يحصل للميكروويف أذية في حال عمله فار غا؟
عند الخبز، القلي، أو سلق البيض، قد تحصل فرقة ناجمة عن تجمع البخار داخل غشاء صفار البيض. إذا اردت تجنب ذلك، عليك ببساطة ثقب غشاء صفار البيض قبل الطبخ. يجب عدم وضع البيض في الميكروويف بدون تفتير.	لماذا يفرق البيض في بعض الأحيان؟
بعد الانتهاء من طبخ الأطعمة بالميكروويف يتبقى دوما فترة تستمر فيها عملية الطهي. هذه الفترة يتوقف انتهاء على توزع الطهي بالتساوي في جميع أنحاء الطعام. ويتوقف مقدار هذه الفترة على كثافة المواد الغذائية.	لماذا تتم التوصية بالانتظار لبرهة بعد انتهاء الطهي في الميكروويف ؟
راجع دليل الطبخ الخاص بك مرة أخرى من أجل التأكد من أنك قد اتبعت التعليمات بشكل صحيح، وانظر إلى ما قد يسبب الاختلافات في وقت الطهي. الفترات المذكورة في دليل الطبخ وضبط الحرارة هي أكثر الاقتراحات شيوعاً التي تم اختيارها للمساعدة في التعود على هذا الفرن. الاختلافات في الحجم والشكل والوزن والأبعاد من المواد الغذائية تتطلب وقتاً أطول للطهي. استخدام تقديرك الخاص مع اقتراحات دليل الطبخ لاختبار شروط طهي الطعام، تماماً كما تفعل مع الطنجرة التقليدية.	لماذا لا يقوم الفرن الخاص بي بالطهي دائماً بنفس السرعة المحددة في دليل الطبخ؟

توفير الطاقة

يتيح لك فرن الميكروويف توفير الطاقة بإطفاء المصباح وشاشة العرض عندما لا تقوم بالطهي في الفرن.

وضعية الباب مفتوح (المصباح وشاشة العرض في وضع التشغيل):

اضغط على زر إيقاف / مسح مرة واحدة:
المصباح والعرض (كلاهما مغلق معاً)

اضغط على أي زر في لوحة المفاتيح، وستظهر شاشة العرض أن زر المصباح وشاشة العرض هو في وضع التشغيل.

إذا بقي الباب مفتوحاً لمدة 5 دقائق، فسيغلق المصباح وشاشة العرض تلقائياً.

اضغط على أي زر في لوحة المفاتيح، وستظهر شاشة العرض أن زر المصباح والشاشة هو في وضع التشغيل.



وضعية الباب مغلق (المصباح مطفاً وشاشة العرض في وضع التشغيل):

اضغط على زر إيقاف / مسح مرة واحدة
شاشة العرض مغلقة (يبقي المصباح مطفاً)

اضغط على أي زر في لوحة المفاتيح، ستعرض شاشة العرض الزر الخاص بشاشة العرض (يبقي المصباح مطفاً).

إذا بقي الباب مغلقاً لمدة 5 دقائق، تغلق شاشة العرض تلقائياً.
(يبقي المصباح مطفاً)

اضغط على أي زر في لوحة المفاتيح، ستعرض شاشة العرض الزر الخاص بشاشة العرض (يبقي المصباح مطفاً).



الطهي لفترات أطول أو أقصر

سنوضح لك في المثال التالي كيفية تغيير برامج الطهي المسبقة البرمجة لفترات أطول أو أقصر من وقت الطهي.

1 اضغط على وضع STOP/CLEAR



2 اضبط برنامج الطهي المسبق البرمجة Cook. حدد زن المواد الغذائية.

Low Calorie	Tandoor Se	Kids' Delight
Steam Cook	Indian Cuisine	Ghee/ Bakery
Tea/ Dairy Delight	Paneer/ Curd	Cooking Aid

3 اضغط على وضع START/+30 seconds + More / - Less

سيزداد وقت الطهي أو ينقص حسب رغبتك.



ملحوظة !

- لدى استخدام برنامج الطهي المبرمج مسبقا وفي حال وجدت أن الطعام عالي أو منخفض الاستواء، بإمكانك في هذه الحالة زيادة أو إنقاص وقت الطهي عن طريق الضغط على (+) أكثر / (-) أقل.
- بإمكانك إطالة أو تقصير وقت الطهي في أي وقت عن طريق الضغط على (+) أكثر / (-) أقل.
- لا تتم زيادة أو إنقاص الوقت أثناء وضع اذابة التجلد. حيث أن ذلك قد يؤثر على أداء فترة اذابة التجلد.

الطهي باستخدام دمج استخدام الحمل الحراري مع (Combi)

نوضح لك في الأمثلة التالية كيفية برمجة الفرن الخاص بك مع طاقة (micro) 540 واط وفي درجة حرارة الحمل الحراري البالغة 200°C لمدة طهي ٢٥ دقيقة.

1 اضغط على وضع STOP/CLEAR



2 اضغط على وضع Combi. مرة واحدة.



3 اضغط على وضع Conv. مرة واحدة




4 اضغط على + مرتين.



5 اضغط على وضع Micro ثلاث مرات



6 اضغط على 10 minutes ٢ مرات ثم اضغط على "1 دقيقة" 1 minute ٥ مرات



7 اضغط على وضع START/+30 seconds



تحذير !

يجب استخدام قفازات الفرن على الدوام لدى اخراج الطعام والملحقات بعد الطهي نظرا لكون درجة حرارة الفرن وملحقاته عالية جدا.

ملحوظة !

يمكنك ضبط ثلاثة أنواع من مستويات الطاقة الدنيا (micro) (١٨٠ واط، ٣٦٠ واط و ٥٤٠ واط)

الطهي باستخدام الحمل الحراري

سوف نبين لكم في المثال التالي كيفية طهي بعض الأطعمة في درجة حرارة 190°C لمدة ٥٠ دقيقة.
أثناء الطهي باستخدام الحمل الحراري عليك استعمال عدد الطبخ المتنوعة مع رف منخفض

1 اضغط على وضع STOP/CLEAR.




2 اضغط على وضع Conv. مرة واحدة



3 اضغط على + مرة واحدة الى أن تظهر 190°C.



4 اضغط على 10 minutes خمس مرات.



5 اضغط على وضع START/+30 seconds



تحذير

يجب استخدام قفازات الفرن على الدوام لدى اخراج الطعام والملحقات بعد الطهي نظرا لكون درجة حرارة الفرن وملحقاته عالية جدا.

ملحوظة

في حال عدم ضبط درجة حرارة محددة حينئذ سيختار الفرن الخاص بك درجة الحرارة 108°C تلقائيا، وبالإمكان تغيير درجة حرارة الطهي عبر الضغط على مفتاح (+) للزيادة وعلى مفتاح (-) للنقصان.
الرجاء استخدام الملحق التالي للحصول على أفضل النتائج.



رف منخفض

تسخين الفرن إلى درجة حرارة معينة باستخدام الحمل الحراري

نوضح لك في المثال التالي كيفية تسخين الفرن إلى درجة حرارة ١٩٠ مئوية.

1 اضغط على وضع STOP/CLEAR.



2 اضغط على وضع Conv. مرة واحدة



3 اضغط على الرمز + مرة واحدة



4 اضغط على وضع START/+30 seconds.

سوف يبتدئ تسخين الفرن إلى درجة حرارة معينة لدى ظهور "Pr-H"



ملحوظة

الفرن الذي يعمل بالتسخين الحراري يخضع لدرجات حرارة تتراوح بين 40°C و 100-230°C.
لدى هذا الفرن ميزة التخمير في درجة حرارة 40°C. عليك الانتظار حتى يبرد الفرن نظرا لأنه لا يمكنك استخدام ميزة التخمير إذا كانت درجة حرارة الفرن أعلى من 40°C.

سوف يستغرق الفرن الخاص بضع دقائق للوصول إلى درجة الحرارة المختارة.
بمجرد الوصول إلى درجة الحرارة الصحيحة، سوف يصدر الفرن الخاص بك الصفارة لإعلامك أنه قد وصل إلى درجة الحرارة الصحيحة.
حينئذ عليك وضع الطعام في الفرن الخاص بك والبدء في الطهي.

طهي الشواء كومي (combi)

سيتم التوضيح في المثال لاحقاً، كيفية برمجة الفرن الخاص بك مع طاقة ميكرو (micro) 360 واط وشواء من أجل فترة طهي تبلغ ٢٥ دقيقة.

1 وضع على اضغط STOP/CLEAR




2 اضغط أولاً على وضع Combi ثم على وضع Grill مرة واحدة لكل وضع.



3 اضغط على زر Micro حتى يظهر على الشاشة "٣٦٠"



4 اضغط على 10 minutes مرتين ثم اضغط على 1 minute ٥ مرات



5 اضغط على دورة START/+30 seconds



ملحوظة!

• لدى الفرن ميزة دمج الطبخ والتي تسمح لك بطهي الطعام بالسخان والميكروويف سوياً.

• مما يعني أن طهي الطعام عادة سيستغرق وقتاً أقل

• بإمكانك ضبط ثلاث أنواع من مستوى الطاقة الدنيا (micro) (١٨٠ واط، ٣٦٠ واط، ٥٤٠ واط)

• في وضع دمج الشواء والميكروويف.

• تسمح لك هذه الميزة أن تجعل الأطعمة تتحول بسرعة للون البني وأن تصبح جافة ومقرقشة.

الطبخ بواسطة الشوي

سنبين لك في المثال التالي كيفية استخدام الشواية من أجل طهي بعض الأطعمة لمدة ١٢ دقيقة.


1 وضع على اضغط STOP/CLEAR



2 اضغط على وضع Grill مرة واحدة. سيتم عرض المؤشر التالي:



3 اضغط على 10 minutes مرة واحدة. اضغط على 1 minute مرتين.



4 اضغط على دورة START/+30 seconds



تحذير!

يتوجب دائماً استخدام قفازات الفرن لدى اخراج الأطعمة والملحقات بعد الطهي حيث أن الفرن وملحقاته تصبح عالية الحرارة.

ملحوظة!

• تسمح لك هذه الميزة أن تجعل الأطعمة بالتحول بسرعة للون البني وأن تصبح جافة ومقرقشة.

• عليك استخدام الملحقات التالية للحصول على أفضل النتائج.



رف عال

مستوى الطاقة الدنيا (Micro)

تم تجهيز هذا الفرن مع ٥ مستويات من الطاقة من أجل توفير أقصى قدر من المرونة والتحكم بالطبخ. ويوضح الجدول التالي بعض الأمثلة حول الأغذية ومستويات طاقة الطهي التي تم التوصية باستخدامها مع هذا الفرن.

الملاحظات	الاستخدام	المردود	مستوى الطاقة
الصحون القابلة للاستعمال في الميكروويف\ الأوعية القابلة للاستعمال في الميكروويف\ الأوعية الزجاجية القابلة للاستعمال في الميكروويف	• مياه مغلّبة • لحم مفروم بني • طهي قطع دجاج مطبوخة، سمك، خضروات • طهي قطع من اللحوم الطرية	900 W	مرتفعة
	• إعادة تسخين • شوي اللحوم والدجاج • طهي الفطر والقشريات • طهي الأطعمة المحتوية للأجبان والبيض	720 W	متوسط مرتفع
	• خبز الكعكات والكعكات المسطحة • تحضير البيض • طهي الكاسترد • تحضير الرز، والشورية	540 W	متوسطة
	• اذابة التجليد • اذابة الزبدة والشوكولا • طهي قطع اللحم الأقل طراوة	360 W	متوسط منخفض
	• تليين الزبدة والاجبان • تليين المثلجات • عرك العجين الذي يحتوي على الخميرة	180 W	منخفضة

كيفية الاستخدام

الطبخ باستخدام الطاقة المنخفضة (Micro)

سنوضح في المثال التالي، كيفية طهي بعض الطعام باستخدام طاقة 720 واط لمدة ٥ دقائق و ٣٠ ثانية.


1 اضغط على وضع STOP/CLEAR



2 اضغط مرتين على وضع Micro حيث يظهر على الشاشة "٧٢٠"



3 اضغط 1 minute خمس مرات، اضغط 10 seconds ثلاث مرات



4 اضغط وضع 30 seconds START/+



ملحوظة !

• يوجد ٥ أوضاع طاقة ميكروويف للفرن. يتم تحديد الطاقة العليا تلقائياً ويتم اختيار مستويات طاقة مختلفة عن طريق الضغط على زر (micro).
• الأغذية التي يتم طهيها ينبغي أن تكون في أنية آمنة الاستخدام في الميكروويف.
• يرجى عدم استخدام الملحقات التالية في وضع (micro).



رف منخفض



رف عال

قفل أمان حماية للأطفال

تجدون في المثال التالي توضيح كيفية ضبط قفل أمان الأطفال:

1 اضغط على وضع STOP/CLEAR.



2 اضغط مع الاستمرار بالضغط على وضع STOP/CLEAR الى أن تظهر على الشاشة إشارة "L" مع أصوات الصفير



3 في حال الرغبة بإلغاء قفل أمان حماية للأطفال عليك باستمرار الضغط على STOP/CLEAR الى حين اختفاء إشارة "L"



ملحوظة !

تم إضافة ميزة السلامة والتي تمنع التشغيل العرضي للفرن، إذ بمجرد ضبط قفل أمان حماية للأطفال سوف لن تكون قادراً على استخدام أيا من وظائفه ولا التمكن من إجراء الطهي.

أضف ٣. ثانية

سنقوم في المثال التالي، بالتبيان لك كيفية ضبط ٢ دقيقة من الطبخ على طاقة ٩٠٠ واط.

1 اضغط على وضع STOP/CLEAR.



2 اضغط على START/+ 30 seconds أربع مرات من أجل اختيار ٢ دقيقة باستخدام طاقة ٩٠٠ واط.

سوف تبدأ دورة الفرن قبل الانتهاء من الضغط للمرة الرابعة.



3 خلال الطهي باستخدام دورة START/Add 30 secs ، بإمكانك تمديد فترة الطهي بالضغط المتكرر على مفتاح دورة START/+ 30 seconds




ملحوظة !

توفر لك ميزة دورة بدء / إضافة لفترة ٣٠ ثانية تأمين فترات من الطبخ تحت الطاقة العالية بلمسة على مفتاح دورة بدء / إضافة لفترة ٣٠ ثانية.

لوحة التحكم

الجزء
1 Low Calorie اطبخ وصفتك المفضلة باستخدام هذا الوضع
2 Tandoor Se اطبخ وصفتك المفضلة باستخدام هذا الوضع
3 Kids' Delight اطبخ وصفتك المفضلة باستخدام هذا الوضع
4 Steam Cook اطبخ وصفتك المفضلة باستخدام هذا الوضع
5 Indian Cuisine اطبخ وصفتك المفضلة باستخدام هذا الوضع
6 Ghee/ Bakery اطبخ وصفتك المفضلة باستخدام هذا الوضع
7 Tea/Dairy Delight اطبخ وصفتك المفضلة باستخدام هذا الوضع
8 Paneer/Curd اطبخ وصفتك المفضلة باستخدام هذا الوضع
9 Cooking Aid اطبخ وصفتك المفضلة باستخدام هذا الوضع
10 من أجل اختيار فترة الطهو
11 Micro استخدم من أجل اختيار المستوى اللازم من أجل طهو الميكرو
12 Grill استخدم من أجل اختيار طهو الشوي
13 Conv. استخدم من أجل اختيار طهو النقل الحراري
14 Combi. استخدم من أجل اختيار طهو النمج
15 Steam Clean استخدم هذه الميزة للمساعدة في تنظيف التجويف
16 +More / - Less من أجل زيادة أو الاقلال من زمن الطهي واختيار
17 STOP/CLEAR (ENERGY SAVING) تستخدم لوقف الفرن ومسح جميع الادخالات
18 START/+ 30 seconds • من أجل البدء في الطبخ الذي يتم تحديده، اضغط على وضع بدء + 30 ثانية في الوقت المحدد. • ان وضع بداية / إضافة ميزة 30 ثانية يسمح لك بتعيين فترات من + 30 ثانية بطاقة عالية للطبخ مع الضغط على وضع إضافة 30 ثانية.

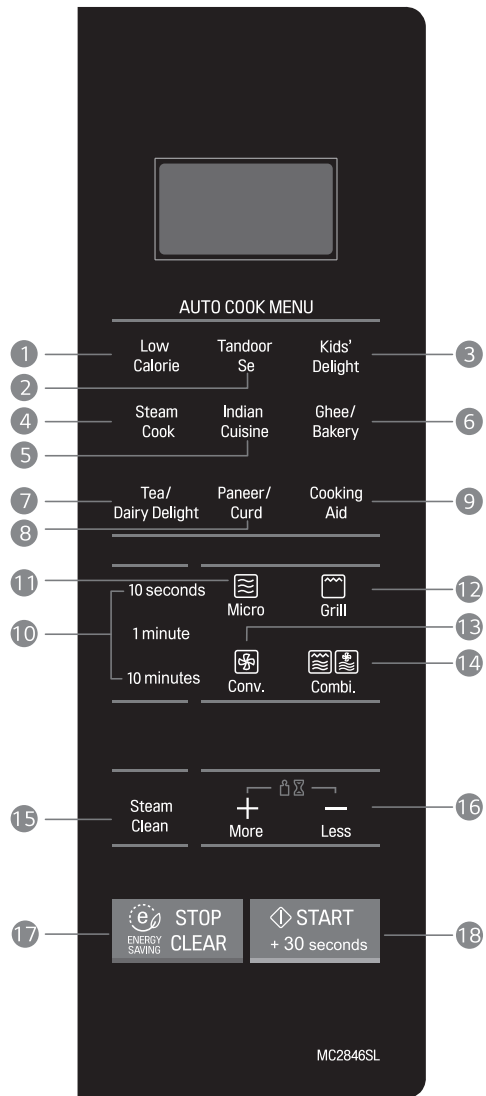

إخلاء مسؤولية: قد تختلف طباعة لوحة التحكم عن المنتج الحقيقي

الأواني الأمانة في الميكروويف

يمنع استعمال الأواني المعدنية الخاصة بالأغذية والمشروبات داخل الميكروويف

لا يمكن لأفران الميكروويف أن تخترق المعادن. وسوف ترتد عن أي جسم معدني في الفرن وتسبب بظاهرة القوس الكهربائي، وهي ظاهرة مثيرة للقلق تشبه البرق. تعتبر معظم أواني الطبخ غير المعدنية المقاومة للحرارة آمنة للاستخدام في الفرن الخاص بك. ومع ذلك، قد تحتوي على بعض المواد التي قد تجعلها غير مناسبة كأواني للطبخ في الميكروويف. إذا كان لديك أي شكوك حول إناء محدد، هناك طريقة بسيطة لمعرفة ما إذا كان يمكن استخدامها في الميكروويف.

ضع الإناء المعني بجانب وعاء زجاجي مملوء بالماء وقم بتشغيل الميكروويف. ضع الميكروويف في الوضع العلوي (HIGH) لمدة ١ دقيقة. في حال ارتفاع درجة حرارة الماء وبقاء الإناء بارد الملمس، يعتبر الإناء آمنة في الميكروويف. ومع ذلك، في حال لم تتغير حرارة الماء ولكن أصبح الإناء دافئاً، فهذا يدل على أن موجات فرن الميكروويف يتم امتصاصها من قبل الإناء ويعني ذلك أنها ليست آمنة للاستخدام في الميكروويف. ربما يكون لديك العديد من المواد القريبة من يدك في المطبخ الخاص بك الآن والتي يمكن استخدامها كمعدات الطهي في الميكروويف. عليك فقط قراءة قائمة المراجعة التالية.

إطباق العشاء

هناك أنواع متعددة من أواني الطعام الأمانة في الميكروويف. إذا كان لديك شك عليك استشارة منشورات الشركة المصنعة أو إجراء اختبار الميكروويف.

الأواني الزجاجية

تعتبر الأواني الزجاجية المقاومة للحرارة آمنة في الميكروويف. ويشمل ذلك جميع العلامات التجارية من أواني المطبخ الزجاجية الخاصة بالفرن. ومع ذلك، لا تستخدم الأواني الزجاجية الحساسة، مثل الكؤوس أو كؤوس النبيذ، لأنها قد تتحطم عندما يسخن الطعام.

حاويات التخزين البلاستيكية

ويمكن استخدام هذه من أجل الأطعمة التي يتوجب تسخينها بسرعة. ومع ذلك، لا ينبغي أن تستخدم لوضع الأطعمة التي تحتاج وقتاً كبيراً في الفرن نظراً لأن الأطعمة الساخنة قد تشوه أو تذيب الحاويات أو الأواني البلاستيكية في نهاية المطاف.

الورق

تعتبر الصفائح والأوعية الورقية مريحة وآمنة للاستخدام في الميكروويف، شريطة أن يكون وقت الطهي قصيراً وأن تكون الأطعمة التي يتم طهيها منخفضة الدهون والرطوبة. وتعتبر المناشف الورقية كذلك مفيدة جداً للف الأطعمة وتبطين صواني المجمونات التي يتم فيها طهي الأطعمة الدهنية مثل لحم الخنزير المقدد. ويجب بشكل عام، تجنب المنتجات الورقية الملونة نظراً لاحتمال سيلان الألوان. وقد تحتوي بعض منتجات الورق المعاد تدويره الشوائب التي قد تسبب حصول القوس الكهربائي أو الحرائق في حال استخدامها في الميكروويف.

أكياس الطبخ المصنوعة من البلاستيك

في حال تصنيع هذه الأكياس خصيصاً للطبخ، عندئذ تكون أكياس الطبخ آمنة الميكروويف. وبالرغم من ذلك، يجب التأكد من وجود فتحة في الكيس بحيث يتمكن البخار من الهروب. لا تستخدم مطلقاً الأكياس البلاستيكية العادية لأغراض الطهي في الميكروويف، إذ أنها ستذوب وتتمزق.

أوعية الطبخ البلاستيكية المصنوعة للاستعمال في الميكروويف

تتوفر أوعية طبخ متنوعة من الأشكال والأحجام للاستعمال في الطبخ في الميكروويف. بالنسبة للجزء الأكبر، وربما يمكنك استخدام الأواني المتوفرة لديك مسبقاً بدلاً من الاستثمار في أوعية طبخ جديدة.

الأوعية الفخارية، والأواني الحجرية والسيراميك

إن الأوعية المصنوعة من هذه المواد عادة ما تكون مناسبة للاستخدام في الميكروويف، ولكن يتوجب فحصها للتأكد.

تنبيه !

- قد تحتوي بعض الأواني على نسبة عالية من الرصاص أو محتوى الحديد وفي هذه الحال تكون غير مناسبة للاستعمال كأواني الطبخ.
- يجب أن يتم التحقق من الأواني من أجل التأكد من أنها مناسبة للاستخدام في الميكروويف.

طريقة استخدام الملحقات حسب كل وضع

دمج الحمل الحراري (combi)	دمج الشواء (combi)	الحمل الحراري	شواء	الميكروويف	
✓	✓	✓	✓	✗	رف عال 
✓	✓	✓	✓	✗	رف منخفض 
✓	✓	✓	✓	✓	صينية زجاجية 

تنبيه: لا تقم بتشغيل الرف فارغا (بدون طعام) في وضع الدمج (combi).
تنبيه: استخدم الملحقات وفقا لإرشادات الطهي!

✓ مقبول
✗ غير مقبول

- 3 قم بتوصيل قابس الفرن الخاص بك إلى المقبس القياسي للمنزل. تأكد من الفرن الخاص بك هو الجهاز الوحيد المتصل بهذا المقبس. إذا لم يعمل الفرن الخاص بك بشكل صحيح، افصله عن المقبس الكهربائي ومن ثم قم بتوصيله مرة أخرى.
- 4 افتح باب الفرن عن طريق سحب جيب الباب. وضع حلقة الدوران داخل الفرن ثم ضع الصينية الزجاجية فوقه



- 5 املأ الوعاء الخاص بالاستعمال في الميكروويف بكمية ٣٠٠ مل من الماء. ضعه فوق الصينية الزجاجية ثم أغلق باب الفرن. في حال كانت لديك أية شكوك حول نوع الحاويات الواجب استخدامها يرجى مراجعة الصفحة ٩.



- 6 اضغط على وضع إيقاف / مسح، ثم اضغط على وضع إيقاف / إضافة ٣٠ مرة واحدة من أجل تحديد ٣٠ ثانية من وقت الطهي.



- 7 سوف تعرض الشاشة العد التنازلي من ٣٠ ثانية. عندما يصل إلى ٠ سوف يبدئ بالصفير. افتح باب الفرن واختبر درجة حرارة الماء. في حال عمل الفرن الخاص بك جب أن يكون الماء دافئاً. كن حذراً عند إزالة الحاوية إذ قد تكون ساخنة.

الآن تم تثبيت الفرن الخاص بك

- 8 يجب تحريك محتويات زجاجات الرضاعة وأوعية أغذية الأطفال أو هزها وفحص درجة الحرارة قبل الاستهلاك لتجنب الحروق.
- 9 في حال الافراط بتسخين الفرن ستقوم شاشة العرض بالتوقف بناء على إجراءات الأمان، لذا انتظر بعض الوقت لتبرد ثم اعدّها للعمل.

تفريغ وتركيب

باتباع الخطوات الأساسية في هاتين الصفحتين سوف تكون قادرا على التحقق بسرعة أن الفرن الخاص بك يعمل بشكل صحيح. يرجى إيلاء اهتمام خاص للمبادئ الإرشادية الخاصة بمكان تثبيت الفرن الخاص بك. عند تفريغ الفرن الخاص بك تأكد من إزالة جميع الملحقات ومواد التعبئة والتغليف. تحقق للتأكد من أن الفرن الخاص بك لم يتضرر أثناء الشحن.

1. فرغ الفرن الخاص بك وضعه على سطح مستو.

ملحقات الطبخ



رف عال



رف منخفض




سينية من الزجاج



حلقة الدوران

إخلاء مسؤولية: يعتبر هذا مجرد رسم تخطيطي للمنتج الفعلي

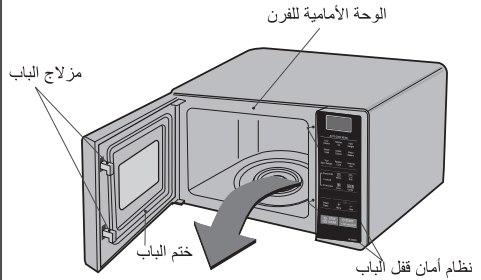

2. ضع الفرن في مكان مستوى من اختيارك على ارتفاع أكثر من 85 سم الارتفاع وتأكد من وجود ٢٠ سم على الأقل من الفراغ العلوي و 10 سم في الجزء الخلفي من أجل الحصول على التهوية المناسبة. وينبغي أن يكون واجهة الفرن تبعد ما لا يقل عن 8 سم من حافة السطح لمنع السقوط. يقع منفذ العادم إلى أسفل أو جانب الفرن. في حال انسداد منفذ العادم هذا سيسبب ذلك الضرر للفرن.

ملحوظة !

• ينبغي عدم استخدام هذا الفرن لأغراض خدمات المطاعم التجارية.

- ✦ استخدم حصريا المقيس ٢٣٠ فولط مع تأريض.
 - ✦ لا تقم بثني كابل التغذية الكهربائية بقوة أو بكسره.
 - ✦ لا تسحب كابل التغذية الكهربائية.
 - ✦ لا تستخدم العديد من قوابس الكهرباء في مقيس واحد في نفس الوقت.
 - ✦ لا تعتمد الى وصل القابس بالمقيس ويدك رطبة.
 - ✦ لا ترش الماء داخل وخارج فرن المايكرويف.
 - ✦ خلال تنظيف أو صيانة الجهاز، أمدد دوما الى قطع التوصيل الكهربائي.
 - ✦ لا تقم مطلقا بتسخين الطعام أكثر من اللازم.
 - ✦ لا تستخدم فرن المايكرويف فيما عدا الطهي والتعقيم في أمور مثل تجفيف القماش الخ
 - ✦ لا تدخل دبوس أو السلك الفولاذي وغير ذلك إلى داخل / خارج جسم الفرن.
 - ✦ يرجى توخي الحذر أثناء تناول الطعام نظرا لارتفاع درجة الحرارة. فقد يحصل الغليان للماء أو الحساء مما قد يسبب الحروق.
 - ✦ لا تعتمد الى وصل الكابل الكهربائي في حال كون المقيس رخوا أو أوفي حال تضرر القابس.
 - ✦ لا تستخدم الفرن في حال التصاق بعض المواد الغريبة على الباب.
 - ✦ لا تضع حاوية الماء داخل الفرن.
 - ✦ لا تضع الأشياء الثقيلة على الفرن ولا تغطيه بالقماش أثناء الاستخدام.
 - ✦ لا تقم بوضع الفرن في مكان رطب أو في مكان قابل للرش بالمياه.
 - ✦ لا تدع الأطفال يتمسكون بباب الفرن.
 - ✦ لا تسخن الفاكهة غير المقشرة أو زجاجة مع غطاء.
 - ✦ لا تمسك الطعام أو الملحقات فور الانتهاء من الطهي.
 - ✦ في حال عدم استخدام الفرن لمدة طويلة عليك بفصل الكابل التغذية الكهربائية.
 - ✦ ينبغي وضع فرن المايكرويف في مكان مسطح وجيد التهوية.
- هناك احتمال حصول خطر في حال تم وضع زجاجة مغطاة أو الطعام المختوم، أو البيض، أو الكستناء الخ داخل الفرن.

- 13 لا تعتمد الى طهي الأطعمة التالية: البيض غير المقشور. ينبغي عدم تسخين البيض غير المقشور والبيض الكامل المسلووق في أفران الميكروويف نظرا لاحتمال انفجارها، حتى بعد الانتهاء من عملية التسخين في الميكروويف.
 - سوف يتراكم الضغط داخل البيضة بحيث يسبب انفجارها.
- 14 لا تعتمد الى قلي الدهون بالغمر في الفرن الخاص بك.
 - قد يؤدي ذلك إلى حصول الغليان المفاجئ للسائل الحار.
- 15 إذا لاحظت تواجد الدخان، قم بإيقاف الفرن أو اقطع الامداد بالطاقة وابقى باب الفرن مغلقا من أجل خنق اللهب.
 - قد يؤدي ذلك إلى التسبب بأضرار خطيرة مثل حصول الحريق أو الصدمة الكهربائية.
- 16 عند تسخين أو طهي الأطعمة في الحاويات الخاصة بالاستعمال لمرة واحدة فقط والمصنوعة من البلاستيك، أو للاشتعال، عليك مراقبة الفرن والتحقق منه تكرارا.
 - هناك احتمال لتسرب الطعام الخاص بك نظرا لتضرر الحاويات، والذي قد يتسبب إضافة ذلك بحصول الحريق.
- 17 درجة حرارة الأسطح الممكن الوصول إليها قد تكون مرتفعة أثناء عمل الجهاز. لا تلمس باب الفرن، ولا خزانة الفرن الخارجية، ولا الجزء الخلفي من الخزانة، ولا تجويف الفرن أثناء وضع تشغيل الميكروويف، أو وضع الشواء، أو وضع الحمل الحراري، أو أثناء وضع الدمج ووضع الطهي الألي (هذه الميزة متوفرة في نموذج محدد). تأكد قبل تنظيف الأواني من أنها ليست حارة.
 - لا تلمس الملحقات والأطباق الا بعد استخدام قفازات اليد. يجب إشراف البالغين على أطفالهم خلال كل وضع عمل نظرا لاحتمال كون درجات الحرارة مرتفعة.
 - نظرا للحرارة المرتفعة، هناك خطر حصول الحروق في حال عدم ارتداء قفازات الطهي السميكة.
- 18 يجب تنظيف الفرن بانتظام والتأكد من إزالة بقايا الطعام.
 - يمكن في حال عدم المحافظة على الفرن في حالة نظيفة أن يتسبب ذلك في تلف السطح.
 - قد يؤثر ذلك سلبا على عمر الجهاز وربما يسبب حالة من الخطر.
- 19 قد ترتفع درجة حرارة الجهاز أثناء الاستخدام، في حال وجود عناصر تسخين. يجب توخي الحذر من أجل تجنب لمس عناصر التسخين داخل الفرن.
 - هناك خطر حصول حروق.
- 20 اتبع التعليمات الحرفية المقدمة من كل مصنع لمنتجات الفوشار الخاصة بهم. لا تترك الفرن دون مراقبة أثناء فرقة الفوشار. في حال عدم فرقة الفوشار ضمن الوقت المقترح، توقف عن التشغيل. لا تستخدم مطلقا كيس الورق بني اللون لفرقة الفوشار. لا تعتمد مطلقا الى محاولة فرقة الحبات المتبقية.
 - يمكن أن يؤدي الإفراط في الطهي الى التقاط النار.
 - لا تستخدم المنظفات قاسية الكشط أو الكاشطات المعدنية الحادة لتنظيف زجاج باب الفرن.
 - قد تحصل خدوش للسطح، مما قد يؤدي إلى تحطم الزجاج.
 - لا ينبغي أن يستخدم هذا الفرن لأغراض المطاعم التجارية.
 - قد يؤدي الاستخدام غير السليم إلى الاضرار بالفرن الخاص بك.
- 23 يمكن تحقيق الوصل الكهربائي عن طريق وصل القابس أو من خلال احدث مفتاح كهربائي في الأسلاك الثابتة وفقا لقواعد التسليك.
 - ان استخدام القابس أو المفتاح غير المناسب يمكن أن يسبب صدمة كهربائية أو حريق
- 24 يستخدم فرن الميكروويف بشكل مستقل. يجب عدم وضع فرن الميكروويف داخل خزانة.
 - يمكن استخدام هذا الجهاز من قبل الأطفال الذين تتراوح أعمارهم بين ٨ سنوات فما فوق والأشخاص ذوي الاحتياجات الخاصة أو القدرات الحسية العقلية أو الأشخاص الذين تنقصهم الخبرة والمعرفة إذا كان ذلك تحت الإشراف أو تم اصدار التعليمات لهم بخصوص استخدام الجهاز بطريقة آمنة بحيث يفهموا الأخطار المحدقة.
- 26 يجب الإشراف على الأطفال من أجل التأكد من عدم لهوهم بالجهاز. يجب عدم تنظيف وصيانة الجهاز من قبل الأطفال مالم تكن أعمارهم ٨ سنوات وأكثر تحت الإشراف.
 - كمية الطاقة اللازمة لمصباح الفرن هي ٣٥ واط/ ٢٥ واط
- 27 في حالة تلف كابل التغذية الكهربائية، يجب أن يتم تبديله من قبل الشركة المصنعة أو من قبل فني خدمة LG أو شخص ذو مؤهلات مماثلة من أجل تجنب المخاطر.
 - لم يتم تصميم هذا الجهاز لكي يعمل بجهاز توقيت خارجي أو نظام تحكم عن بعد منفصل.
- 29 يجب تحريك أرج محتويات عوالت الرضاعة وجرات أغذية الأطفال والتحقق من درجة الحرارة قبل الاستهلاك لتجنب الحروق.
 - احذري، سطح ساخن.
- 31 عند استخدام هذا الرمز، فهذا يعني أن الأسطح عرضة لأن تصبح ساخنة أثناء الاستخدام.
 

- 7 تأكد من استخدام الملحقات المناسبة في كل وضع تشغيل، ارجع إلى الدليل الصفحة ٩.
- الاستخدام غير السليم قد يؤدي إلى الأضرار بالفرن الخاص بك وبالملحقات، أوقد يتسبب بإطلاق شرارة أو أحداث لهب.
- 8 يجب عدم السماح للأطفال باللعب بالملحقات أو التدلي نحو الأسفل وهم ممسكين مقبض الباب.
- قد يتسبب بالأذى.
- 9 ان القيام بإجراء أي أعمال خدمة أو إصلاح العملية قد تنطوي على إزالة غطاء الحماية ضد التعرض لموجات الميكروويف سوف يتسبب بالخطر لأي شخص غير الشخص المؤهل.

⚠ تنبيه

- 1 من غير الإمكان أن يعمل الفرن الخاص بك والباب مفتوح بسبب آلية تعشيق الأمان الداخل في آلية الباب. من الضروري عدم العبث بتعشيق الأمان هذا.
- قد يؤدي عدم مراعاة ذلك إلى التعرض للضار المفرط لموجات الميكروويف. (تقوم آلية تعشيق الأمان بالتبديل تلقائياً لإيقاف الطهي لدى فتح الباب).
- 2 لا تضع أي مواد (مثل مناشف المطبخ، والمناديل، الخ) فيما بين الوجه الأمامي للفرن والباب وكذلك لا تسمح بتراكم الطعام أو بقايا التنظيف على أسطح الختم.
- يمكن أن يؤدي عدم مراعاة ذلك إلى التعرض للضار إلى طاقة الميكروويف المفرطة.
- 3 عليك التأكد من تعيين الأوقات أثناء طهي الأطعمة بالشكل الصحيح، علماً أن كميات الطعام الصغيرة تتطلب وقتاً أقصر للطهي أو التسخين.
- قد يؤدي طهي الطعام لوقت أطول من اللازم باشتعال النيران وبأضرار لاحقة للفرن الخاص بك.
- 4 عند تسخين السوائل، على سبيل المثال الحساء والصلصات والمشروبات في فرن الميكروويف الخاص بك، * تجنب استخدام الحاويات ذات الجوانب المستقيمة والرقاب الضيقة.
- * لا تفرط بفترات الطهي.
- * قم بتحريك السوائل قبل وضع الحاوية في الفرن، وكذلك الأمر في منتصف فترة التسخين.
- * اترك الطعام في الفرن لفترة قصيرة، بعد التسخين، وقم بتحريكه أو خضه مرة أخرى بعناية ثم التحقق من درجة حرارته قبل البدء باستهلاكه من أجل تفادي التعرض للحروق (خصوصاً، محتويات زجاجات الرضاعة وأوعية أغذية الأطفال).
- كن حذراً لدى التعامل مع الحاوية. ان تسخين المشروبات في الميكروويف يمكن أن يؤدي إلى غليان بركاني متاخر بدون ظهور ذلك على السطح. وهذا قد يؤدي إلى غليان السوائل الساخنة المفاجئ.
- 5 يقع مخرج العادم في أعلى أو أسفل أو إلى جانب الفرن. عليك ألا تعتمد على سد المنفذ.
- يمكن أن يؤدي ذلك إلى التسبب بالضرر بالفرن الخاص بك وإلى نتائج سيئة في الطهي.
- 6 لا تقم بتشغيل الفرن حين يكون فارغاً. ومن الأفضل أن تترك كوباً من الماء داخل الفرن عندما لا يكون قيد الاستعمال.
- يقوم الماء بالامتصاص الأمان لكامل موجات الميكروويف، في حال تشغيل الفرن بطريقة الخطأ.
- الاستخدام غير السليم قد يؤدي إلى الأضرار بالفرن الخاص بك.
- 7 لا تقم بطهي الطعام وهو ملفوف في المحارم الورقية، ما لم يتضمن لديك تعليمات لكيفية طهي الطعام. وعليك عدم استخدام الصحف في مكان المحارم الورقية لأغراض الطهي.
- الاستخدام غير السليم قد يتسبب في حصول الانفجار أو الحريق.
- 8 لا تستخدم حاويات خشبية وأواني من السيراميك المطعمة بالمعادن (مثل الذهب أو الفضة). تأكد من إزالة شرائط الرباط المعدنية. تأكد من أن الأواني مناسبة للاستخدام في أفران الميكروويف قبل البدء باستعمالها.
- قد يتسبب تسخين هذه الشرائط باحترقها. قد تتسبب القطع المعدنية داخل الفرن بحصول قوس كهربائي، مما قد يسبب أضراراً خطيرة.
- 9 لا تستخدم المنتجات الورقية المعاد تدويرها.
- قد تحتوي هذه المنتجات على شوائب مما قد يتسبب بحصول الشرر و / أو الحريق عند استخدامها في الطهي.
- 10 لا تعتمد على شطف الصينية الزجاجية بوضعها في الماء مباشرة بعد الطبخ. قد يتسبب ذلك في حصول الكسر أو الضرر.
- الاستخدام غير السليم قد يؤدي إلى أضرار تلحق بالفرن الخاص بك.
- 11 تأكد من توضع الفرن بحيث يكون الباب على مسافة ٨ سم أو أكثر خلف حافة السطح التي يتم وضعها فوقه، من أجل تجنب السقوط المفاجئ للجهاز.
- الاستخدام غير السليم قد يؤدي إلى الإصابة بالأذى وبالأضرار بالفرن.
- 12 اعمد إلى ثقب قشر البطاطا والتفاح أو أي نوع من الفواكه أو الخضار المماثلة، قبل الطهو.
- احتمال حصول انفجار.

تعليمات هامة للسلامة عليك قراءتها بعناية وابقائها لتكون مرجعا في المستقبل

قراءة واتباع جميع التعليمات قبل استخدام الفرن من أجل تجنب خطر الحريق، الصدمة الكهربائية أو الإصابة الشخصية أو الضرر لدى استخدام الفرن. هذا الدليل لا يغطي جميع الظروف المحتملة التي قد تحصل. عليك الاتصال بفني الخدمة الخاصة بك لدى شركة LG أو الشركة المصنعة حول المشاكل التي لا يتم فهمها.

⚠ تحذير

هذا هو رمز التنبيه للسلامة. هذا الرمز ينبهك إلى المخاطر المحتملة التي يمكن أن تقتلك أو تؤذيك وتؤدي غيرك. إن كافة رسائل السلامة يتبعها رمز التنبيه للسلامة وإما كلمة "تحذير" أو "تنبيه". وهذه الكلمات تعني التالي:

⚠ تحذير

هذا الرمز ينبهك إلى المخاطر أو الممارسات غير الآمنة التي قد تتسبب بالضرر الخطير للجسم أو بالوفاة.

⚠ تنبيه

وهذا الرمز ينبهك إلى المخاطر أو الممارسات غير الآمنة التي يمكن أن تتسبب في إصابة الأذى بالجسم أو إلى الأضرار بالممتلكات.

⚠ تحذير

1 لا تحاول العبث، أو القيام بإجراء أي تعديلات أو إصلاحات على الباب، أو على أختام الباب، أو على لوحة التحكم، أو على مفاتيح تشغيل الأمان أو على أي جزء آخر من الفرن والذي قد ينطوي على إزالة أي غطاء حماية ضد التعرض لموجات الميكروويف. لا تقم بتشغيل الفرن في حال كانت أختام الباب أو الأجزاء المجاورة من الميكروويف غير صالحة. لا ينبغي إجراء الإصلاحات إلا بواسطة فني خدمة مؤهل من شركة LG.

- إن المايكروويف هو جهاز يعمل تحت الجهد العالي والمعدات الكهربائية المستخدمة للتيار العالي، وبالتالي فلاستخدام أو الإصلاح غير السليم يمكن أن يؤدي إلى التعرض للضرر إلى موجات الميكروويف المفرطة أو يتسبب بحصول صدمة كهربائية.

2 لا تستخدم الفرن لغرض التجميد. (مثلا تشغيل الميكروويف مع الصحف الرطبة، أو الملابس أو لعب الأطفال أو الأجهزة الكهربائية، أو الحيوانات الأليفة أو طفل الخ)

- قد يكون ذلك سببا في إلحاق أضرار جسيمة بالأمان مثل النار، أو الحريق أو الموت المفاجئ الناجم عن صدمة كهربائية.

⚠ تحذير

3 يجب عدم السماح للأطفال الصغار أو كبار السن باستخدام هذه الأجهزة. بالإمكان فقط السماح لكبار السن والأطفال (٨ سنوات وما فوق) باستخدام الفرن دون إشراف بعد اعطائهم التعليمات الوافية بحيث يكون الطفل قادرا على استخدام الفرن بطريقة آمنة وبحيث يدرك مخاطر الاستخدام غير السليم.

- الاستخدام غير السليم قد يسبب الأذى مثل التسبب بالحرق، أو الصدمة الكهربائية أو الحروق.

4 أجزاء الجهاز الممكن الوصول إليها قد تصبح ساخنة أثناء الاستخدام. لذا يجب إبقائها بعيدة عن متناول الأطفال الصغار.

- في حال عدم مراعاة ذلك يمكن التسبب بالحروق.

⚠ تحذير

5 يجب عدم تسخين السوائل أو غيرها من الأطعمة ضمن حاويات مغلقة لأنها تصبح عرضة للانفجار. أزل لفافات البلاستيك عن المواد الغذائية قبل الطهي أو إذابة التجلد. الرجاء ملاحظة أنه في بعض الحالات يتوجب تغطية الطعام بفيلم من البلاستيك، من أجل التسخين أو الطهي.

- احتمالات الانفجار.

⚠ تحذير

6 يجلب عدم تشغيل الفرن الخاص بك إذا كان متضررا. من الضروري للغاية التثبت من أن باب الفرن يغلق بشكل صحيح وأن القطع التالية غير متضررة: (١) الباب (ملوي)، (٢) المفصلات والمزالج (مكسورة أو رخوة)، (٣) التثبيت من غلق الباب بإحكام ومن سطوح الختم.

- بالإمكان التعرض المفرط للضرر إلى موجات الميكروويف.

وظائف عمل الميكروويف

محتويات

أفران ميكروويف تستخدم شكلا من أشكال الطاقة مماثلة إلى موجات الراديو والتلفزيون، وضوء النهار العادي. وتنتشر عادة موجات الميكروويف إلى الخارج أثناء انتقالها عبر الغلاف الجوي وتخفي دون بقاء أثر.	3	تعليمات أمان هامة
غير أن هذا الفرن، لديه مغنطرون (أنبوب رفيع المستوى الفراغ الذي يولد الموجات الدقيقة باستخدام تفاعل تيار من الالكترونات مع المجال المغناطيسي) تم تصميمه من أجل الاستفادة من الطاقة في أفران الميكروويف. وتستخدم الكهرباء التي يتم توليدها إلى أنبوب المغنطرون، من أجل توليد طاقة الميكروويف.	6	احتياطات السلامة
تدخل الموجات الميكروويف الى مجال الطبخ من خلال فتحات داخل الفرن. حيث توجد صينية داخل الفرن. ولا يمكن لموجات الميكروويف المرور من خلال الجدران المعدنية من الفرن، الا أن بإمكانها اختراق مواد مثل الزجاج والخزف والورق وهي المواد التي يتم تصنيع أطباق طبخ الميكروويف الأمن منها.	7	قبل الاستعمال
وموجات الميكروويف لا تقوم بتسخين قدور الطبخ، الا أن قدور الطبخ تنتقل اليها الحرارة الساخنة من الحرارة المتولدة من المواد الغذائية في نهاية المطاف.	7	التفريغ والتركيب
	9	طريقة لاستخدام الملحقات حسب الوضع
	10	أواني الميكروويف الأمانة
	11	لوحة التحكم
	12	قفل أمان الطفل
	12	30+ ثانية
	12	قبل الاستعمال / كيفية الاستخدام
	12	الطبخ باستعمال طاقة الميكروويف
	13	مستوى طاقة الميكروويف
	14	الطبخ بالشواء
	14	الطبخ مع دمج الشواء (Combi)
	15	التسخين المسبق باستخدام الحمل الحراري
	15	الطبخ باستخدام الحمل الحراري
	16	الطبخ باستخدام الدمج مع الحمل الحراري
	16	الطبخ أكثر أو أقل
	17	توفير الطاقة
	18	كيفية تنظيف الفرن الخاص بك
	18	أسئلة و أجوبة
	19	وصفات عدد اثنان
	19	وصفات عدد اثنان للمبتدئين

يعتبر الجهاز عالي الأمان

يعتبر فرن الميكروويف الخاص بك، من أكثر الأجهزة المنزلية أمانا. فعندما يتم فتح الباب، يتوقف فرن الميكروويف تلقائيا عن بث الموجات. ويتم تحويل طاقة الميكروويف بالكامل إلى حرارة عند ادخال الطعام، دون ترك أي "مخلفات" من الطاقة قد تؤدي إلى التسبب بالأذى عند تناول الطعام الخاصة بك.

دليل المالك إل جي فرن الميكروويف

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الفرن والاحتفاظ بها من أجل الرجوع إليها في المستقبل.

MC2846SL

يستطيع العميل الإطلاع أو تنزيل دليل المستخدم من خلال الرابط "https://www.lg.com/in/support/manuals"



www.lg.com

حقوق النشر ٢٠١٧-٢٠٢٠ إل جي للإلكترونيات. كل الحقوق محفوظة



MFL63289536

Rev.03_05082020