

LG(66) 설계 042A3 (95.02.01) REV_1

작업표 (RPA)

항목	Spec.
작업	83
재질	모조지
평량	80
사이즈	A5
표지 여부	유
페이지 수	136
인쇄 도수	1도

수정처: MD4파트/세인텍 (GMDS 매뉴얼)
양산처: 국제인쇄 ㉠ 서브원(국제인쇄)

<FRONT><BACK>

210

150150

작업 주기

1. 재질 : 작업표에 준함.

2. 인쇄방법 : 작업표에 준함.

3. 인쇄 내용, 문자의 크기, 선의 굵기 및 형상 등은 주어진 도면에 준한다.

4. 외곽 치수는 절단 후 치수임.

5. 양산 전 설계 한도를 득한 것.

6. LG전자 제품 유해물질 관리기준(LG(10)-A-9023) 및 협력사 유해물질 가이드 기준 Level A-I 및 A-II 유해물질 사용은 금지함

WORK SPECIFIC ATIONS

1. Material should be refer to work table.

2. Printing method should be refer to work table.

3. Printing contents, the size of text and font follow the LG Drawing.

4. There is the external dimension after cutting size.

5. Before product controlled by criteria sample.

6. This part should comply with the criteria of Level A-I, A-II restricted hazardous substances which refers to LGE standard LG(10)-A-9023 and the hazardous substance management manual for the suppliers.

PDFILLUSTRATOR

DR COMPLETED
도면 DR 완료
완료일 :

TRIG.	UNIT	mm	SCALE	DESIGNED	REVIEWED	CHECKED	APPROVED	T I T L E	DWG. No.
이 다 정 21.09.01	상 민 규 21.09.01			이 갑 선 21.09.01					
LG 전자 (주) LG Electronics Inc.		RELATED DWG.							

Manual, Owners

WashTower_SAUDI

1/1

MFL71728983



Scan the QR code to see the manual.



OWNER'S MANUAL

WASHTOWER



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH

WK2116BST / WK2116WHT / WK2116BST1 / WK2116WHT1



MFL71728983
Rev.10_091024

www.lg.com

Copyright © 2021-2024 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.....	4
WARNING	4

INSTALLATION

Parts and Specifications	10
Installation Place Requirements	14
Unpacking the Appliance	16
Connecting the Water Supply Hose	17
Installing the Drain Hose	19
Levelling the Appliance	21
Disassembly	23

OPERATION-WASHER

Operation Overview.....	25
Preparing the Wash Load	26
Adding Detergents and Softeners	27
Control Panel and Programme Table	29
Extra Options and Functions	34

OPERATION-DRYER


Operation Overview.....	37
Preparing the Laundry	38
Control Panel and Programme Table	40
Extra Options and Functions	45

SMART FUNCTIONS

Using LG ThinQ Application.....	48
Smart Diagnosis	52

MAINTENANCE

Washer	53
Dryer	56

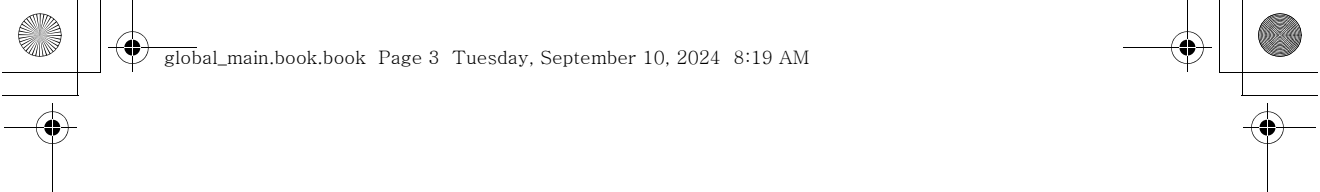


TROUBLESHOOTING

Washer 60

Dryer 67

Common.....71

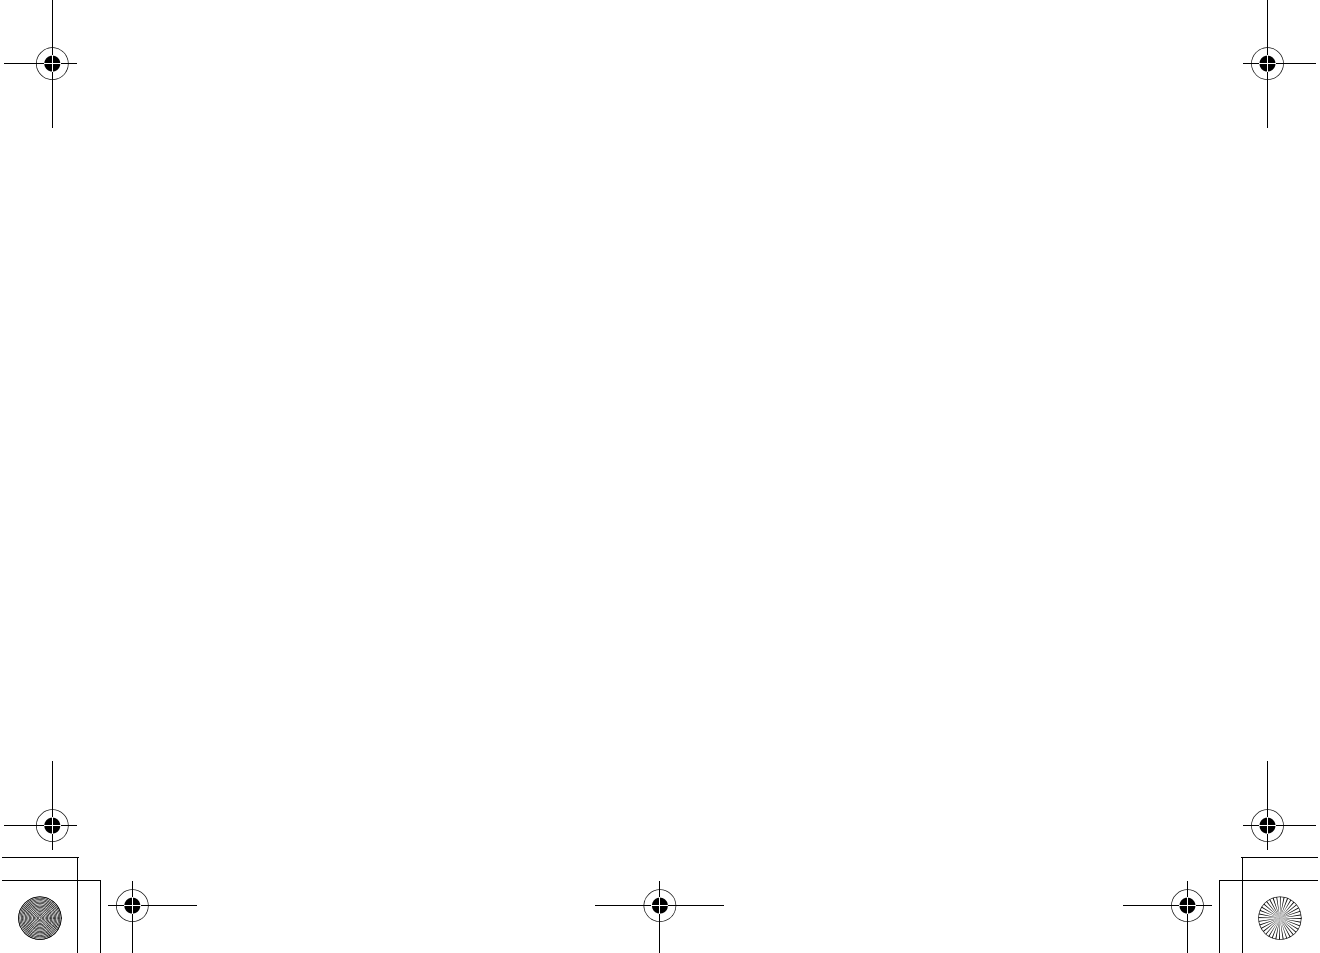

4 SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING



WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- The inlet water pressure must be between 50 kPa and 800 kPa.
- Use a new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Ventilation openings must not be obstructed by a carpet.
- Do not dry unwashed items in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- Items that have been soiled with substances such as cooking oil, vegetable oil, acetone, alcohol, petroleum, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Do not drink the condensed water. Failure to do so may result in food-borne illnesses.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
- The lint filter must be cleaned frequently.
- Lint must not be allowed to accumulate around the appliance.
- Do not spray dry cleaning detergent directly onto the appliance or use the appliance to dry clothes left with dry cleaning detergent.
- Do not dry clothes stained with oil substances. Oil substances (including edible oils) stained on clothes cannot be completely removed even after washing with water.

6 SAFETY INSTRUCTIONS

- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Remove clothes from the product immediately when drying is complete or the power is turned off during the drying process. Leaving clothes that has been dried in the appliance unattended could result in fire. Clothes not removed from the appliance after drying could result in fire. Remove clothes immediately after drying, and then hang or lay the clothes flat to cool.
- This appliance is intended to be used in household only.

Maximum Capacity

The maximum capacity in some cycles for dry clothes to be used is **Wash (21 kg)/Dry (16 kg)**.

Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, rain, or temperatures below freezing.
- Make sure the power plug is completely pushed into the power outlet.
- Do not plug the appliance into multiple outlet sockets, power boards, or an extension power cable.
- Do not modify the power plug provided with the appliance. If it does not fit the power outlet, have a proper outlet installed by a qualified electrician.
- This appliance is equipped with a power cord having an equipment-earthing / grounding conductor (earthing pin) and a grounding

power plug. The power plug must be plugged into an appropriate outlet socket that is installed and earthed / grounded in accordance with all local codes and ordinances.

- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- This appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.
- Tighten the drain hose to avoid separation.
- If the power cord is damaged or the hole of the socket outlet is loose, do not use the power cord and contact an authorized service centre.

Operation

- To avoid breaking the door glass, do not push too hard on the door when closing.
- Do not apply any sharp objects to the control panel in order to operate the appliance.
- Do not attempt to separate any panels or disassemble the appliance.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Do not push down the door excessively, when the appliance door is open.
- Do not put animals, such as pets into the appliance.
- Do not wash rugs, mats, shoes or pet blankets, stuffed toys, or any other items other than clothes or sheets, in this machine.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.

8 SAFETY INSTRUCTIONS

- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as waxes, wax removers, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, petrol, spot removers, turpentine, vegetable oil, cooking oil, acetone, alcohol, etc.). Improper use can cause fire or explosion.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- Do not use or store flammable or combustible substances (ether, benzene, alcohol, chemical, LPG, combustible spray, gasoline, thinner, petroleum, insecticide, air freshener, cosmetics, etc.) near the appliance.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- Do not touch the door during a high temperature programme.
- In case of a water leak from the appliance or flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Turn off water taps to relieve pressure on hoses and valves and to minimize leakage if a break or rupture should occur. Check the condition of the fill hoses; they should be replaced after 5 years.
- If there is a gas leakage (isobutane, propane, natural gas, etc.) within the home, do not touch the appliance or power plug and ventilate the area immediately.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.
- Avoid touching any water that is drained from the appliance during the wash.

- Make sure that drainage is working properly. If water is not drained properly, your floor may get flooded.
- When the air temperature is high and the water temperature is low, condensation may occur and thus wet the floor.
- Wipe off dirt or dust on the contacts of the power plug.

Maintenance

- Disconnect the appliance from the power supply before cleaning the appliance. Setting the controls to the OFF or stand by position does not disconnect this appliance from the power supply.
- Securely plug the power plug in the outlet socket after completely removing any moisture and dust.
- Do not spray water inside or outside the appliance to clean it.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the outlet socket.
- Only qualified service personnel from LG Electronics service centre should disassemble, repair, or modify the appliance. Contact an LG Electronics customer information centre if you move and install the appliance in a different location.

Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

10 INSTALLATION


INSTALLATION

Parts and Specifications

NOTE

- Appearance and specifications may change without notice to improve the quality of the appliance.


Front View

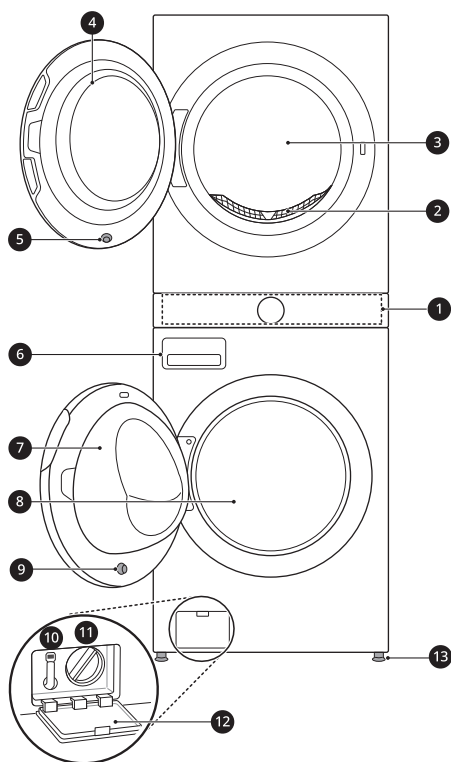

- 1 Control Panel
- 2 Lint Filter
- 3 Dryer Drum
- 4 Dryer Door
- 5 Dryer Door Magnet
- 6 Detergent Dispenser Drawer
- 7 Washer Door

- 8 Washer Drum
- 9 Washer Door Magnet
- 10 Drain Hose
- 11 Drain Pump Filter
- 12 Drain Pump Filter Cover
- 13 Leveling Feet

Rear View

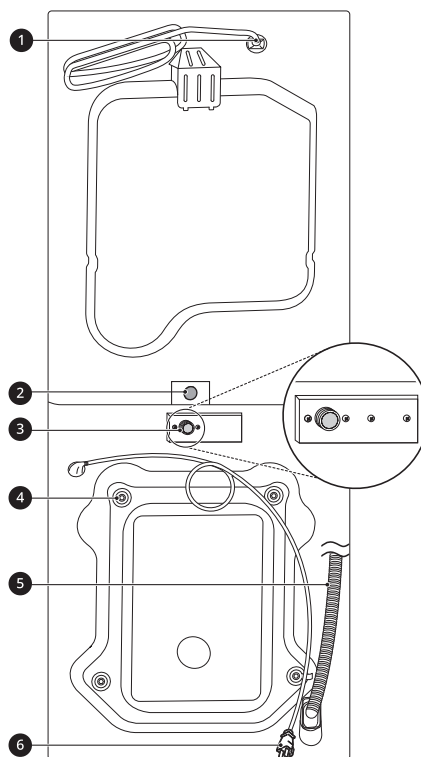


INSTALLATION 11

- ❶ Power Cord (for Dryer)
- ❷ Drain Hole (for Dryer)
- ❸ Cold Water Inlet (for Washer)
- ❹ Shipping Bolts
- ❺ Drain Hose (for Washer)
- ❻ Power Cord (for Washer)

ENGLISH

12 INSTALLATION

Accessories

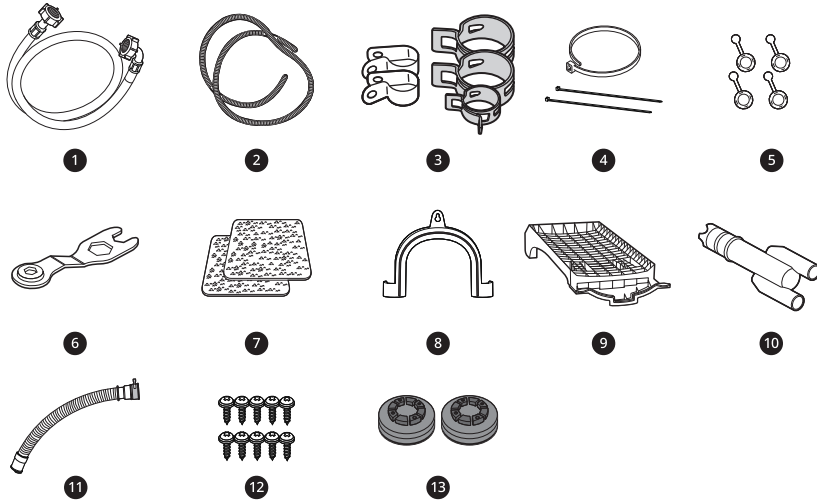

1	Connecting Supply Hose (for Washer)	2	Water Drain Hose (for Dryer)	3	Band Clamps (5 EA)
4	Cable Ties (3 EA)	5	Caps for Covering Transit Bolt Holes	6	Spanner
7	Anti-slip Sheets	8	Elbow Bracket for Securing Drain Hose	9	Dry Rack
10	Drain Hose Connector	11	Short Drain Hose	12	Screws (10 EA)
13	Leg Stoppers (2 EA)				

NOTE

- The images in this manual may be different from the actual components and accessories that are subject to change by the manufacturer without prior notice for product improvement purposes.

Specifications

Model	WK2116BST / WK2116WHT / WK2116BST1 / WK2116WHT1
Power supply	220-240 V~, 50/60 Hz
Dimension (Width X Depth X Height)	700 mm X 770 mm X 1890 mm
Product weight	154 kg

Model	WK2116BST / WK2116WHT / WK2116BST1 / WK2116WHT1
Maximum Power	2100 W (Wash) / 1400 W (Dry)
Permissible Inlet Water pressure	50 KPa ~ 800 KPa (0.5~8.0 kgf/cm ²)
Allowable temperature	5 - 35 °C
Annual Water Consumption	38,500 litres/year
Annual Energy Consumption	423 kWh/year (Wash) / 300 kWh/year (Dry)
IP No. (Degree of Protection)	IPX4
Country of origin	MADE IN KOREA

ENGLISH

14 INSTALLATION

Installation Place Requirements

Before installing the appliance, check the following information to make sure that the appliance should be installed in a correct place.

Installation Location


- This appliance must be installed on firm flooring to minimize vibration during the spin cycle. Concrete flooring is best, being far less prone to vibration during the spin cycle than wooden floorboards or a carpeted surface.
- If it is impossible to avoid positioning the appliance next to a gas cooker or coal burning stove, an insulation (850 X 600 mm) covered with aluminum foil on the side facing the cooker or stove must be inserted between the two appliances.
- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- When installing the appliance, adjust all four feet using the transit bolt spanner provided to ensure the appliance is stable.

Floor Installation

*1 minimum space for installation


To ensure sufficient clearance for water inlet hoses, drain hose and airflow, allow minimum clearances on the sides and behind the appliance. Be sure to allow for wall, door, or floor moldings that may increase the required clearances.

The faucet is to the REAR when the appliance is placed.

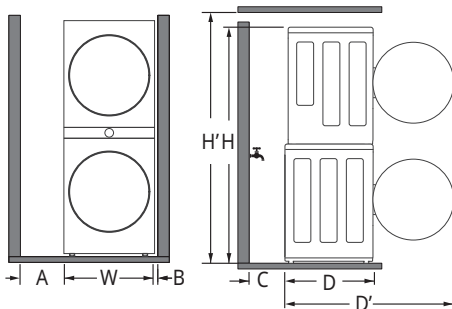

A	30 cm ^{*1}
W	70 cm
B	5 cm
C	20 cm
D	77 cm
D'	140 cm ^{*1}
H	189 cm
H'	200 cm

The faucet is to the SIDE when the appliance is placed.

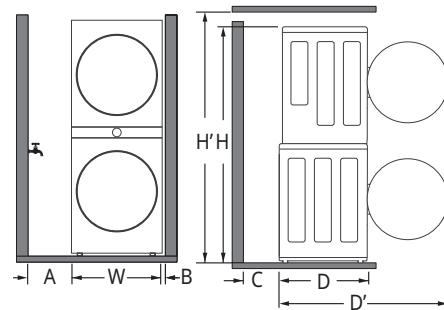

A	15 cm ^{*1}
W	70 cm
B	5 cm
C	10 cm
D	77 cm
D'	140 cm ^{*1}
H	189 cm
H'	200 cm

⚠ WARNING

- This appliance must only be used for domestic household purposes and should not be used in mobile applications.

NOTE

- Never try to level any uneven floor by putting pieces of wood, cardboard or similar materials under the appliance.

Ventilation**Alcove or under counter**

Make sure that air circulation around the appliance should not be impeded by carpets, rugs, etc.

Cupboard

Cupboard door must have 2 (louvered) openings, each having a minimum area of 387 cm², located 8 cm from the bottom and top of the door.


Ambient Temperature

- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

NOTE

- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.
- The appliance performs best at a room temperature of 23 °C.

contribute to excessive vibration and unbalance, errors and malfunction.

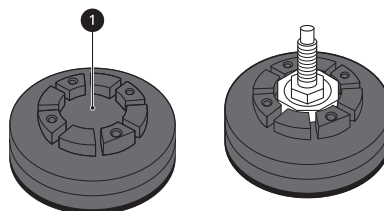

ENGLISH

- To reduce vibration, we recommend placing at least 20 mm thickness of rubber caps ① under each adjusting foot of the appliance, secured to at least two floor beams with screws.
- If possible, install the appliance in one of the corners of the room, where the floor is more stable.
- Fit the rubber cups to reduce vibration.

⚠ CAUTION

- If the appliance is installed on the unstable floor (e.g. wooden floor), the warranty does not cover any damages and cost occurred due to the installation on the unstable floor.

NOTE

- You can purchase rubber cups (part No. **MJB65174401, MJB65174501**) from the LG service centre.

Wooden Floors (Suspended Floors)

When installing the appliance on wooden floors, use rubber cups to reduce excessive vibration and unbalance. Timber or suspended type flooring may

Electrical Connection


- Do not use an extension cord or double adapter.
- Always unplug the appliance and turn off the water supply after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.
- Power outlet must be within 1 meter of either side of the appliance.

16 INSTALLATION

⚠ WARNING

- Repairs to the appliance must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local authorised LG repairer.
- The power plug must be plugged into an appropriate outlet socket that is installed and grounded/earthed in accordance with all local codes and ordinances.

After removing the carton and shipping material, lift the appliance off the foam base.

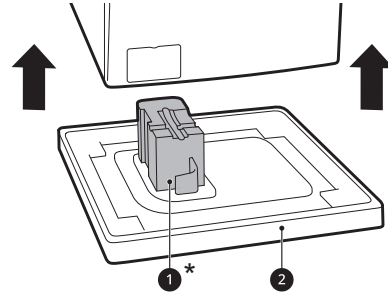


- Make sure the tub support **1*** comes off with the base and is not stuck to the bottom of the appliance.
- If you must lay the appliance down to remove the carton base **2**, always protect the side of the appliance and lay it carefully on its side. Do not lay the appliance on its front or back.

Unpacking the Appliance

⚠ WARNING


- When installing this appliance, take adequate measures to protect yourself, e.g. by wearing protective gloves.
- Moving or installation of the appliance requires two or more people. Failure to follow these instructions may result in injury.
- When moving the product, tilt it toward the back of the product. Do not transport the product in a horizontal position.

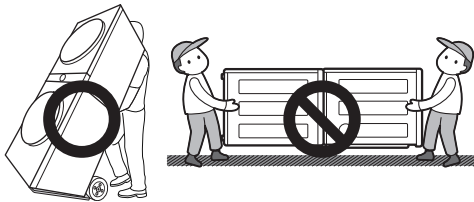

Removing the Transit Bolt Assemblies

To prevent the appliance from severe vibration and breakage, remove transit bolts and retainers.

- Starting with the bottom two transit bolts **1**, use the spanner (included) to fully loosen all transit bolts by turning them counterclockwise.

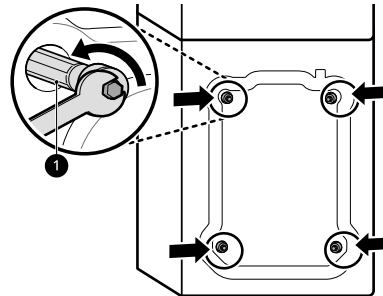


- Remove the bolt assemblies by wiggling them slightly while pulling them out.

- Install the hole caps.

Lifting the Appliance Off the Foam Base

* This feature may vary depending on the model purchased.

- Locate the hole caps ② included in the accessory pack or attached on the back.

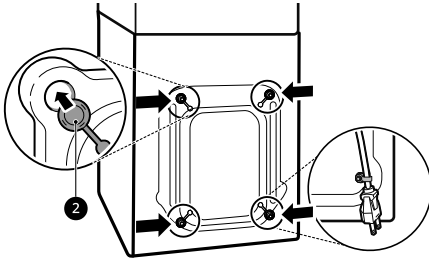

NOTE

- Save the transit bolts and retainers for future use.
- To prevent damage to the appliance during transport:
 - Reinstall the transit bolts.
 - Secure the power cord to the back of the appliance.

Connecting the Water Supply Hose

Note for Connection

- Water pressure must be between **50 kPa** and **800 kPa** (0.5 – 8.0 kgf/cm²). If the water pressure is more than **800 kPa**, a decompression device should be installed.
- Periodically check the condition of the water supply hose and replace the water supply hose if necessary.


NOTE

- Do not overtighten the water supply hose or use mechanical devices to tighten onto the inlet valves.
- No further backflow protection required for connection to the water inlet.

Checking the Rubber Seal

Two rubber seals ① are supplied with the water supply hose. They are used for preventing water leaks. Connection to taps is sufficiently tight.


- Do not use mechanical devices such as multi grips to tighten the water supply hose. Ensure that the curved end of the water supply hose is connected to the appliance.

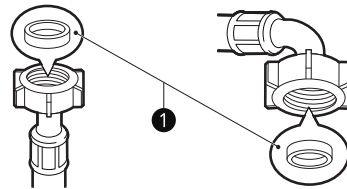

Connecting the Hose to the Water Tap


Connecting Screw-Type Hose to Tap with Thread

Screw the supply hose connector onto the water supply tap.

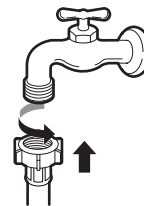


Connecting Screw-Type Hose to Tap Without Thread

- 1 Loose the 4 fixing screws ①.

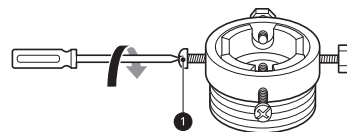


18 INSTALLATION


- 2** Remove the guide plate **2** if the tap is too large to fit the adapter.

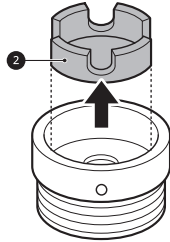

- 3** Push the adapter onto the end of the tap so that the rubber seal is connected to be watertight. Tighten the 4 fixing screws.

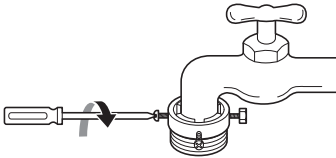


- 4** Push the inlet hose **3** vertically upwards so that the rubber seal within the hose can adhere completely to the tap and then tighten the hose by screwing it to the right.

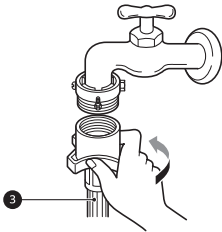


Connecting One Touch Type Hose to Tap Without Thread


- 1** Unscrew the adapter ring plate **4** and loose the 4 fixing screws.

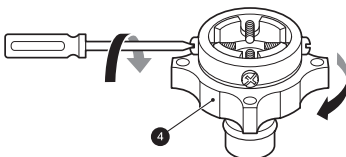


- 2** Remove the guide plate **5** if the tap is too large to fit the adapter.

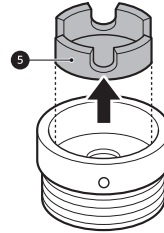

- 3** Push the adapter onto the end of the tap so that the rubber seal is connected to be watertight. Tighten the 4 fixing screws and the adapter ring plate.

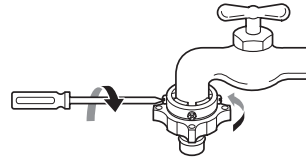

- 4** Pull the connector latch plate **6** down, push the inlet hose onto the adapter, and release the connector latch plate. Make sure the adapter locks into place.

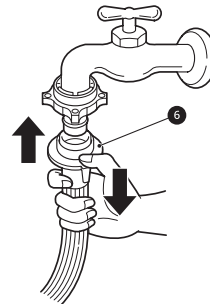


NOTE

- After connecting the water inlet hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, and etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

Connecting the Hose to the Appliance


- 1 Screw the supply hose to the water inlet valve on the back of the appliance.

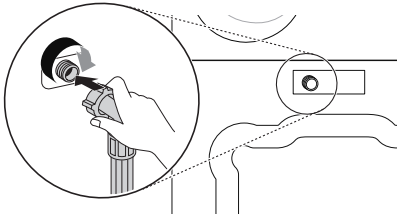


NOTE

- Do not connect the hose to the hot water supply for models with one water inlet. Connect to the cold water supply only.
- After completing connection, if water leaks from the hose, repeat the same steps. Use the most conventional type of tap for the water supply. In case that the tap is square or too big, remove the guide plate before inserting the tap into the adaptor.
- Make sure that the hose should not be kinked or trapped.


- 2 Insert the hose clamp ① onto the drain hose of the dryer.

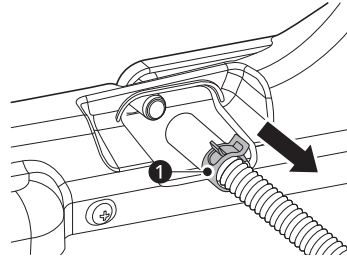

- 3 Connect the drain hose of the dryer and secure the hose clamp.

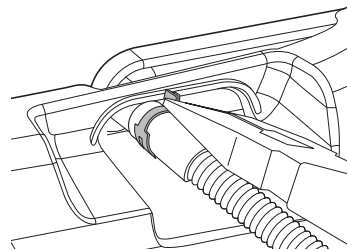


- 4 Loosen the screw ② on the stack bracket.




Installing the Drain Hose

Connecting the Drain Hose to the Dryer

- 1 Remove the stamped area on the middle of the bracket to make an opening for the drain hose of the dryer.

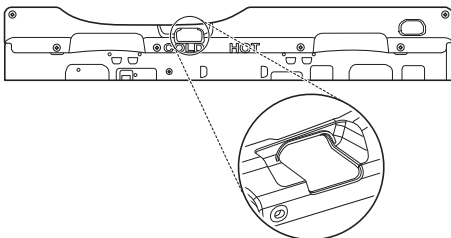


- 5 Screw in the band to secure the drain hose of the dryer onto the stacking bracket.

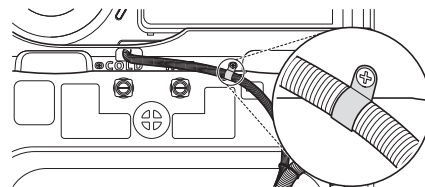

20 INSTALLATION

- 6** Use the provided tie strap **3** to secure the 2 drain hoses in place.

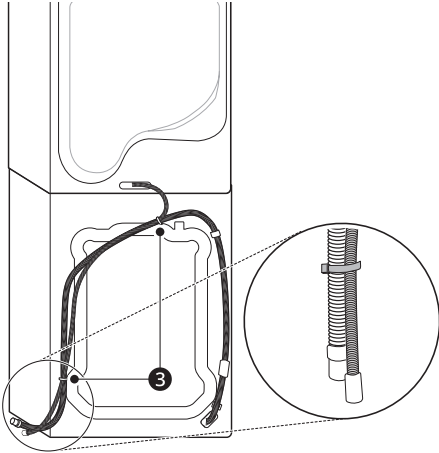


NOTE

- The drain hose should not be placed higher than **100 cm** above the floor. Water in the appliance may not drain or may drain slowly.
- Securing the drain hose correctly will protect the floor from damage due to water leakage.
- If the drain hose is too long, do not force it back into the appliance. This will cause abnormal noise.


Connecting Hoses to the Drain Hose Connector

- 1** Slide the included band clamp onto the end of the drain hose of the washer.
- 2** Connect the drain hoses from the washer and dryer to the drain hose connector. Tighten the


band clamp **1** to keep the washer hose in place.

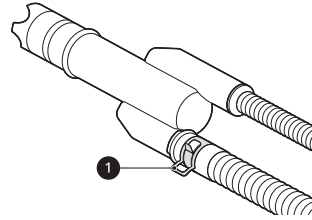

- 3** Use the band clamp **2** on the short drain hose (included) to attach it to the bottom opening of the drain hose connector.

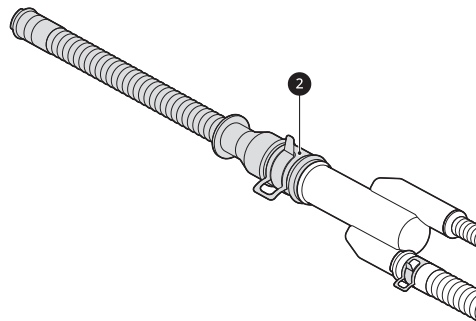

- 4** Connect securely the short drain hose to a floor gully or a standpipe. When connecting to a waste spigot, use the band clamp **3** to the end of the short drain hose.

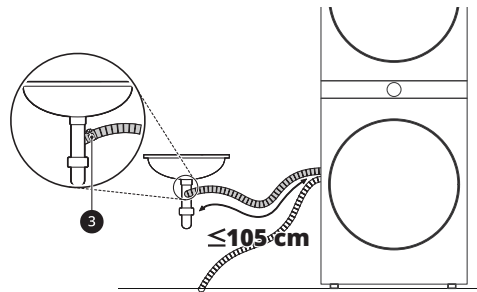

⚠ CAUTION


- Adjust the wire hose clamp to prevent the hose from coming loose or leaking. Failure to do so could result in flooding. Use of the drain hose

connector helps avoid siphoning, odours, or improper draining.

- Make sure the drain hoses are not kinked or pinched. This is a potential cause of drainage problems or noise.

NOTE

- Depending on the installation environment, you may have to purchase a separate drain hose connector. The connector supplied will suit a standard laundry tub side drain hole.
- Use the elbow bracket (included) if necessary. When installing the drain hose to a sink, secure it tightly with string.

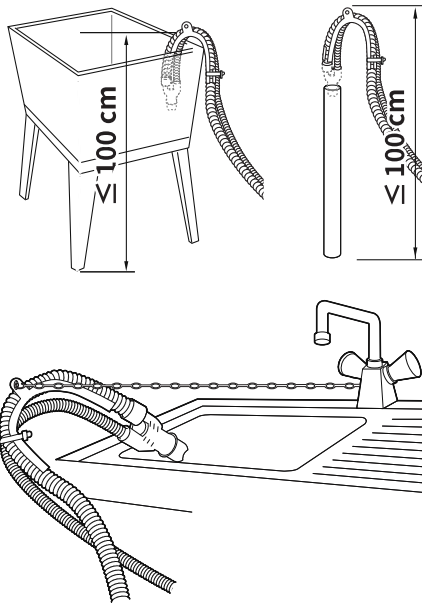

- If the appliance rocks when pushing the top plate of the appliance diagonally, adjust the feet again.
- Check whether the appliance is perfectly level after installation.



NOTE

- Timber or suspended type flooring may contribute to excessive vibration and unbalance. Reinforcement or bracing of the timber floor may need to be considered to stop or reduce excessive noise and vibration.

Adjusting and Levelling the Feet

When installing the appliance, the appliance should be aligned and perfectly level. If the appliance is not aligned and level properly, the appliance may be damaged or may not operate properly.

- 1 Turn the levelling feet as required if the floor is uneven.
 - Do not insert pieces of wood etc. under the feet.
 - Make sure that all four feet are stable and resting on the floor.

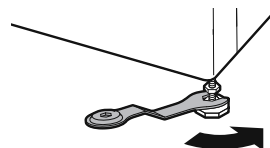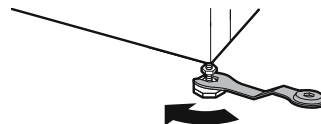

Levelling the Appliance

Checking the Level


When pushing down the edges of the top plate diagonally, the appliance should not move up and down at all (check both directions).

22 INSTALLATION


NOTE

- Do not install the washing machine on a plinth, stand or elevated surface unless it is manufactured by LG Electronics for use with this model.

- Check if the appliance is perfectly level using a spirit level ①.

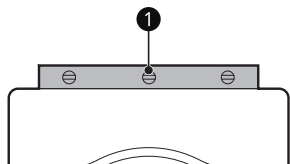

- Secure the levelling feet with the lock nuts ② by turning anti-clockwise against the bottom of the appliance.

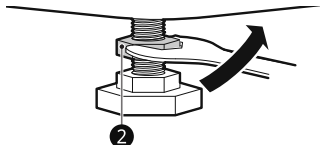

- Check if all lock nuts at the bottom of the appliance are secured properly.

NOTE

- Proper placement and levelling of the appliance will ensure long, regular, and reliable operation.
- The appliance must be 100% horizontal and stand firmly in position on a hard flat floor.
- It must not 'Seesaw' across corners under the load.
- Do not let the feet of the appliance get wet. Failure to do so may cause vibration or noise.

Using Anti-Slip Sheets

This feature may vary depending on the model purchased.

If you install the appliance on a slippery surface, it may move because of excessive vibration. Incorrect levelling may cause malfunction through noise and vibration. If this occurs, install the anti-slip sheets under the levelling feet and adjust the level.


- Clean the floor to attach the anti-slip sheets.

- Use a dry rag to remove and clean foreign objects and moisture. If moisture remains, the anti-slip sheets may slip.

- Adjust the level after placing the appliance in the installation area.

- Place the adhesive side ① of the anti-slip sheets on the floor.

- The most effective way is to install the anti-slip sheets under the front feet. If it is difficult to place the sheets under the front feet of the appliance, attach them under the rear feet.

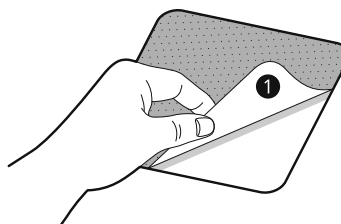

- Put the appliance on the anti-slip sheets.

- Do not attach the adhesive side ① of anti-slip sheets to the feet of the appliance.

NOTE

- Additional anti-slip sheets are available at LG Electronics service centre.

Disassembly

Disassembling the Washer and Dryer

The washer and dryer cannot be disassembled and installed for use side by side. If it is necessary to disassemble the appliance in order to move or reinstall it, follow these instructions.

⚠ WARNING


- Protect your hands and arms from sharp edges. To reduce the risk of injury to persons, adhere to all industry recommended safety procedures including the use of long-sleeved gloves and safety glasses.

NOTE


- Any damage resulting from improper disassembly/assembly or installation of the product is not covered by the product warranty.

- 1 Be sure to unplug the appliance.


- 2 Loosen screws assembled on the stack bracket on the back of the appliance.

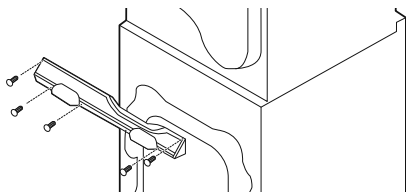


- 3 Push open the caps at the left and right sides of the control panel on the front of the appliance. Loosen the screws under the caps.

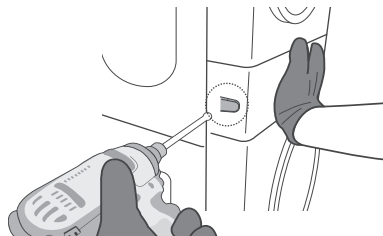

- 4 Pull the control panel forward to remove it.

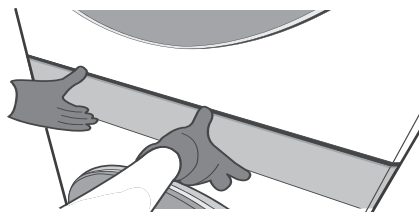

- 5 Disconnect the wire harnesses from the washer ① and dryer ② to the control panel.

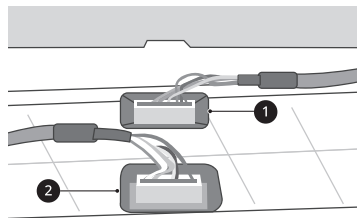

⚠ CAUTION


- Always ground yourself before touching the PCB or wiring. Discharge of static electricity may cause product malfunction.

NOTE


- Tuck the wire harnesses to the side to avoid pinching them.

24 INSTALLATION

- 6** Unscrew the second screw from the top of the four screws on the left and right.

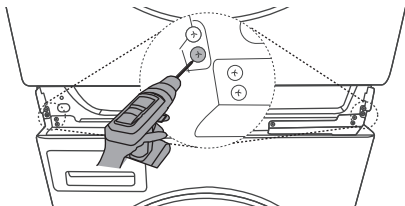

- 7** Lift the dryer and separate it from the washer.

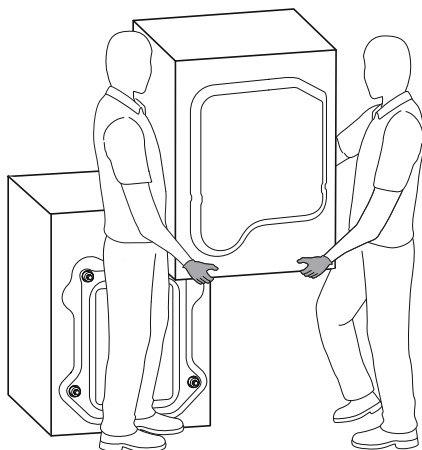

⚠ WARNING

- Protect your hands and arms from sharp edges of the panel frame exposed on the top of the washer.
- To avoid strain injuries, use 2 or more people to lift the dryer.

NOTE

- When assembling the appliance, proceed in reverse order.

OPERATION-WASHER

Operation Overview


Using the Washer

Before the first wash, select the **Cotton** wash programme and add a half amount of the detergent. Start the appliance without clothes. This will remove possible residues and water from the drum that may have been left during manufacturing.

- 1 Sort clothes by fabric type, soil level, colour and load size as needed.
- 2 Open the door and load items into the appliance.

CAUTION


- Before closing the door, ensure that all clothes and items are inside the tub and not overhanging on the rubber door seal where they will become caught when the door is closed. Failing to do so will cause damage to the door seal and the clothes.

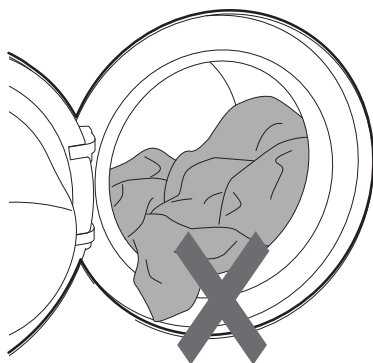

- 3 Close the door.

CAUTION

- Remove items from the flexible door seal gasket to prevent clothing and door seal damage.

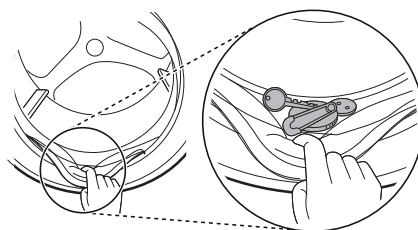

- 4 Add cleaning products or detergent and softener.

- Add the proper amount of detergent to the detergent dispenser. If desired, add bleach or fabric softener to the appropriate areas of the dispenser.

- 5 Press the **Power** button to turn on the appliance.

- 6 Choose the desired cycle.

- Press the cycle button repeatedly until the desired cycle is selected.
- Now select a wash temperature and spin speed. Pay attention to the fabric care label of your clothes.

- 7 Begin cycle.

- Press the **Start/Pause** button to begin the cycle. The appliance will agitate briefly without water to measure the weight of the load. If the **Start/Pause** button is not pressed within a certain time, the appliance will shut off and all settings will be lost.

- 8 End of cycle.

26 OPERATION-WASHER

- When the cycle is finished, a melody will sound. Immediately remove your clothing from the appliance to reduce wrinkling.

Symbol	Wash / Fabric type
	Do not wash

Preparing the Wash Load

Sorting the Clothes


- For best washing results, sort your clothes according to the care label stating fabric type and washing temperature. Adjust the spin speed or spin intensity in accordance to the fabric type.
- Soil level (Heavy, Normal, Light): Separate clothes according to soil level. If possible, do not wash heavily soiled items with lightly soiled ones.
- Colour (White, Lights, Dark): Wash dark or dyed clothes separately from whites or light colours. Mixing dyed clothes with light clothes can result in dye transfer or discolouration of lighter clothes.
- Lint (Lint producers, Collectors): Wash separately lint producing fabrics from lint collecting fabrics. Lint producers can result in pilling and linting on the lint collectors.

NOTE

- The dashes under the symbol give you information about the type of fabric and the maximum allowance of mechanical stress.

Checking the Clothes before Loading

- Combine large and small items in a load. Load large items first.
- Large items should not be more than half of the total wash load. Do not wash single items. This may cause an unbalanced load. Add one or two similar items.
- Check all pockets to make sure that they are empty. Items such as nails, hair clips, matches, pens, coins and keys can damage both your appliance and clothes.

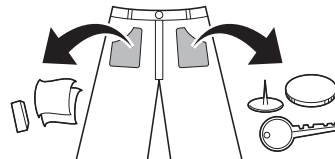

Checking the Clothes Care Label

The symbols tell you about the fabric content of your garment and how it should be washed.

Symbols on the Care Labels

Symbol	Wash / Fabric type
	- Normal Wash - Cotton, Mixed Fabrics
	- Easy Care - Synthetic, Mixed Fabrics
	- Special Delicate Wash - Delicates
	- Hand Wash Only - Wool, Silk

- Wash delicates (stockings, underwired bras) in a wash net.
- Close zippers, hooks and strings to make sure that these items do not snag on other clothes.
- Pre-treat dirt and stains by brushing a small amount of detergent dissolved water onto stains to help lift dirt.

Adding Detergents and Softeners

Detergent Dosage

- Detergent should be used according to the instruction of the detergent manufacturer and selected according to type, colour, soiling of the fabric and the washing temperature. Use only detergents that are suitable for Drum (front load) type washers.
- If too many suds occur, reduce the detergent amount.
- If too much detergent is used, too many suds can occur and this will result in poor washing results or cause heavy load to the motor.
- If you wish to use liquid detergent, follow the guidelines provided by the detergent manufacturer.
- You can pour liquid detergent directly into the main detergent drawer if you are starting the wash cycle immediately.
- Do not use liquid detergent if you have selected **Pre Wash** option, as the liquid will dispense immediately and may harden in the drawer or the tub.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid overdosing the detergent. Failing to do so will cause oversudsing.
- Refer to the label of the clothes, before adding the detergent and choosing the water temperature.
- Use only suitable detergents for the respective type of clothing:
 - Liquid detergent is often designed for special applications, e.g. for coloured fabric, wool, delicate or dark clothes.
 - Powdered detergent is suitable for all types of fabric.
 - For better washing results of white and pale garments, use powdered detergent with bleach.
 - Detergent is flushed from the dispenser at the beginning of the wash cycle.


NOTE

- Do not let the detergent harden. Doing so may lead to blockages, poor rinse performance or odour.
- Full load: According to manufacturer's recommendation.
- Part load: 1/2 of the normal amount.
- Minimum load: 1/3 of full load.

Using the Dispenser

To add detergent dosage to the dispenser:

- 1 Open the dispenser drawer.
- 2 Add the detergent and softener into the appropriate compartments.

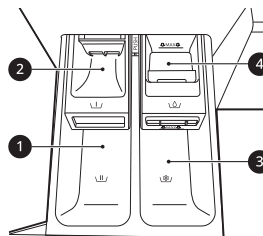

- 1 Main wash detergent compartment
- 2 Pre-wash detergent compartment
- 3 Liquid fabric softener compartment
- 4 Liquid bleach compartment

- 3 Gently close the detergent dispenser drawer before starting the cycle.
 - Slamming the drawer closed may result in the detergent overflowing into another compartment or dispensing into the drum earlier than programmed.
 - Be careful not to get a hand caught in the drawer while closing.


28 OPERATION-WASHER

- It is normal for a small amount of water to remain in the dispenser compartments at the end of the cycle.

Fabric Softener Compartment

This compartment holds liquid fabric softener, which is automatically dispensed during the final rinse cycle. Either powdered or liquid fabric softener may be used.

- Pour fabric softer to the maximum fill line. Pouring excessive fabric softener over the maximum fill line can cause it to dispense too early, which may stain the clothes.

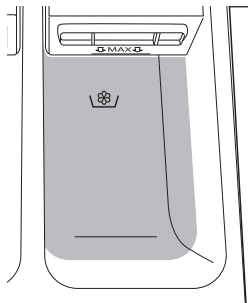

- First add detergent, and then the water softener. Dispense according to the amount specified on the packaging.

Adding Detergent Tablets

Detergent tablets can also be used when washing.

- 1 Open the door and put detergent tablets into the drum before loading the clothes.
- 2 Load the clothes into the drum and close the door.

NOTE

- Do not put tablets into the dispenser.

NOTE

- Do not pour fabric softener directly onto the clothes in the wash drum, doing so will cause dark staining on the clothes that will be difficult to remove.
- Do not leave the fabric softener in the detergent drawer for more than 1 day. Fabric softener may harden. Softener may remain in the dispenser if it is too thick. The softener should be diluted if the consistency is too thick so that it can flow easily.
- Do not open the drawer when water is being supplied during the wash.
- Solvents (benzene, etc.) must never be used.





Adding Water Softener

A water softener, such as anti-limescale can be used to cut down on the use of detergent in areas with high water hardness level.

Control Panel and Programme Table

Control Panel Features

ENGLISH

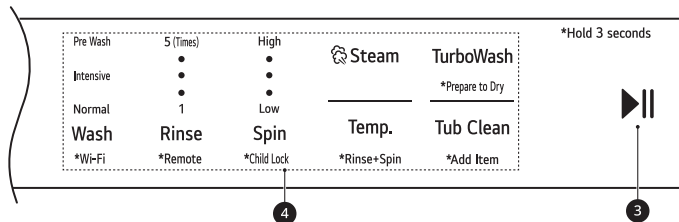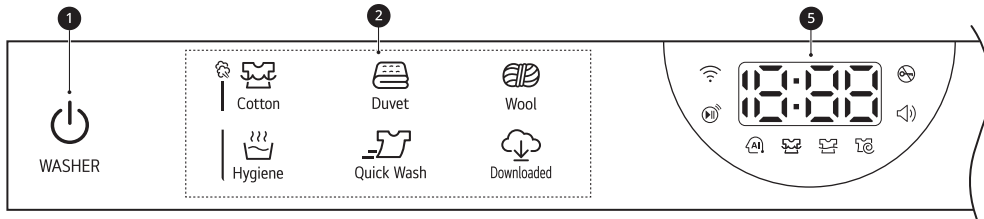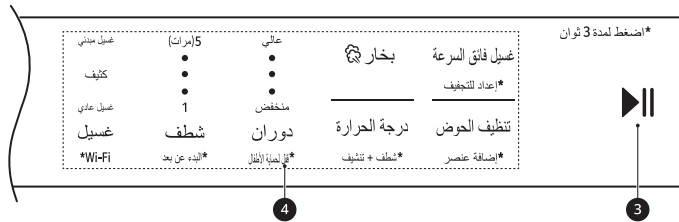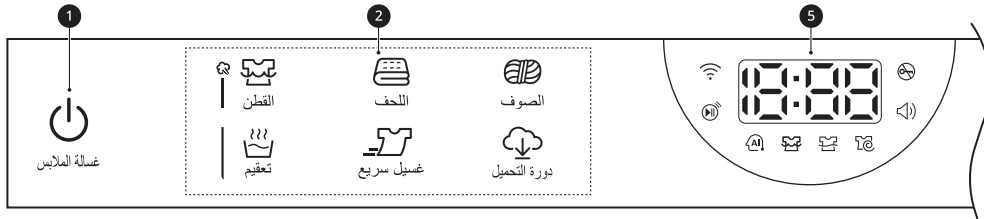


	Description
1	Power On/Off Button Press this button to turn the washing machine on.
2	Programme Buttons - Programmes are available according to the clothes type. - The lamp will light up to indicate the selected programme.

30 OPERATION-WASHER

	Description
③	Start/Pause Button - This button is used to start the wash programme or pause the wash programme. - If a temporary stop of the wash programme is needed, press this button.
④	Customizing Washing Programme Buttons / Extra Options and Functions - Use these buttons to select the desired options for the selected programme. Not all options are available in each programme. - To use the extra functions, press and hold the corresponding button for 3 seconds. The corresponding symbol lights up in the display. Remote Start With the LG ThinQ app, you can use a smartphone to control your appliance remotely. - In order to use this function, refer to SMART FUNCTIONS. Wi-Fi Press and hold the Wash button for 3 seconds to initiate the connection of the appliance to the LG ThinQ application.
⑤	Time and Status Display - The display shows the settings, estimated remaining time, options, and status messages. When the appliance is turned on, the default settings in the display will illuminate. - While the load weight is sensed automatically, the display on the control panel blinks.

Time and Status Display

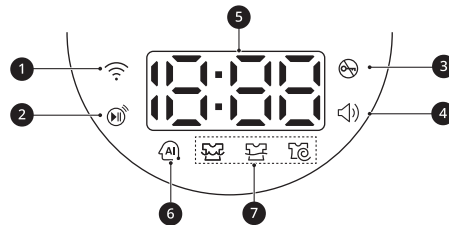

	Description
①	Wi-Fi lights up when the appliance is connected to Wi-Fi network at home.
②	Remote Start lights up when the remote control feature is activated.
③	Start/Pause lights up when the programme starts and the door is locked.
④	Beep lights up when the beep is on. Beep sound can be turned on or off only through the LG ThinQ application.

	Description
5	Estimated Time Remaining - When a washing programme is selected, the default time for that programme is displayed. This time will change as options are selected. - If the display shows ---, then the time will be displayed after the load sensing has detected the load size. This is normal. - The time shown is only an estimate. This time is based on normal operating conditions. Several external factors (load weight, room temperature, incoming water temperature, etc.) can affect the actual time.
6	AI DD AI DD  provides the appropriate drum rotation actions after load sensing is completed.  is activated when the Cotton programmes are selected and operated.
7	Programme Status Indicators When a washing programme is running, LED for the active stage will blink, and the LEDs for the remaining stages will remain steady. Once a stage is complete, the LED will turn off. If a cycle is paused, the active stage LED will stop blinking.

Washing Programme

Cotton	40 °C (Cold to 60 °C)	Max. Load: Rating
Description	Washes normally soiled clothes by combining various drum motions. Pressing the Start/Pause button without selecting a programme will cause the Cotton programme to begin immediately, using the default settings.	
Note	Set programme at Cotton, 40 °C (Half Load), Cotton, 60 °C (Half Load), Cotton, 60 °C (Full Load) for test in conformity with SASO 2885.	

Duvet	Cold (Cold to 40 °C)	Max Load: 4 kg (1 down duvet)
Description	Washes large items such as bed covers, pillows, sofa covers, etc.	

Wool	Cold (Cold to 40 °C)	Max. Load 4 kg
Description	Washes hand-washable and machine-washable delicate clothes such as washable wool, lingerie, dresses etc.	

Hygiene	95 °C	Max. Load 3 kg
Description	Washes clothes at a high temperature.	

32 OPERATION-WASHER

Quick Wash	40 °C (Cold to 40 °C)	Max. Load 3 kg
Description	Washes small loads of lightly soiled clothes in a short time.	
Downloaded	-	-
Description	This programme allows you to download a new and special washing programme to your appliance with a smartphone. The default programme is Lightly Soiled .	

NOTE

- Select the appropriate water temperature for chosen wash programme. Always follow garment manufacturer's care label or instructions when washing to avoid damage to clothes.
- Select the proper wash temperature and spin speed for the desired programmes.
- Actual water temperature may differ from the declared cycle temperature.
- Neutral detergent is recommended.

Test in Conformity with SASO 2885

Set the following programmes for test in conformity with **SASO 2885**.

- **Cotton + 60 °C + Intensive + High Spin (Full Load)**
- **Cotton + 60 °C + Intensive + High Spin (Half Load)**
- **Cotton + 40 °C + Intensive + High Spin (Half Load)**

*1 They are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton clothes.

*2 The test results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling utilized detergent, fluctuations in the main electricity supply and chosen additional options.

	Standard 60 °C Normal programme		Standard 40 °C Normal programme (Half Load)
	Full Load	Half Load	
Number of washing cycles	1	1	1
Water Consumption during washing cycle (liter)	60	40	40
Duration of each washing Cycle (minutes)	100	80	70
Number of rinse cycles	2	2	2

OPERATION-WASHER 33

	Standard 60 °C Normal programme		Standard 40 °C Normal programme (Half Load)
	Full Load	Half Load	
Water Consumption of each rinse cycle (liter)	60 / 60	50 / 60	50 / 60
Duration of each rinse cycle (minutes)	30 / 30	25 / 25	25 / 25
Number of spin cycles	1	1	1
Duration of each spin cycle (minutes)	40	35	35

ENGLISH

Extra Options

Programme	TurboWash	Steam
Cotton	●*1	●
Duvet	●	
Wool		
Hygiene	●	●
Quick Wash	●*1	

*1 This option is automatically included in the programme.

NOTE

- **Add Item** option can be selected for every washing programme in this table.

34 OPERATION-WASHER

Extra Options and Functions

Customizing a Washing Programme

Each programme has default settings that are selected automatically. You may also customize these settings using these buttons.

Wash

Press the **Wash** button repeatedly until the desired soil level is selected.

- **Pre Wash:** for heavily soiled clothes
- **Intensive:** for normal and heavily soiled clothes
- **Normal Wash:** for normal soiled clothes

NOTE

- Selectable options will differ depending on the selected programme.

Rinse

The number of rinses can be selected by pressing the **Rinse** button. This function is recommended for people with detergent allergies.

Spin

The spin intensity level can be selected by pressing this button repeatedly.

Press the **Spin** button to select spin speed.

Temp.

This button selects the wash temperature for the selected programme.

Press the **Temp.** button until the desired setting is lit.

- Select the water temperature suitable for the type of load you are washing. Follow the garment fabric care labels for best results.

Follow the next steps to customize a washing programme:

- 1 Prepare the clothes and load the drum.
- 2 Press the **Power** button.

- 3 Add detergent.

- 4 Select a washing programme.

- 5 Customize the washing programme (**Wash**, **Rinse**, **Spin**, and **Temp.**) as necessary.

- 6 Press the **Start/Pause** button.

Only Using a Spin Function

- 1 Prepare the clothes and load the drum.
- 2 Press the **Power** button.
 - Do not select a washing programme and do not add a detergent.
- 3 Press the **Spin** button.
- 4 Press the **Start/Pause** button.

NOTE

- If you select the washing programme, you will be unable to select a spin only. If this occurs, press **Power** button twice to cycle the machine off and back on.

Using Special Options

You can customize the programmes by using the following special options:

Steam

Adding this option helps provide better cleaning results.

TurboWash

Adding this option reduces the programme time but the similar washing results will be provided.

Follow the next steps to use a special option.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Change the washing programme (**Temp.**, **Rinse** or **Spin**) as necessary.
- 4 Press the **Steam** or **TurboWash** button.

- 5 Press the **Start/Pause** button.

Prepare to Dry

Setting this function allows the the dryer to operate automatically after the washing programme.

Follow the next steps to use a special option.

- 1 Press the **Power** button of the washer.
- 2 Select a washing programme.
- 3 Change the washing programme (**Temp.**, **Rinse** or **Spin**) if necessary.
- 4 Press the **TurboWash** button of the washer for 3 seconds.
- 5 Press the **Start/Pause** button of the washer.
 - When the dryer is turned, the paired drying programme and option will be displayed.
 - After the load weight is sensed, the dryer display shows the estimated remaining dry time for about 1 minute.

While the **Prepare to Dry** is in operation, the dryer display shows **PrE**.

- 6 After the washing programme is finished, load items into the dryer and close the door.

- 7 Press the **Start/Pause** button of the dryer.
 - The dryer display shows the estimated remaining dry time.

NOTE

- the **Prepare to Dry** function will not be activated in the following cases:
 - If you don't start the dryer within 15 minutes after the washing programme has finished
 - If the dryer is unplugged
 - If the remote control function is used
 - If the washer or dryer is shut down while setting the **Prepare to Dry** function
- When the option is set, only the **Power** button works and lock the door. Open the door of the dryer after the washing programme has finished.

Using Basic Options

You can customize the programmes by using the following basic options:

Rinse+Spin

It allows you to rinse and spin a load separately from a regular programme. It is helpful in preventing fresh stains from setting in fabrics.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press and hold the **Temp.** button for 3 seconds as necessary.
 - You can change the spin speed by pressing the **Spin** button.
- 4 Press the **Start/Pause** button.

36 OPERATION-WASHER

Add Item

You can use this option in order to add or remove clothes after the washing programme has started.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Start/Pause** button.
- 4 Press and hold the **Tub Clean** button for 3 seconds as necessary.
- 5 Open the door after it unlocks itself and add or remove necessary clothing items.
- 6 Close the door and press the **Start/Pause** button.

NOTE

- For safety reasons, the door remains locked when the water level or temperature inside of the drum is high. It is not possible to add clothes at this time.

- Turning off the power will not reset this function. You must deactivate this function before you can access any other functions.

Locking the Control Panel

- 1 Turn on the power.
- 2 Press and hold the **Spin** button for 3 seconds to activate this function.
 - A beeper will sound, and **CL** will appear on the display.

Unlocking the Control Panel

- 1 Turn on the power.
- 2 Press and hold the **Spin** button for 3 seconds to deactivate this function.

Settings

Child Lock

Use this option to disable the controls. This function can prevent children from changing cycles or operating the appliance.

NOTE

- Once this function is set, all buttons are locked except the **Power** button.
- When the controls are locked, **CL** and the remaining time are alternatively shown on the display during the wash while this function is engaged.

OPERATION-DRYER


Operation Overview

Using the Dryer

Before the first cycle, set the appliance to dry for 5 minutes to warm up the drum. Open the door between loads the first few times you use the appliance to allow any odours from the interior of the appliance to disperse.

Children must be supervised so that they do not climb inside the drum.

- 1 Ensure the lint filter is clean.

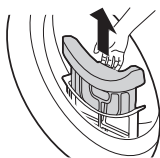

- Open the door and ensure the lint filter is clean. When the filter is full with lint, drying times will be longer than usual.

- 2 Place the clothes into the drum after sorting and close the door.

- Push the clothes deep into the drum so that the clothes keeps away from the door seal. When the clothes get stuck between the door and seal, they may get damaged while drying.
- The clothes should be sorted by fabric types and dryness level.
- All strings and attached belts of clothes should be well tied and fixed before being put into the drum.

- 3 Press the **Power** button to turn the appliance on.

- Depending on the models, the **Power** button may light up to indicate that the appliance is ready for dry.

- 4 Press the cycle button repeatedly until the desired cycle is selected.

- If you press the **Start/Pause** button without choosing a programme, the appliance will proceed with the **[Cotton]** programme. Please refer to the programme table for the detailed information.

- 5 Hold the **Start/Pause** button to start the drying programme.

NOTE

- The appliance washes lint, which builds up onto the surface of the condenser, automatically using water that is condensed from the clothes during operation.
- The frequency of cleaning condenser may vary depending on the size and the initial moisture amount of the clothes.


- 6 After the drying programme has finished, open the door and unload the clothes.

CAUTION

- Be careful! The drum inside may still be hot.

- 7 Press the **Power** button to turn the appliance off.

- 8 Clean the lint filter.

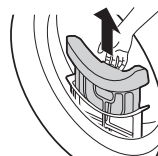

- 9 To help reduce odours from forming, the dryer's door can be left open or slightly ajar for

38 OPERATION-DRYER

a short period of time if possible to help ventilate the drum after use.

WARNING

- For safety reasons, do not allow children or animals to enter the appliance. It may cause damage or injury.

NOTE

- The final part of a tumble dry cycle occurs without heat (cool down cycle) to ensure that the clothes are left at a temperature that ensures the clothes will not be damaged.
- A high atmospheric temperature and a small room may both increase drying time as well as energy consumption.

Preparing the Laundry

NOTE

- Do not overload the appliance for the best drying performance and most efficient energy usage.

Checking the clothes before loading

CAUTION

- Check that the clothes are not stuck between appliance and door, otherwise the clothes may get damaged while drying.
- Observe the maximum load capacity on the programme table for the relevant drying programme to get optimum drying results. Overloading gives a poor drying result and causes unnecessary creasing.
- Do not load soaking wet clothes into the appliance. It will cause an increasing of drying time and energy consumption. Make sure that the clothes are spun thoroughly before loading.
- A mixed fabric load can cause the drying time to be extended and the time remaining in the

display to pause during active drying. The remaining time will then continue when it is the actual time that remains.

- Make sure to empty all pockets. Items such as nails, hair clips, matches, pens, coins and keys can damage both your appliance and clothes.
- Remove loose belts and close zippers, hooks and strings to make sure that these items do not snag other clothes.

Sorting the Clothes

Clothes have their own fabric care labels, so drying according to the fabric care label is recommended. Sort the clothes into size and type of fabric and then prepare the clothes according to the symbols on the fabric care labels.

Woollens

- Be sure to follow fabric care label symbols first. Wool may not be completely dried from the cycle, so do not repeat drying. Pull woollens to their original shape and dry them flat.

Woven and Loopknit Materials

- Some woven and loopknit materials may shrink, depending on quality.

Non-Iron and Synthetics

- Do not overload the appliance. Take out non-Iron items as soon as the appliance stops to reduce creases.

Baby Clothes and Night Gowns

- Always check fabric care labels.

Rubber and Plastics

- Do not dry any items made from or containing rubber or plastics such as:
 - Aprons, Bibs and Chair Covers
 - Curtains and Table Clothes
 - Bathmats

Fiberglass

- Do not dry fiberglass items in the appliance. Glass particles left in the appliance may be subsequently picked up by your clothes in later cycles.

Checking the Fabric Care Label


The symbols on the fabric care label tell you about the fabric content of your clothes and how it should be dried.

Symbol	Description
	Dry
	Tumble Dry
	Permanent Press / Crease Resistant
	Gentle / Delicate
	Do not Tumble Dry
	Do not Dry
	High Heating
	Medium Heating
	Low Heating
	No Heating / Air
	Line Dry / Hang to dry
	Drip Dry
	Dry Flat
	In the Shade

40 OPERATION-DRYER

Control Panel and Programme Table


Control Panel Features

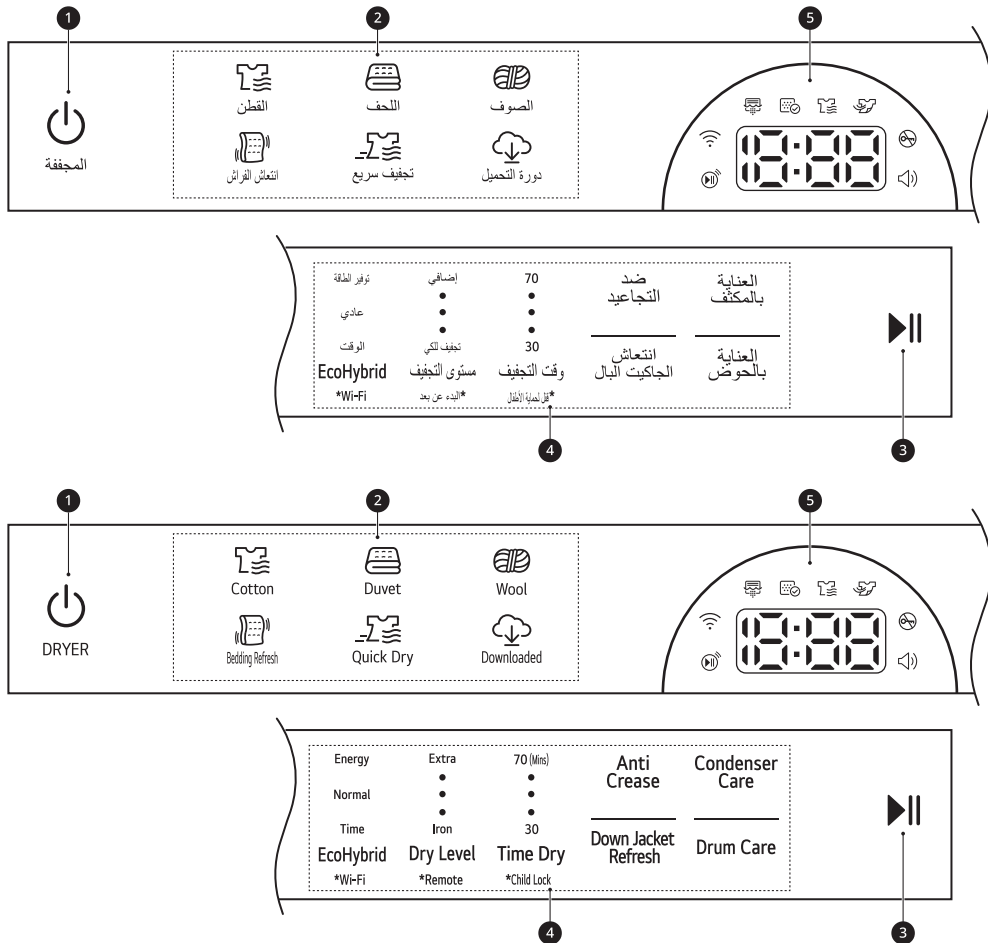

	Description
①	Power On/Off button - Press the button to turn the appliance on. Hold again to turn the appliance off. - Pressing the Power button during a programme will cancel that programme and any load settings will be lost.
②	Programme Buttons - Programmes are available according to the clothing type. - The lamp will light up to indicate the selected programme.

	Description
③	Start/Pause Button - This Start/Pause button is used to start or pause a dry programme. - When in pause, the power is turned off automatically after a certain time for safety reasons.
④	Additional Programme Buttons / Extra Options and Functions - Use these buttons to select the desired options for the selected programme. Not all options are available in each programme. - To use the extra functions, press and hold the corresponding button for 3 seconds. The corresponding symbol lights up in the display. Remote - With the LG ThinQ app, you can use a smartphone to control your appliance remotely. - In order to use the Remote Start function, refer to SMART FUNCTIONS. Wi-Fi - Press and hold EcoHybrid button for 3 seconds to initiate the connection of the appliance to the LG ThinQ application.
⑤	Time and Status Display The display shows the settings, estimated remaining time, options, and status messages. When the appliance is turned on, the default settings in the display will illuminate.

Time and Status Display

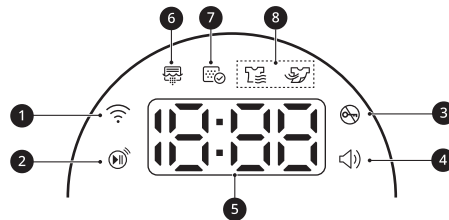

	Description
①	Wi-Fi lights up when the appliance is connected to Wi-Fi network at home.
②	Remote control lights up when the remote control feature is activated.
③	Door lock lights up when the programme starts and the door is locked.
④	Beep lights up when the beep is on. This function can be turned on or off only through the LG ThinQ application.

42 OPERATION-DRYER

	Description
5	Time Remaining Display - When a drying programme is selected, drying time for the selected programme is displayed. This time will change when you set the extra options for the programme. - Error messages will appear when the appliance diagnose problems.
6	 lights up or blinks while the condenser is being washed or the thawing mode is operating. - Condenser cleaning operates every 30 drying cycles. NOTE - Drying times will be longer than usual when the condenser is being washed. - If a small amount of clothes are dried, the condenser will not be washed because the accumulated water during the drying cycle is not enough to wash the condenser.
7	 lights up when the lint filter should be cleaned or is inserted. - Cleaning notice: When you press the Power button, the icon will become displayed. - Missing notice: When the lint filter is not inserted, the icon will become displayed and the appliance will not operate.
8	Programme Status Indicators  lights up when the appliance is in drying progress.  lights up when the appliance is in cooling progress.

Drying Programme Guide

Programme	[Cotton]	Max. Load Capacity	Rating
Description	Use for drying all normal items such as cotton, linen, shirts, jeans or mixed loads, except delicate fabrics such as wool or silk.		
Dry Level	Default : Cupboard	Available : All	

Programme	[Cotton]	Max. Load Capacity	Rating
Note	- It is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry. - Set programme at “[Cotton] Cupboard Energy (Full & Half Load)” for test in accordance in conformity with SASO 2883. - Standard Cotton programme : [Cotton] + Cupboard + Energy Option (This is the most efficient programmes in terms of the test conditions proposed by SASO 2883.) (They are suitable to dry normal wet cotton laundry.) (They are the most efficient programme in terms of energy consumption for drying wet cotton laundry.) - The test results depend on room temperature, type and amount of load, water hardness and water inlet temperature.		

Programme	[Duvet]	Max. Load Capacity	4 kg (1 down duvet)
Description	Use this programme for drying blankets or bulky items such as pillows, blankets, comforters, sheets or pet bedding.		
Dry Level	Not adjustable		

Programme	[Wool]	Max. Load Capacity	1 kg
Description	Use this programme for drying shrinkable woolen or hand-washable items requiring delicate care.		
Dry Level	Not adjustable		

Programme	[Bedding Refresh]	Max. Load Capacity	3 kg
Description	Remove dust from the beddings with airflow.		
Dry Level	Not adjustable		

Programme	[Quick Dry]	Max. Load Capacity	1.5 kg
Description	Use this programme for drying light or small items.		
Dry Level	Not adjustable		

44 OPERATION-DRYER

Programme	[Downloaded]	-	-
Description	This programme allows you to download a new and special drying programme to your appliance with a smartphone. The default programme is [Super Dry] .		

Extra Options

Programme	EcoHybrid
[Cotton]	Energy
	Normal ^{*1}
	Speed
[Duvet]	-
[Wool]	Normal ^{*1}
[Bedding Refresh]	-
[Quick Dry]	Speed ^{*1}

*1 This option is automatically included in the programme.

NOTE

- Only **[Cotton]** programme is available to select dryness level.
- **Anti Crease** option can be selected for every drying programme.
- The estimated time remaining will change if you select extra options for the programme.

Extra Options and Functions

Customizing a Drying Programme

Each programme has default settings that are selected automatically. You may also customize these settings using these buttons.

EcoHybrid

Press the **EcoHybrid** button repeatedly to offer the option of saving energy or time.

- **Energy:** Energy saving option.
- **Normal:** Default drying option.
- **Time:** Time saving option.

NOTE

- Selectable options will differ depending on the selected programme.

Dry Level

It allows you to select a dryness level for the drying programme.

- **Extra:** For thick and quilted fabrics
- **Normal+:** For fabrics that need to dry more strongly than **Normal**
- **Normal:** For fabrics that do not need to be ironed
- **Delicate:** For fabrics that need to reduce shrinkage and static electricity generation
- **Iron:** For fabrics that need to be ironed

Time Dry

Use this option to manually select the drying time, from 30 to 70 minutes, in 10-minute increments. Use this for small loads or to reduce wrinkles.

NOTE

- Clothes might be still damp depending on the fabric type of the clothes after drying. In this case, use this option to dry the clothes more thoroughly.

Follow the next steps to customize a drying programme:

- 1 Prepare the clothes and load the drum.
- 2 Press the **Power** button.
- 3 Select a drying programme.
- 4 Customize the drying programme (**EcoHybrid**, **Dry Level**, and **Time Dry**) as necessary.
- 5 Hold the **Start/Pause** button.

Using Special Options

You can customize the programmes by using the following special options:

Anti Crease

Selecting this option will tumble the load periodically for up to 2 hours after the selected programme, or until the door is opened. This is helpful in preventing wrinkles when you are unable to remove items from the dryer immediately.

- Press the **Anti Crease** button before you start a drying programme.

NOTE

- When the option is set, a rectangle with a dashed line and **End** appears on the display until the feature is off.
- When the option is set, only the **Power** button works after the drying programme ends.
- When a drying programme is running, pause the programme first to set the option.
- Always turn off the appliance before unloading the clothes.

46 OPERATION-DRYER

Follow the next steps to use a special option.

1 Press the **Power** button.

2 Select a drying programme.

3 Select the **Anti Crease** option.

4 Hold the **Start/Pause** button.

Special Cycle

Down Jacket Refresh

This cycle is for restoring the padded jacket to a fluffy one without washing.

Rack Dry

This programme is designed for use with clothes that must be dried flat, without tumbling, including sweaters and delicate fabrics.

To use the programme, you need a dryer rack that is placed inside the appliance. Before drying, discard packing materials of the dryer rack.

NOTE

- Some models are not sold with all of the available accessories, you may need to purchase the dryer rack first if it was not provided with your model. Please contact LG Electronics Customer Information Centre or visit the LG Website at <http://www.lg.com> for purchase.

1 Open the door.

2 Insert the hook of dryer rack to the drum centre.




3 Place the dryer rack on the structure above the lint filter and press it to complete assembly.



4 Place wet items on top of the rack. Allow space around items for air to circulate.

- The dryer rack does not move, but the drum will rotate.

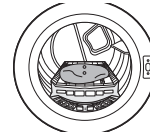

5 Close the door.

6 Turn power on and press the **Time Dry** button to finely adjust the drying time.

7 Hold the **Start/Pause** button.

NOTE

- Check the lint filter and remove any lint accumulated from items dried on the rack.

Settings

Child Lock

Use this option to disable the controls. This function can prevent children from changing cycles or operating the appliance.

NOTE

- Once this function is set, all buttons are locked except the **Power** button.
- When the controls are locked, **CL** and the remaining time are alternatively shown on the display during the dry while this function is engaged.
- Turning off the power will not reset this function. You must deactivate this function before you can access any other functions.

Locking the Control Panel

- 1 Turn on the power.
- 2 Press and hold the **Time Dry** button for 3 seconds to activate this function.
 - A beeper will sound, and **CL** will appear on the display.

Unlocking the Control Panel

- 1 Turn on the power.
- 2 Press and hold the **Time Dry** button for 3 seconds to deactivate this function.

48 SMART FUNCTIONS

SMART FUNCTIONS

Using LG ThinQ Application

The **LG ThinQ** application allows you to communicate with the appliance using a smartphone.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Remote Start

It allows you to control the appliance remotely from the **LG ThinQ** application.

Download Cycle

You can download new and special cycles that are not included in the basic cycles on the appliance. A variety of specialty cycles specific to the appliance can be downloaded to the successfully registered appliances.

Once cycle download is completed in the appliance, the appliance keeps the downloaded cycle until a new cycle is downloaded.

NOTE

- Only one downloaded cycle can be stored on the appliance at a time.

Cloud Cycle

The Cloud cycles include many cycles which are started from the **LG ThinQ** application. However, the Cloud cycle is deleted from the appliance when the power is turned off.

Smart Pairing

This function automatically selects the drying cycle to match the washing cycle.

- This function is not default. This function can be turned on or off only through the **LG ThinQ** application.
- You can't use the **Smart Pairing** function 3 hours after the washing cycle has finished.

Tub Clean Coach (Washer)

This function shows how many cycles remain before it is time to run the **Tub Clean** function.

Energy Monitoring

This function checks the energy consumption of the recently used cycles and monthly average.

Smart Diagnosis

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

Settings

Allows you to set various options on the appliance and in the application.

Push Alert

When the cycle is complete or the appliance has problems, you have the option of receiving push notifications on a smartphone. The notifications are triggered even if the **LG ThinQ** application is off.


NOTE

- If you change your wireless router, Internet service provider, or password, delete the registered appliance from the **LG ThinQ** application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

Installing LG ThinQ App and Connecting an LG Appliance

Models with QR Code

Scan the QR code attached to the product using the camera or a QR code reader app on your smartphone.

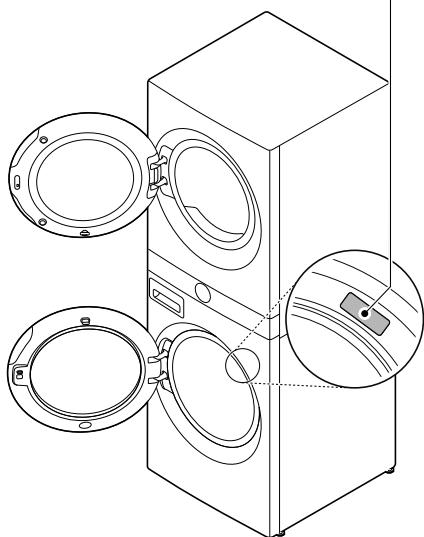

Models without QR Code

- 1 Search for and install the **LG ThinQ** app from the Google Play Store or Apple App Store on a smartphone.
- 2 Run the **LG ThinQ** app and sign in with your existing account or create an LG account to sign in.
- 3 Touch the add (+) button on the **LG ThinQ** app to connect your LG appliance. Follow the

instructions in the app to complete the process.

NOTE

- You may be asked to provide a password to connect to the LG network (not your home network) during the Wi-Fi setup. The password is the last 4 characters of the network name, repeated twice, with no spaces. For example, if the network name appears as LG_XXXX_8b92, then you would enter 8b928b92 as your password. The password is case sensitive and the last 4 characters are unique to your appliance.
- To verify the Wi-Fi connection, check that the  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- **LG ThinQ** is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- If the appliance cannot be registered due to problems with the wireless signal transmission, unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.

50 SMART FUNCTIONS

NOTE

- If the security protocol of the router is set to **WEP**, network setup may fail. Change the security protocol (**WPA2** is recommended) and connect the product again.

Activating Network Connection

- 1 Run the **LG ThinQ** application.
- 2 Select and touch the **Wash Tower** in the application.
- 3 Press the **Power** button on the control panel.
- 4 Press and hold **Wi-Fi** button for 3 seconds on the control panel.
 - The Wi-Fi LED blinks during the connection process.

Using the Appliance Remotely

Remote Start

Use a smartphone to control your appliance remotely. You can also monitor your cycle operation so you know how much time is left in the cycle.

Using this function

- 1 Put the clothes into the drum.
- 2 Press the **Power** button.
- 3 Press and hold **Remote** button for 3 seconds to enable the remote control function.

- 4 Start a cycle from the **LG ThinQ** application on your smartphone.

NOTE

- Once this function is enabled, you can only start a cycle from the **LG ThinQ** smartphone application. If the cycle is not started, the appliance will wait to start the cycle until it is turned off remotely from the application or this function is disabled.
- If the door has been opened, you can not start a cycle remotely.

Disable this function manually

When this function is activated, press and hold the **Remote** button for 3 seconds.

Delay End

Setting this function allows the appliance to start automatically and finish after a specified time.

Using this function

- 1 Put the clothes into the drum.
- 2 Press the **Power** button.
- 3 Run **LG ThinQ** application and select the product.
 - For washing, select the washer.
 - For drying, select the dryer.
- 4 Select a washing or drying programme.
- 5 Touch the **Delay End** and set the delay time.
- 6 Start a cycle from the **LG ThinQ** application on your smartphone.

NOTE

- The delay time is the time to the end of the programme, not the start. The actual running time may vary due to water temperature, clothes and other factors.
- Avoid using liquid detergent for this function.

Deactivating Network Connection

Washer

- 1 Run the **LG ThinQ** application.
- 2 Select and touch the appliance you registered in the application.
- 3 Select and touch the **Delete Product** on the settings menu to disconnect it.
- 4 Press the **Power** button on the control panel.
- 5 Press and hold the **Spin** and **TurboWash** buttons simultaneously for 3 seconds to deactivate Network Connection.

Dryer

- 1 Run the **LG ThinQ** application.
- 2 Select and touch the appliance you registered in the application.
- 3 Select and touch the **Delete Product** on the settings menu to disconnect it.
- 4 Press the **Power** button on the control panel.

- 5 Press and hold the **Time Dry** and **Condenser Care** buttons simultaneously for 3 seconds to deactivate Network Connection.

Standby Power Consumption

Standby power consumption - Washer	0.50 W
Standby power consumption - Dryer	0.50 W
Network standby power consumption	2.00 W
The period of time after which the power management function, or a similar function, switches the equipment automatically into standby and/or off mode and/or the condition providing networked standby	15 minutes

NOTE

- The activation of the network connection may increase the power consumption of the appliance.

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

52 SMART FUNCTIONS

Smart Diagnosis

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.
- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

- **Dryer:** Hold the phone to the left of the **Power** button.

3 Press and hold the **Steam** (Washer) / **Anti Crease** (Dryer) buttons for 3 seconds or until the audible tones start. Hold the smartphone mouthpiece to the appliance until the data transfer is complete.

- Keep the smartphone in place until the data transfer has finished. Time remaining for data transfer is displayed.

4 After the data transfer is complete, the diagnosis will be displayed in the application.

NOTE

- For best results, do not move the smartphone while the tones are being transmitted.

Using LG ThinQ to Diagnose Issues

If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the **LG ThinQ** application.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions provided in the **LG ThinQ** application.

Using Audible Diagnosis to Diagnose Issues

Follow the instructions below to use the audible diagnosis method.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions for audible diagnosis provided in the **LG ThinQ** application.

1 Press the **Power** button to turn on the appliance.

- Do not press any other buttons.

2 Hold the mouthpiece of your phone in front of the appliance.

- **Washer:** Hold the phone to the right of the **Start/Pause** button.

MAINTENANCE

⚠ WARNING


- Unplug the appliance before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the appliance. They may damage the finish.

Washer

What to Clean

Always remove items from the washing machine as soon as the cycle is complete. Leaving damp items in the washing machine can cause wrinkling, colour transfer, and odour.

- After the wash cycle is finished, wipe the door and door seal to remove any moisture.
- Leave the door slightly open to dry the drum.
- Wipe the appliance with a dry cloth to remove any moisture.

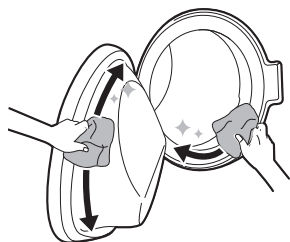

Cleaning the Exterior

Proper care of your appliance can extend the service life.

Exterior

- Immediately wipe off any spills.
- Wipe with a damp cloth and then again with a dry cloth ensuring there is no moisture in cabinet joints or crevices.
- Do not press on the surface or the display with sharp objects.

Door

- Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

⚠ WARNING

- Do not attempt to separate any panels or disassemble the appliance. Do not apply any sharp objects to the control panel in order to operate the appliance.

⚠ WARNING

- Leave the door open to dry inside of the appliance only if the children are supervised at home.

Tub Clean

This is a special function to help clean the inside of the appliance by soaking, washing, rinsing and spinning.

Run this function **once a month** (or more often if needed) to reduce build-up of detergent and softener and other residue.

- If there is a bad smell or mildew inside the appliance, run this function **once a week for 3**

54 MAINTENANCE

weeks in addition to the regularly prompted intervals.

NOTE

- The **EcL** message will be displayed to alert to the recommendation of operating this function.

- 1 Remove any clothing or items from the appliance and close the door.
- 2 Open the dispenser drawer and add anti limescale powder to the main wash compartment.
 - Tablets can be placed directly into the drum as an alternative to powder.
- 3 Close the dispenser drawer slowly.
- 4 Turn on the power, and then press the **Tub Clean** button.
- 5 Press the **Start/Pause** button to start.
- 6 Leave the door open to dry the inside of the appliance completely.
 - When the inside of the appliance is not dried completely, it may cause a bad smell or mildew.

⚠ WARNING

- Leave the door open to dry inside of the appliance only if the children are supervised at home.


Cleaning the Water Inlet Filter

The water inlet filter collects lime or any sediment that may be in water that is supplied to the appliance. Clean the inlet filter every six months or


so, or more often if the water is very hard or contains traces of limescale.

- Turn off the water supply taps to the appliance if the appliance is to be left for a certain period of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- IE error message will be displayed on the control panel when the water is not entering the detergent drawer.

- 1 Turn off the power and the water tap and then unscrew the water inlet hose.

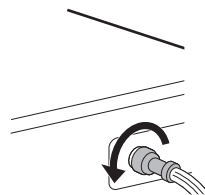

- 2 Remove the water inlet filter with small pliers and then clean the filter using a medium bristle tooth brush.

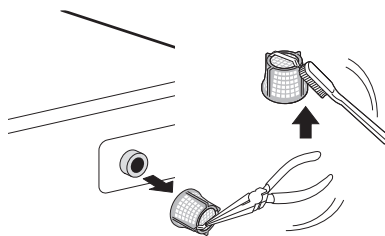


Cleaning the Drain Pump Filter and Performing an Emergency Water Evacuation

The drain filter collects threads and small objects that may have been accidentally left in the clothes. Make sure that the filter is clean every six months to ensure smooth running of your appliance.


Allow the water to cool before cleaning the drain pump filter. Open the door in an emergency or perform an emergency water evacuation.

- 1 Unplug the appliance.

- 2** Open the cover cap and pull out the drain tube.

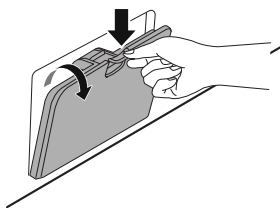

- 3** Remove the drain plug from the drain tube first **1**, and then drain the water. Then slowly unscrew the drain pump filter **2** to drain the remaining water and then proceed to remove any debris or objects from the filter.

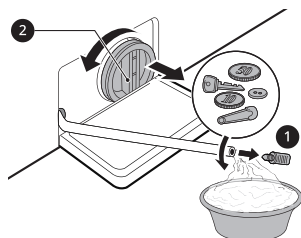

- 4** After cleaning the drain pump filter, carefully reinsert the filter and screw the drain cap back in clockwise carefully to avoid cross threading and leakage. Reinsert the plug back into the drain tube and place the tube into its holder.


- 5** Close the cover cap.

⚠ CAUTION

- Be careful when draining, as the water may be hot.
- Run the drum cleaning programme once a month (or more often, as needed) to remove excess detergent and other debris.

under the dispenser drawer and not dispense completely. Remove the drawer and inserts and check for build-up of cleaning products **once or twice a month**.

- 1** Remove the detergent dispenser drawer by pulling the drawer straight out until the drawer stops.
- Then gently pull the drawer outward while pressing hard the disengage button.

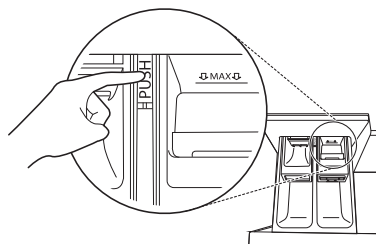

- 2** Remove the build-up of detergent and softener.

- Rinse the drawer and the components of the drawer with warm water to remove the build-up from detergent and softener. Use only water to clean the dispenser drawer. Dry the drawer and the components of the drawer with a soft cloth or towel.

- 3** To clean the drawer opening, use a cloth or small, non-metal brush to clean the recess.

- Remove all residue from the upper and lower parts of the recess.

- 4** Wipe any moisture off the recess with a soft cloth or towel.

- 5** Reassemble the components of the drawer to the proper compartments and insert the drawer.

Cleaning the Dispenser Drawer

Detergent and fabric softener can build up in the dispenser drawer. Liquid detergents can remain

56 MAINTENANCE

Dryer

⚠ WARNING

- Remove the power plug when you clean the appliance. Not removing the plug may result in electric shock.


Cleaning the Lint Filter

⚠ CAUTION

- Clean the lint filter in the proper way referring to the following instructions. Failure to do so, the lint that is accumulated on the heat exchanger may not be cleaned properly.

NOTE

- Unload the all of the laundries from the appliance before pull out the lint filter.
- After cleaning the lint filter insert them in a place. If the lint filter is not in the appliance, you can not operate the appliance.

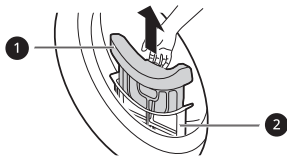

1 Inner Filter

- Always clean the inner filter before and after use.

2 Outer Filter

- Clean the outer filter after drying 10 times or when the lint has accumulated into the outer filter.
- A chime will sound and the  indicator will blink when the lint has accumulated.


Clean the inner filter

- Pull out the inner filter from the outer filter and then open the inner filter.

- Open the filter by unfolding it in the direction of the arrow.



- Clean a large cluster of lint first, then clean the residual lint using vacuum cleaner or washing under running water.

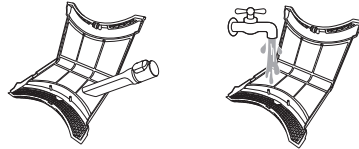


- Dry the filter completely if the filter is moist. Failure to do so, odour may occur in the appliance.

- After drying the inner filter completely, close the filter by pushing down its center.
 - Ensure the left and right side of the inner filter is closed properly.

- Insert the inner filter into the outer filter.

Clean the outer filter


- Remove the dust or lint around the filter inlet.

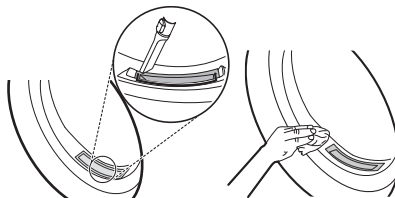

⚠ CAUTION


- When the lint drops into the filter inlet, it may cause degradation of drying performance and increase in drying time.

- 2 Pull out the outer filter.
- 3 Remove the inner filter.
- 4 Open the outer filter by unfolding in the direction of the arrow grasping the top edge of the outer filter.
- 5 Clean the residual lint using vacuum cleaner or washing under running water.

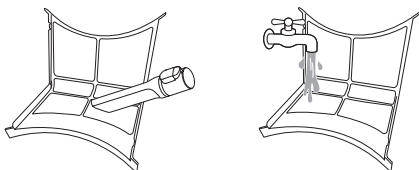

- Dry the filter completely if the filter is moist. Failure to do so, odour may occur in the appliance.

- 6 Close them, and reinsert the both lint filters.

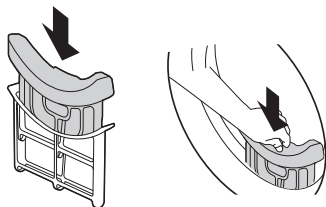


⚠ CAUTION

- Do not load or remove any clothes when the lint filter is not in a place. The clothes can drop into the filter inlet and it may cause the appliance to malfunction.

regularly to remove any build-up of lime scale on the surface of the sensor.

Wipe the sensors inside the drum.

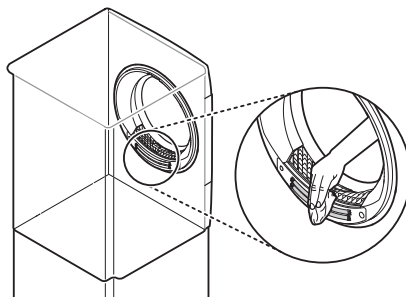

⚠ CAUTION

- Do not wipe the moisture sensor with abrasive materials. Always clean the sensor with a dry rough acrylic sponge.

Using Drum Clean Feature

With time and use, the appliance may form unpleasant odours that leave your clothes smelling after drying. Using this cleaning function periodically helps to reduce the unpleasant odours from the appliance.

⚠ CAUTION

- Remove all of the clothes from the appliance.

- 1 Turn on the appliance.
- 2 Press the **Drum Care** button.
- 3 Hold the **Start/Pause** button.
 - This function operates for about 3 hours.

- 4 Open the dryer's door to provide the appliance with enough air circulation for exhausting any remaining odours.

Wiping the Moisture Sensor

This device senses the moisture level of the clothes during operation, which means it must be cleaned

58 MAINTENANCE

⚠ WARNING

- For safety reasons, do not allow children or animals to enter the appliance. It may cause damage or injury.


Using Condenser Clean Feature

The appliance washes lint, which builds up onto the surface of the condenser, automatically using water that is condensed from the clothes during operation. However, you can clean the condenser manually if you want to clean it more often.


⚠ CAUTION

- Remove all of the clothes from the appliance.


- 1 Open the dryer's door and pull out both inner and outer filter.

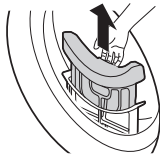

- 2 Pour 1 litre of clean water slowly into the entrance.
 - Do not pour the water quickly as it will spill out.
 - Pouring more than 1.5 litres of water into the compartment will cause water to leak back out.

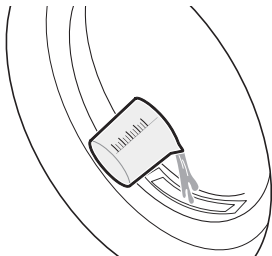

- 3 Reinsert both inner and outer filter and close the dryer's door.

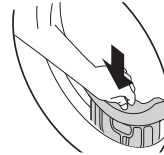

- 4 Turn on the appliance.
- 5 Press the **Condenser Care** button.
- 6 Hold the **Start/Pause** button to start the cleaning of the condenser.
 - The cleaning of the condenser proceeds for 1 hour.
- 7 Open the dryer's door to provide the appliance with enough air circulation for more thorough drying of the tub after the cleaning has ended.

⚠ WARNING

- For safety reasons, do not allow children or animals to enter the appliance. It may cause damage or injury.

Thawing out the Appliance

Running thawing mode

- 1 Turn on the appliance. Press and hold the **Drum Care** and **Anti Crease** button at the same time for 3 seconds.

NOTE

- Only **Power** and **Start/Pause** buttons work when the thawing mode is activated.
- It does not allow you to change the thawing time manually.

- To deactivate the thawing mode, turn off the appliance.

- 2 Press the **Start/Pause** button to start the thawing mode.
 - Actual thawing time varies depending on the installation environment such as installation location and ambient temperatures of the appliance.


- 3 Dry the clothes as usual.

Thawing out the appliance manually

- 1 Open the dryer's door and pull out both inner and outer filter.
- 2 Pour 1 litre of hot water at 60 °C into the lint filter compartment and then reinsert the both lint filters.

⚠ CAUTION

- Pouring more than 1.5 litres of water into the compartment will cause water to leak back out.
- Pouring hot water over 60 °C will cause malfunctions to the appliance or burn.

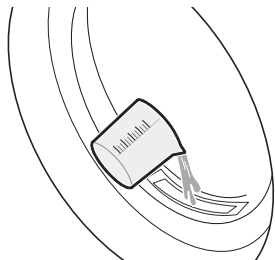

- 3 Turn on the appliance and operate the **Cotton** programme about for 30 seconds. Then wait about 30 minutes.

- 4 Operate the **Cotton** programme again. Check if the message will appear within 10 minutes after operating the appliance.

- When the message appears go to step 2 and repeat procedure.
- Nothing appears on the display when the thawing is done.

- 5 Dry the clothes as usual.

60 TROUBLESHOOTING

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to LG Electronics service centre.

Washer

Error Messages

Symptoms	Possible Cause & Solution
IE INLET ERROR	Water supply is not adequate in that location. Water does not enter appliance or it enters slowly. Check another tap in the house.
	Water supply tap is not completely open. Water does not enter the appliance or it enters slowly. Open fully tap.
	Water supply hose(s) are kinked. Straighten hose or reinstall the water inlet hose
	The filter of the supply hose(s) are clogged. Check and clean the inlet valve filter after turning off the taps and removing the hose connections to the washing machine.
UE UNBALANCE ERROR	The appliance has a system which detects and corrects the unbalance of the appliance. The clothes may be too wet at the end of the cycle, rearrange the load to allow proper spinning. Close the door and press Start/Pause button. It may take a few moments before the appliance begins to spin. The door must be locked before spin can be achieved.
	Load is too small. This system may stop spinning or even interrupt the spin cycle altogether if individual heavy articles (e.g. bath mat, bath robe, etc.) are loaded. Add 1 or 2 similar items or smaller articles of clothes to help balance the load. Close the door and press Start/Pause button. It may take a few moments before the appliance begins to spin. The door must be locked before spin can be achieved.
OE WATER OUTLET ERROR	Drain hose is kinked or clogged. Water in the appliance does not drain or drains slowly. Clean and straighten the drain hose.
	The drain filter is clogged. Check and clean the drain filter.

Symptoms	Possible Cause & Solution
dE 1/dE2 DOOR ERROR	Door is open. - Close the door and make sure that nothing is caught under the door preventing it from closing completely. Door sensor malfunctions. - Close the door. Please call LG service centre. You can find your local LG service centre phone number in the warranty card.
EE CONTROL ERROR	This is a control error. Unplug the power plug and call for service.
LE MOTOR LOCKED ERROR	Over load in motor. Let the appliance wait for 30 minutes until the motor is cooled down and then, restart the cycle.
FE OVERFLOW ERROR	Water overfills due to a possible faulty water valve. Close the water tap. Unplug the power plug. Call for service.
PE PRESSURE SENSOR ERROR	Water level sensor malfunctions. Close the water tap. Unplug the power plug. Call for service.
JS VIBRATION SENSOR ERROR	Vibration sensor malfunctions. Call for service.
FF FROZEN FAILURE	Is supply/drain hose or drain pump frozen? Supply warm water into the drum in order to unfreeze the drain hose and the drain pump. Cover the supply hose with wet and warm towel.
RE WATER LEAKAGE	Water leaks. Call for service.
PF POWER FAILURE	Power failure or inadequate electrical service may have occurred during operation. Press the Start/Pause button to restart the cycle.

Noises You Might Hear

Symptoms	Possible Cause & Solution
Rattling and clanking noise	Foreign objects, such as keys, coins, or safety pins may be in the drum. Stop the appliance, check the drum for foreign objects. If the noise continues after the appliance is restarted, call for service.
Thumping sound	Heavy clothes may produce a thumping sound. This is usually normal. If the sound continues, the appliance is probably out of balance. Stop and redistribute the clothes.

62 TROUBLESHOOTING

Symptoms	Possible Cause & Solution
Thumping sound	The clothes may be out of balance. Pause the programme and redistribute the clothes after the door unlocks.
Vibrating noise	Package materials are not removed. Remove package materials.
	The clothes may be unevenly distributed in the drum. Pause the programme and redistribute the clothes after the door unlocks.
	Not all levelling feet are resting firmly and evenly on the floor. See the Levelling the Appliance instruction to adjust the levelling of the appliance.
	Floor not rigid enough. Check if the floor is solid and does not flex. See the Installation Place Requirements to select the proper location.

Operation

Symptoms	Possible Cause & Solution
Water is leaking.	House drain pipes are clogged. Unclog waste pipes. Contact plumber if necessary.
	Leakage is caused by improper installation of drain hose or clogged drain hose. Clean and straighten the drain hose. Check and clean the drain filter regularly.
	Drain pump filter cap is not fitted correctly. Refit the drain pump filter.
Appliance does not operate.	Control panel has powered off due to inactivity. This is normal. Press the Power button to turn the appliance on.
	Appliance is unplugged. Make sure that the cord is plugged securely into a working outlet.
	Water supply is turned off. Turn the water supply tap completely.
	Controls are not set properly. Make sure that the programme is correctly set. Close the door and press the Start/Pause button.
	Door is open. Close the door and make sure that nothing is caught under the door preventing it from closing completely.

Symptoms	Possible Cause & Solution
Appliance does not operate.	Circuit breaker/fuse is tripped/blown. Check house circuit breakers/fuses. Replace fuses or reset breaker. The appliance should be on a dedicated branch circuit. The appliance will resume the programme where it stopped once power is restored.
	Control needs to be reset. Press the Power button, then reselect the desired programme and press the Start/Pause button.
	Start/Pause was not pressed after a programme was set. Press the Power button, then reselect the desired programme and press the Start/Pause button. The appliance is turned off if the Start/Pause button is not pressed within a certain time.
	Extremely low water pressure. Check another tap in the house to make sure that household water pressure is adequate.
	Appliance is heating the water or making steam. The drum may stop operating temporarily during certain cycles, while water is safely heated to a set temperature.
Buttons may not function properly.	The Child Lock option is activated. Deactivate the Child Lock option if necessary.
Door does not open.	The door cannot be opened for safety reasons once the appliance starts. This is normal. You can safely open the door after  turns off.
Appliance is not filling properly.	Inlet filter clogged. Make sure the inlet filters on the fill valves are not clogged.
	Inlet hoses may be kinked. Check that inlet hoses are not kinked or clogged.
	Insufficient water supply. Make sure that both hot and cold water taps are turned on all the way.
	Hot and cold supply hoses are reversed. Check supply hose connections.
Appliance does not drain water.	Kinked drain hose. Ensure that the drain hose is not kinked.
	Drain located higher than 1.2 m above the floor. Make sure that the drain hose is no higher than 1.2 m above the bottom of the appliance.
Detergent is not dispensed incompletely or not dispensed at all.	Too much detergent is used. Follow the guidelines provided by the detergent manufacturer.

64 TROUBLESHOOTING

Symptoms	Possible Cause & Solution
Detergent is not dispensed incompletely or not dispensed at all.	Drain Pump Filter may be blocked. • Clean the Drain filter.
Cycle time is longer than usual.	The load is too small. • Add more items to allow the appliance to balance the loads.
	Heavy articles are mixed with lighter items. • Always try to wash articles with similar weight in order to allow the appliance to evenly distribute the weight of the load for spinning.
	The load is out of balance. • Manually redistribute the load if articles have become tangled.
Cycle end is delayed.	Unbalance is detected or suds removing programme is on. • This is normal. The time remaining shown on the display is only an estimated duration. Actual time may vary.

Performance

Symptoms	Possible Cause & Solution
Poor stain removal	Previously set stains. Articles that have been previously washed may have stains which have been set. These stains may be difficult to remove and may require hand washing or pre-treating to aid in stain removal.
Staining	Bleach or softener is dispensed too soon. - Dispenser compartment is overfilled. It makes bleach or softer dispensed rapidly. Always measure bleach or softener to prevent overfilling. - Close the detergent dispenser slowly.
	Bleach or softener was added directly to the clothes in the drum. Always use the detergent dispenser to ensure that bleach or softener is properly dispensed at the right time in the programme.
	Clothes were not properly sorted. - Always wash dark colours separately from light colours and whites to prevent discoloration. - Never wash heavily soiled items with lightly soiled items.
Wrinkling	Appliance is not unloaded promptly. Always remove items from the appliance as soon as the programme is complete.
	Appliance is overloaded. The appliance can be fully loaded, but the drum should not be tightly packed with items. The door of the appliance should be closed easily.
	Hot and cold water supply hoses are reversed. Hot water rinse can set wrinkles in garments. Check the supply hose connections.
	Spin speed may be too high. Set the spin speed to suit the garment type.

66 TROUBLESHOOTING

Odour

Symptoms	Possible Cause & Solution
Musty or mildewy odour in appliance	Inside of drum is not cleaned properly. • Run the Tub Clean function regularly.
	Odours can occur if the drain hose is not properly installed, causing siphoning (water flowing back inside of the appliance). • When installing the drain hose, make sure that it does not get kinked or blocked.
	If the detergent dispenser is not cleaned regularly, odours can occur from mold or foreign substances. • Remove and clean the detergent dispenser, especially the top and bottom of the dispenser's opening.

Dryer

Error Messages

ENGLISH

Symptoms	Possible Cause & Solution
dE 1 / dE2 DOOR ERROR	The door has been opened while the appliance is in operation or the appliance is being operated without the door being closed properly. - Close the door completely. - If dE 1 / dE2 is not released, call for service.
dE4 DOOR ERROR	Door switch detection is not working properly. Unplug the power plug and call for service.
EE 1 / EE2 / EE3 / EE4 TEMPERATURE ERROR	Temperature Sensor has malfunctioned. Unplug the power plug and call for service.
FI TEMPERATURE ERROR	The temperature inside the drum has risen suddenly. Unplug the power plug and call for service.
LE 1 MOTOR LOCKED ERROR	The motor has stopped suddenly. - Check if the amount of clothes exceeds the maximum load capacity. - Unplug the power plug and call for service.
LE2 / RE COMPRESSOR ERROR	The compressor has stopped suddenly. Unplug the power plug and call for service.
LE3 FAN MOTOR LOCKED ERROR	The drying fan has stopped suddenly. Unplug the power plug and call for service.
DE DRAIN PUMP ERROR	The drain pump motor has malfunctioned. Unplug the power plug and call for service.
	The surrounding temperature for installation is below zero. The recommended surrounding temperature for installation is 5 - 35 °C.
IF NONE LINT FILTER ERROR	The lint filter is not in the appliance. Insert the lint filter.
[] <-> End	Indicates that the dryer is paused or the dryer's drum rotates periodically. Turn off the appliance and unload the all of the laundries from the appliance.

68 TROUBLESHOOTING

Operation

Symptoms	Possible Cause & Solution
Appliance will not turn on.	Power cord is not properly plugged in. Make sure that the power plug is securely plugged into a grounded outlet matching the appliance's rating plate.
	House fuse is blown, circuit breaker has tripped, or power outage has occurred. Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.
Appliance does not heat.	House fuse is blown, circuit breaker has tripped, or power outage has occurred. Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.
Water leaks.	The optional drain hose is not connected correctly. Connect the optional drain hose correctly.
	The door is closed while clothes or foreign substance is caught in the door. Check if clothes or foreign substance is caught in the door before using the appliance. If water leaks continuously, contact the LG Electronics Customer Information Centre.
Appliance runs and pauses by itself after the drying cycle finishes.	This is how the anti crease option works. Make sure that the anti crease option has been set. The option is designed to prevent creases that are formed when the clothes are not unloaded promptly after the drying cycle. When the option is set, the appliance runs for 10 seconds and pauses for 5 minutes. The option is works for up to 2 hours.

Performance

Symptoms	Possible Cause & Solution
Clothes take too long to dry.	Load is not properly sorted. Separate heavy items from lightweight items. Larger and heavier items take longer to dry. Light items in a load with heavy items can fool the sensor because the light items dry faster.
	Large load of heavy fabrics. Heavy fabrics take longer to dry because they tend to retain more moisture. To help reduce and maintain more consistent drying times for large and heavy fabrics, separate these items into smaller loads of a consistent size.

Symptoms	Possible Cause & Solution
Clothes take too long to dry.	Appliance controls are not set properly. Use the appropriate control settings for the type of load you are drying. Some loads may require an adjustment of the dry level setting for proper drying.
	Lint filter needs to be cleaned. Remove the lint from the lint filter after every cycle. With the lint removed, hold the lint filter up to a light to see if it is dirty or clogged. With some loads that produce high amounts of lint, such as new bath towels, it may be necessary to pause the cycle and clean the filter during the cycle.
	House fuse is blown, circuit breaker has tripped, or power outage has occurred. Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.
	Appliance is overloaded. Divide extra large loads into smaller loads for better drying performance and efficiency.
Drying time is not consistent.	Heat settings, load size, or dampness of clothing is not consistent. The drying time for a load will vary depending on the type of heat used (electric), the size of the load, the type of fabrics, the wetness of the clothes, and lint filter. Even an unbalanced load in the appliance can cause poor spinning, resulting in wetter clothes which will take longer to dry.
Greasy or dirty spots are left on clothes.	Fabric softener is used incorrectly. When washing clothes that are to be dried in the appliance, use the correct amount of fabric softener as recommended by the manufacturer of the fabric softener.
	Clean and dirty clothes are being dried together. Use the appliance to dry only clean items. Soil from dirty clothes can transfer to the clean clothes in the same or later loads.
	Clothes were not properly cleaned or rinsed before being placed in the appliance. Stains on dried clothes could be stains that were not removed during the washing process. Make sure that clothes are being completely cleaned or rinsed according to the instructions for your washing machine and detergent. Some difficult soils may require pre-treating prior to washing.
Clothes are wrinkled.	Clothes have dried too long (overdried). Over drying a load of clothes can lead to wrinkled clothes. Try a shorter drying time.
	Clothes have been left in the appliance for too long after cycle ends. Use the Anti Crease option.

70 TROUBLESHOOTING

Symptoms	Possible Cause & Solution
Clothes are shrinking.	Garment care instructions are not being followed. To avoid shrinking your clothes, always consult and follow fabric care instructions. Some fabrics will naturally shrink when washed. Other fabrics can be washed but will shrink when dried in the appliance. Use a low or no heat setting.
Lint is left on clothes.	Lint filter has not been cleaned properly. Remove the lint from the lint filter after every cycle. With the lint removed, hold the lint filter up to a light to see if it is dirty or clogged. If it looks dirty, follow the cleaning instructions. With some loads that produce high amounts of lint, it may be necessary to clean the lint filter during the cycle.
	Clothes have not been sorted properly. Some fabrics are lint producers (i.e., a fuzzy white cotton towel) and should be dried separately from clothes that are lint trappers (i.e., a pair of black linen pants).
	Appliance is overloaded. Divide extra large loads into smaller loads for drying.
	Tissue, paper, etc., has been left in pockets. Check pockets thoroughly before drying clothes.
Excess static in clothes after drying.	Clothes have dried for too long (overdried). Overdrying a load of clothes can cause a buildup of static electricity. Adjust settings and use a shorter drying time.
	Drying synthetics, permanent press, or synthetic blends. These fabrics are naturally more prone to static buildup. Try using fabric softener, or use shorter Timed Drying time settings.
Clothes have damp spots after a Dry programme.	Very large load or very small load. Single large item such as a blanket or comforter. - If items are too tightly packed or too sparse the sensor may have trouble reading the dryness level of the load. Use a Timed Drying programme for very small loads. - Large, bulky items such as blankets or comforters can sometimes wrap themselves into a tight ball of fabric. The outside layers will dry and register on the sensors, while the inner core remains damp. When drying a single bulky item, it may help to pause the cycle once or twice and rearrange the item to unwrap and expose any damp areas. - To dry a few remaining damp items from a very large load or a few damp spots on a large item after a Dry programme has completed, empty the lint filter, then set a Timed Drying programme to finish drying the item(s).

Common



Wi-Fi

ENGLISH

Symptoms	Possible Cause & Solution
Your home appliance and smartphone are not connected to the Wi-Fi network.	The password for the Wi-Fi that you are trying to connect to is incorrect. Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG ThinQ.
	Mobile data for your smartphone is turned on. Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network.
	The wireless network name (SSID) is set incorrectly. The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters).
	The router frequency is not 2.4 GHz. Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your internet service provider or the router manufacturer.
	The distance between the appliance and the router is too far. If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.





Memo



مذكرة



مذكرة



الأعراض	السبب المحتمل والحل
الكهرباء الساكنة الزائدة في الملابس بعد التجفيف.	تجفيف المواد التركيبية أو الطبعة الدائمة أو الخلطات الاصطناعية. • هذه الأقمشة هي بطبيعة الحال أكثر عرضة لتراكم الكهرباء الساكنة. جرب استخدام منعم الأقمشة، أو استخدم إعدادات وقت التجفيف الأقصر.
الملابس بها بقع رطبة بعد برنامج جاف.	حمولة كبيرة جدًا أو حمولة صغيرة جدًا. قطعة واحدة كبيرة مثل بطانية أو لحاف. • إذا كانت العناصر معبأة بإحكام شديد أو متناثرة جدًا، فقد يواجه المستشعر مشكلة في قراءة مستوى جفاف الحمولة. استخدم برنامج تجفيف مؤقت للأحمال الصغيرة جدًا. • يمكن للأشياء الكبيرة الضخمة مثل البطانيات أو الألفحة أن تلف نفسها في بعض الأحيان في كرة مكدسة من القماش. سوف تجف الطبقات الخارجية وتتسجل على المستشعرات، بينما يبقى الجزء الداخلي رطبًا. عند تجفيف قطعة واحدة كبيرة الحجم، قد يكون من المفيد إيقاف الدورة مؤقتًا مرة أو مرتين وإعادة ترتيب العنصر لفك وكشف أي مناطق رطبة. • لتجفيف القليل من العناصر الرطبة المتبقية من حمولة كبيرة جدًا أو بضع نقاط رطبة على قطعة كبيرة بعد اكتمال برنامج التجفيف، أفرغ مرشح الوبر، ثم اضبط برنامج التجفيف المؤقت لإنهاء تجفيف العنصر (العناصر).

شائع

Wi-Fi

الأعراض	السبب المحتمل والحل
جهازك المنزلي أو هاتفك الذكي غير متصل بشبكة Wi-Fi.	كلمة المرور للاتصال بشبكة Wi-Fi التي تحاول الاتصال بها غير صحيحة. • اعثر على شبكة Wi-Fi المتصلة بهاتفك الذكي ثم قم بإزالة الجهاز، بعد ذلك سجل جهازك على LG ThinQ.
	بيانات الهاتف المحمول في هاتفك الذكي مُفَعَّلة. • أوقف بيانات الهاتف المحمول على هاتفك الذكي وسجل الجهاز باستخدام شبكة Wi-Fi.
	لم يتم إعداد اسم الشبكة اللاسلكية (SSID) بشكل صحيح. • يجب أن يكون اسم الشبكة اللاسلكية (SSID) مكونًا من أحرف وأرقام باللغة الإنجليزية. (لا تستخدم رموزاً خاصة).
	تردد جهاز التوجيه ليس 2.4 غيغا هرتز. • يتم دعم جهاز التوجيه بتردد 2.4 غيغا هرتز فقط. اضبط جهاز التوجيه اللاسلكي على 2.4 غيغا هرتز ثم وصل الجهاز بجهاز التوجيه اللاسلكي. للتحقق من تردد جهاز التوجيه، راجع مزودي خدمة الإنترنت الخاص بك أو مصنع جهاز التوجيه.
	المسافة بين الجهاز وجهاز التوجيه أبعد من اللازم. • إذا كانت المسافة بين الجهاز وجهاز التوجيه أبعد من اللازم، قد تكون الإشارة ضعيفة وقد يتعذر تكوينه بشكل صحيح. انقل جهاز التوجيه من مكانه حتى يصبح أقرب إلى الجهاز.

استكشاف الأعطال وإصلاحها 65

الأعراض	السبب المحتمل والحل
تستغرق الملابس وقتًا طويلاً حتى تجف.	• الجهاز محمل بشكل مفرط. • قسم الحملات الكبيرة جدًا إلى حملات أصغر للحصول على أداء وكفاءة تجفيف أفضل.
وقت التجفيف غير ثابت.	• إعدادات الحرارة أو حجم الحملات أو رطوبة الملابس غير متسقة. • يختلف وقت التجفيف للحملات اعتمادًا على نوع الحرارة المستخدمة (الكهربائية)، وحجم الحملات، ونوع الأقمشة، وبلل الملابس، وفلتر الوبر. حتى الحملات غير المتوازنة في الجهاز يمكن أن تسبب ضعف دوران، مما ينتج عنه ملابس أكثر رطوبة والتي تستغرق وقتًا أطول حتى تجف.
تترك بقع دهنية أو متسخة على الملابس.	• استخدام منعم الأقمشة بشكل غير صحيح. • عند غسل الملابس التي سيتم تجفيفها في الجهاز، استخدم الكمية الصحيحة من منعم الملابس على النحو الموصى به من قبل الشركة المصنعة لمنعم الأقمشة.
	• يتم تجفيف الملابس النظيفة والمتسخة معًا. • استخدم الجهاز لتجفيف الملابس النظيفة فقط. يمكن أن تنتقل الأتربة من الملابس المتسخة إلى الملابس النظيفة في نفس الحملات أو الحملات اللاحقة.
	• لم يتم تنظيف الملابس أو شطفها بشكل صحيح قبل وضعها في الجهاز. • يمكن أن تكون البقع الموجودة على الملابس الجافة عبارة عن بقع لم يتم إزالتها أثناء عملية الغسيل. تأكد من تنظيف الملابس أو شطفها تمامًا وفقًا لتعليمات الغسالة والمنظفات. قد تتطلب بعض أنواع التربة الصعبة معالجة مسبقة قبل الغسيل.
الملابس مجمدة.	• جفت الملابس لفترة طويلة جدًا (جافة جدًا). • قد يؤدي الإفراط في تجفيف حملات الملابس إلى تجعد الملابس. جرب زمن تجفيف أقصر.
	• تركزت الملابس في الجهاز لفترة طويلة جدًا بعد انتهاء الدورة. • استخدم خيار ضد التجاعيد.
الملابس انكمشت.	• لا يتم اتباع تعليمات العناية بالملابس. • لتجنب انكماش ملابسك، استشر دائمًا واتبع تعليمات العناية بالأقمشة. تنكمش بعض الأقمشة بشكل طبيعي عند غسلها. يمكن غسل الأقمشة الأخرى لكنها ستتنكمش عند تجفيفها في الجهاز. استخدم إعداد حرارة منخفضة أو معدومة.
الوبر متبقي على الملابس.	• لم يتم تنظيف فلتر الوبر بشكل صحيح. • قم بإزالة الوبر من فلتر الوبر بعد كل دورة. بعد إزالة الوبر، أمسك فلتر النسالة حتى يصل إليه ضوء لثري ما إذا كان متسخًا أو مسدودًا. إذا بدا متسخًا، فاتبع تعليمات التنظيف. مع بعض الحملات التي تنتج كميات كبيرة من الوبر، قد يكون من الضروري تنظيف فلتر الوبر أثناء الدورة.
	• لم يتم فرز الملابس بشكل صحيح. • بعض الأقمشة منتجة للوبر (أي، منشقة قطنية ببيضاء زغبة) ويجب تجفيفها بشكل منفصل عن الملابس التي تلتقط الوبر (أي زوج من السراويل الكتانية السوداء).
	• الجهاز محمل بشكل مفرط. • قسم الحملات الكبيرة جدًا إلى حملات أصغر للتجفيف.
	• تم ترك المناديل الورقية وغيرها في الجيوب. • افحص الجيوب جيدًا قبل تجفيف الملابس.
الكهرباء الساكنة الزائدة في الملابس بعد التجفيف.	• جفت الملابس لفترة طويلة جدًا (جافة جدًا). • يمكن أن يتسبب الإفراط في تجفيف الملابس في تراكم الكهرباء الساكنة. اضبط الإعدادات واستخدم وقت تجفيف أقصر.

الأعراض	السبب المحتمل والحل
الجهاز لا يشغل.	تم تفجير مصهر المنزل أو تعطل قاطع التيار أو انقطاع التيار الكهربائي. • أعد ضبط قاطع التيار في الدائرة أو استبدل المصهر. لا تزد من مقدار التيار في المصهر. إذا كانت المشكلة هي الحمل الزائد على الدائرة الكهربائية، فيجب تصحيح ذلك من قبل كهربائي مؤهل.
الجهاز لا يسخن.	تم تفجير مصهر المنزل أو تعطل قاطع التيار أو انقطاع التيار الكهربائي. • أعد ضبط قاطع التيار في الدائرة أو استبدل المصهر. لا تزد من مقدار التيار في المصهر. إذا كانت المشكلة هي الحمل الزائد على الدائرة الكهربائية، فيجب تصحيح ذلك من قبل كهربائي مؤهل.
تسريبات الماء.	خرطوم التصريف الاختياري غير موصل بشكل صحيح. • قم بتوصيل خرطوم التصريف الاختياري بشكل صحيح. يُغلق الباب بينما الملابس أو المواد الغريبة عالقة في الباب. • تحقق مما إذا كانت الملابس أو المواد الغريبة عالقة في الباب قبل استخدام الجهاز. إذا كان الماء يتسرب باستمرار، فاتصل بمركز معلومات عملاء LG Electronics.
يعمل الجهاز ويتوقف من تلقاء نفسه بعد انتهاء دورة التجفيف.	هذه هي الطريقة التي يعمل بها خيار مقاومة التجمد. • تأكد من ضبط خيار مقاومة التجمد. تم تصميم الخيار لمنع التجاعيد التي تتشكل عندما لا يتم تفريغ الملابس على الفور بعد دورة التجفيف. عند ضبط الخيار، يعمل الجهاز لمدة 10 ثوانٍ ويتوقف مؤقتًا لمدة 5 دقائق. يعمل الخيار لمدة تصل إلى 2 ساعات.

الأداء

الأعراض	السبب المحتمل والحل
تستغرق الملابس وقتًا طويلاً حتى تجف.	لم يتم فرز الحمولة بشكل صحيح. • أفضل العناصر الثقيلة عن العناصر الخفيفة. تستغرق العناصر الأكبر والأثقل وقتًا أطول حتى تجف. يمكن أن تخدع العناصر الخفيفة في الحمولة التي تحتوي على أشياء ثقيلة المستشعر لأن العناصر الخفيفة تجف بشكل أسرع. حمولة كبيرة من الأقمشة الثقيلة. • تستغرق الأقمشة الثقيلة وقتًا أطول حتى تجف لأنها تميل إلى الاحتفاظ بمزيد من الرطوبة. للمساعدة في تقليل أوقات التجفيف الأكثر تناسلاً للأقمشة الكبيرة والثقيلة والحفاظ عليها، أفضل هذه العناصر إلى حمولات أصغر ذات حجم ثابت. عناصر التحكم بالجهاز غير محددة بطريقة صحيحة. • استخدم إعدادات التحكم المناسبة لنوع الحمولة التي تجففها. قد تتطلب بعض الحمولات تعديل إعداد المستوى الجاف للتجفيف المناسب. يحتاج فلتر الوبر إلى التنظيف. • قم بإزالة الوبر من فلتر الوبر بعد كل دورة. بعد إزالة الوبر، أمسك فلتر النسالة حتى يصل إليه ضوء لثري ما إذا كان متسخًا أو مسدودًا. مع بعض الحمولات التي تنتج كميات كبيرة من الوبر، مثل مناشف الحمام الجديدة، قد يكون من الضروري إيقاف الدورة مؤقتًا وتنظيف الفلتر أثناء الدورة. تم تفجير مصهر المنزل أو تعطل قاطع التيار أو انقطاع التيار الكهربائي. • أعد ضبط قاطع التيار في الدائرة أو استبدل المصهر. لا تزد من مقدار التيار في المصهر. إذا كانت المشكلة هي الحمل الزائد على الدائرة الكهربائية، فيجب تصحيح ذلك من قبل كهربائي مؤهل.

استكشاف الأعطال وإصلاحها 63

مجفف

رسائل الخطأ

الرمز

الأعراض	السبب المحتمل والحل
dE 1 / dE2 خطأ في الباب	- تم فتح الباب أثناء تشغيل الجهاز أو تشغيل الجهاز دون إغلاق الباب بشكل صحيح. - أغلق الباب بالكامل. - إذا لم يتم تحرير dE 1 / dE2 فاتصل بالخدمة.
dE4 خطأ في الباب	- الكشف عن مفتاح الباب لا يعمل بشكل صحيح. - افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
EE 1 / EE2 / EE3 / EE4 خطأ الحرارة	- تعطل جهاز استشعار الحرارة. - افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
F1 خطأ الحرارة	- ارتفعت درجة الحرارة داخل الحوض فجأة. - افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
LE 1 خطأ توقف المحرك	- توقف المحرك فجأة. - تحقق مما إذا كانت كمية الملابس تتجاوز سعة الحمولة القصوى. - افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
LE2 / RE خطأ في الضاغط	- توقف الضاغط فجأة. - افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
LE3 خطأ توقف محرك المروحة	- توقفت مروحة التجفيف فجأة. - افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
OE خطأ مضخة التصريف	- تعطل محرك مضخة التصريف. - افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.
IF لا يوجد خطأ في فلتر الوبر	- درجة الحرارة المحيطة للتركيب أقل من الصفر. - درجة الحرارة المحيطة الموصى بها للتركيب هي 5 - 35.
End <-> []	- فلتر الوبر ليس في الجهاز. - أدخل فلتر الوبر.
	- يشير إلى أن المجفف متوقف مؤقتًا أو أن حوض المجفف يدور بشكل دوري. - قم بإيقاف تشغيل الجهاز وتفريغ جميع الغسيل من الجهاز.

التشغيل

الأعراض	السبب المحتمل والحل
الجهاز لا يشغل.	- لم يتم توصيل سلك الطاقة بشكل صحيح. - تأكد من توصيل قابس الطاقة بإحكام بمأخذ مؤرض يتوافق مع لوحة تصنيف الجهاز.

الرائحة

الأعراض	السبب المحتمل والحل
تنبعث رائحة عفنة أو كريهة من الجهاز	لم يتم تنظيف حوض الغسل من الداخل بطريقة صحيحة. • قم بتشغيل وظيفة تنظيف الحوض بانتظام.
	قد تنبعث الروائح الكريهة عندما لا يتم تركيب خرطوم التصريف بشكل صحيح، مما يسبب حدوث شفت (ارتجاع الماء مرة أخرى إلى الجهاز). • عند تركيب خرطوم التصريف، احرص على عدم التوائه أو انسداده.
	عند عدم المواظبة على تنظيف موزع المنظفات بانتظام، تنبعث الروائح الكريهة من القالب أو المواد الغريبة. • أخرج موزع المنظفات ونظفه ولاسيما أعلى وأسفل فتحة الموزع.

استكشاف الأعطال وإصلاحها 61

الأداء

الأعراض	السبب المحتمل والحل
إزالة ضعيفة للبقع	محاولة إزالة البقع الصعبة. ربما تكون الأغراض التي تم غسلها سابقًا ملوثة ببقع قاسية. ربما يصعب إزالة هذه البقع وقد يتطلب الأمر غسلها يدويًا أو معالجتها مسبقًا للمساعدة في إزالة البقع.
البقع	يتم توزيع المبيض أو المنعم في وقت مبكر من الدورة. - وحدة الموزع مملوءة بشكل زائد، مما يسبب توزيع المبيض أو المنعم بسرعة. قم دائمًا بمعايرة المبيض لتجنب الملاء المفرط. - أغلق موزع المنظفات بهدوء. تمت إضافة المبيض أو المنعم مباشرة على الملابس في حوض الغسل. - استخدم دائمًا موزع المنظفات لضمان توزيع المبيض أو المنعم بطريقة صحيحة وفي الوقت المناسب أثناء البرنامج. لم يتم فرز الملابس بطريقة صحيحة. - احرص دائمًا على غسل الملابس ذات الألوان الغامقة بشكل منفصل عن الملابس ذات الألوان الفاتحة والبيضاء لتجنب تغيير ألوانها. - لا تقم أبدًا بغسل الأغراض شديدة الاتساخ مع الأغراض قليلة الاتساخ.
تجاعيد الملابس	لا يتم تفريغ حمولة الغسيل بسرعة. - لذا احرص دائمًا على إخراج الأغراض من الجهاز بمجرد اكتمال البرنامج. الجهاز محمل بشكل مفرط. - يمكن وضع الحمولة كاملة في الجهاز، ولكن لا يجب تكديس كمية كبيرة من الأغراض داخل حوض الغسل. ينبغي أن يتم إغلاق باب الغسالة بسهولة. تم عكس خرطومي إمداد الماء الساخن والماء البارد. - يمكن أن يؤدي الشطف بالماء الساخن إلى إحداث كرمشة بالملابس. افحص توصيلات خرطوم الإمداد. قد تكون سرعة الدوران مرتفعة جدًا. - اضبط سرعة الدوران لتلائم نوع الملابس.

الأعراض	السبب المحتمل والحل
لا يتم ملء الجهاز بطريقة صحيحة.	انسداد فلتر الإدخال. • تأكد من أن فلتر إدخال المياه الموجودة عند صمامات الماء غير مسدودة.
	قد تكون خراطيم إدخال المياه ملتوية. • تأكد من عدم التواء أو انسداد خراطيم إدخال المياه.
	إمداد الماء غير كافٍ. • تأكد من فتح صنبوري الماء الساخن والبارد بشكل كامل.
	تم عكس خرطوم إمداد الماء الساخن والماء البارد. • افحص توصيلات خرطوم الإمداد.
لا يقوم الجهاز بتصريف المياه.	خرطوم التصريف ملتوي. • تأكد من أن خرطوم التصريف غير ملتوي.
	وضع خرطوم التصريف على ارتفاع أعلى من 1.2 م فوق سطح الأرضية. • تأكد من عدم وضع خرطوم التصريف على ارتفاع أعلى من 1.2 م من قاعدة الجهاز.
لا يتم توزيع المنظف بشكل كامل أو لا يتم توزيعه على الإطلاق.	استخدام مقدار كبير من المنظف. • اتبع إرشادات جهة تصنيع المنظف.
	قد يكون فلتر مضخة التصريف منسد. • قم بتنظيف فلتر التصريف.
وقت الدورة أطول من المعتاد.	الحمولة صغيرة للغاية. • أضف مزيداً من الأغراض كي يتمكن الجهاز من موازنة الحمولة.
	تم خلط الملابس الثقيلة مع الملابس الخفيفة. • حاول دائماً غسل قطع الملابس ذات الأوزان المتشابهة معاً حتى يتمكن الجهاز من توزيع وزن الحمولة بالتساوي في مرحلة الدوران.
	الحمولة ليست متوازنة. • قم بإعادة توزيع الحمولة يدوياً إذا كانت قطع الملابس متشابكة.
تم إلغاء نهاية الدورة.	تم الكشف عن وجود خلل في التوازن أو تم تشغيل برنامج إزالة رغوة الصابون. • هذا أمر طبيعي، فالوقت المتبقي الظاهر على شاشة العرض ما هو إلا مدة تقديرية. ومن ثم قد يختلف الوقت الفعلي.

استكشاف الأعطال وإصلاحها 59

التشغيل

الأعراض	السبب المحتمل والحل
تسرّب الماء	- انسداد أنابيب التصريف بالمنزل. - أزل العوائق من أنابيب التصريف. اتصل بالسباك إذا لزم الأمر.
حدوث تسريب بسبب التركيب غير الصحيح لخرطوم التصريف أو بسبب انسداده.	قم بتنظيف خرطوم التصريف وتسويفته. افحص فلتر التصريف وقم بتنظيفه بانتظام.
فلتر مضخة التصريف غير مُركَّب بطريقة صحيحة.	أعد تركيب فلتر مضخة التصريف.
الجهاز لا يعمل.	- توقفت لوحة التحكم عن العمل بسبب عدم التفاعل. - هذا أمر طبيعي، اضغط على الزر الطاقة لتشغيل الجهاز.
الجهاز غير متّصل بالتيار الكهربائي.	تأكد من توصيل السلك بأمان في مقبس يعمل.
توقف إمداد الماء.	أدر صنبور المياه بالكامل.
عناصر التحكم غير محدّدة بطريقة صحيحة.	تأكد من أن البرنامج مضبوط بشكل صحيح. أغلق الباب واضغط على الزر بدء/إيقاف مؤقت.
الباب مفتوح.	أغلق الباب وتأكد من عدم انحصار أي من الأغراض تحت الباب مما يمنع من الإغلاق بشكل كامل.
قاطع التيار/المصهر مفصول أو محترق.	افحص قواطع التيار/المصهرات بالمنزل. استبدل المصهرات أو أعد ضبط القاطع. ينبغي تخصيص دائرة كهربائية فرعية خاصة بالجهاز. سيستأنف الجهاز البرنامج من حيث توقف بمجرد استعادة الطاقة.
عنصر التحكم يلزم إعادة ضبطه.	اضغط على زر الطاقة، ثم أعد تحديد البرامج المرغوب فيها واضغط على زر بدء/إيقاف مؤقت.
بدء/إيقاف مؤقت لم يتم الضغط عليه بعد تحديد البرنامج.	اضغط على الزر الطاقة، ثم أعد تحديد البرنامج المطلوب واضغط على الزر بدء/إيقاف مؤقت. سوف يتوقف الجهاز عن التشغيل إذا لم يتم الضغط على الزر بدء/إيقاف مؤقت خلال وقت معين.
ضغط الماء منخفض للغاية.	افحص صنبورًا آخر بالمنزل للتأكد من أن ضغط الماء بالمنزل مناسب.
يسبب الجهاز سخونة الماء أو يحدث بخارًا.	قد يتوقف حوض الغسل عن العمل لفترة مؤقتة خلال دورات معينة حتى يتم تسخين الماء بشكل آمن عند درجة الحرارة المحددة.
الأضرار قد لا تعمل بطريقة صحيحة.	- الخيار قفل لحماية الأطفال قيد التنشيط. - قم بإيقاف تفعيل الخيار قفل لحماية الأطفال عند الحاجة.
الباب لا يُفتح.	- لا يُمكن فتح الباب بمجرد تشغيل الجهاز لأسباب تتعلق بالسلامة. - هذا أمر طبيعي. يمكنك فتح الباب بأمان بعد إيقاف تشغيل .

58 استكشاف الأعطال وإصلاحها

الأعراض	السبب المحتمل والحل
LE خط توقف المحرك	حمولة زائدة على المحرك. • اترك الجهاز لمدة 30 دقيقة حتى يبرد المحرك، ثم أعد تشغيل الدورة.
FE خطا زيادة التدفق	يتدفق الماء نظراً إلى وجود عيب في صمام الماء. • أغلق صنبور المياه. افصل الطاقة عن قابس الطاقة. اتصل بمركز الخدمة.
PE خطا في مستشعر الضغط	تعطل مستشعر منسوب المياه. • أغلق صنبور المياه. افصل الطاقة عن قابس الطاقة. اتصل بمركز الخدمة.
US خطا في مستشعر الاهتزاز	تعطل مستشعر الاهتزاز. • اتصل بمركز الخدمة.
FF خطا بسبب التجمد	هل خرطوم الإمداد/ التصريف، أو مضخة التصريف مجمدة؟ • قم بإضافة ماء دافئ إلى حوض الغسل لفك التجميد الذي يعترض خرطوم التصريف ومضخة التصريف. قم بتغطية خرطوم الإمداد بمنشفة مبللة ودافئة.
RE تسريب الماء	تسريبات الماء. • اتصل بمركز الخدمة.
PF انقطاع التيار الكهربائي	قد يحدث انقطاع للتيار الكهربائي أو ضعف في الخدمة الكهربائية أثناء التشغيل. • اضغط على زر بدء/إيقاف مؤقت لإعادة تشغيل الدورة.

ضوضاء يُحتمل سماعها

الأعراض	السبب المحتمل والحل
صوت الارتجاج والقعقة	قد توجد أجسام غريبة في حوض الغسل مثل المفاتيح أو القطع المعدنية أو دبابيس الأمان. • قم بإيقاف تشغيل الجهاز، وافحص حوض الغسل بحثاً عن أجسام غريبة. إذا استمر صدور صوت الضجيج بعد إعادة تشغيل الجهاز، فاتصل لطلب الخدمة.
الغسالة تصدر صوتاً غير اعتيادي	قد ينتج عن الملابس الثقيلة إصدار صوت غير اعتيادي. هذا أمر طبيعي عادة. • في حالة استمرار إصدار الصوت، فمن المحتمل أن يكون الجهاز مثبتاً بشكل غير متوازن. قم بإيقاف التشغيل وأعد توزيع الملابس. قد تكون الملابس غير متوازنة. • قم بإيقاف تشغيل الدورة مؤقتاً وأعد توزيع الملابس بعد فك قفل الباب.
ضوضاء الاهتزاز	لم تتم إزالة مواد التغليف. • قم بإزالة مواد التغليف. قد تكون الملابس موزعة بشكل غير متساوي في حوض الغسيل. • قم بإيقاف تشغيل الدورة مؤقتاً وأعد توزيع الملابس بعد فك قفل الباب. جميع أرجل الاستواء غير مستقرة على الأرض بالتساوي وغير ثابتة. • انظر إلى تعليمات ضبط مستوى الجهاز لضبط مستواه. الأرض ليست صلبة بما يكفي. • تحقق من صلابة الأرض وعدم لبونتها. انظر متطلبات مكان التركيب لتحديد المكان المناسب لوضع الجهاز.

استكشاف الأعطال وإصلاحها 57

استكشاف الأعطال وإصلاحها

قد يؤدي تشغيل جهازك إلى حدوث أخطاء وأعطال. تحتوي الجداول التالية على الأسباب المحتملة والملاحظات التي تقوم بمعالجة أي رسالة خطأ أو عطل. يُوصى بقراءة الجداول التالية بعناية توفيرًا للوقت والمال الذي قد تنكبه عند التواصل مع مركز خدمة LG Electronics.


غسالة

رسائل الخطأ

الأعراض	السبب المحتمل والحل
IE خطأ في خراطيم الإدخال	إمداد الماء غير كافٍ في هذا الموقع. لا تدخل المياه إلى الجهاز أو تدخل ببطء. • استخدم صنوبرًا آخر في المنزل.
	صنوبر الإمداد بالمياه غير مفتوح بالكامل. لا تدخل المياه إلى الجهاز أو تدخل ببطء. • افتح صنوبر المياه بالكامل.
	خرطوم (خراطيم) الإمداد بالماء ملتو. • قم بتسوية الخرطوم أو أعد تركيب خرطوم إدخال الماء.
	فلتر خرطوم (خراطيم) الإمداد بالماء مسدود. • افحص فلتر صمام الإدخال ونظفه بعد إغلاق الصنابير وإزالة وصلات الخرطوم من الغسالة.
UE خطأ في عدم التوازن	يتميز الجهاز بوجود نظام قادر على اكتشاف حالات عدم التوازن بالجهاز وتصحيحها. • قد تكون الملابس مبللة في نهاية الدورة، لذا قم بإعادة ضبط الحمولية كي يتم الدوران بطريقة صحيحة. قم بإغلاق الباب واضغط على بدء/إيقاف مؤقت. قد يستغرق الأمر لحظات قليلة قبل أن يبدأ الجهاز في الدوران حيث يجب أن يكون الباب مغلقًا قبل بدء الدوران.
	الحمولة صغيرة للغاية. عند تحميل الأغراض الثقيلة الفردية (مثل سجادة الحمام وكراسي الحمام وما إلى ذلك)، قد يؤدي ذلك إلى إيقاف الدوران أو إعاقه دورة الدوران بالكامل. • أضف غرضًا واحدًا أو اثنين متشابهين من أغراض الملابس للمحافظة على توازن الحمولية. قم بإغلاق الباب واضغط على زر بدء/إيقاف مؤقت. قد يستغرق الأمر لحظات قليلة قبل أن يبدأ الجهاز في عملية الدوران. يجب إحكام غلق الباب قبل أن تبدأ الغسالة في الدوران.
OE خطأ في تصريف المياه	خرطوم التصريف ملتو أو مسدود. لا يتم تصريف الماء الموجود في الجهاز أو يتم تصريفه ببطء. • قم بتنظيف خرطوم التصريف وتسويته.
	فلتر التصريف مسدود. • افحص فلتر التصريف وقم بتنظيفه.
dE 1 / dE2 خطأ في الباب	الباب مفتوح. • أغلق الباب وتأكد من عدم انحناس أي من الأغراض تحت الباب مما يمنع من الإغلاق بشكل كامل.
	تعطل جهاز استشعار الباب. • أغلق الباب. يرجى الاتصال بمركز خدمة LG. يُمكن العثور على رقم هاتف مركز خدمة LG المحلي مكتوبًا على بطاقة الضمان.
E E عطل في وحدة التحكم	ثمة عطل في وحدة التحكم. • افصل قابس الطاقة واتصل بمركز الخدمة للحصول على المساعدة.

⚠ تنبيه

- قد يؤدي سكب الماء الساخن بدرجة أكبر من 60 درجة إلى حدوث خلل بالجهاز أو حرقه.

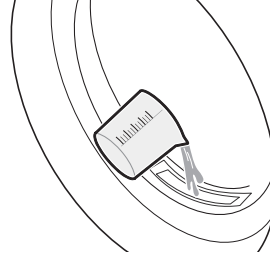

3 قم بتشغيل الجهاز وتشغيل برنامج **القطن** لمدة 30 ثانية تقريبًا. ثم انتظر حوالي 30 دقيقة.

4 قم بتشغيل برنامج **القطن** مرة أخرى. تحقق مما إذا كانت رسالة **UE** ستظهر في غضون 10 دقائق بعد تشغيل الجهاز.

- عندما تظهر رسالة **UE** ، انتقل إلى الخطوة 2 وكرر الإجراء.
- لا يظهر أي شيء على الشاشة عند الانتهاء من الذوبان.

5 جفف الملابس كالمعتاد.

55 الصيانة

⚠ تحذير

- لأسباب تتعلق بالسلامة، لا تسمح للأطفال أو الحيوانات بدخول الجهاز. قد يتسبب ذلك في تلف أو إصابة.

ملاحظة

إذابة الجهاز

تشغيل وضع الذوبان

- 1 قم بتشغيل الجهاز. اضغط مع الاستمرار على زر **العناية بالحوض و ضد التجاعيد** في نفس الوقت لمدة 3 ثوانٍ.

ملاحظة

- تعمل فقط أضرار **الطاقة و بدء/إيقاف مؤقت** عند تنشيط وضع الذوبان.
- لا يسمح لك بتغيير وقت الذوبان يدويًا.
- لإلغاء تنشيط وضع الذوبان، قم بإيقاف تشغيل الجهاز.

- 2 اضغط على زر **بدء/إيقاف مؤقت** لبدء وضع الذوبان.

- يختلف وقت الذوبان الفعلي وفقًا لبيئة التثبيت مثل موقع التثبيت ودرجات الحرارة المحيطة بالجهاز.

- 3 جفف الملابس كالمعتاد.

قم بإذابة الجهاز يدويًا


- 1 افتح باب المجفف واسحب المرشح الداخلي والخارجي.

- 2 اسكب لتراً واحداً من الماء الساخن بدرجة حرارة 60 درجة مئوية في حجرة فلتر الوبر ثم أعد إدخال كلا فلترَي الوبر.

⚠ تنبيه


- سيؤدي سكب أكثر من 1.5 لتراً من الماء في الحجرة إلى تسرب الماء مرة أخرى.

- 1 افتح باب المجفف واسحب المرشح الداخلي والخارجي.

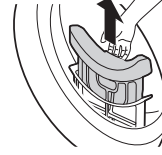


- 2 صب 1 لتر من الماء التنظيف ببطء في المدخل.

- لا تصب الماء بسرعة لأنه سوف ينسكب.
- سيؤدي سكب أكثر من 1.5 لتراً من الماء في الحجرة إلى تسرب الماء مرة أخرى.

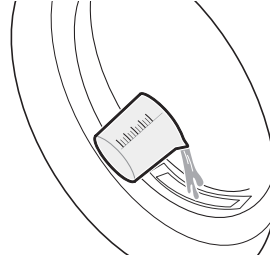

- 3 أعد إدخال المرشح الداخلي والخارجي وأغلق باب المجفف.

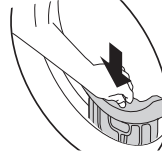

- 4 قم بتشغيل الجهاز.

- 5 اضغط على زر **العناية بالمكثف**.

- 6 استمر في الضغط على زر **بدء/إيقاف مؤقت** لبدء تنظيف المكثف.
 - يستمر تنظيف المكثف لمدة ساعة واحدة.

- 7 افتح باب المجفف لتزويد الجهاز بدورة هواء كافية لتجفيف الحوض بشكل أكثر شمولاً بعد انتهاء التنظيف.

⚠ تنبيه

- لا تسمح لمستشعر الرطوبة بمواد كاشطة. قم دائمًا بتنظيف المستشعر باستخدام إسفنجة جافة من الأكريليك الخشنة.

استخدام ميزة تنظيف الحوض

مع مرور الوقت والاستخدام، قد يشكل الجهاز روائح كريهة تترك رائحة ملابسك بعد التجفيف. يساعد استخدام وظيفة التنظيف هذه بشكل دوري في تقليل الروائح الكريهة من الجهاز.

⚠ تنبيه

- قم بإزالة جميع الملابس من الجهاز.

1 قم بتشغيل الجهاز.

2 اضغط على الزر العناية بالحوض.

3 اضغط مع الاستمرار على زر بدء/إيقاف مؤقت.

- تعمل هذه الوظيفة لمدة 3 ساعات تقريبًا.

4 افتح باب المجفف لتزويد الجهاز بدورة هواء كافية لاستنفاد أي روائح متبقية.

⚠ تحذير

- لأسباب تتعلق بالسلامة، لا تسمح للأطفال أو الحيوانات بدخول الجهاز. قد يتسبب ذلك في تلف أو إصابة.


استخدام ميزة تنظيف المعوض

يقوم الجهاز بغسل الوبر، الذي يتراكم على سطح المكثف، تلقائيًا باستخدام الماء المتكثف من الملابس أثناء التشغيل. ومع ذلك، يمكنك تنظيف المكثف يدويًا إذا كنت ترغب في تنظيفه كثيرًا.

⚠ تنبيه


- قم بإزالة جميع الملابس من الجهاز.

5 نظف الوبر المتبقي باستخدام مكنسة كهربائية أو الغسيل تحت الماء الجاري.

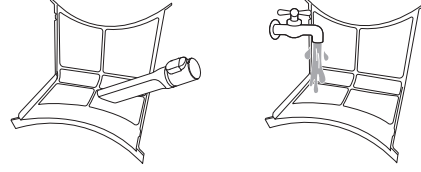

- جفف الفلتر تمامًا إذا كان الفلتر رطبًا. في حالة عدم القيام بذلك، قد تظهر رائحة في الجهاز.


6 أغلقهما وأعد إدخال كلا فلترَي الوبر.

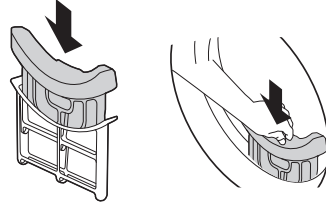**⚠ تنبيه**

- لا تقم بجمع أو إزالة أي ملابس عندما لا يكون فلتر الوبر في مكانه. يمكن أن تتساقط الملابس في مدخل الفلتر وقد يتسبب ذلك في تعطل الجهاز.

مسح مستشعر الرطوبة

يستشعر هذا الجهاز مستوى رطوبة الملابس أثناء التشغيل، مما يعني أنه يجب تنظيفها بانتظام لإزالة أي تراكم لمقياس الجبر على سطح المستشعر. امسح المستشعرات داخل الحوض.

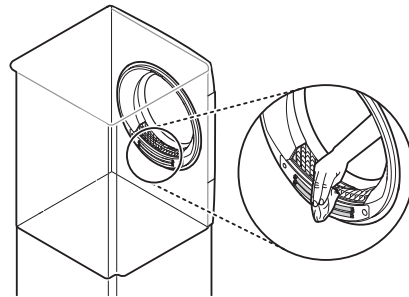


الصيانة 53

مجفف

2

نظف مجموعة كبيرة من الوبر أولاً، ثم نظف الوبر المتبقي باستخدام المكنتسة الكهربائية أو الغسيل تحت الماء الجاري.

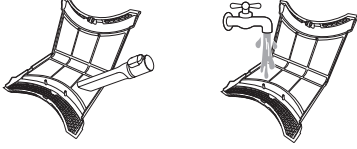

نظف

• جفف الفلتر تمامًا إذا كان الفلتر رطبًا. في حالة عدم القيام بذلك، قد تظهر رائحة في الجهاز.

3

بعد تجفيف الفلتر الداخلي تمامًا، أغلق الفلتر بالضغط على مركزه. تأكد من إغلاق الجانب الأيسر والأيمن من الفلتر الداخلي بشكل صحيح.


4

أدخل الفلتر الداخلي في الفلتر الخارجي.

قم بتنظيف الفلتر الخارجي

1

قم بإزالة الغبار أو الوبر حول مدخل الفلتر.

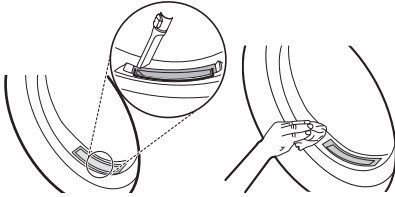

تنبيه

• عندما يسقط الوبر في مدخل الفلتر، فقد يتسبب ذلك في تدهور أداء التجفيف وزيادة وقت التجفيف.

2

اسحب الفلتر الخارجي.

3

قم بإزالة الفلتر الداخلي.

4

افتح الفلتر الخارجي عن طريق فتحه في اتجاه السهم الذي يمسك بالحافة العلوية للفلتر الخارجي.

تحذير

• يجب نزع قابس الطاقة عند تنظيف الجهاز. قد يؤدي عدم نزع القابس إلى حدوث صدمة كهربائية.


تنظيف فلتر الوبر

تنبيه

• قم بتنظيف فلتر الوبر بالطريقة الصحيحة بالرجوع إلى التعليمات التالية. في حالة عدم القيام بذلك، قد لا يتم تنظيف الوبر المتراكم على المبادل الحراري بشكل صحيح.

ملاحظة

• قم بتفريغ جميع الغسيل من الجهاز قبل سحب فلتر الوبر.
• بعد تنظيف فلتر الوبر، أدخلهم في مكان. إذا لم يكن فلتر الوبر في الجهاز، فلا يمكنك تشغيل الجهاز.

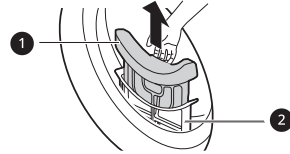

1 الفلتر الداخلي

• قم دائمًا بتنظيف الفلتر الداخلي قبل الاستخدام وبعده.

2 الفلتر الخارجي

• نظف الفلتر الخارجي بعد التجفيف 10 مرات أو بعد تراكم الوبر في الفلتر الخارجي.

• سيصدر صوت رنين وسيومض المؤشر عندما يترك الوبر.

قم بتنظيف الفلتر الداخلي

1

اسحب الفلتر الداخلي من الفلتر الخارجي ثم افتح الفلتر الداخلي.

• افتح الفلتر عن طريق فتحه في اتجاه السهم.



4 امسح أي رطوبة في التجويف باستخدام قطعة قماش ناعمة أو فوطة.

5 قم بإعادة تجميع أجزاء الدرج بوضعها في الأماكن المخصصة لها ثم أدخل الدرج.

4 بعد تنظيف فلتر مضخة التصريف، أعد إدخال الفلتر بعناية وثبت غطاء التصريف في اتجاه عقارب الساعة بحذر لتجنب تشابك الخيوط والتصريف. أعد إدخال السدادة في أنبوب التصريف ثم ضع الأنبوب في حامله.

5 أغلق غطاء الغلاف.


⚠ تنبيه

- احتسرس عند التصريف حيث إن الماء قد يكون ساخناً.
- شغل برنامج تنظيف حوض الغسل مرة واحدة في الشهر (أو أكثر من مرة حسب الحاجة) وذلك لإزالة المواد المتراكمة من المنظف والمخلفات الأخرى.

تنظيف درج الموزع

قد يتراكم المنظف ومنعم القماش في درج الموزع. يمكن أن يظل المنظف السائل تحت درج الموزع ولا يتم تصريفه كلياً. أزل الدرج والملحقات وتحقق إذا كان هناك أجزاء متراكمة من منتجات التنظيف مرة أو مرتين في الشهر.

- 1 أخرج درج موزع المنظف عن طريق سحبه إلى الخارج بشكل مستقيم حتى يتوقف.
 - ثم اسحب الدرج إلى الخارج بلطف أثناء الضغط بشدة على زر الفصل.

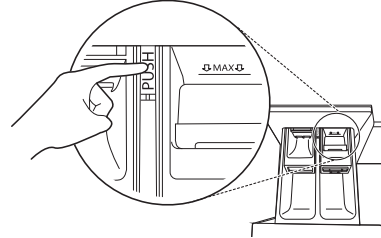


- 2 قم بإزالة المواد المتراكمة من المنظف ومنعم القماش.
 - اشطف الدرج والأجزاء الخاصة به باستخدام الماء الدافئ لإزالة المواد المتراكمة من المنظف ومنعم القماش. استخدم الماء فقط في تنظيف الدرج الموزع. جفف الدرج والأجزاء الخاصة به باستخدام قطعة قماش ناعمة أو منشفة.

- 3 لتنظيف فتحة الدرج، استخدم قطعة قماش أو فرشاة غير معدنية صغيرة لتنظيف التجويف.
 - أزل جميع الرواسب من الأجزاء العلوية والسفلية للتجويف.

الصيانة 51

2 أزل مصفاة المياه المُدخلة باستخدام زرادية صغيرة ثم نظف المصفاة باستخدام فرشاة أسنان ذات شعيرات متوسطة.

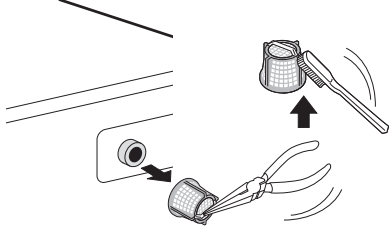


تنظيف فلتر مضخة التصريف والقيام بالتفريغ الطارئ للماء

يلتقط فلتر التصريف الخيوط والأجسام الصغيرة المتبقية في الملابس بشكل عرضي. تحقق بانتظام من نظافة الفلتر كل ستة أشهر لضمان التشغيل السلس لجهازك.


اترك الماء حتى يبرد قبل تنظيف فلتر مضخة التصريف. افتح الباب في حالة الطوارئ أو التفريغ الطارئ للماء.

1 افصل الجهاز عن مصدر الطاقة.

2 افتح غطاء الغلاف ثم اسحب حوض التصريف للخارج.

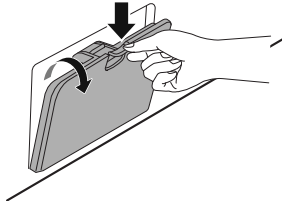

3 قم بإزالة سدادة التصريف من حوض التصريف أولاً **1**، ثم قم بصريف المياه. بعد ذلك قم بفك فلتر مضخة التصريف **2** ببطء وذلك لتصريف المياه ومن ثم إزالة المخلفات أو الأجسام العالقة في الفلتر.

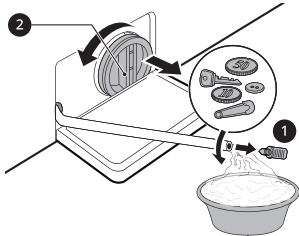

3 أغلق درج الموزع ببطء.

4 اضغط زر الطاقة للتشغيل، ثم اضغط على زر تنظيف الحوض.

5 اضغط على الزر بدء/إيقاف مؤقت للبدء.

6 اترك الباب مفتوحاً حتى يجف الجزء الداخلي من الجهاز تماماً. • قد تتبعت من الجهاز رائحة كريهة أو عفنة ما لم يجف الجزء الداخلي منه تماماً.

⚠ تحذير

• اترك الباب مفتوحاً حتى يجف الجهاز من الداخل، فقط في حالة مراقبة الأطفال بالمنزل عند القيام بذلك.


تنظيف فلتر إدخال الماء

يعمل فلتر إدخال المياه على جمع ترسب الجير أو أي رواسب قد تكون في المياه المدخلة إلى الجهاز. قم بتنظيف مرشح المدخل كل ستة أشهر أو نحو ذلك، أو أكثر إذا كان الماء عسراً جداً أو يحتوي على آثار من الترسبات الكلسية.

• أغلق صنبور إدخال الماء إلى الجهاز إذا كنت ستترك الجهاز دون استخدام لفترة زمنية (على سبيل المثال عطلة)، لاسيما عند عدم وجود صرف في الأرضية (مصرف) في مكان مجاور مباشرة.

• سوف تظهر رسالة الخطأ IE على لوحة التحكم عند عدم دخول الماء إلى درج منظفات الغسيل.

1 أغلق التيار الكهربائي وصنبور الماء ثم فك خرطوم إدخال الماء.

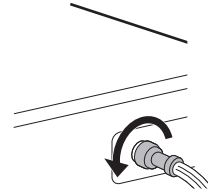

الصيانة

⚠ تحذير

- افصل الجهاز قبل التنظيف لتجنب خطر التعرض لصدمة كهربائية. قد يؤدي عدم اتباع هذا التحذير إلى التعرض إلى إصابة خطيرة، أو نشوب حريق، أو التعرض لصدمة كهربائية، أو حدوث وفاة.
- لا تستخدم أبدًا موادًا كيميائية مركزة، أو منظفات كاشطة، أو مذيبات لتنظيف الجهاز. قد يتسبب ذلك في تلف تشطيب الغسالة.

غسالة

ما الذي يجب غسله

- أزل دائمًا الأغراض من الغسالة بمجرد اكتمال الدورة. قد يتسبب ترك الملابس مبللة داخل الغسالة في كرمشتها، وفقدان لونها، وتغير راحتها.
- بعد انتهاء دورة الغسيل، امسح الباب وسدادة مانع التسرب في الباب لإزالة أي آثار للرطوبة.
- اترك الباب مفتوحًا جزئيًا لتجفيف حوض الغسل.
- امسح الجهاز بقطعة قماش جافة لإزالة أي آثار للرطوبة.

الباب


- امسح الجزء الداخلي والخارجي باستخدام قطعة قماش مبللة ثم جفف باستخدام قطعة قماش ناعمة.

⚠ تحذير

- لا تحاول فصل أي لوح من الألواح أو فك الجهاز. لا تستخدم أي أدوات حادة على لوحة التحكم لتشغيل الجهاز.

تنظيف الحوض

- وهي خاصية مميزة للمساعدة في تنظيف الجهاز من الداخل بالنقع والغسل والشطف والدوران.
- قم بتشغيل هذه الوظيفة مرة في الشهر (أو أكثر إذا لزم الأمر) للحد من تراكم أجزاء المنظف والمنعم والرواسب الأخرى.
- إذا ابتعثت من الجهاز رائحة كريهة أو عفنة، فقم بتشغيل هذه الوظيفة مرة في الأسبوع لمدة 3 أسابيع إلى جانب الفترات العادية لتشغيل هذه الوظيفة.

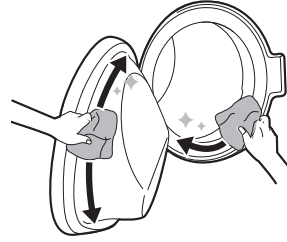

ملاحظة

- ستظهر رسالة ECL لتنبيه المستخدم للتوصية بتشغيل هذه الوظيفة.

⚠ تحذير

- اترك الباب مفتوحًا حتى يجف الجهاز من الداخل، فقط في حالة مراقبة الأطفال بالمنزل عند القيام بذلك.

1 أزل أي ملابس أو أغراض من الجهاز وأغلق الباب.

2

- افتح درج الموزع وأضف المسحوق المقاوم للرواسب الكلسية في حجرة الغسيل الرئيسية.
- يمكن وضع الأقراص مباشرة في حوض الغسل كبديل للمسحوق.

تنظيف الهيكل الخارجي

تساعد العناية الجيدة بالجهاز على إطالة العمر الافتراضي.

الهيكل الخارجي

- امسح أي تسريبات على الفور.

الوظائف الذكية 49

- الغسالة: امسك الهاتف على يمين زر **بدء/إيقاف مؤقت**.
- مجفف: امسك الهاتف على يسار زر **الطاقة**.

ملاحظة

- 3** اضغط مع الاستمرار على أزرار **بخار (الغسالة) / ضد التجاعيد (المجفف)** لمدة 3 ثوانٍ أو حتى تبدأ النغمات الصوتية. امسك ميكروفون المتحدث في هاتفك إلى جهاز حتى يكتمل نقل البيانات.
- أبقِ الهاتف في مكانه حتى انتهاء نقل البيانات. ويتم عرض الوقت المتبقي لنقل البيانات.

- 4** بعد إتمام نقل البيانات، سيظهر التشخيص على شاشة التطبيق.

ملاحظة

- للحصول على أفضل النتائج، لا تحرك الهاتف الذكي أثناء نقل النغمات.

النشر وكل الوثائق ذات الصلة، يرجى زيارة <https://opensource.lge.com>.

ستوفر LG Electronics أيضاً التعليمات البرمجية المفتوحة المصدر على قرص CD-ROM مقابل رسم يغطي تكلفة القيام بهذا التوزيع (مثل تكلفة وسائل النقل والشحن والتسليم) بناءً على طلب يُرسل عبر البريد الإلكتروني إلى opensource@lge.com.

يسري هذا العرض لأي شخص يتسلم هذه المعلومات لمدة ثلاث سنوات بعد آخر عملية شحن لهذا المنتج.

Smart Diagnosis (التشخيص الذكي)

يمكنك الاستفادة بهذه الميزة لتشخيص المشكلات التي تواجهك أثناء استخدام الجهاز وحلها.

ملاحظة

- قد لا تعمل هذه الخدمة وذلك يعود لعوامل خارجية على سبيل المثال لا الحصر، عدم توفر شبكة Wi-Fi أو انقطاع الاتصال بشبكة Wi-Fi أو السياسة المحلية لمتجر التطبيقات أو عدم توفر التطبيق وهذه أسباب لا تنم عن تقصير من LGE.
- قد تتعرض هذه الميزة لتغيرات دون سابق إنذار وقد يختلف شكلها وفقاً للمنطقة التي تسكن فيها.

استخدام تطبيق LG ThinQ بغرض تشخيص المشكلات

إذا واجهت مشكلة أثناء استخدام الجهاز المزود بشبكة Wi-Fi، فحينها يمكن نقل بيانات استكشاف الأخطاء وإصلاحها إلى هاتف ذكي باستخدام تطبيق LG ThinQ.

- قم بتشغيل تطبيق LG ThinQ واختر ميزة "Smart Diagnosis" من القائمة. اتبع التعليمات الواردة في تطبيق LG ThinQ.

استخدام "التشخيص المسموع" بغرض تشخيص المشكلات

اتبع التعليمات أدناه للاستعانة بطريقة التشخيص المسموع.

- قم بتشغيل تطبيق LG ThinQ واختر ميزة "Smart Diagnosis" من القائمة. اتبع تعليمات استخدام التشخيص المسموع الواردة في تطبيق LG ThinQ.

- 1** اضغط على الزر **الطاقة** لتشغيل الجهاز.

- لا تضغط على أي أزرار أخرى.

- 2** امسك ميكروفون المتحدث في هاتفك أمام الجهاز.

تعطيل هذه الوظيفة يدويًا
عندما يتم تفعيل هذه الوظيفة، اضغط مع الاستمرار على زر البدء عن بعد لمدة 3 ثوانٍ.

4 اضغط على زر الطاقة على لوحة التحكم.

5 اضغط على زر دوران و غسيل فائق السرعة مغا لمدة 3 ثوانٍ لإلغاء تنشيط الاتصال بالشبكة.
المجفف

تأخير الوقت

يسمح ضبط هذه الوظيفة للجهاز بالبدء تلقائيًا والانتهاء بعد وقت محدد.

استخدام هذه الوظيفة

1 ضع الملابس في حوض الغسل.

2 اضغط على زر الطاقة.

3 قم بتشغيل تطبيق LG ThinQ وحدد المنتج.

- للغسالة، حدد الغسالة.
- للتجفيف، حدد المجفف.

4 حدد برنامج الغسيل أو التجفيف.

5 المس زر تأخير الوقت واضبط وقت المتأخر.

6 ابدأ إحدى الدورات من التطبيق LG ThinQ على هاتفك الذكي.

ملاحظة

- وقت التأخير هو وقت انتهاء البرنامج، وليس وقت البدء. ربما يختلف وقت التشغيل الفعلي بسبب درجة حرارة الماء، والملابس، وعوامل أخرى.
- تجنب استخدام المنظف السائل مع هذه الوظيفة.

إلغاء تنشيط الاتصال بالشبكة

الغسالة

1 قم بتشغيل تطبيق LG ThinQ.

2 حدد والمس الجهاز الذي سجلته في التطبيق.

3 حدد والمس حذف المنتج في قائمة الإعدادات لفصله.

استهلاك الطاقة في وضع الاستعداد

استهلاك الطاقة في وضع الاستعداد - الغسالة	0.50 وات
استهلاك الطاقة في وضع الاستعداد - المجفف	0.50 وات
شبكة استهلاك الطاقة في وضع الاستعداد	2.00 وات
المدة الزمنية التي تقوم بعدها وظيفة إدارة الطاقة، أو أي وظيفة مشابهة، بتبديل عمل الجهاز تلقائيًا إلى وضع الاستعداد و/أو وضع الإيقاف و/أو وضع الاستعداد عبر الاتصال بالشبكة.	15 دقيقة

ملاحظة

- قد يزيد تفعيل الاتصال بالشبكة استهلاك الطاقة من قبل الجهاز.

معلومات حول إشعار البرامج مفتوحة المصدر

للحصول على التعليمات البرمجية للمصدر ضمن GPL، و LGPL، و MPL، والحصول على التراخيص مفتوحة المصدر الأخرى التي لديها التزامات للكشف عن التعليمات البرمجية الخاصة بالمصدر، المضمنة في هذا المنتج، وللوصول إلى كل أحكام الترخيص المشار إليها، وإشعارات حقوق

الوظائف الذكية 47

- إذا كان بروتوكول الأمان الخاص بجهاز التوجيه مضبوطاً على **WEP**، فقد يتعذر عليك إعداد الشبكة. قم بتغييره إلى بروتوكول أمان آخر (يُنصح باختيار **WPA2**) ثم أعد تسجيل المنتج.

الطُرز غير المرفق بها رمز الاستجابة السريعة

- 1 ابحث عن تطبيق **LG ThinQ** على Apple App Store أو Google Play Store على هاتف ذكي.

- 2 قم بتشغيل تطبيق **LG ThinQ** وسجل الدخول بحسابك الحالي، أو قم بإنشاء حساب جديد لتسجيل الدخول.

- 3 قم بلمس زر الإضافة (+) في تطبيق **LG ThinQ** لتوصيل جهاز **LG** الخاص بك. اتبع التعليمات المذكورة في التطبيق لإكمال العملية.

ملاحظة

- قد يُطلب منك تقديم كلمة المرور للاتصال بشبكة **LG** (وليس شبكة الإنترنت المنزلية الخاصة بك) أثناء إعداد الاتصال بشبكة **Wi-Fi**. وتكون كلمة المرور هي الرموز الـ 4 الأخيرة من اسم الشبكة، مكررة مرتين، وتكون وجود مسافات بينها. فعلى سبيل المثال، إذا ظهر اسم الشبكة كـ **LG_XXXX_8b92**، فحينها يجب أن تدخل **8b928b92** ككلمة مرور. وتكون كلمة المرور حساسة لحالة الأحرف المكتوبة، كما أن الأحرف الـ 4 الأخيرة فريدة ومخصصة لجهازك فقط.
- للتحقق من اتصال **Wi-Fi**، تأكد من أن رمز  على لوحة التحكم مضئ.
- يدعم الجهاز شبكات **Wi-Fi** بتردد 2.4 غيغا هرتز فقط. لمعرفة تردد الشبكة الخاصة بك، اتصل بمزود خدمة الإنترنت أو راجع دليل جهاز التوجيه اللاسلكي.

- تطبيق **LG ThinQ** ليس مسؤولاً عن أي مشاكل الاتصال بالشبكة أو أي أعطال، أو خلل، أو أخطاء نتجت عن طريق الاتصال بالشبكة.
- إذا كان لدى الجهاز مشكلة اتصال بشبكة **Wi-Fi**، قد تكون بعيدة كل البعد عن جهاز التوجيه. اشتر جهاز تقوية **Wi-Fi** (موسع المدى) لتحسين قوة إشارة **Wi-Fi**.

- قد لا يتم الاتصال بشبكة **Wi-Fi** أو قد يتم قطع الاتصال حسب جودة بيئة الشبكة المحلية.

- قد لا يعمل الاتصال بالشبكة بشكل صحيح وفقاً لمزود خدمة الإنترنت.
- يمكن أن تجعل البيئة اللاسلكية المحيطة خدمة الشبكة اللاسلكية تعمل ببطء.
- إذا تعذر تسجيل الجهاز بسبب مشكلات في إرسال الإشارة لاسلكياً، فافصل قابس الجهاز عن الطاقة وانتظر لمدة دقيقة قبل أن تحاول مجدداً.
- إذا كان جدار الحماية الموجود على جهاز التوجيه الخاص بك مُمكنًا، قم بتعطيله أو اضعف إليه استثناءً.

- يجب أن يكون اسم الشبكة اللاسلكية (**SSID**) مكوناً من أحرف وأرقام باللغة الإنجليزية. (لا تستخدم رموزاً خاصة)
- قد تختلف واجهة استخدام الهاتف الذكي حسب نظام تشغيل الهاتف وحسب الشركة المصنعة.

تنشيط الاتصال بالشبكة

- 1 قم بتشغيل تطبيق **LG ThinQ**.

- 2 حدد والمس **Wash Tower** في التطبيق.

- 3 اضغط على زر الطاقة على لوحة التحكم.

- 4 اضغط مع الاستمرار على زر **Wi-Fi** لمدة 3 ثوانٍ على لوحة التحكم. • يومض مؤشر **Wi-Fi LED** أثناء عملية الاتصال.

استخدام الجهاز عن بعد

- Remote Start (التشغيل عن بعد)**
استخدم هاتفًا ذكيًا للتحكم في جهازك عن بعد. يمكنك أيضًا مراقبة تشغيل الدورة للتعرف على الوقت المتبقي للدورة.

استخدام هذه الوظيفة

- 1 ضع الملابس في حوض الغسل.

- 2 اضغط على الزر الطاقة.

- 3 اضغط مع الاستمرار على زر البدء عن بعد لمدة 3 ثوانٍ لتمكين وظيفة التحكم عن بُعد.

- 4 ابدأ إحدى الدورات من التطبيق **LG ThinQ** على هاتفك الذكي.

ملاحظة

- بمجرد أن يتم تشغيل هذه الوظيفة، يمكنك أن تبدأ دورة من تطبيق الهاتف الذكي **LG ThinQ**. في حال لم تبدأ الدورة، فسينتظر الجهاز لبدء تشغيل الدورة حتى يتم إيقاف تشغيلها عن بُعد من التطبيق أو تعطيل هذه الوظيفة.
- إذا كان الباب مفتوحًا، فلن تستطيع بدء تشغيل الدورة عن بُعد.

الوظائف الذكية

استخدام تطبيق LG ThinQ

يسمح تطبيق LG ThinQ لك بالتواصل مع الجهاز باستخدام هاتف ذكي.

مزايا تطبيق LG ThinQ

تواصل مع الجهاز عبر هاتف ذكي باستخدام الخصائص الذكية الملائمة.

Remote Start (التشغيل عن بعد)

يتيح لك التحكم في الجهاز عن بعد من خلال تطبيق LG ThinQ.

Download Cycle (دورة التحميل)

يمكنك تنزيل الدورات الجديدة والخاصة التي لم يتم تضمينها في الدورات الأساسية على الجهاز.

يمكن للأجهزة التي تم تسجيلها بنجاح تنزيل مجموعة متنوعة من الدورات المتخصصة المصممة للجهاز.

بمجرد اكتمال تنزيل الدورة في الجهاز، يحتفظ الجهاز بالدورة التي تم تنزيلها حتى يتم تنزيل دورة جديدة.

ملاحظة

- يمكن تخزين دورة واحدة في الجهاز في كل مرة.

دورة السحابة

تتضمن دورات السحابة العديد من الدورات التي تبدأ من تطبيق LG ThinQ. ومع ذلك، يتم حذف دورة السحابة من الجهاز عند إيقاف تشغيل الطاقة.

الاقتران الذكي

تحدد هذه الوظيفة تلقائيًا دورة التجفيف لتناسب مع دورة الغسيل.

- هذه الوظيفة ليست افتراضية. لا يمكن تشغيل هذه الوظيفة أو إيقاف تشغيلها إلا من خلال تطبيق LG ThinQ.
- لا يمكنك استخدام وظيفة Smart Pairing بعد 3 ساعات من انتهاء دورة الغسيل.

التدريب على تنظيف الحوض (غسالة)

تُظهر هذه الوظيفة عن عدد الدورات المتبقية قبل تشغيل وظيفة تنظيف الحوض.

مراقبة الطاقة

تتحقق هذه الوظيفة من استهلاك الطاقة للدورات التي تم استخدامها مؤخرًا ومتوسط الاستهلاك الشهري.

Smart Diagnosis (التشخيص الذكي)

توفر هذه الوظيفة معلومات مفيدة حول تشخيص مشكلات الجهاز وحلها حسب نمط الاستخدام.

الإعدادات

يسمح لك بتعيين خيارات متعددة على الجهاز وفي التطبيق.

إرسال التنبيهات

عند الانتهاء من الدورة أو حدوث عطل في الجهاز، يمكنك استلام إشعارات على هاتفك الذكي. تنطلق هذه الإشعارات حتى لو كان تطبيق LG ThinQ مغلقًا.


ملاحظة

- إذا غيرت جهاز التوجيه اللاسلكي الخاص بك، أو مزود الخدمة، أو كلمة المرور، قم بتمسح الجهاز المسجل من تطبيق LG ThinQ وسجله من جديد.
- يخضع التطبيق للتغيير لأغراض تحسين الجهاز بدون إشعار المستخدمين.
- قد تتغير الميزات حسب الطراز.

تنشيط تطبيق LG ThinQ وتوصيل جهاز LG به

الطُرز المرفق بها رمز الاستجابة السريعة

قم بتمسح رمز الاستجابة السريعة الملحق بالجهاز باستخدام الكاميرا أو تطبيق قارئ رمز الاستجابة السريعة على هاتفك الذكي.

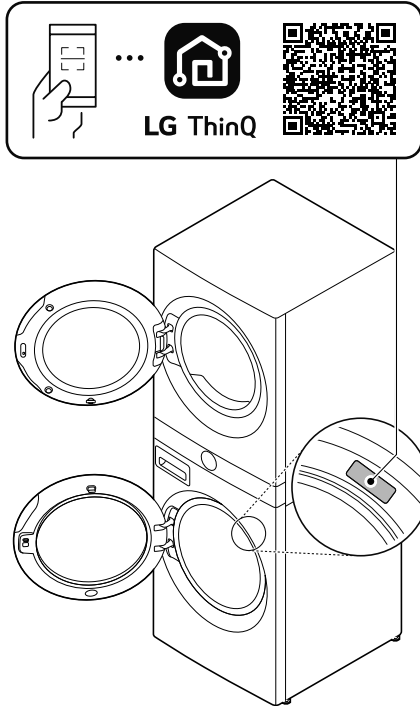

العملية-المجفف 45

ملاحظة

- افحص فلتر الوبر وقم بإزالة أي نسالة متراكمة من العناصر الجافة على الرف.

١٤

الإعدادات

قفل لحماية الأطفال

استخدم هذا الخيار لتعطيل أدوات التحكم. يمكن أن تمنع هذه الميزة الأطفال من تغيير الدورات أو تشغيل الجهاز.

ملاحظة

- بمجرد أن يتم تعيين هذه الوظيفة، يتم قفل جميع الأزرار باستثناء زر الطاقة.
- عند إغلاق عناصر التحكم، يظهر [L] والوقت المتبقي بالتناوب على الشاشة أثناء التجفيف وتشغيل هذه الوظيفة.
- لن يؤدي إيقاف تشغيل الطاقة إلى إعادة تعيين هذه الوظيفة. يجب إلغاء تفعيل هذه الوظيفة لتتمكن من الوصول إلى أي وظائف أخرى.

قفل لوحة التحكم

1 اضغط زر الطاقة للتشغيل.

2 اضغط مع الاستمرار على **وقت التجفيف** لمدة ثلاث ثوانٍ لتفعيل هذه الوظيفة.

- سيصدر صوت صافرة، وسيظهر [L] على شاشة العرض.

إلغاء قفل لوحة التحكم

1 اضغط زر الطاقة للتشغيل.

2 اضغط مع الاستمرار على **وقت التجفيف** لمدة ثلاث ثوانٍ لإيقاف تفعيل هذه الوظيفة.

لاستخدام البرنامج، أنت بحاجة إلى رف مجفف يتم وضعه داخل الجهاز. قبل التجفيف، تخلص من مواد التغليف الخاصة برف المجفف.

ملاحظة

- لا يتم بيع بعض الطرز مع جميع الملحقات المتاحة، فقد تحتاج إلى شراء رف التجفيف أولاً إذا لم يكن مزوداً مع الطراز الخاص بك. يرجى الاتصال بمركز معلومات عملاء LG Electronics أو زيارة موقع ويب LG على <http://www.lg.com> للشراء.

1 افتح الباب.

2 أدخل خطاف رف المجفف في مركز الحوض.




3 ضع رف المجفف على الهيكل فوق فلتر الوبر واضغط عليه لإكمال التجميع.



4 ضع الأشياء المبللة فوق الرف. اترك مساحة حول العناصر لتدوير الهواء.

- رف المجفف لا يتحرك، لكن الأسطوانة ستدور.

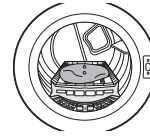

5 أغلق الباب.

6 قم بتشغيل الطاقة واضغط على زر **وقت التجفيف** لضبط وقت التجفيف بدقة.

7 اضغط مع الاستمرار على زر بدء/إيقاف مؤقت.

خيارات ووظائف إضافية

تخصيص برنامج التجفيف

يتميز كل برنامج بإعدادات افتراضية تم اختيارها تلقائيًا. ويمكنك كذلك تخصيص هذه الإعدادات باستخدام هذه الأزرار.

EcoHybrid

اضغط على زر **EcoHybrid** بشكل متكرر لتقديم خيار توفير الطاقة أو الوقت.

- توفير الطاقة: خيار توفير الطاقة.
- عادي: خيار التجفيف الافتراضي.
- الوقت: خيار توفير الوقت.

ملاحظة

- تختلف الخيارات القابلة للتحديد حسب البرنامج المحدد.

مستوى التجفيف

يسمح لك بتحديد مستوى التجفيف لبرنامج التجفيف.

- إضافي: حول الأقمشة السميكة والمبطنة
- عادي+: للأقمشة التي تحتاج إلى التجفيف بقوة أكبر من عادي
- عادي: للأقمشة التي لا تحتاج إلى الكي
- ناعمة: للأقمشة التي تحتاج إلى تقليل الانكماش وتوليد الكهرباء الساكنة
- تجفيف للكي: للأقمشة التي تحتاج إلى الكي

وقت التجفيف

استخدم هذا الخيار لتحديد وقت التجفيف يدويًا، من 30 إلى 70 دقيقة، بزيادات قدرها 10 دقائق. استخدم هذا للمحولات الصغيرة أو لتقليل التجاعيد.

ملاحظة

- قد تظل الملابس رطبة حسب نوع نسيج الملابس بعد التجفيف. في هذه الحالة، استخدم هذا الخيار لتجفيف الملابس بشكل أكثر شمولاً.

اتبع الخطوات التالية لتخصيص برنامج التجفيف:

1 جهّز الملابس وضعها داخل حوض الغسل.

2 اضغط على الزر الطاقة.

3 حدد برنامج التجفيف.

4 خصص برنامج التجفيف (EcoHybrid, مستوى التجفيف, وقت التجفيف) حسب الحاجة.

5 اضغط مع الاستمرار على زر بدء/إيقاف مؤقت.

استخدام خيارات خاصة

يمكنك تخصيص البرامج باستخدام الخيارات الخاصة الآتية:

ضد التجاعيد

سيؤدي تحديد هذا الخيار إلى قلب الحاملة بشكل دوري لمدة تصل إلى 2 ساعات بعد البرنامج المحدد، أو حتى يتم فتح الباب. هذا مفيد في منع التجاعيد عندما لا تتمكن من إزالة العناصر من المجفف على الفور.

- اضغط على زر ضد التجاعيد قبل بدء برنامج التجفيف.

ملاحظة

- عند تعيين الخيار، يظهر مستطيل بخط متقطع End على الشاشة حتى يتم إيقاف تشغيل الميزة.
- عند تعيين الخيار، يعمل زر الطاقة فقط بعد انتهاء برنامج التجفيف.
- عند تشغيل برنامج التجفيف، أوقف البرنامج أولاً لضبط الخيار.
- قم دائمًا بإيقاف تشغيل الجهاز قبل تفريغ الملابس.

اتبع الخطوات التالية لاستخدام أحد الخيارات الخاصة.

1 اضغط على الزر الطاقة.

2 حدد برنامج التجفيف.

3 حدد خيار ضد التجاعيد.

4 اضغط مع الاستمرار على زر بدء/إيقاف مؤقت.

دورة خاصة

انتعاش الجاكيت البالي

هذه الدورة مخصصة لإعادة السترة المبطنة إلى سترة منفوشة دون غسلها.

التجفيف بالفرف

تم تصميم هذا البرنامج لاستخدام مع الملابس التي يجب تجفيفها بشكل مسطح، بدون قلب، بما في ذلك السترات والأقمشة الرقيقة.

43 العملية-المجفف

• سيتغير الوقت المقدر المتبقي إذا حددت خيارات إضافية للبرنامج.

م

البرنامج	الصوف	الحد الأقصى للسعة	1 كجم
الوصف	استخدم هذا البرنامج لتجفيف الملابس الصوفية القابلة للانكماش أو العناصر التي يتم غسلها باليد والتي تتطلب رعاية رقيقة.		
مستوى التجفيف	غير قابلة للضبط		

البرنامج	انتعاش الفراش	الحد الأقصى للسعة	3 كجم
الوصف	عليك إزالة الأتربة من المفارش مع تدفق الهواء.		
مستوى التجفيف	غير قابلة للضبط		

البرنامج	تجفيف سريع	الحد الأقصى للسعة	1.5 كجم
الوصف	استخدم هذا البرنامج لتجفيف الأشياء الخفيفة أو الصغيرة.		
مستوى التجفيف	غير قابلة للضبط		

البرنامج	دورة التحميل	-	-
الوصف	يسمح لك هذا البرنامج بتنزيل برنامج تجفيف جديد وخاص يناسب جهازك وذلك باستخدام الهاتف الذكي. تجفيف فائق هو البرنامج الافتراضي.		

خيارات إضافية

البرنامج	EcoHybrid
القطن	توفير الطاقة
	عادي ^{1*}
	الوقت
اللحف	-
الصوف	عادي ^{1*}
انتعاش الفراش	-
تجفيف سريع	الوقت ^{1*}

^{1*} يتم تضمين هذا الخيار تلقائيًا في البرنامج.

ملاحظة

- يتوفر برنامج القطن فقط لتحديد مستوى التجفيف.
- خيار ضد التجاعد يمكن تحديده لكل برنامج تجفيف.

41 العملية-المجفف

ملاحظة

الوصف	
❏ يضيء أو يومض أثناء غسل المكثف أو تشغيل وضع الذوبان. - يعمل تنظيف المكثف كل 30 دورة تجفيف. ملاحظة - ستكون أوقات التجفيف أطول من المعتاد عند غسل المكثف. - إذا تم تجفيف كمية صغيرة من الملابس، فلن يتم غسل المكثف لأن الماء المتراكم أثناء دورة التجفيف لا يكفي لغسل المكثف.	6
❏ يضيء عندما يجب تنظيف فلتر الوبر أو إدخاله. - إشعار التنظيف: عند الضغط على زر الطاقة، ستظهر الأيقونة. - ملاحظة مفقودة: عندما لا يتم إدخال فلتر الوبر، ستظهر الأيقونة ولن يعمل الجهاز.	7
مؤشرات حالة البرنامج ❏ يضيء عندما يكون الجهاز قيد التجفيف. ❏ يضيء عندما يكون الجهاز قيد التبريد.	8


دليل برنامج التجفيف

البرنامج	القطن	الحد الأقصى للسعة	مقن
الوصف	استخدمه لتجفيف جميع العناصر العادية مثل القطن أو الكتان أو القمصان أو الجبنز أو الحمولات المختلطة، باستثناء الأقمشة الرقيقة مثل الصوف أو الحرير.		
مستوى التجفيف	الاقتراضي: تجفيف		المتاح: كل السرعات
ملاحظة	- إنه مناسب لتجفيف الملابس القطنية الرطبة العادية وهو البرنامج الأكثر كفاءة من حيث استهلاك الطاقة لتجفيف الغسيل القطني الرطب. - اضبط البرنامج على "القطن تجفيف توفير الطاقة (حمولة كاملة ونصف حمولة)" للاختبار وفقًا لمعيار SASO 2883. - برنامج القطن القياسي: خيار القطن + تجفيف + توفير الطاقة - (يعد هذا هو أكثر البرامج كفاءة من حيث شروط الاختبار المقترحة من قبل SASO 2883). - (إنها مناسبة لتجفيف الغسيل القطني الرطب العادي). - (إنها تعد أكثر البرامج كفاءة من حيث استهلاك الطاقة لتجفيف الغسيل القطني الرطب). - تعتمد نتائج الاختبار على درجة حرارة الغرفة ونوع الحمولة ومقدارها وعسر الماء ودرجة حرارة مدخل الماء.		

البرنامج	اللفف	الحد الأقصى للسعة	4 كجم (لحاف واحد 1)
الوصف	استخدم هذا البرنامج لتجفيف البطانيات أو الأشياء الضخمة مثل الوسائد أو البطانيات أو الألحفة أو الملاءات أو فراش الحيوانات الأليفة.		
مستوى التجفيف	غير قابلة للضغط		

الوصف	
3 زريده/إيقاف مؤقت - يُستخدم زر بدء/إيقاف مؤقت هذا لبدء برنامج جاف أو إيقافه مؤقتًا. - عندما تكون في وضع الإيقاف المؤقت، يتم إيقاف تشغيل الطاقة تلقائيًا بعد فترة زمنية معينة لأسباب تتعلق بالسلامة.	
4 أزرار البرنامج الإضافية / الخيارات والوظائف الإضافية - استخدم هذه الأزرار لتحديد الخيارات المطلوبة للبرنامج المحدد. لا تتوفر جميع الخيارات في كل برنامج. - لاستخدام الوظائف الإضافية، اضغط مع الاستمرار على الزر المقابل لمدة 3 ثوانٍ. وعندها سوف يضيئ الرمز المقابل على شاشة العرض. البدء عن بعد - يمكنك استخدام تطبيق LG ThinQ في أي هاتف ذكي للتحكم في جهازك عن بعد. - لاستخدام وظيفة البدء عن بعد، راجع الوظائف الذكية. Wi-Fi - اضغط مع الاستمرار على الزر EcoHybrid لمدة 3 ثوانٍ لبدء توصيل الجهاز بتطبيق LG ThinQ.	
5 شاشة الوقت والحالة تعرض شاشة العرض الإعدادات، والوقت المتبقي المُقدر، والخيارات، ورسائل الحالة. عندما يتم تشغيل الجهاز، ستضيء الإعدادات الافتراضية في شاشة العرض.	

شاشة الوقت والحالة

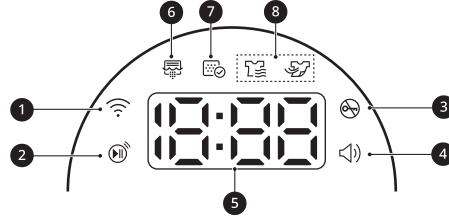




الوصف	
1 Wi-Fi يكون قيد الإضاءة عند توصيل الجهاز بشبكة Wi-Fi في المنزل.	
2 Speaker يكون قيد الإضاءة عند تنشيط ميزة التحكم عن بعد.	
3 Fan يكون قيد الإضاءة عند بدء البرنامج وإغلاق الباب.	
4 Alarm يضيء عند تشغيل الصافرة. لا يمكن تشغيل هذه الوظيفة أو إيقاف تشغيلها إلا من خلال تطبيق LG ThinQ.	
5 عرض الوقت المتبقي - عند تحديد برنامج تجفيف، يتم عرض وقت التجفيف للبرنامج المحدد. سيتغير هذا الوقت عند تعيين الخيارات الإضافية للبرنامج. - ستظهر رسائل الخطأ عندما يقوم الجهاز بتشخيص المشكلات.	

39 العملية-المجفف





لوحة التحكم وجدول البرامج

خواص لوحة التحكم

الرموز

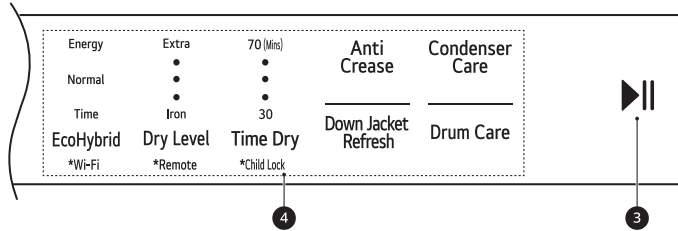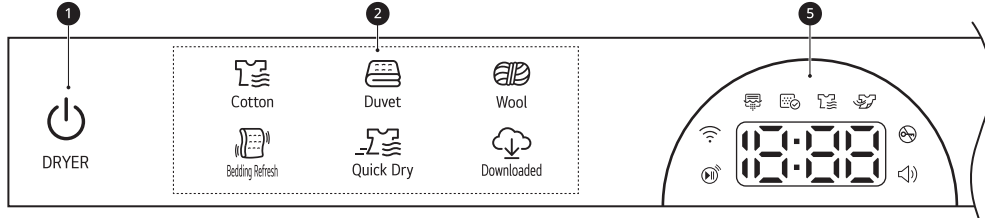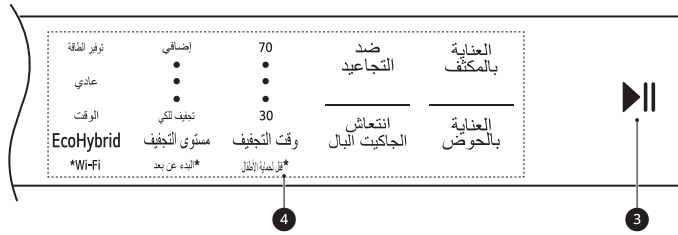

الوصف	
زر الطاقة التشغيل/إيقاف التشغيل - اضغط على الزر لتشغيل الجهاز. اضغط مع الاستمرار مرة أخرى لإيقاف تشغيل الجهاز. - سيؤدي الضغط على زر الطاقة أثناء البرنامج إلى إلغاء هذا البرنامج وستتخذ أي إعدادات تحميل.	1
أزرار البرامج - تتوفر البرامج وفقًا لنوع القماش. - سيضيئ المصباح للإشارة إلى البرنامج المحدد.	2

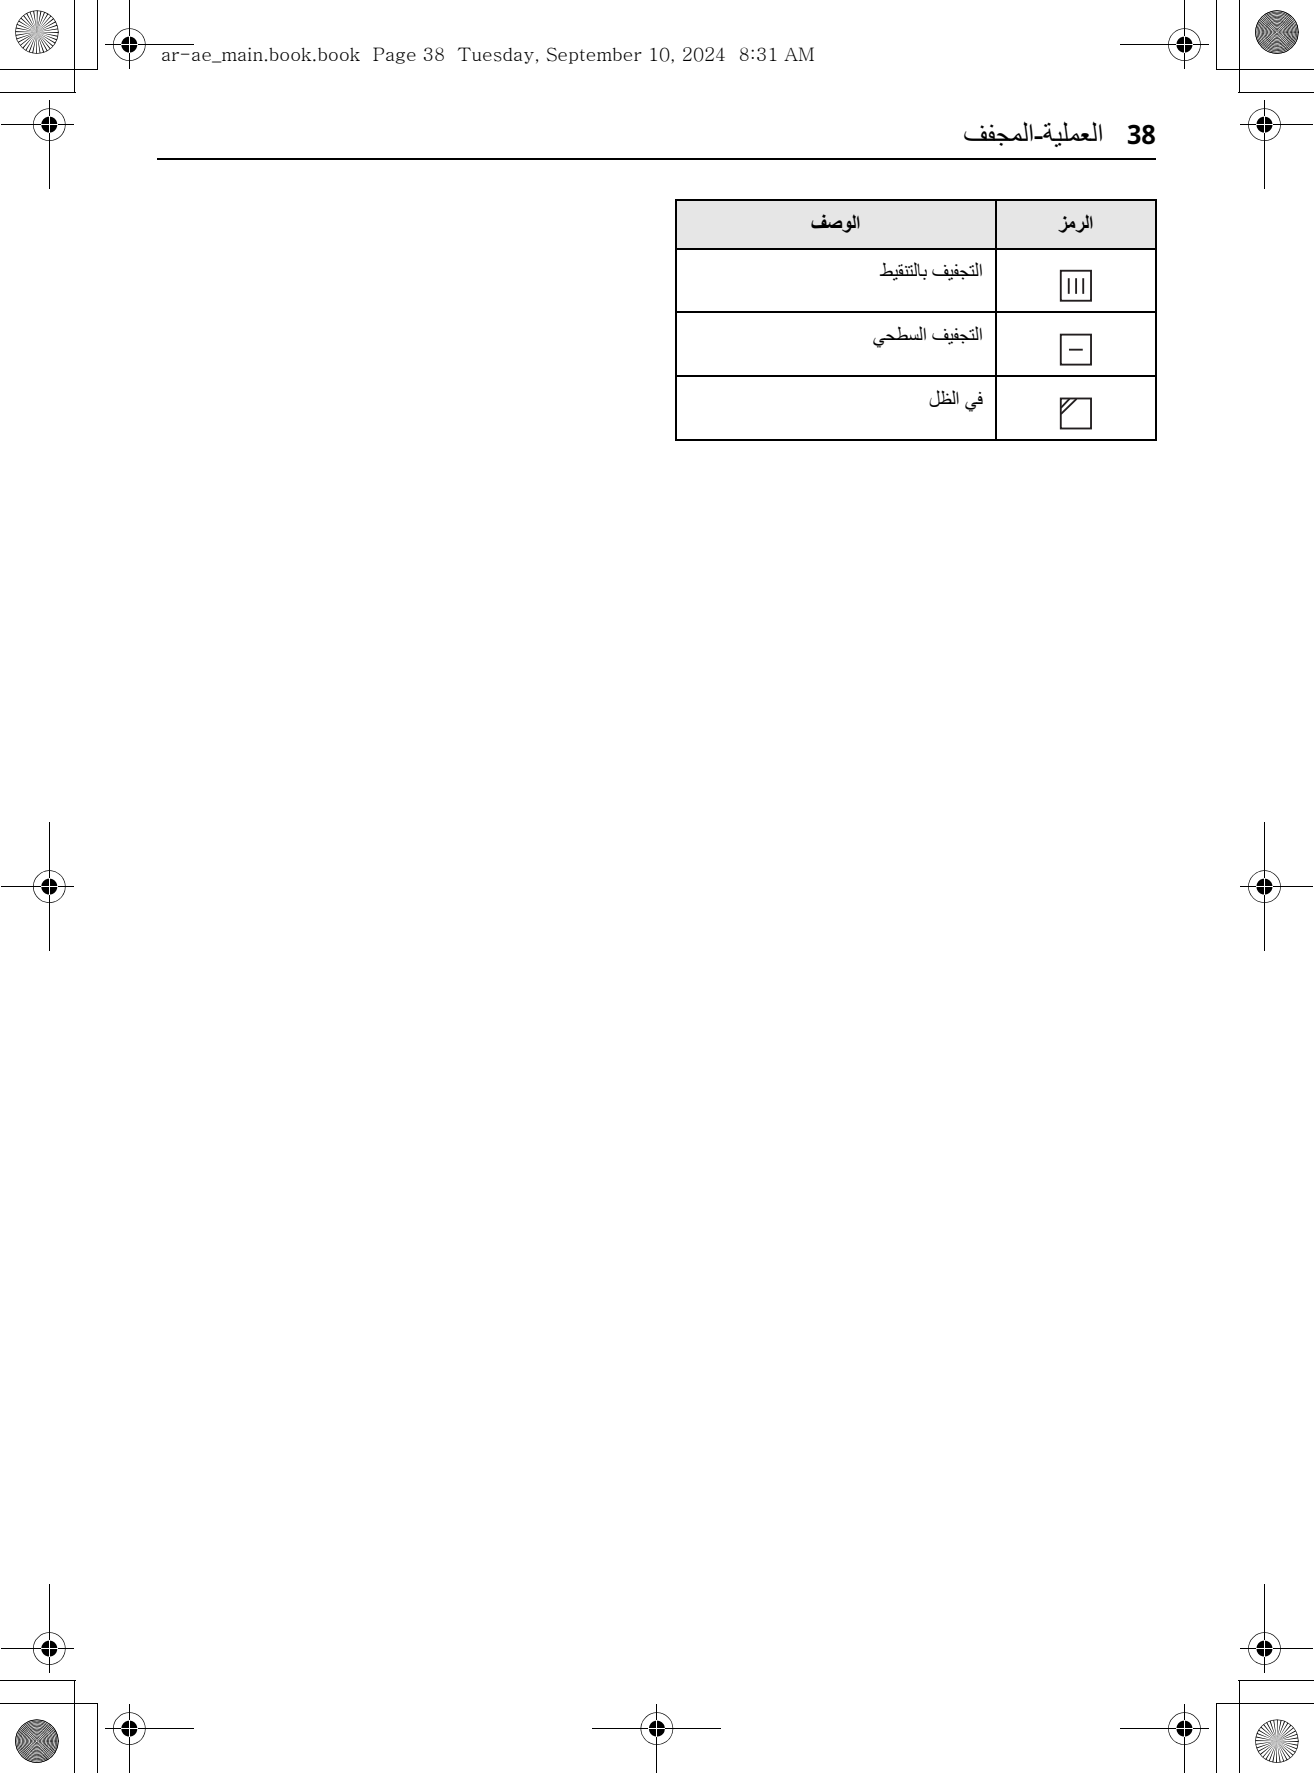

الوصف	الرمز
التجفيف بالتنتقيط	
التجفيف السطحي	
في الظل	

37 العملية-المجفف

ملابس الأطفال وقمصان النوم

- تحقق دائمًا من ملصقات العناية بالنسيج.

الأغراض المطاطية والبلاستيكية

- لا تجفف أي أغراض مصنوعة من مطاط أو بلاستيك أو تحتوي عليهما مثل:
 - الأغطية الواقية، والمرائل، وأغطية الكراسي
 - الستائر ومفارش المائدة
 - سجاد الحمام

الآلياف الزجاجية

- لا تجفف عناصر الآلياف الزجاجية في الجهاز. قد تلتصق ملابسك جزئيات الزجاج المتبقية في الجهاز لاحقًا في دورات لاحقة.

التحقق من ملصق العناية بالنسيج

تخبرك الرموز الموجودة على ملصق العناية بالأقمشة بمحتوى نسيج ملابسك وكيف ينبغي تجفيفها.

الوصف	الرمز
Dry (التجفيف)	
التجفيف بالدوران	
الطبعة الدائمة / مقاومة التجعّد	
لطيف / رقيق	
عدم التجفيف بالدوران	
عدم التجفيف	
التسخين العالي	
التسخين المتوسط	
التسخين المنخفض	
لا تدفئة / هواء	
يُصّف ليّجف / يُعلّق حتى يجف	

تحضير الغسيل

ملاحظة

- لا تفرط في تحميل الجهاز للحصول على أفضل أداء تجفيف واستخدام بكفاءة أكثر للطاقة.

فحص الملابس قبل وضع الحمولة

⚠ تنبيه

- تأكد أن الملابس ليست عالقة بين الجهاز والباب، وإلا فقد تتلف الملابس أثناء التجفيف.

- انتبه لأقصى سعة تحميل على طاولة البرنامج لبرنامج التجفيف ذي الصلة للحصول على أفضل نتائج التجفيف. يؤدي التحميل الزائد إلى نتيجة تجفيف رديئة ويسبب تعجّدًا غير ضروري.
- لا تقم بتحميل ملابس مبللة مفتوحة في الجهاز. سوف يتسبب في زيادة وقت التجفيف واستهلاك الطاقة. تأكد من تصفية الملابس جيدًا قبل التحميل.
- يمكن أن تتسبب حمولة النسيج المختلط في إطالة وقت التجفيف وتوقف الوقت المتبقي على الشاشة أثناء التجفيف النشط. سيستمر الوقت المتبقي بعد ذلك عندما يكون الوقت الفعلي المتبقي.
- تأكد من تفريغ جميع الجيوب فقد تؤدي أشياء مثل المسامير، ومشابك الشعر، وأعواد الثقاب، والأقلام، والعلامات المعدنية، والمفاتيح إلى إحداث تلف في كل من الجهاز وملابسك.
- أزل الأحزمة السائبة وأغلق السحابات والخطافات والسلاسل للتأكد من أن هذه العناصر لا تعلق بملابس أخرى.

تصنيف الملابس

تحتوي الملابس على ملصقات العناية بالنسيج الخاصة بها، لذا يوصى بالتجفيف وفقًا لملصق العناية بالأقمشة.

افرز الملابس حسب المقاس ونوع القماش ثم جهز الملابس وفقًا للرموز الموجودة على ملصقات العناية بالقماش.

الملابس الصوفية

- تأكد من اتباع رموز ملصق العناية بالأقمشة أولاً. قد لا يجف الصوف تمامًا من الدورة، لذلك لا تكرر التجفيف. اسحب المنسوجات الصوفية إلى شكلها الأصلي وجففها بشكل مسطح.

المواد المنسوجة والمحيكة

- قد تتكسح بعض المواد المنسوجة والمحيكة، حسب الجودة.

غير المكواة والآلياف الصناعية

- لا تفرط في تحميل الجهاز. قم بإخراج العناصر غير المكواة بمجرد توقف الجهاز لتقليل التجاعيد.


العملية-المجفف

نظرة عامة على التشغيل

استخدام المجفف

قبل الدورة الأولى، اضبط الجهاز ليُجف لمدة 5 دقائق لتسخين الحوض. افتح الباب بين الأحمال في المرات القليلة الأولى التي تستخدم فيها الجهاز للسماح لأي روائح من داخل الجهاز بالانتشار.
يجب مراقبة الأطفال حتى لا يتسلقوا داخل البرميل.

1 تأكد من نظافة فلتر الوبر.

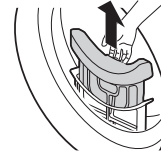

• افتح الباب وتأكد من نظافة فلتر الوبر. عندما يمتلئ الفلتر بالوبر، ستكون أوقات التجفيف أطول من المعتاد.

2

ضع الملابس في الحوض بعد الفرز وأغلق الباب.
• ادفع الملابس بعمق في الحوض بحيث تبقى الملابس بعيدة عن مانع تسرب الباب. عندما تعلق الملابس بين الباب والسدادة، فقد تتلف أثناء التجفيف.
• يجب فرز الملابس حسب أنواع القماش ومستوى التجفيف.
• يجب ربط جميع الخيوط وأحزمة الملابس المتصلة جيدًا وتثبيتها قبل وضعها في الحوض.

3

اضغط فوق زر الطاقة لتشغيل الجهاز.
• اعتمادًا على الطرز، قد يعني زر الطاقة للإشارة إلى أن الجهاز جاهز للتجفيف.

4

اضغط زر اختيار الدورات بشكل متكرر حتى يتم تحديد الدورة المطلوبة.

• إذا ضغطت على زر بدء/إيقاف مؤقت بدون اختيار برنامج، فسيقوم الجهاز بمتابعة برنامج القطن يرجى الرجوع إلى جدول البرنامج للحصول على معلومات مفصلة.

5

اضغط مع الاستمرار على زر بدء/إيقاف مؤقت لبدء برنامج التجفيف.

ملاحظة

- يقوم الجهاز بغسل الوبر، الذي يتراكم على سطح المكثف، تلقائيًا باستخدام الماء المتكثف من الملابس أثناء التشغيل.
- قد يختلف تكرار مكثف التنظيف حسب الحجم وكمية الرطوبة الأولية للملابس.

6

بعد انتهاء برنامج التجفيف، افتح الباب وقم بتفريغ الملابس.

⚠ تنبيه


- احذر! قد يكون الحوض بالداخل ساخنًا.

7

اضغط على زر الطاقة لإيقاف تشغيل الجهاز.

8

تنظيف فلتر الوبر.

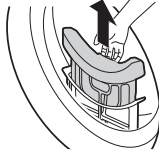

9

للمساعدة في تقليل تشكل الروائح، يمكن ترك باب المجفف مفتوحًا أو مفتوحًا قليلًا لفترة قصيرة من الوقت إن أمكن للمساعدة في تهوية الحوض بعد الاستخدام.

⚠ تحذير

- لأسباب تتعلق بالسلامة، لا تسمح للأطفال أو الحيوانات بدخول الجهاز. قد يتسبب ذلك في تلف أو إصابة.

ملاحظة

- يحدث الجزء الأخير من دورة التجفيف بدون تسخين (دورة التبريد) لضمان ترك الملابس في درجة حرارة تضمن عدم تعرض الملابس للتلف.
- قد يؤدي ارتفاع درجة حرارة الغلاف الجوي والغرفة الصغيرة إلى زيادة وقت التجفيف وكذلك استهلاك الطاقة.

35 العملية-الغسالة

الإعدادات

قفل لحماية الأطفال

استخدم هذا الخيار لتعطيل أدوات التحكم. يمكن أن تمنع هذه الميزة الأطفال من تغيير الدورات أو تشغيل الجهاز.

ملاحظة

- بمجرد أن يتم تعيين هذه الوظيفة، يتم قفل جميع الأزرار باستثناء زر الطاقة.
- عند إغلاق وسائل التحكم، L1 والوقت المتبقي يظهران بالتناوب على الشاشة أثناء الغسيل وتشغيل هذه الوظيفة.
- لن يؤدي إيقاف تشغيل الطاقة إلى إعادة تعيين هذه الوظيفة. يجب إلغاء تفعيل هذه الوظيفة لتتمكن من الوصول إلى أي وظائف أخرى.

قفل لوحة التحكم

1 اضغط زر الطاقة للتشغيل.

2 اضغط مع الاستمرار على دوران لمدة ثلاث ثوانٍ لتفعيل هذه الوظيفة.

- سيصدر صوت صافرة، وسيظهر L1 على شاشة العرض.

إلغاء قفل لوحة التحكم

1 اضغط زر الطاقة للتشغيل.

2 اضغط مع الاستمرار على دوران لمدة ثلاث ثوانٍ لإيقاف تفعيل هذه الوظيفة.

استخدام الخيارات الأساسية

يمكنك تخصيص البرامج باستخدام الخيارات الأساسية الآتية:

شطف + تشييف

يُتيح لك شطف الحمل وتدويره بشكل منفصل عن البرنامج العادي. يساعد في منع البقع الجديدة من الاستقرار في الأقمشة.

1 اضغط على الزر الطاقة.

2 حدد برنامج الغسيل.

3 اضغط مع الاستمرار على زر درجة الحرارة لمدة 3 ثوانٍ إذا لزم الأمر.

- يمكنك تغيير سرعة العصر بالضغط على زر دوران.

4 اضغط على الزر بدء/إيقاف مؤقت.

إضافة عنصر

يمكنك استخدام هذا الخيار لإضافة ملابس أو إزالتها حتى يعد بدء برنامج الغسيل.

1 اضغط على الزر الطاقة.

2 حدد برنامج الغسيل.

3 اضغط على الزر بدء/إيقاف مؤقت.

4 اضغط مع الاستمرار على زر تنظيف الحوض لمدة 3 ثوانٍ إذا لزم الأمر.

5 افتح الباب بعدما يُفتح ذاتيًا وأضف قطع الملابس أو أخرجها حسب الحاجة.

6 أغلق الباب ثم اضغط على زر بدء/إيقاف مؤقت.

ملاحظة

- للأمان، يظل الباب مغلقًا عند ارتفاع مستوى المياه أو ارتفاع درجة الحرارة. ولا يمكن إضافة قطع ملابس في هذه الأثناء.

إعداد للتجفيف

يسمح ضبط هذه الوظيفة للمجفف بالعمل تلقائيًا بعد برنامج الغسيل.

اتبع الخطوات التالية لاستخدام أحد الخيارات الخاصة.

1 اضغط على زر الطاقة في الغسالة.

2 حدد برنامج الغسيل.

3 غيّر برنامج الغسيل (درجة الحرارة، أو شطف، أو دوران) إذا لزم الأمر.

4 اضغط على زر غسيل فائق السرعة بالغسالة لمدة 3 ثوانٍ.

5 اضغط على زر بدء/إيقاف مؤقت في الغسالة.

- عند تشغيل المجفف، سيتم عرض برنامج التجفيف المقترن والخيار.
- بعد استشعار وزن الحمولة، تعرض شاشة المجفف وقت التجفيف المتبقي المقدّر لحوالي دقيقة واحدة.
- أثناء تشغيل إعداد للتجفيف تعرض شاشة المجفف P-R.

6 بعد الانتهاء من برنامج الغسيل، قم بتحميل العناصر في المجفف وأغلق الباب.

7 اضغط على زر بدء/إيقاف مؤقت في المجفف.

- تعرض شاشة المجفف وقت التجفيف المتبقي المقدّر.

ملاحظة

- لن يتم تنشيط وظيفة إعداد للتجفيف في الحالات التالية:
 - إذا لم تبدأ تشغيل المجفف في غضون 15 دقيقة بعد انتهاء برنامج الغسيل
 - إذا كان المجفف غير موصل
 - إذا تم استخدام وظيفة التحكم عن بعد
 - إذا تم إغلاق الغسالة أو المجفف أثناء ضبط وظيفة إعداد للتجفيف
- عند تعيين الخيار، يعمل زر الطاقة فقط ويغلق الباب. افتح باب المجفف بعد انتهاء برنامج الغسيل.

33 العملية-الغسالة

خيارات ووظائف إضافية

تخصيص برنامج الغسيل

يتميز كل برنامج بإعدادات افتراضية تم اختيارها تلقائيًا. ويمكنك كذلك تخصيص هذه الإعدادات باستخدام هذه الأزرار.

غسيل

اضغط على الزر **غسيل** عدة مرات إلى أن يتم تحديد درجة الاتساخ المطلوبة.

- **غسيل مبدئي:** للغسيل شديد الاتساخ
- **كثيف:** للغسيل العادي والغسيل شديد الاتساخ
- **غسيل عادي:** للغسيل المتسخ العادي

ملاحظة

- تختلف الخيارات القابلة للتحديد حسب البرنامج المحدد.

شطف

يمكنك تحديد عدد مرات الشطف بالضغط على الزر **شطف**. يوصى بهذه الوظيفة للأشخاص الذين يعانون من حساسية المنظفات.

دوران

يمكنك تحديد مستوى شدة الدوران بالضغط على هذا الزر عدة مرات. اضغط على الزر **دوران** لتحديد سرعة الدوران.

درجة الحرارة

يحدد هذا الزر درجة حرارة الغسيل للبرنامج المحدد. اضغط على زر **درجة الحرارة** حتى يضيئ الإعداد الذي ترغب به.

- حدد درجة حرارة الماء المناسبة لنوع الحمولة التي تغسلها. واتبع ملصقات العناية بنسيج الملابس للحصول على أفضل النتائج.

اتباع الخطوات التالية لتخصيص برنامج الغسيل.

1 جهّز الملابس وضعها داخل حوض الغسل.

2 اضغط على الزر **الطاقة**.

3 أضف المنظف.

4 حدد برنامج الغسيل.

5 خصص برنامج الغسيل (**غسيل**، و **شطف**، و **دوران**، و **درجة الحرارة**) حسب الحاجة.

6 اضغط على الزر **بدء/إيقاف مؤقت**.

استخدام وظيفة الدوران فقط

1 جهّز الملابس وضعها داخل حوض الغسل.

2 اضغط على الزر **الطاقة**.

- لا تحدد برنامج الغسيل ولا نصف المنظف.

3 اضغط على الزر **دوران**.

4 اضغط على الزر **بدء/إيقاف مؤقت**.

ملاحظة

- إذا حددت برنامج الغسيل، فلن تستطيع تحديد خيار الدوران فقط. وإذا حدث ذلك، اضغط على الزر **الطاقة** مرتين لإيقاف الغسالة وإعادة تشغيلها.

استخدام خيارات خاصة

يمكنك تخصيص البرامج باستخدام الخيارات الخاصة الآتية:

بخار

يساعد إضافة هذا الخيار في توفير نتائج تنظيف أفضل.

غسيل فائق السرعة

يقلل إضافة هذا الخيار من وقت البرنامج مع توفير نفس نتائج الغسيل.

اتباع الخطوات التالية لاستخدام أحد الخيارات الخاصة.

1 اضغط على الزر **الطاقة**.

2 حدد برنامج الغسيل.

3 غيّر برنامج الغسيل (**درجة الحرارة**، أو **شطف**، أو **دوران**) حسب الحاجة.

4 اضغط على الزر **بخار** أو **غسيل فائق السرعة**.

5 اضغط على الزر **بدء/إيقاف مؤقت**.

32 العملية-الغسالة

البرنامج	غسيل فائق السرعة	بخار
اللفف	●	
الصوف		
تعقيم	●	●
غسيل سريع	1* ●	

*1 يتم تضمين هذا الخيار تلقائيًا في البرنامج.

ملاحظة

- خيار إضافة عنصر يمكن تحديده لكل برنامج غسيل في هذا الجدول.

العملية-الغسالة 31

ملاحظة

- حدد درجة الحرارة المناسبة لبرنامج الغسيل الذي اخترته. واطب على اتباع ملصقات العناية المقدمة من الشركة المصنعة للملابس أو ما ذكر من تعليمات عند مباشرة الغسيل وذلك لتجنب وقوع ضرر بالملابس.
- حدد درجة حرارة الغسيل وسرعة الدوران المناسبين للبرنامج التي تريدها.
- قد تختلف درجة حرارة المياه الفعلية عن درجة حرارة الدورة الموضحة.
- يوصى باستخدام منظف محاييد.

اختبار التوافق مع SASO 2885.

اضبط البرامج التالية لاختبار التوافق مع SASO 2885.

- **القطن + 60 درجة مئوية + كثيف + عالي دوران** (حمولة كاملة)
- **القطن + 60 درجة مئوية + كثيف + عالي دوران** (نصف حمولة)
- **القطن + 40 درجة مئوية + كثيف + عالي دوران** (نصف حمولة)

^{1*} إنها تعد أكثر البرامج كفاءة فيما يتعلق بعمليات استهلاك الطاقة والماء لغسيل مثل هذه الملابس القطنية.

^{2*} تعتمد نتائج الاختبار على ضغط الماء وعسره ودرجة حرارة مدخل الماء، ودرجة حرارة الغرفة، ونوع الحمولة ومقدارها، ومدى اتساخ المنظف المستخدم، والتذبذب في إمدادات الطاقة الكهربائية الرئيسية، والخيارات الإضافية المختارة.

برنامج عادي بدرجة حرارة قياسية 40 درجة مئوية (نصف حمولة)	برنامج عادي بدرجة حرارة قياسية 60 درجة مئوية		
	نصف حمولة	حمولة كاملة	
1	1	1	عدد دورات الغسيل
40	40	60	استهلاك المياه أثناء دورة الغسيل (باللترات)
70	80	100	مدة كل دورة غسيل (بالدقائق)
2	2	2	عدد دورات الشطف
60/ 50	50/60	60/60	استهلاك المياه أثناء دورة الشطف (باللترات)
25/25	25/25	30/30	مدة كل دورة شطف (بالدقائق)
1	1	1	عدد دورات التشفيف
35	35	40	مدة كل دورة تشفيف (بالدقائق)

خيارات إضافية

البرنامج	غسيل فائق السرعة	بخار
القطن	1*	●

الوصف	
6 AI DD • AI DD ينتج إجراء حركات دورانية مناسبة لحلة الغسل وذلك بعد الانتهاء من استشعار الحمولة. • AI يكون قيد التنشيط عند تحديد برامج الوضع القطن وتشغيلها.	
7 مؤشرات حالة البرنامج • سيومض مصباح LED للمرحلة النشطة عند تشغيل برنامج الغسيل بينما ستظل مصابيح LED للمراحل الأخرى في وضعية الاستقرار. بعد استكمال المرحلة، سيقطع مصباح LED. إذا تم إيقاف الدورة مؤقتًا، فسيتم إيقاف مصباح LED للمرحلة النشطة عن الوميض.	

برنامج الغسيل

الوصف	الحد الأقصى للحمولة: مقطن	40 درجة مئوية (البرد حتى 60 درجة مئوية)
يقوم بغسل الغسيل المتسخ العادي من خلال الجمع بين حركات حوض الغسل المختلفة. • الضغط على الزر بدء/إيقاف مؤقت دون تحديد برنامج للعمل يتسبب في بدء تشغيل البرنامج القطن على الفور باستخدام الإعدادات الافتراضية.		
ملاحظة • اضبط البرنامج على القطن، 40 درجة مئوية (نصف حمولة)، القطن، 60 درجة مئوية (نصف حمولة) القطن، 60 درجة مئوية (حمولة كاملة) للاختيار بما يتوافق مع SASO 2885.		

الوصف	الحد الأقصى للحمولة 4 كجم (حاف واحد)	البرد (البرد حتى 40 درجة مئوية)
تستخدم في غسيل قطع كبيرة الحجم مثل أغطية السرير، والوسائد، وأغطية الأريكة، وما إلى ذلك.		

الوصف	الحد الأقصى للحمولة 4 كجم	البرد (البرد حتى 40 درجة مئوية)
مناسب للملابس الرقيقة التي يمكن غسلها باليد أو داخل الغسالة، مثل الصوف والملابس الداخلية والفساتين وغيرها من الملابس القابلة للغسيل.		

الوصف	الحد الأقصى للحمولة 3 كجم	95 درجة مئوية
مناسب لغسيل الملابس على درجة حرارة مرتفعة.		


الوصف	الحد الأقصى للحمولة 3 كجم	40 درجة مئوية (البرد حتى 40 درجة مئوية)
مناسب لغسل الحمولات الصغيرة والملابس قليلة الاتساخ في وقت قصير.		

الوصف	دورة التحميل	-
يسمح لك هذا البرنامج بتنزيل برنامج غسيل جديد وخاص يناسب جهازك وذلك باستخدام الهاتف الذكي. قليل الاتساخ هو البرنامج الافتراضي.		

العملية-الغسالة 29

الوصف	
3 زر بدء/إيقاف مؤقت - يُستخدم هذا الزر لبدء برنامج الغسيل أو إيقافه مؤقتًا. - في حالة الحاجة إلى إيقاف برنامج الغسيل مؤقتًا، اضغط على هذا الزر.	
4 تخصيص أزرار برامج الغسيل / الخيارات والوظائف الإضافية - استخدم هذه الأزرار لتحديد الخيارات المطلوبة للبرنامج المحدد. لا تتوفر جميع الخيارات في كل برنامج. - لاستخدام الوظائف الإضافية، اضغط مع الاستمرار على الزر المقابل لمدة 3 ثوانٍ. وعندها سوف يضيء الرمز المقابل على شاشة العرض. البدء عن بعد يمكنك استخدام تطبيق LG ThinQ في أي هاتف ذكي للتحكم في جهازك عن بعد. - لاستخدام هذه الوظيفة، راجع الوظائف الذكية. Wi-Fi اضغط مع الاستمرار على الزر غسيل لمدة 3 ثوانٍ لبدء توصيل الجهاز بتطبيق LG ThinQ.	
5 شاشة الوقت والحالة - تعرض شاشة العرض الإعدادات، والوقت المتبقي المُقدر، والخيارات، ورسائل الحالة. عندما يتم تشغيل الجهاز، ستضيء الإعدادات الافتراضية في شاشة العرض. - بينما يتم استشعار وزن الحمولة تلقائيًا، تومض الشاشة الموجودة على لوحة التحكم.	





شاشة الوقت والحالة

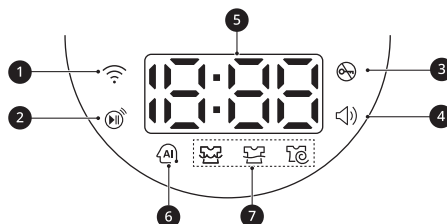

الوصف	
1 يكون قيد الإضاءة عند توصيل الجهاز بشبكة Wi-Fi في المنزل.	
2 يكون قيد الإضاءة عند تنشيط ميزة التحكم عن بعد.	
3 يكون قيد الإضاءة عند بدء البرنامج وإغلاق الباب.	
4 يضيء عند تشغيل الصافرة. لا يمكن تشغيل أو إيقاف تشغيل صوت الصافرة إلا من خلال تطبيق LG ThinQ.	
5 الوقت التقديري المتبقي - عند تحديد برنامج الغسيل، يتم عرض الوقت الافتراضي المحدد لهذا البرنامج. سيتغير هذا الوقت تبعًا للخيارات المحددة. - إذا ظهر --- على الشاشة، فسيظهر الوقت بعدما يكشف خيار استشعار الحمولة عن حجمها. هذا الأمر طبيعي. - الوقت الظاهر هو وقت تقديري فحسب. إذ يتوقف الوقت على ظروف التشغيل الطبيعية. قد تؤثر عوامل خارجية كثيرة (وزن الحمولة، ودرجة حرارة الغرفة، ودرجة حرارة الماء الداخل وغيرها) في الوقت الحقيقي.	

لوحة التحكم وجدول البرامج

خواص لوحة التحكم

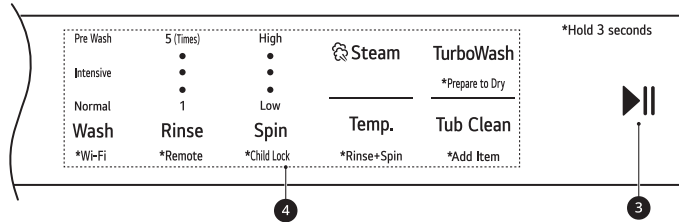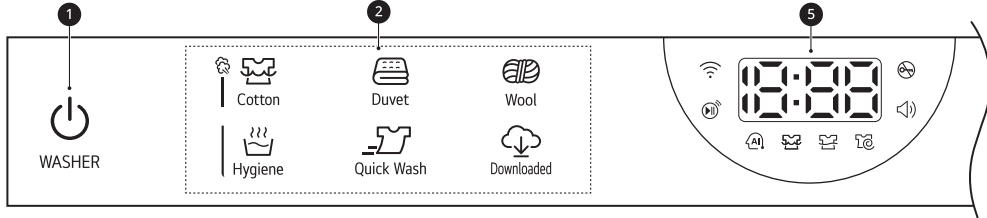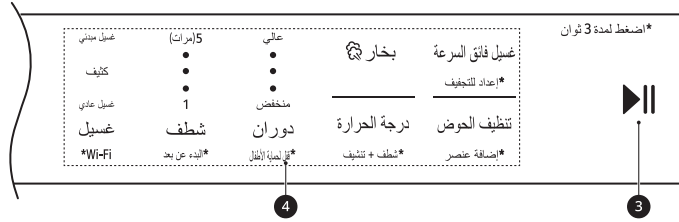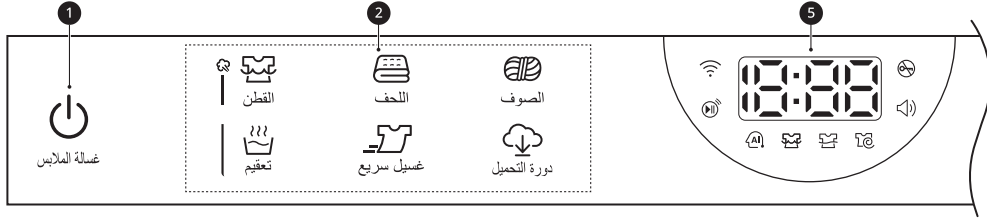

الوصف	
1 زر الطاقة التشغيل/إيقاف التشغيل • اضغط على هذا الزر لتشغيل الغسالة.	
2 أزرار البرامج • تتوفر البرامج وفقاً لنوع الملابس. • سيضيئ المصباح للإشارة إلى البرنامج المحدد.	

27 العملية-الغسالة

1 افتح الباب وضع أقراص التنظيف داخل حوض الغسل قبل وضع الملابس.

2 ضع الملابس في حوض الغسل وأغلق الباب.


ملاحظة

- لا تضع أقراص التنظيف داخل الموزع.

- كن حذرًا حتى لا تعلق يدك في الدرج أثناء غلقه.
- وجود القليل من المياه داخل حجيرات الموزع في نهاية الدورة أمر طبيعي.

حجيرة منعم القماش

- تحوي الحجيرة منعم القماش السائل الذي يوزع تلقائيًا خلال آخر دورة شطف. يمكنك استخدام مسحوق منعم القماش أو النوع السائل منه.
- اسكب منعم القماش إلى أن يصل إلى خط أقصى حد للماء. سكب منعم القماش بحيث يتجاوز خط أقصى حد للماء قد يتسبب في توزيعه قبل أوانه وبالتالي ظهور بقع على الملابس.

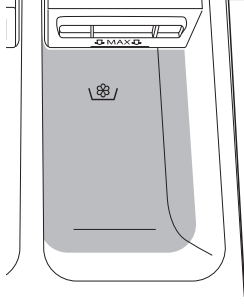

- راجع ملصق الملابس، قبل إضافة المنظف واختيار درجة حرارة الماء.
- استخدم المنظفات المخصصة لكل نوع من الملابس:
- غالبًا ما يتم تصنيع المنظف السائل لاستخدامات محددة، على سبيل المثال، للأنسجة الملونة والصوف أو الملابس الحساسة أو الغامقة.
- مسحوق الغسيل يكون ملائمًا لجميع أنواع الأنسجة.
- للحصول على نتائج غسيل أفضل للملابس البيضاء وذات الألوان الفاتحة، استخدم مسحوق غسيل يحتوي على مبيض.
- يتدفق المنظف من الموزع في بداية دورة الغسيل.

ملاحظة


- لا تترك المنظفات تتصلب. حيث يمكن أن يؤدي ذلك إلى حدوث انسداد، أو ضعف في أداء الشطف، أو رائحة.
- الحمولة الكاملة: وفقًا لتوصيات الشركة المصنعة.
- الحمولة الجزئية: 1/2 الكمية المعتادة.
- الحد الأدنى للحمولة: 1/3 الحمولة الكاملة.

استخدام الموزع

لإضافة مقدار من المنظف إلى الموزع:

1 افتح درج الموزع.

2 أضف المنظف والمنعم داخل الحجيرات الملائمة.

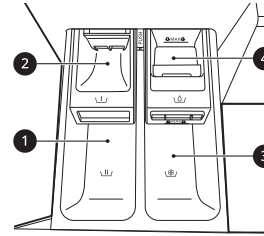

1 حجيرة منظف الغسيل الرئيسي

2 حجيرة منظف الغسيل المبدئي

3 حجيرة منعم القماش السائل


4 وحدة المبيض السائل

إضافة أقراص التنظيف

يمكنك استخدام أقراص التنظيف أثناء الغسيل.

3 أغلق درج موزع المنظفات بهدوء قبل بدء الدورة.


- إغلاق الدرج بقوة قد يتسبب في زيادة تدفق المنظف داخل حجيرة أخرى أو توزيعه داخل حوض الغسل قبل ضبط البرنامج.



العملية-الغسالة 25

فحص الملابس قبل وضع الحمولة

- اجمع بين الأغراض الكبيرة والصغيرة في الحمولة. وضع الأغراض الكبيرة أولاً.
- لا يجب أن تزيد الأغراض الكبيرة عن نصف إجمالي الحمولة. ولا تغسل أغراضاً فردية حيث قد يؤدي هذا إلى عدم التوازن في الحمولة. وأضف قطعة أو قطعتين متشابهتين.
- افحص جميع الجيوب للتأكد من أنها فارغة. فقد تؤدي أشياء مثل المسامير، ومشابك الشعر، والثقل، والأقلام، والقطع المعدنية، والمفاتيح إلى إحداث ضرر في كل من الجهاز وملابسك.

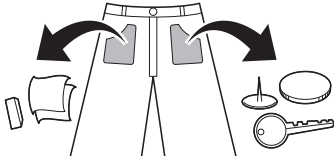

- اغسل الأقمشة الحساسة (الجوارب أو حمالات الصدر المزودة بأسلاك داخلية) في شبكة الغسيل.
- أغلق السحابات والخلفات والسلاسل للتأكد من أن هذه الأشياء لن تعلق بالملابس الأخرى.
- امسح الأوساخ والبقع من خلال وضع مقدار صغير من المنظف المذاب في الماء على البقع وغسلها للمساعدة في إزالة الأوساخ.

إضافة المنظفات والمواد المنعمة

مقدار المنظف

- يجب استخدام المنظف وفقاً لتعليمات الشركة المصنعة للمنظف، واختياره وفقاً لنوع النسيج ولونه ومدى اتساخه ودرجة حرارة الغسل. استخدم المنظفات المناسبة للغسالات ذات حوض الغسيل من نوع (التحميل الأمامي).
- في حالة حدوث الكثير من الرغوي، يتعين عليك تقليل كمية المنظف.
- عند استخدام مقدار كبير من المنظف، فقد تحدث رغوة كثيرة جداً وهذا يقلل من كفاءة الغسيل أو يؤدي إلى ثقل الحمولة على المحرك.
- إذا كنت ترغب في استخدام منظف سائل، فاتبع الإرشادات التي توفرها الشركة المصنعة للمنظف.
- يمكنك سكب المنظف السائل مباشرة في درج المنظفات الرئيسي إذا كنت ستبدأ دورة الغسيل على الفور.
- لا تستخدم المنظفات السائلة إذا كنت قد حددت خيار **غسيل مبدئي** حيث سيتم توزيع السائل على الفور وقد يتصلب في الدرج أو الحوض.
- قد تحتاج إلى تعديل مقدار استخدام المنظف حسب درجة حرارة الماء، وعسر الماء، وحجم الحمولة، ومستوى الأوساخ. للحصول على أفضل النتائج، تجنب الإفراط في استخدام المنظف. التناقص عن فعل ذلك يؤدي إلى حدوث رغوا زائدة عن الحد.

تجهيز حمولة الغسيل

تصنيف الملابس

- للحصول على أفضل النتائج، قم بتصنيف الملابس وفقاً للمكتوب على الملصق الذي يحتوي على نوع النسيج ودرجة حرارة الغسل. قم بتعديل سرعة الدوران أو شدة الدوران وفقاً إلى نوع النسيج.
- درجة الاتساخ (شديد، عادي، خفيف): افرض الملابس وفقاً لدرجة اتساخها. وإذا كان ذلك ممكناً، فلا تقم بغسل الملابس شديدة الاتساخ مع الملابس خفيفة الاتساخ.
- اللون (أبيض، فاتح، غامق): اغسل المنسوجات الغامقة أو المصبوغة بشكل منفصل عن المنسوجات البيضاء أو الفاتحة. يمكن أن ينتج عن خلط المنسوجات الفاتحة بالمنسوجات المصبوغة انتقال اللون أو تغيير لون الملابس الأفتح لوناً.
- الكتان (منتجات كتانية، منتجات تجمع الكتان): قم بفصل المنتجات الكتانية والمنتجات التي تجمع الكتان. يمكن أن تعمل المنتجات الكتانية إلى تراكم الكتان على المواد المجمعة للكتان.

التحقق من ملصق العناية بالملابس

ستوضح لك الرموز مكونات نسيج الملابس وطريقة غسلها.

الرموز الموجودة على ملصقات العناية

الرمز	الغسيل/نوع النسيج
	• غسيل عادي • قطن، أنسجة مختلطة
	• عناية سهلة • صناعي، أنسجة مختلطة
	• غسيل حساس خاص • ملابس حساسة
	• غسيل يدوي فقط • صوف، حرير
	• ممنوع الغسل

ملاحظة

- تعطيك الشُروط الموضوعة أسفل الرمز المعلومات المتعلقة بنوع النسيج وكذلك مقدار الضغط الميكانيكي الأقصى المسموح.

العملية-الغسالة

نظرة عامة على التشغيل

باستخدام الغسالة


قبل الغسيل الأول، اختر برنامج غسيل القطن وأضف نصف كمية المنظفات، واترك الجهاز يعمل بدون وضع ملابس. هذا يزيل الرواسب المحتملة من حوض الغسيل والتي قد تبقى أثناء التصنيع.

1 افرز الملابس حسب نوع القماش ومستوى التربة واللون وحجم الحمولة حسب الحاجة.

2 افتح الباب وقم بتحميل الأشياء في الجهاز.

تنبيه


• قبل إغلاق الباب، تأكد من أن جميع الملابس والأغراض موجودة داخل الحوض وغير متدلية على سدادة الباب المطاطية حيث ستعلق عند إغلاقه. إن التقاعس عن فعل ذلك سينتج عنه وقوع ضرر بسدادة الباب وبالملابس.

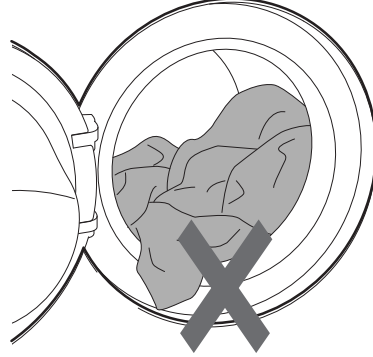

3 أغلق الباب.

تنبيه

• أخرج أي قطع من الحشوة المرنة الخاصة بسدادة الباب لمنع إحداث تلف في الملابس والسدادة.

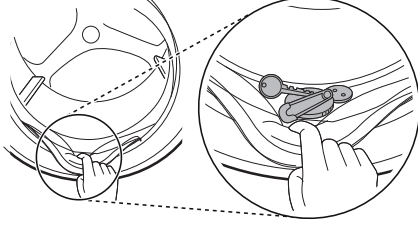

4 أضف منتجات التنظيف أو المنظف والمنعم.

• أضف كمية مناسبة من المنظف إلى موزع المنظف. وعند الحاجة، أضف المبيض أو منعم القماش إلى المناطق المناسبة في الموزع.

5 اضغط على الزر الطاقة لتشغيل الجهاز.

6 اختر دورة الغسيل المطلوبة.

• اضغط زر اختيار الدورات بشكل متكرر حتى يتم تحديد الدورة المطلوبة.

• اختر الآن درجة حرارة الغسيل وسرعة الدوران. انتبه إلى ملصق العناية بالنسيج الموجود على ملابسك.

7 بدء الدورة.


• اضغط على الزر بدء/إيقاف مؤقت لبدء الدورة. ستتحرك الغسالة لفترة وجيزة بدون مياه لقياس وزن الحمولة. إذا لم يتم الضغط على الزر بدء/إيقاف مؤقت خلال وقت معين، فسيوقف تشغيل الغسالة وستفقد جميع الإعدادات.

8 إنهاء الدورة.

• عند انتهاء الدورة، سيصدر صوت لحن. في الحال أخرج ملابسك من الجهاز للتقليل من التجاعيد.

التركيب 23

7 ارفع المجفف وافصله عن الغسالة.

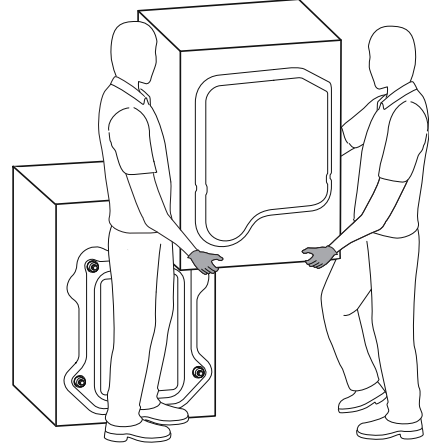

⚠ تحذير


- احم يديك وذراعيك من الحواف الحادة لإطار اللوحة المكشوف أعلى الغسالة.
- لتجنب إصابات حالات الإجهاد، استخدم شخصين أو أكثر لرفع المجفف.

ملاحظة

- عند تجميع الجهاز، أجر ذلك بترتيب عكسي.

الفك

4 اسحب لوحة التحكم للأمام لإزالتها.

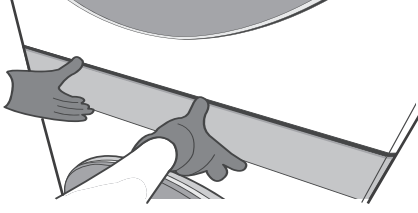

فك الغسالة والمجفف

لا يمكن فك الغسالة والمجفف وتركيبهما للاستخدام جنبًا إلى جنب. إذا كان من الضروري فك الجهاز لتحريكه أو إعادة تثبيته، فاتبع هذه التعليمات.


⚠ تحذير

- احم يديك وذراعيك من الحواف الحادة. لتقليل مخاطر إصابة الأشخاص، التزم بجميع إجراءات السلامة الموصى بها في الصناعة بما في ذلك استخدام القفازات ذات الأكمام الطويلة ونظارات السلامة.

ملاحظة

- لا يغطي ضمان المنتج أي ضرر ناتج عن فك/تجميع أو تركيب غير صحيح للمنتج.

5 أفضل الأسلاك من الغسالة ① والمجفف ② إلى لوحة التحكم.

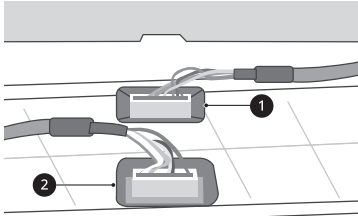

⚠ تنبيه


- قم دائمًا بتأريض نفسك قبل لمس لوحة الدوائر المطبوعة أو الأسلاك. قد يؤدي تفريغ الكهرباء الساكنة إلى حدوث خلل في المنتج.

ملاحظة

- اثن الأسلاك إلى الجانب لتجنب الضغط عليها.


2

قم بفك البراغي المجمعة على دعامة التكديس في الجزء الخلفي من الجهاز.

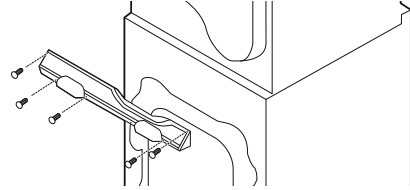


3

ادفع الأغشية على الجانبين الأيمن والأيسر من لوحة التحكم في مقدمة الجهاز. قم بفك البراغي الموجودة أسفل الأغشية.

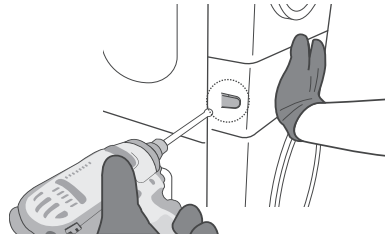


6 قم بفك البرغي الثاني من أعلى البراغي الأربعة الموجودة على اليسار واليمين.

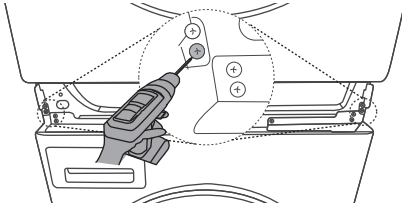

التركيب 21

- إذا كان من الصعب وضع الشرائح المانعة للانزلاق تحت الأرجل الأمامية، فضعها تحت الأرجل الخلفية. يعد تثبيت الشرائح المانعة للانزلاق تحت الأقدام الأمامية هو الخيار الأكثر فعالية.

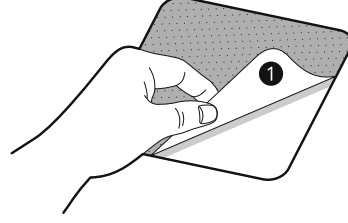

4 ضع الجهاز على الشرائح المانعة للانزلاق.

- لا تلتصق الجزء اللاصق للشرائح المانعة للانزلاق 1 بأرجل الجهاز.

ملاحظة



- يمكن الحصول على شرائح مانعة للانزلاق من مركز خدمة LG Electronics.

ضبط وتسوية الأقدام

عند تركيب الجهاز، يجب أن تكون أرجل الجهاز متحاذية وفي وضع استواء تام. قد يتعرض الجهاز للتلف أو قد لا يعمل بشكل صحيح إذا لم تكن أرجل الجهاز متحاذية وفي وضع استواء سليم.

1 قم بتسوية الأرجل حسب الحاجة إذا كانت الأرضية غير مستوية.


- لا تضع قطع الخشب وما إلى ذلك تحت أرجل الجهاز.
- تأكد من استقرار الأرجل الأربعة وثباتها على الأرضية.

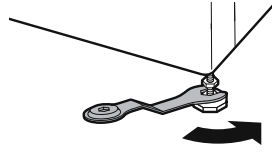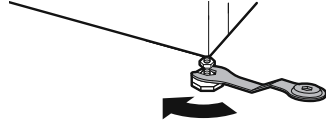

ملاحظة

- لا يتم بتركيب الغسالة على قاعدة عمود أو منصة أو سطح مرتفع ما لم يتم بـ LG Electronics بصناعاته ليستخدم مع هذا الطراز.

2 تأكد من استواء الجهاز على الأرض تمامًا مستخدمًا ميزان الماء ①.

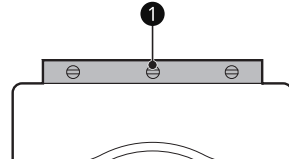

1 نظّف الأرضية لوضع الشرائح المانعة للانزلاق.


- استخدم قطعة قماش جافة لإزالة الأجسام الغريبة والرطوبة وتنظيفها. وإذا ظل بالمكان بعض الرطوبة، فقد تنزلق الشرائح المانعة للانزلاق.

2 اضبط المستوى بعد وضع الجهاز في منطقة التركيب.

3 ضع الجانب اللاصق ① للشرائح المانعة للانزلاق على الأرض.

3

أحكام ضبط الأرجل باستخدام صواميل القفل ② عن طريق تدويرها عكس اتجاه عقارب الساعة بعكس اتجاه الجزء السفلي من الجهاز.

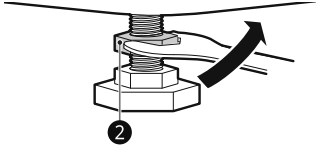

4

تحقق من إحكام جميع صواميل القفل الموجودة في الجزء السفلي من الجهاز بشكل صحيح.

ملاحظة

- يضمن تحديد المكان والمستوى المناسبين للغسالة تشغيل لفترة طويلة، ومنظمة، وفعالة.
- يجب أن يكون الجهاز في وضع أفقي 100% ومنصوبًا بثبات في مكانه على أرضية صلبة ومسطحة.
- ويجب ألا يكون "متأرجحًا" بين الزوايا وهو محمل.
- لا تدع أقدم الغسالة تبتل. قد يؤدي عدم القيام بذلك إلى الاهتزاز أو الضوضاء.

استخدام شرائح مانعة للانزلاق




تختلف هذه الخاصية وفقًا لنوع الطراز الذي تم شراؤه. عند تركيب الجهاز على سطح زلق، قد تتحرك الغسالة نتيجة للاهتزاز الشديد. ويمكن أن تؤدي التسوية غير الصحيحة إلى حدوث عطل من خلال الضوضاء والاهتزاز. في حالة حدوث ذلك، يتعين عليك تركيب شرائح مانعة للانزلاق أسفل أرجل الاستواء وضبط المستوى.

19 التركيب

- استخدم الدعامة المرفقية (مضمنة) إذا لزم الأمر. عند تركيب خرطوم التصريف في البالوعة، أحكم تثبيته باستخدام سلسلة.

عند التوصيل بماسورة نفايات، استخدم المشبك ③ بنهاية خرطوم التصريف القصير.

الارتفاع

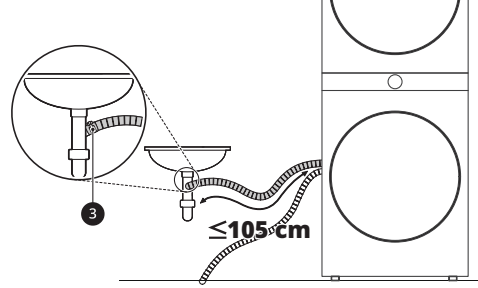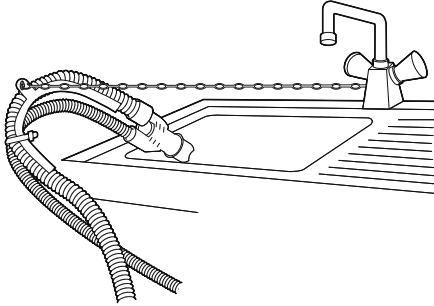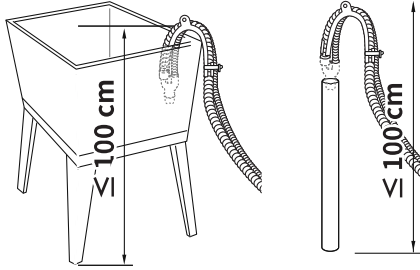

⚠ تنبيه

- اضبط مشبك خرطوم السلك لمنع الخرطوم من الارتخاء أو التسرب. قد يؤدي عدم القيام بذلك إلى فيضان. يساعد استخدام موصل خرطوم التصريف في تجنب الشفط أو الروائح أو التصريف غير السليم.
- تأكد أن خرطوم التصريف غير ملتوية أو مضغوطة. حيث يعد هذا سبب محتمل لمشاكل التصريف أو الضوضاء.

ملاحظة

- وفقًا لبيئة التثبيت، قد تضطر إلى شراء موصل خرطوم تصريف منفصل. سوف يتناسب الموصل المزود مع فتحة تصريف جانبية قياسية لحوض الغسيل.

ضبط مستوى الجهاز

التحقق من ضبط المستوى

- عند الضغط على حواف اللوحة العلوية للجهاز بشكل قطري، فيجب ألا يتحرك الجهاز لأعلى ولأسفل على الإطلاق (افحص كلا الاتجاهين).
- في حالة تأرجح الجهاز عند الضغط على اللوحة العلوية للجهاز بشكل قطري، قم بتعديل الأقدام مرة أخرى.
- تحقق من وضع الجهاز في وضعية مستوية على نحو صحيح بعد تركيبه.


ملاحظة

- يمكن أن تُحدث الأرضيات الخشبية أو المعلقة اهتزازًا عنيفًا وعدم اتزان. تعزيز الأرضيات الخشبية أو تثبيتها قد يؤدي إلى إيقاف أو تقليل الضوضاء الشديدة أو الاهتزاز.

ملاحظة

- يجب عدم وضع خرطوم التصريف أعلى من 100 سم من مستوى الأرض. قد لا يتم تصريف الماء في الجهاز أو يتم تصريفه ببطء.
- سيؤدي تثبيت خرطوم التصريف بطريقة صحيحة إلى حماية الأرضية من الضرر الناتج عن تسرب الماء.
- إذا كان خرطوم التصريف طويلاً جداً، فلا تحاول إدخاله مرة أخرى بالقوة داخل الجهاز. حيث قد يؤدي إلى إحداث ضجيج غير عادي.


3 قم بتوصيل خرطوم التصريف بالمجفف وثبت مشبك الخرطوم.

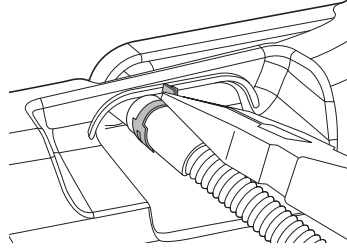


توصيل الخراطيم بموصل خرطوم التصريف

1 حرك المشبك المرفق على نهاية خرطوم تصريف الغسالة.

2 قم بتوصيل خراطيم التصريف من الغسالة والمجفف بموصل خرطوم التصريف. اربط المشبك 1 لإبقاء خرطوم الغسالة في مكانه.

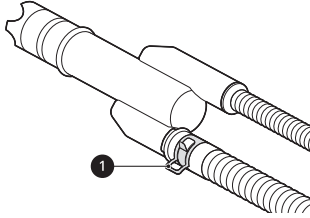


3 استخدم المشبك 2 الموجود في خرطوم التصريف القصير (المرفق) لتثبيتته بالفتحة السفلية لموصل خرطوم التصريف.

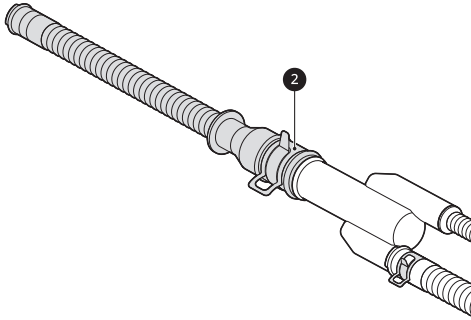


4 قم بتوصيل خرطوم التصريف القصير بشكل آمن بمصرف أرضية أو بالأنبوب الرأسي.


4 قم بفك البرغي 2 الموجود على دعامة التكديس.



5 اربط شريط المشبك لإحكام ربط خرطوم تصريف المجفف على دعامة التكديس.

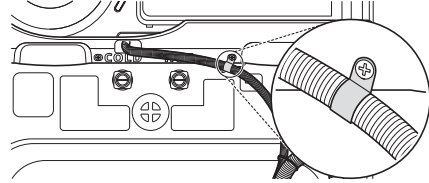

6 استخدم شريط الربط المتوفر 3 لإحكام ربط 2 من خراطيم التصريف في مكانهما.

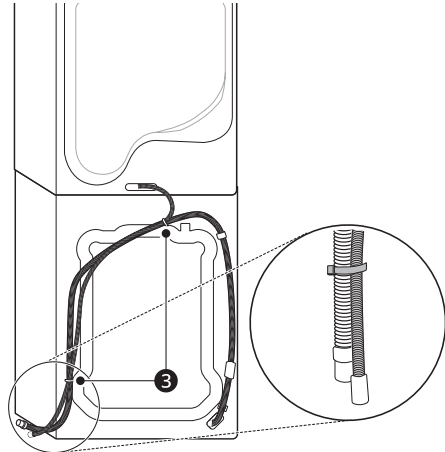

17 التركيب

ملاحظة


- بالنسبة للطرز المزودة بإدخال مياه واحد، لا تقم بتوصيل الخرطوم بموزع مياه ساخنة بل قم بتوصيله بموزع مياه باردة فقط.
- بعد الانتهاء من التوصيل، وفي حالة وجود تسرب ماء من الخرطوم، كرر الخطوات نفسها. استخدم الأنواع الأكثر تقليدية لصنبور إمداد المياه. إذا كان الصنبور مربع الشكل أو كبيراً للغاية، فانزع لوحة التوجيه قبل إدخال الصنبور في المحول.
- تأكد من عدم التواء الخرطوم أو تعلقه.

١٧


تركيب خرطوم التصريف

توصيل خرطوم التصريف بالمجفف


- 1 أزل المنطقة المختومة في منتصف الدعامة لعمل فتحة لخرطوم التصريف الخاص بالمجفف.

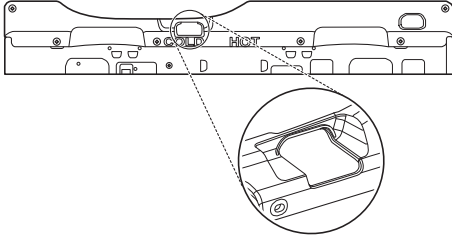


- 2 أدخل مشبك الخرطوم 1 في خرطوم التصريف الخاص بالمجفف.

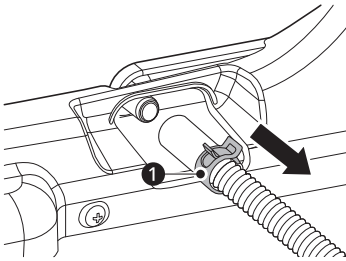

- 3 ادفع المحول إلى طرف الصنبور بحيث تشكل السدادة المطاطية وصلة منيعة للماء. أحكم ربط مسامير التثبيت الأربعة واللوحة الحلقية للمحول.

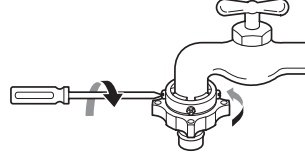

- 4 اسحب لوحة مزلاج الموصل 6 إلى أسفل، وادفع خرطوم الإدخال إلى المحول، وحرر لوحة مزلاج الموصل. وتأكد أن أقفال المحول في مكانها.

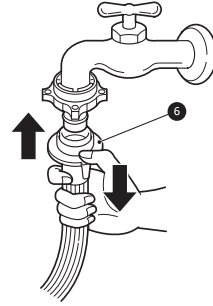


ملاحظة


- بعد توصيل خرطوم إدخال الماء، قم بتشغيل صنبور الماء لطرد المواد الغريبة (الغبار، والرمل، ونشارة الخشب، وما إلى ذلك) الموجودة في خطوط الماء. واجعل الماء يتم تصريفه في دلو، وتحقق من درجة حرارة الماء.

توصيل الخرطوم بالجهاز


- 1 ثبت خرطوم الإمداد بصمام إدخال المياه الموجود بالجزء الخلفي من الجهاز.

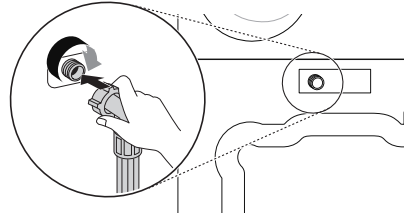

3 ادفع المحول إلى طرف الصنبور بحيث يتم توصيل السدادة المطاطية لتصبح وصلة منيعة للماء. وأحكم ربط مسامير التثبيت الأربعة.

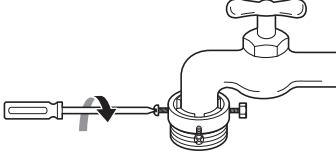


4 ادفع خرطوم الإدخال **3** بشكل عمودي لأعلى بحيث يمكن للسدادة المطاطية الموجودة داخل الخرطوم أن تلتصق بالصنبور تمامًا ثم أحكم ربطه عن طريق تدويره إلى اليمين.

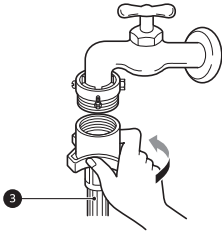


توصيل خرطوم من نوع اللمسة الواحدة بالصنبور غير المزود بأسنان


1 قم بفك اللوحة الحلقية للمحول **4** وحرر مسامير التثبيت الأربعة.

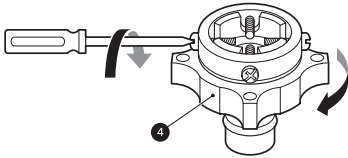

2 أزل لوحة التوجيه **5** إذا كان الصنبور كبيرًا جدًا حتى يلائم المحول.

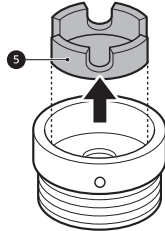


• لا تستخدم المعدات الآلية مثل الكماشة لإحكام ربط خرطوم إدخال المياه. تحقق من توصيل الطرف المنحني في خرطوم إدخال المياه بالجهاز.

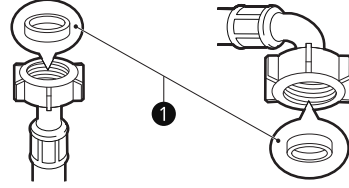


توصيل الخرطوم بصنبور الماء

توصيل الخرطوم اللولبي بالصنبور المزود بأسنان
ثبت موصل الخرطوم بصنبور إمداد الماء.

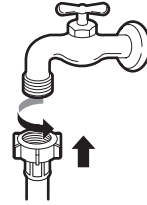


توصيل خرطوم لولبي بالصنبور غير المزود بأسنان

1 فك مسامير التثبيت الأربعة

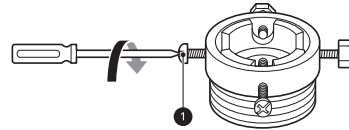


2 أزل لوحة التوجيه **2** إذا كان الصنبور كبيرًا جدًا حتى يلائم المحول.

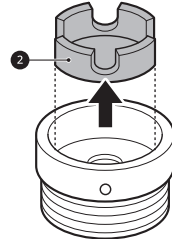

15 التركيب

- قم بتركيب أغطية المسامير ② الموجودة في عبوة الملحقات أو المثبتة بالجزء الخلفي من الغسالة.

ملاحظة

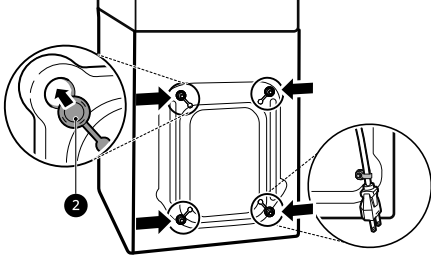


ملاحظة

- احتفظ بمسامير النقل وعناصر التثبيت لتستخدمها مستقبلاً.
- لمنع تلف الجهاز أثناء النقل:
 - أعد تثبيت مسامير النقل.
 - قم بتأمين سلك الطاقة في الجزء الخلفي من الجهاز.

رفع الجهاز عن قاعدة الفلين

- * تختلف هذه الخاصية حسب الطراز الذي تم شراؤه.
- بعد إزالة الكرتون ومواد الشحن، ارفع الجهاز من على قاعدة القوم.

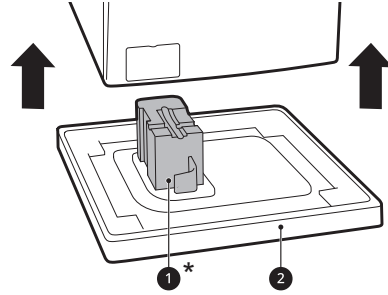


- تأكد من أن دعامة الحوض ① بعيدة عن القاعدة ولا تلتصق بأسفل الجهاز.
- إذا لزم قلب الغسالة لأسفل لإزالة القاعدة الكرتونية ②، فيجب عليك دائماً حماية جانب الغسالة وقلبها بحذر على جانبها. لا تقلب الجهاز على الجانب الأمامي أو الخلفي.

إزالة مجموعات مسامير النقل

- لمنع حدوث اهتزاز شديد وكسر للجهاز، أزل مسامير النقل وعناصر التثبيت.

- 1 ابدأ بمسماري النقل ① الموجودين بالأسفل، باستخدام مفتاح الربط (المرفق) لفك جميع مسامير النقل بالكامل عن طريق تدويرها في عكس اتجاه عقارب الساعة.

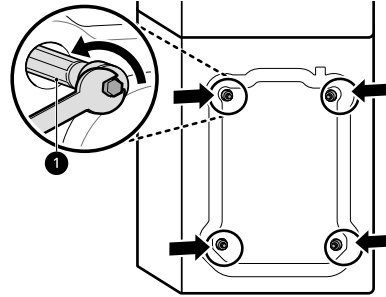

توصيل خرطوم إمداد الماء

ملحوظة للتوصيل

- يجب أن يكون ضغط المياه بين 50 كيلو باسكال و 800 كيلو باسكال (0.5-8.0 كجم ثقلي / سم²). إذا كان ضغط المياه أكثر من 800 كيلو باسكال، يجب تركيب جهاز تخفيف الانضغاط.
- تحقق من حالة خرطوم إمداد الماء بصورة دورية واستبدله إذا لزم الأمر.

ملاحظة

- لا تتألف في إحكام ربط خرطوم إدخال المياه أو استخدم المعدات الآلية لربطها بصمام الإدخال.
- ليس هناك حاجة لمزيد من الحماية ضد التدفق الارتجاعي لوصلة إدخال الماء.

التحقق من السدادة المطاطية

- تتوفر اثنتان من السدادات المطاطية ① مع خرطوم إدخال المياه بالصمام. تستعملان لمنع تسريب الماء. يتم إحكام التوصيل بالصنابير.

- 2 أخرج مجمع المسامير عن طريق هزها بلطف مع سحبها إلى الخارج.

- 3 تركيب أغطية الفتحات.

خزانة

يجب أن يحتوي باب الخزانة على فتحتين (بفتحات تهوية)، مساحة كل منهما لا تقل عن 387 سم²، وتقع على بعد 8 سم من أسفل وأعلى الباب.

درجة الحرارة المحيطة

• لا تتركب الجهاز في غرف يمكن أن تصل درجة حرارتها إلى التجمد، حيث يمكن أن تنفجر الخرطوم المتجمدة تحت الضغط. يمكن أن تقل كفاءة وحدة التحكم الإلكترونية في ظل درجات الحرارة الأقل من درجة التجمد.

ملاحظة

- في حالة الحصول على الجهاز في الشتاء وكانت درجات الحرارة أقل من درجة التجمد، فضع الجهاز في درجة حرارة الغرفة لبضع ساعات قبل تشغيله.
- يعمل الجهاز بشكل أفضل عند درجة حرارة الغرفة 23 درجة مئوية.

ملاحظة

- يمكن شراء أكواب مطاطية (رقم القطعة **MJB65174401**، **MJB65174501**) من مركز خدمة LG.

التوصيلات الكهربائية


- لا تستخدم سلك إطالة ولا محولاً مزدوجاً.
- احرص دائماً على فصل الجهاز وإيقاف إمداد الماء بعد الاستخدام.
- يتعين توصيل الجهاز بمقبس مؤرض وفقاً للوائح توصيل الأسلاك الكهربائية الحالية.
- يجب وضع الجهاز بحيث يمكن الوصول إلى القابس بسهولة.
- يجب أن يكون مأخذ التيار الكهربائي بطول 1 متر من كلا جانبي الجهاز.

⚠ تحذير

- يجب عدم إصلاح الجهاز إلا بواسطة شخص مؤهل، حيث يمكن أن تؤدي الإصلاحات التي تتم من قبل أشخاص ليس لديهم خبرة إلى التعرض إلى إصابة أو عطل خطير. اتصل بفني الإصلاح المحلي المعتمد من LG.
- يجب توصيل قابس الطاقة بمقبس تيار كهربائي مناسب مركّب ومؤرض وفقاً لجميع القوانين واللوائح المحلية.

الأرضيات الخشبية (الأرضيات المعلقة)


عند تركيب الجهاز على أرضيات خشبية استخدم أكواباً مطاطية للحد من حدوث اهتزاز قوي وخال في الاتزان. يمكن أن تُحدث الأرضيات الخشبية أو المعلقة اهتزازاً قوياً وخالاً في الاتزان وأخطاءاً وأعطالاً.

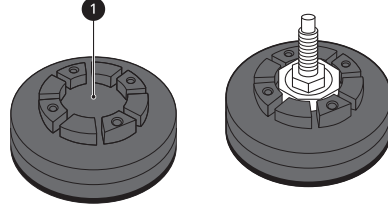

- لتقليل الاهتزاز، ننصحك بوضع أكواب مطاطية ① سمكها لا يقل عن 20 مم أسفل كل رجل من أرجل الجهاز، ويتم تثبيتها على عارضتين على الأقل من عوارض الأرضية باستخدام براغي.
- إن أمكن، قم بتركيب الجهاز في زاوية من زوايا الغرفة، بحيث تكون الأرضية أكثر ثباتاً.
- ثبت الأكوام المطاطية للحد من الاهتزاز.

فتح تغليف الجهاز**⚠ تحذير**

- عند تركيب هذا الجهاز، عليك اتخاذ الإجراءات المناسبة لحماية نفسك، على سبيل المثال بارتداء القفازات الواقية.
- يتطلب نقل الجهاز أو تركيبه شخصين أو أكثر. قد يؤدي عدم اتباع هذه التعليمات إلى حدوث إصابة.
- عند تحريك المنتج، قم بإمالة باتجاه الجزء الخلفي منه. لا تنقل المنتج في وضع أفقي.

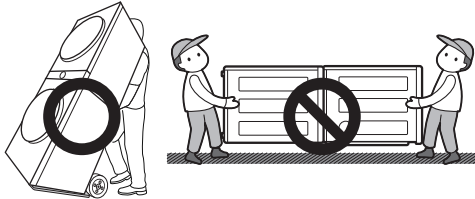
**⚠ تنبيه**

- إذا تم تركيب الجهاز على أرضية غير مستوية (مثل أرضية خشبية) فإن الضمان لا يغطي الأضرار والتكاليف الناتجة بسبب التثبيت على سطح غير مستقر.

التركيب 13

H	189 سم
H'	200 سم

يكون الصنوبر على الجانب عند وضع الجهاز.

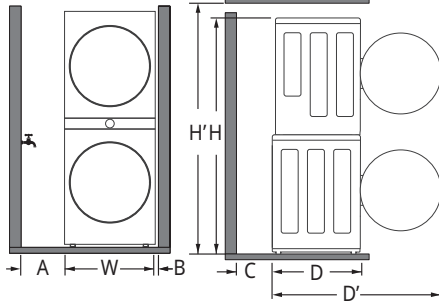

A	15 سم ^{1*}
W	70 سم
B	5 سم
C	10 سم
D	77 سم
D'	140 سم ^{1*}
H	189 سم
H'	200 سم

⚠ تحذير

- لا يستخدم هذا الجهاز إلا للأغراض المنزلية فقط ولا ينبغي استخدامه في الاستخدامات المتعددة.

ملاحظة

- لا تحاول أبدًا تسوية أي أرضية غير مستوية بوضع قطع من الخشب أو الورق المقوى أو مواد مشابهة تحت الجهاز.

التهوية

الفجوة أو تحت العداد

تأكد من عدم إعاقة السجاد أو البساط أو ما إلى ذلك لدوران الهواء حول الجهاز.

متطلبات مكان التركيب

تحقق من المعلومات التالية قبل تركيب الجهاز للتأكد من تركيبه في المكان الصحيح.

مكان التركيب


- يجب تركيب هذا الجهاز على أرضية ثابتة وذلك للحد من حدوث اهتزاز أثناء دورة الدوران. الأرضية الخرسانية هي أفضل اختيار، فهي أقل عرضة للاهتزاز الذي يحدث أثناء دورة الدوران مقارنة بالألواح الأرضية أو الأسطح المغطاة بالسجاد.
- إذا كان من المستحيل تجنب وضع الجهاز بجانب موقد غاز أو موقد يعمل بالفحم، فيجب وضع عازل (600 × 850 مم) مغطى برفائق الألمنيوم على الجانب المواجه للفرن أو الموقد بين الجهازين.
- تأكد عند تركيب الجهاز من سهولة وصول المهندسين إليه في حالة تعطله.
- عند تركيب الجهاز، اضبط كل الأقدام الأربعة باستخدام مفتاح صواميل النقل الموفرة لضمان استقرار الجهاز.

التركيب الأرضي

1* أدنى مساحة للتثبيت

لضمان خلوص كافٍ لخراطيم إدخال المياه وخرطوم التصريف وتدفق الهواء، اترك الحد الأدنى من الخلوص على الجانبين وخلف الجهاز. تأكد من السماح بقوالب الجدران أو الأبواب أو الأرضيات التي قد تزيد من الخلوص المطلوب.

يكون الصنوبر في الخلف عند وضع الجهاز.

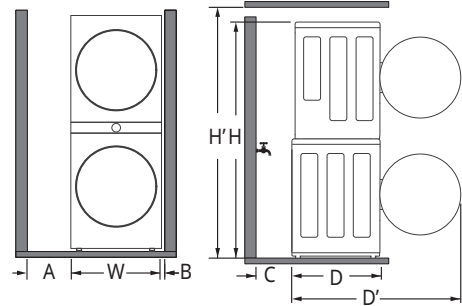


A	30 سم ^{1*}
W	70 سم
B	5 سم
C	20 سم
D	77 سم
D'	140 سم ^{1*}

الطراز	/ WK2116BST / WK2116WHT / WK2116BST1 WK2116WHT1
ضغط ماء الإدخال المسموح به	50 كيلو باسكال - 800 كيلو باسكال (0.5 – 8.0 كجم ثقلي/سم ²)
درجة الحرارة المسموح بها	5 – 35 درجة مئوية
استهلاك المياه السنوي	38500 لتر/سنة
استهلاك الطاقة السنوي	423 كيلو وات ساعة/سنوياً (غسيل) / 300 كيلو وات ساعة/سنوياً (جاف)
رقم IP (درجة الحماية)	IPX4
بلد المنشأ	صنع في كوريا

التركيب 11

الملحقات

الصور

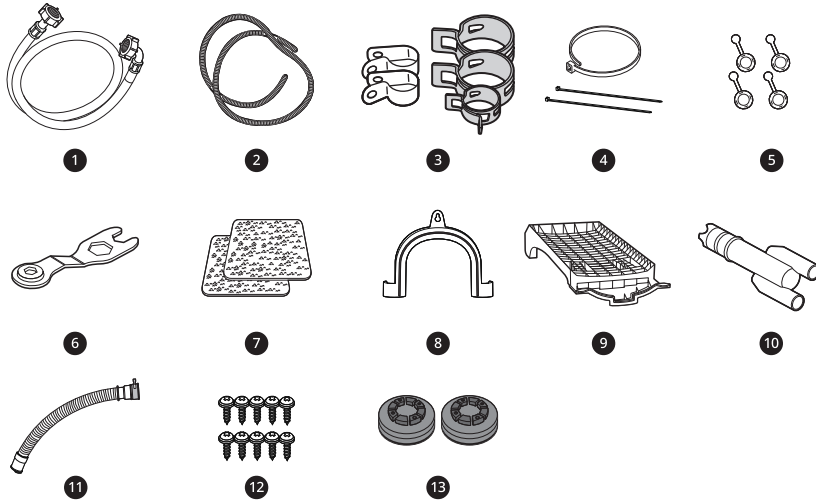

1	توصيل خرطوم الإمداد (للغسالة)	2	خرطوم تصريف المياه (للمجفف)	3	مشابك (5 قطع)
4	روابط الكابلات (3 قطع)	5	أغطية لتغطية فتحات مسامير النقل	6	مفتاح ربط
7	شرائح مانعة للانزلاق	8	دعامة مرفقية لتثبيت خرطوم التصريف	9	رف تجفيف
10	موصل خرطوم التصريف	11	خرطوم تصريف قصير	12	براغي (10 قطع)
13	سدادات الساق (قطعتان)				

ملاحظة

- قد تختلف الصور الموجودة في هذا الدليل عن المكونات الفعلية والملحقات التي تخضع للتغيير من قبل الشركة المصنعة دون إشعار مسبق لأغراض تحسين المنتج.

المواصفات

الطراز	/ WK2116BST / WK2116WHT / WK2116BST1 WK2116WHT1
مصدر الطاقة	220-240 فولت~، 50/60 هرتز
الأبعاد (العرض × العمق × الارتفاع)	700 مم × 770 مم × 1890 مم
وزن المنتج	154 كجم
الحد الأقصى للطاقة	2100 واط (غسيل) / 1400 واط (جاف)

10 التركيب

- 1 سلك الطاقة (للمجفف)
- 2 فتحة التصريف (للمجفف)
- 3 إمداد الماء البارد (للغسالة)
- 4 براغي الشحن
- 5 خرطوم التصريف (للغسالة)
- 6 سلك الطاقة (للغسالة)

9 التركيب


التركيب

الأجزاء والمواصفات

ملاحظة

- يُمكن تغيير الشكل والمواصفات دون الإخطار بذلك من أجل تحسين جودة الجهاز.

الشكل الأمامي

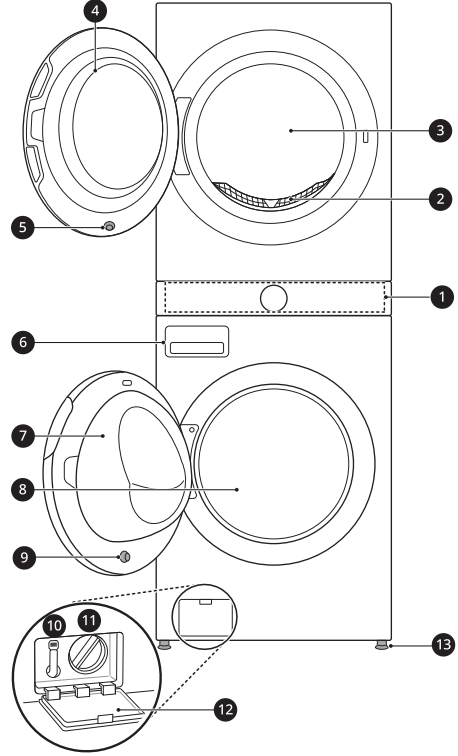

1 لوحة التحكم

2 فلتر الوبر

3 حوض المجفف

4 باب المجفف

5 مغناطيس باب المجفف

6 درج موزع المنظف

7 باب الغسالة

8 حوض الغسالة

9 مغناطيس باب الغسالة


10 خرطوم التصريف

11 فلتر مضخة التصريف

12 غطاء فلتر مضخة التصريف

13 أقدام التسوية

شكل الجهاز من الخلف

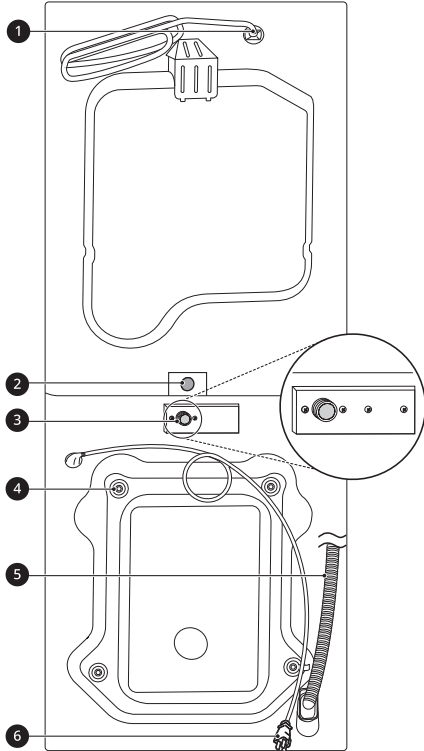

الصيانة

- افصل الطاقة عن الجهاز قبل تنظيفه. لا يؤدي ضبط عناصر التحكم إلى إيقاف أو إلى وضع الاستعداد إلى فصل الطاقة عن هذا الجهاز.
- أدخل قابس الطاقة بإحكام في مأخذ التيار الكهربائي بعد الإزالة الكاملة لأي رطوبة أو غبار.
- لا تقم برش الماء داخل الجهاز أو خارجه لتنظيفه.
- احرص دائمًا على عدم فصل الطاقة عن الجهاز من خلال شد كابل الطاقة. احرص دائمًا على الإمساك به بإحكام وقم بجذبه من مأخذ التيار الكهربائي في وضعية مستقيمة.
- يجب أن يقوم فقط موظف خدمة مؤهل من مركز خدمة شركة LG Electronics بتفكيك الجهاز أو إصلاحه أو تعديله. تواصل مع مركز معلومات العملاء في شركة LG Electronics في حال كنت تنقل الجهاز وتقوم بتركيبه في موقع مختلف.

التخلص

- قبل التخلص من جهاز قديم، قم بفصله. اقطع الكابل الموجود خلف الجهاز مباشرة لمنع سوء استخدامه.
- التخلص من جميع مواد التعبئة (مثل أكياس البلاستيك ومادة الستايروفوم) بعيدًا عن متناول الأطفال، إذ يمكن لمواد التغليف أن تسبب الاختناق.
- قم بإزالة الباب قبل التخلص من هذا الجهاز تفاديًا لخطر احتباس الأطفال أو الحيوانات الصغيرة بداخله.

7 إرشادات السلامة

- لا تترك باب الجهاز مفتوحًا. حيث يمكن أن يتعلق الأطفال بالباب أو يزحفوا إلى داخل الجهاز، مما قد يسبب التلف أو التعرض للإصابة.
- لا تضع أو تغسل أو تجفف الأغراض التي تم تنظيفها أو غسلها أو نقعها أو اتسخت بمواد قابلة للاشتعال أو قابلة للاحتراق (مثل الشمع ومزيلات البقع الشمعية والزيت والطلاء والجازولين ومزيلات الشحوم ومذيبات التنظيف الجاف والكبروسين والبنزين ومزيلات البقع وزيت التربنتين والزيوت النباتية وزيوت الطهي والأسيتون والكحول، وما إلى ذلك). فقد يتسبب الاستخدام غير السليم في نشوب حريق أو وقوع انفجار.
- لا يجب تنظيف الأغراض مثل المطاط الرغوي (رغوة مطاطية) أو قبّاعات الاستحمام أو المنسوجات المضادة للمياه أو الأغراض والملابس المدعومة بالمطاط أو الوسائد المزودة بحشيات المطاط الرغوي في الجهاز.
- لا تستخدم مواد قابلة للاحتراق أو قابلة للاشتعال (مثل الإيثير، والبنزين، والكحول، والمواد الكيميائية، والغاز النفطي المسال، والرداذ قابل للاحتراق، والجازولين، ومخفف الدهان "النتر"، والمواد البترولية، ومبيد الحشرات، ومعطر الهواء، ومستحضرات التجميل، وما إلى ذلك) أو تخزينها بالقرب من الجهاز.
- لا تقرب أبدًا من الجهاز في أثناء تشغيله. انتظر حتى يتوقف حوض الغسل تمامًا.
- يجب عدم لمس الباب أثناء البرامج ذات درجة الحرارة المرتفعة.
- في حال تسرب المياه أو فيضها من الجهاز، افصل مقبس الطاقة واتصل بمركز LG Electronics لتقديم المعلومات إلى العملاء.
- أغلق صناديق المياه لتحرير الضغط عن الخراطيم والصمامات والحد من التسرب عند حدوث قطع أو تمزق. تأكد من حالة خراطيم تغذية الماء حيث يجب استبدالها بعد 5 سنوات.
- في حالة وجود تسرب غاز (أيسوبيوتين، أو البروبان، أو الغاز الطبيعي، أو ما إلى ذلك) في المنزل، لا تلمس الجهاز أو قابس الطاقة وقم بتهوية المنطقة على الفور.
- لا يمكنك استخدام خرطوم التصريف أو خرطوم الإدخال في حالة تجمدهما خلال فصل الشتاء إلا بعد الذوبان.
- احفظ جميع منظفات الغسيل، والمواد المنعمة، والمبيضات بعيدًا عن متناول الأطفال.
- تجنب لمس قابس الطاقة أو عناصر التحكم في الجهاز بيدين مبتلتين.
- احرص على عدم ثني كابل الطاقة بشكل مفرط أو وضع شيء ثقيل عليه.
- تجنب لمس أي مياه تم تصريفها من الجهاز أثناء الغسل.
- تأكد من عمل التصريف بشكل صحيح. في حال عدم التصريف بشكل صحيح، قد يؤدي ذلك إلى غمر أرضيتك بالمياه.
- عندما تكون درجة حرارة الهواء مرتفعة ودرجة حرارة الماء منخفضة، قد يحدث تكثيف ومن ثم يؤدي إلى ابتلال الأرض.
- امسح الغبار أو الأتربة من على أجزاء تلامس قابس الطاقة.

- عند نقل هذا الجهاز، ينبغي توفر شخصين أو أكثر للإمساك به بإحكام.
- تجنب تركيب الجهاز في أماكن الرطوبة والغبار. تجنب تركيب أو تخزين الجهاز في الهواء الطلق أو في مساحة معرضة للتأثيرات الجوية كضوء الشمس المباشر أو الرياح أو المطر أو درجات الحرارة دون درجة التجمد.
- تأكد من أن قابس الطاقة موصل بشكل كامل بمأخذ التيار الكهربائي.
- لا تقم بتوصيل الجهاز بمقابس متعددة أو لوحات تحكم بالكهرباء أو كبل تمديد للطاقة.
- لا تقم بتعديل قابس الطاقة المتوفر مع الجهاز. إذا لم يكن القابس مناسباً لمأخذ التيار، فيمكنك تثبيت مأخذ تيار مناسب من خلال كهربائي مؤهل.
- يأتي هذا الجهاز مزوداً بسلك طاقة يحتوي على موصل تأريض للجهاز (مسمار تأريض) وقابس طاقة بوصلة تأريض. يجب توصيل قابس الطاقة بمأخذ تيار كهربائي مناسب مثبت ومؤرض وفقاً لجميع القوانين واللوائح المحلية.
- يمكن أن يؤدي التوصيل غير المناسب لموصل تأريض للجهاز إلى خطر التعرض لصدمة كهربائية. استشر كهربائياً أو موظف خدمة مؤهلاً إذا كان لديك أي شك حول ما إذا كان الجهاز مؤرضاً بشكل صحيح أم لا.
- يجب عدم تركيب هذا الجهاز خلف باب قابل للقفل، أو باب منزلق، أو باب مزود بمفصلة على الجانب المقابل للجهاز، حيث يؤدي هذا إلى إعاقة فتح باب الجهاز بالكامل.
- أحكم ربط خرطوم التصريف لتجنب فصله.
- في حالة تلف سلك الطاقة أو ارتخاء فتحة المقبس، لا تستخدم سلك الطاقة واتصل بمركز خدمة معتمد.

التشغيل

- لتجنب كسر زجاج الباب، لا تضغط بشدة على الباب عند الإغلاق.
- لا تستخدم أي أدوات حادة مع لوحة التحكم لتشغيل الجهاز.
- لا تحاول فصل أي لوح من الألواح أو فك الجهاز.
- تجنب إصلاح أو استبدال أي جزء من الجهاز. يجب إجراء جميع التصليحات والخدمة من خلال موظف خدمة مؤهل إلا إذا أوصى دليل المالك الحالي بغير ذلك بشكل محدد. استخدم فقط أجزاء المصنع المعتمدة.
- لا تضغط على الباب للأسفل بشدة عندما يكون باب الجهاز مفتوحاً.
- لا تضع الحيوانات الحية مثل الحيوانات الأليفة داخل الجهاز.
- لا تقم بغسل السجاد أو الأغطية أو الأحذية أو الأغذية الخاصة بالحيوانات الأليفة أو الألعاب المحشوة أو أي عناصر أخرى بخلاف الملابس والملاءات في هذه الغسالة.
- حافظ على المنطقة الموجودة أسفل الجهاز وحوله خالية من المواد القابلة للاحتراق مثل الكتان، والورق، وقطع القماش، والمواد الكيميائية، وما إلى ذلك.

5 إرشادات السلامة

- لا تجفف الأغراض غير المغسولة في الجهاز.
- يجب استخدام المواد المنعمة للقمماش أو المنتجات المشابهة كما هو محدد بتعليمات المواد المنعمة للقمماش.
- أفرغ جميع الأغراض من الجيوب مثل القداحات والنقاب.
- لا توقف أبداً الجهاز قبل انتهاء دورة التجفيف ما لم يتم إزالة جميع الأغراض بسرعة ونشرها بحيث تنبذ الحرارة.
- لا يتم استخدام الجهاز في حالة استعمال المواد الكيميائية الصناعية في التنظيف.
- يجب أن تغسل الأغراض المتسخة بمواد مثل زيوت الطهي، والزيوت النباتية، والأسيتون، والكحول، والبنزين، والكبروسين، ومزيلات البقع، وزيت التربنتين، والشمع، ومزيلات الشمع، في ماء ساخن مع كمية إضافية من المنظف قبل تجفيفها في الجهاز.
- لا تشرب الماء المكثف. قد يؤدي القيام بذلك إلى الإصابة بالأمراض التي تنقلها الأغذية.
- في حالة تلف سلك الإمداد، يجب استبداله من قبل الشركة المصنعة أو وكلاء الخدمة التابعين لها أو شخص مؤهل مماثل لتجنب الخطر.
- يجب تنظيف فلتر الوبر بشكل متكرر.
- يجب عدم ترك الوبر يتراكم حول الجهاز.
- لا ترش منظف التنظيف الجاف مباشرة على الجهاز أو تستخدم الجهاز لتجفيف الملابس المتبقية بمنظف التنظيف الجاف.
- لا تجفف الملابس الملطخة بمواد زيتية. لا يمكن إزالة البقع الزيتية (بما في ذلك زيوت الطعام) عن الملابس تمامًا حتى بعد غسلها بالماء.
- يجب عدم تزويد الجهاز من خلال جهاز تحويل خارجي، مثل مؤقت، أو توصيله بدائرة يتم تشغيلها وإيقافها بانتظام بواسطة أداة مساعدة.
- قم بإزالة الملابس من المنتج فوراً عند اكتمال التجفيف أو انقطاع التيار الكهربائي أثناء عملية التجفيف. قد يؤدي ترك الملابس التي تم تجفيفها في الجهاز دون مراقبة إلى نشوب حريق. قد يؤدي عدم نزع الملابس من الجهاز بعد التجفيف إلى نشوب حريق. انزع الملابس فور تجفيفها، ثم علقها أو افردها لتبرد.
- هذا الجهاز غير مخصص إلا للاستخدام في الأغراض المنزلية فقط.

السعة القصوى

تبلغ السعة القصوى المقرر استخدامها للملابس الجافة في بعض الدورات (21 كجم) غسيل/ (16 كجم) تجفيف.

التركيب

- لا تحاول أبداً تشغيل هذا الجهاز إذا كان تالفًا، أو به عطل، أو مفككًا بشكل جزئي، أو به أجزاء مفقودة أو محطمة، بما في ذلك سلك أو قابس تالف.

إرشادات السلامة

اقرأ جميع الإرشادات قبل الاستخدام

يتمثل الغرض من إرشادات السلامة التالية في الحيلولة دون وقوع المخاطر غير المتوقعة أو الأضرار الناجمة عن التشغيل غير الآمن أو غير الصحيح للمنتج. يتم تقسيم الإرشادات إلى "تحذير" و"تنبيه" على النحو الموضح أدناه.

رسائل السلامة

يتم عرض هذا الرمز للإشارة إلى الأمور وعمليات التشغيل التي يمكن أن تسبب مخاطر، فاحرص على قراءة الجزء الذي يحمل هذا الرمز بعناية واتبع الإرشادات لتجنب المخاطر.



تحذير



يشير هذا إلى أن عدم اتباع الإرشادات قد يسبب وقوع إصابة خطيرة أو الوفاة.

تنبيه



يشير هذا إلى أن عدم اتباع الإرشادات قد يتسبب في وقوع إصابة طفيفة أو تلف المنتج.

تحذير



- لتقليل مخاطر وقوع انفجار، أو نشوب حريق، أو حدوث وفاة، أو التعرض لصدمة كهربائية، أو حدوث إصابة، أو حروق للأشخاص عند استخدام المنتج، يجب اتباع احتياطات السلامة الأساسية، بما فيها ما يلي:

السلامة الفنية

- هذا الجهاز غير مخصص لاستخدام الأفراد (بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية، أو ليس لديهم خبرة ومعرفة، ما لم يتم الإشراف عليهم أو تقدم لهم الإرشادات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
- كذلك يجب الإشراف على الأطفال للتأكد من عدم عبثهم بالجهاز.
- يجب أن يتراوح ضغط إدخال المياه ما بين 50 كيلو باسكال و 800 كيلو باسكال.
- استخدم خرطومًا جديدًا أو مجموعة الخرطوم المرفقة مع الجهاز. علمًا بأن إعادة استخدام الخرطوم القديمة قد تؤدي إلى تسرب المياه وبالتالي تلف الممتلكات.
- يجب عدم إعاقة فتحات التهوية بوضع سجادة.

استكشاف الأعطال وإصلاحها

57.....	غسالة
63.....	مجفف
66.....	شائع

جدول المحتويات

قد يحتوي هذا الدليل على صور أو محتوى يختلف عن الطراز الذي قمت بشرائه.
يخضع هذا الدليل للمراجعة من الشركة المصنعة.

إرشادات السلامة

- 4.....اقرأ جميع الإرشادات قبل الاستخدام.
- 4.....تحذير

التركيب

- 9.....الأجزاء والمواصفات
- 13.....متطلبات مكان التركيب
- 14.....فتح تغليف الجهاز
- 15.....توصيل خرطوم إمداد الماء
- 17.....تركيب خرطوم التصريف
- 19.....ضبط مستوى الجهاز
- 22.....الفك

العملية-الغسالة

- 24.....نظرة عامة على التشغيل
- 25.....تجهيز حمولة الغسيل
- 25.....إضافة المنظفات والمواد المنعمة
- 28.....لوحة التحكم وجدول البرامج
- 33.....خيارات ووظائف إضافية

العملية-المجفف

- 36.....نظرة عامة على التشغيل
- 37.....تحضير الغسيل
- 39.....لوحة التحكم وجدول البرامج
- 44.....خيارات ووظائف إضافية

الوظائف الذكية

- 46.....استخدام تطبيق LG ThinQ
- 49.....Smart Diagnosis (التشخيص الذكي).

الصيانة

- 50.....غسالة
- 53.....مجفف

امسح كود QR للإطلاع على الدليل.



دليل المالك

WASHTOWER

قبل البدء في تركيب الجهاز، اقرأ هذه التعليمات بعناية. حيث سييسط ذلك عملية التركيب ويضمن تركيب الجهاز بشكل صحيح وآمن. واحتفظ بهذه التعليمات بالقرب من المنتج بعد التركيب للرجوع إليها في المستقبل.



العربية

WK2116BST / WK2116WHT / WK2116BST1 / WK2116WHT1

www.lg.com

حقوق النشر 2024-2021 إل جي للإلكترونيات. كل الحقوق محفوظة



MFL71728983
Rev.10_091024