



ENGLISH

# SIMPLE MANUAL

# HIGH POWER SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.  
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.


MODEL  
RK7




MFL69941733

[www.lg.com](http://www.lg.com)

Copyright © 2019 LG Electronics Inc. All Rights Reserved.



## Top panel

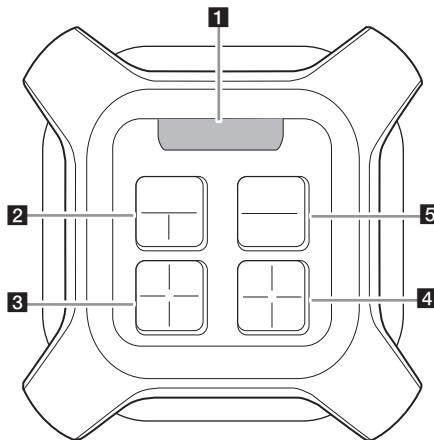

**1** Display window

**2** (Standby)  
Turns the power on or off.

**DUAL**

Connects two speakers for DUAL mode in WIRELESS PARTY LINK.

**MULTI**

Connects multiple speakers for MULTI mode in WIRELESS PARTY LINK.



The unit might not synchronize between audio and video in DUAL/MULTI mode.

**3** **F** (Function)

- Selects the function and input source.
- Press and hold to select the PARTY LINK with AUX.

**II** (Play/Pause)

Starts or pauses playback.

**KK/KK** (Skip/Search)

- Skips backward or forward.
- Searches for a section within a file.

**4** **AUTO DJ**

Selects the AUTO DJ mode.

**USER EQ / DEMO**

- Selects the sound effect created by your own.
- In power off status, if you press **USER EQ / DEMO**, show DEMO mode.

**SOUND EFFECT / BASS BLAST (or BASS BLAST+)**

- Chooses sound impressions.
- Press and hold to select BASS (or BASS+) effect directly.

**LIGHTING**

Selects lighting mode.

**5** **+/- (Volume)**

Adjusts speaker volume.

### Controller App




Download the **Music Flow Bluetooth** App to your device. (Android only)

### LG Sound Sync



For more information, download the online owner's manual. <http://www.lg.com>

## Front panel / Rear panel

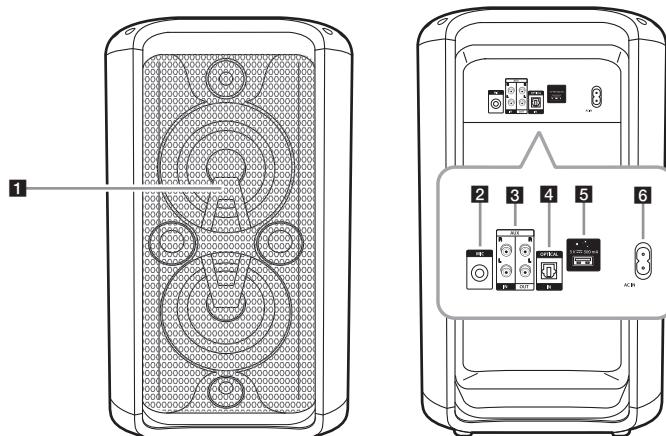

**1** Remote sensor

**2** MIC (Microphone) jack

**3** AUX IN / OUT (L/R)


**4** OPTICAL IN

**5** USB port


**6** AC IN socket

## How to place the unit

**Vertical**

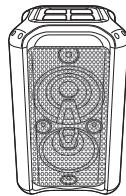

**Horizon**

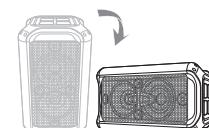

## Additional Information

### Specifications


Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 345 mm x 650 mm x 345 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	550 W RMS

Design and specifications are subject to change without notice.

### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

### Replacement of battery

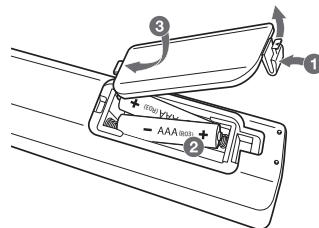

### IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

#### DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

### **SAFETY PRECAUTION**

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

### **CAUTION**

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The working life of this set is 7 years since the date of delivery to consumer. Upon the expiry of the said period, it might be unsuitable for the use according to their designation.

### **PRECAUTIONS**

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

**JEDDAH MAIN SERVICE CENTER  
P.O.BOX 704, JEDDAH 21421 KINGDOM OF SAUDI ARABIA  
TEL) 02-629-2929**

**JEDDAH QUICK SERVICE CENTER  
TEL) 02-663-3888 EXT. 340,343**

**RIYADH BRANCH SERVICE CENTER  
TEL) 01-461-5559**

**AL KHOBAR BRANCH SERVICE CENTER  
TEL) 03-857-2629/2637**



دليل بسيط

# نظام السماعات ذي القوة العالية

يرجى قراءة هذا الدليل بعناية قبل تشغيل جهازك واحتفظ به للرجوع إليه في المستقبل.  
لعرض تعليمات الميزات المتقدمة، تفضل بزيارة موقع الويب <http://www.lg.com>، ثم قم بتنزيل دليل المالك.  
يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز  
RK7

[www.lg.com](http://www.lg.com)

حقوق النشر والتأليف © لعام ٢٠١٩ LG Electronics Inc. جمجم الحقوق محفوظة.



MFL69941733



## اللوحة العلوية

### (الوظيفة) F 3

- يتم من خلاله تحديد الوظيفة ومصدر الإدخال.
- استمر في الضغط لتحديد .AUX PARTY LINK مع

### II (التشغيل/إيقاف الموقت) KII/KII

- للخطي بسرعة للأمام أو الخلف.
- البحث عن مقطع داخل ملف.

### AUTO DJ 4

.AUTO DJ يحدد وضع

### USER EQ / DEMO

- لتحديد المؤثر الصوتي الذي قمت بإعداده.
- في حالة إيقاف التشغيل، إذا ضغط على زر .USER EQ / DEMO وعرض وضع عرض.

### (BASS BLAST+) أو SOUND EFFECT / BASS BLAST


- يختار تأثيرات الصوت.
- اضغط مع الاستمرار لاختيار مؤثر BASS+ (أو BASS+) مباشرة.

### LIGHTING

يحدد وضع الإضاءة.

### 5 (+/-) (حجم الصوت)

لضبط مستوى صوت السماعة.

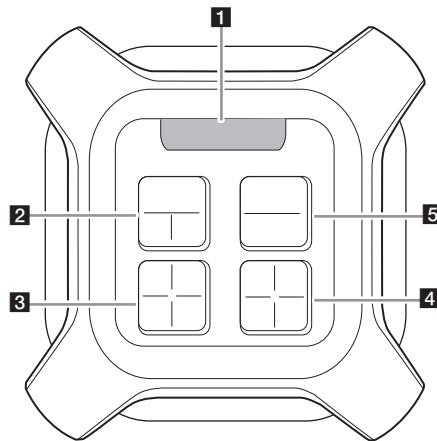

### 1 نافذة العرض

### 2 (الاستعداد)

يشغل الطاقة أو يوقف تشغيلها.

### ④ DUAL

يصل سماعتين من أجل وضع DUAL في .WIRELESS PARTY LINK

### ⑤ MULTI

يصل سماعات متعددة من أجل وضع MULTI في .WIRELESS PARTY LINK



قد لا تقوم الوحدة بالتزامن بين الصوت والصورة في وضع .DUAL/MULTI

## مزمون صوت LG



لمزيد من المعلومات، حمل دليل المالك عبر الانترنت.

<http://www.lg.com>


## تطبيق المتحكم



تحميل تطبيق Music Flow Bluetooth على جهازك.

(ل sistem التشغيل أندرويد فقط.)

## اللوحة الأمامية / اللوحة الخلفية

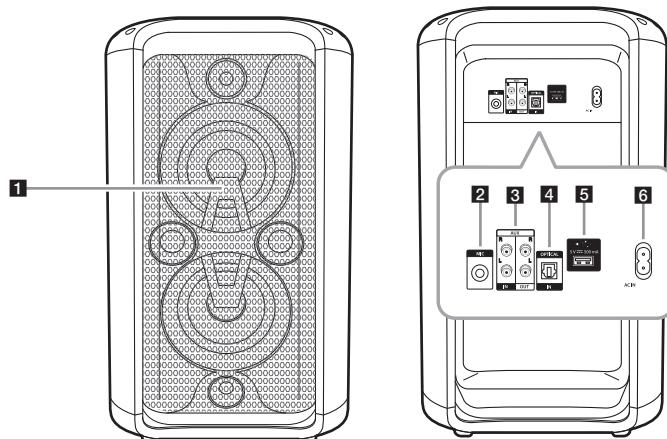

1 مستشعر جهاز التحكم عن بعد


- 2 مقبس MIC (ميكروفون)
- 3 AUX IN / OUT (L/R)
- 4 OPTICAL IN
- 5 منفذ USB
- 6 قابس AC IN

## كيفية وضع الوحدة


أفقي



رأسي

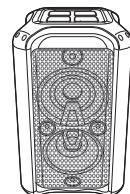

### استبدال البطارية

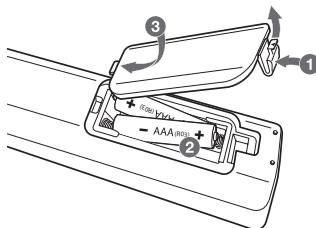

### المواصفات

متطلبات الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
استهلاك الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
الأبعاد الخارجية	حوالي ٣٤٥ مم X ٦٥٠ مم X ٣٤٥ مم (العرض X الارتفاع X العمق)
وحدة التغذية بالطاقة الثاقلة (USB)	دخل التيار المباشر بجهد ٥ فولت --- ٥٠٠ ملي أمبير
مضخم الصوت	RMS ٥٥٠ وات (اجمالي طاقة مخرج RMS)

التصميمات والمواصفات عرضة للتغيير دون إشعار مسبق.

### ملحوظة

- لا تنظر إلى الإضاءة الصادرة من الجزء مباشره عند تشغيل LIGHTING.
- إذا كان سطوح الإضاءة متوجهاً، قم بتشغيل إضاءة الغرفة أو إيقاف تشغيل LIGHTING بالوحدة.

### ملاحظة سلامة هامة

كلادة الوصلة للقباس مزودة مع هذا المنتج وتم تثبيتها داخل الوصلة الكهربائية الموجودة التي تم تزويدها ، إذا كان لأي سبب

### احتاجت لتقصير الوصلة.

لا تستعمل مرة أخرى هذا القابس يجب استعمال قابس جديد للتأكد على سلامتك بصورة متواصلة وذلك عن طريق إحكام إدخال القابس إلى الوصلة الكهربائية طبقاً للوائح القابس والمقياس للعام 1994.



---

---

---

---

---

---

---

---

---

---

---

---

---

---

## **تحذير من أجل السلامة**

يجب فصل هذا الجهاز عن مخرج التيار الكهربائي الرئيسي أثناء عدم استخدامه. لا تسمح لهذا الجهاز بالposure للامطار أو الرطوبة.

### **تحذير تحذير**

من أجل منع وقوع الصدمة الكهربائية، لا تسحب عنه الغطاء. لا يوجد في الداخل أجزاء للاستخدام، التصليح يجب أن يقوم به الشخص المختص.

فترة تشغيل هذا الجهاز سبع سنوات من تاريخ التسليم إلى الزبون. عند انتهاء الفترة المحددة أعلاه ربما لا تعود صالحة للاستخدام تبعاً للمواصفات.

## **تحذيرات للوقاية**

اقرأ هذه التعليمات قبل تشغيل الجهاز

- تجنب درجات الحرارة أو البرودة العالية والرطوبة والغبار.
- تجنب الاستخدام قريباً من حقل مغناطيسي (سيؤثر سلبياً على إنجاز الجهاز).
- حائز عند مسح الغطاء بمادة متطربة كالبنزين والكحول إلخ أو قطعة قماش معالجة بمواد كيماوية. ربما يؤدي ذلك إلى إتلاف سطح الغطاء أو تفسير الطلاء.
- استخدم هذا الجهاز فقط بوضع أفقى ولا تضع فوقه أي شيء ثقيل.
- حافظ على وضع الجهاز بعيداً عن أحواض الزهور وأنابيب الماء وحوض الغسيل، إذا سقط عليه أي مادة سائلة فقد يحدث ثلف كبير للجهاز. في مثل هذه الحالة قم بعرضه على خبير فني متخصص.
- لا تجذب منطقة التهوية، ثقوب التهوية تمنع زيادة السخونة. وحتى المواد الخفيفة أو الناعمة كالورق أو القماش قد تسد ثقوب التهوية.
- لا يوجد أجزاء للاستخدام من الداخل. من أجل الإصلاح والصيانة اعرضه على الفني المتخصص.

مركز جدة الرئيسي للخدمات  
ص. ب ٧٠٤، ٢١٤٢١، المملكة العربية السعودية  
هاتف: ٦٢٩-٢٩٢٩ (٠٢)

مركز جدة للخدمات السريعة  
هاتف: ٣٤٣، ٣٤٠، ٢٦٣-٣٨٨٨

مركز الرياض الفرعى للخدمات  
هاتف: ٠١٤٦١٥٥٥٩

مركز الخبر الفرعى للخدمات  
هاتف: ٠٣٨٥٧-٢٦٣٧