

OWNER'S MANUAL

WASHING MACHINE



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

F1450ST1V



MFL69042562



สกน. 1462-2548

www.lg.com

TABLE OF CONTENTS

This manual is produced for a group of products and may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS03

Important Safety Instructions..... 05

INSTALLATION.....08

Specifications08

Accessories08

Installation Place Requirements09

Unpacking and Removing Shipping Bolts 10

Using Non-Skid Pads (Optional)..... 11

Wooden Floors (Suspended Floors)..... 12

Leveling the Washing Machine..... 12

Connecting Inlet Hose 13

Installation of Drain Hose 15

Electrical Connections (In the UK Only)

OPERATION16

Using the Washing Machine 16

Sorting laundry 17

Adding Cleaning Products 18

Control Panel..... 20

Programme Table 21

Option Cycle 25

Using Smart Function (Optional) 28

MAINTENANCE29

Cleaning your Washing Machine 29

Cleaning the Water Inlet Filter 29

Cleaning the Drain Pump Filter 30

Cleaning the Dispenser Drawer..... 31

Tub Clean (Optional) 31

Caution on Freezing During Winter 32

Using the Smart Diagnosis™ Function 34

TROUBLESHOOTING35

Diagnosing Problems 35

Error Messages 37

WARRANTY39

SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the product.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

 **WARNING** - This indicates that the failure to follow the instructions can cause serious injury or death.

 **CAUTION** - This indicates that the failure to follow the instructions can cause the minor injury or damage the product.

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

CHILDREN IN THE HOUSEHOLD

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

For use in Europe:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised.

GROUNDING REQUIREMENTS



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, or electric shock, or to prevent property damage, injury to persons, or death.

- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Important Safety Instructions



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

Installation

- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug. It can cause electric shock or injury.
- This appliance is heavy. Two or more people may be needed to install and move the appliance. Failure to do so can result in injury.
- Store and install this appliance where it will not be exposed to temperatures below freezing or exposed to outdoor weather conditions. Failure to do so can result in leakage.
- Tighten the drain hose to avoid separation. Splashing of water may cause electric shock.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

Operation

- Do not use a sharp object like drill or pin to press or separate an operation unit. It can cause the electric shock or injury.
- Only an authorized repair person from LG Electronics service centre should disassemble, repair, or modify the product. Improper service may cause injury, electric shock or fire.
- Do not spray the water inside or outside the product to clean it. Water can damage the insulation, causing electric shock or fire.
- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc. Improper use can cause fire or explosion.
- Do not put living animals, such as pets into the product. It may cause injury.
- Do not leave this appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.


- Never reach into this appliance while it is operating. Wait until the drum has completely stopped. Failure to do so may result in injury.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, vegetable oil, cooking oil, etc.). Improper use can cause fire or explosion.
- In case of flood, stop using the product and contact the LG Electronics service centre. Contact with water can cause electric shock.
- Do not push down the door excessively, when the appliance door is open. Doing so may topple over the appliance and it can cause the injury.
- Use new hose-sets supplied with the appliance. Old hose-sets should not be reused. Water leakage may cause property damage.
- Do not touch the door during steam cycles, drying or high-temperature washing. The door surface can become very hot. Allow the door lock to release before opening the door. Failure to do so may result in injury.
- Do not use inflammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) around the product. It may cause explosion or fire.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing. Freezing may cause fire or electric shock, and frozen parts may cause product malfunction or reduction in product life span.
- Keep all washing detergents, softener and bleach away from children. These products contain poisonous materials.
- Do not plug multiple products into multiple socket-outlets or extension cords. This can cause fire.
- Remove the power plug when you clean the product. Not removing the plug may result in electric shock or injury.
- Do not touch the power plug with wet hands. It can cause the electric shock or injury.
- When pulling out the power plug from an outlet, hold the power plug, not the cable. Damage of the cable can cause the electric shock or injury.
- Do not bend the power cable excessively or place a heavy object on top of it. Damage of the power cable can cause electric shock or fire.

Disposal

- Before discarding an old appliance, unplug it. Render the plug useless. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of the packaging material (such as vinyl and styrofoam) away from children. The packaging material can suffocate a child.
- Remove the door to the washing compartment before this appliance is removed from service or discarded to avoid the danger of children or small animals getting trapped inside. Failure to do so can result in serious injury to persons or death.

INSTALLATION

Specifications

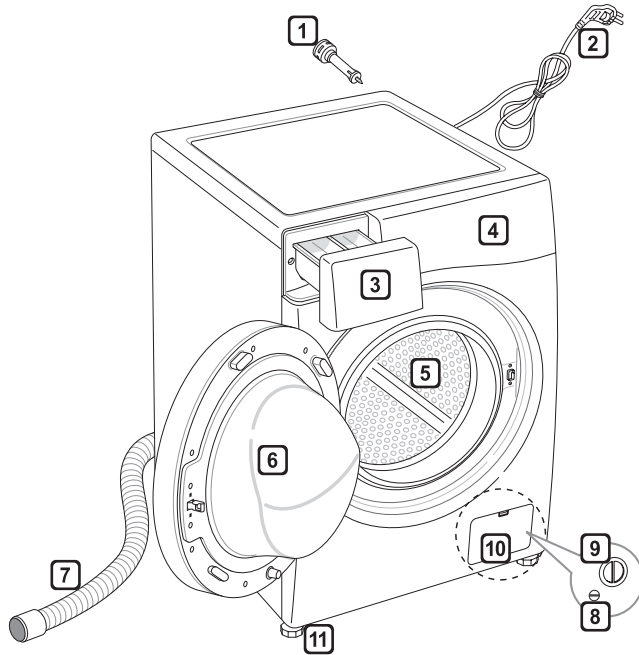


- 1 Transit bolts
- 2 Power plug
- 3 Drawer
- 4 Control panel
- 5 Drum
- 6 Door
- 7 Drain hose
- 8 Drain plug
- 9 Drain pump filter
- 10 Cover cap
(Location may vary depending on products)
- 11 Adjustable feet

- Power supply : 220 V, 50 Hz
- Size : 600 mm (W) X 610 mm (D) X 850 mm (H)
- Product weight : 70 kg
- Wash Capacity : 10.5 kg
- Permissible water pressure : 0.1 - 1.0 MPa (1.0 - 10.0 kgf / cm²)

- Appearance and specifications may vary without notice to improve the quality of the product.


Accessories



Inlet hose (1EA)
(Option: Hot
(1EA))



Spanner



Elbow Bracket
(for securing drain
hose)



Caps for covering
shipping bolt holes




Anti-slip sheets
(2EA)
(Optional)



Tie strap
(Optional in some
countries only)

Installation Place Requirements

Location

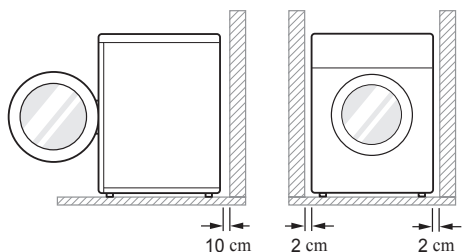

Level floor : Allowable slope under the entire washing machine is 1°.

Power outlet : Must be within 1.5 meters of either side of the location of the washing machine.

- Do not overload the outlet with more than one appliance.

Additional Clearance : For the wall, 10 cm: rear
/2 cm: right & left side

- Do not place or store laundry products on top of the washing machine at any time.
- These products may damage the finish or controls.

Positioning

- Install the washing machine on a flat hard floor.
- Make sure that air circulation around the washing machine is not impeded by carpets, rugs, etc.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the washing machine.
- If it is impossible to avoid positioning the washing machine next to a gas cooker or coal burning insulation (85x60 cm) covered with aluminum foil on the side facing the cooker or stove must be inserted between the two appliances.

- Do not install your washing machine in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- Please ensure that when the washing machine is installed, it is easily accessible for an engineer in the event of a breakdown.
- With the washing machine installed, adjust all four feet using the transit bolt spanner provided to ensure the appliance is stable, and a clearance of approximately 20 mm is left between the top of the washing machine and the underside of any work-top.
- This equipment is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc.


Electrical Connection

- Do not use an extension cord or double adapter.
- Always unplug the washing machine and turn off the water supply after use.
- Connect the washing machine to an earthed socket in accordance with current wiring regulations.
- The washing machine must be positioned so that the plug is easily accessible.
- Repairs to the washing machine must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service centre.
- If the washing machine is delivered in winter and temperatures are below freezing, place the washing machine at room temperature for a few hours before putting it into operation.

Unpacking and Removing Shipping Bolts


1 Lift the washing machine off the foam base.

- After removing the carton and shipping material, lift the washing machine off the foam base. Make sure the tub support comes off with the base and is not stuck to the bottom of the washing machine.
- If you must lay the washing machine down to remove the carton base, always protect the side of the washing machine and lay it carefully on its side. DO NOT lay the washing machine on its front or back.

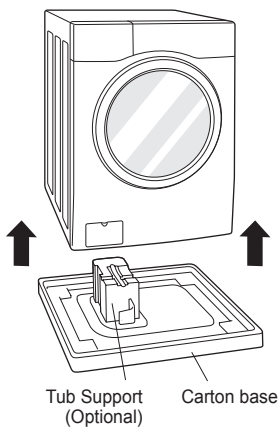


2 Remove the bolt assemblies.

- Starting with the bottom two shipping bolts, use the spanner (included) to fully loosen all shipping bolts by turning them counterclockwise. Remove the bolt assemblies by wiggling them slightly while pulling them out.

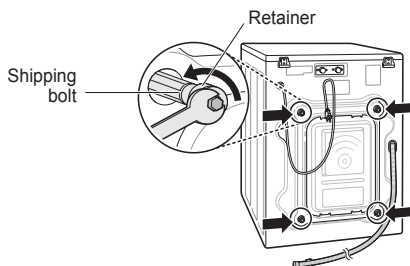

3 Install the hole caps.

- Locate the hole caps included in the accessory pack and install them in the shipping bolt holes.

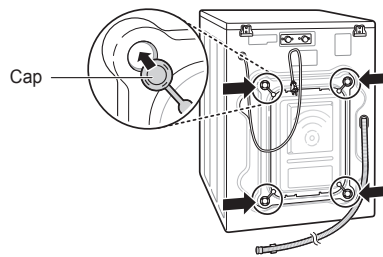



NOTE

- Save the bolt assemblies for future use. To prevent damage to internal components, DO NOT transport the washing machine without reinstalling the shipping bolts.
- Failure to remove shipping bolts and retainers may cause severe vibration and noise, which can lead to permanent damage to the washing machine. The cord is secured to the back of the washing machine with a shipping bolt to help prevent operation with shipping bolts in place.

Using Non-Skid Pads (Optional)

If you install the washing machine on a slippery surface, it may move because of excessive vibration. Incorrect leveling may cause malfunction through noise and vibration. If this occurs, install the non-skid pads under the leveling feet and adjust the level.


- 1** Clean the floor to attach the non-skid pads.
 - Use a dry rag to remove and clean foreign objects and moisture. If moisture remains, the non-skid pads may slip.
- 2** Adjust the level after placing the washing machine in the installation area.
- 3** Place the adhesive side of the non-skid pad on the floor.
 - It is most effective to install the non-skid pads under the front legs. If it is difficult to place the pads under the front legs, place them under the back legs.

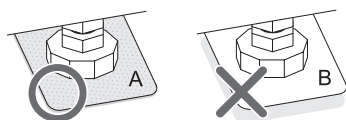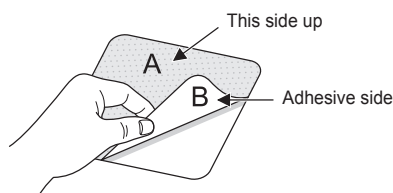

- 4** Ensure the washing machine is level.
 - Push or rock the top edges of the washing machine gently to make sure that the washing machine does not rock. If the washing machine rocks, level the washing machine again.

Wooden Floors (Suspended Floors)

- Wooden floors are particularly susceptible to vibration.
- To prevent vibration we recommend you place rubber cups at least 15 mm thick of the each foot of the washing machine, secured to at least two floor beams with screws.

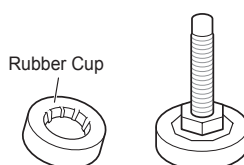

- If possible install the washing machine in one of the corners of the room, where the floor is more stable.
- Fit the rubber cups to reduce vibration.
- You can obtain rubber cups (p/no.4620ER4002B) from the LG Service Centre.


NOTE

- Proper placement and leveling of the washing machine will ensure long, regular, and reliable operation.
- The washing machine must be 100% horizontal and stand firmly in position.
- It must not 'Seesaw' across corners under the load.
- The installation surface must be clean, free from floor wax and other lubricant coatings.
- Do not let the feet of the washing machine get wet. Failure to do so may cause vibration or noise.

Leveling the Washing Machine

If the floor is uneven, turn the adjustable feet as required (Do not insert pieces of wood etc. under the feet). Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (Use a spirit level).

- Once the washing machine is level, tighten the lock nuts up towards the base of the washing machine. All lock nuts must be tightened.

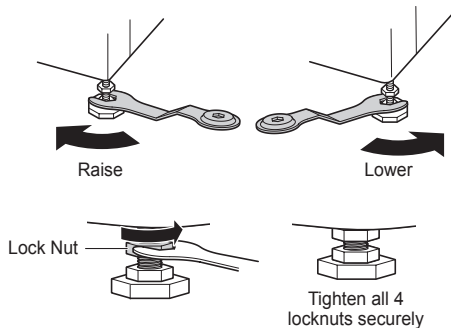

- **Diagonal Check**
When pushing down the edges of the washing machine top plate diagonally, the washing machine should not move up and down at all (Check both directions). If the washing machine rocks when pushing the machine top plate diagonally, adjust the feet again.

NOTE



- Timber or suspended type flooring may contribute to excessive vibration and unbalance.
- If the washing machine is installed on a raised platform, it must be securely fastened in order to eliminate the risk of falling off.

Connecting Inlet Hose

- Water supply pressure must be between 0.1 MPa and 1.0 MPa (1.0–10.0 kgf/cm²).
- Do not strip or crossthread when connecting inlet hose to the valve.
- If the water supply pressure is more than 1.0 MPa, a decompression device should be installed.
- Periodically check the condition of the hose and replace the hose if necessary.

Checking Rubber Seal Inlet Hose


Two rubber seals are supplied with the water inlet hoses. They are used for preventing water leaks. Make sure the connection to taps is sufficiently tight.

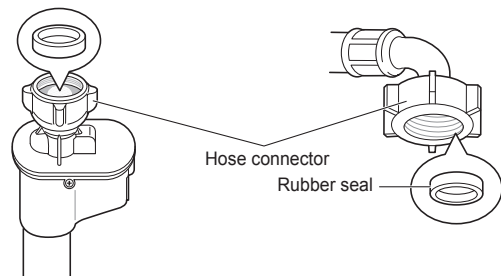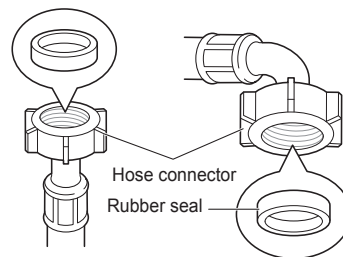

Connecting Hose to Water Tap


Connecting screw-type hose to tap with thread

Screw the hose connector onto the water supply tap.


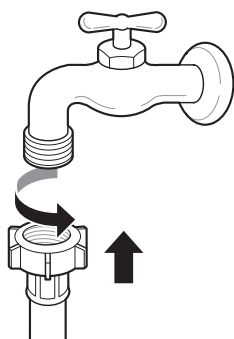


Connecting screw-type hose to tap without thread


- 1 Loosen the four fixing screws.

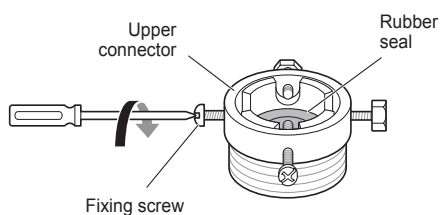


- 2 Remove the guide plate if the tap is too large to fit the adapter.

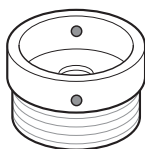

- 3 Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the four fixing screws.

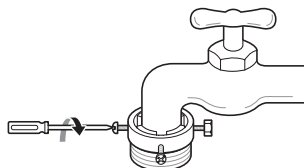


- 4 Push the inlet hose vertically upwards so that the rubber seal within the hose can adhere completely to the tap and then tighten it by screwing it to the right.


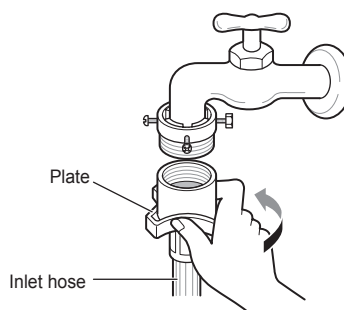


Connecting one touch type hose to tap without thread


- 1 Unscrew the adapter ring plate and loose the four fixing screws.

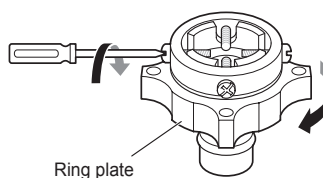


- 2 Remove the guide plate if the tap is too large to fit the adapter.

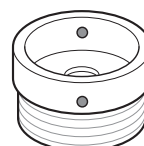

- 3** Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the adapter ring plate and the four fixing screws.

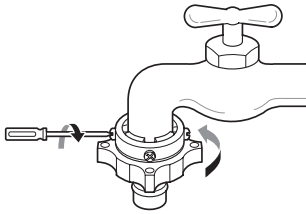

- 4** Pull the connector latch plate down, push the inlet hose onto the adapter, and release the connector latch plate. Make sure the adapter locks into place.

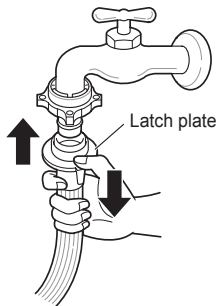

NOTE


- After connecting the inlet hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

Connecting Hose to Washing Machine

Make sure that there are no kinks in the hose and that they are not crushed.

When your washing machine has two valves.

- The Inlet hose with the red connector is for the hot water tap.

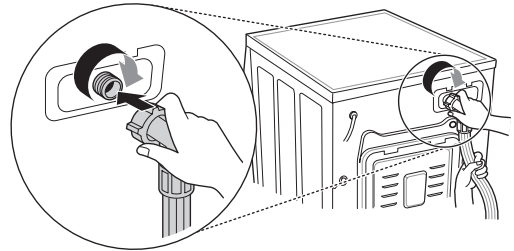

NOTE


- After completing connection, if water leaks from the hose, repeat the same steps. Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the guide plate before inserting the tap into the adaptor.

Using the horizontal tap


Horizontal tap



Extension tap

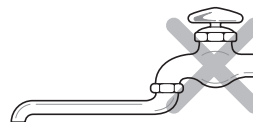


Square tap





Installation of Drain Hose

- The drain hose should not be placed higher than 100 cm above the floor. Water in the washing machine may not drain or may drain slowly.
- Securing the drain hose correctly will protect the floor from damage due to water leakage.
- If the drain hose is too long, do not force it back into the washing machine. This will cause abnormal noise.

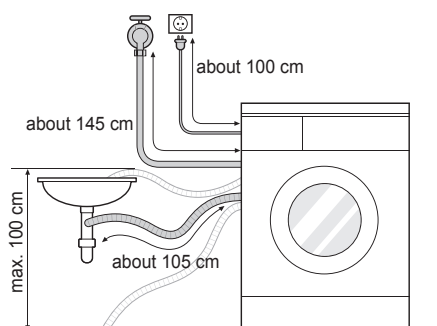

- When installing the drain hose to a sink, secure it tightly with string.
- Securing the drain hose correctly will protect the floor from damage due to water leakage.

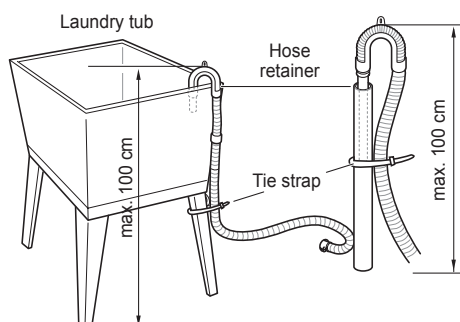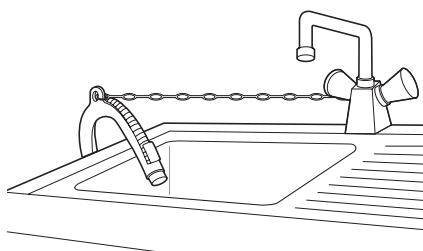

Electrical Connections (In the UK Only)


The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow: Earth

Blue: Neutral

Brown: Live

This appliance must be earthed.

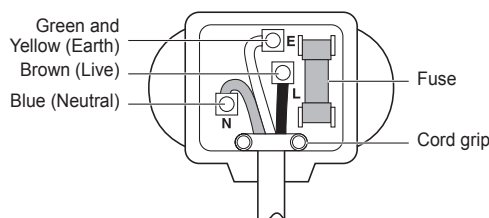

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol ($\perp$) or coloured Green or Green and Yellow.

The blue wire must be connected to the terminal which is marked with the letter N or coloured Black.

The brown wire must be connected to the terminal which is marked with the letter L or coloured Red.

If a 13 amp (BS 1363) plug is used, fit a 13 amp BS 1362 fuse.


OPERATION

Using the Washing Machine

Before the first wash, select a cycle (Cotton 60 °C, add a half load of detergent), allow the washing machine to wash without clothing. This will remove residue and water from the drum that may have been left during manufacturing.


1 Sort laundry and load items.

- Sort laundry by fabric type, soil level, colour and load size as needed. Open the door and load items into the washing machine.

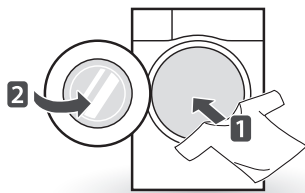


2 Add cleaning products and/or detergent and softener.

- Add the proper amount of detergent to the detergent dispenser drawer. If desired, add bleach or fabric softener to the appropriate areas of the dispenser.

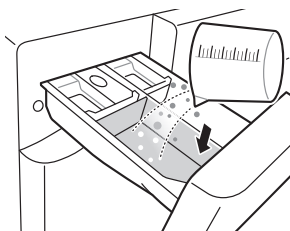


3 Turn on the washing machine.

- Press the **Power** button to turn ON the washing machine.

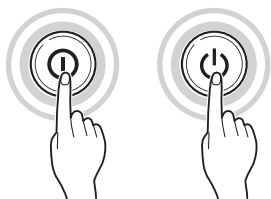

4 Choose the desired washing cycle.

- Press the Cycle button repeatedly or turn the cycle selector knob until the desired cycle is selected.

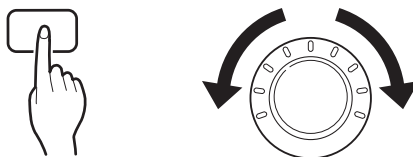

5 Begin cycle.

- Press the **Start/Pause** button to begin the cycle. The washing machine will agitate briefly without water to measure the weight of the load. If the **Start/Pause** button is not pressed within 5 minutes, the washing machine will shut off and all settings will be lost.





6 End of cycle.

- When the cycle is finished, a melody will sound. Immediately remove your clothing from the washing machine to reduce wrinkling. Check around the door seal when removing the load for small items that may be caught in the seal.

Sorting laundry

1 Look for a care label on your clothes.

- This will tell you about the fabric content of your garment and how it should be washed.
- Symbols on the care labels.




2 Sorting laundry.


- To get the best results, sort clothes into loads that can be washed with the same wash cycle.
- Different fabrics need to be washed at varying temperatures and spin speeds.
- Always sort dark colours from pale colours and whites. Wash separately as dye and lint transfer can occur causing discolouration of white and pale garments. If possible, do not wash heavily soiled items with lightly soiled ones.
 - Soil (Heavy, Normal, Light)
Separate clothes according to amount of soil.
 - Colour (White, Lights, Darks)
Separate white fabrics from coloured fabrics.
 - Lint (Lint producers, Collectors)
Wash lint producers and lint collectors separately.

3 Caring before loading.


- Combine large and small items in a load. Load large items first.
- Large items should not be more than half the total wash load. Do not wash single items. This may cause an unbalanced load. Add one or two similar items.
- Check all pockets to make sure that they are empty. Items such as nails, hair clips, matches, pens, coins and keys can damage both your washing machine and your clothes.

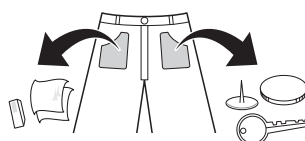

- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.
- Pre-treat dirt and stains by brushing a small amount of detergent dissolved water onto stains to help lift dirt.
- Check the folds of the flexible gasket (gray) and remove any small articles.
- Check inside the drum and remove any items from a previous wash.

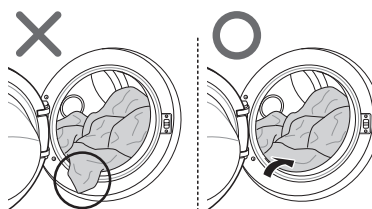

- Remove any clothing or items from the flexible gasket to prevent clothing and gasket damage.

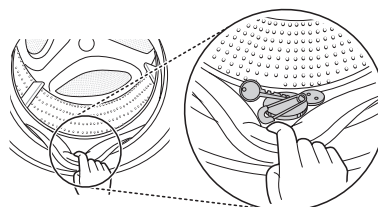

Adding Cleaning Products

Detergent Dosage

- Detergent should be used according to the instruction of the detergent manufacturer and selected according to type, colour, soiling of the fabric and washing temperature.
- If too much detergent is used, too many suds can occur and this will result in poor washing results or cause heavy load to the motor.
- If you wish to use liquid detergent follow the guidelines provided by the detergent manufacturer.
- You can pour liquid detergent directly into the main detergent drawer if you are starting the cycle immediately.
- Do not use liquid detergent if you are using Delay, or if you have selected Pre Wash, as the liquid may harden.
- If too many suds occur, reduce the detergent amount.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.
- Refer to the label of the clothes, before choosing the detergent and water temperature:
- When using the washing machine, use designated detergent for each type of clothing only:
 - General powdered detergents for all types of fabric
 - Powdered detergents for delicate fabric
 - Liquid detergents for all types of fabric or designated detergents only for wool
- For better washing performance and whitening, use detergent with the general powdered bleach.
- Detergent is flushed from the dispenser at the beginning of the cycle.

NOTE

- Do not let the detergent harden. Doing so may lead to blockages, poor rinse performance or odour.
- Full load : According to manufacturer's recommendation.
- Part load : 3/4 of the normal amount
- Minimum load : 1/2 of full load

Adding Detergent and Fabric Softener

Adding detergent


- Main wash only → 
- Pre wash+Main wash → 

NOTE

- Too much detergent, bleach or softener may cause an overflow.
- Be sure to use the appropriate amount of detergent.

Adding fabric softener

- Do not exceed the maximum fill line. Overfilling can cause early dispensing of the fabric softener, which may stain clothes. Close the dispenser drawer slowly.

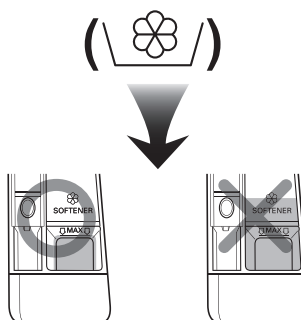


- Do not leave the fabric softener in the detergent drawer for more than 2 days (Fabric softener may harden).
- Softener will automatically be added during the last rinse cycle.
- Do not open the drawer when water is being supplied.
- Solvents (benzene, etc) should not be used.

NOTE

- Do not pour fabric softener directly on the clothes.


Adding water softener

- A water softener, such as Anti-limescale (e.g. Calgon) can be used to cut down on the use of detergent in extremely hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.
- Use the quantity of detergent required for soft water.

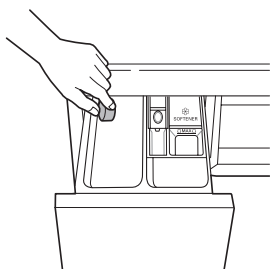


Using tablet


- 1 Open the door and put tablets into the drum.

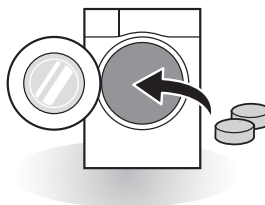

- 2 Load the laundry into the drum and close the door.

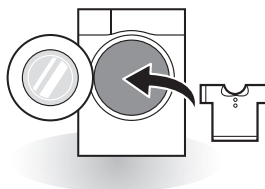

Control Panel

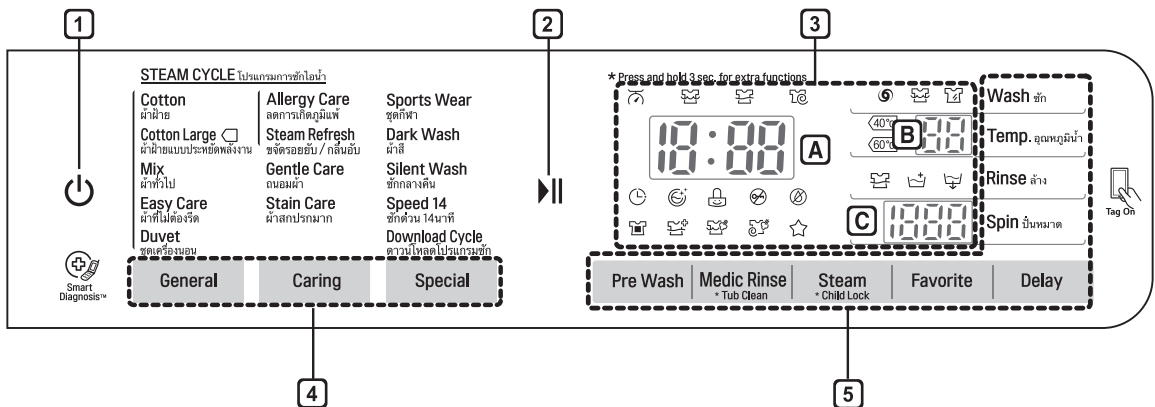

1 Power button

- Press the **Power** button to turn the washing machine on.
- Press and hold the Power button for 1 second to turn the washing machine off.

2 Start/Pause button

- This **Start/Pause** button is used to start the wash cycle or pause the wash cycle.
- If a temporary stop of the wash cycle is needed, press the **Start/Pause** button.

3 Display

- The display shows the settings, estimated time remaining, options, and status messages. When the product is turned on, the default settings in the display will illuminate.
- **A** : The display shows estimate time remaining. While the size of the load is being calculated automatically, blinking or 'Detecting' appears.
- **B** : The water temperature is displayed when pressing the **Temp.** button.
- **C** : The spin speed level is displayed when pressing the **Spin** button.

4 Programme Button

- Programmes are available according to laundry type.
- Lamp will light up to indicate the selected programme.

5 Options

- This allows you to select an additional cycle and will light when selected.
- Use these buttons to select the desired cycle options for the selected cycle.

Programme Table

Washing Programme

Programme	Description	Fabric Type	Proper Temp.	Maximum Load
Cotton (ผ้าฝ้าย)	Provides better performance by combining various drum motions.	Coloured fast garments (shirts, nightdresses, pajamas, etc) and normally soiled cotton load (underwear).	40°C (Cold to 95°C)	Rating
Cotton Large (ผ้าฝ้ายแบบ ประหยัด พลังงาน)	Provides optimised washing performance for large amount of laundry with less energy consumption.		60°C (Cold to 60°C)	
Easy Care (ผ้าที่ไม่ต้อง รีด)	This cycle is suitable for casual shirts that do not need ironing after washing.	polyamide, acrylic, polyester	40°C (Cold to 60°C)	4.0 kg
Mix (ผ้าทั่วไป)	Enables various fabrics to be washed simultaneously.	Various kind of fabrics except special garments (silk/delicate, sports wear, dark clothes, wool, duvet/curtains).	40°C (Cold to 40°C)	
Allergy Care (ลดการเกิด ภูมิแพ้)	Helps to remove allergens such as house mites, pollen, and cat fur.	cotton, underwear, pillow covers, bed sheets, baby wear	60 °C	
Silent Wash (ซักกลางคืน)	Provides less noise and vibration and saves money by using overnight electricity.	Color fast garments (shirts, nightdresses, pajamas, etc) and lightly soiled white cotton (underwear).	40°C (Cold to 60°C)	5.0 kg
Steam Refresh (ขจัดรอยยับ / กลิ่นอับ)	Helps to remove wrinkles within 20mins with steam (Clothes may be wet. You can put them on after hang out to dry for 10–30min).	cotton mixed, polyester mixed dress shirts, blouses	No choice	3 items
Duvet (ชุดเครื่อง นอน)	This cycle is for large items such as bed covers, pillows, sofa covers, etc.	Cotton bedding except special garments (delicates, wool, silk, etc.) with filling: duvets, pillows, blankets, sofa covers with light filling	40°C (Cold to 40°C)	1 single size
Sports Wear (ชุดกีฬา)	This cycle is suitable for sports wear such as jogging clothes and running wear.	coolmax, gore-tex, fleece and sympatex		3.0 kg
Dark Wash (ผ้าสี)	If it's possible for clothes to decolourate, please use this cycle. The cycle prevent decolorization. (Please use detergent for colored fabrics.)	Dark garments made from cotton or mixed fabrics.	20°C (Cold to 40°C)	

Programme	Description	Fabric Type	Proper Temp.	Maximum Load
Speed 14 (ซักด่วน 14 นาที)	This cycle provides fast washing time for small loads and lightly soiled clothes.	Coloured laundry which is lightly soiled fast. CAUTION : Use less than 20g of detergent (for 2.0kg load) otherwise detergent may remain on the clothes.	20°C (20°C to 40°C)	2.0 kg
Gentle Care (ถนอมผ้า)	This cycle is for hand and machine washable delicate clothes such as washable wool, lingerie, dresses etc. (Use detergent for machine washable woolens).	wool, hand washable clothes, delicate, easily damaged laundry	20°C (Cold to 30°C)	1.5 kg
Stain Care (ผ้าสกปรกมาก)	Wash off several kinds of stain such as wine, juice, dirt, etc. (Water temperature is increased step by step for washing various stains.)	cotton blended fabrics, NO delicate clothes	40°C (30°C to 60°C)	3.0 kg
Download Cycle (ดาวน์โหลดโปรแกรมซัก)	For downloadable cycles. If you did not download any cycles, the default is Rinse+Spin.			

- Water Temperature: Select the appropriate water temperature for chosen wash cycle. Always follow garment manufacturer's care label or instructions when washing.
- The test results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling utilized detergent, fluctuations in the main electricity supply and chosen additional options.

NOTE

- Neutral detergent is recommended.

Extra Options

Programme	Delay	Steam Wash	Steam Softener	Favorite	Pre Wash	Medic Rinse	Rinse+	Rinse Hold	Turbo Wash	Intensive
Cotton (ผ้าฝ้าย)	●	●	●	●	●	●	●	●	●	●
Cotton Large (ผ้าฝ้ายแบบประหยัดพลังงาน)	●	●	●	●	●	●	●	●	●	
Easy Care (ผ้าที่ไม่ต้องรีด)	●	●	●	●	●	●	●	●	●	●
Mix (ผ้าทั่วไป)	●	●	●	●	●	●	●	●	●	●
Allergy Care (ลดการเกิดภูมิแพ้)	●	●*		●		●	●	●		●
Silent Wash (ซักกลางคืน)	●			●			●	●		●
Steam Refresh (ขจัดรอยยับ / กลิ่นอับ)		●*		●						
Duvet (ชุดเครื่องนอน)	●	●		●			●	●		●
Sports Wear (ชุดกีฬา)	●			●			●	●		●
Dark Wash (ผ้าสี)	●			●			●	●		●
Speed 14 (ซักด่วน 14 นาที)	●			●			●		●*	
Gentle Care (ถนอมผ้า)	●			●			●			
Stain Care (ผ้าสกปรกมาก)	●			●	●*	●	●	●		

* : This option is automatically included in the cycle and can not be deleted.

Operating Data

Programme	Max RPM
Cotton (ผ้าฝ้าย)	1400
Cotton Large (ผ้าฝ้ายแบบประหยัดพลังงาน)	1400
Easy Care (ผ้าที่ไม่ต้องรีด)	1000
Mix (ผ้าทั่วไป)	1400
Allergy Care (ลดการเกิดภูมิแพ้)	1400
Silent Wash (ซักกลางคืน)	1000
Steam Refresh (ขจัดรอยยับ / กลิ่นอับ)	-
Duvet (ชุดเครื่องนอน)	1000
Sports Wear (ชุดกีฬา)	800
Dark Wash (ผ้าสี)	1400
Speed 14 (ซักด่วน 14 นาที)	800
Gentle Care (ถนอมผ้า)	800
Stain Care (ผ้าสกปรกมาก)	1400

Option Cycle

Delay ()

You can set a Delay so that the washing machine will start automatically and finish after a specified time interval.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Delay** button and set time required.
- 4 Press the **Start/Pause** button.

NOTE

- The delay time is the time to the end of the programme, not the start. The actual running time may vary due to water temperature, wash load and other factors.

Medic Rinse ()

For best results or for cleaner rinsing. This allows the final rinse to be heated to 40 degrees.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Medic Rinse** button and set time required.
- 4 Press the **Start/Pause** button.

Steam (Optional)

Steam Wash features enhanced washing performance with low energy consumption. Steam Softener sprays steam after a spinning cycle to reduce creases and make the laundry fluffy.

- 1 Press the **Power** button.
- 2 For Steam Wash option, select steam cycles. For Steam Softener option, select Cotton or Cotton Large, Mix, Easy Care.
- 3 The following cycle is selected depending on the number of times you press the **Steam** button.
 - Once: Steam Wash
 - Twice: Steam Softener
 - Three times: Steam Wash and Steam Softener
- 4 Press the **Start/Pause** button.

Steam Wash ()

- For heavily stained clothes, underwear or baby clothes.
- Available with the Cotton, Cotton Large, Mix, Easy Care, Duvet, Allergy Care, Steam Refresh cycles.
- Do not use Steam Wash for easily discoloured clothes and delicates such as wool, silk.

Steam Softener ()

- Good to soften and fluff fabrics after air drying.
- Available with the Cotton, Cotton Large, Mix, Easy Care cycles.
- Do not use Steam Softener for easily discoloured clothes and delicates such as wool, silk.
- Depending on the kind of fabric, softening performance may be different.

Favorite (☆)

Favorite programme allows you to store a customized wash cycle for future use.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Select the cycle (Washing method, number of rinses, spin speed, water temperature etc.).
- 4 Press and hold the **Favorite** button for 3 seconds.

The favorite programme is now stored for future use.

To reuse the programme, select favorite programme and press the **Start/Pause** button.

Pre Wash ()

If the laundry is heavily soiled, the Pre Wash cycle is recommended.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Pre Wash** button.
- 4 Press the **Start/Pause** button.

Wash ()

Turbo Wash ()

Wash cycle in under 1 hour with energy and water saving. (based on half of laundry)

Intensive ()

If the laundry is normal and heavily soiled, the **Intensive** option is effective.

Temp.

The **Temp.** button selects the wash and rinse temperature combination for the selected cycle. Press this button until the desired setting is lit. All rinses use cold tap water.

- Select the water temperature suitable for the type of load you are washing. Follow the garment fabric care labels for best results.

Rinse ()

Rinse⁺ ()

Add rinse once.

Rinse Hold ()

The cycle is paused until start button is pressed again when rinse is finished.

Spin

- Spin speed level can be selected by pressing the **Spin** button repeatedly.
- Spin Only

- 1 Press the **Power** button.
- 2 Press the **Spin** button to select RPM.
- 3 Press the **Start/Pause** button.

NOTE

- When you select 'No Spin', it will still rotate for a short time to drain quickly.

Child Lock ()

Select this function to lock the buttons on the control assembly to prevent tampering.

Locking the control panel

- 1 Press and hold the **Child Lock** button for 3 seconds.
- 2 A beeper will sound, and 'L' will appear on the display.
When the child lock is set, all buttons are locked except the **Power** button.

NOTE

- Turning off the power will not reset the child lock function. You must deactivate child lock before you can access any other functions.

Unlocking the control panel

Press and hold the **Child Lock** button for 3 seconds.

- A beeper will sound and the remaining time for the current programme will reappear on the display.

Beep On / Off

- 1 Press the **Power** button.
- 2 Press the **Start/Pause** button.
- 3 Press and hold the **Temp.** and **Rinse** button simultaneously for 3 seconds to set the Beep on/off function.

NOTE

- Once the Beep on/off function is set, the setting is memorized even after the power is turned off.
- If you want to turn the Beeper off, simply repeat this process.

Using Smart Function (Optional)


Using the Tag On Function

The Tag On function allows you to conveniently use the LG Smart Diagnosis™ and Cycle Download features to communicate with your appliance right from your own smart phone.

- The Tag On function can only be used with most smart phones equipped with the NFC function and based on the Android operating system (OS).

Installation of the application

- Search "LG Smart Laundry" on the Google Play Store from your smart phone.

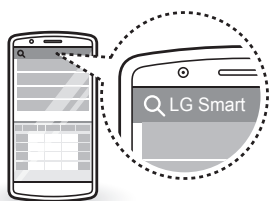

Using the Application

LG Smart Laundry application allows you to use various features for your convenience.

- Cycle Download
- Smart Diagnosis™
- Tag On Cycle Set
- Laundry Stats

NOTE

- Press **?** in the LG Smart Laundry application for a more detailed guide on how to use the Tag On function.
- Depending on the smart phone manufacturer and Android OS version, the NFC activation process may differ. Refer to the manual of your smart phone for details.
- Because of the characteristics of NFC, if the transmission distance is too far, or if there is a metal sticker or a protective case on the phone, transmission will not be good. In some cases, NFC-equipped phones may be unable to transmit successfully.
- The content found in this manual may differ depending on the version of "LG Smart Laundry" application, and it may be modified without informing customers.

WARNING

- Unplug the washing machine before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washing machine. They may damage the finish.

Cleaning your Washing Machine

Care After Wash

- After the cycle is finished, wipe the door and the inside of the door seal to remove any moisture.
- Leave the door open to dry the drum interior.
- Wipe the body of the washing machine with a dry cloth to remove any moisture.

Cleaning the Exterior

Proper care of your washing machine can extend its life.

Door:

- Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

Exterior:

- Immediately wipe off any spills.
- Wipe with a damp cloth.
- Do not press the surface or the display with sharp objects.


Care and Cleaning of the Interior

- Use a towel or soft cloth to wipe around the washing machine door opening and door glass.
- Always remove items from the washing machine as soon as the cycle is complete. Leaving damp items in the washing machine can cause wrinkling, colour transfer, and odour.
- Run the Tub Clean cycle once a month (or more often if needed) to remove detergent buildup and other residue.


Cleaning the Water Inlet Filter

- Turn off the stopcock if the washing machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- 'E' icon will be displayed on the control panel when water is not entering the detergent drawer.
- If water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it occasionally.

- 1 Turn off the water tap and unscrew the water inlet hose.

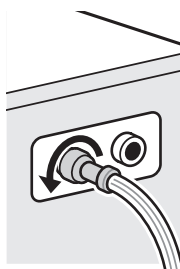


- 2 Clean the filter using a hard bristle brush.

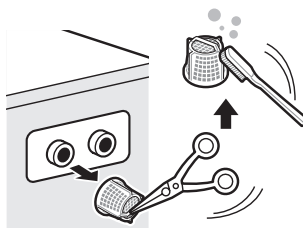


Cleaning the Drain Pump Filter

- The drain filter collects threads and small objects left in the laundry. Check regularly that the filter is clean to ensure smooth running of your washing machine.
- Allow the water to cool down before cleaning the drain pump, carrying out emergency emptying, or opening the door in an emergency.


- 1** Open the cover cap and pull out the hose.

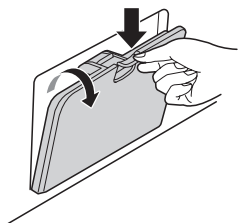


- 2** Unplug the drain plug and open the filter by turning it to the left.

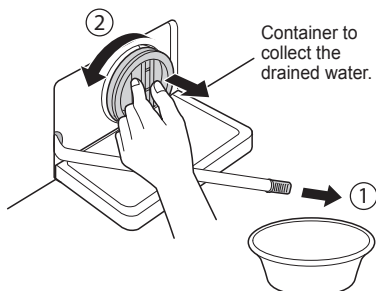


- 3** Remove any extraneous matter from the pump filter.

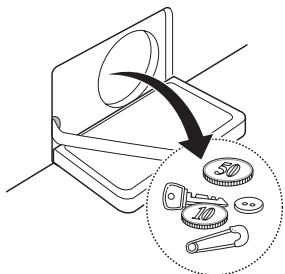

- 4** After cleaning, turn the pump filter and insert the drain plug.

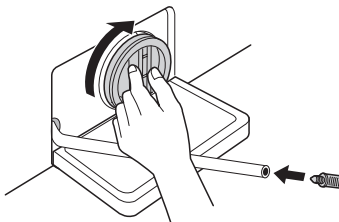

- 5** Close the cover cap.

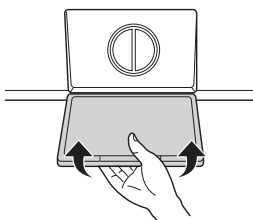


CAUTION

- First drain using the drain hose and then open the pump filter to remove any threads or objects.
- Be careful when draining, as the water may be hot.

Cleaning the Dispenser Drawer

Detergent and fabric softener may build up in the dispenser drawer. Remove the drawer and inserts and check for buildup once or twice a month.

- 1 Remove the detergent dispenser drawer by pulling it straight out until it stops.
 - Press down hard on the disengage button and remove the drawer.

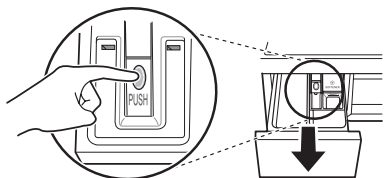

- 2 Remove the inserts from the drawer.
 - Rinse the inserts and the drawer with warm water to remove buildup from laundry products. Use only water to clean the dispenser drawer. Dry the inserts and drawer with a soft cloth or towel.
- 3 To clean the drawer opening, use a cloth or small, non-metal brush to clean the recess.
 - Remove all residue from the upper and lower parts of the recess.
- 4 Wipe any moisture off the recess with a soft cloth or towel.
- 5 Return the inserts to the proper compartments and replace the drawer.

Tub Clean (Optional) (🔄)

Tub Clean is a special cycle to clean the inside of the washing machine.

A higher water level is used in this cycle at higher spin speed. Perform this cycle regularly.

- 1 Remove any clothing or items from the washing machine and close the door.
- 2 Open the dispenser drawer and add Anti limescale (e.g. Calgon) to the main wash compartment.
- 3 Close the dispenser drawer slowly.
- 4 Power On and then press and hold **Tub Clean** button for 3 seconds. Then 't c t' will be displayed on the display.
- 5 Press the **Start/Pause** button to start.
- 6 After the cycle is complete, leave the door open to allow the washing machine door opening, flexible gasket and door glass to dry.

⚠ CAUTION

- If there is a child, be careful not to leave the door open for too long.

NOTE


- Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washing machine.

Caution on Freezing During Winter


- When frozen, the product does not operate normally. Make sure to install the product where it will not freeze during winter.
- In case the product must be installed outside on a porch or in other outdoor conditions, make sure to check the following.

How to Keep the Product from Freezing

- After washing, remove water remaining inside the pump completely with the opening hose plug used for removal of residual water. When the water is removed completely, close the hose plug used for removal of residual water and cover cap.

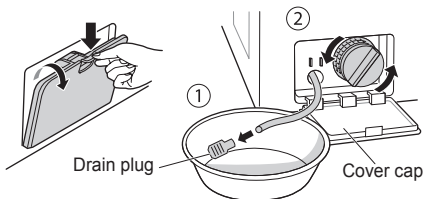


- Hang down drain hose to pull out water inside the hose completely.

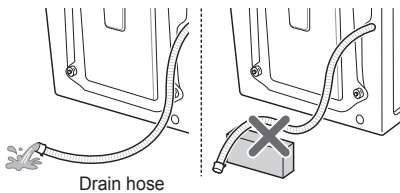

CAUTION

- When the drain hose is installed in a curved shape, the inner hose may freeze.

- After closing the tap, disconnect the cold inlet hose from the tap, and remove water while keeping the hose facing downwards.

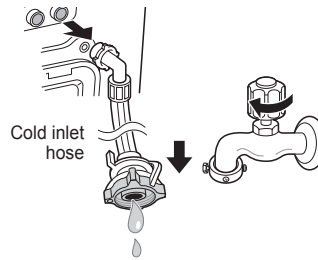


Check for Freezing

- If water does not drain when opening the hose plug used for removal of residual water, check the drainage unit.



- Turn the power on, select Rinse and Spin, and press the **Start/Pause** button.

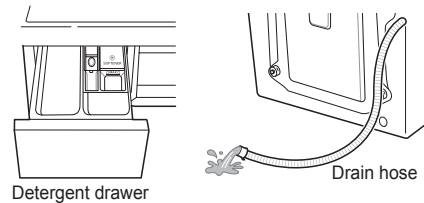


NOTE

- Check that water is coming into the detergent drawer while rinsing, and water is draining through the drain hose while spinning.
- When 'FF' is shown in display window while the product is in operation, check water supply unit and drainage unit (Some models do not have an alarm function that indicates freezing).


How to Handle Freezing

- Make sure to empty the drum, pour warm water of 50–60 °C up to the rubber part inside the drum, close the door, and wait for 1–2 hours.

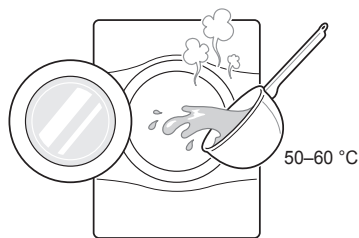

CAUTION


- Do not use boiling water. It may cause burns or damage to the product.
- Open the cover cap and hose plug used for removal of residual water to extract water completely.

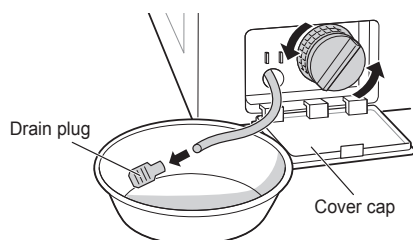

NOTE


- If when water does not drain, this means the ice is not melted completely. Wait more.

- When water is removed completely from the drum, close the hose plug used for removal of residual water, select Rinse and Spin, and press the **Start/Pause** button.

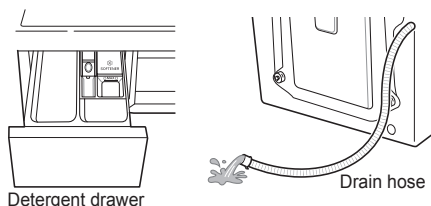

NOTE


- Check that water is coming into the detergent drawer while rinsing, and water is draining through the drain hose while spinning.
- When water supply problems occur, take the following measures.
 - Turn off the tap, and thaw out the tap and both connection areas of inlet hose of the product using a hot water cloth.
 - Take out inlet hose and immerse in warm water below 50–60 °C.

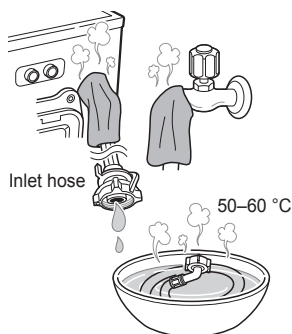

Using the Smart Diagnosis™ Function

Use this function if you need an accurate diagnosis by an LG Electronics service centre when the product malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

- 1 Press the **Power** button to turn on the washing machine. Do not press any other buttons or turn the cycle selector knob.
- 2 When instructed to do so by the call centre, place the mouthpiece of your phone close to the **Power** button.

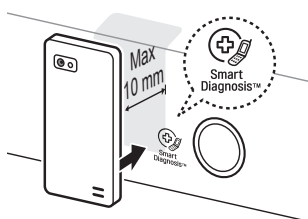

- 3 Press and hold the **Temp.** button for 3 seconds, while holding the phone mouthpiece to the icon or **Power** button.
- 4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.
 - For best results, do not move the phone while the tones are being transmitted.
 - If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.



- 5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

NOTE

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.

- Your washing machine is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If your washing machine does not function properly or does not function at all, check the following before you call for service:

Diagnosing Problems

Symptoms	Reason	Solution
Rattling and clanking noise	Foreign objects such as coins or safety pins may be in drum or pump.	• Stop washing machine, check drum and drain filter. • If noise continues after washing machine is restarted, call your authorised service centre.
Thumping sound	Heavy wash loads may produce a thumping sound. This is usually normal.	• If sound continues, washing machine is probably out of balance. Stop and redistribute wash load.
Vibrating noise	Have all the transit bolts and tub support been removed?	• If not removed during installation, refer to Installation guide for removing transit bolts.
	Are all the feet resting firmly on the ground?	• Wash load may be unevenly distributed in drum. Stop washing machine and rearrange wash load.
Water leaks	Inlet hoses or drain hose are loose at tap or washing machine.	• Check and tighten hose connections.
	House drain pipes are clogged.	• Unclog drain pipe. Contact plumber if necessary.
Oversudsing		• Too much detergent or unsuitable detergent may cause excessive foaming which may result in water leaks.
Water does not enter washing machine or it enters slowly	Water supply is not adequate in that location.	• Check another tap in the house.
	Water supply tap is not completely open.	• Fully open tap.
	Water inlet hose(s) are kinked.	• Straighten hose.
	The filter of the inlet hose(s) clogged.	• Check the filter of the inlet hose.
Water in the washing machine does not drain or drains slowly	Drain hose is kinked or clogged.	• Clean and straighten the drain hose.
	The drain filter is clogged.	• Clean the drain filter.

Symptoms	Reason	Solution
Washing machine does not start	Electrical power cord may not be plugged in or connection may be loose.	Make sure plug fits tightly in wall outlet.
	House fuse blown, circuit breaker tripped, or a power outage has occurred.	Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician.
	Water supply tap is not turned on.	Turn on water supply tap.
Washing machine will not spin	Check that the door is firmly shut.	Close the door and press the Start/Pause button. After pressing the Start/Pause button, it may take a few moments before the washing machine begins to spin. The door must be locked before spin can be achieved. Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning.
Door does not open		Once washing machine has started, the door cannot be opened for safety reasons. Check if the 'Door Lock' icon is illuminated. You can safely open the door after the 'Door Lock' icon turns off.
Wash cycle time delayed		The washing time may vary by the amount of laundry, water pressure, water temperature and other usage conditions. If an imbalance is detected or if the suds removing programme is on, the wash time will increase.
Fabric softener overflow	Too much softener may cause an overflow.	Follow softener guidelines to ensure appropriate amount is used. Do not exceed the maximum fill line.
Softeners dispensed too early		Close the dispenser drawer slowly. Do not open the drawer during the wash cycle.
Dry problem	Does not dry	Do not overload. Check that the washing machine is draining properly to extract adequate water from the load. Clothes load is too small to tumble properly. Add a few towels.

Error Messages



Symptoms	Reason	Solution
		
	Water supply is not adequate in area.	• Check another tap in the house.
	Water supply taps are not completely open.	• Fully open tap.
	Water inlet hose(s) are kinked.	• Straighten hose(s).
	The filter of the inlet hose(s) are clogged. If water leakage occurred in the inlet hose, indicator  will become red.  • May vary depending on the model.	• Check the filter of the inlet hose.
	DE	
	Drain hose is kinked or clogged. The drain filter is clogged.	• Clean and straighten the drain hose. • Clean the drain filter.
		
	UE	
	Load is too small.	• Add 1 or 2 similar items to help balance the load.
	Load is out of balance.	• Add 1 or 2 similar items to help balance the load.
	The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (e.g. bath mat, bath robe, etc.) this system may stop spinning or even interrupt the spin cycle altogether.	• Rearrange load to allow proper spinning.
	If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.	• Rearrange load to allow proper spinning.









Symptoms		Reason	Solution
	  	Ensure door is not open.	- Close the door completely. - If 'dE, dE 1, dE 2' is not released, call for service.
			Unplug the power plug and call for service.
		Water overfills due to the faulty water valve.	- Close the water tap. - Unplug the power plug. - Call for service.
		Water level sensor has malfunctioned.	- Close the water tap. - Unplug the power plug. - Call for service.
		Over load in motor.	Allow the washing machine to stand for 30 minutes to allow the motor to cool, then restart the cycle.
		Water leaks.	Call for service.
		The washer experienced a power failure.	Restart the cycle.
		Check water supply.	Turn the tap on. If 'dHE' is not released, unplug power plug and call for service.




WARRANTY

This limited warranty does not cover:

- Service trips to deliver, pick up, or install or repair the product; instruction to the customer on operation of the product; repair or replacement of fuses or correction of wiring or plumbing, or correction of unauthorized repairs/ installation.
- Failure of the product to perform during power failures and interruptions or inadequate electrical service.
- Damage caused by leaky or broken water pipes, frozen water pipes, restricted drain lines, inadequate or interrupted water supply or inadequate supply of air.
- Damage resulting from operating the Product in a corrosive atmosphere or contrary to the instructions outlined in the Product's owner's manual.
- Damage to the Product caused by accidents, pests and vermin, lightning, wind, fire, floods, or acts of God.
- Damage or failure caused by unauthorized modification or alteration, or if it is used for other than the intended purpose, or any water leakage where the product was not properly installed.
- Damage or failure caused by incorrect electrical current, voltage, or plumbing codes, commercial or industrial use, or use of accessories, components, or consumable cleaning products that are not approved by LG.
- Damage caused by transportation and handling, including scratches, dents, chips, and/or other damage to the finish of your product, unless such damage results from defects in materials or workmanship.
- Damage or missing items to any display, open box, discounted, or refurbished Product.
- Products with original serial numbers that have been removed, altered, or cannot be readily determined. Model and Serial numbers, along with original retail sales receipt, are required for warranty validation.
- Increases in utility costs and additional utility expenses.
- Repairs when your Product is used in other than normal and usual household use or contrary to the instructions outlined in the Product's owner's manual.
- Costs associated with removal of your Product from your home for repairs.
- The removal and reinstallation of the Product if it is installed in an inaccessible location or is not installed in accordance with published installation instructions, including LG's owner's and installation manuals.
- Damage resulting from misuse, abuse, improper installation, repair, or maintenance. Improper repair includes use of parts not approved or specified by LG.

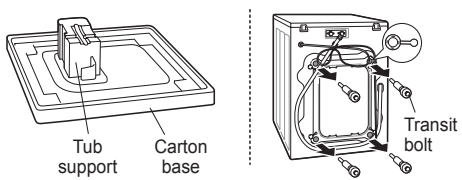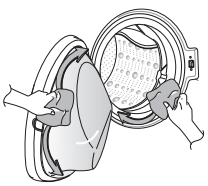Strange vibration or noise caused by not removing transit bolts or tub support.			Remove the transit bolts & tub support.
Leakage caused by dirt (hair, lint) on gasket and door glass.			Clean the gasket & door glass.

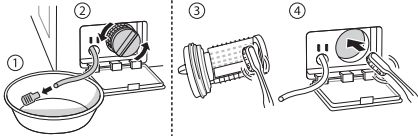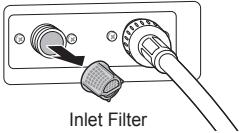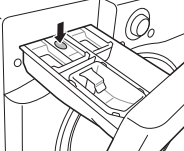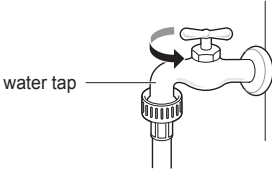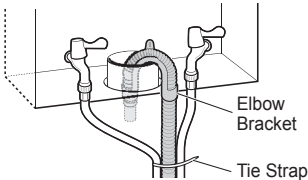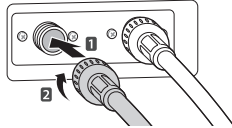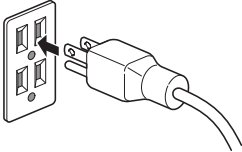Not draining caused by clogging of pump filter.	➔		Clean the pump filter.
Water is not coming because water inlet valve filters are clogged or water inlet hoses are kinked.	➔	 Inlet Filter	Clean the inlet valve filter or reinstall the water inlet hoses.
Water is not coming because too much detergent use.	➔	 Dispenser	Clean the detergent dispenser drawer.
Laundry is hot or warm after finished washing because the inlet hoses are installed in reverse.	➔	 Cold Water Inlet Hot Water Inlet	Reinstall the inlet hoses.
Water is not supplied because the water tap is not turned on.	➔	 water tap	Turn on the water tap.
Leakage caused by improper installation of drain hose or clogged drain hose.	➔	 Elbow Bracket Tie Strap	Reinstall the drain hose.
Leakage caused by improper installation of water inlet hose or using other brand inlet hoses.	➔		Reinstall the inlet hose.
No power problem caused by loose connection of power cord or electrical outlet problem.	➔		Reconnect the power cord or change the electrical outlet.

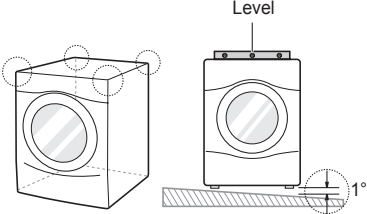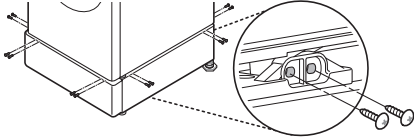Service trips to deliver, pick up, install the product or for instruction on product use. The removal and reinstallation of the Product.	➔		The warranty covers manufacturing defects only. Service resulting from improper Installation is not covered.
If all screws are not installed properly, it may cause excessive vibration (Pedestal model only).	➔		Install 4 screws at each corner (Total 16EA).
Water hammering (banging) noise when washing machine is filling with water.	➔		Adjust the water pressure by turning down the water valve or water tap in the home.

Memo

คู่มือผู้ใช้

เครื่องซักผ้า



ก่อนเริ่มต้นการติดตั้ง อ่านคำแนะนำเหล่านี้โดยละเอียด
ซึ่งจะช่วยให้การติดตั้งง่ายขึ้นและทำให้แน่ใจว่าผลิตภัณฑ์ได้รับการติดตั้ง
อย่างถูกต้องและปลอดภัย เก็บคำแนะนำเหล่านี้ไว้ใกล้กับผลิตภัณฑ์หลังจาก
การติดตั้งสำหรับการอ้างอิงในอนาคต

F1450ST1V



มอก. 1462-2548

www.lg.com

สารบัญ

คู่มือนี้ถูกจัดทำขึ้นสำหรับกลุ่มของผลิตภัณฑ์และอาจมีภาพหรือเนื้อหาต่างจากรุ่นที่คุณซื้อ
คู่มือนี้อาจถูกปรับปรุงแก้ไขใหม่โดยผู้ผลิต

คำแนะนำด้านความปลอดภัย 03

คำแนะนำด้านความปลอดภัยที่มีความสำคัญ 05

การติดตั้ง 08

ข้อมูลจำเพาะ 08

อุปกรณ์เสริม 08

ข้อกำหนดสถานที่ติดตั้ง 09

ทำการแกะหีบห่อและถอดสลักสำหรับขนย้าย 10

ใช้แผ่นกันสั่น (อุปกรณ์เสริม) 11

พื้นไม้ (พื้นลอย) 11

ทำการปรับระดับเครื่องซักผ้า 12

การต่อท่อน้ำเข้า 12

การติดตั้งท่อระบาย 15

การเชื่อมต่อทางไฟฟ้า (ในสหราชอาณาจักรเท่านั้น) 15

การใช้งาน 16

การใช้งานเครื่องซักผ้า 16

การแยกผ้า 17

การใส่ผลิตภัณฑ์ทำความสะอาด 18

แผงควบคุม 20

ตารางโปรแกรม 21

โปรแกรมทางเลือก 25

การใช้งานฟังก์ชันอัจฉริยะ (ทางเลือก) 28

การซ่อมบำรุง 29

การดูแลหลังการซัก 29

การทำความสะอาดตัวกรองท่อน้ำเข้า 29

การทำความสะอาดตัวกรองบีมระบาย 30

การทำความสะอาดลิ้นชักจ่ายน้ำยา 31

Tub Clean (ล้างถังซัก) (ทางเลือก) 31

ระวังการเป็นน้ำแข็งในระหว่างฤดูหนาว 32

การใช้ฟังก์ชัน Smart Diagnosis™ 34

การแก้ปัญหา 35

การวินิจฉัยปัญหา 35

ข้อความข้อผิดพลาด 37

การรับประกัน 39

คำแนะนำด้านความปลอดภัย

แนวทางด้านความปลอดภัยต่อไปนี้จะมุ่งหวังที่จะป้องกันความเสี่ยงหรือความเสียหายที่คาดไม่ถึงจากการใช้งานผลิตภัณฑ์ที่ไม่ปลอดภัยหรือไม่ถูกต้อง

แนวทางถูกแบ่งออกเป็น 'คำเตือน' และ 'ข้อควรระวัง' ดังที่อธิบายไว้ด้านล่าง

- ⚠ **สัญลักษณ์นี้แสดงเพื่อชี้ถึงสถานการณ์หรือการใช้งานที่สามารถทำให้เกิดความเสี่ยงได้** อ่านส่วนที่มีสัญลักษณ์นี้โดยละเอียดและปฏิบัติตามคำแนะนำเพื่อหลีกเลี่ยงความเสี่ยง
- ⚠ **คำเตือน** - สัญลักษณ์นี้บ่งชี้ว่าการไม่ปฏิบัติตามคำแนะนำสามารถส่งผลให้เกิดการบาดเจ็บสาหัสหรือเสียชีวิตได้
- ⚠ **ข้อควรระวัง** - สัญลักษณ์นี้บ่งชี้ว่าการไม่ปฏิบัติตามคำแนะนำสามารถทำให้เกิดการบาดเจ็บเล็กน้อยหรือความเสียหายต่อผลิตภัณฑ์ได้

⚠ คำเตือน

เพื่อลดความเสี่ยงต่อการเกิดไฟไหม้ ไฟฟ้าช็อตหรือการบาดเจ็บต่อบุคคลเมื่อใช้งานผลิตภัณฑ์ของคุณ ควรปฏิบัติตามความระมัดระวังด้านความปลอดภัย รวมไปถึงสิ่งต่อไปนี้

เด็กในบ้าน

เครื่องใช้ไฟฟ้านี้ไม่ได้มุ่งหวังสำหรับการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่ด้อยขีดความสามารถทางกายภาพ ประสาทสัมผัสหรือทางสภาพจิต หรือขาดประสบการณ์หรือความรู้ เว้นแต่จะได้รับการกำกับดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบความปลอดภัยให้แก่พวกเขา เด็กควรได้รับการดูแลเพื่อให้แน่ใจว่าจะไม่เล่นกับเครื่องใช้ไฟฟ้า

สำหรับใช้งานในยุโรป:

เครื่องใช้ไฟฟ้านี้สามารถใช้งานได้โดยเด็กอายุ 8 ปีขึ้นไปและบุคคลที่ด้อยขีดความสามารถทางกายภาพ ประสาทสัมผัสหรือทางสภาพจิต หรือขาดประสบการณ์และความรู้ หากพวกเขาได้รับการกำกับดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าในลักษณะที่ปลอดภัยและเข้าใจถึงอันตรายที่มีความเกี่ยวข้อง จะต้องไม่ให้เด็กเล่นกับเครื่องใช้ไฟฟ้า ห้ามอนุญาตให้เด็กทำความสะอาดและดูแลรักษาอุปกรณ์โดยไม่มีการกำกับดูแล

ควรกันเด็กอายุต่ำกว่า 3 ปีให้อยู่ห่างๆ เว้นแต่จะได้รับการกำกับดูแลตลอดเวลา

ข้อกำหนดการต่อสายดิน

คำเตือน

เพื่อความปลอดภัยของคุณ ข้อมูลในคู่มือนี้ควรได้รับการปฏิบัติตามเพื่อลดความเสี่ยงต่อการเกิดไฟไหม้ การระเบิด หรือไฟฟ้าช็อตให้น้อยที่สุด หรือเพื่อป้องกันความเสียหายต่อทรัพย์สิน การบาดเจ็บของบุคคล หรือการเสียชีวิต

- เครื่องใช้ไฟฟ้านี้จะต้องได้รับการต่อสายดิน ในกรณีที่มีการทำงานผิดปกติหรือลัมเหลว การต่อสายดินจะช่วยลดความเสี่ยงต่อการเกิดไฟฟ้าช็อตโดยการให้เส้นทางที่มีความต้านทานต่ำที่สุดสำหรับกระแสไฟฟ้า
- เครื่องใช้ไฟฟ้านี้ได้รับการติดตั้งสายที่มีตัวนำต่อระหว่างสายดินกับอุปกรณ์และปลั๊กสายดิน ปลั๊กจะต้องต่อเข้ากับเต้ารับที่เหมาะสมซึ่งได้รับการติดตั้งและต่อสายดินอย่างถูกต้องโดยปฏิบัติตามระเบียบและกฎหมายท้องถิ่นทั้งหมด
- การต่อตัวนำสายดินกับอุปกรณ์ที่ไม่เหมาะสมสามารถส่งผลให้มีความเสี่ยงต่อการเกิดไฟฟ้าช็อตได้ ตรวจสอบกับช่างไฟฟ้าหรือผู้ให้บริการที่มีคุณวุฒิหากคุณมีข้อสงสัยว่าเครื่องใช้ไฟฟ้ามีการต่อสายดินอย่างถูกต้องหรือไม่
- อย่าดัดแปลงปลั๊กที่เข้ากับเครื่อง หากปลั๊กไม่พอดีกับเต้ารับ ให้ติดตั้งเต้ารับที่เหมาะสมโดยช่างไฟที่มีคุณวุฒิ

คำแนะนำด้านความปลอดภัยที่มีความสำคัญ



คำเตือน

เพื่อลดความเสี่ยงต่อการเกิดไฟไหม้ ไฟฟ้าช็อตหรือการบาดเจ็บต่อบุคคลเมื่อใช้งานผลิตภัณฑ์ของคุณ ควรปฏิบัติตามความระมัดระวังด้านความปลอดภัยรวมไปถึงสิ่งต่อไปนี้

การติดตั้ง

- ห้ามลองใช้งานเครื่องใช้ไฟฟ้านี้หากได้รับความเสียหาย ทำงานผิดปกติ ถูกถอดชิ้นส่วนบางอย่างออก หรือมีชิ้นส่วนที่ขาดหายหรือชำรุด รวมไปถึงสายไฟและปลั๊กที่เสียหาย สิ่งเหล่านี้สามารถทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้
- เครื่องใช้ไฟฟ้านี้มีน้ำหนักมาก อาจต้องใช้คนมากกว่าสองคนขึ้นไปเพื่อติดตั้งและเคลื่อนย้ายเครื่อง การไม่ปฏิบัติตามสามารถส่งผลให้บาดเจ็บได้
- เก็บและติดตั้งเครื่องใช้ไฟฟ้านี้ในสถานที่ซึ่งจะไม่สัมผัสกับอุณหภูมิที่ต่ำกว่าจุดเยือกแข็งหรือสัมผัสกับสภาพอากาศภายนอกอาคาร การไม่ปฏิบัติตามสามารถส่งผลให้เกิดการรั่วได้
- ยึดท่อระบายให้แน่นเพื่อหลีกเลี่ยงการหลุด การกระฉอกของน้ำอาจทำให้เกิดไฟฟ้าช็อต
- หากสายไฟที่ให้มาด้วยเสียหาย จะต้องได้รับการเปลี่ยนโดยผู้ผลิตหรือตัวแทนผู้ให้บริการหรือบุคคลที่มีคุณสมบัติที่คล้ายคลึงกันเพื่อหลีกเลี่ยงอันตราย
- เครื่องใช้ไฟฟ้านี้จะต้องไม่ติดตั้งไว้ด้านหลังประตูที่สามารถล็อกได้ ประตูเลื่อนหรือประตูที่มีบานพับอยู่ฝั่งตรงกันข้ามกับของเครื่องอบผ้า ในลักษณะที่การเปิดฝาเครื่องอบผ้าถูกจำกัด

การใช้งาน

- อย่าใช้วัตถุฉนวน เช่น สว่านหรือเข็มหมุด ในการกดหรือแยกชุดปฏิบัติการ สิ่งนี้สามารถทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้
- ข้างช่องที่ได้รับอนุญาตจาก LG Electronics เท่านั้นที่ควรถอดประกอบ ซ่อมแซมหรือดัดแปลงผลิตภัณฑ์ การดูแลรักษาที่ไม่เหมาะสมอาจทำให้เกิดการบาดเจ็บ เกิดไฟฟ้าช็อตหรือเกิดไฟไหม้
- อย่าพรมน้ำภายในหรือภายนอกผลิตภัณฑ์ เพื่อทำความสะอาด น้ำสามารถสร้างความเสียหายให้กับฉนวน ทำให้เกิดไฟฟ้าช็อตหรือเกิดไฟไหม้
- ดูแลให้พื้นที่ด้านล่างและรอบเครื่องใช้ไฟฟ้าของคุณให้ปราศจากวัตถุไวไฟ เช่น ผ้าสาส์ กระดาษ เศษผ้า สารเคมี ฯลฯ การใช้งานที่ไม่เหมาะสมสามารถทำให้เกิดไฟไหม้หรือการระเบิดได้
- อย่าใส่สิ่งมีชีวิต เช่น สัตว์เลี้ยง ในผลิตภัณฑ์ สิ่งนี้อาจทำให้เกิดการบาดเจ็บได้
- อย่าเปิดฝาเครื่องทิ้งไว้ เด็กอาจโหนฝาหรือคลานเข้าไปในเครื่อง ทำให้เกิดความเสียหายหรือบาดเจ็บ

- อย่าเอื้อมเข้าไปในตัวเครื่องในขณะที่กำลังทำงาน รอจนถึงชักผ้าหยุดสนิท การไม่ปฏิบัติตามอาจส่งผลให้บาดเจ็บ
- อย่าใส่ ชักหรืออบแห้งวัสดุที่ทำความสะอาด ชัก จุ่มหรือพ่นด้วยสารที่ติดไฟได้หรือระเบิดได้ (เช่น แวกซ์ น้ำมัน สี น้ำมันเบนซิน สารล้างน้ำมัน สารละลายชักแห้ง เครโซลีน น้ำมันพืช น้ำมันปรุงอาหาร ฯลฯ) การใช้งานที่ไม่เหมาะสมสามารถทำให้เกิดไฟไหม้หรือการระเบิดได้
- ในกรณีที่เกิดน้ำล้น หยุดการใช้งาน ผลิตรภัณฑ์และติดต่อศูนย์บริการ LG Electronics การสัมผัสกับน้ำสามารถทำให้เกิดไฟฟ้าช็อตได้
- อย่าออกแรงกดฝามากเกินไป เมื่อฝาเครื่องเปิดอยู่ การทำเช่นนั้นอาจทำให้เครื่องล้ม และสามารถทำให้เกิดการบาดเจ็บได้
- ใช้ชุดท่อใหม่ที่ให้มากับเครื่อง ชุดท่อเก่าไม่ควรถูกนำกลับมาใช้ การรั่วของน้ำอาจทำให้เกิดความเสียหายต่อทรัพย์สิน
- อย่าแตะฝาในระหว่างการอบไอน้ำ อบแห้ง หรือการชักที่อุณหภูมิสูง พื้นผิวของฝาอาจร้อนมาก ให้ปลดตัวล็อกประตูก่อนทำการเปิดประตู การไม่ปฏิบัติตามอาจส่งผลให้บาดเจ็บ
- อย่าใช้แก๊สไวไฟหรือสารที่ติดไฟได้ (เบนซิน น้ำมันเชื้อเพลิง ทินเนอร์ สารปิโตรเลียม แอลกอฮอล์ ฯลฯ) ในบริเวณรอบผลิตรภัณฑ์ อาจทำให้เกิดการระเบิดหรือไฟไหม้
- หากท่อระบายหรือท่อน้ำเข้าเป็นน้ำแข็งในช่วงฤดูหนาว ใช้งานหลังจากทำการละลายน้ำแข็งแล้วเท่านั้น การแช่แข็งอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต และชิ้นส่วนที่แข็งอาจทำให้ผลิตรภัณฑ์ทำงานผิดปกติหรือลดอายุการใช้ของผลิตรภัณฑ์
- เก็บนํ้ายาชักผ้า นํ้ายาปรับผ้านุ่มและนํ้ายาฟอกขาวทั้งหมดให้ห่างจากมือเด็ก ผลิตรภัณฑ์เหล่านี้มีวัตถุที่เป็นพิษ
- อย่าเสียบปลั๊กผลิตรภัณฑ์หลายอย่างเข้ากับเต้ารับแบบหลายช่องหรือสายต่อ การทำเช่นนี้สามารถทำให้เกิดไฟไหม้ได้
- ถอดปลั๊กไฟเมื่อคุณทำความสะอาดผลิตรภัณฑ์ การไม่ถอดปลั๊กอาจส่งผลให้เกิดไฟฟ้าช็อตหรือบาดเจ็บ
- อย่าจับปลั๊กไฟด้วยมือที่เปียก สิ่งนี้สามารถทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้
- เมื่อทำการถอดปลั๊กไฟจากเต้ารับ จับที่ปลั๊กไฟ ไม่จับที่สายไฟ ความเสียหายของสายไฟสามารถทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้
- อย่าขมวดสายไฟมากเกินไปหรือวางของหนักทับบนสายไฟ ความเสียหายของสายไฟสามารถทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้ได้

ความปลอดภัยทางเทคนิคสำหรับการใช้งานเครื่องอบผ้า


- อย่าอบแห้งเสื้อผ้าที่ยังไม่ได้ซักในเครื่อง
- เสื้อผ้าที่เปื้อนสาร เช่น น้ำมันปรุงอาหาร น้ำมันพืช อะซีโตน แอลกอฮอล์ น้ำเบนซิน เคโรซีน สารขจัดคราบ น้ำมันสน แวกซ์หรือสารขจัดแว็กซ์ ควรได้รับการซักในน้ำร้อน โดยใช้ยาซักผ้าในปริมาณที่มากขึ้นก่อนทำการอบแห้งในเครื่อง
- น้ำยาปรับผ้านุ่มหรือผลิตภัณฑ์อื่นที่คล้ายคลึงกันควรใช้งานตามคำแนะนำของน้ำยาปรับผ้านุ่ม
- เอาสิ่งของทั้งหมด เช่น ไฟแช็กและไม้ขีดไฟ ออกจากกระเป๋า
- อย่าหยุดเครื่องนี้ก่อนสิ้นสุดการอบแห้ง เว้นแต่จะเก็บเสื้อผ้าทั้งหมดออกไปอย่างรวดเร็วและผึ่งเพื่อให้ความร้อนกระจายตัวออก
- ไม่ควรใช้เครื่องใช้ไฟฟ้านี้หากใช้สารเคมีทางอุตสาหกรรมในการทำความสะดวก
- สิ่งของ เช่น ยางโฟม (โฟมลาเทกซ์) หมวกคลุมผมอาบน้ำ ผ้ากันน้ำ ผ้าและเสื้อผ้าที่บุด้วยยางด้านหลัง หรือหมอนมีแผ่นยางโฟม ไม่ควรอบแห้งในเครื่องนี้

การกำจัด

- ก่อนทำการทิ้งเครื่องใช้ไฟฟ้าเก่า ให้ถอดปลั๊กก่อน ทำให้ปลั๊กใช้งานไม่ได้ ตัดสายไฟตรงด้านหลังเครื่องใช้ไฟฟ้าเพื่อป้องกันการใช้ที่ผิด
- ทิ้งวัสดุหีบห่อ (เช่น ไวนิลและสไตโรโฟม) ให้ห่างจากมือเด็ก วัสดุหีบห่ออาจติดคอเด็กได้
- ถอดฝาของถังซักก่อนที่จะเลิกใช้งานหรือทิ้งเครื่องนี้เพื่อหลีกเลี่ยงอันตรายที่เด็กหรือสัตว์ขนาดเล็กจะถูกขังอยู่ด้านใน การไม่ทำตามสามารถส่งผลให้เกิดการบาดเจ็บสาหัสของบุคคลหรือเสียชีวิตได้

การติดตั้ง

ข้อมูลจำเพาะ

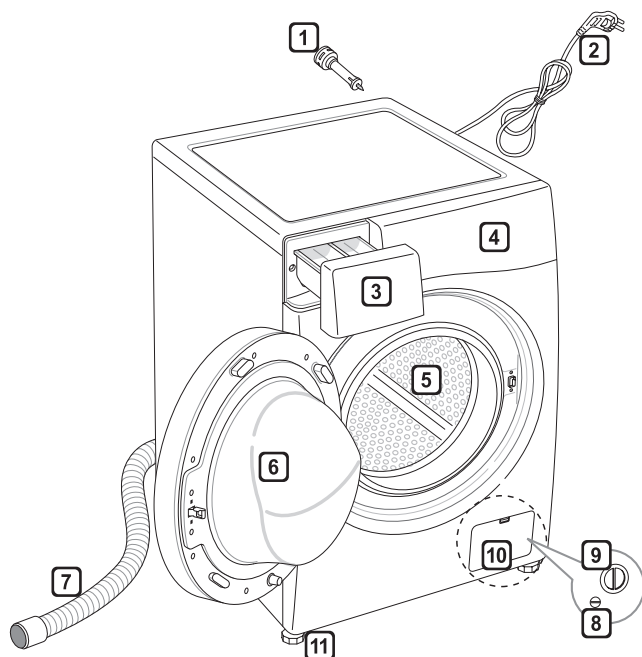


- 1 สลักฝาน
- 2 ปลั๊กไฟ
- 3 ล้นชัก
- 4 แผงควบคุม
- 5 ถังซัก
- 6 ฝา
- 7 ท่อระบาย
- 8 จุกทางระบาย
- 9 ตัวกรองจุกทางระบาย
- 10 ฝาดรอม (ตำแหน่งอาจแตกต่างกันไปตามผลิตภัณฑ์)
- 11 ขาตั้งแบบปรับได้

- แหล่งจ่ายไฟ : 220 โวลต์, 50 เฮิร์ซ
- ขนาด : 600 มม. (ก) x 610 มม. (ล) x 850 มม. (ส)
- น้ำหนักของผลิตภัณฑ์ : 70 กก.
- ความจุในการซัก : 10.5 กก.
- แรงดันน้ำที่รับได้ : 0.1 – 1.0 MPa (1.0 – 10.0 kgf / ซม.²)

- สภาพภายนอกและข้อมูลจำเพาะอาจแตกต่างกันออกไปโดยไม่ต้องมีการแจ้งเพื่อปรับปรุงคุณภาพของผลิตภัณฑ์

อุปกรณ์เสริม



ท่อน้ำเข้า (1 ชิ้น)
(*ตัวเลือก : ร้อน / เย็น (2 ชิ้น))



กุญแจเลื่อน



จากรองข้อต่อ (สำหรับการยึดท่อระบาย)



ฝาสำหรับปิดรูสลักที่
ใช้ขนส่ง




แผ่นกันสั่น (2 ชิ้น)
(ทางเลือก)



สายรัด
(ทางเลือก)

ข้อกำหนดสถานที่ติดตั้ง

สถานที่

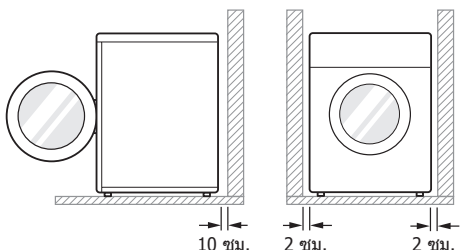

พื้นได้ระดับ: ความลาดเอียงของพื้นที่ตั้งเครื่องต้องไม่เกิน 1°

เต้ารับจ่ายไฟ: จะต้องอยู่ภายใน 1.5 เมตรของทั้งสองฝั่งของที่ตั้งเครื่องซักผ้า

- อย่าใช้เครื่องใช้ไฟฟ้ามากกว่าหนึ่งเครื่องเพราะจะทำให้เต้ารับเกิดกระแสไฟฟ้าสูง

ระยะห่างเพิ่มเติม: สำหรับผนัง 10 ซม.: ด้านหลัง

/2 ซม.: ด้านขวาและด้านซ้าย

- อย่าวางหรือเก็บผลิตภัณฑ์ซักผ้าไว้ด้านบนของเครื่องซักผ้า
- ผลิตภัณฑ์เหล่านี้อาจสร้างความเสียหายให้กับผิวเคลือบหรือแผงควบคุม

การจัดตำแหน่ง

- ติดตั้งเครื่องซักผ้าบนพื้นที่ยึดแน่นได้ระดับ
- ตรวจสอบให้แน่ใจว่าการหมุนเวียนอากาศรอบเครื่องซักผ้าไม่ถูกกีดขวางด้วยพรม ผ้า ฯลฯ
- อย่าพยายามแก้ไขความไม่เสมอของพื้นด้วยเศษไม้ สังกะสีหรือวัสดุอื่นที่คล้ายคลึงกันใต้เครื่องซักผ้า
- หากเป็นไปได้ที่จะหลีกเลี่ยงการวางเครื่องซักผ้าติดกับเตาหุงต้มแบบใช้แก๊สหรือถ่าน จนวนกันไหม้ (85x60 ซม.) ที่หุ้มด้วยฟอยล์อะลูมิเนียมในด้านที่หันหน้าเข้าหาเตาหรือเตาอบจะต้องถูกสอดกันไว้ระหว่างเครื่องใช้ทั้งสอง

- อย่าติดตั้งเครื่องซักผ้าของคุณในห้องที่อาจเกิดอุณหภูมิที่จุดเยือกแข็ง ท่อน้ำที่แข็งตัวอาจแตกเนื่องจากแรงดัน ความน่าเชื่อถือของหน่วยควบคุมอิเล็กทรอนิกส์อาจลดลงที่อุณหภูมิต่ำกว่าจุดเยือกแข็ง
- โปรดตรวจสอบให้แน่ใจว่าเมื่อเครื่องซักผ้าได้รับการติดตั้งวิศวกรสามารถเข้าถึงได้ง่ายในกรณีที่มีการทำงานล้มเหลว
- เมื่อเครื่องซักผ้าถูกติดตั้ง ปรับขาตั้งทั้งสี่โดยใช้กุญแจเลื่อนสลักหัวต่อที่ให้มาเพื่อให้แน่ใจว่าเครื่องมีความมั่นคง และมีการเว้นระยะห่างประมาณ 20 มม. ระหว่างด้านบนของเครื่องซักผ้าและด้านล่างของชั้นวางใด ๆ
- อุปกรณ์นี้ไม่ได้รับการออกแบบมาสำหรับการใช้งานในเรือหรือการติดตั้งแบบเคลื่อนที่ เช่น คณะเดินทาง เครื่องบิน ฯลฯ


การเชื่อมต่อทางไฟฟ้า

- อย่าใช้สายต่อหรืออะแดปเตอร์
- ถอดปลั๊กเครื่องซักผ้าและปิดแหล่งจ่ายน้ำหลังการใช้งานเสมอ
- ต่อเครื่องซักผ้าเข้ากับเต้ารับสายดินโดยปฏิบัติตามข้อกำหนดการเดินสายไฟ
- เครื่องซักผ้าจะต้องอยู่ในตำแหน่งที่เข้าถึงปลั๊กได้ง่าย
- การซ่อมแซมเครื่องซักผ้าจะต้องได้รับการดำเนินการโดยบุคลากรที่มีคุณสมบัติเท่านั้น การซ่อมแซมที่ดำเนินการโดยบุคคลที่ไม่มีประสบการณ์อาจทำให้เกิดการบาดเจ็บหรือการทำงานผิดปกติที่รุนแรง ติดต่อศูนย์บริการในท้องถิ่นของคุณ
- หากเครื่องซักผ้าถูกจัดส่งในฤดูหนาวและอุณหภูมิต่ำกว่าจุดเยือกแข็ง ตั้งเครื่องซักผ้าไว้ที่อุณหภูมิห้องเป็นเวลาสองสามชั่วโมงก่อนนำมาใช้งาน

ทำการแกะหีบห่อและถอดสลัก สำหรับขนย้าย


1 ยกเครื่องชักผ้าออกจากฐานโฟม

- หลังจากเอาลังกระดาษและวัสดุหีบห่อออก ยกเครื่องชักผ้าออกจากฐานโฟม ตรวจสอบให้แน่ใจว่า ส่วนรองถังน้ำออกมาพร้อมฐานและไม่ติดกับด้านล่างของเครื่องชักผ้า
- หากคุณต้องวางเครื่องชักผ้าบนลงเพื่อถอดฐานลังกระดาษ ปกป้องด้านข้างของเครื่องชักผ้าเสมอและวางบนลงด้านข้างอย่างระมัดระวัง อย่าวางเครื่องชักผ้าบนลงด้วยด้านหน้าหรือด้านหลัง

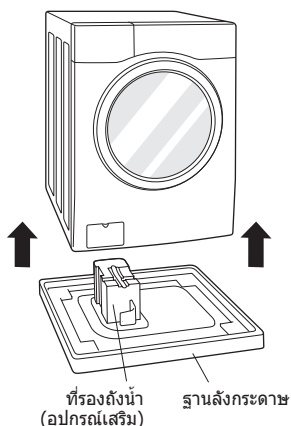


2 ถอดส่วนประกอบสลัก

- เริ่มต้นกับสลักสำหรับขนย้ายสองตัวด้านล่าง ไขกุญแจเลื่อน (ให้มาด้วย) เพื่อคลายสลักสำหรับขนย้ายทั้งหมดโดยการหมุนทวนเข็มนาฬิกา ถอดส่วนประกอบสลักโดยการบิดเล็กน้อยในขณะที่กำลังดึงออก

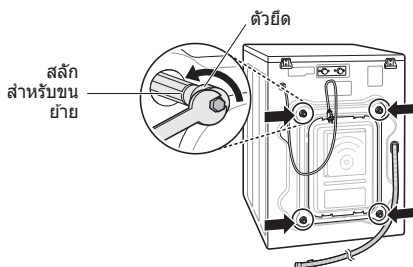

3 ใส่ฝาปิดช่อง

- มองหาฝาปิดช่องที่ให้มาในชุดอุปกรณ์เสริมและใส่ในช่องสลักสำหรับขนย้าย

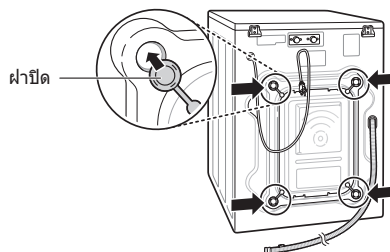

หมายเหตุ

- เก็บชิ้นประกอบสลักไว้สำหรับใช้ในอนาคต เพื่อป้องกันความเสียหายต่อส่วนประกอบภายใน อย่าขนย้ายเครื่องชักผ้าโดยไม่มีการติดตั้งสลักสำหรับขนย้ายกลับเข้าไปใหม่
- การไม่ถอดสลักสำหรับขนย้ายและตัวยึดอาจทำให้เกิดการสั่นและเสียงที่รุนแรง ซึ่งสามารถนำไปสู่ความเสียหายถาวรต่อเครื่องชักผ้าได้ สายไฟจะถูกยึดกับด้านหลังของเครื่องชักผ้าด้วยสลักสำหรับขนย้าย เพื่อช่วยป้องกันการใช้งานโดยยังมีสลักสำหรับขนย้ายอยู่

ใช้แผ่นกันลื่น (อุปกรณ์เสริม)

หากคุณติดตั้งเครื่องซักผ้าบนพื้นผิวที่ลื่น อาจมีการขยับเพราะการสั่นที่มากเกินไป การปรับระดับที่ไม่ถูกต้องอาจทำให้เกิดการทำงานผิดปกติผ่านเสียงและการสั่น หากมีเหตุการณ์นี้เกิดขึ้น ติดตั้งแผ่นกันลื่นใต้ขาปรับระดับและทำการปรับระดับ



1 ทำความสะอาดพื้นเพื่อยึดแผ่นกันลื่น

- ใช้ผ้าแห้งเพื่อขจัดและทำความสะอาดสิ่งแปลกปลอมและความชื้น หากมีความชื้นเหลืออยู่ แผ่นกันลื่นอาจเกิดการลื่นได้

2 ปรับระดับหลังจากวางเครื่องซักผ้าในพื้นที่ติดตั้ง

3 วางด้านที่มีกาวของแผ่นกันลื่นลงบนพื้น

- จะได้ผลดีมากที่สุดเมื่อติดตั้งแผ่นกันลื่นใต้ขาหน้า หากเป็นการยกที่จะวางแผ่นกันลื่นใต้ขาหน้า ให้วางไว้ใต้ขาหลัง

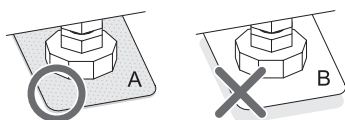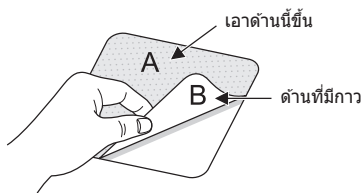


4 ตรวจสอบให้แน่ใจว่าเครื่องซักผ้าได้ระดับ

- ดันหรือโยกขอบด้านบนของเครื่องซักผ้าเบาๆ เพื่อตรวจสอบให้แน่ใจว่าเครื่องซักผ้าไม่มีการโยก หากเครื่องซักผ้าโยก ปรับระดับเครื่องซักผ้าอีกครั้ง

พื้นไม้ (พื้นลอย)

- โดยทั่วไป พื้นไม้จะไวต่อการสั่นสะเทือน
- เพื่อป้องกันการสั่น เราแนะนำให้คุณใส่จุกยางที่มีความหนาอย่างน้อย 15 มม. ที่ขาแต่ละข้างของเครื่องซักผ้า ยึดคานพื้นอย่างน้อยสองจุดด้วยสกรู

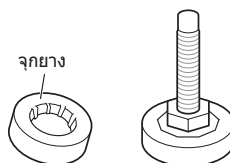

- หากเป็นไปได้ ติดตั้งเครื่องซักผ้าที่มุมด้านหนึ่งของห้องที่พื้นมีความมั่นคงมากกว่า
- ใส่จุกยางเพื่อลดการสั่น
- คุณสามารถซื้อจุกยาง (หมายเลขชิ้นส่วน 4620ER4002B) จากศูนย์บริการ LG


หมายเหตุ

- การจัดวางและปรับระดับเครื่องซักผ้าอย่างเหมาะสมจะช่วยให้การใช้งานได้ยาวนาน เป็นปกติและเชื่อถือได้
- เครื่องซักผ้าจะต้องอยู่ในแนวระนาบ 100% และตั้งอยู่ในตำแหน่งอย่างมั่นคง
- จะต้องไม่ 'โยกไปมา' ระหว่างมุมใดมุมหนึ่งภายใต้ภาระการทำงาน
- พื้นผิวที่ติดตั้งจะต้องสะอาด ปราศจากแวกซ์เคลือบพื้น และสารเคลือบหล่อลื่นอื่นๆ
- อย่าให้ขาตั้งของเครื่องซักผ้าเบียด การไม่ปฏิบัติตามอาจทำให้เกิดการสั่นหรือเสียงดัง

ทำการปรับระดับเครื่องชักผ้า

หากพื้นไม่เสมอกัน หมุนขาแบบปรับได้ตามต้องการ (อย่าใส่เศษไม้หรืออื่นๆ ได้ขา) ตรวจสอบให้แน่ใจว่าขาตั้งสี่ข้างมั่นคงและแตะกับพื้น และจากนั้นตรวจสอบว่าเครื่องได้ระดับโดยสมบูรณ์ (ใช้เครื่องปรับระดับผิวหน้า)

- เมื่อเครื่องชักผ้าได้ระดับ ขันน็อตล็อกเข้าหาฐานของเครื่องชักผ้าให้แน่น น็อตล็อกทั้งหมดจะต้องถูกขันให้แน่น

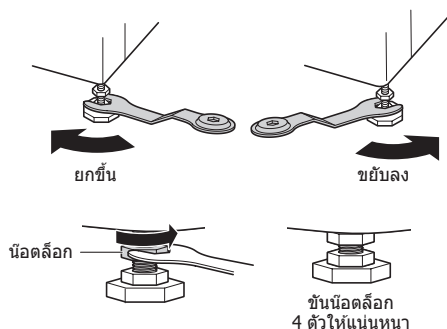

- การตรวจสอบแนวทแยง

เมื่อกดที่มุมด้านหนึ่งของแผ่นด้านบนของเครื่องชักผ้าในแนวทแยง เครื่องชักผ้าไม่ควรจะมีการขยับขึ้นลงแม้แต่นิดเดียว (ตรวจสอบทั้งสองทิศทาง) หากเครื่องชักผ้าโยกเมื่อกดแผ่นด้านบนของเครื่องชักผ้าในแนวทแยง ปรับขาใหม่อีกครั้ง

หมายเหตุ

- ไม้หรือพื้นลื่นชนิดอื่นๆ อาจมีส่วนทำให้เกิดการสั่นและการไม่สมดุลมากเกินไป
- หากติดตั้งเครื่องชักผ้าบนพื้นที่ยกสูงขึ้น จะต้องได้รับการยึดอย่างแน่นหนาเพื่อกำจัดความเสี่ยงต่อการหล่น



การต่อท่อน้ำเข้า

- แรงดันจากแหล่งน้ำจะต้องอยู่ระหว่าง 0.1 เมกกะปาสคาล และ 1.0 เมกกะปาสคาล (1.0–10.0 kgf/cm²)
- อย่าฉีกหรือขยำเกลียวเมื่อทำการต่อท่อน้ำเข้ากับวาล์ว
- หากแรงดันของแหล่งน้ำมากกว่า 1.0 Mpa ควรมีการติดตั้งอุปกรณ์ลดแรงดัน
- ตรวจสอบสภาพของท่อน้ำอย่างสม่ำเสมอและเปลี่ยนท่อน้ำหากจำเป็น

ทำการตรวจสอบซีลยางท่อน้ำเข้า

มีซีลยางสองชิ้นให้มาพร้อมท่อน้ำเข้า


เอาไว้ใช้สำหรับป้องกันน้ำรั่ว ตรวจสอบให้แน่ใจว่าการต่อกอน้ำมีความแน่นหนาเพียงพอ

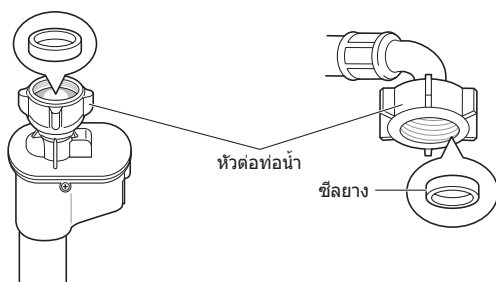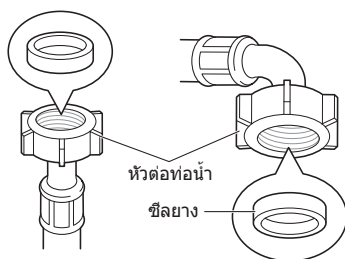

ทำการต่อท่อกับก๊อกน้ำ


การต่อท่อแบบสกรูเข้ากับก๊อกแบบมีเกลียว

หมุนตัวต่อท่อน้ำเข้ากับก๊อกจ่ายน้ำ

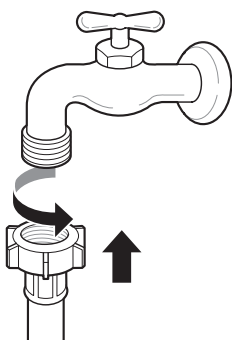


การต่อท่อแบบสกรูเข้ากับก๊อกแบบไม่มีเกลียว


1 คลายสกรูยึดทั้งสองตัว

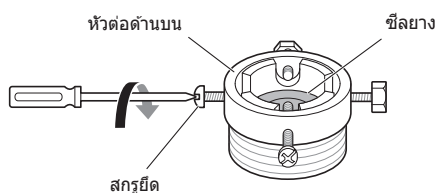


2 ถอดจานน้ำหากก๊อกใหญ่เกินไปที่จะต่อกับอะแดปเตอร์

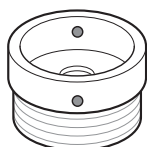

3 กดอะแดปเตอร์เข้ากับหัวก๊อกเพื่อให้ซีลยางรัดกั้นน้ำเข้าออก ชันสกรูยึดทั้งสองตัวให้แน่น

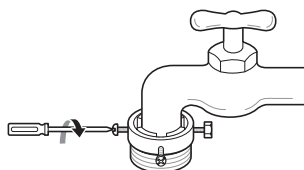


4 กดท่อน้ำเข้าขึ้นในแนวตั้งเพื่อให้ซีลยางในท่อสามารถเกาะกับก๊อกได้อย่างสมบูรณ์ และจากนั้นขันให้แน่นโดยการหมุนไปทางขวา

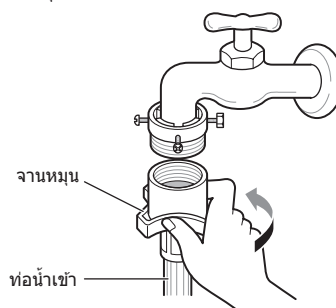


การต่อท่อน้ำแบบสัมผัสเข้ากับก๊อกแบบไม่มีเกลียว


1 ขันจานวงแหวนของอะแดปเตอร์ออกและคลายสกรูยึดทั้งสองตัว

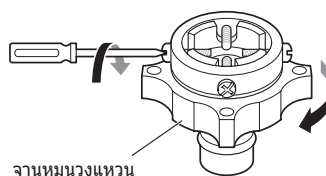


2 ถอดจานน้ำหากก๊อกใหญ่เกินไปที่จะต่อกับอะแดปเตอร์

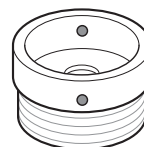

- 3** กดอะแดปเตอร์เข้ากับหัวก๊อกเพื่อให้ซีลยางรัดกันน้ำเข้าออก
ขันจานวงแหวนของอะแดปเตอร์และสกรูยึดทั้งสองตัวให้แน่น

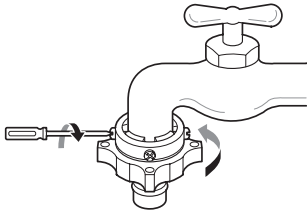

- 4** ดึงจานสลักของหัวต่อลง กดท่อน้ำเข้าไปในอะแดปเตอร์ และปล่อยจานสลักของหัวต่อ ตรวจสอบให้แน่ใจว่าอะแดปเตอร์ล็อกอยู่กับที่

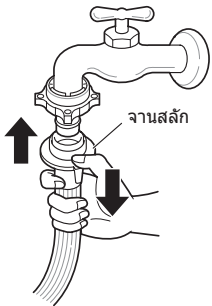


หมายเหตุ

- หลังทำการต่อท่อน้ำเข้ากับก๊อกน้ำ เปิดก๊อกน้ำเพื่อไล่สิ่งแปลกปลอม (ฝุ่น ทราย เศษซีลเสีย ฯลฯ) ในท่อน้ำ ปล่อยให้ น้ำระบายใส่ถัง และตรวจสอบอุณหภูมิของน้ำ

การต่อท่อเข้ากับเครื่องซักผ้า

ตรวจสอบให้แน่ใจว่าไม่มีตำหนิและไม่มีรอยแตกในท่อ
เมื่อเครื่องซักผ้าของคุณมีวาล์วสองจุด

- ท่อน้ำเข้าที่มีหัวต่อสีแดงเอาไว้สำหรับก๊อกน้ำร้อน

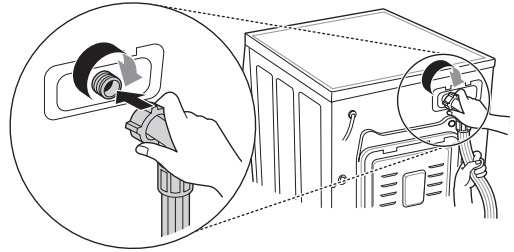

หมายเหตุ


- หลังการต่อจนเสร็จสมบูรณ์ หากน้ำรั่วจากท่อ ให้ทำซ้ำขั้นตอนเดิม
ใช้ก๊อกน้ำแบบธรรมดาที่สุดสำหรับการจ่ายน้ำ ในกรณีที่ก๊อกน้ำเป็นสแตนเลสหรือใหญ่เกินไป ถอดจานน้ำออกก่อนใส่ก๊อกน้ำเข้ากับอะแดปเตอร์

การใช้ก๊อกน้ำในแนวนอน


ก๊อกน้ำในแนวนอน



ก๊อกต่อ

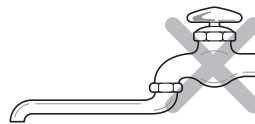


ก๊อกสี่เหลี่ยม


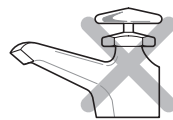


การติดตั้งท่อระบาย

- ไม่ควรวางท่อระบายสูงจากพื้นเกินกว่า 100 ซม. น้ำในเครื่องซักผ้าอาจไม่ระบายออกหรืออาจจะระบายออกช้า
- การยึดท่อระบายอย่างถูกต้องจะป้องกันพื้นจากความเสียหายเนื่องจากการรั่วของน้ำ
- หากท่อระบายยาวเกินไป อย่าออกแรงดันใส่กลับเข้าไปในเครื่องซักผ้า การทำเช่นนี้จะทำให้เกิดเสียงที่ผิดปกติ

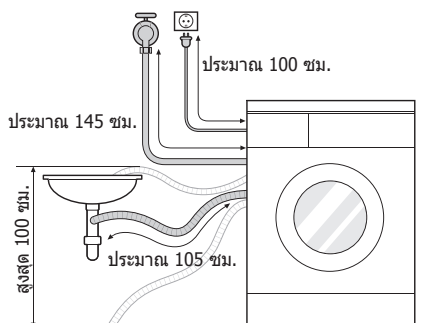

- เมื่อทำการติดตั้งท่อระบายเข้ากับอ่างน้ำ ยึดให้แน่นหนาด้วยสายคล้อง
- การยึดท่อระบายอย่างถูกต้องจะป้องกันพื้นจากความเสียหายเนื่องจากการรั่วของน้ำ

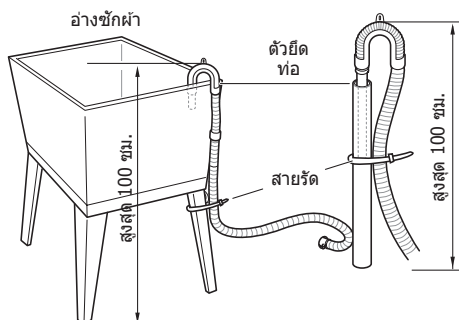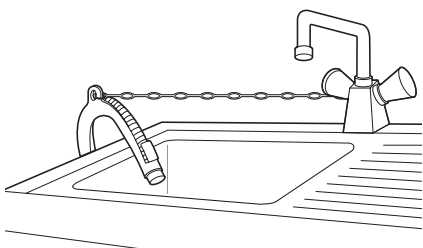

การเชื่อมต่อทางไฟฟ้า (ในสหราชอาณาจักรเท่านั้น)


สายไฟในข้อต่อหลักถูกกำหนดสีโดยสอดคล้องกับรหัสต่อไปนี้:

สีเขียวและสีเหลือง: สายดิน

สีน้ำเงิน: กลาง

สีน้ำตาล: มีไฟฟ้า

เครื่องใช้ไฟฟ้านี้จะต้องได้รับการต่อสายดิน

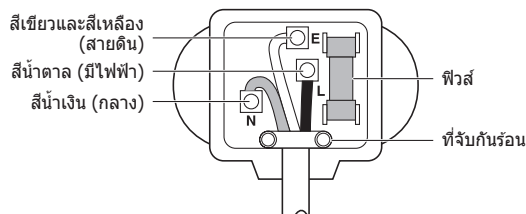

หากสีของสายไฟในข้อต่อหลักของเครื่องนี้ไม่ตรงกับเครื่องหมายสีที่ระบุข้อต่อในปลั๊กของคุณ ให้ดำเนินการดังนี้:

สายไฟสีเขียวและสีเหลืองจะต้องต่อกับขั้วในปลั๊กซึ่งมีเครื่องหมายตัว E หรือสัญลักษณ์ดิน ($\perp$) หรือมีสีเขียว หรือสีเขียวและสีเหลือง

สายไฟสีน้ำเงินจะต้องต่อกับขั้วต่อซึ่งมีเครื่องหมายตัว N หรือสีดำ

สายไฟสีน้ำตาลจะต้องต่อกับขั้วต่อซึ่งมีเครื่องหมายตัว L หรือสีแดง

หากใช้ปลั๊ก 13 แอมป์ (BS 1363) ใส่ฟิวส์ 13 แอมป์ BS 1362


การใช้งาน

การใช้งานเครื่องซักผ้า

ก่อนการซักครั้งแรก เลือกโปรแกรม (Cotton 60 °C ใส่ น้ำยาซักผ้าครึ่งส่วน) ปล่อยให้เครื่องซักผ้าทำการซักโดยไม่มี ผ้า การทำเช่นนี้จะขจัดสิ่งตกค้างและน้ำจากถังซักที่อาจตกค้าง ในระหว่างการผลิต


1 แยกผ้าและเอาเสื้อผ้าใส่ถัง

- แยกผ้าตามชนิดของผ้า ระดับความสกปรก สีและ ปริมาณผ้าตามต้องการ เปิดฝาและใส่เสื้อผ้าในเครื่อง ซักผ้า

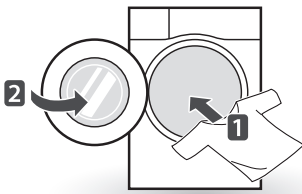


2 ใส่ผลิตภัณฑ์ทำความสะอาด และ/หรือน้ำยาซักผ้าและ น้ำยาปรับผ้านุ่ม

- ใส่น้ำยาซักผ้าในปริมาณที่เหมาะสมในลิ้นชักจ่ายน้ำยา ซักผ้า หากต้องการ เพิ่มน้ำยาฟอกขาวหรือ น้ำยาปรับผ้านุ่มในช่องที่เหมาะสมในตัวจ่ายน้ำยา

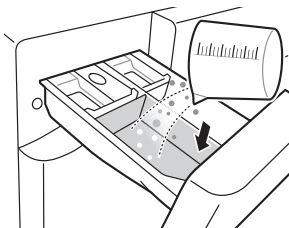


3 เปิดใช้งานเครื่องซักผ้า

- กดปุ่ม **Power** เพื่อเปิดใช้งานเครื่องซักผ้า

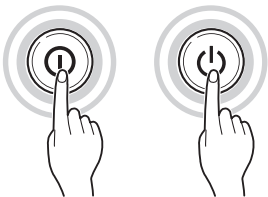

4 เลือกโปรแกรมการซักที่ต้องการ

- กดปุ่ม โปรแกรม ซ้ำหรือหมุนลูกบิดเลือกโปรแกรม เพื่อเลือกโปรแกรมการซักที่ต้องการ

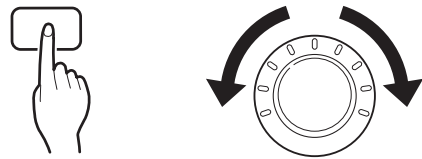

5 เริ่มต้นโปรแกรม

- กดปุ่ม **Start/Pause** เพื่อเริ่มโปรแกรม เครื่องซักผ้า จะขึ้นเล็กน้อยโดยไม่มีน้ำเพื่อวัดน้ำหนักของผ้าที่จะ ซัก หากไม่กดปุ่ม **Start/Pause** ภายในเวลา 5 นาที เครื่องซักผ้าจะปิดการทำงานและการตั้งค่าทั้งหมดจะ หายไป



6 สิ้นสุดโปรแกรม

- เมื่อสิ้นสุดโปรแกรม ทำนองเพลงจะดังขึ้น นำเสื้อผ้า ของคุณออกจากเครื่องซักผ้าทันทีเพื่อลดการยับ ตรวจสอบรอบซีลของฝาปิดเมื่อนำเสื้อผ้าออกมาเพื่อดู ว่ามีของขนาดเล็กติดในซีลหรือไม่

การแยกผ้า

1 มองหาฉลากการดูแลรักษาบนเสื้อผ้าของคุณ

- ฉลากนี้จะบอกคุณเกี่ยวกับส่วนผสมใยผ้าของเสื้อผ้าของคุณและควรทำการซักอย่างไร
- สัญลักษณ์บนฉลากการดูแลรักษา




2 การแยกผ้า


- เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด แยกเสื้อผ้าออกเป็นกลุ่มที่สามารถซักด้วยโปรแกรมซักเดียวกันได้
- ผ้าที่ต่างกันต้องได้รับการซักที่อุณหภูมิและความเร็วในการปั่นที่แตกต่างกัน
- แยกผ้าที่มีสีเข้มจากผ้าสีอ่อนและสีขาวเสมอ ซักแยกจากกันเนื่องจากสีย้อมผ้าและเศษใยผ้าสามารถเกิดขึ้นได้ ทำให้เกิดการเปลี่ยนสีของเสื้อผ้าสีอ่อนและสีขาว หากเป็นไปได้ อย่าซักผ้าที่สกปรกมากร่วมกับผ้าที่สกปรกน้อย
 - ความสกปรก (Heavy, Normal, Light)
แยกเสื้อผ้าตามปริมาณความสกปรก
 - สี (สีขาว สีอ่อน สีเข้ม)
แยกผ้าขาวจากผ้าสี
 - เศษใยผ้า (สร้างเศษใยผ้า สะสมเศษใยผ้า)
ซักเสื้อผ้าที่สร้างเศษใยผ้าและเสื้อผ้าที่สะสมเศษใยผ้าแยกกัน

3 การดูแลรักษาเครื่องซักผ้า


- รวมเสื้อผ้าชิ้นใหญ่และเล็กเข้าด้วยกัน ใส่เสื้อผ้าชิ้นใหญ่ก่อน
- เสื้อผ้าชิ้นใหญ่ไม่ควรเกินกว่าครึ่งหนึ่งของเสื้อผ้าที่จะซัก อย่าซักเสื้อผ้าชิ้นเดียว การทำเช่นนี้อาจทำให้เกิดภาระที่ไม่สมดุล เพิ่มเสื้อผ้าที่คล้ายคลึงกันหนึ่งหรือสองชิ้น
- ตรวจสอบกระเป๋าทิ้งหมดให้แน่ใจว่าไม่มีของอยู่ข้างใน สิ่งของ เช่น เล็บ คลิปหนีบผม ไม้ขีดไฟ ปากกา เหรียญและกุญแจสามารถสร้างความเสียหายให้กับเครื่องซักผ้าและเสื้อผ้าของคุณได้

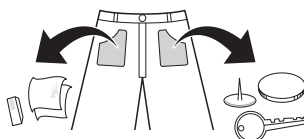

- รูดปัดซิป ตะขอและสายรัดเพื่อให้แน่ใจว่าสิ่งเหล่านี้จะไม่เกี่ยวกับเสื้อผ้าอื่นๆ
- จัดการกับสิ่งสกปรกและรอยเปื้อนก่อนโดยการปายน้ำที่ละลายน้ำยาซักผ้าไว้เล็กน้อยบนรอยเปื้อนเพื่อช่วยขจัดสิ่งสกปรก
- ตรวจสอบในพับของยางกันรั่วแบบยืดหยุ่น (สีเทา) และเอาสิ่งของเล็กๆ ออก
- ตรวจสอบภายในถังซักและนำสิ่งของจากการซักครั้งก่อนออก

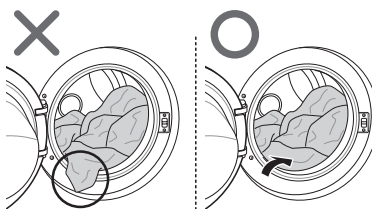

- นำเสื้อผ้าหรือสิ่งของออกจากยางกันรั่วแบบยืดหยุ่นเพื่อป้องกันไม่ให้เสื้อผ้าและยางกันรั่วเสียหาย

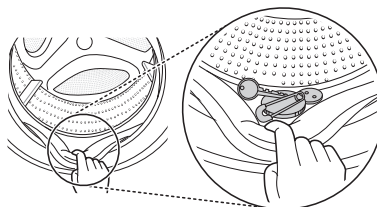

การใส่ผลิตภัณฑ์ทำความสะอาด

ปริมาณน้ำยาซักผ้า

- ควรใช้น้ำยาซักผ้าโดยปฏิบัติตามคำแนะนำของผู้ผลิต น้ำยาซักผ้าและควรเลือกตามชนิด สี ความสกปรกของผ้า และอุณหภูมิของการซัก
- หากใช้น้ำยาซักผ้ามากเกินไป อาจเกิดฟองมากเกินไป และจะส่งผลให้เกิดการซักที่ไม่ดี ส่งผลหรือทำให้เกิดภาระหนักกับมอเตอร์
- หากคุณต้องการใช้น้ำยาซักผ้าแบบเหลว ให้ปฏิบัติตามคำแนะนำที่หามาโดยผู้ผลิตน้ำยาซักผ้า
- คุณสามารถเติมน้ำยาซักผ้าแบบเหลวใส่ในลิ้นชักน้ำยาซักผ้าหลักโดยตรงได้หากคุณเริ่มต้นโปรแกรมทันที
- อย่าใช้น้ำยาซักผ้าหากคุณ Delay หน่วงเวลา หรือถ้าคุณเลือก Pre Wash เนื่องจากของเหลวอาจแข็งตัว
- หากมีฟองเกิดขึ้นมากเกินไป ลดปริมาณของน้ำยาซักผ้าลง
- ปริมาณการใช้น้ำยาซักผ้าอาจต้องได้รับการปรับสำหรับอุณหภูมิของน้ำ ความกระด้างของน้ำ ปริมาณและระดับความสกปรกของเสื้อผ้าที่ซัก เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด หลีกเลี่ยงการทำให้เกิดฟองมากเกินไป
- อ้างอิงฉลากของเสื้อผ้า ก่อนทำการเลือกน้ำยาซักผ้าและอุณหภูมิของน้ำ:
- เมื่อใช้งานเครื่องซักผ้า ใช้น้ำยาซักผ้าที่กำหนดสำหรับเสื้อผ้าแต่ละชนิดเท่านั้น:
 - ผงซักฟอกทั่วไปสำหรับผ้าทุกชนิด
 - ผงซักฟอกสำหรับผ้าที่บอบบาง
 - น้ำยาซักผ้าสำหรับผ้าทุกชนิดหรือน้ำยาซักผ้าสำหรับผ้าขนสัตว์ที่กำหนดไว้เท่านั้น
- เพื่อประสิทธิภาพการซักและการให้ความขาวที่ดียิ่งกว่า ใช้น้ำยาซักผ้าร่วมกับสารฟอกขาวแบบผงทั่วไป
- น้ำยาซักผ้าจะถูกล้างออกจากตัวจ่ายในตอนเริ่มต้นของโปรแกรม

หมายเหตุ

- อย่าปล่อยให้ น้ำยาซักผ้าแข็งตัว การกระทำดังกล่าวอาจนำไปสู่การอุดตัน ประสิทธิภาพการล้างน้ำที่ไม่ดีและกลิ่นเหม็น
- ปริมาณซักเต็ม: ตามคำแนะนำของผู้ผลิต
- ปริมาณส่วนเดียว: 3/4 ของปริมาณปกติ
- ปริมาณขั้นต่ำ: 1/2 ของปริมาณซักเต็ม

การใส่น้ำยาซักผ้าและน้ำยาปรับผ้านุ่ม

การใส่น้ำยาซักผ้า


- Main wash เท่านั้น → 
- Pre wash+Main wash →  • 

หมายเหตุ

- น้ำยาซักผ้า น้ำยาฟอกขาวหรือน้ำยาปรับผ้านุ่มที่มากเกินไปอาจทำให้เกิดการล้น
- ตรวจสอบให้แน่ใจว่าใช้ปริมาณน้ำยาซักผ้าที่เหมาะสม

การใส่น้ำยาปรับผ้านุ่ม

- อย่าใส่เกินกว่าขีดเต็มเต็ม การใส่เกินสามารถทำให้เกิดการจ่ายน้ำยาปรับผ้านุ่มก่อนเวลาได้ ซึ่งอาจทำให้มีรอยเปื้อนเสื้อผ้า ปิดลิ้นชักตัวจ่ายน้ำยาอย่างช้าๆ

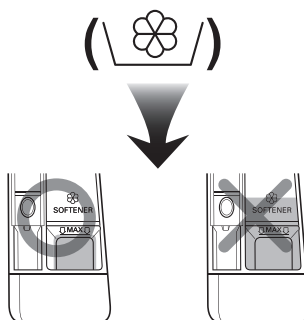


- อย่าทิ้งน้ำยาปรับผ้านุ่มไว้ในถังซักน้ำยาซักผ้าเป็นเวลานานกว่า 2 วัน (น้ำยาปรับผ้านุ่มอาจแข็งตัว)
- น้ำยาปรับผ้านุ่มจะถูกใส่โดยอัตโนมัติในโปรแกรมการล้างน้ำสุดท้าย
- อย่าเปิดลิ้นชักในขณะที่กำลังจ่ายน้ำ
- ไม่ควรใช้สารทำลายลาย (เบนซีน ฯลฯ)

หมายเหตุ

- อย่าเทน้ำยาปรับผ้านุ่มใส่ผ้าโดยตรง


การใส่สารลดความกระด้างของน้ำ

- สารลดความกระด้างของน้ำ เช่น สารป้องกันตะกรันหินปูน (เช่น Calgon) สามารถนำมาใช้งานได้เพื่อลดปริมาณการใช้น้ำยาซักผ้าในพื้นที่ซึ่งมีน้ำกระด้างมาก ใส่ในปริมาณที่กำหนดบนหีบห่อผลิตภัณฑ์ ก่อนอื่นใส่น้ำยาซักผ้าและจากนั้นตามด้วยน้ำยาปรับผ้านุ่ม
- ใช้น้ำยาซักผ้าในปริมาณที่กำหนดสำหรับน้ำอ่อน

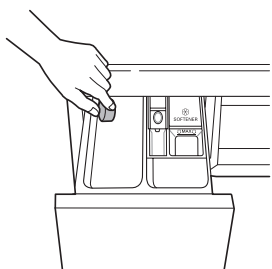


การใช้น้ำยาซักผ้าแบบเม็ด


- 1 เปิดฝาและใส่น้ำยาซักผ้าแบบเม็ดในถังซัก

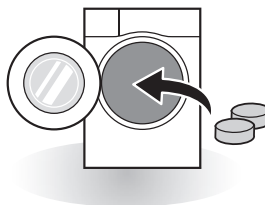

- 2 ใส่ผ้าที่จะซักในถังซักและปิดฝา

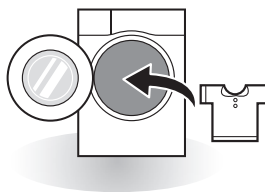

แผงควบคุม

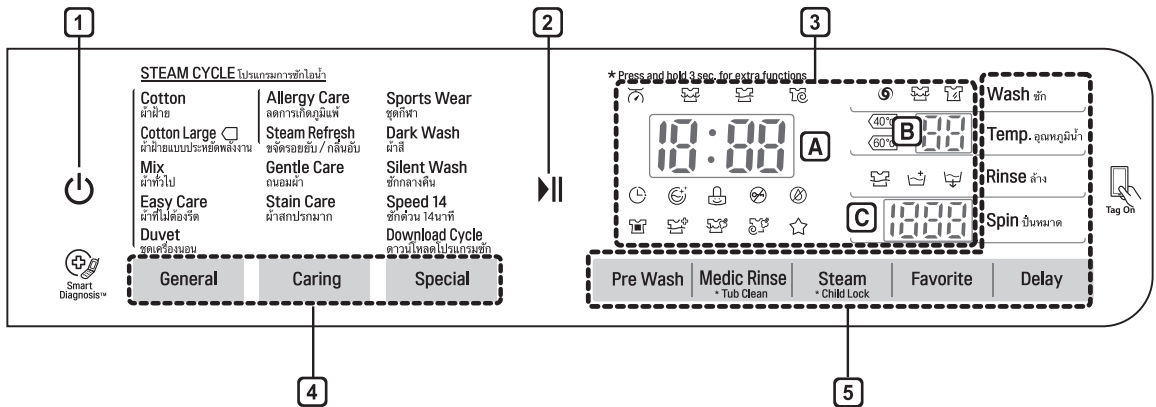

1 ปุ่ม Power (เปิด/ปิด)

- กดปุ่ม **Power** เพื่อเปิดใช้งานเครื่องซักผ้า
- กดปุ่ม **Power** ค้างไว้เป็นเวลา 1 วินาทีเพื่อปิดเครื่องซักผ้า

2 ปุ่ม Start/Pause (เริ่ม/หยุด)

- ปุ่ม **Start/Pause** นี้ใช้เพื่อเริ่มโปรแกรมการซักหรือหยุดโปรแกรมการซักชั่วคราว
- หากจำเป็นต้องหยุดโปรแกรมการซักชั่วคราว กดปุ่ม **Start/Pause**

3 หน้าจอ

- หน้าจอแสดงการตั้งค่า เวลาที่เหลือโดยประมาณ ตัวเลือก และข้อความสถานะ เมื่อเปิดใช้งานเครื่องซักผ้า การตั้งค่าโดยปริยายในหน้าจอจะสว่างขึ้นมา
- **A** : หน้าจอแสดงเวลาคงเหลือโดยประมาณ ในขณะที่ปริมาณผ้าที่จะซักกำลังถูกคำนวณโดยอัตโนมัติ การกะพริบ **Load** หรือ 'Detecting' จะปรากฏขึ้นมา
- **B** : อุณหภูมิของน้ำจะแสดงขึ้นเมื่อกดปุ่ม **อุณหภูมิ**
- **C** : ระดับความเร็วในการหมุนจะปรากฏขึ้นเมื่อกดปุ่มหมุน

4 ปุ่มโปรแกรม

- โปรแกรมต่างๆ มีให้เลือกใช้แบ่งตามชนิดของผ้า
- ไฟจะติดขึ้นมาเพื่อระบุโปรแกรมที่เลือก

5 ตัวเลือก

- ซึ่งจะช่วยให้คุณสามารถเลือกโปรแกรมเพิ่มเติมและไฟจะติดขึ้นเมื่อเลือกแล้ว
- ใช้ปุ่มเหล่านี้เพื่อเลือกตัวเลือกโปรแกรมที่ต้องการสำหรับโปรแกรมที่เลือก

ตารางโปรแกรม

โปรแกรมการซัก

โปรแกรม	รายละเอียด	ชนิดของผ้า	อุณหภูมิที่เหมาะสม	ปริมาณการซักสูงสุด
Cotton (ผ้าฝ้าย)	ให้ประสิทธิภาพที่ดีกว่าด้วยการผสมผสานการหมุนถึงซักแบบต่างๆ	ผ้าสีเนื้อแข็งแรง (เชิ้ต กระโปรงนอน ชุดนอน ฯลฯ) และผ้าฝ้ายที่สกปรกแบบทั่วไป (ชุดชั้นใน)	40 °C (เย็นถึง 95 °C)	การกำหนดอัตรา
Coton Large (ผ้าฝ้ายแบบประหยัดพลังงาน)	ให้การซักผ้าที่ดีที่สุด สำหรับการซักจำนวนมากด้วยการประหยัดพลังงาน		60 °C (เย็นถึง 60 °C)	
Easy Care (ผ้าที่ไม่ต้องรีด)	โปรแกรมนี้นี้เหมาะสำหรับเสื้อเชิ้ตลาลองที่ไม่ต้องรีดหลังจากซัก	โพลีเอไมด์ อะคริลิก โพลีเอสเตอร์	40 °C (เย็นถึง 60 °C)	4.0 กก.
Mix (ผ้าทั่วไป)	สามารถซักผ้าหลายชนิดได้พร้อมกัน	ผ้าหลายชนิด ยกเว้นเสื้อผ้าพิเศษ (ผ้าไหม/ผ้าที่ต้องถนอมเป็นพิเศษ ชุดกีฬา เสื้อผ้าสีเข้ม ขนสัตว์ เครื่องนอน/ผ้าปูที่นอน)	40 °C (เย็นถึง 40 °C)	
Allergy Care (ลดการเกิดภูมิแพ้)	ช่วยกำจัดสารที่ทำให้เกิดโรคภูมิแพ้ เช่น ไรฝุ่น เกสร และขนแมว	ผ้าฝ้าย ชุดชั้นใน ปลอกหมอน ผ้าปูที่นอน เสื้อผ้าเด็กอ่อน	60 °C	
Silent Wash (ซักกลางคืน)	ให้เสียงและการสั่นสะเทือนน้อย และช่วยประหยัดเงินจากการใช้ไฟฟ้าค้างคืน	เสื้อผ้าสีต่างๆ (เสื้อยืด ชุดนอน เสื้อกางเกงนอน ฯลฯ) และผ้าฝ้ายบางเบาสีขาว (ชุดชั้นใน)	40 °C (เย็นถึง 60 °C)	5.0 กก.
Steam Refresh (ขจัดรอยยับ / กลิ่นอับ)	ช่วยขจัดรอยยับภายใน 20 นาทีด้วยการอบแห้ง (เสื้อผ้าอาจเปื่อย คุณสามารถสวมใส่หลังจากแขวนเป็นเวลา 10-30 นาที)	ผ้าฝ้ายผสม เสื้อเชิ้ตผสมโพลีเอสเตอร์ เสื้อเชิ้ตสตรี	ไม่มีตัวเลือก	3 รายการ
Duvet (ชุดเครื่องนอน)	โปรแกรมนี้นี้เหมาะสำหรับของชิ้นใหญ่ เช่น ผ้านวมเตียง หมอน ผ้านวมโซฟา ฯลฯ	เครื่องนอนผ้าฝ้ายยกเว้นเสื้อผ้าพิเศษ (ผ้าอบบาง ผ้าขนสัตว์ ผ้าไหม ฯลฯ) ที่ปูด้านใน: พูก หมอน ผ้าห่ม ผ้านวมโซฟา ที่ปูด้านในแบบบาง	40 °C (เย็นถึง 40 °C)	เตียงเดี่ยว 1 ชุด
Sports Wear (ชุดกีฬา)	โปรแกรมนี้นี้เหมาะสำหรับชุดกีฬา เช่น เสื้อผ้าสำหรับจ็อกกิ้ง และชุดสำหรับวิ่ง	Coolmax, Gore-tex, Fleece และ Sympatex		3 รายการ
Dark Wash (ผ้าสี)	ถ้าผ้าอาจมีสีตก โปรดใช้โปรแกรมนี้นี้ โปรแกรมป้องกันผ้าสีตก (โปรดใช้ผงซักฟอกสำหรับผ้าสี)	เสื้อผ้าสีดำที่ทำจากผ้าฝ้ายหรือผ้าทั่วไป	20 °C (เย็นถึง 40 °C)	

โปรแกรม	รายละเอียด	ชนิดของผ้า	อุณหภูมิที่เหมาะสม	ปริมาณการซักสูงสุด
Speed 14 (ซักด่วน 14 นาที)	โปรแกรมนี้นี้ใช้สำหรับการซักผ้าอย่างรวดเร็วด้วยเสื้อผ้าสกปรกน้อยและจำนวนน้อย	ข้อควรระวัง ใช้ผงซักฟอกน้อยกว่า 20 กรัม (สำหรับการผ้า 2.0 kg) มิฉะนั้นผงซักฟอกอาจเหลือตกค้างอยู่บนเสื้อผ้า	20 °C (20 °C ถึง 40 °C)	2.0 กก.
Gentle Care (ถนอมผ้า)	โปรแกรมนี้นี้เหมาะสำหรับผ้าบอบบางที่ต้องซักด้วยมือหรือสามารถซักเครื่องได้ เช่น ผ้าขนสัตว์ ชุดชั้นใน ชุดเดรส เป็นต้น (ต้องใช้ผงซักฟอกสำหรับซักเครื่องที่ใช้กับผ้าขนสัตว์)	ชุดขนสัตว์, เสื้อผ้าต้องใช้มือซัก บอบบาง ง่ายต่อการเสียหายจากการซัก	20 °C (เย็นถึง 30 °C)	1.5 กก.
Stain Care (ผ้าสกปรกมาก)	ล้างคราบสกปรกเช่น ไวน์, น้ำผลไม้และสิ่งสกปรกอื่นๆ (อุณหภูมิของน้ำจะเพิ่มขึ้นทีละขั้นสำหรับการล้างคราบต่างๆ)	ผ้าฝ้ายผสม, ไม่มีผ้าบอบบาง	40 °C (30 °C ถึง 60 °C)	3.0 กก.
Download Cycle (ดาวน์โหลดโปรแกรมซัก)	สำหรับดาวน์โหลดโปรแกรม หากคุณไม่ได้ดาวน์โหลดโปรแกรมใดๆ ค่าเริ่มต้นคือการ ล้าง+ปั่นหมาด			

- อุณหภูมิน้ำ: เลือกอุณหภูมิน้ำที่เหมาะสมสำหรับโปรแกรมการซักที่เลือก ปฏิบัติตามฉลากการดูแลรักษาหรือคำแนะนำของผู้ผลิต เสื้อผ้าเสมอเมื่อทำการซัก
- ผลการทดสอบขึ้นอยู่กับแรงดันน้ำ ความกระด้างของน้ำ อุณหภูมิของน้ำไหลเข้า อุณหภูมิห้อง ประเภทและปริมาณผ้า ระดับความสกปรกของผลิตภัณฑ์ซักฟอก ความผันผวนในแหล่งจ่ายไฟหลัก และตัวเลือกเพิ่มเติมที่เลือก

หมายเหตุ

- แนะนำให้ใช้น้ำยาซักผ้าที่เป็นกลาง

ตัวเลือกเพิ่มเติม

โปรแกรม	Delay (ตั้งเวลา)	Steam Wash (ล้างด้วยไอน้ำ)	Steam Softener (ความนุ่มด้วยไอน้ำ)	Favorite (ที่ชื่นชอบ)	Pre Wash (ล้างก่อน)	Medic Rinse	Rinse+ (ล้าง+)	Rinse Hold (ล้างและแช่ผ้า)	Turbo Wash	Intensive
Cotton (ผ้าฝ้าย)	●	●	●	●	●	●	●	●	●	●
Coton Large (ผ้าฝ้ายแบบประหยัดพลังงาน)	●	●	●	●	●	●	●	●	●	
Easy Care (ผ้าที่ไม่ต้องรีด)	●	●	●	●	●	●	●	●	●	●
Mix (ผ้าทั่วไป)	●	●	●	●	●	●	●	●	●	●
Allergy Care (ลดการเกิดภูมิแพ้)	●	●*		●		●	●	●		●
Silent Wash (ซักรกลางคืน)	●			●			●	●		●
Steam Refresh (ขจัดรอยยับ / กลิ่นอับ)		●*		●						
Duvet (ชุดเครื่องนอน)	●	●		●			●	●		●
Sports Wear (ชุดกีฬา)	●			●			●	●		●
Dark Wash (ผ้าสี)	●			●			●	●		●
Speed 14 (ซักด่วน 14 นาที)	●			●			●		●*	
Gentle Care (ถนอมผ้า)	●			●			●			
Stain Care (ผ้าสกปรกมาก)	●			●	●*	●	●	●		

● * : ตัวเลือกนี้จะรวมอยู่ในวงจรโดยอัตโนมัติและไม่สามารถลบ

ข้อมูลการทำงาน

Programme	ความเร็วรอบ (RPM)
Cotton (ผ้าฝ้าย)	1400
Coton Large (ผ้าฝ้ายแบบประหยัดพลังงาน)	1400
Easy Care (ผ้าที่ไม่ต้องรีด)	1000
Mix (ผ้าทั่วไป)	1400
Allergy Care (ลดการเกิดภูมิแพ้)	1400
Silent Wash (ซักรบกวนน้อย)	1000
Steam Refresh (ขจัดรอยยับ / กลิ่นอับ)	-
Duvet (ชุดเครื่องนอน)	1000
Sports Wear (ชุดกีฬา)	800
Dark Wash (ผ้าสี)	1400
Speed 14 (ซักด่วน 14 นาที)	800
Gentle Care (ถนอมผ้า)	800
Stain Care (ผ้าสกปรกมาก)	1400

โปรแกรมทางเลือก

Delay (ตั้งเวลา) (🕒)

คุณสามารถตั้งการหน่วงเวลาเพื่อให้เครื่องซักผ้าเริ่มทำงานโดยอัตโนมัติและสิ้นสุดหลังจากช่วงเวลาที่กำหนด

- 1 กดปุ่ม **Power**
- 2 เลือกโปรแกรมการซัก
- 3 กดปุ่ม **Delay** และเลือกเวลาที่ต้องการ
- 4 กดปุ่ม **Start/Pause**

หมายเหตุ

- เวลาหน่วงคือเวลาในการสิ้นสุดโปรแกรม ไม่ใช่เริ่มต้นเวลาในการทำงานจริงอาจต่างไปเนื่องจากอุณหภูมิของน้ำ ปริมาณการซักและปัจจัยอื่นๆ

Medic Rinse (🧴)

เพื่อให้ได้ผลลัพธ์ที่ดีที่สุดหรือการล้างที่สะอาดขึ้น

โปรแกรมนี้นำให้การล้างครั้งสุดท้ายมีอุณหภูมิสูงถึง 40 องศา

- 1 กดปุ่ม **Power**
- 2 เลือกโปรแกรมการซัก
- 3 กดปุ่ม **Medic Rinse** ปุ่ม
- 4 กดปุ่ม **Start/Pause**

Steam(ไอน้ำ)

ไอน้ำมีประสิทธิภาพการทำงานที่เพิ่มขึ้นซักผ้า ที่มีการใช้พลังงานต่ำ ความนุ่มด้วยไอน้ำหลังจากโปรแกรมปั่นเพื่อลดรอยยับและทำให้ผ้านุ่มฟู

- 1 กดปุ่ม **Power**
- 2 สำหรับตัวเลือกล้างด้วยไอน้ำ ให้เลือกโปรแกรมพลังไอน้ำ สำหรับตัวเลือกความนุ่มด้วยไอน้ำ เลือกผ้าฝ้าย หรือ ผ้าฝ้ายแบบประหยัดพลังงาน ผ้าทั่วไป ผ้าที่ไม่ต้องรีด
- 3 โปรแกรมต่อไปนี้จะถูกเลือกตามจำนวนครั้งที่คุณกดปุ่มพลังไอน้ำ
 - หนึ่งครั้ง: ล้างด้วยไอน้ำ
 - สองครั้ง: ความนุ่มด้วยไอน้ำ
 - สามครั้ง: ล้างด้วยไอน้ำและความนุ่มด้วยไอน้ำ
- 4 กดปุ่ม **Start/Pause**

ล้างด้วยไอน้ำ (🌀)

- เสื้อผ้าที่เลอะเปรอะเปื้อนมาก, ชุดชั้นในหรือเสื้อผ้าทารก
- สามารถใช้ได้กับโปรแกรมผ้าฝ้าย หรือ ผ้าฝ้ายแบบประหยัดพลังงาน ผ้าทั่วไป ผ้าที่ไม่ต้องรีด ป้องกันการแพ้ ขจัดรอยยับ / กลิ่นอับ
- ห้ามใช้โปรแกรมล้างด้วยไอน้ำกับเสื้อผ้าที่สีกาง่ายและผ้าที่ต้องถนอมเป็นพิเศษ เช่น ขนสัตว์ ผ้าไหม

ความนุ่มด้วยไอน้ำ (🌀)

- เหมาะสำหรับการปรับผ้าให้ฟูนุ่มหลังจากตากแห้ง
- สามารถใช้ได้กับโปรแกรมผ้าฝ้าย หรือ ผ้าฝ้ายแบบประหยัดพลังงาน ผ้าทั่วไป ผ้าที่ไม่ต้องรีด
- ห้ามใช้โปรแกรมล้างด้วยไอน้ำกับเสื้อผ้าที่สีกาง่ายและผ้าที่ต้องถนอมเป็นพิเศษ เช่น ขนสัตว์ ผ้าไหม
- ประสิทธิภาพในการปรับผ้าให้ฟูนุ่มอาจแตกต่างกัน ขึ้นอยู่กับชนิดของผ้า

Favorite (ที่ชื่นชอบ) (☆)

Favorite ช่วยให้คุณจัดเก็บโปรแกรมการล้างที่กำหนดเองเพื่อใช้ในครั้งต่อไป

- 1 กดปุ่ม **Power**
 - 2 เลือกโปรแกรมการซัก
 - 3 เลือกโปรแกรม (วิธีการซัก จำนวนครั้งในการล้าง ระดับการปั่นหมาด อุณหภูมิของน้ำ ฯลฯ)
 - 4 กดปุ่ม **Favorite** ค้างไว้ 3 วินาที
- ขณะนี้ได้จัดเก็บ **Favorite** เพื่อใช้ในครั้งต่อไป ในการเรียกใช้โปรแกรมอีกครั้ง ให้เลือก **Favorite** และกดปุ่ม **Start/Pause**

Pre Wash(ล้างก่อน) ()

หากเสื้อผ้าสกปรกมาก แนะนำให้ใช้โปรแกรม Pre Wash

- 1 กดปุ่ม **Power**
- 2 เลือกโปรแกรมการซัก
- 3 กดปุ่ม **Pre Wash** ปุ่ม
- 4 กดปุ่ม **Start/Pause**

Wash (ซัก) ()

Turbo Wash ()

โปรแกรมซักที่ไม่เกิน 1 ชั่วโมงด้วยการประหยัดพลังงานและน้ำ (คำนวณจากผ้าครึ่งถัง)

Intensive ()

หากเสื้อผ้าเป็นแบบทัวไปและเปื้อนมาก ตัวเลือก **Intensive** จะมีประสิทธิภาพ

Temp. (อุณหภูมิน้ำ)

ปุ่ม **Temp.** เลือกการผสมผสานอุณหภูมิน้ำในการซักและล้างน้ำสำหรับโปรแกรมที่เลือก กดปุ่มนี้จนการตั้งค่าที่ต้องการสว่างขึ้นมา การล้างน้ำทั้งหมดใช้น้ำเย็นจากก๊อก

- เลือกอุณหภูมิของน้ำที่เหมาะสมสำหรับชนิดของเสื้อผ้าที่คุณจะซัก ปฏิบัติตามฉลากการดูแลรักษาผ้าเพื่อให้ได้ผลลัพธ์ที่ดีที่สุด

Rinse (ล้าง) ()

Rinse+ (ล้าง+) ()

เพิ่มการล้างครั้งหนึ่ง

Rinse Hold (ล้างและแช่ผ้า) ()

โปรแกรมนี้จะหยุดชั่วคราวจนกว่าจะกดปุ่มเริ่มอีกครั้งเมื่อล้างเสร็จ

Spin (ปั่นหมาด)

- ระดับความเร็วในการ Spin สามารถเลือกได้โดยการกดปุ่ม **Spin** ซ้ำ
- Spin เท่านั้น

- 1 กดปุ่ม **Power**
- 2 กดปุ่ม **Spin** เพื่อเลือกจำนวนรอบต่อนาที
- 3 กดปุ่ม **Start/Pause**

หมายเหตุ

- เมื่อคุณเลือก 'ไม่ปั่น' เครื่องจะยังคงหมุนเพื่อระบายน้ำทิ้งสักครู่อย่างรวดเร็ว

Child Lock ()

เลือกการทำงานนี้เพื่อล็อกปุ่มบนชุดประกอบการควบคุมเพื่อป้องกันการรบกวน

การล็อกแผงควบคุม

- 1 กดปุ่ม **Child Lock** ค้างไว้เป็นเวลา 3 วินาที
- 2 เสียงบี๊บจะดังขึ้น และ 'CL' จะปรากฏขึ้นที่หน้าจอ
เมื่อตั้งค่า Child Lock ไว้ ปุ่มทั้งหมดจะถูกล็อก ยกเว้น
ปุ่ม **Power**

หมายเหตุ

- การปิดเครื่องจะไม่เป็นรีเซ็ตฟังก์ชัน Child Lock ใหม่
คุณจะต้องปิดการทำงานฟังก์ชัน Child Lock ก่อนที่คุณ
จะสามารถเข้าถึงฟังก์ชันอื่นๆ ได้

การปลดล็อกแผงควบคุม

กดปุ่ม **Child Lock** ค้างไว้เป็นเวลา 3 วินาที

- เสียงบี๊บจะดังขึ้นและเวลาคงเหลือสำหรับโปรแกรมปัจจุบัน
จะปรากฏขึ้นบนหน้าจออีกครั้ง

Beep On / Off (บี๊บเปิด / ปิด)

- 1 กดปุ่ม **Power**
- 2 กดปุ่ม **Start/Pause**
- 3 กดปุ่ม **Temp.** และปุ่ม **Rinse** ไว้พร้อมกันเป็นเวลา 3
วินาทีเพื่อตั้งค่าฟังก์ชันเปิด/ปิดเสียงเตือน

หมายเหตุ

- เมื่อตั้งค่าฟังก์ชันเปิด/ปิดเสียงเตือนแล้ว เครื่องจะจดจำ
การตั้งค่าไว้แม้ปิดเครื่องแล้ว
- หากคุณต้องการปิดเสียงเตือน ให้ทำขั้นตอนดังกล่าวซ้ำ

การใช้งานฟังก์ชันอัจฉริยะ (ทางเลือก)


การใช้งานฟังก์ชัน Tag On

ฟังก์ชัน Tag On ช่วยให้คุณสามารถใช้งานคุณสมบัติ LG Smart Diagnosis™ และ Cycle Download ได้สะดวก โดยทำการสื่อสารกับเครื่องใช้ไฟฟ้าของคุณจากสมาร์ตโฟนของคุณ

- ฟังก์ชัน Tag On สามารถใช้ได้เฉพาะกับสมาร์ตโฟนส่วนใหญ่ที่มี NFC ติดตั้งไว้และใช้งานระบบปฏิบัติการ (OS) Android

การติดตั้งแอปพลิเคชัน

- ค้นหา "LG Smart Laundry" ใน Google Play Store จากสมาร์ตโฟนของคุณ

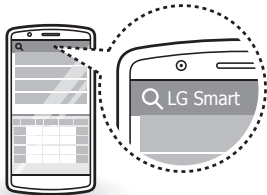

การใช้งานแอปพลิเคชัน

แอปพลิเคชัน LG Smart Laundry ช่วยให้คุณสามารถใช้คุณสมบัติที่หลากหลายได้เพื่อความสะดวกของคุณ

- การดาวน์โหลดโปรแกรม
- Smart Diagnosis
- ชุดโปรแกรม Tag On
- สถิติของผ้าที่ซัก

หมายเหตุ

- กด  ในแอปพลิเคชัน LG Smart Laundry สำหรับคำแนะนำโดยละเอียดเกี่ยวกับวิธีใช้ฟังก์ชัน Tag On
- ขึ้นอยู่กับผู้ผลิตสมาร์ตโฟนและเวอร์ชันของระบบปฏิบัติการ Android กระบวนการเปิดใช้งาน NFC อาจแตกต่างกันไป อ้างอิงคู่มือสมาร์ตโฟนของคุณสำหรับรายละเอียด
- หากกระยะการส่งสัญญาณไกลเกินไป หรือมีสติกเกอร์โลหะหรือเคสป้องกันโทรศัพท์ การส่งสัญญาณอาจไม่ติดตามคุณลักษณะของ NFC ในบางกรณี โทรศัพท์ที่ติดตั้ง NFC อาจไม่สามารถส่งสัญญาณได้สมบูรณ์
- เนื้อหาในคู่มือนี้อาจแตกต่างกันไปโดยขึ้นกับเวอร์ชันของแอปพลิเคชัน "LG Smart Laundry" และอาจได้รับการแก้ไขโดยไม่ต้องแจ้งลูกค้า



คำเตือน

- ถอดปลั๊กเครื่องซักผ้าของคุณก่อนการทำความสะอาด เพื่อหลีกเลี่ยงความเสี่ยงต่อการเกิดไฟฟ้าช็อต การไม่ปฏิบัติตามคำเตือนนี้อาจส่งผลให้บาดเจ็บสาหัส ไฟไหม้ ไฟฟ้าช็อตหรือเสียชีวิต
- ห้ามใช้สารเคมีที่มีฤทธิ์แรง สารขัดทำความสะอาด หรือสารทำลายเพื่อทำความสะอาดเครื่องซักผ้า สิ่งเหล่านี้อาจสร้างความเสียหายให้เคลือบผิว

การดูแลหลังการซัก

การดูแลหลังซัก

- หลังจากสิ้นสุดโปรแกรม เช็ดฝาและภายในของซิลฝาเพื่อขจัดความชื้น
- เปิดฝาทิ้งไว้เพื่อผึ่งภายในถังซักให้แห้ง
- เช็ดตัวเครื่องซักผ้าด้วยผ้าแห้งเพื่อขจัดความชื้น

การทำความสะอาดภายนอก

การดูแลเครื่องซักผ้าของคุณอย่างเหมาะสมสามารถยืดอายุของเครื่องได้

ฝา:

- เช็ดด้วยผ้าเปียกด้านนอกและด้านใน และจากนั้นเช็ดให้แห้งด้วยผ้านุ่ม

ภายนอก:

- เช็ดคราบหรือรอยเปื้อนโดยทันที
- เช็ดด้วยผ้าเปียก
- อย่ากดพื้นผิวหรือหน้าจอกด้วยวัตถุมีคม


การดูแลและการทำความสะอาดภายใน

- ใช้ผ้าขนหนูหรือผ้านุ่มเพื่อเช็ดช่องเปิดฝาเครื่องซักผ้าและกระจกฝา
- เอาเสื้อผ้าออกจากเครื่องซักผ้าให้เร็วที่สุดเมื่อสิ้นสุดโปรแกรมเสมอ การทิ้งเสื้อผ้าที่เปียกไว้ในเครื่องซักผ้าสามารถทำให้เกิดการยับ การตกของสี และกลิ่นเหม็นได้
- เปิดใช้โปรแกรม Tub Clean เดือนละครั้ง (หรือบ่อยกว่านั้นหากจำเป็น) เพื่อขจัดน้ำยาซักผ้าที่สะสมหรือสิ่งตกค้างอื่นๆ


การทำความสะอาดตัวกรองท่อน้ำเข้า

- ปิดน้ำฟีกาจับเวลาหากทิ้งเครื่องซักผ้าไว้ช่วงเวลาหนึ่ง (เช่น วันหยุด) โดยเฉพาะหากไม่มีช่องระบายบนพื้น (รางระบายน้ำ) ในบริเวณใกล้เคียง
- สัญลักษณ์ 'E' จะแสดงขึ้นบนแผงควบคุมเมื่อน้ำไม่เข้า ล้นชักน้ำยาซักผ้า
- หากน้ำกระด้างมากหรือมีหินปูนผสมในน้ำ ตัวกรองท่อน้ำเข้าอาจอุดตันได้ ดังนั้นจึงเป็นแนวคิดที่ดีที่จะทำความสะอาดเป็นประจำ

1 ปิดก๊อกน้ำและชั้นท่อน้ำเข้าออก

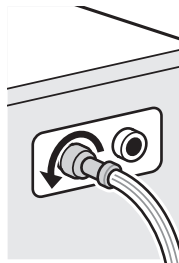


2 ทำความสะอาดตัวกรองโดยใช้แปรงขนสัตว์แบบแห้ง

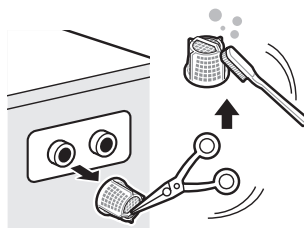

การทำความสะอาดตัวกรองปั๊ม ระบาย

- ตัวกรองทางระบายสะสมเส้นด้ายและวัตถุขนาดเล็กที่ทิ้งไว้ในผ้าที่ซัก ตรวจสอบเป็นประจำว่าตัวกรองสะอาดเพื่อให้มั่นใจในการทำงานที่ราบรื่นของเครื่องซักผ้า
- ปลอຍใ้ น้ำเย็นลงก่อนทำความสะอาดปั๊มระบาย ทำการระบายฉุกเฉิน หรือเปิดฝาในกรณีฉุกเฉิน


1 เปิดฝาดรอปและดึงท่อออกมา

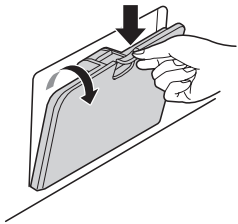


2 ดึงจุดดูดทางระบายออกและเปิดตัวกรองโดยการหมุนไปทางซ้าย




3 เอาสิ่งของที่ตกค้างออกจากตัวกรองปั๊ม

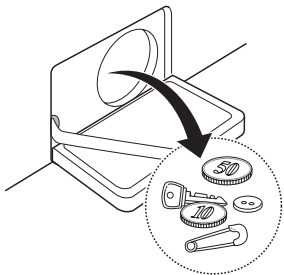

4 หลังจากทำความสะอาด หมุนตัวกรองปั๊มและใส่จุดดูดทางระบาย

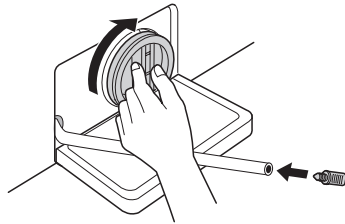

5 ปิดฝาดรอป

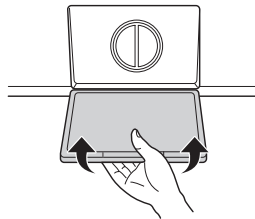


⚠ ข้อควรระวัง

- ก่อนอื่น ระบายน้ำโดยใช้ท่อระบายและจากนั้นเปิดตัวกรองปั๊มเพื่อขจัดเส้นด้ายหรือวัตถุอื่นๆ
- ระวังเมื่อทำการระบายน้ำ เนื่องจากน้ำอาจร้อน

การทำความสะอาดล้นชักจ่ายน้ำยา

น้ำยาซักผ้าและน้ำยาปรับผ้านุ่มอาจสะสมในล้นชักจ่ายน้ำยา ถอดล้นชักและตัวสอดและตรวจสอบการสะสมเดือนละหนึ่งหรือสองครั้ง

- 1 ถอดล้นชักจ่ายน้ำยาซักผ้าโดยการดึงออกมาตรงๆ จนสุด
 - กดปุ่มปลดด้วยแรงและถอดล้นชัก

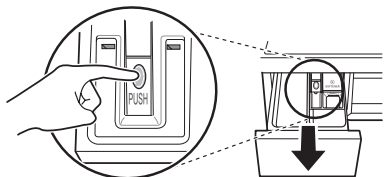

- 2 ถอดตัวสอดออกจากล้นชัก
 - ล้างตัวสอดและล้นชักด้วยน้ำอุ่นเพื่อขจัดการสะสมของผลิตภัณฑ์ซักผ้าออก ใช้น้ำในการทำสะอาด ล้นชักจ่ายน้ำยาเท่านั้น เช็ดตัวสอดและล้นชักแห้งด้วยผ้านุ่มหรือผ้าขนหนู
- 3 เพื่อทำความสะอาดช่องเปิดของล้นชัก ใช้ผ้าหรือแปรงที่ไม่ใช่โลหะขนาดเล็กเพื่อทำความสะอาดโพรง
 - ขจัดสิ่งตกค้างทั้งหมดจากส่วนบนและส่วนล่างของโพรง
- 4 เช็ดน้ำออกจากโพรงด้วยผ้านุ่มหรือผ้าขนหนู
- 5 ใส่ตัวสอดกลับเข้าสู่ช่องแยกที่ถูกต้องและใส่ล้นชักกลับที่

Tub Clean (ล้างถังซัก) (ทางเลือก) (☺)

Tub Clean เป็นโปรแกรมพิเศษเพื่อทำความสะอาดด้านในของเครื่องซักผ้า

ใช้ระดับน้ำที่สูงขึ้นที่ความเร็วในการปั่นที่สูงขึ้น เปิดใช้งานโปรแกรมนี้เป็นประจำ

- 1 นำเสื้อผ้าหรือสิ่งของใดๆ ออกจากเครื่องซักผ้าและปิดฝา
- 2 เปิดล้นชักจ่ายน้ำยาและใส่สารป้องกันตะกรันหินปูน (เช่น Calgon) ในช่องการซักหลัก
- 3 ปิดล้นชักตัวจ่ายน้ำยาอย่างช้าๆ
- 4 เปิดการทำงานและจากนั้นกดปุ่ม **Tub Clean** ค้างไว้เป็นเวลา 3 วินาที '๕๔' จะแสดงขึ้นบนหน้าจอ
- 5 กดปุ่ม **Start/Pause** เพื่อเริ่มต้น
- 6 หลังจากสิ้นสุดโปรแกรม เปิดฝาทิ้งไว้เพื่อให้ช่องเปิดฝาเครื่องซักผ้า ยางกันรั่วแบบยืดหยุ่นและกระจกผ้าแห้ง



ข้อควรระวัง

- หากมีเด็ก ระวังอย่าเปิดฝาทิ้งไว้นานเกินไป

หมายเหตุ

- อย่าใส่น้ำยาอื่นใดในช่องน้ำยาซักผ้า อาจทำให้เกิดฟองมากเกินไปและรั่วจากเครื่องซักผ้า

ระวังการเป็นน้ำแข็งในระหว่างฤดูหนาว


- เมื่อเป็นน้ำแข็ง ผลิตภัณฑ์จะทำงานไม่เป็นปกติ ตรวจสอบให้แน่ใจว่าติดตั้งผลิตภัณฑ์ในตำแหน่งที่จะไม่เป็นน้ำแข็งในระหว่างฤดูหนาว
- ในกรณีที่จะต้องติดตั้งเครื่องภายนอกบนชานบ้านหรือในสภาวะภายนอกอาคารอื่นๆ ให้ตรวจสอบรายการต่อไปนี้

วิธีการป้องกันผลิตภัณฑ์เป็นน้ำแข็ง

- หลังจากการซัก ขจัดน้ำที่เหลืออยู่ในบิ๊มให้หมดด้วยจุดท่อที่ใช้สำหรับการขจัดน้ำตกค้าง เมื่อขจัดน้ำออกหมดแล้ว ปิดจุดท่อที่ใช้สำหรับการขจัดน้ำตกค้างและฝาครอบ




- ปลอยท่อระบายลงมาเพื่อขจัดน้ำในท่อออกให้หมด

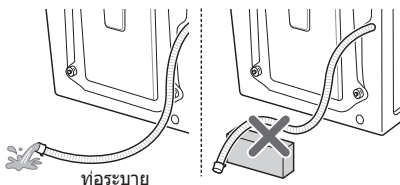

⚠️ ข้อควรระวัง


- เมื่อติดตั้งท่อระบายเป็นรูปโค้ง น้ำในท่อด้านในอาจเป็นน้ำแข็ง

- หลังการปิดก๊อกน้ำ ถอดท่อน้ำเย็นเข้าจากก๊อก และขจัดน้ำออกในขณะที่ให้ท่อน้ำเย็น

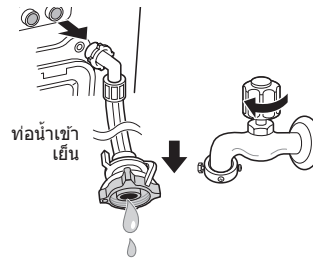


การตรวจสอบสำหรับการเป็นน้ำแข็ง

- หากน้ำไม่ระบายออกเมื่อทำการเปิดจุดท่อที่ใช้สำหรับการขจัดน้ำตกค้าง ตรวจสอบชุดระบายน้ำ

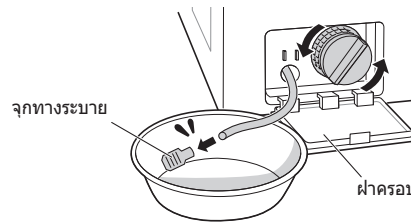

- เปิดเครื่อง เลือก Rinse and Spin และกดปุ่ม **Start/Pause**

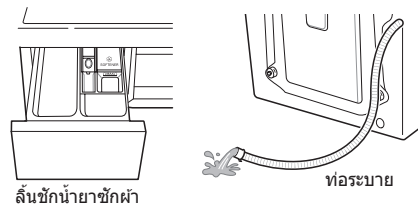


หมายเหตุ

- ตรวจสอบว่าน้ำไหลเข้าสู่สัสนชักน้ำยาซักผ้าในขณะที่ล้างน้ำ และน้ำระบายออกผ่านท่อระบายในขณะที่ปั่นแห้ง
- เมื่อ 'F F' แสดงบนหน้าจอในขณะที่เครื่องทำงาน ตรวจสอบชุดจ่ายน้ำและชุดระบายน้ำ (บางรุ่นไม่มีสัญญาณเตือนที่บ่งชี้การเป็นน้ำแข็ง)


วิธีการรับมือการเป็นน้ำแข็ง

- ตรวจสอบให้แน่ใจว่าได้นำสิ่งของออกจากถังซักจนหมด เทน้ำอุ่น 50–60 °C จนถึงส่วนที่เป็นยางด้านในถังซัก ปิดฝาและรอ 1-2 ชั่วโมง

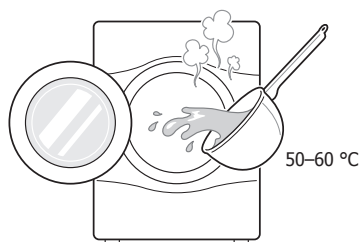

ข้อควรระวัง


- อย่าใช้น้ำเดือด อาจทำให้เกิดการไหม้หรือความเสียหายต่อผลิตภัณฑ์
- เปิดฝาคρόบและจุดท่อที่ใช้สำหรับการขจัดน้ำตกค้างเพื่อขจัดน้ำออกจนหมด

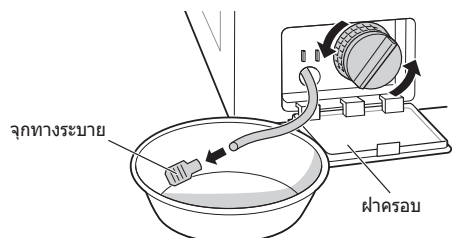

หมายเหตุ


- หากน้ำไม่ระบายออก หมายความว่าน้ำแข็งละลายไม่หมด รอตต่อไป

- เมื่อน้ำออกจากถังซักจนหมด ปิดจุดท่อสำหรับการขจัดน้ำตกค้าง และเลือก Rinse and Spin และกดปุ่ม **Start/Pause**

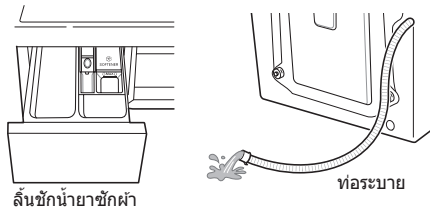

หมายเหตุ

- ตรวจสอบว่าน้ำไหลเข้าสู่ถังซักน้ำยาซักผ้าในขณะที่ล้างน้ำ และน้ำระบายออกผ่านท่อระบายในขณะที่ปั่นแห้ง
- เมื่อมีปัญหาในการจ่ายน้ำเกิดขึ้น ใช้มาตรการต่อไปนี้
 - ปิดก๊อก และละลายน้ำแข็งที่ก๊อกและส่วนการต่อทั้งสองจุดของท่อน้ำเข้าของผลิตภัณฑ์โดยใช้ผ้าชุบน้ำร้อน
 - ดึงท่อน้ำเข้าออกมาและแช่ในน้ำอุ่นที่ต่ำกว่า 50–60 °C

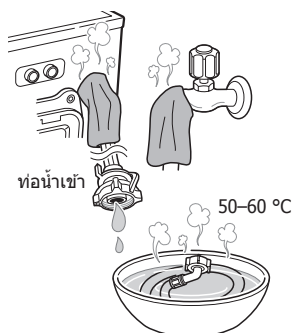


การใช้ฟังก์ชัน Smart Diagnosis™

ใช้ฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์บริการ LG Electronics เมื่อเครื่องทำงานผิดปกติหรือล้มเหลว ใช้ฟังก์ชันนี้เพื่อติดต่อตัวแทนบริการเท่านั้น ไม่ใช่ในระหว่างการใช้งานปกติ

1 กดปุ่ม **Power** เพื่อเปิดใช้งานเครื่องซักผ้า อย่ากดปุ่มอื่นหรือหมุนลูกบิดเลือกโปรแกรม

2 เมื่อได้รับคำแนะนำให้ทำดังกล่าวดูโดยศูนย์บริการ วางส่วนรับเสียงของโทรศัพท์ของคุณใกล้กับปุ่ม **Power**

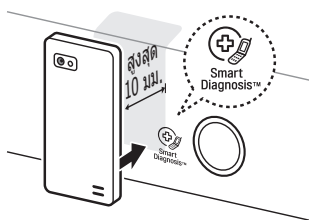

3 กดปุ่ม **Temp.** ค้างไว้เป็นเวลา 3 วินาที ในขณะที่ถือส่วนรับเสียงของโทรศัพท์ใกล้กับสัญลักษณ์หรือปุ่ม **Power**

4 ให้โทรศัพท์อยู่กับที่จนกว่าสัญญาณเสียงจะจบ เวลาดังกล่าวสำหรับการส่งข้อมูลจะแสดงขึ้นมา

- เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด อย่าขยับโทรศัพท์ในขณะที่กำลังส่งเสียง
- หากตัวแทนศูนย์บริการไม่สามารถทำการบันทึกข้อมูลที่แม่นยำได้ อาจขอให้คุณลองทำอีกครั้ง



5 เมื่อการนับถอยหลังจบลงและเสียงสัญญาณหยุด ทำการสนทนาของคุณต่อกับตัวแทนศูนย์บริการ ที่จะสามารถช่วยเหลือคุณได้โดยใช้ข้อมูลที่ส่งไปเพื่อการวิเคราะห์

หมายเหตุ

- ฟังก์ชัน Smart Diagnosis™ ขึ้นอยู่กับคุณภาพการโทรในพื้นที่
- ประสิทธิภาพในการสื่อสารจะดีขึ้นและคุณสามารถรับบริการที่ดีขึ้นได้หากคุณใช้โทรศัพท์บ้าน
- หากการส่งข้อมูล Smart Diagnosis™ ไม่ดีเนื่องจากคุณภาพการโทรที่แย่ คุณอาจไม่ได้รับบริการ Smart Diagnosis™ ที่ดีที่สุด

การแก้ปัญหา

- เครื่องซักผ้าของคุณได้รับการติดตั้งระบบตรวจสอบข้อผิดพลาดอัตโนมัติเพื่อตรวจจับและวินิจฉัยปัญหาดังแต่ระยะแรก หากเครื่องซักผ้าของคุณไม่ทำงานอย่างถูกต้องหรือไม่ทำงานเลย ตรวจสอบรายการดังต่อไปนี้ก่อนที่คุณจะติดต่อขอรับบริการ:

การวินิจฉัยปัญหา

อาการ	สาเหตุ	การแก้ไข
เสียงกรอกแกรกและเสียงโลหะกระทบกัน	วัตถุแปลกปลอม เช่น เหรียญหรือเข็มกลัด อาจติดในถังซักหรือปัม	- หยุดเครื่องซักผ้า ตรวจสอบถังซักและตัวกรองทางระบาย - หากยังมีเสียงอยู่หลังจากรีเซ็ตเครื่องซักผ้า ติดต่อศูนย์บริการที่ได้รับอนุญาตของคุณ
เสียงกระแทก	ปริมาณการซักที่หนักอาจทำให้เกิดเสียงกระแทก ซึ่งเป็นเรื่องปกติ	หากยังมีเสียงอยู่ เป็นไปได้ว่าเครื่องซักผ้าไม่สมดุล หยุดและจัดผ้าที่ซักใหม่
เสียงสั่น	สลักขนย้ายและที่รองถังน้ำถูกถอดออกหมดแล้วหรือไม่ ขาดตั้งทั้งหมดวางบนพื้นอย่างมั่นคงหรือไม่	- หากไม่ถอดออกในระหว่างการติดตั้ง อ้างอิงคู่มือการติดตั้งสำหรับการถอดสลักขนย้าย - ปริมาณผ้าที่ซักอาจกระจายตัวไม่สม่ำเสมอในถังซัก หยุดเครื่องซักผ้าและจัดผ้าที่ซักใหม่
น้ำรั่ว	ท่อน้ำเข้าหรือท่อระบายการมีการหลวมที่ก๊อกหรือเครื่องซักผ้า ท่อระบายในบ้านอุดตัน	- ตรวจสอบและต่อท่อให้แน่น - แก้การอุดตันของท่อระบาย ติดต่อช่างประปาหากจำเป็น
การเกิดฟองมากเกินไป		น้ำยาซักผ้าที่มากเกินไปหรือน้ำยาซักผ้าที่ไม่เหมาะสมอาจทำให้เกิดฟองมากเกินไปซึ่งอาจส่งผลให้น้ำรั่ว
น้ำไม่เข้าเครื่องซักผ้าหรือเข้าน้อย	การจ่ายน้ำไม่เพียงพอในจุดดังกล่าว ก๊อกน้ำเปิดไม่สุด ท่อน้ำเข้ามีการพันงอ ตัวกรองของท่อน้ำเข้าอุดตัน	- ตรวจสอบก๊อกอื่นในบ้าน - เปิดก๊อกให้สุด - ขยับท่อให้ตรง - ตรวจสอบตัวกรองของท่อน้ำเข้า
น้ำในเครื่องซักผ้าไม่ระบายหรือระบายช้า	ท่อระบายมีการพันงอหรืออุดตัน ตัวกรองทางระบายอุดตัน	- ทำความสะอาดและจับท่อระบายให้ตรง - ทำความสะอาดตัวกรองทางระบาย

อาการ	สาเหตุ	การแก้ไข
เครื่องซักผ้าไม่ทำงาน	สายไฟอาจไม่ได้เสียบปลั๊กหรือการต่ออาจหลวม	• ตรวจสอบให้แน่ใจว่าปลั๊กต่อกันได้รับอย่างแน่นหนา
	ฟิวส์บ้านขาด เบรกเกอร์ตัด หรือ ไฟฟ้าดับ	• สับเบรกเกอร์หรือเปลี่ยนฟิวส์ อย่าเพิ่มขนาดของฟิวส์ หากปัญหาคือการใช้ไฟฟ้าเกินกำลัง ให้ช่างไฟฟ้าที่มีคุณวุฒิทำการแก้ไข
	ไม่ได้เปิดก๊อกน้ำ	• เปิดก๊อกน้ำ
เครื่องซักผ้าไม่ปั่น	ตรวจสอบว่าฝาปิดสนิทดีแล้ว	• ปิดฝาและกดปุ่ม Start/Pause หลังการกดปุ่ม Start/Pause อาจใช้เวลาสักครู่ก่อนเครื่องซักผ้าจะเริ่มปั่น จะต้องล็อกฝาก่อนจะทำการปั่น เพิ่มเสื้อผ้า 1 หรือ 2 ชิ้นเพื่อช่วยให้สมดุล ฝาจัดที่ซักใหม่เพื่อให้มีการปั่นที่เหมาะสม
ฝาไม่ยอมเปิด		• เมื่อเครื่องซักผ้าเริ่มทำงาน ฝาจะไม่สามารถเปิดได้เพื่อความปลอดภัย ตรวจสอบว่าสัญลักษณ์ 'Door Lock' มีไฟติดหรือไม่ คุณสามารถเปิดฝาได้อย่างปลอดภัยหลังจากสัญลักษณ์ 'Door Lock' ดับลง
เวลาของโปรแกรมการซักล่าช้า		• เวลาในการซักอาจแตกต่างกันตามปริมาณผ้าที่ซัก แรงดันน้ำ อุณหภูมิ น้ำและสถานะการใช้งานอื่นๆ หากมีการตรวจพบความไม่สมดุลหรือหากโปรแกรมกำลังฟองถูกเปิดไว้ เวลาในการซักจะเพิ่มขึ้น
น้ำยาปรับผ้านุ่มล้น	น้ำยาปรับผ้านุ่มมากเกินไปอาจทำให้เกิดการล้น	• ปฏิบัติตามคู่มือการใช้น้ำยาปรับผ้านุ่มเพื่อให้แน่ใจว่าใช้ในปริมาณที่เหมาะสม อย่าใส่เกินกว่าขีดเต็มเต็ม
จ่ายน้ำยาปรับผ้านุ่มเร็วเกินไป		• ปิดลิ้นชักตัวจ่ายน้ำยาอย่างช้าๆ อย่าเปิดลิ้นชักในระหว่างโปรแกรมการซัก
ปัญหาการอบแห้ง	ผ้าไม่แห้ง	• อย่าใส่ผ้ามากเกินไป ตรวจสอบว่าเครื่องซักผ้าทำการระบายน้ำอย่างถูกต้องเพื่อขจัดน้ำออกจากผ้าที่ซักได้ดีพอ ปริมาณเสื้อผ้าน้อยเกินไปที่จะอบอย่างเหมาะสม ใส่ผ้าขนหนูเพิ่มสองสามผืน

ข้อความข้อผิดพลาด



อาการ	สาเหตุ	การแก้ไข
	 การจ่ายน้ำไม่เพียงพอในพื้นที่ ก๊อกน้ำเปิดไม่สุด ท่อน้ำเข้ามีการพันงอ ตัวกรองของท่อน้ำเข้าอุดตัน หากมีการรั่วของน้ำเกิดขึ้นในท่อน้ำ เข้า สัญลักษณ์บ่งชี้ 'A' จะกลายเป็น สีแดง  • อาจแตกต่างกันโดยขึ้นกับรุ่น	• ตรวจสอบก๊อกอื่นในบ้าน • เปิดก๊อกให้สุด • ขยับท่อให้ตรง • ตรวจสอบตัวกรองของท่อน้ำเข้า
	 ท่อระบายมีการพันงอหรืออุดตัน ตัวกรองทางระบายอุดตัน	• ทำความสะอาดและจับท่อระบายให้ตรง • ทำความสะอาดตัวกรองทางระบาย
	 ปริมาณผ้าน้อยเกินไป ปริมาณผ้าไม่สมดุล เครื่องใช้ไฟฟ้ามีการตรวจจับความ ไม่สมดุลและระบบการแก้ไข หากใส่ สิ่งของที่มีน้ำหนักเข้าไป (เช่น พรม หอน้ำ ชุดอาบน้ำ ฯลฯ) ระบบนี้อาจ หยุดการปั่น หรือกระทั่งขัดจังหวะ โปรแกรมการปั่นทั้งหมด หากเสื้อผ้าที่ซักรยังเปียกเกินไปเมื่อ สิ้นสุดโปรแกรม เพิ่มผ้าชิ้นเล็กๆ เพื่อให้ผ้าที่ซักสมดุลและเปิด โปรแกรมการปั่นซ้ำอีกครั้ง	• เพิ่มเสื้อผ้า 1 หรือ 2 ชิ้นเพื่อช่วยให้สมดุล • เพิ่มเสื้อผ้า 1 หรือ 2 ชิ้นเพื่อช่วยให้สมดุล • ผ่าจัดที่ซักใหม่เพื่อให้การปั่นที่เหมาะสม • ผ่าจัดที่ซักใหม่เพื่อให้การปั่นที่เหมาะสม








อาการ		สาเหตุ	การแก้ไข
		ตรวจสอบให้แน่ใจว่าฝาไม่ได้เปิด	• ปิดฝาให้สนิท หาก 'dE1', 'dE2' ไม่สามารถปลดออกได้ ติดต่อขอรับบริการ
			• ถอดปลั๊กไฟและติดต่อขอรับบริการ
		มีการเติมน้ำมากเกินไปเนื่องจาก วาล์วน้ำชำรุด	• ปิดก๊อกน้ำ • ถอดปลั๊กไฟ • ติดต่อขอรับบริการ
		เซ็นเซอร์วัดระดับน้ำทำงานผิดปกติ	• ปิดก๊อกน้ำ • ถอดปลั๊กไฟ • ติดต่อขอรับบริการ
		ภาระเกินในมอเตอร์	• ให้เครื่องซักผ้าพักเป็นเวลา 30 นาทีเพื่อให้มอเตอร์เย็นลง จากนั้นรีสตาร์ทโปรแกรม
		น้ำรั่ว	• ติดต่อขอรับบริการ
		เครื่องซักมีปัญหาพลังงานล้มเหลว	• รีสตาร์ทโปรแกรม
		ข้อผิดพลาดในระบบควบคุม	• ถอดปลั๊กไฟและติดต่อขอรับบริการ




การรับประกัน

การรับประกันที่มีข้อจำกัดนี้ไม่ครอบคลุม:

- การเดินทางให้บริการเพื่อจัดส่ง รับ หรือติดตั้งหรือซ่อมแซมผลิตภัณฑ์ ค่าแนะนำสำหรับลูกค้าเกี่ยวกับการใช้งานผลิตภัณฑ์ ซ่อมแซมหรือเปลี่ยนฟิวส์ หรือแก้ไขการเดินสายไฟหรือการเดินท่อน้ำ หรือการแก้ไขการซ่อมแซม/การติดตั้งที่ไม่ได้รับอนุญาต
- ความล้มเหลวของผลิตภัณฑ์ที่จะทำงานในระหว่างไฟฟ้าดับและการขัดจังหวะ หรือการดูแลรักษาทางไฟฟ้าที่ไม่เพียงพอ
- ความเสียหายที่เกิดจากท่อน้ำรั่วหรือแตก ท่อน้ำที่เป็นน้ำแข็ง ทางระบายน้ำที่จำกัด การจ่ายน้ำที่ไม่เพียงพอหรือถูกขัดจังหวะ หรือการให้อากาศที่ไม่เพียงพอ
- ความเสียหายที่เป็นผลจากการใช้งานผลิตภัณฑ์สภาพอากาศที่เกิดการกัดกร่อนหรือขัดกับคำแนะนำที่กำหนดในคู่มือผู้ใช้ของผลิตภัณฑ์
- ความเสียหายต่อผลิตภัณฑ์ที่เกิดจากอุบัติเหตุ แมลงและสัตว์รบกวน ไฟฟ้า ลม ไฟไหม้ น้ำท่วม หรือเหตุทางธรรมชาติอื่นๆ
- ความเสียหายหรือความล้มเหลวที่เกิดจากการแก้ไขหรือดัดแปลงที่ไม่ได้รับอนุญาต หรือหากถูกนำไปใช้งานอื่นๆ นอกเหนือจากจุดประสงค์การใช้งานที่มุ่งหมาย หรือการรั่วของน้ำเมื่อผลิตภัณฑ์ไม่ได้รับการติดตั้งอย่างเหมาะสม
- ความเสียหายหรือความล้มเหลวที่เกิดจากกระแสไฟฟ้าหรือศักย์ไฟฟ้า หรือการเดินท่อที่ไม่ถูกต้อง การใช้งานเชิงพาณิชย์หรือทางอุตสาหกรรม หรือการใช้งานอุปกรณ์เสริม ชิ้นส่วน หรือผลิตภัณฑ์ทำความสะอาดที่ใช้แล้วหมดที่มิได้รับอนุญาตโดย LG
- ความเสียหายที่เกิดจากการขนส่งหรือการดูแล รวมไปถึงร่องรอยถลอก รอยบุบ การกระแทก และ/หรือความเสียหายอื่นต่อผิวเคลือบของผลิตภัณฑ์ของคุณ เว้นแต่ความเสียหายดังกล่าวเป็นผลจากข้อบกพร่องในวัสดุหรือคุณภาพของงาน
- ความเสียหายหรือการขาดชิ้นส่วนในสินค้าจัดแสดง ที่เปิดแล้ว ลดราคาหรือแก้ไขใหม่
- ผลิตภัณฑ์ที่มีหมายเลขซีเรียลดั้งเดิมที่ถูกถอด เปลี่ยน หรือไม่สามารถระบุได้ทันที รุ่นและหมายเลขซีเรียล พร้อมด้วยใบเสร็จรับเงินของร้านค้าปลีก จำเป็นสำหรับการยืนยันความถูกต้องของการรับประกัน
- การเพิ่มขึ้นของค่าสาธารณูปโภคและค่าใช้จ่ายสาธารณูปโภคเพิ่มเติม
- การซ่อมแซมเมื่อผลิตภัณฑ์ของคุณถูกใช้งานนอกเหนือจากการใช้งานในบ้านตามปกติ หรือขัดกับคำแนะนำที่กำหนดในคู่มือผู้ใช้ของผลิตภัณฑ์
- ค่าใช้จ่ายที่เกี่ยวข้องกับการขนย้ายผลิตภัณฑ์ของคุณออกจากบ้านของคุณเพื่อซ่อมแซม
- การถอดและการติดตั้งผลิตภัณฑ์ใหม่ หากถูกติดตั้งไว้ในตำแหน่งที่ไม่สามารถเข้าถึงได้หรือถูกติดตั้งโดยไม่สอดคล้องกับคำแนะนำในการติดตั้งที่พิมพ์เป็นรูปเล่ม รวมไปถึงคู่มือผู้ใช้และคู่มือการติดตั้งของ LG
- ความเสียหายที่เป็นผลจากการใช้ที่ผิด การใช้งานมากเกินไป การติดตั้ง การซ่อมแซมหรือการบำรุงรักษาที่ไม่เหมาะสม การซ่อมแซมที่ไม่เหมาะสมรวมถึงการใช้ชิ้นส่วนที่ไม่ได้รับอนุญาตหรือกำหนดโดย LG

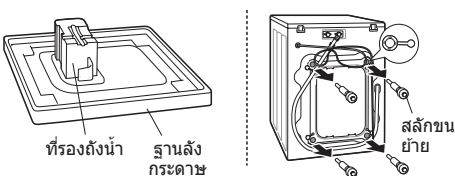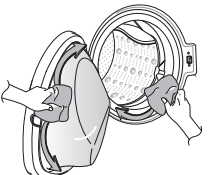การสั่นหรือเสียงแปลกๆที่เกิดจากการไม่ได้ถอดสลักขนย้ายหรือที่รองถึงน้ำ	 ที่รองถึงน้ำ ฐานสิ่งกระด้าง สลักขนย้าย	ถอดสลักขนย้ายและที่รองถึงน้ำ
การรั่วที่เกิดจากสิ่งสกปรก (ผม เศษผ้า) ในยางกันรั่วและกระจกฝา		ทำความสะอาดยางกันรั่วและกระจกฝา

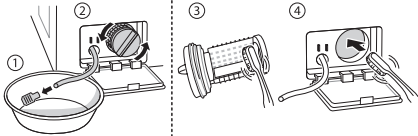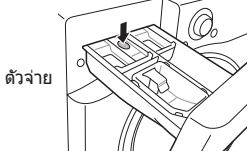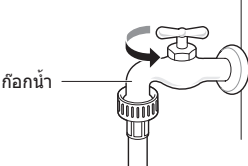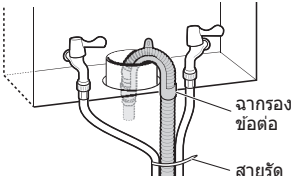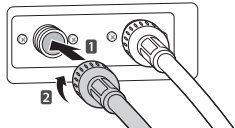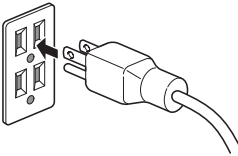การไม่ระบายน้ำที่เกิดจากการอุดตันของตัวกรองปั๊ม	➡		ทำความสะอาดตัวกรองปั๊ม
น้ำไม่เข้าเพราะตัวกรองวาล์วท่อน้ำเข้าอุดตันหรือท่อน้ำเข้าพังงอ	➡		ทำความสะอาดตัวกรองวาล์วท่อน้ำเข้าหรือติดตั้งท่อน้ำเข้าใหม่
น้ำไม่เข้าเพราะใช้น้ำยาซักผ้ามากเกินไป	➡		ทำความสะอาดลิ้นชักจ่ายน้ำยาซักผ้า
ผ้าที่ซักร้อนหรืออุ่นหลังจากสิ้นสุดการซักเพราะท่อน้ำเข้าถูกติดตั้งกลับทิศ	➡		ติดตั้งท่อน้ำเข้าใหม่
น้ำไม่ถูกจ่ายเข้าเพราะก๊อกน้ำไม่ได้เปิด	➡		เปิดก๊อกน้ำ
การรั่วที่เกิดจากการติดตั้งท่อระบายไม่เหมาะสมหรือท่อระบายอุดตัน	➡		ติดตั้งท่อระบายใหม่
การรั่วที่เกิดจากการติดตั้งท่อน้ำเข้าไม่เหมาะสมหรือการใช้ท่อน้ำเข้าของแบรนด์อื่นๆ	➡		ติดตั้งท่อน้ำเข้าใหม่
ปัญหาไฟไม่เข้าที่เกิดจากการต่อสายไฟหลวมหรือปัญหาของเต้ารับ	➡		ต่อสายไฟใหม่หรือเปลี่ยนเต้ารับ

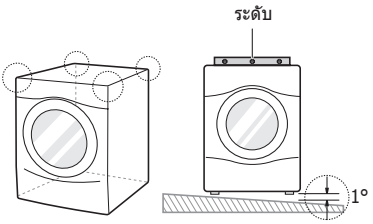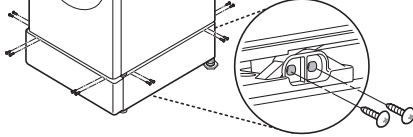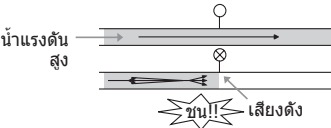การเดินให้บริการเพื่อจัดส่ง รับ ติดตั้งผลิตภัณฑ์หรือเพื่อให้คำ แนะนำในการใช้ผลิตภัณฑ์ การถอด และการติดตั้งผลิตภัณฑ์ใหม่	➔	 ระดับ	การรับประกันครอบคลุมข้อ บกพร่องทางการผลิตเท่านั้น ไม่ครอบคลุมการบริการที่เป็น ผลจากการติดตั้งไม่เหมาะสม
หากสกรูทั้งหมดไม่ได้รับการติดตั้ง อย่างเหมาะสม อาจก่อให้เกิดการสั่น มากเกินไป (เฉพาะรุ่นมีแท่นเท่านั้น)	➔		ติดตั้งสกรู 4 ตัวที่แต่ละมุม (รวม 16 ตัว)
เสียงการกระแทกของน้ำ (การชน) เมื่อเครื่องซักผ้ากำลังทำการเติมน้ำ	➔	 น้ำแรงดันสูง การไหลของน้ำตามธรรมชาติ การไหลของน้ำหยุดกะทันหัน เสียงดัง ชน!!	ปรับแรงดันน้ำโดยการหมุน วาล์วน้ำหรือก๊อกน้ำในบ้านให้ อ่อนลง

